

OmniVista 4.2.1.R01 (MR2) Upgrade Matrix

From	To	
	OV 4.2.1 R01-GA (Build 69)	OV 4.2.1 R01-MR2 (Build 95)
OV 3.5.7	Direct Upgrade	Step 1: Upgrade to OV 4.2.1 R01-GA Step 2: Automatic upgrade to MR2 from VA Menu
OV 4.1.1 R01	Step 1: Upgrade to OV 4.1.2.R02 Step 2: Upgrade to OV 4.1.2 R03* Step 3: Upgrade to OV 4.2.1 R01-GA*	Step 1: Upgrade to OV 4.1.2.R02 Step 2: Upgrade to OV 4.1.2 R03* Step 3: Upgrade to OV 4.2.1 R01-GA* Step 4: Automatic upgrade to MR2 from VA Menu
OV 4.1.2 R01	Step 1: Upgrade to OV 4.1.2 R03* Step 2: Upgrade to OV 4.2.1 R01-GA*	Step 1: Upgrade to OV 4.1.2 R03* Step 2: Upgrade to OV 4.2.1 R01-GA* Step 3: Automatic upgrade to MR2 from VA Menu
OV 4.1.2 R02	Step 1: Upgrade to OV 4.1.2 R03* Step 2: Upgrade to OV 4.2.1 R01-GA*	Step 1: Upgrade to OV 4.1.2 R03* Step 2: Upgrade to OV 4.2.1 R01-GA* Step 3: Automatic upgrade to MR2 from VA Menu
OV 4.1.2 R03	Direct Upgrade*	Step 1: Upgrade to OV 4.2.1 R01-GA Step 2: Automatic upgrade to MR2 from VA Menu
OV 4.2.1 R01-GA (Build 69)		Step 1: Automatic upgrade to MR2 from VA Menu
OV 4.2.1 R01- MR1 (Build 85)		Step 1: Automatic upgrade to MR2 from VA Menu

* This step includes MongoDB Database Password change. Please make sure all the steps for changing the password are followed as detailed in the applicable *OmniVista 2500 Installation Guide*.