

AOS-W Instant

5.0.3.0-1.1

Quick Start Guide

This Quick Start Guide will assist you to quickly connect and configure Alcatel-Lucent Instant. To learn more about Alcatel-Lucent Instant and for detailed configuration information, see the *AOS-W Instant User Guide*.

Getting Started

1. **Get an IP address**—You will require an IP address to connect to a network. To get an IP address from a DHCP server in your network:
 - a. Connect the OAW-IAP to an intermediate gateway router or switch that has connectivity to the DHCP server.
 - b. Power on the OAW-IAP to establish a network connection. The OAW-IAP receives an IP address provided by the switch or router. The OAW-IAP can be powered by 802.3af Power over Ethernet (PoE) or by an AC adapter.



In the absence of DHCP, see the *AOS-W Instant User Guide* for instructions on getting default IP address for the OAW-IAP.

2. **Connect to the provisioning Wi-Fi network**—Connect a wireless enabled client to the provisioning Wi-Fi network. The provisioning network name is **instant**. The following [Figure 1](#) shows how to find the **instant** wireless network using Windows 7 or Mac OS.



If the OAW-IAP does not receive an IP address, see the *AOS-W Instant User Guide* for provisioning instructions.

Figure 1 Windows Wireless Network Connection (left), Mac OS AirPort (right)




Click here to see the list of wireless networks. Select **instant** from the list.

3. **Log in to the Alcatel-Lucent Instant WebUI**—Open a web browser and enter <http://instant.alcatel-lucent.com/> in the address bar to access the Alcatel-Lucent Instant login screen. If you enter any other URL, you are redirected to the Alcatel-Lucent Instant login screen. In the login screen, as shown in [Figure 2](#), enter the following credentials:

- Username - **admin**
- Password - **admin**

Figure 2 WebUI Login Screen

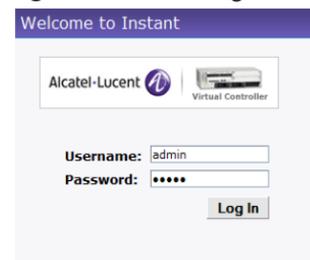

4. **Select the Country Code**—A **Country Code** box, as shown in [Figure 3](#) might appear after you successfully log in to the WebUI. Select your country code from the drop-down menu.

Figure 3 Country Code box




You cannot change the country code for the OAW-IAP's designated for US, Japan, and Israel.

Creating a Network


1. In the **Networks** tab, click the **New** link. The **New Network** window appears, as shown in [Figure 4](#).

Figure 4 New Network window

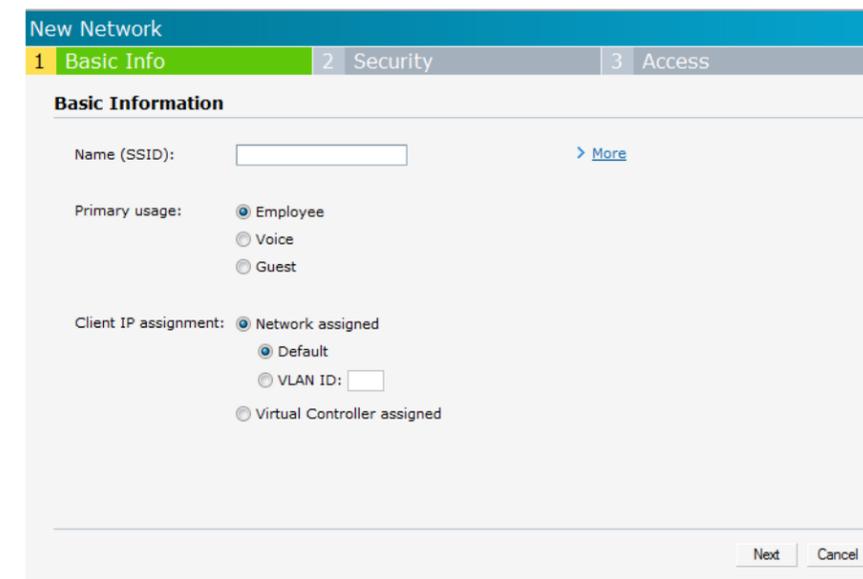

2. In the **Basic Info** tab, shown in [Figure 4](#), enter a name for the network in the **Name (SSID)** text box. Click **Next** to continue.
3. In the **Security** tab, shown in [Figure 5](#), enter a passphrase in the **Passphrase** field. Reconfirm your credentials. Click **Next** to continue.

Figure 5 Security tab

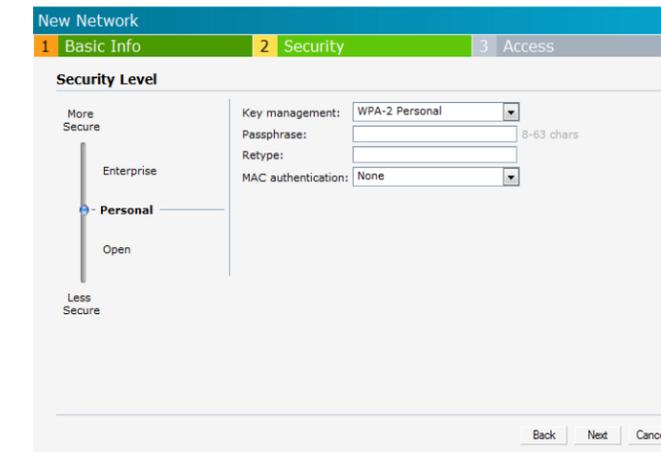

For additional security level options, refer to the *AOS-W Instant User Guide*.

4. In the **Access** tab, shown in [Figure 6](#), follow these steps to add an access rule. Click **New**, select appropriate options in the **New Rule** box, and click **OK** to continue.




By default, traffic is allowed to all networks.



For Network-based and Role-based access rule options, refer to the *AOS-W Instant User Guide*.

Figure 6 Access tab

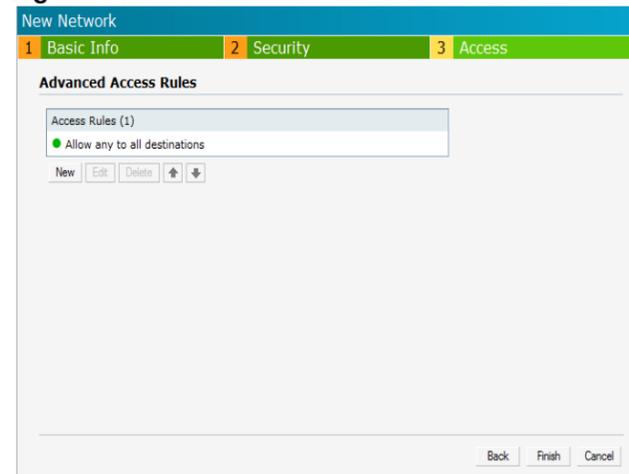


5. Click **Finish** to close the window. The new network that you created is now added to the **Networks** window.

Verifying WebUI and LEDs

After setting up Alcatel-Lucent Instant and adding a network, you can use the WebUI and the LEDs to verify the operating status of Alcatel-Lucent Instant.


Using the WebUI—Verify the newly created network is displayed in the **Networks** window, as shown in [Figure 7](#).

Figure 7 Using the WebUI to verify the newly added wireless network

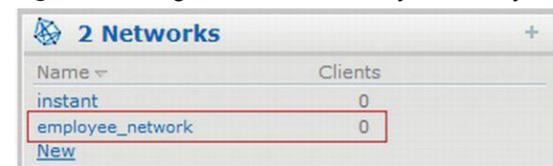

The temporary WiFi network, **instant**, should be automatically deleted once you create a new network. If users are currently connected to the temporary network, you should manually delete it by clicking the **X** link in the **Networks** window, as shown in [Figure 8](#).

Figure 8 Delete the Temporary Network

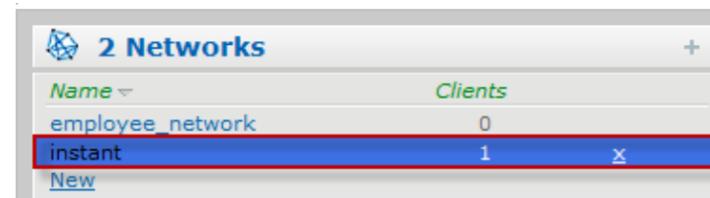

- **Using LEDs**—Use the LEDs to determine the operating status of the OAW-IAP. The OAW-IAP has four LEDs that indicate various status of OAW-IAP functions as shown in [Table 1](#)

Table 1 LED State and Meaning

LED	Color/State	Meaning
PWR	Off	No power to OAW-IAP
	Green flashing	System initializing
	Red steady	System failed to initialize, contact TAC
	Green steady	Power on, device ready
ENET (10/100/1000 Mbps)	Off	No link
	Green on	1000 Mbps link
	Amber on	10/100 Mbps link
	Green flashing	Ethernet link activity
11A/N	Off	5 GHz radio is disabled
	Amber	5 GHz radio enabled in 11a mode
	Green	5 GHz radio enabled in 11n mode
	Green flashing	5 GHz Air Monitor or RF Protect mode
11B/G/N	Off	2.4 GHz radio disabled
	Amber	2.4 GHz radio enabled in 11b/g mode
	Green	2.4 GHz radio enabled in 11n mode
	Green flashing	2.4 GHz Air Monitor or RF Protect mode

Contacting Alcatel-Lucent

Web Site Support	
Main Site	http://www.alcatel-lucent.com/enterprise
Support Site	https://service.esd.alcatel-lucent.com/

Telephone Support	
North America	1-800-995-2696
Latin America	1-877-919-9526
Europe	+33 (0) 38 855 6929
Asia Pacific	+65 6240 8484
Worldwide	1-818-878-4507

Copyright

© 2011 Alcatel-Lucent, Inc. All rights reserved.
Specifications in this manual are subject to change without notice.
Originated in the USA.

Any other trademarks appearing in this manual are the property of their respective companies.

Legal Notice

This hardware product is protected by the Alcatel-Lucent Limited Lifetime warranty

AOS-W Instant 5.0.3.0-1.1 Quick Start Guide



AOS-W Instant
5.0.3.0-1.1
Quick Start Guide
Part Number 0510984-01 | August 2011