

Quick Installation Guide

EAP1250
version 1.1

Ceiling Mount Design
Wireless Indoor Access Point

 
Package Contents




Access Point (EAP1250)



Quick Installation Guide



Ceiling Mount Base
(9/16" T-Rail)

 

Ceiling Mount Base
(1.5/16" T-Rail)




Mounting kit

Minimum Requirements

- + Broadband Internet Service
(Cable or DSL Modem)
- + Internet Browser
(Internet Explorer, Safari, Firefox, Chrome, Edge)

1 Connecting the Access Point

- Connect one end of the Ethernet cable into the Ethernet port of the Access Point and the other end to the Ethernet port on the computer.
- Connect the Power Adapter to the DC-IN port of the Access Point and plug the other end into an electrical outlet.

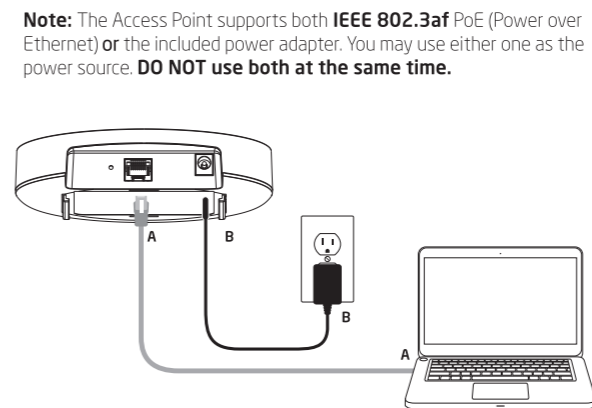


* An optional power adapter is available.

Note: The Access Point supports both IEEE 802.3af PoE (Power over Ethernet) or the included power adapter. You may use either one as the power source. **DO NOT use both at the same time.**


2 IP Address Configuration

- Once your computer is on, ensure that your TCP/IP is set to **On** or **Enabled**. Open **Network Connections** and then click **Local Area Connection**. Select **Internet Protocol Version 4 (TCP/IPv4)**.


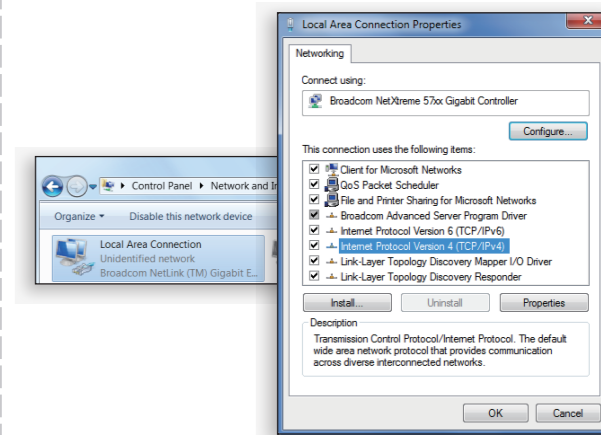


3 Access Point Setup

- If your PC is already on network, ensure that you have set it to a static IP Address on the interface. (Example: 192.168.1.10 and the Subnet Mask address as 255.255.255.0).

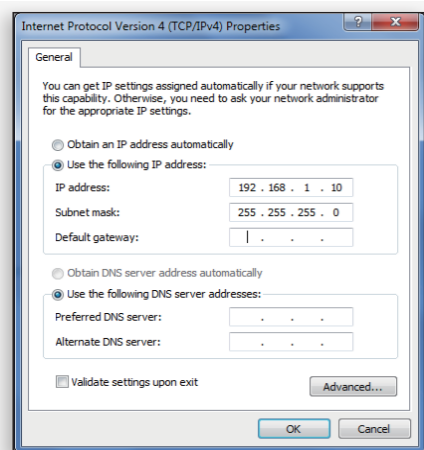


- Open a web browser on your computer. In the address bar of the web browser, enter **192.168.1.1** and **enter**.
- A login screen will appear. By default, the username of the Access Point is **admin** and the password is **admin**. Enter the current username and password of the Access Point and then click **Login**.
- The EnGenius Access Point User Interface will appear. This device can operate in Access Point operating mode.

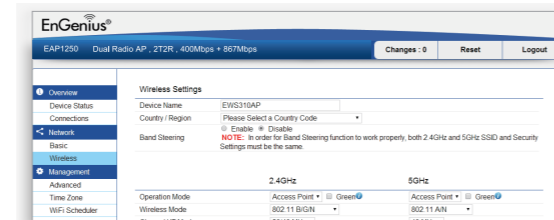 


* Your model number may be different in the web browser interface.

4 Mounting the Access Point

- Ceiling Mounting the Access Point:
- Slide the ceiling mount base into the slot of the Access Point.
 - Hold the Access Point with one hand to reach the other hand over the T-Rail sides of the bracket. Then hook the stationary end of the ceiling mount bracket onto the T-Rail.

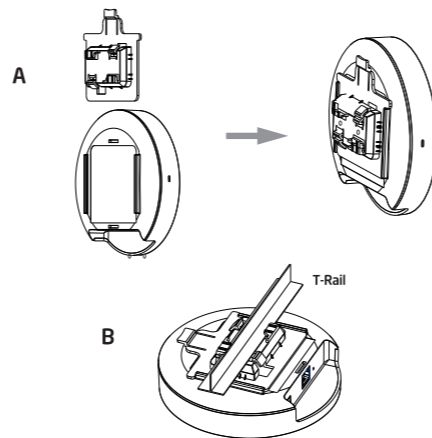

- Wall Mounting the Access Point:
- Continued from A, determine where the Access Point to be placed and mark location on the surface for the two mounting holes. Use the appropriate drill bit to drill two 8.1mm diameter and 26mm depth holes in the markings and hammer the bolts into the openings.
 - Screw the anchors onto the holes until they are flush with the wall; screw the included screws into the anchors.
 - Place the Access Point against wall with the mounting screw heads.

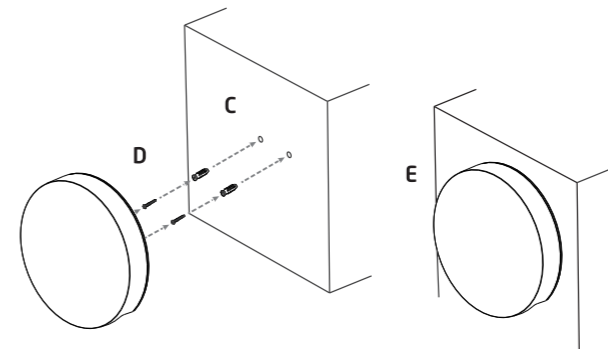

Technical Support

Country of Purchase	Service Center	Service Information
North America www.engeniuscanada.com	Canada	rma@engeniuscanada.com Toll Free: 888 397 2788 Local: (+1) 905 940 8181
www.engenius-tech.com	Los Angeles, USA	support@engeniustech.com Toll Free: 885 735 7888 Local: (+1) 714 432 8668
Europe www.engeniusnetworks.eu	Netherlands	support@engeniusnetworks.eu Local: (+31) 40 8200 887
Africa / Middle East www.engenius-me.com	Dubai, UAE	support@engenius-me.com Local: (+971) 4 357 5599
Asia / Oceania www.engeniustech.com.sg	Singapore	techsupport@engeniustech.com.sg Local: (+65) 6227 1088
Taiwan www.engeniustech.com.tw	Taiwan, R.O.C.	twsupport@engeniusnetworks.com Toll Free: 0800 003 885 Local: (+886) 2 2652 1808