ETR9360 3G Battery Router Quick Start Guide

CHECK

- A standard CD-ROM drive
- Internet connection should be setup & ready to use. (Without 3G modem)
- 3G USB modem to connect with ETR9360.
- Microsoft Windows compatible PC/Notebook with UPnP enabled network adapter
- CAT 5 network cable(s), RJ45 port on PC/Notebook.
- Internet Browser (Microsoft Internet Explorer, Firefox and Netscape navigator.)

STEP 1

Connect the power adapter supplied with the ETR9650 to the power socket on the back of this device. Check to see that the power LED on the front of the panel of the ETR9360 is turned ON.

STEP 2

Connect ETR9360 LAN port & PC/Notebook RJ45 port with network cable.

STEP 3

Run the web browser on your computer. In the address field, type the default IP address http://192.168.0.1.



The following login screen will appear. Enter admin for both


Username and Password.



Step 4

Select 'Internet' and Select '3G' on WAN Access Type.



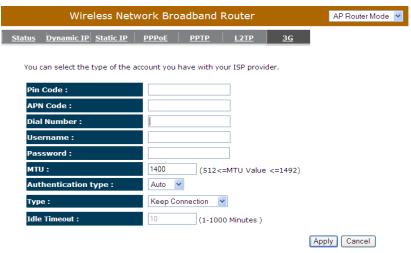

Use the following setting for local ISP.

ISP	Singtel	M1	Starhub
APN Code	Internet	Sunsurf	Shwap
Dial Number	*99#	*99#	*99#

Step 5

Click 'Wireless' and select 'Basic Settings' to change SSID to desired identity and Click 'Apply Changes' to take effect.



Step 6

Setup WiFi Security

Click on 'Wireless' and Click on 'Security' to define WiFi encryption.

Next Click on 'Apply Changes' to take effect.

Note

Once setup is completed, power off modem and router. Power up the modem and router at the same time and wait for both the modem and router to completely initialize.



Refer to the User's manual for more detailed explanation of each operating mode.

This page allows you setup the wireless security. Turn on WEP or WPA by using Encryption Kepsattery must be in at all times could prevent any unauthorized access to your wireless network.

