


Quick Installation Guide

EWS385AP
version 1.0

Tri-Band Wireless Indoor Access Point

Package Contents

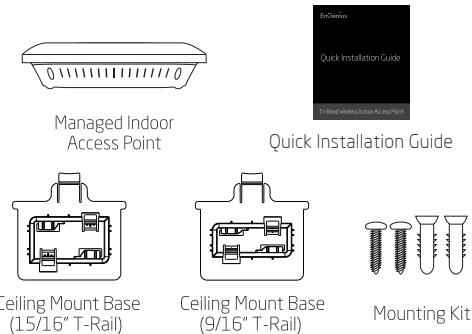


Minimum Requirements

- + Broadband Internet Service (Cable or DSL Modem)
- + Internet Browser (Internet Explorer, Safari, Firefox, Chrome, Edge)
- + EnGenius Wireless Management L2 Switch (To use with EWS Series Management Switches)

Managed Access Point Installation with Wireless Management Switch


1 Connecting the Access Point (Through EnGenius Wireless Management Switch)

- Connect one end of the **Ethernet Cable** into an **Ethernet Port** on the front panel of the EnGenius Wireless Management Switch and the other end to the Ethernet Port on the computer.
- Connect another **Ethernet Cable** into the **LAN Port** of the Managed AP and the other end to the **Ethernet Port** on the Wireless Management Switch. With the Wireless Management Switches, the Managed AP is able to obtain proper assigned IP address for further configurations.

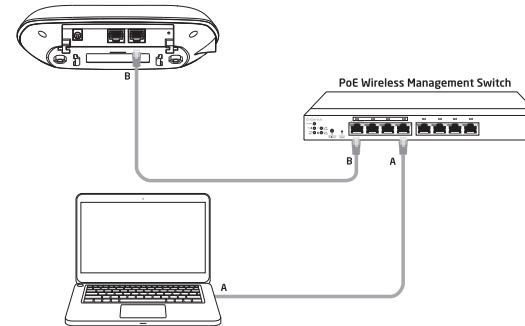


2 IP Address Configuration

- Once your computer is on, ensure that your TCP/IP is set to **On** or **Enabled**. Open Network Connections and then click **Local Area Connection**. Select **Internet Protocol Version 4 (TCP/IPv4)**

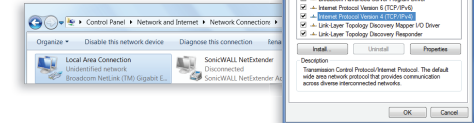

- If your computer is already on a network, ensure that you have set it to a Static IP Address on the interface. (Example: 192.168.0.88 and the Subnet Mask address as 255.255.255.0.)

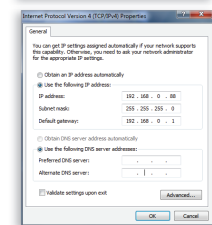

3 Management Switch Setup

- Open a web browser on your computer. In the address bar of the web browser, enter **192.168.0.239** and **enter**.

 


- A login screen will appear. By default, username is **admin** and the password is **password**. Enter the current username and password of the Wireless Management Switch and then click **Login**.





*Your model number may be different in the web browser interface.

- The EnGenius Wireless Management Switch User Interface will appear. Make sure the **Controller State** is set to **Enabled**.



4 Adding Managed AP (Through EnGenius Wireless Management Switch GUI)


- All Managed AP(s) connected to the same network as the Wireless Management Switch will appear on the right side of the screen, under the Access Point **AP(s) Detected** list. Locate and select the Managed AP by checking the box and click **Add** to manage the device.

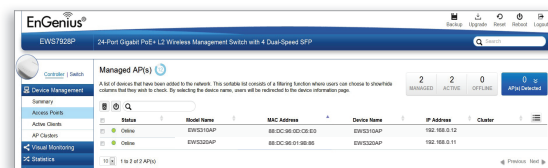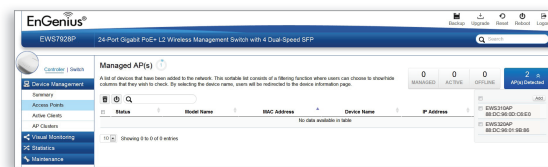


- You may configure your Managed AP(s) after you successfully connected to the Wireless Management Switch through its **GUI**.

5 Configuring Managed AP (Through EnGenius Wireless Management Switch GUI)


- Configure Managed AP(s) through the GUI interface from the switch for WLAN settings under **Device Management**. Click the "Device Name" in order to configure your Managed AP.

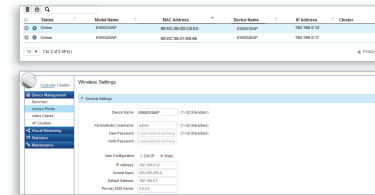



- Add Managed AP(s) to specific **AP Cluster** to save repetitive configuration tasks.

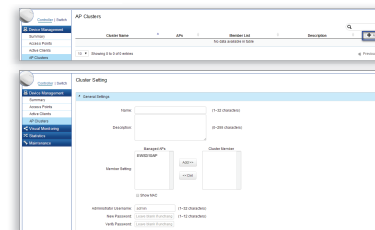

 - Users may create several clusters simultaneously to accommodate their deployments under **AP Clusters**.



- For distinct settings, EnGenius Wireless Management switches still offer individual Managed Access Point customization for cluster members such as different channels that best adapt your local WLAN deployments.

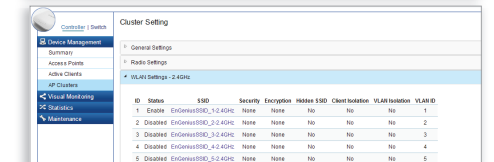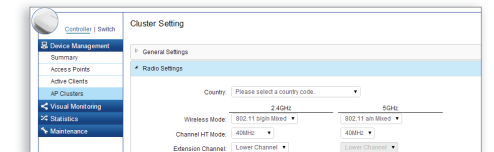


Stand-alone Access Point Installation

Mounting the Access Point

1 Connecting the Access Point


- Connect one end of the **Ethernet cable** into the **LAN port** of the Access Point and the other end to the **Ethernet port** on the computer.
- Connect the **Power Adapter** to the **DC-IN port** of the Access Point and plug the other end into an electrical outlet.

Note: The Access Point supports both **IEEE 802.3at PoE** (Power over Ethernet) or the included power adapter. You may use either one as the power source. **DO NOT use both at the same time.**

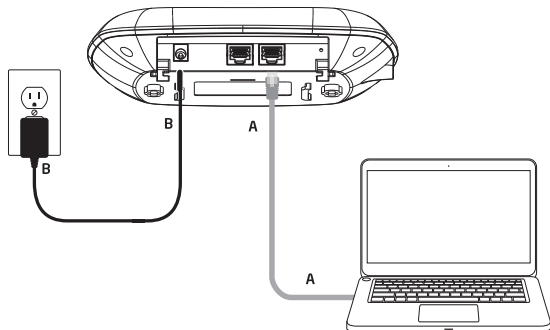

2 IP Address Configuration


- Once your computer is on, ensure that your TCP/IP is set to **On** or **Enabled**. Open Network Connections and then click **Local Area Connection**. Select **Internet Protocol Version 4 (TCP/IPv4)**.

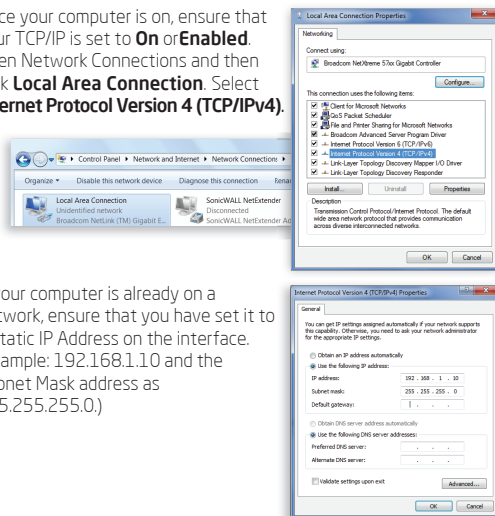

- If your computer is already on a network, ensure that you have set it to a **Static IP Address** on the interface. (Example: 192.168.1.10 and the Subnet Mask address as 255.255.255.0.)

3 Access Point Setup


- Open a web browser on your computer. In the address bar of the web browser, enter **192.168.1.1** and **enter**.
- A login screen will appear. By default, the username of the Access Point is **admin** and the password is **admin**. Enter the current username and password of the Access Point and then click **Login**.
- The EnGenius Access Point User Interface will appear. This device can operate in Access Point operating mode.

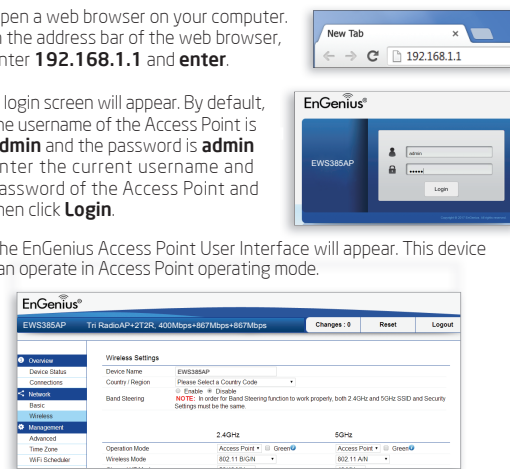

* Your model number may be different in the web browser interface.

Ceiling Mounting the Access Point

- Slide the ceiling mount base into the slot of the Access Point.
- Hold the Access Point with one hand to reach the other hand over the T-Rail sides of the bracket. Then hook the stationary end of the ceiling mount bracket onto the T-Rail.

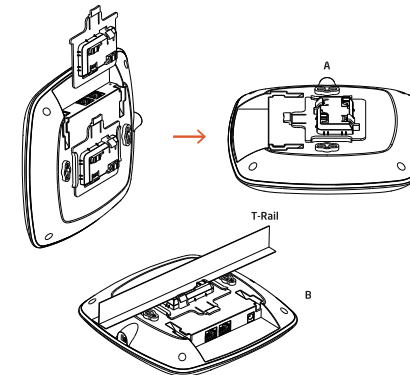

Note: To protect your Access Point, please use Kensington security slot to a cable lock (cable lock is not included).

Technical Support

Country of Purchase Service Center Service Information

North America
www.engeniustech.com

Canada
rma@engeniustech.com Toll Free: (+1) 888 397 2788 Local: (+1) 905 940 8181

www.engeniustech.com

Los Angeles, USA
support@engeniustech.com Toll Free: (+1) 888 735 7888 Local: (+1) 714 432 8668

Europe
www.engeniustech.com

Netherlands
support@engeniustech.com (+31) 40 8200 887

Africa CIS Middle East Russia
www.engeniustech.com

Dubai, UAE
support@engeniustech.com Toll Free: U.A.E.: 800-EnGenius 800-364-364-87 General: (+971) 4 357 5599

Asia Oceania
www.engeniustech.com.sg

Singapore
support@engeniustech.com Toll Free: (+1) 888 735 7888 Local: (+1) 714 432 8668

Others
www.engeniustech.com

Taiwan, R.O.C
technology@senao.com

Notes



Maximum data rates are based on the IEEE standards. Actual throughput and range may vary depending on many factors including environmental conditions, distance between devices, radio interference in the operating environment, and mix of devices in the network. Features and specifications subject to change without notice. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Trademarks and registered trademarks are the property of their respective owners. For United States of America: Copyright ©2019 EnGenius Technologies, Inc. All rights reserved.



請勿列印此頁
Don't print this page.

材質 | 80P 模造紙

印刷 | 單色黑

展開尺寸 | 336*180 mm

成型尺寸 | 84*90 mm

成型方式 | 先左右N字折，再上下折

部門	外觀設計課			料號	6709A3203390		
日期	2019/01/19	比例	1/1	單位	mm	工業設計工程師	Dona
該專案經理人或業務之內容核准		品牌產品規劃PM		檢圖	Rennier		