



# SmartCell Gateway 200, Virtual SmartZone High-Scale and SmartZone 300

Administrator Guide for Release 3.5.1

Part Number: 800-71510-001  
Published: 04 September 2017

[www.ruckuswireless.com](http://www.ruckuswireless.com)

# Contents

Copyright Notice and Proprietary Information	
Document Conventions	
Documentation Feedback	
Online Training Resources	

## 1 Navigating the Dashboard

Setting Up the Controller for the First Time.....	17
Logging On to the Web Interface.....	17
Web Interface Features.....	18
Changing the Administrator Password.....	20
Logging Off the Controller.....	20
Configuring Global Filters.....	21
Warnings and Notifications.....	22
Warnings.....	22
Setting Global Notifications.....	23
Health and Maps.....	23
Understanding Cluster and AP Health Icons.....	24
Customizing Health Status Thresholds.....	24
Using the Health Dashboard Map.....	26
Traffic Analysis.....	27
Configuring Traffic Analysis Display for APs.....	27
Configuring Traffic Analysis Display for WLANs.....	29
Configuring Traffic Analysis Display for Top Clients.....	29

## 2 Configuring System Settings

Configuring General Settings.....	31
Viewing System Settings.....	31
Configuring System Time.....	31
Configuring the Remote Syslog Server.....	32
Configuring SCI Settings.....	34
Setting the Northbound Portal Password.....	34
Enabling Global SNMP Notifications.....	34
Configuring SMTP Server Settings.....	38
Configuring FTP Server Settings.....	38

Configuring the SMS Gateway Server.....	39
Configuring Node Affinity.....	39
Configuring Advanced Gateway Options.....	40
Configuring AP Settings.....	41
Working with AP Registration Rules.....	41
Creating vSZ-D Zone Affinity.....	43
Tagging Critical APs.....	43
Configuring the Tunnel UDP Port.....	43
Setting the Country Code.....	43
Viewing the System Cluster Overview.....	44
Control Planes and Data Planes.....	44
Interface and Routing.....	45
Displaying the Chassis View of Cluster Nodes.....	46
Enabling Cluster Redundancy.....	46
Configuring the Control Plane.....	48
Configuring the Data Plane.....	54
Monitoring Cluster Settings.....	57
Working with Maps.....	58
Importing a Floorplan Map.....	59
Monitoring APs Using the Map View.....	61
Certificates.....	62
Importing New Certificates.....	62
Assigning Certificates to Services.....	63
Generating Certificate Signing Request (CSR).....	63
Managing AP Certificates.....	64
Importing Trusted CA Certificates.....	65
Configuring Templates.....	66
Working with Zone Templates.....	66
Working with WLAN Templates.....	72

### 3 Working With Access Points

Understanding the System, Domains, Zones and AP Groups.....	74
Hierarchy Overview.....	74
Creating an AP Domain.....	75
Working with AP Zones.....	75
Working with 3rd Party AP Zones.....	83
Working with AP Groups.....	86
Monitoring Domains, Zones, and AP Groups.....	97

Viewing Modes.....	100
AP Status.....	101
Configuring Access Points.....	101
Managing Access Points.....	106
Overview of Access Point Configuration.....	106
Viewing Managed Access Points.....	106
Downloading the Support Log from an Access Point.....	107
Provisioning and Swapping Access Points.....	107
Editing Swap Configuration.....	109
Monitoring Access Points.....	109

## 4 Working with WLANs and WLAN Groups

Domains, Zones, AP Groups, and WLANs.....	112
Viewing Modes.....	112
Creating a WLAN Domain for an MSP.....	113
WLAN Groups.....	113
Creating a WLAN Group.....	114
Creating a WLAN Configuration.....	114
802.11 Fast BSS Transition.....	131
802.11w MFP.....	131
Band Balancing.....	131
Bypassing Apple CNA.....	132
Channel Mode.....	132
Client Admission Control.....	132
Client Load Balancing.....	133
Mobility Domain ID.....	134
Portal-based WLANs.....	134
Rate Limiting Ranges for Policies.....	135
Working with WLAN Schedule Profiles.....	136
Managing WLANs.....	137
Moving a Single WLAN to a Different WLAN Zone.....	138
Extracting a WLAN Template.....	138
Applying a WLAN Template.....	139
Changing the Zone's AP Firmware Version.....	139
Rehomings Managed APs.....	139
Triggering a Preferred Node.....	140

## 5 Managing Clients

Working with Wireless Clients.....	141
Viewing a Summary of Wireless Clients.....	141
Viewing Information about a Wireless Client.....	143
Deauthorizing a Wireless Client.....	143
Blocking a Wireless Client.....	144
Unblocking a Wireless Client.....	144
Disconnecting a Wireless Client.....	144
Working with Wired Clients.....	145
Viewing a Summary of Wired Clients.....	145
Viewing Information about a Wired Client.....	145
Deauthorizing a Wired Client.....	146
Viewing 3rd Party Clients.....	146
Working with Users and Roles.....	147
Creating a User Role.....	147
Creating a User Role with Active Directory Authentication.....	149
Creating a User Role with 802.1x Authentication.....	149
Limitations Applying Role Policies to Users.....	150
Creating a Local User.....	151
Creating a Subscription Package.....	152
Working with Guest Passes.....	153
Generating Guest Passes.....	154
Creating a Guest Pass Template.....	158
Creating a Guest Instruction SMS Template.....	159
Exporting the Guest Pass to CSV.....	161
Generating Guest Passes from an Imported CSV.....	162
Printing the Guest Pass.....	164
Sending the Guest Pass via Email.....	165
Sending the Guest Pass via SMS.....	166
Working with Dynamic PSKs.....	166
Viewing Dynamic PSKs.....	168
Generating Dynamic PSKs.....	168
Importing Dynamic PSKs.....	169
Creating an External DPSK Over RADIUS WLAN.....	171

## 6 Application Recognition and Control

Monitoring Applications.....	172
------------------------------	-----

## 7 Services and Profiles

Working with Hotspots and Portals.....	175
Creating a Guest Access Portal.....	175
Working with Hotspot (WISPr) Services.....	177
Creating a Web Authentication Portal.....	179
Creating a WeChat Portal.....	181
Working with Hotspot 2.0 Services.....	182
Creating a UA Blacklist Profile.....	188
Configuring Access Control.....	190
Creating a User Traffic Profile.....	190
Creating OS Policy Service.....	192
VLAN Pooling.....	194
Create Precedence Profile.....	195
Creating an L2 Access Control Service.....	196
Creating Blocked Clients.....	198
Creating a Client Isolation Whitelist.....	199
Creating Time Schedules.....	200
Creating a DNS Server Profile.....	201
Configuring Application Controls.....	202
Creating an Application Control Policy.....	202
Implementing an Application Control Policy.....	203
Creating a User Defined Application.....	205
Working with Application Signature Package.....	206
Authentication.....	207
Creating Non-Proxy Authentication AAA servers.....	207
Creating Proxy AAA Servers.....	210
Creating Realm Based Authentication Profile.....	218
Configuring HLR Services.....	219
Configuring Diameter Services.....	220
Configuring EAP-SIM.....	222
Configuring EAP-AKA.....	224
Authentication Support Matrix.....	225
Accounting.....	233
Creating Non-Proxy Accounting AAA Servers.....	233
Creating Proxy Accounting AAA Servers.....	235
Creating Realm Based Proxy.....	237
Bonjour.....	238
Bonjour Gateway.....	238
Bonjour Fencing.....	240
Working with Tunnels and Ports.....	243

Creating a Ruckus GRE Profile.....	243
Creating a Soft GRE Profile.....	244
Creating an IPsec Profile.....	245
Creating an Ethernet Port Profile.....	248
Creating a Tunnel DiffServ Profile.....	251
Communications Assistance for Law Enforcement Act (CALEA).....	252
Enabling Flexi VPN.....	252
Enabling L3 Roaming Criteria for vDPs.....	253
Enabling Tunnel Encryption.....	255
Managing Core Network Tunnels.....	256
Creating Bridge Forwarding Profiles.....	256
Creating L2oGRE Forwarding Profiles.....	258
Creating TTG+PDG Profiles.....	259
Creating Mixed Mode Tunnels.....	261
Configuring the GGSN/PGW Service.....	262
Location Services.....	264
DHCP.....	265
Configuring DHCP Service Settings.....	266
Creating a DHCP Pool.....	270
Managing Third Party Profiles.....	272
Hotspot Profile.....	272
Creating Network Traffic Profiles.....	272
Configuring Q-in-Q Ether Type.....	274

## 8 Working with Reports

Types of Reports.....	275
Client Number Report.....	275
Continuously Disconnected APs Report.....	275
System Resource Utilization Report.....	275
TX/RX Bytes Report.....	275
Managing Report Generation.....	275
Creating Reports.....	276
Generating Reports.....	278
Rogue Access Points.....	279
Viewing Rogue Access Points.....	279
Marking Rogue Access Points.....	279
Historical Client Stats.....	280
Viewing AP Client Statistics.....	280

Viewing 3rd Party AP Client Statistics.....	281
Ruckus AP Tunnel Stats.....	283
Viewing Statistics for Ruckus GRE Tunnels.....	283
Viewing Statistics for SoftGRE Tunnels.....	284
Viewing Statistics for SoftGRE IPsec Tunnels.....	285
3rd Party AP Stats.....	286
Viewing Statistics for L2oGRE 3rd Party AP.....	286
Viewing Statistics for Q-in-Q Layer 2 3rd Party AP.....	287
Core Network Tunnel Stats.....	288
Viewing Statistics for SoftGRE Core Network Tunnel.....	288
Viewing Statistics for GTP Core Network Tunnel.....	289

## 9 Troubleshooting

Troubleshooting Client Connections.....	292
Troubleshooting through Spectrum Analysis.....	294

## 10 Administering the Controller

Managing Administrator and Roles.....	296
Creating User Groups.....	296
Creating Administrator Accounts.....	297
Creating a RADIUS Server for Administrator Authentication.....	298
Enabling the Access Control List.....	299
Backing Up and Restoring Clusters.....	300
Creating a Cluster Backup.....	300
Backing Up and Restoring the Controller's Network Configuration from an FTP Server.....	302
Backing up Cluster Configuration.....	308
Upgrading the Controller.....	311
Performing the Upgrade.....	312
Uploading an AP Patch File.....	313
Verifying the Upgrade.....	314
Rolling Back to a Previous Software Version.....	314
Upgrading the Data Plane.....	314
Managing Licenses.....	316
Viewing Installed Licenses.....	316
Configuring the License Server.....	318
Configuring License Bandwidth.....	318
ZoneDirector to SmartZone Migration.....	319



Monitoring Administrator Activities.....	319
Managing Mobile Virtual Network Operator (MVNO) Accounts.....	320

## 11 Managing Events and Alarms

Viewing Events.....	322
Sending SNMP Traps and Email Notifications for Events.....	322
Configuring Event Threshold.....	323
Configuring Alarms.....	324
Clearing Alarms.....	324
Acknowledging Alarms.....	324
Applying Filters.....	325

## 12 Diagnostics

Applying Scripts.....	326
Applying AP CLI Scripts.....	327
Viewing and Downloading Logs.....	327
Available System Logs for SCG200, vSZ-H and SZ300.....	328
Viewing RADIUS Proxy Settings.....	330
Viewing CGF Connection Settings.....	330
Viewing CGF Transaction Settings.....	331
Viewing DHCP Relay Settings.....	331
Viewing DHCP Server Settings.....	332
Viewing GGSN Connection Settings.....	332
Viewing GGSN/PGW GTP-C Session Settings.....	333
Viewing HLR Settings.....	333
Viewing RADIUS Server Settings.....	334
Viewing SCTP Settings.....	334
Viewing STA Statistics Settings.....	334
Viewing Stack Statistic Settings.....	335

## Appendix A: Captive Portal with TTG

Overview of CaptivePortal with TTG.....	336
Configuring the Captive Portal with TTG.....	337
CaptivePortal Workflows and VSA.....	338
Successful Captive Portal Authentication.....	338
Successful GTP Tunnel Establishment.....	339
Ruckus Wireless VSA for CaptivePortal with TTG.....	340

## **Appendix B: Statistics Files the Controller Exports to an FTP Server**

## **Appendix C: Ports to Open for AP-SCG/SZ/vSZ/vSZ-D Communication**

## **Appendix D: SoftGRE Support**

Overview of SoftGRE Support.....	348
Supported Deployment Scenario.....	348
SoftGRE Packet Format.....	349
Configuring And Monitoring AP Zones.....	350
SoftGRE SNMP MIBs.....	350
SoftGRE Events and Alarms.....	351
SoftGRE Events.....	352
SoftGRE Alarms.....	353

## **Appendix E: Replacing Hardware Components**

Installing or Replacing Hard Disk Drives.....	355
Ordering a Replacement Hard Disk.....	355
Removing the Front Bezel.....	355
Removing an HDD Carrier from the Chassis.....	356
Installing a Hard Drive in a Carrier.....	357
Reinstalling the Front Bezel.....	360
Replacing PSUs.....	361
Replacing System Fans.....	361

## **Appendix F: Replacing a Controller Node**

Backing Up and Resorting the Cluster.....	364
Step 1: Backing Up the Cluster from the Web Interface.....	364
Step 2: Back Up the Cluster from the Controller CLI.....	364
Step 3: Transfer the Cluster Backup File to an FTP Server.....	365
Step 4: Restoring the Cluster Backup to the Controller.....	366
Backing Up and Restoring Configuration.....	369
Backed Up Configuration Information.....	369
Backing Up Configuration.....	370
Restoring Configuration.....	371

## Appendix G: SCG SSID Syntax

SSIDs Supported in Release 1.1.x.....	374
SSIDs Supported in Release 2.1.x.....	375
SSIDs Supported in Release 2.5.x.....	375
SSIDs Supported in Release 3.0 and Above.....	376
ZoneDirector SSID Syntax.....	376
SSIDs Supported in Releases 9.8 and 9.7.....	376
Supported SSIDs in ZoneFlex Release 9.6.....	377
ZoneFlex AP SSID Syntax.....	377
Supported SSIDs in Releases 9.8, 9.7, and 9.6.....	377

# Copyright Notice and Proprietary Information

Copyright 2017. Ruckus Wireless, Inc. All rights reserved.

No part of this documentation may be used, reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Ruckus Wireless, Inc. (“Ruckus”), or as expressly provided by under license from Ruckus.

## **Destination Control Statement**

Technical data contained in this publication may be subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader’s responsibility to determine the applicable regulations and to comply with them.

## **Disclaimer**

THIS DOCUMENTATION AND ALL INFORMATION CONTAINED HEREIN (“MATERIAL”) IS PROVIDED FOR GENERAL INFORMATION PURPOSES ONLY. RUCKUS AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THE MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE MATERIAL IS ERROR-FREE, ACCURATE OR RELIABLE. RUCKUS RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES TO THE MATERIAL AT ANY TIME.

## **Limitation of Liability**

IN NO EVENT SHALL RUCKUS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY YOU OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT OR TORT, ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIAL.

## **Trademarks**

Ruckus Wireless, Ruckus, the bark logo, BeamFlex, ChannelFly, Dynamic PSK, FlexMaster, Simply Better Wireless, SmartCell, SmartMesh, SmartZone, Unleashed, ZoneDirector and ZoneFlex are trademarks of Ruckus Wireless, Inc. in the United States and other countries. All other product or company names may be trademarks of their respective owners.

# Document Conventions

Table 1: Text conventions on page 13 and Table 2: Notice conventions on page 13 list the text and notice conventions that are used throughout this guide.

**Table 1: Text conventions**

Convention	Description	Example
message phrase	Represents messages displayed in response to a command or a status	[Device Name] >
user input	Represents information that you enter	[Device Name] > set ipaddr 10.0.0.12
user interface controls	Keyboard keys, software buttons, and field names	Click <b>Create New</b>
<b>Start &gt; All Programs</b>	Represents a series of commands, or menus and submenus	Select <b>Start &gt; All Programs</b>
<b>ctrl+V</b>	Represents keyboard keys pressed in combination	Press <b>ctrl+V</b> to paste the text from the clipboard.
screen or page names		Click <b>Advanced Settings</b> . The <b>Advanced Settings</b> page appears.
command name	Represents CLI commands	
parameter name	Represents a parameter in a CLI command or UI feature	
variable name	Represents variable data	{ZoneDirectorID}
filepath	Represents file names or URI strings	http://ruckuswireless.com

**Table 2: Notice conventions**

Notice type	Description
<b>NOTE:</b>	Information that describes important features or instructions
<b>CAUTION:</b>	Information that alerts you to potential loss of data or potential damage to an application, system, or device

Notice type	Description
<b>WARNING:</b>	Information that alerts you to potential personal injury

# Documentation Feedback

Ruckus Wireless is interested in improving its documentation and welcomes your comments and suggestions.

You can email your comments to Ruckus Wireless at: [docs@ruckuswireless.com](mailto:docs@ruckuswireless.com)

When contacting us, please include the following information:

- Document title
- Document part number (on the cover page)
- Page number (if appropriate)

## Online Training Resources

To access a variety of online Ruckus Wireless training modules, including free introductory courses to wireless networking essentials, site surveys, and Ruckus Wireless products, visit the Ruckus Wireless Training Portal at:

<https://training.ruckuswireless.com>.



# Navigating the Dashboard

# 1

In this chapter:

- [Setting Up the Controller for the First Time](#)
- [Logging On to the Web Interface](#)
- [Web Interface Features](#)
- [Changing the Administrator Password](#)
- [Logging Off the Controller](#)
- [Configuring Global Filters](#)
- [Warnings and Notifications](#)
- [Health and Maps](#)
- [Traffic Analysis](#)

## Setting Up the Controller for the First Time

**NOTE:** Before continuing, make sure that you have already set up the controller on the network as described in the *Getting Started Guide* or *Quick Setup Guide* for your controller platform.

For information on how to set up the controller for the first time, including instructions for running and completing the controller's *Setup Wizard*, see the *Getting Started Guide* or *Quick Setup Guide* for your controller platform.

**NOTE:** While deploying vSZ, iSCSI must be used for block storage and make the hosts see everything as Direct-attached storage (DAS) for real-time database access/synchronisation as it requires lower latency and a high number of r/w transactions. Due to higher r/w latency, SAN and NAS might not be suitable for vSZ deployment.

Some of the new features (for example, location based services, rogue AP detection, force DHCP, and others) that this guide describes may not be visible on the controller web interface if the AP firmware deployed to the zone you are configuring is earlier than this release. To ensure that you can view and configure all new features that are available in this release, Ruckus Wireless recommends upgrading the AP firmware to the latest version.

## Logging On to the Web Interface

Before you can log on to the controller web interface, you must have the IP address that you assigned to the Management (Web) interface when you set up the controller on the network using the Setup Wizard.

Once you have this IP address, you can access the web interface on any computer that can reach the Management (Web) interface on the IP network.

Follow these steps to log on to the controller web interface.

1. On a computer that is on the same subnet as the Management (Web) interface, start a web browser.

Supported web browsers include:

- Google Chrome 47 and later (recommended)
- Safari 7 and later (Mac OS)
- Mozilla Firefox 44 and later
- Internet Explorer 11 and later
- Microsoft Edge

2. In the address bar, type the IP address that you assigned to the Management (Web) interface, and then append a colon and 8443 (the controller's management port number) at the end of the address.

For example, if the IP address that you assigned to the Management (Web) interface is 10.10.101.1, then you should enter: `https://10.10.101.1:8443`

**NOTE:** The controller web interface requires an HTTPS connection. You must append `https` (not `http`) to the Management interface IP address to connect to the web interface. If a browser security warning appears, this is because the default SSL certificate (or security certificate) that the controller is using for HTTPS communication is signed by Ruckus Wireless and is not recognized by most web browsers.

The controller web interface logon page appears.

3. Log on to the controller web interface using the following logon details:

- **User Name:** `admin`
- **Password:** {the password that you set when you ran the Setup Wizard}

4. Click **Log On**.


The web interface refreshes, and then displays the **Dashboard**, which indicates that you have logged on successfully.

## Web Interface Features

The web interface is the primary graphical front end for the controller and is the primary interface that you will use to:

- Manage access points and WLANs
- Create and manage users and roles
- Monitor wireless clients, managed devices, and rogue access points
- View alarms, events, and administrator activity
- Generate reports
- Perform administrative tasks, including backing up and restoring system configuration, upgrading the cluster, downloading support , performing system diagnostic tests, viewing the status of controller processes, and uploading additional licenses (among others)

**Figure 1: Controller Web Interface Features**

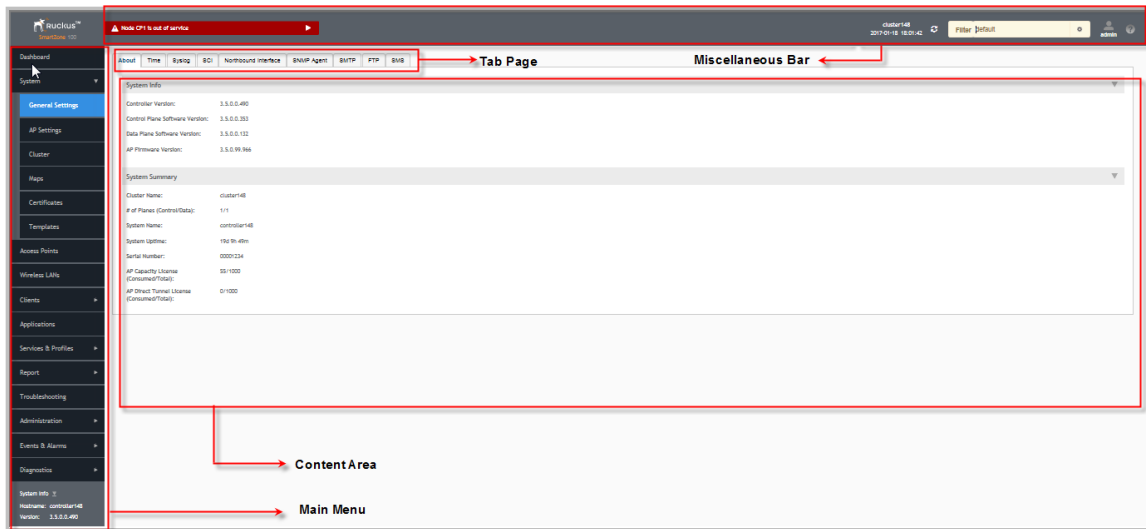

The following table describes the web interface features.

**Table 3: Controller Web Interface Features**

Feature	Description	Action
Main Menu	Lists the menus for administrative task.	Select the required menu and sub-menu.
Tab Page	Displays the options specific to the selected menu.	Select the required tab page.
Content Area	Displays tables, forms, and information specific to the selected menu and tab page.	View the tables, forms and information specific to the selected menu, sub-menu and tab page.
Header Bar	Displays information specific to the web interface.	Select the required option (from left to right): <ul style="list-style-type: none"> <li>Warning—Lists the critical issues to be resolved.</li> <li>System Date and time—Displays the current system date and time.</li> <li>Refresh—Refreshes the web page.</li> <li>Global filter—Allows you to set the preferred system filter.</li> <li>My Account link—Allows you to: <ul style="list-style-type: none"> <li>Change password</li> <li>Set session preference</li> <li>Log off</li> </ul> </li> </ul>


Feature	Description	Action
		<ul style="list-style-type: none"><li>• Online Help—Allows access to web help.</li></ul>

## Changing the Administrator Password

Follow these steps to change the administrator password.

1. From the **Header** bar, click **admin** and select **Change Password**. The [Figure 2: Change Password Form](#) on page 20 appears.

**Figure 2: Change Password Form**

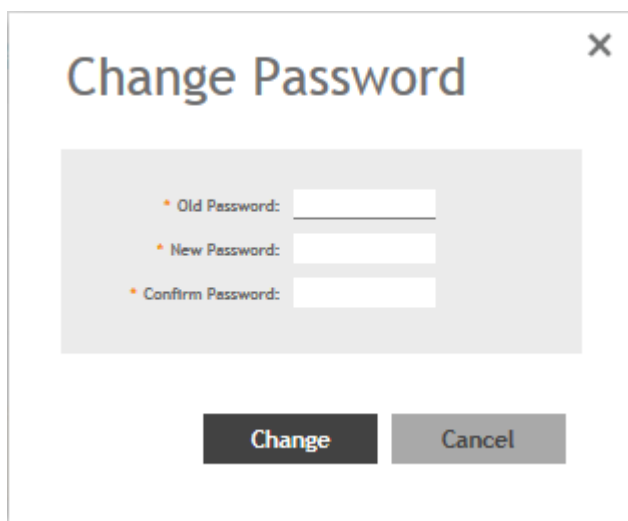

2. Enter:
  - **Old Password**—Your current password.
  - **New Password**—Your new password.
  - **Confirm Password**—Your new password.
3. Click **Change**, your new password is updated.

## Logging Off the Controller

You must be aware of how to log off the controller through CLI and from the web interface.

1. From the **Header** bar, click **admin** and select **Log off**.  
The following message appears: Are you sure you want to log off?
2. Click **Yes**.

The controller logs you off the web interface and the logon page appears.

You have completed logging off the web interface.

You can also use CLI commands to shutdown the controller.

To shutdown the controller gracefully, use the following command: `ruckus# shutdown <seconds>`, where *seconds* indicates the number of seconds before controller shutdowns.


To shutdown the controller immediately, use the following command: `ruckus# shutdown now`. The controller would shutdown in 30 seconds.

## Configuring Global Filters


The Global filter setting allows you to set your preferred system filter.

Global filters allow the administrator to define a system scope or system context that applies to all pages of the system as they navigate to different menus. For example, if your system includes 5 zones, but you want to view Zone1 and Zone2 only, you can create and apply such a filter. As you navigate throughout the system, the view will be restricted to show only the data, objects, and profiles contained within Zones 1 and 2.

To set the global filter:

1. From the **Header** bar, click **Filter** setting . The below figure appears.


**Figure 3: Global Filter Form**

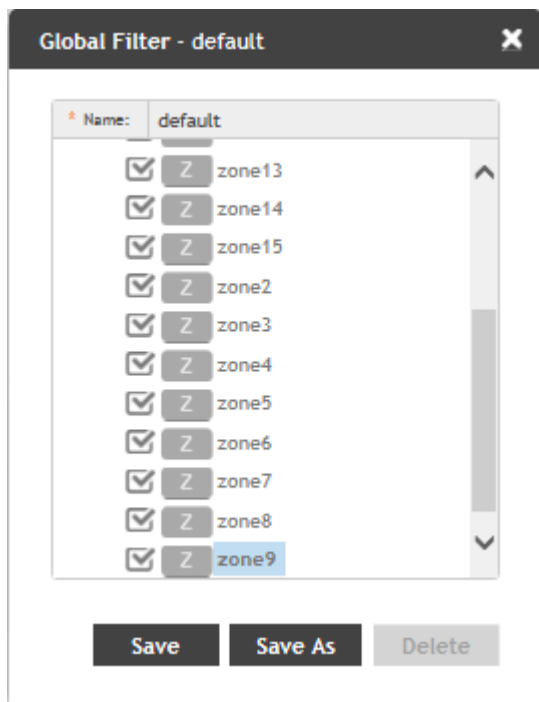


2. Select or clear the required system filters and click
  - **Save**—To save the filter settings with the default group.

- **Save As**—To save the filter settings as a new group. The below figure appears. Enter a new name for the group and click **OK**.

**Figure 4: New Name Form**

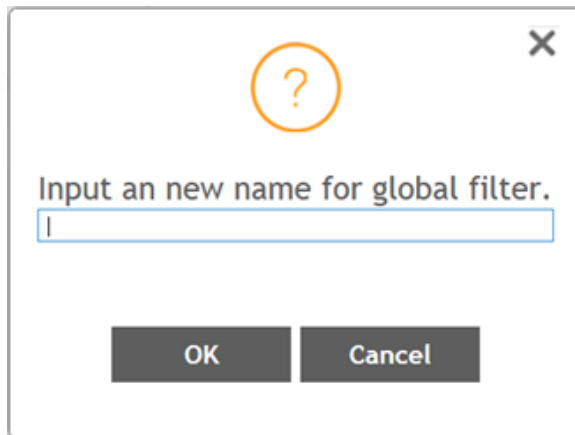A dialog box with a white background and a thin gray border. At the top center is a large orange question mark icon. In the top right corner is a small gray 'X' icon. Below the icon is the text "Input an new name for global filter." in a dark gray font. Underneath the text is a white text input field with a blue border and a vertical cursor. At the bottom of the dialog are two dark gray buttons with white text: "OK" on the left and "Cancel" on the right.

**NOTE:** You can delete the filter setting. To do so, click the Filter  setting button. The Global Filter form appears, click **Delete**.

## Warnings and Notifications

This section explains about warnings and notifications.

### Warnings

Warnings are displayed in the Miscellaneous bar. They are issues which are critical in nature. Warnings cannot be removed or acknowledged unless the critical issue is resolved.

**Figure 5: Sample Warning Message**



A list of warning messages that appear are as follows:

- Default 90-day support expiring soon
- System support expiring soon
- System support has expired
- Default 90-day AP license expiring soon
- Default AP license has expired
- Default 90-day RTU license expiring soon
- RTU has expired

- AP Certificate Expiration
- Node Out of Service
- Cluster Out of Service
- VM Resource Mismatch
- Suggested AP Limit Exceeded

## Setting Global Notifications

Notifications are integrated with existing alarms. Hence, they are displayed only when a notification alarm exists and which is not acknowledged by the administrator. Notifications can be viewed from the **Content** area. Administrators can acknowledge the notification by either:


- Clear the alarm
- Acknowledge the Alarm

For more information, refer [Managing Events and Alarms](#).

Alarm severity are of three types:

- Minor
- Major
- Critical

The administrator can change the alarm severity shown on the dashboard. To do so:

1. From the Notifications area, Click the Setting  button. The Settings - Global Notification form appears.
2. From the **Lowest alarm severity** drop-down, select the required severity level.
3. Click **OK**. Notifications corresponding to the selected alarm severity and severity above it are displayed in the Notification area of the Dashboard.


## Health and Maps

The Health dashboard gives you a very high-level overview of cluster, AP and client information. It also displays a world map view using Google Maps, which provides a global view of your SmartZone-controlled wireless network deployments.

The status bar at the top of the Health dashboard contains an iconic representation of the total Cluster, AP and Client counts for the entire system. This information can be filtered to display a single zone, AP group, or venue using the drop-down filter menu. You can also customize the dashboard layout and threshold settings using the Settings (gear) icon.

For more information on customizing the information displayed on the Health dashboard, see [Customizing Health Status Thresholds](#) on page 24.

### Figure 6: Health Workspace area

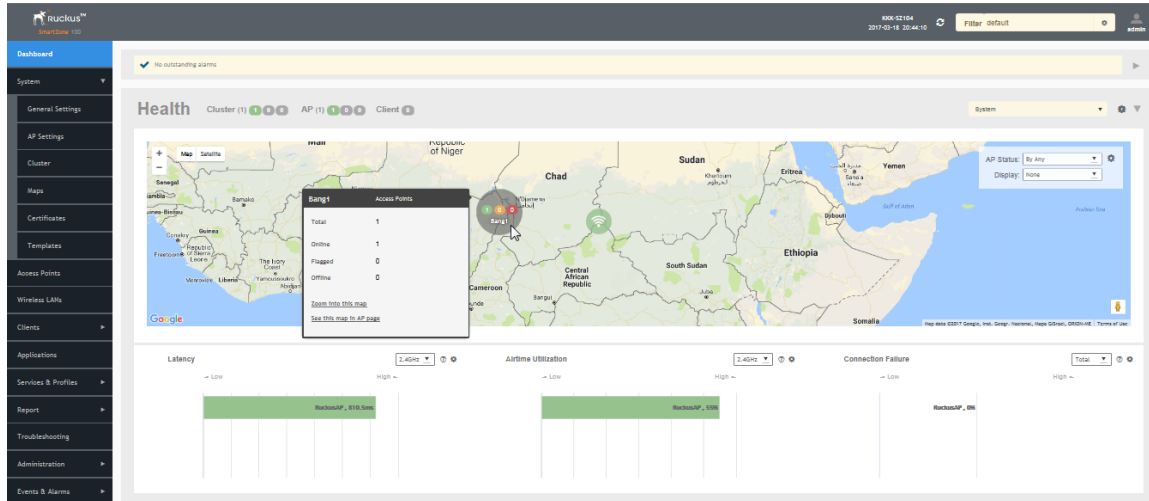

## Understanding Cluster and AP Health Icons

The Health dashboard status bar displays the following Cluster and AP information using three colored icons to denote the number of APs/clusters currently in that state.

The icons for both Cluster and AP status overviews are represented by the following color coding scheme:

- **1** (Green): Online
- **3** (Orange): Flagged
- **3** (Red): Offline

Online and Offline status are self-explanatory. "Flagged" status is user-defined. You can customize the thresholds at which an AP or cluster enters "flagged" state using the **Settings** (gear) icon in the status bar. For more information, see [Customizing Health Status Thresholds](#) on page 24.

## Customizing Health Status Thresholds

You can customize the way SmartZone categorizes and displays clusters and APs as "Flagged" in the status bar.


To customize the Health dashboard, click the **Settings** (gear) icon. In the **Settings - Health Dashboard** form, click the **Cluster Status** or **AP Status** tab, and configure the following:

- **Cluster Status:** Configure CPU, hard disk and memory usage percentages above which the cluster will be marked as flagged status.



- **AP Status:** Configure the criteria upon which APs will be flagged. For more information, see [Customizing AP Flagged Status Thresholds](#) on page 25.

Figure 7: Setting Cluster Health Status

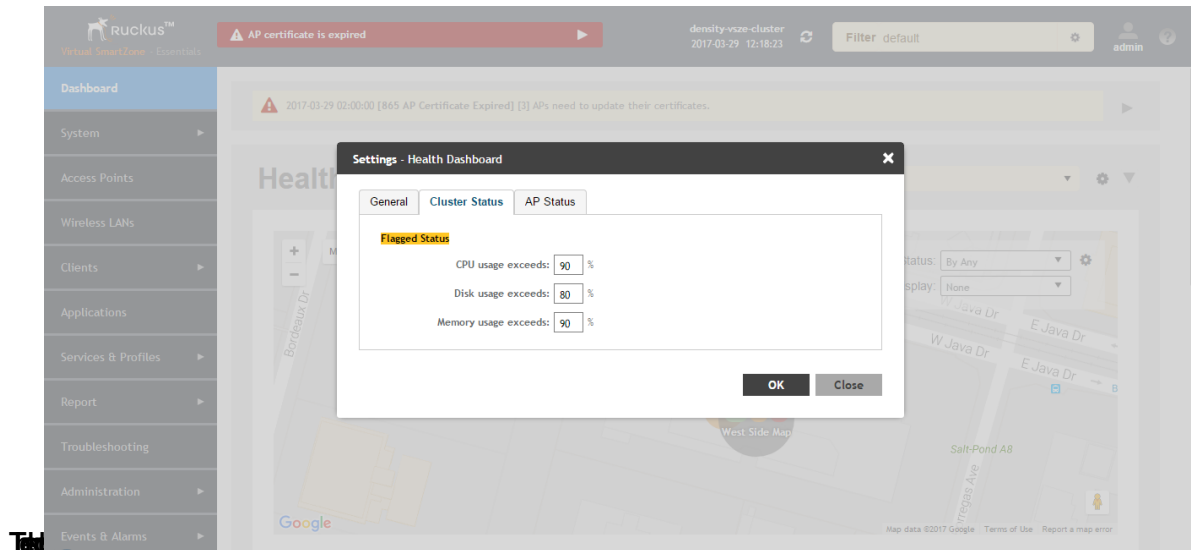


### Customizing AP Flagged Status Thresholds

Use the following procedure to customize when APs will be marked as "flagged" on the Health dashboard status bar.

1. Click the **Gear** icon on the **Health** dashboard.
2. The **Settings - Health Dashboard** form appears. Click the **AP Status** tab.
3. Select the behavior of flagging policies when applying changes to parent or child groups:
  - Apply the change to all child groups
  - Apply the change if child group settings already match the parent group
4. Configure thresholds above which APs will be marked as "flagged" for the following criteria:
  - Latency
  - Airtime Utilization
  - Connection Failures
  - Total connected clients
5. Configure the radio (2.4 / 5 GHz) from the drop-down menu and select the level (system, zone, AP group) at which you want to apply the policy, and configure the **Sensitivity** control for the threshold (Low, Medium, High). Setting the Sensitivity level to Low means that an AP must remain above the threshold for a longer period of time before it will appear in the flagged category, while a High sensitivity means that APs will more quickly alternate between flagged and non-flagged status.

- Click **OK** to save your changes.

**Figure 8: Configuring AP flagged status thresholds**

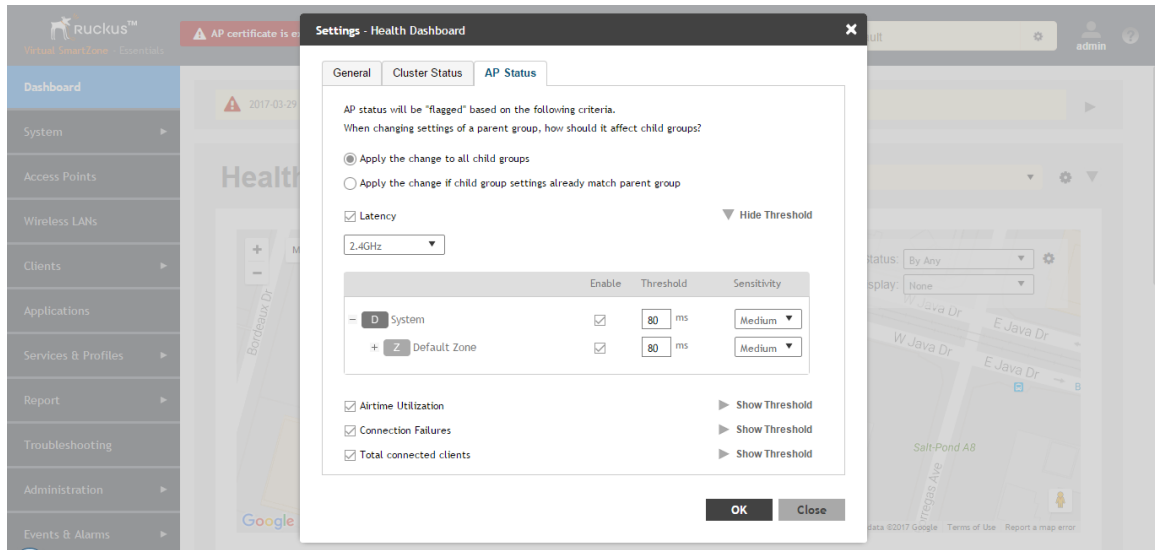


### Using the Health Dashboard Map

Use the Google Maps view just as you would normally use Google Maps - including zoom, satellite view, rotate and even street view icons. You can customize the AP icon information displayed on the map using the tools in the upper-right hand corner.

Use the **AP Status** pull-down menu to configure which AP health parameters will be displayed on the AP icons on the map. Use the **Display** menu to display the client count or radio channel in use.

Use the **Settings** (gear) icon to configure the information displayed in tooltips when hovering over an AP on the map. You can also change the view mode altogether, from map view to Groups, Control Planes or Data Planes view mode using the settings menu.

**Figure 9: Configuring map**

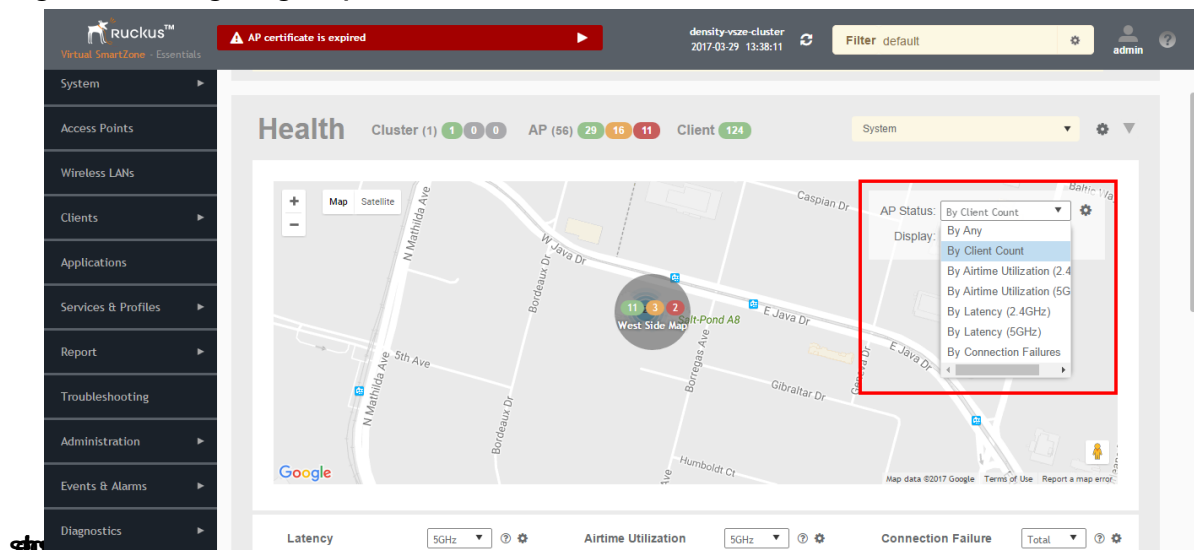

**NOTE:** In order for your venues to appear on the world map, you must first import a map of your site floorplan, as described in [Working with Maps](#).

## Traffic Analysis

You can analyze network traffic for APs, WLANs and clients.


From the traffic analysis tab, you can choose to analyze data using the following filters:

- **Channel Range**
  - Total
  - 2.4GHz
  - 5GHz
- **Throughput**
  - **TX+RX**—Number of bytes sent and received
  - **TX**—Number of bytes sent
  - **RX**—Number of bytes received
- **Group**


### Configuring Traffic Analysis Display for APs

Using traffic analysis you can measure the total volume of traffic sent or received by an Access Point (AP). You can view historical and real-time data of the AP. Throughput and the number of clients connected to the AP are displayed in a bar chart. You must configure the AP settings to view its traffic analysis.

To configure the AP settings:

1. From the Access Points area, click settings . [Figure 10: AP Settings Form](#) on page 27 appears.

#### **Figure 10: AP Settings Form**

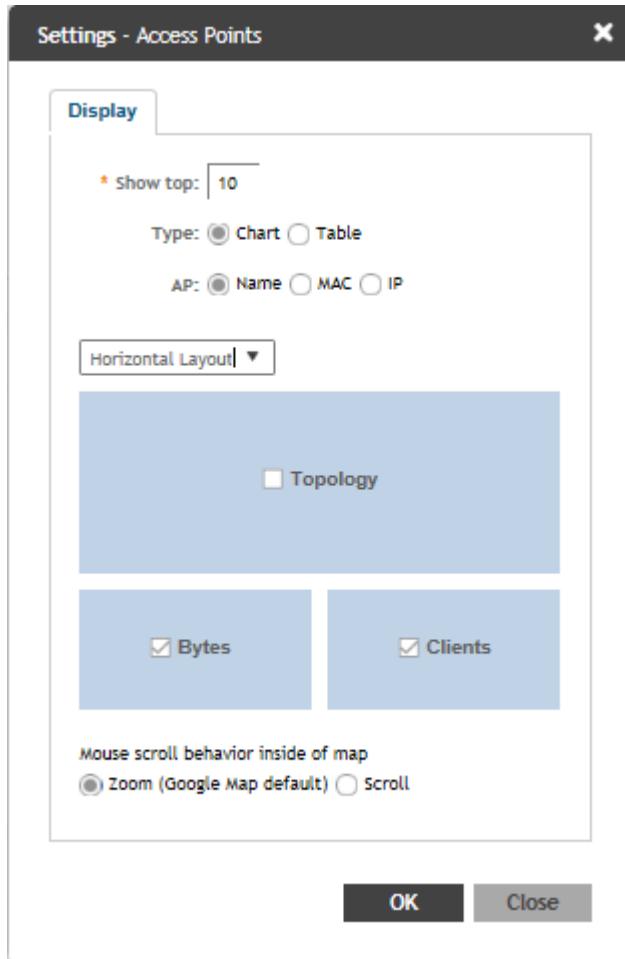

2. In **Show top**, enter the number of APs for which the traffic must be analyzed. Range: 5 through 20.
3. Select the **Type** of display you want to view. For example, **Chart** or **Table**.
4. Select the required **AP** identification option to be displayed. For example, **Name**, **MAC** or **IP**.
5. From the drop-down, select the required display layout. For example, **Horizontal Layout** or **Vertical Layout**.
6. Select or clear the required options that must be displayed in the Content area.
  - **Topology**—To view the location map.
  - **Bytes**—To view the throughput.
  - **Clients**—To view the client details.
7. Select the following mouse-scroll behavior when you point the mouse over a map:
  - **Zoom**
  - **Scroll**
8. Click **OK**.


## Configuring Traffic Analysis Display for WLANs

Using traffic analysis you can measure the total volume of traffic sent or received by WLANs. You can view historical and real-time data of the WLANs. Throughput and the number of clients connected to the WLANs are displayed in a bar chart. You must configure the WLAN settings to view its traffic analysis.

To configure the WLAN settings:

1. From the WLAN area, click settings . [Figure 11: WLAN Settings Form](#) on page 29 appears.

**Figure 11: WLAN Settings Form**

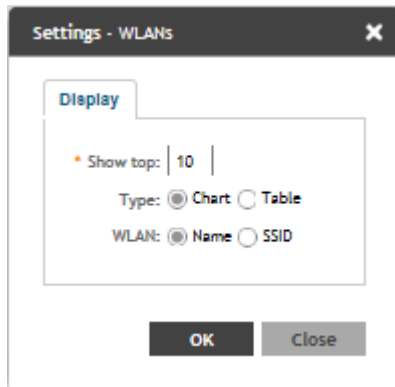

2. In **Show top**, enter the number of WLANs for which the traffic must be analyzed. Range: 5 through 20.
3. Select the **Type** of display you want to view. For example, **Chart** or **Table**.
4. Select the required **WLAN** identification option to be displayed. For example, **Name** or **SSID**.
5. Click **OK**.

## Configuring Traffic Analysis Display for Top Clients

Using traffic analysis you can measure the total volume of traffic sent or received by Clients. You can view historical and real-time data of the Clients. The chart displays:


- Bytes—Frequency and number of clients connected to the AP
- OS Type—Types of OS the associated clients are using
- Application—Throughput the applications use

You must configure the Client settings to view its traffic analysis.

To configure the Client settings:

- From the Clients area, click settings . [Figure 12: Client Setting Form](#) on page 29 appears.

**Figure 12: Client Setting Form**

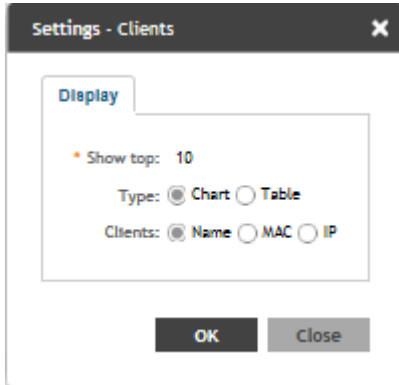

- In **Show top**, enter the number of Clients for which the traffic must be analyzed. Range: 5 through 20.
- Select the **Type** of display you want to view. For example, **Chart** or **Table**.
- Select the required **Client** identification option to be displayed. For example, **Name**, **MAC** or **IP**.
- Click **OK**.

# Configuring System Settings

# 2

In this chapter:

- [Configuring General Settings](#)
- [Configuring AP Settings](#)
- [Viewing the System Cluster Overview](#)
- [Working with Maps](#)
- [Certificates](#)
- [Configuring Templates](#)


## Configuring General Settings

### Viewing System Settings

You can view the system settings.

To view the system settings, from the left pane, select **Systems**. [Figure 13: General System Settings](#) on page 31 appears.

**Figure 13: General System Settings**

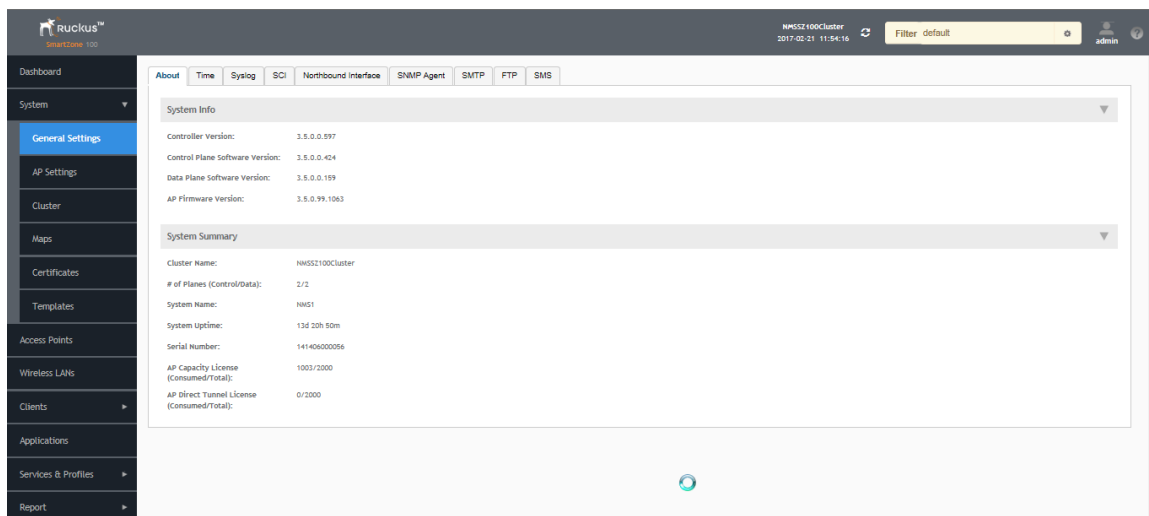

### Configuring System Time

The controller uses an external network time protocol (NTP) server to synchronize the times across cluster nodes and managed access points.

To edit the system time:

1. Go to **System > General Settings > Time**.

2. Enter the **NTP Server** address that you want to use. The default NTP server address is `ntp.ruckuswireless.com`.
3. Click **Sync Server** to enable an AP to join the controller and automatically synchronize its time every day.
4. Select the **System Time Zone**, from the drop-down that you want the controller to use. The default time zone is (GMT +0:00) UTC.
5. Click **OK**.

## Configuring the Remote Syslog Server

The controller maintains an internal log file of current events and alarms, but this internal log file has a fixed capacity. Configure the log settings so you can keep copies of the logs that the controller generates.

At a certain point, the controller will start deleting the oldest entries in log file to make room for newer entries. If you want to keep a permanent record of all alarms and events that the controller generated, you can configure the controller to send the log contents to a syslog server on the network.

Follow these steps to configure the remote syslog server:

1. Go to **System > General Settings > Syslog**.
2. Select the **Enable logging to remote syslog server** check box.
3. Configure the settings as explained in [Table 4: Syslog Server Configuration Settings](#) on page 32.
4. Click **OK**.

**Table 4: Syslog Server Configuration Settings**

Field	Description	Your Action
<b>Primary Syslog Server Address</b>	Indicates the syslog server on the network.	<ol style="list-style-type: none"> <li>1. Enter the server address.</li> <li>2. Enter the <b>Port number</b>.</li> <li>3. Choose the <b>Protocol type</b>.</li> <li>4. Click <b>Ping Syslog Server</b>. If the syslog server is reachable, a flashing green circle and the message <b>Success</b> appears after the button.</li> </ol>
<b>Secondary Syslog Server Address</b>	Indicates the backup syslog server on the network, if any, in case the primary syslog server is unavailable.	<ol style="list-style-type: none"> <li>1. Enter the server address.</li> <li>2. Enter the <b>Port number</b>.</li> <li>3. Choose the <b>Protocol type</b>.</li> <li>4. Click <b>Ping Syslog Server</b>. If the syslog server is reachable, a flashing green circle and the message <b>Success</b> appears after the button.</li> </ol>



Field	Description	Your Action
<b>Facility for Application Logs</b>	Indicates the facility for application logs.	Select the option from the drop-down. Range: 0 through 7.
<b>Facility for Administrator Activity Logs</b>	Indicates the facility for administrator logs.	Select the option from the drop-down. Range: 0 through 7.
<b>Facility for Events</b>	Indicates the facility for event logs.	Select the option from the drop-down. Range: 0 through 7.
<b>Event Filter</b>	Indicates the type of event that must be sent to the syslog server.	Choose the required option: <ul style="list-style-type: none"> <li>• <b>All events</b> — Send all controller events to the syslog server.</li> <li>• <b>All events except client association / disassociation events</b> — Send all controller events (except client association and disassociation events) to the syslog server.</li> <li>• <b>All events above a severity</b> — Send all controller events that are above the event severity to the syslog server.</li> </ul>
<b>Event Filter Severity</b> applies to <b>Event Filter &gt; All events above a severity</b>	Indicates the lowest severity level. Events above this severity level will be sent to the syslog server.	Select the option from the drop-down.
<b>Priority</b>	Indicates the event severity to syslog priority mapping in the controller.	Choose the syslog priority among <b>Error</b> , <b>Warning</b> , <b>Info</b> and <b>Debug</b> , for the following event severities: <ul style="list-style-type: none"> <li>• <b>Critical</b></li> <li>• <b>Major</b></li> <li>• <b>Minor</b></li> <li>• <b>Warning</b></li> <li>• <b>Informational</b></li> <li>• <b>Debug</b></li> </ul>

## Configuring SCI Settings

SmartCell Insight uses data from the controller to analyse performance and generate reports about the WiFi network. Configuring the SCI settings in the controller enables data transfer from the controller to the SCI server using the MQTT protocol.

Follow these steps to configure the SCI server settings:

1. Go to **System > General Settings > SCI**.
2. Select the **Enable SCI** check-box to configure the SCI server settings.
3. Click **Create**, the Create SCI Profile form appears.
4. Enter the following details:
  - **Name**—Profile name.
  - **Server Host**—IP address to the SCI host server.
  - **Server Port**—Port number over which the SCI server and controller can communicate and transfer data.
  - **User**—Name for the user.
  - **Password**—password for the respective user.
  - **System ID**—ID of the SCI system that should be accessed.
5. Click **OK**.

**NOTE:** You can also edit or delete an SCI profile. To do so, select the SCI profile from the list and click **Configure** or **Delete** as required.

## Setting the Northbound Portal Password

Third-party applications use the northbound portal interface to authenticate users and to retrieve user information during the UE association.

Follow these steps to configure the northbound portal interface:

1. Go to **System > General Settings > Northbound Interface**.
2. Select **Enable Northbound Interface Support**, and enter the **User Name** and **Password**.
3. Click **OK**.

## Enabling Global SNMP Notifications

The controller supports the Simple Network Management Protocol (SNMP v2 and v3), which allows you to query controller information, such as system status, AP list, etc., and to set a number of system settings using a Network Management System (NMS) or SNMP MIB browser.

You can also enable SNMP traps to receive immediate notifications for possible AP and system issues.

The procedure for enabling the internal SNMP agents depends on whether your network is using SNMPv2 or SNMPv3. SNMPv3 mainly provides security enhancements over the earlier version, and therefore requires you to enter authorization passwords and encryption settings, instead of simple clear text community strings.

Both SNMPv2 and SNMPv3 can be enabled at the same time. The SNMPv3 framework provides backward compatibility for SNMPv1 and SNMPv2c management applications so that existing management applications can still be used to manage the controller with SNMPv3 enabled.

### Configuring SNMP v2 Agent

To configure SNMP v2 Agent settings:

1. Go to **System > General Settings > SNMP Agent**.
2. Select the **Enable SNMP Notifications Globally** check box to send out notification messages.
3. To configure the SNMPv2 Agent, click **Create** and update the details as explained in the following table.

**Table 5: SNMP v2 Agent Settings**

Field	Description	Your Action
<b>Community</b>	Indicates that applications which send SNMP Get-Requests to the controller (to retrieve information) will need to send this string along with the request before they will be allowed access.	Enter a name.
<b>Privilege</b>	Indicates the privileges granted to this community.	<p>Select the required privileges:</p> <ul style="list-style-type: none"> <li>• <b>Read</b>— Privilege only to read.</li> <li>• <b>Write</b>— Privilege only to read and write.</li> <li>• <b>Notification</b>— Privilege to: <ul style="list-style-type: none"> <li>• <b>Trap</b>— Choose this option to send SNMP trap notification.</li> <li>• <b>Inform</b>— Choose this option to send SNMP notification.</li> </ul> </li> </ul> <ol style="list-style-type: none"> <li>1. Enter the <b>Target IP</b> address.</li> <li>2. Enter the <b>Target Port</b> number.</li> <li>3. Click <b>Add</b>.</li> </ol>

**NOTE:** You can also edit or delete an SNMPv2 agent. To do so, select the SNMPv2 agent from the list and click **Configure** or **Delete** respectively.

4. Click **OK**.

### Configuring SNMP v3 Agent

1. Go to **System > General Settings > SNMP Agent**.
2. Select the **Enable SNMP Notifications Globally** check box to send out notification messages.

3. To configure the SNMPv3 Agent, click **Create** and update the details as explained in the following table.

**Table 6: SNMPv3 Agent Settings**

Field	Description	Your Action
<b>Community</b>	Indicates that applications which send SNMP Get-Requests to the controller (to retrieve information) will need to send this string along with the request before they will be allowed access.	Enter a name.
<b>Authentication</b>	Indicates the authentication method.	<p>Choose the required option:</p> <ul style="list-style-type: none"> <li>• <b>None</b>— Use no authentication.</li> <li>• <b>SHA</b>— Secure Hash Algorithm, message hash function with 160-bit output.               <ol style="list-style-type: none"> <li>1. Enter the <b>Auth Pass Phrase</b>.</li> <li>2. Choose the <b>Privacy</b> option.                   <ul style="list-style-type: none"> <li>• <b>None:</b> Use no privacy method.</li> <li>• <b>DES:</b> Data Encryption Standard, data block cipher.</li> <li>• <b>AES:</b> Advanced Encryption Standard, data block cipher.</li> </ul> </li> <li>3. Enter a <b>Privacy Phrase</b>, 8 through 32 characters.</li> </ol> </li> <li>• <b>MD5</b>— Message-Digest algorithm 5, message hash function with 128-bit output.               <ol style="list-style-type: none"> <li>1. Enter the <b>Auth Pass Phrase</b>.</li> </ol> </li> </ul>

Field	Description	Your Action
		<p><b>2.</b> Choose the <b>Privacy</b> option.</p> <ul style="list-style-type: none"> <li>• <b>None:</b> Use no privacy method.</li> <li>• <b>DES:</b> Data Encryption Standard, data block cipher.</li> <li>• <b>AES:</b> Advanced Encryption Standard, data block cipher.</li> </ul> <p><b>3.</b> Enter a <b>Privacy Phrase</b>, 8 through 32 characters.</p>
<b>Privilege</b>	Indicates the privileges granted to this community.	<p>Select the required privileges:</p> <ul style="list-style-type: none"> <li>• <b>Read</b>—Privilege only to read.</li> <li>• <b>Write</b>—Privilege only to read and write.</li> <li>• <b>Notification</b>—Privilege to: <ul style="list-style-type: none"> <li>• <b>Trap</b>—Choose this option to send SNMP trap notification.</li> <li>• <b>Inform</b>—Choose this option to send SNMP notification.</li> </ul> </li> </ul> <p><b>1.</b> Enter the <b>Target IP</b> address.</p> <p><b>2.</b> Enter the <b>Target Port</b> number.</p> <p><b>3.</b> Click <b>Add</b>.</p>

**NOTE:** You can also edit or delete an SNMPv3 agent. To do so, select the SNMPv3 agent from the list and click **Configure** or **Delete** respectively.

**4.** Click **OK**.

## Configuring SMTP Server Settings

If you want to receive copies of the reports that the controller generates or to email guest passes to users, you need to configure the SMTP server settings and the email address from which the controller will send the reports.

Follow these steps to configure the SMTP server settings:

1. Go to **System > General Settings > SMTP**.
2. Select **Enable SMTP Server**.
3. Enter the **Logon Name** or user name provided by your ISP or mail administrator. This might be just the part of your email address before the @ symbol, or it might be your complete email address. If you are using a free email service (such as Hotmail™ or Gmail™), you typically have to type your complete email address.
4. Enter the associated **Password**.
5. For **SMTP Server Host**, enter the full name of the server provided by your ISP or mail administrator. Typically, the SMTP server name is in the format `smtp.company.com`.
6. For **SMTP Server Port**, enter the SMTP port number provided by your ISP or mail administrator. Often, the SMTP port number is 25 or 587. The default SMTP port value is 25.
7. For **Mail From**, enter the source email address from which the controller sends email notifications.
8. For **Mail To**, enter the recipient email address to which the controller sends alarm messages. You can send alarm messages to a single email address.
9. Select the **Encryption Options**, if your mail server uses encryption.
  - **TLS**
  - **STARTTLS**

Check with your ISP or mail administrator for the correct encryption settings that you need to set.
10. Click **Test**, to verify if the SMTP server settings are correct. The test completed successfully form appears, click **OK**.
11. Click **OK**.

## Configuring FTP Server Settings

The controller enables you to automatically back up statistics files, reports, and system configuration backups to an external FTP server.

However, before you can do this, you must add at least one FTP server to the controller.

Follow these steps to add an FTP server to which the controller will export data automatically:

1. Go to **System > General Settings > FTP**.
2. Click **Create**, the Create FTP Server form appears.
3. Enter an **FTP Name** that you want to assign to the FTP server that you are adding.
4. Select the required **Protocol**; **FTP** or **SFTP** (Secure FTP) protocol.
5. Enter the **FTP Host**, IP address of the FTP server.
6. Enter the **FTP Port**, number. The default FTP port number is 21.
7. Enter a **User Name** for the FTP account that you want to use.

8. Enter a **Password** that is associated with the FTP user name.
9. For **Remote Directory**, enter the remote FTP server path to which data will be exported from the controller. The path must start with a forward slash (/)
10. To verify that the FTP server settings and logon information are correct, click **Test**. If the server and logon settings are correct, a confirmation message stating, "**FTP server connection established successfully**" appears.
11. Click **OK**.

**NOTE:** You can edit or delete an existing FTP setting. To do so, select the FTP setting from the list and click **Configure** or **Delete** respectively.

## Configuring the SMS Gateway Server

You can define the external gateway services used to distribute guest pass credentials to guests.

To configure an external SMS gateway for the controller:

1. Go to **System > General Settings > SMS**.
2. Select the **Enable Twilio SMS Server** check box to use an existing Twilio account for SMS delivery.
3. Enter the following Twilio Account Information:
  - **Server Name**
  - **Account SID**
  - **Auth Token**
  - **From** (phone number)
4. Click **OK**.

## Configuring Node Affinity

Node affinity enables administrators to manually configure the controller nodes to which APs will connect.

To do this, set the order of preferred nodes on the node affinity page. Node affinity is implemented at the AP zone level, which means that all APs that belong to a zone will have the same node affinity settings.

If you want APs that belong to the same zone to connect to the same node whenever possible, you can configure set the preferred node for a particular zone.

**NOTE:** An affinity profile defines the order of the nodes to which APs that belong to the same zone will connect.

**NOTE:** Node affinity is not supported on the vSZ-H and vSZ-D platforms.

### Enabling Node Affinity

To enable and configure node affinity:

1. Go to **System > General Settings > Node Affinity**.
2. Select **Enable Node Affinity**. Node Affinity Profile appears.
3. To:

- Create an new profile:
  1. Click **Create**, the Create Node Affinity Profile form appears.
  2. Enter a **Name** and **Description**.
  3. In the **Node Order** list, select the node and click **Up** or **Down** to position the node in the required order.
  4. Click **OK**.
- Edit the default profile:
  1. Select the profile from the list and click **Configure**. The Edit Node Affinity Profile form appears.
  2. Edit the **Name** and **Description**.
  3. In the **Node Order** list, select the node and click **Up** or **Down** to position the node in the required order.
  4. Click **OK**.

**NOTE:** Enabling node affinity automatically disables cluster redundancy.

4. To set the number of times an AP will attempt to connect to the preferred node, enter the **# of Node Retry for Preferred Node**.

The default value is 3 and the accepted range is 1 to 10. If the AP is unable to connect to the preferred node, it will attempt to connect to the node that is next in the order of node priority.

5. In the **Zone Assignment** section, set the node affinity profile that you want each zone to use. Select the Zone from the list and click **Assign Profile**. The Assign Node Affinity Profile to Selected Zones form appears.
6. Select the **Node Affinity Profile** from the drop-down and click **OK**.
7. Click **OK**.

### Disabling Node Affinity

Follow these steps to disable node affinity:

1. From **System > General Settings > Node Affinity**.
2. Clear the **Enable Node Affinity** check box.
3. Click **OK**. You have disabled node affinity.

### Configuring Advanced Gateway Options

You can configure advanced gateway options. This feature no longer depend on flat file changes.

**NOTE:** The feature is applicable only to SCG200 platform.

To configure advanced gateway options:

1. Go to **System > General Settings > Gateway Advanced**.
2. Configure the following options:



- **Allow Session on Accounting Fail**—Allows the controller TTG to terminate calls if accounting response fails. The default setting is **No**.
- **GTP Network Service Access Point Identifier [NSAPI]**—Selects NSAPI for GTP message. The default setting is **1**.
- **Include IMEI IE in GTP Messages**—Enables or disables IMEI IE in GTP messages. The default setting is **No**.

**NOTE:** In IMEI IE, the controller will send the MAC address of the UE appended with FFFE.

- **Include SCG-RAI in GTPV2 Messages**—Used only when the S5/S8 interface is used for GTPv2.
- **Include SCG-SAI in GTPV2 Messages**—Used only when the S5/S8 interface is used for GTPv2
- **Include ECGI in GTPV2 Messages**—Used only when the S5/S8 interface is used for GTPv2:
- **Include TAI in GTPV2 Messages**—Used only when the S5/S8 interface is used for GTPv2.
- **GTPv2 Interface Type**—Choose the interface type. S2A or S5\_S8.

**NOTE:** The default GTPv2 interface for the controller is S2A.

3. Click **OK**.

## Configuring AP Settings

### Working with AP Registration Rules

Registration rules enable the controller to assign an AP to an AP zone automatically based on the rule that the AP matches.

**NOTE:** A registration rule is only applied to an AP the first time it joins the controller. If an AP's MAC address already exists on the controller database (whether it is in connected or disconnected state and whether it belongs to the Staging Zone or any other zone), the controller will assign the AP to its last known AP zone.

This section describes the following tasks:

#### Creating an AP Registration Rule

You must create rules to register an AP.

To create an AP registration rule:

1. Go to **System > AP Settings > AP Registration**.
2. Click **Create**, the AP Registration Rule form appears.
3. Enter a **Rule Description**.
4. Select the **Zone Name** to which this rule applies.
5. In **Rule Type**, click the basis upon which you want to create the rule. Options include:

**NOTE:** The format of the IP address or addresses that you need to enter here depends on the AP IP mode that you selected when you created the AP zone to which this rule will be assigned. If you selected IPv4 Only, enter an IPv4 address. If you selected IPv6 Only, enter an IPv6 address.

- **IP Address Range:** If you select this option, enter the From (starting) and To (ending) IP address that you want to use.
- **Subnet:** If you select this option, enter the IP address and subnet mask pair to use for matching.
- **GPS Coordinates:** If you select this option, type the GPS coordinates to use for matching. Access points that have been assigned the same GPS coordinates will be automatically assigned to the AP zone that you will choose in the next step.

You can choose the Rule Type as GPS coordinates, wherein you must provide information about the latitude, longitude and distance to determine if the AP is within the defined area.

- **Provision Tag:** If the access points that are joining the controller have been configured with provision tags, click the Provision Tag option, and then type a tag name in the Provision Tag box. Access points with matching tags will be automatically assigned to the AP zone that you will choose in the next step.

**NOTE:** Provision tags can be configured on a per-AP basis from the access point's command line interface.

## 6. Click **OK**.

When the process is complete, the page refreshes, and then registration rule that you created appears on the AP Registration Rules page.

To create another registration rule, repeat the preceding steps. You can create as many registration rules as you need to manage the APs on the network.

**NOTE:** You can also edit, delete or clone an AP registration rule. To do so, select the rule profile from the list and click **Configure**, **Delete** or **Clone** respectively.

### Configuring Registration Rule Priorities

The controller applies registration rules in the same order as they appear in the AP Registration Rules table (highest to lowest priority).

If you want a particular registration rule to have higher priority, you must move it up the table. Once an AP matches a registration rule, the controller assigns the AP to the zone specified in the rule and stops processing the remaining rules.

Follow these steps to configure the registration rule priorities.

1. Go to **System > AP Settings > AP Registration**.
2. Select the rule from the list and click.
  - **Up**—To give a rule higher priority, move it up the table
  - **Down**—To give a rule lower priority, move it down the table

3. Click **Update Priorities** to save your changes.

### Creating vSZ-D Zone Affinity

To create a zone affinity:

**NOTE:** This feature is applicable only to vSZ-H platform.

1. Go to **System > AP Settings > vSZ-D Zone Affinity**.
2. Click **Create**, the Create New vSZ-D Zone Affinity form appears.
3. Enter a **Name** and **Description** for the zone affinity.
4. Click **Create**, the Add vSZ-D form appears.
5. Choose the zone from the drop-down.
6. Click **OK**.

### Tagging Critical APs

A critical AP is an AP that exceeds the daily traffic threshold (sum of uplink and downlink) data bytes configured on the controller web interface.

Follow these steps to tag critical APs (APs that exceed the data traffic threshold that you have defined) automatically:

1. Go to **System > AP Settings > Critical AP Tagging**.
2. Select the **Enable Auto Tagging Critical APs** check box.
3. For **Auto Tagging Rules**, select **Daily Traffic Bytes Exceeds Threshold**.
4. For **Rule Threshold**:
  - In the first box, enter the value that you want to set as the traffic threshold. This value will be applied in conjunction with the data unit that you select in the second box.
  - In the second box, select the data unit for the threshold – **MB** for megabytes or **GB** for gigabytes.
5. Click **OK**.

APs that exceed the daily traffic threshold that you specified will appear highlighted on the Access Points page and the Access Point details page. Additionally, the controller will send an SNMP trap to alert you that that an AP has been disconnected.

### Configuring the Tunnel UDP Port

The tunnel UDP port is used by all GRE+UDP type tunnels.

To configuring the tunnel UDP port:

1. Go to **System > AP Settings > Tunnel UDP Port**.
2. Enter the **Tunnel UDP Port** number.
3. Click **OK**.

### Setting the Country Code

Different countries follow different regulations for radio channel usage.

To ensure that the APs use authorized radio channels:

1. Go to **System > AP Settings > Country Code**.
2. Select the **Country Code** for your location from the drop-down.
3. Click **OK**.

## Viewing the System Cluster Overview

The system cluster overview provides summary information of the controller cluster.

To view the cluster settings:

- From the left pane of the application, click **System > Cluster**. The Cluster page appears as shown in [Figure 14: System Cluster Overview](#) on page 44.

**Figure 14: System Cluster Overview**

Name	Status	Management IP	Cluster IP	Control IP	Model	Serial Number	# of APs	MAC Address	Description	Firmware
setup-1-C	Online	172.19.13.96	182.168.11.6	10.1.13.96	SCG200	20700005	4	00:15:17:F7:87:98	setup-1	3.5.0.0.5

Name	DP MAC Address	IP Address	Model	Serial Number	Firmware	Managed By	DP Status	Registration State	Uptime
setup-1-D0	00:15:17:F7:87:AB	10.1.13.31	CH5750p...	2.0G1049-PP...	3.5.0.0.448	setup-1	Managed	Approved	1d 1h 59m
setup-1-D1	00:15:17:F7:87:80	10.1.13.32	CH5750p...	2.0G1133-PP...	3.5.0.0.448	setup-1	Managed	Approved	1d 1h 59m

### Control Planes and Data Planes

Control planes and data planes are used to control traffic.


The control plane manages and exchanges routing table information. The control plane packets are processed by the router to update the routing table information. The data plane forwards the traffic along the path according to the logic of the control plane.

You can view historical and real time traffic of the nodes. To view the traffic:

1. From the Controller page, select the node.
2. Click the Traffic & Health from the lower end of the page.
3. Select the option from the drop-down:
  - **Historical Data**, and enter the timeframe for which you want.
  - **Real Time Data**, enter the duration in minutes and click **Start**.

Figure 15: Cluster Node Traffic and Health. on page 45 appears.

Figure 15: Cluster Node Traffic and Health.

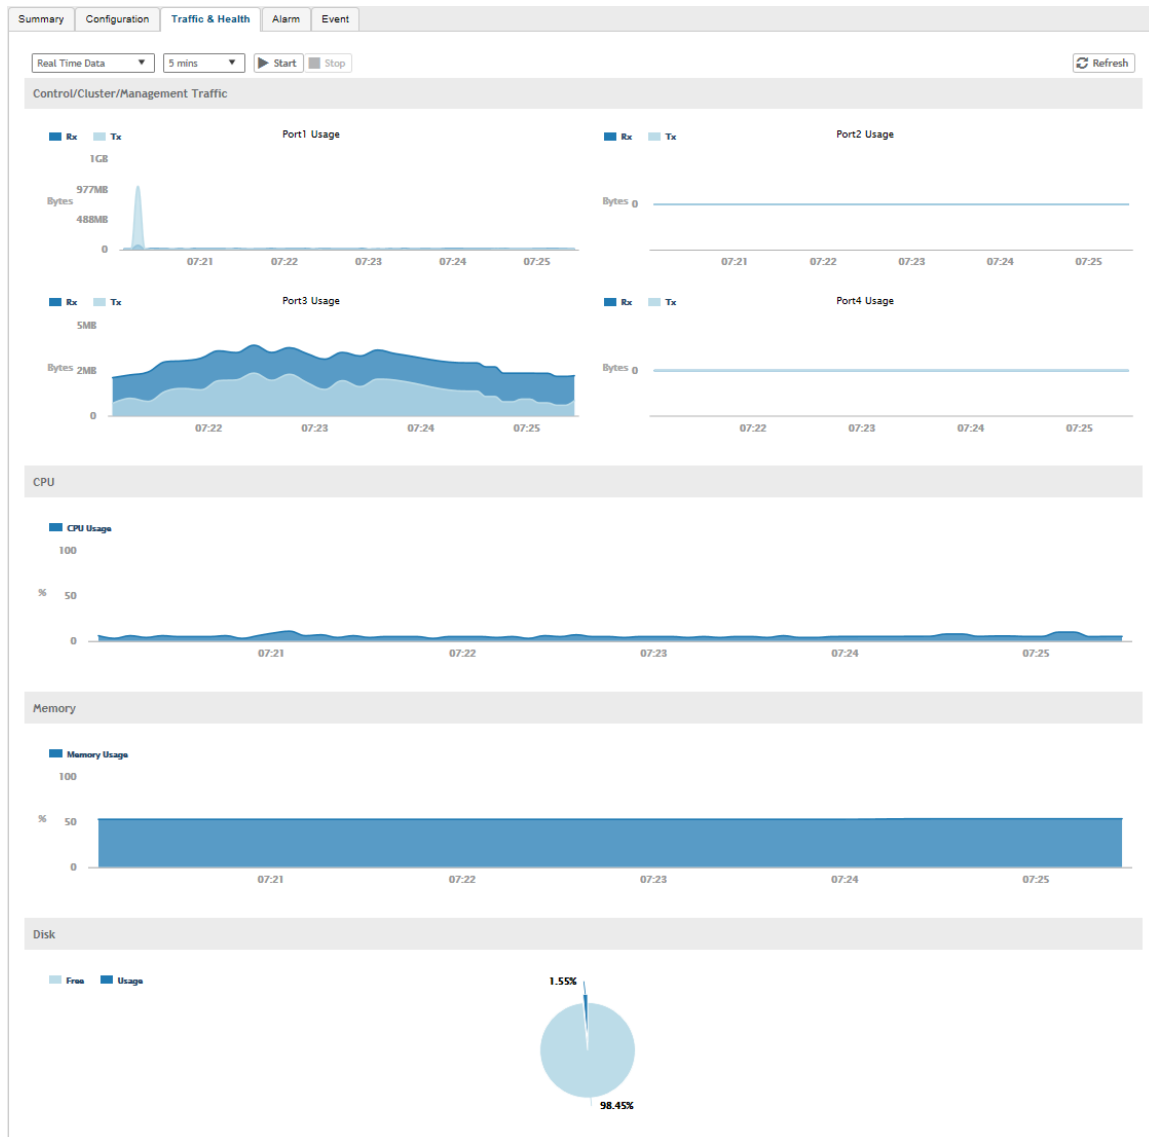

## Interface and Routing

To configure a cluster node, you must define interface and routing information.

### Interface

You can only create one user defined interface, and it must be for a hotspot service and must use the control interface as its physical interface. The control plane and the UDI must be on different subnets. If the control plane and UDI are on the same subnet, and assigned with the same IP address, APs will be unable to communicate with the control plane. If the control plane and UDI are on the same subnet and assigned different IP addresses, hotspot clients will not be redirected to the logon URL for user authentication.

**NOTE:** The user defined interface (UDI) is unavailable in Virtual SmartZone (High-Scale and Essentials).

## Static Routing

Static routing is used to manually configure routing entry. Static routes are fixed and do not change if the network is changed or reconfigured. Static routing are usually used to maximize efficiency and to provide backups in the event that dynamic routing information fails to be exchanged.

## Displaying the Chassis View of Cluster Nodes


The chassis view provides a graphical representation of the control panel (on the front panel of the controller), including the LEDs.

Use the LEDs to check the status of the ports and power supplies on the controller. Fan status is also displayed on the chassis view.

To view the chassis of the cluster node:

1. From the Cluster page, select the node.
2. From the lower-left side of the page, click the **Chassis** tab. [Figure 16: Cluster Node Chassis](#) on page 46 appears.

**Figure 16: Cluster Node Chassis**

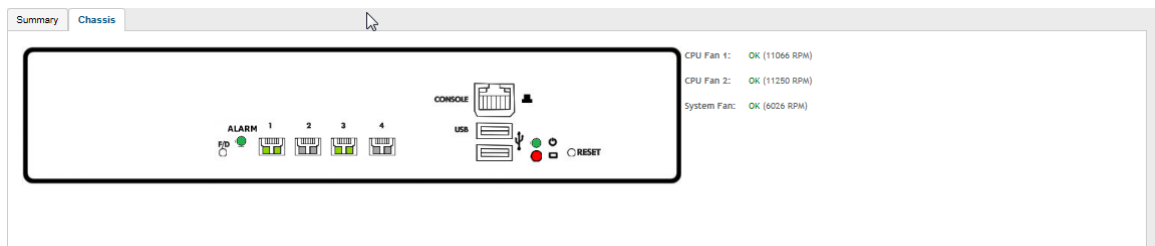


## Enabling Cluster Redundancy

If you have multiple clusters on the network, you can configure cluster redundancy to enable APs managed by a particular cluster to fail over automatically to another cluster if their parent cluster goes out of service or becomes unavailable.

Before you configure cluster redundancy, take note of the following:

- Cluster redundancy is disabled by default.
- Only super administrators have the capability to configure the cluster redundancy settings.
- To configure cluster redundancy, you will need to retrieve the IP addresses assigned to the control interfaces of all nodes on clusters that you want to configure.

**Figure 17: Cluster Redundancy**

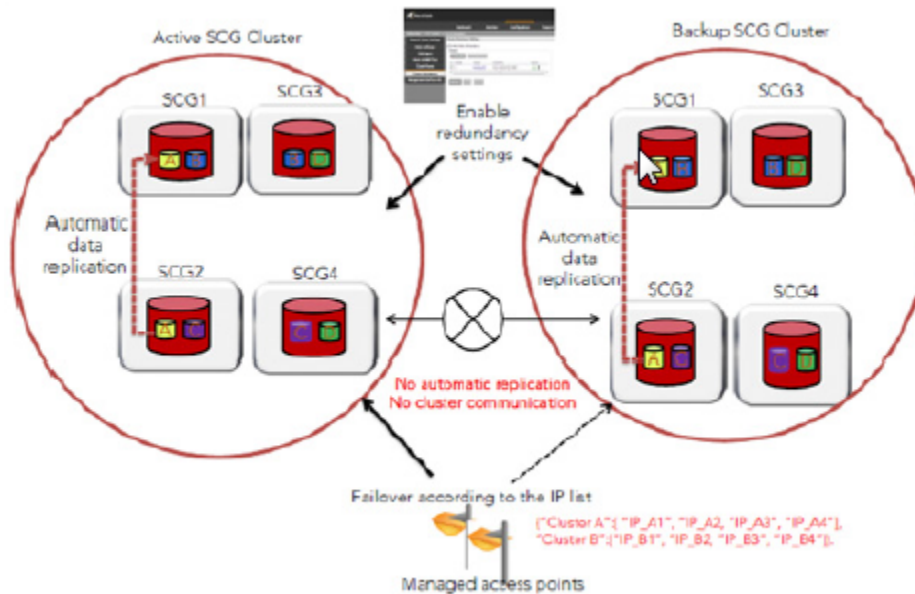

Follow these steps to enable cluster redundancy:

1. Go to **System > Cluster**. The Cluster page appears.
2. Select the cluster, scroll down and click the **Configuration** tab.
3. On the right side of the Configuration area, click **Configure**. The Edit Clustr page appears.
4. In the Cluster Redundancy area, select the **Enable Cluster Redundancy** check box.
5. To add the cluster control IP, click **Create**. The Cluster Redundancy form appears.
6. Enter a **Name**.
7. Enter the **Control IP** and click **ADD**. The control IP is added to the list.
8. Click **OK**. You have enabled cluster redundancy.

**NOTE:** After configuring redundancy for a cluster, Ruckus Wireless strongly recommends backing up the controller configuration.

### How Cluster Redundancy Works

The following simplified scenario describes how cluster redundancy works and how managed APs fail over from one controller cluster to another.

1. After you enable and configure cluster redundancy on the controller, managed APs obtain the updated configuration (which now includes the failover settings) from the controller. If you have two clusters, for example, managed APs will obtain a failover list similar to the following:

```
{"Cluster A":["IP_A1", "IP_A2", "IP_A3", "IP_A4"], "Cluster B":["IP_B1", "IP_B2", "IP_B3", "IP_B4"]}
```

2. If Cluster A goes out of service or becomes unavailable, APs managed by Cluster A will attempt to connect to the IP addresses (one node at a time) specified for Cluster A.
3. If managed APs are unable to connect to the IP addresses specified for Cluster A, they will attempt to connect to the IP addresses (one node at a time) specified for Cluster B.

4. If managed APs are able to connect to one of the IP address specified for Cluster B, they fail over to Cluster B. Then, they apply the registration rules that have been configured for Cluster B and renew their certificates.

**NOTE:** The second cluster to which APs fail over must have sufficient license seats to accommodate the new APs that it will be managing. If the second cluster has insufficient license seats, the failover will be unsuccessful.

## Configuring the Control Plane

Control Plane configuration includes defining the physical interface, user defined interface and static routes.

To configure a control plane:

1. Go to **System > Cluster > Control Planes**.
2. Select the control plane from the list and click **Configure**. The Edit Control Plane Network Settings form appears.
3. Configure the settings as explained in [Table 7: Configuring Control Plane](#) on page 48.
4. Click **OK**.

**NOTE:** You must configure the **Control** interface, **IPv4 Cluster** interface, and **Management** interface to be on three different subnets. Failure to do so may result in loss of access to the web interface or failure of system functions and services.

**Table 7: Configuring Control Plane**

Field	Description	Your Action
<b>Physical Interfaces</b>		
<b>IPv4-Control Interface</b>	Indicates the management and IP control settings.	<p>Select the <b>IP Mode</b>:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the <b>IP Address</b>.</li> <li>• Enter <b>Subnet Mask</b>.</li> <li>• Enter the <b>Gateway</b> router address.</li> <li>• Enter <b>Control NAT IP</b> address.</li> </ul> </li> <li>• <b>DHCP</b>—To automatically obtain an IP address from a DHCP server on the network. <ul style="list-style-type: none"> <li>• Enter <b>Control NAT IP</b>.</li> </ul> </li> </ul>



Field	Description	Your Action
<b>IPv4-Cluster Interface</b>	Indicates the IPv4 cluster interface settings	<p>Select the <b>IP Mode</b>:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the <b>IP Address</b>.</li> <li>• Enter <b>Subnet Mask</b>.</li> <li>• Enter the <b>Gateway</b> router address.</li> </ul> </li> <li>• <b>DHCP</b>—To automatically obtain an IP address from a DHCP server on the network.</li> </ul>
<b>IPv4-Management Interface</b>	Indicates the IPv4 management interface settings	<p>Select the <b>IP Mode</b>:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the <b>IP Address</b>.</li> <li>• Enter <b>Subnet Mask</b>.</li> <li>• Enter the <b>Gateway</b> router address.</li> </ul> </li> <li>• <b>DHCP</b>—To automatically obtain an IP address from a DHCP server on the network.</li> </ul>
<b>IPv6-Control Interface</b> (This feature is supported only for SZ300 controllers)	Indicates the IPv6 control interface settings	<p>Select the <b>IP Mode</b>:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the IPv6 <b>IP Address</b> (global only) with a prefix length (for example, 1234::5678:0:C12/123) is required. Link-local</li> </ul> </li> </ul>

Field	Description	Your Action
		<p>addresses are unsupported.</p> <ul style="list-style-type: none"> <li>• Enter the IPv6 <b>Gateway</b> address (global or link-local) without a prefix length. For example, 1234::5678:0:C12 (global address without a prefix length) and fe80::5678:0:C12 (link-local address without a prefix length).</li> <li>• <b>Auto</b>—To automatically obtain an IP address from Router Advertisements (RAs) or from a DHCPv6 server on the network.</li> </ul>
<p><b>IPv6-Management Interface</b> (This feature is supported only for SZ300 controllers)</p>	<p>Indicates the IPv6 management interface settings</p>	<p>Select the <b>IP Mode</b>:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually.</li> <li>• Enter the IPv6 <b>IP Address</b> (global only) with a prefix length (for example, 1234::5678:0:C12/123) is required. Link-local addresses are unsupported.</li> <li>• Enter the IPv6 <b>Gateway</b> address (global or link-local) without a prefix length. For example, 1234::5678:0:C12 (global address without a prefix length) and fe80::5678:0:C12 (link-local address without a prefix length).</li> </ul>

Field	Description	Your Action
		<ul style="list-style-type: none"> <li>• <b>Auto</b>—To automatically obtain an IP address from Router Advertisements (RAs) or from a DHCPv6 server on the network.</li> </ul>
<b>Access &amp; Core Separation</b>	Indicates that the management interface (core side) to be the system default gateway and the control interface (access side) to be used only for access traffic.	Select the <b>Enable</b> check box.
<b>IPv4 Default Gateway &amp; DNS</b>	Indicates the IPv4 gateway that you want to use - Control, Cluster, and Management.  <b>NOTE:</b> When <b>Access &amp; Core Separation</b> is enabled, the <b>Default Gateway</b> field is hidden.	<ol style="list-style-type: none"> <li>1. <b>Default Gateway</b>—Choose the Interface for which you want to assign the default gateway setting.</li> <li>2. <b>Primary DNS Server</b>—Enter the server details.</li> <li>3. <b>Secondary DNS Server</b>—Enter the server details.</li> </ol>
<b>IPv6 Default Gateway &amp; DNS</b> (This feature is supported only for SZ300 controllers)	Indicates the IPv6 gateway that you want to use - Control, Cluster, and Management.  <b>NOTE:</b> When <b>Access &amp; Core Separation</b> is enabled, the <b>Default Gateway</b> field is hidden.	<ol style="list-style-type: none"> <li>1. <b>Default Gateway</b>—Choose the Interface for which you want to assign the default gateway setting.</li> <li>2. <b>Primary DNS Server</b>—Enter the server details.</li> <li>3. <b>Secondary DNS Server</b>—Enter the server details.</li> </ol>
<b>User Defined Interfaces</b>		
<p><b>NOTE:</b> The control plane and the UDI must be on different subnets. If the control plane and UDI are on the same subnet, and assigned the same IP address, APs will be unable to communicate with the control plane. If the control plane and UDI are on the same subnet and assigned different IP addresses, hotspot clients will not be redirected to the logon URL for user authentication.</p>		
<b>Name</b>	Indicates the name of the interface.	Enter a name.

Field	Description	Your Action
<b>Physical Interfaces</b>	Indicates the physical interface.	Select <b>Control Interface</b> .
<b>Service</b>	Indicates the service.	Select <b>Hotspot</b> , the hotspot must use the control interface as its physical interface.
<b>IP Address</b>	Indicates the IP address that you want to assign to this interface.	Enter the IP address.
<b>Subnet Mask</b>	Indicates the subnet mask for the IP address.	Enter the subnet mask.
<b>Gateway</b>	Indicates the IP address of the gateway router.	Enter the gateway IP address.
<b>VLAN</b>	Indicates the VLAN ID that you want to assign to this interface.	Enter the VLAN ID.
<b>Add</b>	Adds the interface settings.	Click <b>Add</b> .
<b>Static Routes</b>		
<b>Network Address</b>	Indicates the destination IP address of this route.	Enter the IP address.
<b>Subnet Mask</b>	Indicates a subnet mask for the IP address.	Enter the subnet mask.
<b>Gateway</b>	Indicates the IP address of the gateway router.	Enter the IP address of the gateway router.
<b>Interface</b>	Indicates the physical interface to use for this route.	Select the interface.
<b>Metric</b>	Represents the number of routers between the network and the destination.	Enter the number of routers.
<b>Add</b>	Adds the static route settings.	Click <b>Add</b> .

**NOTE:** You can also delete or restart a control plane. To do so, select the control plane from the list and click **Delete** or **Restart** respectively.

### Rebalancing APs

AP rebalancing helps distribute the AP load across nodes that exist within a cluster.

When a multi-node cluster is upgraded, the node that reboots the last typically does not have any APs associated with it.

When you click **Rebalance APs**, the following process is triggered:

1. The controller calculates the average AP count based on the number of available control planes and data planes.
2. The controller calculates how many APs and which specific APs must be moved to other nodes to distribute the AP load.
3. The controller regenerates the AP configuration settings based on the calculation result.
4. The web interface displays a message to inform the administrator that the controller has completed its calculations for rebalancing APs.
5. Each AP that needs to be moved to a different node retrieves the updated AP configuration from the controller, reads the control planes and data planes to which it must connect, and then connects to them.

When the AP rebalancing process is complete, which typically takes 15 minutes, one of the following events is generated:

- Event 770: Generate ApConfig for plane load rebalance succeeded.
- Event 771: Generate ApConfig for plane load rebalance failed.


**NOTE:**

- APs may recreate the Ruckus-GRE tunnel to a different data plane.
- Devices associated with an AP that uses the Ruckus-GRE tunnel may temporarily lose network connection for a short period of time (typically, around five minutes) during the AP rebalancing process.
- When node affinity is enabled, AP rebalancing is disallowed on those nodes.
- When data plane grouping is enabled, AP rebalancing is disallowed on those data planes.
- AP rebalancing only supports APs running release 3.2 firmware. APs running on legacy firmware will not be rebalanced.

To rebalance APs across the nodes:

1. Go to **System > Cluster > Control Planes > More > Rebalance APs**.

**Figure 18: AP Rebalancing Form**

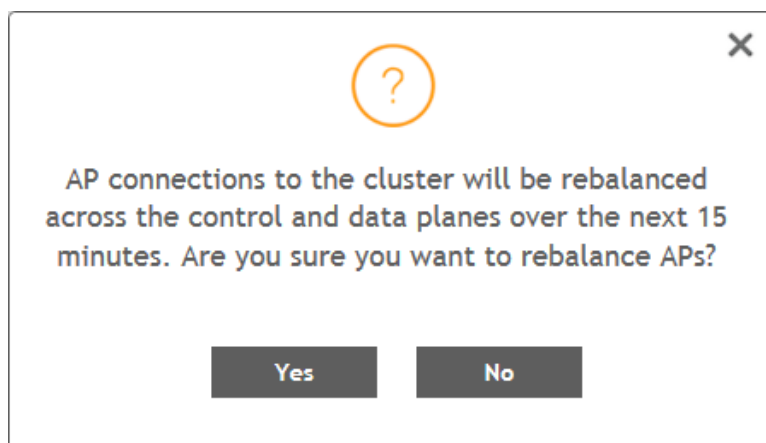

- Click **Yes**, the controller rebalances AP connections across the nodes over the next 15 minutes.

**NOTE:** If you want to repeat this procedure, you must wait 30 minutes before the controller will allow you to rebalance APs again.

## Configuring the Data Plane

By default, the controller sends traffic from its data plane from a single interface.

If your organization's network requires separation of the access and core traffic, configure access and core separation on the controller.

To configure a data plane:

- Go to **System > Cluster > Data Planes**.
- Select the data plane from the list and click **Configure**. The Edit Data Plane Network Settings form appears.
- Configure the settings as explained in [Table 8: Configuring Data Plane](#) on page 54.
- Click **OK**.

**Table 8: Configuring Data Plane**

Field	Description	Your Action
<b>Network</b>		
<b>Interface Mode</b>	Indicates the traffic direction.	<p>Choose the option:</p> <ul style="list-style-type: none"> <li><b>Single Interface</b> (default)—For the controller to send traffic from its data plane from a single interface.</li> <li><b>Access and Core Interface</b>—For the controller to send traffic to the access and core networks separately.</li> </ul> <p><b>NOTE:</b> To separate the access and core networks</p> <ul style="list-style-type: none"> <li>Use static routes, if the data plane is required to connect to IP addresses in the core network (for example, for DHCP relay or L2oGRE termination) and the destination IP addresses are not part of the core subnet.</li> <li>For SCG-200, there are no predefined access and core interfaces. You can use either ports on the rear panel of the</li> </ul>

Field	Description	Your Action
		controller to connect to the access network and core network.

**Network > Primary (Access) Interface**

<b>IP Mode</b>	Indicates the mode of assigning the IP address to this interface.	<p>Select the option:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the <b>IP Address</b>.</li> <li>• Enter <b>Subnet Mask</b> for the IP address.</li> <li>• Enter the <b>Gateway</b> router address.</li> <li>• Enter the <b>Primary DNS Server</b> IP address.</li> <li>• Enter the <b>Secondary DNS Server</b> IP address.</li> <li>• Enter <b>VLAN ID</b> to tag traffic.</li> <li>• Enter <b>Data NAT IP</b> address.</li> </ul> </li> <li>• <b>DHCP</b>—To automatically obtain an IP address from a DHCP server on the network. <ul style="list-style-type: none"> <li>• Enter <b>VLAN ID</b> to tag traffic.</li> <li>• Enter <b>Data NAT IP</b> address.</li> </ul> </li> </ul>
----------------	---	---

**Network > IPv6 Primary (Access) Interface** (This feature is supported only for SZ300 controllers)

<b>IP Mode</b>	Indicates the mode of assigning the IP address to this interface.	<p>Select the option:</p> <ul style="list-style-type: none"> <li>• <b>Static</b> (<i>recommended</i>)—To manually assign an IP address to this interface manually. <ul style="list-style-type: none"> <li>• Enter the <b>IP Address</b>.</li> <li>• Enter the <b>Gateway</b> router address.</li> <li>• Enter the <b>Primary DNS Server</b> IP address.</li> <li>• Enter the <b>Secondary DNS Server</b> IP address.</li> </ul> </li> </ul>
----------------	---	---

Field	Description	Your Action
		<ul style="list-style-type: none"> <li><b>Auto</b>— To automatically obtain an IP address from a DHCP server on the network.</li> </ul>
<b>Network &gt; Secondary (Core) Interface</b> (applicable for <b>Interface Mode: Access and Core Interfaces</b> )		
<b>IP Address</b>	Indicates the IP address of the core network interface.	Enter the IP address.  <b>NOTE:</b> The secondary/core interface IP address must be configured manually; DHCP is unsupported.
<b>Subnet Mask</b>	Indicates the IP address of the subnet mask.	Enter the subnet mask.
<b>VLAN</b>	Indicates that the traffic is tagged with a VLAN ID.	Enter the VLAN ID.  <b>NOTE:</b> If VLANs are configured on both the access and core networks, the VLAN ID that you enter here must be different from the one that you entered for the primary/access interface.  <b>NOTE:</b> You cannot configure the IP address and VLAN settings for a virtual Data Plane from the Primary (Access) and Secondary (Core) Interface sections. Only vSZ-H supports virtual Data Plane.
<b>Disconnect AP when core link down</b>	Indicates that the AP is disconnected secondary core link is down.	Select the check box.
<b>Static Routes</b>		
<b>Network Address</b>	Indicates the destination IP address of this route.	Enter the IP address.
<b>Subnet Mask</b>	Indicates a subnet mask for the IP address.	Enter the subnet mask.
<b>Gateway</b>	Indicates the IP address of the gateway router.	Enter the IP address of the gateway router.
<b>Add</b>	Adds the static route settings.	Click <b>Add</b> .
<b>CALEA Relay</b>		



Field	Description	Your Action
<b>Mark this Data Plane as CALEA Relay</b> (This feature is supported only for vSZ-E, vSZ-H, and SZ300 controllers)	Indicates that the data plane uses CALEA relay.	Select the check box.

**NOTE:** You can restart a data plane. To do so, select the data plane from the list and click **Restart**.

## Monitoring Cluster Settings

This section provides information on how to view the status of the cluster settings.

You can select the following tabs for more information:

- **Summary**—Details such as Name, model, IP details, memory usage, disk usage.
- **Network Settings**—Details such as control interface, cluster interface, management interface, DNS Server, Routes.
- **Configuration**—Details such as physical interfaces, User defined interfaces, Static Routes Interface.
- **Traffic & Health**—Details such as CPU usage, memory usage, disk usage, interface, port usage.
- **Alarm**—Details of alarms generated. You can Clear Alarm or Acknowledge Alarm that are generated.
- **Event**—Details of events that are generated.

### Clearing or Acknowledging Alarms

You can clear or acknowledge an alarm..

To Clear an alarm:

1. From the **Alarm** tab, select the alarm form the list.
2. Click **Clear Alarm**, the Clear Alarm form appears.
3. Enter a comment and click **Apply**.

To acknowledge an alarm:

1. From the **Alarm** tab, select the alarm form the list.
2. Click **Acknowledge Alarm**, the Are you sure you want to acknowledge the selected form appears.
3. Click **Yes**.

For more information, refer [m-ManagingEventsAndAlarms.ditamap](#).

### Filtering Events

You can view a list of events by severity or date and time.

To apply filters:

1. From the **Event** tab, select the  icon. The Apply Filters form appears.

2. Select any or both the following criteria:

- **Severity:** Select the severity level by which you want to filter the list of events.
- **Date and Time:** Select the events by their **Start** and **End** dates.

**NOTE:** You can filter events that generated in the last seven days.

3. Click **OK**, all the events that meet the filter criteria are displayed on the Event page.

For more information, refer [m-ManagingEventsAndAlarms.ditamap](#).

## Working with Maps


Importing floorplan maps into SmartZone allows you to further customize the information displayed on the Dashboard and Access Points pages, and monitor your APs, zones, groups, clients and traffic statistics all within the world map view on the Dashboard.

Additionally, you can use the maps to quickly locate more specific information on a venue or zone, and drag and drop APs onto the floor plan map to represent their locations in physical space in your venue.

Once a map is imported and GPS coordinates are entered, an icon representing the venue appears on the world map on the Dashboard. The icon displays the current number of APs (Online, Flagged and Offline). You can hover over the icon for more information.

Double-click the map icon or click **Zoom into this map** to view the imported map in the Dashboard.

**Figure 19:** Once a floorplan map has been imported (with GPS coordinates), it is displayed on the world map on the Dashboard. Hover over the local map icon for more

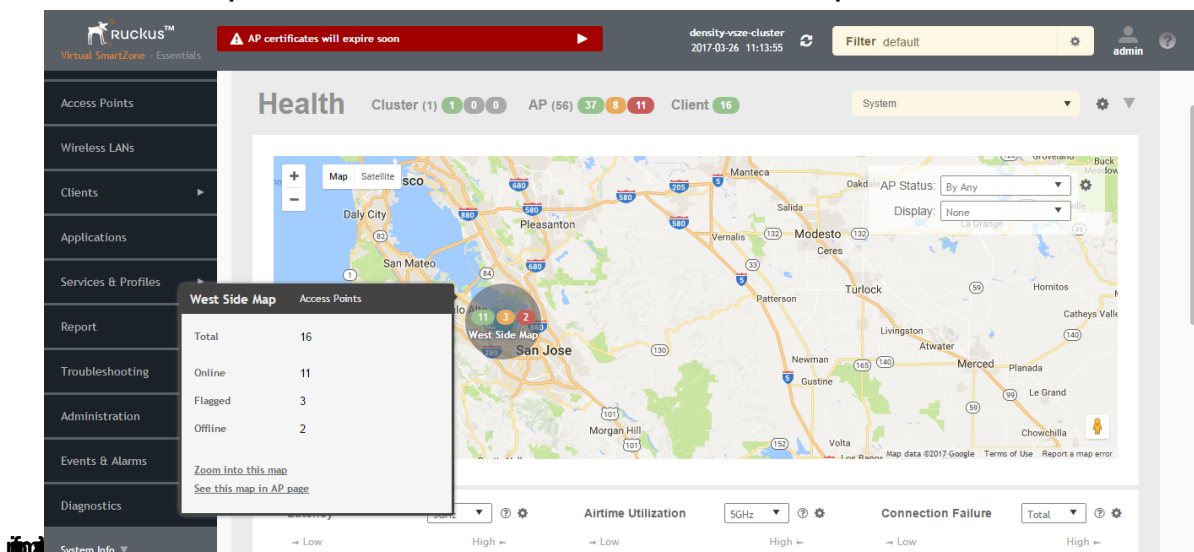

## Importing a Floorplan Map

SmartZone provides a user-friendly workflow for importing a map of your venue floorplan, placing APs in their respective physical locations on the map, and scaling the map to match the actual dimensions of your venue.

Floorplan maps allow you to view site/venue/floor-specific details such as:

- AP status, performance, and health conditions
- Client connections to an AP
- Location-specific trouble spots related to AP or client connectivity

To import a floorplan map:


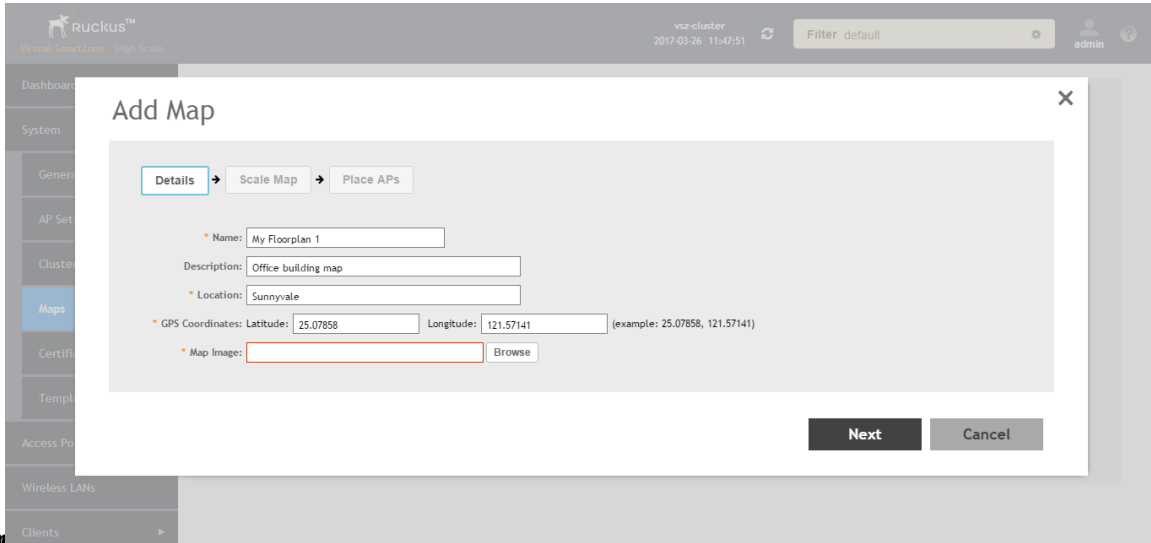
1. Go to **System > Maps**.
2. From the System tree hierarchy, select the location where you want to create a map and click the add  button. The **Add Map** form appears.
3. On the **Details** tab, enter a **Name** and optionally a **Description** to identify the map.
4. Enter a **Location** for the map.
5. For **GPS Coordinates**, enter the **Latitude** and **Longitude** values.

Figure 20: The Add Map



The screenshot shows the 'Add Map' form in the Ruckus SmartZone interface. The form is titled 'Add Map' and has three tabs: 'Details', 'Scale Map', and 'Place APs'. The 'Details' tab is active. The form contains the following fields: 'Name' (My Floorplan 1), 'Description' (Office building map), 'Location' (Sunnyvale), 'GPS Coordinates' (Latitude: 25.07858, Longitude: 121.57141), and 'Map Image' (Browse). The 'Next' and 'Cancel' buttons are at the bottom right.

6. To add a **Map Image**, click **Browse** and select a site, venue, or floor map in jpg, jpeg, png, bmp or svg file formats.


### NOTE:

The maximum file size per indoor map is 5MB.

7. Click **Next**, the **Scale Map** tab appears.


- Click two points on the map between which you know the distance. Blue dots appear to show the points you selected.

**Figure 21: Click two points on the map to define the map's**

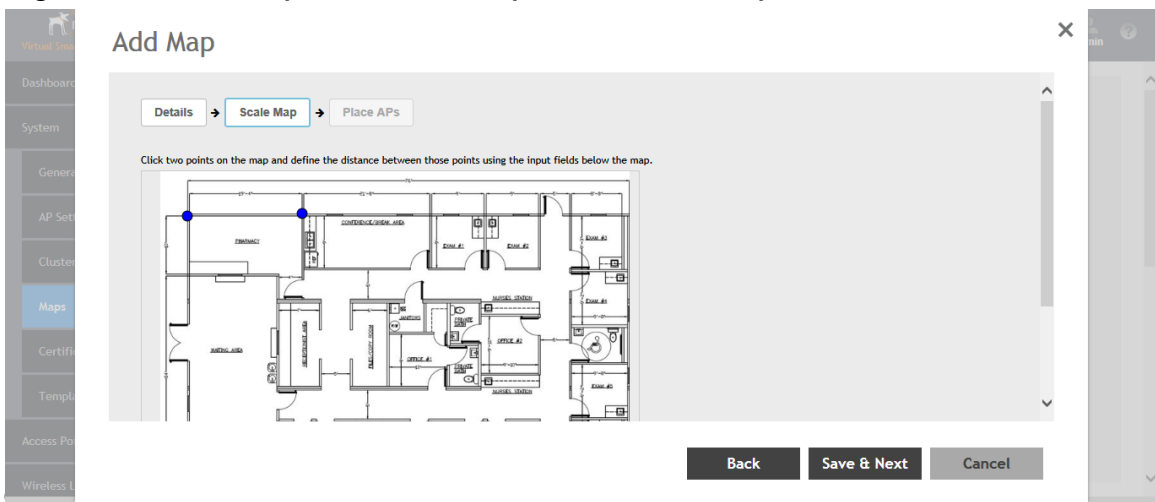

- Enter the **Physical Distance** between the two points and select the unit of measurement (mm, cm, m, ft, yard).
- Click **Save & Next**. The **Place APs** tab appears.
- From the **Available** list, drag the APs and place them in their physical locations on the map. Click the **Placed** tab to see the list of placed APs.


**Figure 22: Drag and drop to place APs onto your**

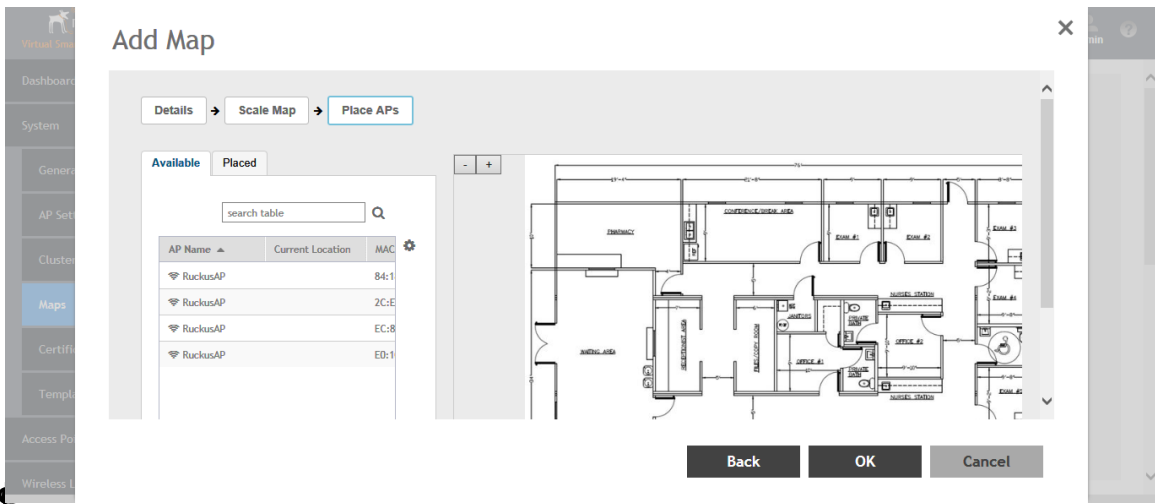



- Once you are happy with the placement of your APs on the map, click **OK** to save your map. Your venue now appears as an icon on the world map on the Dashboard, located at your venue's actual physical location (if you entered the GPS coordinates correctly). The Dashboard icon that represents your venue provides an overview of the number of APs in the venue and their status.

Hover over the icon to view more details, or click one of the links to zoom in to the venue floorplan map you imported.

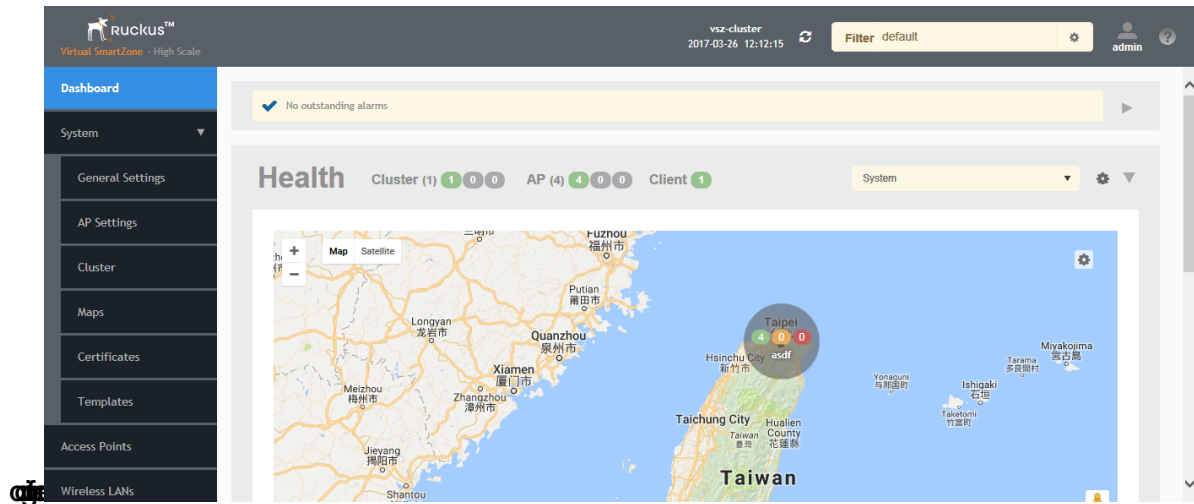**Figure 23: The imported venue map icon appears at the GPS coordinates you**



**NOTE:** You can also edit or delete a map. To do so, select the map from the list and click the  **Edit** or  **Delete** buttons respectively.


## Monitoring APs Using the Map View

Use the Map view on the **Access Points** page to monitor APs in relation to your venue's floorplan.

1. Go to **Access Points**.
2. In **View Mode**, click the **Map** button. The map view is displayed with your placed APs.
3. Hover over an AP to view the following AP-specific details:
  - **AP Name:** The name of the AP, if configured. If not, the default AP name is "RuckusAP."
  - **IP Address:** The current IPv4 or IPv6 address assigned to the AP.
  - **Channel:** Displays the channel (2.4 GHz / 5 GHz) in use, along with the channel width in parentheses.
  - **Clients:** The number of currently connected wireless clients.
  - **Traffic:** The total traffic volume over the last 1 hour.
  - **Latency:** The average time delay between AP and connected clients.
  - **Airtime Utilization:** Percent of airtime utilized, by radio.

- **Connection Failure:** Percent of client connection attempt failures.

Figure 24: Hover over an AP to view

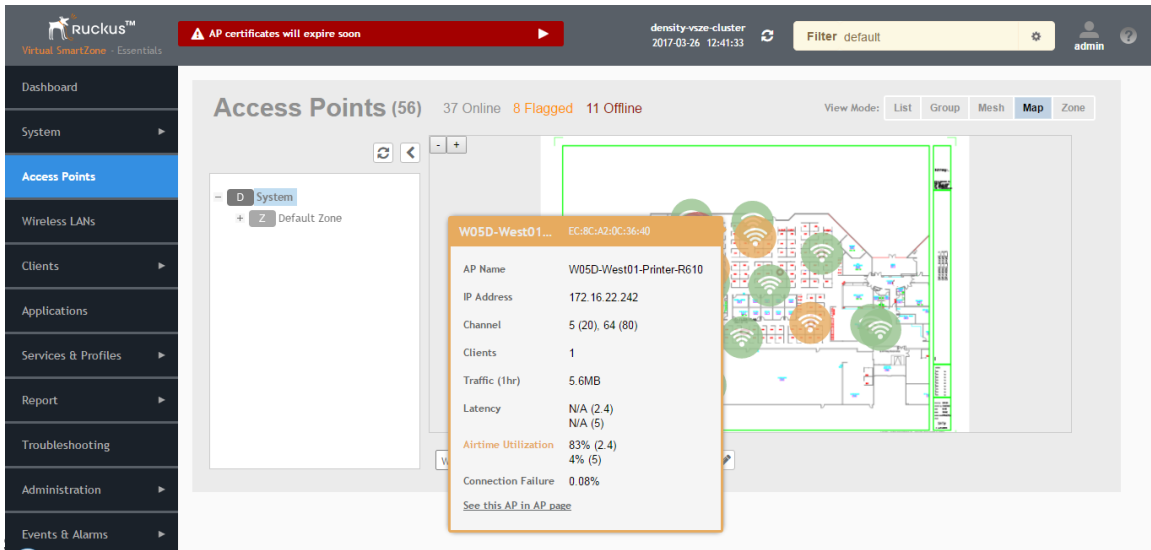

4. To view more specific details on the AP, click the **See this AP in AP page** link.

## Certificates

All the security certificates that the controller uses for its web interface, AP portal, and hotspots are managed from a central storage.

By default, a Ruckus Wireless-signed SSL certificate (or security certificate) exists in the controller. However, because this default certificate is signed by Ruckus Wireless and is not recognized by most web browsers, a security warning appears whenever you connect to the web interface or users connect to the AP portal or a hotspot. To prevent these security warnings from appearing, you can import an SSL certificate that is issued by a recognized certificate authority.

If you are implementing Hotspot 2.0 on the network and you want to support anonymous authentication using OSU Server-Only Authenticated L2 Encryption Network (OSEN), you will need to import a trust root certificate, server or intermediate certificate and private key.

### Importing New Certificates

When you have an SSL certificate issued by an SSL certificate provider, you can import it into the controller and use it for HTTPS communication.

To complete this procedure, you will need the following:

- The signed server certificate
- The intermediate CA certificate (at least one)
- The private key file

**NOTE:** The file size of each signed certificate and intermediate certificate must not exceed 8192 bytes. If a certificate exceeds 8192 bytes, you will be unable to import it into the controller.

Follow these steps to import a signed server certificate:

1. Copy the signed certificate file, intermediate CA certificate file, and private key file to a location (either on the local drive or a network share) that you can access from the controller web interface.
2. From the application select, **System > Certificates > Installed Certs.**
3. Click **Import**, the Import Certificate form appears.
4. Enter a **Name** to identify the certificate.
5. Enter a **Description** about the certificate.
6. For **Service Certificates**, click **Browse** and select the location where the certificate is saved.
7. For **Intermediate CA certificates**, click **Browse** and select the location where the certificate is saved. If you need to upload additional intermediate CA certificates to establish a chain of trust to the signed certificate, you can select up to four certificates.
8. If you are using this SSL certificate for a Hotspot 2.0 configuration, you must also import a root CA certificate. To import **Root CA Certificate**, click **Browse** and select the location where the certificate is saved.
9. You can import the **Private Key** file either by
  - uploading file—choose **Upload** and click **Browse** to select the location.
  - using CSR—choose **Using CSR** and select the CSR that you generated earlier.
10. Enter the **Key Passphrase** that has been assigned to the private key file.
11. Click **OK**.

**NOTE:** You can also edit or delete a certificate by selecting the options **Configure** or **Delete** respectively.

## Assigning Certificates to Services

You can map certificates to services

To specify the certificate that each secure service will use:

1. From the application select, **System > Certificates > Service Certs.**
2. Select the certificate that you want to use for each of the following services:
  - **Management Web**—Used by Web UI and Public API traffic.
  - **AP Portal**—Used by Web Auth WLAN and Guest Access WLAN control traffic.
  - **Hotspot (WISPr)**—Used by WISPr WLAN control (Northbound Interface, Captive Portal, and Internal Subscriber Portal) traffic.
  - **Communicator**—Used by AP control traffic.
3. To view the public key, click **View Public Key**, the Certificate Public Key form appears with the public key.
4. Click **OK**.

## Generating Certificate Signing Request (CSR)

If you do not have an SSL certificate, you will need to create a certificate signing request (CSR) file and send it to an SSL certificate provider to purchase an SSL certificate.

To create a CSR file:

1. From the application select, **System > Certificates > CSR**.
2. Click **Generate**, the Generate CSR form appears.
3. Enter the following details:
  - **Name**—A name for this CSR.
  - **Description**— A short description for this CSR.
  - **Common Name**—A fully qualified domain name of your Web server. This must be an exact match (for example, `www.ruckuswireless.com`).
  - **Email**—An email address (for example, `joe@ruckuswireless.com`).
  - **Organization**—Complete legal name of your organization (for example, `Ruckus Wireless, Inc.`). Do not abbreviate your organization name.
  - **Organization Unit**—Name of the division, department, or section in your organization that manages network security (for example, `Network Management`).
  - **Locality/City**—City where your organization is legally located (for example, `Sunnyvale`).
  - **State/Province**—State or province where your organization is legally located (for example, `California`) Do not abbreviate the state or province name.
4. Select the **Country**
5. Click **OK**, the controller generates the certificate request. When the certificate request file is ready, your web browser automatically downloads it.
6. Go to the default download folder of your Web browser and locate the certificate request file. The file name is `myreq.zip`.
7. Use a text editor (for example, Notepad) to open the certificate request file.
8. Go to the website of your preferred SSL certificate provider, and then follow the instructions for purchasing an SSL certificate.
9. When you are prompted for the certificate signing request, copy and paste the entire content of `myreq.csr`, and then complete the purchase.
10. After the SSL certificate provider approves your CSR, you will receive the signed certificate via email.
11. Copy the content of the signed certificate, and then paste it into a text file.
12. Save the file.

**NOTE:** You can also edit, clone, download or delete a CSR by selecting the options **Configure**, **Clone**, **Download** or **Delete** respectively.

## Managing AP Certificates

AP certificates are valid for a period of time and have to be replaced when they expire.

You must get AP Certificate Replacement before your AP certificate expires. The system generates an *apCertificateExpireSystem* alarm and event when an AP certificate expires.

To get an AP Certificate replacement:

1. From the application select, **System > Certificates > AP Certificate Replacement**.
2. In the AP Request List area, those APs with the **Need Export** column marked **Yes** needs certificate replacement. Those marked with **No** means that the certificate request has already been exported.



**NOTE:** Use the Search terms option to look for APs by name, model, serial number, or description.

3. Click **Export** and select one of the following options:

- **Export All APs Certificate Request**—Exports the certificates for all the AP
- **New APs**—Exports the certificates for new APs or APs that need to regenerate their certificates.

**NOTE:** All exported AP Certificate request (.req) files generated from a cluster include it's name. To manage multiple export request files, change the file name before uploading it to uniquely identify the file.

For example: cert-scg-cluster5f6433ef-711b-4f44-b38a-ddd485ee2c37-R500.req

4. Login <https://support.ruckuswireless.com/> with your credentials.
5. From the right pane go to **Tools > Certificate Renewal**. The Certificate Renewal Requests page appears.
6. Click **Browse** to select the **.req** file exported from Certificate Refresh page.
7. Enter the Email address for communication.
8. Click **Upload**, you will receive an e-mail acknowledgment from Ruckus Wireless.
9. From the Certificate Renewal Request page, check the **Status** column of your request. After the request is processed, you will receive the response from Ruckus Wireless, with a link to the **.res** response file for Import on the Certificate Refresh page.
10. From the AP Certificate Replacement page of the application, click **Import AP certificate Response (.res) file**. The Import AP certificate for replacement form appears.
11. Click **Browse** and select the file.
12. Click **OK**.

**NOTE:** All APs included in the imported response (.res) file reboot after their certificate is refreshed.

13. From the Certificate Status area, check the **Status** column of the AP. If the status is:

- **Updating**—Controller is in the process of updating the certificate.
- **Update Failed**—Controller failed to update the certificate.

**NOTE:** The AP reports to the controller at 15-minute intervals. As a result, it may take up to 15 minutes for the AP to update its certificate status on the web interface.

14. Click **Reset Update Failed AP**, to reset the status of the APs for which certification update failed. The status of the AP will change.

## Importing Trusted CA Certificates

When a controller receives a server's certificate, it matches the server's CA against the list of trusted CAs it has. If there is no match, the controller sends an error.

To import a CA certificate:

1. From the application select, **System > Certificates > Trusted CA Certs (Chain)**.
2. Click **Import**, the Import CA Certs (Chain) form appears.
3. Enter a **Name**.
4. Enter a **Description** of the certificate.
5. For **Intermediate CA Certificates**, click **Browse** and select the file. If you need to upload additional intermediate CA certificates to establish a chain of trust to the signed certificate, you can select up to four certificates.
6. For **Root CA Certificate**, click **Browse** and select the file.
7. Click **OK**.

**NOTE:** You can also edit or delete a CA certificate by selecting the options **Configure** or **Delete** respectively.

## Configuring Templates

### Working with Zone Templates

You can create, configure, and clone zone templates

#### Creating Zone Templates

To create a zone template:

1. From the application select, **System > Templates > Zone Templates**.
2. Click **Create**, the Create Zone Template form appears.
3. Enter the template details as explained in [Table 9: Zone Template Details](#) on page 66.
4. Click **OK**.

**Table 9: Zone Template Details**

Field	Description	Your Action
<b>General Options</b>		
<b>Zone Name</b>	Indicates a name for the Zone.	Enter a name.
<b>Description</b>	Indicates a short description.	Enter a brief description
<b>AP Firmware</b>	Indicates the firmware to which it applies.	Select the firmware.
<b>Country Code</b>	Indicates the country code to ensure that this zone uses authorized radio channels.	Select the country code.
<b>Location</b>	Indicates generic location.	Enter the location.
<b>Location Additional Information</b>	Indicates detailed location.	Enter additional location information.

Field	Description	Your Action
<b>GPS Coordinates</b>	Indicates the geographical location.	Enter the following coordinates in meters or floor: <ul style="list-style-type: none"> <li>• <b>Longitude</b></li> <li>• <b>Latitude</b></li> <li>• <b>Altitude</b></li> </ul>
<b>AP Admin Logon</b>	Indicates the admin logon credentials.	Enter the <b>Logon ID</b> and <b>Password</b> .
<b>Time Zone</b>	Indicates the time zone that applies.	Select the option: <ul style="list-style-type: none"> <li>• <b>System Defined:</b> Select the time zone.</li> <li>• <b>User defined:</b> <ol style="list-style-type: none"> <li>1. Enter the <b>Time Zone Abbreviation</b>.</li> <li>2. Choose the <b>GMT Offset time</b>.</li> <li>3. Select <b>Daylight Saving Time</b>.</li> </ol> </li> </ul>
<b>AP IP Mode</b>	Indicates the IP version that applies.	Select the option: <ul style="list-style-type: none"> <li>• <b>IPv4 only</b></li> <li>• <b>Dual</b></li> </ul>
<b>Radio Options</b>		
<b>Channel Range</b>	Indicates that you want to override the 2.4GHz channel range that has been configured for the zone.	Select <b>Select Channel Range (2.4G)</b> check boxes for the channels on which you want the 2.4GHz radios to operate. Channel options include channels 1 to 11. By default, all channels are selected.
<b>DFS Channels</b>	Allows ZoneFlex APs to use DFS channels.	Select the check box.
<b>Channel Range (5G) Indoor</b>	Indicates for what channels want the 5GHz radios to operate.	Select the check boxes.
<b>Channel Range (5G) Outdoor</b>	Indicates for what channels want the 5GHz radios to operate.	Select the check boxes.

Field	Description	Your Action
<b>Radio Options b/g/n (2.4 GHz)</b>	Indicates the radio option 2.4 GHz configurations.	<p>Select the following options:</p> <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20</b> or <b>40</b> (MHz), or select <b>Auto</b> to set it automatic.</li> <li>• <b>Channel</b>—Select the channel to use for the b/g/n (2.4GHz) radio, or select <b>Auto</b> to set it automatic.</li> <li>• <b>TX Power Adjustment</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 2.4GHz radio. By default, TX power is set to <b>Full/Auto</b> on the 2.4GHz radio</li> </ul>
<b>Radio Options a/n/ac (5 GHz)</b>	Indicates the radio option 5 GHz configurations.	<p>Select the following options:</p> <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20</b>, <b>40</b>, <b>80</b>, <b>80+80</b> or select <b>Auto</b>.</li> <li>• <b>Channel</b>—For Indoor and Outdoor, select the channel to use for the a/n/c (5GHz) radio, or select <b>Auto</b>.</li> <li>• <b>TX Power Adjustment</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 5GHz radio. By default, TX power is set to <b>Full/Auto</b> on the 5GHz radio.</li> </ul>
<b>AP GRE Tunnel Options</b>		
<b>Tunnel Type</b>	Indicates the support for NAT.	Select the required option.
<b>GRE Tunnel Profile</b>	Indicates the tunnel profile.	<p>Select the required option or click <b>Create</b> and enter the following details:</p> <ul style="list-style-type: none"> <li>• <b>Name</b></li> <li>• <b>Description</b></li> <li>• <b>Ruckus Tunnel Mode</b></li> <li>• <b>Tunnel Encryption</b></li> </ul>

Field	Description	Your Action
		<ul style="list-style-type: none"> <li>• <b>WLAN Interface MTU</b></li> </ul>
<b>Syslog Options</b>		
<b>Enable external syslog server for Aps</b>	Indicates if an external syslog server is enabled.	Select the check box and update the following details: <ul style="list-style-type: none"> <li>• <b>Server Address</b></li> <li>• <b>Port</b></li> <li>• <b>Facility for Event</b></li> <li>• <b>Priority</b></li> </ul>
<b>AP SNMP Options</b>		
<b>Enable AP SNMP</b>	Indicates if the AP SNMP option is enabled.	Select the check box.
<b>SNMPv2 Agent</b>	Indicates SNMPv2 Agent is applied.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>Community</b>.</li> <li>2. Select the required <b>Privilege: Read</b> or <b>Write</b>.</li> <li>3. Click <b>OK</b>.</li> </ol>
<b>SNMPv3 Agent</b>	Indicates SNMPv3 Agent is applied.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>User</b>.</li> <li>2. Select the required <b>Authentication</b>:               <ul style="list-style-type: none"> <li>• <b>None</b></li> <li>• <b>SHA</b> <ol style="list-style-type: none"> <li>1. Enter the <b>Auth Pass Phrase</b></li> <li>2. Select the <b>Privacy</b> option. For <b>DES</b> and <b>AES</b> options, Enter the <b>Privacy Phrase</b>.</li> </ol> </li> </ul> </li> <li>• <b>MD5</b> <ol style="list-style-type: none"> <li>1. Enter the <b>Auth Pass Phrase</b></li> <li>2. Select the <b>Privacy</b> option. For <b>DES</b> and <b>AES</b> options, Enter the <b>Privacy Phrase</b>.</li> </ol> </li> <ol style="list-style-type: none"> <li>3. Select the required <b>Privilege: Read</b> or <b>Write</b>.</li> <li>4. Click <b>OK</b>.</li> </ol> </ol>

Field	Description	Your Action
<b>Advanced Options</b>		
<b>Channel Mode</b>	Indicates if location-based service is enabled.	Select the check box and choose the option.
<b>Auto Channel Selection</b>	Indicates auto-channel settings.	Select the required check boxes and choose the option.
<b>Background Scan</b>	Runs a background scan.	Select the respective check boxes and enter the duration in seconds.
<b>Smart Monitor</b>	Indicates AP interval check and retry threshold settings.	Select the check box and enter the duration and threshold.
<b>AP Management VLAN</b>	Indicates the AP management VLAN settings.	Choose the option. If you select <b>VLAN ID</b> , enter the VLAN ID that you want to assign (valid range is from 1 to 4094). To keep the same management VLAN ID that has been configured on the AP, click <b>Keep AP's settings</b>
<b>Rogue AP Detection</b>	Indicates rogue AP settings.	<ol style="list-style-type: none"> <li>Select the check box and choose the options: <ul style="list-style-type: none"> <li><b>Enable events and alarms for all rogue devices</b></li> <li><b>Enable events and alarms for only malicious rogue devices of selected types</b> and choose the <b>Rogue Type</b>: <ul style="list-style-type: none"> <li><b>SSID Spoofing</b></li> <li><b>Same Network</b></li> <li><b>MAC Spoofing</b></li> </ul> </li> <li>Select the <b>Protect the network from malicious rogue access points</b> check box.</li> </ul> </li> </ol>
<b>DoS Protection</b>	Indicates settings for blocking a client.	Select the check box and enter the: <ul style="list-style-type: none"> <li>duration in seconds to Block a client for</li> <li>number of <b>repeat authentication failures</b></li> <li>duration in <b>seconds</b> to be blocked for every repeat authentication failures.</li> </ul>

Field	Description	Your Action
<b>Client Load Balancing</b>	Balances the number of clients across APs.	Select the check box and enter the threshold.
<b>Band Balancing</b>	Balances the bandwidth of the clients.	Select the check box and enter the percentage.
<b>Location Based Service</b>	To disable the LBS service for this AP group, clear the Enable LBS service check box. To use a different LBS server for this AP group, select the Enable LBS service check box, and then select the LBS server that you want to use from the drop-down list.	Select the check box and choose the options.
<b>Client Admission Control</b>	Indicates the load thresholds on the AP at which it will stop accepting new clients.  <b>NOTE:</b> Client admission cannot be enabled when client load balancing or band balancing is enabled.	Select the <b>Enable</b> check box 2.4 GHz Radio or 5GHz Radio and update the following details: <ul style="list-style-type: none"> <li>• <b>Min Client Count</b></li> <li>• <b>Max Radio Load</b></li> <li>• <b>Min Client Throughput</b></li> </ul>
<b>AP Reboot Timeout</b>	Indicates AP reboot settings.	Choose the required option for: <ul style="list-style-type: none"> <li>• <b>Reboot AP if it cannot reach default gateway after</b></li> <li>• <b>Reboot AP if it cannot reach the controller after</b></li> </ul>

**NOTE:** You can select a zone from the list and edit, clone or delete its template by selecting the options **Configure**, **Clone** or **Delete** respectively.

### Applying Zone Templates

To apply a zone template:

1. From the application select, **System > Templates > Zone Templates**.
2. From the list, select the zone template that you want to apply and click **Apply**. The Apply Zone Templates form appears.
3. From **Select AP Zone**, select the required zone.
4. Click **Apply**.

### Exporting Zone Templates

You can export a zone template.

To export a zone template:

1. From the application select, **System > Templates > Zone Templates**.
2. Select the zone template that you want to export and click **Export Template**.
3. A pop-up appears prompting you to **Open** or **Save** the zone template file with **.bak** extension. Click:
  - **Open**—To view the template file
  - **Save**—Select the destination folder where you want to save the template file and then click **Open** to view it.

### Importing Zone Templates

You can import zone templates and upload them to the system.

**NOTE:** Configuration references to global services or profiles cannot be imported, manually configure it after importing.

To import a zone template:

1. From the application select, **System > Templates > Zone Templates**.
2. Click **Import**, the Import Zone Templates form appears.
3. Click **Browse** and select the template file.
4. Click **Upload**.

### Working with WLAN Templates

You can create, configure and clone a WLAN template.

#### Creating WLAN Templates

To create a WLAN template:

1. From the application select, **System > Templates > WLAN Templates**.
2. Click **Create**, the Create WLAN Template form appears.
3. Enter a **Template Name**.
4. Enter a **Description**.
5. Select the **Template Firmware**.
6. Choose the **AP IP Mode**.
7. Select **AP SoftGRE Tunnel** to enable all WLANs defined in this template to tunnel traffic to SoftGRE through the AP.
8. Click **OK**.

**NOTE:** You can select a WLAN and edit, clone or delete its template by selecting the options **Configure**, **Clone** or **Delete** respectively.

#### Applying a WLAN Template

To apply a WLAN template to a zone:

1. From the application select, **System > Templates > WLAN Templates**.
2. From the list, select the WLAN template that you want to apply and click **Apply**. The Apply WLAN Template to selected zones form appears.
3. From **Select AP Zone**, select the required zone.



4. Click **Apply**.


# Working With Access Points

In this chapter:

- Understanding the System, Domains, Zones and AP Groups
- Viewing Modes
- AP Status
- Configuring Access Points
- Managing Access Points

The following image gives you an understanding of the Access Points home page.

Figure 25: Access Points

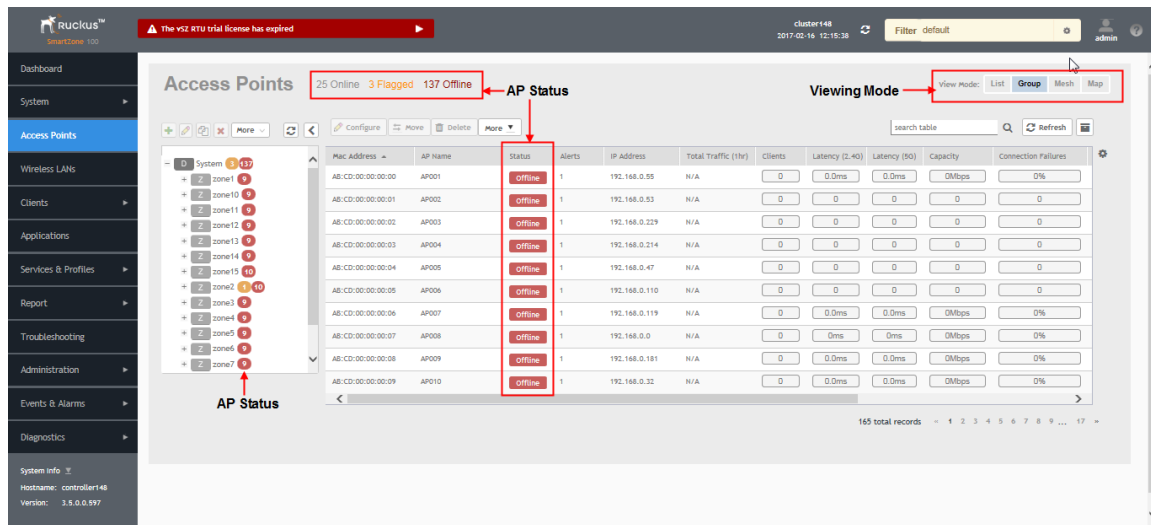

## Understanding the System, Domains, Zones and AP Groups

### Hierarchy Overview


The hierarchy helps in specifying which AP groups or APs provide which WLAN services.

You can virtually split them using the following hierarchy:

- System—Highest order that comprises of multiple zones
- Domains—Broad classification that comprises of multiple Zones.
- Zones—Comprises of multiple AP groups
- AP groups—Comprises of multiple APs
- APs—Individual access points.

## Creating an AP Domain

To create an AP domain:

1. From the System tree hierarchy, select the location where you want to create the domain.
2. Click the **Create**  button, the Create Group form appears.
3. Configure the following details:
  - a. Enter a **Name** for the domain.
  - b. Enter a **Description** about the domain.
  - c. By default, the **Type** selected is **Domain**.
  - d. The **Parent Group** displays the group to which this domain will be tagged.
  - e. If you want to create a domain to manage MSP-related settings within that domain, in the **Managed by Partner** field, select the **Enable** check box.
4. Click **OK**.

**NOTE:** You can also edit, clone and delete an AP Domain by selecting the options Configure

, Clone  or Delete  respectively, from the Access Points page.

## Working with AP Zones

An AP zone functions as a way of grouping Ruckus Wireless APs and applying a particular set of settings (including WLANs and their settings) to this group of Ruckus Wireless APs. Each AP zone can include up to 27 WLAN services.

By default, an AP zone named Staging Zone exists. Any AP that registers with the controller that is not assigned a specific zone is automatically assigned to the Staging Zone. This section describes how to use AP zones to manage devices.

**NOTE:** When an AP is assigned or moved to the Staging Zone, the cluster name becomes its user name and password after the AP shows up-to-date state. If you need to log on to the AP, use the cluster name for the user name and password.

Before creating an AP zone, Ruckus Wireless recommends that you first set the default system time zone on the General Settings page. This will help ensure that each new AP zone will use the correct country. For information on how to set the default system time zone, see [Configuring System Time](#) on page 31.

**NOTE:** In vSZ-H and SCG200, when the system is upgraded to release 3.5, the new UI and re-architected stats database will prevent the system from displaying AP and zone stats if the AP/zone is operating on 3.4 or prior releases. In order to make full use of the UI introduced in 3.5, zones and APs should be updated to 3.5 as well. Operationally, the zones will still work, but stats visibility will be impacted.


### Creating an AP Zone


An AP zone (or zone) functions as a way of grouping Ruckus Wireless APs and applying settings including WLANs to these groups of Ruckus Wireless APs. Each AP zone can include up to six WLAN services.

To create an AP zone:


1. On the menu, click **Access Points**. The figure below appears.

**Figure 26: Access Points**

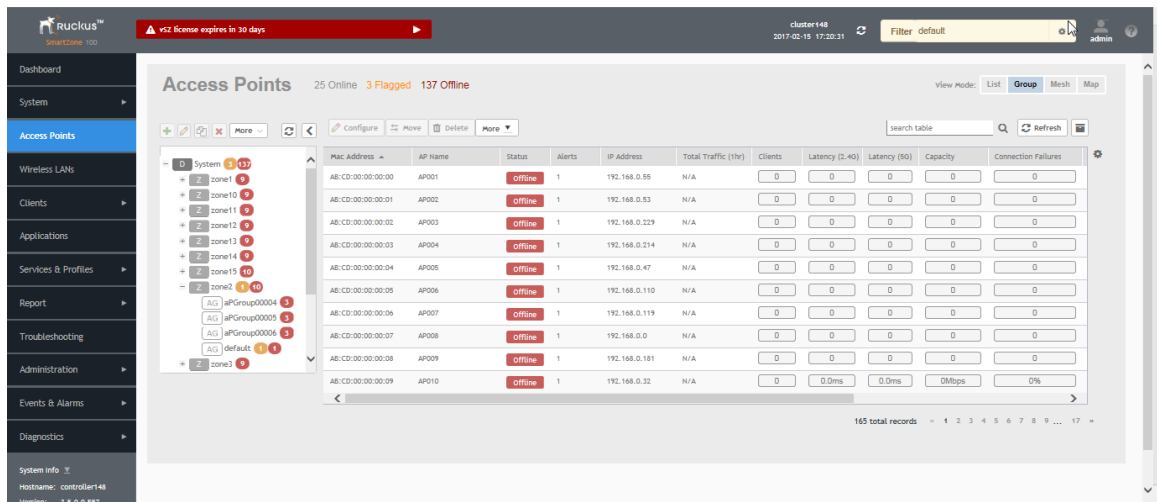

2. From the **System** tree, select the location where you want to create the zone (for example, System or Domain), and then click .

**Figure 27: Create Groups**

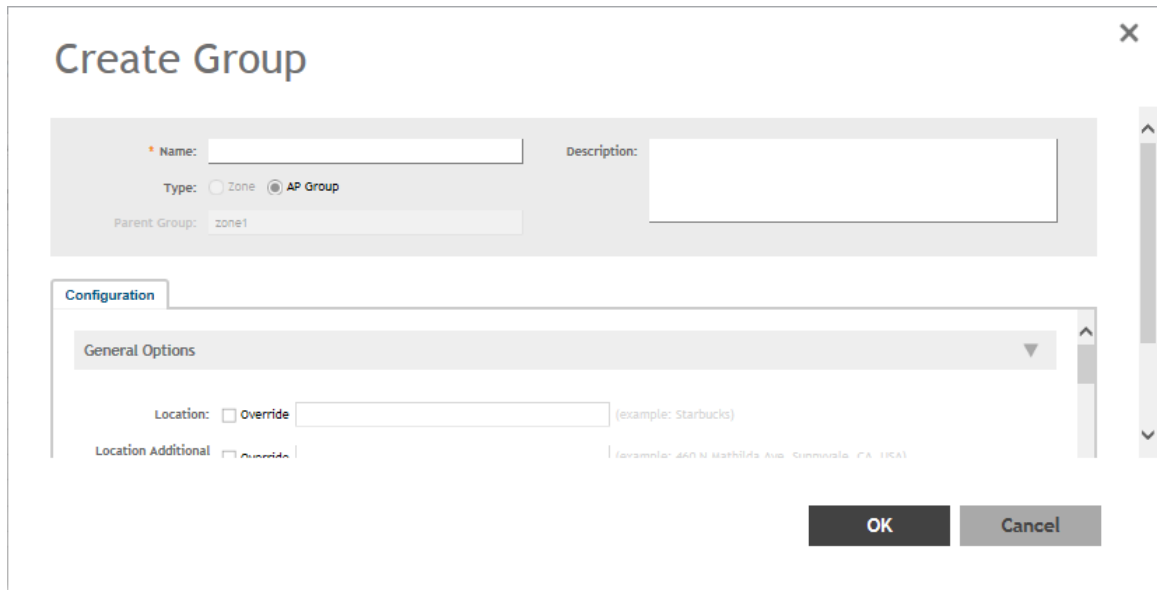

3. Configure the zone by completing the settings listed in the table below.
4. Click **OK**.

**Table 10: AP Zone Details**

Field	Description	Your Action
<b>Name</b>	Indicates the name of the zone/AP group.	Enter a name.
<b>Description</b>	Indicates the short description assigned to the zone or AP group.	Enter a brief description
<b>Type</b>	Indicates if you are creating a domain, zone or an AP group.	Appears by default. You can also choose the option.
<b>Parent Group</b>	Indicates the parent AP group.	Appears by default.
<b>Configuration &gt; General Options</b>		
<b>AP Firmware</b>	Indicates the firmware to which it applies.	Select the firmware.
<b>Country Code</b>	Indicates the country code. Using the correct country code helps ensure that APs use only authorized radio channels.	Select the country code.
<b>Location</b>	Indicates the generic location of the zone.	Enter the location.
<b>Location Additional Information</b>	Indicates detailed location.	Enter additional location information.
<b>GPS Coordinates</b>	Indicates the geographical location.	Enter the following coordinates: <ul style="list-style-type: none"> <li>• <b>Longitude</b></li> <li>• <b>Latitude</b></li> <li>• <b>Altitude</b></li> </ul>
<b>AP Admin Logon</b>	Indicates the admin logon credentials.	Enter the <b>Logon ID</b> and <b>Password</b> .
<b>AP Time Zone</b>	Indicates the time zone that applies.	Select a time zone, and then enter the details as required.
<b>AP IP Mode</b>	Indicates the IP version that applies.	Select the IP version.
<b>Configuration &gt; Mesh Options</b>		
<b>Enable Mesh Networking in this zone</b>	Indicates if mesh networking is enabled.	Select the check box and enter the following: <ul style="list-style-type: none"> <li>• <b>Mesh Name (ESSID)</b></li> <li>• <b>Mesh Passphrase</b></li> </ul>
<b>Configuration &gt; Radio Options</b>		

Field	Description	Your Action
<b>Channel Range (2.4G)</b>	Indicates that you want to override the 2.4GHz channel range that has been configured for the zone to which this AP group belong.	Select <b>Select Channel Range (2.4G)</b> check boxes for the channels on which you want the 2.4GHz radios of managed APs to operate. Channel options include channels 1 to 11. By default, all channels are selected.
<b>DFS Channels</b>	Allows ZoneFlex APs to use DFS channels.	Select the check box.
<b>Channel Range (5G) Indoor</b>	Indicates the channels on the 5GHz radio that you want managed indoor APs to operate.	Select the check boxes.
<b>Channel Range (5G) Outdoor</b>	Indicates the channels on the 5GHz radio that you want managed outdoor APs to operate.	Select the check boxes.
<b>Radio Options b/g/n (2.4 GHz)</b>	Indicates the configuration options for the 2.4 GHz radio.	Select the following options: <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20</b> or <b>40</b> (MHz), or select <b>Auto</b> to set it automatically.</li> <li>• <b>Channel</b>—Select the channel to use for the b/g/n (2.4GHz) radio, or select <b>Auto</b> to set it automatically.</li> <li>• <b>TX Power Adjustment</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 2.4GHz radio. By default, TX power is set to <b>Full</b> on the 2.4GHz radio</li> </ul>
<b>Radio Options a/n/ac (5 GHz)</b>	Indicates the configuration options for the 5 GHz radio.	Select the following options: <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20, 40, 80, 80+80, 160</b> (MHz), or select <b>Auto</b> to set it automatically.</li> <li>• <b>Channel</b>—For <b>Indoor</b> and <b>Outdoor</b>, select the channel to use for the a/n/c (5GHz) radio,</li> </ul>

Field	Description	Your Action
		<p>or select <b>Auto</b> to set it automatically.</p> <ul style="list-style-type: none"> <li>• <b>Secondary Channel (80+80)</b>—For <b>Indoor</b> and <b>Outdoor</b>, the default secondary channel to use for the a/n/c (5GHz) radio, is set as <b>Auto</b>.</li> <li>• <b>TX Power Adjustment</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 5GHz radio. By default, TX power is set to <b>Full</b> on the 5GHz radio.</li> </ul>

**Configuration > AP GRE Tunnel Options**

<b>Tunnel Type</b>	<p>Indicates the supported tunnel type (Ruckus GRE, SoftGRE and SoftGRE+IPsec)</p> <p><b>NOTE:</b> Zones configured with IPv6 network address configuration only support RuckusGRE tunnel type.</p>	<p>Choose :</p> <ul style="list-style-type: none"> <li>• <b>Ruckus GRE</b> and select the <b>GRE Tunnel Profile</b>.</li> <li>• <b>SoftGRE</b> and select the <b>GRE Tunnel Profile</b>.</li> <li>• <b>SoftGRE+IPsec</b> and select the <b>IPSec Tunnel Profile</b>.</li> </ul>
--------------------	---	---

**Configuration > Syslog Options**

<b>Enable external syslog server for APs</b>	<p>Indicates if an external syslog server is enabled.</p>	<p>Select the check box and enter the following details:</p> <ul style="list-style-type: none"> <li>• <b>Server Address</b></li> <li>• <b>Port</b></li> <li>• <b>Facility for Event</b></li> <li>• <b>Priority</b></li> </ul>
--	---	---

**Configuration > AP SNMP Options**

<b>Enable AP SNMP</b>	<p>Indicates if the AP SNMP option is enabled.</p>	<p>Select the check box.</p>
<b>SNMPv2 Agent</b>	<p>Indicates if the SNMPv2 agent is enabled.</p>	<p>If the SNMPv2 agent is enabled, configure the community settings.</p> <ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>Community</b>.</li> <li>2. Select the required <b>Privilege</b>. If you select <b>Notification</b> enter the <b>Target IP</b>.</li> <li>3. Click <b>OK</b>.</li> </ol>

Field	Description	Your Action
<b>SNMPv3 Agent</b>	Indicates SNMPv3 Agent is applied.	<p>If the SNMPv3 agent is enabled, configure the community settings.</p> <ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>User</b>.</li> <li>2. Select the required <b>Authentication</b>.</li> <li>3. Enter the <b>Auth Pass Phrase</b>.</li> <li>4. Select the <b>Privacy</b> option.</li> <li>5. Select the required <b>Privilege</b>. If you select <b>Notification</b> select the option <b>Trap</b> or <b>Inform</b> and enter the <b>Target IP</b> and <b>Target Port</b>.</li> <li>6. Click <b>OK</b>.</li> </ol>




**Configuration > Advanced Options**

<b>Channel Mode</b>	Indicates if location-based service is enabled. If you want to allow indoor APs that belong to this zone to use wireless channels that are Channel Mode regulated as indoor-use only.	Select the <b>Allow indoor channels</b> check box.
<b>Auto Channel Selection</b>	Indicates auto-channel settings.	Select the check box and choose the option.
<b>Background Scan</b>	Runs a background scan.	<p>Select the respective check boxes and enter the duration in seconds:</p> <ul style="list-style-type: none"> <li>• <b>Background Scanning</b>—Changes the AP channel if there is interference.</li> <li>• <b>ChannelFly</b>—Continuously monitors potential throughput and changes the AP channel to minimize interference and optimize throughput.</li> </ul>
<b>Smart Monitor</b>	Indicates AP interval check and retry threshold settings.	Select the check box and enter the interval and threshold.
<b>AP Management VLAN</b>	Indicates the AP management VLAN settings.	Choose the option. Click <b>VLAN ID</b> , and then type the VLAN ID that you want to assign (valid range is from 1 to 4094). To keep the same management VLAN ID that has



Field	Description	Your Action
		been configured on the AP, click Keep AP's settings
<b>Rogue AP Detection</b>	Indicates rogue AP settings.	<p>Select the check box and choose the options:</p> <ul style="list-style-type: none"> <li>• <b>Enable events and alarms for all rogue devices</b></li> <li>• <b>Enable events and alarms for only malicious rogue devices of selected type</b> and select the <b>Rogue Type</b>: <ul style="list-style-type: none"> <li>• <b>SSID Spoofing</b></li> <li>• <b>Same Network</b></li> <li>• <b>MAC Spoofing</b></li> </ul> </li> <li>• <b>Protect the network from malicious rogue access points.</b></li> </ul>
<b>DoS Protection</b>	Indicates settings for blocking a client.	Select the check box and enter the duration in seconds.
<b>Client Load Balancing</b>	Balances the number of clients across APs.	Select the check box and enter the threshold.
<b>Band Balancing</b>	Balances the bandwidth of the clients.	Select the check box and enter the percentage.
<b>Location Based Service</b>	Indicates that the location based service is enabled.	<ul style="list-style-type: none"> <li>• Select the check box and choose the options.</li> <li>• Click Create, In the Create LBS Server form: <ol style="list-style-type: none"> <li>1. Enter the <b>Venue Name</b>.</li> <li>2. Enter the <b>Server Address</b>.</li> <li>3. Enter the <b>Port number</b>.</li> <li>4. Enter the <b>Password</b>.</li> </ol> </li> </ul>
<b>Client Admission Control</b>	Indicates the load thresholds on the AP at which it will stop accepting new clients.	<p>Select the check box and update the following settings:</p> <ul style="list-style-type: none"> <li>• <b>Min Client Count</b></li> <li>• <b>Max Radio Load</b></li> <li>• <b>Min Client Throughput</b></li> </ul>
<b>AP Reboot Timeout</b>	Indicates the AP reboot settings.	<p>Choose the required option for:</p> <ul style="list-style-type: none"> <li>• <b>Reboot AP if it cannot reach default gateway after</b></li> </ul>

Field	Description	Your Action
		<ul style="list-style-type: none"> <li>• <b>Reboot AP if it cannot reach the controller after</b></li> </ul>

**NOTE:** You can also edit, clone or delete an AP Zone by selecting the options Configure , Clone  or Delete  respectively, from the Access Points page.

### ChannelFly and Background Scanning

SmartZone controllers offer the ChannelFly and Background Scanning automatic channel selection methods for spectrum utilization and performance optimization. While Background Scanning must be enabled for rogue AP detection, AP location detection and radio power adjustment, either can be used for automatic channel optimization.

The main difference between ChannelFly and Background Scanning is that ChannelFly determines the optimal channel based on real-time statistical analysis of actual throughput measurements, while Background Scanning uses channel measurement and other techniques to estimate the impact of interference on Wi-Fi capacity based on progressive scans of all available channels.

**NOTE:** If you enable ChannelFly, Background Scanning can still be used for adjusting radio power and rogue detection while ChannelFly manages the channel assignment. Both cannot be used at the same time for channel management.

### Benefits of ChannelFly

With ChannelFly, the AP intelligently samples different channels while using them for service. ChannelFly assesses channel capacity every 15 seconds and changes channel when, based on historical data, a different channel is likely to offer higher capacity than the current channel. Each AP makes channel decisions based on this historical data and maintains an internal log of channel performance individually.

When ChannelFly changes channels, it utilizes 802.11h channel change announcements to seamlessly change channels with no packet loss and minimal impact to performance. The 802.11h channel change announcements affect both wireless clients and Ruckus mesh nodes in the 2.4 GHz and/or 5 GHz bands.

Initially (in the first 30-60 minutes) there will be more frequent channel changes as ChannelFly learns the environment. However, once an AP has learned about the environment and which channels are most likely to offer the best throughput potential, channel changes will occur less frequently unless a large measured drop in throughput occurs.

ChannelFly can react to large measured drops in throughput capacity in as little as 15 seconds, while smaller drops in capacity may take longer to react to.

### Disadvantages of ChannelFly

Compared to Background Scanning, ChannelFly takes considerably longer for the network to settle down. If you will be adding and removing APs to your network frequently, Background Scanning may be preferable. Additionally, if you have clients that do not support the 802.11h standard, ChannelFly may cause significant connectivity issues during the initial capacity assessment stage.

You can enable/disable ChannelFly per band. If you have 2.4 GHz clients that do not support 802.11h, Ruckus recommends disabling ChannelFly for 2.4 GHz but leaving it enabled for the 5 GHz band.

### **Background Scanning**

Using Background Scanning, SmartZone controllers regularly samples the activity in all Access Points to assess RF usage, to detect rogue APs and to determine which APs are near each other for mesh optimization. These scans sample one channel at a time in each AP so as not to interfere with network use. This information is then applied in AP Monitoring and other controller monitoring features. You can, if you prefer, customize the automatic scanning of RF activity, deactivate it if you feel it's not helpful, or adjust the frequency, if you want scans at greater or fewer intervals.

**NOTE:** Background Scanning must be enabled for SmartZone controllers to detect rogue APs on the network.

### **VLAN Pooling**

When Wi-Fi is deployed in a high density environment (such as a stadium) or on a university campus to provide access for students, the number of IP addresses required for client devices can easily run into several thousands.

Allocating a single large subnet results in a high probability of degraded performance due to factors like broadcast/multicast traffic.

To address this problem, VLAN pooling provides a method by which administrators can deploy pools of multiple VLANs from which clients are assigned, thereby automatically segmenting large groups of clients into smaller subgroups, even when connected to the same SSID.

As the client device joins the Wi-Fi network, the VLAN is assigned based on a hash of the client's MAC address (by default).

## **Working with 3rd Party AP Zones**

The controller connects to 3rd party AP zones the same way as it does to Ruckus Wireless AP zones.

The controller receives RADIUS messages directly from 3rd party APs and supports multiple 3rd party AP zones. It connects to 3rd party AP's using QinQ for data traffic. Access network interface to APs from the controller via QinQ contains UE MAC. 3rd party APs are managed by 3rd party AP controller where the controller acts as a wireless access gateway (WAG). APs are grouped under 3rd party AP zones based on Access C-VLAN and S-VLAN range. Each 3rd party AP zone is identified by a list of IP addresses, ranges, and subnets used by the APs for sending RADIUS traffic to the controller. A 3rd party AP zone ID" is generated internally for each zone. Each 3rd party AP zone is associated with a single "3rd party AP zone".

Supported authentication and accounting procedures are the same as Ruckus Wireless APs.

### **3rd Party AP Zone Types**

There are three types of 3rd party AP zones, which are determined by their configuration combinations.

The following configuration combinations determine the type of 3rd party AP zone.

- Access network type (L2oGRE, Q-in-Q L2)
- Core network type (TTG+PDG, Bridge)
- Authentication method (Open, 802.1X, WISPr)

The following table lists the configuration combinations.


**Table 11: Configuration Combinations and Requirements**

Access (Southbound)	Core (Northbound)	Authentication	Requirements
Q-in-Q L2	TTG+PDG	802.1X	You need to configure: <ol style="list-style-type: none"> <li>1. Authentication and Accounting Services</li> <li>2. User Traffic Profile - TTG+PDG</li> <li>3. Core network VLAN Options</li> <li>4. Access Network Q-in-Q VLAN Tags</li> <li>5. RADIUS Client Options</li> </ol>
Q-in-Q L2	Bridge	Hotspot (WISPr) Open	You need to configure: <ol style="list-style-type: none"> <li>1. User Traffic Profile - forwarding profile is required</li> <li>2. Core Network VLAN Options</li> <li>3. Access Network Q-in-Q VLAN Tags</li> </ol>

### Adding a 3rd Party AP Zone

The controller connects to 3rd party AP zones the same way as it does to Ruckus Wireless AP zones.

To add a 3rd Party AP zone service:





1. From the left pane, select **Access Points > 3rd Party**. The 3rd Party Access Points page appears.
2. From the System tree hierarchy, select the location where you want to create the 3rd party AP zone and click the add  button. The Create Group form appears.
3. Enter the details as explained in the following table.
4. Click **OK**.

**Table 12: 3rd Party AP Zone Parameters**

Field	Description	Your Action
<b>Name</b>	Indicates a name for the 3rd party AP zone.	Enter a name.
<b>Description</b>	Describes the 3rd party AP zone.	Enter a description.

Field	Description	Your Action
<b>Type</b>	Lists the options that you can add. For example: Domain or 3rd party zone.	Choose <b>3rd Party AP Zone</b> .
<b>Access Network</b>	Lists the access network options.	Choose the option: <ul style="list-style-type: none"> <li>• <b>QinQ Layer 2</b> (default)</li> <li>• <b>L2oGRE</b></li> </ul>
<b>Core Network</b>	Lists the core network options.	Choose the option: <ul style="list-style-type: none"> <li>• <b>Bridge</b></li> <li>• <b>TTG+PDG</b> (default)</li> </ul>
<b>Authentication Service Type</b>	Lists the authentication service options.	Choose the option: <ul style="list-style-type: none"> <li>• <b>Open</b> (default)</li> <li>• <b>Hotspot (WISPr)</b></li> </ul>
<b>Network Traffic Profile</b>	Indicates the network traffic profile. There should be at least one network traffic profile specified for each 3rd Party AP Zone.	Select the profile. Default network traffic profile specified for the zone is <b>SCG Factory Default</b> network.
<b>Accounting Profile</b>	Indicates the accounting profile.	Select the accounting profile.
<b>Core Network Forwarding Profile</b>	Indicates the forwarding profile.	Select the forwarding profile.
<b>Core Network VLAN Type</b>	Indicates core network VLAN type.	<ul style="list-style-type: none"> <li>• Select the check box if: <ul style="list-style-type: none"> <li>• core network is <b>Bridge</b> and the access network is <b>Q-in-Q Layer 2</b></li> <li>• core network is <b>TTG+PDG</b> and the access network is <b>Q-in-Q Layer 2</b></li> <li>• core network is <b>Bridge</b> and the access network is <b>L2oGRE</b></li> </ul> </li> <li>• Clear the check box if: <ul style="list-style-type: none"> <li>• core network is <b>Bridge</b> and the access network is <b>L2oGRE</b></li> </ul> </li> </ul>

Field	Description	Your Action
<b>Core Network VLAN Mapping Type</b>	Indicates the type of core network VLAN mapping.	Choose: the option: <ul style="list-style-type: none"> <li>• <b>Strip Access Q-in-Q VLAN</b></li> <li>• <b>Strip Access S-VLAN, preserve Access C-VLAN</b></li> <li>• <b>Strip Access Q-in-Q VLAN, add fixed VLAN</b></li> </ul>
<b>Access S-VLAN Range</b>	Indicates the access S-VLAN range.	Enter the S-VLAN range.  Range: 1 through 4094. The start value must be equal or less than end value.
<b>Access C-VLAN Range</b>	Indicates the access C-VLAN range.  Access network Q-in-Q VLAN tags configuration defines a list of Q-in-Q tags. These VLAN tags are used to identify the 3rd Party AP Zone for the UE traffic. The controller does not allow duplicate C-VLAN tags within the same zone or across the zones.	Enter the S-VLAN range.  Range: 1 through 4094. The start value must be equal or less than end value.

**NOTE:** You can also edit, clone, delete and move a 3rd party AP Zone by selecting the options Configure , Clone , Delete  and Move  respectively, from the 3rd party Access Points page.

## Working with AP Groups

AP (access point) groups can be used to define configuration options and apply them to groups of APs at once, without having to individually modify each AP's settings.

For each group, administrators can create a configuration profile that defines the channels, radio settings, Ethernet ports and other configurable fields for all members of the group or for all APs of a specific model in the group. AP groups are similar to WLAN groups (see Working with WLAN Groups for more information). While WLAN groups can be used to specify which WLAN services are served by which APs, AP groups are used for more specific fine-tuning of how the APs themselves behave.

**NOTE:** AP group configuration settings can be overridden by individual AP settings. For example, if you want to set the transmit power to a lower setting for only a few specific APs, leave the Tx Power Adjustment at **Auto** in the AP group configuration page, then go to the individual AP configuration page (**Access Points > Access Points > Edit [AP MAC address]**) and set the **Tx Power Adjustment** to a lower setting.


## Creating an AP Group

Creating an AP group means creating a configuration profile that defines the channels, radio settings, Ethernet ports and other configurable fields for all members of the group or for all APs of a specific model in the group.

Follow these steps to create an AP group.


1. From the left pane, select **Access Points**. The below figure appears.

Figure 28: Access Point

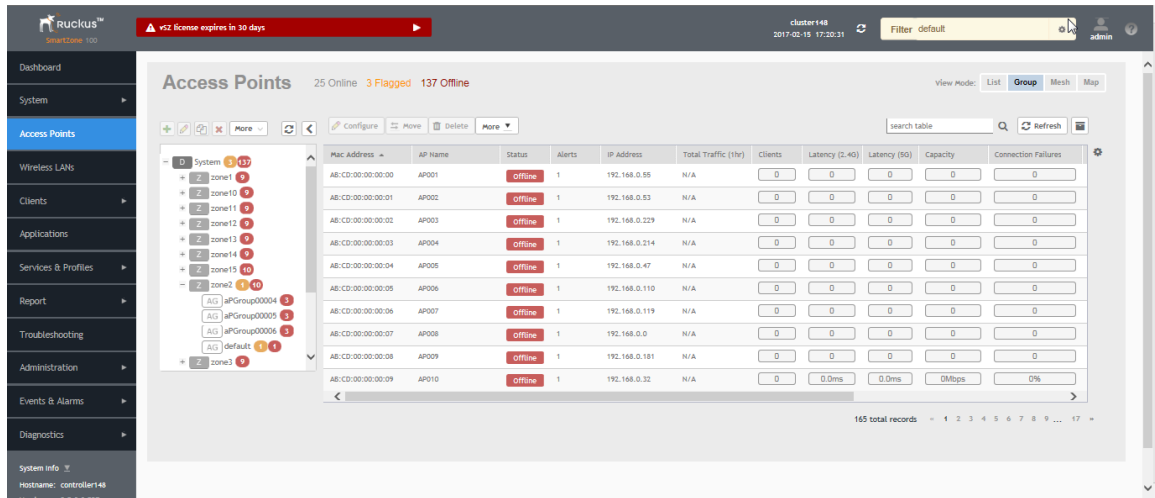

2. From the System tree hierarchy, select the location (for example: System, Domain, Zone) and click . The following figure appears.

Figure 29: Create Groups

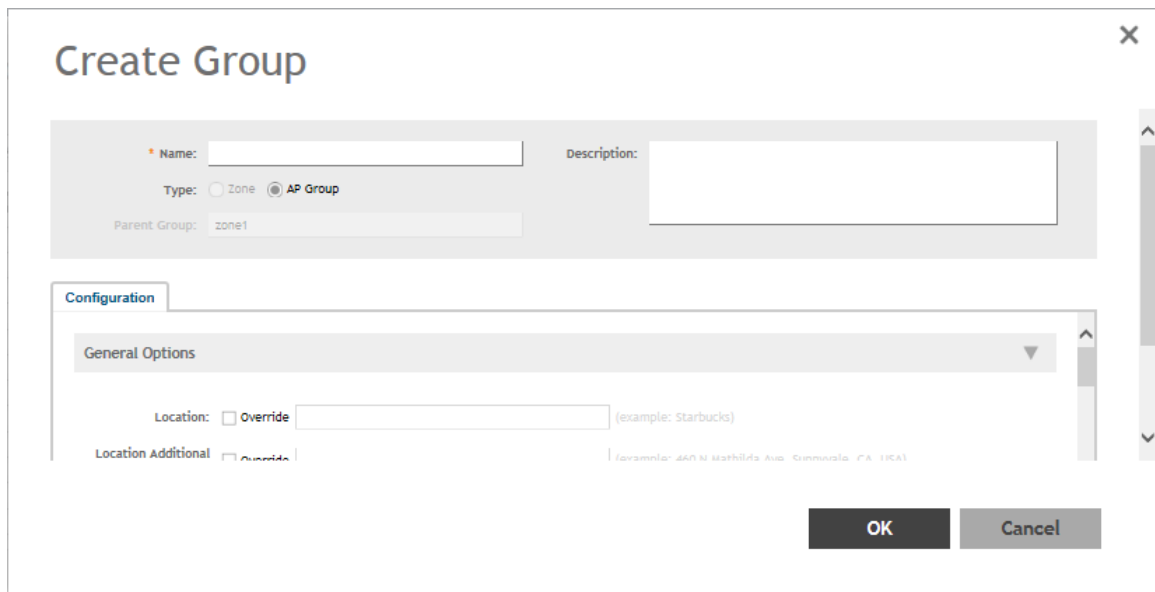

3. Enter the details as explained in the following table.
4. Click **OK**.

**Table 13: AP Group Details**

Field	Description	Your Action
<b>Name</b>	Indicates a name for the Zone/AP group.	Enter a name.
<b>Description</b>	Indicates a short description.	Enter a brief description
<b>Type</b>	Indicates if you are creating a domain, zone or an AP group.	Appears by default. You can also choose the option.
<b>Parent Group</b>	Indicates the parent group that this AP group belongs.	Appears by default.
<b>Configuration &gt; General Options</b>		
<b>Location</b>	Indicates generic location.	Enter the location.
<b>Location Additional Information</b>	Indicates detailed location.	Enter additional location information.
<b>GPS Coordinates</b>	Indicates the geographical location.	Enter the following coordinates in meters or floor: <ul style="list-style-type: none"> <li>• <b>Longitude</b></li> <li>• <b>Latitude</b></li> <li>• <b>Altitude</b></li> </ul>
<b>Configuration &gt; Group Members</b>		
<b>Members</b>	Displays the list of APs that belong to the group.	Select the members from the list and click <b>Move to</b> to assign them to the required group.
<b>Access Points</b>	Displays the list of APs that belong to the zone.	Select the <b>Access Points</b> from the list and click <b>Add to Group</b> .
<b>Configuration &gt; Radio Options</b>		
<b>Channel Range (2.4G)</b>	Indicates that you want to override the 2.4GHz channel range that has been configured for the zone to which this AP group belong.	Select <b>Select Channel Range (2.4G)</b> check boxes for the channels on which you want the 2.4GHz radios of managed APs to operate. Channel options include channels 1 to 11. By default, all channels are selected.
<b>Channel Range (5G) Indoor</b>	Indicates for what channels want the 5GHz radios of managed indoor APs to operate.	Select the check boxes.



Field	Description	Your Action
<b>Channel Range (5G) Outdoor</b>	Indicates for what channels want the 5GHz radios of managed outdoor APs to operate.	Select the check boxes.
<b>Radio Options b/g/n (2.4 GHz)</b>	Indicates the radio option 2.4 GHz configurations.	<p>Select the following options:</p> <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20</b> or <b>40</b> (MHz), or select <b>Auto</b> to set it automatically.</li> <li>• <b>Channel</b>—Select the channel to use for the b/g/n (2.4GHz) radio, or select <b>Auto</b> to set it automatically.</li> <li>• <b>TX Power</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 2.4GHz radio. By default, TX power is set to <b>Full</b> on the 2.4GHz radio</li> <li>• <b>WLAN Group</b>—Specifies to which WLAN group this AP group belongs.</li> </ul>
<b>Radio Options a/n/ac (5 GHz)</b>	Indicates the radio option 5 GHz configurations.	<p>Select the following options:</p> <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20, 40, 80, 80+80, 160</b> (MHz), or select <b>Auto</b> to set it automatically.</li> <li>• <b>Channel</b>—For <b>Indoor</b> and <b>Outdoor</b>, select the channel to use for the a/n/c (5GHz) radio, or select <b>Auto</b> to set it automatically.</li> <li>• <b>TX Power</b>—Select the preferred TX power, if you want to manually configure the transmit power on the 5GHz radio. By default, TX power is set to <b>Full</b> on the 5GHz radio.</li> <li>• <b>WLAN Group</b>—Specify to which WLAN group this AP group belongs.</li> </ul>


Field	Description	Your Action
<b>Configuration &gt; AP SNMP Options</b>		
<b>Override zone configuration</b>	Indicates that the AP Group configuration overrides the zone configuration.	Select the check box.
<b>Enable AP SNMP</b>	Indicates if the AP SNMP option is enabled.	Select the check box.
<b>SNMPv2 Agent</b>	Indicates SNMPv2 Agent is applied.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>Community</b>.</li> <li>2. Select the required <b>Privilege</b>. If you select <b>Notification</b> enter the <b>Target IP</b>.</li> <li>3. Click <b>OK</b>.</li> </ol>
<b>SNMPv3 Agent</b>	Indicates SNMPv3 Agent is applied.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>User</b>.</li> <li>2. Select the required <b>Authentication</b>.</li> <li>3. Enter the <b>Auth Pass Phrase</b>.</li> <li>4. Select the <b>Privacy</b> option.</li> <li>5. Select the required <b>Privilege</b>. If you select <b>Notification</b> select the option <b>Trap</b> or <b>Inform</b> and enter the <b>Target IP</b> and <b>Target Port</b>.</li> <li>6. Click <b>OK</b>.</li> </ol>
<b>Configuration &gt; Model Specific Options</b>		
NOTE: Select the <b>Override</b> check box for that setting, and then configure the setting.		
<b>AP Model</b>	Indicate the AP model for which you are configuring.	Select the option.
<b>Status LEDs</b>	Disable the status LED on the selected AP model.	Select the option.
<b>LLDP</b>	Enables the Link Layer Discovery Protocol (LLDP) on the selected AP model.	Select the option and enter the following details: <ul style="list-style-type: none"> <li>• <b>Advertise Interval</b>—Enter the duration in seconds.</li> <li>• <b>Hold Time</b>—Enter the duration in seconds.</li> <li>• <b>Enable Management IP TLV</b>—Select the check box.</li> </ul>

Field	Description	Your Action
<b>External Antenna (2.4 GHz)</b>	Enables the external 2.4 GHz antenna on the selected AP model.	Select the <b>Enable external antenna</b> check box, and then set the gain value (between 0 and 90dBi) in the box provided.
<b>External Antenna (5 GHz)</b>	Enables the external 5 GHz antenna on the selected AP model.	Select the <b>Enable external antenna</b> check box, and then set the gain value (between 0 and 90dBi) in the box provided.
<b>Port Settings</b>	Indicates the port settings.	Select the option and choose the required LAN option.
<b>PoE out port</b>	Enables PoE out mode.	Select the Enable PoE out ports (specific ZoneFlex AP models only) check box.
<b>PoE Operating Mode</b>	Indicates the PoE operating mode of the selected AP model	Choose the option. <b>NOTE:</b> When this option is selected, some AP features are disabled to reduce power consumption, such as the USB port and one of the Ethernet ports.
<b>Internal Heater</b>	Enables the heater that is built into the selected AP model	Select the Enable internal heaters (specific AP models only) check box.
<b>USB Port</b>	Disables the USB port. USB ports are enabled by default.	Select the Disable USB port check box.

#### Configuration > Advanced Options

<b>Location Based Service</b>	Enables location-based service for the AP group.	<ul style="list-style-type: none"> <li>• Select the <b>Override zone configuration</b> check box.</li> <li>• Select the <b>Enable LBS Service</b> check box.</li> <li>• <b>Select an LBS Server</b> from the drop-down.</li> </ul>
<b>Hotspot 2.0 Venue Profile</b>	Indicates the hotspot profile that you want to assign to the group.	<p>Select the required option or click <b>Create</b> and update the following details:</p> <ul style="list-style-type: none"> <li>• Enter the <b>Name</b>.</li> <li>• Enter the <b>Description</b>.</li> <li>• Enter the <b>Venue Names</b>.</li> <li>• Select the <b>Venue Category</b>.</li> <li>• Select the <b>Type</b>.</li> </ul>

Field	Description	Your Action
		<ul style="list-style-type: none"> <li>Enter the <b>WLAN Metrics</b>.</li> </ul>
<b>AP Management VLAN</b>	Indicates the AP management VLAN settings.	Choose the option. Click <b>VLAN ID</b> , and then type the VLAN ID that you want to assign (valid range is from 1 to 4094). To keep the same management VLAN ID that has been configured on the AP, click <b>Keep AP's settings</b> .
<b>Auto Channel Selection</b>	Indicates auto-channel settings.	Select the check box and choose the option.
<b>Client Admission Control</b>	Indicates the load thresholds on the AP at which it will stop accepting new clients.	Select the <b>Override</b> check box respective to <b>2.4 GHz Radio</b> or <b>5 GHz Radio</b> and update the following details: <ul style="list-style-type: none"> <li><b>Enable</b></li> </ul> <p style="margin-left: 20px;"><b>NOTE:</b> Client load balancing and band balancing will be disabled for this AP group.</p> <ul style="list-style-type: none"> <li><b>Min Client Count</b></li> <li><b>Max Radio Load</b></li> <li><b>Min Client Throughput</b></li> </ul>

**NOTE:** You can also edit, clone or delete an AP Group by selecting the options Configure , Clone  or Delete  respectively, from the Access Points page.

### Configuring Model-Based Settings

If you want to apply a set of settings to all APs of a particular model, use the Model-Based Settings option.

Follow the steps to configure the model based settings.

- From the left-pane, click **Access Points**. The Access Points page appears.
- From the list, select the AP for which you want to apply the model-based settings and click **Configure**. The Edit AP form appears.
- Scroll down to **Model Specific Options** section, and then expand the section.
- In **Model Specific Control**, select the **Override zone config** check box. The settings available for the AP model appear.
- In the General Options section, configure the following settings:

**NOTE:** The options that appear in the **Model Specific Options** section depend on the AP model that you select. Not all the options described in the table below will appear for every AP model.

Option	Description
<b>USB Port</b>	To disable the USB port on the selected AP model, select the <b>Disable USB port</b> check box. USB ports are enabled by default.
<b>Status LEDs</b>	To disable the status LED on the selected AP model, select the <b>Disable Status LEDs</b> check box.
<b>LLDP</b>	To enable the Link Layer Discovery Protocol (LLDP) on the selected AP model, select the <b>Enable Link Layer Discovery Protocol</b> check box. <ul style="list-style-type: none"> <li>• Enter the <b>Advertise Interval</b> duration in seconds</li> <li>• Enter the <b>Hold Time</b> duration in seconds</li> <li>• Select the <b>Enable Management IP TLV</b> check box</li> </ul>
<b>PoE Operating Mode</b>	Select the PoE operating mode of the selected AP model. Available options include Auto (default), 802.3af, 802.3at, and 802.3at+ mode. If 802.3af PoE Operating Mode PoE is selected, this AP model will operate in 802.3af mode and will consume less power than in 802.3at mode. However, when this option is selected, some AP features are disabled to reduce power consumption, such as the USB port and one of the Ethernet ports.
<b>PoE out port</b>	To enable the PoE out port on the selected AP model, select the <b>Enable PoE out ports (specific ZoneFlex AP models only)</b> . <p><b>NOTE:</b> If the controller country code is set to United Kingdom, an additional Enable 5.8 GHz Channels option will be available for outdoor 11n/11ac APs. Enabling this option allows the use of restricted C-band channels. These channels are disabled by default and should only be enabled by customers with a valid license to operate on these restricted channels.</p>
<b>Internal Heater</b>	To enable the heater that is built into the selected AP model, select the Enable internal heaters (specific AP models only) check box.
<b>External Antenna (2.4 GHz)</b>	To enable the external 2.4 GHz antenna on the selected AP model, select the <b>Enable external antenna</b> check box, and then set the gain value (between 0 and 90dBi) in the box provided.
<b>External Antenna (5 GHz)</b>	To enable the external 5 GHz antenna on the selected AP model, select the Enable external antenna check box, and then set the gain value (between 0 and 90dBi) in the box provided.

6. In the **Port Settings** section, configure the following options for each LAN port.

**NOTE:** The number of LAN ports that appear in this section correspond to the physical LAN ports that exist on the selected AP model.

**NOTE:** When trunk port limitation is enabled, the controller does not validate the port settings configured in the AP or the AP group with no members.

Option	Description
<b>Enable</b>	Use this option to enable and disable this LAN port on the selected AP model. By default, this check box is selected. To disable this LAN port, clear this check box.
<b>Profile</b>	Use this option to select the Ethernet port profile that you want this LAN port to use. Two default Ethernet port profile exist: <b>Default Trunk Port</b> (selected by default) and <b>Default Access Port</b> . If you created Ethernet port profiles (see <a href="#">Creating an Ethernet Port Profile</a> on page 248), these profiles will also appear on the drop-down list.  <b>NOTE:</b> If you recently created an Ethernet port profile and it does not appear on the drop-down menu, click <b>Reload</b> on the drop-down menu to refresh the Ethernet port profile list.
<b>Overwriter VLAN</b>	Select the check box and enter: <ul style="list-style-type: none"> <li>• <b>Untag ID</b>—Default: 1</li> <li>• <b>Members</b>—Range: 1 through 4094.</li> </ul>

7. Click **OK**.

**Supported LLDP Attributes**

The Link Layer Discovery Protocol (LLDP) is a vendor-neutral Layer 2 protocol that allows a network device (for example, a Ruckus Wireless AP) to advertise its identity and capabilities on the local network.

LLDP information is sent by devices from each of their interfaces at a fixed interval (default is 30 seconds), in the form of an Ethernet frame. Each LLDP Ethernet frame contains a sequence of type-length-value (TLV) structures starting with Chassis ID, Port ID and Time to Live (TTL) TLV. Table 2 lists the LLDP attributes supported by the controller.

LLDP information is sent by devices from each of their interfaces at a fixed interval (default is 30 seconds), in the form of an Ethernet frame. Each LLDP Ethernet frame contains a sequence of type-length-value (TLV) structures starting with Chassis ID, Port ID and Time to Live (TTL) TLV. The following table lists the LLDP attributes supported by the controller.

Attribute (TLV)	Description
Chassis ID	Indicates the MAC address of the AP's br0 interface
Port ID	Identifies the port from which the LLDP packet was sent

Attribute (TLV)	Description
Time to Live	Same as LLDP Hold Time. Indicates the length of time (in seconds) that a receiving device will hold the LLDP information sent by the selected AP model before discarding it. The default value is 120 seconds.
System Name	Indicates the name assigned to the AP. The default name of Ruckus Wireless APs is RuckusAP.
System Description	Indicates the AP model plus software version
System Capabilities	Indicates the AP's capabilities (Bridge, WLAN AP, Router, Docsis), and which capabilities are enabled
Management Address	Indicates the management IP address of the AP
Port Description	Indicates the description of the port in alphanumeric format

### Configuring the Port Settings of a Particular AP Model

Use Port Settings in the AP Model-Specific Configuration section to configure the Ethernet ports of a particular AP model.

Follow these steps to configure the port settings of a certain AP model.

1. All ports are enabled by default (the Enable check boxes are all selected). To disable a particular port entirely, clear the Enable check box next to the port name (LAN1, LAN2, etc.)
2. For any enabled ports, you can choose whether the port will be used as a Trunk Port, Access Port, or General Port.

The following restrictions apply:

- All APs must be configured with at least one Trunk Port.

**NOTE:** You cannot move an AP model to an AP group and configure the AP model to use a trunk port at the same time, if general ports are enabled when trunk port limitation is disabled. You must configure the selected AP model to use at least one trunk port, and then move the AP model to the AP group.

- For single port APs, the single LAN port must be a trunk port and is therefore not configurable.
- For ZoneFlex 7025/7055, the LAN5/Uplink port on the rear of the AP is defined as a Trunk Port and is not configurable. The four front-facing LAN ports are configurable.
- For all other APs, you can configure each port individually as either a Trunk Port, Access Port, or General Port. See [Designating an Ethernet Port Type](#) on page 95 for more information.

### Designating an Ethernet Port Type

Ethernet ports can be configured as access ports, trunk ports, or general ports.

Trunk links are required to pass VLAN information between switches. Access ports provide access to the network and can be configured as members of specific VLANs, thereby separating the traffic on these ports from traffic on other VLANs. General ports are user-defined ports that can have any combination of up to 20 VLAN IDs assigned.

For most ZoneFlex APs, you can set which ports you want to be your Access, Trunk and General Ports from the controller web interface, as long as at least one port on each AP is designated as a Trunk Port.

By default, all ports are enabled as Trunk Ports with Untag VLAN set as 1 (except for ZoneFlex 7025, whose front ports are enabled as Access Ports by default). If configured as an Access Port, all untagged ingress traffic is the configured Untag VLAN, and all egress traffic is untagged. If configured as a Trunk Port, all untagged ingress traffic is the configured Untag VLAN (by default, 1), and all VLAN-tagged traffic on VLANs 1-4094 will be seen when present on the network.

The default Untag VLAN for each port is VLAN 1. Change the Untag VLAN to:

- Segment all ingress traffic on this Access Port to a specific VLAN.
- Redefine the native VLAN on this Trunk Port to match your network configuration.

When trunk port limitation is disabled using the `eth-port-validate-one-trunk disable` command, validation checks are not performed for the VLAN members and the AP Management VLAN. If the AP configuration for general ports and access ports does not include a member of an AP management VLAN, or the VLAN of a WAN interface configured through CLI, the AP will disconnect and the Ethernet port stops transmitting data. Make sure that you configure the correct VLAN member in the ports (general/access) and the AP management VLAN.

**NOTE:** Ensure that at least one of the general port VLANs is the same as a Management VLAN of the AP.

### Access Ports

Access ports provide access to the network and can be configured as members of a specific VLAN, thereby separating the traffic on these ports from traffic on other VLANs.

All Access Ports are set to Untag (native) VLAN 1 by default. This means that all Access Ports belong to the native VLAN and are all part of a single broadcast domain. When untagged frames from a client arrive at an AP's Access Port, they are given an 802.1Q VLAN header with 1 as their VLAN ID before being passed onto the wired network.

When VLAN 1 traffic arrives destined for the client, the VLAN tag is removed and it is sent as plain (untagged) 802.11 traffic. When any tagged traffic other than VLAN 1 traffic arrives at the same Access Port, it is dropped rather than forwarded to the client.

To remove ports from the native VLAN and assign them to specific VLANs, select Access Port and enter any valid VLAN ID in the VLAN ID field (valid VLAN IDs are 2-4094).

The following table describes the behavior of incoming and outgoing traffic for Access Ports with VLANs configured.

**Table 14: Access Ports with VLANs configured**

VLAN Settings	Incoming Traffic (from Client)	Outgoing Traffic (to Client)
Access Port, Untag VLAN 1	All incoming traffic is native VLAN (VLAN 1).	All outgoing traffic on the port is sent untagged.
Access Port, Untag VLAN [2-4094]	All incoming traffic is sent to the VLANs specified.	Only traffic belonging to the specified VLAN is forwarded.



VLAN Settings	Incoming Traffic (from Client)	Outgoing Traffic (to Client)
		All other VLAN traffic is dropped.

### Trunk Ports

Trunk links are required to pass VLAN information between switches. Trunking is a function that must be enabled on both sides of a link.

If two switches are connected together, for example, both switch ports must be configured as trunk ports.

The trunk port is a member of all the VLANs that exist on the AP/switch and carries traffic for all VLANs between switches.

For a trunk port, the VLAN Untag ID field is used to define the native VLAN - the VLAN into which untagged ingress packets are placed upon arrival. If your network uses a different VLAN as the native VLAN, configure the AP trunk port's VLAN Untag ID with the native VLAN used throughout your network.

### General Ports

General ports are user-specified ports that can have any combination of up to 20 VLAN IDs assigned.

General ports function similarly to Trunk ports, except that where Trunk ports pass all VLAN traffic, General ports pass only the VLAN traffic that is defined by the user.

To configure an AP Ethernet port as a General port, select General Port and enter multiple valid VLAN IDs separated by commas or a range separated by a hyphen.

**NOTE:** You must also include the Untag VLAN ID in the Members field when defining the VLANs that a General port will pass. For example, if you enter 1 as the Untag VLAN ID and want the port to pass traffic on VLANs 200 and 300, you would enter: 1,200,300.

### Configuring Client Admission Control

As an administrator, you can help maintain a positive user experience for wireless users on the network by configuring the following client admission control settings:

- Minimum client count
- Maximum radio load
- Minimum client throughput

Client admission control is implemented on a per radio basis and is supported on 802.11n and 802.11ac APs.

### Monitoring Domains, Zones, and AP Groups

When you select a System, Domain, Zone, or AP Group from the hierarchy tree, respective contextual tabs appear at the bottom of the page.

These tabs are used to monitor the selected group. The following table lists the tabs that appear for System, Domain, Zone, and AP Group.

**Table 15: System, Domain, Zone, and AP Groups Monitoring Tabs**

<b>Tabs</b>	<b>Description</b>	<b>System</b>	<b>Domain</b>	<b>Zone</b>	<b>AP Groups</b>
<b>General</b>	Displays group information	Yes	Yes	Yes	Yes
<b>Configuration</b>	Displays group configuration information.	Yes	Yes	Yes	Yes
<b>Health</b>	Displays historical health information.	Yes	Yes	Yes	Yes
<b>Traffic</b>	Displays historical traffic information.	Yes	Yes	Yes	Yes
<b>Alarm</b>	Displays alarm information.	Yes	Yes	Yes	Yes
<b>Event</b>	Displays event information.	Yes	Yes	Yes	Yes
<b>Clients</b>	Displays client information.	Yes	Yes	Yes	Yes
<b>Wired Clients</b>	Displays information pertaining to wired clients.	Yes	Yes	Yes	Yes
<b>WLANS</b>	Displays WLAN information.	Yes	Yes	Yes	NA
<b>Services</b>	Displays information on the list of services.	Yes	Yes	Yes	NA
<b>Administrators</b>	Displays administrator account information.	Yes	NA	NA	NA

Additionally, you can select System, Domain, or Zone and click **More** to perform the following operations as required:

- **Move**
- **Create New Zone from Template**
- **Extract Zone Template**
- **Apply Zone Template**
- **Change AP Firmware**
- **Switchover Cluster**
- **Trigger Preferred Node**

#### **Moving an AP Zone Location**

Follow these steps to move an AP zone to a different location:

1. From the Access Points page, locate the AP zone that you want to move to a different location.
2. Click **More** and select **Move**, the **Select Destination Management Domain** dialog box appears.
3. Select the destination and click **OK**, a confirmation dialog box appears.
4. Click **Yes**, the page refreshes and AP zone is moved to the selected destination.

### Creating a New Zone using a Zone Template

Follow these steps to create a new zone using a template:

1. From the Access Points page, locate the zone from where you want to create a new zone.
2. Click **More** and select **Create New Zone from Template**, a dialog box appears.
3. In **Zone Name**, enter a name for the new AP zone.
4. Select the required template from the **Template Name** drop-down.
5. Click **OK**. The page refreshes and the new zone is created.

### Extracting a Zone Template

You can extract the current configuration of a zone and save it as a zone template.

Follow these steps to extract the configuration of a zone to a zone template:

1. From the Access Points page, locate the zone from where you want to extract the WLAN template.
2. Click **More** and select **Extract Zone Template**, the **Extract Zone Template** dialog box appears.
3. In **Zone Template Name**, enter a name for the Template.
4. Click **OK**, a message appears stating that the zone template was extracted successfully.
5. Click **OK**. You have completed extracting a zone template.

The extracted Zone template can be viewed under **System > Templates > Zone Templates**.

### Applying a Zone Template

You can apply an AP zone configuration template to a zone.

Follow these steps to apply a zone template:

1. From the Access Points page, locate the zone where you want to apply the zone template.
2. Click **More** and select **Apply Zone Template**, the **Import Zone Template** dialog box appears.
3. From the **Select a Zone template** drop-down, select the template.
4. Click **OK**, a confirmation message appears asking to apply the zone template to the AP zone.
5. Click **Yes**. The zone template was applied successfully.

You have completed applying zone template to the AP zone.

### Changing the Zone's AP Firmware Version

The controller supports multiple firmware version. You can manually upgrade or downgrade the zone's AP firmware version.

Follow these steps to change the zone's AP firmware version:

1. From the Access Pointss page, locate the zone for which you want to upgrade the AP firmware version.
2. Click **More** and select **Change AP Firmware**, the **Change AP Firmware** dialog box appears.
3. The Current AP Firmware version is displayed. Select the firmware version you need. If you upgrade to a new firmware, a backup configuration file will be created. You can use this backup file to downgrade to original firmware.
4. Click **Yes**, a confirmation message appears stating that the firmware version was updated successfully.

5. Click **OK**. You have completed upgrading the zone's AP firmware version.

### Rehoming Managed APs

Rehoming is the process of returning the APs that have failed over to the second cluster back to their original cluster (once it becomes available). Rehoming must be done manually. APs that have failed over will continue to be managed by the failover cluster until you rehome them.

**NOTE:** To rehome managed APs, you must enable cluster redundancy so that the APs will continue to be managed by the failover cluster until you restore them to the original cluster (rehome) manually. See [Enabling Cluster Redundancy](#) on page 46.

Rehoming APs must be done on a per-zone basis. Follow these steps to rehome managed APs to the original cluster.

1. From the Access Points page, locate the zone where you want to switchover cluster settings.
2. Click **More** and select **Switchover Cluster**. The **Switchover Cluster** dialog box appears.
3. Select the **Switchover Cluster** from the drop-down.
4. The control IP configured while enabling cluster redundancy is listed in the **IPv4 List**.
5. Click **OK**, the system refreshes. You have configured the cluster switchover settings.

### Triggering a Preferred Node

You can trigger an AP that belongs to the current zone force go to their preferred node. For this, you must enable Node affinity, which gives AP the priority of preferred nodes.

Follow these steps to trigger a node:

**NOTE:** You must enable node affinity before triggering nodes.

1. From the Access Points page, locate the zone.
2. Click **More** and select **Trigger Preferred Node**, a confirmation stating that the node has been triggered appears.
3. Click **OK**. You have triggered the preferred node for the AP.

## Viewing Modes

You can view System, Zone, and AP Group-level information by selecting one of the following **View Mode** options:

- **List**—Displays the list of all APs irrespective of the Zone or Group they belong.
- **Group**—Displays the list of APs in a hierarchy format. This is the default viewing mode.
- **Mesh**—Lists AP details.
- **Map**—Displays the location map of the APs.
- **Zone**—Lists zone details.

## AP Status

The real-time status of the Access Points are classified as follows:

- **25 Online**—Number of Access Points that are online.
- **3 Flagged**—Number of Access Points that are flagged.
- **137 Offline**—Number of Access Points that are offline.

**NOTE:** APs that exceed their health threshold and that require your attention are flagged. See [Configuring AP Health Thresholds](#).

## Configuring Access Points

You can configure an Access Point.

To configure an Access Point:

1. From the list, select the Access Point that you want to configure and click **Configure**. The Edit AP page appears.
2. Edit the parameters as explained in [Table 16: Access Point Edit Parameters](#) on page 101.
3. Click **OK**.

**NOTE:** Select the **Override** check box if you want to configure new settings.

**Table 16: Access Point Edit Parameters**

Field	Description	Your Action
<b>AP Configuration &gt; General Options</b>		
<b>AP Name</b>	Indicates the name of the AP.	Enter a name.
<b>Description</b>	Gives a short description of the AP.	Enter a short description.
<b>Location</b>	Indicates generic location.	Select the check box and enter the location.
<b>Location Additional Information</b>	Indicates specific location.	Select the check box and enter the location.
<b>GPS Coordinates</b>	Indicates the geographical location.	Select the option. For Manual option, enter the following details: <ul style="list-style-type: none"> <li>• <b>Latitude</b></li> <li>• <b>Longitude</b></li> <li>• <b>Altitude</b></li> </ul>

Field	Description	Your Action
<b>User Location Information</b>	Indicates the demographic information.	Enter the <b>Area Code</b> and <b>Cell Identifier</b> .
<b>AP Admin Logon</b>	Indicates the admin logon credentials.	Select the check box and enter the <b>Logon ID</b> and <b>Password</b> .
<b>AP Configuration &gt; Radio Options</b>		
<b>Channel Range (2.4G)</b>	Indicates that you want to override the 2.4GHz channel range that has been configured for the zone to which this AP group belong.	Select <b>Select Channel Range (2.4G)</b> check boxes for the channels on which you want the 2.4GHz radios of managed APs to operate. Channel options include channels 1 to 11. By default, all channels are selected.
<b>Channel Range (5G)</b>	Indicates that you want to override the 5GHz channel range that has been configured for the zone to which this AP group belong.	Select <b>Select Channel Range (5G)</b> check boxes for the channels on which you want the 5GHz radios of managed APs to operate.
<b>Radio Options b/g/n (2.4 GHz)</b>	Indicates the radio option 2.4 GHz configurations.	Select the following options: <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during transmission to either <b>20</b> or <b>40</b> (MHz), or select <b>Auto</b> to set it automatically.</li> <li>• <b>Channel</b>—Select the channel to use for the b/g/n (2.4GHz) radio, or select <b>Auto</b> to set it automatically.</li> <li>• <b>TX Power Adjustment</b>—Select the required option.</li> <li>• <b>WLAN Group</b>—Select the WLAN group to which this AP belongs.</li> <li>• <b>WLAN Services</b>—Select the check box to enable WLAN services in this radio.</li> </ul>
<b>Radio Options a/n/ac (5 GHz)</b>	Indicates the radio option 5 GHz configurations.	Select the following options: <ul style="list-style-type: none"> <li>• <b>Channelization</b>—Set the channel width used during</li> </ul>

Field	Description	Your Action
		<p>transmission to either <b>20</b>, <b>40</b>, <b>80</b> (MHz), or select <b>Auto</b> to set it automatically.</p> <ul style="list-style-type: none"> <li>• <b>Channel</b>— Select the channel to use for the a/n/c (5GHz) radio, or select <b>Auto</b> to set it automatically.</li> <li>• <b>TX Power Adjustment</b>— Select the required option.</li> <li>• <b>WLAN Group</b>— Select the WLAN group to which this AP belongs.</li> <li>• <b>WLAN Services</b>— Select the check box to enable WLAN services in this radio.</li> </ul>

**AP Configuration > AP SNMP Options**

**NOTE:** For SCG200 controllers, AP SNMP Option is not supported.

<b>Override zone configuration</b>	Allows you to override the existing zone configuration	Select the check box
<b>Enable AP SNMP</b>	Enables you to configure SNMP settings.	Select the check box
<b>SNMPv2 Agent</b>	Allows you to add users to SNMPv2 Agent.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>Community</b>.</li> <li>2. Select the required <b>Privilege</b>. If you select <b>Notification</b> enter the <b>Target IP</b>.</li> <li>3. Click <b>OK</b>.</li> </ol>
<b>SNMPv3 Agent</b>	Allows you to add users to SNMPv3 Agent.	<ol style="list-style-type: none"> <li>1. Click <b>Create</b> and enter <b>User</b>.</li> <li>2. Select the required <b>Authentication</b>.</li> <li>3. Enter the <b>Auth Pass Phrase</b>.</li> <li>4. Select the <b>Privacy</b> option.</li> <li>5. Select the required <b>Privilege</b>. If you select <b>Notification</b> select the</li> </ol>

Field	Description	Your Action
		option <b>Trap</b> or <b>Inform</b> and enter the <b>Target IP</b> . <b>6.</b> Click <b>OK</b> .
<b>AP Configuration &gt; Model Specific Options</b>		
<b>Model Specific Control</b>	Indicates that the model overrides the AP settings.	Select the check box.
<b>USB Port</b>	Disables the USB port on the selected AP model.	Select the option. USB ports are enabled by default.
<b>Status LEDs</b>	Disable the status LED on the selected AP model.	Select the option.
<b>LLDP</b>	Enables the Link Layer Discovery Protocol (LLDP) on the selected AP model.	Select the option and enter the following details: <ul style="list-style-type: none"> <li>• <b>Advertise Interval</b>—Enter the duration in seconds.</li> <li>• <b>Hold Time</b>—Enter the duration in seconds.</li> <li>• <b>Enable Management IP TLV</b>—Select the check box.</li> </ul>
<b>PoE Operating Mode</b>	Allows you to operate using PoE mode.	Select the option.
<b>Port Settings</b>	Indicates the port settings.	Select the option and choose the required LAN option.
<b>AP Configuration &gt; Advanced Options</b>		
<b>Network Settings</b>	Determines the network settings.	Select the IPv4 Settings from the following: <ul style="list-style-type: none"> <li>• <b>Static</b>—Enter the <b>IP Address, Network Mask, Gateway, Primary DNS, Secondary DNS</b>.</li> <li>• <b>Dynamic</b></li> <li>• <b>Keep the AP's Setting</b></li> </ul>
<b>Smart Monitor</b>	Indicates AP interval check and retry threshold settings.	Select the required check boxes.
<b>Syslog Options</b>	Determines if external syslog server settings is applicable.	Select the required check boxes. For <b>Enable external syslog server</b> option, update the following information:



Field	Description	Your Action
		<ul style="list-style-type: none"> <li>• <b>Server Address</b></li> <li>• <b>Port</b></li> <li>• <b>Facility for Event</b></li> <li>• <b>Priority</b></li> </ul>
<b>Hotspot 2.0 version Profile</b>	Indicates the hotspot profile that you want to assign to the group.	Select the required option or click <b>Create</b> and update the following details: <ul style="list-style-type: none"> <li>• Enter the <b>Name</b>.</li> <li>• Enter the <b>Description</b>.</li> <li>• Enter the <b>Venue Names</b>.</li> <li>• Select the <b>Venue Category</b>.</li> <li>• Select the <b>Type</b>.</li> <li>• Enter the <b>WLAN Metrics</b>.</li> </ul>
<b>AP Management VLAN</b>	Indicates the AP management VLAN settings.	Select the check box and choose the option.
<b>Auto Channel Selection</b>	Indicates auto-channel settings.	Select the check box and choose the option.
<b>Client Admission Control</b>	Indicates the load thresholds on the AP at which it will stop accepting new clients.	Select the check boxes and update the following details: <ul style="list-style-type: none"> <li>• <b>Min Client Count</b></li> <li>• <b>Max Radio Load</b></li> <li>• <b>Min Client Throughput</b></li> </ul>
<b>Swap Configuration</b>		
<b>Add Swap-In AP</b>	Allows to swap APs.	Select the check box and enter the <b>Swap-in AP MAC</b> details.

**NOTE:** You can also move the location of an AP or delete an AP. To do so, select the AP from the list and click **Move** or **Delete** as required.

# Managing Access Points

## Overview of Access Point Configuration

Once you have created registration rules and the AP zones to which joining access points can be assigned automatically, access points will be able to join or register with the controller automatically.

After an access point registers successfully with the controller, you can update its configuration by following the steps described in this section.

## Viewing Managed Access Points

After an access point registers successfully with the controller, it appears on the Access Points page, along with other managed access points.

Follow these steps to view a list of managed access points.

1. Click **Access Points**, a list of access points that are being managed by the controller appears on the Access Points page. These are all the access points that belong to all management domains.

The list of managed access points displays details about each access point, including its:

- AP MAC address
- AP name
- Zone (AP zone)
- Model (AP model)
- AP firmware
- IP address (internal IP address)
- External IP address
- Provision Method
- Provision State
- Administrative Status
- Status
- Configuration Status
- Registered On (date the access point joined the controller network)
- Registration Details
- Registration State
- Actions (actions that you can perform)

**NOTE:** By default, the Access Points page displays 20 access points per page (although you have the option to display up to 250 access points per page). If the controller is managing more than 20 access points, the pagination links at the bottom of the page are active. Click these pagination links to view the succeeding pages on which the remaining access points are listed.

2. To view access points that belong to a particular administration domain, click the name of the administration domain in the domain tree (on the sidebar).

The page refreshes, and then displays all access points that belong to that management domain.

## Downloading the Support Log from an Access Point

If you are experiencing issues with an access point, Ruckus Wireless® Support may request you to download the support log from the access point.

The support log contains important technical information that may help Ruckus Wireless® Support troubleshoot the issue with the access point. Follow these steps to download the support log from an access point.

To download a support log from an AP:

- Select the AP and click **More > Download Support Log**. The following message appears:  
Do you want to open or save `SupportLog_{random-string}.log`.

Save the file and use a text editor (for example, Notepad) to view the contents of the text file. Send the support log file to Ruckus Wireless® Support, along with your support request.

## Provisioning and Swapping Access Points

The controller supports the provisioning and swapping of access points.

As an administrator you can:

- Upload a file containing list of AP and the pre-provisioned configuration data for each AP. The controller processes the file and provides details on regarding the import results (including a list of failed APs and failure reasons).
- Modify or delete pre-provisioning data if AP does not connect to the controller
- Monitor the status and stage of the pre-provisioned APs
- Manually lock or unlock APs
- Upload a file containing list of AP pairs for swapping. The controller processes the file and provide the detailed import result (including a list of failed APs and failure reasons).
- Manually enter the AP swap pair
- Delete the swap configuration if AP fails to contact the controller
- Monitor the status and stage of the swapping AP pairs
- Manually swap the APs

### Options for Provisioning and Swapping APs

The controller supports the provisioning and swapping of access points.

Use the following buttons on the AP List page to perform the AP provisioning and swapping.

- **Import Batch Provisioning APs:** Select this option to import the provisioning file. The controller displays the import results. Any errors that occur during the import process will be listed by the controller.
- **Export All Batch Provisioning APs:** Select this option to download a CSV file that lists all APs that have been provisioned. The exported CSV contains the following information:
  - AP MAC Address
  - Zone Name
  - Model

- AP Name
- Description
- Location
- GPS Coordinates
- Logon ID
- Password
- Administrative State
- IP Address
- Network Mask
- Gateway
- Primary DNS
- Secondary DNS
- Serial Number
- IPv6 Address
- IPv6 Gateway
- IPv6 Primary DNS
- IPv6 Secondary DNS

**NOTE:** The exported CSV file for all batch provisioned APs only contains pre-provisioned APs. It does not contain swapping APs or auto discovered APs.

If no APs have been pre-provisioned, you will still be able to export the CSV file but it will be empty (except for the column titles).

- **Import Swapping APs:** Manually trigger the swapping of two APs by clicking the swap action in the row. You can also edit the pre-provision configuration only if the AP does not connect to the controller. Click the AP MAC address to bring up the configuration edit form, and then select Pre-provision Configuration.
- **Export All Batch Swapping APs:** Select this option to download a CSV file that lists all APs that have been swapped. The exported CSV contains the following information:
  - Swap In AP MAC
  - Swap In AP Model
  - Swap Out AP MAC

**NOTE:** The exported CSV file for batch swapping APs only contains swapping APs. It does not contain pre-provisioned APs or auto discovered APs.

## Understanding How Swapping Works

The following table lists how the controller handles swapping by detailing each stage. For example, you have entered swap configuration as Swap In: A and Swap out: B.

**Table 17: AP swapping stages**

Stage	State A	Stage A	State B	Stage B
1. Enter data	Swapping	Not Registered	Approved	Waiting for swap in AP registration
2. AP register	Swapping	Waiting for swapping in	Approved	Waiting for swapping out
3. User swap	Approved	Swapped in	Swapping	Swapped out
4. Second swap	Swapping	Swapped out and waiting for swapping in	Approved	Swapped in and waiting for swapping out

## Editing Swap Configuration

The controller supports the swapping or replacement of a managed AP with a new AP of the same model. This feature is useful when you want to avoid service interruption because you need to replace an AP in the field.

By configuring the swap settings, you can easily and automatically export and apply the settings of the old AP to the new AP.

Follow these steps to configure the swap settings of an AP.

1. On the Access Points page, locate the access point whose swap configuration you want to update.
2. Click **Configure**, the Edit AP page appears.
3. Click the **Swap Configuration** tab.
4. Select the **Add Swap-In AP** check box.
5. Enter the **Swap-In AP MAC** address.
6. Click **OK**.

You have completed editing the swap configuration.

## Monitoring Access Points

When you select an AP from the list, contextual tabs appear at the bottom of the page.

The following table helps you to understand the real-time information about the AP.

**Table 18: Access Point Monitoring Tabs**

Tabs	Description
<b>General</b>	Displays group information
<b>Configuration</b>	Displays group configuration information.

Tabs	Description
Health	Displays historical health information.
Traffic	Displays historical traffic information.
Alarm	Displays alarm information.
Event	Displays event information.
Clients	Displays client information.
Wired Clients	Displays information of wired clients.

Additionally, you can select an AP and click **More** to perform the following operations as required:

- **Select ALL** - Selects all the APs in the list.
- **Deselect All**- Clears all selection from the list.
- **Troubleshooting > Client Connection** - Connects to client devices and analyze network connection issues in real-time. See, [Troubleshooting Client Connections](#) on page 292
- **Troubleshooting > Spectrum Analysis** - Troubleshoots issues remotely, identify sources of interferences within the network and allow administrators access to the RF health of the network environment. See, [Troubleshooting through Spectrum Analysis](#) on page 294
- **Restart** - Restarts an access point remotely from the web interface.
- **Lock** - Disables all WLAN services on the AP and disconnect all wireless users associated with those WLAN services temporarily.
- **Unlock** - Makes all WLAN services available.
- **Import Batch Provisioning APs** - Import the provisioning file. See, [Options for Provisioning and Swapping APs](#) on page 107
- **Import Swapping APs** - Manually trigger the swapping of two APs by clicking the swap action in the row. See, [Options for Provisioning and Swapping APs](#) on page 107
- **Export All Batch Provisioning APs** Downloads a CSV file that lists all APs that have been provisioned.. See, [Options for Provisioning and Swapping APs](#) on page 107
- **Export All Swapping APs** - Downloads a CSV file that lists all APs that have been swapped. See, [Options for Provisioning and Swapping APs](#) on page 107
- **Download Support Log** - Downloads support log. See [Downloading the Support Log from an Access Point](#).
- **Trigger AP Binary Log** - Triggers binary log for the selected AP.
- **Trigger Preferred Node** - Triggers an AP that belongs to the current zone to connect to the preferred node. See [Triggering a Preferred Node](#) on page 100.
- **Download CM Support Log** - Downloads Cable Modem support log.
- **Restart Cable Modem** - Restarts the cable modem. The AP will disconnect from the network for a short period. The AP will disconnect from the network for a short period.
- **Reset Cable Modem** - Resets the cable modem.
- **Reset Cable Modem to Factory Default** - Resets the cable modem to factory default settings.
- **Untag Critical APs** - Stating APs as non-critical. See, [Tagging Critical APs](#) on page 43.
- **Swap** - Swaps current AP to swap-in AP. See, [Editing Swap Configuration](#) on page 109

- **Approve** - Approves AP and completes registering. See, [Working with AP Registration Rules](#) on page 41.

# Working with WLANs and WLAN Groups

# 4

In this chapter:

- [Domains, Zones, AP Groups, and WLANs](#)
- [Viewing Modes](#)
- [Creating a WLAN Domain for an MSP](#)
- [WLAN Groups](#)
- [Creating a WLAN Configuration](#)
- [Managing WLANs](#)

## Domains, Zones, AP Groups, and WLANs

If your wireless network covers a large physical environment (for example, multi-floor or multi-building office) and you want to manage and provide different WLAN services to different areas of your environment, you can virtually split them using the following hierarchy:

- **Domains**—Geographical grouping for regulatory operation.
- **Zones**—Comprises of multiple WLAN groups
- **WLAN Groups**—Comprises of multiple WLANs
- **WLANs**—Wireless network service

**NOTE:** In vSZ-H and SCG200, when the system is upgraded to release 3.5, the new UI and re-architected stats database will prevent the system from displaying AP and zone stats if the AP/zone is operating on 3.4 or prior releases. In order to make full use of the UI introduced in 3.5, zones and APs should be updated to 3.5 as well. Operationally, the zones will still work, but stats visibility will be impacted.

## Viewing Modes

The **View Mode** on upper-right corner of the page provides two options to view the WLANs available in the system:

- **List**—Displays the list of all WLANs irrespective of the Zone or Group they belong.
- **Group**—Displays the list of WLANs that belong to a specific Zone or Group.

The following WLAN details can be viewed regardless of the mode selected:

- **Name**
- **Alert**
- **SSID**
- **Auth Method**
- **Encryption Method**
- **Clients**






- Traffic
- VLAN
- Application Recognition
- Tunneled

## Creating a WLAN Domain for an MSP

A Managed Services Provider (MSP) manages and assumes a defined set of responsibility. You can create an MSP managed domain, to manage all their settings within that domain.

To create a WLAN Domain for an MSP:

1. From the Wireless LANs Page, select **System** from the tree hierarchy.
2. Click the **Create**  button, the Create Group form appears.
3. Configure the following details:
  - a. Enter a **Name** for the domain.
  - b. Enter a **Description** about the domain.
  - c. By default, the **Type** selected is **Domain**.
  - d. The **Parent Group** displays the group to which this domain will be tagged.
  - e. In **Managed by Partner**, select the **Enable** check box.
4. Click **OK**. You have created a new WLAN domain. In the left pane, the new   MSP domain appears.

## WLAN Groups

A WLAN group is a way of specifying which APs or AP groups provide which WLAN services. For example, if your wireless network covers three floors of a building and you need to provide wireless access to visitors only on the first floor:

1. Create a WLAN service (for example, `Guest Only Service`) that provides guest-level access only.
2. Create a WLAN group (for example, `Guest Only Group`), and then assign `Guest Only Service` (WLAN service) to `Guest Only Group` (WLAN group).
3. Assign APs on the 1st Floor (where visitors need wireless access) to your `Guest Only Group`.

Any wireless client that associates with APs assigned to the `Guest Only Group` will get the guest-level access privileges defined in your `Guest Only Service`. APs on the 2nd and 3rd floors can remain assigned to the default WLAN Group and provide normal-level access.


### NOTE:




- WLAN groups are configured at the zone level.
- Creating WLAN groups is optional. If you do not need to provide different WLAN services to different areas in your environment, you do not need to create a WLAN group.

- A default WLAN group called `default` exists. The first 27 WLANs that you create are automatically assigned to this default WLAN group.
- A WLAN group can include a maximum of 27 member WLANs. For dual radio APs, each radio can be assigned to only one WLAN group (single radio APs can be assigned to only one WLAN group).

## Creating a WLAN Group

To create a WLAN group:

1. In the Wireless LANs page, from the **System** tree hierarchy, select the zone where you want to create a WLAN Group.
2. Click the add  button. The Create WLAN Group page appears.
3. Enter a **Name** and **Description** for the WLAN group.
4. From the **Available WLANs** list, select the required WLAN and click the move button. It will appear in the **Selected WLANs** list.
5. Click **Next**, The Create WLAN Group form appears.
6. Click **OK**.


**NOTE:** You can also edit, clone, and delete WLAN group by selecting the options Configure , Clone , and Delete  respectively, from the Wireless LANs page.

## Creating a WLAN Configuration

To create a WLAN configuration:

1. In the Wireless LANs page, as shown in [Figure 30: Wireless LANs](#) on page 114, from the **System** tree hierarchy, select the **Zone** where you want to create a WLAN.

Figure 30: Wireless LANs

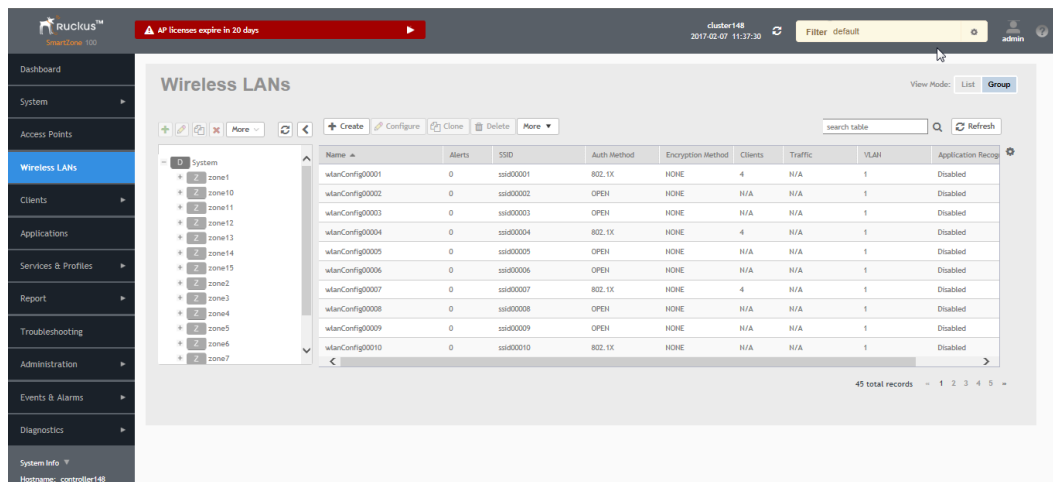

- Click **Create**, [Figure 31: Create WLAN Configuration](#) on page 115 appears.

**Figure 31: Create WLAN Configuration**

- Set the required configurations as explained in [Table 19: WLAN Configurations](#) on page 115.
- Click **OK**.

**Table 19: WLAN Configurations**

Field	Description	Your Action
<b>General Options</b>		
<b>Name</b>	Indicates the user-friendly administrative name for the WLAN.	Enter a name.
<b>SSID</b>	Indicates the SSID for the WLAN.	Enter the SSID
<b>Description</b>	Indicates a user-friendly description of the WLAN's settings or function.	Enter a short description.
<b>Zone</b>	Indicates the zone to which the WLAN configuration will apply.	Select the zone to which the WLAN settings apply.

Field	Description	Your Action
<b>WLAN Groups</b>	Indicates the WLAN group(s) to which the WLAN applies.	Select the WLAN groups to which the WLAN configuration applies..
<b>WLAN Usage</b>		
<b>Access Network</b>	<p>Defines the data plane tunneling behavior.</p> <p><b>NOTE:</b> Select the <b>Tunnel WLAN traffic through Ruckus GRE</b> check box to enable the <b>Flexi-VPN Profile</b> settings in <b>Advanced Options</b>.</p>	<ul style="list-style-type: none"> <li>• Select the check box to tunnel the data traffic to a central data plane.</li> <li>• Clear the check box if you want APs to perform local breakouts.</li> </ul>
<b>Core Network</b>	Defines the network mode.	<p>Select the option:</p> <ul style="list-style-type: none"> <li>• <b>Bridge</b></li> <li>• <b>L2oGRE</b></li> <li>• <b>TTG+PDG</b></li> <li>• <b>Mixed Tunnel Mode</b></li> </ul>
<b>Authentication Type</b>	<p>Defines the type of authentication flow for the WLAN.</p> <p><b>NOTE:</b> Authentication types such as WeChat, Web Authentication and Guest Access are not supported by APs in IPv6 mode.</p>	<p>Select the required option:</p> <ul style="list-style-type: none"> <li>• <b>Standard Usage</b>— This is a regular WLAN suitable for most wireless networks.</li> <li>• <b>Hotspot (WISPr)</b>— Click this option if you want to use a hotspot service (use this type for external captive portal workflows) or WISPr.</li> </ul> <p><b>NOTE:</b> Hotspot (WISPr) applies to WLAN traffic that is tunneled and not tunneled.</p> <ul style="list-style-type: none"> <li>• <b>Guest Access</b>— Click this option if you want guest users to use this WLAN. After you complete creating this WLAN for guest access, you can start generating guest passes.</li> </ul> <p>For more information about Hotspot 2.0 online signup, see the Hotspot 2.0 Reference Guide for this release.</p> <ul style="list-style-type: none"> <li>• <b>Web Authentication</b>— Click this option if you want to require all WLAN users to</li> </ul>

Field	Description	Your Action
		<p>complete a web-based logon to this network every time they attempt to connect.</p> <ul style="list-style-type: none"> <li>• <b>Hotspot 2.0 Access</b>—Click this option if you want a Hotspot 2.0 operator profile that you previously created to use this WLAN. See the Hotspot 2.0 Reference Guide for this release.</li> <li>• <b>Hotspot 2.0 Secure Onboarding</b>—Click this option if you want to use this WLAN for Hotspot 2.0 OSEN. See the Hotspot 2.0 Reference Guide for this release for more information.</li> <li>• <b>WeChat</b>—Click this option if you want the WLAN usage through WeChat.</li> </ul>
<b>Authentication Options</b>		
<b>Method</b>	Specifies the authentication mechanism.	<p>Select the following option:</p> <ul style="list-style-type: none"> <li>• <b>Open (Default)</b>—No authentication mechanism is applied to connections. If WPA or WPA2 encryption is used, this implies WPA-PSK authentication.  If you clicked <b>Web Authentication in Authentication Type</b>, <b>Open</b> is the only available authentication option, even though PSK-based encryption can be supported.</li> <li>• <b>802.1x EAP</b>—A very secure authentication/encryption method that requires a back-end authentication server, such as a RADIUS server. Your choice mostly depends on the types of authentication the client devices support and your local network authentication environment. If you select <b>Enable RFC Location Delivery Support for Authentication &amp; Accounting Server</b>, enter the <b>Operator Realm</b>.</li> <li>• <b>MAC Address</b>—Authenticate clients by MAC address.                         <ul style="list-style-type: none"> <li>• <b>MAC Authentication</b>—Requires a RADIUS server and uses the MAC</li> </ul> </li> </ul>

Field	Description	Your Action
		address as the user logon name and password. <ul style="list-style-type: none"> <li>• Select <b>Use user defined text as authentication password</b> (default is device MAC address) and enter the format.</li> <li>• <b>MAC Address Format</b>—Choose the MAC address format from the drop-down.</li> </ul>

<b>Encryption Options</b>
---------------------------

Method		
	Specifies the encryption method.  WPA and WPA2 are both encryption methods certified by the Wi-Fi Alliance; WPA2 with AES is the recommended encryption method. The Wi-Fi Alliance will be mandating the removal of WEP due to its security vulnerabilities, and Ruckus Wireless recommends against using WEP, if possible.	Select the option: <ul style="list-style-type: none"> <li>• <b>WPA2</b>—Enhanced WPA encryption using AES encryption algorithm.                             <ol style="list-style-type: none"> <li>1. Choose <b>Algorithm</b>:                                     <ul style="list-style-type: none"> <li>• <b>AES</b>:   <ol style="list-style-type: none"> <li>1. Enter <b>Passphrase</b>.</li> <li>2. Select or clear <b>Show</b>.</li> <li>3. Select   <ul style="list-style-type: none"> <li>• the <b>Enable 802.11 Fast BSS Transition</b> check box and enter the <b>Mobility Domain ID</b>.</li> <li>• the required <b>802.11w MFP</b> option.</li> </ul> </li> </ol> </li> <li>4. <b>Dynamic PSK</b> <ul style="list-style-type: none"> <li>• <b>Disable</b></li> <li>• <b>Internal</b> <ul style="list-style-type: none"> <li>• Enter <b>DPSK Length</b></li> <li>• Choose <b>DPSK Type</b></li> <li>• Select <b>DPSK Expiration</b></li> </ul> </li> <li>• <b>External</b>—Enables <b>Authentication Service</b></li> </ul> </li> </ul></li></ol> </li> </ul> <li>• <b>AUTO</b>:                             <ol style="list-style-type: none"> <li>1. Enter <b>Passphrase</b>.</li> <li>2. Select or clear <b>Show</b>.</li> </ol> </li>

Field	Description	Your Action
		<p>3. Select the <b>Enable 802.11 Fast BSS Transition</b> check box and enter the <b>Mobility Domain ID</b>.</p> <p>4. <b>Dynamic PSK</b></p> <ul style="list-style-type: none"> <li>• <b>Disable</b></li> <li>• <b>Internal</b> <ul style="list-style-type: none"> <li>• Enter <b>DPSK Length</b></li> <li>• Choose <b>DPSK Type</b></li> <li>• Select <b>DPSK Expiration</b></li> </ul> </li> <li>• <b>External</b>—Enables <b>Authentication Service</b></li> </ul> <p>• <b>WPA-Mixed</b>—Allows mixed networks of WPA and WPA2 compliant devices. Use this setting if your network has a mixture of older clients that only support WPA and TKIP, and newer client devices that support WPA2 and AES.</p> <ol style="list-style-type: none"> <li>1. Choose <b>Algorithm: AES</b> or <b>AUTO</b>.</li> <li>2. Enter <b>Passphrase</b>.</li> <li>3. Select or clear <b>Show</b>.</li> <li>4. Select <b>Enable 802.11 Fast BSS Transition</b>.</li> <li>5. Enter the <b>Mobility Domain ID</b>.</li> </ol> <p>6. <b>Dynamic PSK</b></p> <ul style="list-style-type: none"> <li>• <b>Disable</b></li> <li>• <b>Internal</b> <ul style="list-style-type: none"> <li>• Enter <b>DPSK Length</b></li> <li>• Choose <b>DPSK Type</b></li> <li>• Select <b>DPSK Expiration</b></li> </ul> </li> <li>• <b>External</b>—Enables <b>Authentication Service</b></li> </ul> <p>• <b>WEP-64 (40 bits)</b>—Provides a lower level of encryption, and is less secure, using 40-bit WEP encryption.</p> <ol style="list-style-type: none"> <li>1. Choose the <b>WEP Key</b>.</li> <li>2. Enter <b>HEX</b> value.</li> </ol>

Field	Description	Your Action
		<ul style="list-style-type: none"> <li>• <b>WEP-128 (104 bits)</b>—Provides a higher level of encryption than WEP-64, using a 104-bit key for WEP encryption. However, WEP is inherently less secure than WPA. <ol style="list-style-type: none"> <li>1. Choose the <b>WEP Key</b>.</li> <li>2. Enter <b>HEX</b> value.</li> </ol> </li> <li>• <b>None</b></li> </ul>
<b>Authentication &amp; Accounting Server (for WLAN Authentication Type: Standard usage )</b>		
<b>Authentication Server</b>	Specifies the server used for authentication on this network. By enabling Proxy, authentication requests will flow through the controller. In a non-proxy mode, the AP will communicate directly with the authentication server without going through the controller.	<ol style="list-style-type: none"> <li>1. Select the check box.</li> <li>2. Select the server from the drop-down menu.</li> <li>3. Select the <b>Enable RFC Location Delivery Support</b>.</li> </ol>
<b>Accounting Server</b>	Specifies the server used for accounting messages. By enabling Proxy, accounting messages are sent by the controller. In a non-proxy mode, the AP will communicate accounting messages directly.	<ol style="list-style-type: none"> <li>1. Select the check box.</li> <li>2. Select the server from the drop-down menu.</li> </ol>
<b>Hotspot Portal (for WLAN Authentication Type: Hotspot (WisPr))</b>		
<b>Hotspot (WISPr) Portal</b>	Defines hotspot behavior, like redirects, session timers, and location information, among others.	Select the hotspot portal profile that you want this WLAN to use.
<b>Bypass CNA</b>	Bypasses the Apple CNA feature on iOS and OS X devices that connect to this WLAN.	Select the <b>Enable</b> check box.
<b>Authentication Service</b>	Indicates the authentication server that	Choose the option. Options include <b>Local DB</b> , <b>Always Accept</b> , and any AAA servers



Field	Description	Your Action
	you want to use for this WLAN.	that you previously added. Additionally, if you want the controller to proxy authentication messages to the AAA server, select the <b>Use Controller as Proxy</b> check box.
<b>Accounting Service</b>	Indicates the RADIUS Accounting server that you want to use for this WLAN.	Choose the option. You must have added a RADIUS Accounting server previously. Additionally, if you want the controller to proxy accounting messages to the AAA server, select the <b>Use the Controller as Proxy</b> check box.
<b>Guest Access Portal</b> (for WLAN Authentication Type: Guest Access)		
<b>Guest Portal Service</b>	Indicates the guest access portal to be used on this WLAN.	Choose the guest portal service.
<b>Bypass CNA</b>	Bypasses the Apple CNA feature on iOS and OS X devices that connect to this WLAN.	Select the <b>Enable</b> check box.
<b>Guest Authentication</b>	Manages guest authentication.	Select: <ul style="list-style-type: none"> <li>• <b>Guest</b> to require users to enter their guest pass credentials. Guest passes are managed directly on the controller.</li> <li>• <b>Always Accept</b> to allow users without guest credentials to authentication.</li> </ul>
<b>Guest Accounting</b>	Indicates the RADIUS Accounting server that you want to use for this WLAN.	Choose the server. You must have added a RADIUS Accounting server previously. Additionally, if you want the controller to proxy accounting messages to the AAA server, select the <b>Use the Controller as Proxy</b> check box.
<b>Authentication &amp; Accounting Service</b> (for WLAN Authentication Type: Web Authentication)		
<b>Web Authentication Portal</b>	Indicates the web authentication portal to use for this WLAN.	Choose the web authentication portal from the drop-down.
<b>Bypass CNA</b>	Bypasses the Apple CNA feature on iOS and OS X devices that connect to this WLAN.	Select the <b>Enable</b> check box.

Field	Description	Your Action
<b>Authentication Service</b>	Indicates the authentication server that you want to use for this WLAN.	Choose the option. Options include <b>Local DB</b> , <b>Always Accept</b> , and any AAA servers that you previously added. Additionally, if you want the controller to proxy authentication messages to the AAA server, select the <b>Use the Controller as Proxy</b> check box.
<b>Accounting Service</b>	Indicates the RADIUS Accounting server that you want to use for this WLAN.	Choose the server. You must have added a RADIUS Accounting server previously. Additionally, if you want the controller to proxy accounting messages to the AAA server, select the <b>Use the Controller as Proxy</b> check box.
<b>Hotspot 2.0 Profile</b> (for WLAN Authentication Type: <b>Hotspot 2.0 Access</b> )		
<b>Hotspot 2.0 Profile</b>	Indicates the profile, which includes operator and identify provider profiles.	Choose the profile.
<b>Authentication Service</b> (RFC 5580)	Supports RFC 5580 location delivery on the WLAN, which carries location information in RADIUS exchanges.	Select the check box.
<b>Accounting Service</b> (Updates)	Indicate the frequency to sends interim updates.  Configure the account update interval for accounting servers defined in the Hotspot 2.0 Identity Provider profile.	Enter the duration in minutes. <i>Range:</i> 0 through 1440.
<b>WeChat Portal</b> (for WLAN Authentication Type: <b>WeChat</b> )		
<b>WeChat Portal</b>	Defines the WeChat authentication URL, DNAT destination, and other information.	Select a WeChat portal service.
<b>Accounting Server</b>	Indicates the RADIUS Accounting server that you want to use for this WLAN.	Choose the server. You must have added a RADIUS Accounting server previously. Additionally, if you want the controller to proxy accounting messages to the AAA server, select the <b>Use the Controller as Proxy</b> check box.

Field	Description	Your Action
<b>Forwarding Profile</b> ( for <b>WLAN Usage &gt; Access Network</b> )		
<b>Forwarding Policy</b>	Defines special data packet handling to be taken by the data plane when the traffic is tunneled.	<b>Forwarding Profile</b> is <b>Factory Default</b> . It is disabled.
<b>Options</b>		
<b>Wireless Client Isolation</b>	Prevents wireless clients from communicating with each other	Click <b>Enable</b> to prevent wireless clients on the same VLAN/subnet from communicating with each other.
<b>Isolation Whitelist</b>	Defines wired destinations on the local subnet that can be reached, even if client isolation is enabled.	Select the option.  <b>NOTE:</b> Isolation Whitelist is not applicable for tunneled WLANs except in the vSZ-D platform.
<b>Priority</b>	Determines high vs low transmit preference of one WLAN compared to another. Traffic for high priority WLAN is always sent before low priority WLANs in the same QoS category (background, best effort, video, voice).	Choose the priority: <ul style="list-style-type: none"> <li>• <b>High</b></li> <li>• <b>Low</b></li> </ul>
<b>RADIUS Option</b>		
<b>NAS ID</b>	Defines the ID sent to the RADIUS server, which will identify the AP.	Choose the option: <ul style="list-style-type: none"> <li>• <b>WLAN BSSID</b></li> <li>• <b>AP MAC</b></li> <li>• <b>User-defined</b></li> </ul>
<b>NAS Request Timeout</b>	Indicates the duration after which an expected RADIUS response message is considered to have failed.	Enter the timeout period (in seconds).
<b>NAS MAX Number of Retries</b>	Indicates the maximum number of failed connection attempts after which the controller will fail over to the backup RADIUS server.	Enter the maximum number of failed connection attempts.

Field	Description	Your Action
<b>NAS Reconnect Primary</b>	Indicates the time interval after which the controller will recheck if the primary RADIUS server is available when the controller has failed over to the backup RADIUS server.	Enter the duration in minutes. <i>Range:</i> 1 through 60 minutes. The default interval is 5 minutes.
<b>Called STA ID</b>	Indicates the format for the called station ID, which is sent to the RADIUS server as an attribute, and can be used in policy decision	Select a format: <ul style="list-style-type: none"> <li>• <b>WLAN BSSID</b></li> <li>• <b>AP MAC</b></li> <li>• <b>AP GROUP</b></li> <li>• <b>NONE</b></li> </ul>
<b>NAS IP</b>	Indicates the NAS IP address.	Select the option: <ul style="list-style-type: none"> <li>• <b>Disabled</b></li> <li>• <b>SZ Control IP</b></li> <li>• <b>SZ Management IP</b></li> <li>• <b>User-defined</b></li> </ul>
<b>Advanced Options</b>		
<b>User Traffic Profile</b>	Defines the traffic policy that will be applied to users on this WLAN. The default UTP allows all with no rate limits. UTPs can define rate limits as well as L3-7 ACLs and policies.	Select the required option.
<b>L2 Access Control</b>	Enables the WLAN to blacklist or whitelist a specific set of MAC addresses based on a L2 access control policy.	Select the required option.
<b>OS Policy</b>	Enables the WLAN to apply a unique policy to devices based on OS type. Use a precedence profile to determine whether a role-based, AAA-based, or OS-based policy will take precedence.	Select the required option.

Field	Description	Your Action
<b>Application Recognition and Control</b>	Enables DPI-based L7 application recognition, and if enabled, an application control policy. Recognition and control are performed on the AP.	Select the <b>Enable</b> check box.
<b>Client Fingerprinting</b>	Enables the AP to attempt utilize DHCP fingerprinting to identify client devices by their operating system, device type, and host name.	Select the check box.
<b>Access VLAN</b>	Tags the WLAN traffic with a VLAN ID between 2-4094. By default, all client traffic will be assigned to the native (untagged) VLAN on the AP's Ethernet port, which we represent as VLAN ID 1.	Select the check box and enter the <b>VLAN ID</b> .
<b>Hide SSID</b>	Removes the SSID from beacon frames. By removing the SSID, in most cases, clients will not show this SSID in their scan list unless the device is already configured to connect. This can simplify the network decision for an end user.	Select the check box.
<b>Client Load Balancing</b>	Disables client load balancing on this WLAN if the option is selected.	Select the check box to disable client load balancing on this WLAN.
<b>Proxy ARP</b>	Enables proxy ARP. When proxy ARP is enabled on a WLAN, the AP provides proxy service for stations when receiving neighbor discovery packets (for example, ARP request and ICMPv6 Neighbor	Select the check box.

Field	Description	Your Action
	Solicit messages), and acts on behalf of the station in delivering ARP replies. When the AP receives a broadcast ARP/Neighbor Solicit request for a known host, the AP replies on behalf of the host. If the AP receives a request for an unknown host, it forwards the request.	
<b>MAX Clients</b>	Limits the number of clients that can associate with this WLAN per AP radio (default is 100). Every connection attempt after this max value will not be permitted to connect.	Enter the number of clients allowed.
<b>802.11d</b>	Adds additional regulatory information to AP beacons and probe responses. This compliance information provides country-specific guidance like permitted channels and transmit power, to ensure that the devices operate within the legal boundaries of the country. 11d is helpful for many devices that cannot independently determine their operating country.	Select the check box to enable this option.
<b>802.11k Neighbor Report</b>	Enhances roaming by providing a list of neighbor APs to the client device. APs build a neighbor AP list via background scanning, and when the client plans to roam, it will request this list from the AP. This list is then used to perform	Select the check box.

Field	Description	Your Action
	efficient scanning to find a roaming candidate.	
<b>Force DHCP</b>	Requires the clients to obtain a valid IP address from DHCP within the specified number of seconds. This prevents clients configured with a static IP address from connecting to the WLAN. Additionally, if a client performs Layer 3 roaming between different subnets, in some cases the client sticks to the former IP address. This mechanism optimizes the roaming experience by forcing clients to request a new IP address.	Select the check box.
<b>DHCP Option 82</b>	Enables an AP to encapsulate additional information (such as VLAN ID, AP name, SSID and MAC address) into the DHCP request packets before forwarding them to the DHCP server. The DHCP server can then use this information to allocate an IP address to the client from a particular DHCP pool based on these parameters.	Select the check box.
<b>Client tx/Rx Statistics</b>	Stops the controller from monitoring traffic statistics for unauthorized clients.	Select the check box.
<b>Inactivity Timeout</b>	Indicates the duration after which idle clients will be disconnected.	Enter the duration in seconds.
<b>OFDM Only</b>	Disconnects 802.11b devices from the WLAN and all devices are forced	Select the check box.

Field	Description	Your Action
	to use higher data rates for more efficient airtime usage. This setting only affects the 2.4GHz radio. OFDM is used by 802.11a/g/n/ac, but is not supported by 802.11b.	
<b>BSS Min Rate</b>	Forces client devices to both be closer to the AP and to use higher, more efficient rates when you increase the BSS min rate above the default (all rates) setting. The BSS minimum rate is the lowest data rate supported on the WLAN. When OFDM-only is enabled, it takes higher priority than BSS min rate settings.	Select the option.
<b>Mgmt Tx Rate</b>	Sets the transmit rate for management frames type such as beacon and probes.	Select the value.
<b>Service Schedule</b>	Controls when the WLAN service is active. The purpose of this setting is to automatically enable or disable a WLAN based on a pre-determined schedule. By default, the service is Always On. Always Off can be checked in order to create a WLAN and apply it, but prevent it from advertising until ready. The "specific" setting allows a configurable schedule based on time of day and days of the week.	Choose the option: <ul style="list-style-type: none"> <li>• <b>Always On</b></li> <li>• <b>Always Off</b></li> <li>• <b>Specific</b> and select a schedule profile from the drop-down list.</li> </ul>



Field	Description	Your Action
	<p><b>NOTE:</b> When a service schedule is created it is saved by the SZ and AP using the browser's time zone. When it is enforced by the AP, the AP will enforce it according to the time zone of the browser when it was configured.</p>	
<b>Band Balancing</b>	<p>Disables band balancing only for this WLAN, if you select the check box.</p>	<p>Select the <b>Disable band balancing for this WLAN service</b> check box.</p>
<b>Qos Map Set</b>	<p>Reprioritizes downlink packets based on the configured mappings. When an AP receives a downlink packet, it checks the existing DSCP (L3 QoS) marking, compares it to this map set and then changes the user priority (L2 QoS) values for transmission by the AP.</p> <p>To configure this feature, select the User Priority (UP) from the table (0-7) and configure the DSCP (0-64) range that will be mapped to this UP.</p> <p>Exceptions can also be added such that the original DSCP and UP tagging are preserved the honored by the AP.</p>	<p>Select <b>Enable QOS Map Set</b>.</p>
<b>SSID Rate Limiting</b>	<p>Enforces an aggregate rate limit for all users of the WLAN. The purpose of this feature is to prevent the combined throughput from all users of an SSID from exceeding this threshold.</p>	<p>Select <b>Uplink</b> and <b>Downlink</b> check boxes and enter the limiting rate in mbps respectively. <i>Range:</i> 1 mbps through 200 mbps.</p>

Field	Description	Your Action
	This feature is different from per-user rate limiting, which enforces the same rate limit for each individual device.	
<b>DNS Server Profile</b>	Allows the AP to inspect DHCP messages and overwrite the DNS server(s) with the DNS server configured in this profile. This allows for policy-based DNS application in which unique users/roles should use a different DNS server than others.	Select a profile from the drop-down menu. Select <b>Disable</b> from the drop-down menu if you want to disable the DNS Server profile for the WLAN service.
<b>Precedence Profile</b>	Defines the relative policy assignment priority for some specific settings. For example, if a WLAN is configured to use VLAN 10, and a AAA/role policy is configured for VLAN 20, and a device OS policy is configured for VLAN 30, and a user/device connects to the WLAN matching all of these policies, which VLAN should be assigned. The precedence policy determines which setting takes priority.	Select the option.
<b>Flexi-VPN Profile</b>	Forwards tunneled traffic to another remote instance through RuckusGRE Tunnel.  <b>NOTE:</b> This feature is applicable only to vSZ-H and vSZ-D platforms.  <b>NOTE:</b> To display this feature, enable the	Choose the DHCP Profile from the drop-down.

Field	Description	Your Action
	<b>Tunnel WLAN traffic through Ruckus GRE</b> check box in the <b>Access Network</b> option.	
<b>CALEA</b> (This feature is supported only for SZ300 controllers)	Intercepts traffic, a requirement enforced on some networks by government agencies. To utilize CALEA, you must support a vSZ-D and configure the CALEA settings in the Services & Profiles > Tunnels & Ports menu.	Select the check box.

**NOTE:** You can also edit, clone and delete WLANs by selecting the options **Configure**, **Clone** and **Delete** respectively, from the Wireless LANs page.

### 802.11 Fast BSS Transition

802.11r Fast BSS Transition is a fast roaming protocol that reduces the number of frame exchanges required for roaming and allows the clients and APs to reuse the master keys obtained during a prior authentication exchange. 11r is most helpful for 802.1X networks. Client support is required for 11r to work.

### 802.11w MFP

802.11w Management Frame Protection provides additional security measures for management frames. Not all client devices support 802.11w.

Check your client devices before enabling 11w. If “Required” is selected, clients must support 11w in order to connect. If “Capable” is selected, clients with or without 11w should be able to connect. However, note that some clients with poor driver software may have connection problems even if 11w is set to Capable.

### Band Balancing

Band balancing balances the client load on radios by distributing clients between the 2.4 GHz and 5 GHz radios.

This feature is enabled by default and set to a target of 25% of clients connecting to the 2.4 GHz band. To balance the load on a radio, the AP encourages dual-band clients to connect to the 5 GHz band when the configured percentage threshold is reached.

## Bypassing Apple CNA

Some Apple® iOS and OS X® clients include a feature called Captive Network Assistant (CNA), which allows clients to connect to an open captive portal WLAN without displaying the logon page.

When a client connects to a wireless network, the CNA feature launches a pre-browser login utility and it sends a request to a success page on the Apple® website. If the success page is returned, the device assumes it has network connectivity and no action is taken. However, this login utility is not a fully functional browser, and does not support HTML, HTML5, PHP or other embedded video. In some situations, the ability to skip the login page for open WLANs is a benefit. However, for other guest or public access designs, the lack of ability to control the entire web authentication process is not desirable.

The controller provides an option to work around the Apple® CNA feature if it is not desirable for your specific deployment. With CNA bypass enabled, captive portal (web-based authentication) logon must be performed by opening a browser to any unauthenticated page (HTTP) to get redirected to the logon page.

## Channel Mode

Channel mode is a method of statistically picking the most potent channel for an AP.

Some countries restrict certain 5GHz channels to indoor use only. For instance, Germany restricts channels in the 5.15GHz to 5.25GHz band to indoor use. When ZoneFlex Outdoor APs and Bridges with 5GHz radios (ZoneFlex 7762, 7762-S, 7762-T, 7761-CM and 7731) are set to a country code where these restrictions apply, the AP or Bridge can no longer be set to an indoor-only channel and will no longer select from amongst a channel set that includes these indoor-only channels when SmartSelect or Auto Channel selection is used, unless the administrator configures the AP to allow use of these channels.

For instance, if the AP is installed in a challenging indoor environment (such as a warehouse), the administrator may want to allow the AP to use an indoor-only channel. These channels can be enabled for use through the AP CLI or the controller web interface.

## Client Admission Control

Client admission control allows APs to adaptively allow or deny the association of clients based on the potential throughput of the currently associated clients. This helps prevent APs from becoming overloaded with clients and improves user experience for wireless users.

As an administrator, you can help maintain a positive user experience for wireless users on the network by configuring the following client admission control settings:

- Minimum client count
- Maximum radio load
- Minimum client throughput

Client admission control is implemented on a per radio basis and is supported on 802.11n and 802.11ac APs.

## Client Load Balancing

Enabling load balancing can improve WLAN performance by helping to spread the wireless client load between nearby access points, so that one AP does not get overloaded while another sits idle.

The load balancing feature can be controlled from within the controller web interface to balance the number of clients per radio on adjacent APs.

Adjacent APs are determined by the controller at startup by measuring the RSSI during channel scans. After startup, the controller uses subsequent scans to update the list of adjacent radios periodically and when a new AP sends its first scan report. When an AP leaves, the controller immediately updates the list of adjacent radios and refreshes the client limits at each affected AP.

Once the controller is aware of which APs are adjacent to each other, it begins managing the client load by sending the configured client limits to the APs. These limits are soft values that can be exceeded in several scenarios, including:

- When a client's signal is so weak that it may not be able to support a link with another AP
- When a client's signal is so strong that it really belongs on this AP.

The APs maintain these configured client limits and enforce them once they reach the limits by withholding probe responses and authentication responses on any radio that has reached its limit.

### Key Points About Client Load Balancing

Before you enable load balancing, keep the following considerations in mind:

- The load balancing rules apply only to client devices; the AP always responds to another AP that is attempting to set up or maintain a mesh network.
- Load balancing does not disassociate clients already connected.
- Load balancing takes action before a client association request, reducing the chance of client misbehavior.
- The process does not require any time-critical interaction between APs and the controller.
- Provides control of adjacent AP distance with safeguards against abandoning clients.
- Can be disabled on a per-WLAN basis. For instance, on a voice WLAN, load balancing may not be desired due to voice roaming considerations.
- Background scanning must be enabled on the WLAN for load balancing to work.

## Mobility Domain ID

A Mobility Domain ID is used by 802.11r to define a scope of the network in which an 11r fast roam is supported. Master keys are shared within the Mobility Domain, allowing clients to support a fast roam.

## Portal-based WLANs

There are many types of portal-based WLANs and they can be distinguished based on where the user credentials are stored, and where the portal page is hosted.

**Table 20: Portal-based WLANs**

WLAN Type	User Credential	Portal on which WLAN is Hosted
Guest	Guest passes on the controller	AP
Hotspot (WISPr)	RADIUS server. LDAP/Active Directory from SmartZone release 3.2 and later	External portal server or internal portal on the controller
Web Auth	RADIUS/LDAP/Active Directory	AP

Guest and WebAuth WLAN portals are hosted on the controller AP with limited customization. WISPr WLANs are usually hosted on external portal servers providing the flexibility to customize. WISPr WLANs allow for sophisticated customization such as providing a customized login page which could include locale information, advertisements etc.

WISPr WLANs can also be configured to bypass the authentication portal such that if an end user device's MAC address (as a credential) is stored on a RADIUS server, there is no need to redirect the end user to the portal server for authentication.

### Characteristics of portal-based WLANs

Portal-based WLANs have the following characteristics:

- WebAuth WLAN
  - Does not provide an option to modify the portal (WYSIWYG)
  - User authentication is done by the RADIUS server, LDAP and Active Directory
  - Allows redirecting user web pages
- Guest WLAN
  - Provides an option to modify the portal elements such as the logo, Terms and Conditions, title etc
  - User authentication is by using guest passphrases or select the **Always Accepted** option
  - Allows redirecting user web pages
  - Does not possess a local database, LDAP, Active Directory or RADIUS server
- Hotspot (WISPr) WLAN
  - Internal Portal

- Provides an option to modify the portal elements such as the logo, Terms and Conditions, title etc
- Allows redirecting user web pages
- User authentication is by the local database, LDAP, Active Directory, RADIUS server or rendered by selecting the **Always Accepted** option
- Supports the Walled Garden approach to allow user access to specific areas within the network
- External Portal
  - Allows customization of the portal pages through external services
  - Supports Northbound Portal Interface for authentication
  - User authentication is by the local database, LDAP, Active Directory, RADIUS server or rendered by selecting the **Always Accepted** option
  - Supports the Walled Garden approach to allow user access to specific areas within the network
  - Allows redirecting user web pages

### Rate Limiting Ranges for Policies

You can define and apply rate limit values for user devices to control the data rate and types of network traffic the device transmits.

**NOTE:** For SmartZone release 3.4 and 3.2.x, the APs support the following rate limiting values:

- 0.10Mbps
- 0.25Mbps - 20.00Mbps (increments by 0.25Mbps)
- 21.00Mbps - 200.00Mbps (increments by 1.00Mbps)

For example, typing 6.45 Mbps maps to the closest predefined rate value, so 6.45Mbps will be rendered as 6.50Mbps.

**NOTE:** For SmartZone release 3.1.x, the APs support the following rate limiting values:

- 0.10Mbps
- 0.25Mbps - 20.00Mbps (increments by 0.25Mbps)
- 30.00Mbps
- 40.00Mbps
- 50.00Mbps

For example, typing 31.50 Mbps maps to the closest predefined rate value, so 31.50 Mbps will be rendered as 40 Mbps. Any rate greater than 50.00Mbps would be mapped to the maximum rate which is 50.00Mbps.

**Table 21: Rate Limiting ranges for different controller policies**

Policy	Global or Zone	Rate limit range for zone running SmartZone 3.4	Rate limit range for zone running SmartZone 3.2.x	Rate limit range for zone running SmartZone 3.1.x
Device Policy	Zone	0.1 Mbps to 200 Mbps  Support uni-direction (Uplink and Downlink need not be enabled or disabled at the same time)	0.1 Mbps to 200 Mbps  No support for uni-direction (Uplink and Downlink need not be enabled or disabled at the same time)	0.1 Mbps to 200 Mbps. But any rate greater than 50Mbps will be mapped to 50 Mbps implicitly on the AP side when the rate is applied.  No support for uni-direction
User Traffic Profile	Global	0.1 Mbps to 200 Mbps  No support for uni-direction because this is Global profile that is used by 3.2.x and 3.1.x APs	0.1 Mbps to 200 Mbps  No support for uni-direction	But any rate greater than 50Mbps will be mapped to 50 Mbps implicitly on the AP side when the rate is applied.  No support for uni-direction

### Working with WLAN Schedule Profiles

A WLAN schedule profile specifies the hours of the day or week during which a WLAN service will be enabled or disabled.

For example, a WLAN for student use at a school can be configured to provide wireless access only during school hours. Create a WLAN schedule profile, and then when you configure a WLAN, select the schedule profile to enable or disable the WLAN service during those hours/days.

**NOTE:** This feature will not work properly if the system does not have the correct time. To ensure that the system always maintains the correct time, configure an NTP server and point the system to the NTP server's IP address, as described in [Configuring System Time](#) on page 31.

**NOTE:** WLAN service schedule times should be configured based on your browser's current timezone. If your browser and the target AP/WLAN are in different timezones, configure the on/off times according to the desired schedule according to your local browser. For example if you wanted a WLAN in Los Angeles to turn on at 9 AM and your browser was set to New York time, please configure the WLAN service schedule to enable the WLAN at noon. When configuring the service schedule, all times are based on your browser's timezone setting.



## Creating a WLAN Schedule Profile

Follow these steps to create a WLAN schedule profile.

1. From the Wireless LANs page, select the WLAN for you want to create a WLAN Schedule profile.
2. Click **Configure**, the Edit WLAN Config page appears.
3. Scroll down to the Advanced Options section.
4. In the **Service Schedule** field, select **Specific**.
5. Click **Create**, the Create Time Schedules Table form appears.
6. In General Options, enter the **Schedule Name** and **Schedule Description**.
7. To set a WLAN schedule:
  - To enable or disable the WLAN for an entire day, click the day of the week under the **Time** column.
  - To enable or disable the WLAN for specific hour of a specific day, click the squares in the table. A single square represents 30 minutes (two-15 minute blocks).  
  
Blue-colored cells indicate the hours when the WLAN is enabled. Clear (or white) cells indicate the hours when the WLAN is disabled.
8. Click **Create**, the page refreshes, and then the schedule you created appears in the drop-down list.

## Managing WLANs

When you select a System, Domain, Zone, or WLAN Group from the hierarchy tree, respective contextual tabs appear at the bottom of the page.

These tabs are used to monitor the selected group. [Table 22: System/Domain/Zone/WLAN Groups Monitoring Tabs](#) on page 137 lists the tabs that appear for System, Domain, Zone, and WLAN Group.

**Table 22: System/Domain/Zone/WLAN Groups Monitoring Tabs**

Tabs	Description	System	Domain	Zone	WLAN Groups
<b>Configuration</b>	Displays the respective configuration information.	Yes	Yes	Yes	Yes
<b>Traffic</b>	Displays the respective historical traffic information.	Yes	Yes	Yes	Yes
<b>Alarm</b>	Displays the respective alarms information. See <a href="#">Managing Events and Alarms</a> on page 322.	Yes	Yes	Yes	Yes
<b>Event</b>	Displays the respective event information. See <a href="#">Managing Events and Alarms</a> on page 322.	Yes	Yes	Yes	Yes

Tabs	Description	System	Domain	Zone	WLAN Groups
<b>APs</b>	Displays the respective AP information. See <a href="#">Managing Access Points</a> on page 106.	Yes	Yes	Yes	NA
<b>Clients</b>	Displays the respective client information. Refer <a href="#">Managing Clients</a> .	Yes	Yes	Yes	NA
<b>Services</b>	Displays the respective Services information. See <a href="#">Services and Profiles</a> on page 175.	Yes	Yes	Yes	NA
<b>Administrators</b>	Displays the respective administrator account information. See <a href="#">Administering the Controller</a> on page 296.	Yes	NA	NA	NA

When you can select a Zone and click **More** you can perform the following operations:

- **Move**
- **Extract WLAN Template**
- **Apply WLAN Template**
- **Change AP Firmware**
- **Switchover Cluster**
- **Trigger Preferred Node**

### Moving a Single WLAN to a Different WLAN Zone

Follow these steps to move a single access point from its current AP zone to a different one.

**NOTE:** The WLAN that you move will inherit the configuration of the new WLAN zone.

- From the Wireless LANs page, locate the WLAN zone that you want to move to a different WLAN zone.
- Click **More** and select **Move**, the **Select Destination Management Domain** dialog box appears.
- Select the destination WLAN zone.
- Click **OK**, a confirmation message appears.
- Click **Yes**. The WLAN zone is moved to the destination location.

### Extracting a WLAN Template

You can extract only WLAN-related configuration of an AP to a WLAN template.

Follow these steps to extract a WLAN template:

1. From the Wireless LANs page, locate the zone from where you want to extract the WLAN template.
2. Click **More** and select **Extract WLAN Template**, the Extract WLAN Template form appears.

3. In **WLAN Template Name**, enter a name for the Template.
4. Click **OK**, a message appears stating that the WLAN template was extracted successfully.
5. Click **OK**. You have completed moving an access point to a new AP zone.

The extracted WLAN template can be viewed under **System > Templates > WLAN Templates**.

### Applying a WLAN Template

You can apply only WLAN-related configuration to an AP zone using a WLAN template.

Follow these steps to apply a WLAN template:

1. From the Wireless LANs page, locate the zone where you want to apply the WLAN template.
2. Click **More** and select **Apply WLAN Template**, the **Apply WLAN Template** dialog box appears.
3. From the **Select a WLAN template** drop-down, select the template.
4. Click **OK**, a confirmation message appears asking to apply the wlan templates to the zone.
5. Click **Yes**, a confirmation message appears stating the template was applied successfully.

You have completed applying WLAN template to the AP zone.

### Changing the Zone's AP Firmware Version

The controller supports multiple firmware version. You can manually upgrade or downgrade the zone's AP firmware version.

Follow these steps to change the zone's AP firmware version:

1. From the Wireless LANs page, locate the zone for which you want to change the AP firmware setting.
2. Click **More** and select **Change AP Firmware**, the **Change AP Firmware** dialog box appears.
3. The Current AP Firmware version is displayed. Select the firmware version you need. If you upgrade to a new firmware, a backup configuration file will be created. You can use this backup file to downgrade to original firmware.
4. Click **Yes**, a confirmation message appears stating that the firmware version was updated successfully.
5. Click **OK**. You have completed upgrading the zone's AP firmware version.

### Rehoming Managed APs

Rehoming is the process of returning the APs that have failed over to the second cluster back to their original cluster (once it becomes available). Rehoming must be done manually. APs that have failed over will continue to be managed by the failover cluster until you rehome them.

**NOTE:** To rehome managed APs, you must enable cluster redundancy so that the APs will continue to be managed by the failover cluster until you restore them to the original cluster (rehome) manually. See [Enabling Cluster Redundancy](#) on page 46.

Rehoming APs must be done on a per-zone basis. Follow these steps to rehome managed APs to the original cluster.

1. From the Wireless LANs page, locate the zone where you want to switchover cluster settings.

2. Click **More** and select **Switchover Cluster**. The **Switchover Cluster** dialog box appears.
3. Select the **Switchover Cluster** from the drop-down.
4. Click **OK**, the page refreshes. You have configured the cluster switchover settings.

### Triggering a Preferred Node

You can trigger an AP that belongs to the current zone force go to their preferred node. For this, you must enable Node affinity, which gives AP the priority of preferred nodes.

Follow these steps to trigger a node:

**NOTE:** You must enable node affinity before triggering nodes.

1. From the Wireless LANs page, locate the zone.
2. Click **More** and select **Trigger Preferred Node**, a confirmation dialog box appears.
3. Click **OK**. You have triggered the nodes in the AP zone.

# Managing Clients

In this chapter:

- [Working with Wireless Clients](#)
- [Working with Wired Clients](#)
- [Viewing 3rd Party Clients](#)
- [Working with Users and Roles](#)
- [Working with Guest Passes](#)
- [Working with Dynamic PSKs](#)

## Working with Wireless Clients

Wireless clients are client devices that are connected to the wireless network services that your managed APs provide. Wireless clients can include smart phones, tablets, and notebook computers equipped with wireless network adapters.

### Viewing a Summary of Wireless Clients

View a summary of wireless clients that are currently associated with all of your managed access points.

Go to **Clients > Wireless Clients**. The **Wireless Clients** page appears and displays a table that lists all clients that are currently associated with your managed access points.

To view only wireless clients that belong to a particular zone, click the zone name in the zone tree. The table refreshes and displays only the clients that belong to the zone you selected.

The following table lists the wireless client details.

**NOTE:** Not all of the columns listed below are displayed by default. To display column that are currently hidden, click the gear icon in the upper-right corner of the table, and then select the check boxes for the columns that you want to display.

You can view the clients listed in the table in two view modes - **No TTG** (without TTG) and **TTG** (with TTG).

Click the  icon to export all the data into a CSV file.

**Table 23: Wireless client details**

Column Name	Description
Hostname	Displays the hostname of the wireless client
OS Type	Displays the operating system that the wireless client is using

Column Name	Description
IP Address	Displays the IP address assigned to the wireless client
MAC Address	Displays the MAC address of the wireless client
WLAN	Displays the name of the WLAN with which the client is associated
AP Name	Displays the name assigned to the access point
AP MAC	Displays the MAC address of the AP
Traffic (Session)	Displays the total traffic (in KB/MB/GB/TB) for this client in this session
Traffic (Uplink)	Displays the total uplink traffic (in KB/MB/GB/TB) for this client in this session
Traffic (Downlink)	Displays the total downlink traffic (in KB/MB/GB/TB) for this client in this session
RSSI	Displays the Received Signal Strength Indicator (RSSI), which indicates how well a wireless client can receive a signal from an AP. The RSSI value is shown in decibels (dB) and displayed as either the real-time value or the average value over the past 90 seconds.
SNR	Displays the Signal-to-Noise Ratio (SNR), which indicates the signal strength relative to background noise. The SNR value is shown in decibels (dB) and displayed as either the real-time value or the average value over the past 90 seconds.
Radio Type	Displays the type of wireless radio that the client supports. Possible values include 11b, 11g, 11g/n, 11a, 11a/g/n, and 11ac.
VLAN	Displays the VLAN ID assigned to the wireless client
Channel	Displays the wireless channel (and channel width) that the wireless client is using
User Name	Displays the name of the user logged on to the wireless client
Data Rate (Up)	Displays the rate at which data is transmitted from the wireless client to the AP
Data Rate (Down)	Displays the rate at which data is transmitted from the AP to the wireless client
Auth Method	Displays the authentication method used by the AP to authenticate the wireless client
Auth Status	Indicates whether the wireless client is authorized or unauthorized to access the WLAN service
Encryption	Displays the encryption method used by the AP

Column Name	Description
Control Plane	Displays the name of SmartZone node to which the AP's control plane is connected
Packets to	Displays the downlink packet count for this session
Packets from	Displays the uplink packet count for this session
Packets dropped	Displays the downlink packet count for this client that have been dropped
Session start time	Displays the time the session starts.

### Viewing Information about a Wireless Client

You can view more information about a wireless client, including its IP address, MAC address, operating system, and even recent events that have occurred on it.

Follow these steps to view information about a wireless client.

1. Go to **Clients > Wireless Clients**.
2. From the list of wireless clients, locate the client whose details you want to view.
3. Under the **MAC Address** column, click the MAC address of the wireless client. The **Associated Client** page appears and displays general information about the wireless client.
  - General: Displays general client information.
  - Health: Displays information about the real-time health of the client. It displays graphical trends based on the signal-to-noise ratio (SNR) and data rate. You can use the **Start** and **Stop** option to review client health at real time.
  - Traffic: Displays historical and real-time traffic information.
  - Event: Displays information about events associated with the client.

### Deauthorizing a Wireless Client

If you want to force wireless clients that joined the wireless network through an authentication portal (for example, a hotspot, guest access or web authentication portal) to reauthenticate themselves, you can deauthorize them. Deauthorized wireless clients remain connected to the wireless network, but these clients will be redirected to the authentication portal whenever they attempt to access network resources.

Follow these steps to deauthorize a wireless client.

1. On the menu, click **Clients > Wireless Clients**.
2. From the list wireless clients, locate the client that you want to deauthorize. If you have a large number of wireless clients and you know the MAC address of the client, enter the MAC address in the search box, and then press Enter to search for the client.
3. When you have located the client, select it, and then click the **Deauthorize** button above the table. The table refreshes, and then the client that you deauthorized disappears from the list.

## Blocking a Wireless Client

When a user associates a wireless client device with an AP that the controller is managing, the client device is recorded and tracked. If, for any reason, you need to block a client device from accessing the network, you can do so from the web interface.

A few reasons why you might consider blocking a wireless client device include:

- Network abuse
- Violation of acceptable use policy
- Theft
- Security compromise

Follow these steps to block a wireless client from accessing the SmartZone network.

1. On the menu, click **Clients > Wireless Clients**.
2. From the list wireless clients, locate the client that you want to block. If you have a large number of wireless clients and you know the MAC address of the client, enter the MAC address in the search box, and then press <Enter> to search for the client.
3. When you have located the client, select it, and then click the **Block** button above the table.

You have completed blocking a wireless client.

## Unblocking a Wireless Client

If you want to allow a client that you previously blocked to access the SmartZone network, you can unblock it.

Follow these steps to unblock a wireless client.

1. On the menu, click **Services and Profiles > Access Control**.
2. Click the **Blocked Client** tab.
3. From the list of blocked clients, locate the client that you want to unblock. If you have a large number of blocked clients and you know the MAC address of the client, enter the MAC address in the search box, and then press <Enter> to search for the client.
4. When you have located the client, select it, and then click the **Delete** button above the table. The table refreshes, and then the client that you want to unblock disappears from the list.

You have completed unblocking a wireless client.

## Disconnecting a Wireless Client

If you need to temporarily disconnect a wireless client from the wireless network, you can do so from the web interface. For example, if you are troubleshooting problematic network connections, you might have to manually disconnect wireless clients as part of the troubleshooting process.

Follow these steps to disconnect a wireless client from the WLAN to which it is connected.

1. On the menu, click **Clients > Wireless Clients**.
2. From the list wireless clients, locate the client that you want to disconnect. If you have a large number of wireless clients and you know the MAC address of the client, enter the MAC address in the search box, and then press <Enter> to search for the client.



- When you have located the client, select it, and then click the **Disconnect** button above the table.  
The table refreshes, and then the client that you disconnected disappears from the list.

## Working with Wired Clients

Wired clients are client devices that are connected to the Ethernet ports of APs managed by the controllers, and thereby are connected to the wired network services that your managed APs provide.

### Viewing a Summary of Wired Clients

View a summary of wired clients that are currently associated with all of your managed access points.

Go to **Clients > Wired Clients**. The **Wired Clients** page appears and displays a table that lists all clients that are currently associated with your managed access points.

To view only wired clients that belong to a particular zone, click the zone name in the zone tree. The table refreshes and displays only the clients that belong to the zone you selected.

The following table lists the wired client details.

**Table 24: Wired client details**

Column Name	Description
MAC Address	Displays the MAC address of the wired client
Username	Displays the name of the user logged on to the wire client
IP Address	Displays the IP address assigned to the wired client
AP MAC	Displays the MAC address of the AP
AP Name	Displays the name assigned to the access point
LAN	Displays the LAN ID assigned to the wired client
VLAN	Displays the VLAN ID assigned to the wired client
Auth Status	Indicates whether the wired client is authorized or unauthorized to access the WLAN service

### Viewing Information about a Wired Client

You can view more information about a wired client, including its IP address, MAC address and even recent events that have occurred on it.

Follow these steps to view information about a wired client.

- Go to **Clients > Wired Clients**.
- From the list of wired clients, locate the client whose details you want to view.
- Under the **MAC Address** column, click the MAC address of the wired client.

The **Associated Client** page appears and displays general information about the wired client.

- General: Displays general client information.
- Event: Displays information about events associated with the client.

## Deauthorizing a Wired Client

If you want to force wired clients that joined the wired network through an authentication portal to reauthenticate themselves, you can deauthorize them. Deauthorized wired clients remain connected to the wired network, but these clients will be redirected to the authentication portal whenever they attempt to access network resources.

Follow these steps to deauthorize a wired client.

1. On the menu, click **Clients > Wired Clients**.
2. From the list wired clients, locate the client that you want to deauthorize. If you have a large number of wired clients and you know the MAC address of the client, enter the MAC address in the search box, and then press **Enter** to search for the client.
3. When you have located the client, select it, and then click the **Deauthorize** button above the table.  
The table refreshes, and then the client that you deauthorized disappears from the list.

## Viewing 3rd Party Clients


You can monitor and view information about 3rd party clients.

**NOTE:** This feature is supported only for SCG200 controllers.

Follow these steps to view a summary of 3rd party clients.


- From the application, click **Clients > 3rd Party**. The 3rd Party Clients page appears as shown in the following image.

Figure 32: 3rd Party Clients Page

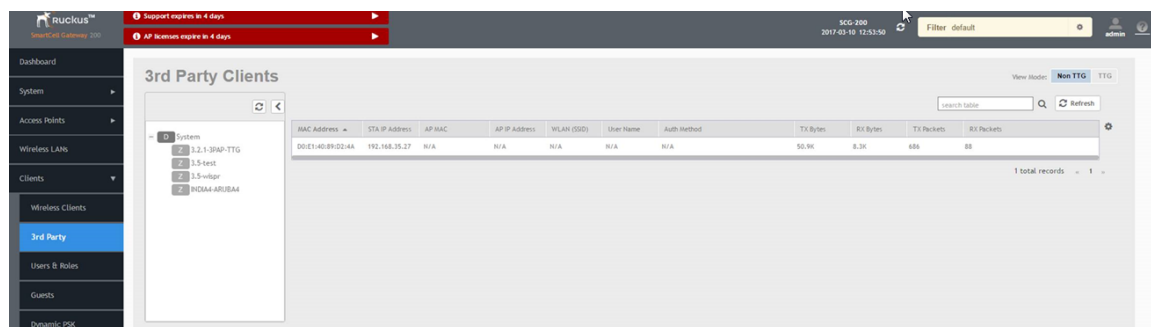

If you want to view 3rd party clients for a particular zone, select the zone from the system tree hierarchy. The list refreshes and displays only the 3rd party client that belongs to the zone.

You can view the clients listed in the table in two view modes - **No TTG** (without TTG) and **TTG** (with TTG).

Click the  icon to export all the data into a CSV file.

The following table lists the details displayed pertaining to the 3rd party client.

**Table 25: 3rd Party Client Details**

Column Name	Description
<b>MAC Address</b>	MAC address of the 3rd party client.
<b>STA IP Address</b>	IP address assigned to the 3rd party client.
<b>AP MAC</b>	Access Point MAC address of the 3rd party client.
<b>AP IP Address</b>	IP address of the Access Point.
<b>WLAN (SSID)</b>	Name of the WLAN service or SSID with which the 3rd party client is associated.
<b>User Name</b>	Name of the user logged on to the 3rd party client.
<b>Auth Method</b>	Authentication method used by the client.
<b>TX Bytes</b>	Byte count sent by the 3rd party client.
<b>RX Bytes</b>	Byte count received by the 3rd party client.
<b>TX Packets</b>	Packet count sent by the 3rd party client.
<b>RX Packets</b>	Packet count received by the 3rd party client.

## Working with Users and Roles

The controller provides a default role (named **Default**) that is automatically applied to all new user accounts.

By default, this role links all users to the internal WLAN and permits access to all WLANs. As an alternative, you can create additional roles that you can assign to select wireless network users, to limit their access to certain WLANs, to allow them to log on with non-standard client devices, or to grant permission to generate guest passes. (You can then edit the default role to disable the guest pass generation option.)

### Creating a User Role

Use user roles to limit user access to certain WLANs, to allow them to log on with non-standard client devices.

Follow these steps to create a user role.

1. Go to **Clients > Users & Roles**.

2. Select the **User Roles** tab, and then select the zone for which you want to create the role.
3. Click **Create**.

The **Create User Role** page appears.

**Figure 33: Create User Role**

**Create User Role**

\* Role Name:

Description:

\* User Traffic Profile:

Access VLAN: VLAN ID

Enable VLAN Pooling

4. Configure the options in the **Create User Role** form.

- Role Name: Type a name for this user role.
- Description: Type a description for this user role.
- User Traffic Profiles: Select the user traffic profile from the drop-down menu. You can also create the user traffic profile. For more information, see [Creating a User Traffic Profile](#) on page 190.
- Access VLAN: Provide the VLAN ID.

You can also select the Enable VLAN Pooling check-box and select the VLAN ID from the drop-down list. You can also create a VLAN Pooling profile. For more information, see [Creating a VLAN Pooling Profile](#) on page 194.

5. Click **OK**.

You have completed creating a user role.

**NOTE:** You can also edit, clone and delete user roles by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **User Roles** tab.

## Creating a User Role with Active Directory Authentication

Configuring user roles using AD authentication provides broad range of directory-based identity-related services.

To create a User Role with AD authentication:

1. Create a new UTP for a particular role, refer [Creating a User Traffic Profile](#).
2. Create a role, refer [Creating a User Role](#).
3. Create a new Proxy AD server and apply the UTP.

**NOTE:** Non-proxy Auth servers are not supported.

Refer [Creating Proxy AAA Servers](#).

**NOTE:** In step 4, for **Service Protocol** option, choose **Active Directory** and proceed.

4. Perform an authentication test to ensure that the user gets assigned the correct Role. Refer [Testing AAA Servers](#).
5. Create a web authentication portal WLAN configuration and assign the Non-proxy AD server to it. Refer [Creating a WLAN Configuration](#).

**NOTE:**

1. Choose **WLAN Usage > Authentication Type > Web Authentication**.
2. Configure the following for **Authentication & Accounting Server**:
  - a. **Web Authentication Portal**: choose the option from the drop-down.
  - b. **Authentication Server**: select the **Use the Controller Proxy** check box and choose the authentication service from the drop-down.

## Creating a User Role with 802.1x Authentication

To create a User Role with 802.1x authentication:

1. Create a new UTP for a particular role, refer [Creating a User Traffic Profile](#).
2. Create a role, refer [Creating a User Role](#).
3. Create a new Proxy RADIUS server and apply the UTP.

**NOTE:** Non-proxy Auth servers are not supported.

Refer [Creating Proxy AAA Servers](#).

**NOTE:** In step 4, for **Service Protocol** option, choose **RADIUS** and proceed.

4. Perform an authentication test to ensure that the user gets assigned the correct Role. Refer [Testing AAA Servers](#).
5. Create a web authentication portal WLAN configuration and assign the Non-proxy RADIUS server to it. Refer [Creating a WLAN Configuration](#).

**NOTE:**

1. Choose **WLAN Usage > Authentication Type > Web Authentication**.
2. Go to **Authentication Options > Methods**, choose **802.1x EAP** and proceed.

## Limitations Applying Role Policies to Users

You must be aware of some limitations in applying roles to a user.

- Role-based policies are only supported in proxy-mode AAA WLANs, where proxy AAA method is used for authentication. If the authentication method is non-proxy AAA, where the AP authenticates the user, the user equipment (UE) cannot be determined and therefore, user-role policies are not supported on non-proxy mode AAA WLANs.
- Typically, the RADIUS/AAA servers return a user attribute to the controller, and the controller assigns it to an UE. However, you must establish a mapping between the user attribute and the user role, so that the user role policy can be applied to the UE. The attribute-role mapping is configured within the AAA policy.
- User Traffic Profiles are configured with various policies such as rate limiting, layer 7 policies etc so when a profile is applied to a WLAN, the policies in the profile are applied to all the UEs in the WLAN. The policies can also be applied to a user role in a WLAN, but not all the policies defined in the profile are applied to the role. For example, Layer 7 application policies cannot be applied to a role in the WLAN. It can only be applied at the WLAN level.

If a role-based VLAN policy is defined in the profile, it cannot be applied to the WLAN if its authenticated based on a L7 method (WebAuth or Hotspot/WISPr). This is because when a VLAN is applied on a per-role basis for a L7 authentication method, the user receives an IP address via DHCP before the UE is authenticated - this happens at layer 3 or 4, and you cannot authenticate the UE and assign a role to it till layer 7 is reached. This results in a mismatch between the VLAN IDs set within the roles, and could possibly lead to service disruptions.

- Precedence profiles are configured at the WLAN level, but impact the manner in which roles are assigned. The manner in which the profile is defined, indicates the order in which policies defined within the profile are assigned. The order of priorities can be customized. For example, if you have WLAN5 configured with VLAN ID 5, An OS policy configured with an iOS VLAN ID 10, and a role policy assigned to a student with VLAN ID 40, then there are multiple orders one can set when a *student user with iOS connects to WLAN 5*.
- You can assign a UE to a role through RADIUS, or you can use RADIUS attributes to apply policies. However, using RADIUS attributes take precedence over assigning UEs to a role (though it is easy to configure, as the only element required to authenticate the UE is the role information).

In the RADIUS attributes method, each policy, such a rate limiting or user traffic profile has a unique RADIUS attribute. Therefore, specifying the RADIUS attribute for a policy will override all other forms of the controller policy. For example, if a UE is already assigned to VLAN 7 through RADIUS, setting a RADIUS attribute for VLAN IDs to 9 will override all VLAN=7 configurations in say WLANs, OS policies, role policies etc.

## Creating a Local User


A local user in the controller refers to a registered user who may be given access to the controller hotspot. A user account contains a user's personal information, logon information, and the subscription package that he or she has been assigned. The controller's local user database can include 802.1X, WISPr, and Zero-IT users.

When you create a user account, you will be required to assign a subscription package to the user. Before creating a user account, Ruckus Wireless® recommends creating at least one subscription package. See [Creating a Subscription Package](#) for more information.

1. Go to **Clients > Users & Roles**.
2. Select the **Local Users** tab, and then select the zone for which you want to create the local user.
3. Click **Create**.

The **Create User** page appears.

**Figure 34: Create User**

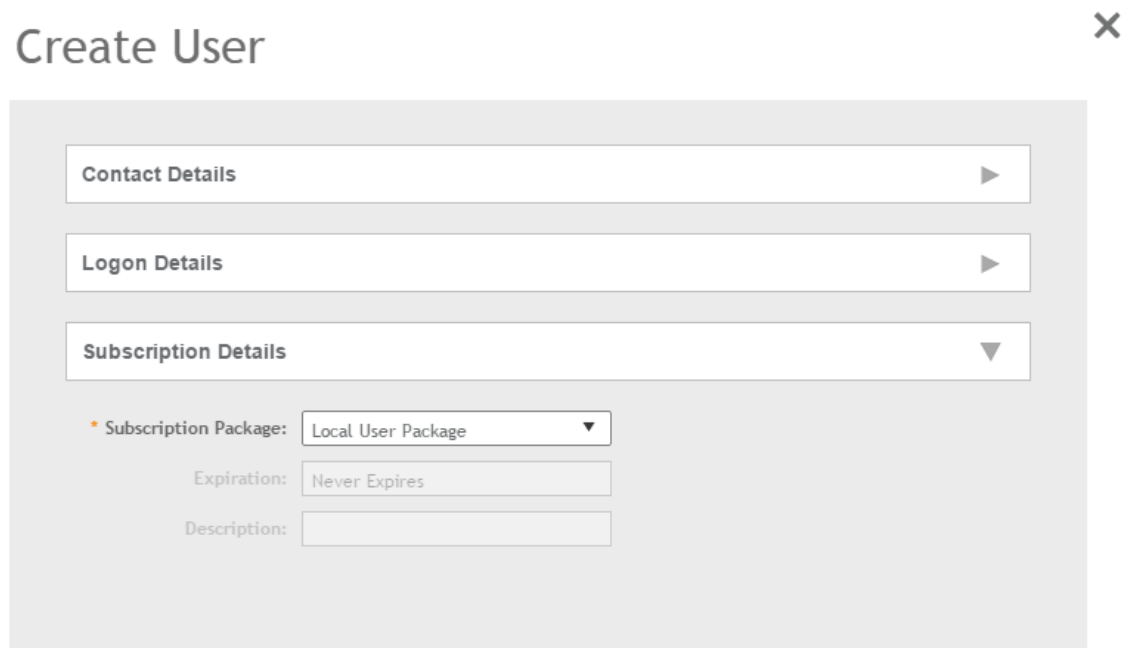

The screenshot shows the 'Create User' interface. At the top, there is a title 'Create User' and a close button (X). Below the title are three expandable sections: 'Contact Details', 'Logon Details', and 'Subscription Details'. The 'Subscription Details' section is expanded, showing a 'Subscription Package' dropdown menu set to 'Local User Package', an 'Expiration' field set to 'Never Expires', and an empty 'Description' text box.

4. Configure the options in the **Create User** form.
  1. In the **Contact Details** section, fill the following:
    - First Name
    - Last Name
    - Email
    - Phone
    - Address
    - City

- State
- Zip Code
- Country
- Remark

2. In the **Login Details** section, fill out the following boxes to create the logon credentials of this user:

- User Name: Type a name for this user. The user name is not case-sensitive and will always be displayed in lowercase characters.
- Password: Type a password for this user. The password must be at least eight characters in length.
- Confirm Password: Retype the password above.

3. In the **Subscription Details** section, select a subscription package that you want to assign to this user. See [Creating a Subscription Package](#) on page 152, for more information.


5. Click **OK**.

You have completed creating a local user.

Select **Enable** to enable this user profile or select **Disable**.

You can view the list of local users by applying filters. Click the  icon to do so.

The following information is displayed when you click on the user:

- Summary: Displays a summary of information about the user.
- Admin Activities: Displays information about the administrator activities.
- Event: Displays information about events associated with the user. Click the  icon to apply filters.

Click the  icon to export all the data into a CSV file.

**NOTE:** You can also edit, clone and delete user by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Local Users** tab.

## Creating a Subscription Package

A subscription package defines the characteristics of a subscription that has been created for a registered user. These characteristics include the expiration date of the subscription.

If the user is connected at the time when his or her subscription expires, the user will get disconnected from the AP and any attempts to re-authenticate will fail.

1. Go to **Clients > Users & Roles**.
2. Select the **Subscription Package** tab, and then select the zone for which you want to create the package.
3. Click **Create**.



The **Create Subscription Package** page appears.

**Figure 35: Create Subscription Package**

**Create Subscription Package**

\* Name:

Description:

\* Expiration Interval:

\* Expiration Value:

**OK** **Cancel**

4. Configure the options in the **Create Subscription Package** form.

- Name: Type a name for the subscription package that you are creating.
- Description: Type a description for this package.
- Expiration Interval: Set the time unit to use for the package expiration. Options include: Hour, Day, Week, Month, Year and Never.
- Expiration Value: Set the actual value to use in combination with the Expiration Time.

5. Click **OK**.

You have completed creating a subscription package.

**NOTE:** You can also edit and delete a package by selecting the options **Configure** and **Delete** respectively, from the **Subscription Package** tab.

## Working with Guest Passes

Similar to user accounts, guest passes in the controller allow users to gain access to the controller hotspots. However, unlike user accounts, guest pass users are not required to provide personal information to access the controller hotspots and can therefore remain anonymous.

Guest passes are generated for specific WLANs only – guest pass users will only be able to gain access to the WLANs for which the guest pass was generated.

## Generating Guest Passes

Generating guest passes involves four steps:

[Step 1: Create a Guest Access Service](#) on page 154

[Step 2: Create a Guest Access WLAN](#) on page 154

[Step 3: Generate a Guest Pass](#) on page 155

[Step 4: Send Guest Passes to Guest Users](#) on page 157

### Step 1: Create a Guest Access Service

1. Follow the instructions in [Creating a WLAN Configuration](#) to create at least one guest access service in Guest Access Portal.
2. When you finish creating a guest access service, continue to [Step 2: Create a Guest Access WLAN](#) on page 154.

### Step 2: Create a Guest Access WLAN

Guest passes are generated for specific WLANs only. Guest pass users will only be able to gain access to the WLANs for which the guest pass is generated.

Follow these steps to create a WLAN that will be used for guest access only.

1. Click **Wireless LANs**.  
The **Wireless LANs** page appears.
2. Click **Create**.  
The **Create WLAN Configuration** page appears.
3. In **General Options**, configure the following:
  - **Name**
  - **SSID**
  - **Description**
  - **Zone**
  - **WLAN Group**
4. In **WLAN Usage**, configure the following:
  - a) In **Access Network**, select the **Tunnel WLAN traffic through Ruckus GRE** check box if you want to tunnel the traffic from this WLAN back to the controller.
  - b) In **Authentication Type**, click **Guest Access**.
5. Configure the rest of the WLAN settings.  
For details on each setting, see [Creating a WLAN Configuration](#).
6. When you finish creating a guest access WLAN, continue to [Step 3: Generate a Guest Pass](#) on page 155.

#### Figure 36: Creating a WLAN for guest access only

The screenshot shows a configuration page with two main sections. The first section, titled "Encryption Options", contains a "Method:" label followed by four radio buttons: "WPA2", "WPA-Mixed", "WEP-64 (40 bits)", and "WEP-128 (104 bits)". The "None" option is selected. The second section, titled "Guest Access Portal", contains several fields: "Guest Portal Service:" with a dropdown menu and a "+ Create" button; "Bypass CNA:" with a checked "Enable" checkbox; "Guest Authentication:" with a dropdown menu; and "Guest Accounting:" with a checked "Use the Controller as Proxy" checkbox, a dropdown menu showing "KHK-ACCT", a "+ Create" button, and a "Send interim update every" field with the value "1" and a unit of "Minutes (0-14)".

### Step 3: Generate a Guest Pass

Follow these steps to generate a guest pass.

1. Click **Clients > Guests**.

The **Guest Pass** page appears.

2. Click **Generate Guest Pass**.

The **Generate Guest Pass** form appears.

3. Configure the following options:

- **Guest Name:** Type a name that you want to assign to the guest user.
- **Guest WLAN:** Select the guest WLAN that you created in [Step 2: Create a Guest Access WLAN](#) on page 154.
- **Number of Passes:** Type the number of guest passes that you want to generate.
- **Pass Valid For:** Set the validity period for the guest pass by filling in the two boxes. For example, if you want the guest pass to be valid for seven days, type 7 in the first box, and then select **Days** in the second box.

4. Configure the advanced options:

- a) **Pass Generation:** Select the **Auto Generate** check box if you want the controller to generate the guest pass key automatically.

If you want to generate the guest pass manually, clear the **Auto Generate** check box.

If you are generating more than one guest pass, the Auto Generate check box is selected automatically and is not configurable.

- b) **Pass Effective Since:** Set the guest pass validity period by selecting one of the following options:

- **Effective from the creation time:** This type of guest pass is valid from the time it is first created to the specified expiration time, even if it is not being used by any end user.
- **Effective from first use:** This type of guest pass is valid from the time the user uses it to authenticate with the controller until the specified expiration time. An additional parameter (Guest Pass will expire in X days) can be configured to specify when an unused guest pass will expire regardless of use. The default is 7 days.

- **Expire guest pass if not used within [ ] days:** If you want this guest pass to expire if it is unused after you generated it, type the number of days in the box (maximum value is 365 days).

c) **Max Devices Allowed:** Set the number of users that can share this guest pass.

- **Limited to [ ]:** If you want a limited number of users to share this guest pass, click this option, and then type the number in the box.
- **Unlimited:** If you want an unlimited number of users to share this guest pass, click this option.
- **Session Duration:** If you clicked **Unlimited**, this option appears. If you want require users to log on again after their sessions expire, select the **Require guest re-login after [ ]** check box, and then select a time increment. If this feature is disabled, connected users will not be required to re-log in until the guest pass expires.

d) In **Remarks** (optional), type your notes about this guest pass, if any.

5. Click **Generate**.

The page refreshes, and then the guest pass you generated appears in a table, along with other guest passes that exist on the controller.

Click **Enable** to enable the guest pass for a user, and **Disable** to revoke the guest pass for a particular user.

You have completed generating a guest pass. You are now ready to send the guest pass to guest users. See [Step 4: Send Guest Passes to Guest Users](#) on page 157 for information.

You can view the list of guest passes by applying filters. Click the  icon to do so.

The following information is displayed when you click on the guest pass created:

- **Summary:** Displays a summary of information about the user and credentials.
- **Admin Activities:** Displays information about the administrator activities.
- **Event:** Displays information about events associated with the user.

Click the  icon to apply filters. Click the  icon to export all the data into a CSV file.

**Figure 37: Generating a guest pass**

## Generate Guest Pass



\* Guest Name:

\* Guest WLAN:

\* Number of Passes:

\* Pass Valid For:

**Advanced Options**

Pass Generation:  Auto Generate

\* Pass Value:

Pass Effective Since:  Effective from the creation time  
 Effective from first use

\* Expire new guest pass if not used within:  days

\* Max Devices Allowed:  Limited to   
 Unlimited

Remarks:

**Generate** **Cancel**

### Step 4: Send Guest Passes to Guest Users

Deliver the guest passes to guest users as per the delivery options that you choose.

The page that appears after you generate a guest pass contains options for delivering the guest pass to guest users (see the following image).

**Figure 38: Options for delivering guest passes to guest users**

Here are the generated guest passes

Enable
  Disable

Guest Name	Manage By	Key	Remarks	Generated	Expiration Date	WLAN
Sam	System	Wv3QSH6q	One day pass	2017/03/08 17:41:30	2017/03/09 17:41:30	[SZ-300-GUEST] of [TEST-JL...
Sen	System	sajeXkCg	N/A	2017/03/08 18:45:26	N/A	[SZ-300-GUEST] of [TEST-JL...
test2	System	DHp2u8D3	N/A	2017/01/18 14:19:18	2017/01/19 14:19:18	[SZ-300-GUEST] of [TEST-JL...

3 total records - 1 -

## Creating a Guest Pass Template

A guest pass template is a HTML file which contains variables for the information that guest users need to connect to the controller hotspots (for example, guest name, key, and WLAN name), and actual instructions for connecting to the guest WLAN.

A default printout template exists in the controller. If you want to create your own printout template, follow these steps.

1. Go to **Clients > Guests**.
2. Click **Guest Pass Template**.

The **Guest Pass Template** page appears.

3. In the **Guest Instruction HTML Template** section, click `default.html`, which is the default guest pass printout template.  
The content of the default guest pass printout template appears in the *Name: default.html*.
4. Click **Download** below the template preview area to download a copy of the template to your computer.
5. Using an HTML editor, create a new HTML file.
6. Add content to the file.

Typically, a printout template contains instructions for connecting to the controller hotspot. See the following image for the content of the default printout template.

**Figure 39: Content of the default printout**

### Connecting as a Guest to the Corporate Wireless Network

Greetings, **{GP\_GUEST\_NAME}**

You have been granted access to the company wireless network, which you can use to access both the World Wide Web and Internet, and to check your personal email.

Your guest pass key is: **{GP\_GUEST\_KEY}**

This guest pass is valid until **{GP\_VALID\_TIME}**

Connect your wireless-ready PC to the following network(s): **{GP\_GUEST\_WLAN}**, as detailed in the instructions printed below.

Before you start, please review the following requirements.

template

7. Insert the following variables into the content of your template:

- `{GP_GUEST_NAME}`: This is the guest pass user name.
- `{GP_GUEST_KEY}`: This is the guest pass key.
- `{GP_VALID_TIME}`: This is the expiration date and time of the guest pass.
- `{GP_GUEST_WLAN}`: This is the WLAN with which the guest user can associate using the guest name and guest key.

8. Save the file.

9. In the **Guest Instruction HTML Template** page, click the **Upload** button for the template that you are creating.

The **Upload a Template File** form appears on the right side of the page.

10. Configure the **Upload a Template File** options:

- **Template Name**: Type a name for the template that you are uploading.
- **Template File**: Click **Browse**, and select the template file you created.

11. Click **Upload**.

An information message box appears and informs you that the template file has been uploaded successfully.

12. Click **OK**.

The template file you uploaded now appears in the list of templates.

**Figure 40: The Upload a Template File form**

Name	Manage By	Sha1
default.html	System	System

## Creating a Guest Instruction SMS Template

A guest SMS template is a text file which contains variables for the information that guest users need to connect to the controller hotspots (for example, guest name, key, and WLAN name), and actual instructions for connecting to the guest WLAN.

A default printout template exists in the controller. If you want to create your own printout template, follow these steps.

1. Go to **Clients > Guests**.
2. Click **Guest Pass Template**.

The **Guest Pass Template** page appears.


3. In the **Guest Instruction SMS Template** section, click `default.txt`, which is the default guest pass printout template.

The content of the default guest pass printout template appears in the *Name: default.txt*.

4. Click **Download** below the template preview area to download a copy of the template to your computer.
5. Using an HTML editor, create a new text file.
6. Add content to the file.

Typically, a printout template contains instructions for connecting to the controller hotspot. See the following image for the content of the default printout template.

**Figure 41: Content of the default printout**

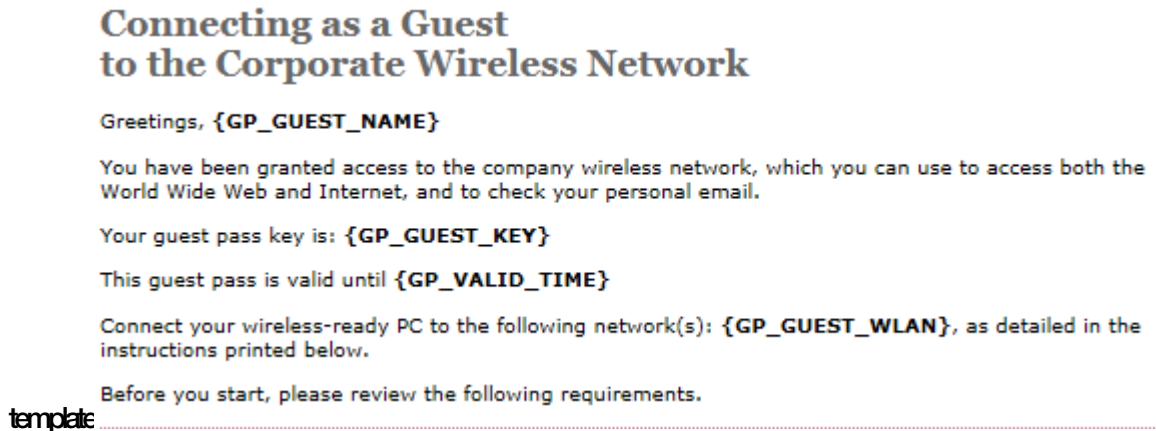

7. Insert the following variables into the content of your template:
  - {GP\_GUEST\_NAME}: This is the guest pass user name.
  - {GP\_GUEST\_KEY}: This is the guest pass key.
  - {GP\_VALID\_TIME}: This is the expiration date and time of the guest pass.
  - {GP\_GUEST\_WLAN}: This is the WLAN with which the guest user can associate using the guest name and guest key.
8. Save the file.
9. In the **Guest Instruction SMS Template** page, click the **Upload** button for the template that you are creating.

The **Upload a Template File** form appears on the right side of the page.

10. Configure the **Upload a Template File** options:
  - **Template Name:** Type a name for the template that you are uploading.
  - **Template File:** Click **Browse**, and select the template file you created.

11. Click **Upload**.

An information message box appears and informs you that the template file has been uploaded successfully.

12. Click **OK**.

The template file you uploaded now appears in the list of templates.

**Figure 42: The Upload a Template File form**



Name ▲	Manage By
default.txt	System

## Exporting the Guest Pass to CSV

Follow these steps to export the last generated guest passes to a comma-separated value (CSV) file.


1. From the generate guest pass list, select the guest passes that you want to export to CSV.
2. Click **Export Selected**.

Your web browser downloads the CSV file to its default download location.

3. Go to your web browser's default download location and look for a file named `guestpass.csv`.
4. Using Microsoft Excel or a similar application, open the CSV file. The CSV file displays the details of the guest passes, including:
  - Guest Name
  - Key
  - Remarks
  - Generated
  - Expiration Date
  - WLAN

You have completed exporting the last generated guest passes to CSV.

**Figure 43: A sample CSV of generated guest passes when opened in Excel**

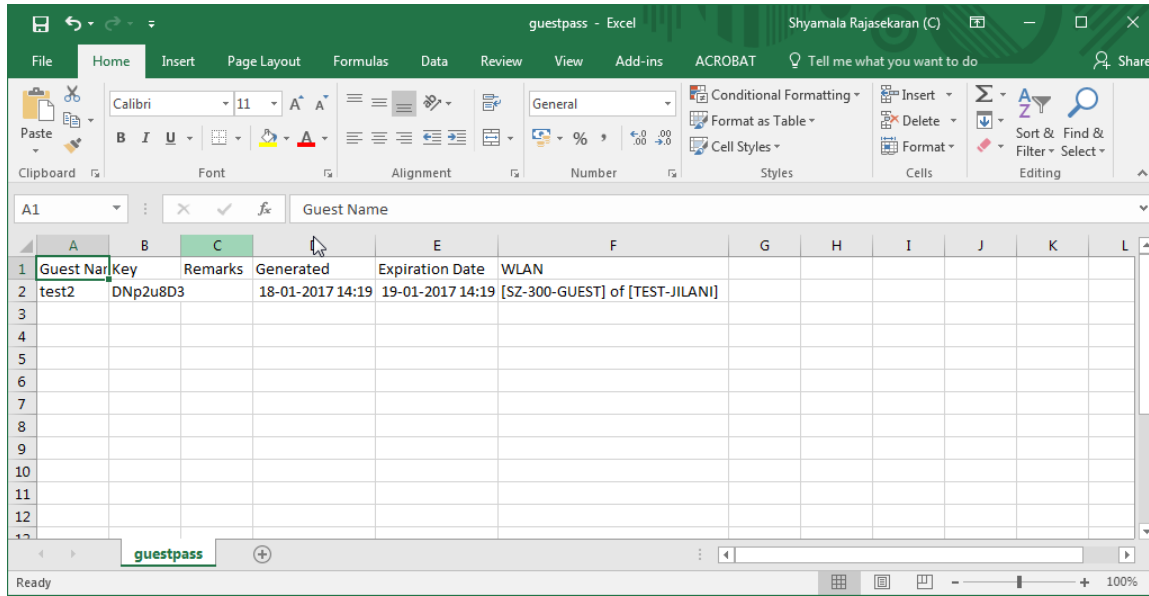

### Generating Guest Passes from an Imported CSV

You can also manually define the guest passes that you want to generate in a comma-separated value (CSV) file (a sample of which is available for download from the **Guest Pass** page).

Follow these steps to generate guest passes from an imported CSV file.

1. Click **Clients > Guests** .

The **Guest Pass** page appears.

2. Click **Import Guest Pass**,

The **Import Guest Pass** form appears.

3. Look for the following text under Browse:

To download a sample guest pass, click here.

4. Click the **here** link to download the sample CSV file.
5. Using Microsoft Excel or a similar application, open the CSV file.
6. In the CSV file, fill out the following columns:

- #Guest Name (Must): Assign a user name to the guest pass user.
- Remarks (Optional): Add some notes or comments about this guest pass.
- Key: Enter a guest pass key or leave it blank so the controller can generate the key automatically.

**Figure 44: The sample CSV file when opened in Excel**

	A	B	C
1	#Guest Name (Must)	Remarks	Key (Empty implies random key)
2	Batch-Guest-1	Batch generation	AAAAAAAA
3	Batch-Guest-2	Batch generation	
4	Batch-Guest-3		
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			

7. Save the CSV file.
8. Go back to the **Import Guest Pass** page, and then configure the following settings on the Common Guest Pass Settings:
  - **Guest WLAN:** Select the guest WLAN that you created in [Step 2: Create a Guest Access WLAN](#) on page 154.
  - **Pass Valid For:** Set the validity period for the guest pass by filling in the two boxes. For example, if you want the guest pass to be valid for seven days, type 7 in the first box, and then select **Days** in the second box.
9. Configure the advanced options:
  - a) **Pass Effective Since:** Set the guest pass validity period by selecting one of the following options:
    - **Effective from the creation time:** This type of guest pass is valid from the time it is first created to the specified expiration time, even if it is not being used by any end user.
    - **Effective from first use:** This type of guest pass is valid from the time the user uses it to authenticate with the controller until the specified expiration time. An additional parameter (**Guest Pass will expire in X days**) can be configured to specify when an unused guest pass will expire regardless of use. The default is 7 days.
    - **Expire guest pass if not used within [ ] days:** If you want this guest pass to expire if it is unused after you generated it, type the number of days in the box (maximum value is 365 days).
  - b) **Max Devices Allowed:** Set the number of users that can share this guest pass.
    - **Limited to [ ]:** If you want a limited number of users to share this guest pass, click this option, and then type the number in the box.
    - **Unlimited:** If you want an unlimited number of users to share this guest pass, click this option.

- **Session Duration:** If you clicked **Unlimited**, this option appears. If you want require users to log on again after their sessions expire, select the **Require guest re-login after [ ]** check box, and then select a time increment. If this feature is disabled, connected users will not be required to re-log in until the guest pass expires.

10. In **Guest List CSV File** (at the top of the page), click **Browse**, and then select the CSV file you edited earlier.

The page refreshes, and the number of guest passes that the controller has identified in the CSV file appears below the **Browse** button.

11. Click **Import**.

The page refreshes, and then the guest pass you generated appears in a table, along with other guest passes that exist on the controller.

You have completed generating a guest pass. You are now ready to send the guest pass to guest users. See [Step 4: Send Guest Passes to Guest Users](#) on page 157 for information.

**Figure 45: The Guest Pass page for importing a CSV file**

Here are the generated guest passes

Print Selected Export Selected Email SMS Delete Enable Disable More Filter Off search table

Guest Name	Manage By	Key	Remarks	Generated	Expiration Date	WLAN
Sam	System	Wv3QSH6q	One day pass	2017/03/08 17:41:30	2017/03/09 17:41:30	[SZ-300-GUEST] of [TEST-JI...
Sen	System	sajeXkCg	N/A	2017/03/08 18:45:26	N/A	[SZ-300-GUEST] of [TEST-JI...
test2	System	DHp2u8D3	N/A	2017/01/18 14:19:18	2017/01/19 14:19:18	[SZ-300-GUEST] of [TEST-JI...

3 total records

## Printing the Guest Pass

After you generate the guest pass, you can print the guest pass information, which contains the guest user information and instructions on how to connect to the hotspot, and give it to the guest user.

**NOTE:** If your browser is blocking pop-ups, make you temporarily disable the pop-up blocker so you can view and print the guest pass.

Follow these steps to print a guest pass.

1. From the generated guest passes list, select the guest passes that you want to print.
2. In **Guest Instruction HTML Template**, select a printout template to use.

The default printout template (`default.html`) is selected by default. If you created custom printout templates (see [Creating a Guest Pass Template](#) on page 158), they will appear in the drop-down menu.


3. Click **Print Selected**.

A new browser page appears, which displays the guest pass and available printing options.

4. Configure your printer settings, and then print the guest passes.

You have completed printing the guest passes.

**Figure 46: What a guest pass printout looks like**

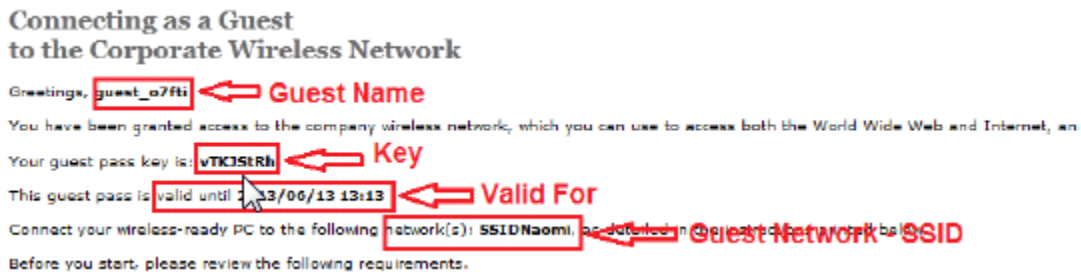

### Sending the Guest Pass via Email

To send guest passes via email, you must have added an external email server to the controller.

Follow these steps to send the guest pass via email.

1. From the generated guest passes list, select the guest passes that you want to send via email.
2. Click **Email**.

The Recipient Email form appears on the right side of the page (see [Figure 47: Use the Recipient Email form to specify who will receive the guest passes via email](#) on page 165).


3. Click **Add New**.
4. In the box that appears below, type the email address to which you want to send the guest passes.
5. To add another recipient, click **Add New** again, and then type another email address.
6. When you have finished adding all the email recipients, click **Send Email**.

A dialog box appears and informs you that the emails have been sent to the message queue successfully

7. Click **OK** to close the dialog box.

You have completed sending guest passes via email.

**Figure 47: Use the Recipient Email form to specify who will receive the guest passes via email**

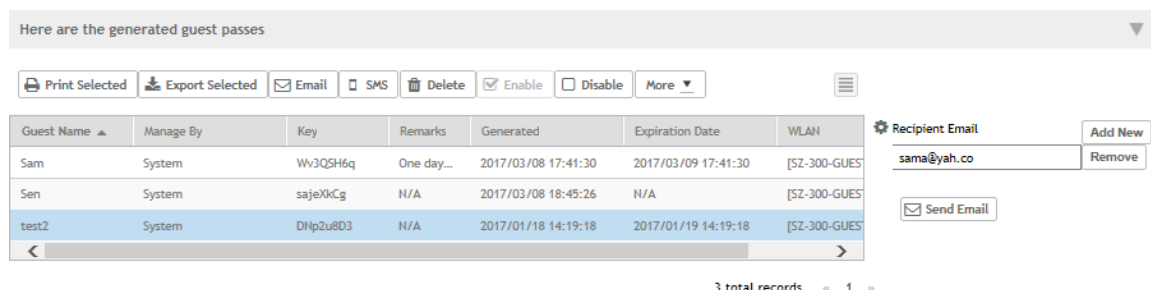

## Sending the Guest Pass via SMS

To send guest passes via sms, you must have added an external SMS gateway to the controller.

Follow these steps to send the guest pass via email.

1. From the generated guest passes list, select the guest pass that you want to send via SMS.
2. Click **SMS**.  
SMS options appear on the right side of the page (see [Figure 48: Options for sending guest passes via SMS](#) on page 166).
3. In Guest Instruction SMS Template, select the SMS template that you want to use.
4. Click **Add New**.
5. In the box that appears below, type the phone number to which you want to send the guest passes via SMS.
6. To add another SMS recipient, click **Add New** again, and then type another phone number.
7. When you have finished adding all the SMS recipients, click **Send SMS**.  
A dialog box appears and informs you that the SMS messages have been sent to the message queue successfully
8. Click **OK** to close the dialog box.

You have completed sending guest passes via SMS.

**Figure 48: Options for sending guest passes via SMS**

The screenshot shows a web interface for managing guest passes. At the top, it says "Here are the generated guest passes" with a dropdown arrow. Below this are several action buttons: "Print Selected", "Export Selected", "Email", "SMS", "Delete", "Enable", and "Disable".

Guest Name	Manage By	Key	Remarks	Generated	Expiration
Sam	System	Wv3Q5H6q	One day...	2017/03/08 17:41:30	2017/03/08 17:41:30
Sen	System	sajeXkCg	N/A	2017/03/08 18:45:26	N/A
test2	System	DHp2u8D3	N/A	2017/01/18 14:19:18	2017/01/18 14:19:18

Below the table, it indicates "3 total records" and a page number "1".

To the right of the table is a panel for sending SMS. It includes a "Guest Instruction SMS Template" dropdown menu set to "default.txt". Below that is a "Recipient Phone Number" input field containing "9876543210", with "Add New" and "Remove" buttons. At the bottom of this panel is a "Send SMS" button.

## Working with Dynamic PSKs

Dynamic PSKs (DPSKs) are unique pre-shared keys assigned to a user or device. DPSKs are used to provide secure wireless access, which helps avoid manual wireless configuration and managing encryption keys.

DPSK is a form of PSK (static key) in a WPA2 WLAN and its purpose is to provide each user device with a unique dynamic PSK to associate to a WLAN without any modifications to the WLAN configuration. For example, a school administrator provides a time-limited DPSK for student's device so that the student can access the school's WLAN for the period their DPSK is valid. After the validity period ends, the DPSK expires and the student's device can no longer access the school's WLAN. Without the use of DPSKs, the school administrator would have to

change the default static key to prevent the student from using the WLAN resources, which in turn would impact all other users of that WLAN.

Individual DPSKs can be deleted in the event of a student leaving the school, or their device being lost or stolen without impacting other users of the WLAN.

A “bound” DPSK is one which is assigned to the MAC address of a user device at the time of creation. No other user device can utilize this DSPK. Bound DPSKs are stored in on APs.

An “unbound” DPSK is not assigned to a device's MAC address during creation, but upon its first use (that is, when the device first connects to a WLAN and the DPSK is entered as the WLAN security key). Once a DPSK becomes assigned to a user device, it becomes bound and no other user device can use it. Unbound DPSKs are stored on the controller.

**NOTE:** If you generate a single unbound DPSK, then only one device can be connected to the DPSK WLAN by the key, since other devices can still use “admin” PSK to connect to the DPSK WLAN. However, when devices from different APs try to use the same unbound DPSK simultaneously, for a short period, they could both connect to the WLAN successfully, but the later device will be disconnected by the controller. If the AP happens to disconnect from the controller, the device could stay connected until the AP connects back to the controller.

When DPSKs are created, there are some prevented behaviors that are considered database conflicts such as the following:

- You cannot create two unbound DPSKs with the same passphrase.
- You cannot create two bound DPSKs for the same MAC address and passphrase. Create two DPSKs for the same MAC address, the former will be replaced. However, you can create multiple bound DPSKs with different MAC addresses and the same passphrase.
- You can also create bound DPSKs and a single unbound DPSK with the same passphrase.

UEs within a PSK WLAN use the same shared key to encrypt data traffic, but if the key is compromised by even one WLAN user, the entire user traffic can be accessed/hacked. Therefore, a secure tunnel is created for each user connected to the WLAN, by configuring the PSK WLAN as an *Internal* or *External* DPSK.

In Internal DPSKs, the controller manages and records the DPSK for each individual user and a limited number of DPSKs are supported.

In External DPSKs, the DPSK is maintained by the Radius Server (AAA) and Radius protocols are used to authenticate the UE. The UE is authenticated by the open authentication WLAN - WPA/WPA2 encryption where in, the controller uses the RADIUS interface with the RADIUS server (AAA includes the DPSK in the Radius response or Access Accept message and sends it to the AP) so that the DPSK is maintained in one place. There is no limitation on the number of DPSK supported in this mode.

**NOTE:** Only proxy AAA authentication is supported for External DPSK.

**NOTE:** External DPSKs are supported only on bounded DPSKs.

## Viewing Dynamic PSKs

View dynamic PSKs that have been generated on the controller.

Follow these steps to view the DPSKs:

Click **Clients > Dynamic PSK**.

The **Dynamic PSK** page appears listing the DPSKs that have been generated.

The following information about dynamic PSKs is available:

- User Name
- MAC Address
- WLAN (SSID)
- VLAN ID
- Created Date
- Expiration Date
- Expired
- Actions

You can sort the list of DPSKs as well.

You can also export the DPSKs listed to a CSV file.

The **Delete Expired DPSKs** option available on the **Dynamic PSKs** page allows you to customize when the system must remove the DPSKs that are no longer valid. Following are the settings available:

- **Never:** No action must be taken for the expired DPSKs.
- **After 1 day:** Auto deletes DPSKs that have expired after one day.
- **After 6 months:** Auto deletes DPSKs that have expired after 6 months.

You have completed viewing the list of dynamic PSKs.

## Generating Dynamic PSKs

You can generate new dynamic PSKs to secure the WiFi network.

Follow these steps to generate the dynamic PSKs (DPSKs):

1. Click **Clients > Dynamic PSK**.

The **Dynamic PSK** page appears listing the PSKs that were generated.

2. Click **Generate DPSKs**.

The **Generate DPSKs** dialog box appears.

3. Provide the following information

- **WLAN:** From the drop-down list, select a DPSK-enabled WLAN.
- **Number of DPSKs:** Type the number of PSKs you want to create. You can generate up to 256 DPSKs at a time.

**NOTE:** For SZ300/SCG200/vSZ-H, a maximum of 10,000 DPSKs can be included within an AP zone and a maximum of 20,000 DPSKs can be included within a cluster (Carrier: per Domain. Enterprise: System), and up to 50,000 DPSKs can be included within a cluster



(Carrier: System). For SZ100/vSZ-E, a maximum of 10,000 DPSKs can be included. Up to 256 unbound DPSKs and 64 group DPSKs (those that are not bound to a MAC address) can be included within an AP zone.


- **User Name:** Leave it blank if you want the controller to auto-generate the user name, or enter the user name manually.
- **Passphrase:** Leave it blank if you want the controller to auto-generate the passphrase, or enter the passphrase manually.
- **User Role:** If you have created user roles, select the user role that you want to assign to the device that connects to the SmartZone network using this DPSK. The device will be assigned the same attributes and permissions (VLAN, UTP, time restrictions, etc.) that have been defined for the assigned user role.

**NOTE:** The VLAN attribute of the user role will not be applied to the DPSK user.

- **VLAN ID:** Type a VLAN ID within the range 1-4094.
- **Group DPSK:** If you want multiple devices to be able to use this DPSK, click **Yes**. If you want only a single device to use this DPSK (bound DPSK), click **No**.

4. Click **Generate**.

You have completed creating dynamic PSKs.

To delete a DPSK, click the DPSK from the list, and then click the  **Delete** icon.

### Importing Dynamic PSKs

You can import CSV files to create DPSKs to secure the WiFi network.

Follow these steps to import dynamic PSKs (DPSKs):

1. Click **Clients > Dynamic PSK**.

The **Dynamic PSK** page appears and lists the DPSKs that have been generated.

2. Click the **Download Sample (CSV)** link to download the CSV template for generating DPSKs.

A sample CSV file is displayed as show in the figure.

**Figure 49: Sample CSV**

A	B	C	D	E
#User Name (*)	Passphrase	Mac Address	Vlan ID	Role
DPSK-User-1		00:11:22:33:44:44		
DPSK-User-2	Samsung101	00:11:22:33:44:55		1
DPSK-User-3	iOSDevices101	11:22:33:44:55:66		2 Students

3. Modify the CSV file as appropriate and save it. The following are the fields that need to be completed in the CSV file:

- **User Name** (mandatory field): Leave it blank if you want the controller to auto-generate the user name, or enter the user name manually.
- **Passphrase** (optional): Leave it blank if you want the controller to auto-generate the passphrase, or enter the passphrase manually.
- **MAC Address** (optional): Enter the MAC address of the device for which to generate a DPSK (bound DPSK). If you leave the MAC address field empty, the controller will generate an unbound DPSK.
- **VLAN ID** (optional): Enter a value to override the WLAN VLAN ID, or leave it empty if you do not want to override the WLAN VLAN ID.
- **Role** (optional): If you have created user roles, type the name of the user role that you want to assign to the device that connects to the SmartZone network using this DPSK. The device will be assigned the same attributes and permissions (VLAN, UTP, time restrictions, etc.) that have been defined for the assigned user role.

**NOTE:** The VLAN attribute of the user role will not be applied to the DPSK user.

**4. Click Import CSV.**

The **Import CSV** dialog box appears.

**NOTE:** Importing a CSV file that contains a MAC address to which an existing DPSK (on the same target WLAN) is already assigned will replace the existing DPSK on the controller database.

**5. In DPSK Enabled WLAN,** select a WLAN from the drop-down list. Only WLANs that support DPSK must be selected.

**6. In Choose File,** click **Browse** to choose the CSV file.

Click **Clear** if you want to replace the CSV file.

You can also specify **Group DPSK** in the CSV file.

**7. Click Upload.**

The generated DPSKs appear in the table on the **Dynamic PSK** page.

**NOTE:**

You can import up to 1,000 DPSKs (not over 256 unbound and 64 group DPSK limitation) at a time.

**8. Click Download CSV** to download a CSV that contains the generated DPSKs.

The CSV file appears in the following format.

**Figure 50: New CSV**

User Name	MAC	WLAN (SSID)	Passphrase	VLAN ID	Created Date	Expiration Date
DPSK-User-1	00:11:22:33:44:44	joe-wlan (joe-wlan)	4#4BSXMe		3/17/2016 18:55	Unlimited
DPSK-User-2	00:11:22:33:44:55	joe-wlan (joe-wlan)	rE<r0[]y	1	3/17/2016 18:55	Unlimited
DPSK-User-3	11:22:33:44:55:66	joe-wlan (joe-wlan)	'q=7vqfE	2	3/17/2016 18:55	Unlimited

You have completed generating DPSKs.

**NOTE:** Click **Export All** to export all the dynamic PSKs to a CSV file. You can also export specific dynamic PSKs by selected them and clicking **Export Selected**.

## Creating an External DPSK Over RADIUS WLAN

External DPSKs use the radius interface with the RADIUS Server (AAA) to maintain the DPSKs centrally. There is no limitation in the number of DPSKs that are supported.

To create an external DPSK over RADIUS WLAN:

1. Create an Authentication Service. Refer, [Creating Non-Proxy Authentication AAA servers](#).
2. Create an Accounting Service. Refer, [Creating Proxy Accounting AAA Servers](#).
3. Create Zone Configuration. Refer, [Creating an AP Zone](#).
4. Create WLAN Configuration for DPSK. Refer, [Creating a WLAN Configuration](#).

**Figure 51: External DPSK Configuration**

**Create WLAN Configuration**

WLAN Usage

Access Network:  Tunnel WLAN traffic through Ruckus GRE

Authentication Type:  Standard usage (For most regular wireless networks)  Hotspot (WISPr)  Guest Access  Web Authentication  
 Hotspot 2.0 Access  Hotspot 2.0 Secure Onboarding (OSEN)  WeChat

Authentication Options

Method:  Open  802.1x EAP  MAC Address

Encryption Options

Method:  WPA2  WPA-Mixed  WEP-64 (40 bits)  WEP-128 (104 bits)  None

Algorithm:  AES  AUTO

802.11w MFP:  Disabled  Capable  Required

Dynamic PSK:  Disable  Internal  External

Authentication & Accounting Service

Authentication Service:  Use the controller as proxy

Accounting Service:  Use the controller as proxy

OK Cancel

# Application Recognition and Control

In this chapter:

- [Monitoring Applications](#)

Application Recognition and Control enables you to identify, monitor and control the applications that are running on wireless clients associated with managed APs.

## Monitoring Applications

If you have enabled Application Recognition and Control for at least one WLAN, you can monitor the applications that run on wireless clients associated with that WLAN.

**NOTE:** To configure application recognition and control policies, go to **Services and Profiles > Application Control**. For more information, see [Configuring Application Controls](#) on page 202.

To monitor the top applications by traffic consumption on the wireless network:

1. Go to **Applications** on the main menu.
2. Select whether to view the **Top Applications** by **Application** or **Port**, select a time period to display, and optionally filter the data by AP MAC address and WLAN name using the drop-down menus.
3. Select whether to display the Top 10 or Top 25 applications in **Chart** or **Table** format.

**NOTE:** If Application Recognition and Control is unable to find an application name, it displays the source and destination IP: port address of the application

**Figure 52: Top Applications - Chart View**



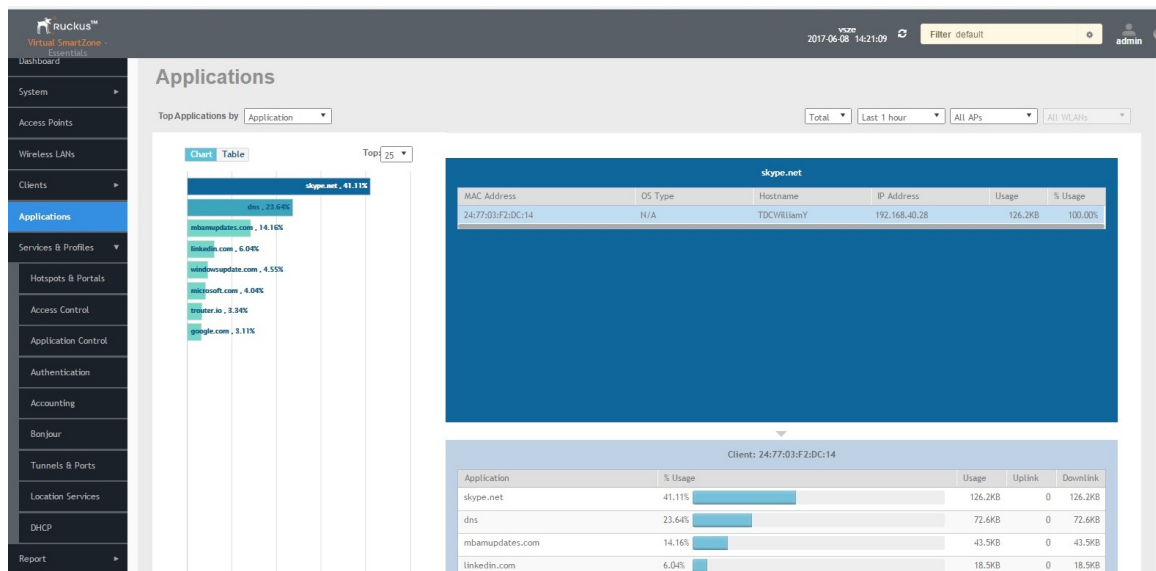


Figure 53: Top Applications by Port - Table View

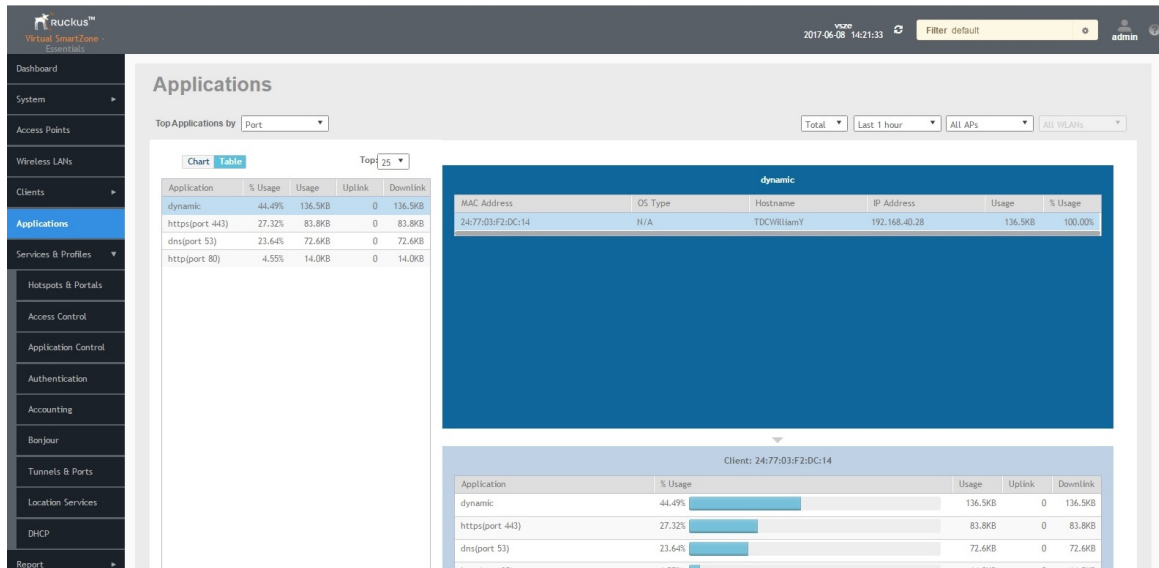


- Click on an application from the list on the left (either Chart or Table view) to view a list of the top clients using the selected application in the list on the right. The client list displays the client's MAC address, OS, hostname, IP address (IPv4 and IPv6), and application usage volume and percent of application traffic generated by the client. From the Total option, you can also filter the data based on the radio frequencies (2.4 GHz and 5 GHz).

Figure 54: Click an application to view top client details

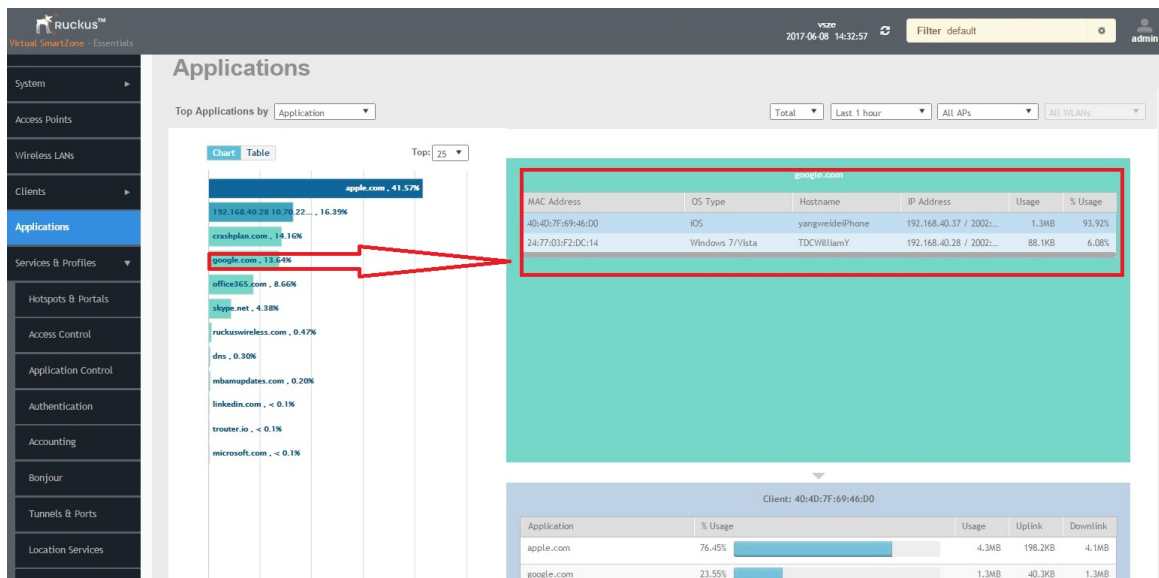

- Click on a client in the list on the right, and scroll down to the client specific details table on the bottom right to view the top 10 applications used by the client.

**Figure 55: Click a client to view application details**

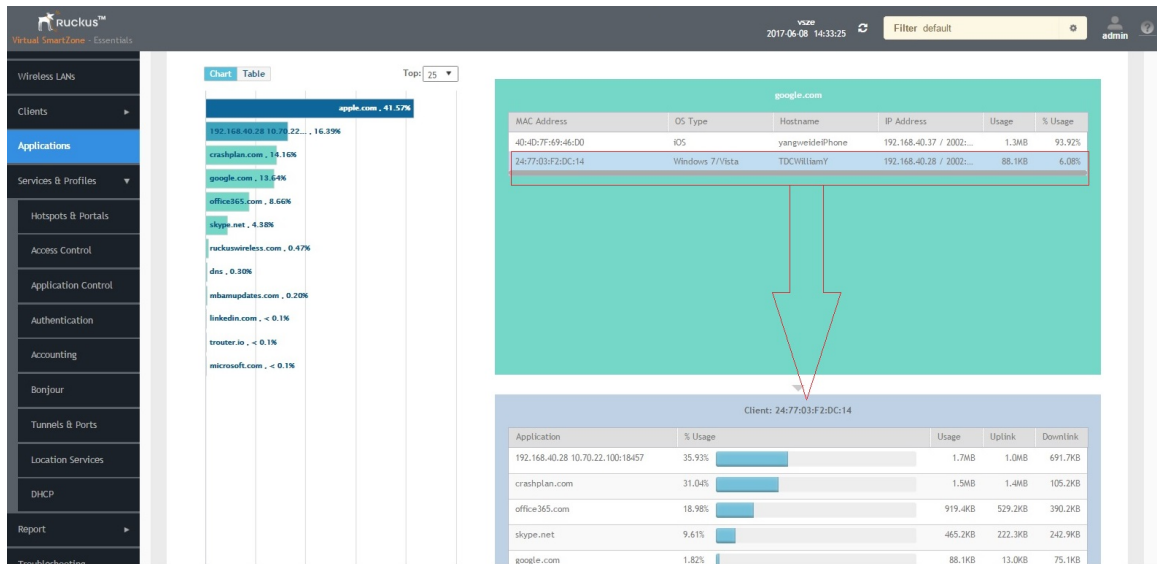

**NOTE:** You can configure application control policies (denial, rate limiting, and QoS) using the **Services and Profiles > Application Control** page. For more information, see [Configuring Application Controls](#) on page 202.

# Services and Profiles

# 7

In this chapter:

- [Working with Hotspots and Portals](#)
- [Configuring Access Control](#)
- [Configuring Application Controls](#)
- [Authentication](#)
- [Accounting](#)
- [Bonjour](#)
- [Working with Tunnels and Ports](#)
- [Managing Core Network Tunnels](#)
- [Location Services](#)
- [DHCP](#)
- [Managing Third Party Profiles](#)

The Services and Profiles menu provides options for monitoring and configuring services such as guest access, access controls, authentication servers, application recognition and control, Bonjour services, tunneling, location services and DHCP server configuration.

## Working with Hotspots and Portals

### Creating a Guest Access Portal


Using the controller's Guest Access features, you can provide visitors to your organization limited access to a guest WLAN with configurable guest policies. The following sections describe how to configure guest WLANs and access policies that control guest use of your network.

Each guest WLAN must be associated with a Guest Access service portal, which defines the behavior of the guest WLAN interface. Follow these steps to create a guest access service.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Guest Access** tab, and then select the zone for which you want to create the portal.
3. Click **Create**.

The **Create Guest Access Portal** page appears.

**Figure 56: Creating a Guest Access**

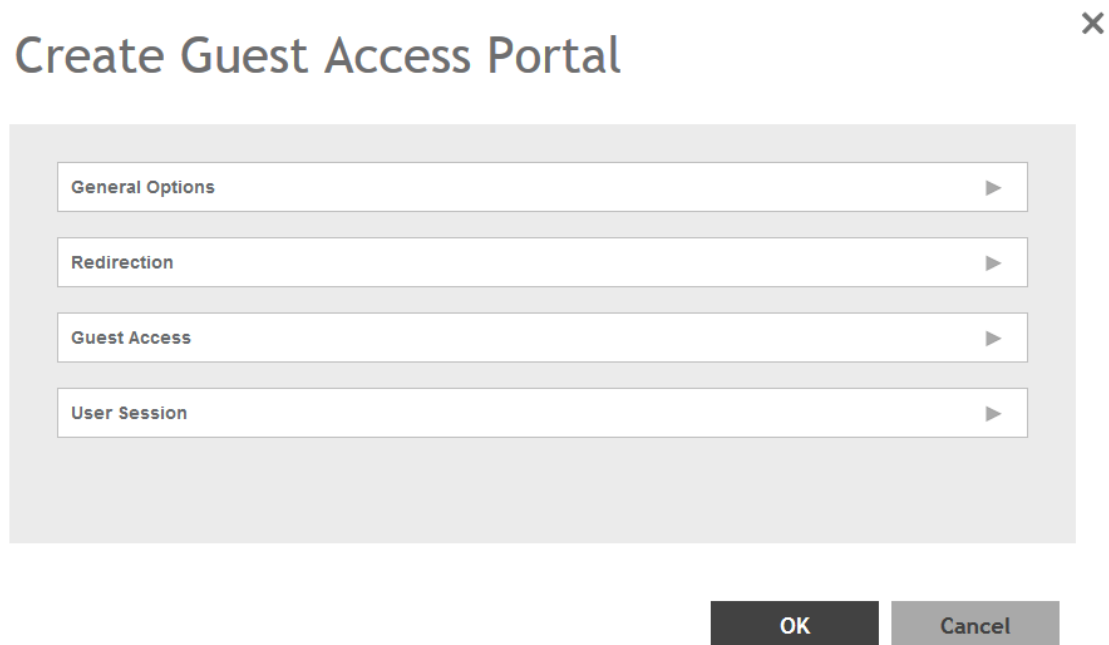

4. Configure the following:

1. General Options

- Portal Name: Type a name for the guest access service portal that you are creating.
- Portal Description: Type a short description of the guest access service portal.
- Language: Select the display language to use for the buttons on the guest access logon page.

2. Redirection: select where to redirect the user after successfully completing authentication.

- Redirect to the URL that the user intends to visit: Allows the guest user to continue to their destination without redirection.
- Redirect to the following URL: Redirect the user to a specified web page (entered into the text box) prior to forwarding them to their destination. When guest users land on this page, they are shown the expiration time for their guest pass.

3. Guest Access

- Guest Pass SMS Gateway: You can deliver the guest pass to the user using Short Message Service (SMS). But first you need to configure an SMS server. If you previously configured an SMS server, you can select it here or you can select **Disable**.
- Terms and Conditions: To require users to read and accept your terms and conditions prior to use, **Show Terms and Conditions** check box. The box below, Terms and Conditions which contains the default Terms of Use text, becomes editable. Edit the text or leave it unchanged to use the default text.



- **Web Portal Logo:** By default, the guest hotspot logon page displays the Ruckus Wireless logo. To use your own logo, click the **Browse** button, select your logo Web Portal Logo (recommended size is 138 x 40 pixels, maximum file size is 20KB), and then click **Open**.
- **Web Portal Title:** Type your own guest hotspot welcome text or accept the default welcome text (Welcome to the Guest Access login page).

#### 4. User Session

- **Session Timeout:** Specify a time limit after which users will be disconnected and required to log on again.
- **Grace Period:** Set the time period during which clients will not need to re-authenticate after getting disconnected from the hotspot. Enter a number (in minutes) between 1 and 14399.

#### 5. Click **OK**.

You have completed creating a guest access service.

**NOTE:** You can also edit, clone and delete a guest access portal by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Guest Access** tab.

## Working with Hotspot (WISPr) Services

A hotspot is a venue or area that provides Internet access to devices with wireless networking capability such as notebooks and smart phones.

Hotspots are commonly available in public venues such as hotels, airports, coffee shops and shopping malls. Configure a traditional (WISPr 1.0) hotspot service to provide public access to users via its WLANs. In addition to the controller and its managed APs, you will need the following to deploy a hotspot:

**Captive Portal:** A special web page, typically a login page, to which users that have associated with your hotspot will be redirected for authentication purposes. Users will need to enter a valid user name and password before they are allowed access to the Internet through the hotspot.

**RADIUS Server:** A Remote Authentication Dial-In User Service (RADIUS) server through which users can authenticate.

For installation and configuration instructions for the captive portal and RADIUS server software, refer to the documentation that was provided with them. After completing the steps below, you will need to edit the WLAN(s) for which you want to enable Hotspot service. The controller supports up to 32 WISPr hotspot service entries, each of which can be assigned to multiple WLANs.

### Creating a Hotspot (WISPr) Portal

Define the basic settings that you need to configure to create a hotspot service.

Before creating a hotspot, you need to create a user defined interface.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Hotspot (WISPr)** tab, and then select the zone for which you want to create the portal.

3. Click **Create**.

The **Create Hotspot (WISPr) Portal** page appears.

**Figure 57: Creating a Hotspot (WISPr) Portal**

The screenshot shows the 'Create Hotspot Portal' configuration window. It features a title bar with a close button (X) and a 'Create Hotspot Portal' title. The main content area is divided into several sections: 'General Options' (with a right arrow), 'Redirection' (with a dropdown arrow), 'Smart Client Support' (with radio buttons for None, Enable, and Only Smart Client Allowed), 'Logon URL' (with radio buttons for Internal and External), 'Redirect unauthenticated user to the URL for authentication:' (with a text input field), 'Redirected MAC Format:' (with a dropdown menu showing AA:BB:CC:DD:EE:FF), 'Start Page:' (with radio buttons for 'Redirect to the URL that user intends to visit.' and 'Redirect to the following URL:'), 'HTTPS Redirect:' (with a checked checkbox and text 'If enabled, the AP will try to redirect HTTPS requests to the hotspot portal'), and 'User Session' (with a dropdown arrow). At the bottom right are 'OK' and 'Cancel' buttons.

4. Configure the following:

1. General Options

- Portal Name: Type a name for the hotspot service portal that you are creating.
- Portal Description: Type a short description of the hotspot service portal.

2. Redirection: select where to redirect the user after successfully completing authentication.

- Smart Client Support: select one of the following
  - None: Select this option to disable Smart Client support on the hotspot service.
  - Enable: Selection this option to enable Smart Client support.
  - Only Smart Client Allowed: Select this option to allow only Smart Clients to connect to the hotspot service.
- Logon URL: select one of the following
  - Internal: Type the internal URL of the subscriber portal (the page where hotspot users can log in to access the service).
  - External: Type the external URL of the subscriber portal.
- Redirect MAC Format: Type the MAC address to which redirection must be done.
- Start Page: select one of the following

- Redirect to the URL that the user intends to visit: You could redirect users to the page that they want to visit.
- Redirect to the following URL: You could set a different page where users will be redirected (for example, your company website).
- HTTPS Redirect: Enable this option if you want the AP to redirect HTTPS requests to the Hotspot portal.

### 3. User Session

- Session Timeout: Set a time limit (in minutes) after which users will be disconnected from the hotspot service and will be required to log on again.
- Grace Period: Set the time period (in minutes) during which disconnected users are allowed access to the hotspot service without having to log on again.

### 4. Location Information

- Location ID: Type the ISO and ITU country and area code that the AP includes in accounting and authentication requests. The required code includes:
    - isocc (ISO-country-code): The ISO country code that the AP includes in RADIUS authentication and accounting requests.
    - cc (country-code): The ITU country code that the AP includes in RADIUS authentication and accounting requests.
    - ac (area-code): The ITU area code that the AP includes in RADIUS authentication and accounting requests.
    - network: The following is an example of what the Location ID entry should look like: `isocc=us,cc=1,ac=408,network=RuckusWireless`
  - Location Name: Type the name of the location of the hotspot service.
5. Walled garden: A walled garden is a limited environment to which an unauthenticated user is given access for the purpose of setting up an account.

Click **Add** to add a user to walled garden, to provide access.

Click **Import CSV** to import the CSV file with user information.

### 5. Click **OK**.

You have completed creating a Hotspot (WISPr) service portal.

**NOTE:** You can also edit, clone and delete a Hotspot (WISPr) service portal by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Hotspot (WISPr)** tab.

## Creating a Web Authentication Portal


Web authentication (also known as a “captive portal”) redirects users to a logon web page the first time they connect to this WLAN, and requires them to log on before granting access to use the WLAN.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Web Auth** tab, and then select the zone for which you want to create the portal.

3. Click **Create**.

The **Create Web Authentication Portal** page appears.

**Figure 58: Creating a Web Authentication**

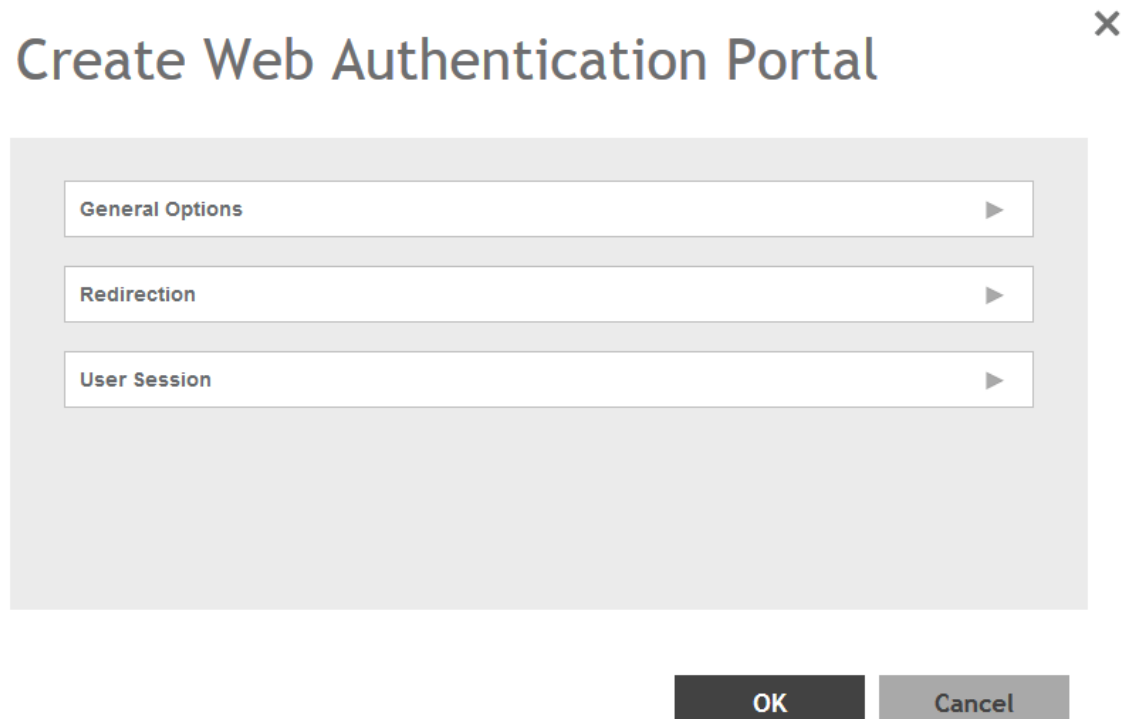

4. Configure the following:

1. General Options

- Portal Name: Type a name for the hotspot service portal that you are creating.
- Portal Description: Type a short description of the hotspot service portal.
- Language: Select the display language that you want to use on the web authentication portal.

2. Redirection: select where to redirect the user after successfully completing authentication.

- Start Page: select one of the following
  - Redirect to the URL that the user intends to visit: Allows the guest user to continue to their destination without redirection.
  - Redirect to the following URL: Redirect the user to a specified web page (entered into the text box) prior to forwarding them to their destination. When guest users land on this page, they are shown the expiration time for their guest pass.

3. User Session

- Session Timeout: Set a time limit (in minutes) after which users will be disconnected from the hotspot service and will be required to log on again.
- Grace Period: Set the time period (in minutes) during which disconnected users are allowed access to the hotspot service without having to log on again.

5. Click **OK**.

You have completed creating a Web Auth service portal.

**NOTE:** You can also edit, clone and delete a Web Auth service portal by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Web Auth** tab.

## Creating a WeChat Portal

WeChat is a mobile app from Tenecent that enables its users to call and send text messages to one another. If you have WeChat users on the network and you want your WLANs to support WeChat services, you can create a WeChat portal that WeChat users can use.

A WeChat portal defines the third party authentication server, also known as the equipment service provider (ESP) server, to which the controller will forward all WeChat authentication requests from wireless devices that are associated with controller-managed APs. In turn, the third party authentication server will forward these authentication requests to the WeChat server.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **WeChat** tab, and then select the zone for which you want to create the portal.
3. Click **Create**.

The **Create WeChat Portal** page appears.

**Figure 59: Creating a WeChat Portal**

The screenshot shows a configuration window titled "Create WeChat Portal" with a close button (X) in the top right corner. The window contains four expandable sections, each with a right-pointing arrow:

- General Options
- Portal Settings
- Whitelist
- DNAT Port Mapping

At the bottom right of the window are two buttons: "OK" and "Cancel".

4. Configure the following:

1. General Options

- Name: Type a name for the portal that you are creating.
- Description: Type a short description of the portal.

2. Portal Settings: configure the following

- Authentication URL: Type the authentication interface URL on the third party authentication server. When a managed AP receives a WeChat logon request from a client device, it will send the request to this authentication URL and get the authorization result.
  - DNAT Destination: Type the DNAT destination server address to which the controller will forward HTTP requests from unauthenticated client devices. The DNAT destination server and the authentication server (above) may or may not be the same server.
  - Grace Period: Type the number of minutes during which disconnected users who were recently connected will be allowed to reconnect to the portal without needing to re-authenticate. The default grace period is 60 minutes (range is between 1 and 14399 minutes).
  - Blacklist: Type network destinations that the controller will automatically block associated wireless clients from accessing. Use a comma to separate multiple entries.
3. Whitelist: Type network destinations that the controller will automatically allow associated wireless clients to access. You can add a single entry or multiple entries.

To add a single entry, type the entry in **Wall Garden Entry**, and then click **Add**. The entry you added appears in the table below. To add multiple entries, in a comma-separated value (CSV) file, type all the network destinations that you want to add to the whitelist, and then save the CSV file. In the Whitelist section, click **Import CSV**, and then select the CSV file you created. Click Open. The entries in the CSV file are added to the whitelist.

4. DNAT Port Mapping: specify at least one pair of source-to-destination port mapping. To add a port mapping, type the source and destination ports in the boxes provided, and then click **Add**. The AP will use this information to drop or forward HTTP requests from associated clients to specified ports on the DNAT server. For example, if an HTTP request from a wireless client does not originate from the specified source (from) port, the AP will discard the HTTP request. By default, a port mapping of 80-80 (source-destination) exists.

5. Click **OK**.

You have completed creating a WeChat portal.

**NOTE:** You can also edit, clone and delete a WeChat service portal by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **WeChat** tab.

## Working with Hotspot 2.0 Services

You must be aware of Hotspot 2.0 - a Wi-Fi Alliance specification that allows for automated roaming between service provider access points when both the client and access gateway support the newer protocol.

Hotspot 2.0 (also known as Passpoint™, the trademark name of the Wi-Fi Alliance certification) aims to improve the experience of mobile users when selecting and joining a Wi-Fi hotspot by providing information to the station prior to association.

This information can then be used by the client to automatically select an appropriate network based on the services provided and the conditions under which the user can access them. In this way, rather than being presented with a list of largely meaningless SSIDs to choose from, the Hotspot 2.0 client can automatically select and authenticate to an SSID based on the client's

configuration and services offered, or allow the user to manually select an SSID for which the user has login credentials.

The controller's Hotspot 2.0 implementation complies with the IEEE 802.11u standard and the Wi-Fi Alliance Hotspot 2.0 Technical Specification.

See the *Hotspot 2.0 Reference Guide for SmartZone* for information on configuring Hotspot 2.0 services, including:

- Working with Hotspot 2.0 operator profiles
- Working with Hotspot 2.0 identity providers
- Creating a Hotspot 2.0 online signup portal

### Creating a Hotspot 2.0 WLAN Profile

You can assign a Hotspot 2.0 service to a Hotspot 2.0 WLAN, for which you must create a Hotspot 2.0 WLAN profile.

Follow these steps to create a Hotspot 2.0 WLAN profile.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Hotspot 2.0** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Hotspot 2.0 WLAN Profile** page appears.

**Figure 60: Creating a Hotspot 2.0 WLAN Profile**

**Create Hotspot 2.0 WLAN Profile**

Name:

Description:

Operator: No data available

Identity Providers:

Identity Provider	Online Signup Service	Default
<input type="text"/>		

You can configure Onboarding SSID when you add an identity provider which enable Online Signup & Provisioning

Advanced Options

4. Configure the following:

1. Name: Enter a name for this WLAN profile. This name identifies the WLAN profile when assigning an HS2.0 service to a HS2.0 WLAN.
2. Description: Enter a description for the WLAN profile.
3. Operator: Select the operator profile. This name identifies the service operator when assigning an HS2.0 service to a HS2.0 WLAN.

You can also click **Create** to create a Hotspot 2.0 WiFi operator. See [Creating a Hotspot 2.0 WiFi Operator Profile](#) on page 184 for more information.

4. Identity Provider: Choose one or more identity providers. Choose the identity provider. You can configure an OSU SSID when you add an Identity Provider which enables OSU and provisioning. Since there may be more than one identity provider per Hotspot 2.0 profiles having its own authentication profile, the No Match and Unspecified mapping could be duplicated. To avoid duplication, the default identity provider is taken as the correct configuration for No Match and Unspecified mapping. OSUSSID can be OSEN or OPEN [Guest].

You can also click **Create** to create a Hotspot 2.0 WiFi operator. See [Creating a Hotspot 2.0 Identity Provider](#) on page 185 for more information.

5. Advanced Options:

- Internet Options: Specify if this HS2.0 network provides connectivity to the Internet.
- Access Network Type: Access network type (private, free public, chargeable public, etc.), as defined in IEEE802.11u.
- IPv4 Address: Select IPv4 address type availability information, as defined in IEEE802.11u
- IPv6 Address: Select IPv6 address type availability information, as defined in IEEE802.11u
- Connection Capabilities: Provides information on the connection status within the hotspot of the most commonly used communications protocols and ports.

Provide the **Protocol Name**, **Protocol Number**, **Port Number** and **Status** to **Add** a new connection.

- Custom Connection Capabilities: Allows addition of custom connection capability rules. Up to 21 custom rules can be created.

Provide the **Protocol Name**, **Protocol Number**, **Port Number** and **Status** to **Add** a new connection.

5. Click **OK**.

You have completed creating a Hotspot 2.0 WLAN profile.

**NOTE:** You can also edit, clone and delete a Hotspot 2.0 WLAN profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **WLAN Profile** section in the **Hotspot 2.0** tab.

### Creating a Hotspot 2.0 WiFi Operator Profile

An operator profile defines all the properties pertaining to an operator while a service profile defines the properties related to a service provider. If a WLAN is configured to provide Hotspot 2.0 service, it must be linked exactly like a Hotspot 2.0 operator profile.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Hotspot 2.0** tab, and then select the device for which you want to create the profile.



3. Click **Create**.

The **Creating Hotspot 2.0 WiFi Operator Profile** page appears.

**Figure 61: Creating a hotspot 2.0 WiFi operator profile**

The screenshot shows a web form titled "Create Hotspot 2.0 Wi-Fi Operator Profile" with a close button (X) in the top right corner. The form contains several sections:

- Name:** A text input field.
- Description:** A text input field.
- Domain Names:** A section with a "Domain Name" input field, an "+ Add" button, an "X Cancel" button, and a "Delete" button. Below this is a table with a "Domain Name" column and an upward-pointing arrow.
- Signup Security:** A checkbox labeled "Support Anonymous Authentication (OSEN)".
- Certificate:** A dropdown menu showing "No data available" and a "+ Create" button.
- Friendly Names:** A section with a "Language" dropdown menu (set to "English"), a "Name" input field, and "+ Add", "X Cancel", and "Delete" buttons. Below this is a table with "Language" and "Name" columns.

At the bottom right of the form are two large buttons: "Create" and "Cancel".

4. Configure the following:

1. **Name:** Enter a name for this Wi-Fi operator profile.
2. **Description:** Enter a description for the venue profile.
3. **Domain Names:** HS2.0 operator's domain name is a mandatory field, which specifies the operator's domain name. Hotspot 2.0 AP broadcasts the domain name to indicate the home Wi-Fi providers.
4. **Signup Security:** This is an optional field and is disabled by default. Enabling would mean that operator supports secure onboarding (OSEN).
5. **Certificate:** Select the certificate for the operator - AAA. This can be the same certificate as the one used with OSU service.
6. **Friendly Names:** HS2.0 operator's friendly name is a mandatory field. Operator's friendly name is displayed on mobile client's screen. It is also used for operator verification during secure onboarding (OSEN). Select the display language from the drop down list.

5. Click **OK**.

### Creating a Hotspot 2.0 Identity Provider

The Hotspot 2.0 Identity provider provides authentication, accounting and online sign-up service. There can be one or more identity providers per Hotspot 2.0 access WLAN.

To configure the HS 2.0 identity provider, you must configure the following:

#### **Network Identifier**

Follow these steps to create a Hotspot 2.0 Identity Provider - Network Identifier.

1. Configure the following:

1. Name: Enter a name for this network identifier profile.
2. Description: Enter a description for the network identifier profile.
3. PLMNs: Each record contains MCC and MNC.

MCC: Set the correct country code for the geographical location. This is required when the controller sends MAP authentication information. Type the mobile country code digits. Decimal digit strings with maximum length of 3 and minimum length of 2.

MNC: Set the mobile network code based on the geographical location. This is required when controller sends MAP authentication information. Type the mobile network code digits. Decimal digit strings with maximum length of 3 and minimum length of 2.

4. Realms: List of NAI realms corresponding to service providers or other entities whose networks or services are accessible via this AP. Up to 16 NAI realm entries can be created. Each NAI realm entry can contain up to four EAP methods. You can add a realm by providing the realm **Name**, **Encoding technique** (choose between RFC-4282 and UTF-8) and **EAP Methods**.
5. Home OIs: Organization Identifier (OI) is a unique value assigned to the organization. User can configure a maximum of 12 OI values and can adjust the order since the AP takes only 3 OIs in the beacon.

2. Click **Next**.

You have completed creating a Hotspot 2.0 Identity Provider - Network Identifier.

**Online Signup and Provisioning**

Follow these steps to create a Hotspot 2.0 Identity Provider - Online Signup and Provisioning.

1. Configure the following:

1. Provisioning Options

- Provisioning Service: The provisioning service is responsible for any subscription provisioning process in which messages are communicated between the UE and the SZ resulting in a PPS-MO provisioned into the UE. The provisioning supports both SOAP-XML and OMA-DM as communication protocols for the process based on the initial request coming from the UE. The provisioning service supports sign-up; remediation and policy update flows where the UE is provisioned with a full PPS -MO or only with internal node/s of the PPS-MO. Administrator can only set External Internal Provisioning Services. , where the administrator is required to fill the external OSU server URL.
- Provisioning Protocol: Select communication protocols OMA-DM or SOAP-XML.

2. Online Signup Options

- OSU NAI Realm: This configuration is only for External Provision Service. In case of Internal Provisioning Service, the NAI realm should be configured per authentication service, which is available during on-boarding.
- Common Language Icon: This is the default icon presented in the device for this identity provider in case the device does not find any match for other icons per language in the table.

- OSU Service Description: This table configures the friendly name, description and icon per language. This information is presented on the device when it receives ANQP message which includes OSU providers. Friendly names, which are required to be part of the OSU certificate is automatically populated in this table. In case description is also included in the OSU certificate it is automatically populated into the table. Administrators are required to set the matched icon per language as included in the OSU certificate.
- Whitelisted Domain: Add the domain names of the External Portal domain.

2. Click **Next**.

You have completed creating a Hotspot 2.0 Identity Provider - Online Signup and Provisioning.  
**Authentication**

Follow these steps to create a Hotspot 2.0 Identity Provider - Authentication.

1. Configure the following:

1. Realm: configure the realm mapping to the authentication service.
2. Auth Service: map the realm to an external RADIUS server which should be pre-configured.
3. Dynamic VLAN ID: type the VLAN ID.

2. Click **Next**.

You have completed creating a Hotspot 2.0 Identity Provider - Authentication.

**Accounting**

Follow these steps to create a Hotspot 2.0 Identity Provider - Accounting.

1. Configure the following:

1. Realm: if the authentication's realm is set as remote credential type, administrator should set this realm here to the customer's external accounting server.
2. Accounting Service: select the accounting service.

2. Click **Next**.

You have completed creating a Hotspot 2.0 Identity Provider - Accounting.

**Review**

Review the configuration on the page before committing the changes to the server. Click **Create** to create the Hotspot 2.0 Identity Provider.

**Creating a Hotspot 2.0 Venue Profile**

The Hotspot 2.0 technology allows users to seamlessly roam between the provider's home Wi-Fi network and the visited Wi-Fi network in a different location. A Wi-Fi provider can partner with several roaming partners to provide Wi-Fi access to partner's subscribers. Public venues such as institutions, restaurants, and stadiums are considered roaming partners.

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **Hotspot 2.0** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Hotspot 2.0 Venue Profile** page appears.

**Figure 62: Creating a Hotspot 2.0 Venue Profile**

## Create Hotspot 2.0 Venue Profile

The screenshot shows a web form for creating a Hotspot 2.0 Venue Profile. It contains the following elements:

- Name:** A text input field.
- Description:** A text input field.
- Venue:** A dropdown menu with "Venue" selected.
- Venue Names:** A table with two columns: "Language" (dropdown, currently "English") and "Name" (text input). Below the table are buttons for "+ Add", "x Cancel", and a trash icon for "Delete".
- Venue Category:** Two dropdown menus: "Group" (currently "Unspecified") and "Type" (currently "Unspecified").
- Buttons:** "OK" and "Cancel" buttons at the bottom right.

#### 4. Configure the following:

1. **Name:** Enter a name for this venue profile. This name identifies the venue profile when assigning an HS2.0 service to a HS2.0 venue.
2. **Description:** Enter a description for the venue profile.
3. **Venue:**
  - **Venue Names:** Create a new venue name. Select the language and enter the venue name in that language.
  - **Venue Category:** Select venue group and venue type as defined in IEEE802.11u, Table 7.25m/n.
  - **WAN Metrics:** Provides information about the WAN link connecting an IEEE 802.11 access network and the Internet; includes uplink/downlink speed estimates

Select the operator profile. This name identifies the service operator when assigning an HS2.0 service to a HS2.0 WLAN.

#### 5. Click **OK**.

You have completed creating a Hotspot 2.0 WLAN profile.

**NOTE:** You can also edit, clone and delete a Hotspot 2.0 venue profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Venue Profile** section in the **Hotspot 2.0** tab.

## Creating a UA Blacklist Profile

The controller automatically blocks certain user agents (or software used by a user) from accessing hotspots provided by controller-managed APs. When the controller blocks any of these user

agents, an error message appears on the user device. You can add to or remove user agents from this blacklist.

Following are some of the blocked user agents:

- ZoneAlarm
- VCSoapClient
- XTier NetIdentity
- DivX Player
- Symantec LiveUpdate
- Windows Live Messenger
- StubInstaller
- windows-update-agent
- Windows Live Essentials
- Microsoft Dr. Watson for Windows (MSDW)
- Avast Antivirus Syncer
- Microsoft Background Intelligent Transfer Service (BITS)
- Google Update
- TrendMicro client
- Skype WISPr

1. Go to **Services & Profiles > Hotspots & Portals**.
2. Select the **UA Blacklist** tab, and then select the zone for which you want to create the portal.
3. Click **Create**.

The **Creating a UA Blacklist Profile** page appears.

**Figure 63: Creating a UA Blacklist Profile**

**Create UA Blacklist Profile** ×

\* Name:

\* User Agent Pattern:

\* [?] Error:

\* Error Message:

OK Cancel

4. Configure the following:
  1. Name: Type a name of the user agent.
  2. User Agent Pattern: Type the agent pattern.

3. Error: Specify the error message number.
4. Error Message: Specify the error message.
5. Click **Create**.

You have completed creating a UA Blacklist Profile

**NOTE:** You can also edit, clone and delete a UA blacklist profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **UA Blacklist** tab.

## Configuring Access Control

SmartZone's Access Control features provide a wide range of options to control access and utilization of the wireless network.

### Creating a User Traffic Profile

A User Traffic Profile (UTP) can be created to block or limit user traffic based on a number of factors, including Source IP address, Port, Destination IP address, Protocol, etc. Additionally, a UTP can be created to shape traffic according to a configurable Application Control Policy.

Once the UTP is created, it can be applied to any WLAN from the **Wireless LANs** page.

1. Go to **Services & Profiles > Access Control**.
2. Select the **User Traffic** tab, and then select the zone for which you want to create the profile.
3. Click **Create**. The **Create User Traffic Profile** page appears.

**Figure 64: Create User Traffic Profile**

**Create User Traffic Profile** X

Name:

Description:

Rate Limiting: Uplink  Enable  Mbps (0.1-200)

Downlink  Enable  Mbps (0.1-200)

Traffic Access Control List ▶

Application Recognition and Control ▶

**OK** **Cancel**

4. Configure the following:
  1. **Name:** Type a name for the user profile.
  2. **Description:** Type a short description for this profile.

3. **Rate Limiting:** Specify and apply rate limit values for the user profile to control the data rate. Select the **Enable** check-box to set the *Uplink* and *Downlink* rate limit values.
5. To create traffic control rules, click **Create** in the **Traffic Access Control List** section, and then configure Traffic Control Rules as required. For **Default Access**, select whether to **Allow** or **Block** access if no rule is matched. See [Creating a User Traffic Access Control Rule](#) on page 191 for more information.
6. In **Application Recognition and Control**, select an **Application Policy** from the list, or click **Create** to create a new policy.  
For more information, see [Configuring Application Controls](#) on page 202.
7. Click **OK** to save the User Traffic Profile.

You have completed creating a UTP. You can now assign this traffic profile to a WLAN from the **Wireless LANs** page.

**NOTE:** You can also edit, clone and delete a profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **User Traffic** tab.

### Creating a User Traffic Access Control Rule

User Traffic Profiles consist of multiple traffic control rules, which can be enforced in any order you prefer (click up or down arrows to rearrange rules).

To create a user traffic control rule:

1. Click **Create**. The **Create User Traffic Access Control Rule** page appears.

**Figure 65: Creating a User Traffic Access Control Rule**

## Create User Traffic Access Control Rule

The screenshot shows a configuration form for creating a User Traffic Access Control Rule. The fields are as follows:

- Description:** A text input field.
- Access:** A dropdown menu currently set to "Allow".
- Source IP:** A checked checkbox for "Subnet Network Address" followed by an input field, and a "Subnet Mask" input field.
- Source Port:** A checked checkbox for "Range" followed by two input fields separated by a hyphen.
- Destination IP:** A checked checkbox for "Subnet Network Address" followed by an input field, and a "Subnet Mask" input field.
- Destination Port:** A checked checkbox for "Range" followed by two input fields separated by a hyphen.
- Protocol:** A dropdown menu currently set to "No data available".
- Direction:** A text label that reads "Only upstream access control rule is supported".

At the bottom right of the form area, there are two buttons: "OK" and "Cancel".

2. Configure the following:

- **Description:** Type a short description for the user traffic rule.
- **Access:** Select Allow or Block depending on whether you want to set this rule as the default rule.

- **Source IP:** Specify the source IP address to which this rule will apply. To apply this rule to an IP address range, type the network address and the subnet mask. To apply this rule to a single IP, clear the **Subnet** check box, and then enter the IP address.
- **Source Port:** Specify the source port to which this rule will apply. To apply this rule to a port range, type the starting and ending port numbers in the two boxes. To apply this rule to a single port number, clear the **Range** check box, and then enter the port number.
- **Destination IP:** Specify the destination IP address to which this rule will apply. To apply this rule to an IP address range, type the network address and the subnet mask. To apply this rule to a single IP, clear the **Subnet** check box, and then enter the IP address.
- **Destination Port:** Specify the source port to which this rule will apply. To apply this rule to a port range, type the starting and ending port numbers in the two boxes. To apply this rule to a single port number, clear the **Range** check box, and then enter the port number.
- **Protocol:** Select the network protocol to which this rule will apply. Supported protocols include TCP, UDP, UDPLITE, ICMP (ICMPv4), ICMPV6, IGMP, ESP, AH, SCTP.

3. Click **OK** to save your changes.

### Creating OS Policy Service

You can control how devices installed with certain OS configurations can be connected to the network, and also control what they can be allowed to do within the network. Using the OS policy service, the system can identify the type of client attempting to connect, and perform control actions such as allow/block, rate limiting, and VLAN tagging based on the OS rule.

1. Go to **Services & Profiles > Access Control**.
2. Select the **OS Policy** tab, and then select the zone for which you want to create the policy.
3. Click **Create**.

The **Create OS Policy Service** page appears.

**Figure 66: Creating an OS Policy Service**

## Create OS Policy Service

General Options ▼

\* Name:

Description:

\* Default Access: Default access if no rule is matched:  Allow  Block

Rules ▼

Description	Device Type	Access	Uplink Rate Limit	Downlink Rate Limit	VLAN



4. Configure the following:

1. Name: Type a name for the OS policy.
2. Description: Type a short description for this OS policy.
3. Default Access: select either Allow or Block. This is the default action that the system will take if no rules are matched.
4. Rules: Define the OS Policy rules. For more information see, [Creating OS Policy Rules](#) on page 193
5. Click **OK**.

You have created the OS policy service.

**NOTE:** You can also edit, clone and delete a service by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **OS Policy** tab.

### Creating OS Policy Rules

You can create rules for every OS policy service that you create.

1. Click **Create**. The **Create OS Policy Rule** page appears.

**Figure 67: Create OS Policy Rule**

**Create OS Policy Rule** >

\* Description:

\* Action:

\* Device Type:

Rate Limiting: Uplink  Enable  Mbps (0.1-200)

Downlink  Enable  Mbps (0.1-200)

VLAN:

**OK** **Cancel**

2. Configure the following:

- Description: Type a short description for the rule.
- Access: Select Allow or Block. This is the action that the system will take if the client matches any of the attributes in the rule.
- Device Type: Select from any of the supported OS types.
- Rate Limiting: Specify and apply rate limit values for the device.

Select the **Enable** check-box to set the *Uplink* and *Downlink* rate limit values.

- VLAN: Segment this client type into a specified VLAN (1~4094; if no value is entered, this policy does not impact device VLAN assignment).
- Click **OK**.

You have created the OS policy rule.

## VLAN Pooling

When Wi-Fi is deployed in a high density environment such as a stadium or a university campus, the number of IP addresses required for client devices can easily run into the thousands. Placing thousands of clients into a single large subnet or VLAN can result in degraded performance due to factors like broadcast and multicast traffic. VLAN pooling is adopted to address this problem.

VLAN pooling allows administrators to deploy a pool of multiple VLANs to which clients are assigned, thereby automatically segmenting large groups of clients into multiple smaller subgroups, even when connected to the same SSID. As the client device joins the WLAN, the VLAN is assigned to one of the VLANs in the pool based on a hash of the client's MAC address. To use the VLAN pooling feature, you first need to create a VLAN pooling profile, and then you can assign the profile to a specific WLAN or override the VLAN settings of a WLAN group.

### Creating a VLAN Pooling Profile

Each VLAN pool can contain up to 16 VLANs, and a maximum of 64 VLAN pools can be created. Each WLAN can be configured with a single VLAN pool.

1. Go to **Services & Profiles > Access Control**.
2. Select the **VLAN Pooling** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create VLAN Pooling** page appears.

**Figure 68: Creating a VLAN Pooling Profile**

# Create VLAN Pooling Profile ✕

\* Name:

Description:

\* [?] VLANs:

\* Option:  MAC Hash

**OK** **Cancel**

#### 4. Configure the following:

1. Name: Type a name for the VLAN profile.
2. Description: Type a short description for this profile.
3. VLANs: Type the VLAN IDs to be assigned to this pool. VLAN IDs can be separated by hyphens, commas, or a combination (for example, 7-10, 13, 17, 20-28).
4. Click **OK**.

You have created the VLAN Pooling profile.

**NOTE:** You can also edit, clone and delete a profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **VLAN Pooling** tab.

## Create Precedence Profile

Clients are assigned to VLANs by various methods, and there is an order of precedence by which VLANs are assigned. The assignment is commonly done from lowest to highest precedence. You can also set precedence for Rate limiting attribute of the profile.

**NOTE:** Each WLAN has a default precedence.

1. Go to **Services & Profiles > Access Control**.
2. Select the **Precedence** tab, and then select the zone for which you want to create the policy.
3. Click **Create**.

The **Create Precedence Profile** page appears.

**Figure 69: Creating a Create Precedence Profile**

## Create Precedence Profile

\* Name:

VLAN Precedence
▼

↑ Up
↓ Down

Priority	Description
1	AAA
2	DEVICE
3	WLAN

OK
Cancel

4. Configure the following:

1. Name: Type the name of the profile.
2. VLAN Precedence: Use the Up and Down options to set the VLAN priority.
3. Rate Limiting Precedence: Use the Up and Down options to set the Rate Limit priority.

**NOTE:** When SSID Rate Limiting (restricts total usage on WLAN) is enabled, per-user rate limiting is disabled.

4. Click **OK**.

You have created the Precedence profile.

**NOTE:** You can also edit, clone and delete a profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Precedence** tab.

### Creating an L2 Access Control Service

Another method to control access to the network is by defining Layer 2/MAC address access control lists (ACLs), which can then be applied to one or more WLANs or WLAN groups. L2

ACLs are either allow-only or deny-only; that is, an ACL can be set up to allow only specified clients or to deny only specified clients. MAC addresses that are in the deny list are blocked at the AP.

1. Go to **Services & Profiles > Access Control**.
2. Select the **L2 Access Control** tab, and then select the zone for which you want to create the access control service.
3. Click **Create**.

The **Create L2 Access Control Service** page appears.

**Figure 70: Creating an L2 Access Control Service**

## Create L2 Access Control Service

The screenshot shows the 'Create L2 Access Control Service' configuration page. It features a 'General Options' section with a 'Name' field, a 'Description' field, and a 'Restriction' section with two radio buttons: 'Allow only the stations listed below' (selected) and 'Block only the stations listed below'. Below this is a 'Rules' section with a 'MAC Address' field, an 'Add' button, an 'Import CSV' button, a 'Cancel' button, and a 'Delete' button. At the bottom right of the form are two large buttons: 'OK' and 'Cancel'.

4. Configure the following:

1. General Options:

- Name: Type a name for this policy.
- Description: Type a short description for this policy.
- Restriction: Select the default action that the controller will take if no rules are matched. Available options include: **Allow only the stations listed below** or **Block only the stations listed below**.

2. Rules:

- MAC Address: Type the MAC address to which this L2 access policy applies.

3. Click **OK**.

You have created an L2 access policy.

**NOTE:** You can also edit, clone and delete a policy by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **L2 Access Control** tab.


## Creating Blocked Clients

You can deny access to the network for certain clients by using the block client access control feature.

1. Go to **Services & Profiles > Access Control**.
2. Select the **Blocked Client** tab, and then select the zone for which you want to block the client access.
3. Click **Create**.

The **Create Blocked Client** page appears.

**Figure 71: Create Blocked Client**

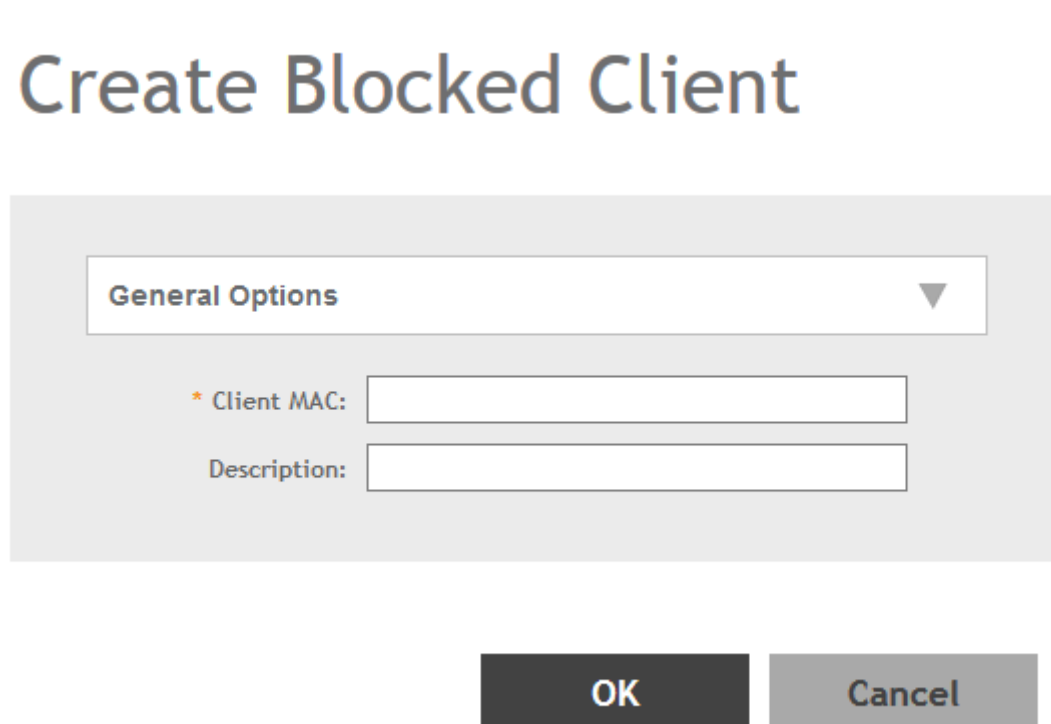

The screenshot shows a dialog box titled "Create Blocked Client" with a close button (X) in the top right corner. The dialog contains a "General Options" dropdown menu. Below the dropdown are two input fields: "\* Client MAC:" and "Description:". At the bottom of the dialog are two buttons: "OK" and "Cancel".

4. Configure the following:
  1. **Client MAC:** Type MAC address of the client that you want to block.
  2. **Description:** Type a short description for client.
  3. Click **OK**.

You have created the blocked client list.

**NOTE:** You can also edit, clone and delete a list by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Blocked Client** tab.

## Creating a Client Isolation Whitelist

This feature allows the administrator to manually specify an approved list of wired destinations that may be reachable by wireless clients.

**NOTE:** The whitelist only applies to destinations that are on the wired network, and it will not work on wireless destinations.

1. Go to **Services & Profiles > Access Control**.
2. Select the **Client Isolation Whitelist** tab, and then select the zone for which you want to specify the list of approved clients.
3. Click **Create**.

The **Create Client Isolation Whitelist** page appears.

**Figure 72: Creating a Client Isolation Whitelist**

# Create Client Isolation Whitelist

\* Name:

Description:

Auto Whitelist:  APs will auto-discovery gateway devices and add them to the isolation whitelist.

Client Entries

MAC	IP Address	Description
<input type="text"/>		

4. Configure the following:

1. Name: Type a name for the client.
2. Description: Type a short description about the client.

3. Auto Whitelist: Select this check-box if you want the AP to automatically scan for devices and include them to the whitelist.
4. Client Entries: To add the clients to the list, click **Create** and provide client information such as MAC address (mandatory), IP address and Description.
5. Click **OK**.

You have created the list of whitelisted clients that can access the network.

**NOTE:** You can also edit, clone and delete the list by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Client Isolation Whitelist** tab.

## Creating Time Schedules

You can control client access to the network by providing a time schedule within which the device can access the network.

1. Go to **Services & Profiles > Access Control**.
2. Select the **Time Schedule** tab, and then select the zone for which you want to create the schedule.
3. Click **Create**.

The **Create Time Schedule Table** page appears.

**Figure 73: Creating a Time Schedule Table**

## Create Time Schedules Table

\* Schedule Name:

Schedule Description:

	AM											PM											
Time	1	2	3	4	5	6	7	8	9	10	11	12	1	2	3	4	5	6	7	8	9	10	11
Sun																							
Mon																							

4. Configure the following:
  1. Schedule Name: Type a name for the schedule you want to create.
  2. Schedule Description: Type a short description for this schedule.
  3. Draw the schedule table.
  4. Click **OK**.

You have created the schedule.

**NOTE:** You can also edit, clone and delete the schedule by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Time Schedule** tab.



## Creating a DNS Server Profile

By creating a DNS server profile, you can specify the primary and secondary address of the DNS server that will be used to transmit data packets to the DNS server.

1. Go to **Services & Profiles > Access Control**.
2. Select the **DNS Servers** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create DNS Server Profile** page appears.

**Figure 74: Creating a DNS Server Profile**

# Create DNS Server Profile

\* Name:

Description:

\* Primary DNS IP:

Secondary DNS IP:

**OK** **Cancel**

4. Configure the following:
  1. Name: Type a name for the DNS server profile.
  2. Description: Type a short description for profile.
  3. Primary DNS IP: Type the primary DNS IP address.
  4. Secondary DNS IP: Type the secondary DNS IP address.
  5. Click **OK**.

You have created the DNS Server Profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **DNS Servers** tab.

## Configuring Application Controls

Using the **Application Control** screen, you can identify, control, and monitor applications that are running on wireless clients associated with managed APs, and you can also apply filtering policies to prevent users from accessing certain applications.

Additionally, you can create your own user-defined applications, import an updated application signature package, and configure rate limiting and QoS traffic shaping policies based on system-defined or user-defined applications.

### Creating an Application Control Policy

You can create an application policy to limit traffic by application, to classify traffic into priority queues using QoS traffic shaping rules, or to completely block access to an application.

To create an application policy:

1. Go to **Services & Profiles > Application Control**.
2. Select the **Application Policy** tab.
3. Click **Create**.

The **Create Application Policy** page appears.

**Figure 75: Creating an Application Policy**

The screenshot shows a 'Create Application Policy' dialog box. It features a title bar with a close button (X). The main content area is divided into two sections: 'General Options' and 'Rules'. The 'General Options' section includes a dropdown menu, a 'Name' field, and a 'Description' field. The 'Rules' section includes a dropdown menu, '+ Create' and 'Delete' buttons, and a table with columns '#', 'Rule Type', and 'Content'. At the bottom of the dialog are 'OK' and 'Cancel' buttons.

4. Enter a **Name** and optionally a **Description** for the policy.
5. In **Rules**, click **Create** to create a new rule. Each application policy can contain up to 32 rules.

The **Create Application Policy Rule** page appears.

**Figure 76: Creating an Application Policy Rule**

×

Create Application Policy Rule

\* Rule Type: Denial Rules

\* Application Type: System Defined

\* Application: Instant messaging MSN

OK Cancel

6. Configure the following:

- **Rule Type:** Enter the type of rule from options: Denial Rules, QoS and Rate Limiting.
- **Application Type:** Select whether the application is user defined or system defined.
- **Application:** Select the application for which you want to create a policy rule.

7. Click **OK** to save the rule.

8. Click **OK** to save the application policy.

You have created an application policy.

Next, you can continue to apply the application control policy to user traffic, as described in [Implementing an Application Control Policy](#) on page 203.

## Implementing an Application Control Policy

Deploying an application control policy involves configuring a User Traffic Profile (UTP) with the policy, and then applying that profile to a WLAN.

To implement an Application Control Policy:

1. Go to **Services and Profiles > Access Control > User Traffic**.
2. Click **Create**. The **Create User Traffic Profile** form appears.
3. Enter a **Name**, and optionally a **Description** for the UTP.
4. In the **Application Recognition and Control** section, select an **Application Policy** from the drop-down list. Alternatively, click **Create** to create a new policy.
5. Click **OK** to save the User Traffic Profile.
6. Go to **Wireless LANs**.
7. Locate the WLAN for which you want to apply the application policy, and select it from the list.
8. Click **Configure**. The **Edit WLAN [WLAN Name]** form appears.
9. Expand the **Advanced Options** section, and select a **User Traffic Profile** you created from the drop-down list. Alternatively, click **Create** to create a new UTP.
10. Click **OK** to save your WLAN changes.

**Figure 77: Create a User Traffic Profile (UTP)**

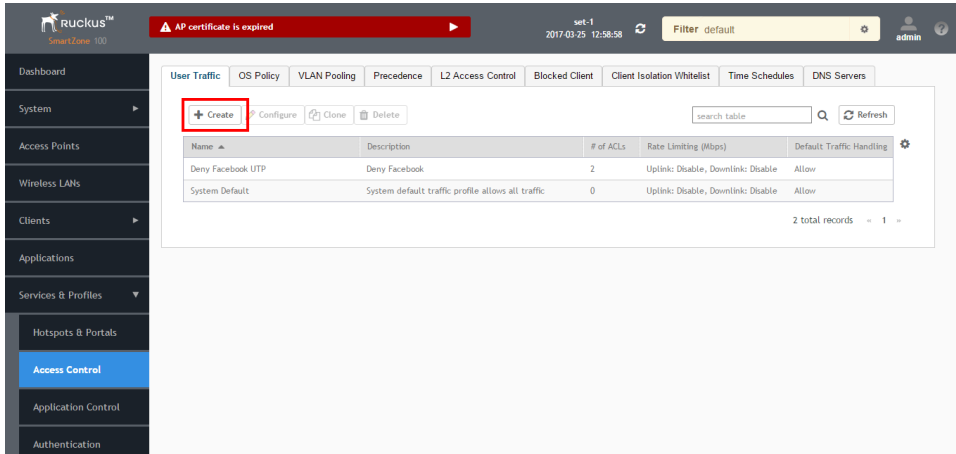


Figure 78: Select an Application Policy to apply to this UTP


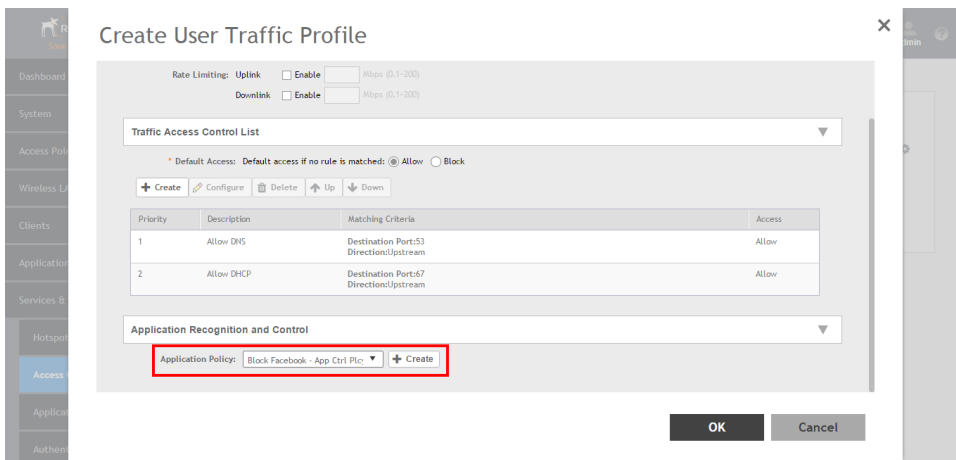


Figure 79: Apply the UTP to a WLAN

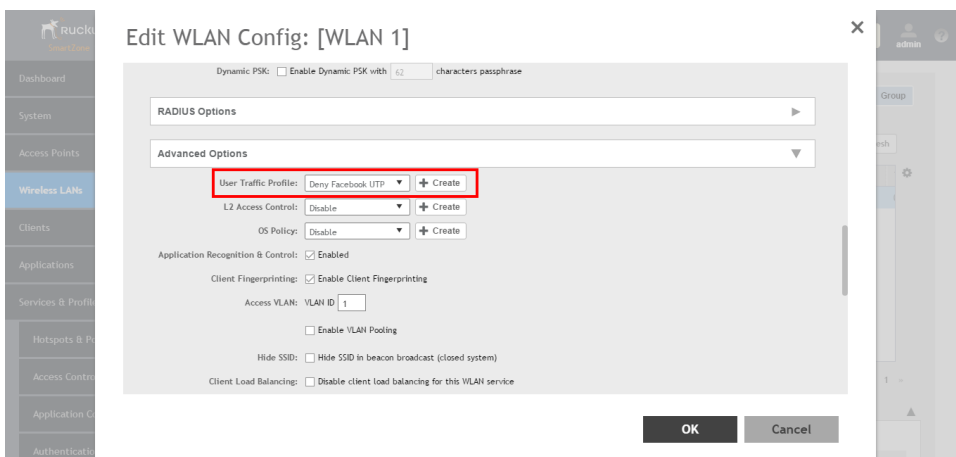


## Creating a User Defined Application

When an application is unrecognized and generically (or incorrectly) categorized, the controller will be unable to monitor its traffic, unless you configure an explicit application identification policy based on IP address/mask, port and protocol.

To configure a user-defined application:

1. Go to **Services & Profiles > Application Control**.
2. Select the **User Defined** tab.
3. Click **Create**.

The **Create User Defined Application** page appears.

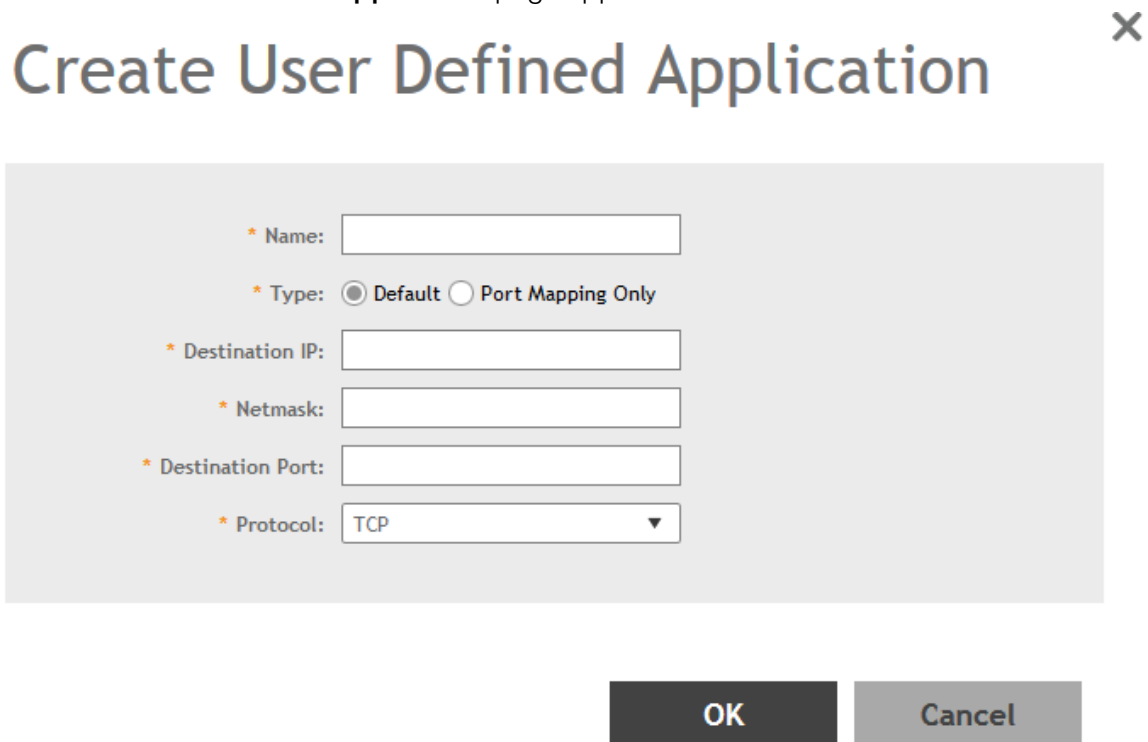

**Create User Defined Application** X

\* Name:

\* Type:  Default  Port Mapping Only

\* Destination IP:

\* Netmask:

\* Destination Port:

\* Protocol: TCP ▼

OK Cancel

**Figure 80: Creating a User Defined Application**

4. Configure the following:
  1. **Name:** Type a name for the application. This is the name that will identify this application on the dashboard.
  2. **Type:** Select Default or Port Mapping Only (destination port).
  3. **Destination IP:** Type the destination IP address of the application.
  4. **Netmask:** Type the netmask of the destination IP address.
  5. **Destination Port:** Type the destination port for the application.
  6. **Protocol:** Select the protocol used by the application. Options include TCP and UDP.
  7. Click **OK**.

You have created the user defined application.

**NOTE:** You can also edit, clone and delete the application policy by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **User Defined** tab.

## Working with Application Signature Package

Ruckus Wireless will periodically release and make new application signature packages available for download.

Download the latest application signature package to a local folder and perform the following procedure:

- [Step 1: Uploading the Signature Package](#) on page 206
- [Step 2: Validating the Signature Package](#) on page 207

### Step 1: Uploading the Signature Package

Once you have downloaded a new signature package, you can import it into SmartZone using the following procedure:

1. Go to **Services & Profiles > Application Control**.
2. Select the **Signature Package** tab.

**Figure 81: Viewing and Uploading Signature Package File Information**

Current Signature Package Info	
File Name	RuckusSigPack-1.030
File Size	653.5KB
Version	1.30

**Upload Signature Package**

Upload the Application Signature Package file (\*.tar.gz).

3. The **Current Signature Package Info** section displays the information about the signature package file name, size and version.

4. In **Upload Signature Package**, click **Browse** to select the file.
5. Click **Upload** to upload the file. Once the import is complete, the list of system-defined applications is updated immediately.

### Step 2: Validating the Signature Package

The application updates the latest signature package in all the connected APs. To validate the latest version follow the procedure:

1. In the Access Point, enter the Privileged EXEC mode using CLI.
2. Enter the following CLI command, which displays the latest version of the signature package.

```
rxscli:get tdts-sigpack
```

```
Current TDTS Signature Package is Ruckus-SigPack-Ver-x.xx.trf
```

```
OK
```

## Authentication

You can add AAA servers to the controller in order to use them to authenticate users attempting to associate with controller-managed APs.

### Creating Non-Proxy Authentication AAA servers

A non-proxy AAA server is used when the APs connect to the external AAA server directly.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Non-Proxy (AP Authenticator)** tab, and then select the zone for which you want to create the AAA server.
3. Click **Create**.

The **Create AAA Server** page appears.

**Figure 82: Creating an AAA Server**

# Create AAA Server

**General Options**

\* Name:

Description:

\* Type:  RADIUS  Active Directory  LDAP

Backup RADIUS:  Enable Secondary Server

**Primary Server**

\* IP Address:

\* Port:

\* Shared Secret:

OK Cancel

## 4. Configure the following:

### 1. General Options

- Name: Type a name for the AAA server that you are creating.
- Description: Type a short description of the AAA server.
- Type: Select the type of AAA server that you are creating. Options include RADIUS, Active Directory and LDAP.
- Backup RADIUS (appears if you clicked RADIUS above): Select the **Enable Secondary Server** check box if a secondary RADIUS server exists on the network.
- Global Catalog (appears if you clicked Active Directory above): Select the **Enable Global Catalog support** if you the Active Directory server to provide a global list of all objects.

### 2. Authentication Types

- If you selected RADIUS, configure the following options in the Primary Server section:
  - IP Address: Type the IP address of the AAA server. Both IPv4 and IPv6 addressing formats are supported.
  - Port: Type the port number of the AAA server. The default RADIUS server port number is 1812.
  - Shared Secret: Type the AAA shared secret.
  - Confirm Secret: Retype the shared secret to confirm.



If you have enabled **Backup RADIUS** to the **Secondary Sever**, you must provide similar information as in the primary server.

See [RADIUS Service Options](#) on page 214 for more information.

- If you selected Active Directory, configure the following options in the Primary Server section:
  - IP Address: Type the IPv4 address of the AD server.
  - Port: Type the port number of the AD server. The default port number (389) should not be changed unless you have configured the AD server to use a different port.
  - Windows Domain Name: Type the Windows domain name assigned to the AD server (for example, domain.ruckuswireless.com).
- If you selected LDAP, configure the following options:
  - IP Address: Type the IPv4 address of the LDAP server.
  - Port: Type the port number of the LDAP server. Default is 389.
  - Base Domain Name: Type the base DN in LDAP format for all user accounts (for example, dc=ldap,dc=com).
  - Admin Domain Name: Type the admin DN in LDAP format (for example, cn=Admin;dc=<Your Domain>,dc=com).
  - Admin Password: Type the administrator password for the LDAP server.
  - Confirm Password: Retype the administrator password to confirm.
  - Key Attribute: Type a key attribute to denote users (for example, default: uid)
  - Search Filter: Type a search filter (for example, objectClass=Person).

**5. Click OK.**

You have completed creating a Non-proxy AAA server.

**NOTE:** You can also edit, clone and delete an AAA server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Non-Proxy (AP Authenticator)** tab.

### Testing AAA Server (Auth)

To ensure that the controller administrators will be able to authenticate successfully with the RADIUS server type that you selected, Ruckus Wireless strongly recommends testing the AAA server after you set it up.

The test queries the RADIUS server for a known authorized user and return groups associated with the user that can be used for configuring roles within the controller.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Non-Proxy (AP Authenticator)** tab, and then select the zone for which you want to test the AAA server.
3. Click **Test AAA**.

The **Test AAA Server** page appears.

### Figure 83: Testing an AAA Server

The screenshot shows a dialog box titled "Test AAA Servers". It contains the following fields and controls:

- Name:** A dropdown menu with "RADIUS" selected.
- Protocol:** Two radio buttons, "PAP" (selected) and "CHAP".
- User Name:** A text input field.
- Password:** A text input field with a "Show password" checkbox below it.
- Buttons:** "Test" and "Cancel" buttons at the bottom right.

4. Configure the following:

1. Name: Select one of the AAA servers that you previous created.
2. Protocol: Select the Password Authentication Protocol (PAP), or the Challenge Handshake Authentication Protocol (CHAP) to authenticate the AAA server.
3. User Name: Type an existing user name on the AAA server that you selected.
4. Password: Type the password for the user name you specified.

5. Click **Test**.

If the test was unsuccessful, there are two possible results (other than success) that will be displayed to inform you if you have entered information incorrectly: **Admin invalid** or **User name or password invalid**. These results can be used to troubleshoot the reasons for failure to authenticate administrators with an AAA server through the controller.

You have completed testing the non-proxy AAA servers that you created.

## Creating Proxy AAA Servers

A proxy AAA server is used when APs send authentication/accounting messages to the controller and the controller forwards these messages to an external AAA server.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Proxy (SZ Authenticator)** tab, and then select the zone for which you want to create the AAA server.
3. Click **Create**.

The **Create Authentication Service** page appears.

**Figure 84: Creating an Authentication Service**

## Create Authentication Service

\* Name:

Friendly Name:

Description:

\* Service Protocol:  RADIUS  Active Directory  LDAP  OAuth  HLR

RADIUS Service Options

RFC 5580 Out of Band Location Delivery:  Enable for Ruckus AP Only

Primary Server ▼

\* IP Address:

\* Port:

\* Shared Secret:

\* Confirm Secret:

Secondary Server ▼

Backup RADIUS:  Enable Secondary Server  Automatic Fallback Disable

\* IP Address:

\* Port:

\* Shared Secret:

\* Confirm Secret:

Health Check Policy ▼

#### 4. Configure the following:

1. Name: Type a name for the authentication service that you are adding.
2. Friendly Name: Type an alternative name that is easy to remember.
3. Description: Type a description for the authentication service.
4. Service Protocol: If you select
  - RADIUS, see [RADIUS Service Options](#) on page 214 for more information.
  - Active Directory, configure the following:
    1. Global Catalog: Select the **Enable Global Catalog** support if you the Active Directory server to provide a global list of all objects.
    2. Primary Server:
      - Encryption: Select the **Enable TLS Encryption** check box if you want to use the *Transport Layer Security* (TLS) protocol to secure communication with the server.

**NOTE:** You must also configure the Trusted CA certificates to support TLS encryption.
    3. IP Address: Type the IPv4 address of the AD server.

4. Port: Type the port number of the AD server. The default port number (389) should not be changed unless you have configured the AD server to use a different port.
  5. Windows Domain Name: Type the Windows domain name assigned to the AD server (for example, domain.ruckuswireless.com).
- LDAP, configure the following:
    1. Select the **Enable TLS Encryption** check box if you want to use the *Transport Layer Security* (TLS) protocol to secure communication with the server.

**NOTE:** You must also configure the Trusted CA certificates to support TLS encryption.
    2. IP Address: Type the IPv4 address of the LDAP server.
    3. Port: Type the port number of the LDAP server.
    4. Base DN: Type the base DN in LDAP format for all user accounts (for example, dc=ldap,dc=com).
    5. Admin DN: Type the admin DN in LDAP format (for example, cn=Admin;dc=<Your Domain>,dc=com).
    6. Admin Password: Type the administrator password for the LDAP server.
    7. Confirm Password: Retype the administrator password to confirm.
    8. Key Attribute: Type a key attribute to denote users (for example, default: uid)
    9. Search Filter: Type a search filter (for example, objectClass=Person).
  - OAuth, configure the following:
    1. Provider: Authorize Google, Facebook or LinkedIn by selecting one of them.
    2. Application ID: Specify the application ID.
    3. Application Secret: Type the application secret.
    4. Collect E-mail Address: Select this check-box if you want the controller to collect the user's email address and maintain it for further use.
  - HLR, configure the following:
    1. General Settings
      - SGSN ISDN Address: Type any number from 1 to 9.
      - Routing Context: Type 1 to identify the application service process (ASP).
      - Local Point Code: Type the local point code number for the controller. Default is 1.
      - Default Point Code format: Select Integer format.
      - EAP-SIM Map Version: Select map version 3 from the drop-down menu.
      - Authorization Map Version: Select map version 3 from the drop-down menu.
    2. SCCP Addresses Default Settings
      - Source GT Indicator: Select a GT indicator from the drop-down. You can select translation type only or in addition to numbering plan, encoding scheme and nature of address indicator.
      - Source Has Point Code: Select Yes or No.
      - Source Translation Type: Type the appropriate integer value.

- Source Numbering Plan: Select ISDN/Recommended plan (E.163/E.164).
- Source Nature Address of Indicator: Select from Subscriber Number, Reserved for National Use, National Significant Number and International Number (recommended).
- Address Indicator: Select between Route on GT and SSN.
- Destination GT Indicator: Select a GT indicator from the drop-down. You can select translation type only or in addition to numbering plan, encoding scheme and nature of address indicator.
- Destination Translation Type: Type the appropriate integer value.
- Destination Numbering Plan: Select ISDN/Recommended plan (E.163/E.164) or E.214.
- Destination Nature Address of Indicator: Select from Subscriber Number, Reserved for National Use, National Significant Number and International Number.
- GT Point Code: Set to 2.

### 3. SCTP Association to Core Network

- Destination IP: Type the IP address of the destination port.
- Destination Port: Type the number of the destination port.
- Source Port: Type the number of the source port.
- Max Inbound Streams: Set to 32.
- Max Outbound Streams: Set to 32
- Adjacent Point Code: Set to 2.

### 4. SCCP GTT Table

- GT Digits: Type any number (1 to 15 digit number).
- Address Indicator: Select between options to route on GT or SSN.
- Point Code: Set to 1.
- Translation Type: Type the appropriate integer value.
- GT Indicator: Select a GT indicator from the drop-down. You can select translation type only or in addition to numbering plan, encoding scheme and nature of address indicator.
- Has Point Code: Select between Yes and No.
- Has SSN: Select between Yes and No.
- Number Planning: Select ISDN/Recommended plan (E.163/E.164) or E.214.
- Nature of Address Indicator: Select from Subscriber Number, Reserved for National Use, National Significant Number and International Number.

**NOTE:** Ensure that the settings provided in the **GTT table** are match the ones provided in the **SCCP Addresses Default Settings** section.

- 5. Cache Options: select Enable AV Caching (makes use of the existing cache memory values).

- 5. Advanced Options - Domain name: Type the whitelisted domain name that you want to add.

6. User Traffic Profile Mapping:
  - a. Type a **Group Attribute Value**.
  - b. Select a **User Role** from the drop-down list.
  - c. Click **Add**.

The mapped user profile is listed.

5. Click **OK**.

You have completed creating a Proxy AAA server.

**NOTE:** You can also edit, clone and delete an AAA server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Proxy (SZ Authenticator)** tab.

### RADIUS Service Options

These are the Radius service options available for the primary and secondary servers.

RFC 5580 Out of Band Location Delivery: If you want out-of-band location delivery (RFC 5580) to apply only to Ruckus Wireless APs, select the **Enable for Ruckus AP Only** check box.

**Table 26: Primary Server Options**

Configure the primary RADIUS server settings.

Option	Description
IP Address	Type the IP address of the RADIUS server. IPv4 and IPv6 addressing formats are supported.
Port	Type the port number of the RADIUS server. The default RADIUS server port number is 1812 and the default RADIUS Accounting server port number is 1813.
Shared Secret	Type the RADIUS shared secret.
Confirm Secret	Retype the shared secret to confirm.

**Table 27: Secondary Server Options**

If you have a secondary RADIUS server on the network that you want to use as a backup, select the **Enable Secondary Server** check box, and then configure the settings below.

Option	Description
Backup RADIUS	Select <b>Enable Secondary Server</b> .  When a secondary RADIUS server is enabled and the primary RADIUS server becomes unavailable, the secondary Automatic Fallback Disable server takes over the handling of RADIUS requests. When the primary server becomes available again, it takes back control over RADIUS requests from the secondary

Option	Description
IP Address	server. If you want to prevent the primary server from retaking control over RADIUS requests from the secondary server, select the <b>Automatic Fallback Disable</b> check box. Type the IP address of the secondary AAA server.
Port	Type the port number of the secondary AAA server port number. The default RADIUS server port number is 1812 and the default RADIUS Accounting server port number is 1813.
Shared Secret	Type the AAA shared secret.
Confirm Secret	Retype the shared secret to confirm.

**Table 28: Health Check Policy**

These options define the health monitoring settings of the primary and secondary RADIUS servers, when the controller is configured as RADIUS proxy for RADIUS Authentication and Accounting messages.

Option	Description
Response Window	Set the time (in seconds) after which, if the AAA server does not respond to a request, the controller will initiate the zombie period (see below). Response Window  If the primary AAA server does not respond to RADIUS messages sent after Response Window expires, the controller will forward the retransmitted RADIUS messages to the secondary AAA server.  <b>NOTE:</b> The zombie period is not started immediately after the Response Window expires, but after the configured Response Window plus $\frac{1}{4}$ of the configured Zombie Period. The default Response Window is 20 seconds
Zombie Period	Set the time (in seconds) after which, if the AAA server does not respond to ANY packets during the zombie period, it will be considered to inactive or unreachable.  An AAA server that is marked zombie (inactive or unreachable) will be used to proxy with a low priority. If there are other live AAA servers, the

Option	Description
	<p>controller will attempt to use these servers first instead of the zombie AAA server.</p> <p>The controller will only proxy requests to a zombie server only when there are no other live servers. Any request that is sent as a proxy to an AAA server will continue to be sent to that AAA server until the home server is marked inactive or unreachable. At that point, the request will fail over to another server, if a live AAA server is available. The default Zombie Period is 40 seconds.</p>
Revive Interval	<p>Set the time (in seconds) after which, if no RADIUS messages are sent as proxy to the AAA server after it has been marked as inactive or unreachable, the controller will mark the AAA server as active again (and assume that it has become reachable again). The default Revive Interval is 120 seconds.</p>
No Response Fail	<p>Click <b>Yes</b> to respond with a reject message to the NAS if no response is received from the RADIUS server. Click <b>No</b> to skip sending a response.</p>

**NOTE:** To ensure that the RADIUS fail-over mechanism functions correctly, either accept the default values for the Response Window, Zombie Period, and Revive Interval, or make sure that the value for Response Window is always higher than the value for RADIUS NAS request timeout multiplied by the value for RADIUS NAS max number of retries. For third party APs, you must ensure that the configured Response Window on the controller is higher than the RADIUS NAS request timeout multiplied by the RADIUS value. The maximum number of retries is configured at the 3rd party controller/AP.

### Table 29: Rate Limiting

Configure the following options.

Options	Description
Maximum Outstanding Requests (MOR)	<p>Set the maximum outstanding requests per server. Type 0 to disable it, or set a value between 10 and 4096.</p>
Threshold (% of MOR)	<p>Set a percentage value of the MOR at which (when reached) the controller will generate an event. Threshold (% of MOR)</p> <p>For example, if the MOR is set to 1000 and the threshold is set to 50%, the controller will</p>



Options	Description
Sanity Timer	generate an event when the number of outstanding requests reaches 500.  Set a timer (in seconds) that will be started whenever a condition that generates an event is reached. This helps prevent conditions that trigger events which occur frequently.


### Testing AAA Servers

To ensure that the controller administrators will be able to authenticate successfully with the RADIUS server type that you selected, Ruckus Wireless strongly recommends testing the AAA server after you set it up.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Proxy (SZ Authenticator)** tab, and then select the zone for which you want to test the AAA server.
3. Click **Test AAA**.

The **Test AAA Server** page appears.

**Figure 85: Testing an AAA Server**

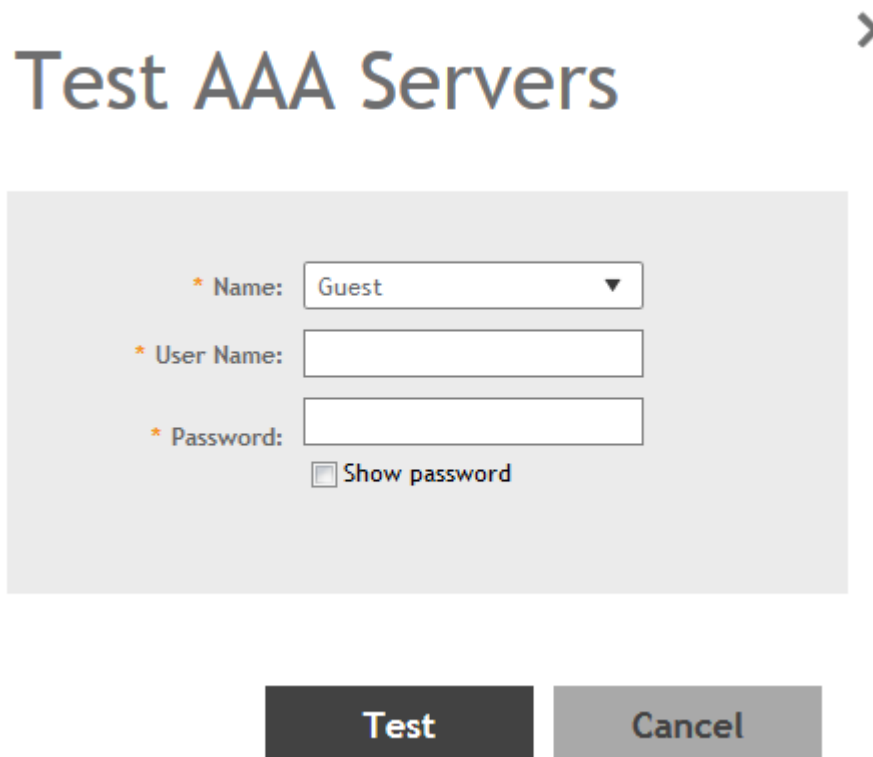

**Test AAA Servers** >

\* Name:

\* User Name:

\* Password:   
 Show password

**Test** **Cancel**

4. Configure the following:

1. Name: Select one of the AAA servers that you previously created.
  2. User Name: Type an existing user name on the AAA server that you selected.
  3. Password: Type the password for the user name you specified.
5. Click **Test**.
- If the controller was able to connect to the authentication server and retrieve the configured groups/attributes, the information appears at the bottom of the page. If the test was unsuccessful, there are two possible results (other than success) that will be displayed to inform you if you have entered information incorrectly: **Admin invalid** or **User name or password invalid**. These results can be used to troubleshoot the reasons for failure to authenticate administrators with an AAA server through the controller.

## Creating Realm Based Authentication Profile

An authentication profile defines the authentication policy when the controller is used as a Radius proxy service for WLANs.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Realm Based Proxy** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Authentication Profile** page appears.

**Figure 86: Creating a Realm Based Proxy Authentication Profile**

### Create Authentication Profile

Realm	Protocol	Auth Service	Auth Method	Dynamic VLAN ID
No Match	NA	NA-Disabled	Non-3GPP Call Flow	N/A

4. Configure the following:
  1. Name: Type a name for the authentication service profile that you are creating.
  2. Description: Type a short description of the authentication service profile.
  3. To enable hosted AAA support, select the **Enable Hosted AAA Support** check box, and then configure these options:
    - a. Interim Accounting Interval (secs): Set the interim time interval for RADIUS clients to send accounting updates. Default is 0, which indicates that the accounting interval is disabled.

- b. Sessions Timeout (secs): Set a time limit after which users will be disconnected and required to log on again.
  - c. Session Idle Timeout (secs): Set a value in seconds (60 to 600) after which idle clients will be disconnected.
4. Select the **Configure PLMN Identifier** check-box, and set the following options:
- a. Mobile Country Code: Set the correct country code for the geographical location. This is required when the controller sends MAP authentication information to the HLR.
  - b. Mobile Network Code: Set the mobile network code based on the geographical location. This is required when the controller sends MAP authentication information to HLR.
5. Realm-Based Authentication Service
- Realm: Type where the realm is No Match or Unspecified.
  - Auth Service: Select a default authentication service for the realm.
  - Auth Method: Select an authorization method as 3GPP or Non-3GPP call flow.
  - Dynamic VLAN ID: Type the vlan ID.
6. Redirection: select where to redirect the user after successfully completing authentication.
- Redirect to the URL that the user intends to visit: Allows the guest user to continue to their destination without redirection.
  - Redirect to the following URL: Redirect the user to a specified web page (entered into the text box) prior to forwarding them to their destination. When guest users land on this page, they are shown the expiration time for their guest pass.
5. Click **OK**.

## Configuring HLR Services

The controller and multiple Home Location Registers (HLRs) manage a wireless services gateway for performing authentication/ authorization and for unsolicited changes of authorization. This feature is only applicable to SCG200.

Configure the MAP gateway settings to set up multiple HLRs for performing authentication and/or authorization and for unsolicited changes of authorization. The MAP gateway is responsible for initiating MAP queries with the UE's home HLR. Since the MAP gateway may interface with multiple HLRs, the route to the home HLR is selected based on the realm information. The following configuration settings apply to all the HLR services configured on the controller. Follow these steps to configure a MAP gateway settings for the HLR service.

1. Go to **Services & Profiles > Authentication**.
2. Select the **HLR** tab, and then select the zone for which you want to create the service.

### Figure 87: Configuring HLR Services

The screenshot shows the HLR configuration interface with the following sections:

- Map Gateway Settings:**
  - Traffic Mode: Load\_Share
  - Local Network Indicator: ITU
  - Local Network Indicator: International (dropdown menu)
  - Buttons: Refresh, OK, Cancel
- MNC to NDC Mapping:**
  - Input fields for MCC, MNC, and NDC with + Add, X Cancel, and Delete buttons.
  - Table showing existing mappings:

MCC	MNC	NDC
405	803	91

  - Buttons: Refresh, OK, Cancel

3. In Map Gateway Settings, configure the following:

1. Traffic Mode: This setting is always set to Load\_Share
2. Local Network Indicator: Select either International or National. It is usually set to ITU.
3. Click **OK**.

4. In MNC to NDC Mapping, configure the following:

- MCC: Type the mobile country code digits. Decimal digit strings with maximum length of 3 and minimum length of 2.
- MNC: Type the mobile network code digits. Decimal digit strings with maximum length of 3 and minimum length of 2.
- NDC: Type the network destination code digits, which has a maximum length of 5 digits.

### Configuring Diameter Services

The controller supports the 3GPP STa interface for EAP-SIM to authenticate and authorize subscribers.

This feature is only applicable to SCG200.

1. Go to **Services & Profiles > Authentication**.
2. Select the **Diameter** tab, and then select the zone for which you want to create the service.

**Figure 88: Configuring HLR Services**

Non-Proxy (AP Authenticator) | Proxy (SZ Authenticator) | Realm Based Proxy | HLR | **Diameter** | EAP-SIM | EAP-AKA

System Wide Settings

Refresh OK Cancel

Warning: These settings apply to all the Diameter services configured on the controller. Changes to these settings will restart these processes and it's on going sessions will be terminated.

- Local Host Name: SCG
- Local Realm Name: ruckus.com
- Peer Retry Timeout (secs): 60
- Connection Retry Timeout (secs): 30
- Device Watchdog Timeout (secs): 30

Origin Host List

Refresh

Origin Host Name	Node Name	Management IP	Cluster IP	Control IP

Remote Peer Configuration

Create Configure Delete search table Refresh

Service Name	Service Type	Service Realm	# of Peers	Description

3. In System Wide Settings, configure the following:

1. Local Host Name
2. Local Realm Name
3. Peer Retry Timeout (in seconds)
4. Connection Retry Timeout (in seconds)
5. Device Watchdog Timeout (in seconds)

4. In Origin Host List, provide the following information:

- Origin Host Name
- Node Name
- Management IP
- Cluster IP
- Control IP

5. In Remote Peer Configuration, click **Create**. The **Create Diameter Remote Peer Configuration** page appears. Configure the following:

**Figure 89: Remote Peer Configuration**

## Create Diameter Remote Peer Configuration

- Service Name: Type a name for the service you are creating.
- Description: Type a brief description of the service.
- General Settings
  - Server Realm Name: Type name realm name of the server.
  - Service Type: Select the type of Diameter service. Options include: DRA (Diameter Routing Agents), OCS (Online Charging Systems) and PCRF (Policy and Charging Rules Functions)
  - STA

**NOTE:** If you select PCRF or STA, you will need to configure the Tx Timer (in seconds) and Retransmit Count settings as well.

- In Peers, add a peer entity to associate with the current Diameter remote peer settings by filling out the following boxes:
  - Peer Name
  - IP Address
  - Port
  - Transport Type
  - Alternate Peer

You have completed configuring the remote peer settings for the Diameter services.

### Configuring EAP-SIM

The SIM authentication module handles EAP-SIM authentication for clients using SIM cards. Follow these steps to configure the EAP-SIM module.

This feature is only applicable to SCG200.

1. In EAP-SIM Configuration, verify that the Enable option is selected (default). This will enable clients using GSM SIM cards to authenticate with AAA services.
2. In the EAP-SIM Configuration section, configure the following settings for EAP-SIM access:

**Figure 90: EAP-SIM Configuration**

The screenshot shows the EAP-SIM Configuration page with the following details:

- EAP-SIM Configuration:**
  - EAP-SIM Configuration:  Enable  Disable
  - User ID Privacy Support:  Enable
  - Fast Reauthentication Support:  Enable
  - Reauthentication Realm: [Empty text box]
  - Max Successive Reauthentication: 256
  - Active Secret Key: [No data available]
- EAP-SIM Secret Key Configuration:**
  - Buttons: + Create, Delete
  - Table:

Key Number	Key	Created On
- EAP-SIM Cache Cleanup Configuration:**
  - Cache:  Enable  Disable
  - Cache Cleanup Time: 00 Hours, 00 Minutes
  - Cache History Length: 256

1. User ID Privacy Support: Click this option to add an Active Secret Key.
  2. Fast Reauthentication Support: Click this option to enable fast reauthentication, which is useful when SIM authentication happens frequently.
  3. Reauthentication Realm: Type the reauthentication realm. The default realm is the realm from the permanent identity of the client.
  4. Max Successive Reauthentication: Set the number of allowed reauthentication attempts before requesting fresh triplets and performing a complete authentication. The default is 256. If you enter 0, reauthentication identities will not be generated.
3. In the EAP-SIM Secret Key Configuration section, configure the secret keys, which are used to encrypt the permanent identity to generate pseudonym and reauthentication identity.
    1. Click **Create** to add a key.
    2. In Key, type any text string up to 32 characters. If you do not specify a secret, pseudonyms will not be generated. If you change this value, all pseudonyms assigned to currently authenticated clients will be invalidated and they will require reauthentication.
    3. Click **Save**.
  4. In the EAP-SIM Cache Cleanup Configuration section, configure the cleanup time for the cache to be cleaned. At cleanup time, all the cache entries (except the ones which were used during the last history length) will be deleted.
    1. In Cache, click the Enable option to enable cache cleanup. This option is disabled by default.

2. In Cache Cleanup Time, set the time (hour and minute) when cache cleanup will be triggered.
  3. In Cache History Length, set the maximum size of cache entries. The default is 256.
5. Click **OK**.

You have completed configuring EAP-SIM based authentication using AAA server.

## Configuring EAP-AKA

The AKA authentication module handles EAP-AKA authentication for clients using USIM cards. This feature is only applicable to SCG200.

1. In EAP-AKA Configuration, verify that the Enable option is selected (default). This will enable clients using 3G USIM cards to authenticate with AAA services.
2. In EAP-AKA Configuration section, configure the following settings for EAP-AKA access:

**Figure 91: EAP-AKA Configuration**

The screenshot shows the EAP-AKA Configuration page with the following details:

- EAP-AKA Configuration:**
  - EAP-AKA Configuration:  Enable  Disable
  - User ID Privacy Support:  Enable  Disable
  - Fast Reauthentication Support:  Enable  Disable
  - Reauthentication Realm: [Empty text box]
  - Max Successive Reauthentication: [256]
  - Active Secret Key: [No data available]
- EAP-AKA Secret Key Configuration:**
  - + Create [Delete icon]
  - Table with columns: Key Number, Key, Created On
- EAP-AKA Cache Cleanup Configuration:**
  - Cache:  Enable  Disable
  - Cache Cleanup Time: 00 Hours, 00 Minutes
  - Cache History Length: [256]

1. User ID Privacy Support: Click this option to add an Active Secret Key.
  2. Fast Reauthentication Support: Click this option to enable fast reauthentication, which is useful when AKA authentication happens frequently.
  3. Reauthentication Realm: Type the reauthentication realm. The default realm is the realm from the permanent identity of the client.
  4. Max Successive Reauthentication: Set the number of allowed reauthentication attempts before requesting fresh triplets and performing a complete authentication. The default is 256. If you enter 0, reauthentication identities will not generated.
3. In the EAP-AKA Secret Key Configuration section, configure the secret keys, which are used to encrypt the permanent identity to generate pseudonym and reauthentication identity.
1. Click **Create** to add a key.



2. In Key, type any text string up to 32 characters. If you do not specify a secret, pseudonyms will not be generated. If you change this value, all pseudonyms assigned to currently authenticated clients will be invalidated and they will require reauthentication.
3. Click **Save**.
4. In the EAP-AKA Cache Cleanup Configuration section, configure the cleanup time for the cache to be cleaned. At cleanup time, all the cache entries (except the ones which were used during the last history length) will be deleted.
  1. In Cache, click the Enable option to enable cache cleanup. This option is disabled by default.
  2. In Cache Cleanup Time, set the time (hour and minute) when cache cleanup will be triggered.
  3. In Cache History Length, set the maximum size of cache entries. The default is 256.
5. Click **OK**.

You have completed configuring EAP-AKA based authentication using AAA server.

## Authentication Support Matrix

It is important to understand the compatibility between AAA servers and different WLANs.

### Proxy Mode

In proxy mode, authentication requests are set through the controller.

**Table 30: Proxy Mode Compatibility**

Authentication Source	802.1X	HS 2.0 Secure	Web Auth	Hotspot/WISPr
Local Database	No	Yes	No	Yes
IDM-Provisioned Local DB	Yes	Yes	NA	NA
Active Directory	No *	No	Yes	Yes
RADIUS	Yes	Yes	Yes	Yes
LDAP	Yes	No	Yes	Yes
OAuth - Google/FB/LinkedIn	No	No	No	No

**NOTE:** To support 802.1X with Active Directory, an external RADIUS server (such as NPS) must be used.

**NOTE:** IDM Provisioned username (also called local cache credential) is relevant only in secure access after Onboarding.

**NOTE:** 802.1X (MSCHAPv2 via built-in RADIUS using AD-NPS), WebAuth, and WISPr support AD authentication from SmartZone release in 3.2.

**NOTE:** 802.1X, WebAuth, and WISPr support LDAP authentication against from SmartZone release in 3.2.

### Non-proxy Mode

In the Non-proxy mode, authentication requests are sent directly by AP and not through the controller. The local database is stored on the controller, therefore, authentication sources such as local database and IDM-provisioned local databases are not supported.

**Table 31: Non-proxy Mode Compatibility**

Authentication Source	802.1X	Zero-IT Onboard	HS 2.0 Onboard	HS 2.0 Secure	Web Auth	Hotspot/WISPr
Active Directory	No	No*	No*	No	Yes	No
RADIUS	Yes	No*	No*	No	Yes	Yes*
LDAP	No	No*	No*	No	Yes	No
OAuth - Google/FB/LinkedIn	No	No*	No*	No	No	No

(\*) From the configuration it may seem like non-proxy RADIUS is supported in WISPr, but the call flow goes through the controller.

**NOTE:** Zero-IT Onboard and HS2.0 Onboard are supported only if the controller sends the authentication requests.

### Profile Configuration

The following table details proxy and non-proxy AAA server configurations against various platforms.

**Table 32: Profile Configuration**

Feature	SCG200	SZ100	vSZ-E	vSCG-H	Description
Per-Zone ProxyAAA Profiles	No	NA	NA	NA	Ability to configure a ProxyAAA profile in a specific zone
Global ProxyAAA Profiles	Yes	Yes	Yes	Yes	Ability to configure a ProxyAAA

Feature	SCG200	SZ100	vSZ-E	vSCG-H	Description
					profile globally and then use it across zones
Per-Zone NonProxy AAA Profiles	Yes	NA	NA	Yes	Ability to configure a NonProxyAAA profile in a specific zone
Global NonProxy AAA Profiles	No	Yes	Yes	No	Ability to configure a NonProxy AAA profile globally and then use it across zones

### Dynamic Policy Assignment (Proxy Authentication Types)

The following table details dynamic policy assignments across authentication types.

**Table 33: Dynamic Policy Assignment (Proxy)**

Feature	802.1X	Zero-IT Onboard	HS 2.0 Onboard	HS 2.0 Secure	Web Auth	Hotspot/WISPr	MAC Auth	Description
Dynamic Role Assignment	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Ability to assign a user to a particular local Role via a group/role attribute from RADIUS, AD, LDAP, OAuth.  <b>NOTE:</b> From SmartZone 3.4, Role can

Feature	802.1X	Zero-IT Onboard	HS 2.0 Onboard	HS 2.0 Secure	Web Auth	Hotspot/WISPr	MAC Auth	Description
								contain UTP. Therefore, , when you assign a role, you also get the ACL and Rate Limiting policies.
Dynamic VLAN / VLAN Pool	Yes	NA	NA	NA	No	No	Yes	Ability to assign a user to a VLAN through a VLAN attribute from RADIUS, AD, LDAP, OAuth.  Form SmartZone release 3.5, you can also assign VLANs and VLAN pools based on the user role.
Dynamic UTP	Yes				Yes	Yes	Yes	Ability to assign a user to a UTP through an attribute

Feature	802.1X	Zero-IT Onboard	HS 2.0 Onboard	HS 2.0 Secure	Web Auth	Hotspot/WISPr	MAC Auth	Description
								from an authentication source.
Dynamic ACL	Yes	Yes	Yes	No	Yes	Yes	Yes	Ability to assign a specific ACL to a user through an attribute from RADIUS, AD, LDAP, OAuth.
Dynamic Rate Limit	Yes	Yes	Yes			Yes	Yes	Ability to assign a specific Rate Limit to a user through an attribute from RADIUS, AD, LDAP, OAuth.

**NOTE:** In dynamic ACL and Rate limit, since ACL and rate limit are associated with a UTP, assigning a UTP also assigns an ACL or rate limit.

### Dynamic Policy Assignment (Non-Proxy Authentication Types)

The following table details dynamic policy assignments across authentication types.

**Table 34: Dynamic Policy Assignment (Non-Proxy)**

Feature	802.1X	HS 2.0 Secure	Web Auth	Description
Dynamic Role Assignment	No			Ability to assign a user to a local Role through a group/role attribute from the authentication source.

Feature	802.1X	HS 2.0 Secure	Web Auth	Description
Dynamic VLAN / VLAN Pool				Ability to assign a user to a VLAN through a VLAN attribute from the authentication source.
Dynamic UTP				Ability to assign a user to a UTP through an attribute from the authentication source.  <b>NOTE:</b> From SmartZone release 3.4, UTP contains ACL and rate limit.
Dynamic ACL				Ability to assign a specific ACL to a user through an attribute from the authentication source.  <b>NOTE:</b> ACLs are a part of a UTP. If you configure a UTP without a rate limit, you effectively only have an ACL.
Dynamic Rate Limit				Ability to assign a specific Rate Limit to a user through an attribute from the authentication source.  <b>NOTE:</b> Rate limiting is also a part of a UTP. If you configure a UTP without ACL, you effectively only have a rate limiting policy.

### Other Authentication Features

The following table details authentication support for various authentication features.

**Table 35: Authentication Features**

Feature	Supported	Description
Test AAA - RADIUS	Yes	Ability to test a specific username/password against a configured RADIUS serve.
Test AAA - Active Directory	No	Ability to test a specific username/password against a configured AD serve.
Test AAA - LDAP	Yes	Ability to test a specific username/password against a configured LDAP serve.  <b>NOTE:</b> Only Non-Proxy LDAP is supported at the Zone Level.
Test AAA - OAuth	No	Ability to test a specific username/password against a configured OAuth server.
Test AAA - Return a Role	No	Ability to return a role assignment when testing a AAA server.
RADIUS CoA - Change Role		Ability to change a user's Role through a Change of Authorization (CoA).
RADIUS CoA - Change VLAN		Ability to change a user's VLAN through a Change of Authorization (CoA).
RADIUS CoA - Change ACL		Ability to change a user's ACL through a Change of Authorization (CoA).
RADIUS CoA - Change Rate Limit		Ability to change a user's rate limit through a Change of Authorization (CoA).
RADIUS CoA - Change Authorization		Ability to authorize or deauthorize a user through a Change of Authorization (CoA).

### PAP/CHAP Support

The following table details PAP and CHAP support for various authentication features.

Table 36: PAP/CHAP Support

Feature	802.1X	Web Auth	Hotspot/ WISPr	MAC Auth	Notes
Proxy-Mode					
Active Directory	Yes	Yes*	Yes	No	PAP / CHAP is supported for Web Authentication and HotSpot/WISPr.  <b>NOTE:</b> NPS interface (AD) is required for Web Authentication (CHAP) and 802.1X (MSCHAPv2).
RADIUS	Yes	Yes*	Yes	Yes	
LDAP	Yes	Yes*	Yes	No	PAP / CHAP is supported for Web Authentication and HotSpot/WISPr
LDAP-TLS	Yes	Yes*	Yes	No	This support is available from SmartZone version 3.5.
Active Directory (TLS)	Yes	Yes*	Yes	No	This support is available from SmartZone version 3.5.  <b>NOTE:</b> NPS interface (AD) is required for



Feature	802.1X	Web Auth	Hotspot/ WISPr	MAC Auth	Notes
					Web Authentication (CHAP) and 802.1X (MSCHAPv2).
Non-proxy Mode					
Active Directory	No	Yes*	Yes	No	
RADIUS	Yes	Yes*	Yes	Yes	
LDAP	No	Yes*	Yes	No	

**NOTE:** (\*) This is an AP CLI setting:

```
set aaa auth-method pap|chap
```

. It is a global setting for all WebAuth WLANs on the AP. The default is CHAP.

## Accounting

### Creating Non-Proxy Accounting AAA Servers

A non proxy AAA server is used when the APs connect to the external AAA server directly.

1. Go to **Services & Profiles > Accounting**.
2. Select the **Non-Proxy** tab, and then select the zone for which you want to create the AAA server.
3. Click **Create**.

The **Create AAA Server** page appears.

**Figure 92: Creating an AAA Server**

# Create AAA Server

The screenshot shows a configuration window for creating an AAA server. It has a title bar and a close button. The window is divided into two main sections: 'General Options' and 'Primary Server'.  
In the 'General Options' section:  
- There is a required field for 'Name'.  
- There is a 'Description' field.  
- The 'Type' is set to 'RADIUS' (indicated by a selected radio button). Other options are 'Active Directory' and 'LDAP'.  
- Below the type selection is a 'Backup RADIUS' section with a checkbox labeled 'Enable Secondary Server'.  
In the 'Primary Server' section:  
- There is a required field for 'IP Address'.  
- There is a required field for 'Port' with the value '1812' entered.  
- There is a required field for 'Shared Secret'.  
At the bottom of the window are two buttons: 'OK' and 'Cancel'.

#### 4. Configure the following:

##### 1. General Options

- Name: Type a name for the AAA server that you are creating.
- Description: Type a short description of the AAA server.
- Type: Select **RADIUS Accounting**.
- Backup RADIUS (appears if you clicked RADIUS above): Select the **Enable Secondary Server** check box if a secondary RADIUS server exists on the network.

##### 2. If you selected RADIUS, configure the following options in the Primary and Secondary server sections:

- IP Address: Type the IP address of the AAA server.
- Port: Type the port number of the AAA server. The default RADIUS server port number is 1813.
- Shared Secret: Type the AAA shared secret.
- Confirm Secret: Retype the shared secret to confirm.

##### 5. Click **OK**.

You have completed creating a Non-proxy Accounting AAA server.

For information on how to test this server, see [Testing AAA Servers](#) on page 217

**NOTE:** You can also edit, clone and delete an AAA server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Non-Proxy** tab.

### Creating Proxy Accounting AAA Servers

A proxy AAA server is used when APs send authentication/accounting messages to the controller and the controller forwards these messages to an external AAA server.

1. Go to **Services & Profiles > Accounting**.
2. Select the **Proxy** tab, and then select the zone for which you want to create the AAA server.
3. Click **Create**.

The **Create Accounting Service** page appears.

**Figure 93: Creating an Accounting Service**

## Create Accounting Service

\* Name:

Description:

Service Protocol:  RADIUS Accounting  CGF

RADIUS Service Options

**Primary Server**

\* IP Address:

\* Port:

\* Shared Secret:

\* Confirm Secret:

**Secondary Server**

Backup RADIUS:  Enable Secondary Server  Automatic Fallback Disable

\* IP Address:

\* Port:

\* Shared Secret:

\* Confirm Secret:

**Health Check Policy**

\* Response Window:  Seconds

\* Zombie Period:  Seconds

\* Revive Interval:  Seconds

4. Configure the following:

1. Name: Type a name for the authentication service that you are adding.
2. Description: Type a description for the authentication service.
3. Service Protocol:
  - RADIUS Accounting. For more information, see [RADIUS Service Options](#) on page 214.
  - If you select CGF, configure the following:
    1. General Options: Select one of the charging services based on Server database, Local Binary File database or both.
    2. Server Options
      - GTP Echo Timeout: Set the time to verify if the nodes are still communicating. Default is 60 sec.
      - Number of Retries for GTP Echo Response: Set the number of time a node must attempt communication with the other node. Default is 5 sec.
      - Max Number of CDRs per Request: Set the number of CDR messages within each DTR message.
      - CDR Response Timeout: Set the maximum time available to the CGF server to respond to the controller.
      - CRD # of Retries: Set the maximum attempts available to the CGF server to respond to the controller.
    3. Binary File Options
      - Record Limit: Type the number of Records (CDRs) in a file. Default is 1000.
      - File Time Limit (mins): Time taken to close the file and create a new file. Default is 60 mins.
      - File Lifetime (days): Type the number of days for which the binary file can be stored.
      - FTP: Select **Enable**. Type the FTP server address and click Test to see if you can connect to the server. A connection success or failure message is displayed.
      - Export Schedule: Select the time interval to export binary files.
4. In **Server List**, click **Create** and provide the IP address and port number to create an accounting service.
5. CDR Generation Options
  - CDR Generation by session type: Select between Enable CDR for TTG and Enable CDR for Direct IP Access (LBO).
  - You can select the **Enable** check-box to set the following CDR options fields:
    - Send APN Network Identifier.
    - Send Node ID
    - Send Diagnostics
    - Send Local Record Sequence Number.
    - Send MSISDN
    - Send Charging Characteristic selection Mode.
    - SGSN/WAG PLMN Identifier.

- CDR Type: Select between W-CDR and S-CDR.
- Node ID: Type the node ID number

5. Click **OK**.

You have completed creating a Proxy Accounting AAA server.

For information on how to test this server, see [Testing AAA Servers](#) on page 217

**NOTE:** You can also edit, clone and delete an AAA server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Proxy** tab.

### Creating Realm Based Proxy

An accounting profile defines the accounting policy when the controller is used as a RADIUS proxy for WLAN services.

1. Go to **Services & Profiles > Accounting**.
2. Select the **Realm Based Proxy** tab, and then select the zone for which you want to create the AAA server.
3. Click **Create**.

The **Create Accounting Profile** page appears.

**Figure 94: Creating an Accounting Profile**

## Create Accounting Profile

The screenshot displays the 'Create Accounting Profile' interface. At the top, there are input fields for 'Name' and 'Description'. Below these is a dropdown menu labeled 'Accounting Service Per Realm'. Underneath is a section for mapping 'Realm' to 'Accounting Service', featuring a search bar and buttons for '+ Add', 'Cancel', and 'Delete'. A table below this section shows the current mappings:

Realm	Accounting Service
No Match	NA-Disabled
Unspecified	NA-Disabled

At the bottom right of the form, there are two buttons: 'OK' and 'Cancel'.

4. Configure the following:

1. Name: Type a name for the authentication service that you are adding.
2. Description: Type a description for the authentication service.
3. Accounting Service per Realm: Specify the accounting service for each of the realms specified in this table. If you set the accounting service for a particular realm to NA-Disabled,

then the accounting request is rejected. To create a new service click, **Create** and then configure **Realm** and **Accounting Service**.

5. Click **OK**.

You have completed creating a Realm-based proxy Accounting AAA server.

**NOTE:** You can also edit, clone and delete an AAA server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Realm Based Proxy** tab.

## Bonjour

Bonjour is Apple's implementation of a zero-configuration networking protocol for Apple devices over IP.

Bonjour allows OS X and iOS devices to locate other devices such as printers, file servers and other clients on the same broadcast domain and use the services offered without any network configuration required.

Multicast applications such as Bonjour require special consideration when being deployed over wireless networks. Bonjour only works within a single broadcast domain, which is usually a small area. This is by design to prevent flooding a large network with multicast traffic. However, in some situations, a user may want to offer Bonjour services from one VLAN to another.

SmartZone provides two features for controlling how and where Bonjour services are available to clients:

- [Bonjour Gateway](#) on page 238: Bridge Bonjour services from one VLAN to another.
- [Bonjour Fencing](#) on page 240: Limit the range in physical space at which Bonjour services are available to clients.

### Bonjour Gateway

Bonjour Gateway policies enable APs to provide Bonjour services across VLANs.

The controller's Bonjour gateway feature provides an mDNS proxy service configurable from the web interface to allow administrators to specify which types of Bonjour services can be accessed from/to which VLANs.

In order for the Bonjour Gateway to function, the following network configuration requirements must be met:

- The target networks must be segmented into VLANs.
- VLANs must be mapped to different SSIDs.
- The controller must be connected to a VLAN trunk port.

Additionally, if the VLANs to be bridged by the gateway are on separate subnets, the network has to be configured to route traffic between them.

The following requirements and limitations should be taken into consideration before enabling the Bonjour Gateway feature:

- Bonjour policy deployment to an AP takes effect after the AP joins the controller.

- Some APs of one local area link must be in one subnet. The switch interfaces connected to these APs must be configured in VLAN-trunk mode. Only by doing so can the designated AP receive all the multicast Bonjour protocol packets from other VLANs.
- Dynamic VLANs are not supported.
- Some AP models are incompatible with this feature due to memory requirements.

### Creating Bonjour Gateway Policies

A Bonjour Gateway policy must be created for an AP zone before the policy can be deployed to an AP or group of APs.

To create a Bonjour Gateway policy:

1. Go to **Services & Profiles > Bonjour**.
2. Select the **Gateway** tab, and then select the zone for which you want to create the policy.
3. Click **Create**.

The **Create Bonjour Policy** page appears.

**Figure 95: Creating a Bonjour Gateway Policy**

## Create Bonjour Policy

The screenshot shows the 'Create Bonjour Policy' configuration page. It features a form with the following elements:

- Name:** A text input field with a red asterisk indicating it is required.
- Description:** A text input field.
- Rules:** A dropdown menu currently showing 'Rules'.
- Toolbar:** A row of buttons: '+ Create' (with a plus icon), 'Configure' (with a pencil icon), 'Delete' (with a trash icon), 'Up' (with an upward arrow icon), and 'Down' (with a downward arrow icon).
- Table:** A table with the following columns: 'Priority', 'Bridge Service', 'From VLAN', 'To VLAN', and 'Notes'. The table body is currently empty.
- Buttons:** 'OK' and 'Cancel' buttons located at the bottom right of the form area.

4. Configure the following:

1. **Name:** Type a name for the policy.
2. **Description:** Type a description for the policy.
3. **Rules:** Create the policy rule by configuring the following
  - a. Click **Create**. The **Create Bonjour Policy Rule** page appears.
  - b. Configure the following options:
    - **Bridge Service:** Select the Bonjour service from the list.
    - **From VLAN:** Select the VLAN from which the Bonjour service will be advertised.
    - **To VLAN:** Select the VLAN to which the service should be made available.

- **Notes:** Add optional notes for this rule.
- c. Click **OK**.

You have created a Bonjour policy rule.

4. Click **OK**.

You have created a Bonjour policy with a rule.

**NOTE:** You can also edit, clone and delete the policy by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Gateway** tab.

You may now continue to apply this Bonjour gateway policy to an AP or AP group, as described in [Applying a Bonjour Gateway Policy to an AP or AP Group](#) on page 240.

### Applying a Bonjour Gateway Policy to an AP or AP Group

Once a Bonjour Gateway policy is created, you can select which AP (or AP group) will serve as the gateway for Bonjour services.

To apply a Bonjour Gateway policy to an AP or AP group:

1. Go to **Access Points > Access Points**.
2. Select the AP or AP group that you want to configure from the zone in which the AP/group exists.
3. Click **Configure**.
4. Expand the **Advanced Options**, and in **Bonjour Gateway**, enable the check box next to **Enable as Bonjour Gateway with policy**, and select the policy you created from the drop-down list.
5. Click **OK** to save your changes.

## Bonjour Fencing

Bonjour Fencing provides a mechanism to limit the scope of Bonjour (mDNS) service discovery in the physical/spatial domain.

While Bonjour Fencing is related to Bonjour Gateway, they are two separate features designed for different purposes. Bonjour Gateway bridges mDNS services across VLANs, and is useful because Bonjour is designed as a same-VLAN protocol. Bonjour Fencing limits the range of Bonjour service discovery within physical space, which is useful because logical network boundaries (e.g. VLANs) do not always correlate well to physical boundaries within a building/floor.

The following considerations should be taken into account before deploying Bonjour fencing policies:

- Bonjour fencing is not supported on Mesh APs.
- Switch interfaces to which APs are connected must be configured in VLAN trunk mode so that Bonjour traffic gets forwarded across VLANs based on Bonjour Gateway Policies.
- Bonjour fencing is implemented at the AP, not at the controller.
- Fencing policies can be applied on a zone level only, and cannot be configured per AP group.



- In order for a wired fencing policy to work properly, wireless fencing for the same mDNS service should also be enabled. If wired fencing is enabled but wireless is disabled, APs that are not the "closest AP" will be unable to determine whether the source of the mDNS advertisement was wired or wireless.
- Bonjour fencing will work for local breakout scenarios, but will not work for tunnel based configuration.

### Creating Bonjour Fencing Policies

Bonjour Fencing policies can be created and applied to a zone at the same time using the Fencing tab on the **Services and Profiles > Bonjour** screen.

To create a Bonjour Fencing policy:

1. Go to **Services & Profiles > Bonjour**.
2. Select the **Fencing** tab, and then select the zone for which you want to create the policy.
3. Click **Create**.

The **Create Bonjour Fencing Policy** page appears.

**Figure 96: Creating a Bonjour Fencing Policy**

The screenshot shows a web interface for creating a Bonjour Fencing Policy. It features two text input fields at the top: 'Name' (with a red asterisk indicating it is required) and 'Description'. Below these is a dropdown menu labeled 'Fencing Rule'. Underneath the dropdown are three buttons: '+ Create', 'Configure' (with a pencil icon), and 'Delete' (with a trash can icon). A table is displayed below the buttons, with columns for 'Device Type', 'Device MAC', 'Closest AP', 'Service', 'Fencing Range', and 'Description'. The table is currently empty. At the bottom right of the form are two buttons: 'OK' and 'Cancel'.

4. Configure the following:

1. **Name:** Type a name for the policy.
2. **Description:** Type a description for the policy.
3. **Fencing Rule:** Create the policy rule by configuring the following:

**Figure 97: Fencing Rule**

# Fencing Rule

\* [?] Device Type: Wireless ▼

[?] Device MAC:

[?] Closest AP:

\* Service: No data available ▼

\* Fencing Range: Same AP ▼

Description:

OK Cancel

- a. Click **Create**. The **Fencing Rule** page appears.
- b. Configure the following options:

- **Device Type:** Select the Wireless or Wired network connection method for the device advertising Bonjour services.

When you select Wired, you must also specify the MAC address of the device advertising Bonjour services in **Device MAC**, and the access point that is physically closest to the wired device in **Closest AP**. Setting the closest AP creates a physical anchor point for fencing, and the closest AP is auto-detected for wireless devices, based on the AP association.

- **Service:** Select one of the Bonjour services from the drop-down list.
- **Fencing Range:** Select the fencing range to be the Same AP or 1-Hop AP Neighbors.
- **Description:** Specify any notes you may need to refer.

- c. Click **OK** to save the rule.

You have created a Bonjour fencing rule. Each policy can contain up to 32 rules.

4. Click **OK** to save the policy.

You have created a Bonjour fencing policy.

**NOTE:** You can also edit, clone and delete the policy by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Fencing** tab.

## Working with Tunnels and Ports

### Creating a Ruckus GRE Profile

You can configure the Ruckus GRE tunnel profile of the controller to manage AP traffic.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Ruckus GRE** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Ruckus GRE Profile** page appears.

**Figure 98: Creating a Ruckus GRE Profile**

# Create Ruckus GRE Profile

\* Name:

Description:

Ruckus Tunnel Mode:  Support for APs behind NAT.

Tunnel Encryption:  Enable tunnel encryption

\* WAN Interface MTU:  Auto  Manual  bytes (850-1500)

**OK** **Can**

4. Configure the following:

1. Name: Type a name for the profile.
2. Description: Type a description for the profile.
3. Ruckus Tunnel Model: Select a protocol to use for tunneling WLAN traffic back to the controller.
  - GRE + UDP: Select this option to allow APs behind a NAT server to tunnel WLAN traffic back to the controller.
  - GRE: Select this option to tunnel regular WLAN traffic only.

4. Tunnel Encryption: Select the **Enable tunnel encryption** check box if you want managed APs to decrypt 802.11 packets, and then use an AES encrypted tunnel to send them to the controller. By default, when WLAN traffic is tunneled to the controller, only the management traffic is encrypted; data traffic is unencrypted.
5. WAN Interface MTU: Set the maximum transmission unit (MTU) for the tunnel to either Auto (default) or Manual (a specific size 850 to 1500 bytes). MTU is the size of the largest protocol data unit that can be passed on the controller network.
6. Click **OK**.

You have created the Ruckus GRE profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Ruckus GRE** tab.

### Creating a Soft GRE Profile

You can configure the Soft GRE tunnel profile of the controller to manage AP traffic.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Soft GRE** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Soft GRE Profile** page appears.

**Figure 99: Creating a Soft GRE Profile**

## Create SoftGRE Profile

\* Name:

Description:

Gateway IP Mode:  IPv4  IPv6

\* Primary Gateway Address:

Secondary Gateway Address:

\* Gateway Path MTU:  Auto  Manual  bytes (IPv4:850-1500,IPv6:1384-1500)

\* ICMP Keep Alive Period (secs):  (1-180)

\* ICMP Keep Alive Retry:  (2-20)

**OK** **Cancel**

4. Configure the following:

1. Name: Type a name for the profile.
2. Description: Type a description for the profile.
3. Gateway IP Mode: Select IPv4 or IPv6 addressing.
4. Primary Gateway Address: Type the IP address or fully-qualified domain name (FQDN) of the primary gateway server.
5. Secondary Gateway Address: If you have a secondary gateway server on the network, type its IP address or FQDN in the box provided. If the controller is unable to reach the primary gateway server, it will automatically attempt to reach the secondary gateway address that you specify here.
6. Gateway Path MTU: Set the maximum transmission unit (MTU) for the gateway path. Options include Auto (default) and Manual (range is 850 to 1500 bytes).
7. ICMP Keep Alive Period: Type the time interval (in seconds) at which APs send a keepalive message to the active third party WLAN gateway. The range is 1 to 180 seconds and the default value is 10 seconds.
8. ICMP Keep Alive Retry: Type the number of keepalive attempts that APs wait for a response from the active third party WLAN gateway before failing over to the standby WLAN gateway. The range is 2 to 10 retries and the default value is 5 retries.
9. Force Disassociate Client: Enable this option by selecting the check-box if you want to disassociate the client when AP fails over to another tunnel.
10. Click **OK**.

You have created the Soft GRE profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Soft GRE** tab.

## Creating an IPsec Profile

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **IPsec** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create IPsec Profile** page appears.

**Figure 100: Creating an IPsec Profile**

## Create IPsec profile

The screenshot shows a configuration window titled "Create IPsec profile". The window contains three main sections: "General Options", "Authentication", and "Security Association". Under "General Options", there are three text input fields: "Name:", "Description:", and "Security Gateway:". The "Authentication" and "Security Association" sections are currently collapsed, indicated by right-pointing triangles. At the bottom of the window, there are two buttons: "OK" and "Cancel".

#### 4. Configure the following:

1. Name: Type a name for the profile.
2. Description: Type a description for the profile.
3. Security Gateway: Type the IP address or FQDN of the IPsec server. If you use the IP address, the IP address format that you must enter will depend on the IP mode that is configured on the controller.
4. IP Mode: Select IPv4 or IPv6 addressing modes (Option only applicable to SZ300).
5. Authentication: Select Preshared Key to use PSK for authentication or Certificate to use an X.509 certificate on the certificate authority (CA) or registration authority (RA) server. The controller uses the CMPv2 protocol to obtain the signed certificate from the CA/RA server.

If you selected Preshared Key, type the PSK in this box. The PSK must be eight to 128 ASCII characters in length.

#### 6. Security Association

- a. IKE Proposal Type: Select Default to use the default Internet Key Exchange (IKE) security association (SA) proposal type or select Specific to manually configure the IKE SA proposal. If you clicked Specific, you will need to configure the following settings:
  - Encryption Algorithm: Options include 3DES, AES128, AES192, and AES256.
  - Integrity Algorithm: Options include MD5, SHA1, AES-XCBC, SHA256, SHA384, and SHA512.
  - Pseudo-Random Function: Options include Use integrity ALG, PRF-MD5, PRF-SHA1, PRF-AES-XCBC, PRF-AES-CMAC, PRF-SHA256, and PRF-SHA384.

- DH Group: Options for Diffie-Hellman groups for IKE include modp768, modp1024, modp1536, modp2048, modp3072, modp4096, modp6144, and modp8192.
- b. ESP Proposal Type: Click Default to use the default Encapsulating Security Payload (ESP) SA proposal type or click Specific to manually configure the ESP proposal. If you clicked Specific, you will need to configure the following settings:
  - Encryption Algorithm: Options include 3DES, AES128, AES192, AES256, and NONE.
  - Integrity Algorithm: Options include MD5, SHA1, AES-XCBC, SHA256, SHA384, and SHA512.
  - DH Group: Options for Diffie-Hellman groups for ESP include None, modp768, modp1024, modp1536, modp2048, modp3072, modp4096, modp6144, and modp8192.

## 7. Rekey Options

- a. Internet Key Exchange: To set time interval at which the IKE key renews, select a time unit (day, hour, or minute) from the drop-down list, and then type a number in the box. To disable IKE rekey, select the Disable check box. SmartZone 100/Virtual SmartZone Essentials for Release 3.4 Administrator Guide 82 Configuring the Wireless Network Configuring Access Points.
- b. Encapsulating Security Payload: To set time interval at which the ESP key renews, select a time unit (day, hour, or minute) from the drop-down list, and then type a number in the box. To disable ESP rekey, select the Disable check box.

## 8. Certificate Management Protocol

- a. DHCP Option 43 Sub Code for CA/RA Address: Set the DHCP Option 43 subcode that will be used to discover the address of the CA/RA server on the network. The default subcode is 8.
- b. CA/RA Address: Type the IP address or FQDN of the CA/RA server. If you use the IP address, the IP address format that you must enter will depend on the IP mode that is configured on the controller.
- c. Server Path: Type the path to the X.509 certificate on the CA/RA server.
- d. DHCP Option 43 Sub Code for Subject Name of CA/RA: Set the DHCP Option 43 subcode that will be used to discover the subject name of the CA/RA server on the network. The default subcode is 5.
- e. Subject Name of CA/RA: Type an ASCII string that represents the subject name of the CA/RA server.

## 9. Advanced Options

- a. DHCP Option 43 Sub Code for Security Gateway: Set the DHCP Option 43 subcode that will be used to discover the address of the security gateway on the network. The default subcode is 7.
- b. Retry Limit: Set the number of times that the controller will attempt to discover the address of the security gateway. The default retry count is 5. Accepted values are 0 (disable) to 16.
- c. Replay Window: Set the ESP replay window (in packets). The default size is 32 packets. Accepted values are 0 (disable) to 32 packets.

- d. IP Compression: To enable IP Payload Compression Protocol (IPComp) compression before encryption, click Enable. The default value is Disable.
- e. Force NAT-T: To enforce UDP encapsulation of ESP packets, click Enable. The default value is Disable.
- f. Dead Peer Detection: By default, the IKE protocol runs a health check with remote peer to ensure that it is alive. To disable this health check, click Disable.
- g. NAT-T Keep Alive Interval: To set the keep alive interval (in seconds) for NAT traversal, type a value in the box. The default keep alive interval is 20 seconds. Accepted values are 1 to 65536. To disable the keep alive interval, click Disable.
- h. FailOver Options: To configure the failover settings when APs are unable to connect, configure the following:
  - i. Retry Period: Set the number of days (minimum 3 days) during which APs will keep attempting to connect. To keep try indefinitely, select the **Forever** check box.
  - j. Retry Interval: Set the interval (in minutes) between each retry attempt. The default retry interval is 1 minute. Accepted values are from 1 to 30 minutes.
  - k. Retry Mode: If you want APs to fall back to the specified primary security gateway, click Revertive. If you want APs to maintain connectivity with the security gateway to which they are currently connected, click **Non-revertive**.

10. Click **OK**.

You have created the IPsec GRE profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **IPsec GRE** tab.

## Creating an Ethernet Port Profile

An Ethernet port profile contains settings that define how an AP will handle VLAN packets when its port is designated as either trunk, access, or general port. By default, three Ethernet port profiles exist: General Port, Access Port and Trunk Port.


1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Ethernet Port** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.



The **Create Ethernet Port** page appears.

**Figure 101: Creating a Ethernet Port**

## Create Ethernet Port

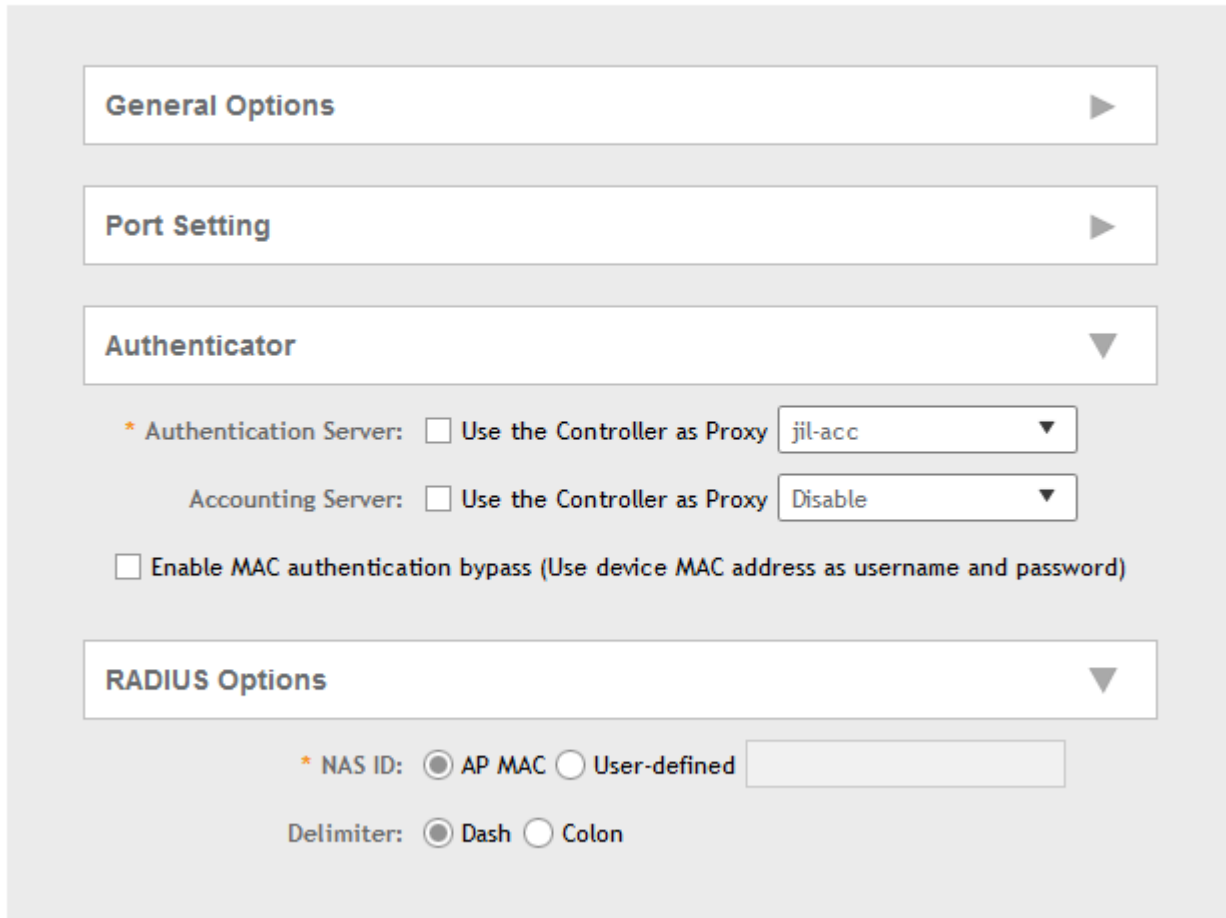

**General Options** ▶

**Port Setting** ▶

**Authenticator** ▼

\* Authentication Server:  Use the Controller as Proxy  ▼

Accounting Server:  Use the Controller as Proxy  ▼

Enable MAC authentication bypass (Use device MAC address as username and password)

**RADIUS Options** ▼

\* NAS ID:  AP MAC  User-defined

Delimiter:  Dash  Colon

#### 4. Configure the following:

##### 1. General Options

- a. Name: Type a name for the Ethernet port profile that you are creating.
- b. Description: Type a short description about the profile.
- c. Type: The Ethernet port type defines how the AP will manage VLAN frames. You can set Ethernet ports on an AP to one of the following types: Trunk Port, Access Port or General Port.

##### 2. Port Setting

- a. Tunnel: Select this check box to enable tunneling on the Ethernet port.
- b. VLAN Untag ID: Type the ID of the native VLAN (typically, 1), which is the VLAN into which untagged ingress packets are placed upon arrival. If your network uses a different

VLAN as the native VLAN, configure the AP Trunk port's VLAN Untag ID with the native VLAN used throughout your network.

- c. VLAN Members: Type the VLAN IDs that you want to use to tag WLAN traffic that will use this profile. You can type a single VLAN ID or a VLAN ID range (or a combination of both). The valid VLAN ID range is 1 to 4094.
- d. Enable Dynamic VLAN: Select this check box if you want the controller to assign VLAN IDs on a per-user basis. Before enabling dynamic VLAN, you need to define on the RADIUS server the VLAN IDs that you want to assign to users.

**NOTE:** This option is only available when Type is set to Access Port and 802.1X authentication is set to MAC-based Authenticator.

3. Guest VLAN: If you want to assign a device that fails authentication to still be able to access the Internet but to internal network resources, select this check box.

**NOTE:** This check box only appear when the Enable Dynamic VLAN check box is selected.

#### 4. 802.1X

- MAC-based Authenticator: If you select this authenticator, each MAC address host is individually authenticated. Each newly-learned MAC address triggers an EAPOL request-identify frame.
- Port-based Authenticator: If you select this authenticator, only a single MAC host must be authenticated for all hosts to be granted access to the network.

#### 5. Authenticator

- a. Authentication Server: Select the check-box and a controller from the drop-down menu to use the controller as a proxy authentication server.
- b. Accounting Server: Select the check-box and a controller from the drop-down menu to use the controller as a proxy accounting server.
- c. Enable MAC authentication bypass: Select this check-box if you want to use the device MAC address as access credentials (username and password).

#### 6. RADIUS Options

- a. NAS ID: Set the NAS ID for the AP to communicate with the RADIUS server. Options include using the AP MAC address or any User-defined address.
- b. Delimiter: If AP MAC is selected to configure the NAS ID, then you can choose between Dash or Colon as delimiters to separate.

#### 7. Click **OK**.

You have created the Ethernet Port profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Ethernet Port** tab.

## Creating a Tunnel DiffServ Profile

If you need to configure the type of traffic (ToS) bit settings for the access side traffic from Ruckus Wireless APs, follow these steps to create a Differentiated Services (DiffServ) profile. This profile can only be applied to Ruckus GRE and SoftGRE traffic.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **DiffServ** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Tunnel DiffServ Profile** page appears.

**Figure 102: Creating a Tunnel DiffServ Profile**

## Create Tunnel DiffServ profile

\* Name:

Description:

\* Tunnel DiffServ:  Set Uplink DiffServ

Set Downlink DiffServ  Downlink DiffServ only applies to RuckusGRE tunnel

Preserved DiffServ:   Up to 8 preserved DiffServ allowed

4. Configure the following:
  1. Name: Type a name for the DiffServ profile that you are creating.
  2. Description: Type a brief description for the DiffServ profile.
  3. Tunnel DiffServ: configure the following options.
    - a. Set Uplink DiffServ: Select the check box if you want to set the Differentiated Services field for uplink user traffic from Ruckus Wireless APs towards either the controller or a third SmartCell Gateway 200/Virtual SmartZone High-Scale for Release 3.4.1 Administrator Guide 92 Managing Ruckus Wireless AP Zones Creating a DiffServ Profile party gateway via SoftGRE. Configure the desired value to be set by the Ruckus Wireless AP.
    - b. Set Downlink DiffServ: Select the check box if you want to set the Differentiated Services field for downlink user traffic from the controller towards the AP, and then configure the desired value to be set by the Ruckus Wireless AP.

4. Preserved DiffServ: Configure up to eight (8) entries in the preserved DiffServ list. The Preserved DiffServ list allows the preservation of values that have been already marked in incoming packets either in uplink or downlink traffic.
5. Click **OK**.

You have created the DiffServ profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **DiffServ** tab.

## Communications Assistance for Law Enforcement Act (CALEA)

The Communications Assistance for Law Enforcement Act is a law passed by the United States to enhance the ability of law enforcement agencies to conduct electronic surveillance by requiring that telecommunications carriers and manufacturers of telecommunications equipment to modify and design their equipment, facilities, and services to ensure that they have built-in surveillance capabilities.

**NOTE:** This feature only applies to the SmartZone 300 (SZ300) controller.


1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **CALEA** tab.
3. Server IP: Type the CALEA server IP address.
4. Click **Create**.  
The **Create UE MAC** page appears.
5. MAC Address: Type the MAC address of the client/user equipment for which CALEA mirroring is required. The MAC address is sent by the SZ controller to the vSZ-D.

## Enabling Flexi VPN

You can enable Flexi-VPN and limit the network resources that a UE can access. Flexi-VPN allows an administrator to customize the network topology, and is thereby able to control the network resources accessible to the end-user. This feature is only supported on vSZ-E and vSZ-H, and is enabled by purchasing the Flexi-VPN license.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Forwarding Rule (vSZ-D)** tab.  
The page with Flexi-VPN and L3 Roaming settings appears.

**Figure 103: Enabling Flexi-VPN**

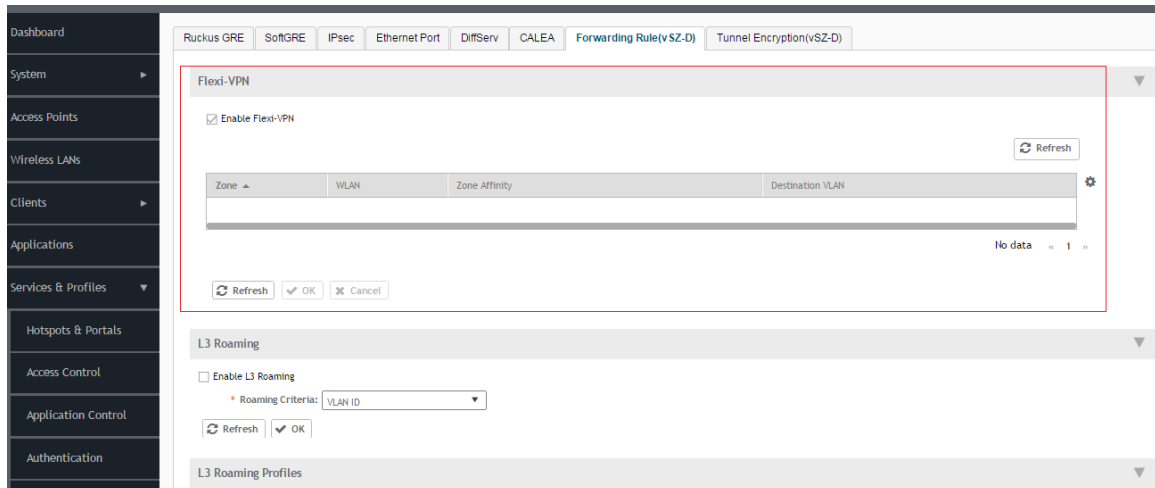

**NOTE:** The Flexi-VPN option is only available if the Access VLAN ID is 1, and when VLAN Pooling, Dynamic VLAN and Core Network VLAN options are disabled.

**NOTE:** You can only apply 1024 WLAN IDs to a Flexi-VPN profile.

Flexi-VPN supports IPv4 addressing formats and Ruckus GRE tunnel protocol. It does not support IPv6 addressing formats.

3. Select a virtual data plane for which you want to enable the Flexi-VPN feature, and then select the **Enable Flexi-VPN** check-box.
4. Click **OK**.

You have successfully enabled the Flexi-VPN feature on the selected vDP.

### Enabling L3 Roaming Criteria for vDPs

Using the layer 3 roaming feature, clients can roam across APs in the network (from one data plane to another data plane). This is typically required when the number of clients in the network increases and clients have to roam from a network that they were connected to, to another WLAN network with similar access settings. This feature enables seamless roaming and ensures session continuity between the client and the network.


**NOTE:** L3 roaming is only supported on vSZ-H and vSZ-E.

You can configure the roaming criteria for a vDP so that it uses one of these two options - UE subnet or VLAN ID to access another vDP to connect to, within a network. Before this, you must ensure that the L3 roaming feature is enabled in the vDP.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Forwarding Rule (vSZ-D)** tab.

The page with Flexi-VPN and L3 Roaming settings appears.

**Figure 104: Enabling L3 Roaming**

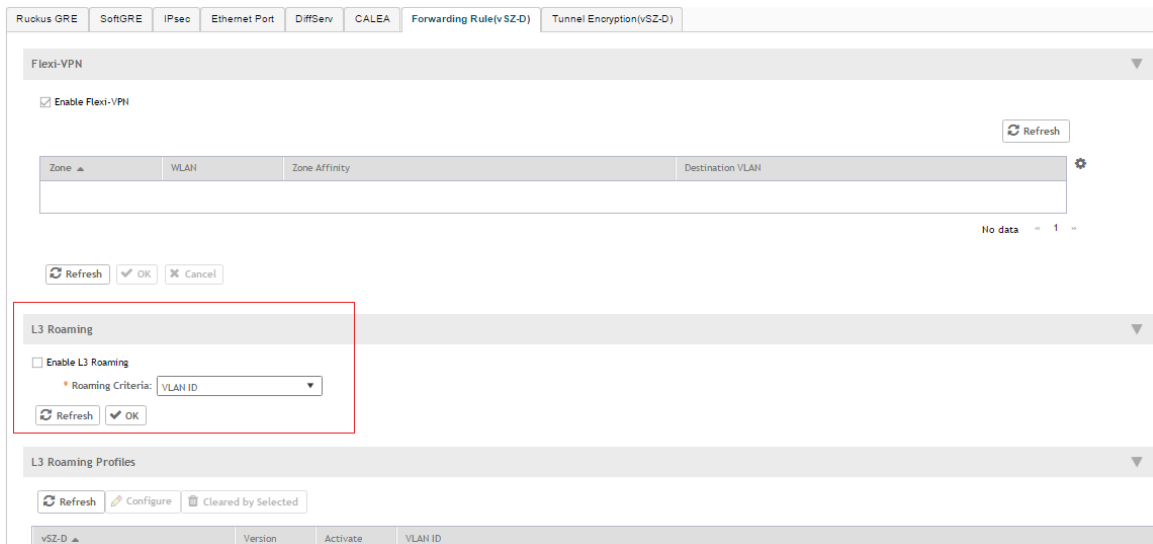

3. Select the **Enable L3 Roaming** check-box.
4. From the **Roaming Criteria** drop-down, select one of these options to define the data format to establish connection between vDPs: UE Subnet or VLAN ID.
5. Click **OK**.

You have successfully enabled L3 roaming, and also set the roaming criteria based on which vDPs would connect within the network.

**NOTE:** A fresh controller software installation or upgrade from a version that does not support L3 roaming resets the L3 roaming configuration and it remains disabled. You must enable L3 roaming on a vDP again.

### Editing L3 Roaming for a vDP

For L3 roaming to work without session break, the vDPs between which the roaming happens must both be enabled with the L3 Roaming feature.

**NOTE:** If the IP address of the UE changes, then the session breaks.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Forwarding Rule (vSZ-D)** tab.  
The page with Flexi-VPN and L3 Roaming settings appears.
3. In L3 Roaming Profiles, select a virtual data plane for which you want to enable the L3 roaming feature, and then click **Configure**.  
The **Edit L3 Roaming** page appears.

**Figure 105: Configuring the L3 Roaming setting for a vDP**

**Edit L3 Roaming** [X]

vSZ-D: LawrenceWu-B799-vDP@00:0C:29:  
Version: 3.5.0.0.799  
Activate: Disable

[+ Create] [Delete]

UE Subnet

[OK] [Cancel]

4. In **Activate**, select Enable or Disable as appropriate.
5. Based on the *Roaming Criteria* that you set, you will be able to add a UE subnet or a VLAN ID to the selected vDP. Click **Create** to add a UE Subnet or VLAN ID to the vDP. The **UE Subnet** or **Add VLAN ID** page appears, respectively, depending on the roaming criteria you chose.
6. Type the **UE Subnet** IP address or the **VLAN ID** as appropriate.
7. Click **OK**.
8. Click **OK** again.

In L3 Roaming Profiles, the following information about the vDP is displayed:

- vSZ-D: Displays the name of the virtual data plane.
- Version: Displays the version of the vDP.
- Activate: Displays whether L3 roaming is enabled or disabled.
- UE Subnet or VLAN ID: Depending on the global settings you choose for the roaming criteria, the UE subnet IP address or the VLAN ID is displayed.

You have enabled L3 roaming in the selected vDP.


## Enabling Tunnel Encryption

You can use the tunnel encryption feature to encrypt data for a private network, through a public network. This feature is available in vSZ-H and vSZ-E.

1. Go to **Services & Profiles > Tunnels and Ports**.
2. Select the **Tunnel Encryption (vSZ-D)** tab, and then select the zone for which you want to create the profile.

The **Tunnel Encryption (vSZ-D)** page appears.

**Figure 106: Tunnel Encryption (vSZ-D)**

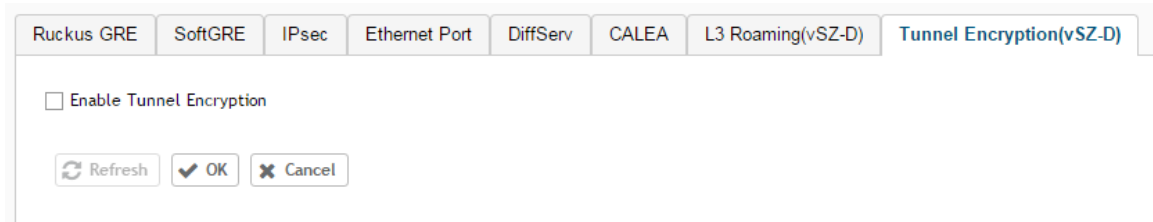

3. Select the **Enable Tunnel Encryption** check-box.
4. Click **OK**.

You have successfully enabled tunnel encryption.

## Managing Core Network Tunnels

Tunneling protocols allows a user to access or provide a network service that the network does not support or provide directly.

### Creating Bridge Forwarding Profiles

An Bridge forwarding profile defines the DHCP configuration for the core network.

1. Go to **Services & Profiles > Core Network Tunnel**.
2. Select the **Bridge** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Bridge Forwarding Profile** page appears.

**Figure 107: Creating a Bridge Forwarding Profile**



## Create Bridge Forwarding Profile

Name:

Description:

DHCP Relay ▼

Enabled DHCP Relay

DHCP Server 1:

DHCP Server 2:   Send DHCP requests to both servers simultaneously

DHCP Option 82:  Enable DHCP Option 82

Subopt-1 with format  ▼

Subopt-2 with format  ▼

Subopt-150 with VLAN-ID

Subopt-151 with format  ▼

OK Cancel

#### 4. Configure the following:

1. Name: Type a name for the profile that you are creating.
2. Description: Type a brief description for the profile.
3. DHCP Relay: Select the **Enable DHCP Relay** check-box and configure the DHCP server IP address and DHCP option 82 settings.
  - a. DHCP Server 1: Type the IPv4 address of the DHCP server that will allocate IP addresses to DHCP clients.
  - b. DHCP Server 2: If a secondary DHCP server exists on the network, type the IPv4 address of the secondary server.
  - c. DHCP Option 82: Select this check box if you want the DHCP relay agent (in this case, the controller) to insert specific identification information into requests that are forwarded to the DHCP server. If you enabled DHCP Option 82, you can configure the following Option 82 sub-options by selecting the corresponding check boxes:
    - Subopt-1 with format: You can customize sub-option 1 (Circuit ID) to send only the AP's MAC address in hexadecimal format or the MAC address and ESSID. The default format is: IFName:VLAN-ID:ESSID:AP-Model:AP-Name:AP-MAC.
    - Subopt 2 with format: You can customize sub-option 2 (Remote ID), which sends the client's MAC address by default, to send the AP's MAC address, or the client MAC plus ESSID or AP MAC plus ESSID.
    - Subopt-150 with VLAN ID: This sub-option encapsulates the VLAN ID.
    - Subopt-151 with format: This sub-option can encapsulate either the ESSID or a configurable Area Name.

- 
- 4. Click **OK**.

You have created the Bridge forwarding profile.

**NOTE:** You can also edit and delete the profile by selecting the options **Configure** and **Delete** respectively, from the **Bridge** tab.

## Creating L2oGRE Forwarding Profiles

An L2oGRE forwarding profile defines the gateway and tunnel configuration for the core network of L2oGRE tunnels.

1. Go to **Services & Profiles > Core Network Tunnel**.
2. Select the **L2oGRE** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create L2oGRE Forwarding Profile** page appears.

**Figure 108: Creating a L2oGRE Forwarding Profile**

**Create L2oGRE Forwarding Profile**

Name:

Description:

**Core Network Gateway Settings**

Primary Gateway IP:

Secondary Gateway IP:

Gateway Path MTU:  Auto  Manual  bytes (850-1500)

ICMP Keep-Alive Period (secs):

ICMP Keep-Alive Retry:

**DHCP Relay**

**OK** **Cancel**

4. Configure the following:
  1. Name: Type a name for the profile that you are creating.
  2. Description: Type a brief description for the profile.

### 3. Core Network Gateway Settings

- a. Primary Gateway IP: Type the IP address of the primary gateway for the L2oGRE tunnel.
- b. Secondary Gateway IP: Type the IP address of the secondary gateway for the L2oGRE tunnel. If the primary gateway is unreachable, this gateway will be used for the L2oGRE tunnel.
- c. Gateway Path MTU: Set it the MTU manually or use Auto (default). MTU is the size of the largest protocol data unit (in bytes) that can be passed on the controller network.
- d. ICMP Keep-Alive Period (secs): Set the time in seconds between sending retry messages to the keepalive IP address. Enter an integer between 2 and 255. The default is 10 seconds.
- e. ICMP Keep-Alive Retry: Set the retry period to send messages to the keepalive IP address. The default value is 3 retries.

### 4. DHCP Relay: Select the **Enable DHCP Relay** check-box and configure the DHCP server IP address and DHCP option 82 settings.

- a. DHCP Server 1: Type the IPv4 address of the DHCP server that will allocate IP addresses to DHCP clients.
- b. DHCP Server 2: If a secondary DHCP server exists on the network, type the IPv4 address of the secondary server.
- c. DHCP Option 82: Select this check box if you want the DHCP relay agent (in this case, the controller) to insert specific identification information into requests that are forwarded to the DHCP server. If you enabled DHCP Option 82, you can configure the following Option 82 sub-options by selecting the corresponding check boxes:
  - Subopt-1 with format: You can customize sub-option 1 (Circuit ID) to send only the AP's MAC address in hexadecimal format or the MAC address and ESSID. The default format is: IFName:VLAN-ID:ESSID:AP-Model:AP-Name:AP-MAC.
  - Subopt 2 with format: You can customize sub-option 2 (Remote ID), which sends the client's MAC address by default, to send the AP's MAC address, or the client MAC plus ESSID or AP MAC plus ESSID.
  - Subopt-150 with VLAN ID: This sub-option encapsulates the VLAN ID.
  - Subopt-151 with format: This sub-option can encapsulate either the ESSID or a configurable Area Name.
  -

### 5. Click **OK**.

You have created the L2oGRE forwarding profile.

**NOTE:** You can also edit and delete the profile by selecting the options **Configure** and **Delete** respectively, from the **L2oGRE** tab.

## Creating TTG+PDG Profiles

TTG+PDG forwarding profile defines the gateway and tunnel configurations for core network GTP tunnels and LBO configurations.

This feature is only available in SCG200.

1. Go to **Services & Profiles > Core Network Tunnel**.
2. Select the **TTG+PDG** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create TTG+PDG Forwarding Profile** page appears.

**NOTE:** This feature only applies to SCG200.

**Figure 109: Creating a TTG+PDG Forwarding Profile**

## Create TTG+PDG Forwarding Profile

The screenshot shows a configuration window titled "Create TTG+PDG Forwarding Profile". It contains the following elements:

- Name:** A text input field.
- Description:** A text input field.
- Common Settings:** A section with a dropdown arrow, containing:
  - APN Format to GSN:** A dropdown menu with "DNS" selected.
  - Use APN-OI for DNS Resolution:** Radio buttons for "Yes" and "No", with "No" selected.
  - # of Accounting Retry:** A text input field with "5" entered.
  - Accounting Retry Timeout (secs):** A text input field with "5" entered.
  - PDG UE Session Idle Timeout (secs):** A text input field with "300" entered.
- DHCP Relay:** A section with a dropdown arrow.

At the bottom right of the window are two buttons: "OK" and "Cancel".

4. Configure the following:
  1. **Name:** Type a name for the profile that you are creating.
  2. **Description:** Type a brief description for the profile.
  3. **APN Format to GSN:** Select either DNS or String from the drop-down list.
  4. **Use APN-OI for DNS Resolution:** Specify if the APN-OI is required. Select Yes.
  5. **# of Accounting Retry:** Specify the interval (in minutes) at which the controller will recheck the primary TTG+PDG RADIUS profile, if it is available. The default interval is 5 minutes.
  6. **Accounting Retry Timeout (secs):** Type the timeout period (in seconds) after which an expected response message is considered to have failed.
  7. **PDG UE Session Idle Timeout (secs):** Type the timeout period (in seconds) after which an expected response message is considered to have failed.
  8. **DHCP Relay:** Select the **Enable DHCP Relay** check-box and configure the DHCP server IP address and DHCP option 82 settings.
    - a. **DHCP Server 1:** Type the IPv4 address of the DHCP server that will allocate IP addresses to DHCP clients.

- b. DHCP Server 2: If a secondary DHCP server exists on the network, type the IPv4 address of the secondary server.
  - c. DHCP Option 82: Select this check box if you want the DHCP relay agent (in this case, the controller) to insert specific identification information into requests that are forwarded to the DHCP server. If you enabled DHCP Option 82, you can configure the following Option 82 sub-options by selecting the corresponding check boxes:
    - Subopt-1 with format: You can customize sub-option 1 (Circuit ID) to send only the AP's MAC address in hexadecimal format or the MAC address and ESSID. The default format is: IFName:VLAN-ID:ESSID:AP-Model:AP-Name:AP-MAC.
    - Subopt 2 with format: You can customize sub-option 2 (Remote ID), which sends the client's MAC address by default, to send the AP's MAC address, or the client MAC plus ESSID or AP MAC plus ESSID.
    - Subopt-150 with VLAN ID: This sub-option encapsulates the VLAN ID.
    - Subopt-151 with format: This sub-option can encapsulate either the ESSID or a configurable Area Name.
    -
9. Forwarding Policy Per Realm: Specify the forwarding policy for each realm in the table. Configure APN, APN Type, Route Type and Profile Name.
10. Default APN Settings: From the drop-down menu, select the No Matching Realm Found and No Realm Specified.
11. Default APN per Realm: Add the realm and the default APN for that realm.
12. Click **OK**.

You have created the TTG+PDG forwarding profile.

**NOTE:** You can also edit and delete the profile by selecting the options **Configure** and **Delete** respectively, from the **TTG+PDG** tab.

## Creating Mixed Mode Tunnels

A mixed mode forwarding profile defines the policy and configuration for mixed core network tunnels.

This feature is only available in SCG200.

1. Go to **Services & Profiles > Core Network Tunnel**.
2. Select the **Mixed Mode** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Mixed Mode Forwarding Profile** page appears.

**NOTE:** This feature only applies to SCG200.

### Figure 110: Creating a Mixed Mode Forwarding Profile

## Create Mixed Mode Forwarding Profile

Name:

Description:

Forwarding Policy per Realm:

APN	APN Type	Route Type	Profile Name
<input type="text"/>	No data available	No data available	No data availa

Default APN Settings:

Default APN when:  Default APN:

OK Cancel

#### 4. Configure the following:

1. Name: Type a name for the profile that you are creating.
2. Description: Type a brief description for the profile.
3. Forwarding Policy Per Realm, specify the forwarding policy for each realm in the table. Configure APN, APN Type, Route Type and Profile Name.
4. Default APN Settings: From the drop-down menu, select the No Matching Realm Found and No Realm Specified.
5. Default APN per Realm: Add the realm and the default APN for that realm.
6. Click **OK**.

You have created the Mixed Mode forwarding profile.

**NOTE:** You can also edit, clone and delete the profile by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Mixed Mode** tab.

### Configuring the GGSN/PGW Service

This feature is only available in SCG200.

The controller has 3GPP-defined Tunnel Terminating Gateway (TTG) functionality, which enables it to act as a gateway between the UE (southbound) and the telecom core (northbound) to tunnel traffic between the UE (User Equipment, such as mobile phones) and controller gateway terminates the tunnel and then transfers the data over to GGSN (Gateway GPRS Serving Node) implementing the Gn interface via GTPv1 (Release 6). The Gn interface is used in controlling the

signal between controller and GGSN as well as for tunneling end user data payload within the backbone network between both the nodes.

GPRS Tunneling Protocol (GTP) transmits user data packets and signaling between controller and GGSN. GTP encapsulates traffic and creates GTP tunnels, which act as virtual data channels for transmission of packet data between controller and GGSN. A GTP tunnel is established between controller and GGSN for a data session initiated from UE.

A GTP tunnel is identified by a pair of IP addresses and a pair of GTP Tunnel End Point Identifiers (TEIDs), where one IP address and TEID is for the SGSN and the other is for GGSN. TEID is a session identifier used by GTP protocol entities in SGSN and GGSN.

GTP separates signaling from payload. Traffic is sorted onto a control plane (GTP-C) for signaling and a user plane (GTP-U) for user data. GTP-C is a tunnel control and management protocol and is used to create, modify and delete tunnels. GTP-U is a tunneling mechanism that provides a service for carrying user data packets.

1. Go to **Services & Profiles > Core Network Tunnel**.
2. Select the **GGSN/PGW** tab.

The **GGSN/PGW** page appears.

**NOTE:** This feature only applies to SCG200.

**Figure 111: GGSN/PGW**

The screenshot displays the configuration interface for GGSN/PGW. At the top, there are navigation tabs: Bridge, L2oGRE, 11G+PDG, Mixed Mode, and GGSN/PGW. The GGSN/PGW tab is selected. Below the tabs, the configuration is organized into three main sections:

- GTP Common Configuration:** This section contains five configuration items, each with a dropdown menu:
  - Response Timer (2-5 Seconds): 3
  - Number of Retries (N3 3-6): 5
  - Echo Request Timer (60-300 Seconds): 60
  - DNS Response Timeout (secs): 3
  - DNS # of Retry: 3
- DNS Servers:** This section features an 'Add Server' button and a table with one entry:
 

IP
10.1.13.26

 Below the table are buttons for 'Remove', 'Move Up', and 'Move Down'.
- APN Resolution:** This section includes a table for adding APN entries:
 

Domain Name	IP
ruckus1.com	10.1.13.48

 Above the table are input fields for 'Domain Name' and 'IP', along with '+ Add', 'x Cancel', and 'Delete' buttons.

3. Configure the following:

1. GTP Common Configuration

- a. Response Timer: Define the response expected from GGSN server from the drop down list, which ranges from 2 to 5 seconds. The controller will attempt to contact the GGSN during call establishment.

- b. Number of Retries: Define the number of times that controller will attempt to contact the GGSN. If all attempts fail, the relevant alarm is raised to confirm the failure of the GGSN path. For example, if the response timer is 3 and the number of retries is 5, it means that for each retry, controller will for 3 seconds.
  - c. Echo Request Timer: Define number of seconds that the GGSN waits before sending an echo-request message to check for GTP path failure.
  - d. DNS Response Time: Specify the maximum time that DNS waits for a response from a signaling request message.
  - e. DNS # Retry: specify the maximum number of times that the DNS attempts to send a signaling request.
2. DNS Servers: Click **Add Server** to add a DNS IP address. If you're adding multiple DNS IP addresses, you can set their priority by clicking the **Move Up** and **Move Down** buttons. DNS servers that are higher up on the list of servers are given higher priority.
  3. APN Resolution: Type the GGSN domain name and IP Address.
4. Click **OK**.

## Location Services

If your organization purchased the Ruckus Wireless Smart Positioning Technology (SPoT) location service, the controller must be configured with the venue information that is displayed in the SPoT Administration Portal.

After completing purchase of the SPoT location service, you will be given account login information that you can use to log into the SPoT Administration Portal. The Admin Portal provides tools for configuring and managing all of your venues (the physical locations in which SPoT service is deployed). After a venue is successfully set up, you will need to enter the same venue information in the controller.

1. Go to **Services & Profiles > Location Services**.

The **Location Services** page appears.

**Figure 112: Location Services**

The screenshot shows the 'Location Services' page with a table containing two records. The table has columns for Venue Name, Server Address, and Port. Above the table are buttons for Create, Configure, Clone, and Delete, along with a search box and a Refresh button. At the bottom right, it indicates '2 total records' and a page number '1'.


Venue Name ▲	Server Address	Port
Venue1	lbs.ruckuswireless.com	50
Venue2	lbs.ruckuswireless.com	50

2. Click **Create**.



The **Create LBS Server** page appears.

**Figure 113: Creating an LBS Server**

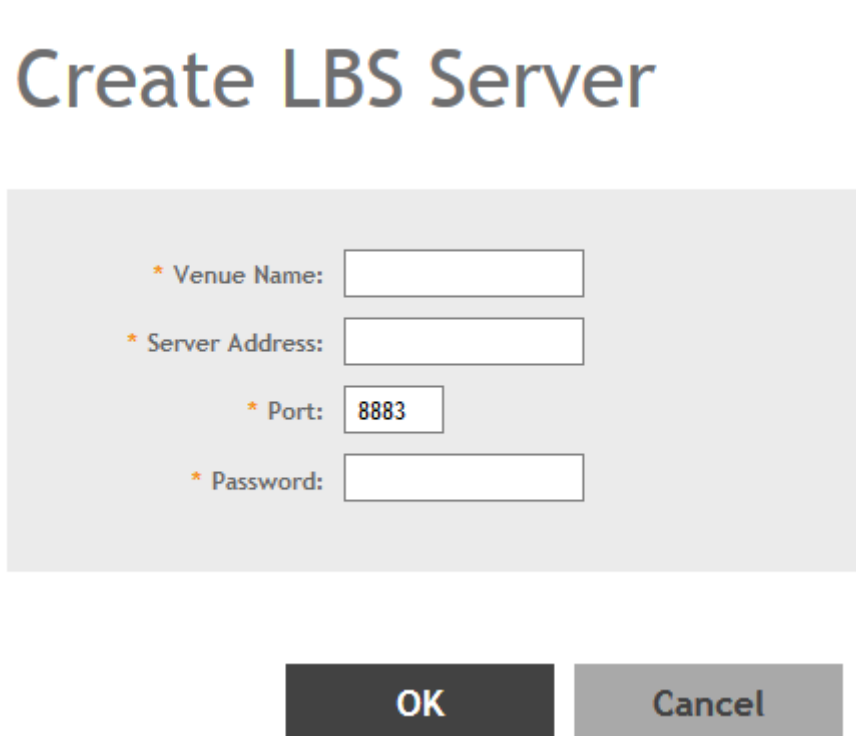

**Create LBS Server**

\* Venue Name:

\* Server Address:

\* Port:

\* Password:

**OK** **Cancel**

**3.** Configure the following:

1. Venue Name: Type a venue name for server.
2. Server Address: Type the IP address of the server.
3. Port: Type the port number to communicate with the server. Default is 8883.
4. Password: Type the password to access the server.
5. Click **OK**.

You have created the location-based service on the controller.

**NOTE:** You can also edit, clone and delete the service by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Location Services** tab.

## DHCP

DHCP functionality on SZ-managed APs allows customers to reduce costs and complexity by removing the need for an extra box (DHCP/NAT router) to provide IP addresses to clients.

In highly distributed environments, particularly those with only a few APs per site, the ability for an AP or a set of APs to provide DHCP/NAT support to local client devices simplifies deployment by providing all-in-one functionality on the AP, which eliminates the need for a separate router

and DHCP server for each site. It also eases site management by providing central control and monitoring of the distributed APs and their clients.

Three general DHCP scenarios are supported:

- SMB Single AP: DHCP is running on a single AP only. This AP also functions as the Gateway AP.
- SMB Multiple APs (<12): DHCP service is running on all APs, among which two of the APs will be Gateway APs. These two Gateway APs will provide the IP addresses as well as Internet connectivity to the clients via NAT.
- Enterprise (>12): For Enterprise sites, an additional on site vDP will be deployed at the remote site which will assume the responsibilities of performing DHCP/NAT functions. Therefore, DHCP/NAT service will not be running on any APs (they will serve clients only), while the DHCP/NAT services are provided by the onsite vDP.

### Caveats and Limitations

The SmartZone DHCP on AP functionality has some limitations. These limitations should be considered before enabling this feature:

- Running DHCP/NAT services on an AP can consume significant memory resources. Therefore, Ruckus recommends deploying this feature only on APs with 256MB or more RAM.
- Max 4 IP address pools. Each pool must have non-overlapping IP addresses, and must be assigned a VLAN ID (2~4094).
- Max 1,000 IP addresses per pool.
- The following features are incompatible with the DHCP feature and cannot be enabled for a zone in which DHCP is enabled (or, if enabled for a zone, DHCP cannot be enabled or will be allowed but with a warning message):
  - Application Recognition and Control
  - IPv6
  - WeChat WLANs
  - Mesh (irrelevant for single-AP scenarios, configurable but with limitations for multi-AP scenarios)
  - DVLAN
  - VLAN Pooling
  - Bonjour Gateway
  - Bonjour Fencing
  - Client Isolation: If any WLAN within a zone uses a "Manual-Only" client isolation whitelist, DHCP cannot be enabled. Only Auto and Hybrid options are supported for zones with DHCP enabled.


### Configuring DHCP Service Settings

Using DHCP service settings, you can configure an AP to assign private IP addresses to Wi-Fi clients without the need for a separate DHCP server (router).

To configure DHCP services:

1. Go to **Services & Profiles > DHCP**.
2. Select the **Setting** tab, and then select the zone for which you want to configure the settings.
3. Select a Zone from the zone list on the left side of the screen, and click **Enable DHCP Service on AP**.


Figure 114: Enabling DHCP Service

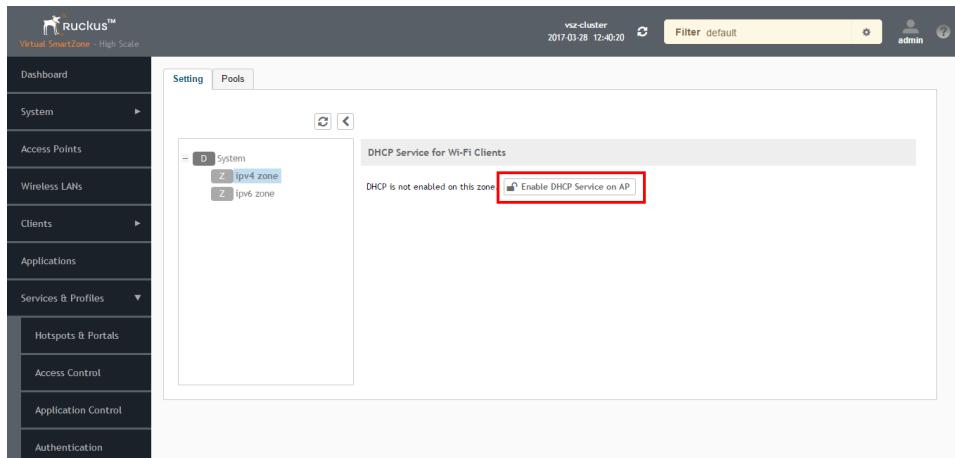

4. Click **Edit DHCP Service on AP**. The **DHCP Settings** wizard appears.

Figure 115: DHCP Settings wizard


## DHCP Settings

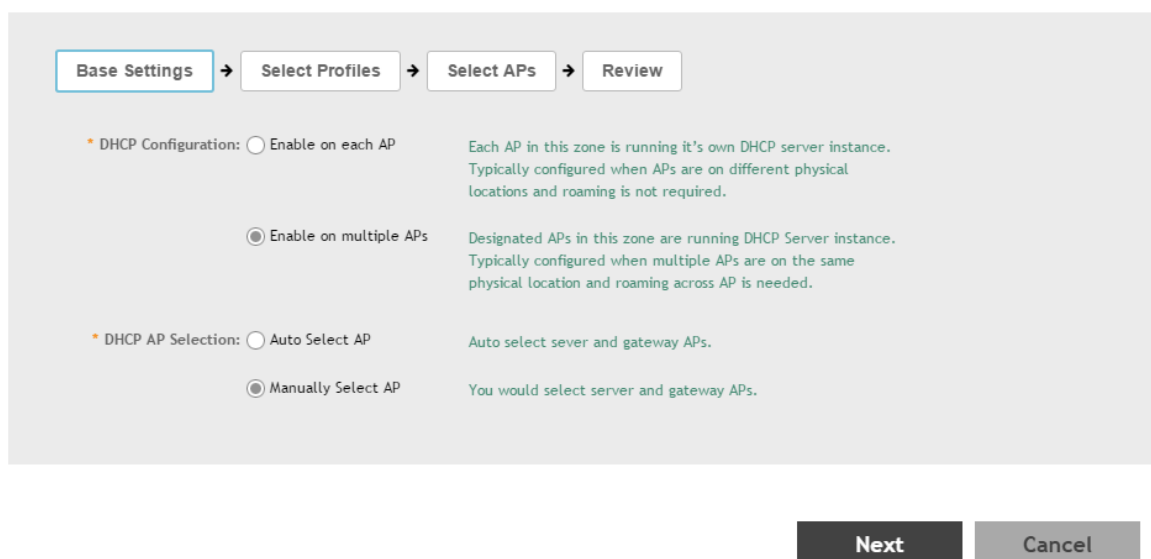

5. On the first page of the wizard (**Base Settings**), configure the DHCP Configuration as follows:

- **Enable on Each AP:** Each AP in this zone runs its own DHCP server instance. This option is typically used when APs are at different sites and roaming is not required.
  - **Enable on Multiple APs:** Designate which APs will provide DHCP/NAT service. This option is typically used when multiple APs are at the same site and roaming is required. This option also allows you to choose whether to automatically or manually specify which APs will provide DHCP service.
6. On the next wizard screen, (**Select Pools**), select up to four DHCP pools from which to assign client IP addresses.

**Figure 116: Selecting Pools**

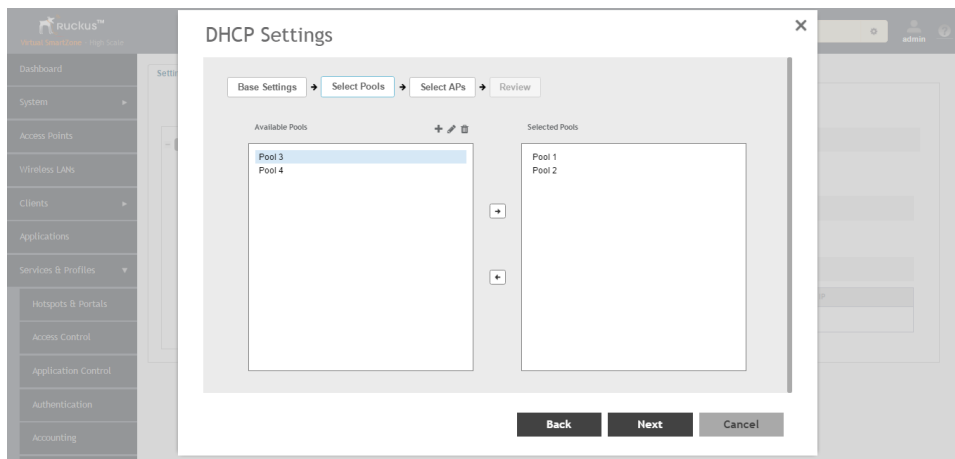

**NOTE:** If you have not already created DHCP pools, you can do so from within the wizard. Click the Plus (+) icon and configure the IP address pools as described in [Creating a DHCP Pool](#) on page 270.


7. Click **Next**. The **Select APs** screen appears.

**NOTE:** If you selected **Auto Select AP** on the first wizard screen, this configuration screen will be skipped.

8. On the **Select APs** wizard screen, select the AP(s) that you want to set as the primary and secondary DHCP servers (if you previously selected **Enable on Multiple APs**).

**Figure 117: Selecting APs**


## DHCP Settings

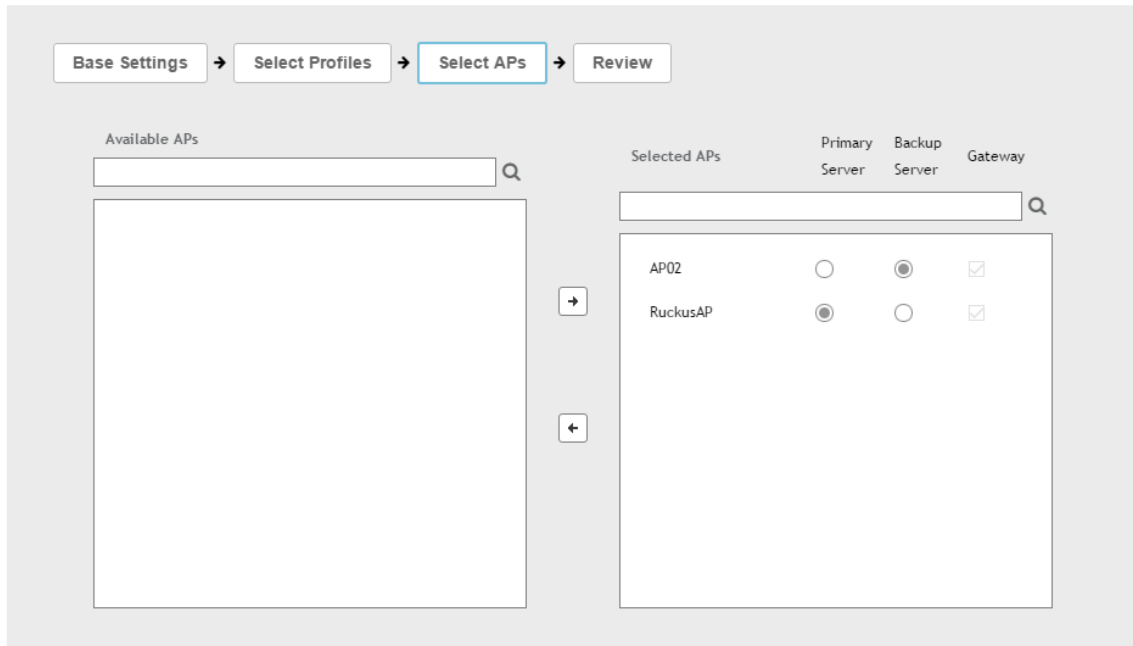

9. Click **Next**.

10. On the **Review** screen, review your settings to make sure everything is correct. Once you are satisfied with your settings, click **OK** to confirm.

**Figure 118: Review DHCP settings**

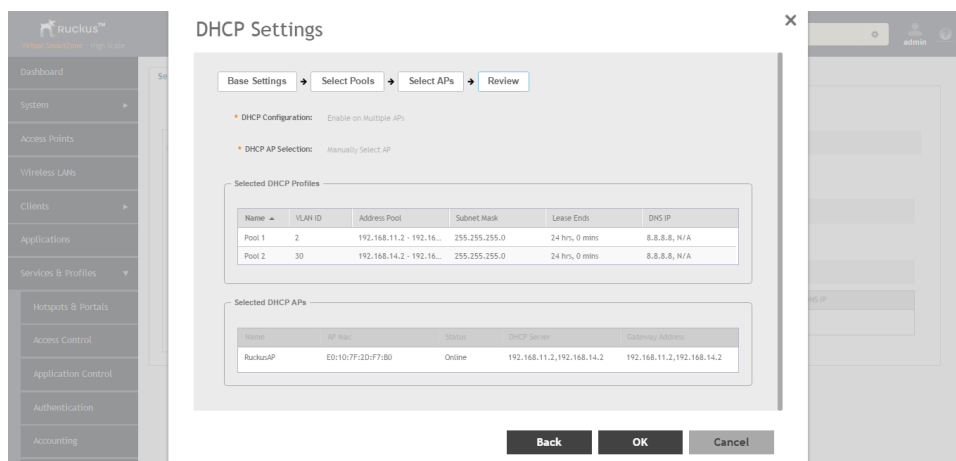

You have configured the DHCP server settings and applied them to an AP (or multiple APs). These APs will now provide DHCP/NAT functionality and assign IP addresses to wireless clients from the DHCP address pools you specified.

## Creating a DHCP Pool

Creating a DHCP pool is necessary for assigning IP addresses to clients. Multiple address pools can be created and assigned to APs that are running DHCP services. Then, when a client connects to the wireless network, it will be assigned an address from the DHCP pool(s) you specified.

To configure a DHCP pool for IP address allocation:

1. Go to **Services & Profiles > DHCP**.
2. Select the **Pool** tab, and then select the zone for which you want to create the pool.
3. Click **Create**.

The **Create DHCP Pool** page appears.

**Figure 119: Creating a DHCP Pool**

## Create DHCP Pool



\* Name:

Description:

\* VLAN ID:  (Range: 2~4094)

\* Subnet / Network Address:

\* Subnet Mask:

\* Pool Start Address:

\* [?] Pool End Address:

Primary DNS IP:

Secondary DNS IP:

\* Lease Time:  Hours  Minutes

#### 4. Configure the following:

- **Name:** Type a name for the pool you want to create.
- **Description:** Type a description of the pool you want to create.
- **VLAN ID:** Type the vlan id for the pool.
- **Subnet Network Address:** Type the IP subnet network address (e.g., 192.168.0.0).
- **Subnet Mask:** Type the subnet mask address (e.g., 255.255.255.0).
- **Pool Start Address:** Type the first IP address to be allocated to clients from the pool (e.g., 192.168.0.1).
- **Pool End Address:** Type the last IP address to be allocated to clients from the pool (e.g., 192.168.0.253).

- **Primary DNS IP:** Type the primary DNS server IP address.
- **Secondary DNS IP:** Type the secondary DNS server IP address.
- **Lease Time:** Enter the IP address lease time, after which clients will have to renew or request new IP addresses.

5. Click **OK**.

You have created a DHCP address pool. You can now apply this address pool to a DHCP service, as described in [Configuring DHCP Service Settings](#) on page 266.

**NOTE:** You can also edit, clone and delete the address pool by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Pool** tab.

## Managing Third Party Profiles

You can configure and manage third party profiles based on Hotspot and q-in-q technique. This feature only applies to SCG200.

### Hotspot Profile

A hotspot profile defines the hotspot configuration that will be used for 3rd party AP zones

1. Go to **Services & Profiles > 3rd Party**.
2. Select the **Hotspot** tab, and then select the zone for which you want to create the profile.
3. Click **Create**. The **Create Hotspot Profile** page appears.
4. Configure the settings as based on [Creating a Hotspot \(WISPr\) Portal](#) on page 177.

### Creating Network Traffic Profiles

A network traffic profile defines per AP rate limits and the access control list (ACL) rules that apply to that AP.

Each 3rd party AP zone is required to have one network traffic profile. The controller provides a factory default network traffic profile, which is associated with a zone if an alternative is not specified while creating a new zone. The controller allows super administrators to set the default profile to a customized network traffic profile. The factory default network traffic profile is defined as no rate limits and allows all traffic.

**NOTE:** Only super administrators have the privilege to configure network traffic profiles. MVNOs cannot view, create, edit, or delete network profiles.

1. Go to **Services & Profiles > 3rd Party**.
2. Select the **Traffic Profile** tab, and then select the zone for which you want to create the profile.
3. Click **Create**.

The **Create Network Traffic Profile** page appears.

**Figure 120: Creating a Network Traffic Profile**



## Create Network Traffic Profile

\* Name:

Description:

Default Options

\* Default Traffic Handling Action:

Network Access Control List

+ Create

Priority	Matching Criteria	Traffic Handling Action
----------	-------------------	-------------------------

OK Cancel

#### 4. Configure the following:

1. Name: Type a name for the profile that you are creating.
2. Description: Type a brief description of the profile. This is an optional field.
3. Default Options: Set the Default Traffic Handling Action to either Allow or Block. The default setting is Allow.
4. Network Access Control List: Click **Create** and configure the following.
  - a. Traffic Matching Criteria:
    - Source IP Range: Type an IP address to assign to this profile, as well as a subnet mask for the IP address. This is the IP address range that will be allowed access to the network traffic profile.
    - Source Port Range: Type a port number. To specify a range of port numbers, select the Range check box, and then set the starting port number and ending port number in the first and second boxes, respectively.
    - Destination IP Range: Type the destination IP address to assign to this profile, as well as a subnet mask for the IP address. This is the IP address range that will be allowed to send traffic using this network traffic profile.
    - Destination Port Range: Type a port number. To specify a range of port numbers, select the Range check box, and then set the starting port number and ending port number in the first and second boxes, respectively.
    - Protocol: Select the protocol that you want to allow or deny. If you cannot find the protocol name, type the protocol number.
  - b. Traffic Handling Action: Set the action to apply to the traffic. Options include Block and Allow.

## Configuring Q-in-Q Ether Type

1. Go to **Services & Profiles > 3rd Party**.
2. Select the **Q-in-Q Ether Type** tab.  
The **Q-in-Q Ether Type** page appears.
3. Click **OK**.

# Working with Reports

In this chapter:

- [Types of Reports](#)
- [Managing Report Generation](#)
- [Rogue Access Points](#)
- [Historical Client Stats](#)
- [Ruckus AP Tunnel Stats](#)
- [3rd Party AP Stats](#)
- [Core Network Tunnel Stats](#)

## Types of Reports

The controller provides the following types of reports:

### Client Number Report

The **Client Number** report shows a historical view of the maximum and minimum number of clients connect to the system.

Client number can be shown in different time intervals for a specified duration. The report can be generated based on a specific AP, SSID, or radio.

### Continuously Disconnected APs Report

The Continuously Disconnected APs report shows a list of access points disconnected within the specified time range.

### System Resource Utilization Report

The **System Resource Utilization** report shows a historical view of the CPU and memory usage of the system. The CPU and memory usage can be shown in different time intervals for a specific duration. The report can be generated based on specific plane.

### TX/RX Bytes Report

The **TX/RX Bytes** report shows a historical view of the transmitted (TX) and received (RX) bytes of the system. The transmitted and received bytes can be shown in different time intervals for a specified duration. The report can be generated based on a specific AP, SSID or radio.

## Managing Report Generation

You can create and manage reports.

**NOTE:** Global filter settings does not apply to the Reports feature.


As reports are segmented by individual administrators, each administrator's reports are unique and applies only to them.

## Creating Reports

To create a new report:

1. From the left pane, select **Report > Report Generation**. [Figure 121: Report Generation Screen](#) on page 276 appears.

**Figure 121: Report Generation Screen**

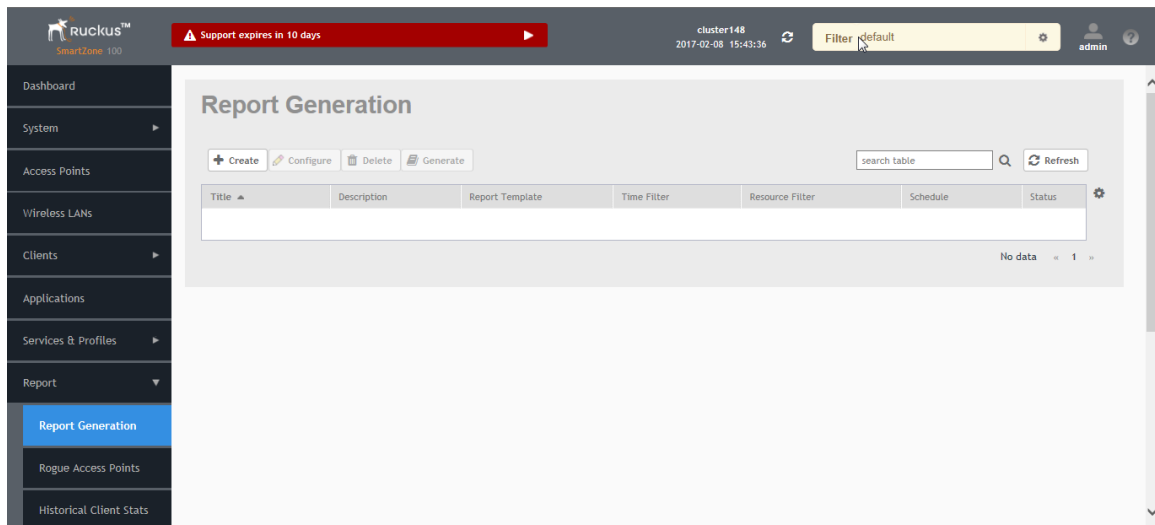

2. Click **Create**, [Figure 122: Create Reports Screen](#) on page 276 appears.

**Figure 122: Create Reports Screen**

3. Enter the required parameters as explained in [Table 37: Report Parameters](#) on page 277.
4. Click **OK**.

**Table 37: Report Parameters**

Field	Description	Your Action
<b>General Information</b>		
<b>Title</b>	Indicates the report name.	Enter a title for the report.
<b>Description</b>	Describes the report type.	Enter a short description.
<b>Report Type</b>	Specifies the report type	Select the required report.
<b>Output Format</b>	Specifies the report output format.	Select the required report output format.
<b>Resource Filter Criteria</b>		
<b>Device</b>	Indicates the level of resource filtering for which you want to generate the report. For example: Managenemt Domains, AP Zone or Access Point.	Select Device and choose the option.

Field	Description	Your Action
<b>SSID</b>	Indicates the SSID for which you want to generate the report.	Select the check box and choose the SSID for which you want the report.
<b>Radio</b>	Indicates the frequency for which you want to generate the report.	Select the check box and choose the required frequency: <ul style="list-style-type: none"> <li>• 2.4G</li> <li>• 5G</li> </ul>
<b>Time Filter</b>		
<b>Time Interval</b>	Defines the time interval at which to generate the report.	Select the required time interval.
<b>Time Filter</b>	Defines the time duration for which to generate the report.	Select the required time filter.
<b>Schedules</b>		
<b>Enable/Disable</b>	Specifies the scheduled time when a report must be generated.	By default the option is disabled. Select <b>Enable</b> and select the <b>Interval, Hour</b> and <b>Minute</b> . You can add multiple schedules.
<b>Email Notification</b>		
<b>Enable/Disable</b>	Triggers an email notification when the report is generated.	By default the option is disabled. Select <b>Enable</b> and click the <b>Add New</b> and enter the email address. You can add multiple email addresses.
<b>Export Report Results</b>		
<b>Export Report Results, Enable/Disable</b>	Uploads the report results to an FTP server.	By default the option is disabled. Select <b>Enable</b> and select the <b>FTP Server</b> .

**NOTE:** You can also edit or delete a report by selecting the options **Configure** or **Delete** respectively.

## Generating Reports

To generate a report:

1. From the left pane, select **Report > Report Generation**. [Figure 121: Report Generation Screen](#) on page 276 appears.
2. Select the required report from the list and click **Generate**. The Report Generated form appears.

3. Click **OK**, the report will be generated and listed in the Report Results area.
4. Select the required format from the **Result Links** column and click **Open**.

## Rogue Access Points

### Viewing Rogue Access Points

Rogue (or unauthorized) APs pose problems for a wireless network in terms of airtime contention, as well as security.

Usually, a rogue AP appears in the following way: an employee obtains another manufacturer's AP and connects it to the LAN, to gain wireless access to other LAN resources. This would potentially allow even more unauthorized users to access your corporate LAN - posing a security risk. Rogue APs also interfere with nearby Ruckus Wireless APs, thus degrading overall wireless network coverage and performance.

The controller's rogue AP detection options include identifying the presence of a rogue AP, categorizing it as either a known neighbor AP or as a malicious rogue.


If you enabled rogue AP detection when you configured the common AP settings (see Configuring APs), click **Report** > **Rogue Access Points**. The Rogue Access Points page displays all rogue APs that the controller has detected on the network, including the following information:

- **Rogue MAC:** MAC address of the rogue AP.
- **Type:** Rogue, a normal rogue AP, not yet categorized as malicious or non-malicious.
- **Channel:** Radio channel used by the rogue AP.
- **Radio:** WLAN standards with which the rogue AP complies.
- **SSID:** WLAN name that the rogue AP is broadcasting.
- **Detecting AP Name:** Name of the AP.
- **Zone:** Zone to which the AP belongs.
- **RSSI:** Radio signal strength.
- **Encryption:** Indicates whether the wireless signal is encrypted or not.
- **Last Detected:** Date and time when the rogue AP was last detected by the controller.

### Filtering Rogue Access Points

From the list of Rogue Access Points you can filter the required rogue APs based on Rogue MAC or Type.

To filter rogue APs:

1. From the Rogue Access Points page, click Settings  button. The Apply Filters form appears.
2. Enter the **Rogue MAC** ID or select the rogue AP **Type** from the drop-down.
3. Click **OK**. Filtered rogue APs appear in the list.

### Marking Rogue Access Points

You can mark a Rogue (or unauthorized) AP as known.

To mark a Rogue AP as known:

1. From the left pane, click **Report** and **Rogue Access Points**. The Rogue Access Points page appears.
2. Select the Rogue AP from the list and click **Mark as Known**. The classification **Type** of the Rogue AP changes to **Known**. You can also select the Rogue AP from the list and click **Unmark**, to change the classification.

## Historical Client Stats

### Viewing AP Client Statistics

AP Client Statistics is a cumulative value per session and one entry is created per session. Data is reported every 60 seconds and is not bin data. The user interface displays the table and its corresponding graph chart. The two representations are synchronized and controlled by the search criteria. For performance reasons, the total counters per DP or per GGSN IP for each bin is precalculated.

To view AP Client Statistics:

1. From the left pane, select **Report > Historical Client Stats**. The Ruckus AP Client page appears.
2. Update the parameters as explained in [Table 38: AP Client Statistics Report Parameters](#) on page 280.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**— To open or save the report in CSV file format.

**Table 38: AP Client Statistics Report Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the required zone.
<b>Client MAC</b>	Specifies the MAC.	Enter the client MAC.
<b>Client IP</b>	Indicates the client IP.	Enter the client IP address.
<b>MVNO Name</b>	Indicates the mobile virtual network operator name.	Choose the MVNO.

[Table 39: AP Client Statistics Report Attributes](#) on page 281 contains historical client statistics report based on the UE session statistics.



Table 39: AP Client Statistics Report Attributes

Attribute	Type	Description
Start	Long	Indicates the session creation time.
End	Long	Indicates the session end time.
Client MAC	String	Indicates the Mac address of the client.
Client IP Address	String	Indicates the IP address of the client.
Core Type	String	Indicates the core network tunnel type.
MVNO Name	String	Indicates the mobile virtual network operator name.
AP MAC	String	Indicates the Client AP MAC.
SSID	String	Indicates the SSID
Bytes from Client	Long	Indicates the number of bytes received from the client.
Bytes to Client	Long	Indicates the number of bytes sent to the client.
Packets from Client	Long	Indicates the number of packets received from the client.
Packets to Client	Long	Indicates the number of packets sent to the client.
Dropped Packets from Client	Long	Indicates the number of packets dropped from the client.
Dropped Packets to Client	Long	Indicates the number of packets dropped to the client.

### Viewing 3rd Party AP Client Statistics

3 Party AP Client statistics is a cumulative value per session and one entry is created per session. Data is reported every 60 seconds and is not bin data. The user interface displays the table and its corresponding graph chart. The two representations are synchronized and controlled by the search criteria. For performance reasons, the total counters per DP or per GGSN IP for each bin is precalculated.

To view AP Client Statistics:

1. From the left pane, select **Report > Historical Client Stats > 3rd Party AP Client**.

2. Update the parameters as explained in [Table 40: 3rd Party AP Client Statistics Report Parameters](#) on page 282.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**—To open or save the report in CSV file format.

**Table 40: 3rd Party AP Client Statistics Report Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the required zone.
<b>Client MAC</b>	Specifies the MAC.	Enter the client MAC.
<b>Client IP</b>	Indicates the client IP.	Enter the client IP address.
<b>MVNO Name</b>	Indicates the mobile virtual network operator name.	Choose the MVNO.

The following table contains historical 3rd party client statistics report based on the UE session statistics.

**Table 41: 3rd Party AP Client Statistics Report Attributes**

Attribute	Type	Description
<b>Start</b>	Long	Indicates the session creation time.
<b>End</b>	Long	Indicates the session end time.
<b>Client MAC</b>	String	Indicates the Mac address of the client.
<b>Client IP Address</b>	String	Indicates the IP address of the client.
<b>Access Type</b>	String	Indicates the 3rd party AP that serves this client.
<b>Core Type</b>	String	Indicates the core network tunnel type.
<b>Bytes from Client</b>	Long	Indicates the number of bytes received from the client.
<b>Bytes to Client</b>	Long	Indicates the number of bytes sent to the client.

Attribute	Type	Description
Packets from Client	Long	Indicates the number of packets received from the client.
Packets to Client	Long	Indicates the number of packets sent to the client.

## Ruckus AP Tunnel Stats

### Viewing Statistics for Ruckus GRE Tunnels

The web interface displays the table and its corresponding graph chart. The two representations are synchronized and controlled by the search criteria. For performance reasons, the total counters per DP or per AP for each bin may be pre-calculated.

To view the Ruckus GRE Tunnel Statistics:

1. From the left pane, select **Report > Ruckus AP Tunnel Stats**. The Ruckus GRE tab appears by default.
2. Update the parameters as explained in [Table 42: Ruckus GRE Report Parameters](#) on page 283.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**—To open or save the report in CSV file format.

**Table 42: Ruckus GRE Report Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Data Plane</b>	Indicates the Data Plane.	Select the Data Plane.
<b>AP MAC or IP Address</b>	Indicates the MAC of the Access Point or IP Address.	Enter the AP MAC or IP address.
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the required zone.

[Table 43: Ruckus GRE report attributes](#) on page 284 contains the report based on the statistics for Ruckus GRE. Each entry contains the 15 minutes cumulative data.

**Table 43: Ruckus GRE report attributes**

Attribute	Type	Description
Time	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
TXBytes	Long	Indicates the number of bytes sent.
RXBytes	Long	Indicates the number of bytes received.
TXPkts	Long	Indicates the number of packets sent.
RXPkts	Long	Indicates the number of packets received.
Dropped Packets	Long	Indicates the number of packets dropped.

### Viewing Statistics for SoftGRE Tunnels

The web interface displays the table and its corresponding graph chart. The two representations are synchronized and controlled by the search criteria. For performance reasons, the total counters per DP or per AP for each bin may be pre-calculated.

To view the SoftGRE Tunnel Statistics:

1. From the left pane, select **Report > Ruckus AP Tunnel Stats**. The Ruckus GRE tab appears by default.
2. Select **SoftGRE**. Update the parameters as explained in [Table 44: SoftGRE Report Parameters](#) on page 284.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**—To open or save the report in CSV file format.

**Table 44: SoftGRE Report Parameters**

Field	Description	Your Action
Time Period	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
Zone Name	Specifies the zone for which you want to view the report.	Select the required zone.
Gateway Address	Specifies the gateway address	Enter the gateway address.
AP MAC or IP Address	Indicates the MAC of the Access Point or IP Address.	Enter the AP MAC or IP address.

Table 45: [SoftGRE Report Attributes](#) on page 285 contains the report based on the statistics for SoftGRE. Each entry contains the 15 minutes cumulative data.

**Table 45: SoftGRE Report Attributes**

Attribute	Type	Description
Time	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
TXBytes	Long	Indicates the number of bytes sent.
RXBytes	Long	Indicates the number of bytes received.
TXPkts	Long	Indicates the number of packets sent.
RXPkts	Long	Indicates the number of packets received.
RX Dropped Packets	Long	Indicates the number of packets dropped.
TX Dropped Packets	Long	Indicates the number of packets dropped.
TX Error Packets	Long	Indicates the number of packets with a header error.
RX Error Packets	Long	Indicates the number of packets with a header error.

### Viewing Statistics for SoftGRE IPsec Tunnels

The web interface displays the table and its corresponding graph chart. The two representations are synchronized and controlled by the search criteria. For performance reasons, total counters per DP or per AP for each bin may be pre-calculated.

To view the SoftGRE IPsec Tunnel Statistics:

1. From the left pane, select **Report > Ruckus AP Tunnel Stats**. The Ruckus GRE tab appears by default.
2. Select **SoftGRE + IPsec**. Update the parameters as explained in [Table 46: SoftGRE + IPsec Report Parameters](#) on page 285.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**— To open or save the report in CSV file format.

**Table 46: SoftGRE + IPsec Report Parameters**

Field	Description	Your Action
Time Period	Indicate the time period for which you want to view the report.	Move the slider to set the duration.

Field	Description	Your Action
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the required zone.
<b>Gateway Address</b>	Specifies the gateway address	Enter the gateway address.
<b>AP MAC or IP Address</b>	Indicates the MAC of the Access Point or IP Address.	Enter the AP MAC or IP address.

Table 47: [SoftGRE + IPsecReport Attributes](#) on page 286 contains the report based on the statistics for access point IPsec. Each entry contains the 15 minutes cumulative data.

**Table 47: SoftGRE + IPsecReport Attributes**

Attribute	Type	Description
<b>Time</b>	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
<b>TXBytes</b>	Long	Indicates the number of bytes sent.
<b>RXBytes</b>	Long	Indicates the number of bytes received.
<b>TXPkts</b>	Long	Indicates the number of packets sent.
<b>RXPkts</b>	Long	Indicates the number of packets received.
<b>TX Dropped Packets</b>	Long	Indicates the number of packets dropped.
<b>RX Dropped Packets</b>	Long	Indicates the number of packets dropped.

## 3rd Party AP Stats

### Viewing Statistics for L2oGRE 3rd Party AP

You can view the statistics for L2oGRE access network type.

**NOTE:** This feature is supported only for SCG200 controllers

To view stats for L2oGRE 3rd party AP:

1. From the left pane, select **Report > 3rd Party AP Stats**. The L2oGRE tab appears by default.
2. Update the parameters as explained in [Table 48: L2oGRE Report Parameters](#) on page 287.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**— To open or save the report in CSV file format. Table 6:

**Table 48: L2oGRE Report Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Data Plane</b>	Indicates the Data Plane.	Choose the data plane
<b>AP IP Address</b>	Indicates the IP address of the Access Point.	Enter the AP IP address.
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the zone.

[Table 49: L2oGRE Report Attributes](#) on page 287 contains the report based on the statistics for L2oGRE.

**Table 49: L2oGRE Report Attributes**

Field	Type	Description
<b>Time</b>	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
<b>TX Bytes</b>	Long	Indicates the number of bytes sent.
<b>RX Bytes</b>	Long	Indicates the number of bytes received.
<b>TX Packets</b>	Long	Indicates the number of packets sent.
<b>RX Packets</b>	Long	Indicates the number of packets received.
<b>Dropped Packets</b>	Long	Indicates the number of packets dropped.

### Viewing Statistics for Q-in-Q Layer 2 3rd Party AP

You can view historical traffic statistics and trends for Q-in-Q L2 tunnels for 3rd party APs.

**NOTE:** This feature is supported only for SCG200 controllers

To view Q-in-Q layer 2 statistics for 3rd Party AP:

1. From the left pane, select **Report > 3rd Party AP Stats**. The L2oGRE tab appears by default.
2. Select **Q-in-Q Layer 2** and update the parameters as explained in [Table 50: Q-in-Q Layer 2 Report Parameters](#) on page 288.
3. Click:

- **Load Data**— To view the report in the workspace.
- **Export CSV**—To open or save the report in CSV file format. Table 6:

**Table 50: Q-in-Q Layer 2 Report Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Data Plane</b>	Indicates the Data Plane.	Choose the data plane
<b>Q-in-Q VLAN</b>	Indicates the Q-in-Q	Enter <b>S-VLAN</b> and <b>C-VLAN</b> .
<b>Zone Name</b>	Specifies the zone for which you want to view the report.	Select the zone.

[Table 51: Q-in-Q Layer 2 Report Attributes](#) on page 288 contains the report based on the statistics for Q-in-Q Layer 2 3rd party AP.

**Table 51: Q-in-Q Layer 2 Report Attributes**

Field	Type	Description
<b>Time</b>	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
<b>TX Bytes</b>	Long	Indicates the number of bytes sent.
<b>RX Bytes</b>	Long	Indicates the number of bytes received.
<b>TX Packets</b>	Long	Indicates the number of packets sent.
<b>RX Packets</b>	Long	Indicates the number of packets received.
<b>Dropped Packets</b>	Long	Indicates the number of packets dropped.

## Core Network Tunnel Stats

### Viewing Statistics for SoftGRE Core Network Tunnel

To view Stats for SoftGRE Core Network Tunnel:

1. From the left pane, select **Report > Core Network Tunnel Stats**. The SoftGRE page appears.



2. Update the parameters as explained in [Table 52: SoftGRE Core Network Tunnel Parameters](#) on page 289.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**—To open or save the report in CSV file format.

**Table 52: SoftGRE Core Network Tunnel Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Data Plane</b>	Indicates the Data Plane.	Select the Data Plane.
<b>Gateway IP Address</b>	Indicates the gateway IP Address.	Enter the gateway IP address.
<b>MVNO Name</b>	Indicates the mobile virtual network operator name.	Choose the MVNO name.

[Table 53: SoftGRE Core Network Tunnel Attributes](#) on page 289 contains the report based on the statistics for SoftGRE core network tunnel.

**Table 53: SoftGRE Core Network Tunnel Attributes**

Attribute	Type	Description
<b>Time</b>	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
<b>TX Bytes</b>	Long	Indicates the number of bytes sent.
<b>RX Bytes</b>	Long	Indicates the number of bytes received.
<b>TX Packets</b>	Long	Indicates the number of packets sent.
<b>RX Packets</b>	Long	Indicates the number of packets received.
<b>Dropped Packets</b>	Long	Indicates the number of packets dropped.

### Viewing Statistics for GTP Core Network Tunnel

You can view historical traffic statistics and trends of the core GTP tunnels.

**NOTE:** This feature is supported only for SCG200 controllers

GPRS Tunneling Protocol (GTP) transmits user data packets and signaling between controller and GGSN. GTP encapsulates traffic and creates GTP tunnels, which act as virtual data channels for transmission of packet data between the controller and GGSN. A GTP tunnel is established between the controller and GGSN for a data session initiated from UE.

To view Stats for GTP Core Network Tunnel:

1. From the left pane, select **Report > Core Network Tunnel Stats**. The SoftGRE page appears.
2. Select **GTP** and update the parameters as explained in [Table 54: GTP Core Network Tunnel Parameters](#) on page 290.
3. Click:
  - **Load Data**— To view the report in the workspace.
  - **Export CSV**—To open or save the report in CSV file format.

**Table 54: GTP Core Network Tunnel Parameters**

Field	Description	Your Action
<b>Time Period</b>	Indicate the time period for which you want to view the report.	Move the slider to set the duration.
<b>Zone Name</b>	Indicates the zone.	Select the Zone name.
<b>Gateway Address</b>	Indicates the gateway address.	Enter the gateway address.
<b>AP MAC or IP Address</b>	Indicates the MAC of the Access Point or IP Address.	Enter the AP MAC or the IP address.

[Table 55: GTP Report Attributes](#) on page 290 contains the report based on the statistics for GTP. Each entry contains the 15 minutes cumulative data.

**Table 55: GTP Report Attributes**

Field	Type	Description
<b>Time</b>	Long	Bin ID, which is stamped at a 15 minute interval. For example, 10:00, 10:15.
<b>TX Bytes</b>	Long	Indicates the number of bytes sent.
<b>RX Bytes</b>	Long	Indicates the number of bytes received.
<b>TX Packets</b>	Long	Indicates the number of packets sent.
<b>RX Packets</b>	Long	Indicates the number of packets received.

Field	Type	Description
<b>Tx Dropped Packets</b>	Long	Indicates the number of packets dropped while sending.
<b>Rx Dropped Packets</b>	Long	Indicates the number of packets dropped while receiving.
<b>Bad GTPU</b>	Long	Indicates a tunneling mechanism that provides a service for carrying user data packets dropped.
<b>RX TEID Invalid</b>	Long	Indicates the number of invalid packets received by Tunnel End Point Identifiers.
<b>TX TEID Invalid</b>	Long	Indicates the number of invalid packets sent by Tunnel End Point Identifiers.
<b>Echo RX</b>	Long	Indicates the echo message received.
<b>Last Echo RX Time</b>	Long	Indicates the time when the last echo message was received.

# Troubleshooting

In this chapter:

- [Troubleshooting Client Connections](#)
- [Troubleshooting through Spectrum Analysis](#)

## Troubleshooting Client Connections

This feature allows network administrators to connect to client devices and analyze network connection issues in real-time.

The network administrator types the MAC address of the client device and starts various services to identify the connectivity issue. The APs assigned to the client device relay data frames from the device to the controller which the administrator analysis to determine which stage of the connection is causing problems.

### 1. Go to **Troubleshooting**.

The **Troubleshooting** page appears.

**Figure 123: Troubleshooting - Client Connections**

The screenshot displays the 'Troubleshooting' interface with the following sections:

- 1 Type:** Client Connection (with device icons)
- 2 Client MAC:** 18:AF:61:60:49:0F
- 3 Select APs:** Select (Total APs: 1)
- 4 Connectivity Trace:** Start, Stop, Clear buttons

**Access Points hearing client's probe requests:**

Name	Radio	Client SNR(dBm)	Latency(ms)	Connection Failure(%)	Airtime Utilization(%)
✓ RuckusAP (e0:10:7f:23:da:b0)	5GHz (149)	42	8192	0	45

**AP: RuckusAP (e0:10:7f:23:da:b0) SSID: eng-ste.chu-psk3 Radio: 5GHz Time: 10:15:29**

The connectivity trace diagram shows the following sequence of events:

- 802.11 Authentication Request (Client Device to Access Point)
- 802.11 Authentication Response (Access Point to Client Device)
- 802.11 Association Request (Client Device to Access Point)
- 802.11 Association Response (Access Point to Client Device)
- 4-Way Handshake - Frame 1 (Client Device to Access Point)
- 4-Way Handshake - Frame 2 (Access Point to Client Device)
- 4-Way Handshake - Frame 3 (Client Device to Access Point)
- 4-Way Handshake - Frame 4 (Access Point to Client Device)
- DHCP Discover (Client Device to Broadcast)

2. In Type, select **Client Connection** from the drop-down menu.
3. In Client MAC, type the MAC address of the client device which is facing connectivity issues.
4. In Select APs, click **Select**.

The **Select APs** page appears. Select an AP to communicate between the client and controller and then click **OK**.

5. In Connectivity Trace, click **Start**.

The controller configures the APs to receive data frame from the target client so that the APs can relay relevant frames that match the client filter to the controller.

The APs that receive probe requests from the target client are listed in a table along with the APs operating channel and the RSSI at which the client's frames were received. This stage of the connection identifies whether there are acceptable APs for the client to connect to.

Following are the details displayed in the table:

- AP Name and MAC Address.
- Radio: Identifies the 2.4 or 5 GHz radio of the AP and the channel number the radio is operating on.
- Client SNR: This is the signal-to-noise ratio received in dB.
- Latency: Time delay in connecting the AP to the client.
- Connection Failures: Displays the percentage of AP-client connection attempts that failed.
- Airtime Utilization: Percentage of the air time that was used by the client to transfer data.

At this stage, the tool displays the statuses `Client is in a discovery state and not currently connected`(when the tool starts/when the client is already connected to an AP) and `Client is attempting a new connection`(when the target client sends an 802.11 authentication request frame to an AP to initiate a connection.).

By using the list of APs that communicated with the client, you will be able to identify if the client chose the best AP based on signal quality and other health metrics.

When the client sends an 802.11 authentication request frame, a flow diagram depicting different stages of the AP-client connection is initiated. This sends a trigger frame to the AP and it is highlighted from the list for reporting APs.

The *Flow ladder* in the diagram shows the step-by-step exchange of information between devices during the connection process. As the steps are completed, colored arrows are displayed based on whether the step depicts a warning (yellow) or event (for example, red for failure). Typical warning scenarios include time delays or when a client negotiates an EAP type that's not supported. Failure conditions are also highlighted as red arrows typically when the connection itself fails.

6. Click **Stop** to terminate connection between the AP and client.

**NOTE:** The following authentication types are supported:

- Open
- PSK (WPA2-Personal)
- 802.1X (PEAP, TTLS, TLS, SIM)
- WISPr

## Troubleshooting through Spectrum Analysis

Interference between wireless devices is seen to increase dramatically due to the increase in the number of device used, and the availability of only three non-interfering channels in 802.11. This reduces the performance of the wireless network, therefore, it is important to monitor the spectrum usage in a particular area and efficiently allocate the spectrum as needed to wireless devices.


In addition, spectrum analysis provides the flexibility to troubleshoot issues remotely, identify sources of interferences within the network and allow administrators access to the RF health of the network environment.

APs which are put in spectrum-mode transmit data to the controller, which in turn displays the data in spectrum-mode for analysis.

### 1. Go to **Troubleshooting**.

The **Troubleshooting** page appears.

**Figure 124: Troubleshooting - Spectrum Analysis**

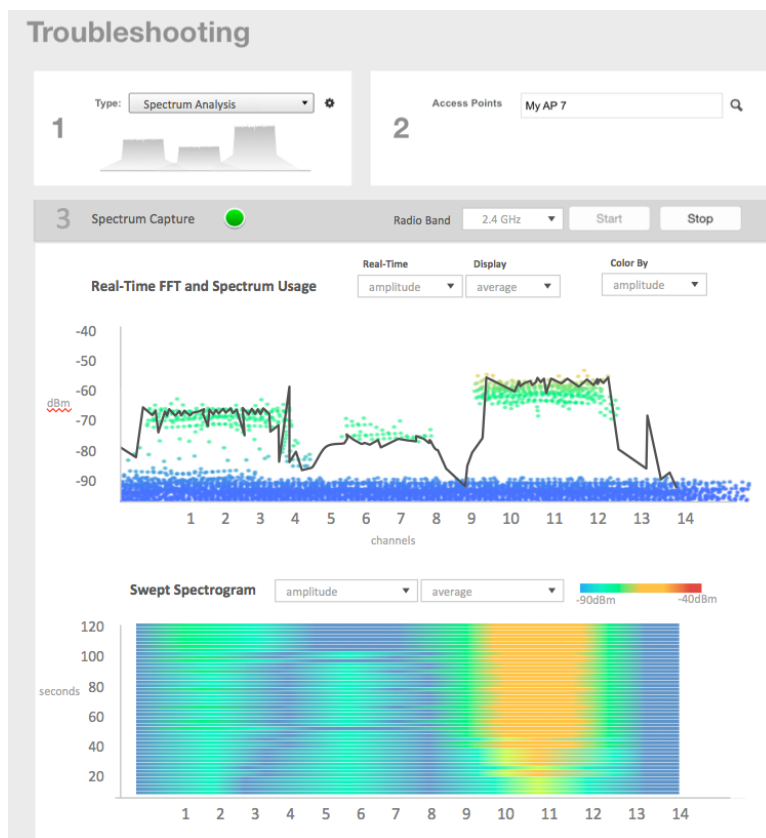

2. In Type, select **Spectrum Analysis** from the drop-down menu.

3. In AP MAC Address, select the AP that needs to be in the spectrum analysis-mode.

4. In Spectrum Capture, select the radio frequency values (2.4GHz or 5GHz) for the analysis from the **Radio** option.

The 2.4GHz band spans from 2400 - 2480 GHz and 5GHz band spans from 5.15 - 5.875 GHz.

You can select and view the spectrum analysis trends in these graphs:

- **Spectrum Usage:** This chart uses a color-based view to show collections of data points over time. As more data samples are measured at a specific frequency and amplitude coordinate, the color shown at that coordinate will change. If you choose to view colors by amplitude, the warm colors depict higher amplitude and cool colors lower amplitudes. If you view the colors by density, the warm colors depict a high number of samples at a given coordinate and cool colors show low number of samples at a given coordinate.
- **Real-Time FFT :** This chart is a second-by-second (2sec) update of measured data across the band. If you view by Amplitude (signal strength), then the chart displays both average and maximum amplitudes of energy measured across the band for that sample period. If you view by Utilization (duty cycle), then the chart displays the percentage (%) of time at which the frequency is utilized at an amplitude above N. The amplitude threshold is configurable but the default is -85dBm.
- **Swept Spectrogram:** This chart displays a waterfall of color over time, where each horizontal line in the waterfall represents one sample period (e.g. 2 seconds), and the full waterfall display spans 2 minutes of time (60 sample bins of 2sec each). There are two display options for the spectrogram chart:
  - **Amplitude:** Shows both average and maximum amplitude of energy measured across the band for that sample period.
  - **Utilization:** Shows the percentage of time at which the frequency is utilized at an amplitude above N. The amplitude threshold is configurable but the default is -85dBm.

5. After you select the parameters that you want to use to view the graphs, click **Start**.

6. Click **Stop** to terminate viewing spectrum analysis trends.

## Administering the Controller

In this chapter:

- [Managing Administrator and Roles](#)
- [Backing Up and Restoring Clusters](#)
- [Upgrading the Controller](#)
- [Managing Licenses](#)
- [ZoneDirector to SmartZone Migration](#)
- [Monitoring Administrator Activities](#)
- [Managing Mobile Virtual Network Operator \(MVNO\) Accounts](#)

### Managing Administrator and Roles

The controller must be able to manage various administrators and roles that are created within the network in order to assign tasks and functions, and to authenticate users.

#### Creating User Groups

Creating user groups and configuring their access permissions, resources and administrator accounts allows administrators to manage a large number of users.

1. Go to **Administration > Admins and Roles**.
2. Select the **Groups** tab.
3. Click **Create** after selecting the system domain.  
The **Create User Group** page appears.
4. Configure the following:
  1. Permission
    - a. Name: Type the name of the user group you want to create.
    - b. Description: Type a short description for the user group you plan to create.
    - c. Permission: Select one of the access permission for the user group, from the drop-down menu. You can also grant admin permission to generate guest passes.
    - d. Click **Next**.
  2. Resource: From Select Resources, add the resources you want to assign to this user group.
  3. Click **Next**.
  4. Domain: Select the domain from the list of domains to which this user group will be associated.
  5. Click **Next**.
  6. Administrator: Select the users available in the list and add them under Selected User. You can also create Administrator accounts for the group from this page.
  7. Click **Next**.



8. Review: Verify the user group's configuration that you have selected.
9. Click **OK** to confirm.

You have created the user groups.

**NOTE:** You can also edit and delete the group configuration by selecting the options **Configure**, and **Delete** respectively, from the **Groups** tab.

## Creating Administrator Accounts

The controller supports the creation of additional administrator accounts. This allows you to share or delegate management and monitoring functions with other members of your organization.

1. Go to **Administration > Admins and Roles**.
2. Select the **Administrators** tab.
3. Click **Create**.

The **Create Administrator Account** page appears.

**Figure 125: Creating an Administrator Account**

# Create Administrator Account

\* Account Name:

Real Name:

\* Password:

\* Confirm Password:

Phone:

Email:

Job Title:

**OK** **Cancel**

4. Configure the following:

1. Account Name: Type the name that this administrator will use to log on to the controller.
2. Real Name: Type the actual name (for example, John Smith) of the administrator.
3. Password: Type the password that this administrator will use (in conjunction with the Account Name) to log on to the controller.
4. Confirm Password: Type the same password as above.
5. Phone: Type the phone number of this administrator.
6. Email: Type the email address of this administrator.
7. Job Title: Type the job title or position of this administrator in your organization.
8. Click **OK**.

You have created the administrator account.

**NOTE:** You can also edit and delete the admin account by selecting the options **Configure**, and **Delete** respectively, from the **Administrator** tab.

### Creating a RADIUS Server for Administrator Authentication

You can add RADIUS servers that you want to use for authorizing and authenticating administrators.

1. Go to **Administration > Admins and Roles**.
2. Select the **AAA** tab.
3. Click **Create**.

The **Create Administrator RADIUS Server** page appears.

**Figure 126: Creating an Administrator RADIUS Server**

The screenshot shows a web form titled "Create Administrator RADIUS Server". The form contains the following fields and options:

- Name:** A text input field.
- Type:** Radio buttons for "RADIUS" (selected) and "TACACS+".
- Realm:** A text input field. Below it, a note states: "Multiple realms supported. Use a comma (,) to separate realms (for example, home1,home2)."
- Backup RADIUS:** A checkbox labeled "Enable Secondary Server".
- IP Address:** A text input field.
- Port:** A text input field with the value "1812" entered.
- Shared Secret:** A text input field.
- Confirm Secret:** A text input field.

At the bottom right of the form, there are two buttons: "OK" and "Cancel".

4. Configure the following:

1. Name: Type a name for the RADIUS server.
2. Type: Select the type of RADIUS server that you are using. Options include:
  - RADIUS: Click this option to use a Remote Authentication Dial-In User Service (RADIUS) server on the network for authenticating controller administrators.
  - TACACS+: Click this option to use a Terminal Access Controller Access-Control System Plus (TACACS+) server on the network for authentication controller administrators.
3. Realm: Type the realm (or realms) to which the RADIUS server belongs. If the RADIUS server belongs to multiple realms, use a comma (,) to separate the realm names.
4. Backup RADIUS: Select the Enable Secondary Server to back up the RADIUS server configuration.
  - a. Primary Server: Type the IP address, port, shared secret for the primary server that needs to be backed up.
  - b. Secondary Server: Type the IP address, port, shared secret for the secondary server to which the back must be done.
  - c. Failover Policy at NAS:
    - Request Timeout: Type the timeout period (in seconds) after which an expected RADIUS response message is considered to have failed.
    - Max Number of Retries: Type the number of failed connection attempts after which the controller will fail over to the backup RADIUS server.
    - Reconnect Primary: Type the number of minutes after which the controller will attempt to reconnect to the primary RADIUS server after failover to the backup server.
5. IP Address: Type the IP address of the RADIUS server.
6. Port: Type the UDP port that the RADIUS server is using. The default port is 1812.
7. Shared Secret: Type the shared secret.
8. Confirm Secret: Retype the same secret in.
9. Click **OK**.

You have completed adding a RADIUS server for authenticating administrators.

**NOTE:** You can also edit, clone and delete the server by selecting the options **Configure**, **Clone** and **Delete** respectively, from the **Administrator** tab.

### Enabling the Access Control List

You can control access to management interfaces from CLI or SSH.

1. Go to **Administration > Admins and Roles**.
2. Select the **Access Control List** tab.
3. Select **Enable**.
4. Click **Create**.

The **Management Interface Access Control Rule** page appears.

**Figure 127: Management Interface Access Control Rule**

## Management Interface Access Control Rule

\* Name:

Description:

\* Type:  Single IP  IP Range  Subnet

Single IP

\* IP Address:

OK Cancel

### 5. Configure the following:

1. Name: Type the name that rule you want to create to access the management interface.
2. Description: Type a short description for the rule.
3. Type: Select one of the following
  - Single IP: Type the IP address of the interface that can be accessed per this rule.
  - IP Range: Type the range of IP address that will be allowed access.
4. Subnet: Type the network address and subnet mask address of the interface that will be allowed access.
5. Click **OK**.

You have created the access control list rule.

**NOTE:** You can also edit and delete the list by selecting the options **Configure** and **Delete** respectively, from the **Access Control List** tab.

## Backing Up and Restoring Clusters

Back up the controller cluster periodically to ensure that you can restore the control plane, data plane, and AP firmware versions as well as the system configuration in the cluster if a system failure occurs.

### Creating a Cluster Backup

Backing up the cluster (includes OS, configuration, database and firmware) periodically enables you to restore it in the event of an emergency. Ruckus Wireless also recommends that you back up the cluster before you upgrade the controller software.

1. Go to **Administration > Backup and Restore**.

2. Select the **Cluster** tab.
3. In Cluster Backup and Restore, click **Backup Entire Cluster** to backup both nodes in a cluster.  
The following confirmation message appears: Are you sure you want to back up the cluster?
4. Click **Yes**.  
The following message appears: The cluster is in maintenance mode. Please wait a few minutes.  
When the cluster backup process is complete, a new entry appears in the **Cluster Backups History** section with a **Created On** value that is approximate to the time when you started the cluster backup process.

### Restoring a Cluster Backup

You must be able to restore a cluster to its previous version in the case of a failure.

1. Go to **Administration > Backup and Restore**.
2. Select the **Cluster** tab.
3. In Cluster Backup History, select the cluster and click **Restore**.  
The following confirmation message appears:  

```
Are you sure you want to restore the cluster?
```
4. Click **Yes**.  
The cluster restore process may take several minutes to complete. When the restore process is complete, the controller logs you off the web interface automatically.  
**ATTENTION:** Do not refresh the controller web interface while the restore process is in progress. Wait for the restore process to complete successfully.
5. Log on to the controller web interface.  
If the web interface displays the message `Cluster is out of service. Please try again in a few minutes` appears after you log on to the controller web interface, wait for about three minutes. The dashboard will appear shortly. The message appears because the controller is still initializing its processes.
6. Go to **Administration > Upgrade**, and then check the **Current System Information** section and verify that all nodes in the cluster have been restored to the previous version and are all in service.
7. Go to **Diagnostics > Application Logs**, and then under **Application Logs & Status** check the **Health Status** column and verify that all of the controller processes are online.

You have completed restoring the cluster backup.

## Backing Up and Restoring the Controller's Network Configuration from an FTP Server

In addition to backing up and restoring the controller's network configuration from its own database, the controller supports backup and restore of its network configuration from an FTP server using the CLI.

This section describes the requirements for backing up and restoring the controller's network configuration from an FTP server, the information that is included in the backup file, and how to perform the backup and restore process.

To back up and restore the controller's network configuration from an FTP server, the controller must have already been set up and in service. In case of a multi-node cluster, all the nodes in the cluster must be in service.

The following table lists the network configuration that is backed up from the control and data planes when you perform a backup procedure to an FTP server.


**Table 56: Information that is backed up to the FTP server**

Control Plane	Data Plane
<ul style="list-style-type: none"> <li>• Control interface</li> <li>• Cluster interface</li> <li>• Management interface</li> <li>• Static routes</li> <li>• User-defined interfaces</li> </ul>	<ul style="list-style-type: none"> <li>• Primary interface</li> <li>• Static routes</li> <li>• Internal subnet prefix</li> </ul>

### Backing Up to an FTP Server

Follow these steps to back up the controller network configuration to an FTP server.

 1. Log on to the controller from the controller's command line interface (CLI). For more information, see the corresponding *Command Line Interface Reference Guide* for your controller platform.
2. At the prompt, enter `en` to enable privileged mode.



```
cb172651> en
Password: *****
```

**Figure 128: Enable privileged mode**

3. Enter `-` to display the statuses of the node and the cluster.

Before continuing to the next step, verify that both the node and the cluster are in service.

**Figure 129: Verify that both the node and the cluster are in service**

```
cb172651# show cluster-state
Current Node Status : In service
Cluster Status      : In service
Cluster Operation   : None
System Mode         : None
```

4. Enter backup network to back up the controller network configuration, including the control plane and data plane information.

The controller creates a backup of its network configuration on its database.

Figure 130: Run backup network

```
#####
#      Welcome to SCG      #
#####
Password:
Please wait. CLI initializing...

Welcome to the Ruckus SmartCell Gateway 200 Command Line Interface
Version: 2.5.0.0.402

cb172651> en
Password: *****

cb172651# backup network
Do you want to backup network configurations (or input 'no' to cancel)? [yes/no] yes
Starting to backup network configurations...
Successful operation
```

5. Enter show backup-network to view a list of backup files that have been created.

Verify that the **Created On** column displays an entry that has a time stamp that is approximate to the time you started the backup.

Figure 131: Enter the show backup-network command

```
cb172651# show backup-network
No.    Created on                Patch Version              File Size
-----
1      2013-10-23 11:01:14 GMT   2.5.0.0.402               1.2K
2      2013-10-24 02:40:22 GMT   2.5.0.0.402               1.2K
```

6. Enter copy backup-network {ftp-url}, where {ftp-url} (remove the braces) is the URL or IP address of the FTP server to which you want to back up the cluster configuration.

The **CLI** prompts you to choose the number that corresponds to the backup file that you want to export to the FTP server.

- Enter the number of the backup file that you want to export to the FTP server.

The controller encrypts the backup file, and then exports it to the FTP server. When the export process is complete, the following message appears on the **CLI**:

```
Succeed to copy to remote FTP server
Successful operation
```

**Figure 132:** Succeed to copy to remote FTP server indicates that you have exported the backup file to the FTP server successfully

```
cb172651# copy backup-network ftp://david-ko:AAAAaa123@10.2.2.162
No.      Created on          Patch Version      File Size
-----
1        2013-10-23 11:01:14 GMT  2.5.0.0.402      1.2K
2        2013-10-24 02:40:22 GMT  2.5.0.0.402      1.2K

Please choose a backup to send to remote FTP server or 'No' to cancel: 2
Starting to copy the chosen backup to remote FTP server...
Starting to encrypt backup file...
Succeed to copy to remote FTP server
Successful operation
```

- Using an FTP client, log on to the FTP server, and then verify that the backup file exists.

The file format of the backup file is

```
network_<YYYYMMDDHHmmss>_<controller-version>.bak.
```

For example, if you created the backup file on October 24th 2013 at 02:40:22 and the controller version is 2.5.0.0.402, you should see a file named `network_20131024024022_2.5.0.0.402.bak` on the FTP server.

You have completed backing up the controller to an FTP server.

### Restoring from an FTP Server

Before you continue, take note of the following limitations with restoring a backup file of the controller network configuration from an FTP server:

- Only release 2.1 and later support restoring from an FTP server.
- In this current release, restoring the entire cluster from an FTP server is unsupported. The restore process must be performed on one node at a time.
- Restoring from an FTP server can only be performed using the **CLI**.

**CAUTION:** Restoring a backup file to the controller requires restarting all of the controller services.

Follow these steps to restore a backup file of the controller's network configuration that you previously uploaded to an FTP back to the controller.

- Log on to the controller from the **CLI**. For more information, see the corresponding *Command Line Interface Reference Guide* for your controller platform.



2. At the prompt, enter `en` to enable privileged mode.

**Figure 133: Enable privileged mode**

```
cb172651> en
Password: *****
```

3. Enter `show cluster-state` to display the statuses of the node and the cluster.  
Before continuing to the next step, verify that both the node and the cluster are in service.

**Figure 134: Verify that both the node and the cluster are in service**

```
cb172651# show cluster-state
Current Node Status : In service
Cluster Status      : In service
Cluster Operation   : None
System Mode         : None
```

4. Enter the following command to log on to the FTP server and check for available backup files that can be copied to the controller:  
`copy <ftp-url> backup-network`
5. If multiple backup files exist on the FTP server, the **CLI** prompts you to select the number that corresponds to the file that you want to copy back to the controller.

If a single backup file exists, the **CLI** prompts you to confirm that you want to copy the existing backup file to the controller.

When the controller finishes copying the selected backup file from the FTP server back to the controller, the following message appears: `Succeed to copy the chosen file from the remote FTP server`

6. Enter `show backup-network` to verify that the backup file was copied back to the controller successfully.

**Figure 135: Verify that the backup file was copied to the controller successfully**

```
cb172651# copy ftp://david-ko:AAAAaa123@10.2.2.162 backup-network
Only one NetworkBackup file (network_20131024024022_2.5.0.0.402.bak) is found. Do you want to copy (or input 'no' to cancel)? [yes/no] yes
Starting to copy the chosen NetworkBackup file (network_20131024024022_2.5.0.0.402.bak) from remote FTP server...
Succeed to copy the chosen file from remote FTP server

cb172651# show backup-network
No.    Created on          Patch Version      File Size
-----
1      2013-10-24 02:40:22 GMT  2.5.0.0.402      1.2K
```

7. Run `restore network` to start restoring the contents of the backup file to the current controller.

The **CLI** displays a list of backup files, and then prompts you to select the backup file that you want to restore to the controller.

8. Enter the number that corresponds to the backup file that you want to restore.

**Figure 136: Enter the number that corresponds to the backup file that you want to restore**

```

cb172651# restore network
-----
No.   Created on          Patch Version      File Size
-----
1     2013-10-24 02:40:22 GMT  2.5.0.0.402      1.2K
-----

Please choose a backup to restore or 'No' to cancel: 1
The matched network setting for current system serial number is found from the chosen backup as below:

[Control Plane Interfaces]
Interface IP Mode IP Address      Subnet Mask      Gateway
-----
Control   Dhcp
Cluster   Dhcp
Managemen Dhcp
t

Default Gateway Interface : Management
Primary DNS Server       : 172.17.17.16
Secondary DNS Server     :
Internal Subnet Prefix   : 10.254.1

[Control Plane User Defined Interfaces]
Name      IP Address      Subnet Mask      Gateway      VLAN  Interface  Service
-----
v100     172.17.26.103   255.255.255.0   172.17.26.1   100   Control    Hotspot
v102     172.17.26.102   255.255.255.0   172.17.26.1   102   Control    Hotspot
v101     172.17.26.101   255.255.255.0   172.17.26.1   101   Managemen  Hotspot
t

Please confirm this network setting, and this action will restart all services that will cause current SSH connection closed. [
l)? [yes/no] yes
Not all services are healthy. Do you want to continue (or input 'no' to cancel)? [yes/no] yes
Process had been started before and running...
Starting to stop all SCG services...

```

The **CLI** displays the network configuration that the selected backup file contains.

If the serial number of the current controller matches the serial number contained in one of the backup files, the **CLI** automatically selects the backup file to restore and displays the network configuration that it contains.

9. Type `yes` to confirm that you want to restore the selected backup file. The controller starts the restore process and performs the following steps:

- a) Stop all services.
- b) Back up the current network configuration.

This will enable the controller to roll back to the current configuration, in case there is an issue with the restore process.

- c) Clean up the current network configuration.

The controller deletes its previous network configuration, including static routes, name server, user defined interfaces, etc.

10. Restore the network configuration contained in the selected backup file.
11. Restart all services.

When the restore process is complete, the following message appears on the CLI: All services are up!

**Figure 137: The controller performs several steps to restore the backup file**

```
cal12851@ restore network
Process had been started before and running...
Starting to stop all SCG services...
Checking action...Done!
Checking type...Done!
Checking creator...Done!
Checking reason...Done!
service stop flag file already exists, skip create it
07:20:24.342 [main] INFO c.ruckunwireless.wig.cluster.Cluster - Load cluster environment file [/opt/ruckunwireless/wig/conf/configurableSetting.properties]
wait for (CaptivePortal,Cassandra,Communicator,Configurer,EventReader,Greyhound,Memcached,Northbound,Scheduler,SubscriberManagement) Down!
wait for (Cassandra,Communicator,Configurer,EventReader,Greyhound,Memcached) Down!
wait for (Cassandra,Communicator,Configurer,Memcached) Down!
wait for (Cassandra,Configurer,Memcached) Down!
wait for (Cassandra,Configurer,Memcached) Down!
wait for (Cassandra,Configurer,Memcached) Down!
wait for (Cassandra,Configurer,Memcached) Down!
wait for (Cassandra,Configurer,Memcached) Down!
wait for (Configurer) Down!
All services are down!
Stop service SCG done!
Starting to restore current system network setting...
Starting to backup current network settings for rollback
Starting to restore network configuration
Starting to delete the routes of control plane
Starting to delete the user interfaces of control plane
Starting to update the IP settings of control plane
Starting to update the DNS of control plane
Starting to update the internal subnet of control plane
Restarting control plane network
Starting to update the user interfaces of control plane
Restarting control plane network
Succeed to restore network configuration
Starting to start all SCG services...
Checking action...Done!
Checking type...Done!
Checking creator...Done!
Checking reason...Done!
service start flag file already exists, skip create it
wait for (CaptivePortal,Cassandra,Communicator,EventReader,Greyhound,Memcached,Monitor,Northbound,Scheduler,SubscriberManagement,SubscriberPortal,Web) Up!
wait for (CaptivePortal,Communicator,EventReader,Greyhound,Memcached,Monitor,Northbound,Scheduler,SubscriberManagement,SubscriberPortal,Web) Up!
wait for (CaptivePortal,Communicator,EventReader,Greyhound,Memcached,Monitor,Northbound,Scheduler,SubscriberManagement,SubscriberPortal,Web) Up!
wait for (CaptivePortal,Communicator,EventReader,Greyhound,Memcached,Monitor,Northbound,Scheduler,SubscriberManagement,SubscriberPortal,Web) Up!
wait for (Communicator,EventReader,Greyhound,Monitor,Northbound,Scheduler,SubscriberManagement) Up!
wait for (Monitor) Up!
wait for (Monitor) Up!
wait for (Monitor) Up!
All services are up!
```

- 12 Do the following to verify that the restore process was completed successfully:
- a) Run show cluster-state to verify that the node and the cluster are back in service.
  - b) Run show interface to verify that all of the network configuration settings have been restored.

**Figure 138: Verify that the node and cluster are back in service and that the network configuration has been restored successfully**

```
cb172651# show cluster-state
Current Node Status : In service
Cluster Status      : In service
Cluster Operation   : None
System Mode         : None

cb172651# show interface
Interfaces
-----
Interface   : Control
IP Mode     : Dhcp
IP Address  : 10.2.7.155
Subnet Mask : 255.255.0.0
Gateway    : 10.2.0.1

Interface   : Cluster
IP Mode     : Dhcp
IP Address  : 10.2.2.215
Subnet Mask : 255.255.0.0
Gateway    : 10.2.0.1

Interface   : Management
IP Mode     : Dhcp
IP Address  : 172.17.26.51
Subnet Mask : 255.255.254.0
Gateway    : 172.17.26.1

Default Gateway Interface : Management
Primary DNS Server       : 172.17.17.16
Secondary DNS Server     :

User Defined Interfaces
-----
IP Address      : 172.17.26.101
Subnet Mask     : 255.255.255.0
Gateway        : 172.17.26.1
VLAN           : 101
Physical Interface : Management
Service        : Hotspot

IP Address      : 172.17.26.103
Subnet Mask     : 255.255.255.0
Gateway        :
VLAN           : 100
Physical Interface : Control
```

You have completed importing and applying the network configuration backup from the FTP server to the controller.

### Backing up Cluster Configuration

Ruckus Wireless® strongly recommends that you back up the controller database periodically. This will help ensure that you can restore the system configuration settings easily if the database becomes corrupted for any reason.

The following are backed up in the system configuration backup file:

**Table 57: Contents of a cluster configuration backup file**

Configuration Data	Administration Data	Report Data	Identity Data
AP zones	Cluster backup	Saved reports	Created profiles
Third-party AP zones	System configuration backups	Historical client statistics	Generated guest passes
Services and profiles	Upgrade settings and history	Network tunnel statistics	
Packages	Uploaded system diagnostic scripts		
System settings	Installed licenses		
Management domains			
Administrator accounts			
MVNO accounts			

A system configuration backup does not include control plane settings, data plane settings, and user-defined interface settings.

1. Go to **Administration > Backup and Restore**.
2. Select the **Configuration** tab.
3. In System Configuration Backup History, click **Backup**.

The following confirmation message appears: Are you sure you want to back up the controller's configuration?

4. Click **Yes**.

A progress bar appears as the controller creates a backup of the its database. When the backup process is complete, the progress bar disappears, and the backup file appears under the **System Configuration Backup History** section.

### Scheduling a Configuration Backup

1. Go to **Administration > Backup and Restore**.
2. Select the **Configuration** tab.
3. In Schedule Backup, you can configure the controller to backup its configuration automatically based on a schedule you specify.
  1. In Schedule Backup, click **Enable**.
  2. In Interval, set the schedule when the controller will automatically create a backup of its configuration. Options include: Daily, Weekly and Monthly.
  3. Hour: Select the hour of the day when the controller must generate the backup.
  4. Minute: Select the minute of the hour.
  5. Click **OK**.

You have completed configuring the controller to create a backup automatically.

### Exporting the Configuration Backup to an FTP Server Automatically

In addition to backing up the configuration file manually, you can configure the controller to export the configuration file to an FTP server automatically whenever you click **Backup**.

Follow these steps to back up the configuration file to an FTP server automatically.

1. Go to **Administration > Backup and Restore**.
2. Select the **Configuration** tab.
3. In Auto Export Backup, you can configure the controller to export the configuration file to an FTP server automatically whenever you back up the configuration file.
  1. In Auto Export Backup, click **Enable**.
  2. FTP Server: Select the FTP server to which you want to export the backup file.
  3. Click **Test**. The controller attempts to establish connection to the FTP server using the user name and password that you supplied. If the connection attempt is successful, a success message is displayed. If the connection attempt is unsuccessful, verify that the FTP server details (including the user name and password) are correct, and then click **Test** again.
  4. Click **OK**.
4. After you verify the controller is able to connect to the FTP server successfully, click **OK** to save the FTP server settings.

You have completed configuring the controller to export the configuration backup file to an FTP server.

### Downloading a Copy of the Configuration Backup

After you create a configuration backup, you have the option to download the backup file from the **System Configuration Backups History** section.

1. Go to **Administration > Backup and Restore**.
2. Select the **Configuration** tab.
3. Locate the entry for the backup file that you want to download. If multiple backup files appear on the list, use the date when you created the backup to find the backup entry that you want.
4. Click **Download**.

Your web browser downloads the backup file to its default download folder. NOTE: When your web browser completes downloading the backup file, you may see a notification at the bottom of the page.

5. Check the default download folder for your web browser and look for a file that resembles the following naming convention: {Cluster

Name}\_BackupConf\_{MMdd}\_db\_{MM}\_{dd}\_{HH}\_{mm}.bak

For example, if the controller cluster is named Cluster A and you created the configuration backup on September 7 at 11:08 AM, the backup file name will be:

ClusterA\_BackupConf\_0907\_db\_09\_07\_11\_08.bak

You have completed downloading a copy of the configuration backup.

## Restoring a System Configuration Backup

In the event of a failure or emergency where you may need to go back to the previous version of a cluster, you will have to restore your system configuration backup and restart the cluster.

1. Go to **Administration > Backup and Restore**.
2. Select the **Configuration** tab.
3. Once you locate the backup file, click **Restore** that is in the same row as the backup file. A confirmation message appears.

**NOTE:** Take note of the backup version that you are using. At the end of this procedure, you will use the backup version to verify that the restore process was completed successfully.

4. Click **Yes**. The following message appears: *System is restoring. Please wait...* When the restore process is complete, the controller logs you off the web interface automatically.
5. Log on to the controller web interface.  
Check the web interface pages and verify that the setting and data contained in the backup file have been restored successfully to the controller.

You have completed restoring a system configuration backup file.

## Upgrading the Controller

Ruckus Wireless may periodically release controller software updates that contain new features, enhancements, and fixes for known issues. These software updates may be made available on the Ruckus Wireless support website or released through authorized channels.

**CAUTION:** Although the software upgrade process has been designed to preserve all controller settings, Ruckus Wireless strongly recommends that you back up the controller cluster before performing an upgrade. Having a cluster backup will ensure that you can easily restore the controller system if the upgrade process fails for any reason.

**CAUTION:** Ruckus Wireless strongly recommends that you ensure that all interface cables are intact during the upgrade procedure.

**CAUTION:** Ruckus Wireless strongly recommends that you ensure that the power supply is not disrupted during the upgrade procedure.

If you are managing a SCG200 controller, you can also perform system configuration backup, restore, and upgrade from the controller command line interface.

## Performing the Upgrade

Ruckus Wireless® strongly recommends backing up the controller cluster before performing the upgrade. If the upgrade process fails for any reason, you can use the latest backup file to restore the controller cluster.

Before starting this procedure, you should have already obtained a valid controller software upgrade file from Ruckus Wireless® Support or an authorized reseller.

Always back up the controller before attempting a software upgrade. If you are managing a multi-node cluster, back up the entire cluster, and then verify that the backup process completes successfully.

If you have an FTP server, back up the entire cluster and upload the backup files from all the nodes in a cluster to a remote FTP server.

1. Copy the software upgrade file that you received from Ruckus Wireless® to the computer where you are accessing the controller web interface or to any location on the network that is accessible from the web interface.
2. Go to **Administration > Upgrade**.
3. Select the **Upgrade** tab.

In Current System Information, the controller version information displayed.

**NOTE:** The **Upgrade History** tab displays information about previous cluster upgrades.

4. In Upload, select the **Run Pre-Upgrade Validations** check box to verify if the data migration was successful. This option allows you to verify data migration errors before performing the upgrade.
5. Click **Browse** to select the patch file.
6. Click **Upload** to upload the controller configuration to the one in the patch file.  
The controller uploads the file to its database, and then performs file verification. After the file is verified, the **Patch for Pending Upgrade** section is populated with information about the upgrade file. If data migration was unsuccessful, the following error is displayed: `Exception occurred during the validation of data migration. Please apply the system configuration backup and contact system administrator.`
7. You can now:
  - Click **Upgrade** to start the upgrade process without backing up the current controller cluster or its system configuration, or
  - Click **Backup & Upgrade** to back up the controller cluster and system configuration before performing the upgrade.

When the upgrade (or backup-and-upgrade) process is complete, the controller logs you off the web interface automatically. When the controller log on page appears again, you have completed upgrading the controller.

In the **Current System Information** section, check the value for controller version. If the firmware version is newer than the firmware version that controller was using before you started the upgrade process, then the upgrade process was completed successfully.



**NOTE:** APs periodically send scheduled configuration requests to the controller, including the firmware version. Therefore, when an AP joins a zone for the first time, the firmware version is verified by the controller. If the firmware version is different from that which is configured for the zone, the controller responds with a request to upgrade it, after which the AP initiates a request to upgrade the firmware using HTTP.

## Uploading an AP Patch File

New AP models and firmware updates are supported without the need to upgrade the controller image by using the AP patch files supplied by Ruckus Wireless.

1. Go to **Administration > Upgrade**.
2. Select the **AP Patch** tab.
3. In Patch File Upload, click **Browse** to select the patch file (with extension .patch).
4. Click **Open**.
5. Click **Upload**. After the patch file is updated, the section is populated with the Start time, AP firmware version number and AP model number.

6. Click **Apply Patch**.

After the patch file is updated, the AP patch information is populated with the following information:

- Name of the patch file
- Size of the patch file
- AP firmware version number
- AP model number

You will be prompted to log out after this step.

7. Click **Browse** to select the patch file.
8. Click **Upload** to upload the controller configuration to the one in the patch file.

The controller uploads the file to its database, and then performs file verification. After the file is verified, the **Patch for Pending Upgrade** section is populated with information about the upgrade file. If data migration was unsuccessful, the following error is displayed: `Exception occurred during the validation of data migration. Please apply the system configuration backup and contact system administrator.`

9. You can now:
  - Click **Upgrade** to start the upgrade process without backing up the current controller cluster or its system configuration, or
  - Click **Backup & Upgrade** to back up the controller cluster and system configuration before performing the upgrade.

You have successfully updated the AP models and AP firmware with the patch file, without having to upgrade the controller software.

## Verifying the Upgrade

You can verify that the controller upgrade was completed successfully.

1. Go to **Administration > Upgrade**.
2. In the **Current System Information** section, check the value for *Controller Version*. If the firmware version is newer than the firmware version that controller was using before you started the upgrade process, then the upgrade process was completed successfully.

**NOTE:** APs periodically send scheduled configuration requests to the controller, including the firmware version. Therefore, when an AP joins a zone for the first time, the firmware version is verified by the controller. If the firmware version is different from that which is configured for the zone, the controller responds with a request to upgrade it, after which the AP initiates a request to upgrade the firmware using HTTP.

## Rolling Back to a Previous Software Version

There are scenarios in which you may want to roll back the controller software to a previous version.

Here are two:

- You encounter issues during the software upgrade process and the controller cannot be upgraded successfully. In this scenario, you can only perform the software rollback from the CLI using the `restore local` command. If you have a two-node controller cluster, run the `restore local` command on each of the nodes to restore them to the previous software before attempting to upgrade them again.
- You prefer a previous software version to the newer version to which you have upgraded successfully. For example, you feel that the controller does not operate normally after you upgraded to the newer version and you want to restore the previous software version, which was more stable. In this scenario, you can perform the software rollback either from the web interface or the CLI. If you have a two-node controller cluster, you must have cluster backup on both of the nodes.

To ensure that you will be able to roll back to a previous version, Ruckus Wireless® strongly recommends the following before attempting to upgrade the controller software:

- Always back up the controller before attempting a software upgrade. If you are managing a multi-node cluster, back up the entire cluster, and then verify that the backup process completes successfully. See [Creating a Cluster Backup](#) on page 300 for the local backup instructions. If you have a local backup and you want to roll back the controller to a previous software version, follow the same procedure described in [Restoring Cluster Backup](#).
- If you have an FTP server, back up the entire cluster and upload the backup files from all the nodes in a cluster to a remote FTP server. See [Backing Up to an FTP Server](#) on page 302 for remote backup instructions and [Restoring from an FTP Server](#) on page 304 for remote restore instructions.

## Upgrading the Data Plane

You can view and upgrade the virtual data plane version using patch files. This feature is only applicable for vSZ-H and vSZ-E.

1. Go to **Administration > Upgrade**.

2. Select the **DP Patch** tab.  
The **DP Patch** page appears.

**Figure 139: DP Patch - Virtual Data Plane Upgrade**

The screenshot shows the 'DP Patch' interface. At the top, there are tabs: 'Upgrade', 'Upgrade History', 'DP Patch' (active), and 'AP Patch'. Below the tabs, there are three main sections:

- Patch File Upload:** Includes a text input field for the patch file path, a 'Browse' button, and an 'Upload' button.
- Patch for Pending Upgrade:** Displays fields for 'Patch File Name', 'Patch File Size', and 'Patch Version'.
- Data Planes:** Features a 'Refresh' button, a 'Select upgrade version:' dropdown menu (currently showing 'No data available'), and an 'Apply' button. Below this is a table with the following data:

<input checked="" type="checkbox"/>	Name	DP MAC Address	Firmware	Registration State	Upgrade Status
<input checked="" type="checkbox"/>	DD	00:0C:29:F7:12:DD	3.5.0.0.799	Approved	No Configuration

3. In **Patch File Upload**, click **Browse** to select the patch file (.ximg file).
4. Click **Upload**. The patch files is uploaded.

The controller uploads the file to its database, and then performs file verification. After the file is verified, the **Patch for Pending Upgrade** section is populated with information about the upgrade file.

The following details are displayed:

- Patch File Name: Displays the name of the patch file.
- Patch File Size: Displays the size of the patch file.
- Patch Version: Displays the version of the patch file.

5. In **Data Planes**, identify the virtual data plane you want to upgrade, and then choose a patch file version from **Select upgrade version**.
6. Click **Apply** to apply the patch file version to the virtual data plane.

The following information about the virtual data plane is displayed after the patch file upgrade is completed.

- Name: Displays the name of the virtual data plane.
- DP MAC Address: Displays the MAC IP address of the data plane.
- Firmware: Displays the version of the data plane that has been upgraded.
- Registration State: This field displays whether all licenses pertaining to the data plane are approved.
- Upgrade Status: Displays the completion status of the patch file upgrade for the virtual data plane.

You have successfully upgraded the virtual data plane.

## Managing Licenses

Depending on the number of Ruckus Wireless APs that you need to manage with the controller, you may need to upgrade the controller license as your network expands.

The maximum number of access points that the controller can manage is controlled by the license file that came with the controller. If the number of access points on the network exceeds the limit in the license file, you will need to obtain an additional license file and upload it to the controller.

**NOTE:** For information on obtaining additional license files, contact Ruckus Wireless Support or an authorized Ruckus Wireless reseller.

The maximum number of access points that a license supports depends on its stock-keeping unit (SKU).

### Viewing Installed Licenses

You can synchronizing the license data, import a license file into the controller if it is unable to connect to the Ruckus Wireless SmartLicense system and release licenses bound to an offline controller by downloading a copy of the licenses.

1. Go to **Administration > Licenses**.
2. Select the **Installed Licenses** tab.

You can view the following information about the licenses you have uploaded to the controller:

- Name: The name of the node to which the license was uploaded
- Node: Displays the name of the node
- Start Date: The date when the license file was activated.
- End Date: For time-bound licenses, this column shows the date when the license file expires.
- Capacity: The number of units or license seats that the license file provides.
- Description: The type of license.

### Importing Installed Licenses

If the controller is disconnected from the Internet or is otherwise unable to communicate with the Ruckus Wireless SmartLicense system (due to firewall policies, etc.), you can manually import a license entitlement file into the controller.

**NOTE:** The option to import a license file manually into the controller is only available if the controller is using the cloud license server.

1. Obtain the license file. You can do this by logging on to your Ruckus Wireless Support account, going to the license management page, and then downloading the license file (the license file is in .bin format).
2. Log on to the controller web interface, and then go to **Administration > Licenses**.

3. Select the **Installed Licenses** tab.
4. Select the node for which you are uploading the license file and click **Upload**.

The **Upload License** page appears where you must provide the following information:

- Select Controller: Select the node for which you are uploading the license file.
- Select License File: Click **Browse**, locate the license file (.bin file) that you downloaded from your Ruckus Wireless Support account, and then select it.

The page refreshes, and the information displayed changes to reflect the updated information imported from the SmartLicense platform.

### Synchronizing Controller with the License Server

By default, the controller automatically synchronizes its license data with the selected license server every 24 hours. If you made changes to the controller licenses (for example, you purchased additional licenses) and you want the controller to download the updated license data immediately, you can trigger a manual synchronization.

1. Log on to the controller web interface, and then go to **Administration > Licenses**.
2. Select the **Installed Licenses** tab.
3. Click **Sync Now**.

When the sync process is complete, the message `Sync license with the license server successful` appears. If the previously saved license data are different the latest license data on the server, the information in the Installed Licenses section refreshes to reflect the latest data.

You have completed manually synchronizing the controller with the license server.

### Downloading License Files

If you need to release licenses bound to an offline controller and allow those licenses to be used elsewhere (on a different controller), you can download a copy of the controller licenses. The option to download a copy of the controller licenses is only available if the controller is using the Ruckus Wireless cloud license server.

1. Log on to the controller web interface, and then go to **Administration > Licenses**.
2. Select the **Installed Licenses** tab.
3. Click **Download**.

The **Download License** page appears. In **Select Controller**, select the controller node for which you want to download the license files.

**NOTE:** You can upload and download license files only if the controller is using the Ruckus Wireless cloud license server.

4. Click **Download**. Your web browser downloads the license files from the controller.
5. When the download is complete, go to the default download folder that you have configured for your web browser, and then verify that the binary copy of the license files (with .bin extension) exists.

You have completed downloading copies of the controller licenses.

## Configuring the License Server

Ruckus Wireless provides two options for managing the licenses that you have purchased for the controller - Cloud License Server and Local License Server (LLS).

Cloud License Server also known as the SmartLicense server, this a cloud-based server that stores all of the licenses and support entitlements that you have purchased for the controller. For information on how to set up and activate your SmartLicense account, see the SmartLicense User Guide.

1. Go to **Administration > Licenses**.

2. Select the **License Server** tab.

The Server details and Synchronization history are displayed.

3. Click **Configure**.

The **License Server Configuration** page appears.

- Cloud License Server: Select this option to use the Ruckus Wireless SmartLicense server.
- Local License Server: Select this option to use an LLS that you have set up on the network, and then configure
  - Domain or IP: Type the FQDN or IP address of the LLS.
  - Port: Type the port number. Port range is from 0 to 65535 (default is 3333).

4. Click **OK**.

5. Click **Sync Now** and the controller saves the selected license server configuration, deletes all of its saved license data, and then automatically synchronizing the license information with the selected license server.

You have completed configuring the license server that the controller will use.

## Configuring License Bandwidth


You can assign a license bandwidth for a virtual data plane provided it is already approved. Each virtual data plane can be configured with only one bandwidth license. This feature is only applicable to vSZ-H and vSZ-E.

1. Go to **Administration > Licenses**.

2. Select the **License Bandwidth Configuration** tab.

The **License Bandwidth Configuration** page appears.

**Figure 140: License Bandwidth Configuration**

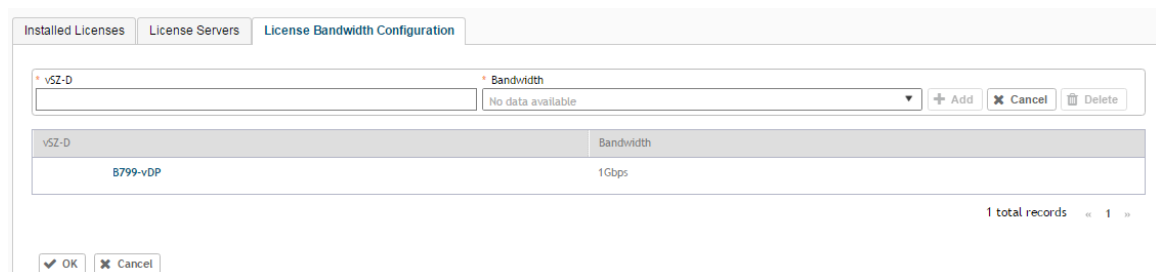

3. In **vSZ-D**, type the name of the virtual data plane.
4. From the **Bandwidth** drop-down menu, select the license bandwidth you want to assign to the virtual data plane.
5. Click **Add**. The vSZ-D with the assigned license bandwidth is displayed.
6. Click **OK**.

You have successfully assigned a license bandwidth to the virtual data plane.

## ZoneDirector to SmartZone Migration

SmartZone controllers are better equipped to handle large WiFi deployments such as within campuses and when customers are vastly distributed; therefore, Ruckus Wireless recommends that you migrate existing ZoneDirector deployments to SmartZone controller deployments. You can migrate ZoneDirector AP configuration information to SmartZone controllers from the controller itself, using a migration tool.

The AP models should be supported by the controller.

**NOTE:** Only ZD versions 9.13, 9.13.1, 9.13.2 and 9.13.3 are supported.

1. Go to **Administration > ZD Migration**.

The **ZoneDirector Migration** page appears.

2. Configure the following:

1. **ZoneDirector IP Address:** Type the IP address of the ZD that you want to migrate.
2. **Admin Credentials:** Enter the username and password details to access/login to ZD.
3. Click **Connect**. Lists of APs connected to the ZD deployment are displayed.
4. Click **Select AP** to choose the AP information that you want to migrate from ZD.
5. Click **Migrate** to migrate the AP. The controller imports the ZD configuration and applies it to the selected AP.

The **ZoneDirector Migration Status** section displays the status of the migration. When completed successfully, a success message is displayed. If migration fails, a failure message is displayed and you can attempt the migration process again.

## Monitoring Administrator Activities

The controller keeps a record of all actions and configuration changes that administrators perform on the server. This feature enables you and other administrators in the organization to determine what changes were made to the controller and by whom.

1. Go to **Administration > Admin Activities**.


2. Select the **Admin Activities** tab. the **Admin Activities** page displays the administrator actions.

The following information is displayed:

- **Date and Time:** Date and time when the alarm was triggered
- **Administrator:** Name of the administrator who performed the action

- **Managed By:** Displays the system that manages the admin activities.
- **Source IP:** Displays the IP address of the device from which the administrator manages the controller.
- **Browser IP:** IP address of the browser that the administrator used to log on to the controller.
- **Action:** Action performed by the administrator.
- **Resource:** Target of the action performed by the administrator. For example, if the action is Create and the object is Hotspot Service, this means that the administrator created a new hotspot service.
- **Description:** Displays additional details about the action. For example, if the administrator created a new hotspot service, this column may show the following: **Hotspot [company\_hotspot]** .



Click  to export the administrator activity list to a CSV file. You can view the default download folder of your web browser to see the CSV file named **clients.csv**. Use a spreadsheet application (for example, Microsoft® Excel®) to view the contents of the CSV file.

## Managing Mobile Virtual Network Operator (MVNO) Accounts

A Mobile Virtual Network Operator (MVNO) uses a host carrier network to service its mobile users. An MVNO account is created for each operator and the MVNO page lists the accounts that are created.

**1. Go to Administration > MVNO.**

The **MVNO** page appears displaying information about MVNO accounts created.

**2. Click Create** to create an MVNO account.

The **The Mobile Virtual Network Operator** page appears.

**3. Configure the following:**

**1. The Mobile Virtual Network Operator Summary**

- a.** 'Domain Name: Type a domain name to which this account will be assigned
- b.** Description: Type a brief description about this domain name.

**2. AP Zones of Mobile Virtual Network Operator:** Displays the AP zones that are allocated to this MVNO account

- a.** Click **Add AP Zone**. The **Add AP Zone** page appears.
- b.** AP Zone: Select the AP zone you want to add to the MVNO account from the drop-down menu.
- c.** Click **OK**.

**NOTE:** You can only select a single AP zone at a time. If you want to grant the MVNO account management privileges to multiple AP zones, select them one at time.



3. WLAN Services: Configure the WLAN services to which the MVNO account that you are creating will have management privileges.
  - a. Click **Add WLAN**. The **Add WLAN** page appears.
  - b. SSID: Select the WLAN to which the MVNO account will have management privileges.

**NOTE:** You can only select one WLAN service at a time. If you want to grant the MVNO account management privileges to multiple WLAN service zones, select them one at time.
  - c. Click **OK**.
4. Super Administrator: Configure and define the logon details and management capabilities that will be assigned to the account.
  - a. Account Name: Type the name that this MVNO will use to log on to the controller.
  - b. Real Name: Type the actual name (for example, John Smith) of the MVNO.
  - c. Password: Type the password that this MVNO will use (in conjunction with the Account Name) to log on to the controller.
  - d. Confirm Password: Type the same password as above. f) In Phone, type the phone number of this MVNO.
  - e. Phone: Type the phone number of the administrator.
  - f. Email: Type the email address of this MVNO.
  - g. Job Title: Type the job title or position of this MVNO in his organization.
5. RADIUS Server for Administrator Authorization and Authentication: See [Creating a RADIUS Server for Administrator Authentication](#) on page 298 for more information.

4. Click **OK**.

You have created an MVNO account.

**NOTE:** You can also edit and delete the account by selecting the options **Configure**, and **Delete** respectively, from the **MVNO** page.

## Managing Events and Alarms

In this chapter:


- [Viewing Events](#)
- [Sending SNMP Traps and Email Notifications for Events](#)
- [Configuring Event Threshold](#)
- [Configuring Alarms](#)

### Viewing Events


An event is an occurrence or the detection of certain conditions in and around the network. An AP being rebooted, an AP changing its IP address, and a user updating an AP's configuration are all examples of events.

Go to **Events and Alarms > Events**.

The **Events** page appears displaying the following information:

You can also click the  icon to apply filters, to display events based on time and severity.

- **Date and Time:** Displays the date and time when the event occurred
- **Code:** Displays the event code (see the Alarm and Event Reference Guide for your controller platform more information).
- **Type:** Displays the type of event that occurred (for example, AP configuration updated).
- **Severity:** Displays the severity level assigned to the events such as Critical, Debug, Informational, Warning, Major etc.
- **Activity:** Displays additional details about the event, including (if available) the specific access point, control plane, or data plane that triggered the event.

**NOTE:** Click  to export the event details to a CSV file. Check the default download folder of your web browser and look for a file named *events.csv* and view it using a spreadsheet application (for example, Microsoft Excel®).

### Sending SNMP Traps and Email Notifications for Events

By default, the controller saves a record of all events that occur to its database. You can configure the controller to also send SNMP traps and email notifications for specific events whenever they occur.

Verify that global SNMP traps are enabled to ensure that the controller can send SNMP traps for alarms.

You can also manually trigger SNMP traps without generating events using CLI. You can use the `#trigger-trap <event code>` command to trigger traps for respective events with their default attributes.

You can acquire the status of a specific client MAC address by using the query RUCKUS-CTRL-MIB. For more information, see the *SmartZone SNMP MIB Reference Guide*.

1. Go to **Events and Alarms > Events**.
2. Click the **Event Management** tab.

The **Event Management** page appears displaying the following information:

- Email Notification: Select the **Enable** check box, and then type an email address or email addresses in the **Mail To** box. If you want to send notifications to multiple recipients, use a comma to separate the email addresses. Then, click **OK**.
- Events: View the table and select the events for which you want to send traps or email notifications (or both). Select the **Enable** or **Disable** options from the drop-down menu, and configure the following:
  - Enable SNMP Notification: Click this link to enable SNMP trap notifications for all selected events.
  - Enable Email: Click this link to enable email notifications for all selected events.
  - Enable DB Persistence: Click this link to enable saving of all selected events to the controller database. If an event is already currently enabled, it will stay enabled after you click this link.

## Configuring Event Threshold

An event threshold defines a set of conditions related to the controller hardware that need to be met before the controller triggers an event. You can accept the default threshold values or you can update the threshold values to make them more suitable to your deployment or controller environment.

1. Go to **Events and Alarms > Events**.
2. Click the **Event Threshold** tab.

This page displays the list of events with configurable thresholds including the event code, severity level, default value and accepted range, and unit of measurement for each event.

3. Identify the event threshold that you want to configure.
4. Click the event name under the **Name** column.

The threshold value for the event becomes editable. Next to the threshold value, the acceptable range is displayed.

5. Edit the threshold value.
6. Click **OK**.


## Configuring Alarms

Alarms are a type of event that typically warrants your attention. Alarms are generated by managed access points and the controller system (control plane and data plane).

Go to **Events and Alarms > Alarms**.

The **Alarms** page appears displaying the following information:

- **Date and Time:** Displays the date and time when the alarm was triggered.
- **Code:** Displays the alarm code (see the Alarm and Reference Guide for your controller platform for more information).
- **Alarm Type:** Displays the type of alarm event that occurred (for example, AP reset to factory settings).
- **Severity:** Displays the severity level assigned to the events such as Critical, Major, Minor and Warning.
- **Status:** Indicates whether the alarm has already been cleared or still outstanding.
- **Activity:** Displays additional details about the alarm, including (if available) the specific access point, control plane, or data plane that triggered the alarm.
- **Acknowledged On:** Displays the date and time when the administrator acknowledge the alarm.
- **Cleared By:** Displays information about who cleared the alarm.
- **Cleared On:** Displays the date and time when the alarm was cleared.
- **Comments:** Displays administrator notes recorded during alarm management.

**NOTE:** Click  to export the alarms details to a CSV file. Check the default download folder of your web browser and look for a file named *alarms.csv* and view it using a spreadsheet application (for example, Microsoft Excel®).

## Clearing Alarms

Clearing an alarm removes the alarm from the list but keeps it on the controller's database.

To clear an alarm:

1. Select the alarm from the list and click **Clear Alarm**. The **Clear Alarm** page appears.
2. Type your comments and select **Apply**.

## Acknowledging Alarms

Acknowledging an alarm lets other administrators know that you have examined the alarm. After you acknowledge an alarm, it will remain on the list of alarms and will show the date and time that you acknowledged it.

To acknowledge an alarm:

1. Select the alarm from the list and click **Acknowledge Alarm**.

This message appears:

Are you sure you want to acknowledge the selected alarms?

2. Select **Yes**.

## Applying Filters

You can view a list of alarms by date, time, severity and status.

1.

Click the  icon.

The **Apply Filters** page appears. Configure the following:

1. Severity: Select the severity level by which you want to filter the list of alarms.
2. Status: Select the status by which you want to filter the list of alarms.
3. Date and Time: Select the alarms by their start and end dates.

2. Click **OK**.

All the alarms that meet the filter criteria are displayed on the **Alarms** page and the display changes to **Filter On**.

You can export the alarms into a CSV file by clicking the  icon.

## Diagnostics

In this chapter:

- [Applying Scripts](#)
- [Applying AP CLI Scripts](#)
- [Viewing and Downloading Logs](#)
- [Viewing RADIUS Proxy Settings](#)
- [Viewing CGF Connection Settings](#)
- [Viewing CGF Transaction Settings](#)
- [Viewing DHCP Relay Settings](#)
- [Viewing DHCP Server Settings](#)
- [Viewing GGSN Connection Settings](#)
- [Viewing GGSN/PGW GTP-C Session Settings](#)
- [Viewing HLR Settings](#)
- [Viewing RADIUS Server Settings](#)
- [Viewing SCTP Settings](#)
- [Viewing STA Statistics Settings](#)
- [Viewing Stack Statistic Settings](#)

## Applying Scripts

New AP models and firmware updates are supported without the need to upgrade the controller image by using AP patch files and diagnostic scripts.

1. Go to **Administration > Diagnostics > Scripts**.
2. Select the **Patch/Diagnostic Scripts** tab.
3. Select the **Upload to current node** check-box.
4. Click **Browse** to select a script that you want to upload to the controller.
5. Click **Upload**.

The script is listed in the **System Uploaded Scripts** section.

If you have uploaded a patch script, it is displayed in the **System Uploaded Patch Scripts** section with the following information:

- Name of the patch file
- Patch file description
- Supported AP firmware version
- AP model number

Click **Delete** to delete scripts.

6. Click **Apply Patch** to apply the patch file to the AP model or firmware as appropriate.

You have successfully applied scripts to the controller AP.

## Applying AP CLI Scripts

New AP models and firmware updates are supported without the need to upgrade the controller image by using AP CLI scripts.

1. Go to **Administration > Diagnostics > Scripts**.
2. Select the **AP CLI Scripts** tab.
3. From **Select AP Zone**, choose the AP zone for which you want to apply the script.
4. Click **Browse** to select an AP CLI script that you want to upload.
5. Click **Upload**.

The script is listed in the **Script Execution Summary** section.

Click **Delete** to delete scripts.

6. Click **Execute** to apply the AP CLI script file to the AP zone.

You have successfully applied AP CLI scripts to the controller AP.

## Viewing and Downloading Logs

The controller generates logs for all the applications that are running on the server.

1. Go to **Administration > Diagnostics > Application Logs**.  
The **Application Logs** page appears.
2. From **Select the Control Plan**, select the control plane for which you want to download logs.
3. Select the **Upload to current node** check-box.
4. You can now opt to select:

Option	Description
<b>Download Logs</b>	To download all logs for the selected application.
<b>Download All Logs</b>	To download all available logs from the controller.  Go to your web browsers default download location and verify that the TGZ file was downloaded successfully. You must use your preferred compression/decompression program to extract the log files from the TGZ file. When the log files are extracted (for example, <code>adminweb.log</code> , <code>cassandra.log</code> , <code>communicator.log</code> , etc.), use a text editor to open and view the log contents.
<b>Download Snapshot Logs</b>	To download snapshot logs that contain system and configuration information, such as the AP list, configurations settings, event list, communicator logs, SSH tunnel lists, etc.

If you triggered the controller to generate a snapshot from the CLI, you have the option to download snapshot logs from the web interface.

Option	Description
	Go to your browser's default download folder, and then verify that the snapshot log file or files have been downloaded successfully. Extract the contents of the tar file.

You have successfully completed downloading log files/snapshot logs from the controller.

### Available System Logs for SCG200, vSZ-H and SZ300

The controller generates logs for all the applications that are running on the server.

The following table lists the controller applications that are running.

**Table 58: Controller applications and log types**

Application	Description
AIP	Handles the accounting messages for TTG sessions
CaptivePortal	Performs portal redirect for clients and manages the walled garden and blacklist
Cassandra	The controller's database server that stores most of the run-time information and statistical data
CIP	The <code>Charging Interface</code> module, which handles the <code>Ga</code> interface towards CGF server
CNR	An application that obtains TTG configuration updates and applies the settings to related modules
Communicator	Communicates with access points and retrieves statuses, statistics, and configuration updates
Configurer	Performs configuration synchronization and cluster operations (for example, join, remove, upgrade, backup, and restore)
DBlade	The data plane application and data core logs are sent to the control plane through the syslog. DBlade lists the logs on the control plane.
DHCPServer	The DHCP server in the SCG-C TTG module receives DHCP messages from DHCP relay in d-blade
DiaAuthProcess	Uses the <code>STa/Gx</code> interface for authentication through the Diameter Protocol.
Diagnostics	An interface that can be use to upload Ruckus Wireless scripts (.ksp files) for troubleshooting or applying software patches. This interface displays the diagnostic scripts and system patch scripts that are uploaded to a node.
EAuth	Manages the sessions on the SCG-C TTG module



Application	Description
EventReader	Receives event messages from access points and saves the information into the database
Greyhound	The interface between the SCG-C TTG module and the AP interface, used to send and receive proprietary messages for AP association and disassociation
HIP	Module with SIGTRAN stack and interface to operator HLR(s)
LogMgr	Organizes the Application Logs into a common format, segregates them, and copies them into the respective Application log file
MdProxy	MdProxy on AP and SCG connect to AP-MD and SCG-MD respectively. MdProxy on SCG receives messages and retrieves the message header. It also forwards the response to SCG-MD. This message is sent to the MdProxy on AP through AP-MD. MdProxy on the AP removes the MSL header and responds to the connection on which the request was received.
Memcached	The controller's memory cache that stores client authentication information for fast authentication or roaming
MemProxy	Replicates MemCached entries to other cluster nodes
Monitor	Monitors the health of cluster processes and communicates cluster state changes to the cluster node
Mosquitto	A lightweight method used to carry out messaging between LBS and APs
Mqttclient	A lightweight client used to communicated with the MQTT server using methods that block intrusion until an operation completes.
MsgDist	The Message distributor (MD) maintains a list of communication points for both local applications and remote MDs to perform local and remote routing
NC	The Node Controller, which monitors all SCG-C TTG processes
NginX	Is a web server that is used as a reserve proxy server or a HTTP cache
Northbound	As an interface between SP and AAA, it performs UE authentication and handles approval or denial of UEs to AP.
OnlineSignup	A standard and secured method to access devices in a WPA2 hotspot network
PMIPv6d	Handles UE Session Context details for PMIP calls
RadiusProxy	Sets the RADIUS dispatch rules and synchronizes configuration to each cluster node

Application	Description
Scheduler	Performs task scheduling and aggregates statistical data
SNMP	Provides a framework for the monitoring devices on a network. The SNMP manager is the system is used to control and monitor the activities of network hosts using SNMP. As an agent that responds to queries from the SNMP Manager, SNMP Traps with relevant details are sent to the SNMP Manager when configured.
SubscriberManagement	Maintains local user credentials for WISPr authentication.
SubscriberPortal	Internal portal page for WISPr (hotspot)
System	Collects and sends log information from all processes
Web	Runs the controller management web server


## Viewing RADIUS Proxy Settings

You must be aware of the RADIUS proxy settings on the controller to monitor the health of the controller.

Go to **Administration > Diagnostics > RADIUS**.

The **Proxy** page appears displaying the RADIUS settings.

**Figure 141: Diagnostics - RADIUS Proxy**

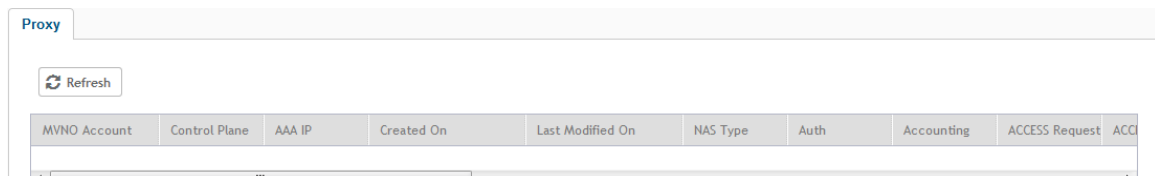

## Viewing CGF Connection Settings

You must be aware of the CGF connection settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > CGF** .
2. Select the **Connectivities** tab.

The **CGF Connectivities** page appears displaying the settings.

**Figure 142: Diagnostics - CGF Connections**

Control Plane	CGF Server IP	Status	RedRqRcvd	NumRedRspSnt	Echo Req Sent	Echo Rsp Rcvd	Echo Req Rcvd	Echo Rsp Sent	PathFailure	Cre
setup-1-C	10.1.13.48	Not Alive	N/A	N/A	N/A	N/A	N/A	N/A	7	2017

1 total records « 1 »

## Viewing CGF Transaction Settings

You must be aware of the CGF transactions settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > CGF** .
2. Select the **Transactions** tab.

The **CGF Transactions** page appears displaying the settings.

**Figure 143: Diagnostics - CGF Transactions**

MVNO Account	Control Plane	CGF Service	CGF IP	CDRs Transfer	CDRs as Duplicat	CDRs to Release	CDRs to Cancel	DRT Req Sent	DRT Req Rcvd	Cre
Super	setup-1-C	ruckus_cgf	10.1.13.48	0/0	0/0	0/0	0/0	0	0/0	2017

1 total records « 1 »

## Viewing DHCP Relay Settings

You must be aware of the DHCP relay settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > DHCP** .
2. Select the **Relay** tab.

The **DHCP Relay** page appears displaying the settings.

**Figure 144: Diagnostics - DHCP Relay**

Data Plane	DHCP Server IP	DISCOVER	OFFER	REQUEST	ACK	DHCP Option 82	DHCP Packets Dropped
No data « 1 »							

## Viewing DHCP Server Settings

You must be aware of the DHCP server settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > DHCP** .
2. Select the **Server** tab.

The **DHCP Server** page appears displaying the settings.

**Figure 145: Diagnostics - DHCP Server**

Control Plane	DISCOVER	REQUEST	OFFER Sent	ACK Sent	NACK Sent	Renewed	Rebonded	DECLINE Receive	INFORM Receive	Cre
setup-1-C	0/0/0	0/0/0	0	0	0	0/0/0	0/0/0	0	0	201

1 total records « 1 »

## Viewing GGSN Connection Settings

You must be aware of the GGSN connection settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > GGSN** .
2. Select the **GGSN Connection** tab.

The **GGSN Connection** page appears displaying the settings.

**Figure 146: Diagnostics - GGSN connection**

GGSN Connection		GGSN/PGW GTP-C Sessions						
Refresh								
Control Plane	GGSN IP	Echo Req Sent	Echo Rsp Rcvd	Echo Req Rcvd	Echo Rsp Sent	PathFailure	Created On	Last Modified On
setup-1-C	10.1.13.43	2	2	N/A	N/A	N/A	2017/02/24 16:09:45	2017/03/01 12:48:25

1 total records « 1 »

## Viewing GGSN/PGW GTP-C Session Settings

You must be aware of the GGSN session settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > GGSN** .
2. Select the **GGSN/PGW GTP-C Session** tab.

The **GGSN/PGW GTP-C Session** page appears displaying the settings.

**Figure 147: Diagnostics - GGSN/PGW GTP-C Session**

GGSN Connection		GGSN/PGW GTP-C Sessions								
Refresh										
MVNO Account	Control Plane	GGSN IP	Created On	Last Modified On	PDP Context	GGSN Init Updat	Controller Init U	Controller Init L	Cont	
Super	setup-1-C	10.1.13.43	2017/02/24 16:09:45	2017/03/01 13:00:55	0/2/0	0/0	0/0	0/0	0/0	

1 total records « 1 »

## Viewing HLR Settings

You must be aware of the HLR settings on the controller to monitor the health of the controller.

Go to **Administration > Diagnostics > HLR**.

The **HLR** page appears displaying the settings.

**Figure 148: Diagnostics - HLR**

HLR										
Refresh										
MVNO Account	Control Plane	HLR	Created On	Last Modified On	Association	Rtg Fail	AuthInfoReqSim	AuthInfoReqAka	Upd	
Super	setup-1-C	ruckus_hlr	2017/01/24 13:25:32	2017/03/01 11:38:11	1/0	0	0/0/0	0/0/0	0/0/0	

1 total records « 1 »

## Viewing RADIUS Server Settings

You must be aware of the RADIUS server settings on the controller to monitor the health of the controller.

Go to **Administration > Diagnostics > RADIUS**.

The **Server** page appears displaying the RADIUS settings.

**Figure 149: Diagnostics - RADIUS Server**

MVNO Account	Control Plane	AAA IP	Created On	Last Modified On	NAS Type	Auth Type	Auth (Perm)	Auth (Psd)	Auth
Super	setup-1-C	182.168.11.6	2017/02/07 12:53:24	2017/03/01 15:23:11	Ruckus AP		0/0	0/0	0/0

1 total records « 1 »

## Viewing SCTP Settings

You must be aware of the SCTP settings on the controller to monitor the health of the controller.

Go to **Administration > Diagnostics > SCTP**.

The **SCTP** page appears displaying the settings.

**Figure 150: Diagnostics - SCTP**

MVNO Account	Control Plane	HLR Service Name	Source IP	Source Port	Destination IP	Destination Port	Association State	ASP State
No data								

No data « 1 »

## Viewing STA Statistics Settings

You must be aware of the STA statistic settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > Diameter** .
2. Select the **STA Statistics** tab.

The **STA Statistics** page appears displaying the settings.

**Figure 151: Diagnostics - Diameter STA Statistics**

MVNO Account	Control Plane	STA Service Name	Peer IP	Application ID	Created On	Last Modified On	Sessions Created	DER Sent	DEA
No data « 1 »									

## Viewing Stack Statistic Settings

You must be aware of the stack statistic settings on the controller to monitor the health of the controller.

1. Go to **Administration > Diagnostics > Diameter** .
2. Select the **Stack Statistics** tab.

The **Stack Statistics** page appears displaying the settings.

**Figure 152: Diagnostics - Diameter Stack Statistics**

MVNO Account	Control Plane	Service Name	Peer Name	Created On	Last Modified On	Disconnect Indic	CER Sent	CEA Received	CER
No data « 1 »									

---

## Appendix

# A

---

## Captive Portal with TTG

In this chapter:

- [Overview of CaptivePortal with TTG](#)
- [CaptivePortal Workflows and VSA](#)

### Overview of CaptivePortal with TTG

The controller supports tunneling of captive portal user traffic to the 3G/4G/5G core network. During hotspot authentication, the controller either routes user traffic to the packet core or directly breaks the traffic out to the Internet, depending on authentication method used by the UE.

Users who are authenticating via the 802.1x method can either be routed to the GGSN or through local breakout to Internet based on certain configurations. For users authenticated via captive portal, integration with packet core is not supported and traffic is always routed to Internet from the controller.

By routing traffic directly to the Internet, the operator loses control and visibility over Wi-Fi traffic. Since the controller does not support Policy and Charging Rule Function (PCRF) integration for retrieving policy for user and LI integration, QoS and LI cannot be applied to traffic that is directly routed to the Internet.

Smart Wi-Fi system is an enhancement that allows user traffic integration with GGSN for user authentication via a captive portal. Multiple schemes are supported for captive portal based authentication, such as:

- User name and password
- Voucher
- One-time password based on MSISDN
- Creating virtual account and adding credits

Smart Wi-Fi System allows packet core integration for all users irrespective of the authentication scheme used. Decision to either integrate user traffic to packet core or directly to Internet is based on the configuration setup.

To establish data traffic tunnel to core network (GGSN/PGW), the controller receives associated IMSI and MSISDN user identities from the AAA server preconfigured with the required credentials to map following identifiers:

- User name



- MAC address
- IMSI value
- MSISDN value

When the user accesses the controller's WLAN through the captive portal registration, it interfaces with the AAA server to register the user device's MAC address. Upon successful authentication, the captive portal disassociates the user and re-associates it with the controller's WLAN using the registered device MAC address. This functionality is supported as part of the MAC bypass feature with Ruckus Wireless APs.

When a user reconnects to a WLAN, the Ruckus Wireless AP triggers MAC-based authentication. Upon a successful authentication, the AAA server returns the associated identifiers of IMSI and MSISDN along with the flag (Ruckus VSA - see: [CaptivePortal Workflows and VSA](#) on page 338) indicating that the TTG tunnel is established. The controller returns the TTG session type to the AP used by the data plane to trigger the TTG establishment when DHCP DISCOVER is received.

## Configuring the Captive Portal with TTG

This section describes the configuration procedures required to set up the captive portal.

Do as instructed in the following sections:

1. Configure the GGSN/PGW Service as described in [Configuring the GGSN/PGW Service](#) on page 262.
2. Configure the Authentication Profile as described in the Authentication section under *Services and Profiles*.
3. Configure the Accounting Profile as described in the Accounting section under *Services and Profiles*.
4. Configure the TTG+PDG forwarding profiles as described in [Creating TTG+PDG Profiles](#) on page 259.
5. Configure the WISPr Hotspot services of and AP zone as described in [Working with Hotspot \(WISPr\) Services](#) on page 177.
6. Configure tunneling combinations as described in [Creating a WLAN Configuration](#).

Ensure the following configuration settings are chosen:

- WLAN Usage:
  - Access Network - Enable Tunnel WLAN traffic through Ruckus GRE.
  - Core Network - Enable Bridge option
  - Authentication Type - Enable Hotspot (WISPr)
- Authentication Options: Enable MAC Address.
- Authentication and Accounting Service: Select RADIUS authentication for both.
- Forwarding Profile: Select TTG.
- Advanced Options: Under **User Traffic profiles**, select Bridge.


## CaptivePortal Workflows and VSA

This section describes the workflow of the captive portal and VSA.

### Successful Captive Portal Authentication

Captive portal authentication workflow describes the workflow where the external portal sends a message to the controller to initiate RADIUS authentication to complete the portal authentication procedure.

Figure 153: Captive portal authentication workflow

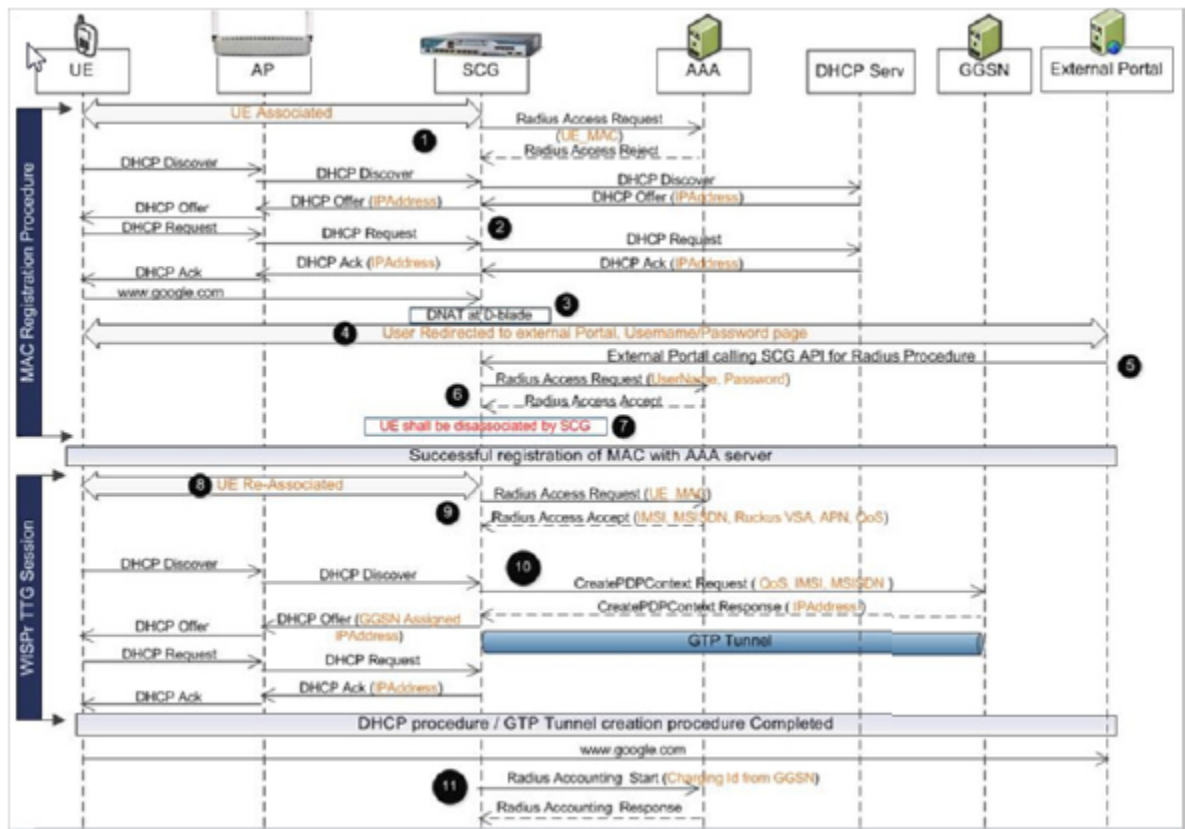


1. The UE associated controller triggers MAC based authentication, which is rejected by the AAA server since the UE MAC is not registered.
2. A DHCP procedure is triggered and the IP address is allocated from the DHCP server.
3. When the UE tries to browse a DNAT procedure is performed at the data plane since the user is not yet authenticated.
4. The user is redirected to login page of the external portal.
5. On user entering his login credentials the external portal calls the controller's API (NBI API) to complete the authentication procedure
6. The controller triggers the RADIUS CHAP authentication towards the AAA server.
7. On successful authentication the user is disassociated. This complete the UE registration procedure with external AAA server.

8. The UE re-associates to the AP.
9. MAC authentication is triggered by the controller. The AAA server responds with access accept with IMSI, MSISDN, QoS (optional) and APN (optional).
10. DHCP procedure is initiated by UE. During this procedure the controller establishes GTP tunnel and DHCP offer is sent with GGSN to the assigned IP address.
11. On completion of the DHCP procedure the user continues with the data session. The controller also triggers the accounting message towards the AAA accounting server.

## Successful GTP Tunnel Establishment

This figure shows the workflow of successful GTP tunnel establishment for WISPr authentication and RADIUS CHAP from the controller.

Figure 154: Successful GTP tunnel establishment

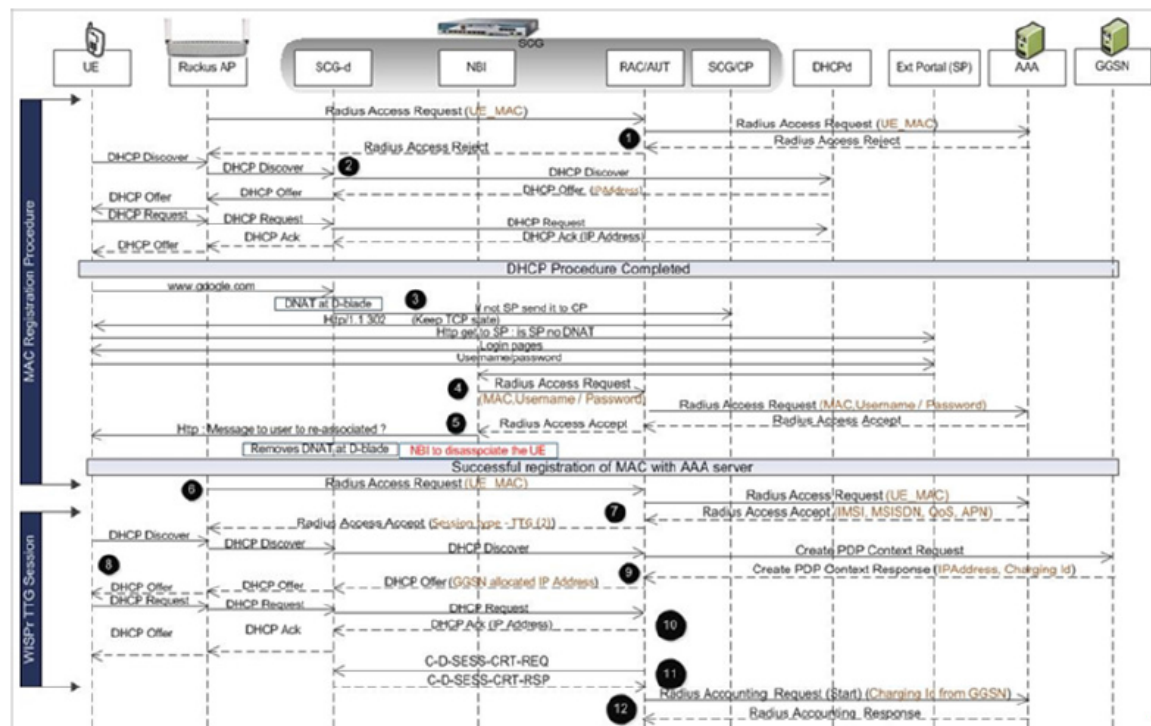

1. The UE associated controller triggers MAC based authentication, which is rejected by the AAA server since the UE MAC is not registered.
2. A DHCP procedure is triggered and the IP address is allocated from the DHCP server.
3. When the UE tries to browse a DNAT procedure is performed at the data plane since the user is not yet authenticated.
4. The user is redirected to login page of the external portal.
5. On user entering his login credentials the external portal calls the controller's API (NBI API) to complete the authentication procedure
6. The controller triggers the RADIUS CHAP authentication towards the AAA server.
7. On successful authentication the user is disassociated. This complete the UE registration procedure with external AAA server.

8. The UE re-associates to the AP.
9. MAC authentication is triggered by the controller. The AAA server responds with access accept with IMSI, MSISDN, QoS (optional) and APN (optional).
10. DHCP procedure is initiated by UE. During this procedure, the controller establishes a GTP tunnel and a DHCP offer is sent with GGSN to the assigned IP address.
11. Upon completion of the DHCP procedure, the user continues with the data session.
12. The controller also triggers the accounting message towards the AAA accounting server.

### Ruckus Wireless VSA for CaptivePortal with TTG

Ruckus Wireless vendor-specific attributes (VSAs) are values included in Radius access accept messages by the AAA server.

The following table lists the Ruckus Wireless VSAs.

**Table 59: Ruckus Wireless VSAs**

Ruckus VSA	APN Resolution	Controller Behavior/Action
REDIRECT-AFTER-GTP	GTPv1	- GTP tunnel with GGSN - Ruckus VSA Ruckus-Session-Type = TTG in Access Accept to AP
REDIRECT-AFTER-GTP	GTPv2	- GTP tunnel with PGW - Ruckus VSA Ruckus-Session-Type = TTG in Access Accept to AP
REDIRECT-AFTER-GTP	PDG	- Non-TTG session or VANILLA-REDIRECT - No Ruckus VSA Ruckus-Session-Type (125) in Access Accept
NULL (No VSA received from AAA)	GTPv1	- GTP tunnel with GGSN - Ruckus VSA Ruckus-Session-Type = TTG in Access Accept to AP
NULL (No VSA received from AAA)	GTPv2	- GTP tunnel with PGW - Ruckus VSA Ruckus-Session-Type = TTG in Access Accept to AP
NULL (No VSA received from AAA)	PDG	- Non-TTG session or VANILLA-REDIRECT - No Ruckus VSA Ruckus-Session-Type (125) in Access Accept
VANILLA-REDIRECT	GTPv1	- Non-TTG session or VANILLA-REDIRECT - No Ruckus VSA Ruckus-Session-Type (125) in Access Accept

Ruckus VSA	APN Resolution	Controller Behavior/Action
VANILLA-REDIRECT	GTPv2	- Non-TTG session or VANILLA-REDIRECT - No Ruckus VSA Ruckus-Session-Type (125) in Access Accept
VANILLA-REDIRECT	PDG	- Non-TTG session or VANILLA-REDIRECT - No Ruckus VSA Ruckus-Session-Type (125) in Access Accept

## Appendix

# B

## Statistics Files the Controller Exports to an FTP Server

If you added an FTP server to the controller, the controller will export statistics files to that FTP server, either on demand or based on a schedule. This is however only applicable for SCG200, SZ300 and vSZ-H.

**NOTE:** The feature to export CSV files is only supported in SCG200, SZ300, and vSZ-H platforms.

To enable this feature, go to the controller web UI and select the **Enable uploading statistical data to the FTP server** check-box from **System > General Settings > FTP**.

After the feature is enabled, each controller node sends a zip file to the FTP server via FTP or SFTP, on an hourly basis. The zip file is named as: `<directory_name> + '_' + <scg_node_identifier> + ".zip"`.

Here, `directory_name` is named as `yyyymmddhh` (indicating the beginning of the hour that the data was received). For example, the directory name for the data that comes between 10 and 11 AM of May 26, 2016, is **"2016052610"**.

The zip file contains all the reported data collected within the hour.

The data is divided into tables, and each data table is associated with files. The files are named as follows: `<Table Name> + '_' + <Thread_ID> + '_' + <Sequence_No>.csv`.

Here, `Table Name` is as described in [Table 60: Exported CSV file table](#) on page 342. `Thread_ID` is an integer, and `Sequence_No` is from 1 to N to limit each file to be capped around 1G bytes.

Each AP sends its statistic counters to the controller, every 180 seconds. The controller stores the data, and exports them as CSV files to the external FTP server, every hour. The controller stores the data for up to 6 hours; if the FTP server is down, the controller resends data for up to 6 hours.

**Table 60: Exported CSV file table**

Table Name	Table Description
APStatus	Root for all Status: Cluster, Domain, Zone info
APStatusSystem	AP Level Info
APStatusRadio	AP Radio Info
APStatusWlan	AP Wlan Info

Table Name	Table Description
APStatusTunnel	AP Tunnel Info
APStatusIPSec	AP IPSec Info
APStatusIPSecStats	AP IPSec stats
LanPortStatus	AP Lan Port Status
CertificateReload	AP Certificate Reload Info
CableModemInfo	Cable Modem inside AP
APStatusLBS	Location-Based Service
APStatusBrownout	AP Voltage Brownout Event
APReportStats	Root for all ReportCluster, Domain, Zone Info
APReportBin	Little Bin info
APReportBinRadio	Radio Stats
APReportBinWlan	Wlan Stats
APReportBinClient	Client Stats
APReportBinTunnel	Tunnel Stats
APReportBinIPSec	IPSec Stats
APClientStats	Root for all Client
APClientInfo	Client Stats
APClientRadio	Radio Static Info
APClientWlan	Wlan Static Info
APMeshStats	Root for all Mesh
APMeshDownlink	Mesh Downlink AP
APMeshUplink	Mesh Uplink AP
APMeshNeighbor	AP Mesh Neighbor
ArcMessage	Root for all AVC
FlowMessage	AVC Flow
RogueAPStats	Root for all Rogue
ReportType	Rogue Devices

## Appendix

# C

## Ports to Open for AP-SCG/SZ/vSZ/vSZ-D Communication

The table below lists the ports that must be opened in the network firewall to ensure that the SCG/vSZ-D/SZ/vSZ (controller), managed APs, and RADIUS servers can communicate with each other successfully.

**Table 61: Ports to open for AP-SCG/SZ/vSZ/vSZ-D communication**

Port Number	Layer 4 Protocol	From (Sender)	To (Listener)	Configurable from Web Interface?	Purpose
21	TCP	AP	vSZ control plane	Yes	FTP upload of reports, statistics, and configuration backups
22	TCP	<ul style="list-style-type: none"> <li>AP</li> <li>vSZ-D</li> </ul>	vSZ control plane	No	SSH tunnel
49	TCP	TACACS+ server	vSZ control plane	Yes	TACACS+ based authentication of controller administrators
Port 91 (AP firmware version 2.0 to 3.1.x) and 11443 (AP firmware version 3.2 and later)	TCP	AP	vSZ control plane	No	AP firmware upgrade  <b>NOTE:</b> Starting in release 3.2, the controller uses an HTTPS connection and an encrypted path for the firmware download. The port used for AP firmware downloads has also been changed from port 91 to 11443 to distinguish between the two methods. To ensure that all APs can



Port Number	Layer 4 Protocol	From (Sender)	To (Listener)	Configurable from Web Interface?	Purpose
					be upgraded successfully to the new firmware, open both ports 11443 and 91 in the network firewall.
123	UDP	AP	vSZ control plane	No	NTP sync up  Not required in 2.1.2, 2.1.3, 2.5.1, 2.6, 3.0  Required in 1.x, 2.1, 2.1.1, 2.5
443	TCP	<ul style="list-style-type: none"> <li>• AP</li> <li>• vSZ-D</li> </ul>	vSZ control plane	No	Access to the SCG/vSZ/SZ control plane over secure HTTPS
6868	TCP	vSZ-D	vSZ	No	Internal communication port
8443	TCP	Any	vSZ management plane	No	Access to the SCG/vSZ/SZ web interface via HTTPS
23232	TCP	AP	SCG (data plane)	No	GRE tunnel  <b>NOTE:</b> Only applicable to SCG.
23233	UDP and TCP	AP	Data plane	Yes	GRE tunnel (required only when tunnel mode is GRE over UDP)  <b>NOTE:</b> On the vSZ-D, this port is used for both data and control in both UDP and TCP.
12222/12223	UDP	AP	vSZ control plane	No	LWAPP discovery  <b>NOTE:</b>  If your AP is within the same subnet as the controller, disable nat-ip-translation to establish a connection

Port Number	Layer 4 Protocol	From (Sender)	To (Listener)	Configurable from Web Interface?	Purpose
					<p>between the AP and the controller so that AP firmware upgrade progresses.</p> <p>If your AP is on the side of the NAT server and if the NAT server does not support PASV-Mode FTP, enable nat-ip-translation. If the NAT server supports PASV-Mode FTP, then disable nat-ip-translation for AP firmware upgrade to progress</p>
1812/1813	UDP	AP	Radius servers (s)	Yes	AAA authentication and accounting
8022	No (SSH)	Any	Management interface	Yes	CLI (Command Line Interface) access to the vSZ
8090	TCP	Any	vSZ control plane	No	Allows unauthorized UEs to browse to an HTTP website
8099	TCP	Any	vSZ control plane	No	Allows unauthorized UEs to browse to an HTTPS website
8100	TCP	Any	vSZ control plane	No	Allows unauthorized UEs to browse using a proxy UE
8111	TCP	Any	vSZ control plane	No	Allows authorized UEs to browse using a proxy UE
9080	HTTP	Any	vSZ control plane	No	Northbound Portal Interface for hotspots
9443	HTTPS	Any	vSZ control plane	No	Northbound Portal Interface for hotspots
9998	TCP	Any	vSZ control plane	No	Hotspot WISPr subscriber portal login/logout over HTTPS

Port Number	Layer 4 Protocol	From (Sender)	To (Listener)	Configurable from Web Interface?	Purpose
3333	TCP	Controller	License server	No	Local license server
443	HTTPS	Controller	License server	No	Cloud license server
9996	TCP	Client	Controller interface	No	HotSpot 2.0 portal for onboarding and remediation
9999	TCP	Client	Controller interface	No	HotSpot 2.0 trust CA verification
8200	TCP	Client	Controller interface	No	HotSpot 2.0 Oauth in HTTP
8222	TCP	Client	Controller interface	No	HotSpot 2.0 Oauth in HTTPS

**NOTE:** The destination interfaces are meant for three interface deployments. In a single interface deployment, all the destination ports must be forwarded to the combined management/control interface IP address.

**NOTE:** Communication between APs is not possible across NAT servers.

---

## Appendix

# D

---

## SoftGRE Support

In this chapter:

- [Overview of SoftGRE Support](#)
- [Configuring And Monitoring AP Zones](#)
- [SoftGRE SNMP MIBs](#)
- [SoftGRE Events and Alarms](#)

This appendix describes the SoftGRE support that the controller provides and the supported deployment topology.

### Overview of SoftGRE Support

There are numerous equipment vendors serving the service provider market today. Among these vendors, the more prominent ones include Alcatel-Lucent (ALU), Ericsson, NSN, Huawei and Cisco. Most of these vendors support different tunneling and mobility management protocols at their packet gateways.

Since most (if not all) of these equipment vendors do not develop access points themselves, they are publishing SoftGRE specifications to enable access point vendors (such as Ruckus Wireless) to support SoftGRE on their devices.

### Supported Deployment Scenario


The controller supports SoftGRE in the deployment scenario wherein the controller functions purely as an AP controller. In this deployment topology, the controller only manages the Ruckus Wireless APs and does not perform other functions. All control paths (RADIUS Authentication/Accounting) and data paths (SoftGRE tunnel) terminate on the third party WLAN gateway.

If 802.1x authentication is used, the RADIUS server will be outside of the SoftGRE tunnel. If open, WISPr-based authentication is used, the portal or redirect function will be on the edge router or northbound of the edge router. The controller does not play any role in the control and data path functions.

**Figure 155: The controller as a pure AP controller**

# Direct AP to GW Tunnel Solution Distributed WAG & Centralized WAC


SCG-200 <-> AP Mgmt & 7750 <-> WAG Authentication & Data Plane AP

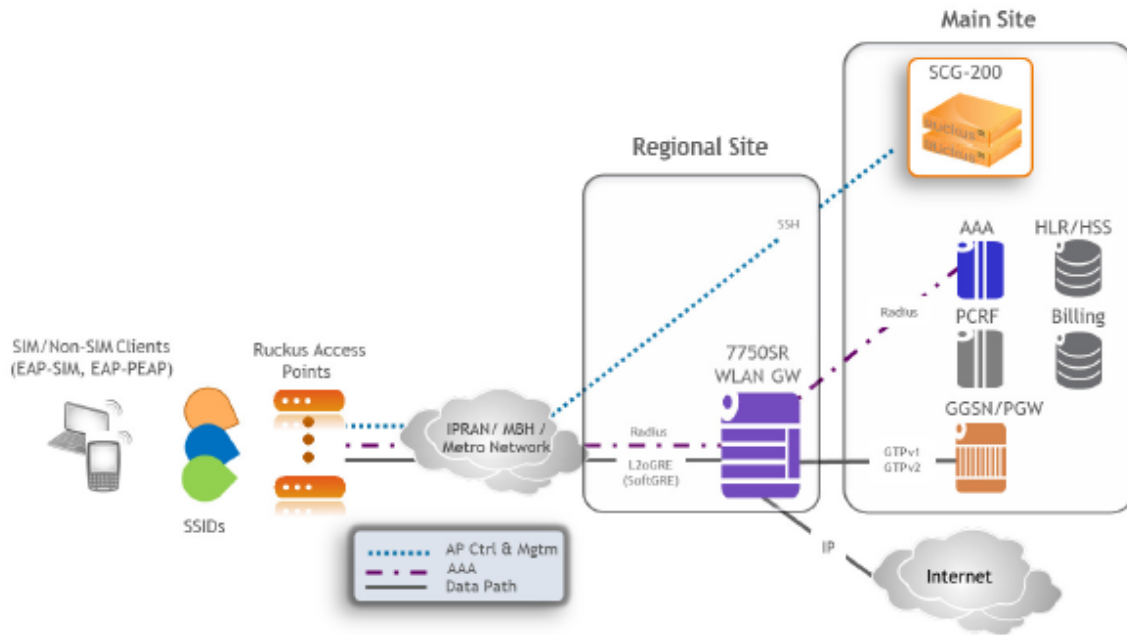

## SoftGRE Packet Format

The following figure displays a screen shot of SoftGRE packet capture data.

Figure 156: Example of SoftGRE packet format

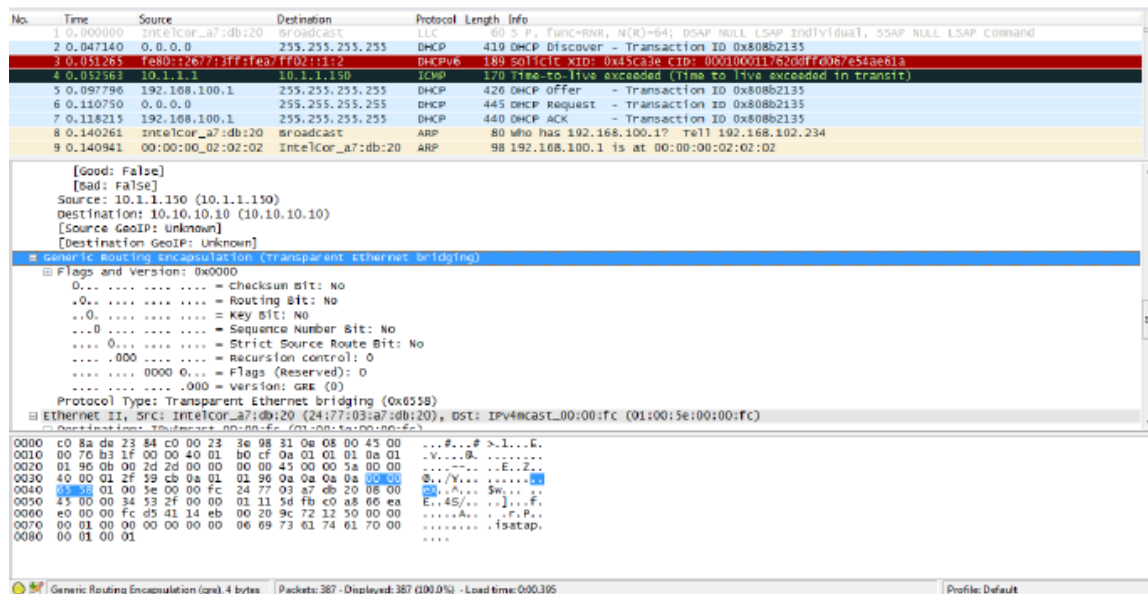

## Configuring And Monitoring AP Zones

If no tunneled WLANs exist in the zone, you can change the tunnel type from SoftGRE to GRE or GRE + UDP.

MVNO accounts are currently unsupported by SoftGRE tunnels. If you create an MVNO account and assign an AP zone that is using a SoftGRE tunnel, an error message appears.

1. Follow the steps as described in [Monitoring Domains, Zones, and AP Groups](#) on page 97 to change the tunnel type from SoftGRE.
2. Scroll down to the **AP GRE Tunnel Option** section.
3. In **AP Tunnel Type**, select the tunnel type to which you want to change from SoftGRE.

If you attempt to change the tunnel type when a tunneled WLAN exists within the zone, the following error message appears:

```
Unable to update the configuration of the AP zone. Reason: It is disallowed to change the tunnel type, because it has tunneled WLAN.
```

4. Click **OK**.

The zone configuration information is displayed.

**Figure 157: Monitoring Zone Configuration**

The screenshot displays the SmartZone Administrator interface. On the left is a navigation menu with options like 'Wireless LANs', 'Clients', 'Applications', 'Services & Profiles', 'Report', 'Troubleshooting', 'Administration', 'Admins and Roles', 'Backup & Restore', 'Upgrade', 'MVNO', and 'Licenses'. The main area shows a table of AP zones. The selected zone is '3.5-JIL-H52.0-AP-ZONE'. Below the table, the 'Zone Configuration' details are shown:

Zone Configuration		GPS Coordinates:	
Name	3.5-JIL-H52.0-AP-ZONE	Latitude	11.2345
AP Firmware	3.5.0.0.1268	Longitude	22.3456
Country Code	US	Altitude	23 meters
Location	BANGALORE	AP IP Mode	IPv4 only
Location Additional Information	RUCKUS-BDC		

## SoftGRE SNMP MIBs

Following are the lists of SoftGRE OIDs.

**Table 62: OIDs related to SoftGRE**

Parent Node	Node Name	OID
ruckusWLANAPInfo	ruckusSCGWLANAPMacAddr	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.1
	ruckusSCGWLANAPSoftGREServer	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.2
	ruckusSCGWLANAPSoftGREGWAddr	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.3
	ruckusSCGWLANAPSoftGREActive	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.4
	ruckusSCGWLANAPSoftGRETxBkts	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.5
	ruckusSCGWLANAPSoftGRETxBkts	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.6
	ruckusSCGWLANAPSoftGRERxPkts	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.7
	ruckusSCGWLANAPSoftGRERxBytes	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.8
	ruckusSCGWLANAPSoftGRETxBktsErr	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.9
	ruckusSCGWLANAPSoftGRERxPktsErr	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.10
	ruckusSCGWLANAPSoftGRETxBktsDropped	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.11
	ruckusSCGWLANAPSoftGRERxPktsDropped	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.12
	ruckusSCGWLANAPSoftGRETxBktsFrag	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.13
	ruckusSCGWLANAPSoftGREICMPTotal	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.14
	ruckusSCGWLANAPSoftGREICMPNoReply	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.15
	ruckusSCGWLANAPSoftGREDisconnect	1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.16

## SoftGRE Events and Alarms

If there is no downstream traffic in the tunnel, APs that belong to the zone configured for SoftGRE send out-of-band ICMP keep-alive messages (interval is configurable) to the active third party WLAN gateway. If an AP does not receive a response from the active WLAN gateway, it triggers an alarm and it automatically creates a SoftGRE tunnel to the standby WLAN gateway.

If the AP does not receive a response from the standby WLAN gateway either, the AP disconnects all tunneled WLAN services. It continues to send keep-alive messages to both the active WLAN gateway (primary GRE remote peer) and standby WLAN gateway (secondary GRE remote peer). If it receives a response from either WLAN gateway, the AP restores all tunneled WLAN services automatically.

There are four types of events that APs send to the controller:

- Failover from primary GRE remote peer to secondary GRE remote peer
- Failover from secondary GRE remote peer to primary GRE remote peer.
- Tunnel disconnected because both primary and secondary GRE remote peers are unreachable
- Tunnel restored because either primary or secondary GRE remote peer is reachable

For the list of alarms and events related to SoftGRE that APs generate, refer to [SoftGRE Events](#) on page 352 and [SoftGRE Alarms](#) on page 353.

## SoftGRE Events

SoftGRE related events that APs send to the controller.

Following are the events related to SoftGRE that AP generates.

- apSoftGRE Tunnel Failover PtoS** AP [{apname@apMac}] fails over from primaryGRE [{address}] to secondaryGRE [{address}].  
Code: 611  
Severity:  
Attributes:
- "apMac"="xx:xx:xx:xx:xx:xx"
  - "primaryGRE"="xxx.xxx.xxx.xxx"
  - "secondaryGRE"="xxx.xxx.xxx.xxx"
- apSoftGRE Tunnel Failover StoP** AP [{apname@apMac}] fails over from secondaryGRE [{address}] to primaryGRE [{address}].  
Code: 612  
Severity: Warning  
Attributes:
- "apMac"="xx:xx:xx:xx:xx:xx"
  - "secondaryGRE"="xxx.xxx.xxx.xxx"
  - "primaryGRE"="xxx,xxx.xxx.xxx"
- apSoftGRE Gateway Reachable** AP [{apname@apMac}] is able to reach [{softgreGW}] [{softgreGWAddress}] successfully.  
Code: 613  
Severity: Informational  
Attributes:
- "apMac"="xx:xx:xx:xx:xx:xx"
  - "softgreGW"="primaryGRE"
  - "softgreGWAddress" = "xxx.xxx.xxx.xxx"
- apSoftGRE Gateway Not Reachable** AP [{apname@apMac}] is able to reach [{softgreGW}] [{softgreGWAddress}] successfully.  
Code: 614  
Severity: Critical  
Attributes:
- apMac="xx:xx:xx:xx:xx:xx"
  - "softGREGatewayList"="xxx.xxx.xxx.xxx,yyy.yyy.yyy.yyy"



## SoftGRE Alarms

SoftGRE related alarms that APs send to the controller.

Following are the SoftGRE related alarms:

- apSoftGRE Tunnel Failover PtoS** AP[{apname@apMac}] fails over from primaryGRE[{address}] to secondaryGRE[{address}]  
Code: 611  
Default to Trap: true  
Severity: major  
Attributes:  
  - "apMac"="xx:xx:xx:xx:xx:xx"
  - "primaryGRE"="xxx.xxx.xxx.xxx"
  - "secondaryGRE"="xxx.xxx.xxx.xxx"
- apSoftGRE Tunnel Failover StoP** AP[{apname@apMac}] fails over from secondaryGRE[{address}] to primaryGRE[{address}]  
Code: 612  
Default to Trap: true  
Severity: major  
Attributes:  
  - "apMac"="xx:xx:xx:xx:xx:xx"
  - "secondaryGRE"="xxx.xxx.xxx.xxx"
  - "primaryGRE"="xxx,xxx.xxx.xxx"
- apSoftGRE Gateway Reachable** AP [{apname@apMac}] is able to reach [{softgreGW}] [{softgreGWAddress}] successfully  
Code: 613  
Default to Trap: true  
Severity: informational  
Attributes:  
  - "apMac"="xx:xx:xx:xx:xx:xx"
  - "softgreGW"="primaryGRE"
  - "softgreGWAddress"="xxx.xxx.xxx.xxx"
- apSoftGRE Gateway Not Reachable** AP [{apname@apMac}] is unable to reach the following gateways: [{gateway list}]  
Code: 614  
Default to Trap: true  
Severity: major  
Attributes:  
  - "apMac"="xx:xx:xx:xx:xx:xx"

- "softGREGatewayList"="xxx.xxx.xxx.xxx,  
yyy.yyy.yyy.yyy"

## Replacing Hardware Components

In this chapter:

- [Installing or Replacing Hard Disk Drives](#)

This appendix describes how to replace hardware components (including hard disk drives, power supply units, and system fans) on the controller.

This section only describes replacing the hardware components for SCG200.

### Installing or Replacing Hard Disk Drives

You can install up to six hot-swappable SAS or SATA hard disk drives on the controller. The drives go into carriers that connect to the SAS/SATA backplane board once the carriers with drives attached are inserted back into the drive bays. The controller ships with six drive carriers.

**CAUTION:** If you install fewer than six hard disk drives, the unused drive bays must contain the empty carriers that ship with the server to maintain proper cooling.

#### Ordering a Replacement Hard Disk

To order a replacement hard disk for the controller, contact your Ruckus Wireless sales representative and place an order for FRU part number 902-0188-0000 (Hard Drive, 600GB, 10K RPM, 64MB Cache 2.5 SAS 6Gb/s, Internal).

**CAUTION:** Use only FRU part number 902-0188-0000 as replacement hard disk for the controller. Using other unsupported hard disks will render the controller hardware warranty void.

#### Removing the Front Bezel

You must remove the front bezel to add or replace a hard drive in one of the drive bays. It is not necessary to remove the front chassis cover or to power down the system. The hard drives are hot-swappable.

Follow these steps to remove the front bezel of the controller.

You need to remove the front bezel for tasks such as:


- Installing or removing hard disk drives or an SD flash card
- Observing the individual hard disk drive activity/fault indicators

- Replacing the control panel LED/switch board

The server does not have to be powered down just to remove the front bezel.

1. Loosen the captive bezel retention screw on the right side of the bezel (see A in [Figure 6](#)).
2. Rotate the bezel to the left to free it from the pins on the front panel (see B in [Figure 6](#)), and then remove it.


**Figure 158: Removing the front**

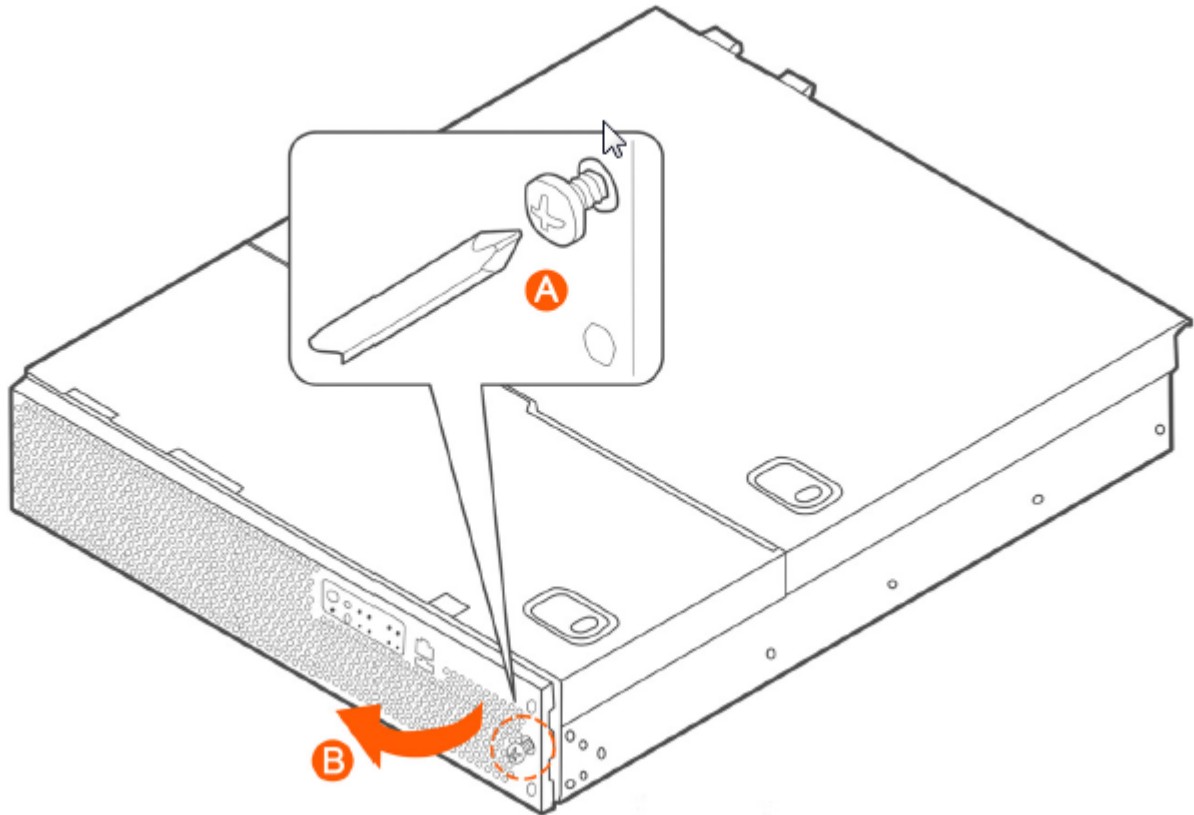

### Removing an HDD Carrier from the Chassis

Follow these steps to remove a hard disk drive carrier from the chassis.

1. Remove the front bezel (see [Removing the Front Bezel](#) on page 355).
2. Select the drive bay where you want to install or replace the drive.  
Drive bay 0 must be used first, then drive bay 1 and so on. The drive bay numbers are printed on the front panel below the drive bays.
3. Remove the drive carrier by pressing the green button to open the lever.  
(See A in [Figure 159: Removing the drive carrier](#) on page 357).
4. Pull the drive carrier out of the chassis.

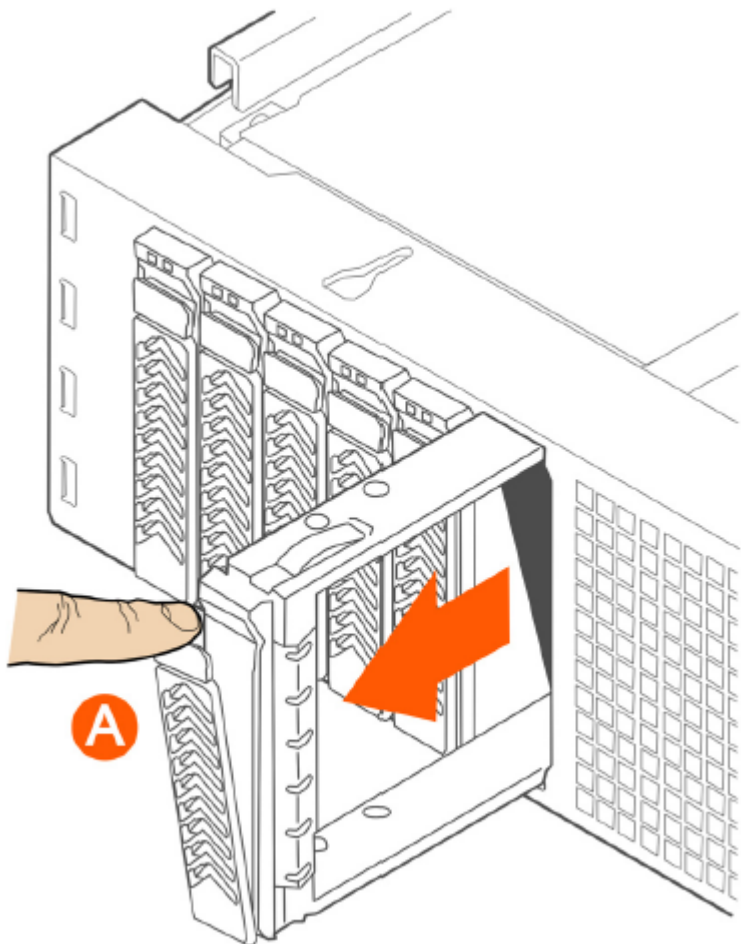

**Figure 159: Removing the drive carrier**


### Installing a Hard Drive in a Carrier

Follow these steps to install a hard drive in a drive carrier.

1. If a drive is already installed (that is, if you are replacing the drive), remove it by unfastening the four screws that attach the drive to the drive carrier (see A in [Figure 160: Removing the hard drive](#) on page 358). Set the screws aside for use with the new drive.


2. Lift the drive out of the carrier (see B in [Figure 160: Removing the hard drive](#) on page 358).

**Figure 160: Removing the hard**

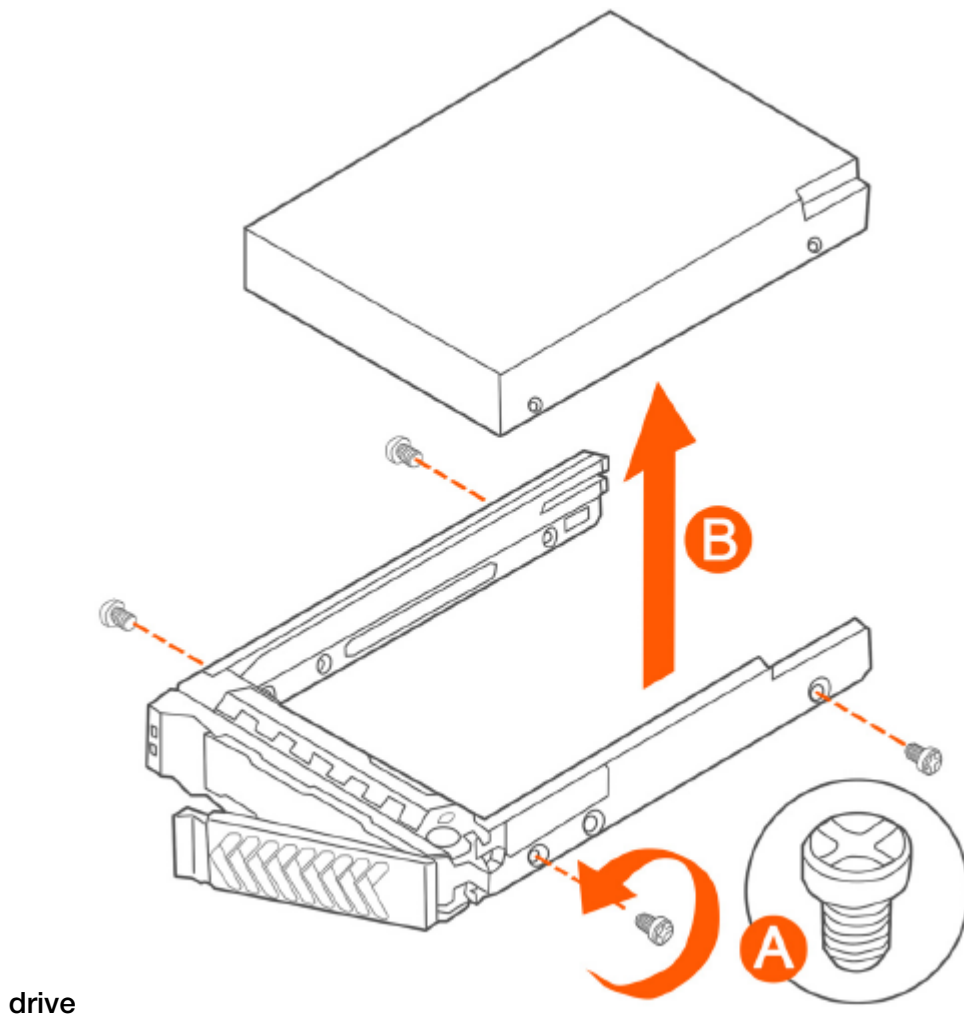


3. Install the new drive in the drive carrier (see A in [Figure 161: Installing the hard drive](#) on page 359), and then secure the drive with the four screws that come with the carrier (see B).

**Figure 161: Installing the hard**

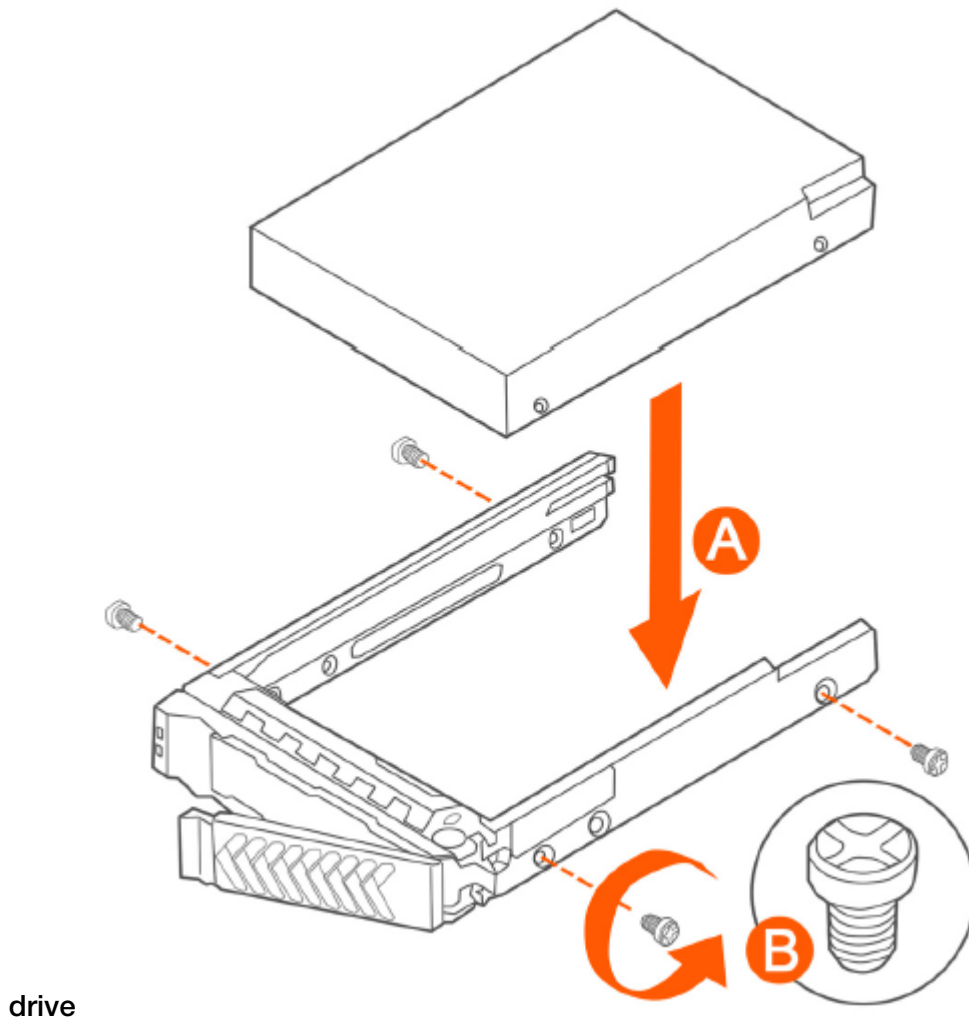

4. With the drive carrier locking lever fully open, push the hard drive carrier into the drive bay in the chassis until it stops (see A in [Figure 162: Inserting the carrier back into the chassis](#) on page 360).

**Figure 162: Inserting the carrier back into the**

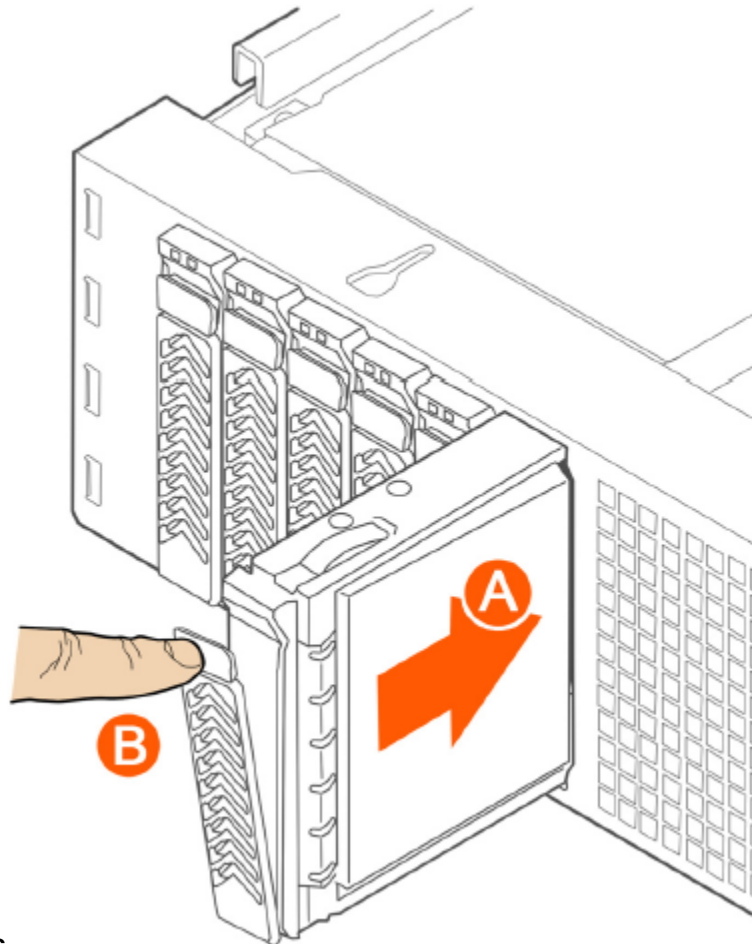

**chassis**

5. Press the locking lever until it snaps shut and secures the drive in the bay.

You have completed installing or replacing the hard drive onto the controller.

**NOTE:** The new hard drive will synchronize automatically with the existing RAID array. During the synchronization process, the HDD LED on the controller will blink amber and green alternately. When the process is complete, the HDD LED will turn off.

## Reinstalling the Front Bezel

Follow these steps to reinstall the front bezel on the controller.

1. Insert the tabs on the left side of the bezel into the slots on the front panel of the chassis.
2. Move the bezel toward the right of the front panel and align it on the front panel pins.
3. Snap the bezel into place and tighten the retention screw to secure it.



## Replacing PSUs

The controller includes two redundant, hot-swappable power supply units (2 AC PSUs or 2 DC PSUs). No chassis components need to be removed to add or replace a PSU.


Follow these steps to remove and replace a PSU.

1. Identify the faulty PSU by looking at the PSU status LED (red indicates PSU failure, green indicates normal operation).
2. Press and hold the green safety lock downward while grasping the PSU handle.
3. Pull outward on the handle, sliding the PSU all the way out of the rear of the machine.
4. Insert the new PSU into the slot and, while holding the green safety lock, slide the PSU into the slot until it locks in place.

The PSU status LED turns green, indicating that the PSU is operating normally.

**NOTE:** If you are installing a DC power supply, there are two threaded studs for chassis enclosure grounding. A 90° standard barrel, two-hole, compression terminal lug with 5/8-inch pitch suitable for a #14-10 AWG conductor must be used for proper safety grounding. A crimping tool may be needed to secure the terminal lug to the grounding cable.

**Figure 163: Replacing a**

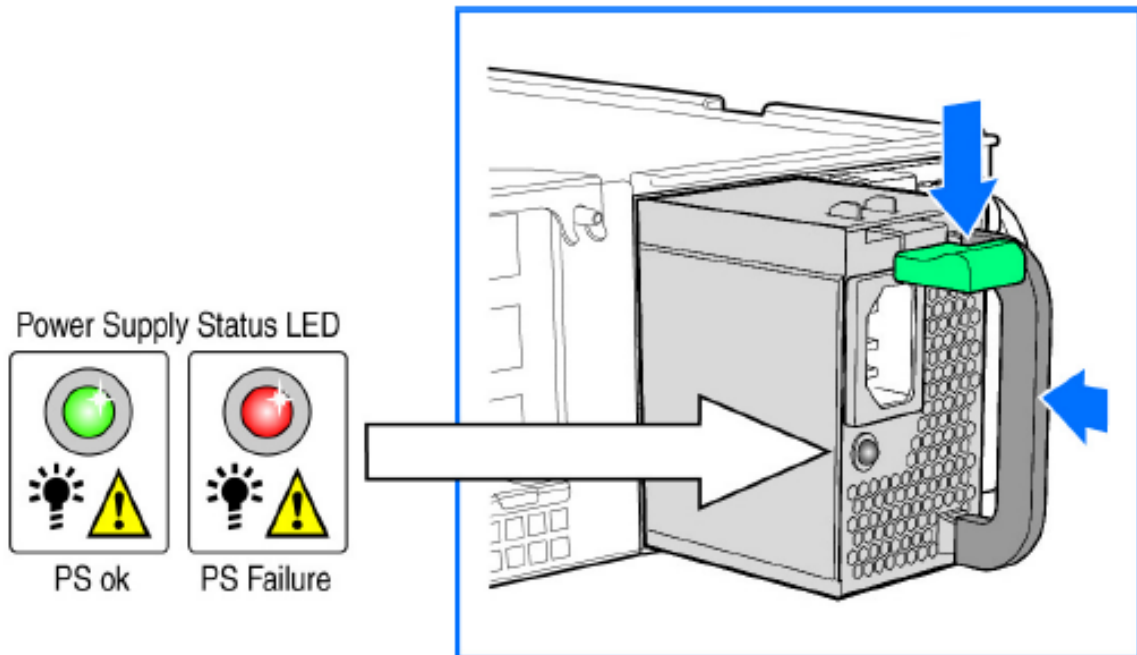

PS

## Replacing System Fans

The controller includes six redundant, hot-swappable system fans (four 80mm fans and two 60mm fans). There are also two fans located inside the power supply units. Redundancy for the two PSU fans is only achieved when both PSUs are installed.

If any of the system fans requires replacement, the replacement procedure is identical.


Electrostatic discharge (ESD) can damage internal components such as printed circuit boards and other parts. Ruckus Wireless recommends that you only perform this procedure with adequate ESD protection. At a minimum, wear an anti-static wrist strap attached to the ESD ground strap attachment on the front panel of the chassis.

Follow these steps to replace a system fan.

1. Open the front chassis cover of the controller. It may be necessary to extend the controller into a maintenance position.
2. Identify the faulty fan. Each fan has a "service required" LED that turns amber when the fan is malfunctioning.
3. Remove the faulty fan by grasping both sides of the fan assembly, using the plastic finger guard on the left side and pulling the fan out of the metal fan enclosure.
4. Slide the replacement fan into the same metal fan enclosure. Use the edges of the metal enclosure to align the fan properly and ensure the power connector is seated properly in the header on the side of the enclosure.
5. Apply firm pressure to fully seat the fan.
6. Verify that the (service required) LED on the top of the fan is not lit.

7. Close the front chassis cover and return the controller to its normal position in the rack, if necessary.

**Figure 164: Replacing a system**

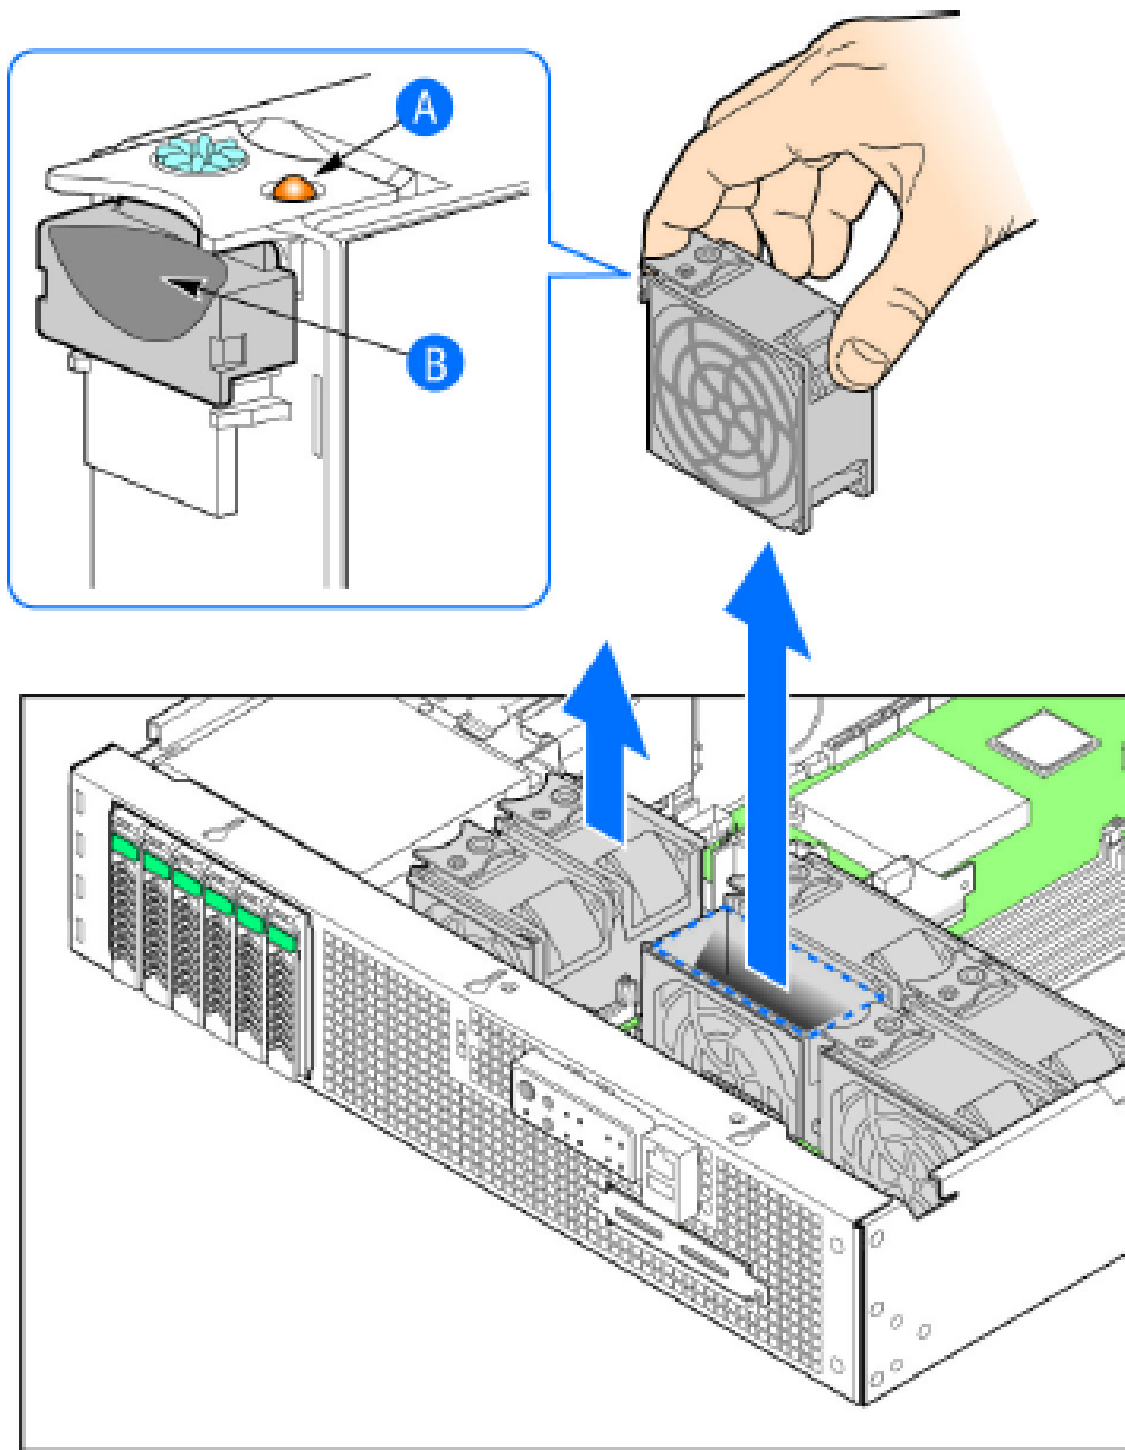

---

## Appendix

# F

---

## Replacing a Controller Node

In this chapter:

- [Backing Up and Resorting the Cluster](#)
- [Backing Up and Restoring Configuration](#)

**NOTE:** The information in this appendix only applies to the SCG-200.

This appendix describes how to back up cluster and configuration data and replace a controller node.

The following are required to perform the procedures described in this guide.

1. A remote FTP server with at least 50GB of free disk space. You must create an FTP account (user name and password) before starting these procedures.
2. If you are restoring to a multi node cluster environment, all backup files must be taken around the same time. If the backup files are out-of-sync, the restore process may be unsuccessful.

### Backing Up and Resorting the Cluster

Cluster backup creates a backup of the entire cluster.

Take note of the following before performing a cluster backup.

- The cluster backup file is typically very large (larger than 1GB).
- Cluster backup cannot be completed successfully if any one of the nodes has less than 50GB of disk space after the backup process.

#### Step 1: Backing Up the Cluster from the Web Interface

For information on how to back up the cluster from the controller web interface, see [Creating a Cluster Backup](#) on page 300.

#### Step 2: Back Up the Cluster from the Controller CLI

Cluster backup creates a backup of the entire cluster.

Follow the steps to back up the cluster from the controller CLI.

1. Log on to the controller CLI as a system administrator.
2. Run the `enable` command to enable privileged mode on the CLI.

```
ruckus> enable
Password: *****
ruckus#
```

3. Run the `show diskinfo` command to determine the current disk size of the node.

To complete the cluster backup successfully, the `/mnt` directory must have at least 50GB (53,687,091,200 in 1K-blocks) of free disk space.

```
ruckus# show diskinfo
Filesystem          1K-blocks      Used Available Use% Mounted on
rootfs              4128448        315520   3603216   9% /
/dev/root           4128448        315520   3603216   9% /
/dev/sda1           2064208         97208   1862144   5% /boot
/dev/mapper/vg00-lv00
41276736 5646756 33533240 15% /mnt
tmpfs               1048576          696   1047880   1% /tmp
tmpfs               3066864           0   3066864   0% /dev/shm
```

4. Run the `backup` command to start the backing up the current cluster.

```
ruckus# backup
Do you want to backup system in this context (yes/no)? yes
Backup process starts.
Backup process has been scheduled to run. You can check backup
version using 'show backup'.
```

5. Run the `show backup` command to verify that the cluster backup file has been created successfully.

### Step 3: Transfer the Cluster Backup File to an FTP Server

1. Log on to the controller **CLI** as a system administrator.
2. Enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

3. Run the `copy backup` command to copy the cluster backup file to an FTP server as shown in the figure.

**Figure 165: Command to copy the cluster backup file**

```
NMS33# copy backup
tftp          Transfer by TFTP
<ftp-url>    FTP directory URL, Format: ftp://<username>:<password>@<ftp-host>[/<dir-path>]

NMS33# copy backup ftp://bala:ruckus@172.19.7.23
Please note that event, alarm and statistic data will not be saved in the exported backup file.

-----
No.   Created on          Patch Version          File Size
-----
1     2015-11-04 05:54:11 GMT  3.4.0.0.108           937.5MB
2     2015-11-16 05:32:53 GMT  3.4.0.0.223           1.2GB
-----

Please choose a backup to send to remote FTP server or 'No' to cancel: 1
Starting to copy the chosen backup to remote FTP server...
Starting to encrypt backup file...
Succeed to copy to remote FTP server
Successful operation

NMS33#
```

**NOTE:** The names of the backup files are automatically assigned by the controller based on the timestamp when the backup file was generated and the controller release version. To make it easy for you to identify the backup files, Ruckus Wireless strongly recommends moving each node's backup file to its own directory on the FTP server (for example, //ftp/node1) after the backup process is completed.

#### Step 4: Restoring the Cluster Backup to the Controller

The procedure for restoring the cluster backup to the controller depends on the controller environment – whether it is a single node environment or a multi-node environment.

##### Restoring to a Single Node Environment

The procedure for restoring the cluster backup to the controller depends on the controller environment – whether it is a single node environment or a multi-node environment.

Follow these steps to restore a cluster backup to a single node environment.

1. Prepare the new controller to which you will restore the cluster backup.
  - a) Either obtain a new controller or factory reset an existing controller.
  - b) Log on to the controller as a system administrator.
  - c) Run the setup command to configure the controller's network settings.

```
ruckus> setup
#####
Start SCG setup process:
#####
:
:
Setup configuration of ethers...
Network would be restarted. You could connect to SCG back by
using Management port (10.2.2.35)!!
Enter "restart network" to continue... restart network
```

2. Transfer the backup file from the FTP server to the controller.
  - a) Log on to the controller **CLI** as a system administrator.
  - b) Run the `enable` command to enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

- c) Run the `copy <ftp-url> backup` command to transfer the backup file from the FTP server to the controller.

```
ruckus# copy <ftp-url> backup
```

**NOTE:** If there is only one backup file on the FTP server, the system will automatically transfer this file to the controller. If there are multiple files, it will show the list of all available files and you will be prompted to select the file that you want to transfer.

3. Run the `restore local` command to restore the backup file to the controller.

```
ruckus# restore local
This action will REBOOT the system. Do you want to only restore
this SCG node (yes/no)? yes
idx version date
-----
1 1.1.1.0.93 2013-02-01 03:09:27 GMT
2 1.1.1.0.93 2013-02-03 07:21:24 GMT

Please choose a backup version to restore (ex: 1, 2, ...):2
You have completed restoring the backup file to a single node.
```

### Restoring to a Multi-Node Environment

If you are restoring to a multi-node cluster, you can either replace only one node in the (still-healthy) cluster or replace multiple nodes in the cluster.

#### Replacing a Single Node in a Cluster

Follow these steps to replace a single node in a cluster backup.

1. If the node that you want to replace is still functioning, follow these steps to remove the node.
  - a) Choose a controller that will remain in the cluster.
  - b) Log on to that controller's web interface as an administrator.
  - c) Go to **System > Cluster**.
  - d) Locate the node that you want to replace in the cluster planes.
  - e) Click **Delete** to remove the node from the cluster.
2. If the node that you want to replace is out of service, you will need to shut it down before you can replace it. Follow these steps.
  - a) On the node that you want to replace, log on to the **CLI** as a system administrator.
  - b) Run the `enable` command to enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

- c) (Optional) Back up the current controller system.  
See [Step 2: Back Up the Cluster from the Controller CLI](#) on page 364.
- d) On the node that you want to replace, run the `shutdown` command.  
`ruckus# shutdown`
- e) Log on to the controller web interface as a system administrator.
- f) Go to **System > Cluster**.
- g) Locate the node that you want to replace in the cluster planes.
- h) Click **Delete** to remove the node from the cluster.
- i) Set up the node as a new controller, and then join the existing cluster. For step by step instructions, see the *SmartCell Gateway 200 Getting Started Guide*.

### Replacing Multiple Nodes in a Cluster

If the cluster itself is not healthy anymore or if multiple nodes need to be replaced, you must restore backup files taken around the same time to all of the nodes in the cluster.

Follow these steps to restore backups to multiple nodes in a cluster.

**CAUTION:** Backup files must be taken around the same time. If the backup file of one node is out of sync from the others, the restore process will be unsuccessful.

When restoring to multiple nodes, it is critical that you perform the restore process on all nodes at the same time.

Use the `restore local` command to restore the cluster from the backup file as you cannot restore the cluster by using a backup file from another cluster.

1. Log on to the **CLI** as a system administrator.
2. Run the `enable` command to enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

3. Run the `remote restore` command to transfer the backup file from the FTP server to the controller.

```
ruckus# remote restore {ftp username} {ftp password}
{ftp server address} {(optional) ftp server port} {directory}
idx version date
-----
1 1.1.0.0.207 2012-10-16 06:46:07 GMT
2 1.1.0.0.209 2012-10-17 05:20:51 GMT
Please choose a backup version to get from remote FTP:2
Remote restore process starts
Remote restore process completed
```



**NOTE:** If there is only one backup file on the FTP server, the system will automatically transfer this file to the controller. If there are multiple files, it will show the list of all available files and you will be prompted to select the file that you want to transfer. If the backup files are in the root directory, use "/" in *{directory}*. If the backup files are in a subdirectory, use "{subdir}/{subdir}" to indicate the subdirectory in which the system should check.

4. After all backup files for all nodes have been transferred from the FTP server to the controller, run the `restore local` command to restore the backup file to the controller.

```
ruckus# restore local
This action will REBOOT the system. Do you want to only restore
this SCG node (yes/no)? yes
idx version date
-----
1 1.1.1.0.93 2013-02-01 03:09:27 GMT
2 1.1.1.0.93 2013-02-03 07:21:24 GMT
Please choose a backup version to restore (ex: 1, 2, ...):2
```

5. Verify that the following message appears on each node:

```
Remote restore process completed
```

This indicates that the node is ready for the restore process.

6. Once all nodes are ready for the restore process, run the `restore` command for all nodes at the same time.

## Backing Up and Restoring Configuration

Configuration backup creates a backup of all existing configuration information on the controller. In addition to backing up a different set of information, configuration backup is different from cluster backup in a few ways:

- The configuration backup file is smaller, compared to the cluster backup file.
- The controller can be configured to back up its configuration to an external FTP server automatically.
- Configuration backup does not back up any statistical files or general system configuration.

### Backed Up Configuration Information

The following list shows which configuration information will be backed up.

- AP zones
- AP zone global configuration
- Zone templates
- WLAN templates
- AP registration rules
- Access point information
- General system settings
- Web certificate

- SNMP agent
- Alarm to SNMP agent
- Cluster planes
- Management interface ACL
- Domain information
- User credentials and information
- Mobile Virtual Network Operators (MVNO) information

## Backing Up Configuration

There are two methods you can use to back up the controller configuration:

### Backing Up Configuration from the Web Interface

1. For information on how to back up the controller configuration to an external FTP server automatically, see [Backing up Cluster Configuration](#) on page 308.
2. In **Auto Export Backup**, click **Enable**.
3. In **FTP Server**, select the FTP server to which you want to export the backup file.
4. Click **Test**. The controller attempts to establish connection to the FTP server using the user name and password that you supplied. If the connection attempt is successful, the following message appears: `FTP server connection established successfully`.  
If the connection attempt is unsuccessful, verify that the FTP server details (including the user name and password) are correct, and then click **Test** again.
5. After you verify the controller is able to connect to the FTP server successfully, click **OK** to save the FTP server settings.

### Backing Up Configuration from the CLI

There are two methods you can use to back up the controller configuration either using the web interface or CLI (Command Line Interface).

Follow these steps to back up the controller configuration from the **CLI**.

1. Log on to the controller **CLI** as a system administrator.
2. Run the `enable` command to enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

3. Run the `backup config` command to start backing up and transferring the node configuration to an FTP server.

```
ruckus# backup config {ftp username} {ftp password}
{ftp server address} {(optional) ftp server port}
Do you want to backup configuration (yes/no)? yes
Backup Configuration process starts
Backup Configuration process has been scheduled to run. You can
check backup version using 'show backup-config'
```

4. Run the `show backup-config` command to verify that the backup file has been created.

You have completed backing up the controller node to an external FTP server.

## Restoring Configuration

### Restoring Configuration to a Single Node Environment

Restoring the configured backup in a single node environment.

Follow the steps below to restore configuration to a single node environment.

1. Prepare the new controller to which you will restore the cluster backup.
  - a) Either obtain a new controller or factory reset an existing controller.
  - b) Log on to the controller as a system administrator.
  - c) Run the setup command to configure the controller's network settings.

```
ruckus> setup
#####
Start SCG setup process:
#####
:
:
Setup configuration of ethers...
Network would be restarted. You could connect to SCG back by
using Management port (10.2.2.35)!!
Enter "restart network" to continue... restart network
```

- d) Complete the controller setup process from the **CLI**.
2. After you complete the controller setup, log on to the controller web interface as a system administrator.
  3. Go to **Administration > Backup and Restore**.
  4. Click the **Configuration** tab.
  5. Click **Upload**.
  6. Browse to the location (either on the local computer or on the network) of the configuration backup file that you want to restore.
  7. Select the configuration backup file, and then click **Upload**.

When the upload process is complete, the backup file appears in the **Configuration** section.

8. Restore the configuration backup file to the node, either using the web interface or the **CLI**.
9. To use the web interface:
  - a) On the web interface, go to **Administration > Backup and Restore**.
  - b) In the **Configuration** tab, locate the configuration backup file that you want to restore, and then click **Restore**.
  - c) Follow the prompts (if any) to complete the restore process.
10. To use the **CLI**:
  - a) Log on to the **CLI** as a system administrator.
  - b) Run the `restore config` command.

```
ruckus# restore config
This action will REBOOT the system. Do you want to only restore
this SCG node (yes/no)?yes
idx version date
-----
1 1.1.1.0.93 2013-02-01 03:09:27 GMT
2 1.1.1.0.93 2013-02-03 07:21:24 GMT
Please choose a backup version to restore (ex: 1, 2, ...):2
```

- c) Follow the prompts (if any) to complete the restore process.

You have completed restoring the configuration to a single node controller.

### Restoring Configuration to Multi Node Environment

If you are restoring to a multi node cluster, you can either replace only one node in the (still-healthy) cluster or replace multiple nodes in the cluster.

#### Restoring Configuration to a Single Node in a Cluster

Follow these steps to replace the configuration of a single node in a cluster.

1. If the node that you want to replace is still functioning, follow these steps to remove the node.
  - a) Choose a controller that will remain in the cluster.
  - b) Log on to that controller's web interface as an administrator.
  - c) Go to **System > Cluster**.
  - d) Locate the node that you want to replace.
  - e) Click **Delete** to remove the node from the cluster.
2. If the node that you want to replace is out of service, you will need to shut down the node before you can replace it. Follow these steps.
  - a) On the node that you want to replace, log on to the **CLI** as a system administrator.
  - b) Run the enable command to enable privileged mode on the **CLI**.

```
ruckus> enable
Password: *****
ruckus#
```

- c) (Optional) Back up the current controller system.  
See [Step 2: Back Up the Cluster from the Controller CLI](#) on page 364.

- d) On the node that you want to replace, run the `shutdown` command.

```
ruckus# shutdown
```

- e) Log on to the controller web interface as a system administrator.
- f) Go to **System > Cluster**.
- g) Locate the node that you want to replace,
- h) Click **Delete** to remove the node from the cluster.
- i) Set up the node as a new controller, and then join the existing cluster. For step by step instructions, see the *SmartCell 200 Getting Started Guide*.

You have completed restoring configuration to a single node in the cluster.

## Restoring Configuration to Multiple Nodes in a Cluster

If the cluster itself is not healthy anymore or if multiple nodes need to be replaced, you must factory reset all remaining nodes to ensure that configuration restore to the cluster will be successful.

Follow the steps to restore the configuration to multiple nodes in a cluster.

1. Prepare the new controller nodes and factory reset all of the existing nodes in the cluster.
2. Complete the setup procedure for one of the controller nodes.

For instructions, see the *SmartCell Gateway 200 Getting Started Guide* for this release.

3. After you complete the setup of one node, log on to the web interface of that node as a system administrator.
4. Go to **Administration > Backup and Restore**.
5. In the **Configuration** tab, click **Upload**.
6. Locate the configuration backup file that you want to restore.
7. Click **Upload**.

After the configuration file is uploaded successfully, it appears in the **Configuration** section.

8. Restore the configuration backup to the node either using the web interface or the CLI.
9. To use the web interface:
  - a) Go to **Administration > Backup and Restore** page.
  - b) In the **Configuration** tab, locate the configuration backup file that you want to restore.
  - c) Click **Restore**.
  - d) Follow the prompts (if any) to complete the restore process.
10. To use the **CLI**:
  - a) Log on to the **CLI** of the node as a system administrator.
  - b) Run the `restore config` command.

```
ruckus# restore config
This action will REBOOT the system. Do you want to only restore
this SCG node (yes/no)?yes
idx version date
-----
1 1.1.1.0.93 2013-02-01 03:09:27 GMT
2 1.1.1.0.93 2013-02-03 07:21:24 GMT
Please choose a backup version to restore (ex: 1, 2, ...):2
```

- c) When the configuration restore process on this node is complete, set up the next node and configure it to join the existing cluster.

You have completed restoring configuration backup to multiple nodes in a cluster.

## Appendix



# SCG SSID Syntax

In this chapter:

- [SSIDs Supported in Release 1.1.x](#)
- [SSIDs Supported in Release 2.1.x](#)
- [SSIDs Supported in Release 2.5.x](#)
- [SSIDs Supported in Release 3.0 and Above](#)
- [ZoneDirector SSID Syntax](#)
- [ZoneFlex AP SSID Syntax](#)

The following sections describe the supported SSID syntax in the following SCG release versions:

## SSIDs Supported in Release 1.1.x

Release 1.1.x supports a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

[Table 63: Supported SSID syntaxes in 1.1.x](#) on page 374 describes the SSID syntaxes that are supported in release 1.1.x.

**Table 63: Supported SSID syntaxes in 1.1.x**

Web Interface	Length	Between 1 and 32 characters, including characters from printable characters (ASCII characters space (32) to ~ (126))
	Supported Characters	<ul style="list-style-type: none"> <li>• A-Z</li> <li>• a-z</li> <li>• 0-9</li> <li>• _space_!"#\$%&amp;'()*+,-./</li> <li>• ;;&lt;=?@</li> <li>• [ ] ^ _ `</li> <li>• { }</li> </ul>
CLI	Length	Unsupported
	Supported Characters	Unsupported

## SSIDs Supported in Release 2.1.x

Release 2.1.x supports a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 64: Supported SSID syntaxes in 2.1.x**

Web Interface	Length	Between 1 and 32 characters, including characters from printable characters (ASCII characters space (32) to ~ (126))
	Supported Characters	<ul style="list-style-type: none"> <li>• A-Z</li> <li>• a-z</li> <li>• 0-9</li> <li>• _space_!"#\$%&amp;'()*+,-./</li> <li>• ;;&lt;=?@</li> <li>• [ ] ^ _ `</li> <li>• { }</li> </ul>
CLI	Length	Between 2 and 32 characters
	Supported Characters	All characters, but the space character cannot be the first or last character in the SSID

## SSIDs Supported in Release 2.5.x

Release 2.5.x supports a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 65: Supported SSID syntax in 2.5.x**

Web Interface	Length	Between 1 and 32 characters, including characters from printable characters (ASCII characters space (32) to ~ (126))
	Supported Characters	<ul style="list-style-type: none"> <li>• A-Z</li> <li>• a-z</li> <li>• 0-9</li> <li>• _space_!"#\$%&amp;'()*+,-./</li> <li>• ;;&lt;=?@</li> <li>• [ ] ^ _ `</li> <li>• { }</li> </ul>
CLI	Length	Between 2 and 32 characters
	Supported Characters	All characters

## SSIDs Supported in Release 3.0 and Above

Release 3.0 and above supports a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 66: Supported SSID syntax in 3.0 and above**

Web Interface and CLI	Length	Between 2 to 32 characters are supported
	Characters	<p>Unsupported: ` and \$(</p> <p>Space is allowed, but it must include at least one non-space character (" abc" is valid, however only space such as " " is invalid).</p> <p><b>NOTE:</b> One Chinese word is regarded as three special characters.</p>

## ZoneDirector SSID Syntax

The following sections describe the supported SSID syntax in the following SCG release version:

### SSIDs Supported in Releases 9.8 and 9.7

ZoneFlex releases 9.8 and 9.7 support a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 67: Supported SSID syntaxes in ZoneFlex 9.8 and 9.7**

Web Interface	Length	Between one and 32 characters
	Supported Characters	All printable ASCII characters from space (32) to ~(126)
	Exceptions	<p>The space character (32) cannot be the first or last character in the SSID. Otherwise, the following error message appears:</p> <p>can only contain between 1 and 32 characters, including characters from ! (char 33) to ~ (char 126).</p>
CLI	Length	Between one and 32 characters
	Supported Characters	All printable ASCII characters from space (32) to ~(126)
	Exceptions	The space character (32) can be placed anywhere in the SSID (including the beginning or end)



		provided that it enclosed by a double quotation mark.
--	--	---

## Supported SSIDs in ZoneFlex Release 9.6

ZoneFlex release 9.6 supports a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 68: Supported SSID syntaxes in ZoneFlex 9.6**

Web Interface	Length	Between two and 32 characters
	Supported Characters	All printable ASCII characters from space (32) to ~(126)
	Exceptions	The space character (32) cannot be the first or last character in the SSID. Otherwise, the following error message appears:  can only contain between 1 and 32 characters, including characters from ! (char 33) to ~ (char 126).
CLI	Length	Between two and 32 characters
	Supported Characters	All printable ASCII characters from space (32) to ~ (126)
	Exceptions	The space character (32) can be placed anywhere in the SSID (including the beginning or end) provided that it enclosed in a double quotation mark (for example, "Ruckus Wireless SSID").

## ZoneFlex AP SSID Syntax

The following sections describe the supported SSID syntax in the following ZoneFlex AP release versions:

### Supported SSIDs in Releases 9.8, 9.7, and 9.6

ZoneFlex release 9.8, 9.7, and 9.6 support a specific set of SSID syntaxes, which may be different from the syntaxes supported in other releases.

**Table 69: Supported SSID syntaxes in ZoneFlex AP 9.8, 9.7, and 9.6**

Web Interface	Length	Between one and 32 characters
	Supported Characters	All printable ASCII characters from space (32) to ~(126)
CLI	Length	Between one and 32 characters

Supported Characters	All printable ASCII characters from space (32) to ~ (126)
Exceptions	<p>The space character (32) can be placed anywhere in the SSID (including the beginning or end) provided that it enclosed in a double quotation mark (for example, "Ruckus Wireless SSID").</p> <p>If the space character is not enclosed in a double quotation mark, the space character and any characters after that will be ignored. For example, if you run the command "set ssid wlan0 ruckus-ap 123", the controller CLI will run the command as "set ssid wlan0 ruckus-ap 123".</p>

# Index

3rd Party AP [287](#)  
3rd Party AP Zone [84](#)  
3rd Party AP Zone Types [83](#)  
3rd Party AP Zones [83](#)  
3rd Party Clients [146](#)  
802.11 [131](#)  
802.11w MFP [131](#)

## A

aaa server [209](#), [217](#), [225](#)  
testing [209](#), [217](#)  
AAA server authentication [207](#)  
Access Point Configuration [106](#)  
Access Ports [96](#)  
administration [296–299](#)  
    access control [299](#)  
    creating [299](#)  
    deleting [299](#)  
    editing [299](#)  
access control list [299](#)  
    accounts [297](#)  
    creating [297](#)  
    deleting [297](#)  
    editing [297](#)  
    radius server [298](#)  
    cloning [298](#)  
    creating [298](#)  
    deleting [298](#)  
    editing [298](#)  
    user groups [296](#)  
    creating [296](#)  
    deleting [296](#)  
    editing [296](#)  
administrator activity [319](#)  
Advanced Gateway [40](#)  
Alarm [57](#)  
Acknowledging [57](#)  
Clearing [57](#)  
alarms [23](#), [324](#)  
acknowledging [324](#)  
clearing [324](#)  
filters [324](#)  
AP Client Statistics [280–281](#)  
AP Firmware Version [99](#), [139](#)  
AP groups [74](#), [87](#)  
    cloning [87](#)  
    deleting [87](#)  
    editing [87](#)  
    managing [87](#)  
AP Groups [86](#)  
AP Health [24](#)  
AP Registration Rule [41](#)  
Clone [41](#)  
Create [41](#)

AP Registration Rule (*continued*)  
Delete [41](#)  
Edit [41](#)  
AP Status [101](#)  
AP Zones [75](#)  
    application control [202](#)  
    application policies [202](#)  
    cloning [202](#)  
    creating [202](#)  
    deleting [202](#)  
    editing [202](#)  
    applications [172](#)  
    control [172](#)  
    monitoring [172](#)  
    recognition [172](#)  
Applying a WLAN Template [72](#)  
Applying WLAN Template [139](#)  
Applying Zone Template [99](#)  
Applying Zone Templates [71](#)  
APs [74](#)  
Assigning Certificates to Services [63](#)  
authentication compatibility [225](#)

## B

Background Scanning [82](#)  
backing up [302](#)  
    FTP [302](#)  
backing up configuration [302](#)  
    ftp [302](#)  
backup [300](#)  
Band Balancing [131](#)  
blocking clients [198](#)  
cloning [198](#)  
    creating [198](#)  
    deleting [198](#)  
    editing [198](#)  
    bonjour application [238](#)  
    bonjour fencing [240](#)  
    bonjour fencing policy [241](#)  
    cloning [241](#)  
    creating [241](#)  
    deleting [241](#)  
    editing [241](#)  
    bonjour gateway policy [239](#)  
    cloning [239](#)  
    creating [239](#)  
    deleting [239](#)  
    editing [239](#)  
Bypassing Apple CNA [132](#)

## C

CALEA [252](#)  
CALEA Relay [54](#)

- Certificate Signing Request [63](#)
- Certificates [62](#)
- Change AP Firmware [137](#)
- Changing AP Firmware Version [139](#)
- Changing the Administrator Password [20](#)
- Channel Mode [132](#)
- ChannelFly [82](#)
- Chassis View [46](#)
- Client Admission Control [132](#)
- client isolation whitelist [199](#)
- cloning [199](#)
- creating [199](#)
- deleting [199](#)
- editing [199](#)
- Client Load Balancing [133](#)
- Client Number Report [275](#)
- cluster backup [300](#)
- creating [300](#)
- cluster configuration [308–311](#)
- backing up [308](#)
- downloading [310](#)
- ftp [310](#)
- restoring [311](#)
- scheduling [309](#)
- Cluster Node [24](#)
- Cluster Node Health Metrics [24](#)
- Cluster Nodes [46](#)
- Cluster Redundancy [46–47](#)
- Cluster SwitchOver [100, 139](#)
- cluster versions [314](#)
- roll back [314](#)
- communication ports [344](#)
- Configuring Access Points [101](#)
- deleting [101](#)
- moving [101](#)
- Configuring Client Admission Control [97](#)
- Configuring FTP Server Settings [38](#)
- Creating [38](#)
- Deleting [38](#)
- Editing [38](#)
- Configuring SCI Settings [34](#)
- Creating [34](#)
- Deleting [34](#)
- Editing [34](#)
- Configuring SMTP Server Settings [38](#)
- Configuring SNMP Agent Settings [34](#)
- Creating [34](#)
- Deleting [34](#)
- Editing [34](#)
- Configuring SNMP v2 Agent [35](#)
- Configuring SNMP v3 Agent [35](#)
- Configuring the Control Plane [48](#)
- Deleting [48](#)
- Restarting [48](#)
- Shutting Down [48](#)
- Configuring the Remote Syslog Server [32](#)
- Continuously Disconnected APs Report [275](#)
- Control Planes [44](#)
- copyright information [12](#)

- Creating a WLAN Group [114](#)
- Creating an AP Domain [75](#)
- Creating CSR [63](#)
- Cloning [63](#)
- Deleting [63](#)
- Editing [63](#)
- Creating New Zone [99](#)
- Critical AP Tagging [43](#)

## D

- Data Plane [54](#)
- Configuring [54](#)
- Restarting [54](#)
- Data Planes [44](#)
- DC power supply [361](#)
- dhcp discover [336](#)
- dhcp pool [270](#)
- cloning [270](#)
- creating [270](#)
- deleting [270](#)
- editing [270](#)
- dhcp service [265](#)
- dhcp settings [266](#)
- diagnostics [326–327, 330–335](#)
- ap cli scripts [327](#)
- CGF connectivities [330](#)
- CGF transactions [331](#)
- DHCP relay [331](#)
- DHCP server [332](#)
- diagnostic scripts [326](#)
- GGSN connection [332](#)
- GGSN sessions [333](#)
- hlr [333](#)
- logs [327](#)
- patch scripts [326](#)
- radius proxy [330](#)
- radius server [334](#)
- SCTP [334](#)
- sta statistics [334](#)
- stack statistics [335](#)
- diameter service [220](#)
- configuring [220](#)
- diffserv profile [251](#)
- cloning [251](#)
- creating [251](#)
- deleting [251](#)
- editing [251](#)
- Disabling Node Affinity [40](#)
- DNS server profile [201](#)
- cloning [201](#)
- creating [201](#)
- deleting [201](#)
- editing [201](#)
- Domains [74, 112](#)
- dynamic psk [166, 168–169](#)
- generating [168](#)
- importing [169](#)
- viewing [168](#)

## E

- eap-aka [224](#)
- configuring [224](#)
- eap-sim [222](#)
- configuring [222](#)
- Editing Swap Configuration [109](#)
- Editing System Time [31](#)
- electrostatic discharge [361](#)
- Enabling Node Affinity [39](#)
- ethernet port profile [248](#)
- cloning [248](#)
- creating [248](#)
- deleting [248](#)
- editing [248](#)
- Ethernet Port Type [95](#)
- Event [57](#)
- events [322–323](#)
- email notification [322](#)
  - events threshold [323](#)
  - configuring [323](#)
- snmp traps [322](#)
- viewing [322](#)
- Exporting Zone Template [71](#)
- External DPSK [171](#)
- external portal [338](#)
- Extracting a WLAN Template [138](#)
- Extracting a Zone Template [99](#)

## F

- Fast BSS Transition [131](#)
- Filtering Events [57](#)
- firewall ports [344](#)
- flexi vpn [252](#)
- enabling [252](#)
- forwarding profiles [256, 258–259, 261](#)
  - bridge [256](#)
  - creating [256](#)
  - deleting [256](#)
  - editing [256](#)
  - L2oGRE [258](#)
  - creating [258](#)
  - deleting [258](#)
  - editing [258](#)
  - mixed-mode [261](#)
  - cloning [261](#)
  - creating [261](#)
  - deleting [261](#)
  - editing [261](#)
  - TTG+PDG [259](#)
  - creating [259](#)
  - deleting [259](#)
  - editing [259](#)
- front bezel [355, 360](#)
- reinstalling [360](#)
- removing [355](#)
- FRU [355](#)
- hard disk [355](#)

## G

- General Ports [97](#)
- Generating Reports [278](#)
- ggsn/pgw [262](#)
- configuring [262](#)
- Global Filters [21](#)
- grounding cable [361](#)
- GTP Core Network Tunnel [289](#)
- guest access portal [175](#)
- cloning [175](#)
- configuring [175](#)
- creating [175](#)
- deleting [175](#)

## H

- hard disk drive carrier [356](#)
- hard drives [355](#)
- installing [355](#)
- HDD replacement [355](#)
- Health [23](#)
- Hierarchy Overview [74](#)
- hlr [219](#)
- configuring [219](#)
- Hospot (WISPr) [177](#)
- hotspot 2.0 identity provider [185](#)
- creating [185](#)
- hotspot 2.0 services [182](#)
- hotspot 2.0 venue profile [187](#)
- cloning [187](#)
- configuring [187](#)
- creating [187](#)
- deleting [187](#)
- hotspot 2.0 wlan profile [183](#)
- cloning [183](#)
- configuring [183](#)
- creating [183](#)
- deleting [183](#)
- hotspot portal [177](#)
- cloning [177](#)
- creating [177](#)
- deleting [177](#)
- editing [177](#)

## I

- identifiers [336](#)
- Importing New Certificates [62](#)
- Deleting [62](#)
- Editing [62](#)
- Importing Zone Templates [72](#)
- installing [355](#)
- hard drive [355](#)
- Interface and Routing [45](#)
- ipsec [245](#)
- cloning [245](#)
- creating [245](#)
- deleting [245](#)

ipsec (*continued*)  
editing [245](#)  
IPv6 Primary (Access) Interface [54](#)

## L

L2 access control [196](#)  
cloning [196](#)  
creating [196](#)  
deleting [196](#)  
editing [196](#)  
L2oGRE 3rd Party AP [286](#)  
layer 3 roaming [253–254](#)  
enabling [254](#)  
roaming criteria [253](#)  
legal [12](#)  
license [316–318](#)  
downloading [317](#)  
importing [316](#)  
license bandwidth [318](#)  
license server [318](#)  
configuring [318](#)  
managing [316](#)  
synchronising [317](#)  
viewing [316](#)  
LLDP Attributes [94](#)  
local user [151](#)  
cloning [151](#)  
configuring [151](#)  
creating [151](#)  
deleting [151](#)  
location services [264](#)  
cloning [264](#)  
creating [264](#)  
deleting [264](#)  
editing [264](#)  
logging off [20](#)

## M

Managed Access Points [106](#)  
Managed by Partner [75](#), [113](#)  
Managing AP Certificates [64](#)  
Managing Report Generation [275](#)  
Managing WLANs [137](#)  
Maps [23](#), [26](#)  
Marking Rouge Access Points [279](#)  
migration [319](#)  
ZoneDirector to SmartZone [319](#)  
Mobility Domain ID [134](#)  
Model-Based Settings [92](#)  
Monitoring APs [109](#)  
Monitoring Cluster Settings [57](#)  
Monitoring Domains, Zones and AP Groups [97](#)  
Moving a WLAN [138](#)  
Moving an AP Zone [98](#)  
MSP domain [113](#)  
mvno accounts [320](#)  
managing [320](#)

## N

Network Settings [57](#)  
network tunnel [256](#)  
Node Affinity [39](#)  
non-proxy accounting server [233](#)  
cloning [233](#)  
creating [233](#)  
deleting [233](#)  
editing [233](#)  
non-proxy auth server [209](#)  
testing [209](#)  
non-proxy authentication server [207](#)  
cloning [207](#)  
creating [207](#)  
deleting [207](#)  
editing [207](#)  
notifications [23](#)

## O

OS policy [192](#)  
cloning [192](#)  
creating [192](#)  
deleting [192](#)  
editing [192](#)  
OS policy rule [193](#)  
creating [193](#)

## P

packet core [336](#)  
Port Settings [95](#)  
portal authentication [338](#)  
Portal-based WLANs [134](#)  
ports to open [344](#)  
power supply unit [361](#)  
precedence profile [195](#)  
cloning [195](#)  
creating [195](#)  
deleting [195](#)  
editing [195](#)  
Primary (Access) Interface [54](#)  
Prioritizing AP Registration Rules [42](#)  
proxy accounting server [235](#)  
cloning [235](#)  
creating [235](#)  
deleting [235](#)  
editing [235](#)  
proxy authentication server [210](#)  
cloning [210](#)  
creating [210](#)  
deleting [210](#)  
editing [210](#)  
PSU [361](#)

## Q

Q-in-Q Layer 2 [287](#)

## R

RADIUS [340](#)  
access accept messages [340](#)  
RADIUS service [214](#)  
Rate Limiting Ranges [135](#)  
realm-based auth profile [218](#)  
creating [218](#)  
realm-based proxy [237](#)  
cloning [237](#)  
creating [237](#)  
deleting [237](#)  
editing [237](#)  
Rebalancing APs [52](#)  
reconnects [336](#)  
remote peer configuration [220](#)  
removing [355](#)  
front bezel [355](#)  
replacement hard disk [355](#)  
replacing [355](#), [361](#)  
hard drive [355](#)  
power supply unit [361](#)  
system fan [361](#)  
Report [276](#)  
Creating [276](#)  
Deleting [276](#)  
Editing [276](#)  
restore [300](#)  
restoring [304](#)  
FTP [304](#)  
restoring cluster [301](#)  
Rogue Access Points [279](#)  
Filtering [279](#)  
roles [150](#)  
applying to users [150](#)  
ruckus gre [243](#)  
cloning [243](#)  
creating [243](#)  
deleting [243](#)  
editing [243](#)  
Ruckus GRE Tunnels [283](#)

## S

Secondary (Core) Interface [54](#)  
Setting Filters [21](#)  
Setting the Northbound Portal Password [34](#)  
Setting Up the Controller [17](#)  
severity [23](#)  
Signature Package [206](#)  
soft gre [244](#)  
cloning [244](#)  
creating [244](#)  
deleting [244](#)  
editing [244](#)

SoftGRE Core Network Tunnel [288](#)  
SoftGRE IPsec Tunnels [285](#)  
SoftGRE Tunnels [284](#)  
Static Routes [54](#)  
subscription package [152](#)  
configuring [152](#)  
creating [152](#)  
deleting [152](#)  
Summary [57](#)  
Support Log [107](#)  
Swapping [109](#)  
Swapping Access Points [107](#)  
Swapping APs [107](#)  
Switchover Cluster [137](#)  
System [74](#)  
System Cluster Overview [44](#)  
system fan [361](#)  
system logs [328](#)  
available logs [328](#)  
System Resource Utilization Report [275](#)  
systemwide settings [220](#)

## T

Tagging Critical APs [43](#)  
third-party profiles [272](#), [274](#)  
hotspot [272](#)  
network profile [272](#)  
q-in-q ether [274](#)  
time schedule [200](#)  
cloning [200](#)  
creating [200](#)  
deleting [200](#)  
editing [200](#)  
Top Access Points [27](#)  
Top Clients [29](#)  
Top WLANs [29](#)  
trademarks [12](#)  
Traffic & Health [57](#)  
Traffic Analysis [27](#)  
Trigger Preferred Node [137](#)  
Triggering Preferred Node [100](#), [140](#)  
troubleshooting [292](#), [294](#)  
client connections [292](#)  
spectrum analysis [294](#)  
Trunk Ports [97](#)  
Trusted CA Certificates [65](#)  
Deleting [65](#)  
Editing [65](#)  
Importing [65](#)  
ttg establishment [336](#)  
tunnel encryption [255](#)  
tunnel establishment [339](#)  
Tunnel UDP Port [43](#)  
tunneling [336](#)  
TX/RX Bytes Report [275](#)  
Types of Reports [275](#)

## U

- ua blacklist [188](#)
- cloning [188](#)
- configuring [188](#)
- creating [188](#)
- deleting [188](#)
- upgrading [311–314](#)
- ap patch file [313](#)
- controller [311](#)
- pre-upgrade check [312](#)
- verifying [314](#)
- virtual data plane [314](#)
- Upgrading AP Firmware Version [99](#)
- Uploading the Signature Package [206](#)
- user defined applications [205](#)
  - cloning [205](#)
  - creating [205](#)
  - deleting [205](#)
  - editing [205](#)
- User Role [149](#)
- 802.1x Authentication [149](#)
- Active Directory Authentication [149](#)
- user roles [147](#)
  - cloning [147](#)
  - configuring [147](#)
  - creating [147](#)
  - deleting [147](#)
- user traffic [336](#)
- user traffic profile [190](#)
  - cloning [190](#)
  - configuring [190](#)
  - creating [190](#)
  - deleting [190](#)
- user traffic rule [191](#)
  - creating [191](#)

## V

- Validating the Signature Package [207](#)
- Viewing AP Certificates [64](#)
- Viewing Modes [100](#), [112](#)
- Viewing Rogue Access Points [279](#)
- Viewing System Settings [31](#)
- vlan pooling [194](#)
- VLAN Pooling [83](#)
- vlan pooling profile [194](#)
  - cloning [194](#)
  - creating [194](#)
  - deleting [194](#)
  - editing [194](#)
- VSAs [340](#)

## W

- Warnings [22](#)
- Warnings and Notifications [22](#)
- web auth portal [179](#)
  - cloning [179](#)

- web auth portal (*continued*)
  - configuring [179](#)
  - creating [179](#)
  - deleting [179](#)
- Web Interface Features [18](#)
- wechat portal [181](#)
  - cloning [181](#)
  - configuring [181](#)
  - creating [181](#)
  - deleting [181](#)
- wifi operator profile [184](#)
  - creating [184](#)
- wired clients [145–146](#)
  - deauthenticating [146](#)
  - deauthorizing [146](#)
  - viewing information [145](#)
  - viewing summary [145](#)
- wireless client [144](#)
- unblocking [144](#)
- wireless clients [141](#), [143–144](#)
  - blocking [144](#)
  - deauthenticating [143](#)
  - deauthorizing [143](#)
  - deleting [144](#)
  - viewing information [143](#)
  - viewing summary [141](#)
- wlan [225](#)
- WLAN [114](#)
  - cloning [114](#)
  - configuring [114](#)
  - creating [114](#)
  - deleting [114](#)
- WLAN Groups [112–113](#)
- WLAN Schedule Profile [137](#)
- WLAN Schedule Profiles [136](#)
- WLAN Template [137](#)
  - Applying [137](#)
  - Extracting [137](#)
- WLAN Templates [72](#)
  - Cloning [72](#)
  - Creating [72](#)
  - Deleting [72](#)
  - Editing [72](#)
- WLANs [112](#)
- Working With Access Points [74](#)
- Working with CSR [63](#)

## Z

- Zone Affinity [43](#)
- Zone Templates [66](#)
  - Cloning [66](#)
  - Creating [66](#)
  - Deleting [66](#)
  - Editing [66](#)
- Zones [74](#), [112](#)
- Zones and AP groups [75](#)
  - cloning [75](#)
  - deleting [75](#)



Zones and AP groups (*continued*)  
editing [75](#)

Zones and AP groups (*continued*)  
managing [75](#)