

Cloudpath Enrollment System PEAP With an External RADIUS Server Configuration Guide, 6.0

Supporting Cloudpath Software Release 6.0

© 2024 CommScope, Inc. All rights reserved.

No part of this content may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from CommScope, Inc. and/or its affiliates ("CommScope"). CommScope reserves the right to revise or change this content from time to time without obligation on the part of CommScope to provide notification of such revision or change.

Export Restrictions

These products and associated technical data (in print or electronic form) may be subject to export control laws of the United States of America. It is your responsibility to determine the applicable regulations and to comply with them. The following notice is applicable for all products or technology subject to export control:

These items are controlled by the U.S. Government and authorized for export only to the country of ultimate destination for use by the ultimate consignee or end-user(s) herein identified. They may not be resold, transferred, or otherwise disposed of, to any other country or to any person other than the authorized ultimate consignee or end-user(s), either in their original form or after being incorporated into other items, without first obtaining approval from the U.S. government or as otherwise authorized by U.S. law and regulations.

Disclaimer

THIS CONTENT AND ASSOCIATED PRODUCTS OR SERVICES ("MATERIALS"), ARE PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, COMMSCOPE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, NON-INFRINGEMENT, FREEDOM FROM COMPUTER VIRUS, AND WARRANTIES ARISING FROM COURSE OF DEALING OR COURSE OF PERFORMANCE. CommScope does not represent or warrant that the functions described or contained in the Materials will be uninterrupted or error-free, that defects will be corrected, or are free of viruses or other harmful components. CommScope does not make any warranties or representations regarding the use of the Materials in terms of their completeness, correctness, accuracy, adequacy, usefulness, timeliness, reliability or otherwise. As a condition of your use of the Materials, you warrant to CommScope that you will not make use thereof for any purpose that is unlawful or prohibited by their associated terms of use.

Limitation of Liability

IN NO EVENT SHALL COMMSCOPE, COMMSCOPE AFFILIATES, OR THEIR OFFICERS, DIRECTORS, EMPLOYEES, AGENTS, SUPPLIERS, LICENSORS AND THIRD PARTY PARTNERS, BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER, EVEN IF COMMSCOPE HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER IN AN ACTION UNDER CONTRACT, TORT, OR ANY OTHER THEORY ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIALS. Because some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of liability for consequential or incidental damages, some of the above limitations may not apply to you.

Trademarks

CommScope and the CommScope logo are registered trademarks of CommScope and/or its affiliates in the U.S. and other countries. For additional trademark information see <https://www.commscope.com/trademarks>. All product names, trademarks, and registered trademarks are the property of their respective owners.

Patent Marking Notice

For applicable patents, see www.cs-pat.com.

Contents

Contact Information, Resources, and Conventions.....	5
Contacting RUCKUS Customer Services and Support.....	5
What Support Do I Need?.....	5
Open a Case.....	5
Self-Service Resources.....	6
Document Feedback.....	6
RUCKUS Product Documentation Resources.....	6
Online Training Resources.....	6
Document Conventions.....	7
Notes, Cautions, and Safety Warnings.....	7
Command Syntax Conventions.....	7
Overview of PEAP Configuration.....	9
Set up the AAA Authentication Server on the Ruckus ZoneDirector Controller.....	11
Set up the AAA Authentication Server on the Ruckus SmartZone Controller.....	13
Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller.....	15
Configuring a PEAP WLAN on a Ruckus SmartZone Controller.....	21
Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller.....	27
Adding a PEAP Branch to Your Workflow.....	27
Adding a PEAP Device Configuration to Your Workflow.....	30
Configuring Cloudpath to Communicate with the External RADIUS server.....	32
Testing the PEAP User Experience.....	34
Troubleshooting Tips.....	36

Contact Information, Resources, and Conventions

- [Contacting RUCKUS Customer Services and Support](#)..... 5
- [Document Feedback](#)..... 6
- [RUCKUS Product Documentation Resources](#)..... 6
- [Online Training Resources](#)..... 6
- [Document Conventions](#)..... 7
- [Command Syntax Conventions](#)..... 7

Contacting RUCKUS Customer Services and Support

The Customer Services and Support (CSS) organization is available to provide assistance to customers with active warranties on their RUCKUS products, and to customers and partners with active support contracts.

For product support information and details on contacting the Support Team, go directly to the RUCKUS Support Portal using <https://support.ruckuswireless.com>, or go to <https://www.ruckusnetworks.com> and select **Support**.

What Support Do I Need?

Technical issues are usually described in terms of priority (or severity). To determine if you need to call and open a case or access the self-service resources, use the following criteria:

- Priority 1 (P1)—Critical. Network or service is down and business is impacted. No known workaround. Go to the **Submit a Case** section.
- Priority 2 (P2)—High. Network or service is impacted, but not down. Business impact may be high. Workaround may be available. Go to the **Submit a Case** section.
- Priority 3 (P3)—Medium. Network or service is moderately impacted, but most business remains functional. Click the **CONTACT** tab at the top of the page and explore the **Self-Service Online Help** options.
- Priority 4 (P4)—Low. Requests for information, product documentation, or product enhancements. Click the **CONTACT** tab at the top of the page and explore the **Self-Service Online Help** options.

Open a Case

When your entire network is down (P1), or severely impacted (P2), call the appropriate telephone number listed below to get help:

- Continental United States: 1-855-782-5871
- Canada: 1-855-782-5871
- Europe, Middle East, Africa, Central and South America, and Asia Pacific, toll-free numbers are available at <https://support.ruckuswireless.com/contact-us> and Live Chat is also available.
- Worldwide toll number for our support organization. Phone charges will apply: +1-650-265-0903

We suggest that you keep a physical note of the appropriate support number in case you have an entire network outage.

Self-Service Resources

The RUCKUS Support Portal at <https://support.ruckuswireless.com> offers a number of tools to help you to research and resolve problems with your RUCKUS products, including:

- Technical Documentation—<https://support.ruckuswireless.com/documents>
- Community Forums—<https://community.ruckuswireless.com>
- Knowledge Base Articles—<https://support.ruckuswireless.com/answers>
- Software Downloads and Release Notes—https://support.ruckuswireless.com/#products_grid
- Security Bulletins—<https://support.ruckuswireless.com/security>

Using these resources will help you to resolve some issues, and will provide the Technical Assistance Center (TAC) with additional data from your troubleshooting analysis if you still require assistance through a support case or Return Merchandise Authorization (RMA). If you still require help, open and manage your case at https://support.ruckuswireless.com/case_management.

Document Feedback

RUCKUS is interested in improving its documentation and welcomes your comments and suggestions.

You can email your comments to RUCKUS at #Ruckus-Docs@commscope.com.

When contacting us, include the following information:

- Document title and release number
- Document part number (on the cover page)
- Page number (if appropriate)

For example:

- RUCKUS SmartZone Upgrade Guide, Release 5.0
- Part number: 800-71850-001 Rev A
- Page 7

RUCKUS Product Documentation Resources

Visit the RUCKUS website to locate related documentation for your product and additional RUCKUS resources.

Release Notes and other user documentation are available at <https://support.ruckuswireless.com/documents>. You can locate the documentation by product or perform a text search. Access to Release Notes requires an active support contract and a RUCKUS Support Portal user account. Other technical documentation content is available without logging in to the RUCKUS Support Portal.

White papers, data sheets, and other product documentation are available at <https://www.ruckusnetworks.com>.

Online Training Resources

To access a variety of online RUCKUS training modules, including free introductory courses to wireless networking essentials, site surveys, and products, visit the RUCKUS Training Portal at <https://commscopeuniversity.myabsorb.com/>. The registration is a two-step process described in this [video](#). Create a CommScope account and then register for, and request access for, CommScope University.

Document Conventions

The following table lists the text conventions that are used throughout this guide.

TABLE 1 Text Conventions

Convention	Description	Example
monospace	Identifies command syntax examples	<code>device(config)# interface ethernet 1/1/6</code>
bold	User interface (UI) components such as screen or page names, keyboard keys, software buttons, and field names	On the Start menu, click All Programs .
<i>italics</i>	Publication titles	Refer to the <i>RUCKUS Small Cell Release Notes</i> for more information.

Notes, Cautions, and Safety Warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A NOTE provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An ATTENTION statement indicates some information that you must read before continuing with the current action or task.



CAUTION

A CAUTION statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A DANGER statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Command Syntax Conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
bold text	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{x y z}	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Overview of PEAP Configuration

Protected Extensible Authentication Protocol (PEAP) is one of several methods available for user authentication in Cloudpath.

PEAP is a username/password-based method of authentication.

NOTE

This document provides the steps on how to configure your controller and your Cloudpath system to communicate with an external RADIUS server.

If you will be using a Ruckus ZoneDirector controller to set up PEAP, follow the procedures in these sections:

1. [Set up the AAA Authentication Server on the Ruckus ZoneDirector Controller on page 11](#)
2. [Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller on page 15](#)
3. [Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller on page 27](#)

If you will be using a Ruckus SmartZone controller to set up PEAP, follow the procedures in these sections:

1. [Set up the AAA Authentication Server on the Ruckus SmartZone Controller on page 13](#)
2. [Configuring a PEAP WLAN on a Ruckus SmartZone Controller on page 21](#)
3. [Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller on page 27](#)

Set up the AAA Authentication Server on the Ruckus ZoneDirector Controller

You must enter information about your existing external RADIUS server in the controller user interface.

Go to **Configure > AAA Servers** on your ZoneDirector controller. The following screen shows the AAA authentication server configuration.

FIGURE 1 Create AAA Authentication Server on ZoneDirector

The screenshot shows the 'Editing (Jeff AAA Auth)' configuration window. The fields are as follows:

Name	Jeff AAA Auth
Type	<input type="radio"/> Active Directory <input type="radio"/> LDAP <input checked="" type="radio"/> RADIUS <input type="radio"/> RADIUS Accounting <input type="radio"/> TACACS+
Encryption	<input type="checkbox"/> TLS
Auth Method	<input checked="" type="radio"/> PAP <input type="radio"/> CHAP
Backup RADIUS	<input type="checkbox"/> Enable Backup RADIUS support
IP Address*	10.176.209.54
Port*	1812
Shared Secret*	••••••••
Confirm Secret*	••••••••
Retry Policy	
Request Timeout*	3 seconds
Max Number of Retries*	2 times

Buttons: OK, Cancel

Enter the following values for the authentication server:

- Name = Any descriptive name you wish.
- Type = RADIUS
- Encryption: Leave the TLS box unchecked.
- Auth Method = PAP
- Backup RADIUS: Refer to your controller documentation if you want to use a backup RADIUS server.
- IP address = The IP address of your external RADIUS server.
- Port = 1812

Set up the AAA Authentication Server on the Ruckus ZoneDirector Controller

- Shared Secret = The shared secret of your external RADIUS server.

NOTE

Leave the default values for the remaining fields.

Click **OK**.

Proceed to [Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller](#) on page 15.

Set up the AAA Authentication Server on the Ruckus SmartZone Controller

You must enter information about your existing external RADIUS server in the controller user interface.

Go to **System > Services & Profiles > Authentication** on your SmartZone controller. The following screen shows the AAA authentication server configuration.

FIGURE 2 Create AAA Authentication Server on SmartZone

The screenshot shows a configuration window titled "Edit AAA Server: [Jeff AAA Auth vSZ]". The window contains the following fields and options:

- General Options** (dropdown menu)
- Name:** Jeff AAA Auth vSZ
- Description:** (empty text field)
- Type:** RADIUS Active Directory LDAP
- Backup RADIUS:** Enable Secondary Server
- Primary Server** (grouped fields):
 - IP Address:** 10.176.209.54
 - Port:** 1812
 - Shared Secret:** (masked with dots)
 - Confirm Secret:** (masked with dots)

At the bottom of the window are two buttons: **OK** and **Cancel**.

Enter the following values for the authentication server:

- Name = Any descriptive name you wish.
- Type = RADIUS
- Backup RADIUS: Refer to your controller documentation if you want to use a backup RADIUS server.
- IP address = The IP address of your external RADIUS server.
- Port = 1812
- Shared Secret = The shared secret of your external RADIUS server.

Click **OK**.

Set up the AAA Authentication Server on the Ruckus SmartZone Controller

Proceed to [Configuring a PEAP WLAN on a Ruckus SmartZone Controller](#) on page 21.

Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller

You can configure a PEAP WLAN on a Ruckus Wireless ZoneDirector controller so that you can then use PEAP as one method of authenticating users to Cloudpath.

Follow these steps to configure a PEAP WLAN on a Ruckus ZoneDirector controller.

NOTE

The procedure shown in this section is based on the user interface of a ZoneDirector controller version 10.0. Different versions of ZoneDirector may have minor differences in terms of which configuration options appear in what sections of a screen.

1. Log in to your Ruckus ZoneDirector controller.
2. Navigate to **Configure > WLANs**.

Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller

3. Under the WLAN List section, click **Create New**.
The **Create New** section of the screen is displayed.

FIGURE 3 Create New WLAN on ZoneDirector

The screenshot shows the 'Create New' configuration page for a WLAN. The page is organized into several sections:

- General Options:** Includes fields for 'Name/ESSID*' (with a 'New Name' input) and 'ESSID' (with a 'New Name' input), and a 'Description' field.
- WLAN Usages:** Includes a 'Type' section with radio buttons for 'Standard Usage' (selected), 'Guest Access', 'Hotspot Service (WISPr)', 'Hotspot 2.0', 'Autonomous', and 'Social Media'.
- Authentication Options:** Includes a 'Method' section with radio buttons for 'Open' (selected), '802.1x EAP', 'MAC Address', and '802.1x EAP + MAC Address'. It also has a checkbox for 'Fast BSS Transition' (labeled 'Enable 802.11r FT Roaming') with a note: '(Recommended to enable 802.11k Neighbor-list Report for assistant.)'
- Encryption Options:** Includes a 'Method' section with radio buttons for 'WPA2', 'WPA Mixed', 'WEP-64 (40 bit)', 'WEP-128 (104 bit)', and 'None' (selected).
- Options:** Includes a checkbox for 'Web Authentication' (labeled 'Enable captive portal/Web authentication') with a note: '(Users will be redirected to a Web portal for authentication before they can access the WLAN.)'. It also has an 'Authentication Server' dropdown set to 'Local Database' with a 'Create New' button. There are two checkboxes for 'Wireless Client Isolation' (labeled 'Isolate wireless client traffic from other clients on the same AP' and 'Isolate wireless client traffic from all hosts on the same VLAN/subnet.') and a 'No WhiteList' dropdown with a 'Create New' button, with a note: '(Requires whitelist for gateway and other allowed hosts.)'. It also has a checkbox for 'Zero-IT Activation™' (labeled 'Enable Zero-IT Activation') with a note: '(WLAN users are provided with wireless configuration installer after they log in.)'. Finally, there is a 'Priority' section with radio buttons for 'High' (selected) and 'Low'.

At the bottom of the page, there is a link for 'Advanced Options' and two buttons: 'OK' and 'Cancel'.

NOTE

Unless otherwise specified in the remaining steps, you do not have to change default values. The procedure described here is specific to Cloudpath; for information about any fields that are not described here, refer to your controller documentation.

- Complete the General Options section:

FIGURE 4 General Options Section of Creating a New WLAN

General Options	
Name/ESSID*	eng-PEAP ESSID eng-PEAP
Description	Jeff AAA RADIUS server for P

- Name: Enter a meaningful name for the PEAP WLAN you are creating.
 - ESSID: When you click in this field, the name you entered in the Name field also appears in this field.
 - Description: You can enter a brief description to indicate that you are creating a RADIUS WLAN for PEAP.
- In the WLAN Usages section, use the default selection of Standard Usage.

FIGURE 5 WLAN Usage section of Creating a New WLAN

WLAN Usages	
Type	<input checked="" type="radio"/> Standard Usage (For most regular wireless network usages.) <input type="radio"/> Guest Access (Guest access policies and access control will be applied.) <input type="radio"/> Hotspot Service (WISPr) <input type="radio"/> Hotspot 2.0 <input type="radio"/> Autonomous <input type="radio"/> Social Media

- In the Authentication Options section, be sure that you select 802.1x EAP.

FIGURE 6 Authentication Options section of Creating a New WLAN

Authentication Options	
Method	<input type="radio"/> Open <input checked="" type="radio"/> 802.1x EAP <input type="radio"/> MAC Address <input type="radio"/> 802.1x EAP + MAC Address
Fast BSS Transition	<input type="checkbox"/> Enable 802.11r FT Roaming (Recommended to enable 802.11k Neighbor-list Report for assistant.)

Configuring a PEAP WLAN on a Ruckus ZoneDirector Controller

7. In the Encryption Options section, choose WPA2 for the Method. When you choose WPA2, the Encryption Options section appears as shown below:

FIGURE 7 Encryptions Options section after choosing WPA2 as the Method

Encryption Options	
Method	<input checked="" type="radio"/> WPA2 <input type="radio"/> WPA-Mixed <input type="radio"/> WEP-64 (40 bit) <input type="radio"/> WEP-128 (104 bit) <input type="radio"/> None
Algorithm	<input checked="" type="radio"/> AES <input type="radio"/> Auto (TKIP+AES)
802.11w MFP	<input checked="" type="radio"/> Disabled <input type="radio"/> Optional <input type="radio"/> Required

- Algorithm: Be sure that the default value of AES is selected.
 - 802.11w MFP: Be sure the default value of Disabled is selected.
8. In the Options section, select the authentication server that you configured in [Set up the AAA Authentication Server on the Ruckus ZoneDirector Controller](#) on page 11 from the drop-down list.

FIGURE 8 Options Section After Authentication Server is Selected

Options	
Authentication Server	Jeff AAA Auth <input type="button" value="Create New"/>
Wireless Client Isolation	<input type="checkbox"/> Isolate wireless client traffic from other clients on the same AP. <input type="checkbox"/> Isolate wireless client traffic from all hosts on the same VLAN/subnet. No WhiteList <input type="button" value="Create New"/> (Requires whitelist for gateway and other allowed hosts.)
Zero-IT Activation™	<input type="checkbox"/> Enable Zero-IT Activation (WLAN users are provided with wireless configuration installer after they log in.)
Priority	<input checked="" type="radio"/> High <input type="radio"/> Low

NOTE

Do not configure an accounting server for PEAP.

9. In the Advanced Options section, there are many fields (not shown here), but you can also use all the default values.

10. Click **OK** to complete the PEAP WLAN configuration.

Your newly created PEAP WLAN should now appear in the WLAN List, "eng-PEAP" in this example:

FIGURE 9 Newly Created WLAN Appears in WLAN List

WLAN List						
This table lists your current WLANs and provides basic details about them. Click Create New to add another WLAN, or click Edit to make changes to an existing WLAN.						
<input type="checkbox"/>	Name	ESSID	Description	Authentication	Encryption	Actions
<input type="checkbox"/>	dpsk test	dpsk test		Open	WPA2	Edit Clone
<input type="checkbox"/>	eng-PEAP	eng-PEAP	Jeff AAA RADIUS server for PEAP	802.1x EAP	WPA2	Edit Clone
<input type="checkbox"/>	HQ1-Jeff	HQ1-Jeff	HQ1-Jeff	802.1x EAP	WPA2	Edit Clone
<input type="checkbox"/>	Jeff PSK	Jeff PSK		Open	WPA2	Edit Clone

To review the completed configuration or to make any configuration changes, click the **Edit** button.

Proceed to [Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller](#) on page 27.

Configuring a PEAP WLAN on a Ruckus SmartZone Controller

You can configure a PEAP WLAN on a Ruckus Wireless SmartZone controller so that you can then use PEAP as one method of authenticating users to Cloudpath.

Follow these steps to configure a PEAP WLAN on a Ruckus SmartZone controller.


NOTE

The procedure shown in this section is based on the user interface of a SmartZone controller version 3.5.1. Different versions of SmartZone may have minor differences in terms of which configuration options appear in what sections of a screen.

1. Log in to your Ruckus SmartZone controller.
2. Click the **Wireless LANs** tab.

The following screen appears:


FIGURE 10 Wireless LANs Screen

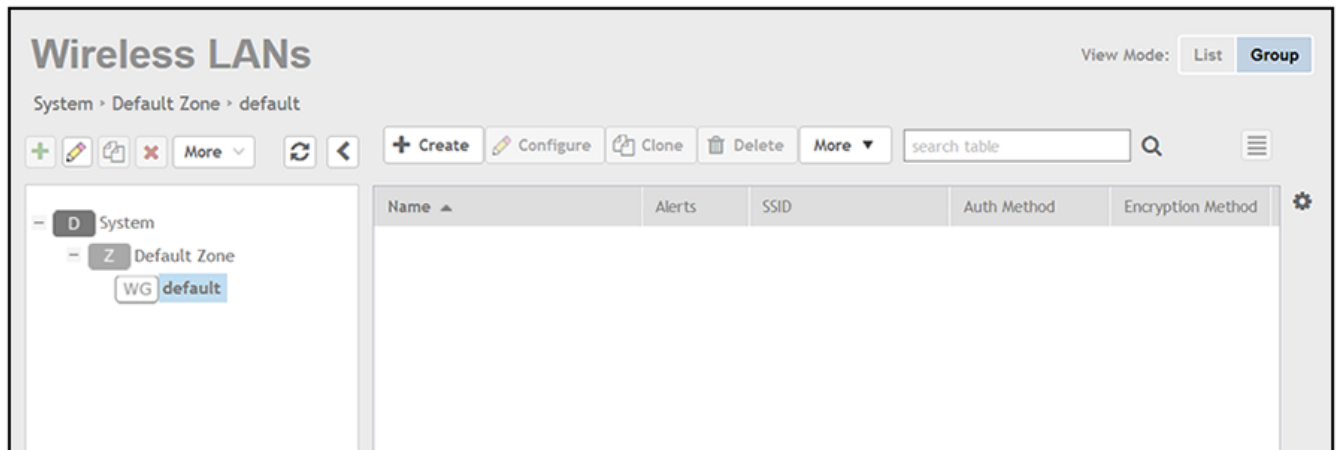

3. On the Wireless LANs screen, click the **+ Create** button.

The Create WLAN Configuration appears. This screen is shown below (with each area of the screen in a collapsed view):

FIGURE 11 Create WLAN Configuration Screen on SmartZone

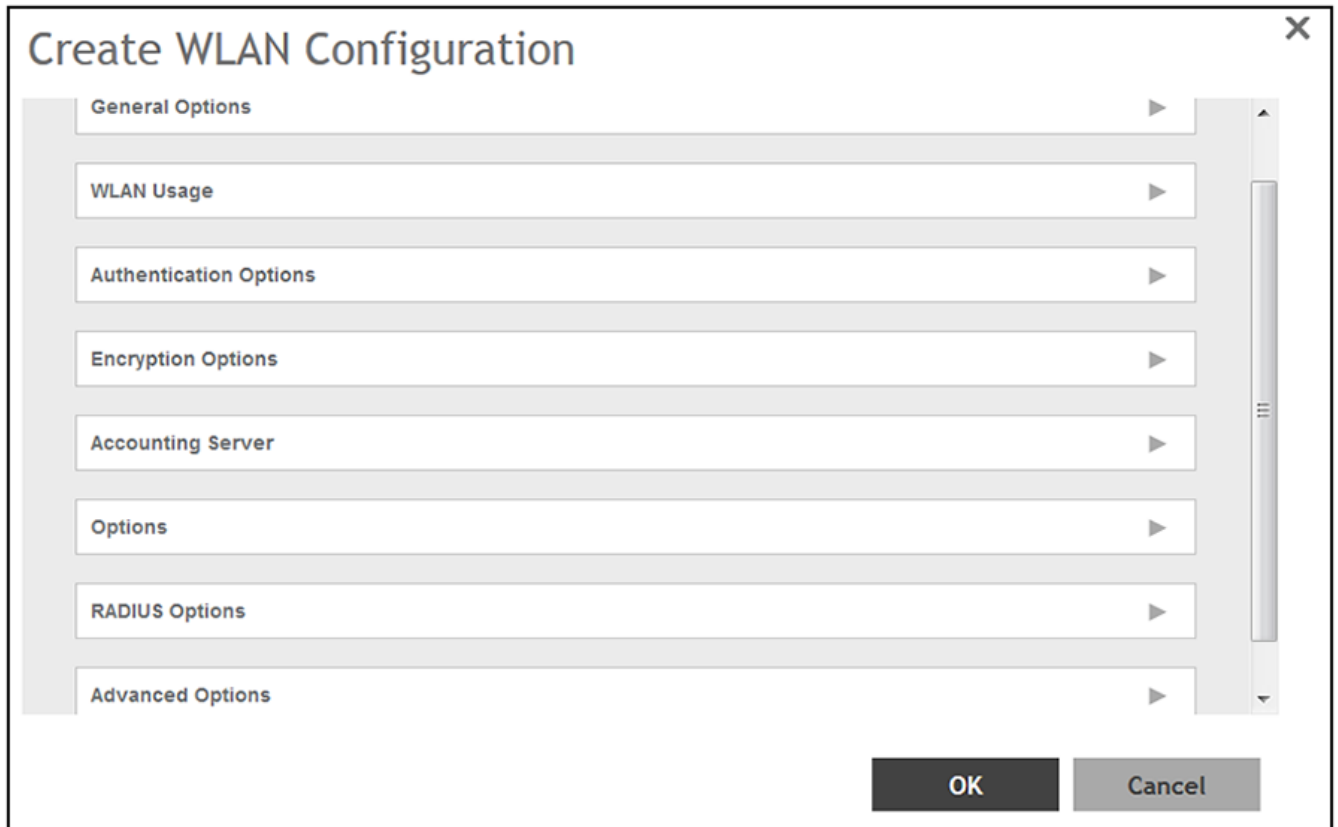

NOTE

Unless otherwise specified in the remaining steps, you do not have to change default values. The procedure described here is specific to Cloudpath; for information about any fields that are not described here, refer to your controller documentation.

- Complete the General Options section of the screen:

FIGURE 12 General Options Section of the Create WLAN Configuration Screen

The screenshot shows the 'General Options' section of the configuration screen. It contains the following fields and values:

- Name:** eng-PEAP
- SSID:** eng-PEAP
- Description:** Jeff AAA RADIUS server for PEAP
- Zone:** Z Default Zone
- WLAN Group:** default

A '+ Create' button is located at the bottom right of the section.

- Name: Enter a meaningful name for the PEAP WLAN you are creating.
 - SSID: When you click in this field, the name you entered above also appears in this field.
 - Description: You can enter a brief description to indicate that you are creating a RADIUS WLAN for PEAP.
 - Zone: From the drop-down list, select the zone in which the PEAP WLAN will reside. This can be the default zone.
- In the WLAN Usage section of the screen, use the default selection of Standard usage.

FIGURE 13 WLAN Usage section of the Create WLAN Configuration Screen

The screenshot shows the 'WLAN Usage' section. It includes the following options:

- Access Network:** Tunnel WLAN traffic through Ruckus GRE
- Authentication Type:**
 - Standard usage (For most regular wireless networks)
 - Hotspot (WISPr)
 - Guest Access
 - Web Authentication
 - Hotspot 2.0 Access
 - Hotspot 2.0 Secure Onboarding (OSEN)
 - WeChat

- In the Authentication Options section of the screen, select 802.1x EAP.

FIGURE 14 Authentication Options section of the Create WLAN Configuration Screen

The screenshot shows the 'Authentication Options' section. It contains the following option:

- Method:** Open 802.1x EAP MAC Address

- In the Encryptions Options section of the screen, you must select "WPA2," which displays the section as follows:

FIGURE 15 Encryption Options Section After Selecting WPA2 Method

The screenshot shows the 'Encryption Options' section of the configuration screen. It features a title bar with a dropdown arrow. Below the title bar, there are three rows of radio button options. The first row is labeled '* Method:' and includes 'WPA2' (selected), 'WPA-Mixed', 'WEP-64 (40 bits)', 'WEP-128 (104 bits)', and 'None'. The second row is labeled '* Algorithm:' and includes 'AES' (selected) and 'AUTO'. The third row is labeled '802.11r Fast Roaming:' and includes 'Enable 802.11r Fast BSS Transition'. Below this, there is another row labeled '* 802.11w MFP:' with 'Disabled' (selected), 'Capable', and 'Required'.

- Algorithm: Be sure that the default value of AES is selected.
 - 802.11w MFP: Be sure the default value of Disabled is selected.
- In the Authentication & Accounting Server section, select the authentication server that you configured in [Set up the AAA Authentication Server on the Ruckus SmartZone Controller](#) on page 13 from the drop-down list.

FIGURE 16 Authentication & Accounting Server Section of the Create WLAN Configuration Screen

The screenshot shows the 'Authentication & Accounting Server' section of the configuration screen. It features a title bar with a dropdown arrow. Below the title bar, there are two rows of configuration options. The first row is labeled '* Authentication Server:' and includes 'Use the Controller as Proxy', a dropdown menu with 'Jeff AAA Auth vSZ' selected, and a '+ Create' button. The second row is labeled 'Accounting Server:' and includes 'Use the Controller as Proxy', a dropdown menu with 'Disable' selected, and a '+ Create' button.

NOTE

Do not configure an accounting server for PEAP.

- In the Options section, you can use the default values, shown below:

FIGURE 17 Options Section of the Create WLAN Configuration Screen

The screenshot shows the 'Options' section of the configuration interface. It includes the following elements:

- Acct Delay Time:** A checkbox labeled 'Enable' which is currently unchecked.
- Wireless Client Isolation:** A radio button group with 'Disable' selected and 'Enable' unselected. A note in parentheses reads: '(Isolate wireless client traffic from all hosts on the same VLAN/subnet)'. Below this is a text input field for 'Isolation Whitelist' containing 'Gateway Only (Automatic)' and a '+ Create' button. A note below the field states: '(The whitelist requires entries for the subnet gateway and other allowed hosts.)' and a red note below that states: '(The whitelist can only contain wired destinations; wireless clients are not supported on the whitelist.)'
- Priority:** A radio button group with 'High' selected and 'Low' unselected.

- In the RADIUS Options section, you can use the default values, shown below:

FIGURE 18 RADIUS Options section

The screenshot shows the 'RADIUS Options' section of the configuration interface. It includes the following elements:

- NAS ID:** A radio button group with 'WLAN BSSID' selected, 'AP MAC' unselected, and 'User-defined:' followed by an empty text input field.
- Delimiter:** A radio button group with 'Dash' selected and 'Colon' unselected.
- NAS Request Timeout:** A text input field containing '3' followed by the label 'Seconds'.
- NAS Max Number of Retries:** A text input field containing '2' followed by the label 'Times'.
- NAS Reconnect Primary:** A text input field containing '5' followed by the label 'Minute (1-60)'.
- Called STA ID:** A radio button group with 'WLAN BSSID' selected, 'AP MAC' unselected, 'None' unselected, and 'AP GROUP' unselected.
- NAS IP:** A radio button group with 'Disabled' selected, 'SZ Control IP' unselected, and 'User-defined:' followed by an empty text input field.


- In the Advanced Options section, there are many fields (not shown here), but you can also use all the default values.

Configuring a PEAP WLAN on a Ruckus SmartZone Controller

12. Click **OK** to complete the PEAP Wireless LAN configuration.

Your newly created PEAP WLAN should now appear in the Wireless LANs List, "eng-PEAP" in this example:

FIGURE 19 Newly Created WLAN Appears in Wireless LANs List

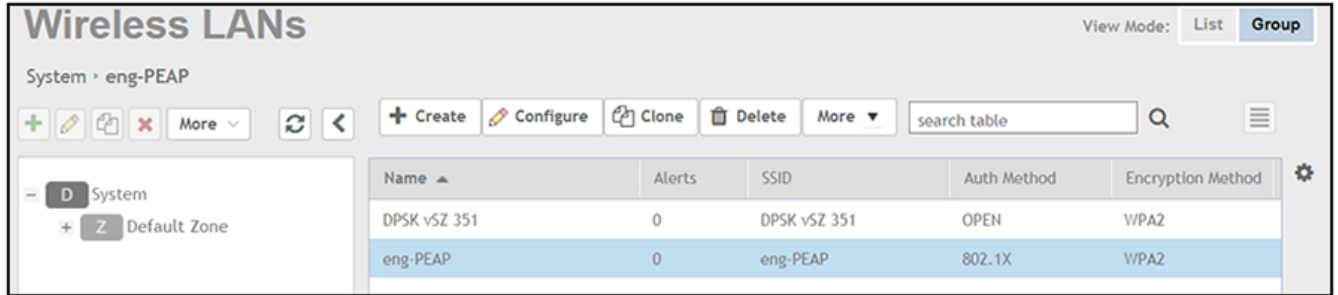

Name	Alerts	SSID	Auth Method	Encryption Method
DPSK vSZ 351	0	DPSK vSZ 351	OPEN	WPA2
eng-PEAP	0	eng-PEAP	802.1X	WPA2

To review the completed configuration or to make any configuration changes, click the **Configure** tab when the Wireless LAN is highlighted.

Proceed to [Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller](#) on page 27.

Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller

- [Adding a PEAP Branch to Your Workflow](#)..... 27
- [Adding a PEAP Device Configuration to Your Workflow](#)..... 30
- [Configuring Cloudpath to Communicate with the External RADIUS server](#)..... 32
- [Testing the PEAP User Experience](#)..... 34
- [Troubleshooting Tips](#)..... 36

Once you configure a PEAP WLAN on your controller, you need to add a corresponding PEAP configuration to a workflow on your Cloudpath system.

This procedure in this section includes steps for:

- [Adding a PEAP Branch to Your Workflow](#) (below)
- [Adding a PEAP Device Configuration to Your Workflow](#) on page 30
- [Configuring Cloudpath to Communicate with the External RADIUS server](#) on page 32
- [Testing the PEAP User Experience](#) on page 34
- [Troubleshooting Tips](#) on page 36

NOTE

The concept of workflows and how to create one is described in detail in the *Cloudpath Deployment Guide* and the *Cloudpath Quick Start Guide*. Therefore, the purpose of the procedure in this section is to demonstrate how to add a PEAP branch to an existing workflow. The same steps included below could also be used to create a new workflow with a PEAP plugin.

Adding a PEAP Branch to Your Workflow


1. Log in to the Cloudpath user interface.
2. Go to **Configuration > Workflows**.

Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller

Adding a PEAP Branch to Your Workflow

3. Click on a workflow to which you want to add a PEAP branch. An example of a very simple workflow before adding a PEAP branch is shown below:

FIGURE 20 Workflow Before Adding PEAP Branch

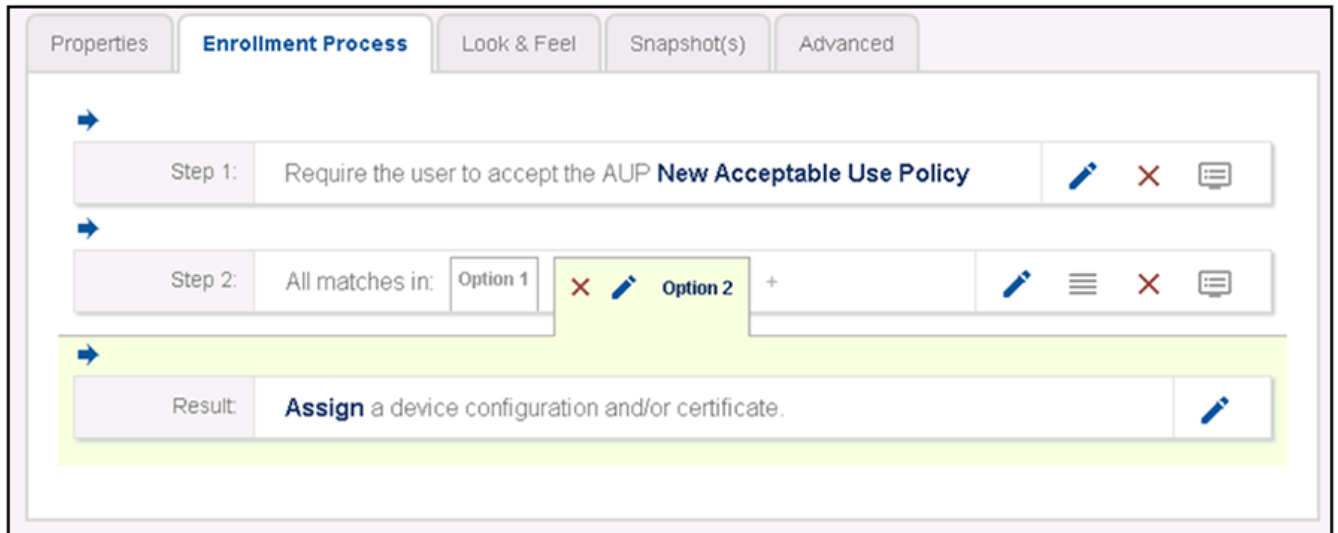

4. Click the + button to create a new branch in your workflow.

The Webpage Display Information screen is displayed, as shown below, and you add the necessary information.

FIGURE 21 Webpage Display Information Screen is Displayed When You Add a Branch to a Workflow

Webpage Display Information

Sample User Display:

Short Name

Display Title

This is the Display Text field, which may contain multiple lines of text to describe this option.

Short Name: PEAP

Display Title: PEAP

Display Text:

Enabled:

Icon File:

Default: Using default file. [↓](#)

Upload: No file chosen

Enter a Short Name and Display Title, and, optionally, Display Text, then click **Save**.


Configuring PEAP on Cloudpath to Integrate with the Ruckus Controller

Adding a PEAP Device Configuration to Your Workflow

5. On the next screen (**Configuration > Workflows > Modify Step**), click **Done**.

The PEAP tab has been added, as shown in the following screen.

FIGURE 22 Workflow After Adding Tab for PEAP

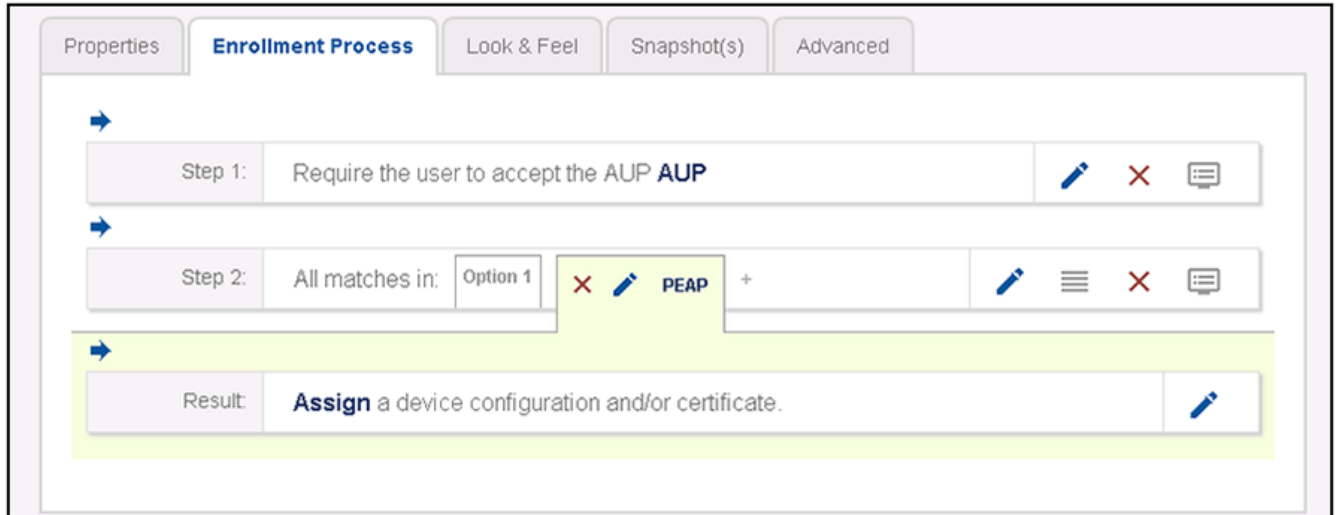


Adding a PEAP Device Configuration to Your Workflow

1. In the workflow, with the PEAP tab highlighted, click the pencil icon to the right of the Result line to "Assign a device configuration and/or certificate."

The following screen appears:

FIGURE 23 Device Configuration Selection Screen

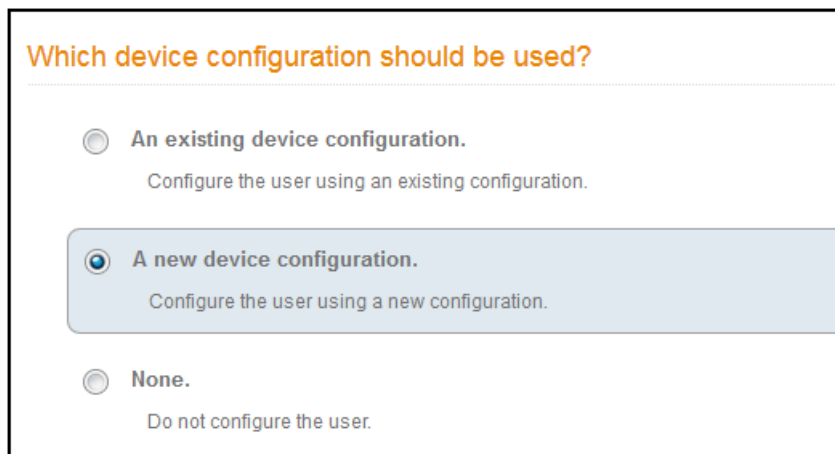

2. Select "A new device configuration," then click **Next**.

The Create Device Configuration screen is displayed. Enter a descriptive name. The name does not need to be the same as the SSID; however it can be, as shown below.

FIGURE 24 Create Device Configuration Screen

Create Device Configuration

Please provide a name and a description for this device configuration. This name is intended to be a human-readable name and does not need to be the SSID.

Display Name: *

Description:

Click **Next**.

3. The Connection Type screen is displayed; required fields are described below the screen:

FIGURE 25 Connection Type Screen

Connection Type

Select the connection method(s) this device configuration supports:

Wireless Connections

SSID: *

Authentication Style:

Is this SSID Broadcast?:

Wired 802.1X Connections


- The Wireless Connections button must be selected.
- SSID: This name must match the PEAP SSID exactly as you configured it on the controller:
 - For a Ruckus ZoneDirector controller, it is the name configured in [Figure 4](#) on page 17.
 - For a Ruckus SmartZone controller, it is the name configured in [Figure 12](#) on page 23.
- Authentication Style: Select Password (PEAP) from the drop-down list.
- Is this SSID Broadcast?: Leave the default value of Yes, the SSID is broadcast.

Click **Next**.

Configuring Cloudpath to Communicate with the External RADIUS server

1. For the screens you are presented with next, you can keep all the default values and continue to click **Next** to progress through the screens, until you get to the following screen:


FIGURE 26 RADIUS Server Information

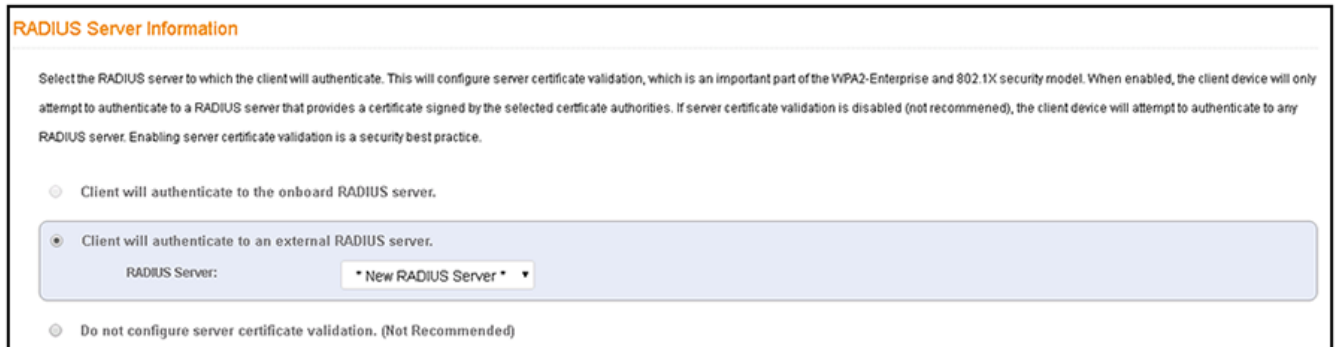

With the "Client will authenticate to an external RADIUS server" option selected, be sure that the RADIUS Server value is ***New RADIUS Server**, then, click **Next**.

2. On the screen that appears next (below), use the **Choose File** button to upload the root CA and any intermediates certificates to allow the Cloudpath system to communicate with the external RADIUS server. The following illustration is an example of the RADIUS Server Information screen after the root CA and its intermediate certificate have been uploaded.

FIGURE 27 RADIUS Server Information Screen After Uploading Certificates

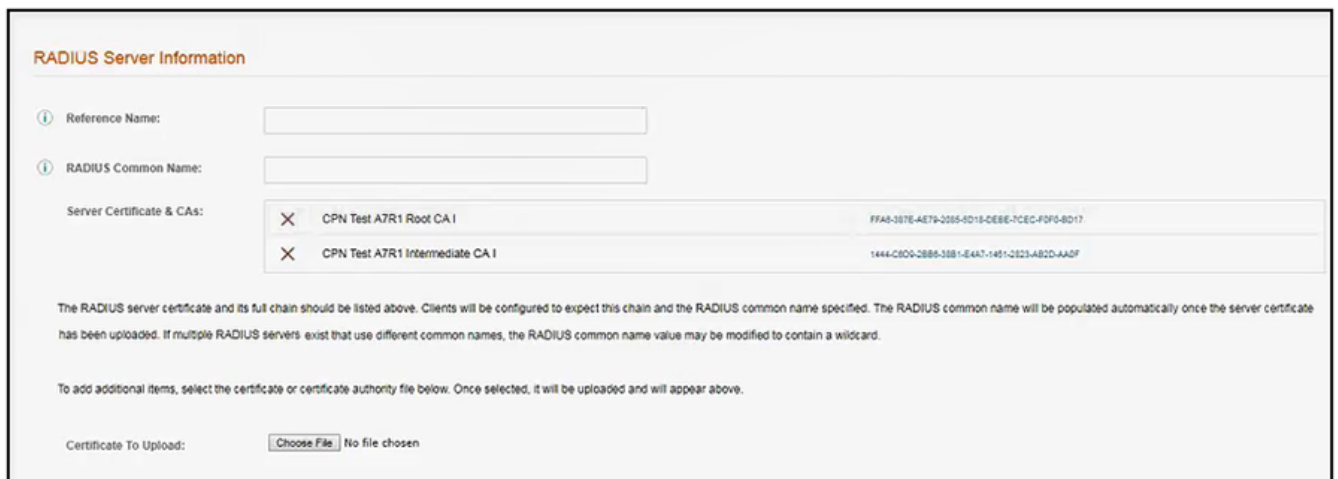


The Reference Name is an internal name (typically a name for the external RADIUS server) and is not obtained from the certificate, but the RADIUS Common Name is obtained from the certificate. Both these fields can be left blank if you wish. Click **Next**.

3. On the Additional Options screen, which is displayed next, leave the default values and click **Next**.

4. On the "What certificate template should issue the certificate?" screen, select "Do not issue a certificate to the user."


FIGURE 28 What certificate template should issue the certificate?

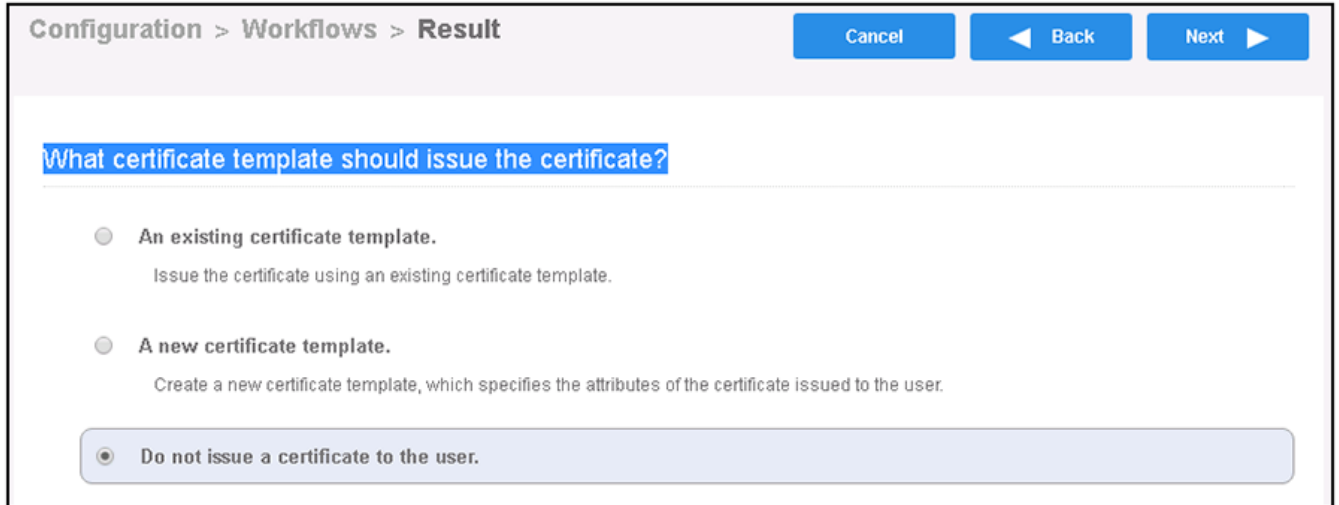

Click **Next**.

5. You are returned to the workflow. Make sure the Result step has been added successfully, as shown below:

FIGURE 29 Workflow After Completing the Device Configuration "Result"

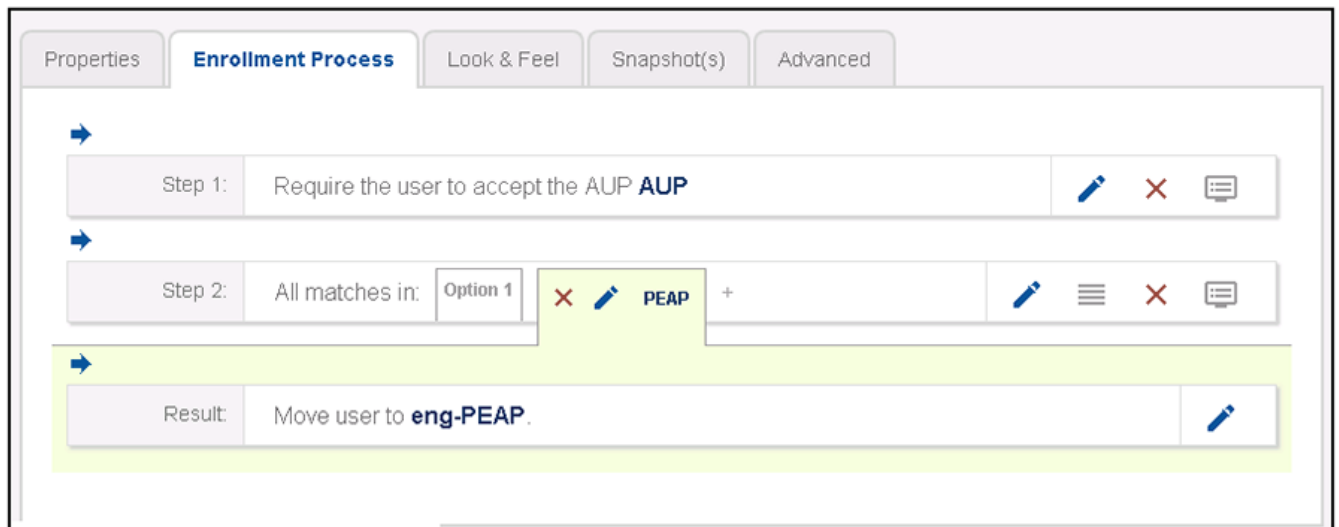

Publish the workflow by clicking the **Publish** icon to the left of the workflow name at the top of the **Configuration > Workflows** screen.

Testing the PEAP User Experience

1. Test the Enrollment process by clicking on the enrollment portal URL for the workflow at the top of the **Configuration > Workflows** screen.
2. When are you presented with the with the Welcome screen, click **Start**.
3. When you are presented with various branches of your workflow, click the "PEAP" branch:


FIGURE 30 Testing the Workflow - PEAP Branch



4. Follow any prompts to continue.

- The user is presented with a screen similar to the one shown in the following figure to enter username and password.

FIGURE 31 PEAP User Credentials Screen

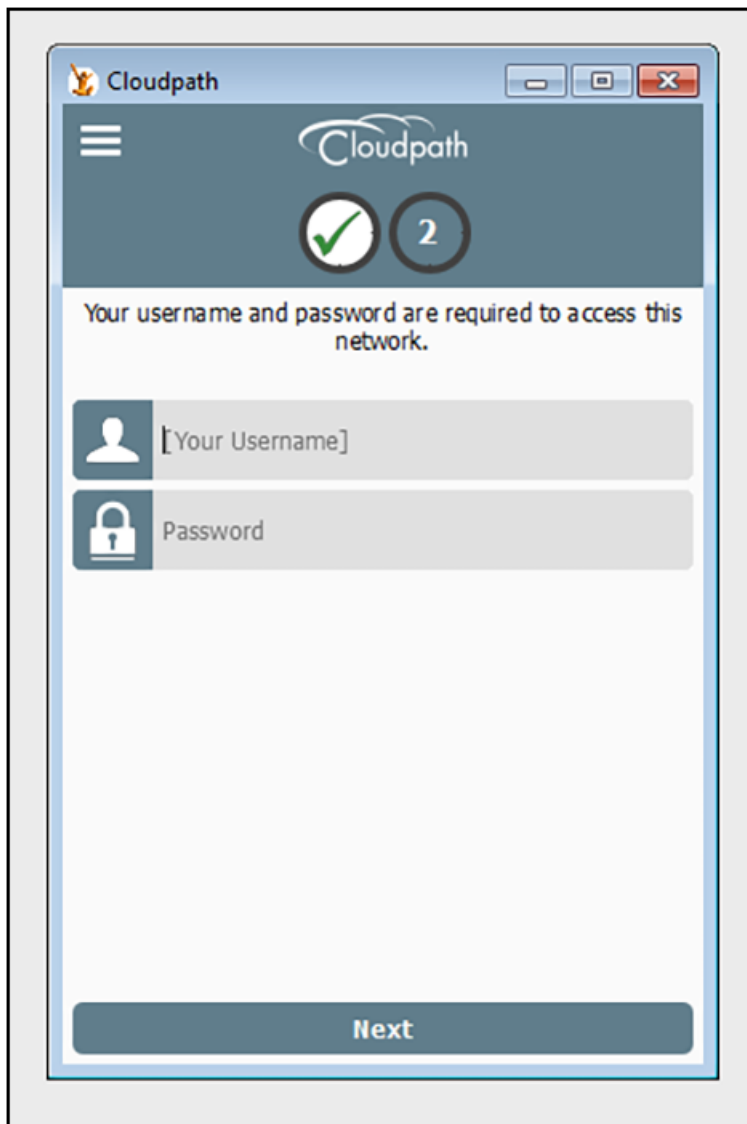

Enter the credentials for the external RADIUS server, then click **Next**.

- Proceed with the enrollment. If enrollment is successful, you will receive some status screens indicating the following status as the process is in progress:
 - "Configuring this device"
 - "Attempting to connect to the network"
 - "Congratulations! You are now connected to the network."

Troubleshooting Tips

If an error occurs during the workflow-publishing or enrollment process, check the following:

- Make sure that you have selected **Password (PEAP)** as the Authentication Style in the Cloudpath Connection Type screen.
- Make sure that you have added the correct Cloudpath PEAP SSID to the final result step in your workflow.
- Verify that the shared secret configured of your external RADIUS server matches the shared secret on the Create AAA Authentication Server configuration screen on your controller.
- Verify that the Cloudpath server can ping the external RADIUS server, and vice versa.
- Verify that you have the correct Root and any Intermediate CAs for the external RADIUS server.



© 2024 CommScope, Inc. All rights reserved.
350 West Java Dr., Sunnyvale, CA 94089 USA
<https://www.commscope.com>