CONFIGURATION GUIDE



# Cloudpath Enrollment System Integration with RUCKUS WLAN Controllers Configuration Guide, 5.9

**Supporting Cloudpath Software Release 5.9** 

## **Copyright, Trademark and Proprietary Rights Information**

#### © 2021 CommScope, Inc. All rights reserved.

No part of this content may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from CommScope, Inc. and/or its affiliates ("CommScope"). CommScope reserves the right to revise or change this content from time to time without obligation on the part of CommScope to provide notification of such revision or change.

### **Export Restrictions**

These products and associated technical data (in print or electronic form) may be subject to export control laws of the United States of America. It is your responsibility to determine the applicable regulations and to comply with them. The following notice is applicable for all products or technology subject to export control:

These items are controlled by the U.S. Government and authorized for export only to the country of ultimate destination for use by the ultimate consignee or end-user(s) herein identified. They may not be resold, transferred, or otherwise disposed of, to any other country or to any person other than the authorized ultimate consignee or end-user(s), either in their original form or after being incorporated into other items, without first obtaining approval from the U.S. government or as otherwise authorized by U.S. law and regulations.

### Disclaimer

THIS CONTENT AND ASSOCIATED PRODUCTS OR SERVICES ("MATERIALS"), ARE PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, COMMSCOPE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, NON-INFRINGEMENT, FREEDOM FROM COMPUTER VIRUS, AND WARRANTIES ARISING FROM COURSE OF DEALING OR COURSE OF PERFORMANCE. CommScope does not represent or warrant that the functions described or contained in the Materials will be uninterrupted or error-free, that defects will be corrected, or are free of viruses or other harmful components. CommScope does not make any warranties or representations regarding the use of the Materials in terms of their completeness, correctness, accuracy, adequacy, usefulness, timeliness, reliability or otherwise. As a condition of your use of the Materials, you warrant to CommScope that you will not make use thereof for any purpose that is unlawful or prohibited by their associated terms of use.

### **Limitation of Liability**

IN NO EVENT SHALL COMMSCOPE, COMMSCOPE AFFILIATES, OR THEIR OFFICERS, DIRECTORS, EMPLOYEES, AGENTS, SUPPLIERS, LICENSORS AND THIRD PARTY PARTNERS, BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER, EVEN IF COMMSCOPE HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER IN AN ACTION UNDER CONTRACT, TORT, OR ANY OTHER THEORY ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIALS. Because some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of liability for consequential or incidental damages, some of the above limitations may not apply to you.

### **Trademarks**

ARRIS, the ARRIS logo, COMMSCOPE, RUCKUS, RUCKUS WIRELESS, the Ruckus logo, the Big Dog design, BEAMFLEX, CHANNELFLY, FASTIRON, ICX, SMARTCELL and UNLEASHED are trademarks of CommScope, Inc. and/or its affiliates. Wi-Fi Alliance, Wi-Fi, the Wi-Fi logo, Wi-Fi Certified, the Wi-Fi CERTIFIED logo, Wi-Fi Protected Access, the Wi-Fi Protected Setup logo, Wi-Fi Protected Setup, Wi-Fi Multimedia and WPA2 and WMM are trademarks or registered trademarks of Wi-Fi Alliance. All other trademarks are the property of their respective owners.

# Contents

Configuring the Ruckus Wireless Controllers	4
Setting up Cloudpath as an AAA Authentication Server	4
Creating AAA Accounting Server (Optional)	
Running Authentication Test ZoneDirector SmartZone Unleashed	8
ZoneDirector	8
SmartZone	8
Unleashed	9
Possible Results from Authentication Test	9
Creating Hotspot Services	10
Setting Up the Walled Garden	. 15
Creating the Onboarding SSID	. 18
Enabling Bypass CNA on ZoneDirector	22
Enabling Bypass CNA on Unleashed	23
Creating the Secure SSID	. 23

## **Configuring the Ruckus Wireless Controllers**

This document describes how to configure the Ruckus ZoneDirector, SmartZone, and Unleashed controllers to integrate with the Cloudpath system, and includes the following steps:

- Set up Cloudpath as an AAA Authentication Server
- Create AAA Accounting Server (Optional)
- Create Hotspot Services
- Set Up the Walled Garden
- Create the Onboarding SSID
- Create the Secure SSID

#### NOTE

The screen shots and corresponding instructions in this manual are based on the following Ruckus Controller versions:

- ZoneDirector 10.1.1
- Virtual SmartZone 3.6.0 (High Scale)
- Unleashed 200.6

If you are using different versions of any controller, please consult your controller documentation because you may encounter some differences in the user interface.

## Setting up Cloudpath as an AAA Authentication Server

Create an AAA authentication server for the Cloudpath onboard RADIUS server. The following images show this configuration on the Ruckus ZoneDirector, SmartZone, and Unleashed controllers.

On ZoneDirector, go to Services & Profiles > AAA Servers. On SmartZone, go to Services & Profiles > Authentication. On Unleashed, go to Admin & Services > Services > AAA Servers > Authentication Servers.

FIGURE 1 Create AAA Authentication Server on ZoneDirector

Create New	
Name	R-AOnboard
Туре	Active Directory      LDAP      RADIUS      RADIUS Accounting      TACACS+
Encryption	□ TLS
Auth Method	• PAP S CHAP
Backup RADIUS	Enable Backup RADIUS support
IP Address*	192.168.5.73
Port*	1812
Shared Secret*	
Confirm Secret*	
Retry Policy	
Request Timeout*	3 seconds
Max Number of Retries*	2 times
	OK Cancel

FIGURE 2 Create AAA Authentication Server on SmartZone

General Options		V
<ul> <li>Name</li> <li>Description</li> </ul>		
Primary Server		$\nabla$
• IP Address:	72.18.151.56	
* Port:	1812	
Shared Secret:		
* Confirm Secret:		
User Role Mapping		⊳

FIGURE 3 Create AAA Authentication Server on Unleashed

Create New			
Name	Anna43Unleashed		
Туре	Active Directory	RADIUS  RADIUS Accounting	
Encryption	∎ TLS		
Auth Method	PAP O CHAP		
Backup RADIUS	Enable Backup RAD	IUS support	
IP Address*	192.168.5.43		
Port*	1812		
Shared Secret*	•••••		
Confirm Secret*			
Retry Policy			
Request Timeout*	3	seconds	
Max Number of Retries*	2	times	
			OK Cancel

Enter the following values for the Authentication Server:

- 1. Name
- 2. Type = RADIUS
- 3. Auth Method (not applicable for SmartZone) = PAP
- 4. IP address = The IP address of the Cloudpath ES.
- 5. Port = 1812
- 6. Shared Secret = This must match the shared secret for the Cloudpath ES onboard RADIUS server. (Configuration > RADIUS Server).
- 7. Leave the default values for the remaining fields.

## **Creating AAA Accounting Server (Optional)**

Use the same process to create the AAA Accounting Server.

#### NOTE

To navigate to the correct screen on Ruckus SmartZone, go to Services & Profiles > Accounting.

Enter the following values for the Accounting Server:

- 1. Name
- 2. Type = RADIUS ACCOUNTING.
- 3. IP address = The IP address of the Cloudpath ES.

4. Port = 1813

### NOTE

The Authentication server uses port 1812. The Accounting server uses port 1813.

- 5. Shared Secret = This must match the shared secret for the Cloudpath ES onboard RADIUS server. (Configuration > RADIUS Server)
- 6. Leave the default values for the remaining fields.

## **Running Authentication Test**

You can test the connection between the controller and the Cloudpath ES RADIUS server.

Follow the instructions for the applicable controller. For the possible results, see Possible Results from Authentication Test.

### ZoneDirector

At the bottom of the AAA server page, there is a section called "Test Authentication/Accounting Servers Settings." The Test Against field should be Local Database, as shown below. Enter a test User Name and Password, then click the **Test** button.

#### FIGURE 4 Authentication Test on ZoneDirector

Test Authentic	ation/Accounting Servers Set	gs	
You may test you the role.	r authentication server settings by	viding a user name and password here. Groups to which the user belongs will be returned and you can use	them to configure
Test Against Username	Local Database 🔻		
Password		Show Password	Test

### **SmartZone**

When you save a configuration for an AAA Authentication server in SmartZone, you can click the **Test AAA** tab at the top of the screen, select the server from the drop-down list, enter your credentials, then click the **Test** button.

FIGURE 5 Authentication Test on SmartZone

Test AAA	Servers		×
	Jeff AAA Auth vSZ  PAP CHAP bob Show password	▼ 	
	Test	Cancel	

### Unleashed

Enter the test credentials on the Test Authentication Servers Settings tab, then click the Test button.

FIGURE 6 Authentication Test on Unleashed

Maria and and and and and and and and and an					
			-	na passwora nere. G	roups to which the user
-	turned and you can us	e them to configu	ire the role.		
Test Against A	Anna43Unleashed	•			
User Name					
Password		Sho	w Password		

## **Possible Results from Authentication Test**

If you run the authentication test, you receive one of these responses:

- Failed! Connection timed out
- Failed! Invalid username and password

• Authentication Failed

The only one of these responses that means that connectivity was established is:

Failed! Invalid username or password

## **Creating Hotspot Services**

You can configure the Hotspot Service on the ZoneDirector, SmartZone, or Unleashed controllers.

 Navigate to: For ZoneDirector, go to Services & Profiles > Hotspot Services. For SmartZone, go to Services & Profiles > Hotspots & Portals > Hotspot WISPr. For Unleashed, go to Admin & Services > Services > Hotspot Services, then use both the General tab and the Authentication tab, as instructed later in this section.

#### 2. Name the Hotspot Service.

FIGURE 7 Create Hotspot Service on ZoneDirector

reate New					
Name	Lab Hotspot Services				
Redirection					
WISPr Smart Client Support	None      Denabled      Only WISPr Smart Client allowed				
Login Page*	Redirect unauthenticated user to				
	https://training.cloudpath.net/e_for authentication.				
Start Page	After user is authenticated,				
	redirect to the URL that the user intends to visit.				
	or redirect to the following URL:				
User Session					
Session Timeout	Terminate user session after 1440 minutes				
Srace Period	Allow users to reconnect without re-authentication for				
Authentication/Accounting Serve	rs				
Authentication Server	Jeff AAA Auth				
	g Enable MAC authentication bypass(no redirection).				
	Use device MAC address as authentication password.				
	Use as authentication password.				
	MAC Address Format AA 8B CC DD EE FF +				
Accounting Server	Jeff AAA acct * Send Interim-Update every 5 minutes				
Wireless Client Isolation					
	Isolate wireless client traffic from other clients on the same AP.				
	Isolate wireless client traffic from all hosts on the same VLAN/subnet.				
	No WhiteList *				
	(Requires whitelist for gateway and other allowed hosts.)				
E Location Information					
Walled Garden					
Restricted Subnet Access					
Advanced Options					
Diversition obnores					

FIGURE 8 Create Hotspot WISPr on SmartZone

General Options			V
Portal Name:	Lab Hotspot Services	]	
Portal Description:		]	
Redirection			
Smart Client Support	rt:   None  Enable  Only Smar	t Client Allowed	
Logon UR	I.: 🔵 Internal 🛞 External		
	* Redirect unauthenticated user to	the URL for authentication: https://training.cloudpath.net/enroll/TrainingTest/Produc	
* Redirected MAC Forma	at: AA:88:CC:DD:EE:FF 🛛 🔻		
Start Pag	After user is authenticated,		
	Kedirect to the UKL that user int	ends to visit. O Redirect to the following URL:	
	- 1. 		
HTTPS Redired	t: 🕑 if enabled, the AP will try to red	irect HTTPS requests to the hotspot portal	
User Session			V
* Session Timeout:	1440 Minutes (2-14400)		
• Grace Period:	60 Minutes (1-14399)		
Location Information			w.
Location ID:		(example: isocc=us,cc=1,ac=408,network=ACMEWISP_NewarkAirport)	
Location Name:		(example: ACMEWISP,Gate_14_Terminal_C_of_Newark_Airport)	
Walled Garden			►

FIGURE 9 Create Hotspot Service on Unleashed - General Tab

eneral	Authentication	WalledGarden Policy	
	N	lame Anna43HS	
Redire	ction		
WISP	Smart Client Su	pport   None  Enabled  Only WISPr Smart Client allowed	
	Login	Page Redirect unauthenticated user to https://anna43.cloudpath.net/e for authenticated	tion.
	Start	Page After user is authenticated,	
		<ul> <li>redirect to the URL that the user intends to visit.</li> </ul>	
		redirect to the following URL:	
User S	ession		
	Session Tir	neout (Requires whitelist for gateway and other allowed hosts.)	
		Terminate user session after 1440 minutes	
	Grace F	Period Allow users to reconnect without re-authentication for 30 minutes	
	Intrusion Preve	ention 🕑 Temporarily block Hotspot clients with repeated authentication attempts.	

#### FIGURE 10 Create Hotspot Service on Unleashed - Authentication Tab

	Anna43Unleashed	•	Create New	
	Enable MAC auther	ntication by	pass(no redirection).	
	Use device MAC a	ddress as a	uthentication passwo	rd.
	O Use		as authenticat	tion password.
	MAC Address Format	100.00.0	CC:DD:EE:FF	]
Accounting Server	Anna43UnleashedA0	CCT 🔹	Create New	
	Send Interim-Update e	every 10	minutes	
Wireless Client Isolation			om other clients on the	
	- isolato miloloss cit	sine traine ine		
	No WhiteList	•	Create New	
	No WhiteList (Requires whitelist for ga			
Location Information				
Location Information	(Requires whitelist for ga	ateway and o	other allowed hosts.)	408,network=ACMEWISP_NewarkAirport)

- Point the unauthenticated user to the Cloudpath Enrollment Portal URL, which can be found on the Cloudpath Admin UI Configuration > Workflows page, in the Workflows table.
- 4. Check Redirect to the URL that the user intends to visit.
- 5. Select the Cloudpath RADIUS Authentication Server. Applicable only for ZoneDirector and Unleashed (Authentication tab) in this screen.
- 6. Select **Enable MAC authentication bypass (no redirection)**. Applicable only for ZoneDirector and Unleashed (**Authentication** tab) in this screen. Selecting this field allows users with registered MAC addresses to be transparently authorized without having to log in.
- 7. For MAC Address Format (which appears when you select **Enable MAC authentication bypass (no redirection)** in the preceding step, it is recommended that you select the following option from the drop-down list: AA:BB:CC:DD:EE:FF
- 8. Select the Cloudpath RADIUS Accounting Server. Applicable only for ZoneDirector and Unleashed (Authentication tab).
- 9. Leave the defaults for the remaining settings. Click **OK**.

## **Setting Up the Walled Garden**

Perform the following steps to add a walled garden configuration to your existing Hotspot Services configuration:

 Navigate to: For ZoneDirector, go to Services & Profiles > Hotspot Services. For SmartZone, go to Services & Profiles > Hotspots & Portals > Hotspot WISPr. For Unleashed, go to Admin & Services > Services > Hotspot Services. 2. For ZoneDirector and SmartZone, use the **edit** function on the existing Hotspot Services configuration, then scroll to the **Walled Garden** section and expand this section. For Unleashed, click the **WalledGarden** on the existing Hotspot Services configuration.

#### FIGURE 11 Walled Garden Configuration for ZoneDirector

	Unauthenticated users are allowed to access the following de (e.g. *.mydomain.com,mydomain.com, *.mydomain.*,192.168					1/24 or 192.168.1.1:80/24)	
	Order Destination Address		Action				
		1	72.18.151.76	Edit Clone			
	C	reate Ne	w Delete				
Restricted Subnet Access							
Advanced Options							
						ок	Cancel

#### FIGURE 12 Walled Garden Configuration for SmartZone

Walled Garden:	* Walled Garden Entry	+ Add Import CSV V X Cancel 1 Delete
	Walled Garden Entry	
	72.18.151.76	
	Unauthenticated users are allowed to access to Format: - IP (e.g. 10.11.12.13) - IP Range (e.g. 10.11.12.13-10.11.12.15) - CIDR (e.g. 10.11.12.100/28) - IP and mask (e.g. 10.11.12.13 255.255.255.0 - Precise web site (e.g. www.ruckus.com) - Web site with special regular expression like - *.amazon.com - *.com	.0)

FIGURE 13 Walled Garden Configuration for Unleashed

dit				
General	Authentication	WalledGarden	Policy	
			ss the following destinatio main.*,192.168.1.1:80, 192.	<b>15:</b> 168.1.1/24 or 192.168.1.1:80/24)
0	Order	Destination Ad	dress	Action
	1 •	192.168.5.42		Save Cancel

- 3. Include the DNS or IP address of the Cloudpath system, then click **OK**.
- 4. Optionally, there are some domains that you can add to the walled garden on all controllers to:
  - Prevent the Apple CNA mini-browser from appearing on Apple devices.
  - Avoid being blocked or slowed when attempting to download the Cloudpath wizard.

#### NOTE

There will still be about a 15-to-20-second delay when the full application is 33 percent complete (about 40 MB) in its download.

The recommended destinations to add for the walled garden are:

```
*.ggpht.com
*.play.googleapis.com
*.googleapis.com
android.clients.google.com
*.gvtl.com
connectivitycheck.android.com
connectivitycheck.google.com
*.gstatic.com
*.clients3.google.com
*.thawte.com
```

### NOTE

The \*thawte.com destination is the OCSP URL of the SSL certificate of the Cloudpath server. This URL can be found by clicking the *lock* icon in your web browser and viewing the details of your certificate.

- 5. If you are still experiencing issues, you can try adding the following destinations to the walled garden:
  - \*.clients.google.com
    \*.l.google.com
    \*.googleusercontent.com
    \*.appengine.google.com
    \*.cloud.google.com
    \*.android.com
    \*.cloudfront.net
    \*.akamaihd.net
    172.217.0.0/16
    216.58.0.0/16

## **Creating the Onboarding SSID**

To configure the onboarding SSID, navigate to: For ZoneDirector and SmartZone, go to the Wireless LANS section of the controller UI; for Unleashed, go to Wifi Networks to create the WLAN.

1. Name the SSID.

### 2. Type=Hotspot Service (WISPr).

FIGURE 14 Onboarding SSID Configuration on ZoneDirector

eate WLAN		
General Options		•
"Name: "ESSID: Description:	Lab Onboard SSID Lab Onboard SSID	
WLAN Usages		•
	Standard Usage (for most regular wireless network usages.) Guest Access (Quest access policies and access control will be applied.) Hotspot Service (WISPr) Hotspot 2.0 Autonomous Social Media WeChat	
Authentication Options		•
	Open      B02.1x EAP MAC Address     B02.1x EAP + MAC Address     Enable 802.11r FT Roaming (Recommended to enable 802.11k Neighbor-list Report for assistant.)	
Encryption Options		•
Method:	○ WPA2 ○ WPA-Mixed ○ WEP-64 (40 bit) ○ WEP-128 (104 bit) ④ None	
Options		•
Hotspot Services: Priority:	Lab Hotspot Services  Create New High O Low	
Advanced Options		×
		OK Cano

FIGURE 15 Onboarding SSID Configuration on SmartZone

General Options		v
- Name:	Lub Onboard \$50	
* 550:	Leb Onboard SSD	
Description:		
* Zone:	E Defait *	
* WLAN Group:	Selfault   Create  Create	
Authentication Options		v
Authentication Type:	Standard usage (For most regular (#KSPr) Guest Access (Web Authentication	
	wireless networks)  Hotspot 2.0 Access  Hotspot 2.0  WeChet	
	Orbowding	
	Open O KOLIKEAP @ HACASSPES O RECITIONC	
	Use user-defined text as authentication password (default is device MAC address):	
* MAC Address Format:	AUBLICCOULDIN .	
Encryption Options		v
• Method:	○ 14942 · ○ 1494-Mixed · ○ 1499-64 (40 bits) · ○ 1489-128 (104 bits) · ⑧ Nove	
Data Plane Options		
Access Netwo	h: 🗌 Tunnel WLAN traffic through Ruckus CRE	
Hotspot Portal		v
* Hotspot (HISPy) Port	At Lub Hotpot Services • + Create	
	ik: 🛛 Datile	
	July AAA, Augh v52 T I Creater	
	ac Use the controller as prov	
Accounting service		
	Juff AAA Acct vi2	
Options		v
Acct Delay Time	: 🗌 Erable	
• Wireless Client Isolation	C Disable 🛞 Enable (bolate vireless client traffic from all hosts on the same VLAN subnet)	
Isolation Whitelist	: [Gate-my Only (Automatic)	
	(The whitefult requires entries for the subnet geteway and other allowed hosts.) (The whitefult can only contain wired destinations: wireless clients are not supported on the whitefult.)	
* Priority	® High ⊖Low	
		Þ
RADIUS Options		
RADIUS Options		

FIGURE 16 Onboarding SSID Configuration for Unleashed

Create WLAN		×
* Name:	Anna43UnleashedOB	
Usage Type:	Standard for most regular wireless network usage	
	<ul> <li>Guest Access guest access policies and access control will be applied</li> </ul>	
	Hotspot Service known as WISPr	
	Social Media authenticate through social media network	
	WeChat	
Hotspot Services:	Anna43HS   Create New	
Show Advanced Options ▶	OK Cancel	

- 3. Authentication Options Method=Open for ZoneDirector, MAC Address for SmartZone. (Not applicable for Unleashed.)
- 4. The checkbox next to MAC Authentication (SmartZone only) called "Use user defined text as authentication password (default is device MAC address):" can be left unchecked.
- 5. The MAC Address Format (SmartZone only) recommended selection is: AA:BB:CC:DD:EE:FF. This is the default for most RADIUS servers.
- 6. Encryption Options Method=None (ZoneDirector and SmartZone).
- 7. Select the Hotspot Service from the drop-down list that you should already have created in a previous step procedure.
- 8. Enable the Bypass CNA feature as follows, depending on the controller:
  - For SmartZone: Check the box to enable "Bypass CNA," as shown in Figure 15.
  - For ZoneDirector, after you finish configuring the onboarding SSID, refer to Figure 17 on page 22.
  - For Unleashed, after you finish configuring the onboarding SSID, refer to Figure 19 on page 23.
- 9. Select the Cloudpath RADIUS Authentication Server (SmartZone only).
- 10. Select the Cloudpath RADIUS Accounting Server (SmartZone only).
- 11. Leave the defaults for the remaining settings and click OK (or Apply).

## **Enabling Bypass CNA on ZoneDirector**

It is recommended to enable the "Bypass Apple CNA Feature," which you can do globally for wireless LANs in ZoneDirector.

1. In the Wireless LANs main screen, click on Bypass Apple CNA Feature, as shown in the following figure:

FIGURE 17 Enabling the Bypass Apple CNA Feature Globally on ZoneDirector

/ C ×	с <	+ Create & Edit C	lone 🗍 🗇 Delete	S	Search	Q	C
System		Name	ESSID	Authentication	Encryption	Status	
WG Default		Lab Onboard SSID	Lab Onboard SSID	open	none	Enabled	
		HQ1-Jeff	HQ1-Jeff	802.1x-eap	wpa2	Enabled	
		dpsk test	dpsk test	open	wpa2	Enabled	
		eng-PEAP	eng-PEAP	802.1x-eap	wpa2	Enabled	
		Jeff PSK	Jeff PSK	open	wpa2	Enabled	
		Lab Secure SSID	Lab Secure SSID	802.1x-eap	wpa2	Enabled	
1/AN Pooling Zero-IT	Activation	Lab Secure SSID	Lab Secure SSID Bypass Apple CNA Feature	802.1x-eap Web Portal Logo	1-6 of (	6 shown	1
/LAN Pooling Zero-IT. Bypass Apple CNA					1-6 of (	6 shown	1

- 2. In the "Bypass Apple CNA Feature" area of the screen, check the "Hotspot service" box.
- 3. Click Apply to enable the "Bypass Apple CNA Feature" globally on all Wireless LANs that are configured as type "Hotspot Service (WISPr)."

## **Enabling Bypass CNA on Unleashed**

It is recommended to enable the "Bypass Apple CNA Feature," which you can do globally for wireless LANs in Unleashed.

1. In the WiFi Networks main screen (see figure below), click Edit.

FIGURE 18 Clicking the Edit Button Brings you to Global Configuration

	VVI	FI I	letwo	Orks	Traffic: 0.00 MB	Total 6 Working 6	Disabled 0	
Create		4	Edit	Disable	Delete	Data duratio	n 1 hour	*
Sum	mar	y - 1	Fotal 6	WiFi Networ	ks	Summary		
1		0 ents	0	Traffic		6 WiFi Network(s) enabled, 0 WiFi Network(s) disabled.		

2. In the Global Configuration screen that pops up, click Bypass Apple CNA Feature.

FIGURE 19 Enabling the Bypass Apple CNA Feature Globally on Unleashed

Zero-IT Activation	Bypass Apple CNA Feature	Default Web Portal Logo	Users		
iDevices and OS				ptive Network Assistance (CNA) on nat	

- 3. In the "Bypass Apple CNA Feature" area of the screen, check the "Hotspot service" box.
- 4. Click Apply to enable the "Bypass Apple CNA Feature" globally on all Wireless LANs that are configured as type "Hotspot Service (WISPr)."

## **Creating the Secure SSID**

To configure the onboarding SSID, navigate to: For ZoneDirector and SmartZone, go to the Wireless LANS section of the controller UI; for Unleashed, go to Wifi Networks to create the WLAN.

1. Name the SSID.

- 2. Type=Standard Usage.
- 3. Authentication Option Method=802.1x EAP.
- 4. Encryption Option Method=WPA2 (not applicable for Unleashed once the 802.1x EAP authentication option method is selected).
- 5. Encryption Option Algorithm=AES (not applicable for Unleashed once the 802.1x EAP authentication option method is selected).
- 6. Select the Cloudpath RADIUS authentication server.
- 7. Select the Cloudpath RADIUS accounting server (required only if you are using Cloudpath onboard RADIUS Accounting and Connection Tracking). **Note**: For ZoneDirector, you need to expand the Advanced Options section of the screen to locate the drop-down selection for the accounting server.

8. Leave the defaults for the remaining settings and click **OK**.

FIGURE 20 Configure Secure SSID on the ZoneDirector controller

General Options		•
Name:	Lab Secure SSID	
*E550:	Lab Secure SSID	
Description:		
WLAN Usages		-
Type:	s Standard Usage (for not replin environ return usages.)	
	Ouest Access (Svent access policies and access control will be applied.)	
	() Hotspot Service (WISPr)	
	() Hotspot 2.0	
	G Autonomous	
	G Social Media	
	O WeChat	
Authentication Options		
Audienaulauon Opuona		
Method:	○ Open ★ 802.1x EAP ○ MAC Address ○ 802.1x EAP + MAC Address	
Fast BSS Transition:	Enable 802.11r FT Roaming (Recommended to enable (02.11k heightion dist Report for associant.)	
Encryption Options		-
Network	# WPA2 🕓 WPA-Mixed 🕓 WEP-64 (40 bit) 🕢 WEP-128 (104 bit) 💭 None	
	AES () Auto (TOP+AES)	
802.11w MFP:	Bisabled      Optional      Required	
Options		•
Authentication Server:	Jeff AAA, Auth	
Wireless Client Isolation:	Isolate wireless client traffic from other clients on the same AP.	
	Isolate wireless client traffic from all hosts on the same VLANIsubnet.	
	No WhiteList * Create New	
	(Regime added for pleasy and other blood hole)	
Name of Astronomics, No.	Enable Zero-(T Activation	
Error Factivation -	Emailed Letter ( Acceleration     (MUAN uses are provided with wreaks configuration installer after they log in.)	
Priority:	⊛ High ⊖ Low	
Advanced Options		•

FIGURE 21 Select RADIUS Accounting Server on ZoneDirector

Advanced Options		• 1
Accounting Server:	Jeff AAA acct  Create New Send Interim-Update every 10 minutes	
Access Control:	L2/MAC No ACLs  Create New	
	L3/4/IP address No ACLs V Create New	
	Device Policy None   Create New Precedence Policy Default   Create New	
	Enable Role based Access Control Policy	
Application Recognition & Control:	Enable	
Call Admission Control:	Enforce CAC on this WLAN when CAC is enabled on the radio	
Rate Limiting:	Per Station Uplink Disabled + Per Station Downlink Disabled +	
SSID Rate Limiting:	UpLink 🔲 Enable 0 mbps (0.1~200)	
	DownLink Enable 0 mbps (0.1~200)	
	Per STA rate limiting will not work if SSID rate limiting is enabled.	
	ок	Cancel
	ок	Cancel

FIGURE 22 Configure Secure SSID on the SmartZone controller

General Options		¥
* Name:	Lab Secure SSD	
	Lab Secure SSD	
Description:		
	Confault •	
* WLAN Group:		
mour oraqe. (	Orfault • + Create	
Authentication Options		v
	Standard usage (for most regular O Hotspot (HISPs) O Guest Access O Web Authentication     whinks networks)     Hotspot 2.0 O WeDwt	
* Hethod: (	Orocarding Open (# 602.11 EAP ) Heck Address ) 602.11 B Heck	
Encryption Options		v
Method:	EVER OWEAMAND OVER-RELEASED OVER OTHER OWEAMAND	
* Algorithm:	€ MS ⊖ AUTO	
802.11r Fast Reaming: (	Crable 802.11r Fast 855 Transition	
* 802.11w APP: (	Chabled @ Capable C Required	
Data Plane Options		٧
Access Network	C Trannel WLAN traffic through Ruckus GRE	
Authentication & Accourt	nting Service	v
• III Authentication Service	Oue the controller as provy	
11 manufacture of the		
	Artf AAA, Auth vS2	
Accounting Service	C Due the controller as provy	
	Jeff A&A April v52	
Options		
		*
Acct Delay Time:		
* Wireless Client Isolation:	O Diable (Enable (solute =freless client traffic from all hosts on the same VLAN subnet)	
	Category Only (InstrumEr)         • ] + Create           (The whiteling matter extrins for the subnet generity and there allow in total)         (The whiteling contain wired destinations, wireless clients are not supported on the whiteling)           (The whiteling contain wired destinations, wireless clients are not supported on the whiteling)         (The whiteling contain wired destinations, wireless clients are not supported on the whiteling)	
RADIUS Options		Þ
Advanced Options		
Prove and Cod Uppoons		- P

FIGURE 23 Configure Secure SSID on the Unleashed controller

Create WLAN				×
* Name: Usage Type:	Anna43UnleashedSecure     Standard for most regular wirel     Guest Access guest access po     Hotspot Service known as WIS     Social Media authenticate thro     WeChat	olicies and access SPr	control will be applied	
Authentication Method: Authentication Server: Accounting Server	<ul> <li>Open          <ul> <li>802.1X EAP MA</li> <li>Anna43Unleashed</li> <li>Anna43UnleashedACCT</li> <li>Send Interim-Update every 10</li> </ul> </li> </ul>	AC Address Create New Create New minutes		
Show Advanced Options ▶			ОК	Cancel

The SSIDs are now configured on the wireless LAN controller. When the user connects to the onboarding (open) SSID they are redirected to the Cloudpath web page. When the user successfully completes the enrollment process, they are migrated to the secure SSID.



© 2021 CommScope, Inc. All rights reserved. 350 West Java Dr., Sunnyvale, CA 94089 USA https://www.commscope.com