

RUCKUS Unleashed 200.12 User Guide

Supporting Release 200.12

Copyright, Trademark and Proprietary Rights Information

© 2022 CommScope, Inc. All rights reserved.

No part of this content may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from CommScope, Inc. and/or its affiliates ("CommScope"). CommScope reserves the right to revise or change this content from time to time without obligation on the part of CommScope to provide notification of such revision or change.

Export Restrictions

These products and associated technical data (in print or electronic form) may be subject to export control laws of the United States of America. It is your responsibility to determine the applicable regulations and to comply with them. The following notice is applicable for all products or technology subject to export control:

These items are controlled by the U.S. Government and authorized for export only to the country of ultimate destination for use by the ultimate consignee or end-user(s) herein identified. They may not be resold, transferred, or otherwise disposed of, to any other country or to any person other than the authorized ultimate consignee or end-user(s), either in their original form or after being incorporated into other items, without first obtaining approval from the U.S. government or as otherwise authorized by U.S. law and regulations.

Disclaimer

THIS CONTENT AND ASSOCIATED PRODUCTS OR SERVICES ("MATERIALS"), ARE PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, COMMSCOPE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, NON-INFRINGEMENT, FREEDOM FROM COMPUTER VIRUS, AND WARRANTIES ARISING FROM COURSE OF DEALING OR COURSE OF PERFORMANCE. CommScope does not represent or warrant that the functions described or contained in the Materials will be uninterrupted or error-free, that defects will be corrected, or are free of viruses or other harmful components. CommScope does not make any warranties or representations regarding the use of the Materials in terms of their completeness, correctness, accuracy, adequacy, usefulness, timeliness, reliability or otherwise. As a condition of your use of the Materials, you warrant to CommScope that you will not make use thereof for any purpose that is unlawful or prohibited by their associated terms of use.

Limitation of Liability

IN NO EVENT SHALL COMMSCOPE, COMMSCOPE AFFILIATES, OR THEIR OFFICERS, DIRECTORS, EMPLOYEES, AGENTS, SUPPLIERS, LICENSORS AND THIRD PARTY PARTNERS, BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER, EVEN IF COMMSCOPE HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER IN AN ACTION UNDER CONTRACT, TORT, OR ANY OTHER THEORY ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIALS. Because some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of liability for consequential or incidental damages, some of the above limitations may not apply to you.

Trademarks

ARRIS, the ARRIS logo, COMMSCOPE, RUCKUS, RUCKUS WIRELESS, the Ruckus logo, the Big Dog design, BEAMFLEX, CHANNELFLY, FASTIRON, ICX, SMARTCELL and UNLEASHED are trademarks of CommScope, Inc. and/or its affiliates. Wi-Fi Alliance, Wi-Fi, the Wi-Fi logo, Wi-Fi Certified, the Wi-Fi CERTIFIED logo, Wi-Fi Protected Access, the Wi-Fi Protected Setup logo, Wi-Fi Protected Setup, Wi-Fi Multimedia and WPA2 and WMM are trademarks or registered trademarks of Wi-Fi Alliance. All other trademarks are the property of their respective owners.

Contents

Preface.....	9
Contacting RUCKUS Customer Services and Support.....	9
What Support Do I Need?.....	9
Open a Case.....	9
Self-Service Resources.....	10
Document Feedback.....	10
RUCKUS Product Documentation Resources.....	10
Online Training Resources.....	10
Document Conventions.....	11
Notes, Cautions, and Safety Warnings.....	11
Command Syntax Conventions.....	11
About This Guide.....	13
New in This Document.....	13
Introducing RUCKUS Unleashed.....	15
Introducing the Ruckus Unleashed Platform.....	15
Unleashed Network Overview.....	15
Unleashed Feature Parity with ZoneDirector.....	16
Unleashed Limitations and Deviations from ZoneDirector.....	17
Unleashed-Only Features.....	18
Unleashed Access Point Physical Features.....	18
C110.....	18
E510.....	23
H320.....	27
H350.....	32
H510.....	36
H550.....	41
M510.....	45
R320.....	53
R350.....	58
R510.....	62
R550.....	66
R610.....	71
R650.....	75
R710.....	79
R720.....	83
R750.....	88
R850.....	92
T310 Family.....	96
T350 Family.....	100
T350SE.....	105
T610 and T610s.....	109
T710 and T710s.....	114
T750.....	118
T750SE.....	122
Setting Up an Unleashed Wi-Fi Network.....	129

Overview of the Setup Process.....	129
Step 1: Unpack and Install the Unleashed Master AP.....	130
Step 2: Configure Your Unleashed Network.....	130
Step 2a: Setup Using the Mobile App.....	130
Step 2b: Setup Using a Web Browser.....	135
Step 2c: Setup Using the Command Line Interface.....	150
Step 3: Customize Your Wireless LANs.....	153
Step 4: Deploy Additional Unleashed Member Access Points.....	155
Using the Admin Interface.....	157
Unleashed Administration Interface Overview.....	157
Navigating the Dashboard.....	157
Using the Dashboard Components.....	158
Internet.....	158
WiFi Networks.....	158
Clients.....	159
Access Points.....	160
Switches.....	161
Admin & Services.....	162
WLAN Configuration.....	165
WLAN Configuration Overview.....	165
WLAN Usage Types.....	165
Creating a New WLAN.....	166
802.1X EAP WLANs.....	169
802.1X WLAN Survivability.....	169
Guest WLANs.....	172
Deploying a Guest WLAN.....	172
Hotspot WLANs.....	237
Configuring Global WLAN Settings.....	238
Editing an Existing WLAN.....	239
Using a QR Code to Join a Wi-Fi Network.....	241
Deleting a WLAN.....	242
Disabling a WLAN Temporarily.....	242
Advanced WLAN Configuration.....	245
Advanced WLAN Configuration Overview.....	245
Configuring Advanced WLAN Options.....	245
Zero-IT and DPSK Settings.....	247
Zero-IT.....	247
Dynamic PSK.....	248
Enabling Zero-IT for a WLAN.....	249
Enabling DPSK for a WLAN.....	249
WLAN Priority Settings.....	253
Access Control Settings.....	254
Application Policies.....	256
Creating an Application Control Policy.....	256
Radio Control Settings.....	259
Creating Separate WLANs for 2.4 GHz and 5 GHz Radios.....	260
Other Advanced WLAN Settings.....	261
Configuring Client Isolation Allowlists.....	262
Bypass Apple CNA.....	264

Access Point Configuration	265
Access Point Configuration Overview.....	265
Show Mesh Topology.....	266
Show Client Info.....	267
Show Events and Alarms.....	269
Configuring Global AP Settings.....	270
Radio (2.4G).....	270
Radio (5G).....	271
Other.....	272
Monitoring an Individual AP.....	276
Show Client Info.....	277
Show WLANs Info.....	278
Show AP Info.....	279
Show Events and Alarms.....	282
Client Status and Traffic Graphs.....	283
Configuring an Individual AP.....	283
Renaming an AP.....	286
Working with AP Groups.....	287
Viewing AP Group Members.....	288
Modifying the System Default AP Group.....	289
Creating a New AP Group.....	293
Modifying Model Specific Controls.....	295
Configuring AP Ethernet Ports.....	297
Restarting an AP.....	302
Removing an AP.....	303
ICX Switch Management	305
ICX Switch Management Overview.....	305
Requirements.....	305
Preparing an ICX Switch for Unleashed Management.....	306
Approving a New Switch to Join Unleashed.....	309
Monitoring Connected ICX Switches.....	312
Accessing the RUCKUS Switch Home Page.....	314
Managing Switch Ports.....	314
Backup and Restore Switch Configuration.....	317
Upgrading ICX Switch Firmware.....	320
Working with Clients	323
Client Management Overview.....	323
Viewing the Clients List.....	323
Renaming a Client.....	325
Deleting a Client.....	327
Permanently Blocking a Client Device.....	327
Marking a Client as a Favorite.....	328
Running a SpeedFlex Performance Test on a Wireless Client.....	329
Client Connection Troubleshooting.....	333
Marking a Client as a Legacy Device.....	335
Adding User Accounts to the Internal User Database.....	335
Authenticating Clients Using an External Database.....	336
Configuring Admin & Services Settings	337
Admin & Services Overview.....	337

System Settings.....	337
System Info Settings.....	338
IP Settings.....	345
Configuring the System Time.....	358
Setting the Country Code.....	360
Configuring User Roles.....	362
Adding New Users to the Local Database.....	363
Changing an Existing User Account.....	365
Importing Users into the Local Database using CSV File.....	366
Deleting a User Record.....	367
Changing User Password.....	368
Mesh Networking.....	369
Enabling Log Delivery to Remote Syslog Server.....	378
Services.....	379
AAA Servers.....	380
Access Control.....	384
Application Recognition and Control.....	389
Bonjour Gateway.....	395
Dynamic PSK.....	398
Guest Access Services.....	402
Hotspot Services.....	403
Radio Control.....	406
WIPS.....	414
URL Filtering.....	419
Wi-Fi Calling.....	424
Administration Settings.....	427
Preferences.....	427
Backup and Restore.....	429
Upgrade.....	432
Diagnostics.....	440
Working with SSL Certificates.....	451
Testing Network Connectivity.....	457
Network Management.....	458
Enabling Mobile App Remote Management.....	463
Technical Support.....	465
Unleashed Access Point Power Supply Considerations.....	467
AP Power Warnings.....	467
Power Limitations by PoE Mode and AP Model.....	469
R850.....	469
R750.....	469
R720.....	469
R710.....	470
R650.....	470
R610.....	470
R550.....	470
H550.....	471
T610.....	471
M510.....	471
T750.....	471
T750SE.....	472

T350c.....	473
T350d.....	473
T350SE.....	473

Preface

• Contacting RUCKUS Customer Services and Support.....	9
• Document Feedback.....	10
• RUCKUS Product Documentation Resources.....	10
• Online Training Resources.....	10
• Document Conventions.....	11
• Command Syntax Conventions.....	11

Contacting RUCKUS Customer Services and Support

The Customer Services and Support (CSS) organization is available to provide assistance to customers with active warranties on their RUCKUS products, and customers and partners with active support contracts.

For product support information and details on contacting the Support Team, go directly to the RUCKUS Support Portal using <https://support.ruckuswireless.com>, or go to <https://www.commscope.com/ruckus> and select **Support**.

What Support Do I Need?

Technical issues are usually described in terms of priority (or severity). To determine if you need to call and open a case or access the self-service resources, use the following criteria:

- Priority 1 (P1)—Critical. Network or service is down and business is impacted. No known workaround. Go to the **Open a Case** section.
- Priority 2 (P2)—High. Network or service is impacted, but not down. Business impact may be high. Workaround may be available. Go to the **Open a Case** section.
- Priority 3 (P3)—Medium. Network or service is moderately impacted, but most business remains functional. Go to the **Self-Service Resources** section.
- Priority 4 (P4)—Low. Requests for information, product documentation, or product enhancements. Go to the **Self-Service Resources** section.

Open a Case

When your entire network is down (P1), or severely impacted (P2), call the appropriate telephone number listed below to get help:

- Continental United States: 1-855-782-5871
- Canada: 1-855-782-5871
- Europe, Middle East, Africa, Central and South America, and Asia Pacific, toll-free numbers are available at <https://support.ruckuswireless.com/contact-us> and Live Chat is also available.
- Worldwide toll number for our support organization. Phone charges will apply: +1-650-265-0903

We suggest that you keep a physical note of the appropriate support number in case you have an entire network outage.

Self-Service Resources

The RUCKUS Support Portal at <https://support.ruckuswireless.com> offers a number of tools to help you to research and resolve problems with your RUCKUS products, including:

- Technical Documentation—<https://support.ruckuswireless.com/documents>
- Community Forums—<https://forums.ruckuswireless.com/>
- Knowledge Base Articles—<https://support.ruckuswireless.com/answers>
- Software Downloads and Release Notes—https://support.ruckuswireless.com/#products_grid
- Security Bulletins—<https://support.ruckuswireless.com/security>

Using these resources will help you to resolve some issues, and will provide TAC with additional data from your troubleshooting analysis if you still require assistance through a support case or RMA. If you still require help, open and manage your case at https://support.ruckuswireless.com/case_management.

Document Feedback

RUCKUS is interested in improving its documentation and welcomes your comments and suggestions.

You can email your comments to RUCKUS at #Ruckus-Docs@commscope.com.

When contacting us, include the following information:

- Document title and release number
- Document part number (on the cover page)
- Page number (if appropriate)

For example:

- RUCKUS SmartZone Upgrade Guide, Release 5.0
- Part number: 800-71850-001 Rev A
- Page 7

RUCKUS Product Documentation Resources

Visit the RUCKUS website to locate related documentation for your product and additional RUCKUS resources.

Release Notes and other user documentation are available at <https://support.ruckuswireless.com/documents>. You can locate the documentation by product or perform a text search. Access to Release Notes requires an active support contract and a RUCKUS Support Portal user account. Other technical documentation content is available without logging in to the RUCKUS Support Portal.

White papers, data sheets, and other product documentation are available at <https://www.commscope.com/ruckus>.

Online Training Resources

To access a variety of online RUCKUS training modules, including free introductory courses to wireless networking essentials, site surveys, and products, visit the RUCKUS Training Portal at <https://commscopeuniversity.myabsorb.com/>. The registration is a two-step process described in this [video](#). You create a CommScope account and then register for, and request access for, CommScope University.

Document Conventions

The following table lists the text conventions that are used throughout this guide.

TABLE 1 Text Conventions

Convention	Description	Example
monospace	Identifies command syntax examples	<code>device(config)# interface ethernet 1/1/6</code>
bold	User interface (UI) components such as screen or page names, keyboard keys, software buttons, and field names	On the Start menu, click All Programs .
<i>italics</i>	Publication titles	Refer to the <i>RUCKUS Small Cell Release Notes</i> for more information.

Notes, Cautions, and Safety Warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A NOTE provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An ATTENTION statement indicates some information that you must read before continuing with the current action or task.



CAUTION

A CAUTION statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A DANGER statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Command Syntax Conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
bold text	Identifies command names, keywords, and command options.
<i>italic text</i>	Identifies a variable.
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{x y z}	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member[member...]</i> .
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

About This Guide

- [New in This Document](#)..... 13

New in This Document

TABLE 2 Summary of Changes in Unleashed 200.12 MR1 (April 2022)

Feature	Description	Reference
Dual WAN ports support	Dual WAN ports are supported in Gateway mode for H350 AP and H550 AP.	<ul style="list-style-type: none">• Gateway Mode on page 346• Configuring Gateway Mode on page 347• Advanced Install on page 138

TABLE 3 Summary of Changes in Unleashed 200.12 (February 2022)

Feature	Description	Reference
Addressing reported defects	Removing "11n only Mode" and "11n/ac/ax only Mode" options for 2.4-GHz and 5-GHz radios in AP group/AP setting.	<ul style="list-style-type: none">• Radio (2.4G) on page 270• Radio (5G) on page 271• Modifying the System Default AP Group on page 289• Creating a New AP Group on page 293

Introducing RUCKUS Unleashed

- [Introducing the Ruckus Unleashed Platform.....](#) 15
- [Unleashed Network Overview.....](#) 15
- [Unleashed Feature Parity with ZoneDirector.....](#) 16
- [Unleashed Limitations and Deviations from ZoneDirector.....](#) 17
- [Unleashed-Only Features.....](#) 18
- [Unleashed Access Point Physical Features.....](#) 18

Introducing the Ruckus Unleashed Platform

Ruckus Unleashed is custom designed to help small business owners grow their businesses, deliver an excellent customer experience and manage costs while supporting enterprise-class Wi-Fi and highly customizable control of mobile devices with minimal IT staff.

Unleashed provides a controller-less option for small to medium-sized Wi-Fi deployments where up to 128 access points can be deployed in a self-healing, redundant wireless network with no controller required, while still providing many of the enterprise-class features that traditionally required a Ruckus WLAN controller (e.g., ZoneDirector or SmartZone controller).

Unleashed access points have built-in controller capabilities including user access controls, guest networking features, advanced Wi-Fi security and traffic management. As businesses grow to multiple sites or a larger scale deployments, Ruckus offers an easy migration path to cloud-based or controller-based Wi-Fi, using the same Ruckus access points.

Ruckus Unleashed provides small to medium-sized business environments with superior performance, lower costs and simplified management. Separate controller support contracts and access point licenses are not needed, significantly reducing up front and recurring costs, and the simplified web interface also makes deploying Unleashed very easy.

With the Ruckus Unleashed platform, customers can deploy up to 128 APs without the need to purchase and install a controller, and without having to sacrifice many features that previously required a controller, such as Zero-IT, Dynamic PSK (DPSK), Smart Mesh, ChannelFly, Application Recognition and Control, Bonjour Gateway/Bonjour Fencing, and one-step firmware upgrades of the entire network from a single interface.

Unleashed Network Overview

A Ruckus Unleashed network consists of an Unleashed "Master AP" and a number Unleashed member APs (up to 128 total).

NOTE


Beginning with release 200.8, the maximum capacity limit has been increased from 50 APs and 1,024 clients to 128 APs and 2,048 clients per Unleashed network in bridge mode (gateway mode supports up to 25 APs and 512 clients).

In addition to serving Wi-Fi clients like a normal AP, the Unleashed Master AP also performs the same functions as a controller would perform; i.e., all control functions are performed through the Master AP and pushed to the other APs on the network.

An Unleashed member AP joins a Master AP in the same subnet automatically. Unleashed member APs will not attempt to join a ZoneDirector or SmartZone controller on the network. If the Master AP is offline, one of the member APs will assume the role of Unleashed Master and take over control of the Unleashed network.

The following figure illustrates the basic components of an Unleashed network.

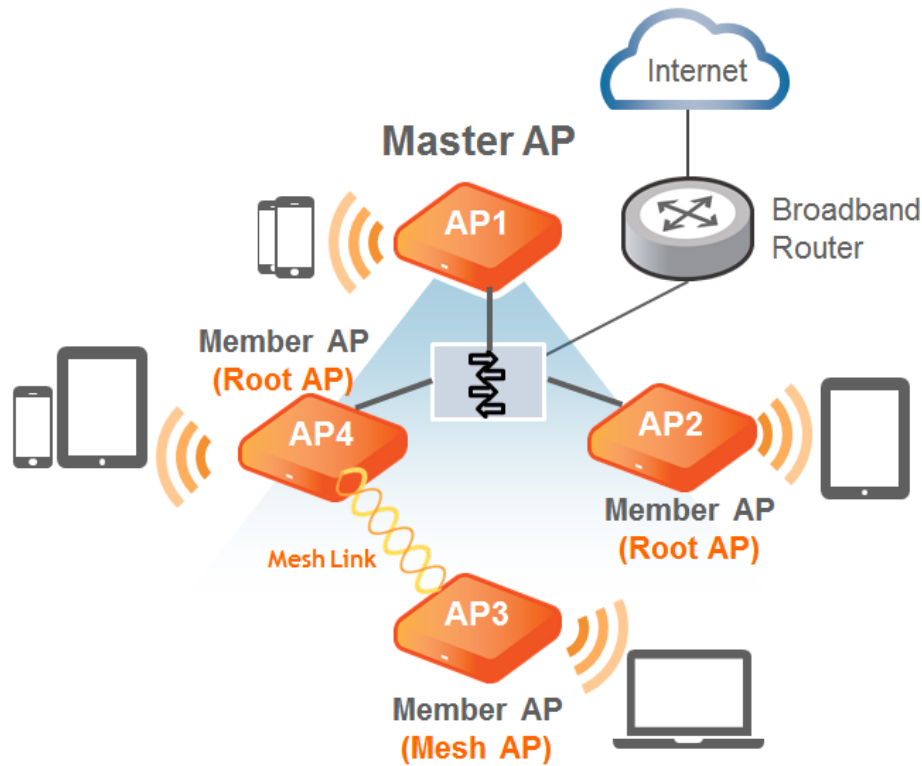FIGURE 1 Basic Unleashed Network topology



Unleashed Feature Parity with ZoneDirector

The Ruckus Unleashed platform provides many of the same features that are currently available using a ZoneDirector wireless LAN controller, including:

- Smart Mesh
- One-step firmware upgrades of the entire network from a single interface
- Layer 2 roaming
- Zero-IT support for automatic client Wi-Fi configuration
- Dynamic Pre-Shared Keys (DPSK)
- Guest WLANs
- WLAN types:
 - Captive Portal (Web Auth)
 - Hotspot (WISPr)
 - Guest Access (Guest Pass)
 - Social Media (Facebook, LinkedIn, Microsoft, Google, WeChat)
- 802.1X EAP authentication using an external AAA server (RADIUS)
- Bonjour Gateway
- WLAN encryption/authentication options:
 - Open + None

- Open + None + MAC Auth
- Open + None + Web Auth
- Open + WPA2 + AES + PSK
- Open + WPA2 + AES + DPSK
- 802.1X + WPA2 + AES + AAA
- 802.1X + WPA3 + SAE + AAA
- Open + WPA3 + SAE
- Open + WPA2/WPA3-Mixed + SAE + AES
- Open + OWE
- Radio Frequency (RF) management features:
 - BeamFlex
 - ChannelFly
 - Background Scanning
 - Automatic Channel Selection based on ChannelFly or Background Scanning
 - SpeedFlex
 - Rogue AP detection
- Client management features:
 - Access Control Lists
 - Application Recognition and Control
 - HTTP/HTTPs Redirect
 - Up to 1,024 local users supported (on the internal database)
 - Up to 1,024 client devices supported (depending on encryption/auth method)
 - Self-Service Guest Pass
 - Client Load Balancing
 - Band Steering
 - Client Isolation
 - Client Fingerprinting
 - Device Access Policies
- DHCP server (configured manually from Unleashed Network Master AP)
- SNMP Management
- Syslog Delivery to External Syslog Server
- Management IP Interface
- Multi-Language support
- WLAN Prioritization
- Dynamic VLANs
- Enable/Disable WLANs on a per-radio basis
- AP Groups

Unleashed Limitations and Deviations from ZoneDirector

While many ZoneDirector features are included, Unleashed does not provide the entire ZoneDirector feature set.

The following features are either not supported, supported but with limitations, or are currently unsupported but planned for a future release:

- No layer 3 roaming; all APs must be in the same subnet.

Introducing RUCKUS Unleashed

Unleashed-Only Features

- Tunneled WLANs are not supported.
- IPv6 is not supported.
- No interface to communicate with SmartCell Insight analytics engine or SPoT location services.
- No Northbound Interface to pass client authentication responsibility to an external entity.
- No WLAN Groups.

Unleashed-Only Features

The following features are unique to the Unleashed platform and do not correspond to any existing ZoneDirector or other Ruckus controller features:

- The Unleashed platform does not require an external controller - all controller functions are performed through a single "Unleashed Master AP" web interface. The Unleashed Master AP serves the same functions as a ZoneDirector controller would perform on the network; i.e., all control functions are performed through the controller and pushed to the other APs on the network.
- An Unleashed Member AP automatically takes over all AP control functions if the Master AP is offline.
- Preferred Master: Admins can configure an AP to serve as the "preferred" Unleashed Master AP. If the preferred Master is offline, another member AP will become the Master. When the preferred Master comes back online, it will resume the Unleashed Master role.
- The Unleashed user interface provides simplified and more intuitive controls for some controller functions, and hides or removes some of the less-used options for easier navigation and configuration.
- Gateway Mode: The Unleashed Master AP can be configured as a gateway router, performing all NAT and DHCP functions as well as serving as the Unleashed network controller and serving wireless clients.

NOTE

When gateway mode is enabled, Unleashed supports a maximum 25 APs and 512 concurrent clients due to the additional resource demands placed on the Master AP when in gateway mode.

- ICX Switch Management: Unleashed provides a user interface for monitoring and managing Ruckus ICX switches and ICX switch stacks.

Unleashed Access Point Physical Features


This section describes the physical features of the Ruckus Unleashed Access Points currently available.

C110

The Unleashed C110 is an 802.11ac Wave 2 dual-band concurrent Wi-Fi Wall Switch AP with integrated 4-port gigabit Ethernet and Cable Modem backhaul in a form factor designed for mounting to electrical outlet boxes.

This section describes the physical features of the Ruckus Unleashed C110 802.11ac Cable Modem Access Point.

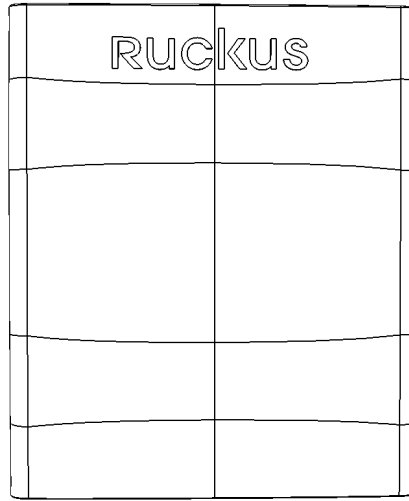FIGURE 2 C110 Access Point



Rear Panel

The C110 AP features five LEDs on its rear panel. (LEDs are concealed when mounted.)

TABLE 4 Front Panel LEDs

 
 
LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 4 Front Panel LEDs (continued)

 
 
 
 
 
LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

TABLE 4 Front Panel LEDs (continued)


LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 4 Front Panel LEDs (continued)

 

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 4 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.


E510

The Unleashed E510 is a modular access point designed for deployment in scenarios with specific form factor needs such as outdoor lighting, railway, street furniture, and sports and entertainment venues.

The E510 addresses the need for a modular AP where specific deployment situations preclude the antenna structure and onboard intelligence being installed as a single module.

This section describes the physical features of the Ruckus Unleashed E510 802.11ac Wave 2 Access Point.

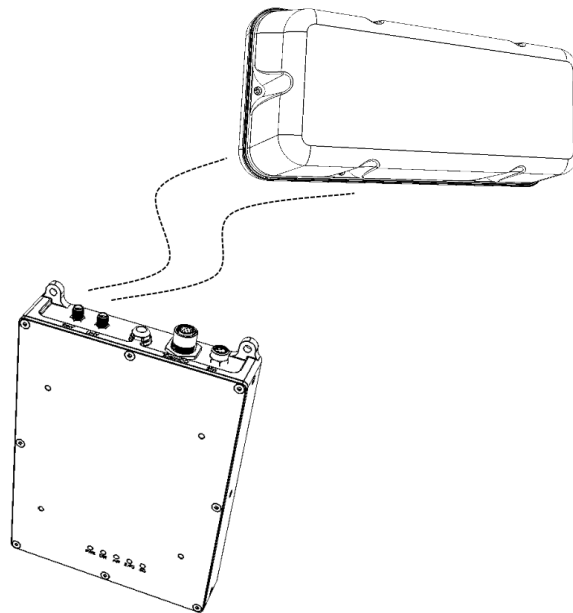FIGURE 3 E510 Access Point



Front Panel

The E510 AP features five LEDs on its front panel.

TABLE 5 Front Panel LEDs





 
LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

    TABLE 5 Front Panel LEDs (continued)









LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 5 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 5 Front Panel LEDs (continued)


LED	Status	Description
5G	 <p>5G Amber (solid)</p>	Radio is up, no clients are connected to the 5 GHz radio.
5G	 <p>5G Solid Green</p>	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

H320

The H320 is an 802.11ac Wave 2 dual-band concurrent Wi-Fi Wall Switch AP with one Gigabit uplink port and two 10/100 access ports, in a form factor designed for mounting to electrical outlet boxes.

This section describes the physical features of the Ruckus Unleashed H320 802.11ac Access Point.

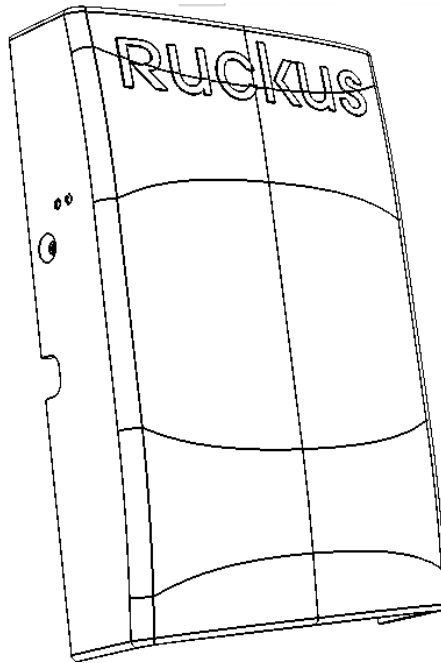FIGURE 4 H320 Access Point



Rear Panel

The H320 AP features five LEDs on its rear panel. (LEDs are concealed when mounted.)

TABLE 6 Front Panel LEDs



LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 6 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.


TABLE 6 Front Panel LEDs (continued)

LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 6 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 6 Front Panel LEDs (continued)


LED	Status	Description
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

H350

The H350 is a Wi-Fi 6 (802.11ax) Wi-Fi access point with integrated switch in a wall-plate form factor.

This section describes the physical features of the RUCKUS Unleashed H350 802.11ax Access Point.

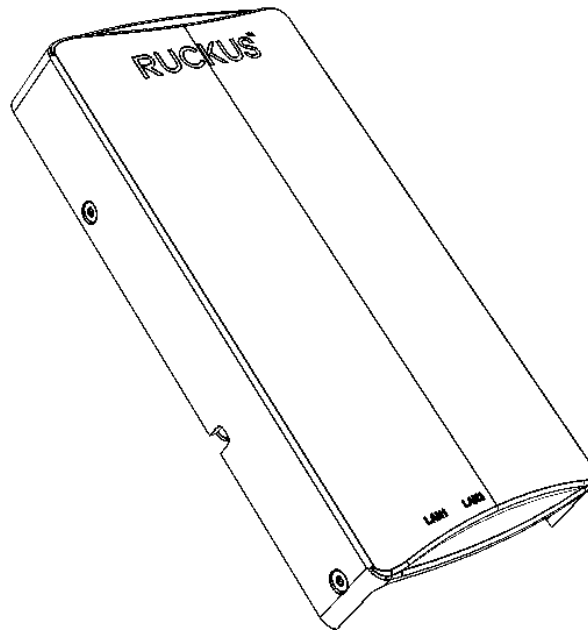FIGURE 5 H350 Access Point



Rear Panel

The H350 AP features five LEDs on its rear panel. (LEDs are concealed when mounted.)

TABLE 7 Front Panel LEDs






LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

TABLE 7 Front Panel LEDs (continued)









LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 7 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 7 Front Panel LEDs (continued)


LED	Status	Description
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

H510

The H510 is an 802.11ac Wave 2 dual-band concurrent Wi-Fi Wall Switch AP with integrated 5-port gigabit Ethernet, in a form factor designed for mounting to electrical outlet boxes.

This section describes the physical features of the Ruckus Unleashed H510 802.11ac Access Point.

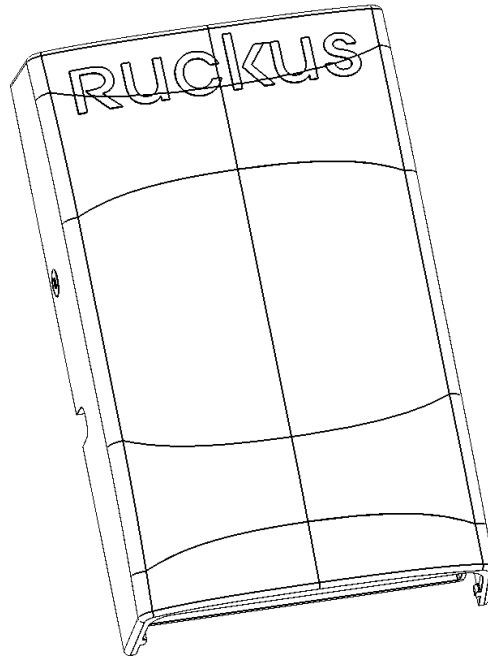FIGURE 6 H510 Access Point



Rear Panel

The H510 AP features five LEDs on its rear panel. (LEDs are concealed when mounted.)

TABLE 8 Front Panel LEDs



LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 8 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

TABLE 8 Front Panel LEDs (continued)




LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 8 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 8 Front Panel LEDs (continued)


LED	Status	Description
5G	 <p>5G</p> <p>Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

H550

The H550 is an 802.11ax Wave 2 dual-band concurrent Wi-Fi Wall Switch and IoT gateway AP with integrated 5-port gigabit Ethernet, in a form factor designed for mounting to electrical outlet boxes.

This section describes the physical features of the RUCKUS Unleashed H550 802.11ax Access Point.

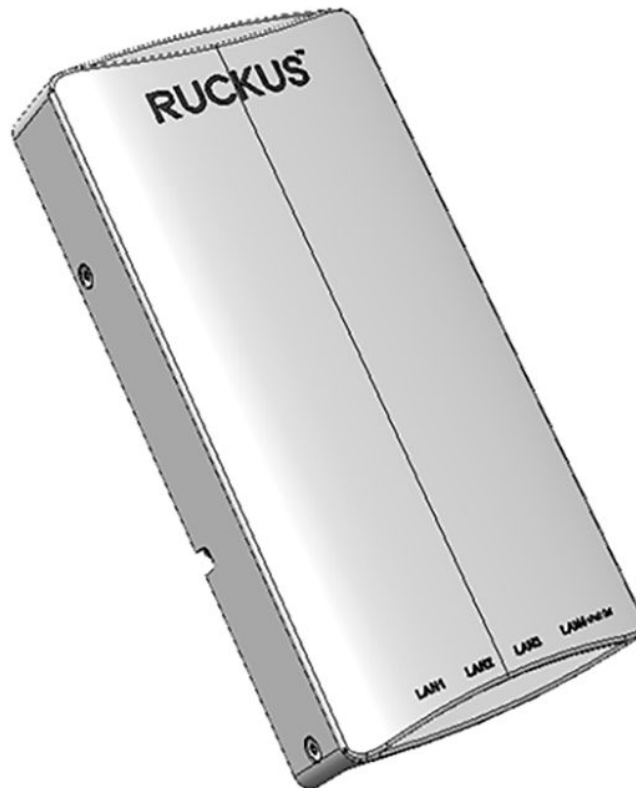FIGURE 7 H550 Access Point



Rear Panel

The H550 AP features five LEDs on its rear panel. (LEDs are concealed when mounted.)

TABLE 9 Front Panel LEDs





 
LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

    TABLE 9 Front Panel LEDs (continued)









LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 9 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 9 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p>5G Amber (solid)</p>	Radio is up, no clients are connected to the 5 GHz radio.
5G	 <p>5G Solid Green</p>	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

M510


The Unleashed M510 is an 802.11ac Wave 2 Access Point with embedded LTE module for cellular backhaul. The M510 is designed for deployment in scenarios where there is no readily accessible wired connectivity for backhaul, such as in buses, taxis, or other in-vehicle deployments, or in remote locations where the cost of establishing a fixed line ISP connection outweighs that of a wireless connection to a local 3G/4G network.

NOTE

Because the M510 supports LTE backhaul, it requires special setup procedures different from other Unleashed APs. For information, see [M510 Configuration](#) on page 51.

This section describes the physical features of the Ruckus Unleashed M510 LTE Access Point.

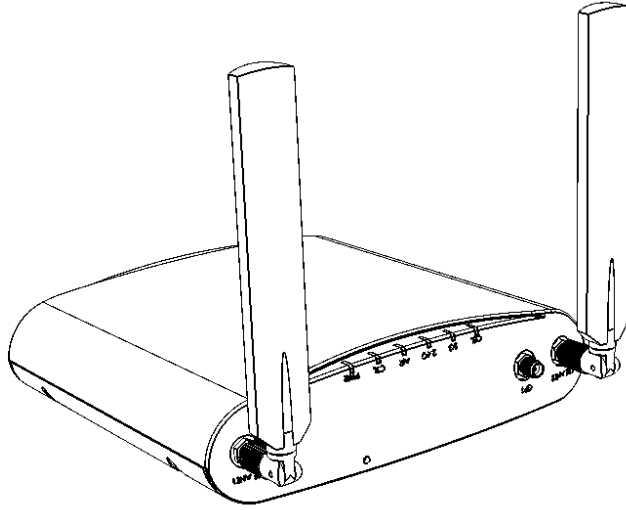FIGURE 8 M510 Access Point



Front Panel

The M510 AP features six LEDs on its front panel.

TABLE 10 Front Panel LEDs



LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 10 Front Panel LEDs (continued)


 
 
 
 
LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable Ethernet IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

 TABLE 10 Front Panel LEDs (continued)




LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 10 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 10 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.
CEL	 5G Solid Green	<ul style="list-style-type: none"> • Off: No cellular connection. • Amber: 3G connection. • Green: 4G/LTE connection.

NOTE

CEL LED will remain in "Off" status until the Unleashed M510 is provisioned.

Bottom Panel

The bottom panel of the M510 includes the following:

- Two 10/100/1000 Mbps Ethernet ports
- 12V DC power socket
- Reset button
- Two redundant SIM card slots for LTE backhaul

FIGURE 9 M510 bottom panel

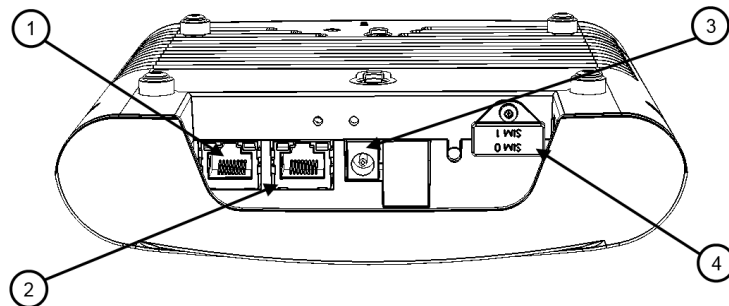


TABLE 11 M510 bottom panel elements

No.	Label	Description
1	ETH 0 WAN / PoE	10/100/1000 Mbps RJ-45 Ethernet port with PoE support
2	ETH 1 LAN	10/100/1000 Mbps RJ-45 Ethernet port
3	12V DC input, terminal block and DC connector	Connect a customer-ordered Ruckus DC power adapter (sold separately), or connect power directly using DC terminal block.
4	SIM Card Slots	Insert an activated SIM card into the primary slot, and optionally, a second SIM card into secondary slot for redundancy. NOTE The orientation of the SIM cards is reversed, refer to the <i>M510 Quick Setup Guide</i> for details on SIM card insertion.

Ethernet Port LEDs

TABLE 12 Behavior of Ethernet port LEDs on the M510

LED	Description
Off	Not connected
Amber + Green	Connected to 10Mbps device
Amber	Connected to 100Mbps device
Green	Connected to 1000Mbps device

Deployment Considerations

The Unleashed M510 is designed for the following two primary deployment scenarios:

- *Mobile Environment:* M510 configured as Master AP in Gateway Mode with an LTE connection as the uplink WAN port.
- *LTE Backup Environment:* M510 in Gateway Mode with the Ethernet port as the WAN port and the LTE connection as the backup WAN port, only one of which can be active at any time. If the Ethernet connection goes down, the LTE connection becomes active to provide a backup internet uplink.

Both options can be configured using the **WAN Connection** setting on the *IP Settings* page when the M510 is configured as the Unleashed Master AP in Gateway Mode.

Limitations

- M510 does not support configuration as the Master AP in bridge mode or as a member AP. Only Master AP in Gateway mode is supported.
- Backup and restore may not function properly if the backup was created on an M510 and restored to a non-M510 AP, or vice-versa.

M510 Configuration

The M510 Wi-Fi + LTE Access Point requires additional setup steps to configure the cellular uplink connection.

The M510 is designed to be deployed in one of the following two deployment scenarios: Ethernet WAN port with Cellular backup, or Cellular Only.

To configure the M510 using the Setup Wizard, select **Gateway Mode** on the *IP Setting* page (page 2 of the Setup Wizard).

In *WAN Connection*, select one of the following options:

- **Ethernet (primary) with Cellular failover**
- **Cellular only**

If *Ethernet with Cellular failover* is selected, you must configure the WAN port settings (Manual or DHCP) as well as the Cellular Radio Settings, and the internal network IP address settings.

If *Cellular only* is selected, you do not need to enter WAN port IP address settings.

FIGURE 10 Ethernet (Primary) with Cellular failover

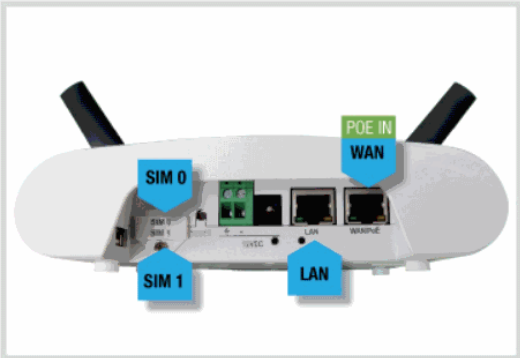
1 System — 2 IP setting — 3 Wireless LAN — 4 Administrator — 5 Review

Gateway Mode

WAN Selection

* WAN connection Ethernet (Primary) with cellular

* WAN Recovery Timer 60 seconds (10-300)



* This image shows the WAN port and SIM slots

Cellular Radio Settings

APN for SIM 0 defaultapn

APN for SIM 1 defaultapn

LAN & WLAN IP Address

* Router IP 192.168.10.1

* Netmask 255.255.255.0

WAN IP Address for Ethernet

Manual DHCP

* IP Address 172.18.165.7

* Netmask 255.255.255.0

* Gateway 172.18.165.254

* Primary DNS Server 10.10.10.10

Secondary DNS Server 10.10.10.106

LAN & WLAN Client IP Addresses

* Starting IP 192.168.10.2

* Ending IP 192.168.10.102

Number of IPs 101

Lease Time Twelve hours

Back Next

FIGURE 11 Cellular only

1 System 2 IP setting 3 Wireless LAN 4 Administrator 5 Review

Gateway Mode

WAN Selection

* WAN connection Cellular only

Cellular Radio Settings

APN for SIM 0 internet

APN for SIM 1 internet

LAN & WLAN Client IP Addresses

* Starting IP 10.10.0.10

* Ending IP 10.10.0.30

Number of IPs 21

Lease Time Twelve hours

LAN & WLAN IP Address

* Router IP 10.10.0.1

* Netmask 255.255.0.0

Back Next

* This image shows the WAN port and SIM slots

NOTE

M510 does not support Bridge mode.

NOTE

Cellular is disabled by default. The CEL LED will remain off until the Setup Wizard setup is completed.

NOTE


PPPoE IP address mode is not supported on Unleashed M510.

R320

The Unleashed R320 is a dual-band concurrent 2x2:2 802.11ac Wave 2 Access Point that delivers high-performance wireless networking at a competitive price point in a compact form factor.

This section describes the physical features of the Ruckus Unleashed R320 802.11ac Access Point.

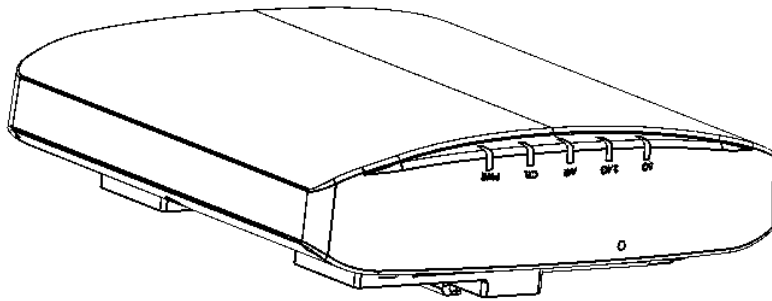FIGURE 12 R320 Access Point



Front Panel

The R320 AP features five LEDs on its front panel.

TABLE 13 Front Panel LEDs




LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.

TABLE 13 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.

TABLE 13 Front Panel LEDs (continued)






LED	Status	Description
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.

TABLE 13 Front Panel LEDs (continued)


LED	Status	Description
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R350

The Unleashed R350 is a dual-band concurrent 2x2:2 802.11ax Wave 2 Access Point that delivers high-performance wireless networking at a competitive price point in a compact form factor.

This section describes the physical features of the RUCKUS Unleashed R350 802.11ax Access Point.

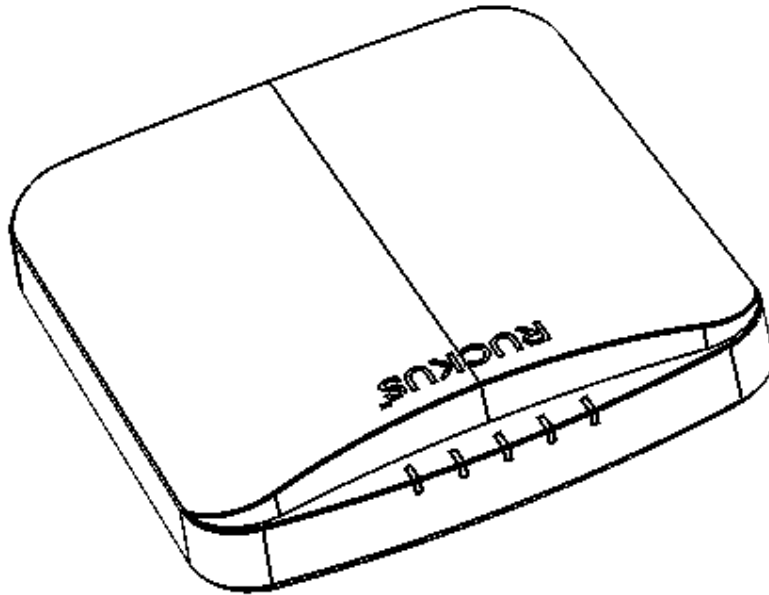FIGURE 13 R350 Access Point



Front Panel

The R350 AP features five LEDs on its front panel.

TABLE 14 Front Panel LEDs


LED	Status	Description
PWR	 PWR Off	No power connected.

TABLE 14 Front Panel LEDs (continued)

 

 


LED	Status	Description
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.

TABLE 14 Front Panel LEDs (continued)






LED	Status	Description
CTL	 <p>CTL</p> <p>Flashing Green (fast, 2x per second)</p>	Receiving configuration or image upgrade.
CTL	 <p>CTL</p> <p>Solid Green</p>	Unleashed Master AP.
AIR	 <p>AIR</p> <p>N/A</p>	No upstream mesh connection (Root AP).
AIR	 <p>AIR</p>	Upstream mesh connection established (Mesh AP).
AIR	 <p>AIR</p>	Upstream mesh connection issue.

TABLE 14 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.

TABLE 14 Front Panel LEDs (continued)


LED	Status	Description
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R510

The Unleashed R510 brings cutting edge 802.11ac Wave 2 to the mid-tier segment. It improves aggregate network throughput and benefits both Wave 2 & non-Wave 2 clients.

This section describes the physical features of the Ruckus Unleashed R510 802.11ac Wave 2 Access Point.

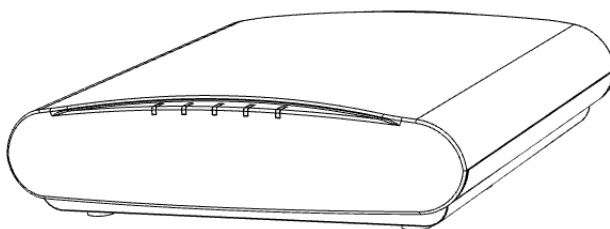FIGURE 14 R510 Access Point



Front Panel

The R510 AP features five LEDs on its front panel.

TABLE 15 Front Panel LEDs





 
LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

    TABLE 15 Front Panel LEDs (continued)









LED	Status	Description
CTL	 <p>CTL</p> <p>Flashing Green (slow, every 2 seconds)</p>	Network problem. Cannot contact Unleashed Master.
CTL	 <p>CTL</p> <p>Flashing Green (fast, 2x per second)</p>	Receiving configuration or image upgrade.
CTL	 <p>CTL</p> <p>Solid Green</p>	Unleashed Master AP.
AIR	 <p>AIR</p> <p>N/A</p>	No upstream mesh connection (Root AP).
AIR	 <p>AIR</p>	Upstream mesh connection established (Mesh AP).

TABLE 15 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 15 Front Panel LEDs (continued)


LED	Status	Description
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R550

The Ruckus R550 is a mid-range indoor 2x2:2 Wi-Fi 6 (802.11ax) dual-band access point with integrated 2-port Ethernet interface. The R550 is targeted for medium-density, small to mid-size indoor enterprise WLAN applications in the enterprise, education, hospitality, carrier, healthcare and retail industries.

This section describes the physical features of the Ruckus Unleashed R550 AP.

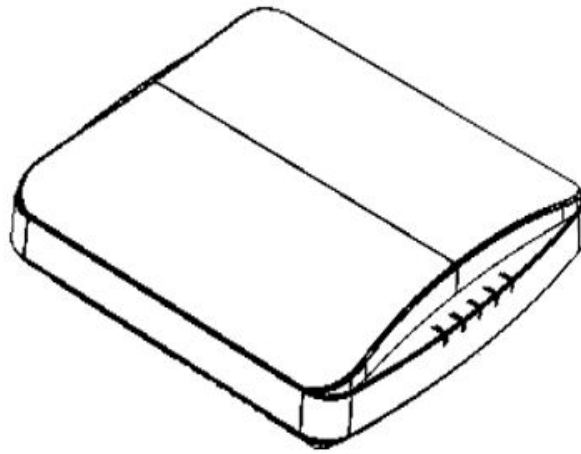FIGURE 15 Unleashed R550 Access Point



Front Panel

The R550 AP features five LEDs on its front panel.

TABLE 16 Front Panel LEDs

LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 16 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

TABLE 16 Front Panel LEDs (continued)



LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 16 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 16 Front Panel LEDs (continued)


LED	Status	Description
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R610

The Unleashed R610 is a dual-band concurrent 3x3:3 802.11ac Wave 2 Access Point that delivers high-performance wireless networking with aggregate rates of up to 1300 Mbps (5GHz) 600 Mbps (2.4GHz) maximum PHY rate.

This section describes the physical features of the Ruckus Unleashed R610 802.11ac Wave 2 Access Point.

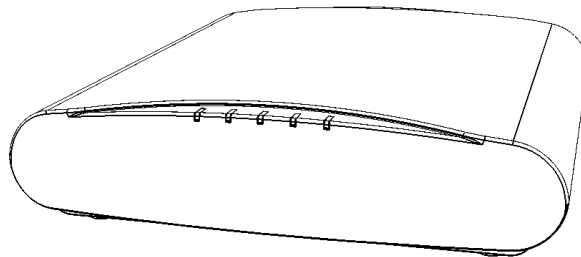FIGURE 16 R610 Access Point



Front Panel

The R610 AP features five LEDs on its front panel.

TABLE 17 Front Panel LEDs


LED	Status	Description
PWR	 <p>PWR Off</p>	No power connected.

TABLE 17 Front Panel LEDs (continued)

 

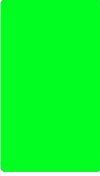

LED	Status	Description
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.

TABLE 17 Front Panel LEDs (continued)






 

LED	Status	Description
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.

TABLE 17 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.

TABLE 17 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R650

The Ruckus R650 is a mid-range "Wi-Fi 6" (802.11ax) dual-band indoor 4x4: 4 AP with BeamFlex+, one 2.5 Gbps PoE+ port, one 1 Gbps Ethernet port, and onboard support for IoT and BLE/Zigbee.

This section describes the physical features of the Ruckus Unleashed R650 AP.

FIGURE 17 Unleashed R650 Access Point



Front Panel

The R650 AP features five LEDs on its front panel.

TABLE 18 Front Panel LEDs






LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

TABLE 18 Front Panel LEDs (continued)









LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 18 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 18 Front Panel LEDs (continued)


LED	Status	Description
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

R710

The Unleashed R710 is the first Ruckus Unleashed 802.11ac Wave 2 access point, providing 4x4:4 radio chains and MU-MIMO support for high density installations.

This section describes the physical features of the Ruckus Unleashed R710 AP.

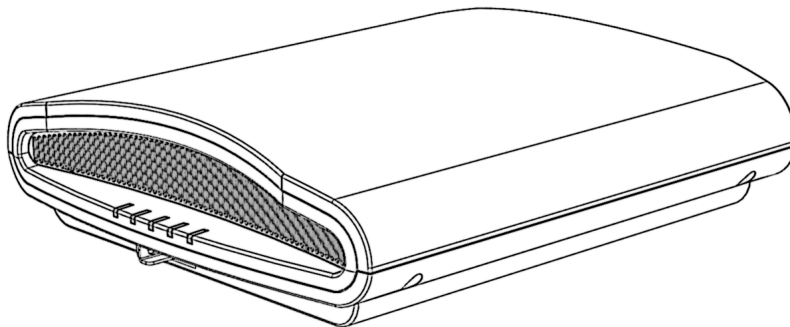FIGURE 18 R710 Access Point



Front Panel

The R710 AP features five LEDs on its front panel.

TABLE 19 Front Panel LEDs

LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.

TABLE 19 Front Panel LEDs (continued)





 
LED	Status	Description
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).

    TABLE 19 Front Panel LEDs (continued)










LED	Status	Description
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.

TABLE 19 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.


R720

The Unleashed R720 is a dual-band concurrent 4x4 802.11ac Wave 2 Access Point capable of 160 MHz and 80+80 MHz channelization, designed for high density indoor applications.

The R720 features one 10/100/1000 Ethernet port, and one 100/1000/2500 Ethernet port that supports 802.3af and 802.3at Power Over Ethernet (PoE), and a USB port for IoT applications.

This section describes the physical features of the Ruckus Unleashed R720 AP.

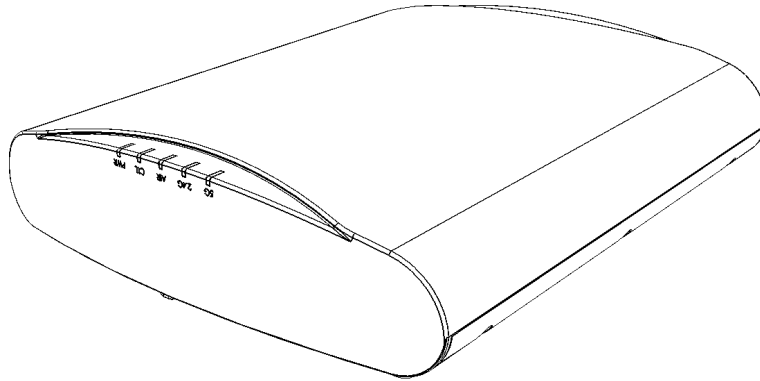FIGURE 19 R720 Access Point



Front Panel

The R720 AP features five LEDs on its front panel.

TABLE 20 Front Panel LEDs




LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.

TABLE 20 Front Panel LEDs (continued)

 



 
LED	Status	Description
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.

TABLE 20 Front Panel LEDs (continued)






LED	Status	Description
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.

TABLE 20 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.


R750

The Unleashed R750 is a dual-band concurrent "Wi-Fi 6" (802.11ax) AP that supports 8 spatial streams (4x4:4 in 5GHz, 4x4:4 in 2.4GHz).

The Unleashed R750 provides advanced 11ax features such as OFDMA, MU-MIMO, 11ax power save, and WPA3. It includes a USB port and onboard IoT management chip for applications such as ZigBee, BLE (Bluetooth Low Energy) or LTE dongles, and a 2.5 GbE port that supports 802.3af, 802.3at and 802.3bt (40W) PoE, and one 1 GbE port (non-PoE).

This section describes the physical features of the Ruckus Unleashed R750 AP.

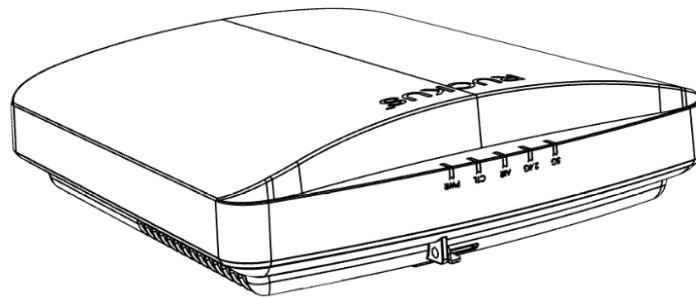FIGURE 20 Unleashed R750 Access Point



Front Panel

The R750 AP features five LEDs on its front panel.

TABLE 21 Front Panel LEDs

LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 21 Front Panel LEDs (continued)

 
 
 
 
 
LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.


TABLE 21 Front Panel LEDs (continued)

LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 21 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 21 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.


R850

The Unleashed R850 is a dual-band Wi-Fi 6 Indoor access point with 12 radio chains, operating in 8x8:8 mode on the 5GHz band and in 4x4:4 mode on the 2.4GHz band, supporting peak PHY rates of 4.8Gbps (5GHz) and 1.148Gbps (2.4GHz).

The R850 has one 5 Gbps PoE Ethernet port and one 1 Gbps port, onboard BLE and Zigbee radios for IOT applications, and a USB port for additional connectivity. The R850 will operate with PoH, uPOE and 802.3at power.

This section describes the physical features of the Ruckus Unleashed R850 AP.

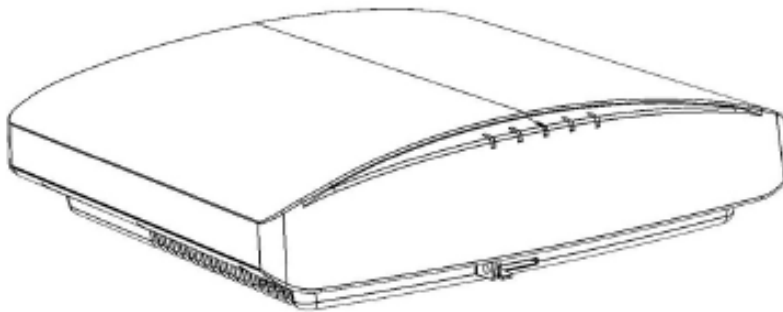FIGURE 21 Unleashed R850 Access Point



Front Panel

The R850 AP features five LEDs on its front panel.

TABLE 22 Front Panel LEDs


LED	Status	Description
PWR	 <p>PWR Off</p>	No power connected.

TABLE 22 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.

TABLE 22 Front Panel LEDs (continued)






LED	Status	Description
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.

TABLE 22 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.

TABLE 22 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T310 Family


The Unleashed T310 family provides 802.11ac "Wave 2" features, including MU-MIMO, in an outdoor access point.

This section describes the physical features of the Ruckus Unleashed T310 family of dual-band 802.11ac Wave 2 Outdoor Access Points.

The T310 is available in four antenna variants:

- T310c: Standard omni antenna
- T310d: Standard omni antenna, extended temperature range
- T310n: Narrow sector antenna variant
- T310s: Sector antenna variant

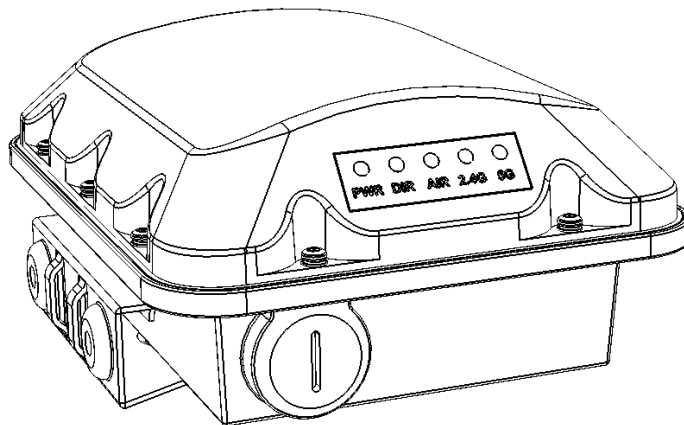FIGURE 22 T310d Outdoor Access Point



Front Panel

The T310 features five LEDs on its front panel.

TABLE 23 Front Panel LEDs

LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.

TABLE 23 Front Panel LEDs (continued)

 
 
 
 
 
LED	Status	Description
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).

TABLE 23 Front Panel LEDs (continued)

 
 

 
 

LED	Status	Description
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.

TABLE 23 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T350 Family


The Unleashed T350 family provides 802.11ax "Wave 2" features, including MU-MIMO, in an outdoor access point.

This section describes the physical features of the RUCKUS Unleashed T310 family of dual-band 802.11ax Wave 2 Outdoor Access Points.

The T350 is available in four antenna variants:

- T350c: Standard omni antenna
- T350d: Standard omni antenna, extended temperature range

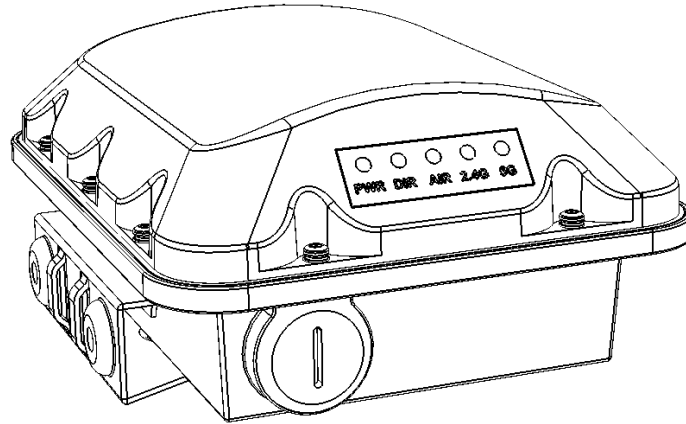FIGURE 23 T350d Outdoor Access Point



Front Panel

The T350 features five LEDs on its front panel.

TABLE 24 Front Panel LEDs



LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 24 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

TABLE 24 Front Panel LEDs (continued)



LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 24 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 24 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p>5G</p> <p>Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.


T350SE

The RUCKUS T350se is a Wi-Fi 6 (802.11ax) Wi-Fi access point supporting dual-band concurrent 2x2:2 802.11ax (5GHz) and 2x2:2 802.11ax (2.4GHz) for outdoor applications.

The T350se has an internal 120-degree sectorized antenna, an integrated single 1-Gbps Ethernet port, a DC port, an USB port, and 2 N-type ports to connect to an external antenna.

This section describes the physical features of the RUCKUS Unleashed T350SE AP.

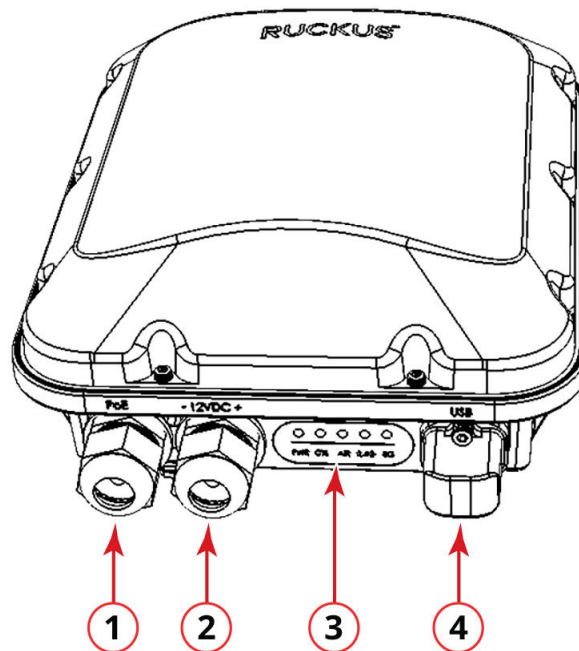FIGURE 24 Unleashed T350SE Access Point



- | | |
|-----------|--------|
| 1. PoE | 3. LED |
| 2. 12V DC | 4. USB |

Front Panel

The T350SE AP features five LEDs on its front panel.

TABLE 25 Front Panel LEDs






LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

TABLE 25 Front Panel LEDs (continued)









LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 25 Front Panel LEDs (continued)

LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 25 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T610 and T610s

The Ruckus Unleashed T610 is an outdoor dual radio 4x4:4 802.11ac Wave 2 access point with two 1 Gigabit Ethernet ports, PoE in, and 802.1ax Ethernet port aggregation.


The T610 also includes a USB port for BLE Smart Beacon, Zigbee or other IoT devices.

This section describes the physical features of the Ruckus Unleashed T610 and T610s access points.

NOTE

The T610s is the 120 degree sector antenna variant of the T610. It includes all of the same physical features as the T610 (omni) version.

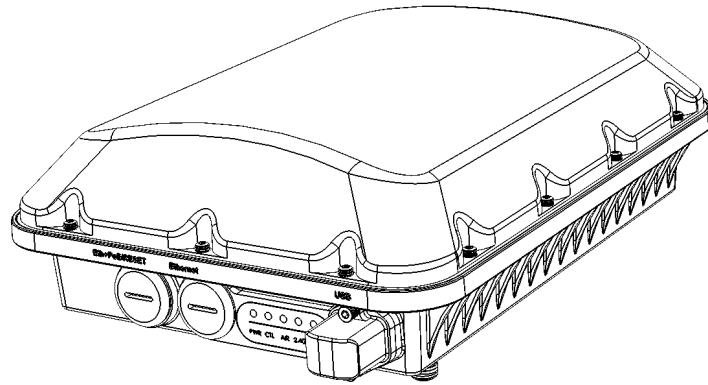FIGURE 25 Unleashed T610/T610s Outdoor Access Point



Front Panel

The T610 (and T610s) AP features five LEDs on its front panel.

TABLE 26 Front Panel LEDs




LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.

TABLE 26 Front Panel LEDs (continued)

 
 
 
 
 
LED	Status	Description
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.

TABLE 26 Front Panel LEDs (continued)

 
 
 
 
 
LED	Status	Description
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.

TABLE 26 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T710 and T710s


The Unleashed T710 is the first outdoor Ruckus Unleashed 802.11ac Wave 2 access point.

This section describes the physical features of the Ruckus Unleashed T710 and T710s access points.

NOTE

The T710s is the 120 degree sector antenna variant of the T710. It includes all of the same physical features as the T710 (omni) version.

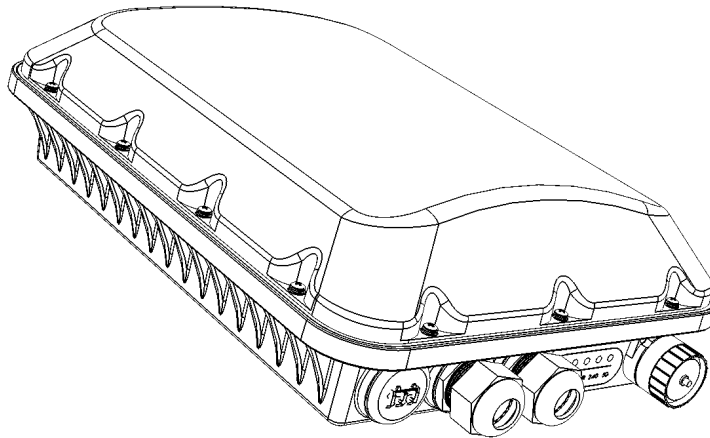FIGURE 26 Unleashed T710/T710s Outdoor Access Point



Front Panel

The T710 (and T710s) AP features five LEDs on its front panel.

TABLE 27 Front Panel LEDs


LED	Status	Description
PWR	 PWR Off	No power connected.

TABLE 27 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.

TABLE 27 Front Panel LEDs (continued)






LED	Status	Description
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.

TABLE 27 Front Panel LEDs (continued)

LED	Status	Description
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.

TABLE 27 Front Panel LEDs (continued)

LED	Status	Description
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 5G Flashing Green	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T750


The Ruckus T750 is a high-end dual-band outdoor Wi-Fi 6 AP that supports 8 spatial streams (4x4:4 in 5GHz, 4x4:4 in 2.4GHz).

The T750 provides advanced 802.11ax features including OFDMA and MU-MIMO, and supports up to 1,024 client connections with increased capacity, improved coverage and performance in ultra-high density environments.

The T750 includes a 2.5 GbE Ethernet PoE+ port for high speed Ethernet backhaul, along with an SFP fiber port for fiber backhaul. Additionally, it includes built-in GPS, USB port, gigabit PoE out port, and IP-67 rated weather proofing.

This section describes the physical features of the Ruckus Unleashed T750 AP.

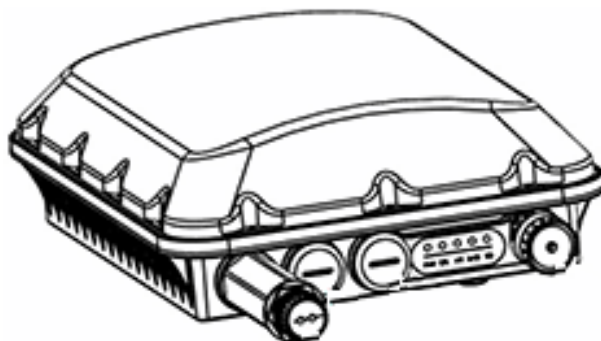FIGURE 27 Unleashed T750 Access Point



Front Panel

The T750 AP features five LEDs on its front panel.

TABLE 28 Front Panel LEDs






LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.

TABLE 28 Front Panel LEDs (continued)






LED	Status	Description
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).

TABLE 28 Front Panel LEDs (continued)






LED	Status	Description
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.

TABLE 28 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p>5G Amber (solid)</p>	Radio is up, no clients are connected to the 5 GHz radio.
5G	 <p>5G Solid Green</p>	Radio is up, at least one client is connected to the 5 GHz radio.
5G	 <p>5G Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

T750SE


The Ruckus T750SE is a high-end dual-band outdoor Wi-Fi 6 AP with external antenna connectors that supports 8 spatial streams (4x4:4 in 5GHz, 4x4:4 in 2.4GHz).

The T750SE provides advanced 802.11ax features including OFDMA and MU-MIMO, and supports up to 1,024 client connections with increased capacity, improved coverage and performance in ultra-high density environments.

The T750SE includes a 2.5 GbE Ethernet PoE+ port for high speed Ethernet backhaul, along with an SFP fiber port for fiber backhaul. Additionally, it includes built-in GPS, USB port, gigabit PoE out port, and IP-67 rated weather proofing.

This section describes the physical features of the Ruckus Unleashed T750SE AP.

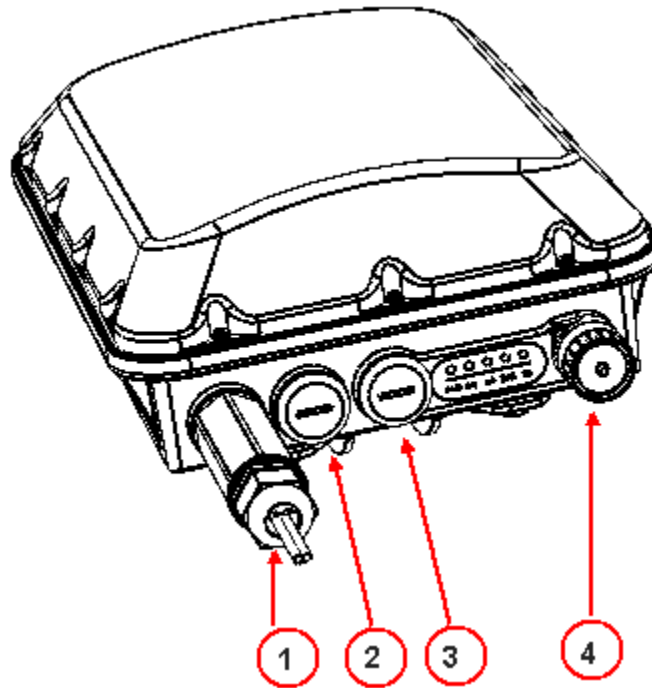FIGURE 28 Unleashed T750SE Access Point



- 1. SFP port
- 2. PoE IN

- 3. PoE OUT
- 4. AC port

Front Panel

The T750SE AP features five LEDs on its front panel.

TABLE 29 Front Panel LEDs



LED	Status	Description
PWR	 PWR Off	No power connected.
PWR	 PWR Solid Red	Boot up in process.

TABLE 29 Front Panel LEDs (continued)






LED	Status	Description
PWR	 PWR Flashing Green	System started, no routable IP address detected.
PWR	 PWR Solid Green	Routable IP address received.
CTL	 CTL Off	Unleashed Member AP.
CTL	 CTL Flashing Green (slow, every 2 seconds)	Network problem. Cannot contact Unleashed Master.
CTL	 CTL Flashing Green (fast, 2x per second)	Receiving configuration or image upgrade.

TABLE 29 Front Panel LEDs (continued)


LED	Status	Description
CTL	 CTL Solid Green	Unleashed Master AP.
AIR	 AIR N/A	No upstream mesh connection (Root AP).
AIR	 AIR	Upstream mesh connection established (Mesh AP).
AIR	 AIR	Upstream mesh connection issue.
2.4G	 2.4G Off	Radio is down.

TABLE 29 Front Panel LEDs (continued)



LED	Status	Description
2.4G	 2.4G Amber (solid)	Radio is up, no clients are connected to the 2.4 GHz radio.
2.4G	 2.4G Solid Green	Radio is up, at least one client is connected to the 2.4 GHz radio.
5G	 5G Off	Radio is down.
5G	 5G Amber (solid)	Radio is up, no clients are connected to the 5 GHz radio.
5G	 5G Solid Green	Radio is up, at least one client is connected to the 5 GHz radio.

TABLE 29 Front Panel LEDs (continued)

LED	Status	Description
5G	 <p data-bbox="469 527 488 543">5G</p> <p data-bbox="415 573 542 594">Flashing Green</p>	Radio is up, at least one downstream Mesh AP is connected to the 5G radio.

Setting Up an Unleashed Wi-Fi Network


- Overview of the Setup Process..... 129
- Step 1: Unpack and Install the Unleashed Master AP..... 130
- Step 2: Configure Your Unleashed Network..... 130
- Step 3: Customize Your Wireless LANs..... 153
- Step 4: Deploy Additional Unleashed Member Access Points..... 155

Overview of the Setup Process

The following section describes the steps required for setup and configuration of a Ruckus Unleashed wireless network.

1. [Step 1: Unpack and Install the Unleashed Master AP](#) on page 130
2. [Step 2: Configure Your Unleashed Network](#) on page 130
3. [Step 3: Customize Your Wireless LANs](#) on page 153
4. [Step 4: Deploy Additional Unleashed Member Access Points](#) on page 155
5. Begin Using Your Ruckus Unleashed Network!

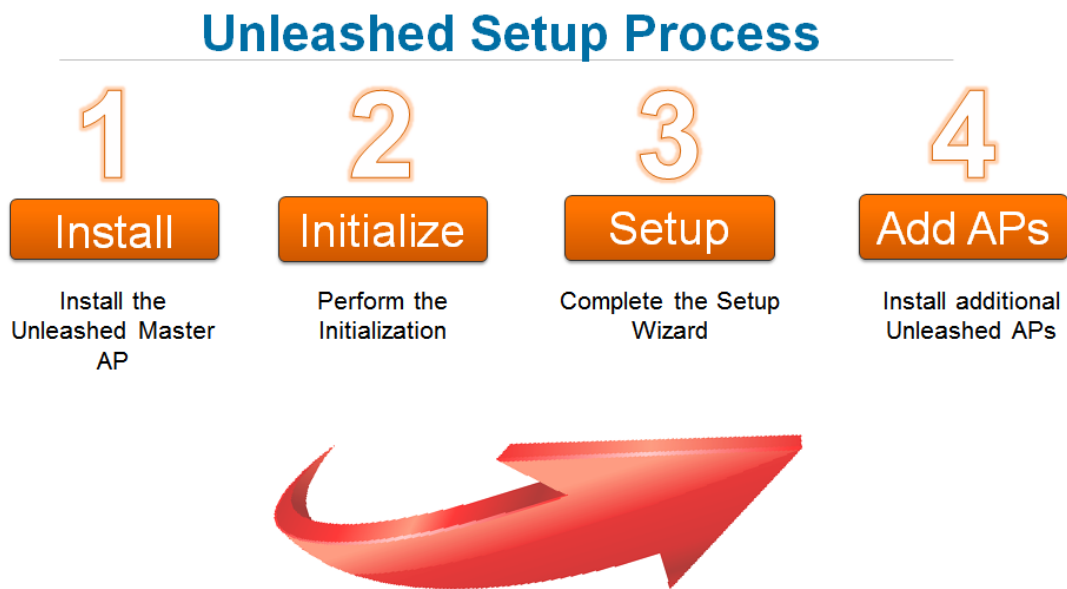FIGURE 29 Unleashed setup overview



NOTE

For a video presentation of this setup process, see the Ruckus Training video [Installing the Unleashed Master AP](#).

Setting Up an Unleashed Wi-Fi Network

Step 1: Unpack and Install the Unleashed Master AP

Step 1: Unpack and Install the Unleashed Master AP

1. Choose which Unleashed AP will become the Unleashed Master AP (the AP that performs all of the control functions of your Unleashed network). Any Unleashed AP can be the Master.

NOTE

Do NOT connect multiple APs to power and the network all at once. In the initial setup stage, you should choose one AP as the Master AP and connect it to the network and power, and then complete the initial setup steps on this Master AP before connecting any other APs. Once setup is complete, you can continue connecting other APs to power and the network.

2. Perform the hardware installation according to the instructions in the *Unleashed Access Point Quick Setup Guide* that is included in the box with each Unleashed AP.
3. Once powered on and connected to the local network, the Unleashed AP boots up and begins broadcasting a temporary unencrypted WLAN named "ConfigureMe-[xxxxxx]".

NOTE

DNS-spoof is enabled on the AP to intercept DNS queries and respond with the Master AP's IP address. Clients associated to this temporary WLAN do not have Internet access.

Step 2: Configure Your Unleashed Network

Unleashed can be deployed using either a Mobile App (available for iOS and Android), or using your PC's web browser.

Beginning with release 200.7, Unleashed initial setup can also be performed using the command line interface (CLI).

Refer to the relevant section depending on which method you prefer to use:

Step 2a: Setup Using the Mobile App

To perform setup using the Mobile App, download the iOS or Android app from your app store.



As soon as the AP is powered on and connected to the local network, it boots up and begins broadcasting a temporary unencrypted WLAN named "Configure.Me-[xxxxxx]" from both radios.

1. Using your client's Wi-Fi connection settings, select and associate to the "Configure.Me-[xxxxxx]" WLAN.

2. Launch the app, and follow the on-screen instructions to configure your RUCKUS Unleashed networks.

For a quick installation, click **Typical Install** > **Start** > **Quick Install**.

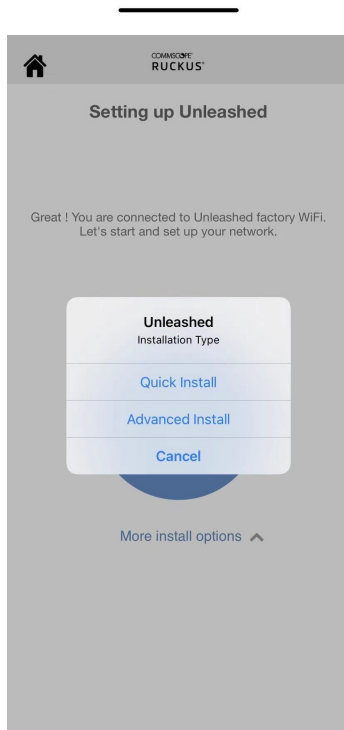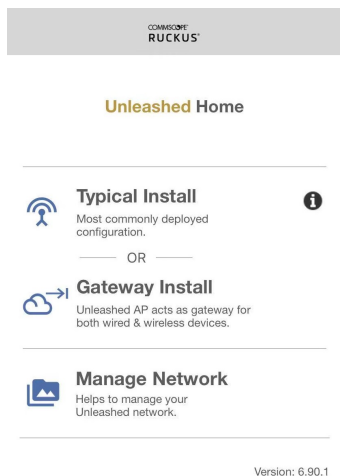FIGURE 30 RUCKUS Unleashed Mobile App for iOS and Android



Setting Up an Unleashed Wi-Fi Network



Step 2: Configure Your Unleashed Network

To configure RUCKUS Unleashed, in the **Wireless LAN** page, enter WLAN name, password, and the country where the AP is located, and click **Next**. In the **Administration** page, enter admin username and password, and click **Finish**.

The screenshot shows the 'Configure Unleashed' interface for the 'Wireless LAN' section. At the top, the RUCKUS logo is visible. Below the title, there are two step indicators: 'Step 1' (highlighted) and 'Step 2'. The form contains three input fields: 'WLAN Name' with the value 'Ruckus-Wireless 1', 'WLAN Password' (empty), and 'Country where AP is located' with the value 'US'. At the bottom, there are 'Back' and 'Next' buttons.


The screenshot shows the 'Configure Unleashed' interface for the 'Administration' section. At the top, the RUCKUS logo is visible. Below the title, there are two step indicators: 'Step 1' and 'Step 2' (highlighted). The form contains two input fields: 'Admin Username' with the value 'admin' and 'Admin Password' (empty). At the bottom, there are 'Back' and 'Finish' buttons.

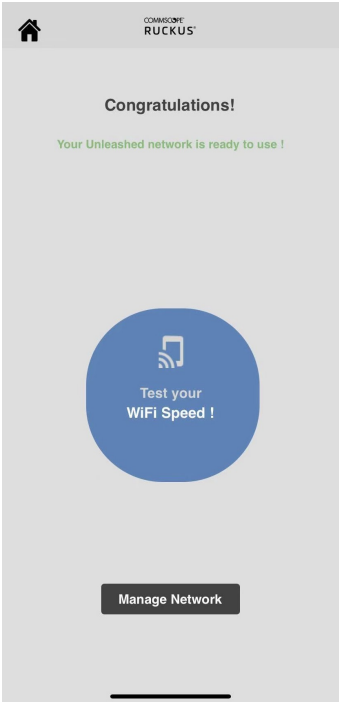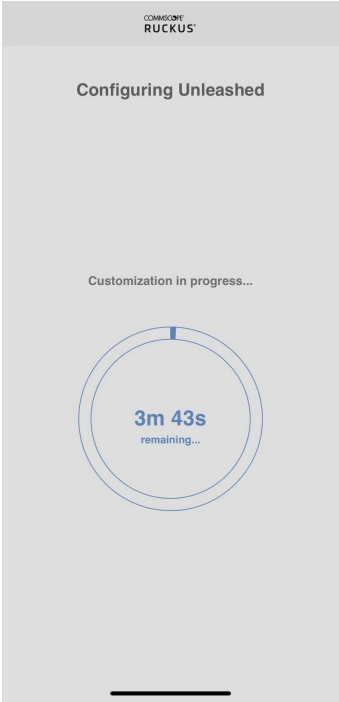Setting Up an Unleashed Wi-Fi Network
Step 2: Configure Your Unleashed Network



Setting Up an Unleashed Wi-Fi Network
Step 2: Configure Your Unleashed Network

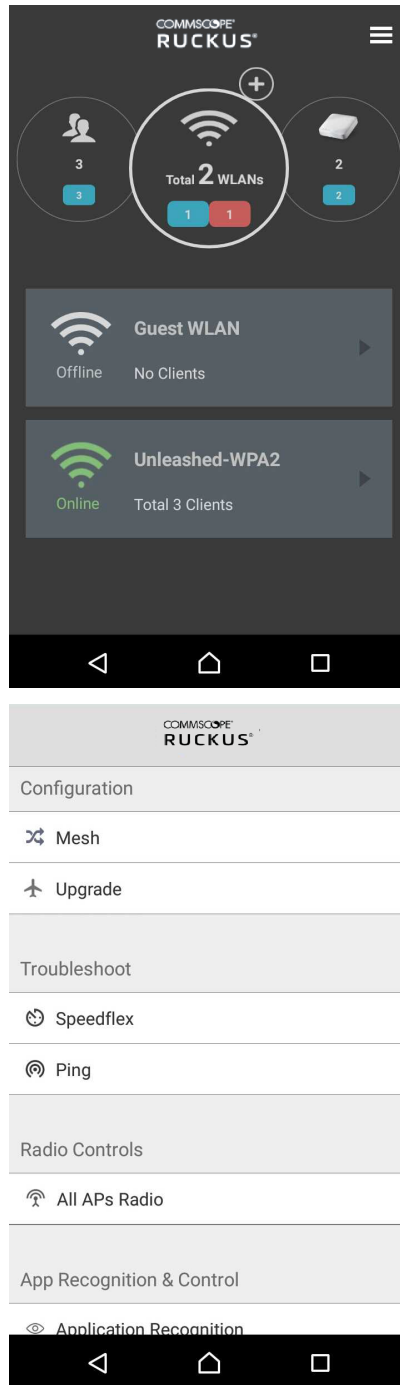FIGURE 31 Configuring RUCKUS Unleashed from the Mobile App for iOS and Android



Step 2b: Setup Using a Web Browser

To perform setup using a web browser, connect to the RUCKUS Unleashed setup network using any Wi-Fi capable client device.


1. Using your the Wi-Fi configuration settings on your client device (such as a laptop or mobile device), select and associate to the **Configure.Me-[xxxxxx]** WLAN, and launch a web browser.

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

2. In your browser's URL bar, enter the following address and press **Enter**: unleashed.ruckuswireless.com.

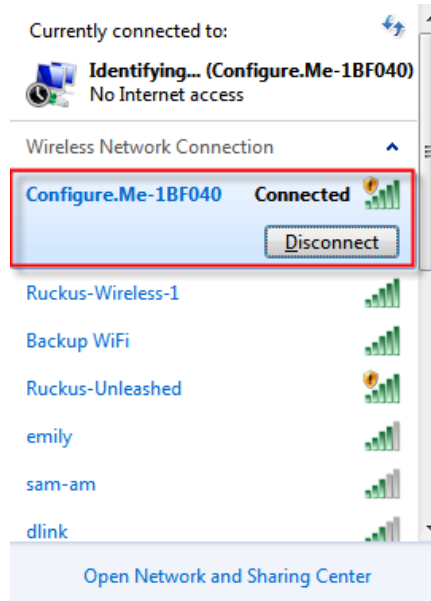FIGURE 32 Connecting to "Configure.Me-[xxxxxx]" WLAN, then launch a web browser




Depending on your browser, you may be presented with one of the following security warnings:

- This connection is not trusted (Firefox)
- Your connection is not private (Chrome)
- There is a problem with this website's security certificate (Internet Explorer)

This is normal, as the RUCKUS Unleashed AP does not have an SSL certificate that is recognized by your browser.

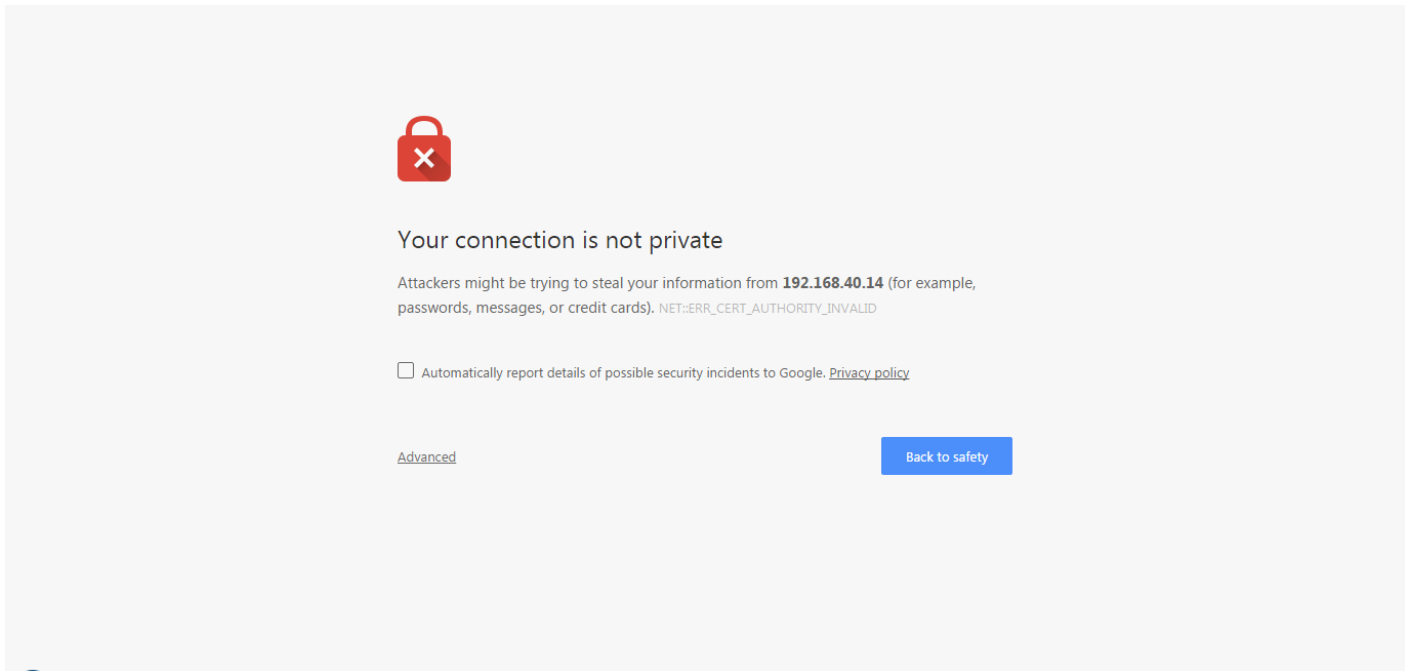FIGURE 33 Security Warning (Chrome)



3. In response to the security warning, complete one of the following processes:
 - Click **I Understand the Risks > Add Exception... > Confirm Security Exception** (Firefox)
 - Click **Advanced > Proceed to [IP address] (unsafe)** (Chrome)
 - Click **Continue to this website (not recommended)** (Internet Explorer)

You will be redirected to the *Setup Wizard*, which guides you through the process of setting up the Master AP.

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

4. Work through the Setup Wizard and check your configuration choices on the final page, before clicking **Finish** to complete the setup.
 - a) On the first page of the wizard, select your language from the menu.
 - b) Under **Quick Install**, fill in the following options:
 - Under **Wireless LAN**, enter the name (ESSID) and password.
 - Under **Administrator**, enter the admin username and password.
 - Under **Country Code**, select a country.

FIGURE 34 Installation Page

The screenshot shows the 'Unleashed Installation' page. At the top right, there is a language dropdown menu set to 'English'. Below this, there are two main installation options: 'Quick Install' (highlighted with a red box) and 'Custom Install' (highlighted with a blue box). The 'Quick Install' section is selected and contains the following fields:

- Wireless LAN:**
 - Name (ESSID):** Ruckus-Wireless 1
 - Passphrase:** (empty field with a strength indicator icon)
- Administrator:**
 - Admin Username:** admin
 - Password:** (empty field with a strength indicator icon)
- Country Code:** United States (dropdown menu)

A note below the password field states: 'If a Ruckus ICX switch is managed by Unleashed then it will use the same login credentials as provided above.' At the bottom right of the page, the version '200.10.10.5.88' and a 'Local Upgrade' link are visible.

NOTE

Click **Custom Install** for other installation options. For more information, refer to [Advanced Install](#) on page 138 and [UMM Install](#) on page 146. For information on **Local Upgrade** options, refer to [Installation with Local Upgrade](#) on page 148.

Advanced Install

Advanced install is the most typical way to install if you do not want to use UMM.

1. On the first page of the **Installation** window, select **Custom Install > Advanced Install**.

2. On the **System** page, complete the following steps:

- a) Select the language from the menu.
- b) Enter a name for the Unleashed system. This system name can be used to identify the Unleashed device on your local area network.
- c) Select your country code from the menu.

NOTE

The **Country Code** option is not displayed if the AP is shipped from the factory with a fixed country code.

- d) If you want to enable Mesh networking for your Unleashed network, select the **Mesh** check box. Refer to [Mesh Networking](#) on page 369 for more information.

NOTE

If the Unleashed AP does not support Mesh (for example, the R310), it can be configured as the Unleashed Master AP, but it will not be able to participate in the Mesh network.

NOTE

If the Master AP is in Gateway mode and the WAN port is connected through PPPoE, Mesh can be enabled, but the Master AP cannot be a member of a Mesh tree; all of the other connected member APs can be part of a Mesh tree.

- e) Click **Next** to continue.

FIGURE 35 Setup Wizard : System Page

1 System 2 IP setting 3 Wireless LAN 4 Administrator 5 Review

Version: 200.7.10.2.222

* Language: English

* Name: Unleashed

Mesh:

* Mesh Name (ESSID): Mesh-941849001125

* Mesh Passphrase: DWWhs8p--R45sUbyT2VJUR0d

Select the display language that you want to use on the Web interface.

Name your system 32 characters max using alphanumeric characters excluding space.

Select this check box to enable Mesh for the Unleashed Network.

Each mesh-enabled Unleashed requires a unique name(SSID) for the mesh WLAN for the backbone traffic.

Generate

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

- On the **IP Setting** page, select whether the AP will serve as a gateway using one Ethernet port as a WAN port (connected to a cable or DSL modem, PPPoE connection, and so on), and the other as a LAN port.

NOTE

If your modem or router already provides gateway functionality, do not enable Gateway mode on the Unleashed Master AP. For more information, refer to [Gateway Mode](#) on page 346.

- Select whether to assign a manual IP address or allow the system to obtain an IP address automatically using DHCP. The default is **DHCP** (Dynamic).

NOTE

If you plan to manually assign and maintain IP addresses for your wireless network, select **Manual (Static)** and enter the IP address of your Unleashed Master AP. Ensure that the IP address is outside the range assigned for Wi-Fi clients. Otherwise, leave the default of **DHCP** (Dynamic) and let Unleashed do all the work for you.

- If you select **Manual**, enter an IP Address, netmask, gateway address, and DNS server addresses in the fields provided.

NOTE

Optionally, if a manual IP address is configured, you can enable the built-in DHCP Server to provide IP addresses to clients on Unleashed subnet. For more information, refer to [DHCP Server](#) on page 352.

FIGURE 36 Setup Wizard: IP Setting Page


The screenshot shows the IP Setting page in the Setup Wizard. At the top, there is a progress bar with five steps: 1. System, 2. IP setting (highlighted in orange), 3. Wireless LAN, 4. Administrator, and 5. Review. Below the progress bar, there is a 'Gateway Mode' checkbox. Underneath, there is a 'WAN IP Address' dropdown menu. Below that, there are two radio buttons: 'Manual' and 'DHCP'. The 'DHCP' radio button is selected. Under the 'Manual' radio button, there are five input fields: 'IP Address' (192.168.0.4), 'Netmask' (255.255.255.0), 'Gateway' (192.168.0.1), 'Primary DNS Server' (66.90.130.101), and 'Secondary DNS Server' (216.82.201.11).

- If Gateway mode is enabled, select whether to assign a manual IP address or allow the system to obtain an IP address automatically using DHCP or PPPoE for the WAN port, and configure the local subnet settings for the LAN port. Under **Standby WAN Port**, select whether to assign a manual IP address or allow the system to obtain an IP address automatically using DHCP. The default is **DHCP** (Dynamic). For more information on Gateway mode, refer [Gateway Mode](#) on page 346.

NOTE

A standby WAN port is applicable only for the H350 AP and H550 AP.

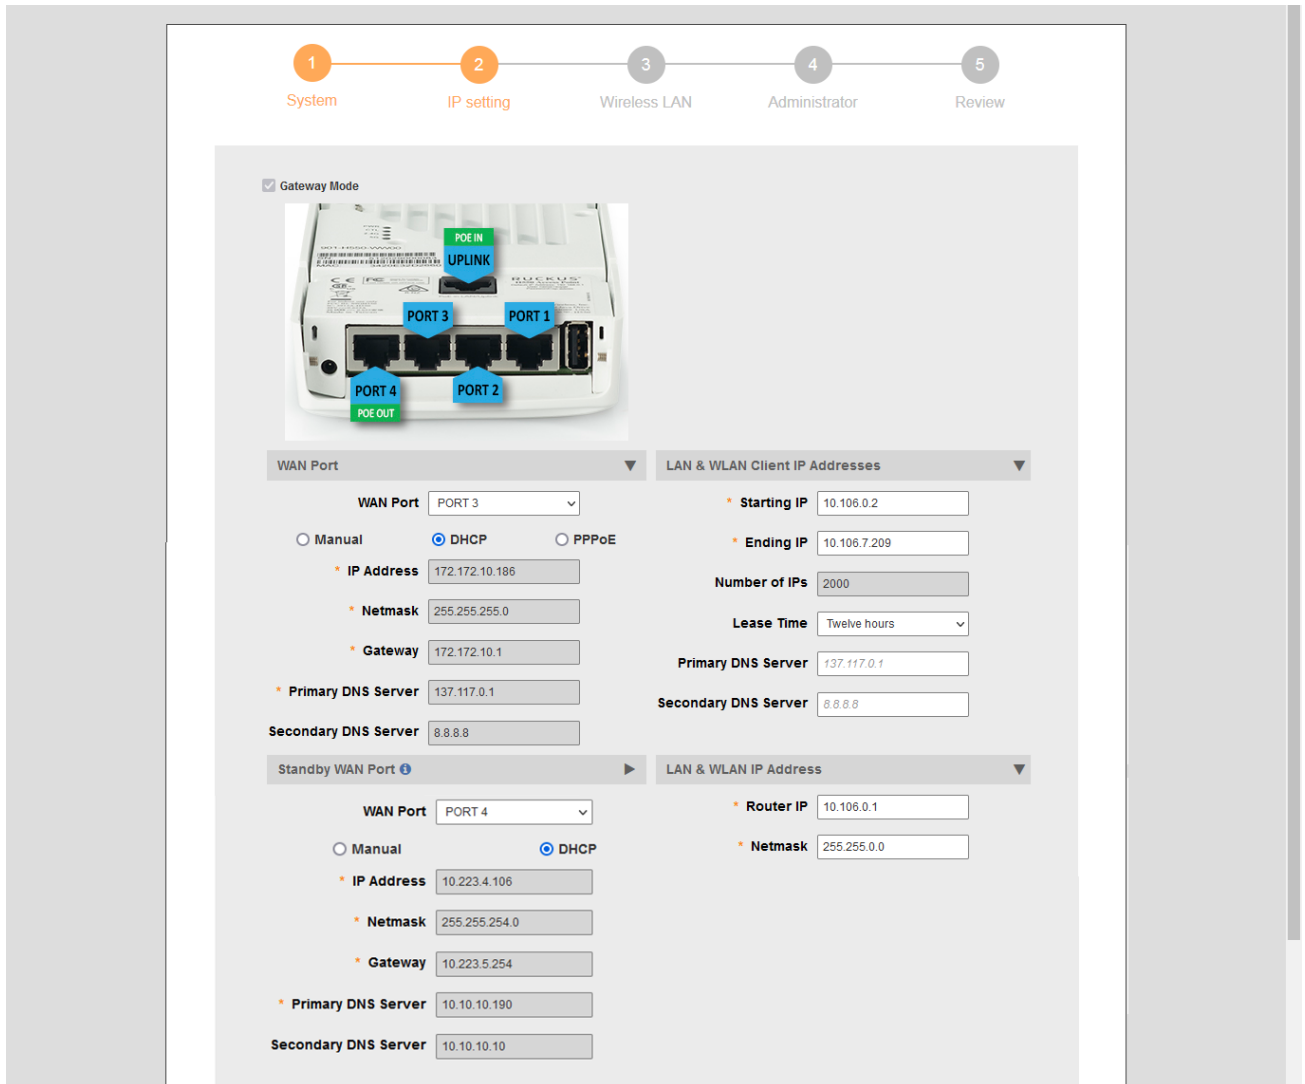FIGURE 37 Enabling Gateway Mode



d) Click **Next** to continue.

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

4. On the **Wireless LAN** page, complete the following steps:
 - a) In the **Name (ESSID)** field, enter a name for your first wireless LAN.
 - b) For **Password Protect (WPA2)**, select **Yes** or **No**.

NOTE

WPA2 is highly recommended for the highest level of security.

- c) If WPA2 encryption is selected, enter a password. The password must contain from 8 through 63 alphanumeric characters.
- d) Click **Next** to continue.

FIGURE 38 Setup Wizard: Wireless LAN Page

The screenshot displays the 'Wireless LAN' configuration page in a five-step wizard. Step 3, 'Wireless LAN', is the active step. The form includes:

- Name (ESSID):** A text input field containing 'Unleashed'. A note states: 'Name your own wireless LAN. The name will be shown in wireless LAN list. It will be shown as "Ruckus-Wireless 1" without changing.'
- Password Protect (WPA2):** Radio buttons for 'Yes' (selected) and 'No'.
- Password:** A text input field with asterisks and a visibility icon. A note states: 'It is *highly recommended* setting password protection for wireless LAN. So only authorized users can join. Password can only contain between 8 and 64 characters and no spaces are allowed.'

5. On the **Administrator** page, complete the following steps:
 - a) Enter your admin username and password.
 - b) Re-enter the password in the **Confirm Password** field.
 - c) (Optional) Click the **Password Recovery** check box.
 - d) Optionally, enter a security email address, security question, and security answer to allow you to reset your password in the event that your username or password is forgotten.
 - e) Click **Next** to continue.

FIGURE 39 Setup Wizard: Administrator Page

The screenshot shows the Administrator page of the Setup Wizard. At the top, a progress bar indicates five steps: 1 System, 2 IP setting, 3 Wireless LAN, 4 Administrator, and 5 Review. Step 4 is highlighted. Below the progress bar, the form contains the following fields and instructions:


- * Admin Username:** This username and the following password will permit admin access to web interface after the set up is done.
- * Password:** The password can only contain between 4 and 32 characters and cannot have "" or "\$()", and no spaces are allowed.
- * Confirm Password:** Enter the above password again.
- Password Recovery:**
- * Security Email:** The will be used to reset forgotten password
- * Security Question:** The will be used to reset forgotten password
- * Security Answer:** your answer to security questions

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

- On the **Review** page, check that all the settings you have made are correct. If any settings must be changed, click **Back** to return to the previous wizard page.

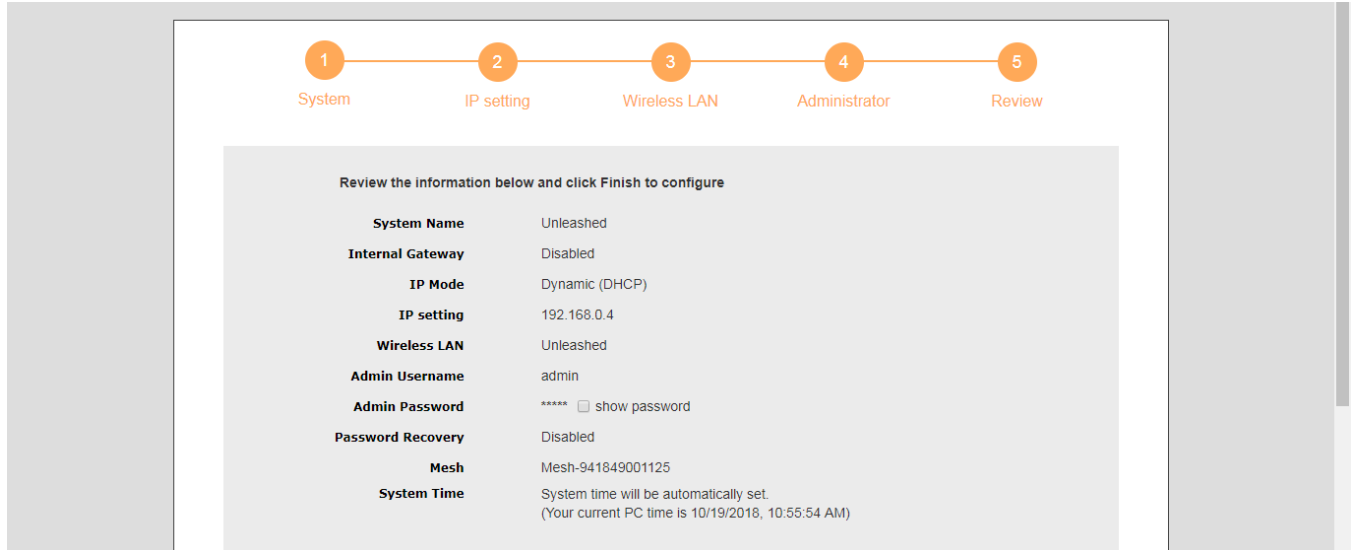FIGURE 40 Setup Wizard: Review Page




- If you are satisfied with your choices, click **Finish** to complete the setup.

After clicking the **Finish** button, the Unleashed Master AP reboots and a **Configuring system settings & rebooting** page is displayed. Wait for the progress screen to complete before proceeding.

NOTE


Do not disconnect power or network cables during this process, and do not click Back or Refresh in your browser.

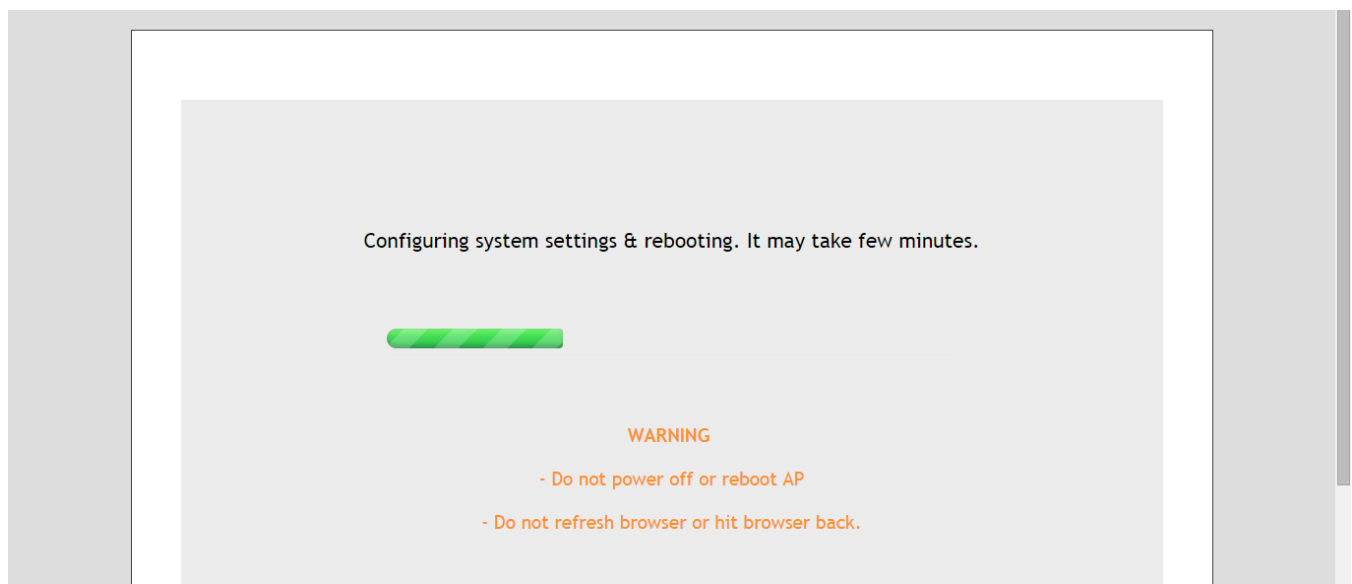FIGURE 41 Configuring System Settings & Rebooting Page




- After setup is complete, the **Congratulations!** page is displayed. Ensure that you are connected to the WLAN that you configured, and click **Finish**. You will be redirected to the login page.

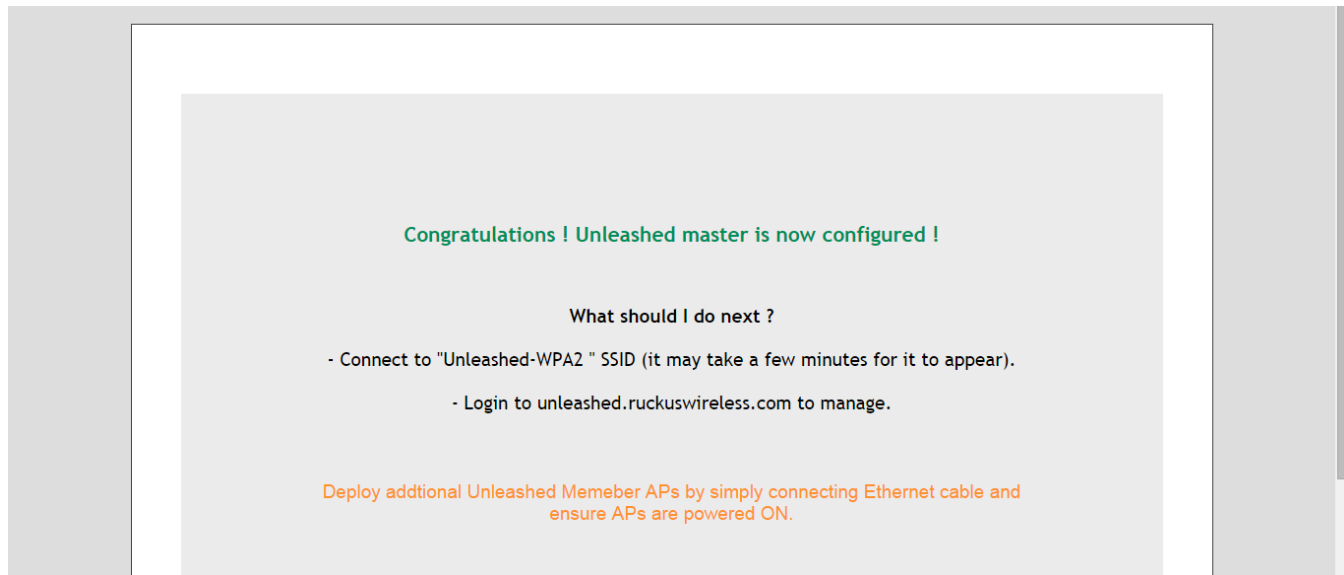FIGURE 42 Congratulations! Page



- On the login page, enter your username and password, and click **Unleash**.

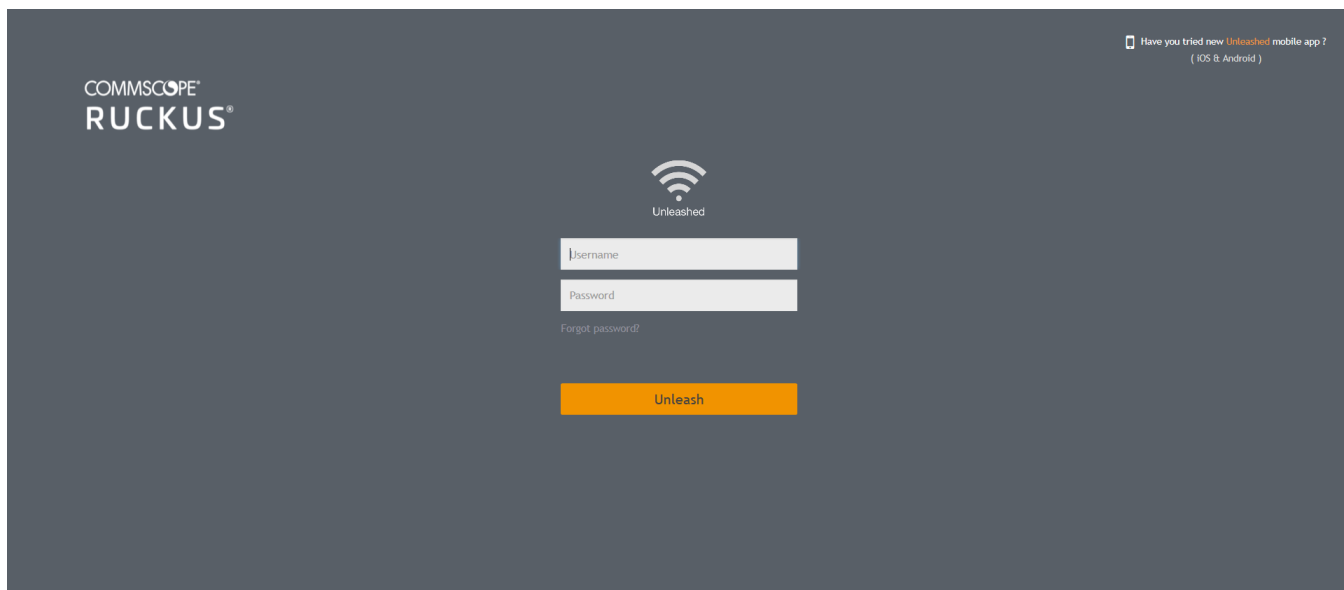FIGURE 43 Login Page




Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

10. After a successful login, the **Unleashed Dashboard** is displays an overview of your RUCKUS Unleashed network.

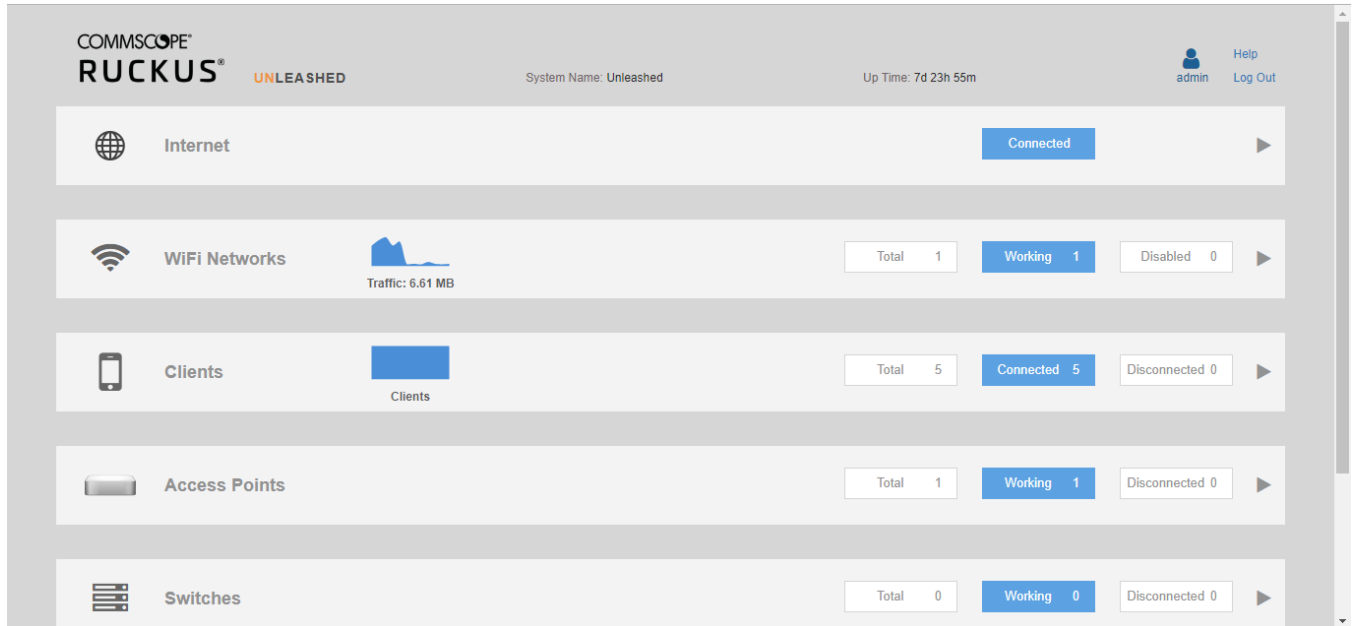FIGURE 44 Unleashed Dashboard



11. Continue to [Step 3: Customize Your Wireless LANs](#) on page 153.

UMM Install

If an Unleashed Multi-Site Manager (UMM) server is available, you can allow automatic Unleashed deployment configuration by running a configuration template from the UMM server to the Unleashed Master AP during setup.

To enable UMM easy deployment:

1. On the second page of the installation wizard, select **UMM Install**.
2. Enter the **UMM Domain/IP** address.
3. Enter the **Config Template Name** of the deployment configuration template configured on UMM for the Unleashed network.
4. Click **Next**. The Unleashed AP attempts to connect to the UMM server to retrieve the configuration template.

5. If successful, the configuration template is pushed to the AP and the Unleashed deployment is configured according to the template.

FIGURE 45 UMM Install

Unleashed Installation

Advanced Install This is the most typical way to install if one do not want to use UMM


UMM Install Use image from UMM to install an Unleashed network

* UMM Domain/IP: UMM address from where the Unleashed Network can retrieve configuration

* Config Template Name: Configuration template pre-stored in UMM for the Unleashed Network

* System Name: Name your system 32 characters max using alphanumeric characters excluding space.

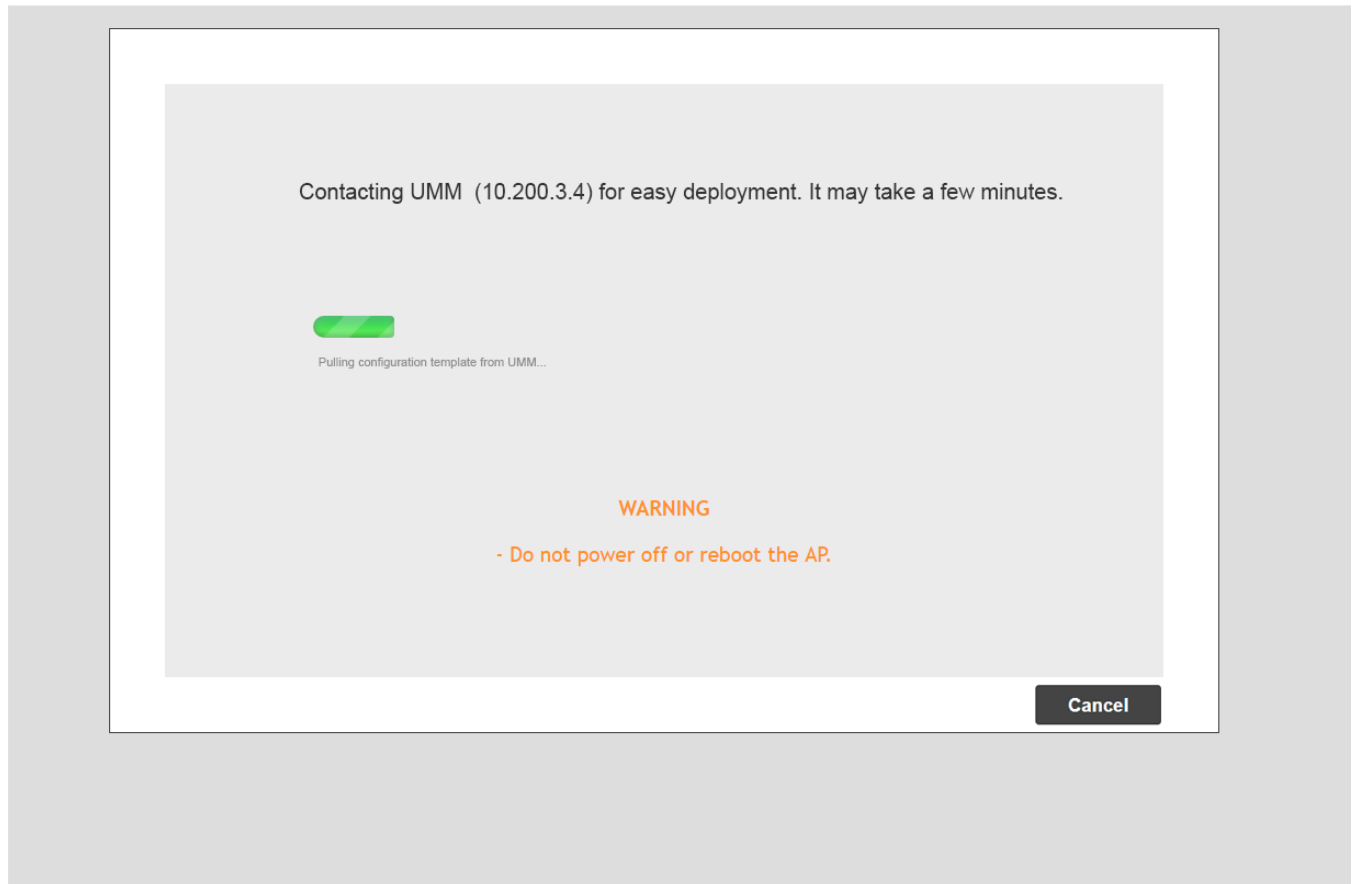FIGURE 46 Contacting UMM for Easy Deployment



Installation with Local Upgrade

The Local Upgrade option during the installation settings allows the admin to upgrade the RUCKUS Unleashed firmware to a newer release build prior to deployment.

To perform a local upgrade before completing the RUCKUS Unleashed setup:

1. On the first page of the setup wizard, select **Local Upgrade**. The *Local Upgrade* page appears.
2. Click **Choose File** and select the locally stored RUCKUS Unleashed image file.
3. Click **Upgrade**.

- When complete, click **Reboot** to reboot the AP and restart the installation process using the new firmware.

FIGURE 47 Local Upgrade - Installation Page


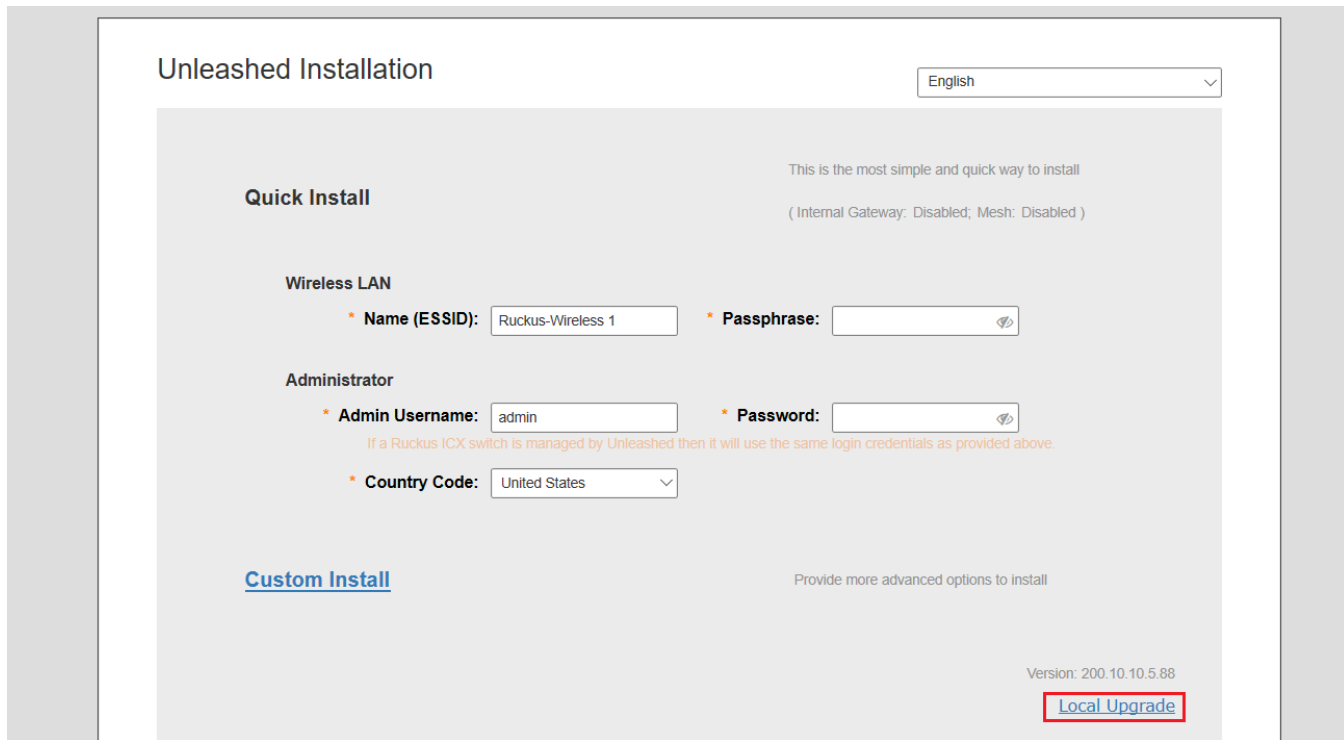


FIGURE 48 Choose Local Image File to Upgrade

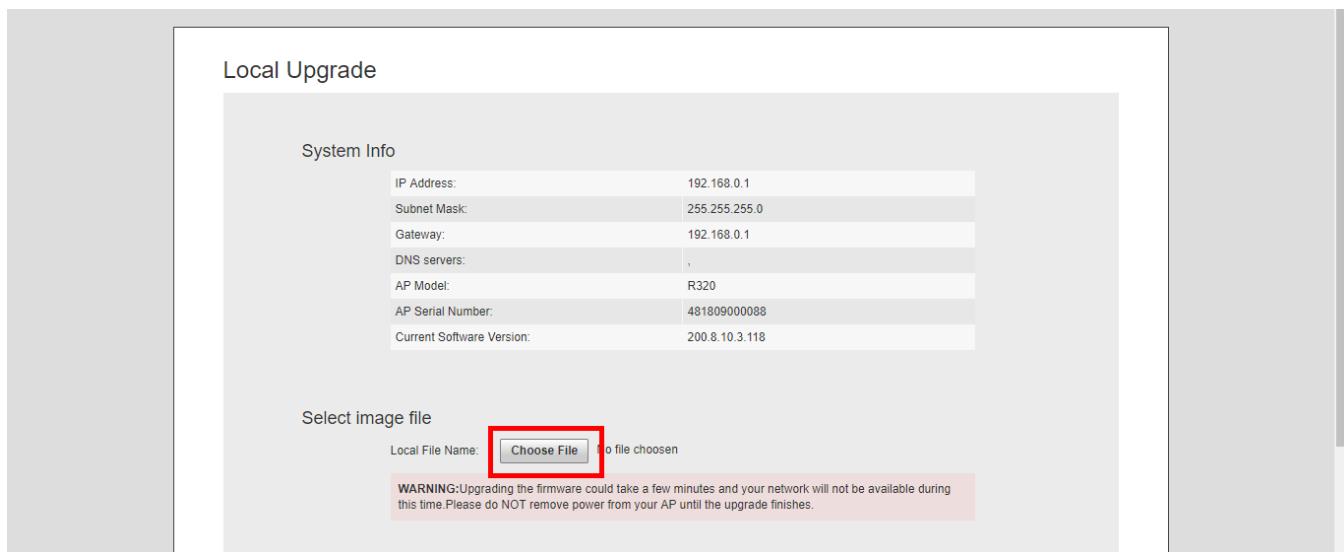

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

Step 2c: Setup Using the Command Line Interface

The CLI setup wizard allows you to quickly configure your Unleashed Master AP with basic settings using a short series of CLI commands.

To perform Unleashed setup using CLI commands, use the following procedure:

1. When the Unleashed AP is in factory default state, associate to the "Configure.Me-xxxxxx" WLAN and connect to the Unleashed CLI using SSH (default IP address: **unleashed.ruckuswireless.com** or **10.154.231.125**), and log in using the default user name and password:
 - Please login: **super**
 - Password: **sp-admin**

NOTE

For information on using the Unleashed CLI, see the *Unleashed Command Line Interface Reference Guide*, available from support.ruckuswireless.com.

The Unleashed CLI Wizard Configuration Tool starts automatically.

- Follow the instructions in the setup wizard to configure your Unleashed Master AP. The following are two examples.

Configure Unleashed AP to Bridge Mode

```
Please login: super
Password: *****

Welcome to Ruckus Wireless Unleashed CLI Setup Wizard

Would you like to start the Setup Wizard? [yes/no]: yes

Enter the way of installation. 1. easy-deployment installation 2. local wizard [1/2] 2

Enter Administrative User Name (32 characters max) [admin]:
admin
Enter Administrator Password (4-32 characters):
*****
Re-enter Administrator Password (4-32 characters):
*****

Enter System Name (32 characters max) [Ruckus-Unleashed]:
Unleashed

Enter Country Code (or 'help' to show the list) [US]: US

Enable Mesh [yes/NO]? no

Enable Gateway Mode [yes/NO]? no

Enter WAN IP type [1]:
  1: DHCP Mode;
  2: Manual Mode;
1

Enable WLANs [YES/no]? yes

Enter Wireless LAN (ESSID, 1-32 characters) [Ruckus-Wireless 1]:
Unleashed-SSID
Is it an Open WLAN [yes/NO]? no
Enter the WPA2 Passphrase (8-63 characters): *****
Re-enter the WPA2 Passphrase (8-63 characters):
*****

Please review the following settings:
System Name=           Unleashed
Administrator Name=    admin
Country Code=          US
Mesh Supported=        Disable
Gateway Mode Supported= Disable
IPv4 Mode=             DHCP
WLAN ESSID=            Unleashed-SSID
Wireless Authentication= WPA2_PSK

Done with the Setup Wizard [yes/no]? yes

Save the configuration ...

It will take a few minutes to complete, do not power off the AP! This AP will reboot automatically.

Welcome to Ruckus Unleashed Network Command Line Interface
ruckus>
```

Configure Unleashed AP to Gateway Mode

Setting Up an Unleashed Wi-Fi Network

Step 2: Configure Your Unleashed Network

```
Please login: super
Password: *****

Welcome to Ruckus Wireless Unleashed CLI Setup Wizard

Would you like to start the Setup Wizard? [yes/no]: yes

Enter the way of installation. 1. easy-deployment installation 2. local wizard [1/2] 2

Enter Administrative User Name (32 characters max) [admin]:
admin
Enter Administrator Password (4-32 characters):
*****
Re-enter Administrator Password (4-32 characters):
*****

Enter System Name (32 characters max) [Ruckus-Unleashed]:
Unleashed-Gateway

Enter Country Code (or 'help' to show the list) [US]: US

Enable Mesh [yes/NO]? no

Enable Gateway Mode [yes/NO]? yes

Enter AP R510 WAN Port:
  1: port1, eth0, UP:
  2: port2, eth1, DOWN:
1

Enter WAN IP type [1]:
  1: DHCP Mode;
  2: Manual Mode;
  3: PPPOE Mode;
1

Enter LAN & WLAN IP Address [10.106.0.1]:
192.168.1.1
Enter LAN & WLAN IP Netmask [255.255.0.0]:
255.255.255.0
Enter Client Starting IP Address [10.106.0.2]:
192.168.1.2
Enter Client Ending IP Address [10.106.7.209]:
192.168.1.200

Enter Lease Time [2]:
  1: 6 hours;
  2: 12 hours;
  3: 1 day;
  4: 2 days;
  5: 1 week;
  6: 2 weeks;
1

Enable WLANs [YES/no]? yes

Enter Wireless LAN (ESSID, 1-32 characters) [Ruckus-Wireless 1]:
Unleashed-SSID
Is it an Open WLAN [yes/NO]? no
Enter the WPA2 Passphrase (8-63 characters):
*****
Re-enter the WPA2 Passphrase (8-63 characters):
*****

Please review the following settings:
System Name=           Unleashed-Gateway
Administrator Name=   admin
Country Code=         US
Mesh Supported=       Disable
```

```
Gateway Mode Supported= Enable
WAN Port= port1 eth0 UP
IPv4 Mode= DHCP
LAN Port IPv4 Address Info= 192.168.1.1/255.255.255.0
Client Starting IPv4= 192.168.1.2
Client Ending IPv4= 192.168.1.200
Lease Time= 6 hours
WLAN ESSID= Unleashed-SSID
Wireless Authentication= WPA2_PSK
```

Done with the Setup Wizard [yes/no]? **yes**

Save the configuration ...

It will take a few minutes to complete, do not power off the AP! This AP will reboot automatically.

Welcome to Ruckus Unleashed Network Command Line Interface
ruckus>

Step 3: Customize Your Wireless LANs


Once the Unleashed Master AP has been initialized, you can fine-tune the settings of your first WLAN (that you created during the setup wizard), and create any additional WLANs needed prior to attaching additional Unleashed member APs.

Then, when you deploy additional member APs in whatever order you prefer, they will automatically retrieve all WLAN configuration settings (and any other settings you have configured) from the Unleashed Master AP.

To customize an existing wireless LAN:

1. From the **Dashboard**, click anywhere in the **Wi-Fi Networks** section to expand the display of your deployed WLANs.

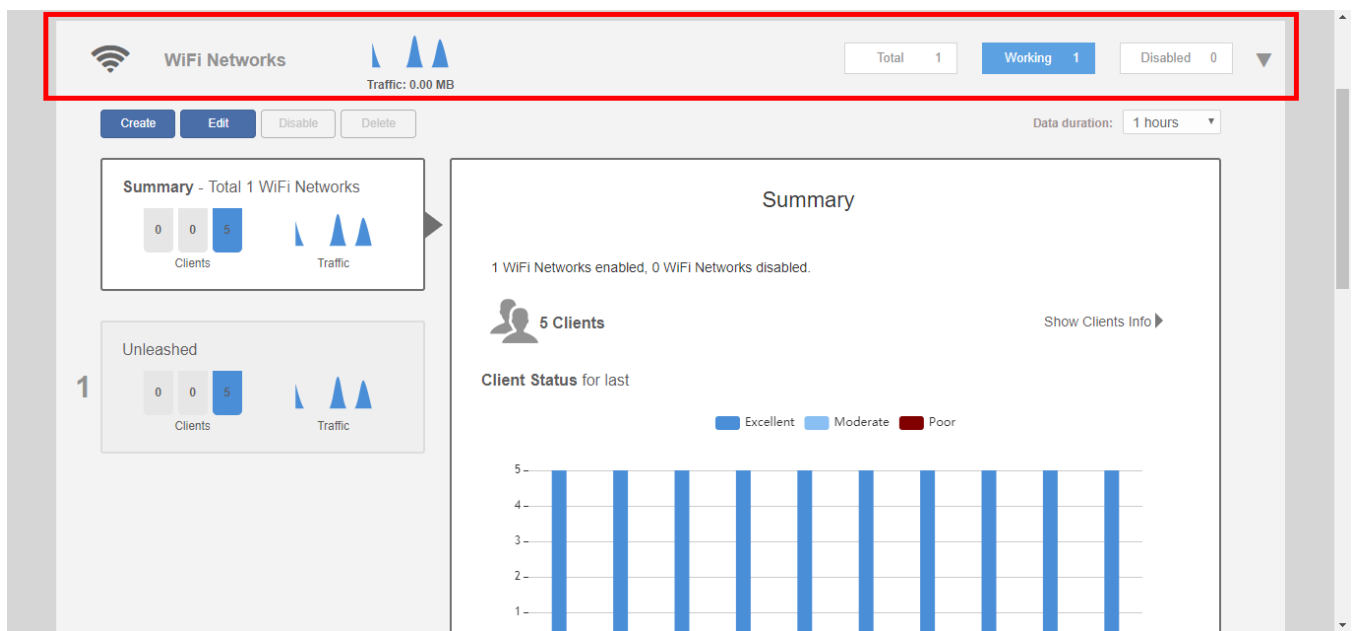FIGURE 49 Click the Wi-Fi networks section to expand




Setting Up an Unleashed Wi-Fi Network

Step 3: Customize Your Wireless LANs

2. Select the WLAN box from the list on the left, and click the **Edit** button to edit the WLAN's settings.

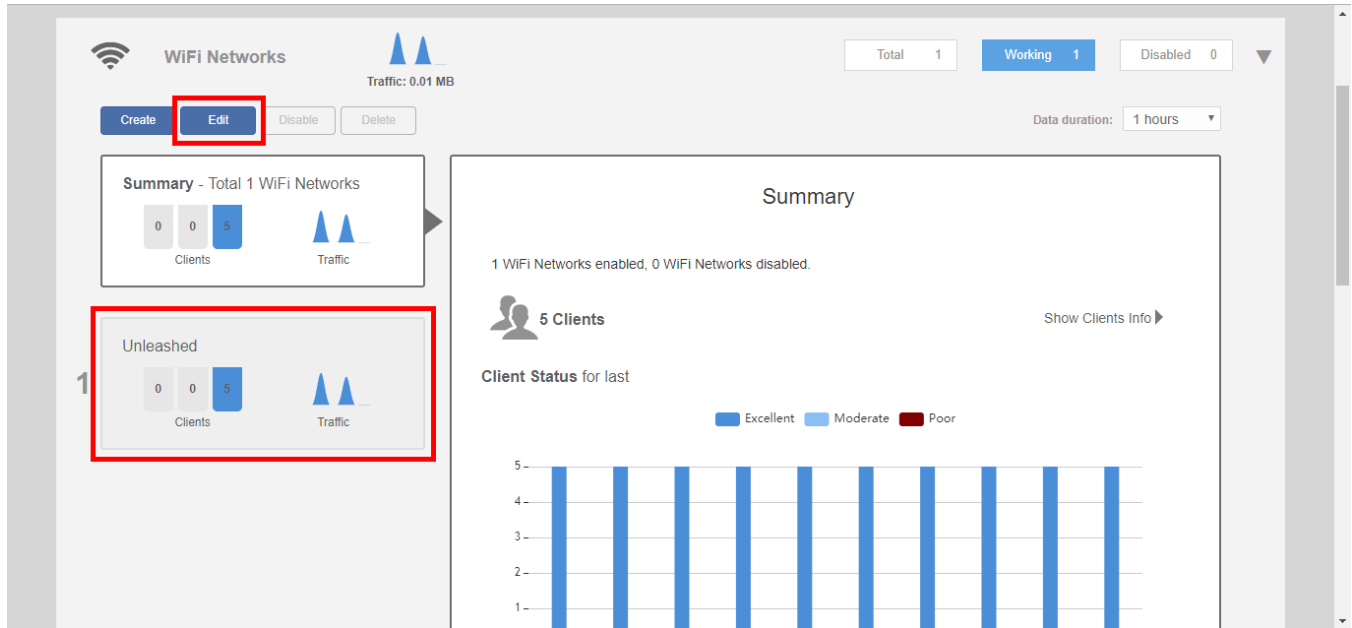FIGURE 50 Select WLAN and click Edit to configure the WLAN settings



3. Configure the following WLAN settings:
 - **Name:** Enter a recognizable name for this WLAN.
 - **Usage Type:** Select Standard for most typical wireless network usage scenarios. Select Guest Access to create a Guest WLAN, or select Hotspot to create a Hotspot WLAN.
 - **Authentication:** Select Open, for open authentication, or authenticate users against an internal local database or an external authentication server using 802.1X or MAC address.
 - **Authentication Server:** Select an AAA server (or Local Database) to authenticate users when 802.1X or MAC authentication method is selected.
 - **Encryption Method:** Select WPA2 for standard wireless security. Select None for no encryption.
 - **Password:** Enter a WPA2 password for use when connecting to this WLAN if WPA2 is selected.


NOTE

For information on additional WLAN configuration options, see [WLAN Configuration](#) on page 165.

4. Click **OK** to save your changes.

- Repeat for any additional WLANs you would like to create. All WLANs will be deployed to each new member AP as soon as it joins the Unleashed network.

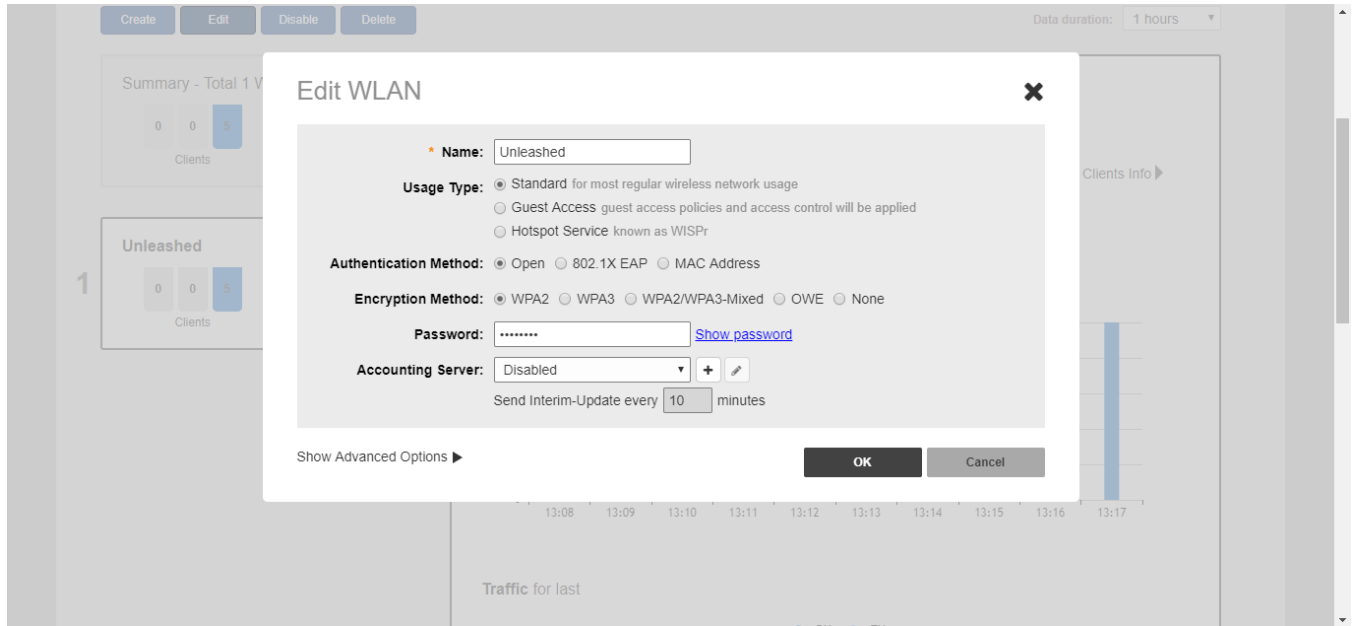FIGURE 51 Editing an existing WLAN



Congratulations! Your Unleashed network is now configured and ready for use. You may now proceed to [Step 4: Deploy Additional Unleashed Member Access Points](#) on page 155.

Step 4: Deploy Additional Unleashed Member Access Points

Deploying additional Unleashed member APs is simply a matter of connecting them via Ethernet to the same Layer 2 network and providing power. They will discover the Unleashed Master and join automatically. No additional steps are necessary.

The second and any additional APs that join an Unleashed network will automatically assume the role of Unleashed "member AP." Thereafter, if the Master AP goes offline, one of the member APs will become the new Master and assume control of the Unleashed network.

NOTE

When a member AP joins the Master for the first time, if it is running a different firmware version than the Master, it will automatically download and upgrade (or downgrade) itself to the correct firmware version to match that of the Master, reboot, and then rejoin the Unleashed network once the matching firmware is running.

Using the Admin Interface

- [Unleashed Administration Interface Overview.....](#) 157
- [Navigating the Dashboard.....](#) 157
- [Using the Dashboard Components.....](#) 158

Unleashed Administration Interface Overview

The Unleashed Admin Interface provides tools for use in managing all aspects of your Unleashed deployment.

It contains configuration pages for managing Internet connection status, Unleashed Access Points, ICX switches, wireless LANs, user accounts, system settings and administrator preferences.

Navigating the Dashboard

The RUCKUS Unleashed dashboard is the primary interface used for monitoring and configuring all aspects of your network. The RUCKUS Unleashed dashboard is divided into three main sections. These three main sections and their subsections are described in the following table.

FIGURE 52 RUCKUS Unleashed Dashboard

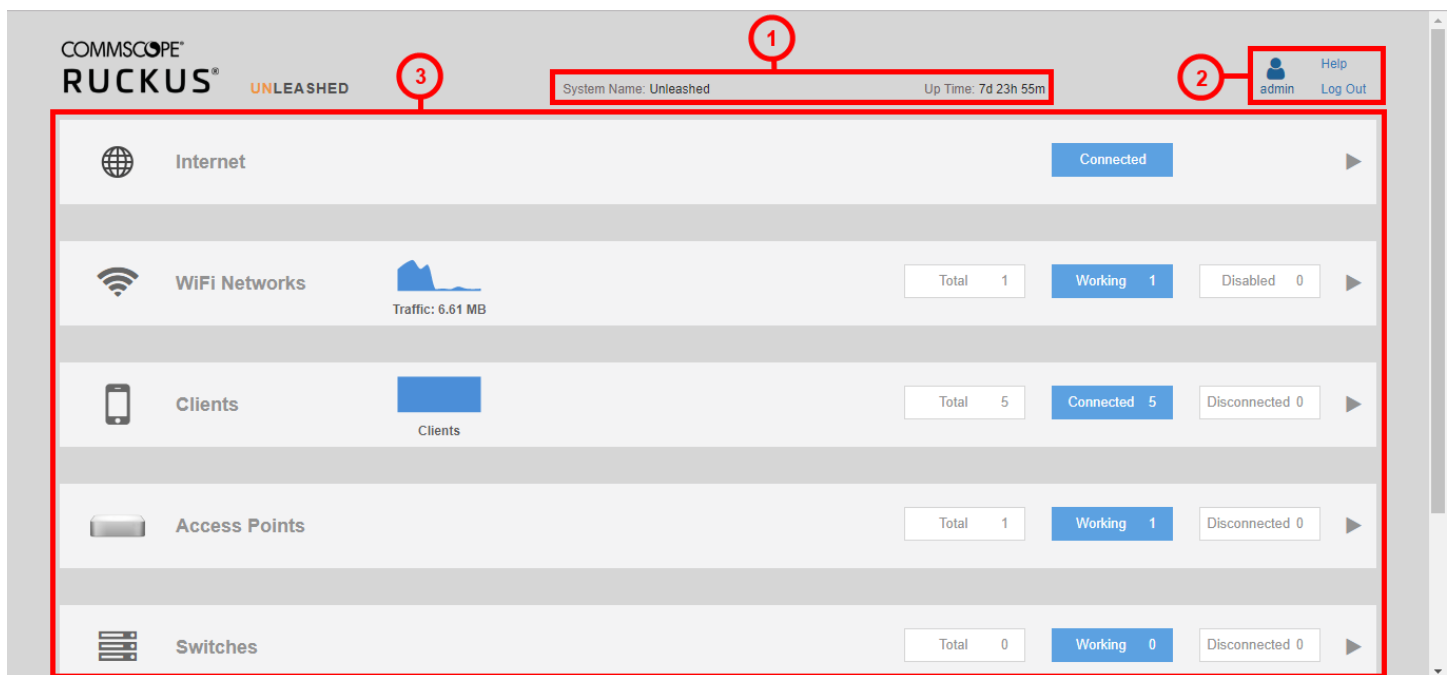


TABLE 30 Dashboard Components

Number	Component	Description
1	System Name and Uptime	Displays the system name that you configured and the uptime since the last reboot.
2	Admin Info	Displays currently logged-in Admin name, a link to this Online Help , and a Logout button.

TABLE 30 Dashboard Components (continued)

Number	Component	Description
3	Network Components	Provide general overviews of each component. Click any of the components to expand for more detailed information and configuration options. Refer to Using the Dashboard Components on page 158.


Using the Dashboard Components

Each of the Dashboard components can be expanded by clicking the component name to display more detailed information and links to configuration options for that component.

Internet

The **Internet** component provides details on the Master AP's upstream connection to the Internet, including IP address, DNS servers, Gateway address, and the Ethernet port being used as the WAN port.

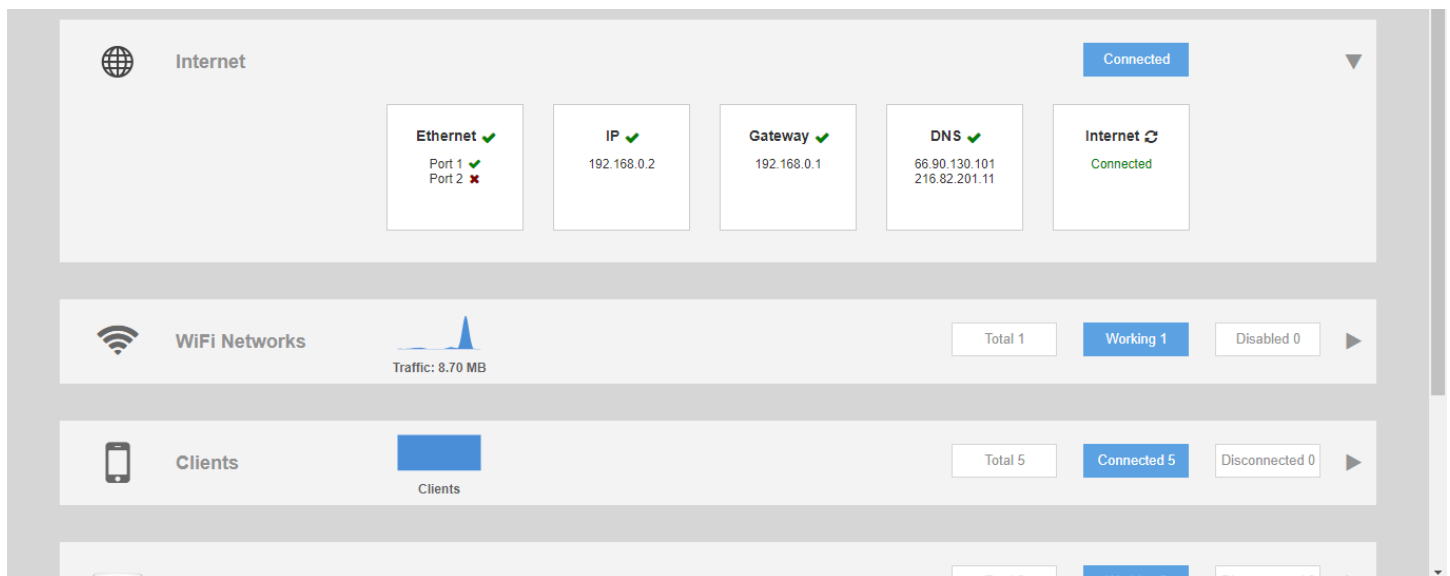FIGURE 53 Internet Component




The Internet connection status indicator is not displayed if the "internet-check" feature has been disabled using a CLI command.

WiFi Networks

The **WiFi Networks** component displays an overview of the wireless LANs that you have deployed. It displays the total number of wireless LANs, the number that are currently in the Working state, and those that are in the Disabled state.

Each of the three categories can be selected to view a detailed list of the WLANs in the Total, Working, or Disabled category.

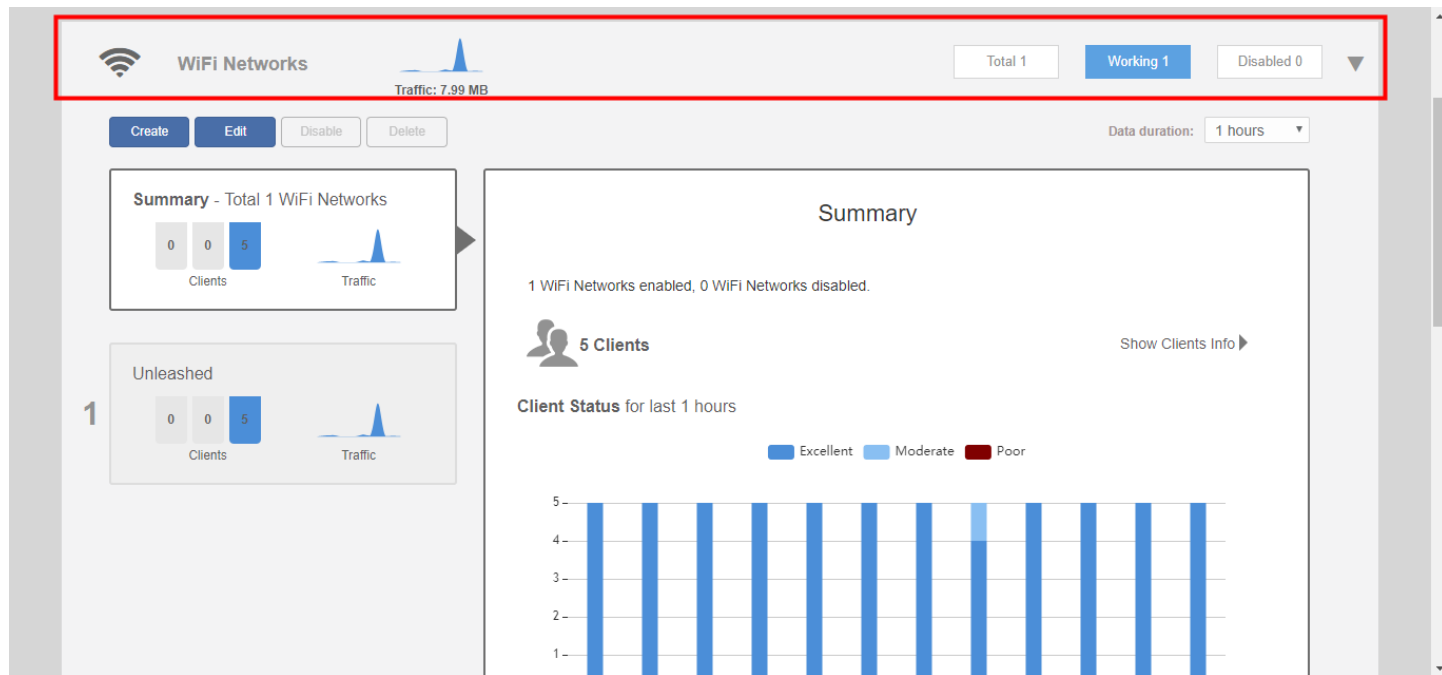FIGURE 54 WiFi Networks Component




Clients

The **Clients** component provides an overview of the number of Total, Connected, and Blocked clients.

The Clients sub-component provides additional options to search for a client by MAC address, to show details on a client, to temporarily delete a client, or to permanently block a client.

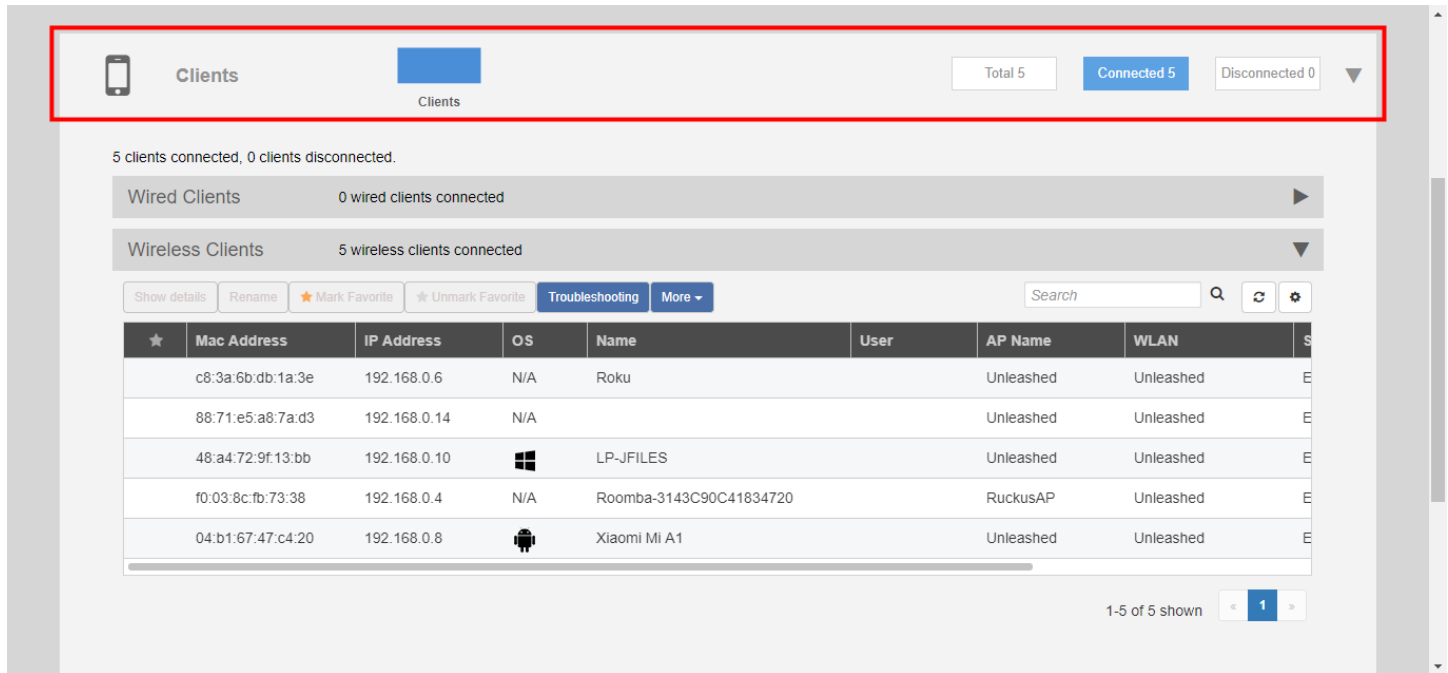FIGURE 55 Clients Component




Access Points

The **Access Points** component provides an overview of the APs in your network, and is divided into three subsections: *Total*, *Working* and *Disconnected*. Click any of the three subsection buttons to expand the Access Points component and display a list of APs in that category.

The **Access Points** component displays a list of all of the APs being managed by your Master AP. The list includes all APs, including the Master AP itself, currently connected member APs, as well as any APs that have previously joined but are currently disconnected.

Each AP (whether working or disconnected) is represented by one of the large boxes on the left side of the screen. Click one of the AP boxes to display details about that specific AP.

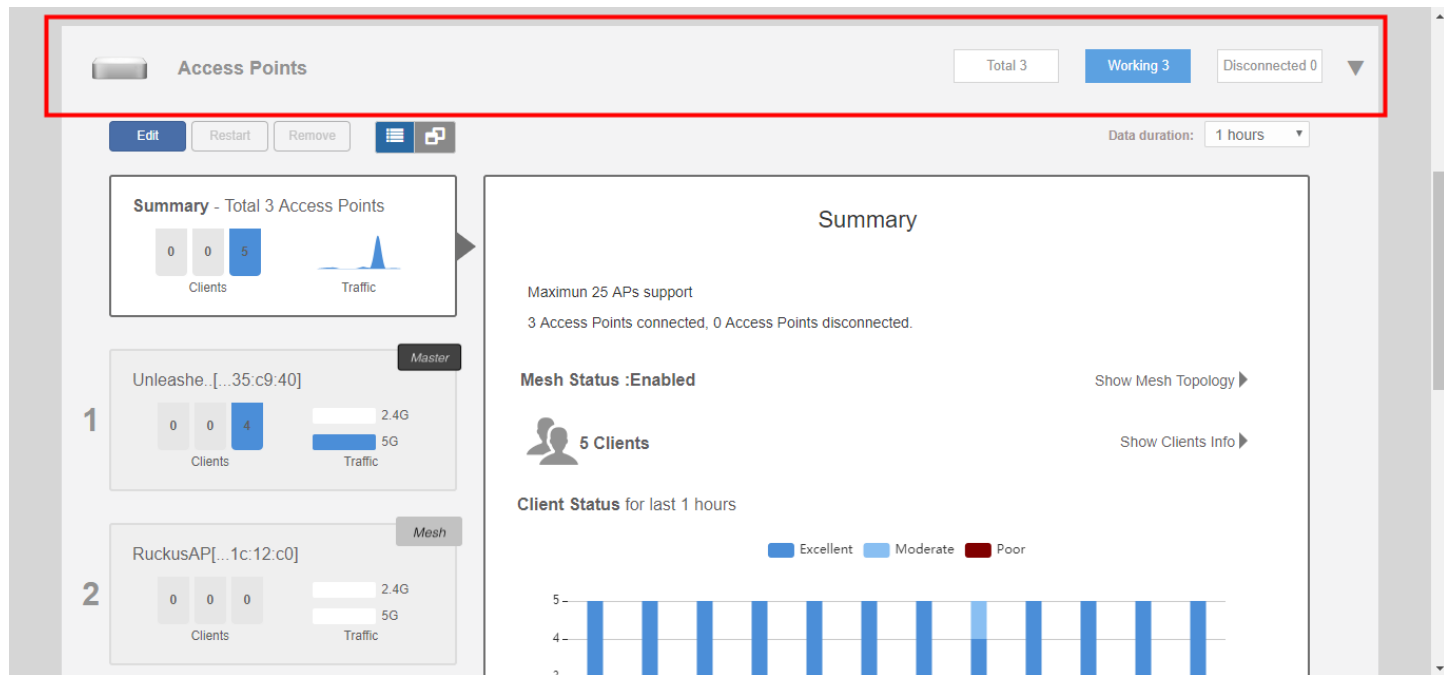
FIGURE 56 Access Points Component



Switches

The Switches component provides an at-a-glance overview of the status of any RUCKUS ICX switches managed by the RUCKUS Unleashed Master AP.

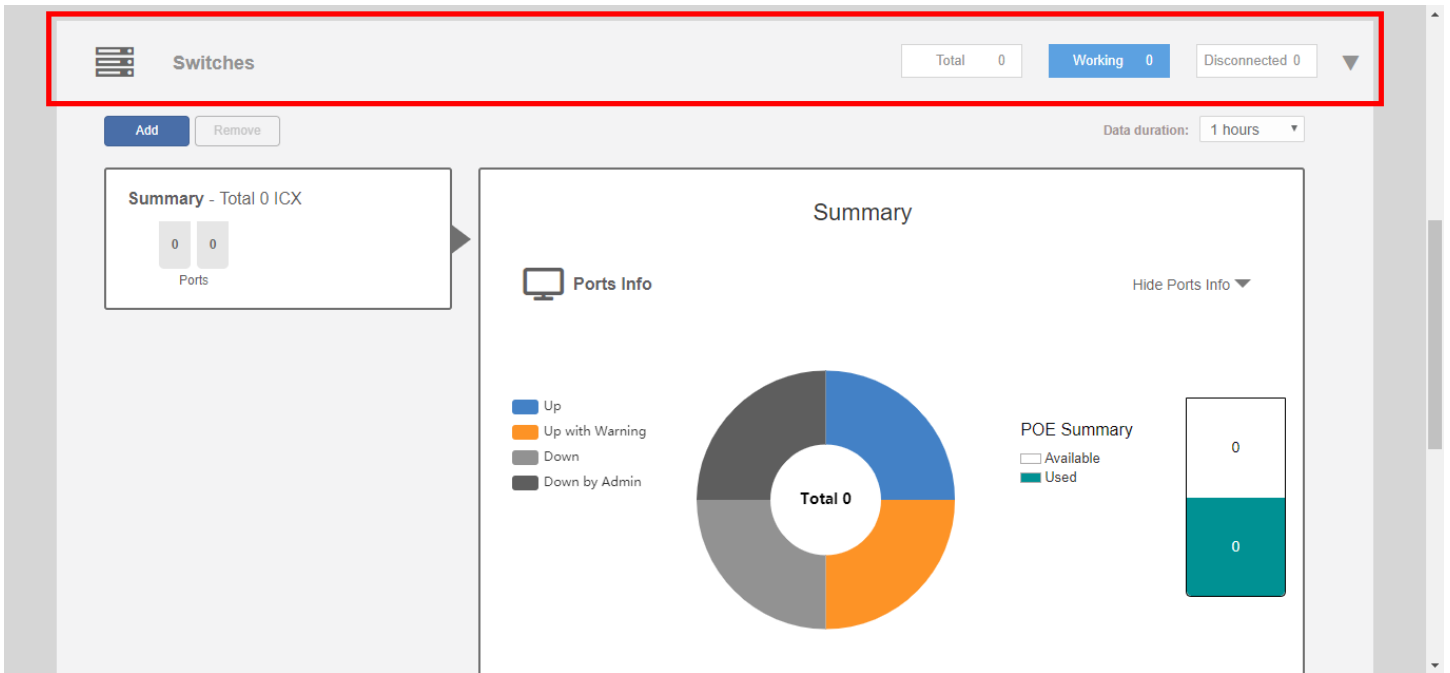
FIGURE 57 Switches Component



Admin & Services

The **Admin & Services** component provides options for configuring system settings and services, such as system IP address, Dynamic PSK, Bonjour Gateway, Application Recognition, Guest Access, Hotspot service, Radio Control settings and Wireless Intrusion Prevention Services (WIPS).

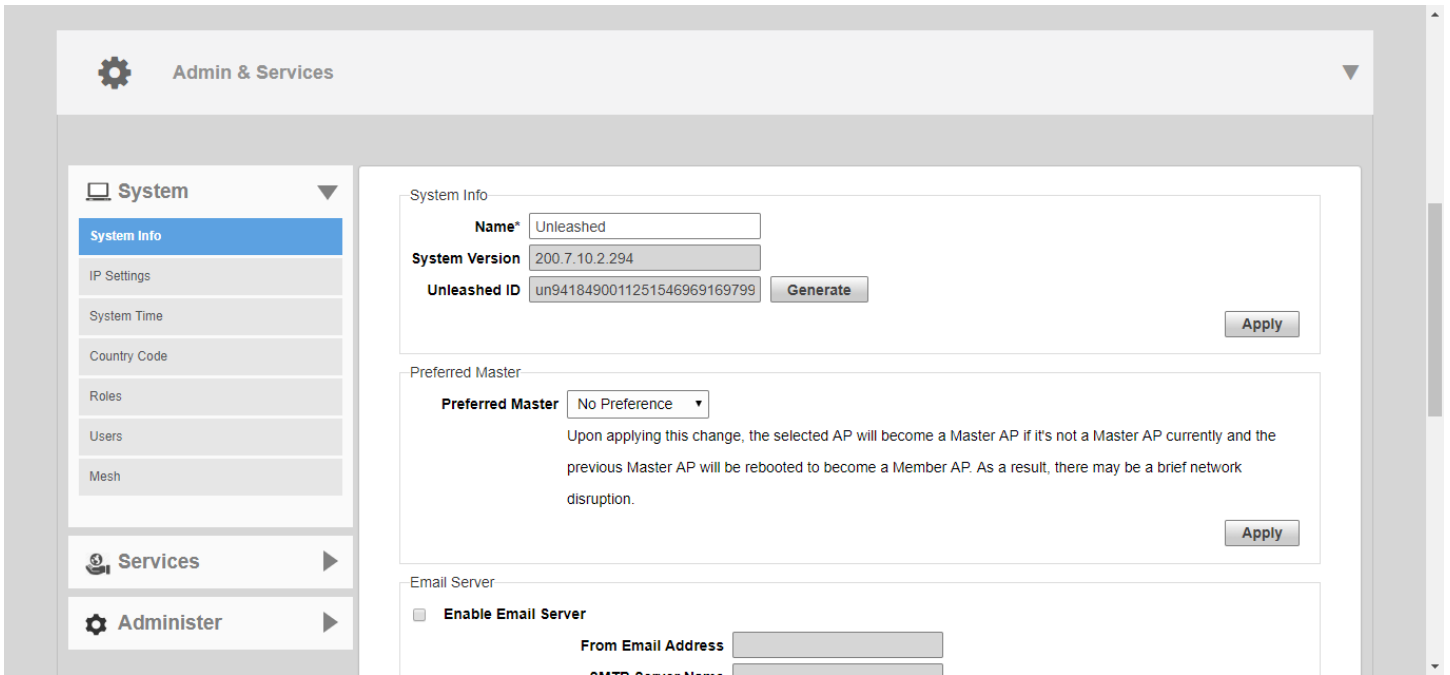FIGURE 58 Admin & Services Component



WLAN Configuration

- [WLAN Configuration Overview](#)..... 165
- [WLAN Usage Types](#)..... 165
- [Creating a New WLAN](#)..... 166
- [802.1X EAP WLANs](#)..... 169
- [Guest WLANs](#)..... 172
- [Hotspot WLANs](#)..... 237
- [Configuring Global WLAN Settings](#)..... 238
- [Editing an Existing WLAN](#)..... 239
- [Using a QR Code to Join a Wi-Fi Network](#)..... 241
- [Deleting a WLAN](#)..... 242
- [Disabling a WLAN Temporarily](#)..... 242

WLAN Configuration Overview

The **Wi-Fi Networks** section of the Dashboard provides tools for managing all aspects of your Unleashed wireless local area networks.

It contains pages for creating new WLANs, modifying or deleting existing WLANs, and configuring global wireless settings for deployment on all WLANs.

WLAN Usage Types

Each WLAN must be configured as one of the following usage types:


- **Standard Usage:** To create a WLAN with specific options, choose "Standard Usage."
- **Guest Access:** Use this WLAN type for a guest WLAN. Guest access policies and access controls will be applied. For more information, see [Guest WLANs](#) on page 172.
- **Hotspot Service:** Use this WLAN type for a Hotspot (aka, WISPr) WLAN. If Hotspot is used, a Hotspot Service must first be configured on the **Admin & Services > Services > Hotspot Service** page (or from the **Wi-Fi Networks > Create WLAN > Create Service** page). For more information, see [Hotspot Services](#) on page 403.

Creating a New WLAN

In addition to the initial WLAN you created during the setup process, you can create new WLANs using the **WiFi Networks** component.


1. In the **WiFi Networks** component, click **Create**.

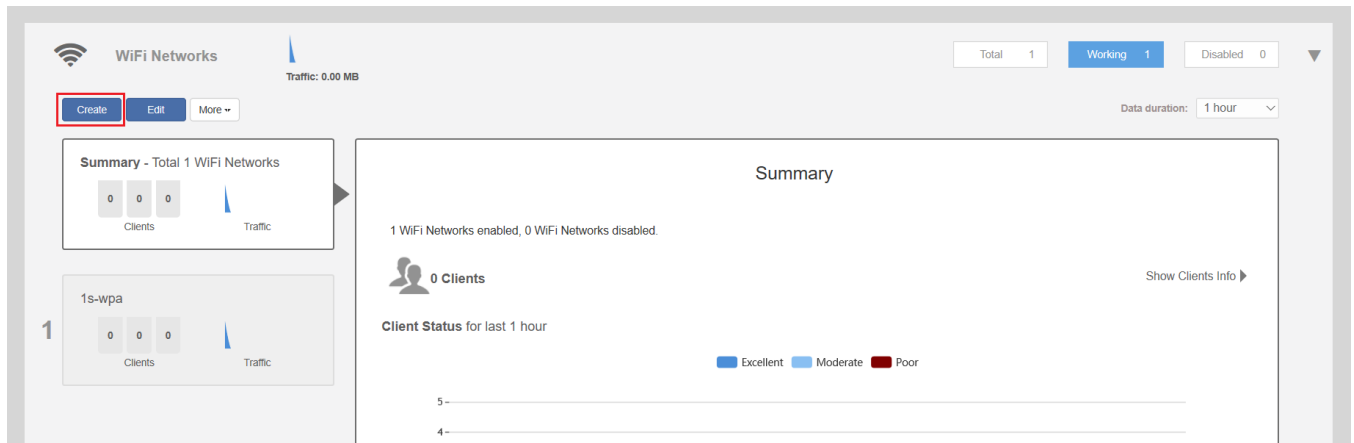FIGURE 59 Creating a New WLAN



The **Create WLAN** page is displayed.

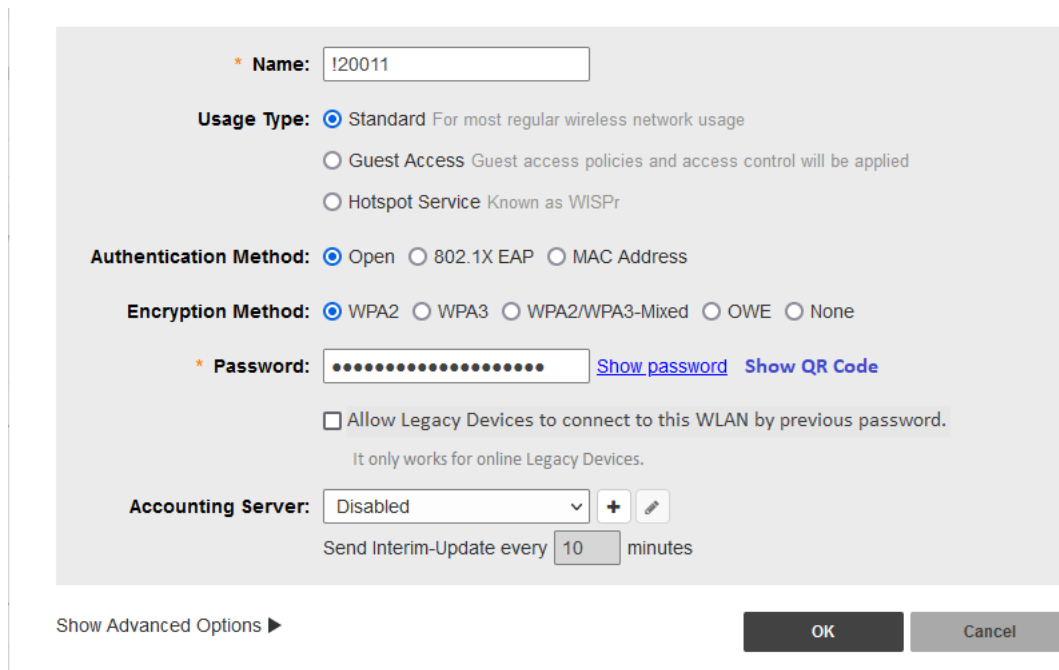FIGURE 60 New WLAN Settings



2. Enter a **Name** for this wireless network.

3. Select the WLAN **Usage Type** from the following options:

- **Standard:** Use this WLAN type for most regular wireless network usage.
- **Guest Access:** Guest access policies and access controls will be applied. For more information, refer to [Guest WLANs](#) on page 172.

NOTE

As of Unleashed 200.7, Social Media WLANs are a subset of guest WLANs, and are configured using the guest WLAN settings. Social Media WLANs require a visitor to log in using a social media account before being granted Internet access. For more information, refer to [Social Media WLANs](#) on page 216.

- **Hotspot Service:** Use this WLAN type for a Hotspot (also known as WISPr) WLAN. To deploy a Hotspot WLAN, you must first configure a Hotspot Service. For more information, refer to [Hotspot Services](#) on page 403.

4. For **Authentication Method**, select one of the following options:

NOTE

Unless using an external authentication server (RADIUS server), select Open authentication, and combine with **WPA2** encryption for secure Wi-Fi access.

- **Open:** No authentication method is used. Open authentication allows the use of WPA2, WPA3, WPA2/WPA3-Mixed, OWE, or None encryption. Open authentication and WPA2 encryption (also known as WPA-PSK) is the most common type of WLAN encryption method and should be the default configuration if there are no special requirements for authentication or encryption.
- **802.1X EAP:** Authenticates against either the internal database or an external RADIUS server. The 802.1X EAP authentication method (also known as WPA2-Enterprise) provides effective authentication regardless of the encryption method, and requires a back-end (RADIUS) authentication server. WPA2-Enterprise provides secure connectivity by ensuring that every device must authenticate to an authentication server before it is allowed access to network resources. Authentication can be based on digital certificates, and granular policies can be designed to govern the level of access and to provide visibility and control over devices on the network. 802.1X EAP authentication allows the use of WPA2, WPA3, or WPA2/WPA3-Mixed encryption.
- **MAC Address:** Authenticates using the client MAC address against an external RADIUS server or internal database.

NOTE

Beginning with Unleashed 200.7, MAC address authentication using the local database is available.

5. For **Encryption Method**, select one of the following options:

- **WPA2:** Encrypts traffic using the WPA2 standard. The WPA2 encryption method complies with the 802.11i security standard. Announced in 2004, WPA2 encryption remains mandatory for all new products that bear the Wi-Fi trademark.
- **WPA3:** You can enable 802.11r FT roaming for open authentication and WPA3 encryption. Announced in January 2018, the WPA3 standard replaces WPA2 with several security enhancements.
- **WPA2/WPA3-Mixed:** Allows mixed networks of WPA2- and WPA3-compliant devices. SAE FT and AKM PSK SHA256 is supported for Open authentication + WPA2/WPA3-Mixed encryption. **Enable 802.11r FT Roaming** is configurable for open authentication and WPA2/WPA3-Mixed encryption and 802.1X EAP authentication + WPA2/WPA3-Mixed encryption under **Advanced Options > Radio Control**. Refer to [Radio Control Settings](#) on page 259 for more information.
- **OWE:** Opportunistic Wireless Encryption (OWE) provides encrypted communications for open networks.
- **None:** No encryption; communications are sent in clear text.

6. For **Password**, enter a password (WPA2), an SAE Password (WPA3), or both for a WPA2/WPA3-Mixed WLAN. If the Encryption method is **OWE** or **None**, no password is required.

Click **Show QR Code** to display the QR code page. The user can save or print the QR code.

FIGURE 61 Displaying QR Code Page



(Optional) Select the **Allow Legacy devices to connect to this WLAN by previous password** check box.

This option is available only for wireless clients that are marked as legacy devices in the **Clients > Wireless Clients** page. For more information, refer to "Marking a Client as a Legacy Device". If the **Allow Legacy devices to connect to this WLAN by previous password** check box is selected, under **Advanced Options > Zero-IT & DPSK**, **Dynamic PSK** is selected as **Internal**. You can change the password and Unleashed generates DPSK keys for all connected legacy devices with the previous password of the WLAN. For more information about internal DPSK, refer to [Enabling DPSK for a WLAN](#) on page 249. You can view all the generated DPSK keys in the **Admin & Services > Services > Dynamic PSK > Generated Dynamic PSKs** page.

7. Choose whether a **Web Authentication (Captive Portal)** will be used for web-based authentication.
8. If **802.1X EAP**, **MAC Address**, or **Web Authentication (Captive Portal)** is chosen, select a server from the **Authentication Server** from list.
If an external authentication server is to be used rather than the internal database, click **Create Service** to create an AAA server object to authenticate against.

NOTE

Alternatively, you can create AAA servers on the **Admin & Services > Services > AAA Servers** page. For more information, refer to [AAA Servers](#) on page 380.

9. Click **OK** to save your changes and deploy the new WLAN.

NOTE

For advanced WLAN configuration options, refer to [Advanced WLAN Configuration](#) on page 245.

802.1X EAP WLANs

802.1X EAP (Extensible Authentication Protocol), or "WPA-Enterprise," is an IEEE Standard that provides a flexible and extensible authentication mechanism for devices attempting to connect to wired and wireless LANs.

802.1X provides secure connectivity by ensuring that every device must authenticate to an authentication server before it is allowed access to network resources. Authentication can be based on digital certificates, and granular policies can be designed to govern the level of access, and provide visibility and control over devices on the network.

The Ruckus 802.1X implementation provides a means for the controller to connect to the RADIUS server after entering the server's IP address and shared secret. Specific instructions for RADIUS server configuration vary depending on the RADIUS server software used, and are therefore beyond the scope of this document.

802.1X WLAN Survivability

The WLAN Survivability feature allows 802.1X end users to continue to authenticate successfully and access the internet even when the external RADIUS server is unreachable for a configurable period of time.

With this feature enabled, the Ruckus device caches the user's credentials for reuse in the event of disconnection from the AAA server.

NOTE


Enabling this feature on the Unleashed web interface will not work unless the relevant configuration is also performed on the RADIUS server. This procedure assumes the reader has a high level of competence in RADIUS customization. Specifically, the user will need the ability to write scripts or code to recognize our Ruckus RADIUS attributes and respond with the correct values by properly calculating the password and challenge strings.

To configure WLAN Survivability for 802.1X WLAN clients:

1. Go to **WiFi Networks > Create/Edit WLAN**.
2. In **Usage Type**, select **Standard**.
3. In **Authentication Method**, select **802.1X EAP**.
4. In **Authentication Server**, select or create a new RADIUS server to authenticate with.
5. In **WLAN Survivability**, select **Enabled**.
6. In **Cache Time**, enter a value in hours (1-128) to cache the user credentials.

7. Click **OK** to save your changes.

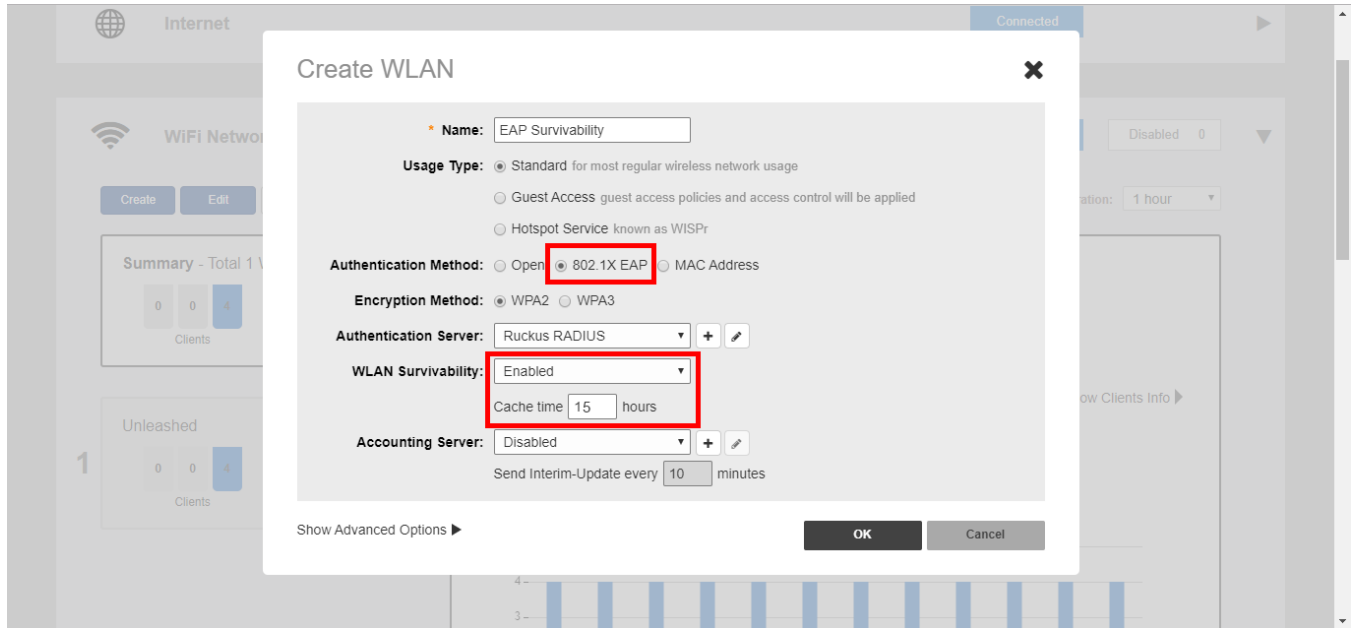FIGURE 62 Enable 802.1X WLAN survivability



8. The Ruckus controller will send the RADIUS request with the attribute: `RADIUS_RUCKUS_AUTH_SURVIVABILITY = 15` after enabling the survivability feature.
9. The RADIUS server must have the capability of recognizing the request and answering with the following attributes in the access-accept message: `RADIUS_RUCKUS_USER_NAME = 16 , /*Survivability-Usr-Name*/`
`RADIUS_RUCKUS_PASSWORD_NT_HASH = 17 /*Survivability-MD5-NT-Passwd*/.`

10. How the RADIUS server calculates the two new attributes:

- RADIUS_RUCKUS_USER_NAME: This is the user name created in the RADIUS server.
- RADIUS_RUCKUS_PASSWORD_NT_HASH: This is a 32 byte binary data value. RADIUS uses the following steps to create this attribute:
 - a. The server generates a Windows NT hash of the user's password using the MS_CHAPv2 algorithm.
 - b. It uses the first random 16 bytes as an authenticator and the shared secret to encrypt the data generated by the previous step via MD5 as a user password does (refer to RFC 2865, Chapter 5.2). The following is a code snippet of the user password encryption algorithm:

```

struct radius_attr_hdr *
radius_msg_add_attr_user_password(struct radius_msg *msg,
                                TAC_U8 *data, size_t data_len,
                                TAC_U8 *secret, size_t secret_len)
{
    TAC_U8 buf[128];
    int padlen, i, pos;
    MD5_CTX context;
    size_t buf_len;
    TAC_U8 hash[16];

    if (data_len > 128)
        return NULL;

    memcpy(buf, data, data_len);
    buf_len = data_len;

    padlen = data_len % 16;
    if (padlen) {
        padlen = 16 - padlen;
        memset(buf + data_len, 0, padlen);
        buf_len += padlen;
    }

    MD5Init(&context);
    MD5Update(&context, secret, secret_len);
    MD5Update(&context, msg->hdr->authenticator, 16);
    MD5Final(hash, &context);

    for (i = 0; i < 16; i++)
        buf[i] ^= hash[i];
    pos = 16;

    while (pos < buf_len) {
        MD5Init(&context);
        MD5Update(&context, secret, secret_len);
        MD5Update(&context, &buf[pos - 16], 16);
        MD5Final(hash, &context);

        for (i = 0; i < 16; i++)
            buf[pos + i] ^= hash[i];

        pos += 16;
    }

    return radius_msg_add_attr(msg, RADIUS_ATTR_USER_PASSWORD,
                              buf, buf_len);
}

```

- c. Replace `msg->hdr->authenticator` with that first 16 bytes of random data.
- d. Place the results into the second 16 bytes.

NOTE

This feature is unavailable when a Backup RADIUS server is configured.

Guest WLANs

By creating a Guest WLAN, visitors to your organization can be allowed limited (or unlimited) access to your wireless network, with configurable guest access policies.

Visitors can be given the option to self-activate their devices using Social Media login, a Self-Service Guest Pass, or to self-authenticate to any of your internal WLANs using Zero-IT activation via the BYOD Onboarding Portal.

Unleashed provides the following options for different types of Guest WLANs:

- No authentication (open WLAN): Any client can connect, no password is required.
- Social Media Login: Visitors log in using an existing social media account to access the wireless network.
- Authentication with shared key: Any client can connect using the same shared password.
- Authentication with unique key (Guest Pass): Guest Pass keys must be generated for each guest, either by an admin (guest pass operator), or using the Self-Service Guest Pass feature.
 - Admin generated: Each Guest Pass has to be generated by a guest pass operator.
 - Self-service: Users can self-authenticate their clients to the guest WLAN, in one of two ways:
 - › No sponsor approval: No restrictions. Any client can request a Guest Pass, and it will be provided immediately.
 - › Sponsor approval: Guests are required to request a Guest Pass, which must be approved by a sponsor before being delivered to the user via email or SMS.

Deploying a Guest WLAN


Extensive options are provided for customizing guest wireless networks, both in terms of how users connect, and what access privileges they are given once connected.

Complete the following steps to deploy a guest WLAN:

1. Go to **Wi-Fi Networks > Create**.

2. Type a **Name** for the guest WLAN.

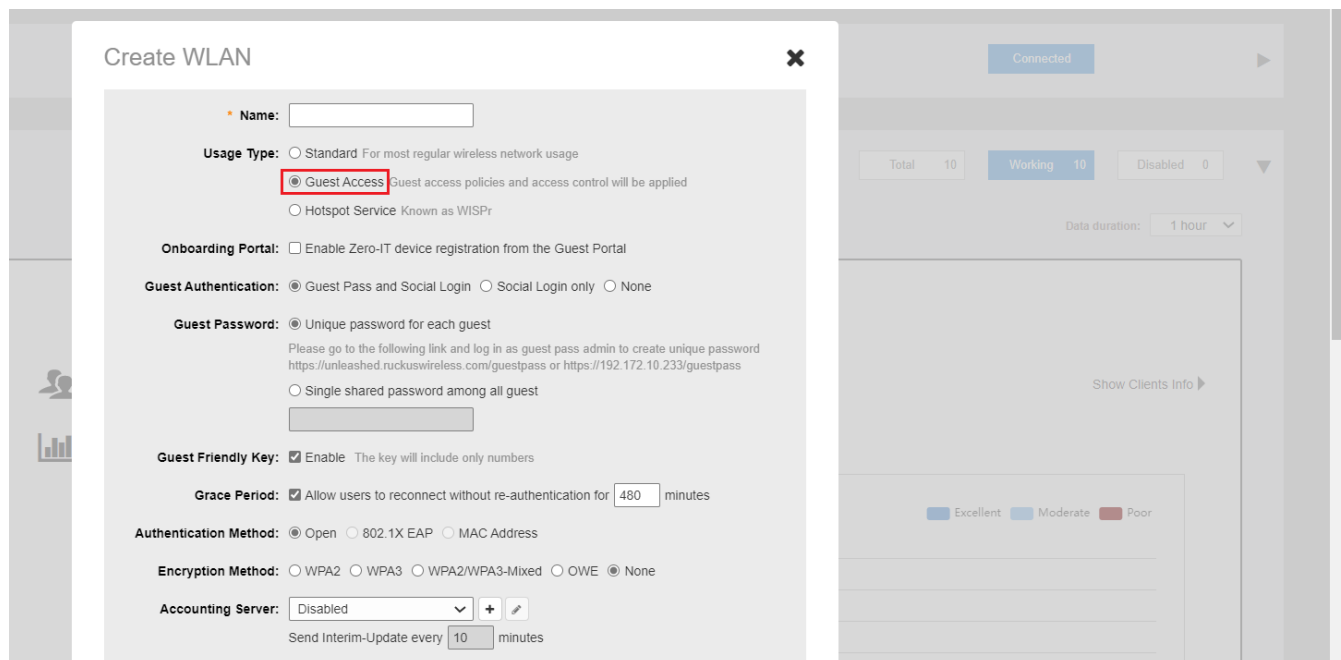
FIGURE 63 Creating a New Guest WLAN



3. For **Usage Type**, select **Guest Access**.
4. In **Onboarding Portal**, choose whether to allow guests the option to register their devices on your internal (non-guest) WLANs using the Onboarding Portal. For more information, see [Using the BYOD Onboarding Portal](#) on page 185.
5. For **Guest Authentication**, select **Guest Pass and Social Login** (allows social media login and Guest Pass), **Social Login only** (social media login only), or **None** (no password required).

6. For **Guest Password**, if you selected **Guest Pass and Social Login** in the previous step, choose one of the following options:
 - **Unique password for each guest:** Guest Passes must first be generated, in batch or individually, for each visitor before they will be able to log in using a Guest Pass. For more information, refer to [Working with Guest Passes](#) on page 190.
 - **Single shared password among all guests:** This option allows you to skip the Guest Pass requirement, and simply provide a single password for all visitors.

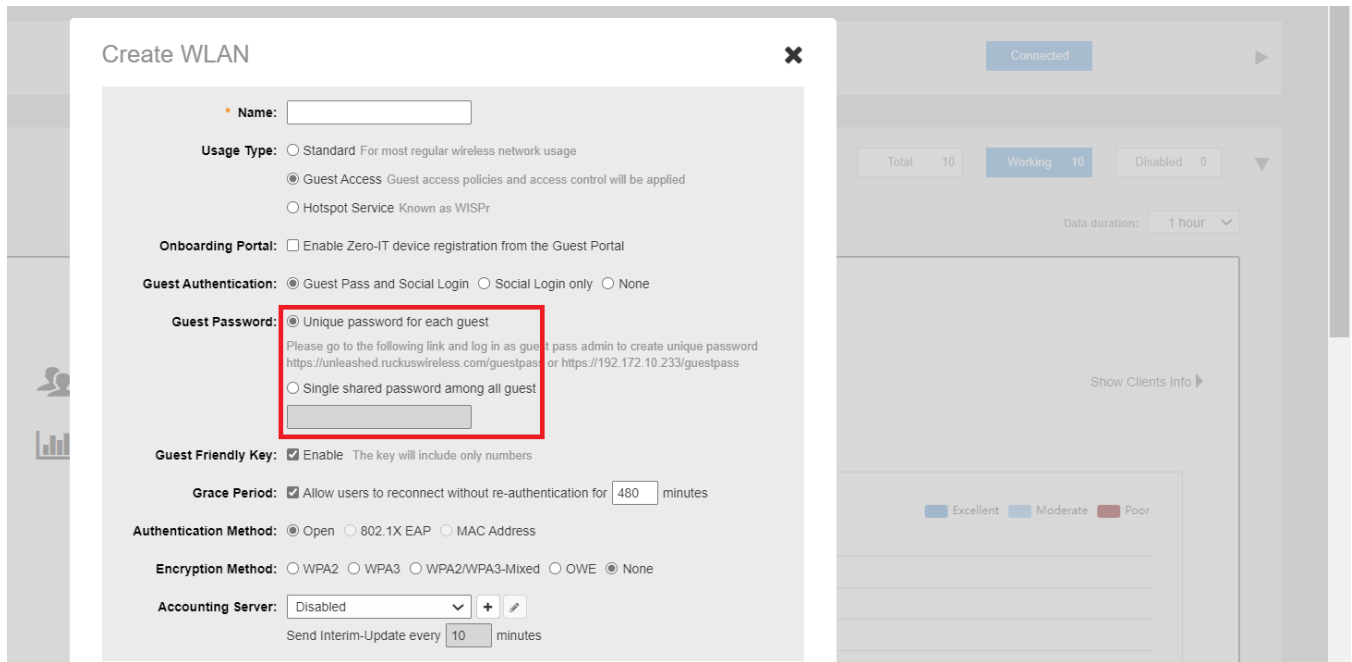FIGURE 64 Selecting a Single Shared Password or Unique Password for Each Guest



7. For **Guest Friendly Key**, select **Enable** to include only numbers in the guest-friendly key.

NOTE

By default, the guest-friendly key is enabled when a user creates a new WLAN with guest access (Guest Authentication is set to Guest pass and Social login).

NOTE


The guest-friendly key is disabled in the guest access WLAN during migration.

8. For **Grace Period**, enter a value in minutes to allow users to reconnect without re-authentication. Clear the check box to disable the grace period.
9. In **Authentication Method**, select one of the following:
 - **Open:** No authentication method is used. Open authentication allows the use of WPA2, WPA3, WPA2/WPA3-Mixed, OWE, or no encryption. Open authentication + WPA2 encryption (also known as WPA-PSK) is the most common type of WLAN encryption method and should be the default configuration if there are no special requirements for authentication or encryption.

10. For **Encryption Method**, select one of the following options:
 - **WPA2**: Encrypts wireless traffic with WPA2 encryption. If this option is selected, users will still be required to enter the WPA2 passphrase to access the open guest WLAN, even with **None** selected as the guest authentication type.
 - **WPA3**: Announced in January 2018, the WPA3 standard replaces WPA2 with several security enhancements.
 - **WPA2/WPA3-Mixed**: Allows mixed networks of WPA2- and WPA3-compliant devices.
 - **OWE**: Opportunistic Wireless Encryption (OWE) provides encrypted communications for open networks.
 - **None**: Without encryption, anyone can access this WLAN with no passphrase or Guest Pass login required. (Guests may still be required to visit a captive portal landing page, if configured.)
11. For **Accounting Server**, select an accounting server from the list or click the + icon to create a new RADIUS accounting server entry.
12. (Optional) Click **Show Advanced Options**, and configure any advanced options, such as restricted subnet access, WLAN priority, access controls, application visibility, and so on. Refer to [Advanced WLAN Configuration](#) on page 245 for more information.
13. Click **Next**.


14. Customize the guest WLAN by configuring the following options: social media login options, guest pass self-service, redirection, terms and conditions, and captive portal appearance.

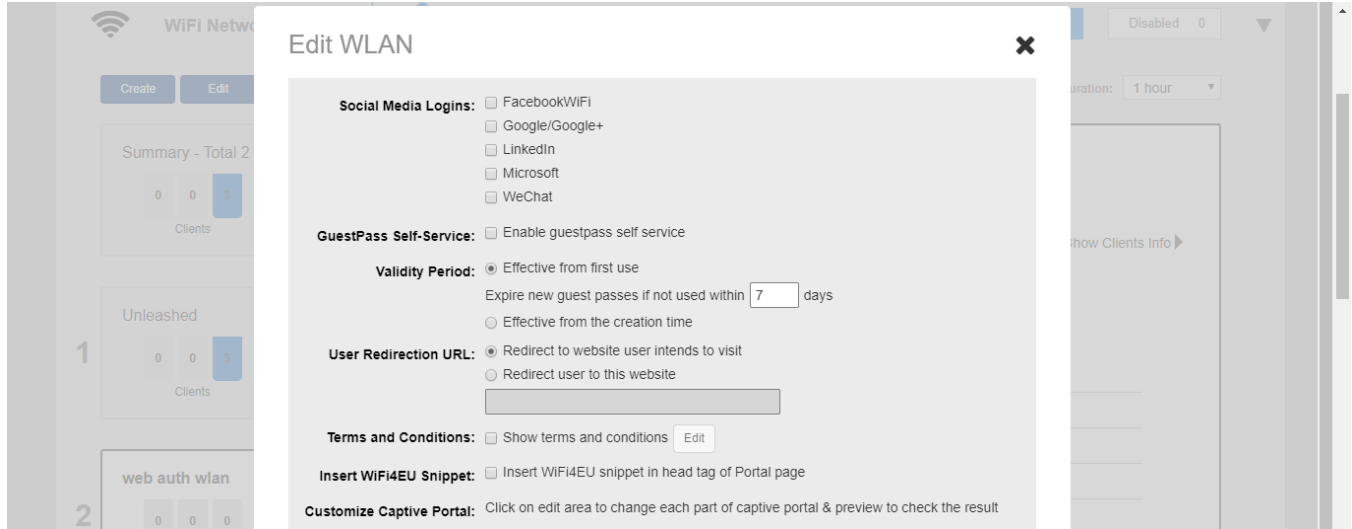FIGURE 65 Configuring the Guest WLAN



- **Social Media Logins:** Allow users to log in using their social media accounts. Refer to [Social Media WLANs](#) on page 216.
- **Guest Pass Self-Service:** Allow users to self-authenticate their clients to your guest WLAN using a Guest Pass generated automatically for each guest user. For more information, refer to [Guest Pass Self-Service](#) on page 192.
- **Validity Period:** Click **Effective from first use** to make the Guest Pass valid on first use or click **Effective from creation time** to make the Guest Passes valid from the time they are created. If you select **Effective from first time**, enter a value for the number of days after which the Guest Passes will expire if not used.
- **User Redirection URL:** Click **Redirect to website user intends to visit** to redirect to the website the user intended to visit after successful login or click **Redirect user to this website** to redirect the user to a specified URL. If you select **Redirect user to this website**, enter the URL of the website in the field.
- **Terms and Conditions:** Choose whether to display the terms and conditions before guests can access your network. You can also edit the default terms and conditions by clicking **Edit**, and replacing the default text with any text you choose.
- **Insert WiFi4EU Snippet:** Insert a WiFi4EU snippet in the head tag of web authentication portal page. This allows the WLAN to be used by members of the WiFi4EU "digital single market" for EU member states.

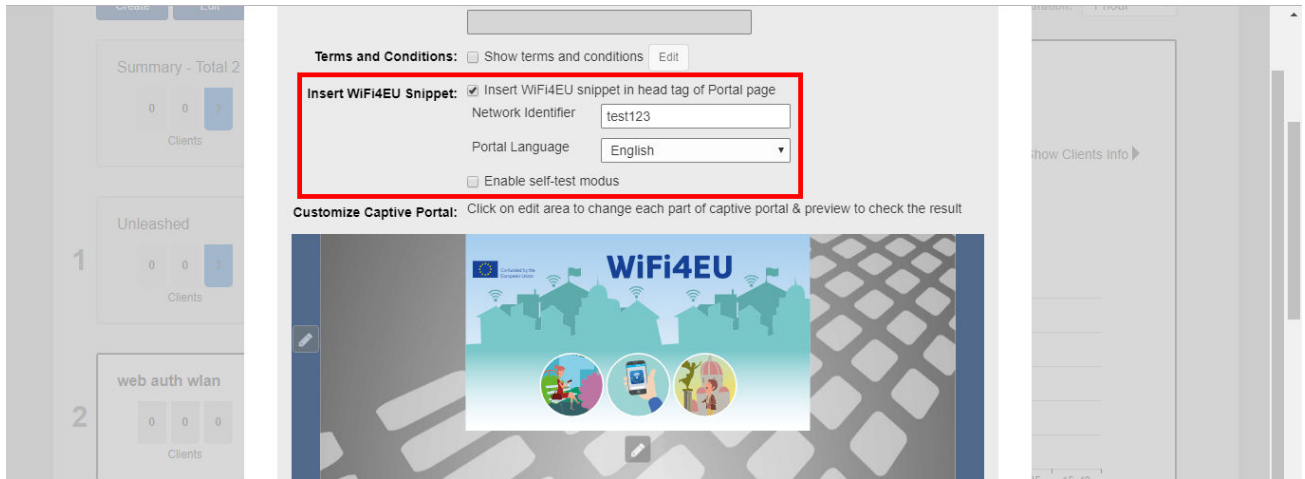FIGURE 66 Inserting a WiFi4EU Snippet




- **Customize Captive Portal:** Customize the banner, background image, background color, logo, welcome message, and opacity level. Click **Preview** to preview your changes.

15. Click **OK** to save your changes.
16. The next screen prompts you to begin the configuration for email and SMS delivery of Guest Passes. Click **Yes** to configure email and SMS settings, or click **No** to skip this step.

You can configure these settings later from the **Admin & Services** page, if you prefer. Refer to [Configuring Email Server Settings](#) on page 178 for more information.

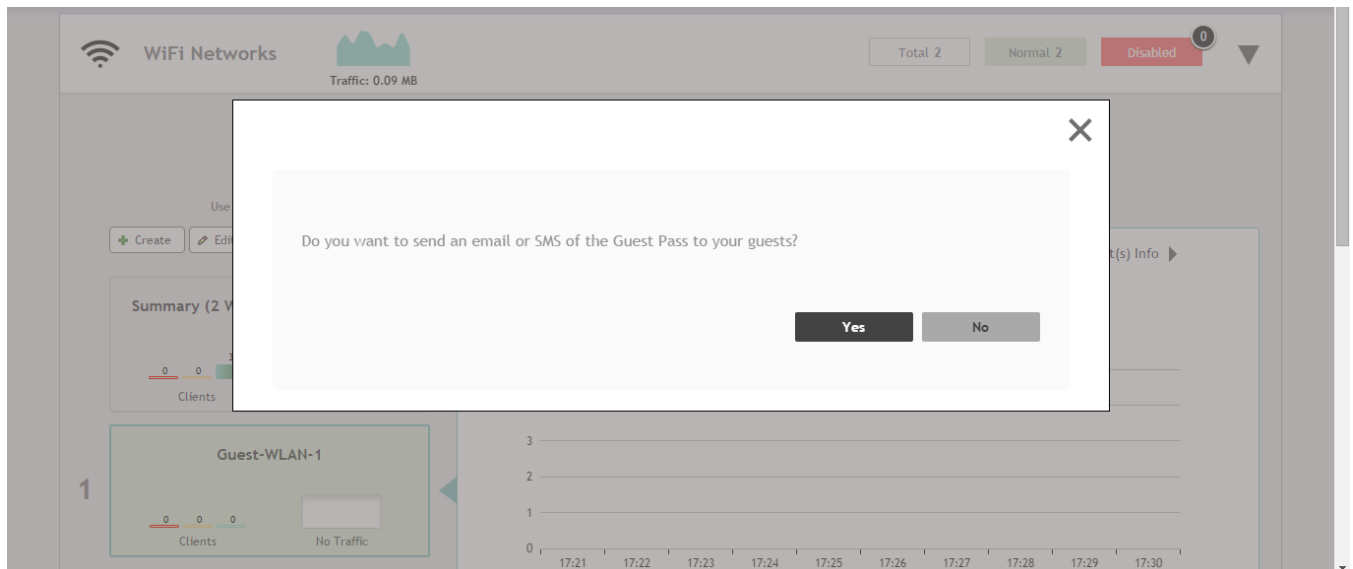FIGURE 67 Configuring Email and SMS Delivery Settings



Configuring Email Server Settings

In order for Unleashed to send guest pass codes to guest users via email, it needs to have an email server configured.

To configure email server SMTP settings:

1. Go to **Admin & Services > System > System Info**.
2. In the **Email Server** section, enable the **Enable Email Server** check box, and then enter the following:
 - **From email address:** Type the email address from which Unleashed will send email messages.
 - **SMTP Server name:** Type the full name of the server provided by your ISP or mail administrator. Often, the SMTP server name is in the format smtp.company.com.
 - **SMTP Server port:** Type the SMTP port number provided by your ISP or mail administrator. Often, the SMTP port number is 465 or 587. The default SMTP port value is 587.
 - **SMTP Authentication username:** Type the user name provided by your ISP or mail administrator. This might be just the part of your email address before the @ symbol, or it might be your complete email address. If you are using a free email service (such as Hotmail or Gmail), you typically have to type your complete email address.
 - **SMTP Authentication password:** Type the password that is associated with the user name above.
 - **Confirm SMTP Authentication password:** Retype the password you typed above to confirm.
 - **SMTP Encryption Options:** If your mail server uses TLS encryption, click the SMTP Encryption Options link, and then select the TLS check box. Additionally, select the STARTTLS check box that appears after you select the TLS check box. Check with your ISP or mail administrator for the correct encryption settings that you need to set.
3. To verify that Unleashed can send email messages using the SMTP settings you configured, click the **Test** button.
 - If Unleashed is able to send the test message, the message **Success!** appears at the bottom of the Email Notification page.
 - If Unleashed is unable to send the test message, the message **Failed!** appears at the bottom of the Email Notification page. Go back to the previous step, and then verify that the SMTP settings are correct.

4. Click **Apply**. The email server settings you configured become active immediately.

FIGURE 68 Email Server settings

The screenshot displays the configuration page for Email Server and SMS Settings. The left sidebar shows 'Services' and 'Administration' menus. The main content area is divided into sections:

- Switch Approval:** A section with a checked 'Approval' checkbox and the text 'Automatically approve all join requests from switches.' An 'Apply' button is located to the right.
- Email Server:** A section with a checked 'Enable Email Server' checkbox. Below it are several input fields:
 - From Email Address:** test@example.com
 - SMTP Server Name:** smtp.example.com
 - SMTP Server Port:** 587
 - SMTP Authentication Username:** username
 - SMTP Authentication Password:** [masked]
 - Confirm SMTP Authentication Password:** [masked]
 A link for 'SMTP Encryption Options' is visible below the password fields. 'Test' and 'Apply' buttons are at the bottom right of this section.
- SMS Settings:** A section with an unchecked 'Enable SMS Server' checkbox. Below it are radio button options for 'Country Code':
 - No default and ask user to input
 - Use default +12 and allow user to change
 - Use default +12 and disallow user to change
 Below these are radio button options for 'Twilio account information' and a partially visible 'ACCOUNT SID' input field.

Configuring SMS Server Settings

In order for Unleashed to send guest pass codes to guest users via SMS, it needs to have an SMS server configured.

To configure SMS server settings:

1. Go to **Admin & Services > System > System Info**.
2. In the **SMS Settings** section, enable the **Enable SMS Server** check box.
3. In **Country Code**, select one of the following options:
 - **CountryCode:** This option is only available with "Customized Server" SMS server type (for Twilio and Clickatell, the country code is mandatory and cannot be unchecked). When unchecked, the guest registration page does not support country code input.
 - **No default and ask user to input:** The guest registration page does not provide a default country code and the guest user is asked to input one.
 - **Use default and allow user to change:** The guest registration page provides a default country code and allows the guest user to change it.
 - **Use default and disallow user to change:** The guest registration page provides a default country code and the guest user is not allowed to change it.
4. Select **Twilio**, **Clickatell**, or **Customized Server**, depending on your SMS service provider.
5. Enter your **Account SID**, **Auth Token** and **From Phone Number** (Twilio) or your **User Name**, **Password** and **API ID** (Clickatell), or **Method** (Get or Post) and the URL for a custom SMS service provider.
6. Click the **Test** button to test your settings.

7. Once confirmed, click **Apply** to save your changes.

FIGURE 69 Configuring SMS settings

The screenshot shows a web configuration page for SMS settings. At the top, there is a tab labeled "SMTP Encryption Options" and two buttons: "Test" and "Apply". Below this is the "SMS Settings" section, which is currently expanded. The "Enable SMS Server" checkbox is checked. Under "Country Code", the "No default and ask user to input" radio button is selected. The "Twilio account information" radio button is also selected, with input fields for "Account SID", "Auth Token", and "From PhoneNumber". The "Clickatell account information" radio button is unselected, with input fields for "User Name", "Password", "API Id", and "From PhoneNumber". The "Customized Server" radio button is unselected, with a "Method" dropdown menu set to "GET" and a "URL" text area.


Creating a Guest Pass Operator

Guest Pass Operators are individuals within an organization who have the authority to generate guest passes for visitors.

This task describes how to create a user role for a category of user that is allowed to generate and manage guest passes.

1. After configuring Email and SMS settings, you will be prompted to configure a Guest Pass Operator.

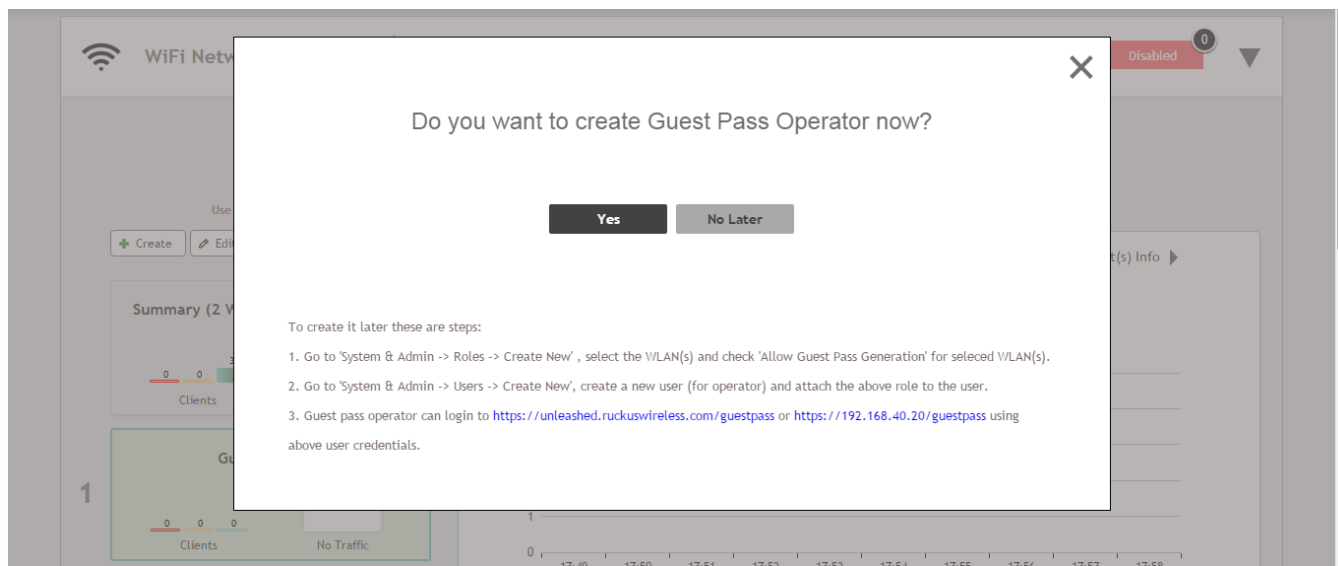FIGURE 70 Optionally Configuring a Guest Pass Operator Now




2. Click **Yes** to configure this role now. Or click **No Later** to configure these settings later.

NOTE

To configure additional operator roles, go to **Admin & Services > System > Roles > Create New**, select the guest WLAN(s) to allow, and check **Allow Guest Pass Generation** for the selected WLAN(s).

3. If you clicked **Yes**, you will be presented with the **Guest Pass Operator** configuration screen. Use this screen to configure the following options:
 - **Name:** Enter a unique name for the operator role.
 - **Description:** Optional description of the role.
 - **Group Attributes:** Used by AAA servers to authenticate the user.
 - **Available WLANs:** The list of available WLANs that the operator is allowed to choose from.
 - **Selected WLANs:** The list of WLANs for which the operator can issue guest passes.

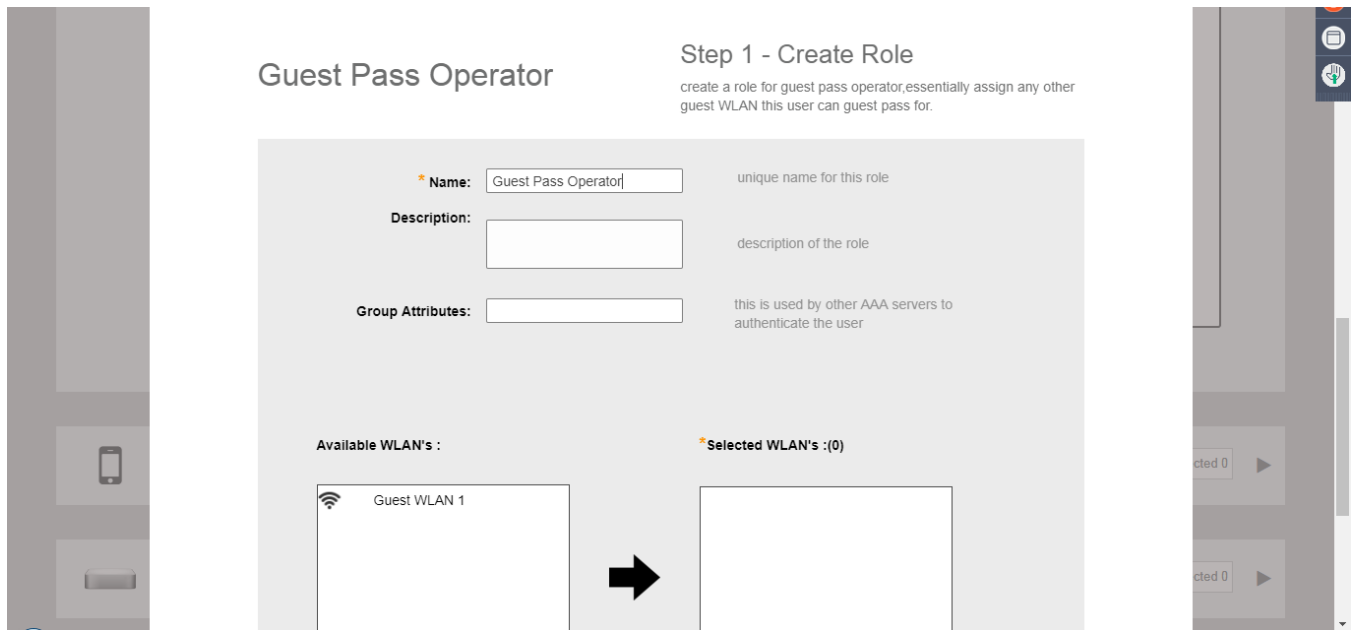
FIGURE 71 Create Guest Pass Operator - Step 1



4. Use the arrows to move WLANs to/from the list of **Available WLANs** to **Selected WLANs** for which the Guest Pass Operator will be allowed to issue guest passes. (The list of available WLANs only includes unique password type guest WLANs.)


5. Click **Next** to continue.

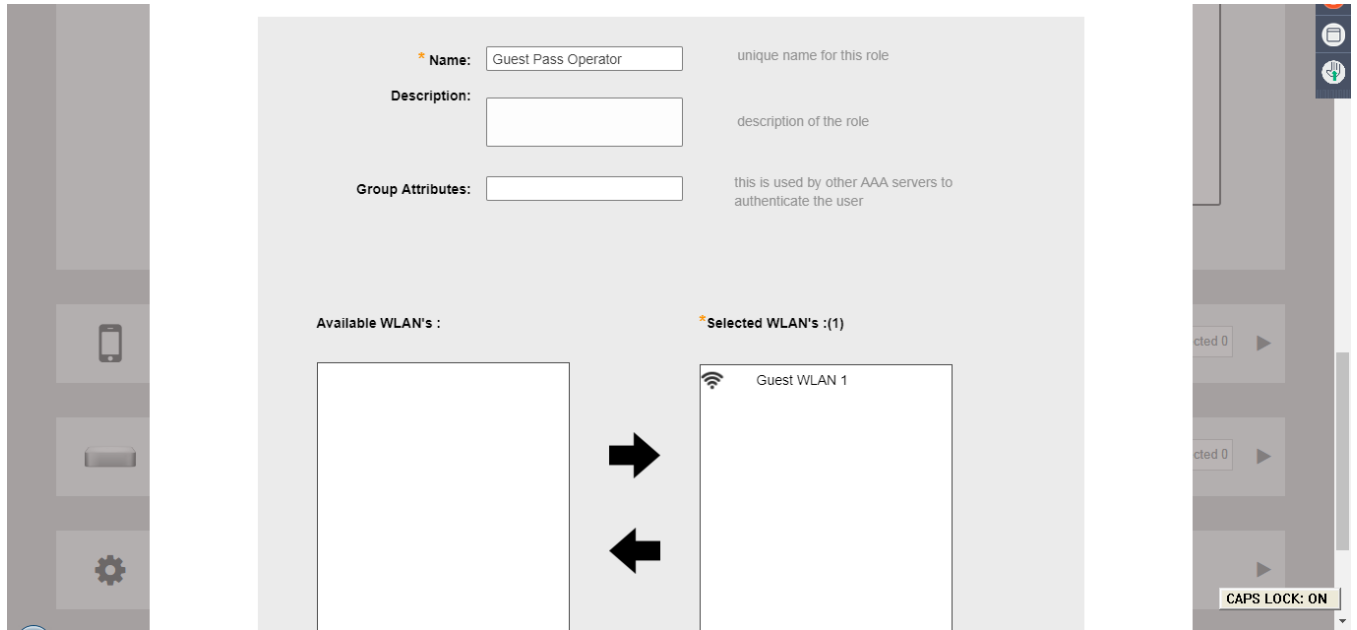FIGURE 72 Moving WLANs from Available to Selected



6. On the next screen that appears, **Guest Pass Operator - Step 2: Create User**, enter a user name and password to create a user with this role.

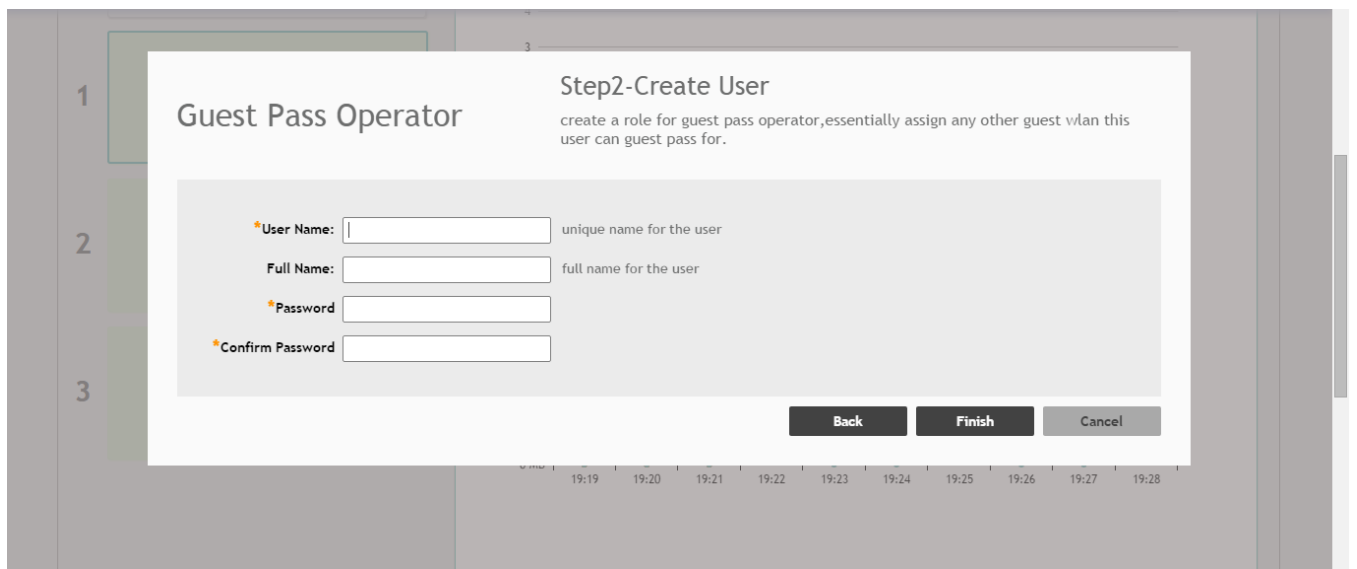FIGURE 73 Create Guest Pass Operator - Step 2




7. You have completed creating a user with the Guest Pass operator role. The confirmation screen displays the URL where this user can create guest passes.

NOTE

Users with the Guest Pass operator role can login to <https://unleashed.ruckuswireless.com/guestpass> or [https://\[host_ip_address\]/guestpass](https://[host_ip_address]/guestpass) using the above user credentials.

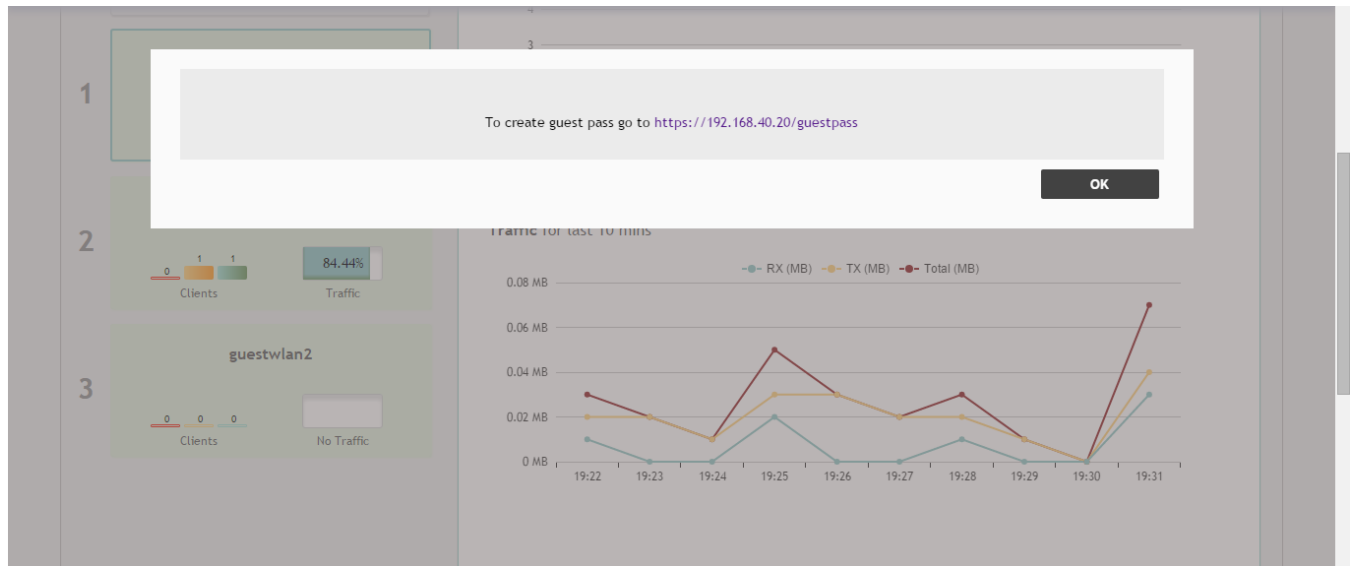FIGURE 74 Guest pass operator created, to create a guest pass go to URL



8. To create additional users for the operator role, go to **Admin & Services > System > Users > Create New**, and attach the above role to the user.

Configuring Guest Subnet Restrictions

By default, guest pass users are automatically blocked from the Unleashed network subnet (format: A.B.C.D/M) and the subnet of the AP to which the guest user is connected.

If you want to create additional rules that allow or restrict guest users from specific subnets, use the **Restricted Subnet Access** section.


You can create up to 32 subnet access rules, which will be enforced both on both the Unleashed Master AP and all connected member APs.

To create a guest access rule for a subnet:

1. Go to **Wi-Fi Networks** and click **Create** to create a new guest WLAN, or **Edit** to modify an existing guest WLAN.
2. In **Usage Type**, ensure that **Guest Access** is selected.
3. Click the arrow next to **Show Advanced Options** to expand the advanced options section.
4. Click the **Restricted Subnet Access** tab.
5. Click **Create New** to create a new subnet restriction. Text boxes appear under the table columns in which you can enter parameters that define the access rule.
6. Under **Description**, type a name or description for the access rule that you are creating.
7. Under **Type**, select Deny if this rule will prevent guest users from accessing certain subnets, or select Allow if this rule will allow them access.

8. Under **Source Address**, type the IP address and subnet mask (format: A.B.C.D/M) from which you want to allow or deny users access.
9. Under **Destination Address**, type the IP address and subnet mask (format: A.B.C.D/M) to which you want to allow or deny users access.
10. If you want to allow or restrict subnet access based on the application, protocol, or source or destination port used, click the **Advanced Options** link, and then configure the settings.
11. Click **Save** to save the subnet access rule.
12. Repeat Steps 5 to 11 to create up to 22 subnet access rules.

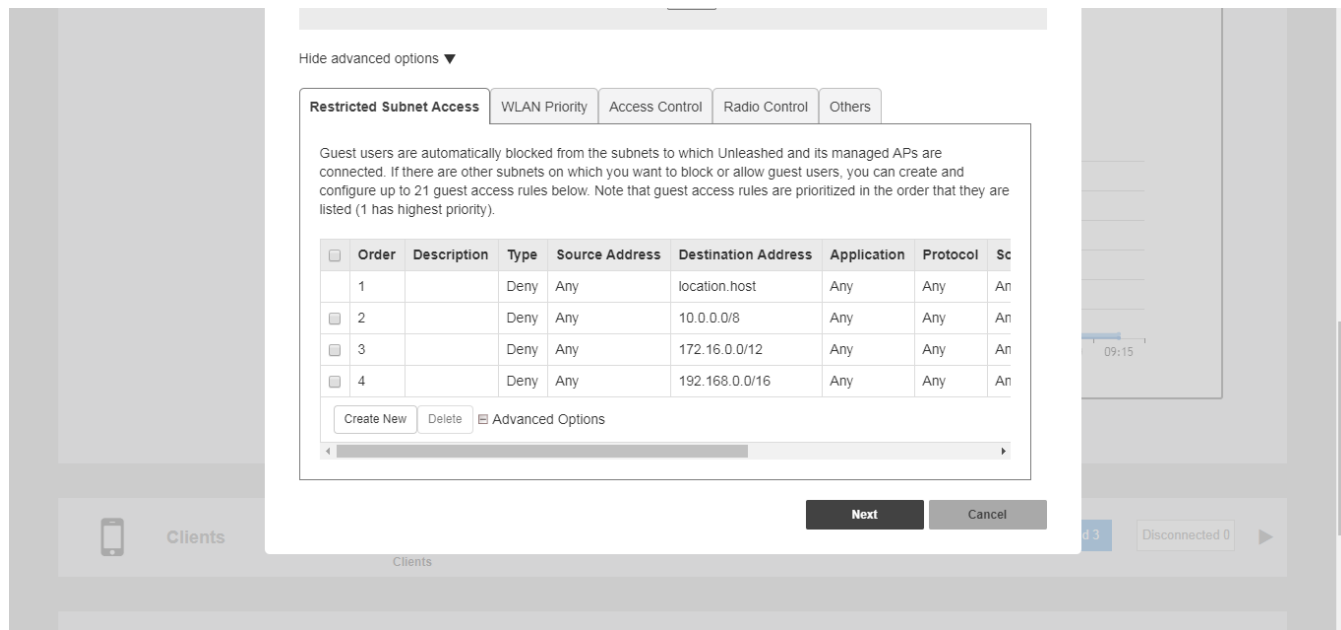FIGURE 75 Configuring guest Restricted Subnet Access



Using the BYOD Onboarding Portal

The Onboarding Portal feature provides a series of intuitive option screens allowing mobile users to choose whether to connect devices to a Guest WLAN or to self-configure their mobile devices to authenticate to an internal WLAN using Zero-IT activation.

To enable the Onboarding Portal for mobile devices:

1. Expand the **Wi-Fi Networks** section of the Dashboard.
2. Select an existing guest WLAN and click **Edit** or click **Create** to configure a new guest WLAN.
3. Enable the check box next to **Onboarding Portal** to enable Zero-IT device registration from the Guest Portal.
4. Select one of the following options to display when connecting to the Onboarding Portal:
 - **Guest Pass + Device Registration:** Show both buttons.
 - **Device Registration:** Show Zero-IT Device Registration button only.
5. If **Guest Pass** is enabled, configure Guest Pass options as described in [Working with Guest Passes](#) on page 190.
6. Click **Next** to continue to the next guest WLAN configuration page.

WLAN Configuration

Guest WLANs

- Optionally, configure additional guest WLAN settings, and click **OK** to apply.

NOTE

For information on these settings, see [Deploying a Guest WLAN](#) on page 172.


FIGURE 76 Enabling Onboarding Portal

The screenshot shows the 'Create WLAN' configuration window. The 'Onboarding Portal' section is highlighted with a red box, and the 'Enable Zero-IT device registration from the Guest Portal' option is selected. Other options include 'Guest Pass + Device Registration' and 'Device Registration'. The 'Guest Authentication' section has 'Guest Pass and Social Login' selected. The 'Guest Password' section has 'Unique password for each guest' selected. The 'Validity Period' section has 'Effective from first use' selected. The 'Grace Period' section has 'Allow users to reconnect without re-authentication for 480 minutes' selected. The 'Authentication Method' section has 'Open' selected.

When a client connects to the open Guest WLAN for the first time, the Ruckus **Onboarding Portal** page is displayed. The screen displays one or both of the following options, depending on your choice in Step 4 above:


- **Guest Access:** Connect this device to a guest WLAN.
- **Register Device:** Download a Zero-IT activation file to register this device for access to one or more internal WLANs.

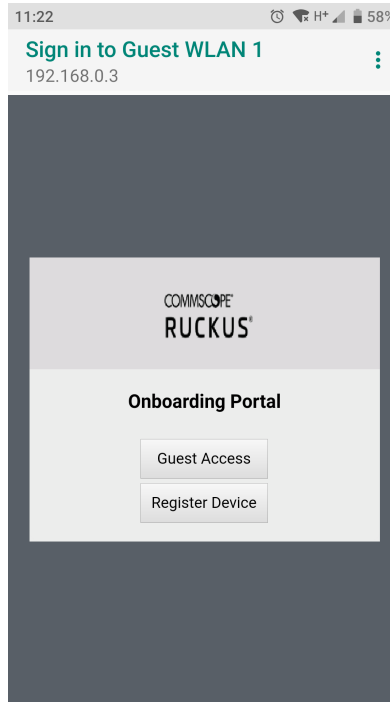FIGURE 77 The Onboarding Portal for Mobile Devices




If the user clicks the **Guest Access** button, the process is the same as when connecting to a Guest WLAN and all settings on the **Guest Access** configuration page will be put into effect.

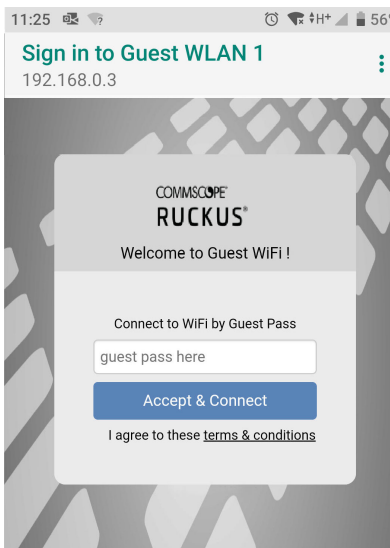
FIGURE 78 Guest Access Welcome Page



If the user clicks the **Register Device** button, the web page will be redirected to the **WLAN Connection Activation** page, from which the user can enter user name and password to activate this device. A Zero-IT activation file is generated for download once the client device is registered with Unleashed.

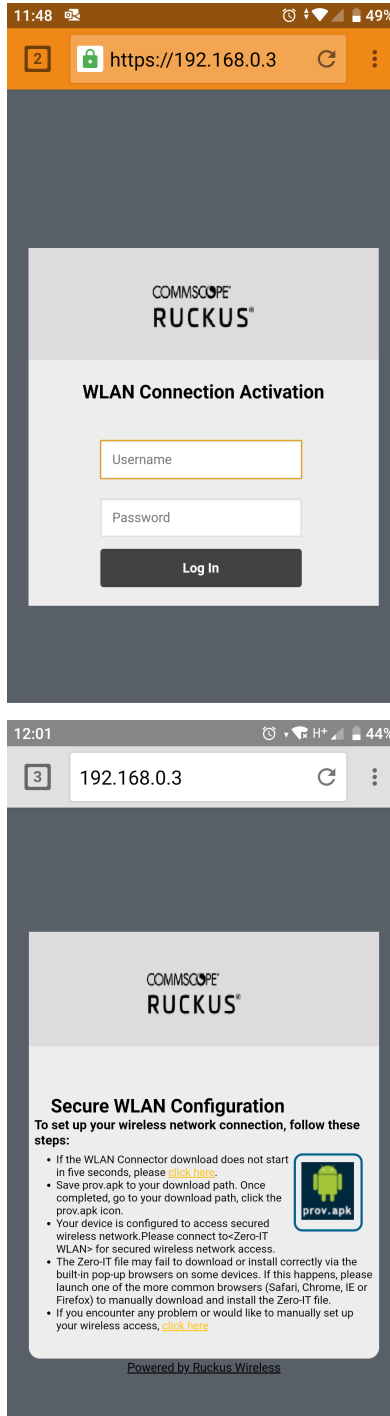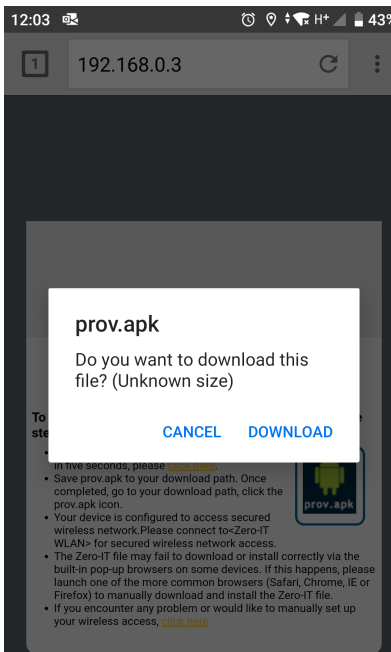FIGURE 79 Activating the Device Using the WLAN Connection Activation Screen, and Downloading Activation File





After running the downloaded Zero-IT file, the device will be configured with the settings to automatically connect to the secure internal/corporate WLAN.


NOTE

You may need to manually switch from the guest WLAN to the secure WLAN after activation (on some mobile devices).

NOTE

You may need to manually delete any previously installed Zero-IT activation files before a new one can be run. On some devices (including some Android versions), the activation file will not run if an older existing package of the same name with a conflicting signature is already installed.

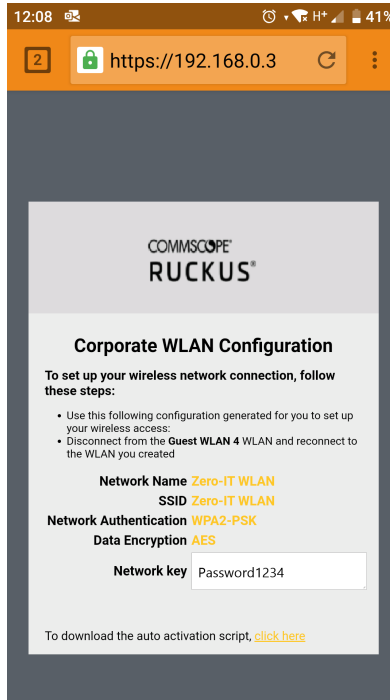FIGURE 80 If Zero-IT activation file cannot be run, manually copy/paste the Network Key



Working with Guest Passes

Guest passes are temporary privileges granted to guests to allow access your wireless LANs.

Unleashed provides many options for customizing guest passes, controlling who is allowed to issue guest passes, and controlling the scope of access to be granted.

With Guest Pass authentication enabled, guests are required to enter a guest pass code when connecting to a guest WLAN. Temporary guest passes can be issued for single users, multiple users, one-time login, time-limited multiple logins for a single guest user, or can be configured so that a single guest pass can be shared by multiple users. Additionally, they can be batch generated if many short-term guest passes need to be created at once.

Guest passes can be delivered in any of the following ways:

- Printout
- Send SMS with guest credentials
- Send email with guest credentials

NOTE

To enable guest pass delivery via email or SMS, you must first configure an email server or an SMS delivery account (Twilio or Clickatell) from the **Email** tab or the **SMS** tab.

Generating a Guest Pass

Using the **Guest Access Service > Admin Generated Guest Passes** page, Unleashed administrators can create guest passes from within the UI.

Complete the following steps to generate a guest pass.

1. From the dashboard, select **Admin & Services > Services > Guest Access Service**.

- Under **Admin Generated Guest Passes**, click **Create** to create a guest pass.

FIGURE 81 Creating a Guest Pass

- For **Number of Guest Passes**, select one of the following options:
 - **Single:** Generate a single guest pass. Refer to [Generating and Delivering a Single Guest Pass](#) on page 201.
 - **Multiple:** Generate multiple guest passes. Refer to [Generating and Printing Multiple Guest Passes at Once](#) on page 206.
 - **By Profile:** Import a guest pass profile. Refer to [Creating a Guest Pass Profile](#) on page 208.
- Enter the guest name.
- For **Guest WLAN**, select the WLAN for which the guest pass will be issued. To create a guest WLAN, refer to [Deploying a Guest WLAN](#) on page 172.
- In **Valid For**, enter a number and select a time interval (**Hours**, **Days**, or **Weeks**) for which the guest pass will remain valid.
- (Optional) Enter a guest email address and guest phone number. If these options are entered, and the email server and SMS delivery method have been configured (from **Admin & Services > System > System Info**), you can deliver the guest pass to the guest using email or SMS.
- (Optional) Under **Advanced Options**, configure the following options:
 - **Enable Session Timeout:** Select the check box and select a time interval (**Minutes**, **Hours**, **Days**, or **Weeks**) after which guests are required to log in again. If **Session Timeout** is disabled, the connected users are not required to log in again until the guest pass expires.
 - **Enable Shared Pass:** Allow multiple users to share a single guest pass.
- Click **Generate** to create the guest pass.

WLAN Configuration

Guest WLANs

10. On the **Create Guest Pass** page, select a delivery method:

- Single
 - **Print passes now using Default template:** Print the guest pass to a printer.
 - **Text the pass to [phone]:** Deliver the guest pass code by way of an SMS text message to the phone number entered.
 - **Email the pass to [email]:** Deliver the guest pass code by way of an email message to the email address entered.
- Multiple
 - **Print the passes now**
 - **Download all passes now**
 - **Show me all passes and let me decide to print/SMS/email passes**

Guest Pass Self-Service

The Guest Pass Self-Service feature allows guests to your organization to self-activate their devices to access your guest WLANs.

The Guest Pass Self-Service feature allows guests to connect to a guest SSID and submit basic information (name, email address and mobile phone number) to receive a guest pass code. The guest then enters this code to gain access to the internet, with no IT involvement required.

Using the default settings, a guest user connects to a self-service guest WLAN and enters his contact information to receive a guest pass code. The user then activates the guest pass, and can now freely use the internet.

Additional configuration options allow the administrator to set the guest pass delivery method (either displayed directly on the device screen, or sent to the user via email, SMS, or both) to set session length and access duration, and to require "sponsor approval" prior to providing a guest pass to the new guest user.

Enabling Guest Pass Self-Service


Use the following procedure to allow visitors to self-activate their devices to your Guest WLAN(s).

To enable Guest Pass Self-Service for a Guest WLAN:

1. Go to **Wi-Fi Networks**, and click **Create** to create a new guest WLAN, or **Edit** to edit an existing WLAN.
2. Enter a **Name** for the WLAN, and in **Usage Type**, select **Guest Access**.
3. Click **Next**. The second WLAN creation screen appears.

4. Locate the **Guest Pass Self-Service** option and select the **Enable guest pass self service** button. Additional options appear.

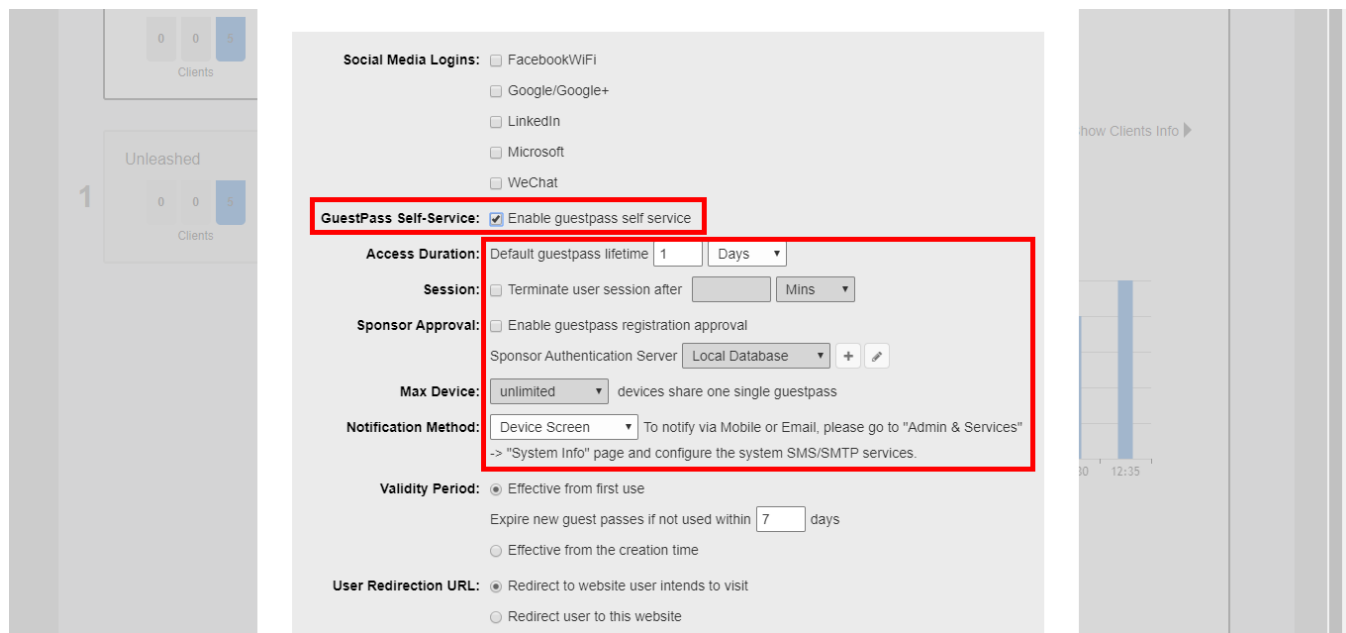FIGURE 82 Select Enable Guest Pass Self Service



5. Configure the following options as required:
 - **Access Duration:** Select the default access time provided with one guest pass in days, hours or weeks. (Default is one day.)
 - **Session:** Optionally, enable the session limitation to require guest pass users to re-login after the specified time period.
 - **Max Device:** Allow multiple devices to share a single guest pass. (Default is unlimited.)
 - **Sponsor Approval:** Select this option to require email approval for issuing self-service guest passes. (See [Requiring Sponsor Approval for Self-Service Guest Pass Authentication](#) on page 193.)
 - **Notification Method:** Select whether the guest pass will be delivered via email, SMS, or displayed directly on the device screen. When Sponsor Approval is selected, the Device Screen option is not allowed.
6. Click **OK** to save your changes.

Requiring Sponsor Approval for Self-Service Guest Pass Authentication

If the **Sponsor Approval** option is enabled, when the user connects to the WLAN, registration information must be submitted along with a sponsor's email address to await sponsor approval.


The Sponsor receives the email request and clicks a link to allow this user access to the guest WLAN. After the registration is approved, RUCKUS Unleashed generates a guest pass and sends it to the user through email or SMS (or both) using the contact information the user provided.

NOTE

If using sponsor approval, RUCKUS Unleashed must be configured with your SMTP settings for email delivery, or with a valid Twilio or Clickatell account to deliver guest passes through SMS. Refer to [Customizing the Guest Pass Email Content](#) on page 215 and [Customizing the Guest Pass SMS Content](#) on page 216 for more information.


To configure sponsor approval, select the **Sponsor Approval** check box, select a sponsor authentication server (default is local database), and optionally enter a **Default Sponsor Email** address.

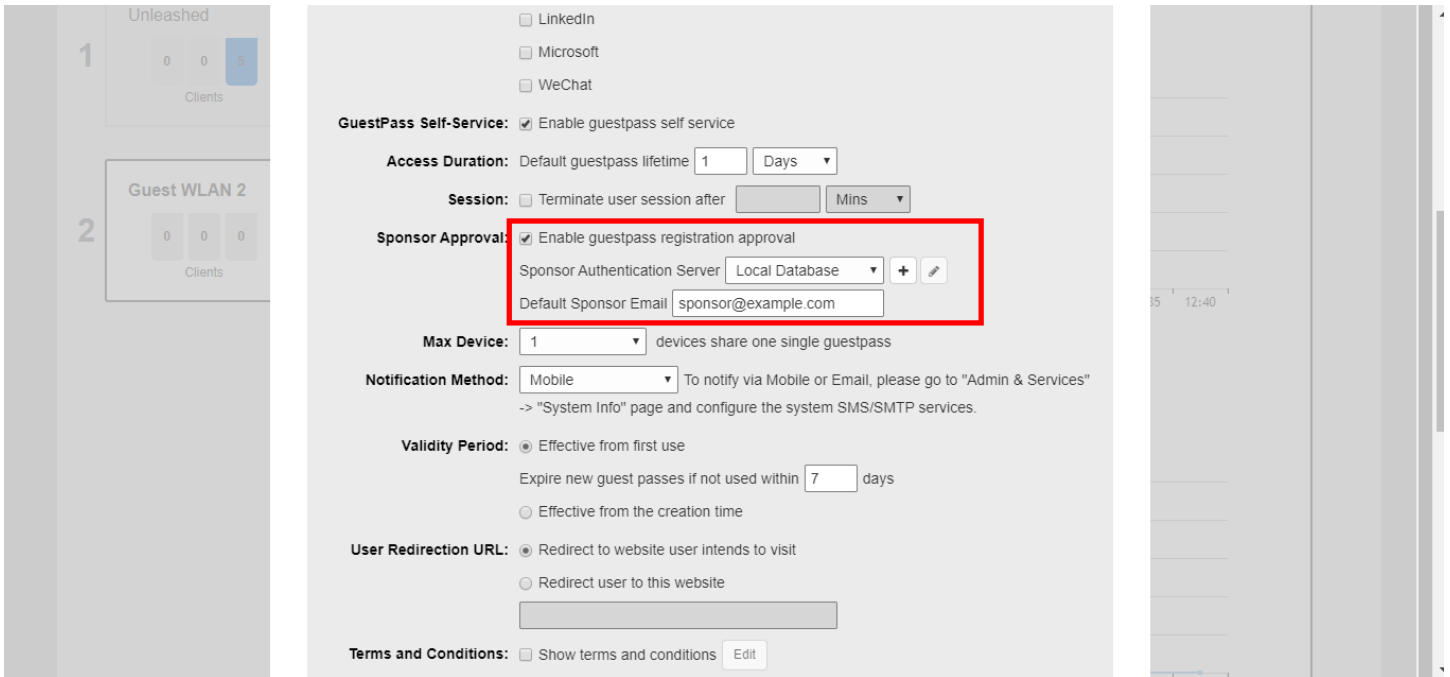FIGURE 83 Enabling Sponsor Approval for Guest Pass Self-Service



When a user connects to a guest WLAN with Sponsor Approval enabled, the **Welcome to Guest WiFi** page allows the guest to request a self-service guest pass by clicking the **Help with a guest pass** link.

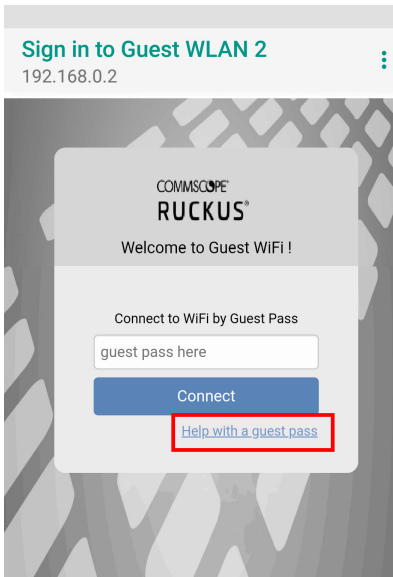
FIGURE 84 Requesting Help with a Guest Pass



Complete the following steps to request, approve, and activate a sponsor-approved guest pass:

1. On the **What would you like to do** screen, select **Register and get a new guest pass**, and click **Next**.

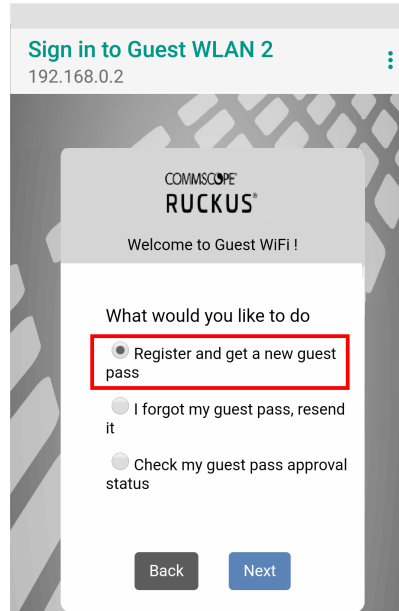FIGURE 85 Requesting a New Guest Pass



WLAN Configuration
Guest WLANs


2. Enter a username, an email address or phone number to which the guest pass key will be sent, and the sponsor's email address, and click **Next**.

FIGURE 86 Registering as a Guest



A guest pass request email is sent to the sponsor's address, and a message that the guest access request has been submitted is displayed.

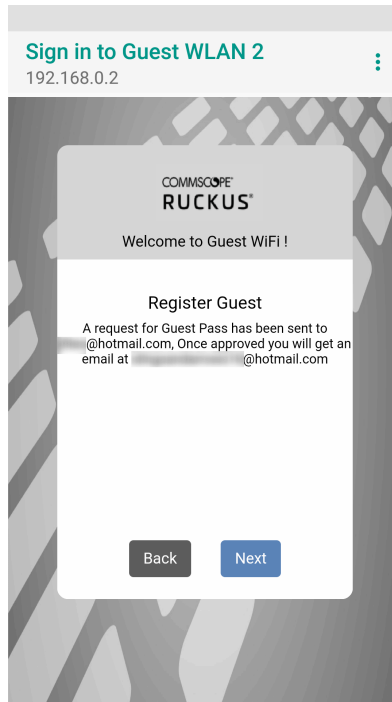FIGURE 87 Guest Pass Request Submitted Message



The sponsor will then receive an email requesting approval for guest pass activation.

FIGURE 88 Sponsor Accept Email

Dear Sponsor/Admin,

You are a designated approver for @hotmail.com's WiFi access. Click link below to approve or reject the request.

[https://192.168.0.2/user/sponsor_login.jsp?](https://192.168.0.2/user/sponsor_login.jsp?email=GKGGGJGMGFHDFEAGIGPHEGNGBGJGMCODGPGN&user=HDGMGJGOGHHDGGBOGEGGBHCHCGPHHDDBDAAEAGIGPHEGNGBGJGMCODGPGN&ssid=EHHFGFHDHECAFHEMEBEOCADC)

[email=GKGGGJGMGFHDFEAGIGPHEGNGBGJGMCODGPGN&user=HDGMGJGOGHHDGGBOGEGGBHCHCGPHHDDBDAAEAGIGPHEGNGBGJGMCODGPGN&ssid=EHHFGFHDHECAFHEMEBEOCADC](https://192.168.0.2/user/sponsor_login.jsp?email=GKGGGJGMGFHDFEAGIGPHEGNGBGJGMCODGPGN&user=HDGMGJGOGHHDGGBOGEGGBHCHCGPHHDDBDAAEAGIGPHEGNGBGJGMCODGPGN&ssid=EHHFGFHDHECAFHEMEBEOCADC)

Name: @hotmail.com

Mobile No:

Email: @hotmail.com

SSID: Guest WLAN 2


3. As the sponsor opens the email and clicks the link to open the **Sponsor/Approver Authentication** page.

4. On the **Sponsor/Approver Authentication** page, enter a valid **User Name** and **Password** and click **Log in** to continue.

NOTE

This username and password must exist on the authentication server (Local Database, Active Directory, or RADIUS) configured for this guest access service.

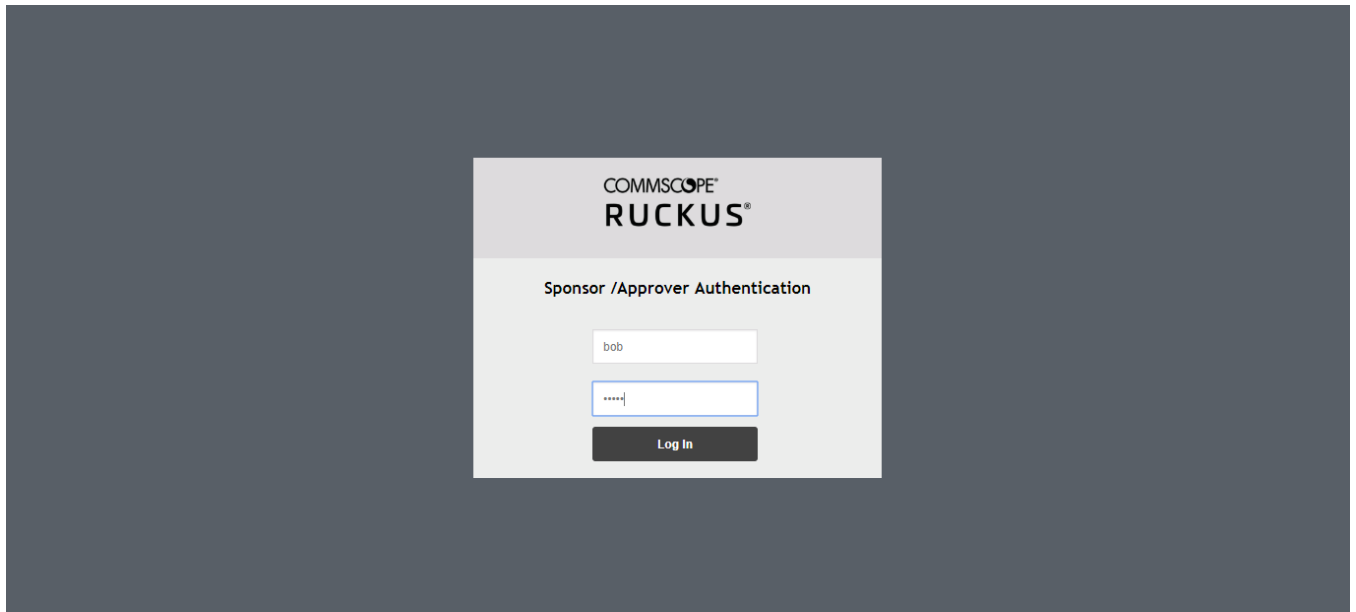FIGURE 89 Sponsor/Approver Login Page



5. Upon successful login, the **Guest Pass Approval** page displays the name, phone number, and email addresses of all pending guest pass requests. Select the check box next to each guest pass you wish to approve, set the **Duration** for each, and click **Approve** to approve them.

FIGURE 90 Guest Pass Approval


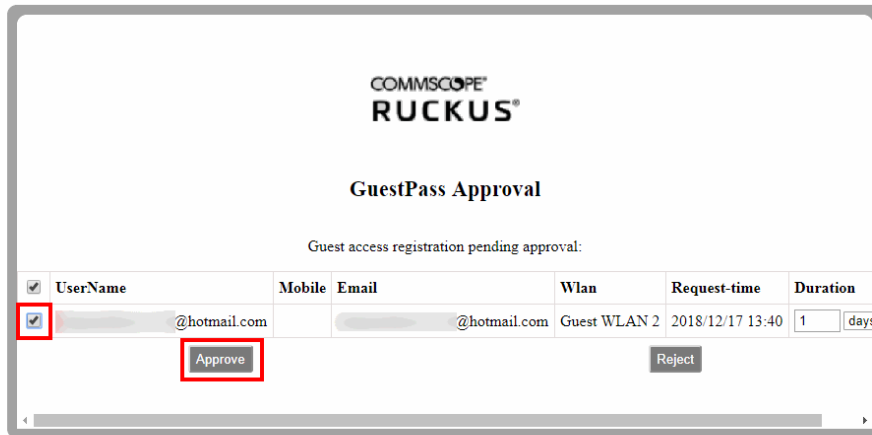


FIGURE 91 Guest Pass Approved Message

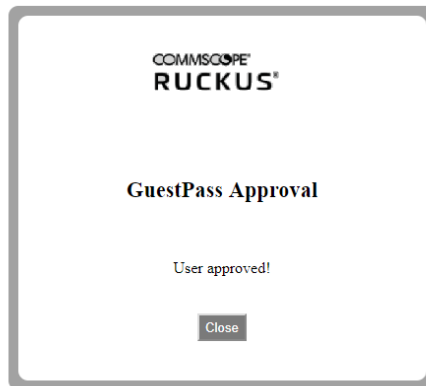

Approving a guest pass triggers delivery of an email or SMS (or both) message containing the guest pass code to the guest.

6. As a guest user, open the guest pass activation email message email and copy the Guest Pass code to the clipboard.

FIGURE 92 Guest Pass Activation Email Message

Greetings, [redacted]@hotmail.com

You have been granted ~~access to the~~ company wireless network

Your guest pass key is **DMBXV-PHIQM**

This guest pass is valid until 1 day later once activated, and has to be activated in 7 days.

Connect your wireless-ready device to this network: Guest WLAN 2, as detailed in the instructions printed below.

Please follow the instruction below:

Finding the Wireless "Guest" Network


- 1 Find "Guest" SSID on device.
- 2 Select the "Guest" SSID and and click Connect.
- 3 If a Wireless Network Connection confirmation dialog box asks you to confirm "connecting to an unsecured network", click Connect Anyway. A connection status dialog appears, while a network address is obtained and initial connection established.
- 4 Once your device is connected proceed to the next step.

Logging into the Network as a Guest

- 1 Start a web browser and try to connect to any valid Internet site. The wireless network login page automatically appears.
- 2 Select "I'm a Guest and would like to access the Internet" and then click Next.
- 3 When "Guest Pass" page appears, enter the text of your guest pass key by typing or pasting and click Login.
When the browser displays "Authenticated" page, your network connection is now active."

7. Launch a web browser and browse to any URL. You will be redirected to the **Welcome** login page.
8. Enter the Guest Pass code received in the activation email (or SMS), and click **Connect**.

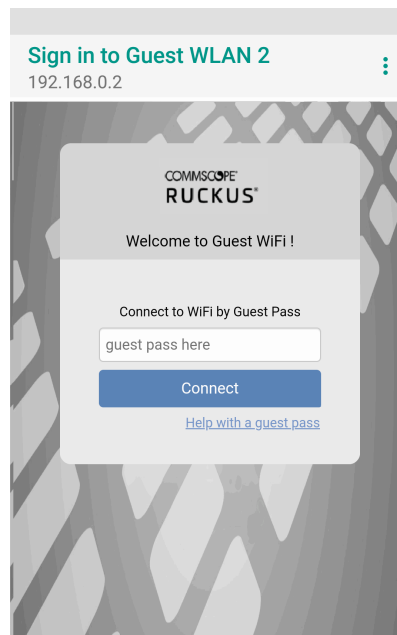FIGURE 93 Entering Guest Pass Code



You have successfully authenticated to this guest network using the guest pass provided.

Controlling Guest Pass Generation Privileges

By default, guest pass generation privileges are given to all authenticated users in the Default user role.

In order to change the guest pass generation privileges for a group of users, refer to [Configuring User Roles](#) on page 362.

For more information on creating a Guest Pass Operator role, refer to [Creating a Guest Pass Operator](#) on page 181.

Generating and Delivering a Single Guest Pass

The following instructions apply to users with guest pass generation privileges.

A single guest pass can be used for one-time login, time-limited multiple logins for a single guest user, or configured so that a single guest pass can be shared by multiple users.

NOTE

For instructions on how to generate multiple guest passes, refer to [Generating and Printing Multiple Guest Passes at Once](#) on page 206.

NOTE

If printing the guest pass, make sure that your computer is connected to a local or network printer before starting.

Complete the following steps to generate a single guest pass.

1. Enter the URL of the **Guest Pass Generation** page in your web browser.


```
https://{unleashed-hostname-or-ipaddress}/guestpass
```

2. Enter your username and password and click **Log in**.

NOTE

The user generating the guest pass must have guest pass generation privileges, as described in [Controlling Guest Pass Generation Privileges](#) on page 201.

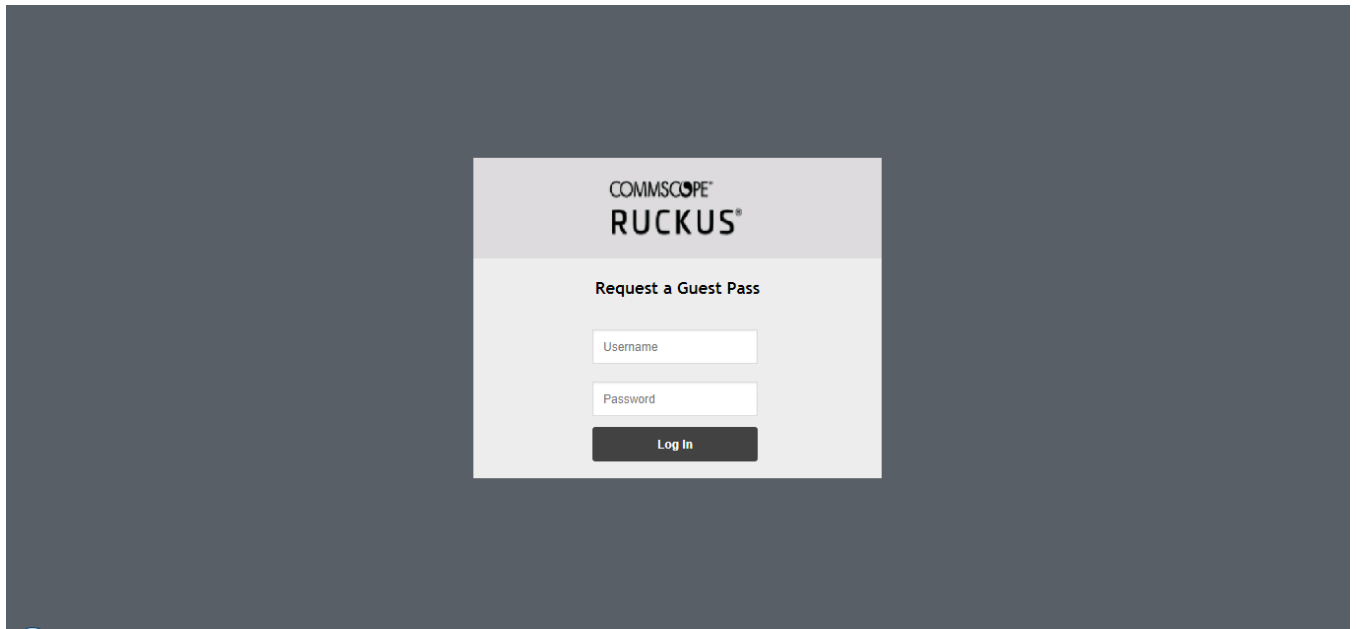FIGURE 94 Requesting a Guest Pass



The **Guest Information** page appears. On this page, you need to provide information about the guest user to enable RUCKUS Unleashed to generate the guest pass.


3. On the **Guest Information** page, fill in the following options:
 - **Creation Type:** Click **Single** to generate a single guest pass. To generate multiple guest passes in batch, refer to [Generating and Printing Multiple Guest Passes at Once](#) on page 206.
 - **Full Name:** Enter the name of the guest user for whom you are generating the guest pass.
 - **Valid for:** Enter a number in the **Valid for** field and select a time unit (**Hours**, **Days**, or **Weeks**) to specify the time period when the guest pass will be valid.
 - **WLAN:** Select the WLAN for this guest (typically, a guest WLAN).
 - **Email:** (Optional) Enter the email address for this user.
 - **Phone Number:** (Optional) Enter a phone number for this user.
 - **Key:** Leave as is if you want to use the random key that RUCKUS Unleashed generates. If you want to use a key that is easy to remember, delete the random key, and enter a custom key. For example, if RUCKUS Unleashed generated the random key OVEGS-RZKKF, you can change it to "joe-guest-key". Customized keys must be from 1 through 16 ASCII characters in length.

NOTE

Each guest pass key must be unique and is distributed on all guest WLANs. Therefore, you cannot create the same guest pass for use on multiple WLANs.


- **Remarks:** (Optional) Enter any notes or comments. For example, if the guest user is a visitor from a partner organization, you can enter the name of the organization.
- **Sharable:** Use this option to allow multiple users to share a single guest pass.
- **Session:** Select the check box and enter an increment of time after which guests must log in again. If the **Session** check box is not selected, connected users will not be required to log in again until the guest pass expires.

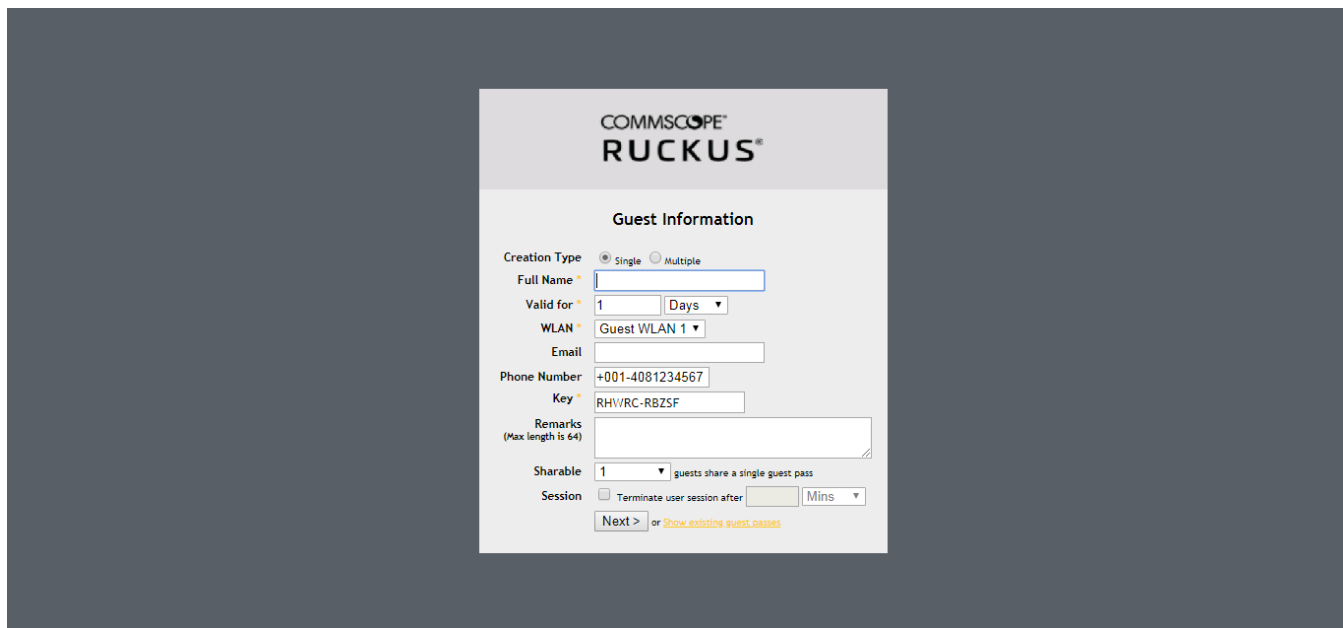FIGURE 95 Creating a Single Guest Pass



4. Click **Next**. The **Guest Pass Generated** page appears and presents the guest pass key and options for delivering this key to your guests. Delivery options include **Email** (if you entered an email address for the guest), **SMS** (if you configured a phone number for the guest), and **Print Instructions**.

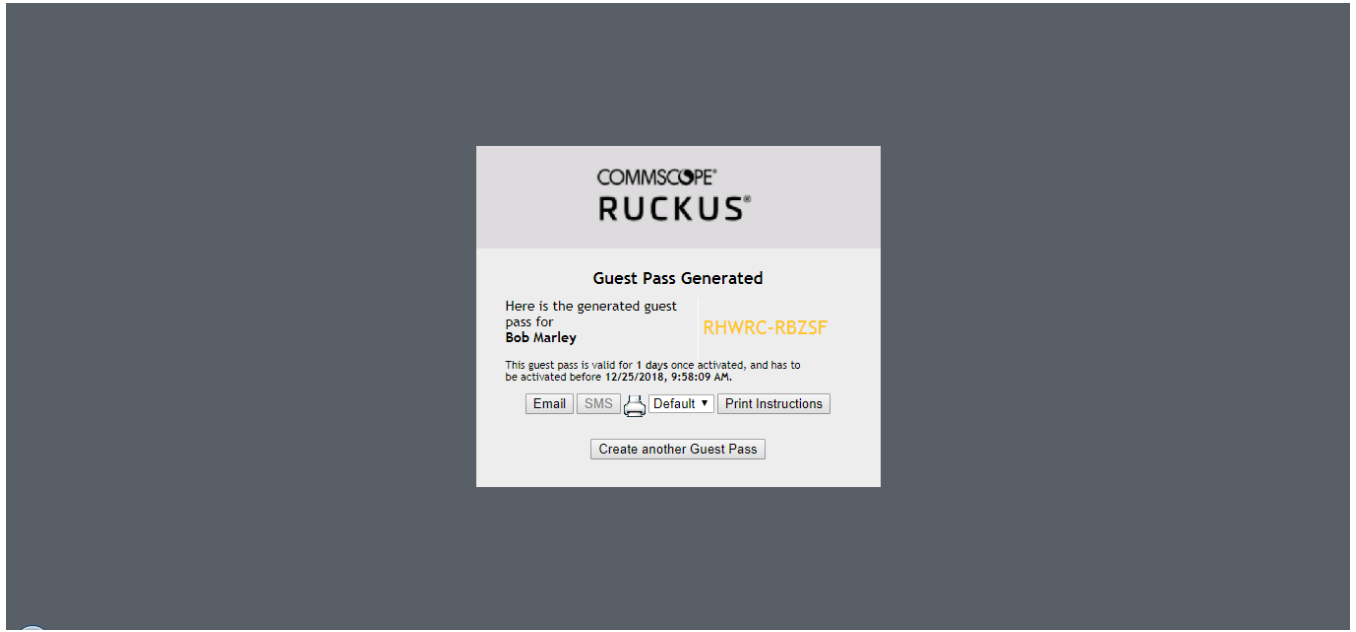FIGURE 96 Guest Pass Generated Page



5. If you want to print the guest access instructions, select the guest pass instructions that you want to print from the menu. If you did not create custom guest pass printouts, select **Default**.
6. Click **Print Instructions**. A new page displays the Guest Pass instructions and the **Print** dialog box is displayed.
7. Select the printer that you want to use, and click **Print** to print the guest pass instructions.

You have completed generating and delivering a guest pass for your guest user.

FIGURE 97 Sending Guest Pass Key through Email Entered on the Guest Information Screen

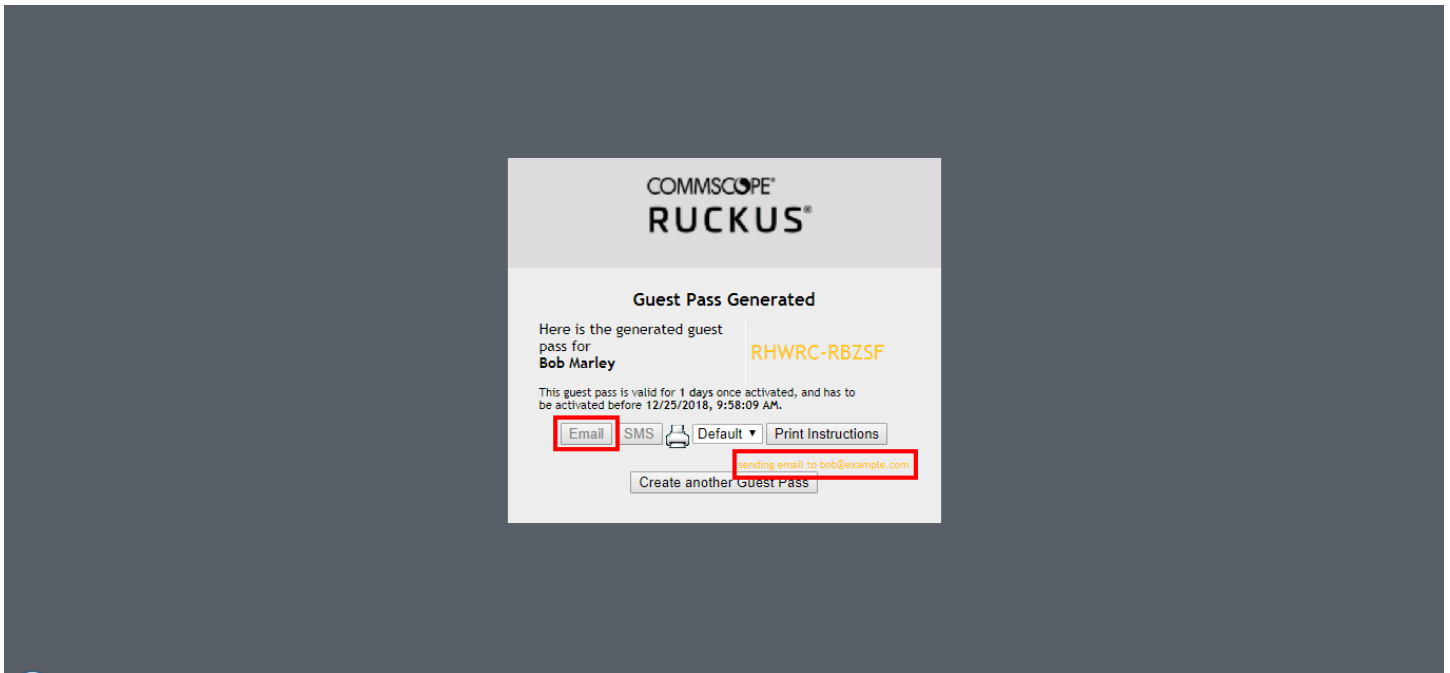


FIGURE 98 Sample Guest Pass Printout

Connecting as a Guest to the Corporate Wireless Network

COMMSCOPE
RUCKUS®

Greetings, **Bob Marley**

You have been granted access to the company wireless network, which you can use to access both the World Wide Web and Internet, and to check your personal email.

Your guest pass key is **RHWRC-RBZSF**

This guest pass is valid for **1 days** once activated, and has to be activated before **12/25/2018, 9:58:09 AM**

Connect your wireless-ready PC to this network: **Guest WLAN 1**, as detailed in the instructions printed below.

Before you start, please review the following requirements.

Requirements

- A wireless-network-ready computer
- The corporate "guest" network name
- The guest pass (a text "key")

Connecting
Using your guest pass to connect requires a series of two procedures: (1) connecting your PC to the company "guest" network, then (2) logging in as a qualified guest.

Finding the Wireless "Guest" Network

- 1 On your PC/Windows desktop, check the system tray for a Wireless Connection icon (the tool tip reads "Wireless Network Connection/[name]").
- 2 Right-click this icon and choose **View Available Wireless Networks**.
- 3 When the Wireless Network Connection window appears, the "guest" WLAN will be listed.
- 4 Select the WLAN "guest" network (various "neighbor nets" may also be listed) and click **Connect**.
- 5 If a Wireless Network Connection confirmation dialog box asks you to confirm "connecting to an unsecured network", click **Connect Anyway**.

A connection status dialog appears, while a network address is obtained and initial connection established.

- 6 When the Wireless Network Connection window displays "**Connected**", you can close this window and proceed to the next procedure.

Logging into the Network as a Guest

- 1 Start a web browser and try to connect to any valid Internet site. The wireless network login page automatically appears.
- 2 Select "I'm a Guest and would like to access the Internet" and then click **Next**.
- 3 When the Unleashed WebUI "Guest Pass" page appears, enter the text of your guest pass key (by typing or pasting) and click **Login**.

When the browser displays a Unleashed WebUI "Authenticated" page, your connection is active.

- 4 You can now check your personal email and browse the Web.

Important

If you want to create additional guest passes one by one, click **Create Another Guest Pass**. Alternatively, you can generate multiple guest passes in batch, as described in [Generating and Printing Multiple Guest Passes at Once](#) on page 206.

Generating and Printing Multiple Guest Passes at Once

The following instructions apply to users with guest pass generation privileges.

NOTE

For instructions on how to generate a single guest pass, refer to [Generating and Delivering a Single Guest Pass](#) on page 201.

NOTE

If printing the guest pass, make sure that your computer is connected to a local or network printer before starting.

Complete the following steps to generate and print multiple guest passes at the same time:

1. Enter the URL of the Guest Pass Generation page in your web browser.
`https://{unleashed-hostname-or-ipaddress}/guestpass`
2. Enter your username and password, and click **Log In**.

The **Guest Information** page appears. On this page, you need to provide information about the guest users to enable RUCKUS Unleashed to generate the guest passes.

3. On the **Guest Information** page, fill in the following options:


- **Creation Type:** Click **Multiple**.
- **Valid for:** Enter a number in the **Valid for** field and select a time unit (**Hours**, **Days**, or **Weeks**) to specify the time period that the Guest Passes will be valid.
- **WLAN:** Select one of the existing WLANs with which the guest users will be allowed to associate.
- **Number:** Select the number of guest passes that you want to generate. RUCKUS Unleashed automatically populates the names of each user (Batch-Guest-1, Batch-Guest-2, and so on) to generate the guest passes.

NOTE

Each guest pass key must be unique and is distributed on all guest WLANs. Therefore, you cannot create the same guest pass for use on multiple WLANs.

- **Profile (*.csv):** If you have created a Guest Pass profile (refer to Creating a Guest Pass Profile), click **Choose File** to import the file.
- **Sharable:** Configure this option if you want to allow multiple users to share a single guest pass (default: 1; not shared).
- **Session:** Select the check box and enter an increment of time after which guests must log in again. If the **Session** check box is not selected, connected users will not be required to log in again until the Guest Pass expires.

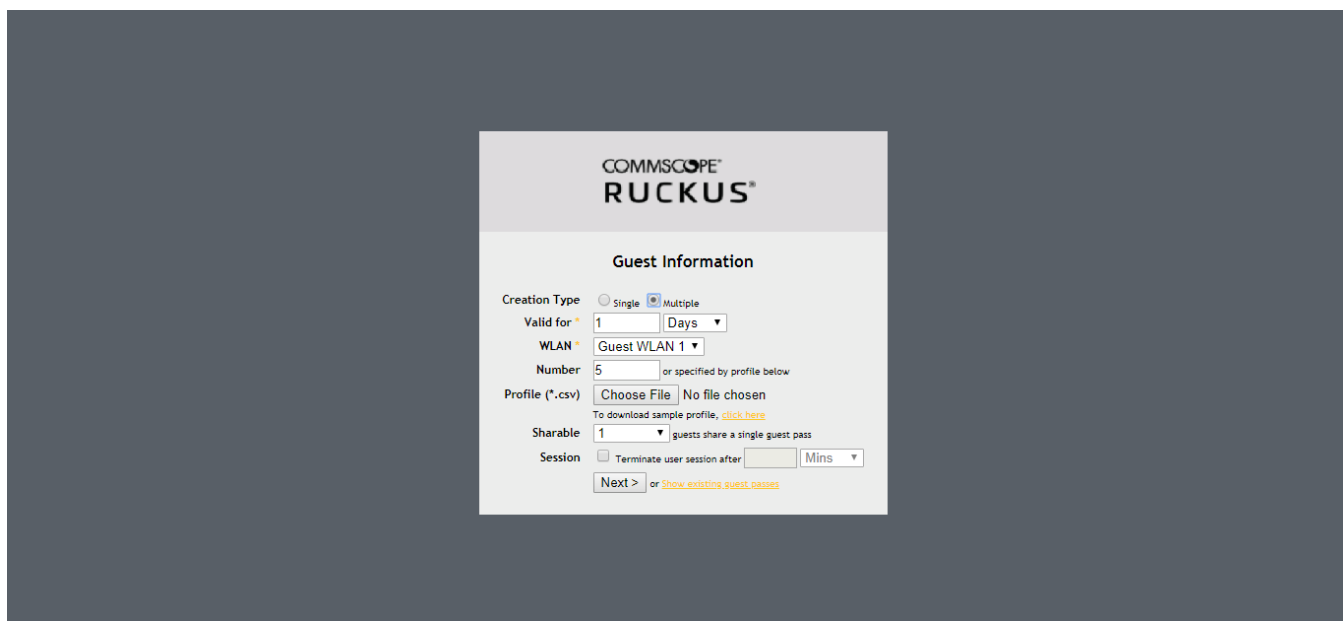FIGURE 99 Generating Multiple Guest Passes




NOTE

If you want to be able to identify the guest pass users by their names (for example, for monitoring or auditing purposes in a hotel setting), click **Choose File**, and upload a guest pass profile instead. Refer to [Creating a Guest Pass Profile](#) on page 208 for more information.

- Click **Next**. The **Guest Pass Generated** page appears and displays the guest pass user names and expiration dates.

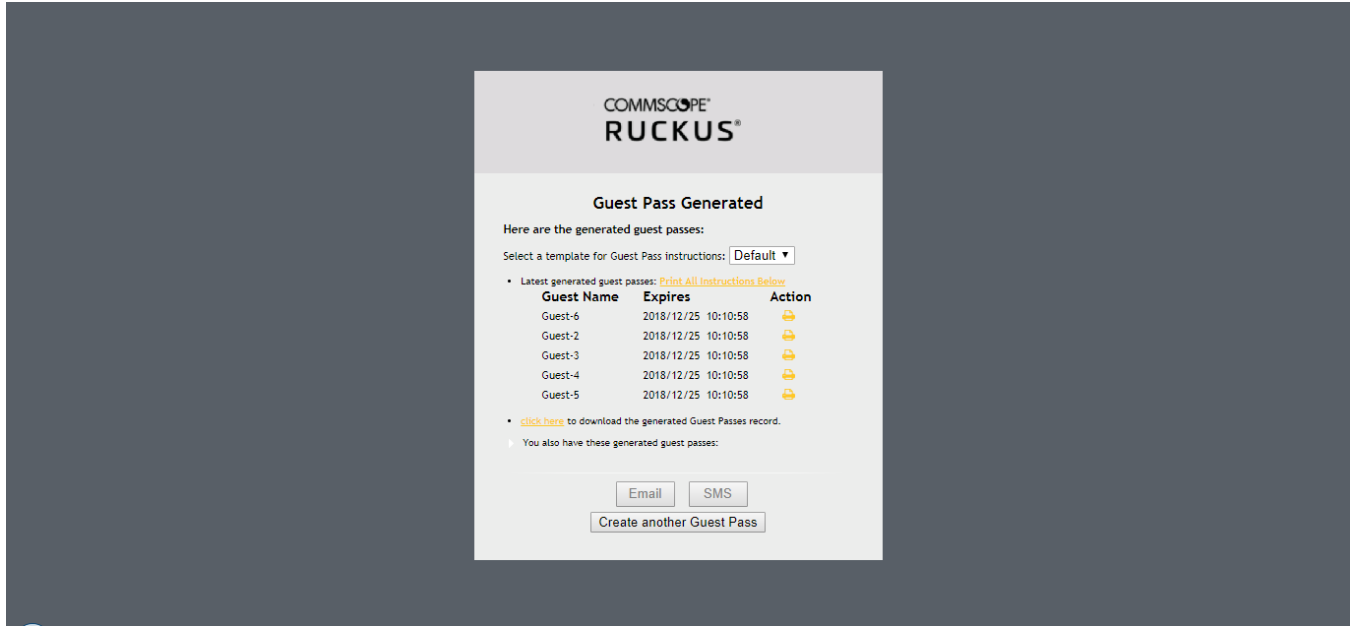FIGURE 100 Multiple Guest Passes Generated



- For **Select a template for Guest Pass instructions**, select the guest pass instructions that you want to print from the menu. If you did not create custom guest pass printouts, select **Default**.
- Print the instructions for a single guest pass or print all of them:
 - To print instructions for all guest passes, click **Print All Instructions** below.
 - To print instructions for a single guest pass, click the printer icon in the **Action** column in the same row as the guest pass for which you want to print instructions.A new browser page appears and displays the guest pass instructions and the **Print** dialog box is displayed.
- Select the printer that you want to use and click **Print** to print the guest pass instructions.

You have completed generating and printing multiple guest passes for your guest users. If you want to save a record of the guest passes that you have generated, click the **Click here** link in **Click here to download the generated Guest Passes record**. Download and save the CSV file to your computer.


Creating a Guest Pass Profile

Complete the following steps to create a Guest Pass profile.

- Log in to the guest pass generation page.
- For **Creation Type**, click **Multiple**.

3. For Profile (*.csv), click the [click here](#) link in **To download a profile sample, click here.**

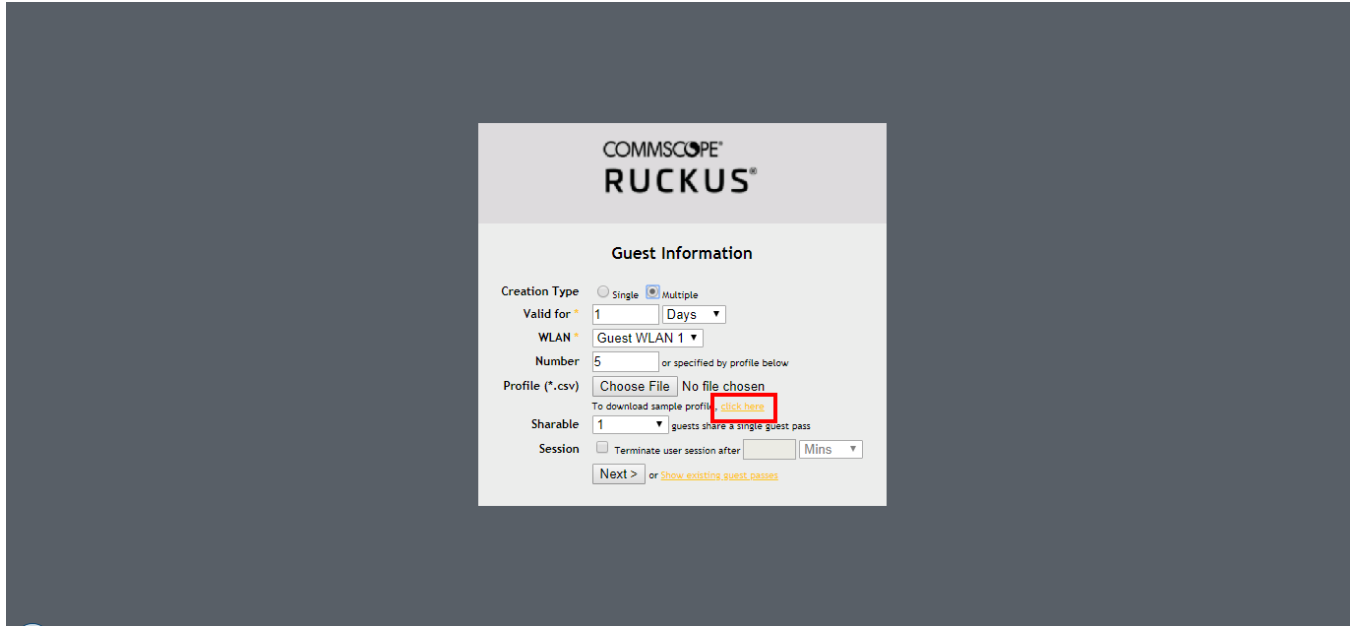FIGURE 101 Downloading a Sample Profile




4. Save the sample guest pass profile (in CSV format) to your computer.

WLAN Configuration
Guest WLANs

5. Using a spreadsheet application, open the CSV file and edit the guest pass profile by filling out the following columns:
- **#Guest Name:** Enter the name of the guest user (one name per row).
 - **Remarks:** (Optional) Enter any note or remarks about the guest pass.
 - **Key:** Enter a guest pass key consisting from 1 through 16 alphanumeric characters. If you want RUCKUS Unleashed to generate the guest pass key automatically, leave this column blank.

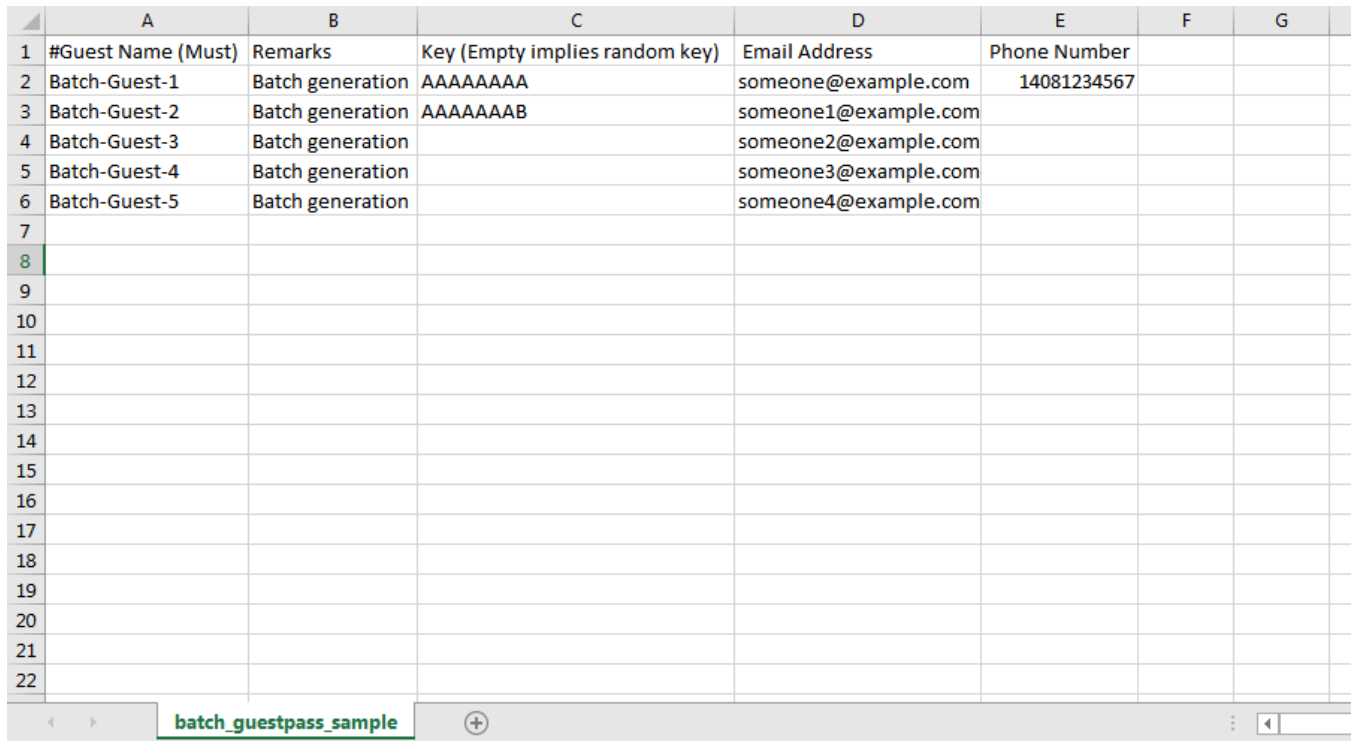
FIGURE 102 Editing the CSV File in a Spreadsheet Application



	A	B	C	D	E	F	G
1	#Guest Name (Must)	Remarks	Key (Empty implies random key)	Email Address	Phone Number		
2	Batch-Guest-1	Batch generation	AAAAAAA	someone@example.com	14081234567		
3	Batch-Guest-2	Batch generation	AAAAAAB	someone1@example.com			
4	Batch-Guest-3	Batch generation		someone2@example.com			
5	Batch-Guest-4	Batch generation		someone3@example.com			
6	Batch-Guest-5	Batch generation		someone4@example.com			
7							
8							
9							
10							
11							
12							
13							
14							
15							
16							
17							
18							
19							
20							
21							
22							

- Return to the **Guest Information** page, and complete step 3 through step 7 in [Generating and Printing Multiple Guest Passes at Once](#) on page 206 to upload the guest pass profile and generate multiple guest passes.

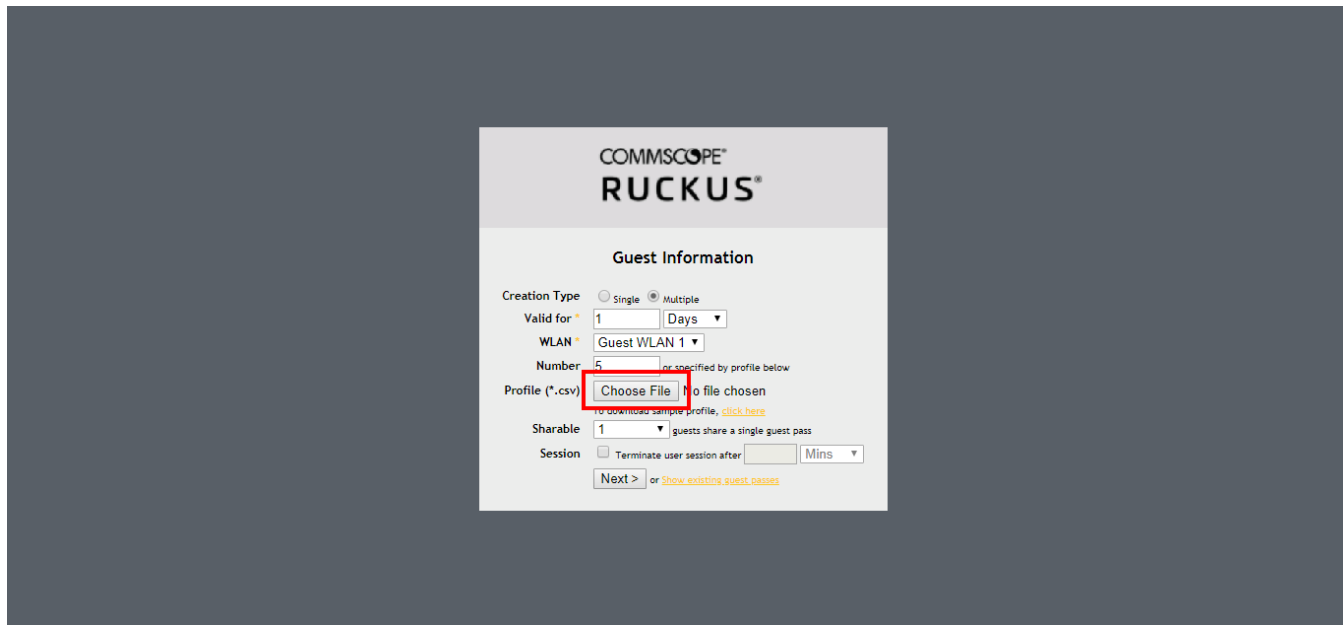FIGURE 103 Importing Batch Generation CSV File




Monitoring Generated Guest Passes

Once you have generated guest passes for your visitors, you can monitor and, if necessary, delete them to revoke the guests' access privileges.

- Go to **Admin & Services > Services > Guest Access Service > Guest Pass Generation**.
- Review the generated guest passes in the **Admin Generated Guest Passes** and **Self-Service Generated Guest Passes** tables.
- To remove a guest pass, select the check box for the guest pass, and click the **Delete** button. Click **Delete All** to delete all generated guest passes at once.

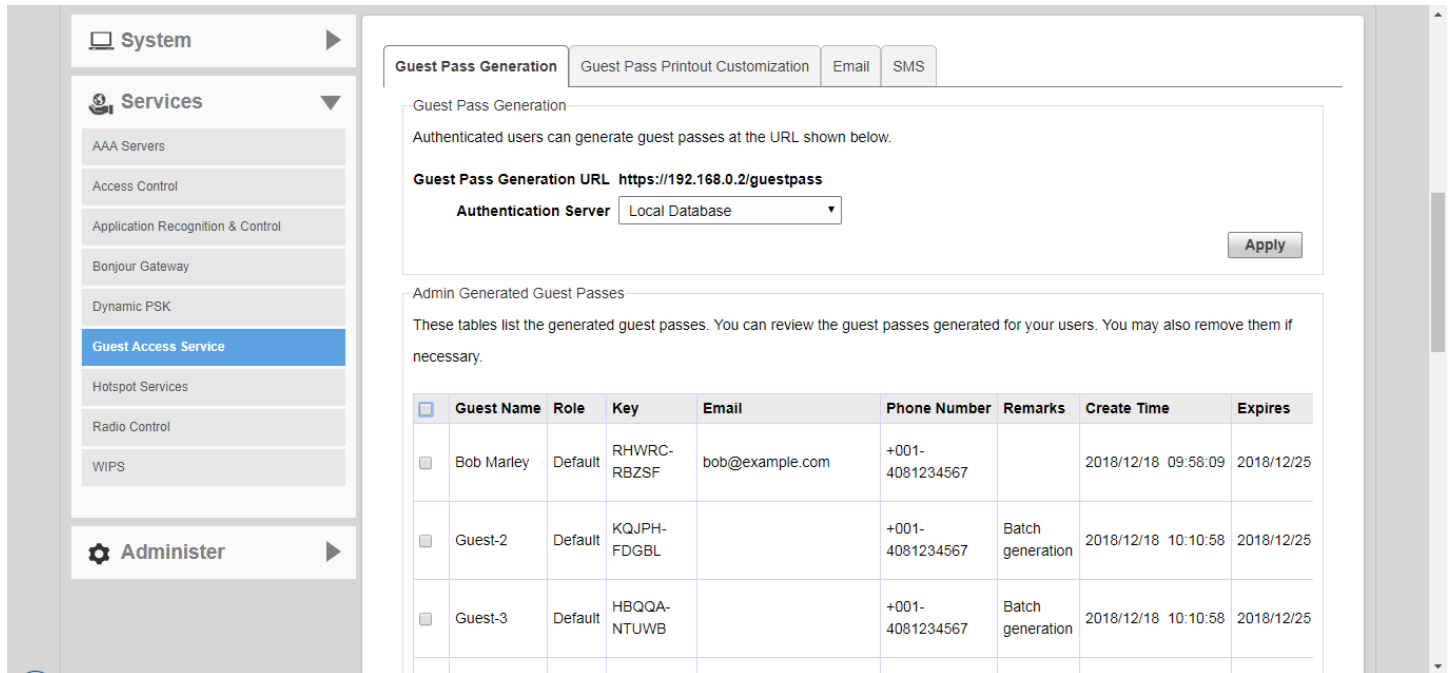FIGURE 104 Viewing generated Guest Passes



Creating a Custom Guest Pass Printout

The guest pass printout is a printable HTML page that contains instructions for the guest pass user on how to connect to the wireless network.

The authenticated user who is generating the guest pass will need to print out this HTML page and provide it to the guest pass user. A guest pass in English and one in French are included by default.


As administrator, you can create custom guest pass printouts. For example, if your organization receives visitors who speak different languages, you can create guest pass printouts in other languages.

To create a custom guest pass printout:

1. Go to **Admin & Services > Services > Guest Access Service > Guest Pass Printout Customization**.

- Click the [click here](#) link to download an example of an existing printout.

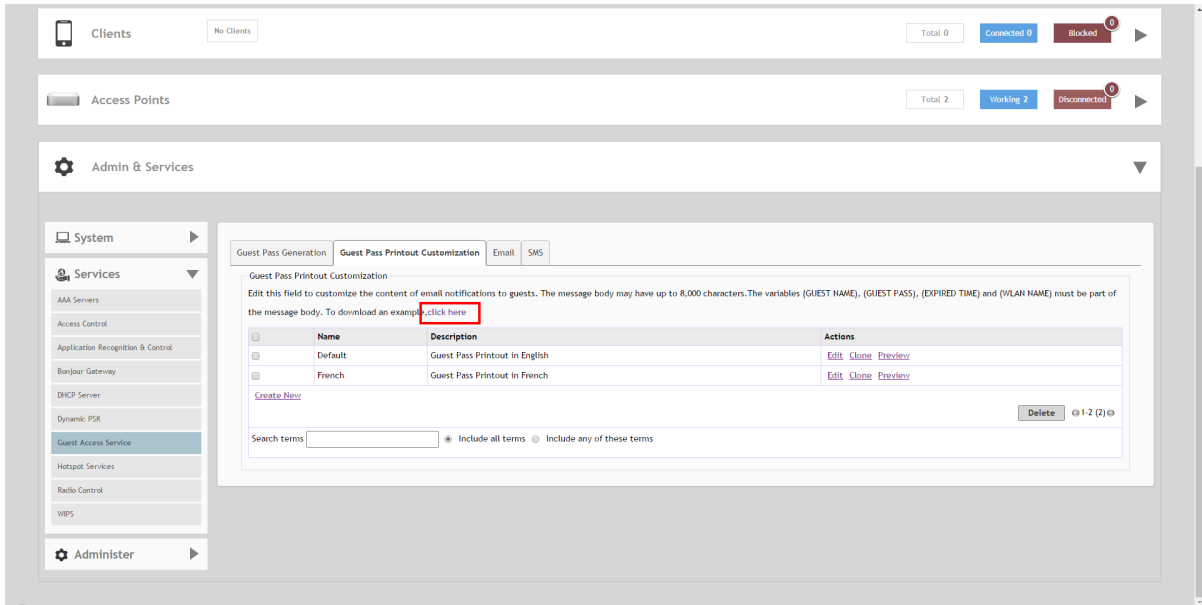FIGURE 105 Guest Pass Printout Customization




- Save the HTML file to your computer.
- Using a text or HTML editor, customize the guest pass printout. Note that only ASCII characters can be used. You can do any or all of the following:
 - Reword the instructions
 - Translate the instructions to another language
 - Customize the HTML formatting

NOTE

The guest pass printout contains several tokens or variables that are substituted with actual data when the guest pass is generated. When you customize the guest pass printout, make sure that these tokens are not deleted. For more information on these tokens, see [Guest Pass Printout Tokens](#) on page 214.

- Go back to the **Guest Pass Printout Customization** screen, and then click **Create New**. The **Create New** form appears.

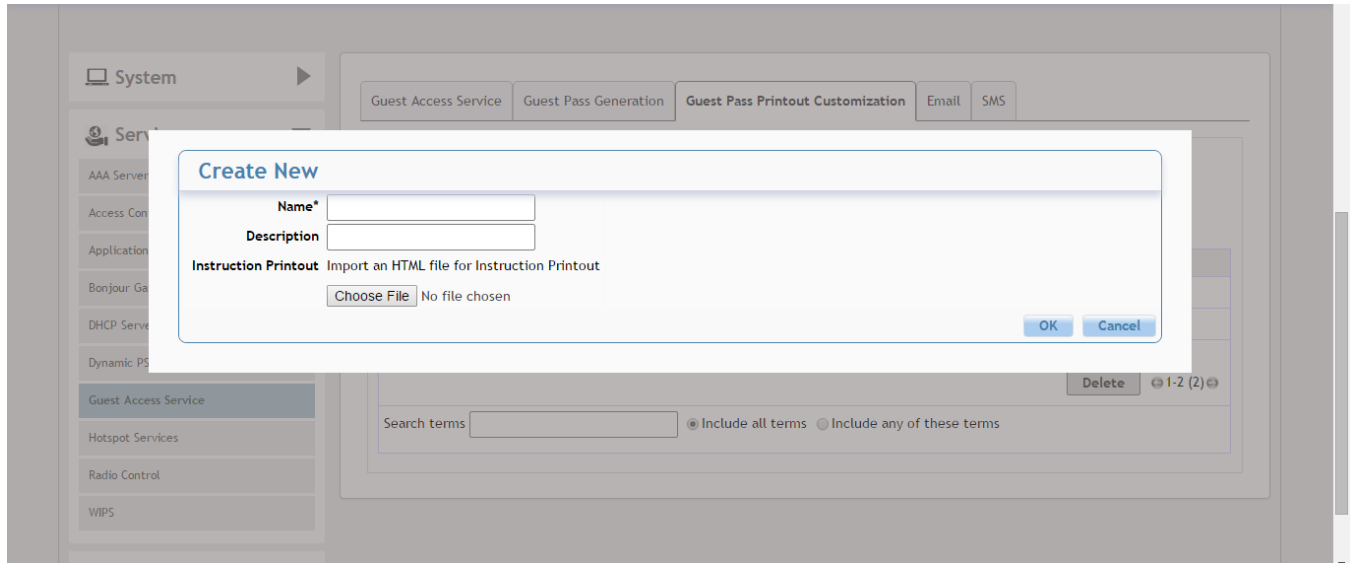FIGURE 106 Creating New Guest Pass Printout File



- In **Name**, type a name for the guest pass printout that you are creating. For example, if this guest pass printout is in Spanish, you can type **Spanish**.
- In **Description** (optional), add a brief description of the guest pass printout.
- Click **Choose File**, select the HTML file that you customized earlier, and then click **Open**. Unleashed copies the HTML file to its database.
- Click **Import** to save the HTML file to the Unleashed AP.

You have completed creating a custom guest pass printout. When users generate a guest pass, the custom printout that you created will appear as one of the options that they can print.

Guest Pass Printout Tokens

The following table lists the tokens that are used in the guest pass printout. Make sure that they are not accidentally deleted when you customize the guest pass printout.

TABLE 31 Tokens that you can use in the guest pass printout

Token	Description
{GP_GUEST_NAME}	Guest pass user name.
{GP_GUEST_KEY}	Guest pass key.
{GP_IF_EFFECTIVE_FROM_CREATION_TIME}	If you set the validity period of guest passes to Effective from the creation time (in the Guest Pass Generation section), this token shows when the guest pass was created and when it will expire.
{GP_ELSEIF_EFFECTIVE_FROM_FIRST_USE}	If you set the validity period of guest passes to Effective from first use (in the Guest Pass Generation section), this token shows the number of days during which the guest pass will be valid after activation. It also shows the date and time when the guest pass will expire if not activated.
{GP_ENDIF_EFFECTIVE}	This token is used in conjunction with either the {GP_ELSEIF_EFFECTIVE_FROM_FIRST_USE} or {GP_ENDIF_EFFECTIVE} token.
{GP_VALID_DAYS}	Number of days for which the guest pass is valid.
{GP_VALID_TIME}	Date and time when the guest pass expires.

TABLE 31 Tokens that you can use in the guest pass printout (continued)

Token	Description
{GP_GUEST_WLAN}	Name of WLAN that the guest user can access.

Customizing the Guest Pass Email Content

The Unleashed guest pass email content can be customized to suit your preferences.


NOTE

To allow Unleashed to deliver guest passes via email, you must first configure an email account (and its SMTP settings) from which Unleashed will send the emails. For information on configuring the email server, see [Configuring Email Server Settings](#) on page 178.

Use the following procedure to customize the content of the email in which the guest pass keys will be delivered:

1. Go to **Admin & Services > Services > Guest Access Service > Email**.
2. Replace the content in the text box, while ensuring that the following variables remain intact and unchanged:
 - (GUEST NAME)
 - (GUEST PASS)
 - (EXPIRED TIME)
 - (WLAN NAME)
3. To download a sample of the email, click the **click here** link.
4. Click **Apply** to save your changes.

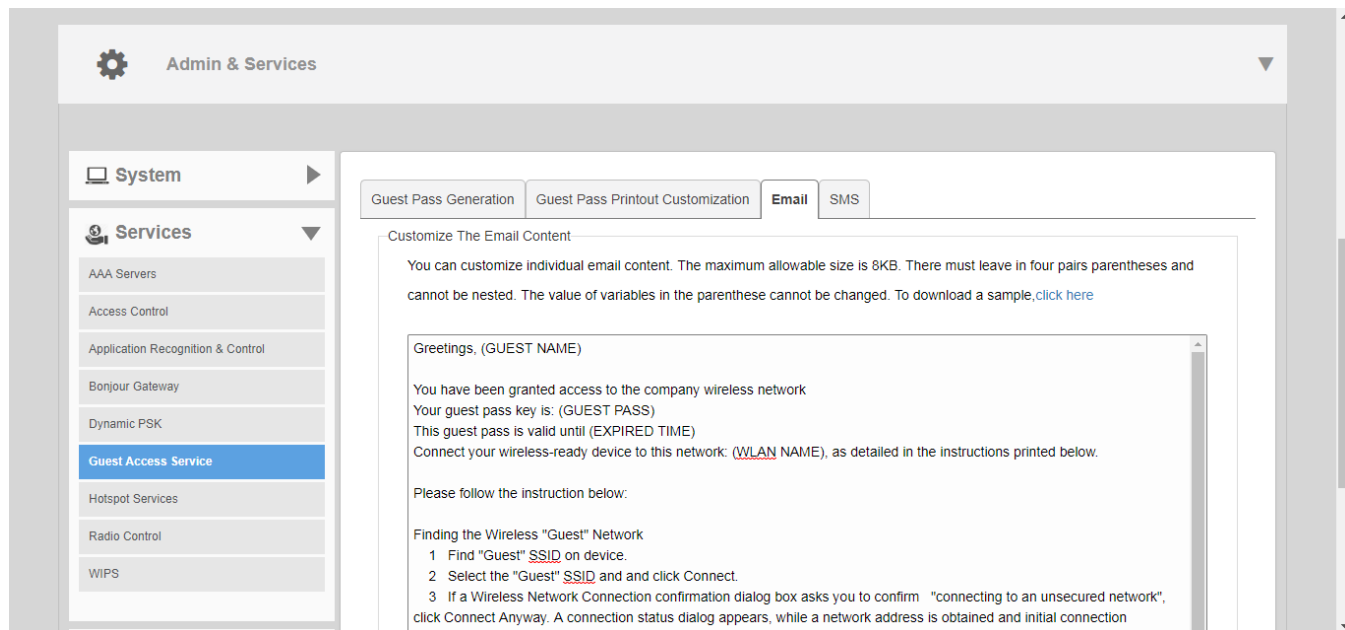FIGURE 107 Customize guest pass email content



Customizing the Guest Pass SMS Content

The Unleashed guest pass SMS content can be customized to suit your preferences.


NOTE

To allow Unleashed to deliver guest passes via SMS, you must first configure an SMS delivery account from which Unleashed will send the SMS messages. For information on configuring the SMS server settings, see [Configuring Email Server Settings](#) on page 178.

Use the following procedure to customize the content of the SMS messages in which the guest pass keys will be delivered:

1. Go to **Admin & Services > Services > Guest Access Service > SMS**.
2. Replace the content in the text box, while ensuring that the following variables remain intact and unchanged:
 - (WLAN NAME)
 - (GUEST PASS)
 - (EXPIRED TIME)
3. To download a sample of the SMS message, click the **click here** link.
4. Click **Apply** to save your changes.

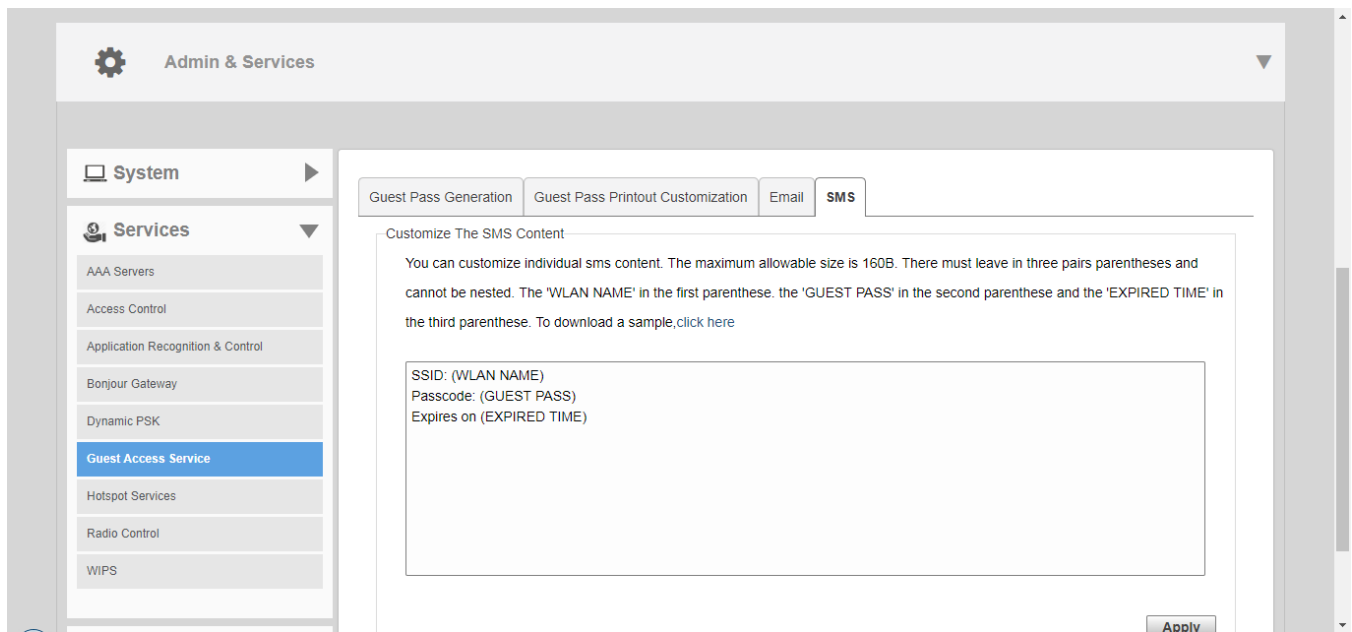FIGURE 108 Customize guest pass SMS content



Social Media WLANs

Social Media WLANs allow guest users to access the Internet using a social media account instead of using a WPA password or Guest Pass to login.

The following social media login methods are currently supported:

- [Facebook Wi-Fi](#) on page 218
- [Google/Google+](#) on page 218
- [LinkedIn](#) on page 228
- [Microsoft Live](#) on page 232

- WeChat on page 236

For each of these social media WLAN options, you must create an application or activate a service on the respective social media website first, before your users will be able to log in using their social media accounts.

NOTE

Beginning with release 200.6, multiple social media login types can be enabled for the same WLAN.

FIGURE 109 Creating a Social Media WLAN


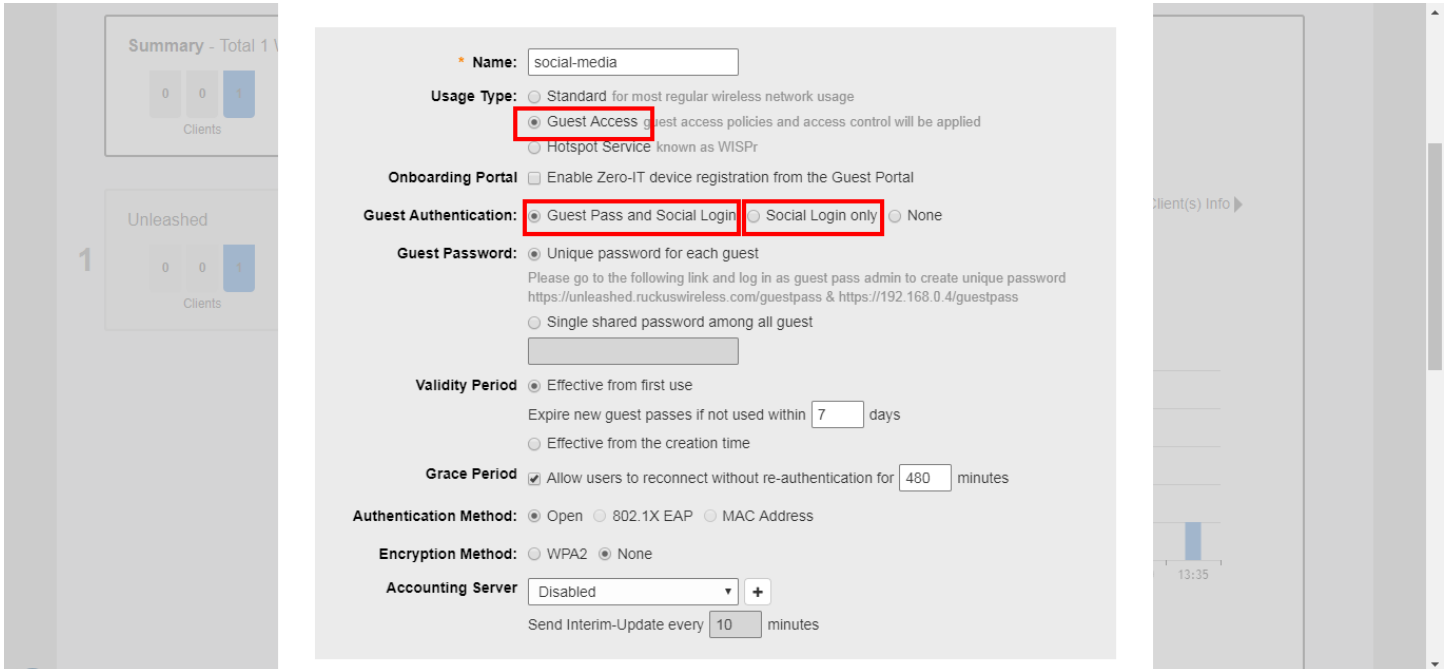


FIGURE 110 Select social media logins

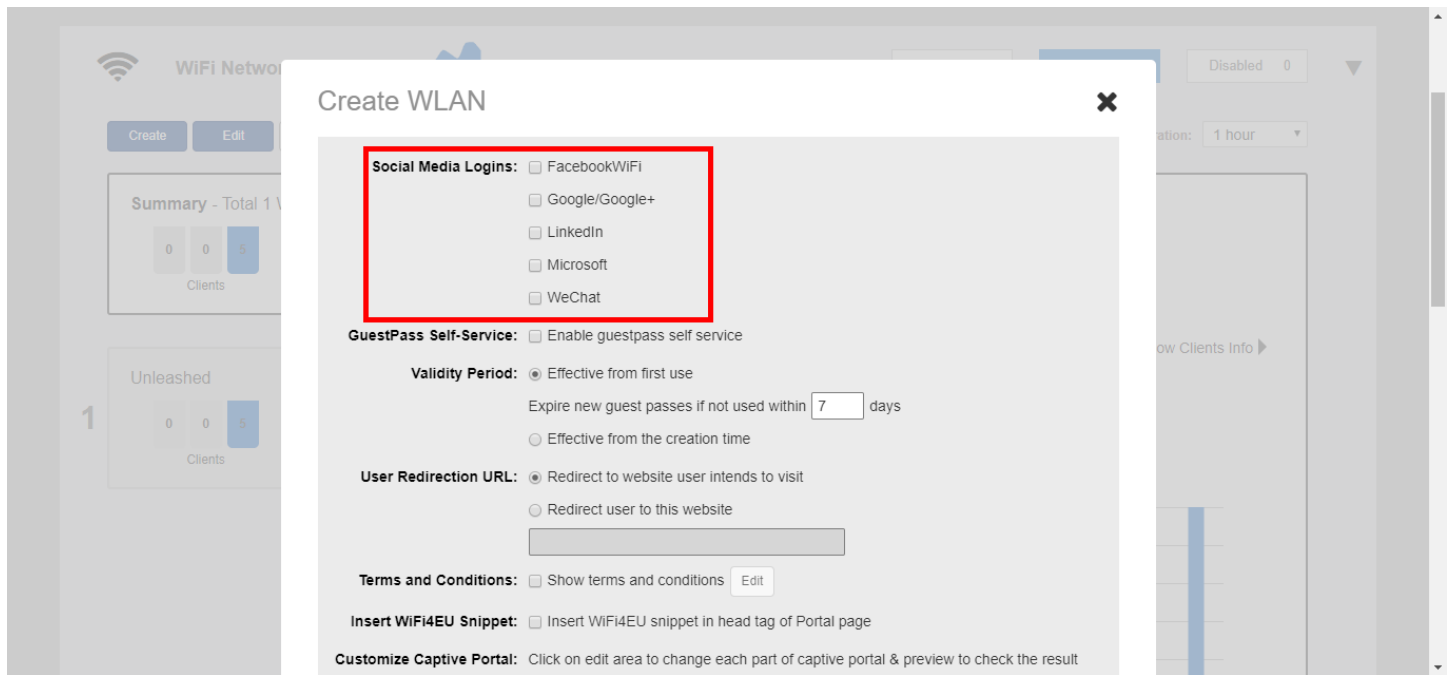

Facebook Wi-Fi

Business owners can use this WLAN type to require users to visit the business owner's Facebook page and "check in" using a Facebook account before being allowed free access to the Internet.

The business owner can also display advertisements and other announcements on this Facebook page, and can control the guest session length and other options using the Facebook Wi-Fi configuration panel. For more information, see the [Facebook Wi-Fi Help Center](#).

The following caveats and limitations should be considered before deploying a Facebook Wi-Fi (or other social media) WLAN:

- You can create a maximum of four Facebook Wi-Fi WLANs.
- Users must launch a browser to trigger the Facebook authentication.
- Invalid users are determined by Facebook. Unleashed queries facebook.com once every five minutes to verify the authentication status of all currently connected users. If an invalid response is received, the end user will be deleted within five minutes. If Unleashed fails to receive a response, it will re-send the request four times. If there is no response after five requests, Unleashed will delete the related stations.

Google/Google+

The Google/Google+ social media login complies with the OAuth 2.0 specification. To create a Google/Google+ social media WLAN, you need an OAuth 2.0 client ID, which is used when requesting an OAuth 2.0 access token.

RUCKUS Unleashed provides a default internal Google client ID. After selecting **Google/Google+**, clear the **Use my own client ID** check box if you do not have or do not want to create your own client ID.

If you do want to use your own client ID and password, enable **Use my own client ID**, and enter your **Google client ID** and **Password** in the fields that appear.

Select **Enable HTTPS** or **Enable HTTP**.


To limit Google/Google+ login to a specific domain or several domains, enable the **Only allow users from the following hosted domains** option and enter the domain names, separated by commas, in the text box.

For example, if a company that uses Gmail accounts wants to limit access to the WLAN to Google accounts that match the company's domain name, enable **Only allow users from the following hosted domains** and enter the company's Google domain (*company_name.gmail.com*). This prevents any other gmail.com accounts from being used to access this WLAN.

Refer to the Google documentation for instructions on configuring your Google/Google+ account to provide social media login details. For information on Google OAuth 2.0 setup instructions, refer to <https://support.google.com/cloud/answer/6158849>.

For more information on OAuth 2.0, refer to <https://en.wikipedia.org/wiki/OAuth>.

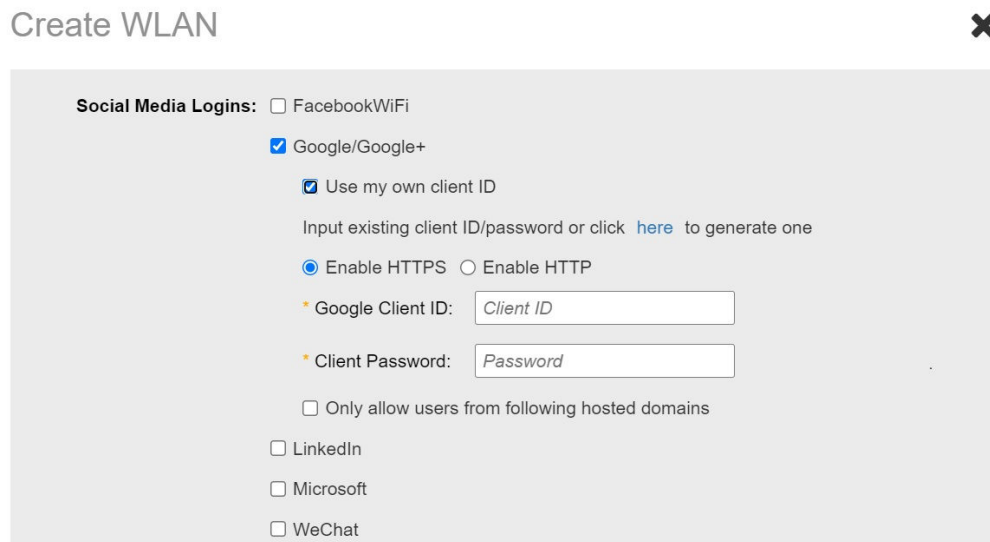FIGURE 111 Logging in Using Google ID



The screenshot shows the 'Create WLAN' configuration interface. At the top right, there is a close button (X). The main content area is titled 'Social Media Logins:' and contains the following options:

- FacebookWiFi
- Google/Google+
 - Use my own client ID
 - Input existing client ID/password or click [here](#) to generate one
 - Enable HTTPS Enable HTTP
 - * Google Client ID:
 - * Client Password:
 - Only allow users from following hosted domains
- LinkedIn
- Microsoft
- WeChat

OAuth Setup Procedure for Google+ Social Media Login

Google+ social media WLANs require a client ID and password, which can be automatically generated or manually entered. You can manually generate an OAuth 2.0 client ID for Google+ social media WLANs using the following procedure.


Complete the following steps to create a project ID in the Google Developers Console.

1. Create a project on the Google OAuth Console. Go to the following URL: <https://console.developers.google.com/projectselector2/apis/credentials>, and click **CREATE PROJECT**.

NOTE

Alternatively, click the **Click here** link to create a new application or project link from within the RUCKUS Unleashed guest access settings.

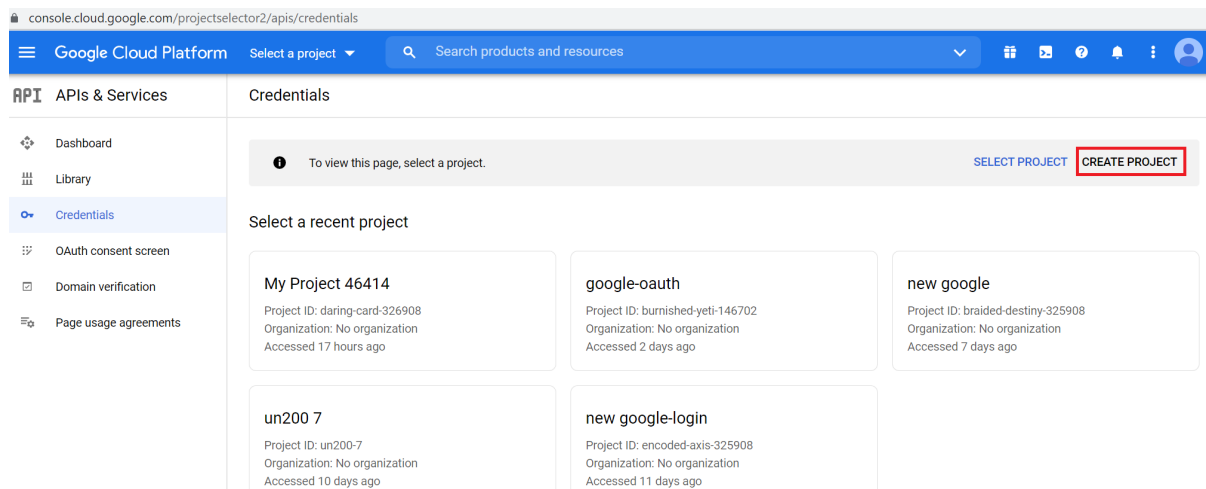FIGURE 112 Creating a New Project on the Google OAuth Console



2. Enter **Project Name** and **Location**, and click **Create**.

FIGURE 113 Entering the Project Name

Google Cloud Platform Search products and resources

New Project

You have 19 projects remaining in your quota. Request an increase or delete projects. [Learn more](#)

[MANAGE QUOTAS](#)

Project name *
unleased-test

Project ID: unleased-test. It cannot be changed later. [EDIT](#)


Location *
 No organization [BROWSE](#)

Parent organization or folder

[CREATE](#) [CANCEL](#)

3. Once the project has been created, go to the **OAuth consent screen**, and select **External** and click **Create**.

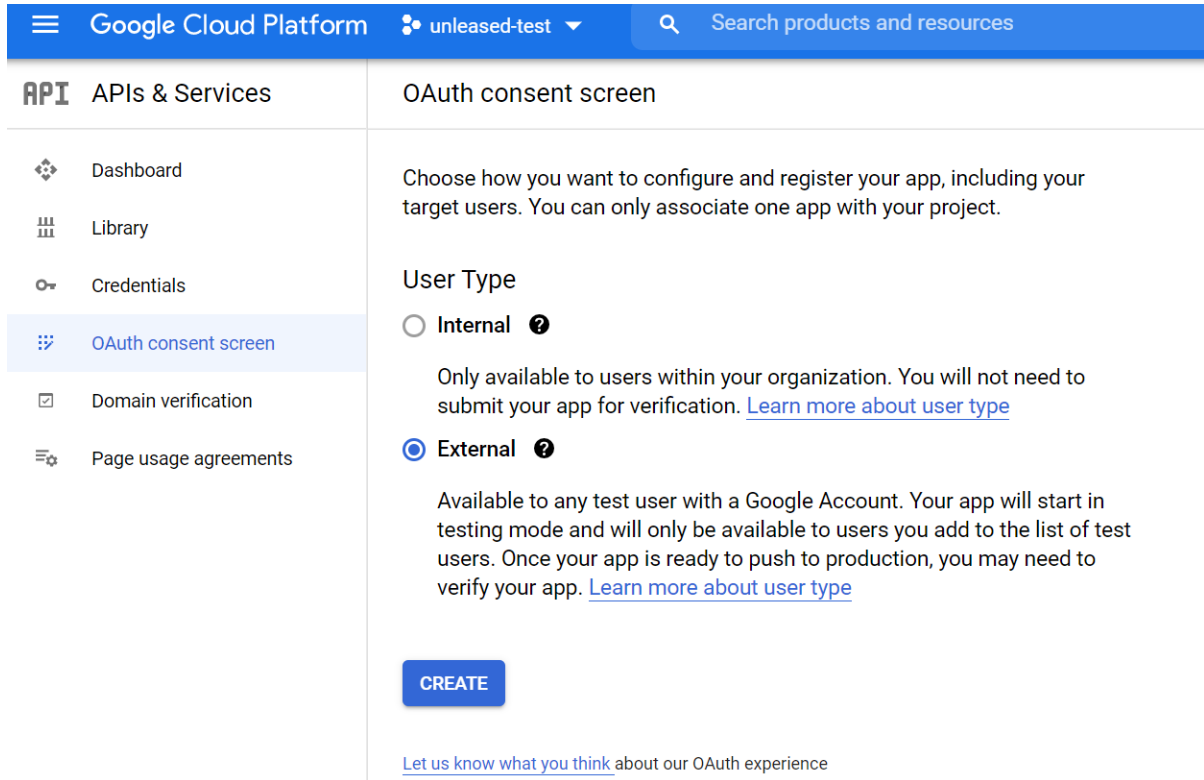FIGURE 114 Configuring OAuth Consent Screen



4. Under **App information**, complete the following steps:
 - For **App name**, enter the application name.
 - For **User support email**, select an email address from the list.

FIGURE 115 Entering App Information

The screenshot shows the 'API APIs & Services' interface. The left sidebar contains a navigation menu with items: Dashboard, Library, Credentials, OAuth consent screen (highlighted), Domain verification, and Page usage agreements. The main content area is titled 'Edit app registration' and features a progress bar with four steps: 1. OAuth consent screen (active), 2. Scopes, 3. Test users, and 4. Summary. Below the progress bar, the 'App information' section is displayed. It includes a description: 'This shows in the consent screen, and helps end users know who you are and contact you'. There are three input fields: 'App name *' with the value 'oauth-test', 'User support email *' with a dropdown menu showing 'vicky.f.zhang@gmail.com', and 'App logo' with a 'BROWSE' button. A note below the logo field states: 'Upload an image, not larger than 1MB on the consent screen that will help users recognize your app. Allowed image formats are JPG, PNG, and BMP. Logos should be square and 120px by 120px for the best results.'

5. For **Developer contact information**, enter valid email addresses and click **SAVE AND CONTINUE**.

FIGURE 116 Entering Developer Contact Information

Credentials

OAuth consent screen

Domain verification

Page usage agreements

Provide users a link to your home page

Application privacy policy link

Provide users a link to your public privacy policy

Application terms of service link

Provide users a link to your public terms of service

Authorized domains ?

When a domain is used on the consent screen or in an OAuth client's configuration, it must be pre-registered here. If your app needs to go through verification, please go to the [Google Search Console](#) to check if your domains are authorized. [Learn more](#) about the authorized domain limit.

+ ADD DOMAIN

Developer contact information

Email addresses *

someone@test.com


<I

These email addresses are for Google to notify you about any changes to your project.

6. In the **Edit app registration > Scopes** page, click **SAVE AND CONTINUE**.
7. In the **Edit app registration > Test users** page, click **SAVE AND CONTINUE**.

- On the **OAuth consent screen**, click **PUBLISH APP**.

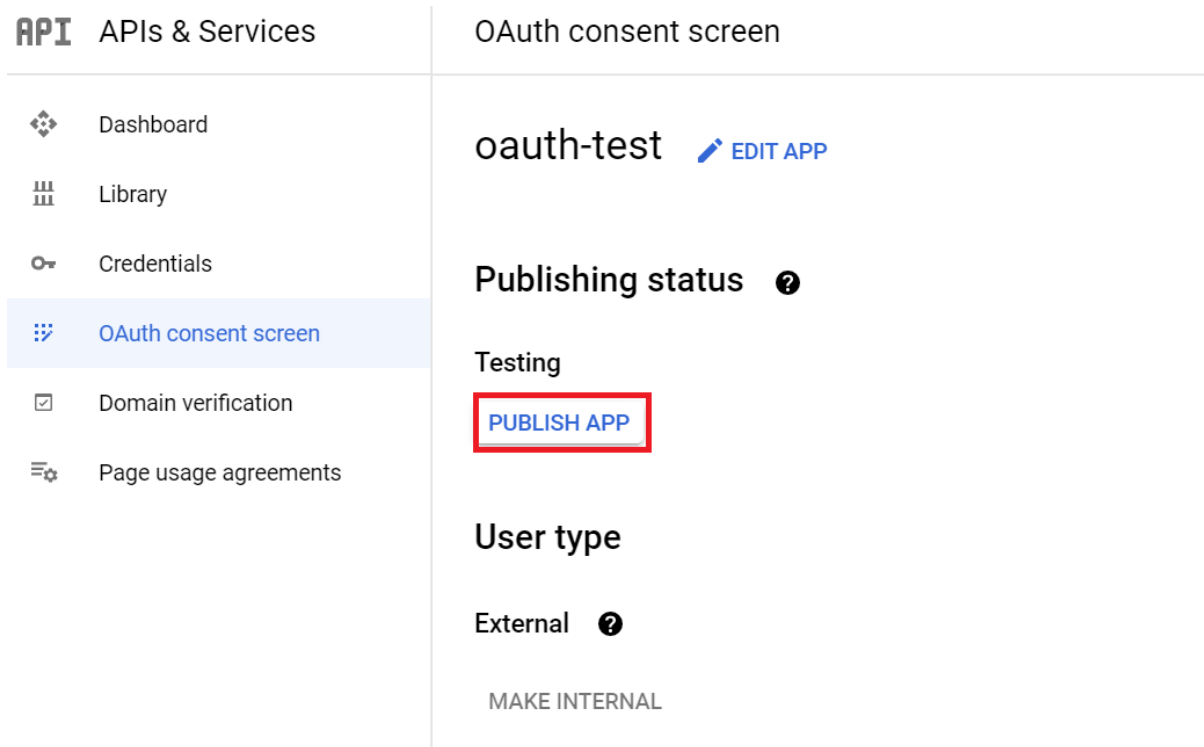FIGURE 117 Publishing the App



In the **Push to production** dialog box, click **Confirm**.

Push to production?


Your app will be available to any user with a Google Account.

You do not need to submit your app for verification. If you change your app's configuration in the future, like adding more than 10 domains, uploading a logo, or requesting sensitive or restricted scopes, you will need to [submit for verification](#).

CANCEL **CONFIRM**


- Under **Publishing status**, change the status to **In production**.

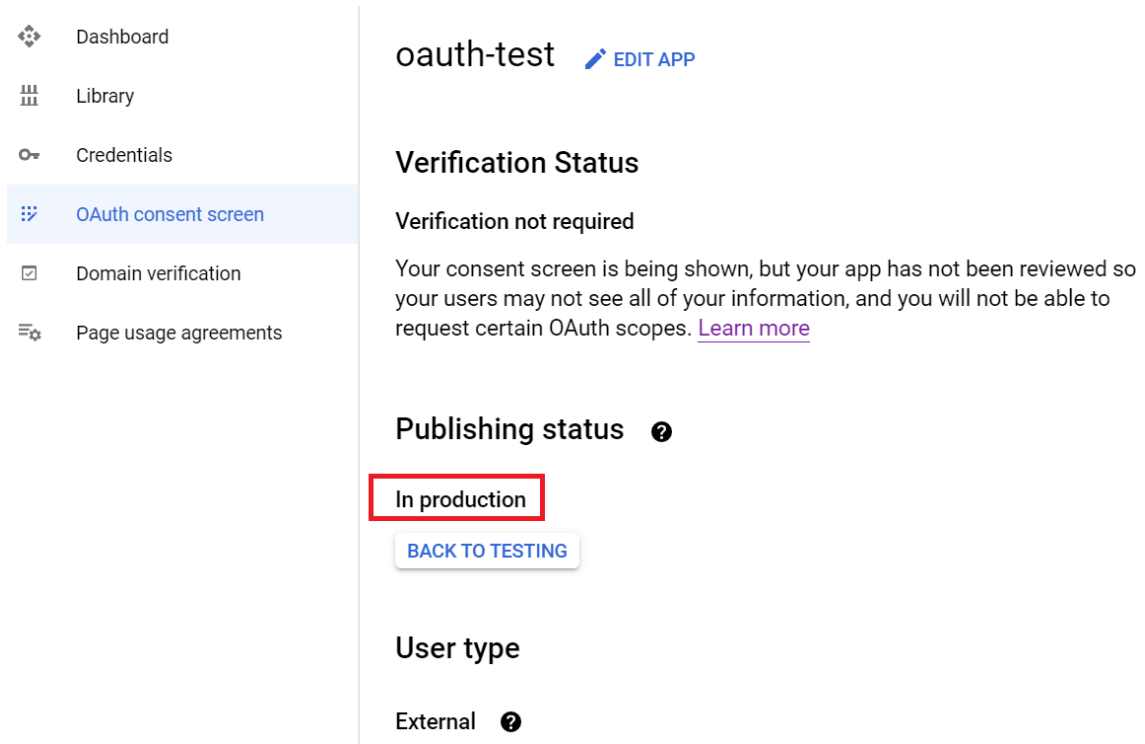FIGURE 118 Changing the Publishing Status



- Go to the **Credentials** page and click **CREATE CREDENTIALS** and select **OAuth client ID**.

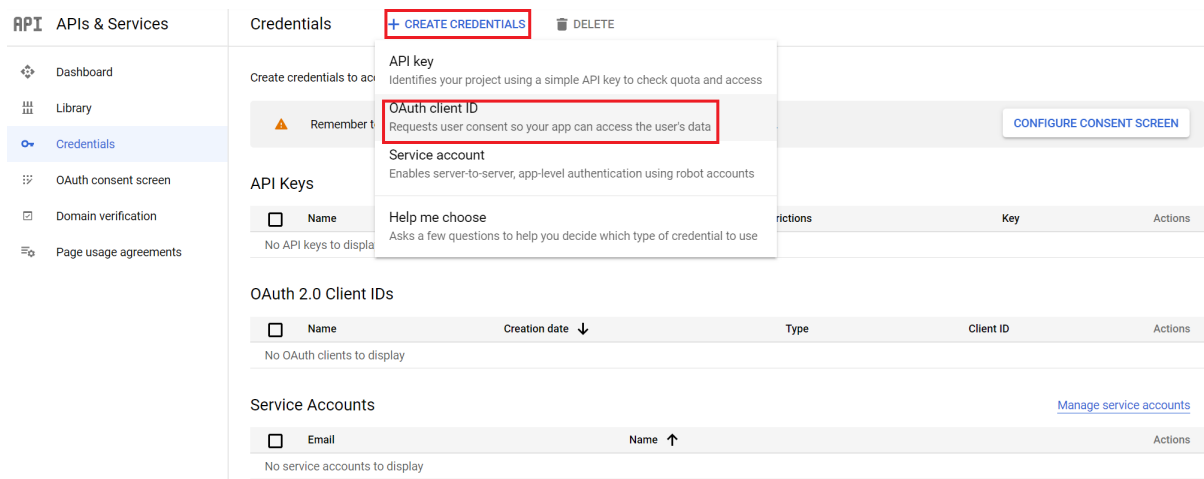FIGURE 119 Creating Credentials: OAuth Client ID



11. For **Application type**, select **Web application** and for **Authorized redirect URIs**, enter **https://unleashed.ruckuswireless.com/user/auth.jsp**.

NOTE

If you have imported a certificate with a fully qualified domain name (FQDN) to RUCKUS Unleashed, you must use the FQDN instead of “unleashed.ruckuswireless.com”. For example, if the FQDN is “mydomain.com”, the **Authorized redirect URIs** will be “https://mydomain.com/user/auth.jsp”.

FIGURE 120 Selecting Web Application and Entering Authorized Redirect URI

API APIs & Services

- Dashboard
- Library
- Credentials**
- OAuth consent screen
- Domain verification
- Page usage agreements

Create OAuth client ID

A client ID is used to identify a single app to Google's OAuth servers. If your app runs on multiple platforms, each will need its own client ID. See [Setting up OAuth 2.0](#) for more information. [Learn more](#) about OAuth client types.

Application type *
Web application

Name *
Web client 1

The name of your OAuth 2.0 client. This name is only used to identify the client in the console and will not be shown to end users.

i The domains of the URIs you add below will be automatically added to your [OAuth consent screen](#) as [authorized domains](#).

Authorized JavaScript origins ?

For use with requests from a browser

[+ ADD URI](#)

Authorized redirect URIs ?

For use with requests from a web server

URIs *

https://unleashed.ruckuswireless.com/user/auth.jsp

[+ ADD URI](#)

12. Click **Create**. If successful, Google displays the **Client ID** and **Client Secret**, as shown in the following figure.

FIGURE 121 OAuth Client ID and Client Secret

OAuth client created

The client ID and secret can always be accessed from Credentials in APIs & Services



OAuth is limited to 100 [sensitive scope logins](#) until the [OAuth consent screen](#) is verified. This may require a verification process that can take several days.

Your Client ID

195963350142-14s5og8ifeo5epbtpj57mpoma7ictq8p.apps.gc

Your Client Secret

yi-4t2rRHijLUCbh466_S-F9

OK

Take note of the Client ID and Client Secret. You will need to enter these values into the RUCKUS Unleashed web interface.

LinkedIn

To configure a LinkedIn social media WLAN, you must first configure an application on the LinkedIn developer apps website.


Refer to the following URL for the LinkedIn developer network: <https://www.linkedin.com/developer/apps> for more information.

OAuth Setup Procedure for LinkedIn Social Media Login

Complete the following steps to configure an application on the LinkedIn developers apps website.

1. Go to the LinkedIn My Applications page (<https://www.linkedin.com/developer/apps>) and click **Create App**.

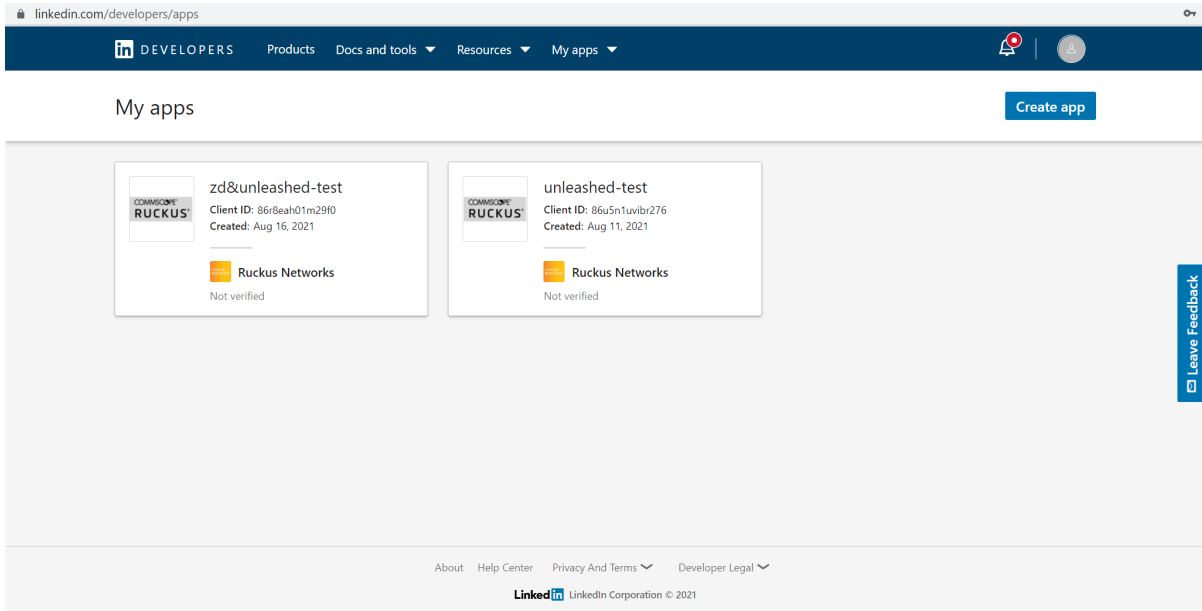FIGURE 122 LinkedIn My Applications




2. Enter the required information and click **Create app**.

FIGURE 123 Creating a New LinkedIn Application

Create an app


App name*
unleashed-oauth test1

LinkedIn Page*
ⓘ This action can't be undone once the app is saved.
 **Ruckus Networks**
Information Technology & Services; 501-1000 employees

The LinkedIn Page you select will be associated with your app. Verification can be done by a Page Admin. [Learn more](#)

Privacy policy URL
Begin with http:// or https://

App logo*
This is the logo displayed to users when they authorize with your app




Square image recommended. At least one dimension should be at least 100px.

Legal agreement
When you develop on our platform, you are agreeing to be bound by our [API Terms of Use](#).

I have read and agree to these terms

3. Under the **Auth** tab, LinkedIn displays the **Client ID** and **Client Secret**.

 FIGURE 124 LinkedIn Authentication Keys


 unleashed-oauth test1
Client ID: 862vsu7lI99pyy | Created: Aug 26, 2021

Settings Auth Products Analytics Team members

Application credentials

Authentication keys

Client ID:
862vsu7lI99pyy


Client Secret:
ha9UOVgaYtwWPZ3j 

- Under **OAuth 2.0 settings**, in **Authorized Redirect URLs**, enter a valid redirect callback URL: <http://unleashed.ruckuswireless.com/user/auth.jsp> and click **Update**.

NOTE


If you have imported a certificate with a FQDN to RUCKUS Unleashed, you must use the real FQDN instead of “unleashed.ruckuswireless.com”. For example, if the FQDN is “mydomain.com”, the **Authorized redirect URLs** will be “<http://mydomain.com/user/auth.jsp>”.

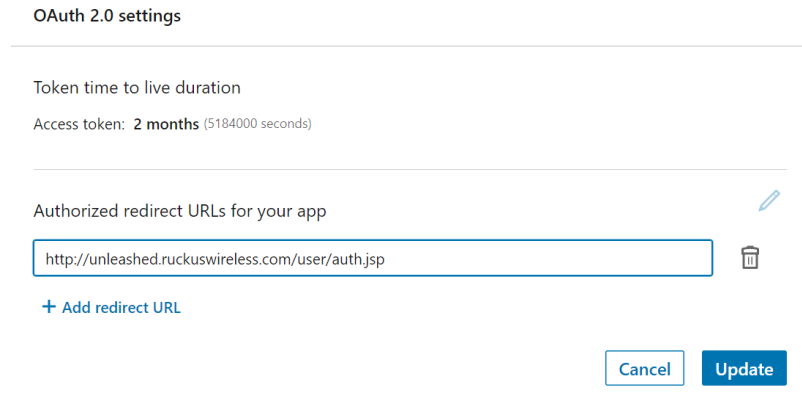FIGURE 125 Entering the Authorized Redirect URI




- Under **Product** tab, select the options **Share on LinkedIn** and **Sign In with LinkedIn**.

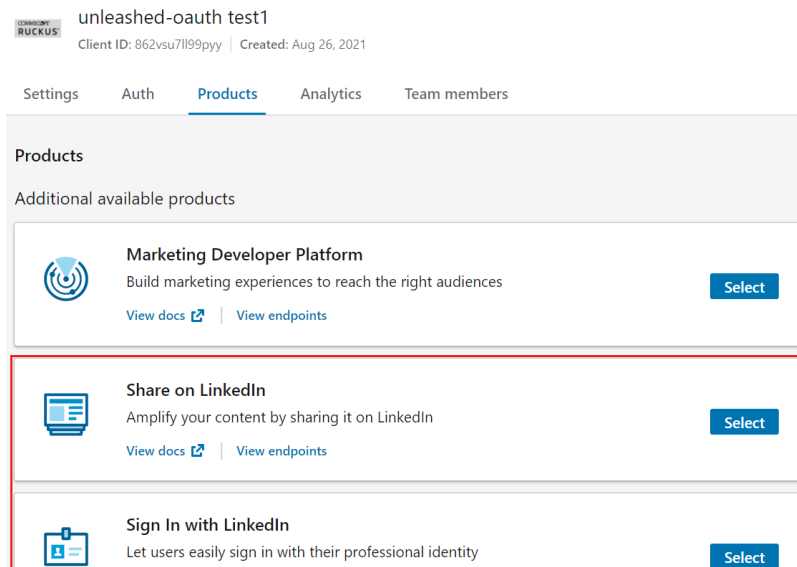FIGURE 126 Sharing and Signing with LinkedIn



- Under **Auth** tab, check if the following permissions are added successfully to use the app for LinkedIn login.

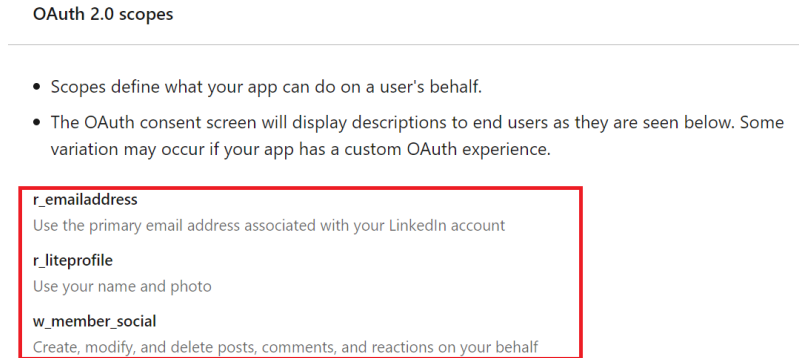FIGURE 127 Checking the Permissions Added for LinkedIn Login



Microsoft Live

To create a Microsoft Live social media WLAN, you must first create an application on the Microsoft Live developer application page.

Go to the following URL to launch Microsoft Live development dashboard and create an application: https://portal.azure.com/#blade/Microsoft_AAD_RegisteredApps/ApplicationsListBlade.


OAuth Setup Procedure for Microsoft Live Social Media Login

To generate an OAuth 2.0 ID for Microsoft Live social media WLAN login, use the following procedure:

- Go to the following URL to launch Microsoft Live development dashboard and create an application: https://portal.azure.com/#blade/Microsoft_AAD_RegisteredApps/ApplicationsListBlade.

2. Click **New Registration**.

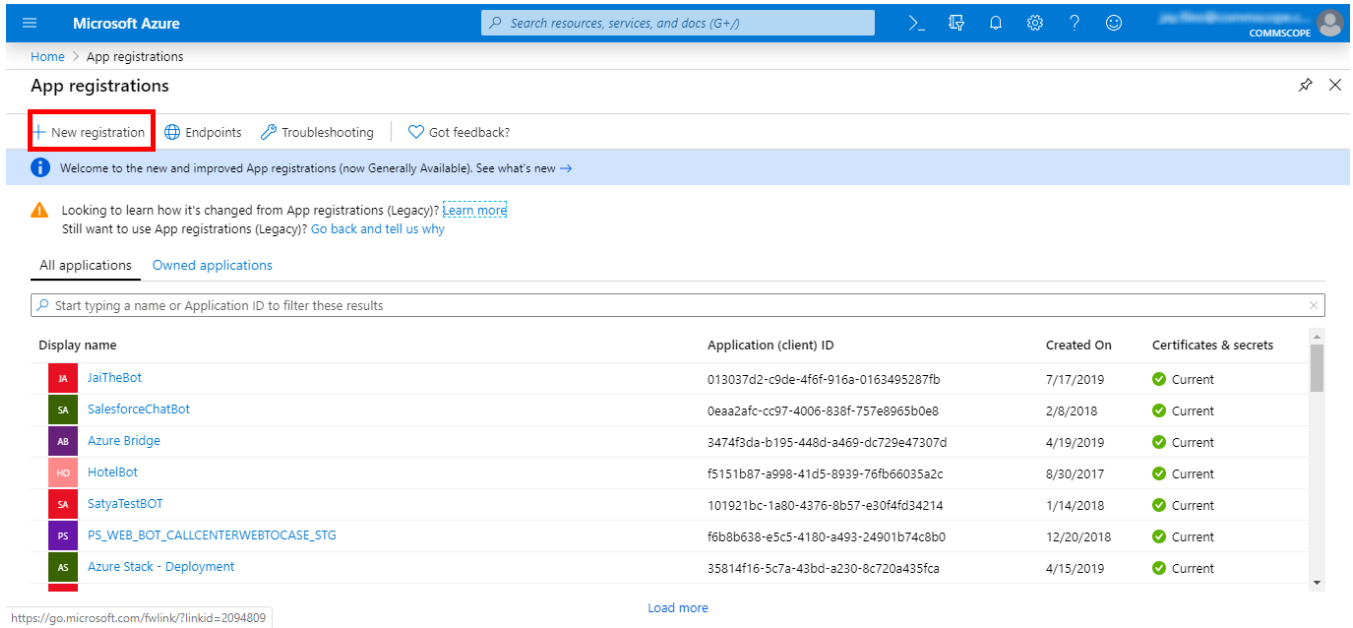FIGURE 128 Create a new app registration



3. Enter a **Name** for the application.
4. For Support Account Types, select the **Accounts in any organizational directory and personal Microsoft accounts** button (see [Figure 129](#)).

WLAN Configuration


Guest WLANs

5. In **Redirect URI**, provide a valid redirect callback URL, for example:
 - [HTTPS://unleashed.ruckuswireless.com/user/auth.jsp](https://unleashed.ruckuswireless.com/user/auth.jsp) (see [Figure 129](#)).

NOTE

If you have imported an SSL certificate with a FQDN to Unleashed, you should use the real FQDN instead of "ruckuswireless.com". For example, if the FQDN is "mydomain.com", the authorized redirect URI should be "mydomain.com".

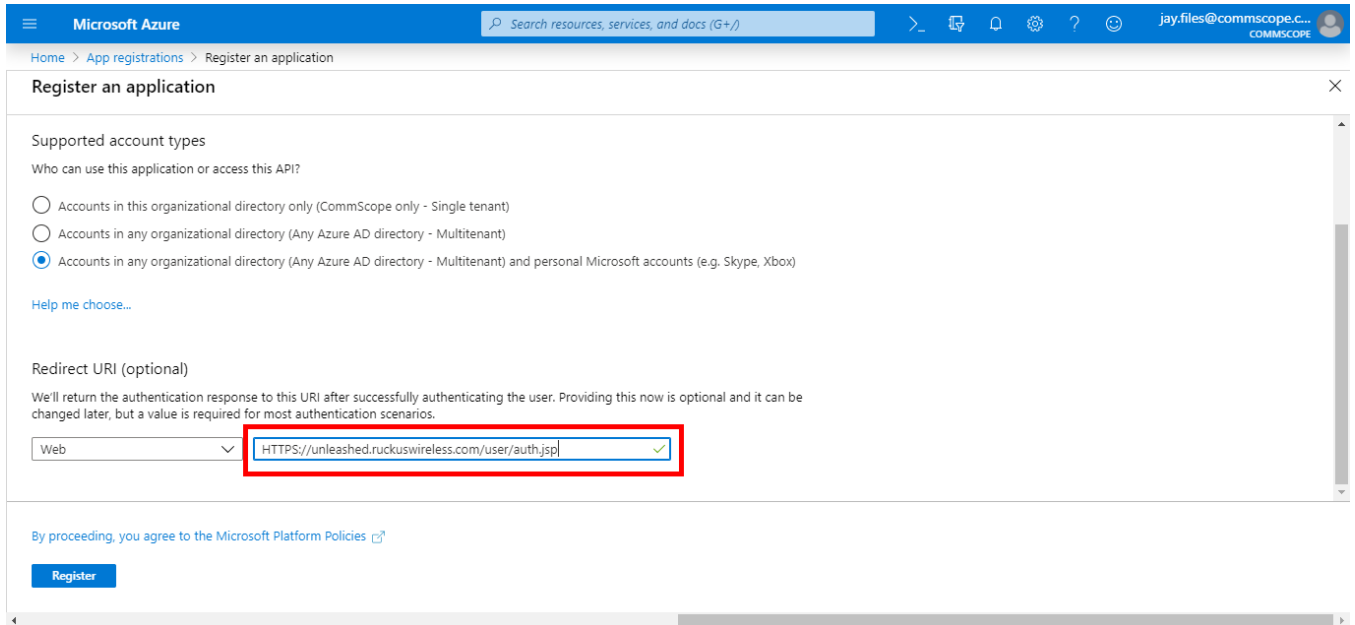FIGURE 129 Register an Application configuration settings




The screenshot shows the Microsoft Azure portal interface for registering an application. The page title is "Register an application". Under the "Supported account types" section, the option "Accounts in any organizational directory (Any Azure AD directory - Multitenant) and personal Microsoft accounts (e.g. Skype, Xbox)" is selected. In the "Redirect URI (optional)" section, a dropdown menu is set to "Web" and the text input field contains the URL "HTTPS://unleashed.ruckuswireless.com/user/auth.jsp", which is highlighted with a red rectangular box. Below the form, there is a link to "Microsoft Platform Policies" and a blue "Register" button.

6. Click **Register**.


7. Microsoft will provide you with the **Application (client) ID**. Take note of this value, as you will need to enter it into the Unleashed web interface later.

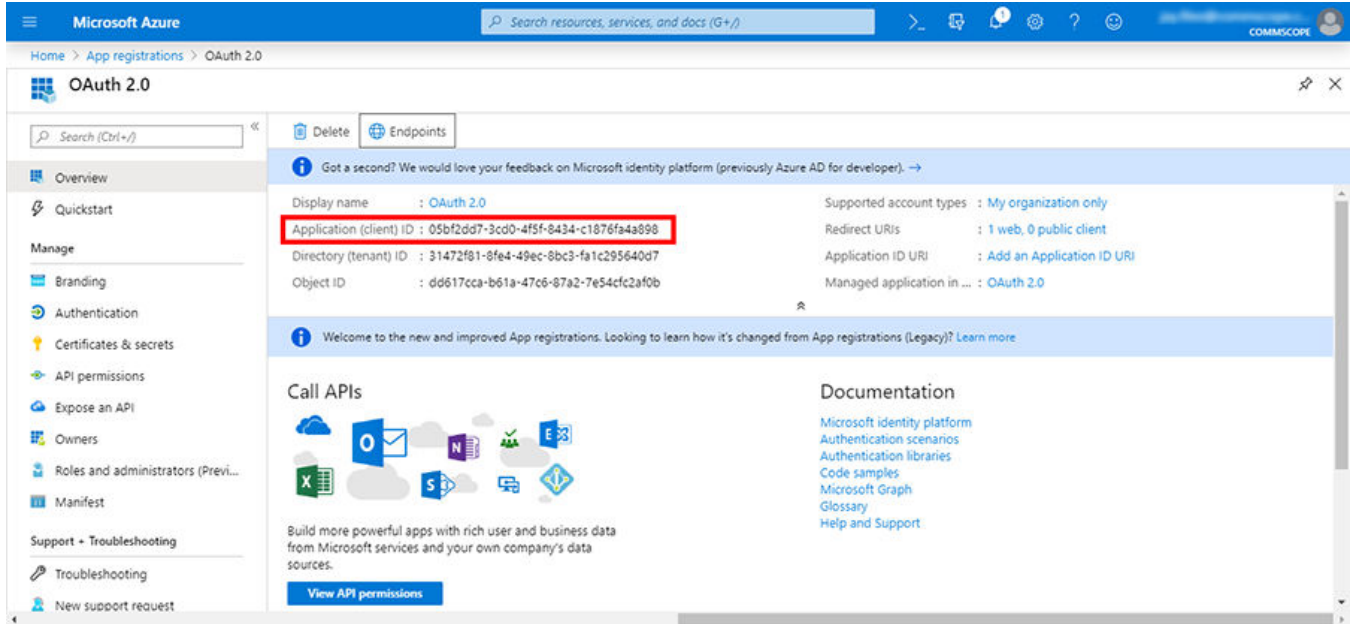FIGURE 130 Take note of Application (Client) ID



8. You also need to create a client secret by following these steps:
 - a) Under **Manage**, select **Certificates & secrets**.
 - b) Select the **New client secret** button.
 - c) Enter a value in **Description**, select any option for **Expires**, then click **Add**.
 - d) Copy and save the client secret before leaving the page, as you will need to enter this value when you log in to the Unleashed web interface.

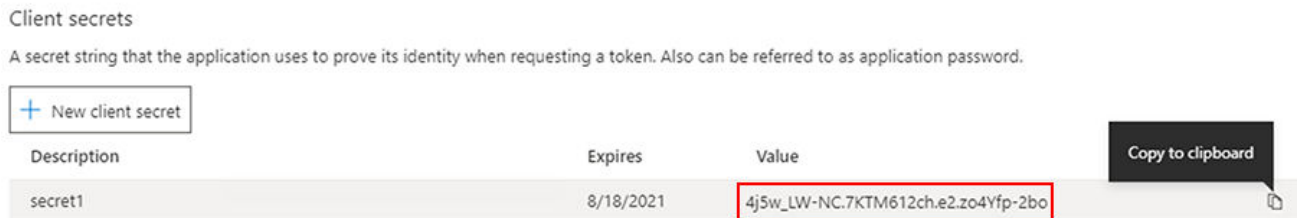FIGURE 131 Take note of Client Secret



9. In the Unleashed UI, use the following settings on the Create WLAN configuration screen (see below):
- Social Media Logins: Select **Microsoft**.
 - Microsoft Client ID: This is the Application (Client) ID shown in [Figure 130](#).
 - Client Password: The client secret described in [Figure 131](#).

FIGURE 132 Create WLAN configuration screen - Microsoft Social Media Login

The screenshot shows the 'Create WLAN' configuration screen. Under 'Social Media Logins', the 'Microsoft' option is selected with a blue checkmark. Below it, there is a text input field for 'Microsoft Client ID' containing 'Client ID' and another for 'Client Password' containing 'Password'. The 'Enable HTTPS' radio button is selected. Under 'GuestPass Self-Service', the 'Enable guestpass self service' checkbox is unchecked. The 'Validity Period' section has 'Effective from first use' selected, and the 'Expire new guest passes if not used within' field is set to '7' days.

WeChat

"WeChat Connects Wi-Fi" is a solution that allows clients to authenticate to a wireless LAN easily using a WeChat login instead of a username/password.

The solution also allows business owners to easily serve advertisements to visitors, enabling convenient monetization of their Wi-Fi service.

The Ruckus WeChat WLAN implementation supports the WeChat mobile app only; the desktop version is not supported, nor are smart phones without the WeChat app (web browser login is not supported).

Connecting to a WeChat WLAN

When a user connects to a WeChat WLAN, the WeChat app launches automatically and attempts to authenticate the user to the WLAN using the user's WeChat login credentials.

To connect to a WeChat WLAN:

1. The user connects to the WeChat WLAN, and launches a web browser. (Depending on OS, the browser may launch automatically.)
2. On the WeChat welcome screen, click "Connect to Wi-Fi via WeChat."

The WeChat app is launched, and attempts to connect to the WeChat server automatically.

- Once the user is authenticated, the app then displays a connection successful message along with the customer's information as configured on the customer's official WeChat account. (This can include advertisements, for example.)
- The user clicks a button to accept the terms and conditions, and can then be redirected to the customer's website.


Guest Access Walled Garden

A walled garden is a list of network destinations (URLs or IP addresses) that users can access without going through authentication.

A common use case for this feature is to allow unauthenticated guests to access a company's website or other specific locations prior to entering guest pass or social media login information.

To create a guest access walled garden entry, go to **WiFi Networks > Create/Edit (WLAN) > Advanced Options > Walled Garden**. Click **Create New** to create a new rule, and enter the destination IP address or domain name in the field.

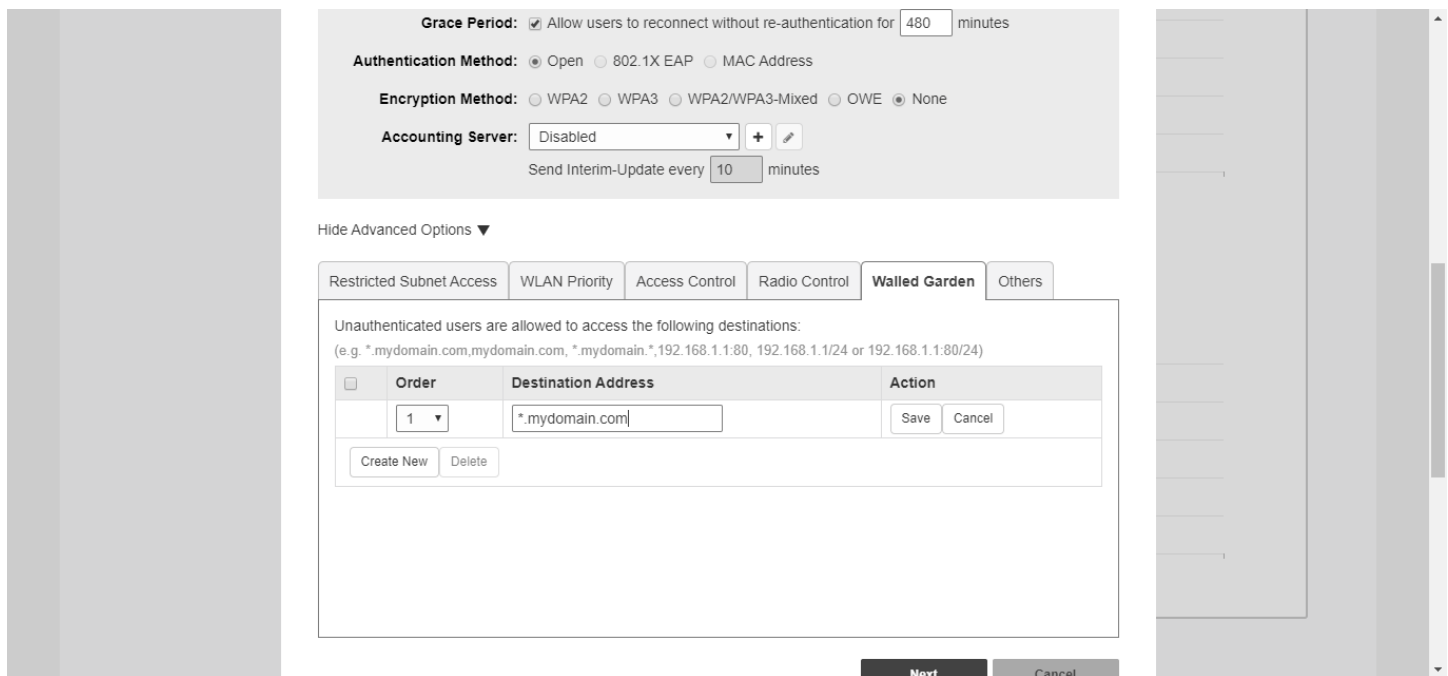FIGURE 133 Enter domain name or IP addresses to allow access to unauthenticated users



Hotspot WLANs

A hotspot is a venue or area that provides Internet access to devices with wireless networking capability. Hotspots are commonly available in public venues such as hotels, airports, coffee shops and shopping malls.


Unleashed supports Hotspot WLANs that conform to the WISPr (Wireless Internet Service Provider roaming) standard. For more information on Hotspot services, see [Hotspot Services](#) on page 403.

Configuring Global WLAN Settings

Complete the following steps to configure global settings for all WLANs.

1. In the **Wi-Fi Networks** section, select the **Summary** WLAN box, and click **Edit**.

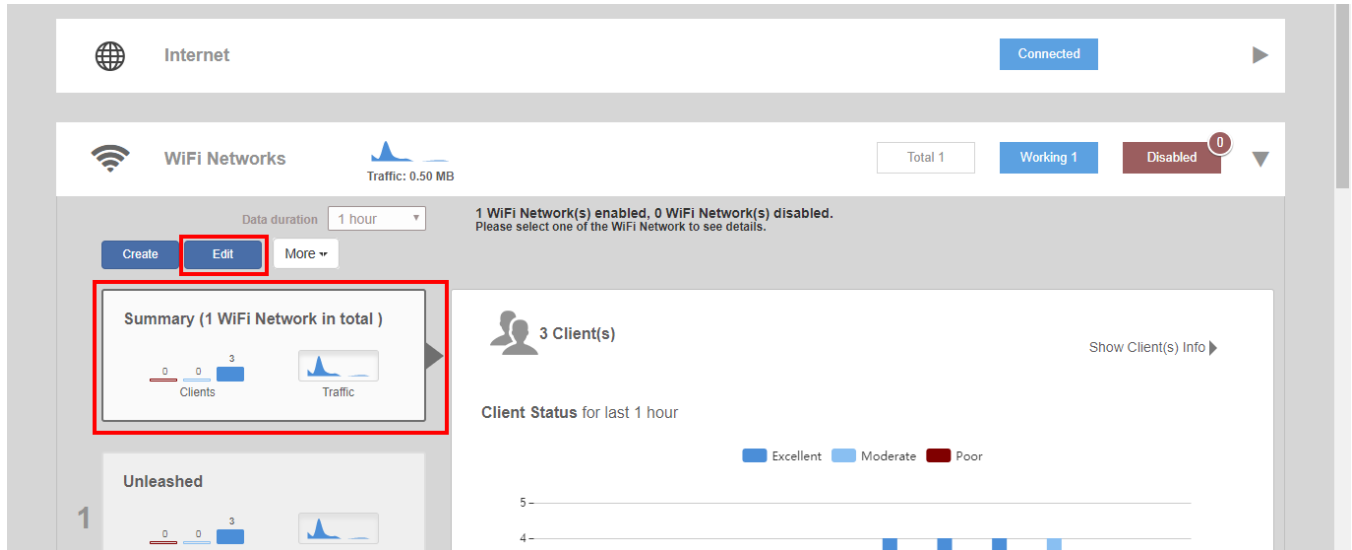FIGURE 134 Configuring Global Settings for All WLANs



2. From the **Global Configuration** dialog box, select one of the following tabs to configure settings for all WLANs:
 - **Zero-IT Activation:** Select an Authentication Server from the list, or click **Create Service** to create a new one.
 - **Default Web Portal Logo:** Replace the RUCKUS logo with your own logo to be displayed on the login page when clients connect to a Web Auth WLAN.


NOTE

The recommended image size is 138 x 40 pixels. The maximum file size is 20 KB.

- **Users:** Create new users on the internal database.

3. Click **Apply** to save your changes.

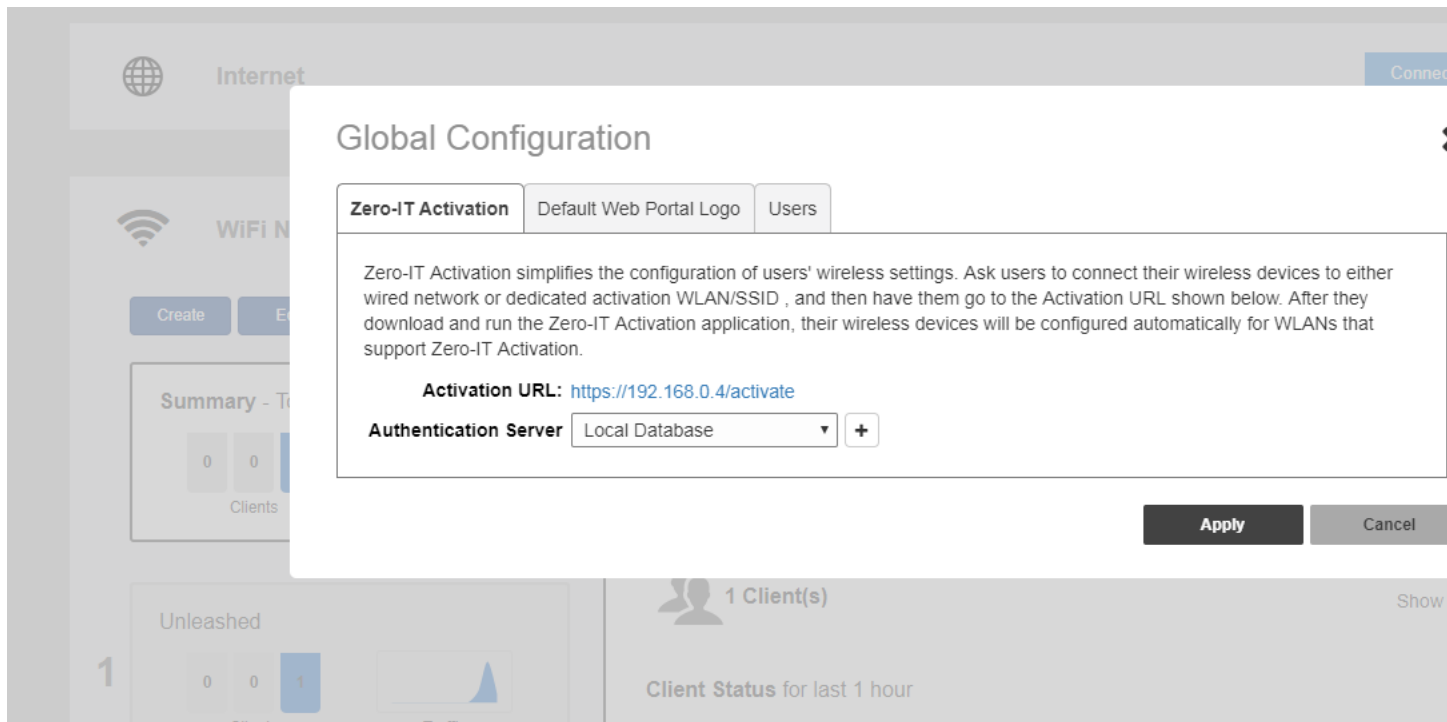FIGURE 135 Global Configuration Settings for All WLANs



Editing an Existing WLAN

To edit an existing WLAN, expand the **Wi-Fi Networks** section, click on the **WLAN** that you want to configure, and click **Edit**.

WLAN Configuration

Editing an Existing WLAN

FIGURE 136 Click Edit to edit an existing WLAN


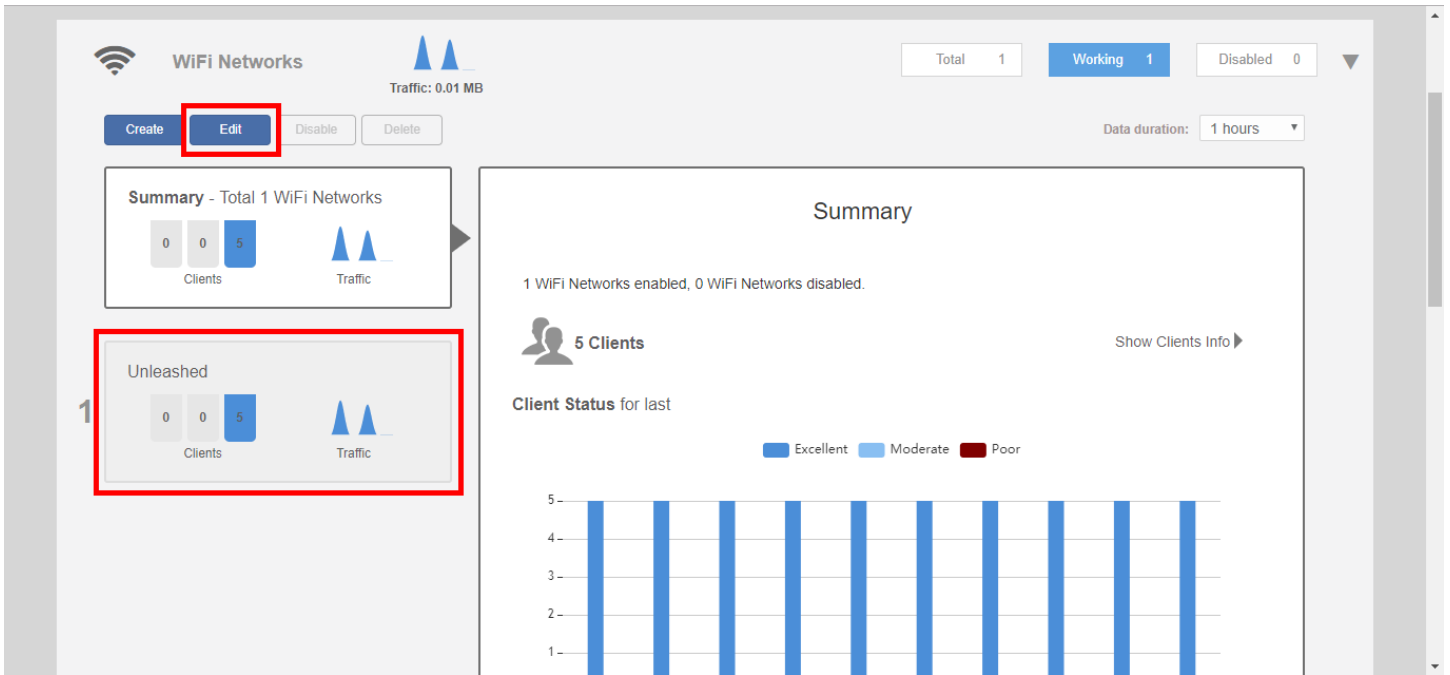


FIGURE 137 Modify WLAN settings

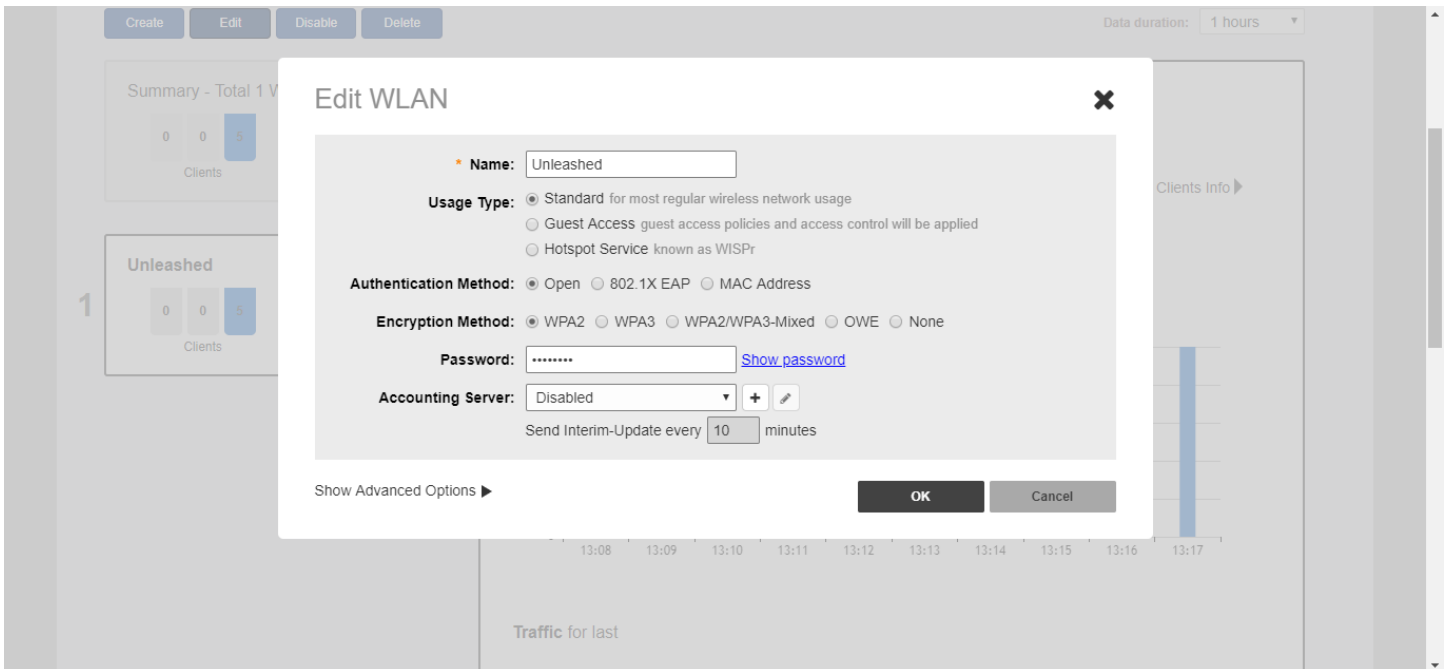

If you made any changes, click **OK** to confirm your changes.


Using a QR Code to Join a Wi-Fi Network

Instead of entering a Wi-Fi password manually, you can join a Wi-Fi network using a QR code.

Complete the following steps to join a Wi-Fi network using a QR code.

1. From the **Unleashed Dashboard**, expand the **Wi-Fi Networks** and select **More > Show QR Code**.

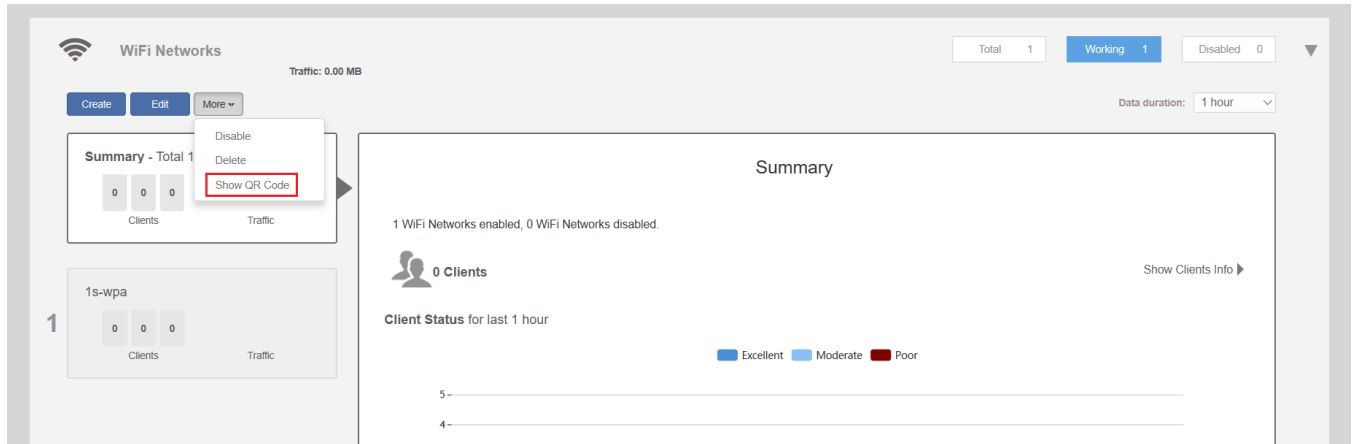FIGURE 138 Joining a WLAN Using a QR Code



2. In the **QR Code** page, click **Print** to print the QR code or scan the QR code using a smartphone camera.

FIGURE 139 QR Code Page

Do you want to print the QR code for this Wi-Fi network? ✕

1. How to use Wi-Fi QR code?

You can print and share it to your users, and ask them to open the camera app on the smartphone and hold it over the Code. A notification should pop up and connect them to the wireless network automatically. If this did not work, check the smartphone settings and make sure that the QR Code scanning feature is enabled. If it still not working, then you may need to ask your user to download a third-party QR Code scanner from smartphone app store.

2. How can I regenerate the QR code later?

You can to to WiFi Networks page and select your WiFi, click the "More" button and then click "Show QR Code" from the dropdown list, a QR code page should pop up.




Print

Deleting a WLAN

To delete a WLAN, in the **Wi-Fi Networks** section, select the **WLAN box** from the list on the left side that you want to delete, and click **More > Delete**.

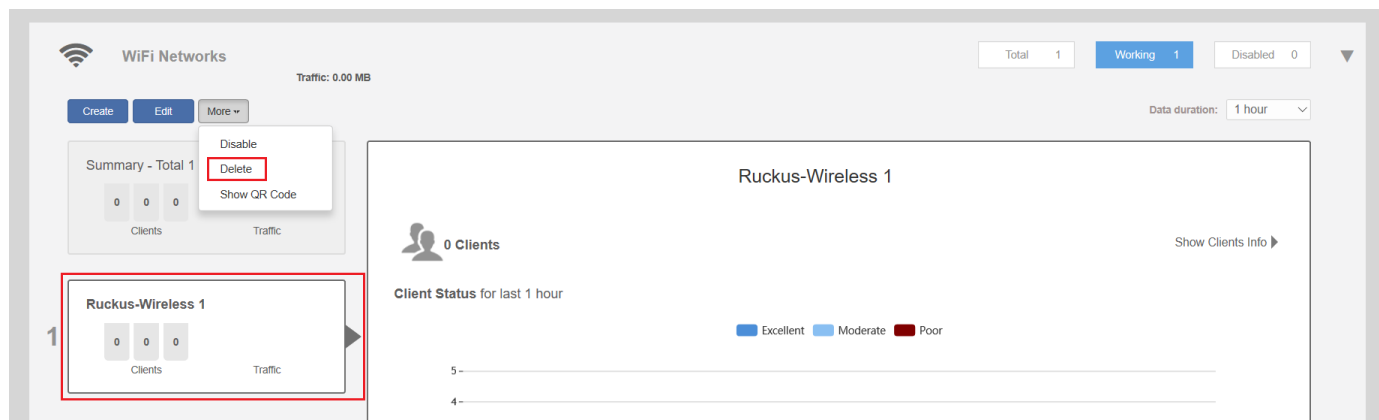FIGURE 140 Deleting a WLAN




Click **OK** when prompted to delete the selected WLAN.

Disabling a WLAN Temporarily

Complete the following steps to temporarily disable a WLAN:

1. In the **Wi-Fi Networks** section, select the WLAN that you want to disable, and click **More > Disable**.
2. Click **OK** when prompted to disable the selected WLAN.
3. Click **Enable** to re-enable the WLAN.

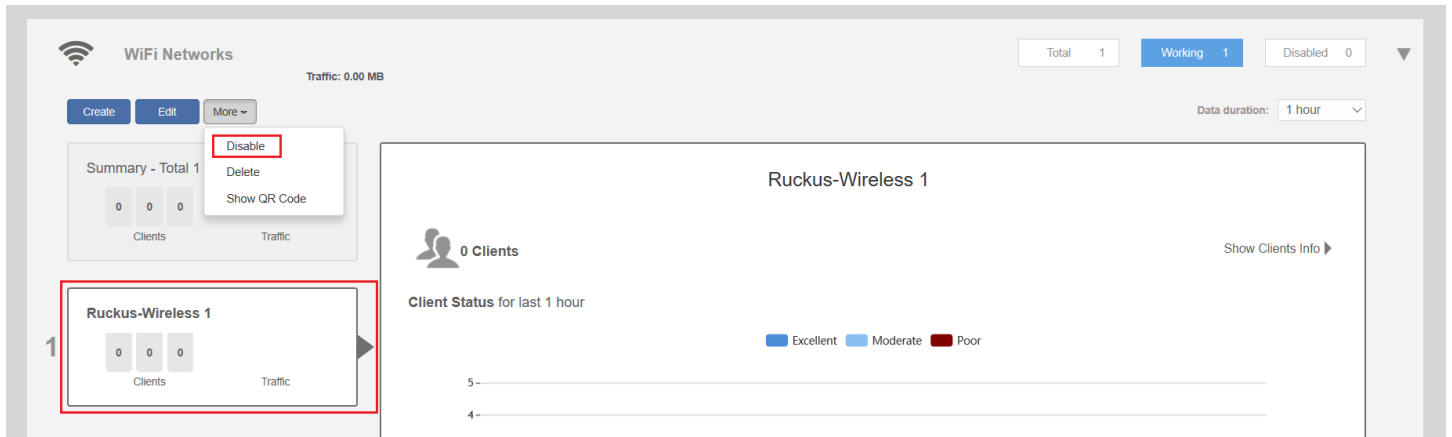FIGURE 141 Disabling a WLAN Temporarily



Advanced WLAN Configuration

- [Advanced WLAN Configuration Overview.....](#) 245
- [Configuring Advanced WLAN Options.....](#) 245
- [Zero-IT and DPSK Settings.....](#) 247
- [WLAN Priority Settings.....](#) 253
- [Access Control Settings.....](#) 254
- [Application Policies.....](#) 256
- [Radio Control Settings.....](#) 259
- [Other Advanced WLAN Settings.....](#) 261

Advanced WLAN Configuration Overview

The WLAN Advanced options include settings such as Zero-IT and Dynamic PSK options, WLAN priority, VLAN, access controls, rate limiting, application policies, URL filtering controls, radio controls and other advanced settings.

The advanced WLAN options available vary depending on the authentication and encryption methods chosen as well as the WLAN usage type.

Configuring Advanced WLAN Options

To edit the advanced options for a WLAN:

1. Select the WLAN you want to configure from the **Wi-Fi Networks** component and click **Edit**, or click **Create** to create a new custom WLAN.

Advanced WLAN Configuration

Configuring Advanced WLAN Options

- Click the arrow next to **Show advanced options** to expand the advanced options section.

FIGURE 142 Click Show Advanced Options


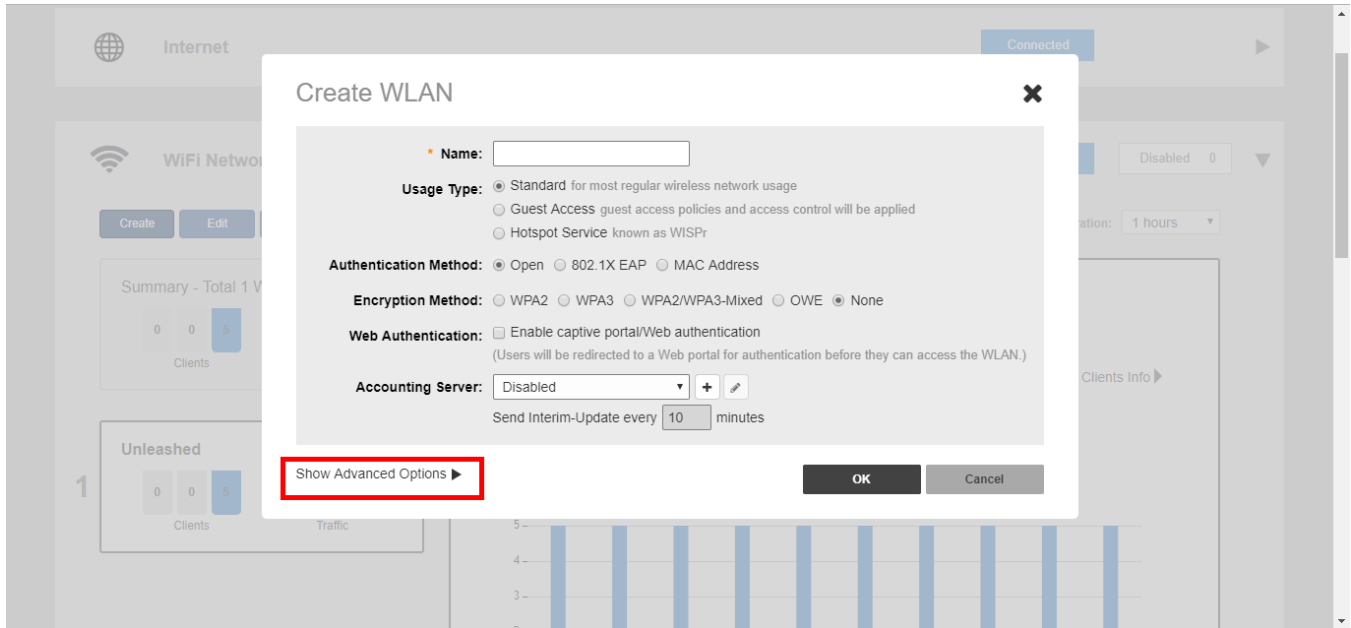


FIGURE 143 WLAN advanced options

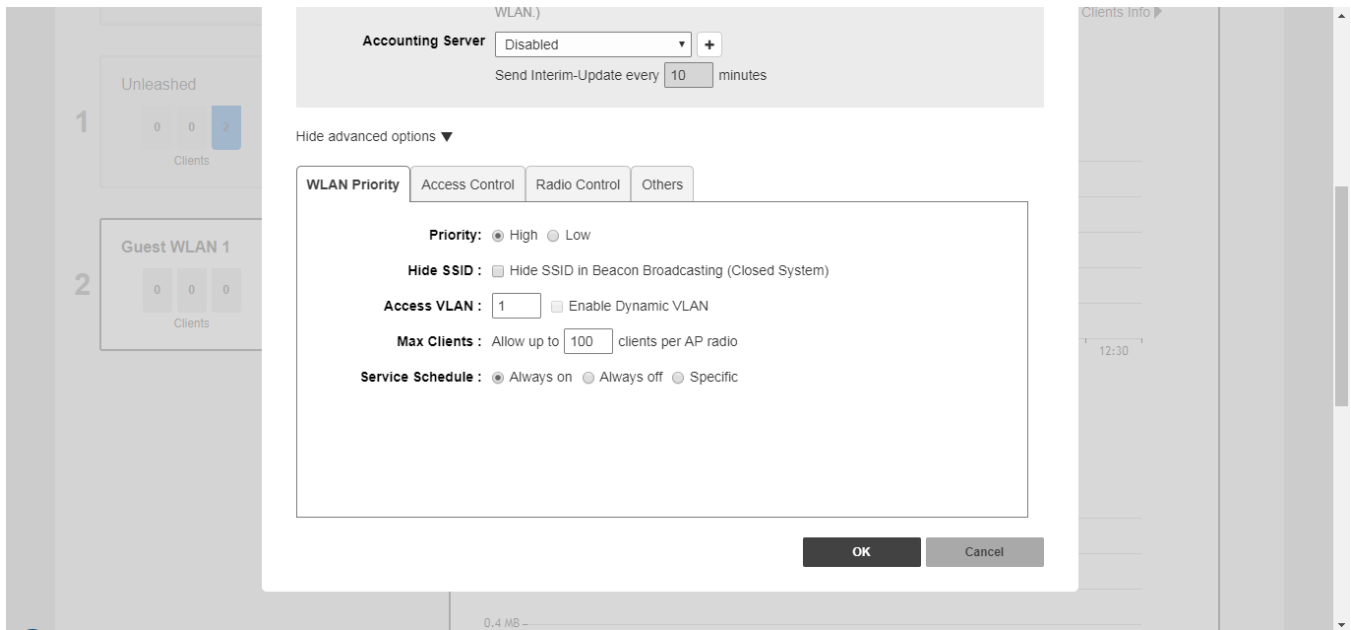

3. Configure the following advanced options according to your preferences:
 - **Zero-IT & DPSK:** Enable and configure Zero-IT and Dynamic PSK settings for the WLAN. See [Zero-IT and DPSK Settings](#) on page 247.
 - **WLAN Priority:** Contains options for setting the WLAN's priority level, WLAN visibility, VLAN, max clients and service schedule. See [WLAN Priority Settings](#) on page 253.
 - **Access Control:** Contains options for configuring Call Admission Control, rate limiting, access controls, application visibility policies and URL filtering. See [Access Control Settings](#) on page 254.
 - **Radio Control:** Contains options for configuring radio settings including 802.11k radio resource management, Background Scanning, load balancing and band balancing. See [Radio Control Settings](#) on page 259.
 - **Others:** Contains options for configuring force DHCP, inactivity timeout, wireless client isolation, and enabling the Apple CNA bypass feature. See [Other Advanced WLAN Settings](#) on page 261.
4. Click **OK** to save your changes.

Zero-IT and DPSK Settings

Zero-IT and Dynamic Pre-Shared Key (DPSK) are two unique Ruckus technologies that provide enhanced security, improved user credentials maintenance and reduced IT support requirements for client wireless configuration.

Zero-IT


Zero-IT Activation allows network users to self-activate their devices for secure access to your wireless networks with no manual configuration required by the network administrator.

Once your Unleashed network is set up, you need only direct users to the **Activation URL**, and they will be able to automatically activate their devices to securely access your wireless LAN.

At the activation URL, users must first enter a valid user name and password to be granted this access. Users can be authenticated against either an internal database (manually configured for each user), or against an external authentication server, such as Active Directory or RADIUS. For smaller deployments, you can manually create user accounts on the internal user database from the *Admin & Services > Users* screen. If an external server is used, you must configure Unleashed with the IP address and login for the external auth server.

Once authentication is successful, a Zero-IT Activation file is downloaded and run on the client device, automatically configuring the device's wireless connection settings.

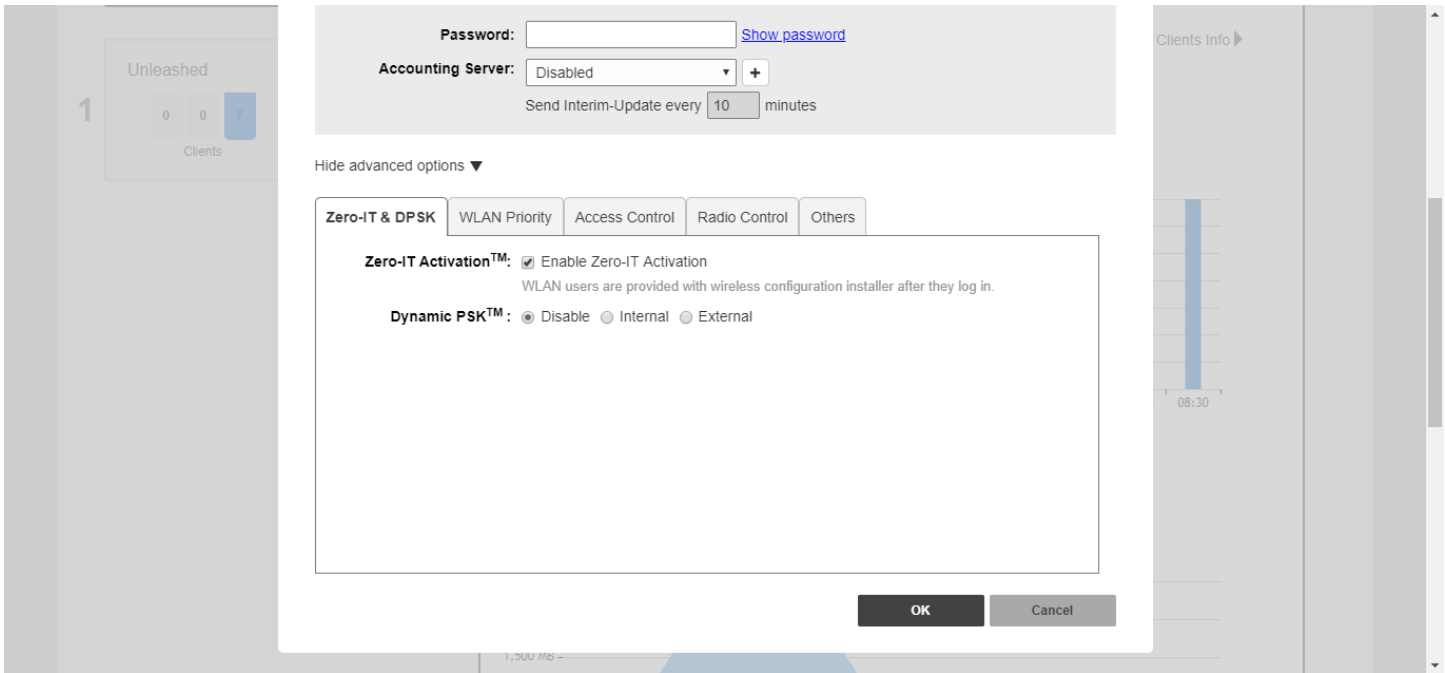FIGURE 144 Enabling Zero-IT for a WLAN



Dynamic PSK

Dynamic PSK (DPSK) is a unique Ruckus feature that enhances the security of normal Pre-Shared Key (PSK) wireless networks. Unlike typical PSK networks, which share a single key amongst all devices, a DPSK network assigns a unique key to every authenticated user. Therefore, when a person leaves the organization, network administrators do not need to change the key on every device.

Ruckus DPSK offers the following benefits over standard WPA2-PSK security:

- Every device on the WLAN has its own unique DPSK that is valid for that device only (by default).
- Each DPSK is bound to the MAC address of an authorized device; even if that PSK is shared with another user, it will not work for any other machine.
- Since each device has its own DPSK, you can associate a user (or device) name with each key for easy reference.
- Each DPSK may also have an expiration date; after that date, the key is no longer valid and will not work.
- DPSKs can be created and removed without impacting any other device on the WLAN.
- If a hacker manages to crack the DPSK for one client, it does not expose other devices that are encrypting their traffic with their own unique DPSKs.

DPSKs can be created in bulk and manually distributed to users and devices, or they can be sent as part of the Zero-IT automatic provisioning file that is sent when a client connects to the network for the first time using Zero-IT Activation.

NOTE

Zero-IT and DPSK features are only available on WLANs with WPA2 encryption.

Enabling Zero-IT for a WLAN

To enable Zero-IT for a WLAN:

1. Expand the **Wi-Fi Networks** section, and click **Create** (or **Edit** an existing WLAN).
2. Select **Standard** for **Usage Type**, and either **Open** or **802.1X EAP** for **Authentication Method**, and **WPA2** for **Encryption Method**.
3. Click **Show advanced options**, then select the **Zero-IT & DPSK** tab.
4. Enable the **Zero-IT Activation** check box.
5. Optionally, enable **Dynamic PSK** to allow Zero-IT auto-configuration with Dynamic Pre-Shared Keys for each client. (See [Enabling DPSK for a WLAN](#) on page 249 for more information).
6. Click **OK** to save.


This WLAN is now ready to allow users to self-configure their client devices using a Zero-IT auto-configuration file that will be provided once a user successfully logs in to the WLAN.

Enabling DPSK for a WLAN

To enable DPSK for a WLAN:

1. Expand the **Wi-Fi Networks** section, and click **Create** (or **Edit** an existing WLAN).
2. Select **Standard** for **Usage Type**, and **Open/WPA2** for **Authentication** and **Encryption** methods.
3. Click **Show advanced options**, then select the **Zero-IT & DPSK** tab.
4. Locate the **Dynamic PSK** settings and select one of the following options:
 - **Internal**: Use the internal database for client authentication.
 - **External**: Use an external AAA (RADIUS) server for client authentication.
5. If using an external RADIUS server for authentication, select the **Authentication Server** from the list, and click **OK** to save.

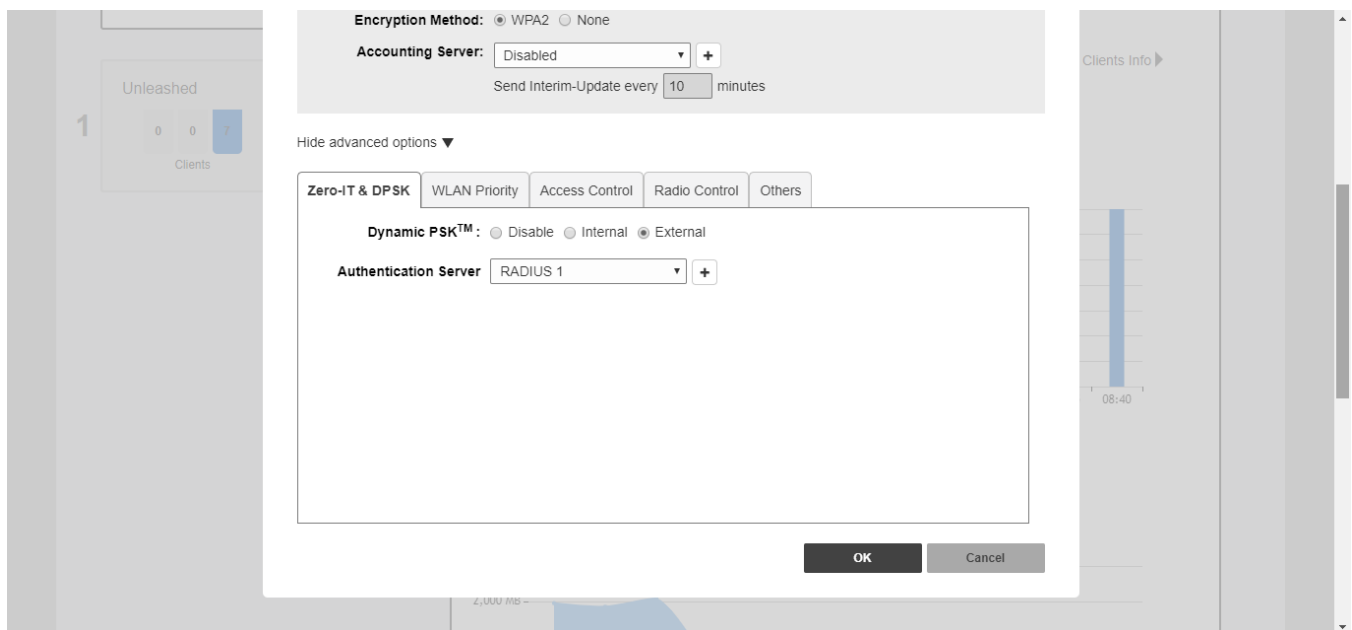
FIGURE 145 Using an external RADIUS server for DPSK authentication



6. If using the internal database, continue with the following steps.
7. In **DPSK Length**, enter a PSK passphrase length (between 8 and 62 characters).
8. In **DPSK Type**, choose whether to use **Secure DPSK** or **Mobile Friendly DPSK**.
 - **Secure DPSK**: Includes almost all printable ASCII characters, including periods, hyphens, dashes, etc. This option is more secure, however it is difficult to input for mobile clients whose keyboards may not contain the entire set of printable ASCII characters.
 - **Mobile Friendly DPSK**: Choose this option if this WLAN will be used for mobile clients. This option limits the range of characters to lower case and upper case letters and numbers, which makes it easier for users to input the DPSK when activating a mobile client to a Zero-IT WLAN. (You may also want to limit the DPSK length to 8 characters for the convenience of your mobile client users.)
9. **Expire DPSK**: Set when the DPSK should expire. In **Validity** period, choose whether the DPSK expiration period will start from first use or creation time.
10. **Limit DPSK**: By default each authenticated user can generate multiple DPSKs. Select this option to limit the number of DPSKs each user can generate (1-4).
11. **Shared DPSK**: Enable this option to allow a single user to share a single DPSK across multiple devices. By default, each DPSK is unique and mapped to a single MAC address. This option allows admins to override this rule and allow a user to share a single DPSK across multiple devices.
12. Click **OK** to save your changes.

This WLAN is now ready to authenticate users using DPSKs once their credentials are verified against either the internal database or an external AAA server.

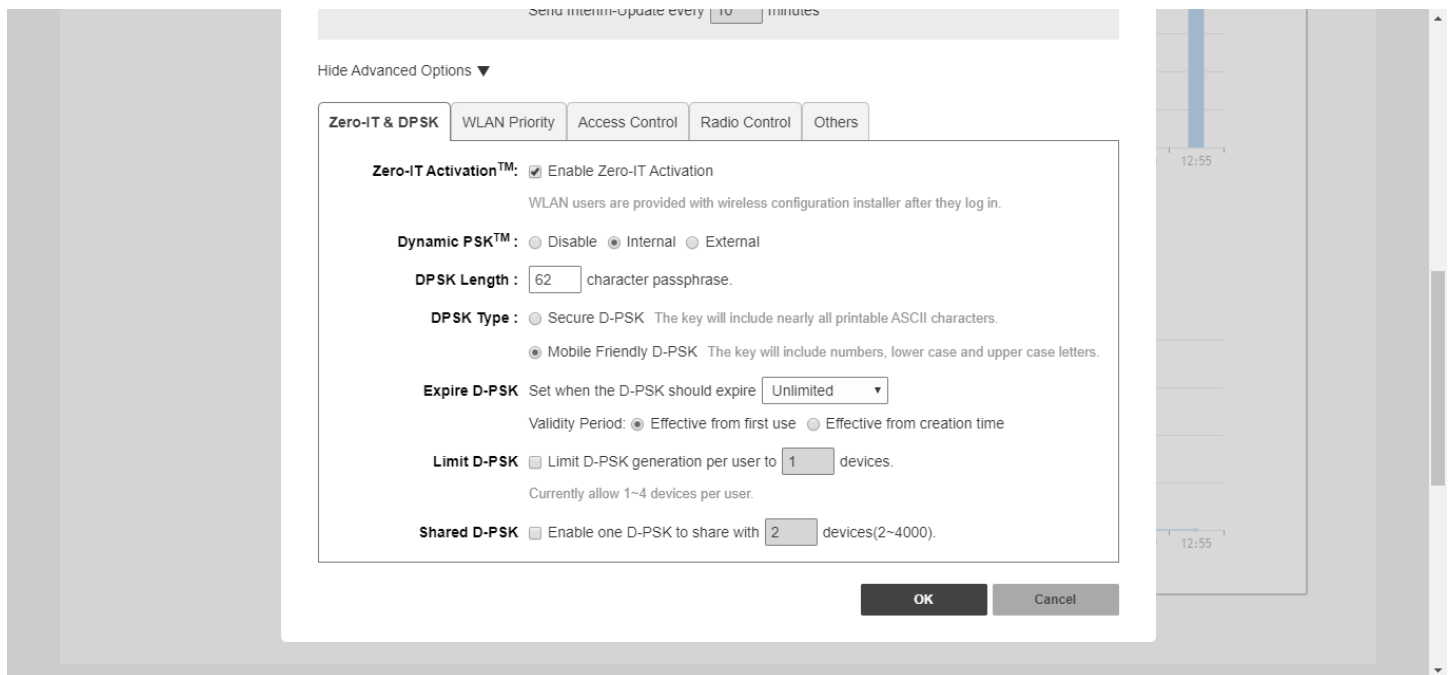FIGURE 146 Using the internal database for DPSK authentication



NOTE

For information on DPSK management and batch generation, see [Dynamic PSK](#) on page 398.

DPSK Functionality for Legacy and Non-Legacy Devices

The following use cases apply to DPSK functionality for legacy and non-legacy devices:

- If you change the name of the **WLAN SSID**, Unleashed deletes all the DPSKs of legacy and non-legacy devices.
- If **Dynamic PSK** is changed from **Internal** to **External** or **Disable**, Unleashed deletes all the DPSKs of legacy and non-legacy devices.
- If **DPSK Validity Period** or **Shared DPSK** options are changed, Unleashed deletes all the DPSKs of non-legacy devices only.
- If **Allow Legacy Devices to connect to WLAN by previous password** is disabled, Unleashed deletes DPSKs of legacy devices only.
- If the legacy device is unmarked, Unleashed deletes the DPSK of this legacy device.
- If the legacy device is deleted from the UI, Unleashed does not delete the DPSKs of this legacy device.

Using External DPSK with RADIUS Authentication


Using an external AAA server for managing Dynamic Pre-Shared Keys provides several advantages to internal DPSKs stored on the AP or controller.

The external DPSK feature allows customers to exceed the maximum number of DPSKs that can be stored on the controller, and provides the option to store and manage DPSKs on the AAA server for distribution to multiple controllers.

To enable external DPSK using an external authentication server:

1. Go to **WiFi Networks > Create/Edit WLAN > Advanced Options > Zero-IT & DPSK**.
2. In **Dynamic PSK**, select **External**.
3. In **Authentication Server**, select or create an AAA server entry.
4. Click **OK**.

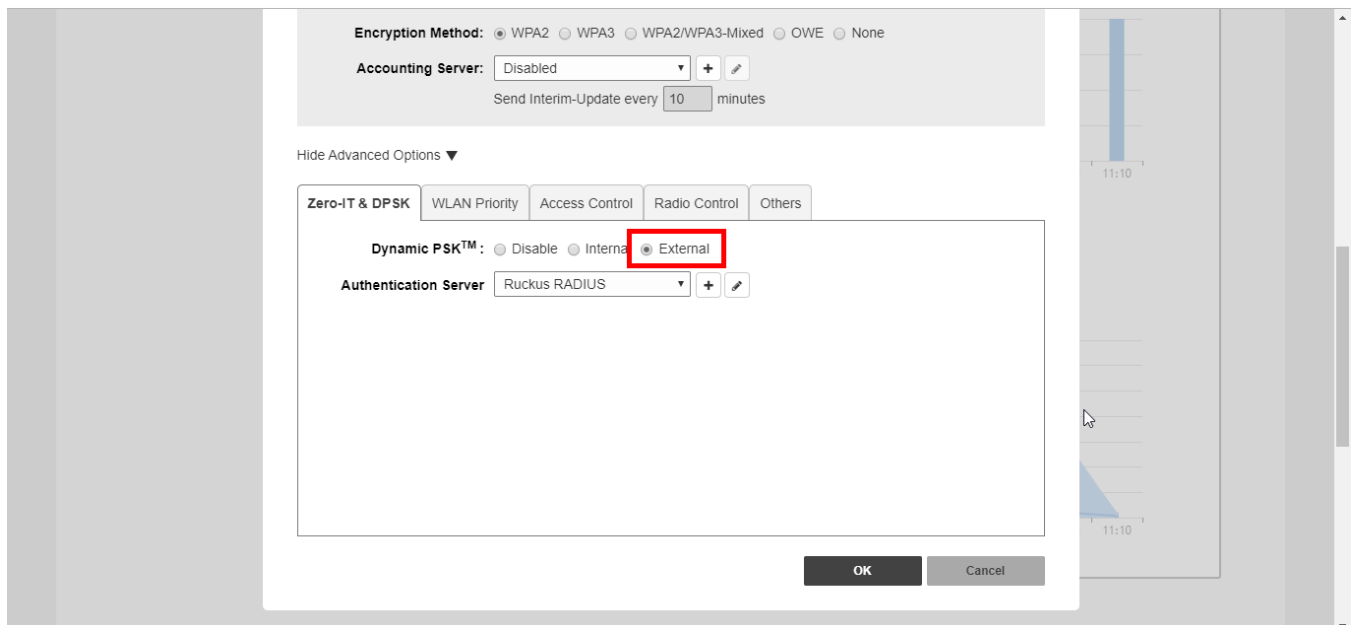FIGURE 147 External DPSK



5. The controller will send `Access-Request` messages to the RADIUS server with following attributes: `Ruckus-SSID`, `Ruckus-BSSID`, `User-Name`, `Ruckus-Dpsk-Params`.

- The AAA server sends back a RADIUS Access-Accept or Access-Reject message with the following attributes: Access-Accept: Calling-station-id, Tunnel-Type, Tunnel-Medium-Type, Tunnel-Private-Group-Id, MS-MPPE-Recv-Key, Session-Timeout, Ruckus-User-Groups, User-Name. The MS-MPPE-Recv-Key is mandatory.

NOTE

If the User-Name attribute is empty in the Access-Accept packet of external Radius server, the column **User** in the web UI uses the User-name attribute from the Access-Request packet of Unleashed.

- The AAA server generates a DPSK key (PMK) for each wireless station. This key is encrypted and entered in the attribute MS-MPPE-Recv-Key: $PMK = PBKDF2_SHA1(PassPhrase, Wlan-SSID, Wlan-SSID-Len, 4096, 32)$. See RFC2548 Chapter 2.4.3.

NOTE

The WLAN-SSID attribute will exist in the authentication request. The AAA server can use this value to generate the PSK or the AAA server can be pre-configured with WLAN-SSID value.

- The AAA server calculates the wireless station's Pairwise Transient Key (PTK) from the Ruckus-Dpsk-Params attribute (AKM Suite, Cipher, Anonce, EAPOL-Key-Frame) in the Access-Request message and generates the PMK key, and finally verifies the Key MIC of the station. If it matches, the RADIUS server will send back an Access-Accept message with the MS-MPPE-Recv-Key attribute.
- With the DPSK keys generated managed by the AAA server, the controller's internal max DPSK limits are avoided and an unlimited number of DPSKs can be generated.

External DPSK RADIUS Attribute Value Pairs

The RADIUS Attribute Value Pairs (AVP) and Vendor Specific Attributes (VSA) used in external DPSK generation are listed in the following table.

The following parameters are used in access-request messages.

TABLE 32 Access-Request message parameters

	Parameter	AVP / VSA name	Comment
1	SSID	Ruckus-SSID	Since DPSK passphrases are bound to SSIDs, it's expected that AAA server will have the PMK lists indexed by SSID value.
2	UE's MAC address	User-Name	This AVP chosen for backward compatibility with MAC Authentication use case. The AAA server can override this value with a real (human or account) user-name when User-Name AVP is included in an Access-Accept or Access-Reject message.
3	AP's BSSID	Ruckus-BSSID	Note: the AAA Interface Document needs to be updated. Currently it states, "BSSID for each WLAN in each radio"; however, only a single BSSID (the one the client has associated with) is included in the VSA.
4	Anonce	Ruckus-DPSK-params	This is a new Ruckus VSA, defined below.
5	Snonce	Ruckus-DPSK-params	The Snonce is parsed from the EAPOL Key Frame field of Ruckus-dpsk-params.
6	MIC	Ruckus-DPSK-params	The MIC is parsed from the EAPOL Key Frame field of Ruckus-dpsk-params.
7	4WHS-M2 EAPOL Key frame	Ruckus-DPSK-params	The EAPOL-Key-Frame is used for the MIC calculation.
8	Cipher	Ruckus-DPSK-params	If the UE has negotiated TKIP-based encryption (this would be a really old device), then the key integrity algorithm is different than AES (Advance Encryption Standard, the encryption algorithm currently in use). In this case, AAA server also has to use the same algorithm as the UE in order to properly identify the PMK. TKIP is indicated according to the Cipher octet (see below). Note that two different integrity algorithms are used: HMAC-SHA1 and HMAC-MD5.

TABLE 32 Access-Request message parameters (continued)

9	AKM Suite	Ruckus-DPSK-params	The use of the AES key integrity and key hierarchy is indicated by the AKM Suite value. If the UE has negotiated FT encryption (FT - fast transition, aka 802.11r), generating the PTK from the PMK uses a different algorithm than AES. In this case, AAA server also has to use the same algorithm as the UE in order to properly identify the PMK. The AKM Suite value indicates whether FT is used.
---	-----------	--------------------	---

The following parameters are used in access-accept/access-reject messages.

TABLE 33 Access-accept/Access-reject message parameters

	Parameter	RADIUS AVP or VSA name	Mandatory / Optional	Comment
1	MS-MPPE-Recv-Key	MS-MPPE-Recv-Key	Mandatory	Included whenever the AAA server has found a matching PMK (for either bound or unbound case).
2	PMK-time	Session-Timeout	Mandatory	Included whenever the AAA server has found a matching PMK, this is PMK expired time for the controller. Its range could be 0-14400 minutes.
3	User-name	User-name	Optional	Included if admin desires the username to be included in syslog events generated by the controller.
4	VLAN assignment	The following triplet of AVPs: <ol style="list-style-type: none"> 1. Tunnel-Type 2. Tunnel-Medium-Type 3. Tunnel-Private-Group-Id 	Optional	Included if admin requires dynamic VLAN assignment. Note: the Tag field in all three AVPs is set to the same value (see RFC-2868). <ol style="list-style-type: none"> 1. Tunnel-Type is set to the value "VLAN". Note: the AVP encodes this enumeration as an integer set to the value of 13 (see RFC-3580). 2. Tunnel-Medium-Type is set to the string value of "802" 3. Tunnel-Private-Group-Id is set to the value "<VLAN ID>". VLAN ID has a value between 1 and 4094 and is encoded as a string (see RFC-3580).
5	Ruckus-User-Groups	Ruckus-User-Groups	Optional	Ruckus-User-Groups is used as Role of UE, It is the same as "Group Attributes " in ZD WebUI Configuration "Roles and Policies ".
6	Authorization reason	Reply-message	Optional	Included if AAA server sends an Access-Accept in the workflow for DPSK passphrase renewal. When included, the ZD shall copy the contents of this AVP to the relevant syslog message (event ID 206 clientAuthorization).

WLAN Priority Settings

The **WLAN > Advanced Options > Priority** tab provides the following options:


- **Priority:** Set the priority of this WLAN to *Low* if you would prefer that other WLAN traffic takes priority. For example, if you want to prioritize internal traffic over guest WLAN traffic, you can set the priority in the guest WLAN configuration settings to "Low." By default, all WLANs are set to High priority.
- **Hide SSID:** Activate this option if you do not want the ID of this WLAN advertised at any time. This will not affect performance or force the WLAN user to perform any unnecessary tasks.

- **Access VLAN:** By default, all wireless clients are placed into a single VLAN (with VLAN ID 1). If you want to tag this WLAN traffic with a different VLAN ID, enter a valid VLAN ID (2- 4094) in the box.
- **Enable Dynamic VLAN:** Dynamic VLAN can be used to automatically and dynamically assign wireless clients to different VLANs based on RADIUS attributes. The Dynamic VLAN option is only available for 802.1X EAP WLANs with a RADIUS server configured.
- **Max Clients:** Limit the number of clients that can associate with this WLAN per AP radio (default is 100, max is 256).
- **Service Schedule:** Use the Service Schedule tool to control which hours of the day, or days of the week to enable/disable WLAN service. For example, a WLAN for student use at a school can be configured to provide wireless access only during school hours. Click on a day of the week to enable/disable this WLAN for the entire day. Colored cells indicate WLAN *enabled*. Click and drag to select specific times of day. You can also disable a WLAN temporarily for testing purposes, for example.

NOTE

This feature will not work properly if the Unleashed network does not have the correct time. To ensure the correct time is always maintained, configure an NTP server and point the Unleashed Master AP to the NTP server's IP address, as described in [Configuring the System Time](#) on page 358.

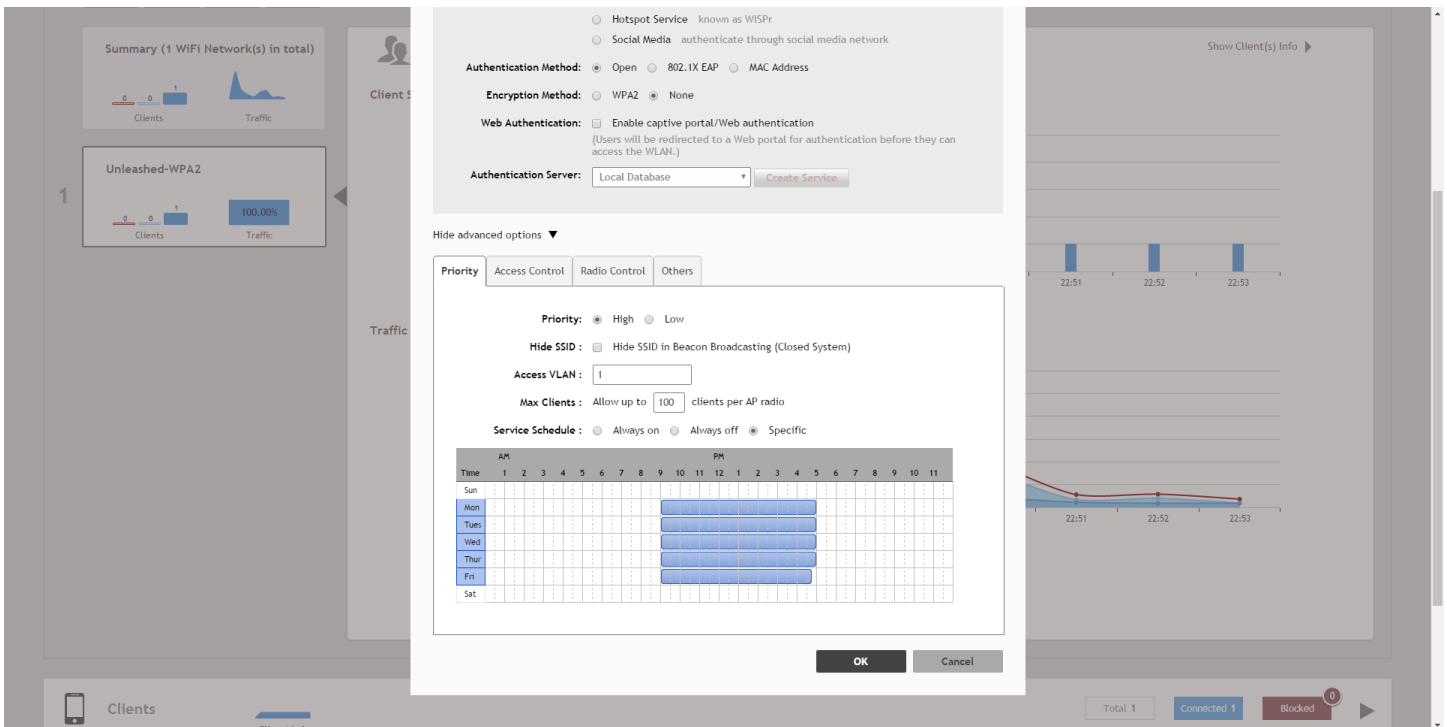FIGURE 148 Configuring a specific Service Schedule for a WLAN



Access Control Settings


The WLAN > Advanced Options > Access Control page provides the following options:

- **Call Admission Control:** (Disabled by default). Enable Wi-Fi Multimedia Admission Control (WMM-AC) to support Polycom/Spectralink VIEW certification. When enabled, the AP announces in beacons if admission control is mandatory or not for various access categories and admits only the traffic streams it can support based on available network resources. When network resources are not sufficient to provide this level of performance, the new traffic stream is not admitted. Call Admission Control is effective only when both AP and the

client support WMM-AC. Ruckus APs are capable of handling hundreds of simultaneous clients, but when it comes to VoIP traffic, the number of VoIP calls needs to be policed to ensure adequate voice/video quality. Ruckus recommends limiting bandwidth allocation to six calls (four active calls and two reserved for roaming) on the 2.4 GHz radio and 10 calls on the 5 GHz radio (seven active and three reserved for roaming). Enable this feature if you want this WLAN to serve as a VoIP WLAN to support Spectralink phones.

- **Rate Limit:** Rate limiting controls fair access to the network. When enabled, the network traffic throughput of each network device (i.e., client) is limited to the rate specified in the traffic policy, and that policy can be applied on either the uplink or downlink. Toggle the Uplink and/or Downlink drop-down lists to limit the rate at which WLAN clients upload/download data. The "Disabled" state means rate limiting is disabled; thus, traffic flows without prescribed limits.
- **Access Control:** Toggle this drop-down list to select Access Control Lists (L2 or L3/L4) and Device Policy to apply to this WLAN. An access control entry or a device policy must be created before being available here. For more information, see [Access Control](#) on page 384.
- **Application Visibility:** Enable this option to allow APs to collect client application data, which can then be consolidated for use by the [Application Recognition and Control](#) on page 389 pie charts, and can be used to deny access or rate limit application traffic based on admin-configured application policies.
 - **Apply Policy Group:** This option allows the administrator to deny application access or rate limit application traffic based on predefined or user-defined applications. Using application policies, administrators can block specific applications if they are seen to be consuming excessive network resources, or enforce network usage policies such as blocking social media sites. For more information, see [Application Policies](#) on page 256.
- **URL Filtering:** Enable URL Filtering and select a URL Filtering Profile from the list (or create a new one). For more information, see [URL Filtering](#) on page 419.
- **WiFi Calling:** Wi-Fi Calling is a service for Android and iOS smartphones that allows clients to make and receive voice phone calls over a Wi-Fi connection. For more information, see [Wi-Fi Calling](#) on page 424.

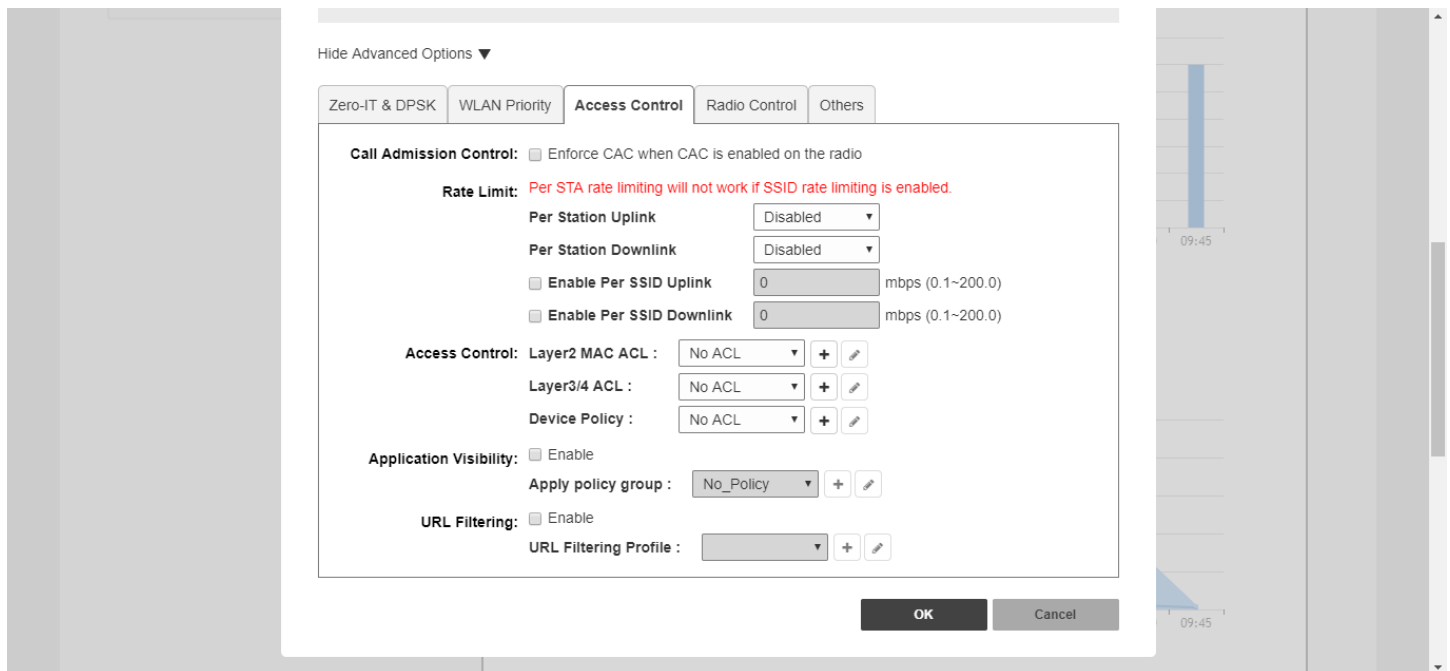FIGURE 149 Advanced WLAN settings - Access Control configuration



Application Policies

For instructions on configuring Application Control Policies, see [Creating an Application Control Policy](#) on page 256.

This option allows the administrator to deny application access by blocking any HTTP host name (FQDN - Fully Qualified Domain Name) or L4 port. Using application denial policies, administrators can block specific applications if they are seen to be consuming excessive network resources, or enforce network usage policies such as blocking social media sites.

The following usage guidelines need to be taken into consideration when defining application control policies:

- "www.corporate.com" - This will block access to the host web server at the organization "corporate.com" i.e., the FQDN. It will not block access to any other hosts such as ftp, ntp, smtp, etc. at the organization "corporate.com".
- "corporate.com" - This will block access to all hosts at the domain "corporate.com," i.e., it will block access to www.corporate.com, ftp.corporate.com, smtp.corporate.com, etc.
- "corporate" - This will block access to any FQDN containing the text "corporate" in any part of the FQDN. Care should be taken to use as long as possible string for matching to prevent inadvertently blocking sites that may contain a shorter string match i.e., if the rule is "net" then this will block access to any sites that have the text "net" in any part of the FQDN or ".net" as the FQDN suffix.
- *.corporate.com - This is an invalid rule. Wildcard "*" and other regular expressions cannot be used in any part of the FQDN.
- "www.corporate.com/games" - This is an invalid rule. The filter cannot parse and block access on text after the FQDN, i.e., in this example it cannot filter the microsite "/games".

NOTE

Many global organizations have both a ".com" suffix and country specific suffix such as ".co.uk", ".fr", ".au".etc. To block access to, for example, the host web server in all regional specific web sites for an organization, a rule like "www.corporate" could be used.

NOTE

Many global organizations use distributed content delivery networks such as Akamai. In such cases creating a rule such as "www.corporate.com" may not prevent access to the entire site. Further investigation of the content network behavior may need to be undertaken to fully prevent access.

NOTE

When using port-based rules, there is no distinction between the TCP and UDP protocols, so care should be taken if wishing to block a specific application port, as this will apply to both IP protocols and may inadvertently block another application using the other protocol.

Creating an Application Control Policy

Application control policies can be used to block access to certain applications, to rate limit traffic identified as belonging to certain applications, or to perform QoS traffic shaping on traffic identified as belonging to a certain application.

NOTE

For more information on configuring and enforcing application control policies, see [Application Policy](#) on page 391.

To create an Application Control Policy:

1. Go to **WLAN > Advanced Options > Access Control**.
2. Enable **Application Visibility**.
3. In **Apply policy group**, click **Create New** to create a new policy.

NOTE

Alternatively, go to *Admin & Services > Services > Application Recognition & Control > Application Policy* to configure multiple application policies and then apply them to WLANs one by one.

4. Enter a **Name** and optionally a **Description** for the policy.
5. In **Rules**, click **Create New** to create a new rule for this policy.
6. In **Rule Type**, select whether this will be a Denial policy, a Rate Limiting policy or a QoS policy.
7. In **Application Type**, Select **System Defined** or one of the user-defined application types (IP-based, port-based or application name-based).
8. In **Application**, select the user-defined application from the list, or select the application category and application name from the list of system-defined applications.
9. If the Rule Type you selected was Rate Limiting or QoS, enter the uplink and downlink speeds at which to limit this application, or the QoS traffic shaping rules to enforce if it is a QoS rule.

10. Click **Save** to save the rule, and click **OK** to save the policy.

FIGURE 150 Applying an Application Control Policy to a WLAN


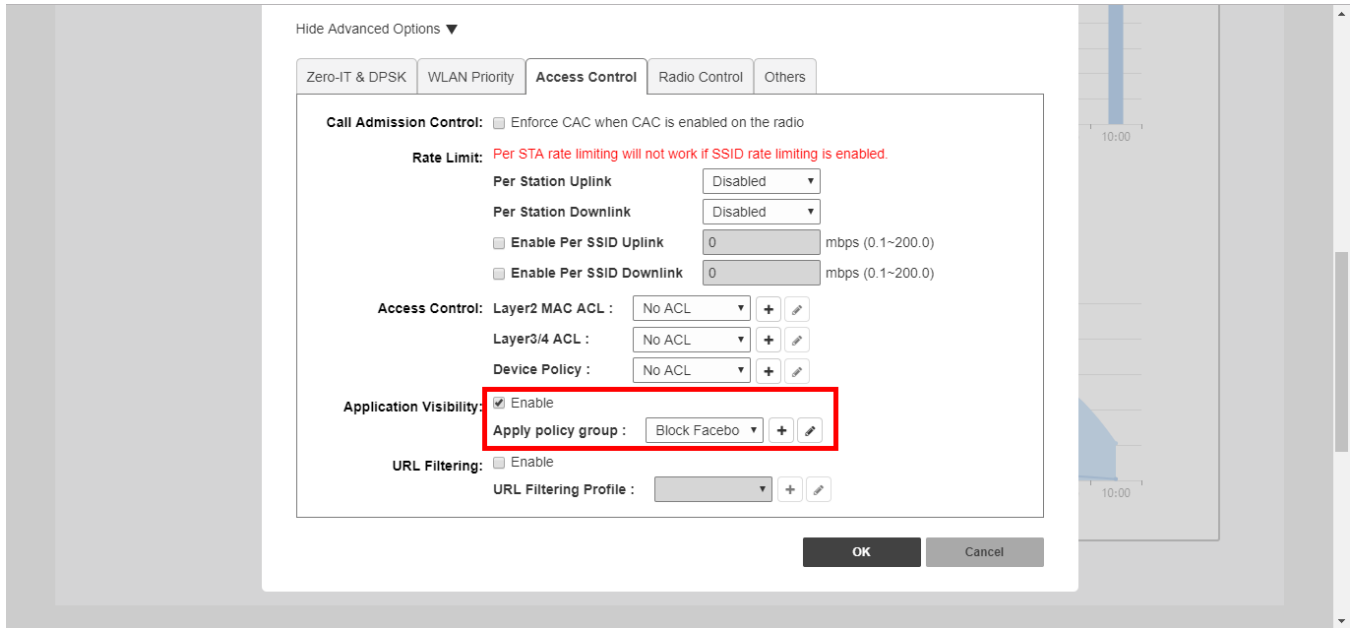


FIGURE 151 Creating an Application Control Policy for a specific website

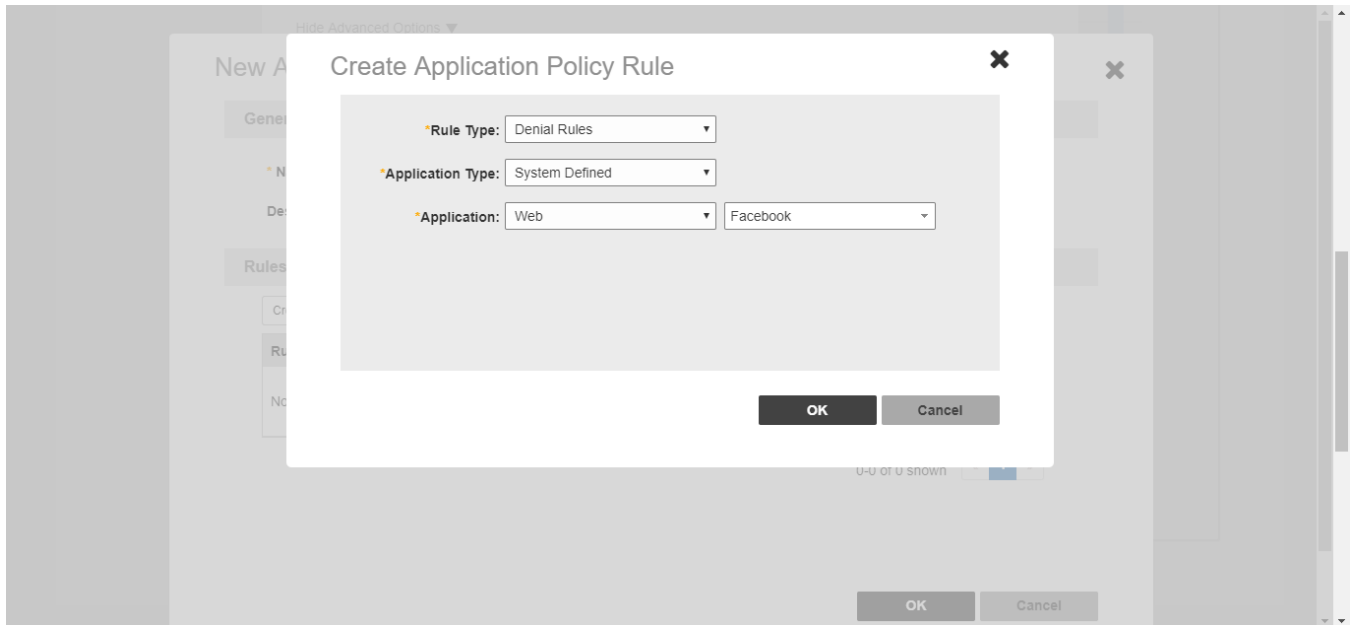

Radio Control Settings

The [Edit WLAN] > *Advanced Options* > *Radio Control* tab provides options for configuring radio settings for the WLAN, such as load balancing, band balancing, fast BSS transition and radio resource management.

The following options can be configured on a per-WLAN basis:

- **Fast BSS Transition:** (Disabled by default) The Fast BSS Transition feature uses messages and procedures defined in 802.11r to allow continuous connectivity for wireless devices in motion, with fast and secure handoffs from one AP to another. A fast BSS transition is a BSS transition in the same mobility domain that establishes the state necessary for data connectivity before the re-association rather than after the re-association. In this way, clients that support the 11r standard (including iOS devices) can achieve significantly faster roaming between APs.
- **Radio Resource Management:** (Disabled by default) Radio Resource Management utilizes 802.11k Neighbor Reports, which are sent by the AP to inform clients of the preferred roaming target AP. The client sends neighbor report request to an AP, and the AP returns a neighbor report containing information about known neighbor APs that are candidates for a service set transition.
- **Background Scanning:** Background Scanning regularly samples the activity in all Access Points to assess RF usage for automatic optimal channel selection, to detect rogue APs, and to determine which APs are near each other for radio resource management and load balancing. These scans sample one channel at a time in each AP so as not to interfere with network use.
- **Load Balancing:** Enabling load balancing can improve WLAN performance by helping to spread the client load between nearby access points. The load balancing feature can be controlled from within the Unleashed web interface to balance the number of clients per radio on adjacent APs. "Adjacent APs" are determined by the Unleashed Master AP by measuring the RSSI during channel scans. After startup, the Unleashed Master AP uses subsequent scans to update the list of adjacent radios periodically and when a new AP sends its first scan report. When an AP leaves, the Unleashed Master AP immediately updates the list of adjacent radios and refreshes the client limits at each affected AP. Once the Unleashed Master AP is aware of which APs are adjacent to each other, it begins managing the client load by sending desired client limits to the APs. These limits are "soft values" that can be exceeded in several scenarios, including: (1) when a client's signal is so weak that it may not be able to support a link with another AP, and (2) when a client's signal is so strong that it really belongs on this AP. The APs maintain these desired client limits and enforce them once they reach the limits by withholding probe responses and authentication responses on any radio that has reached its limit.
- **Band Balancing:** Band balancing balances the client load on radios by distributing clients between the 2.4 GHz and 5 GHz radios. This feature is enabled by default. To balance the load on a radio, the AP encourages dual-band clients to connect to the 5 GHz band when the configured percentage threshold is reached.
- **802.11d:** The 802.11d standard provides specifications for compliance with additional regulatory domains (countries or regions) that were not defined in the original 802.11 standard. This option is enabled by default. For optimal performance of Apple iOS devices, it is recommended that you enable this option.

NOTE


Some legacy embedded devices (such as wireless bar code scanners) may not operate properly if this option is enabled.

- **Enable WLAN on:** Manually enable/disable WLAN service per radio. Default is enabled on both radios. Select **2.4 GHz only** to disable WLAN service on the 5 GHz radio, or **5 GHz only** to disable WLAN service on the 2.4 GHz radio.

This option allows you to create separate WLANs on the two radios. For example, you could create a "2.4G" WLAN with the *Enable WLAN* on feature set to **2.4 GHz only**, and a "5G" WLAN with the feature set to **5 GHz only**.

For more information, see [Creating Separate WLANs for 2.4 GHz and 5 GHz Radios](#) on page 260.

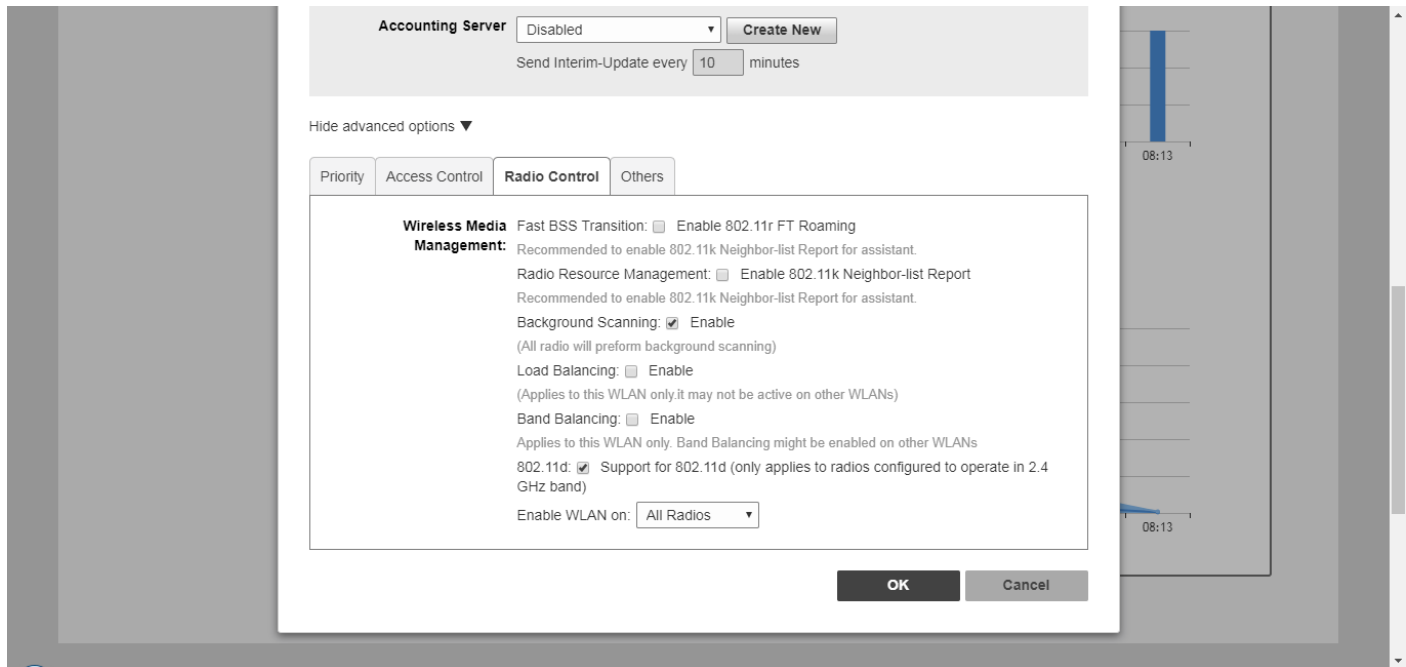FIGURE 152 Radio Control options



Creating Separate WLANs for 2.4 GHz and 5 GHz Radios


Use the "Enable WLAN on" option to configure 2.4 or 5 GHz radio service on/off for the WLAN. This allows you to create two separate WLANs that each operates on one or the other of the 2.4 or 5 GHz radios.

In some scenarios, it may be preferable to deploy a separate WLAN/SSID for each radio; one 2.4 GHz SSID and one 5 GHz SSID. In this way, you can ensure that all 2.4 GHz-only devices connect to the 2.4 GHz WLAN only, while 5 GHz-capable devices are allowed to connect to the 5 GHz WLAN.

1. Create the 2.4 GHz WLAN.
2. Go to **WiFi Networks > Create > Advanced Options > Radio Control**.
3. In **Enable WLAN on**, select **2.4 GHz only**.
4. Click **OK** to save.
5. Create the 5 GHz WLAN.
6. Go to **WiFi Networks > Create > Advanced Options > Radio Control**.
7. In **Enable WLAN on**, select **5 GHz only**.

- Click **OK** to save.

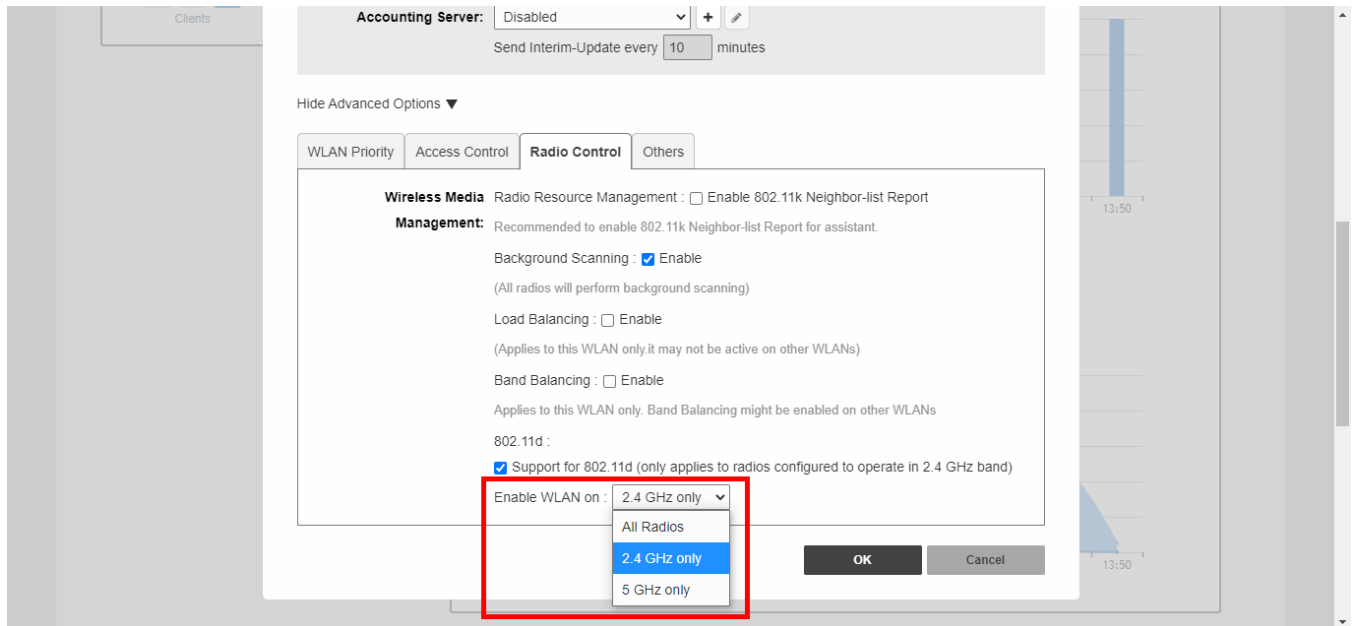FIGURE 153 Use the "Enable WLAN on" option to configure 2.4 or 5 GHz radio service on/off for the WLAN



- To verify that only 2.4 GHz devices are connected to the 2.4 GHz WLAN and 5 GHz devices are connected to the 5 GHz WLAN, expand the **Clients** section and view the list of connected wireless clients. Check the *WLAN* and *Radio* columns to view connection status.

Other Advanced WLAN Settings

The **Others** tab provides the following options:

- **Force DHCP:** (Disabled by Default.) Enable this option to force clients to obtain a valid IP address from DHCP within the specified number of seconds. This prevents clients configured with a static IP address from connecting to the WLAN.
- **Inactivity Timeout:** Enter a value in minutes after which idle stations will be disconnected (from 1 through 500 minutes).
- **Wireless Client Isolation:** Select the level of client isolation you want to enforce:
 - **Isolate wireless client traffic from other clients on the same AP:** Enables client isolation on the same Access Point (clients on the same subnet but connected to other APs will still be able to communicate).
 - **Isolate wireless client traffic from all hosts on the same VLAN/subnet:** Prevents clients from communicating with any host on the same subnet or VLAN other than those listed on the client isolation allowlist. If this option is chosen, you must select a allowlist from the drop-down list. (Refer to [Configuring Client Isolation Allowlists](#) on page 262.)
- **Bypass Apple CNA Feature:** With Bypass Apple CNA enabled, captive portal (web-based authentication) login must be performed by opening a browser to any unauthenticated page (HTTP) to get redirected to the login page. (Refer to [Bypass Apple CNA](#) on page 264).
- **DTIM Interval:** Configure the Delivery Traffic Indication Message (DTIM) interval to control how often DTIM messages are transmitted. This setting affects the frequency of data transmissions per broadcast beacon. Setting the DTIM interval to a lower value results in more frequent DTIM messages, which can prevent mobile devices from going into power save mode, thereby increasing battery consumption.

- **Directed MC/BC Threshold:** Allows RUCKUS APs to convert incoming broadcast and multicast traffic to unicast, reducing airtime utilization and improving data throughput performance. Enter a value to set the client count at which an AP will stop converting group-addressed data traffic to unicast traffic.
- **Client Traffic Logging:** Configure options for log generation and delivery to the syslog server (refer to [Client Connection Troubleshooting](#) on page 333):
 - **Send traffic flow data to syslog server:** RUCKUS Unleashed sends client flow data only to the syslog server.
 - **Send connection records to syslog server:** RUCKUS Unleashed sends client connection event logs only to the syslog server.
- **wifi6:** (Optional) Enable wifi6. (Disabled by Default).

FIGURE 154 Configuring Other Advanced WLAN Settings

Hide Advanced Options ▼

Zero-IT & DPSK WLAN Priority Access Control Radio Control **Others**

Force DHCP: Enable Force DHCP. Disconnect client if client does not obtain valid IP address in seconds.

Inactivity Timeout: Terminate idle user session after minute(s)

Wireless Client Isolation: Isolate wireless client traffic from other clients on the same AP.
 Isolate wireless client traffic from all hosts on the same VLAN/subnet.

(Requires allowlist for gateway and other allowed hosts.)

DTIM Interval: (1-255) Defines the frequency of beacons that will include a DTIM

Directed MC/BC Threshold: (0-128) Defines the client count at which an AP will stop converting group-addressed data traffic to unicast

Client Traffic Logging: Send traffic flow data to syslog server
 Send connection records to syslog server
also available for download at Client Connection Logs section of Admin & Services -> Administration-> Diagnostics -> Client Troubleshooting tab

wifi6: enable wifi6

Configuring Client Isolation Allowlists

When Wireless Client Isolation is enabled on a WLAN, all communication between clients and other local devices is blocked at the access point. To prevent clients from communicating with other nodes, the access point drops all ARP packets from stations on the WLAN where client isolation is enabled and which are destined to IP addresses that are not part of a per-WLAN allowlist. You can create exceptions to client isolation (for example, allowing access to a local printer) by creating client isolation allowlists.

Complete the following steps to configure a client isolation allowlist:

1. Go to **Wi-Fi Networks > Advanced Options > Others**.
2. Under **Wireless Client Isolation**, select both the options:
 - **Isolate wireless client traffic from other clients on the same AP**
 - **Isolate wireless client traffic from all hosts on the same VLAN/subnet**
3. Click **Create Allowlist**.
4. Enter a name and a description (optional) for the allowlist.
5. **Auto Allowlist** is enabled by Default, which allows the APs to auto-discover gateway devices and add them to the isolation allowlist.
6. Under **Rules**, click **Create New** to create multiple device-specific rules for each device to be allowlisted. For each rule, enter the following:
 - **Description:** Description of the device.
 - **MAC Address:** Enter the MAC address of the device.
 - **IPv4 Address:** Enter the IP address of the device.
7. Click **Save** to save the rule you created.
8. To change the order in which rules are implemented, select the order from the drop-down menu in the **Order** column. You can also edit or clone rules from the **Action** column. To delete a rule, select the check box next to the rule and click **Delete**.
9. Click **OK** to save the allowlist.

FIGURE 155 Creating a Client Isolation Allowlist

Create New [Close]

Name [Text Field]

Description [Text Field]

Auto Allowlist APs will auto-discover gateway devices and add them to the isolation allowlist

Order	Description	MAC Address	IPv4 Address	Action
[Dropdown]	[Text Field]	[Text Field]	[Text Field]	[Buttons: Create New, Delete]

[OK] [Cancel]

Bypass Apple CNA

Some Apple iOS and OS X clients include a feature called Captive Network Assistant (Apple CNA), which allows clients to connect to an open captive portal WLAN without displaying the login page.


When a client connects to a wireless network, the CNA feature launches a pre-browser login utility and it sends a request to a success page on the Apple website. If the success page is returned, the device assumes it has network connectivity and no action is taken. However, this login utility is not a fully functional browser, and does not support HTML, HTML5, PHP or other embedded video. In some situations, the ability to skip the login page for open WLANs is a benefit. However, for other guest or public access designs, the lack of ability to control the entire web authentication process is not desirable.

ZoneDirector provides an option to work around the Apple CNA feature if it is not desirable for your specific deployment. With CNA bypass enabled, captive portal (web-based authentication) login must be performed by opening a browser to any unauthenticated page (http) to get redirected to the login page.

To enable Apple CNA bypass, use the following procedure:

1. Expand the **WiFi Networks** component and select the WLAN you want to configure, then click **Edit**.
Select one of the following WLAN usage types:
 - Standard Usage with Web Auth enabled
 - Guest Access (including Social Media)
 - Hotspot (WISPr)
2. Click **Show Advanced Options**.
3. Click the **Others** tab.
4. Select the **Enable** check box next to **Bypass Apple CNA Feature**.
5. Click **OK** to save your changes.

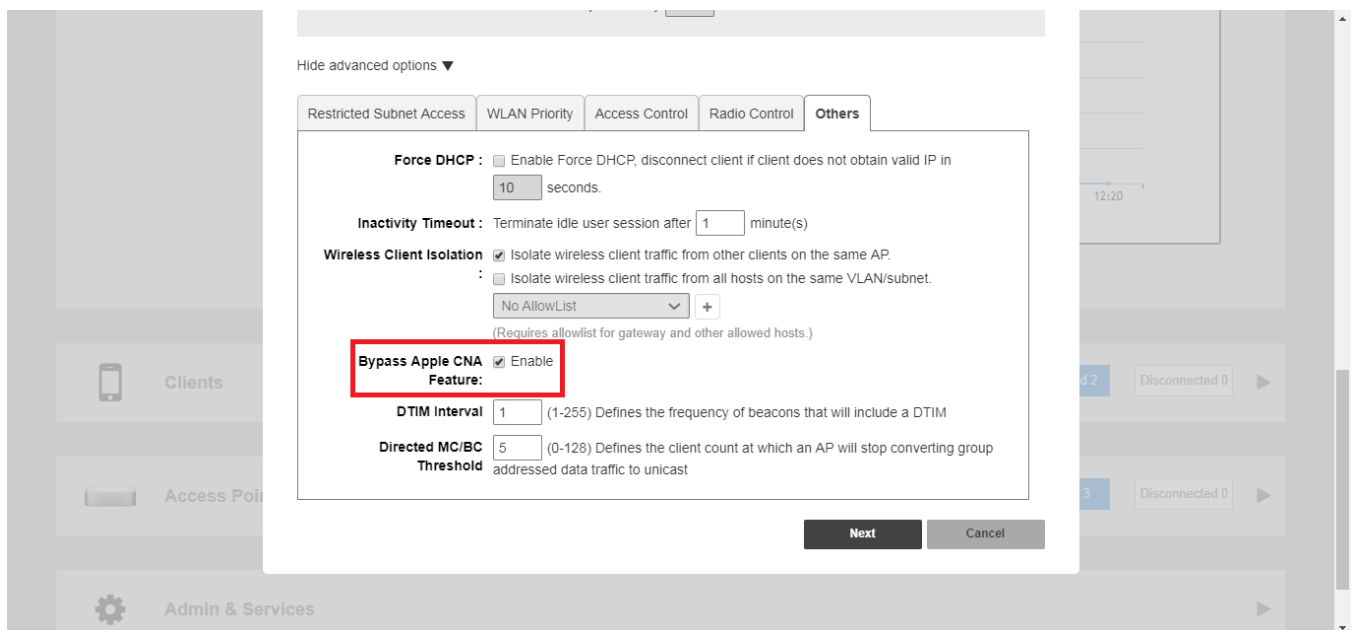FIGURE 156 Enable Bypass Apple CNA feature



Access Point Configuration

• Access Point Configuration Overview.....	265
• Show Mesh Topology.....	266
• Show Client Info.....	267
• Show Events and Alarms.....	269
• Configuring Global AP Settings.....	270
• Monitoring an Individual AP.....	276
• Configuring an Individual AP.....	283
• Working with AP Groups.....	287
• Restarting an AP.....	302
• Removing an AP.....	303


Access Point Configuration Overview

The *Access Points* component provides tools for monitoring and configuring all Unleashed APs at once, configuring each AP individually, or configuring multiple groups of APs with a set of common custom settings.

Expand the component to view an overview of the connected and disconnected Unleashed APs that are recognized by this Unleashed network. This screen contains the following elements:

- **Summary Box:** Click this box to view a summary of all APs' clients, signal quality and traffic statistics.
- **Individual AP Boxes:** Click any of these boxes to view details specific to that AP.
- **View Mode:** Switch between AP and AP Group views. AP mode lets you view and configure APs individually, while AP Group mode lets you create and manage AP groups. For more information, see *Working with AP Groups*.
- **Show Mesh Topology:** Click this link to view the Mesh topology.
- **Show Client Info:** Click this link to view a table of currently connected clients.
- **Client Status** bar chart: This chart displays the number of connected clients and client signal quality across all connected APs at one-minute intervals (over the last 10 minutes).
- **Traffic** graph: This graph displays the Received (Rx), Transmit (Tx) and Total traffic values over time for the last 10 minutes, at one-minute intervals.

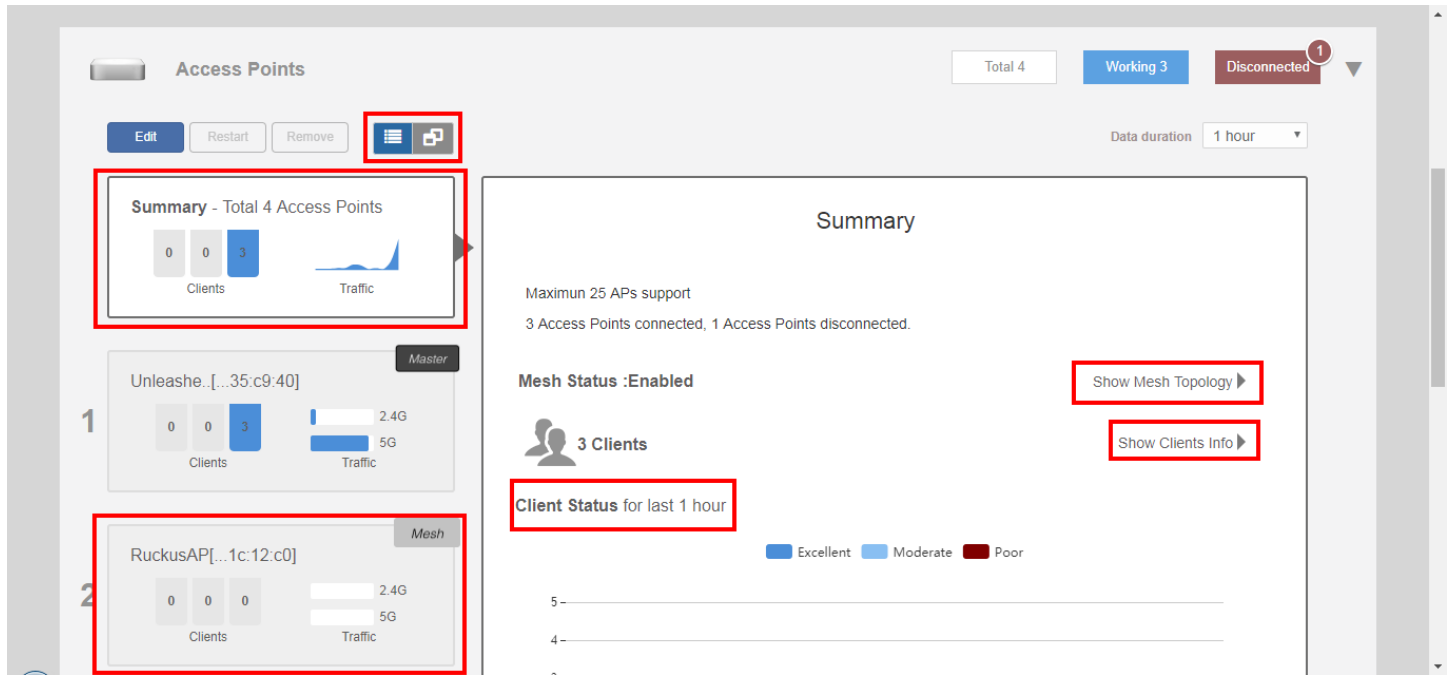FIGURE 157 Access Points Component



Show Mesh Topology

Click this link to display the Mesh topology.

The **Mesh Topology** table displays the relationships between Root APs and Mesh APs in the Mesh. The table includes the following information:

- **Access Points:** Lists the APs in the Mesh by MAC address.
- **Signal:** Displays the signal quality of the Mesh link to/from the uplink AP.
- **Description:** The AP description, if configured.
- **Channel:** Displays the channel used by the Mesh link, as well as the channel width (20/40/80).
- **IP Address:** The IP address of the Root or Mesh AP.
- **Clients:** Number of clients connected to the AP.

FIGURE 158 Mesh Topology

The screenshot shows the 'Access Points' configuration page. At the top right, there are status indicators: 'Total 4', 'Working 3', and 'Disconnected 1'. Below these are buttons for 'Edit', 'Restart', and 'Remove', along with a 'Data duration' dropdown set to '1 hour'. The main content area is divided into two columns. The left column contains three summary cards for different APs: 'Summary - Total 4 Access Points', 'Unleashed...35:c9:40' (labeled '1' and 'Master'), and 'RuckusAP...1c:12:c0' (labeled '2' and 'Mesh'). Each card shows client counts and traffic graphs. The right column contains a 'Summary' section with text: 'Maximun 25 APs support' and '3 Access Points connected, 1 Access Points disconnected.' Below this is a 'Mesh Status :Enabled' section with a 'Hide Mesh Topology' dropdown menu highlighted by a red box. Underneath is a table with columns: 'Tree', 'Access Points', 'Signal', 'Description', and 'Channel'. The table lists three connected APs with their MAC addresses, signal strengths, and channels. At the bottom of the right column, there is a '3 Clients' section with a 'Show Clients Info' link.

Tree	Access Points	Signal	Description	Channel
+	d4:c1:9e:35:c9:40			36
+	f0:b0:52:1c:12:c0	41		36
+	f0:b0:52:1b:f0:40	49		36

Show Client Info

Click this link to display the currently connected clients list.

Access Point Configuration
Show Client Info

FIGURE 159 Client Info summary

Access Points

Total 4 Working 3 Disconnected 1

Edit Restart Remove

Data duration 1 hour

Summary - Total 4 Access Points

0 0 3 Clients Traffic

1 Unleashed [d4:c1:9e:35:c9:40] Master

0 0 3 Clients 2.4G 5G Traffic

2 RuckusAP[...1c:12:c0] Mesh

0 0 0 Clients 2.4G 5G Traffic

Unleashed [d4:c1:9e:35:c9:40]

3 Clients Hide Clients Info

Search

★	Mac Address	IP Address	OS	Name
	64:a2:f9:bc:cb:53	192.168.0.13	Android	OnePlus_6T
	f0:03:8c:fb:73:38	192.168.0.11	N/A	
	04:b1:67:47:c4:20	192.168.0.8	Android	MyClient

1-3 of 3 shown

2 WLANs Show WLANs Info

Show Events and Alarms

Click this link to display a list of events and alarms for all APs or for the selected AP.

FIGURE 160 Show/hide Events & Alarms

Maximum 128 APs and 10 AP groups support
1 Access Points connected, 0 Access Points disconnected.

5 Clients [Show Clients Info](#)

Events & Alarms **Hide Events & Alarms**

Events Alarms

Search

Date/Time	Severity	Activities
2019/11/04 09:36:39	High	A new Same-Network Rogue[d4:c1:9e:35:c9:5c] w
2019/11/04 09:36:38	High	A new Same-Network Rogue[d4:c1:9e:35:c9:58] w
2019/11/04 09:31:49	High	A new Same-Network Rogue[44:1e:98:1b:f0:dc] w
2019/11/04 09:31:48	High	A new Same-Network Rogue[44:1e:98:1b:f0:d8] w
2019/11/04 09:30:17	High	A new Same-Network Rogue[f0:b0:52:1c:12:cc] wi
2019/11/04 09:30:16	High	A new Same-Network Rogue[f0:b0:52:1c:12:c8] wi
2019/11/04 09:19:25	High	A new Same-Network Rogue[f0:b0:52:1b:f0:4c] wif


Configuring Global AP Settings

Global AP settings are applied to all members of the Unleashed network, unless overridden by AP group or individual AP settings.

To configure settings for all APs connected to the Unleashed network in the "System Default" AP group:

1. Select the **Summary AP** box, and click the **Edit** button in the **Access Points** component.

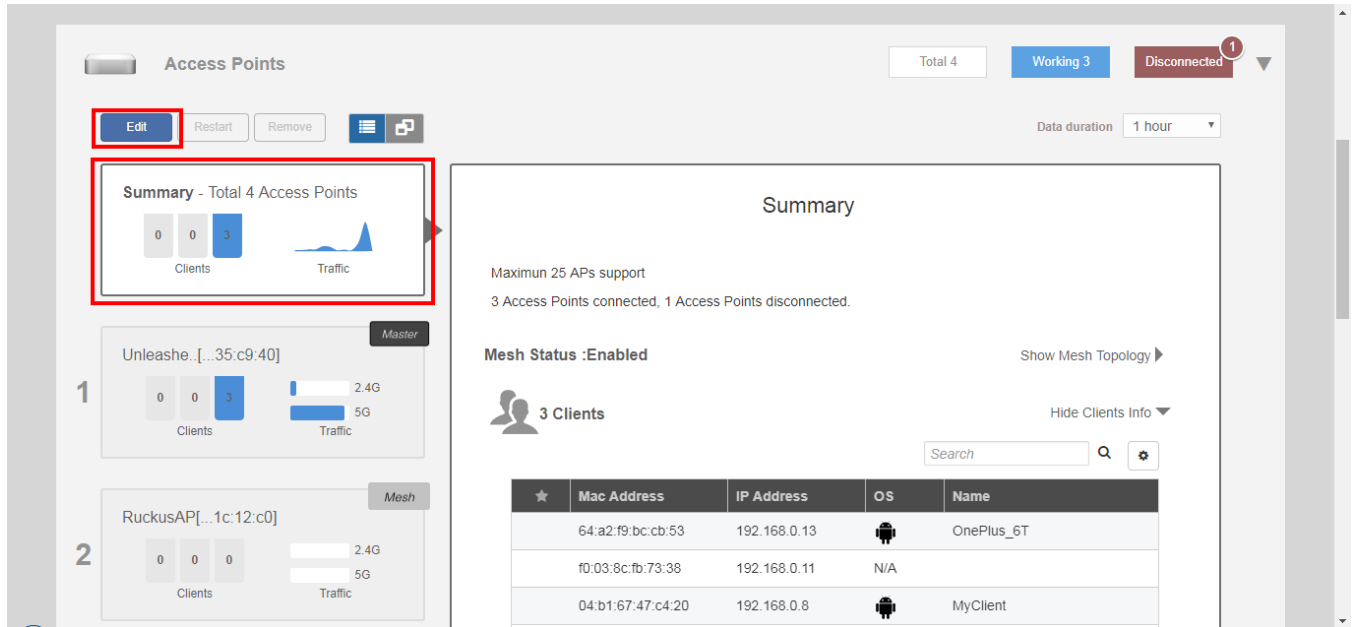FIGURE 161 Click Edit to configure AP global settings




2. Configure the following global AP settings according to your preferences:
 - **Radio (2.4G):** Configure options for the 2.4 GHz radio on all Unleashed APs.
 - **Radio (5G):** Configure options for the 5 GHz radio on all Unleashed APs.
 - **Other:** Configure Model-Specific controls including Max Clients by AP model, and whether to disable status LEDs.
3. Click **OK** to save your changes.

Radio (2.4G)

You can select or clear channels from which to choose during the automatic channel selection process or select a specific channel on which to operate, or enable **Call Admission Control** or **Spectralink Compatibility** for this radio.

Additionally, you can disable WLAN service for this radio entirely.

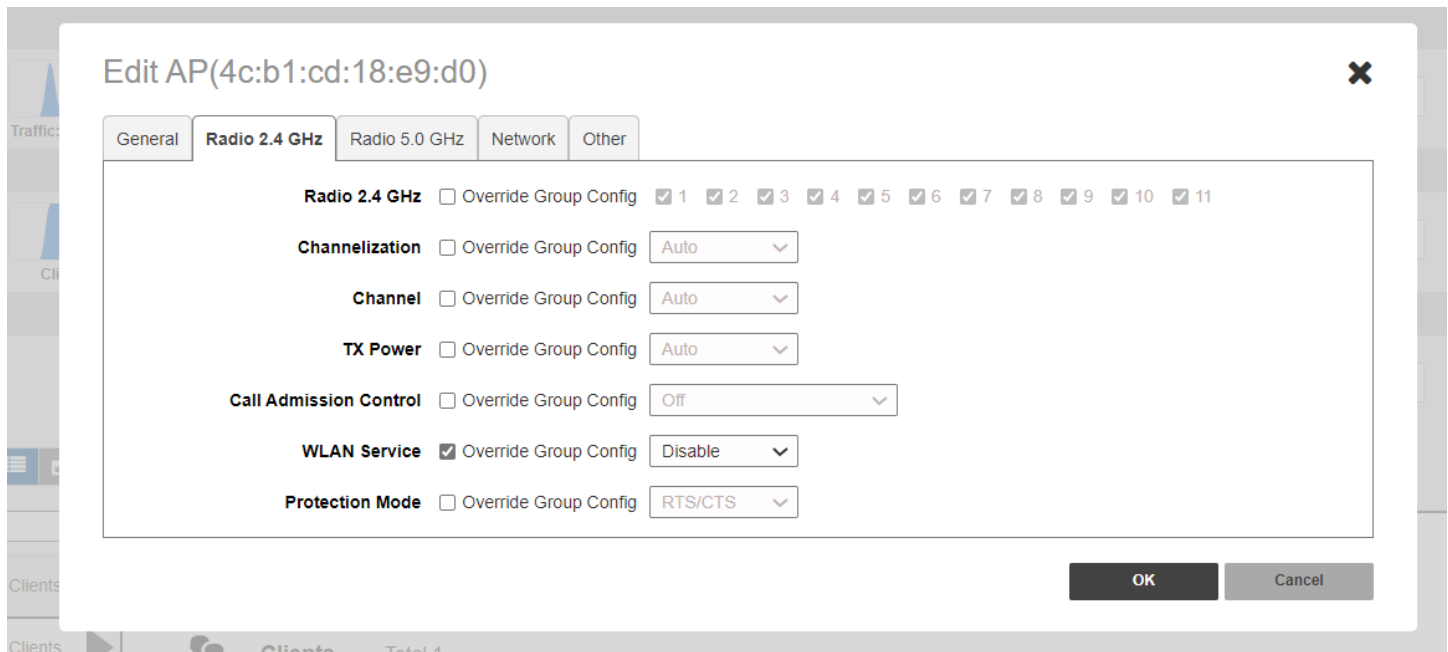FIGURE 162 System Default AP Group: 2.4 GHz Radio Configuration




Radio (5G)

You can select or clear channels from which to choose during the automatic channel selection process or select a specific channel on which to operate, or enable **Call Admission Control** or **Spectralink Compatibility** for this radio.

Additionally, you can disable WLAN service for this radio entirely.

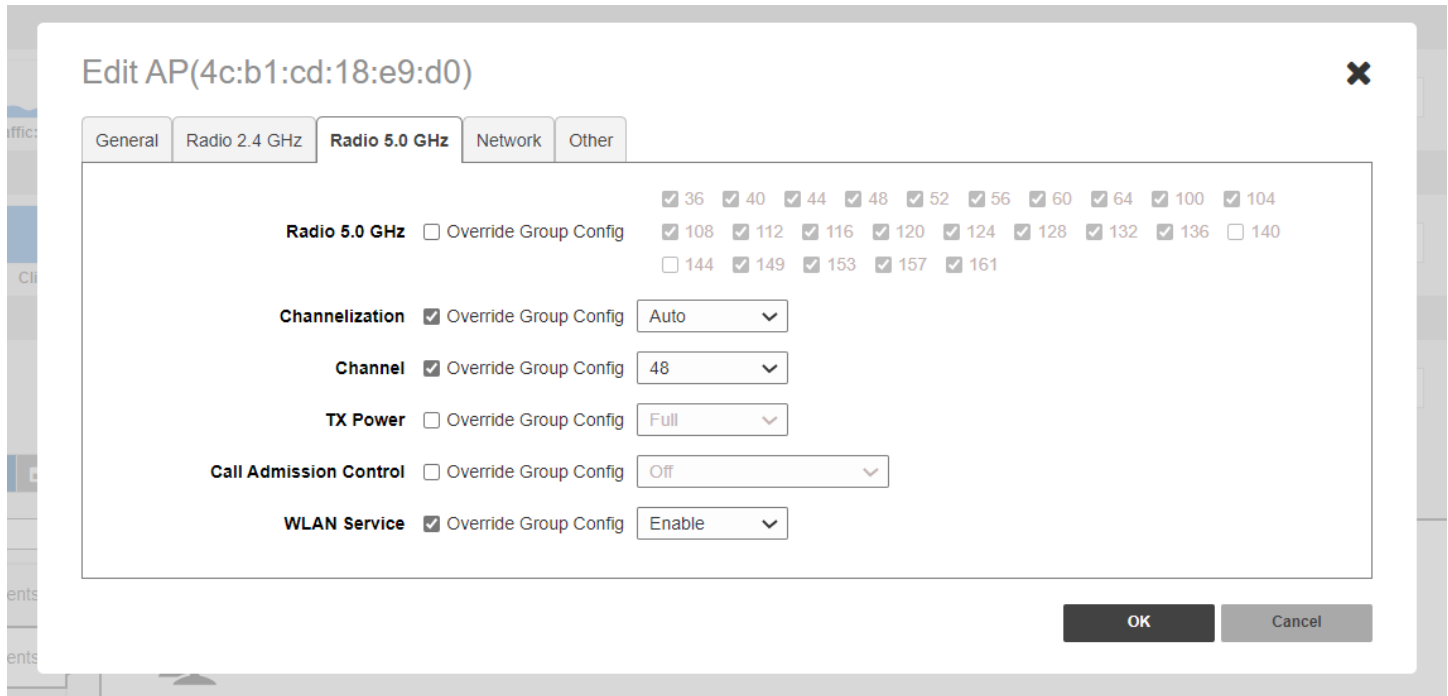FIGURE 163 System Default AP Group: 5 GHz Radio Configuration




Other

The **Access Points > Summary > Edit > Other** page provides the following options:

- **Preferred Master:** Select a specific AP to be the Master AP and, if the preferred Master AP reboots, it will resume the role of Master AP again once it rejoins the Unleashed network. By default, there is no preference as to which AP should become the Master AP; the first AP that is deployed automatically becomes the Master AP. Using the Preferred Master setting, users can configure one AP to have priority. Any (non-mesh) AP can become the Master if the preferred Master is offline, but when the Preferred Master comes back online, it will assume the Master role again.
- **Model Specific Control:** Select which AP model to configure from the drop-down list. The options below can be configured independently for each Unleashed AP model. See [Modifying Model Specific Controls](#) on page 273.

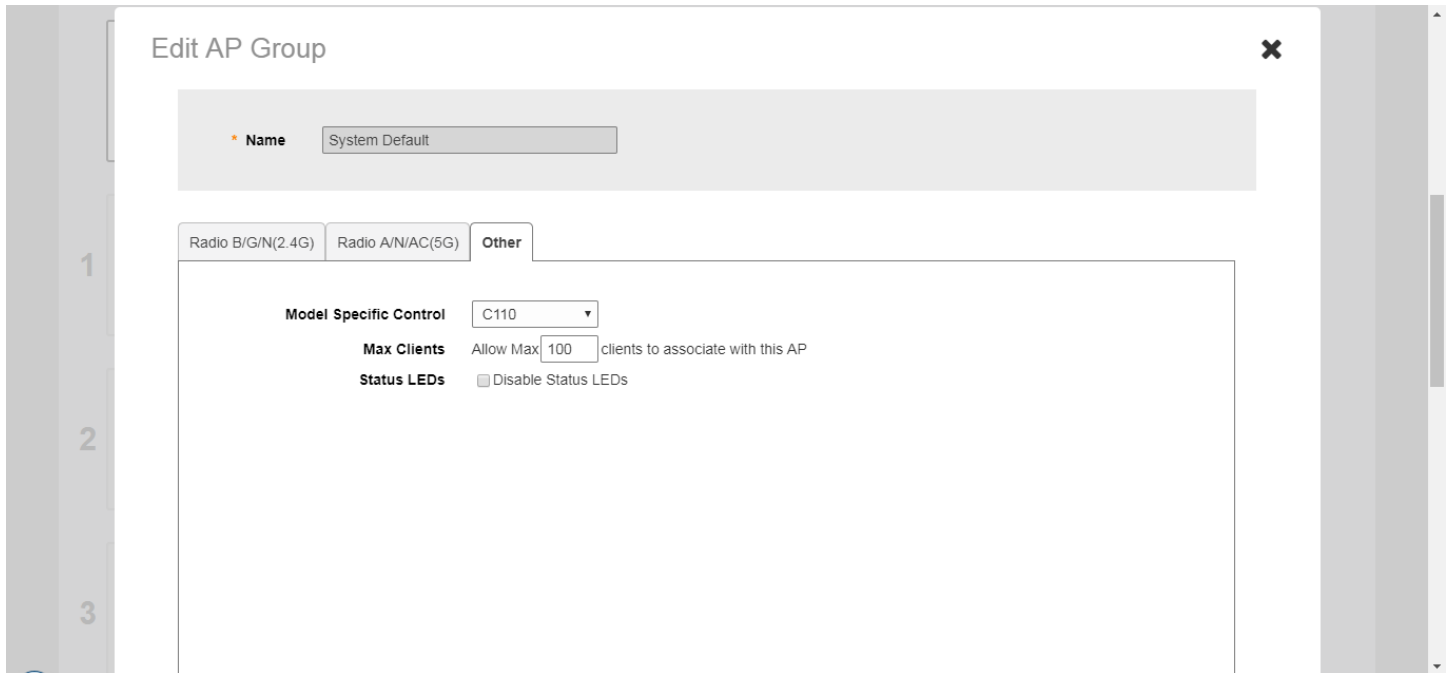FIGURE 164 Configuring other AP settings




Modifying Model Specific Controls

The following settings can be applied to all APs of a particular model that are members of the AP group:

Some options are available for specific AP models only.

To configure model-specific settings for the AP group, select the AP model from the **Model Specific Control** list.

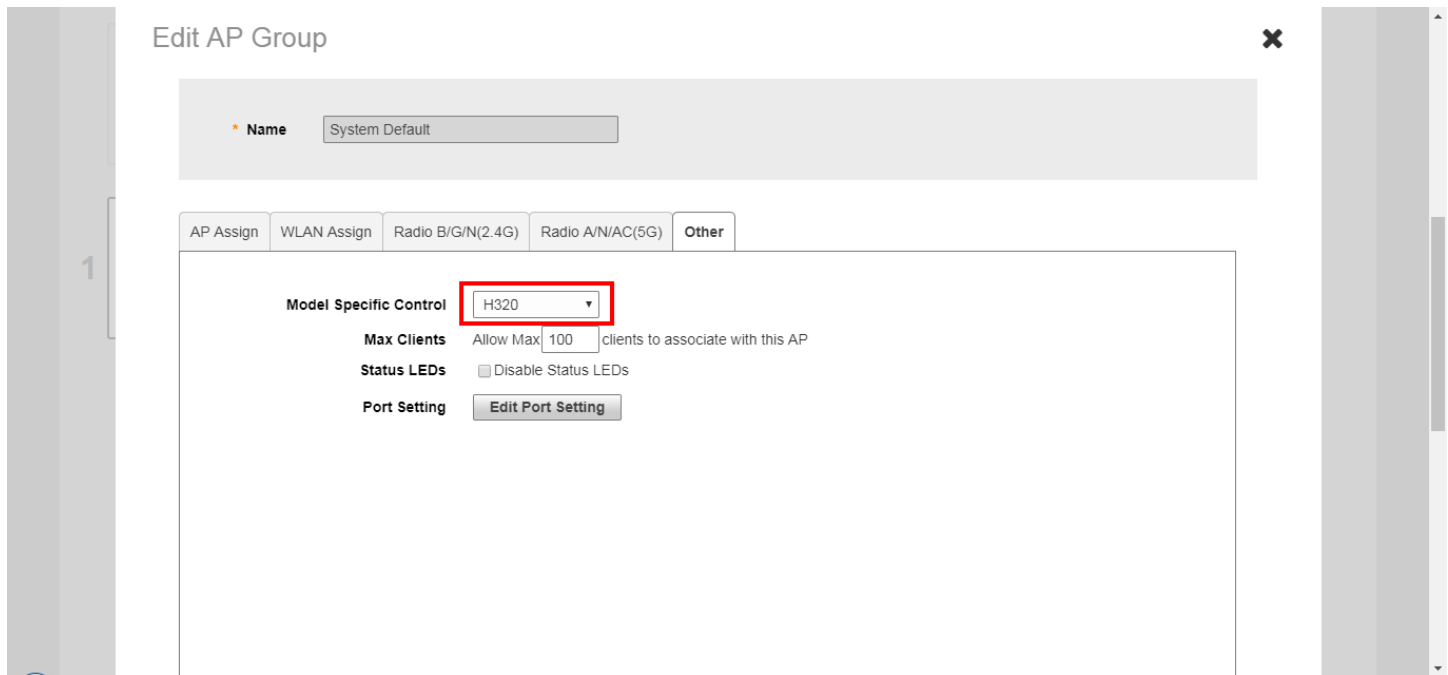FIGURE 165 Model Specific Controls




Configure any of the following settings for each model independently, and click **Finish** to save your changes:

- **Max Clients:** Set the maximum number of clients that can associate per AP. Note that different AP models have different maximum client limitations.
- **PoE Out Ports:** Enable PoE out ports (specific AP models only).
- **Status LEDs:** Disable the external LEDs on certain AP models. This can be useful if your APs are installed in a public location and you don't want to draw attention to them.
- **External Antenna:** On APs with external antenna options, select Enable for the external antenna to be enabled. When enabled, enter a gain value in the range of 0 to 90 dBi. Default is 3 dBi.
- **Port Settings:** Refer to [Configuring AP Ethernet Ports](#) on page 297 for more information on configuring AP-specific Ethernet port settings.
- **PoE Operating Mode:** Select PoE operating mode, Auto, 802.3af or 802.3at PoE (specific AP models only). Default is *Auto*. If 802.3af PoE is selected, the AP will operate in 802.3af mode (not 802.3at mode), and will consume less power than in 802.3at mode. However, when this option is selected, some AP features are disabled to reduce power consumption, such as the USB port and one of the Ethernet ports.

NOTE

On some APs, an additional mode - 802.3at+ PoE - is available. This mode enables all features on the AP but requires an Ethernet switch that supports the 802.3at+ standard due to the higher power draw from the port to which the AP is connected. For a list of PoE operating modes by AP model, refer to [Unleashed Access Point Power Supply Considerations](#) on page 467.

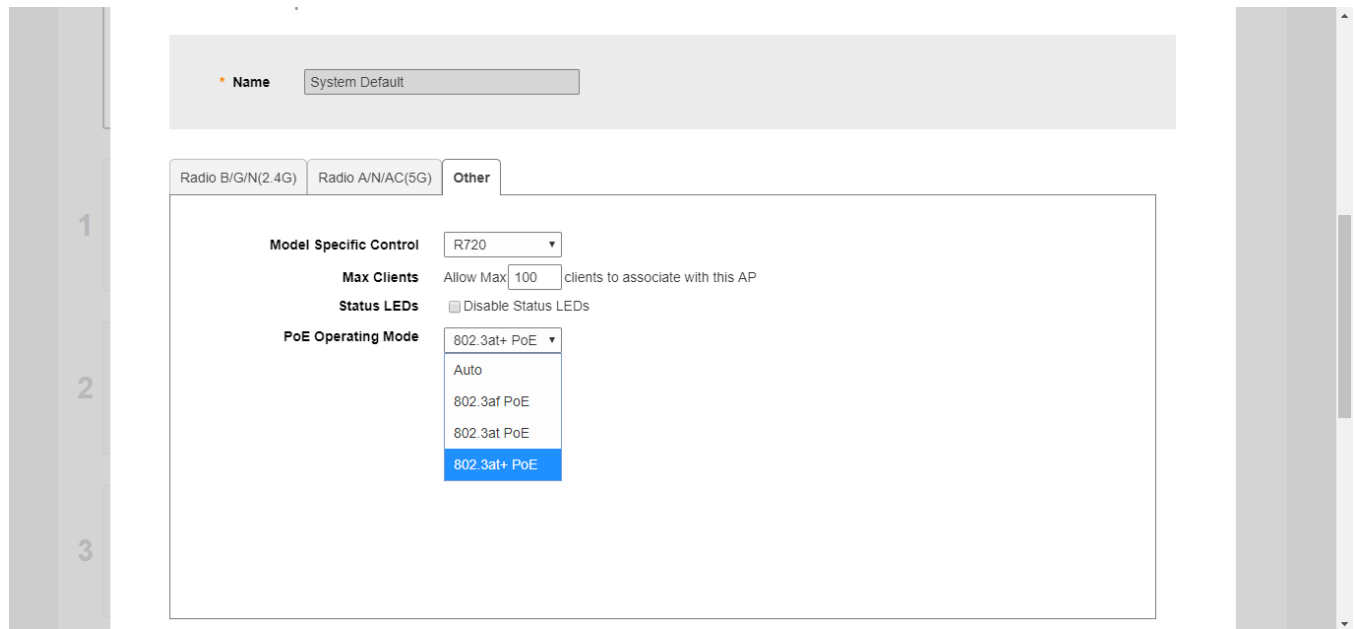FIGURE 166 PoE Operating Mode



Disabling Access Point LEDs


In some situations, customers may wish to disable the LED lights on the access points to avoid drawing attention to them, when installed in a public location, for example.

To disable status LEDs on all APs of a specific model:

1. Go to **Access Points > Summary > Edit > Other**.
2. Select the AP model from the list and enable the option **Disable Status LEDs**. The setting must be configured for each AP model individually.

3. Click **Finish** to save your changes.

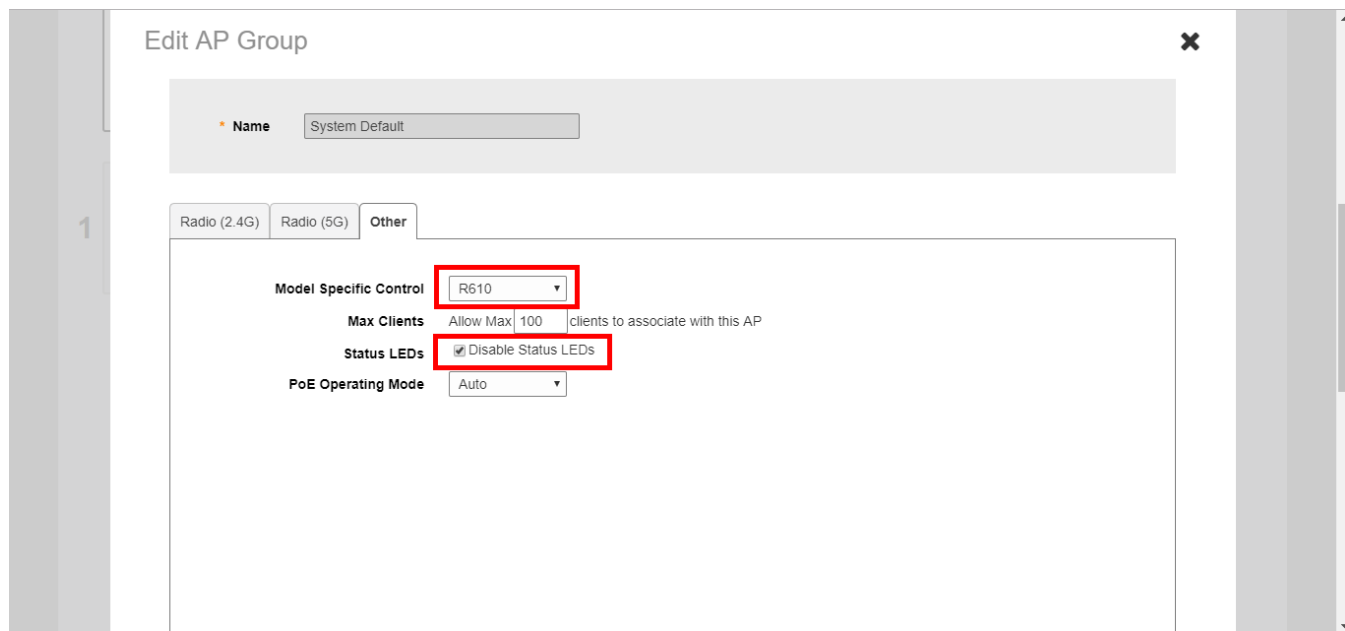FIGURE 167 Select model and enable the option "Disable Status LEDs"




Monitoring an Individual AP

Click one of the AP boxes in the Access Points component to monitor and configure that specific AP individually.

You can edit, restart, or remove an AP from the network from the individual AP monitoring page. The individual AP monitoring page also includes graphs displaying signal quality and traffic statistics, and links to more detailed information on the AP and its connected clients.

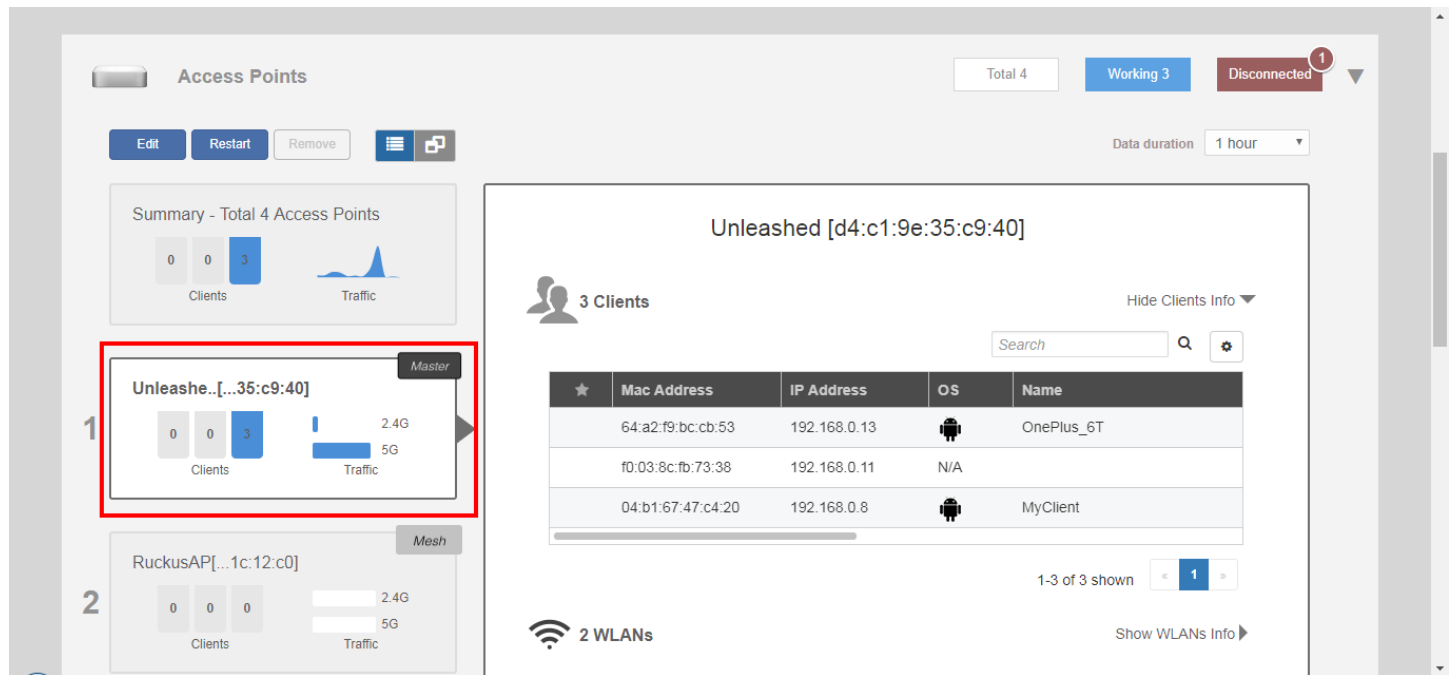FIGURE 168 Viewing Individual APs




The individual AP monitoring screen contains the following elements:

- **Edit:** Click this button to configure an AP individually.
- **Restart:** Click this button to restart the AP.
- **Approve:** If auto-approval is disabled, click this button to approve the AP and allow it to join the network.
- **Remove:** Click this button to remove this AP from the network.
- **Show Clients Info:** Click this link to display a list of clients currently connected to the AP. Details for each client include MAC address, IP address, OS, Host Name, MAC address of the AP to which the client is currently connected, WLAN name, Signal Strength Indicator, Auth status, and duration online.
- **Show AP Info:** Click this link to display AP-specific information including MAC address, IP address, external IP and port number, model name, serial number, and firmware version.
- **Client Status:** Displays a breakdown of client numbers by signal quality (Excellent, Moderate, or Poor) over time, in one-minute intervals.
- **Traffic:** Displays the total traffic (Tx + Rx) on the AP radio in one-minute intervals.

Show Client Info

Click the **Show Client Info** link to display a list of clients connected to this AP.

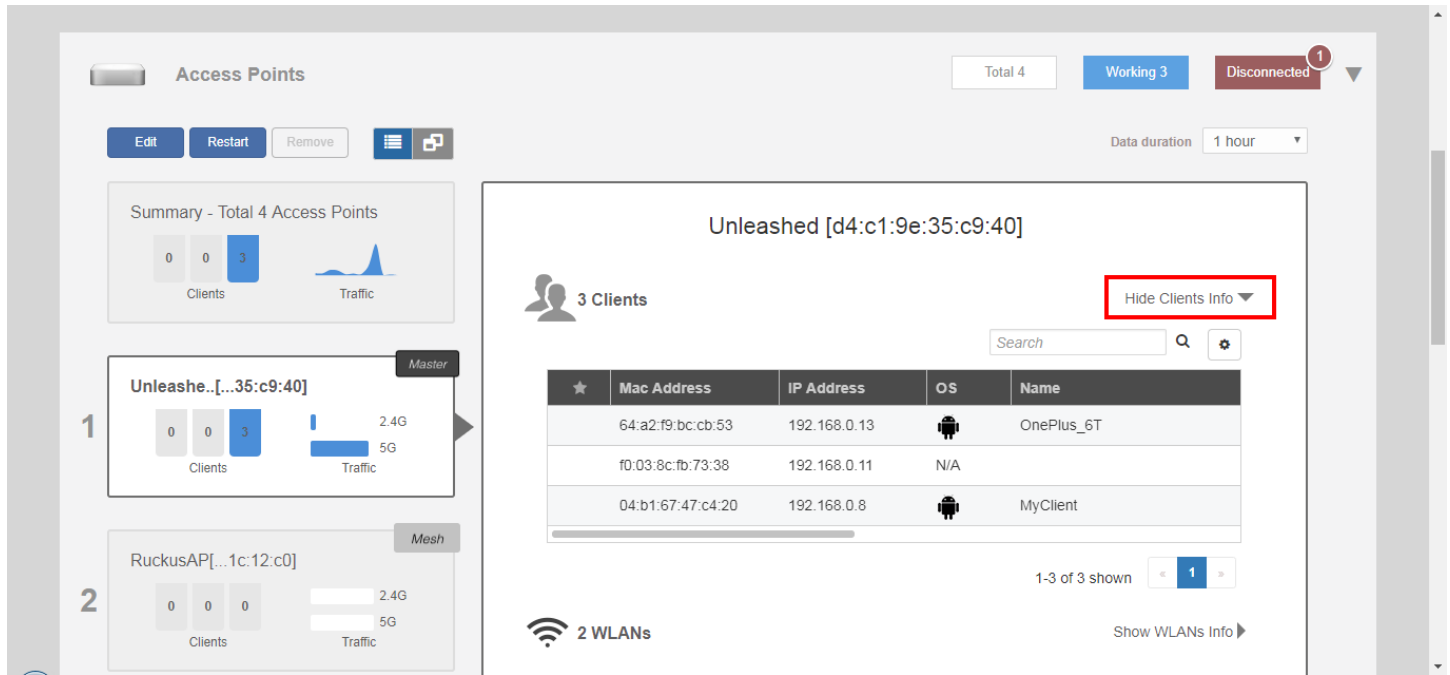
FIGURE 169 Show Client Info from AP page



Show WLANs Info

Click **Show WLANs Info** to display the list of WLANs that are currently deployed on this AP. The list displays the WLAN name (ESSID), BSSID (MAC address), radio, and state (up or down).

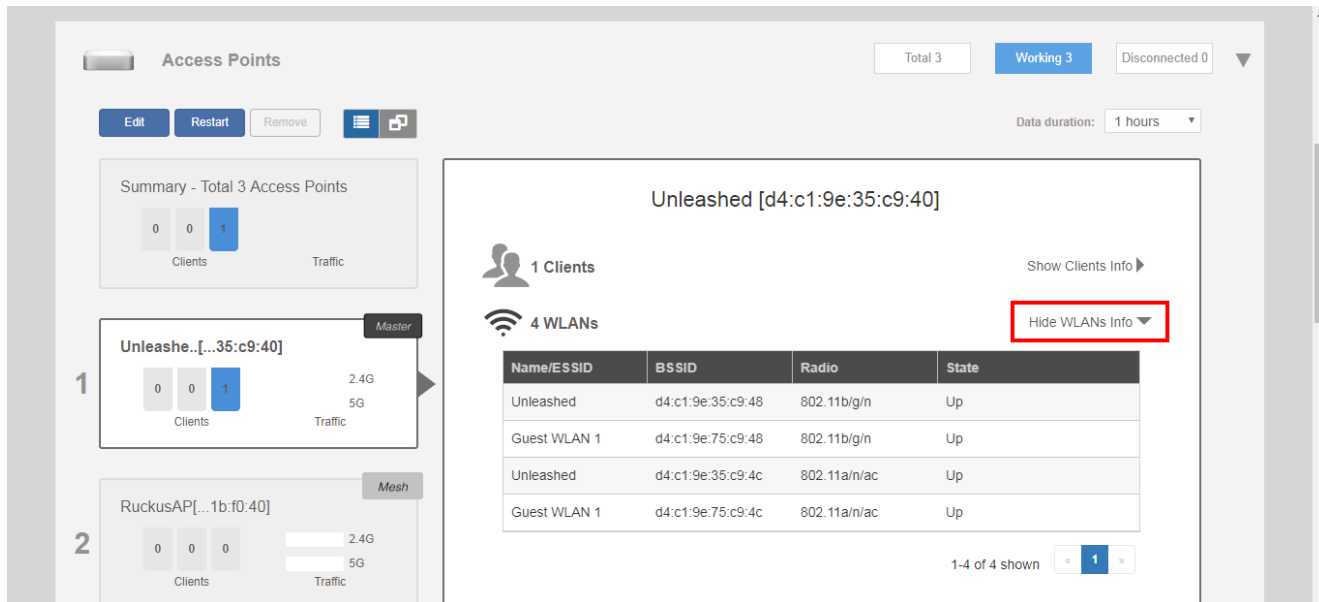FIGURE 170 Showing WLAN Information for an Individual AP



Show AP Info

Click **Show AP Info** to display detailed information on this AP. The AP info page displays general information about the AP, including the radio channels in use, Mesh type, maximum number of clients, and firmware version. The **Save Logs** and **Speed Test** buttons are also available.

Click **Save Logs** to generate a log file (.txt) that can be useful for troubleshooting. Click **Speed Test** to measure the connection performance of the AP.


NOTE

Speed Test option is displayed for member APs only.

NOTE

The maximum number of clients (**Max Clients**) displayed for the Master AP may be lower than the configured maximum because the Master must perform additional tasks other than serving clients. The Master AP maximum client load varies by AP model. These limits apply only to the current Master AP. All other member APs honor the maximum number of clients set from the global AP model-specific controls page (**Access Points > Summary > Edit > Others > Max Clients**).

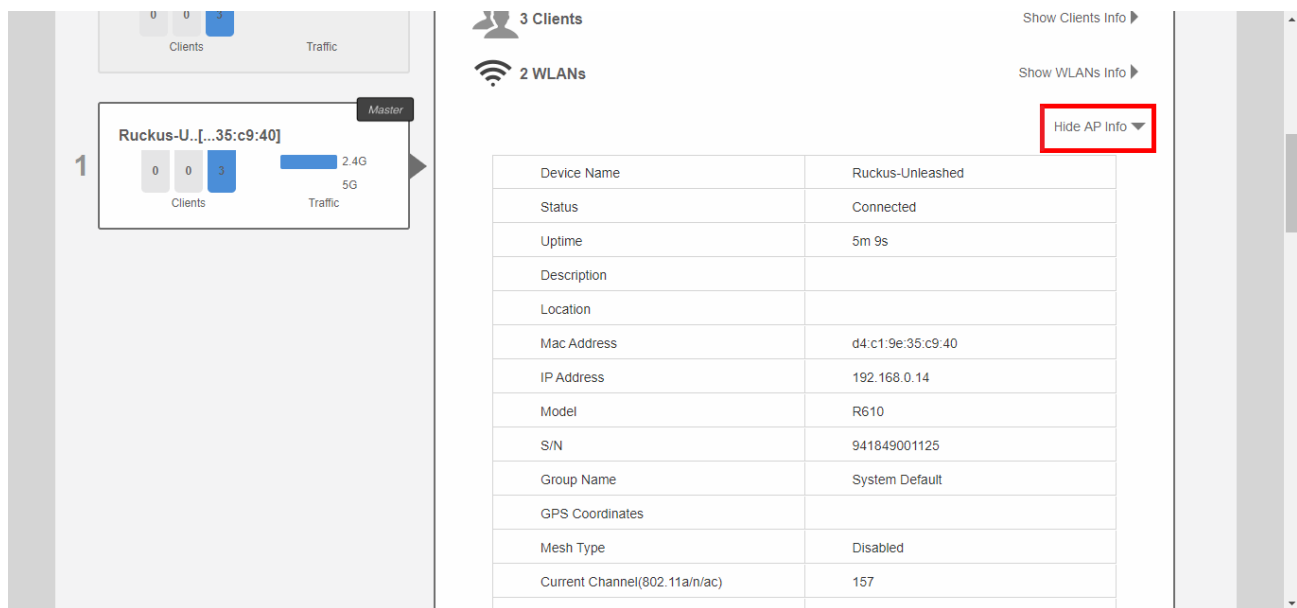FIGURE 171 Showing AP Information for an Individual AP





For **Download Logs**, you can click **Support Logs** to save AP support log as a .txt file, and click **AP Dump Logs** to save the AP dump log as a .tar file on your computer.

NOTE

AP Dump Logs and Download buttons are displayed only when an AP reboots unexpectedly.

FIGURE 172 Download Logs

GPS Coordinates	
Mesh Type	Disabled
Current Channel(802.11a/n/ac/ax)	161
Current Channel(802.11b/g/n/ax)	11
LACP/LAG	Disabled
Power Consumption Mode	802.3af Switch/Injector
Max Clients	100
Version	200.10.10.5.88
Fixed Member Role	no
Download Logs	Support Logs  AP dump Logs 

Ethernet Port Status ⓘ

Port	Interface	Logic Link	Physical Link	Label
Port1	eth0	Down	Down	10/100/1000 Port1
Port2	eth1	Up	Up 1000Mbps full	100/1000/2500 PoE Port2

The table under **Ethernet Port Status** displays the current link status of the Ethernet ports on the AP. Hover over the "i" icon to display an illustration of the physical port locations on the AP.

FIGURE 173 Ethernet Port Status

Ethernet Port Status ⓘ

Port	Interface	Logic Link	Physical Link	Label
Port1	eth0	Down	Down	10/100/1000 Port1
Port2	eth1	Up	Up 1000Mbps full	100/1000/2500 PoE Port2

Packet Capture

Use this feature to capture wireless packets during normal operation and save them in local files or stream them to Wireshark.

Radio 2.4GHz 5GHz

Local Mode (Capture a limited snapshot on each AP, then Stop and Save to file)

Filter: (Packets to/from one IP or MAC address)

Streaming Mode(Use Wireshark's Remote Capture Option to connect to wifi0 or wifi1)

[Start](#) [Save](#)

Neighbor APs

Access Point	Channel	SNR
No data available.		

The *Packet Capture* section displays radio channels and capture modes. For more information, refer to [Capturing Remote Packets](#) on page 449.

FIGURE 174 Packet Capture

Ethernet Port Status

Port	Interface	Logic Link	Physical Link	Label
Port1	eth0	Down	Down	10/100/1000 Port1
Port2	eth1	Up	Up 1000Mbps full	100/1000/2500 PoE Port2

Packet Capture

Use this feature to capture wireless packets during normal operation and save them in local files or stream them to Wireshark.

Radio 2.4GHz 5GHz

Local Mode (Capture a limited snapshot on each AP, then Stop and Save to file)

Filter: (Packets to/from one IP or MAC address)

Streaming Mode(Use Wireshark's Remote Capture Option to connect to wifi0 or wifi1)

Neighbor APs

Access Point	Channel	SNR
No data available.		

The *Neighbor APs* section displays channel, path score, and SNR of nearby APs.

FIGURE 175 Neighbor APs

Neighbor APs

Access Point	Channel	SNR	Path Score (status)
4c:b1:cd:18:e8:60	149	51 dB	666
d8:38:fc:33:ae:f0	44	65 dB	669

The *Radio information* section provides channel and transmission details on the AP's 2.4 GHz and 5 GHz radios.

FIGURE 176 Radio information

Radio	802.11b/g/n	802.11a/n/ac
Current Channel	6	157
Config Channel	Auto	Auto
Channelization	20	80
WLAN Service	Enabled	Enabled
Background Scanning	Enabled	Enabled
TX Power	Full	Full
# of Authorized Client Devices	3	0
% Retries/% Drops	0.0140/0.00	0.00/0.00
% Non-unicast	0.383	0.00
Packets/Bytes RX	5.9K/491K	0/0
Packets/Bytes TX	14K/17M	1.4K/323K
Wlans Data Packets/Bytes RX	1.7K/351K	0/0
Wlans Data Packets/Bytes TX	2.7K/2.5M	0/0
Noise Floor	-97	-104
PHY Errors	2	0
% AirTime (total/busy/RX/TX)	5.0/0.0/4.5/0.5	4.0/0.5/3.5/0.0
Available Channel	1,2,3,4,5,6,7,8,9,10,11	36,40,44,48,149,153,157,161
Block Channel		165

Show Events and Alarms

Click **Show Events and Alarms** to view lists of event and alarm messages for this AP.

FIGURE 177 Show AP-specific Events & Alarms


The screenshot shows the 'Events & Alarms' section of the interface. At the top right, there is a button labeled 'Hide Events & Alarms' with a dropdown arrow, which is highlighted with a red box. Below this, there are tabs for 'Events' and 'Alarms'. A search bar is present above a table of events. The table has three columns: 'Date/Time', 'Severity', and 'Activities'. The activities listed are 'A new Same-Network Rogue' followed by MAC addresses and wireless interface identifiers. At the bottom right, there is a pagination control showing '1-10 of 14 shown' and page numbers '1' and '2'.

Date/Time	Severity	Activities
2020/03/17 10:56:05	High	A new Same-Network Rogue[f0:b0:52:1b:f0:48] wi
2020/03/17 10:56:04	High	A new Same-Network Rogue[f0:b0:52:1b:f0:4c] wi
2020/03/17 10:50:37	High	A new Same-Network Rogue[44:1e:98:1b:f0:dc] w
2020/03/17 10:50:36	High	A new Same-Network Rogue[44:1e:98:1b:f0:d8] w
2020/03/17 10:49:34	High	A new Same-Network Rogue[f0:b0:52:1c:12:c8] wi
2020/03/17 10:49:33	High	A new Same-Network Rogue[f0:b0:52:1c:12:cc] wi
2020/03/17 10:38:49	High	A new Same-Network Rogue[b4:79:c8:14:26:48] w
2020/03/17 10:38:48	High	A new Same-Network Rogue[b4:79:c8:14:26:4c] w
2020/03/17 10:35:48	High	A new Same-Network Rogue[d4:c1:9e:35:c9:58] w
2020/03/17 10:35:47	High	A new Same-Network Rogue[d4:c1:9e:35:c9:5c] w

Client Status and Traffic Graphs

The Client Status and Traffic graphs provide a graphical display of the number and signal quality of connected clients and transmit/receive traffic over the last hour.

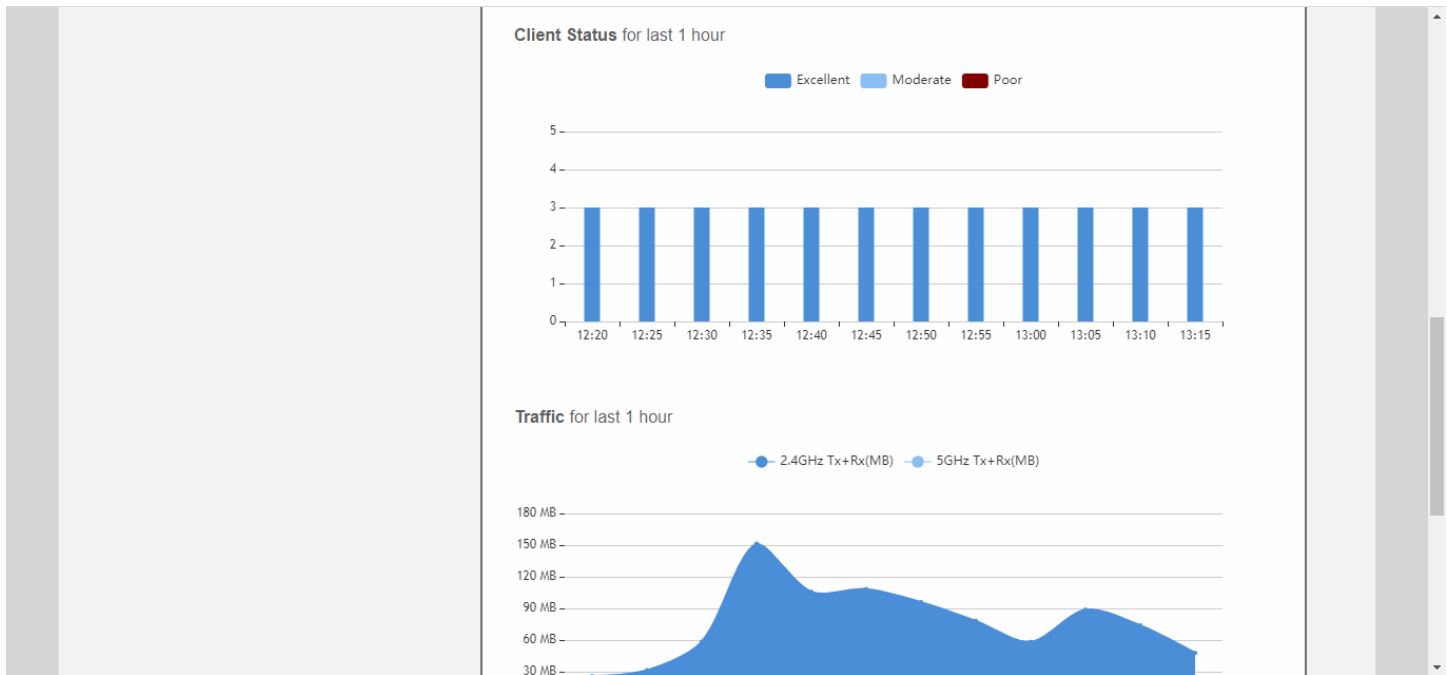FIGURE 178 Client status and traffic graphs



Configuring an Individual AP

To configure a specific AP, from the dashboard, **Access Points**, click the AP you want to configure, and click **Edit**.

FIGURE 179 Configuring an AP


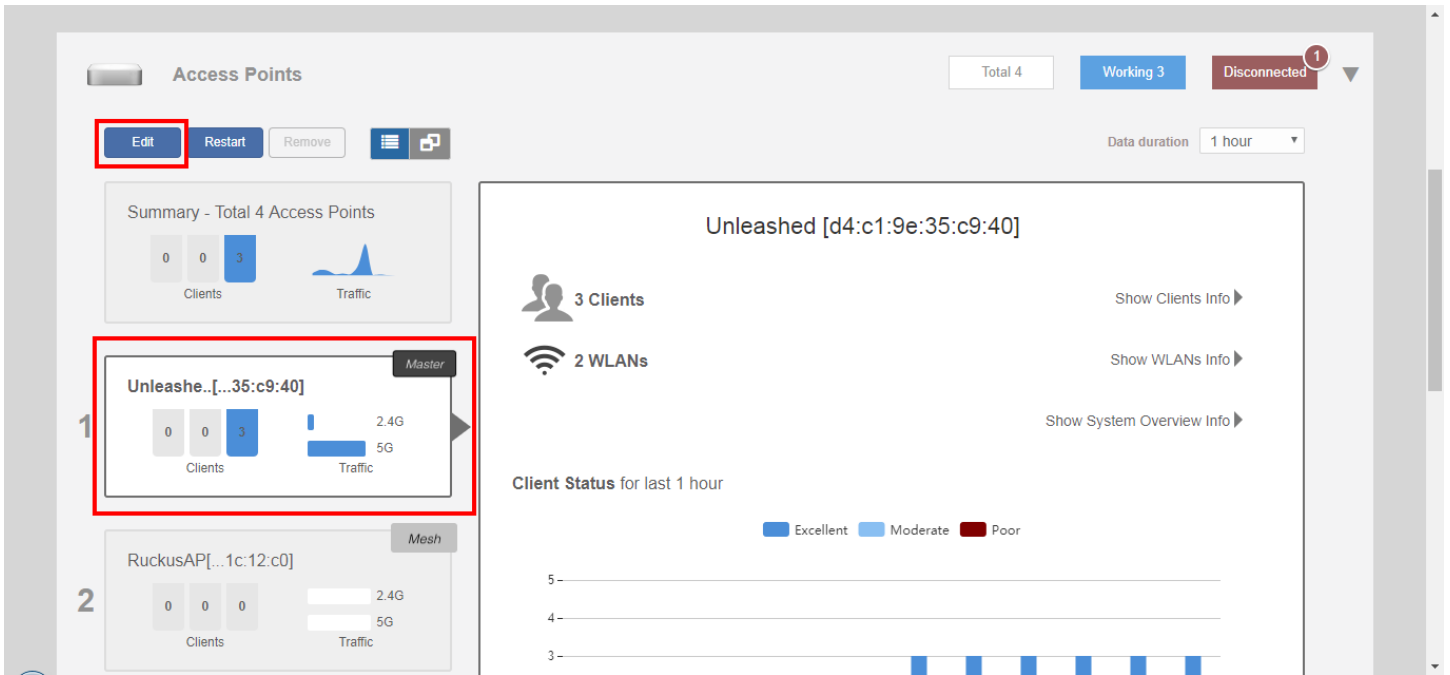


FIGURE 180 Editing an AP's Configuration Settings

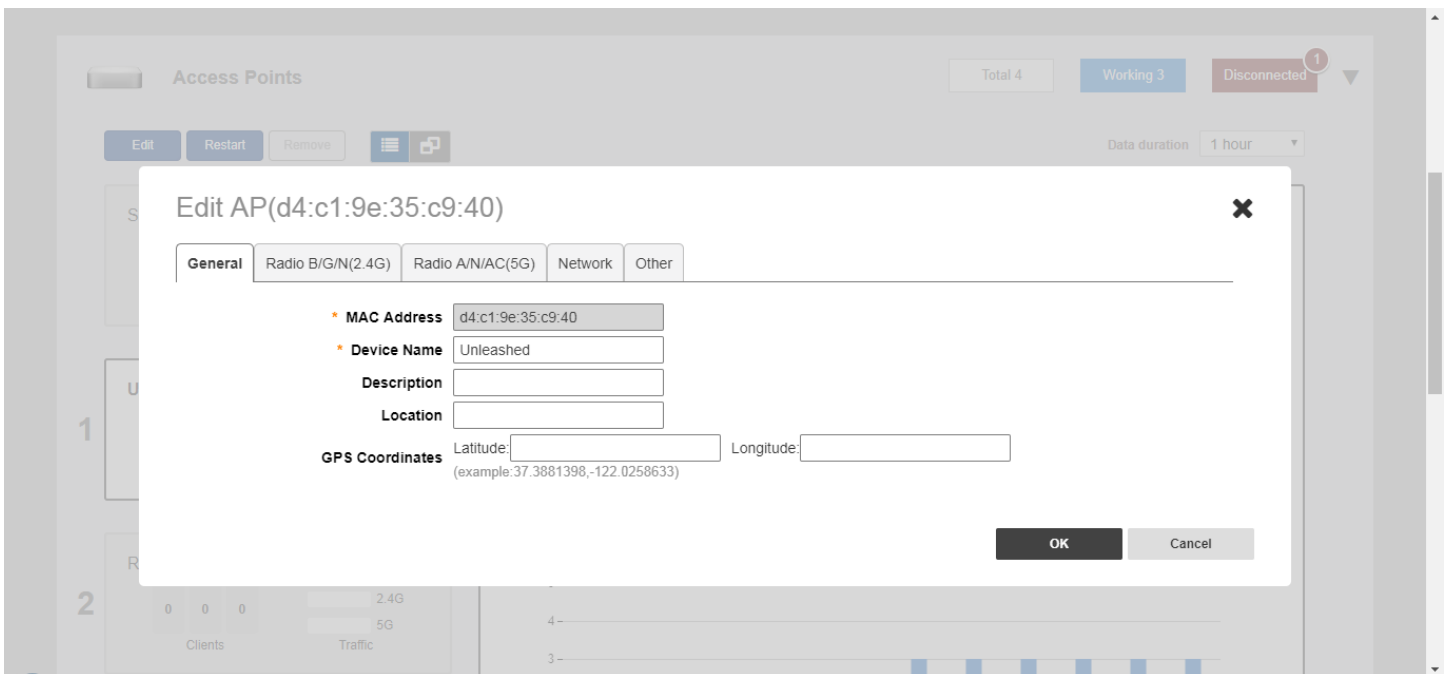

In general, the settings available on the **Edit AP** page for an individual AP are the same as those for global AP settings (refer to [Configuring Global AP Settings](#) on page 270). Configuring these settings for an individual AP overrides the global AP settings.

However, some settings are only configurable on a per-AP basis, as follows:

- **General:** Configure the device name of the AP, the description, location, and GPS coordinates.
- **Radio B/G/N (2.4G):** Enable or disable WLAN service for this radio.
- **Radio A/N/AC (5G):** Enable or disable WLAN service for this radio.

NOTE

For country code "US", 11ax and 11ac APs support channel 144. For country code "JP", only 11ax APs support channel 144.

- **Network:** Configure a manual (static) IP address, or allow the AP to obtain an IP address using DHCP.

NOTE

You cannot configure the IP address settings for the current Master AP from the **Network** tab. You must go to **Admin & Services > System > IP Settings** to change the IP settings of the Master AP.

- **Other:** Designate this AP to serve as a Bonjour Gateway AP (refer to [Bonjour Gateway](#) on page 395), enable or disable the status LEDs of the AP, or override the PoE operating mode settings of the AP group, and configure a specific PoE power mode for this AP.

FIGURE 181 Configuring an AP with a Static IP Address from the AP's Edit > Network tab


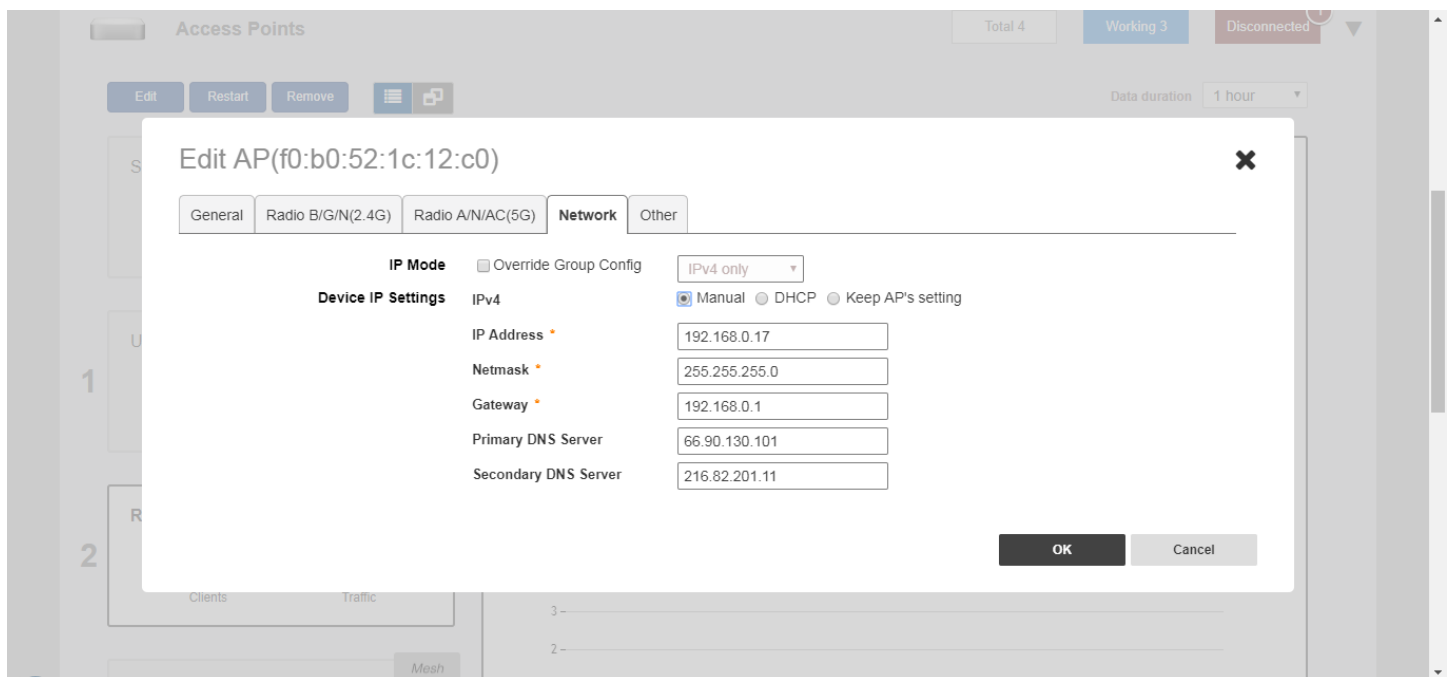


FIGURE 182 Other AP Settings

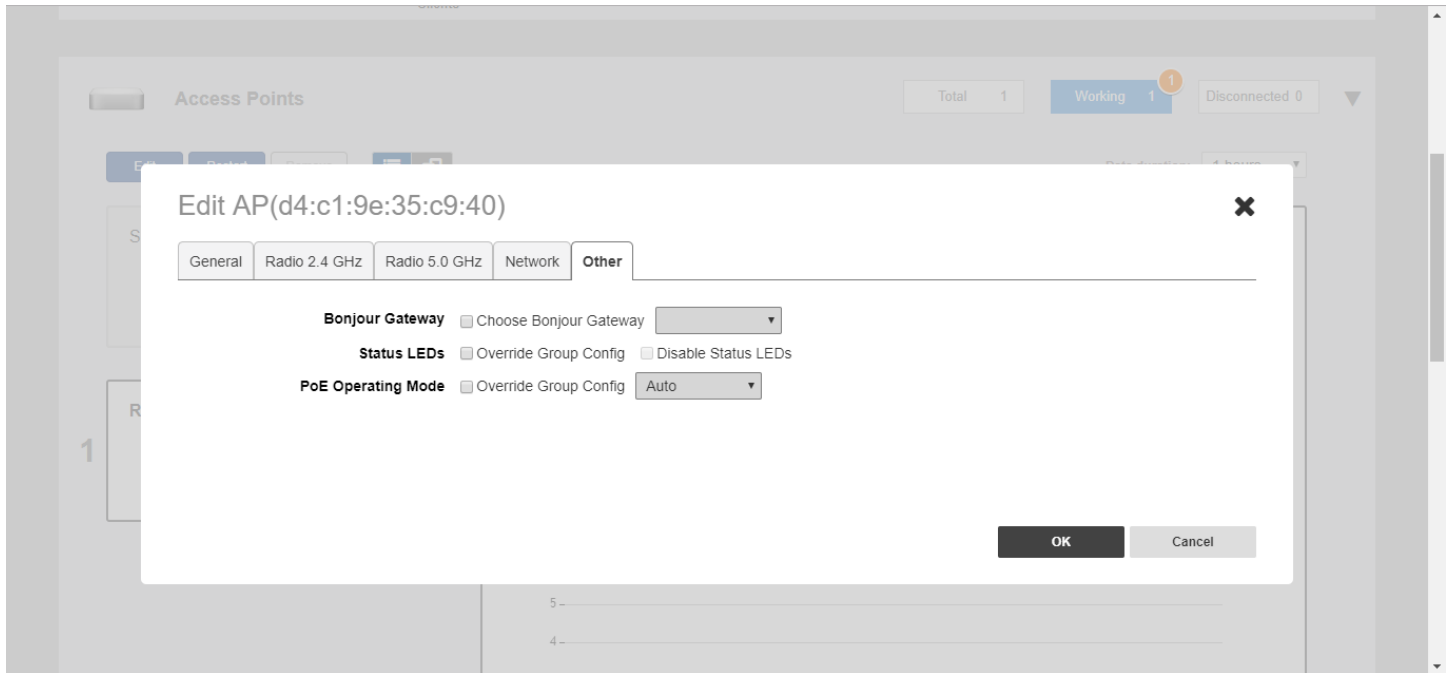


Renaming an AP

Renaming an AP allows the AP to be more easily identifiable in Unleashed dashboard components, tables, charts and graphs and other user interface elements.

To rename an AP, replace the **Device Name** field on the *Edit AP* form with a recognizable name for the AP.

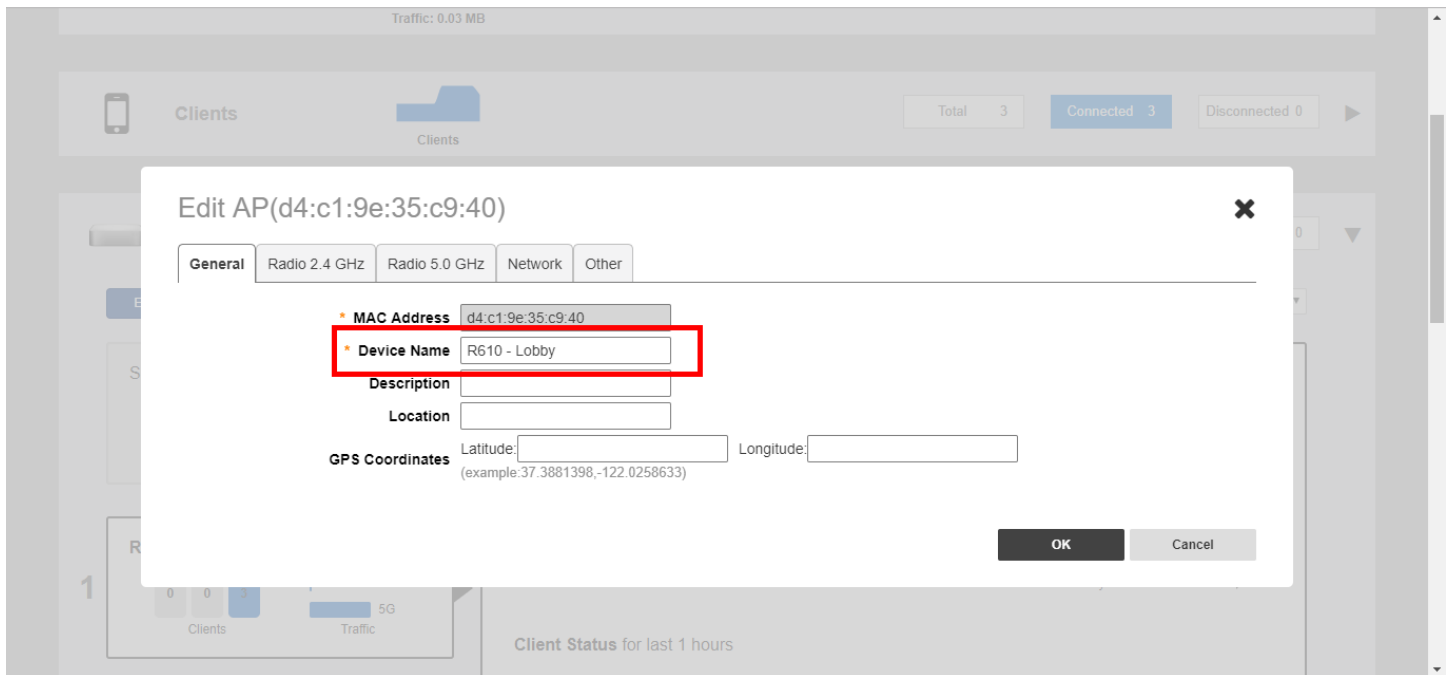FIGURE 183 Renaming an AP



Working with AP Groups


Access Point Groups can be used to define configuration options and apply them to groups of APs at once, without having to modify each AP's settings individually.

For each group, administrators can create a configuration profile that defines the channels, radio settings, Ethernet ports and other configurable fields for all members of the group, or for all APs of a specific model in the group. By default, all AP's are members of the "System Default" AP group.

AP group configuration settings can be overridden by individual AP settings. For example, if you want to set the transmit power to a lower setting for only a few specific APs, leave the Tx Power Adjustment at *Auto* in the System Default AP Group, then go to the individual AP configuration page, and set the Tx Power setting to a lower setting.

AP group settings can be viewed and configured when the view mode on the *Access Points* screen is set to "AP Group."

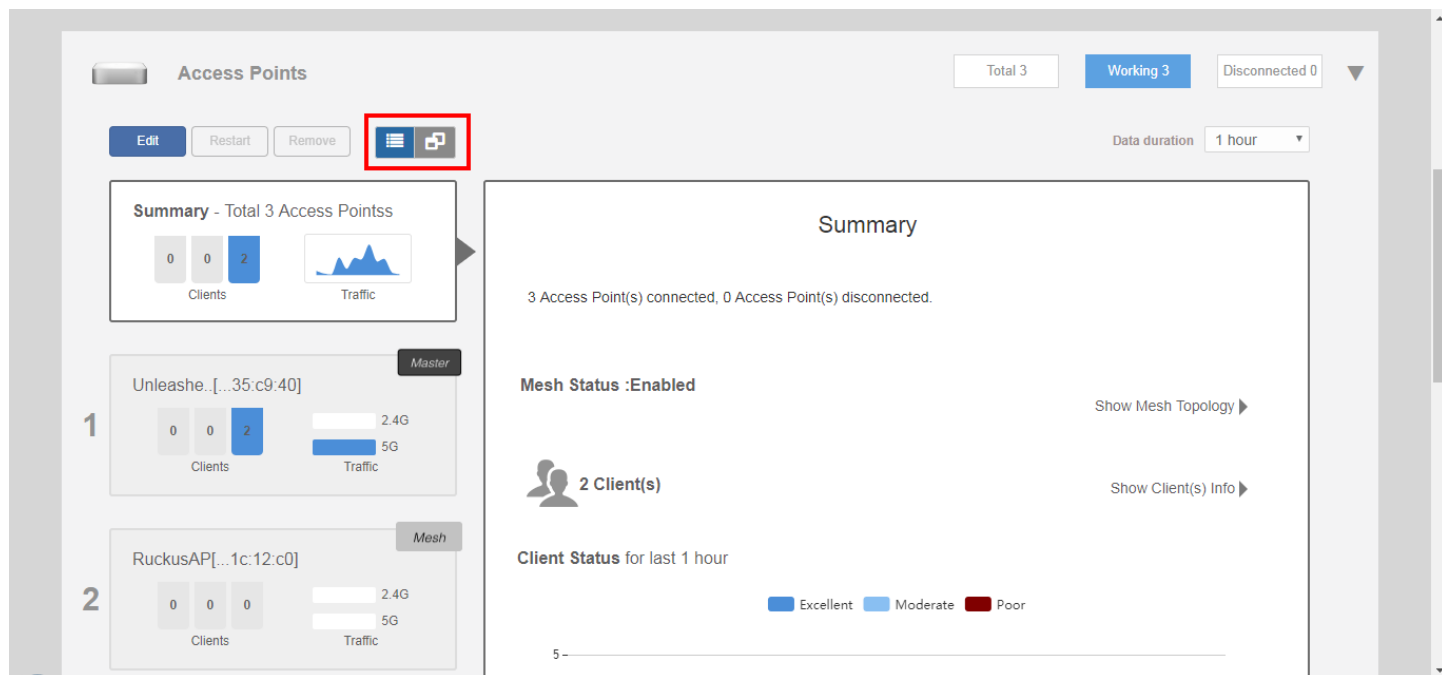FIGURE 184 Set View Mode to AP Group



Viewing AP Group Members

Select an AP group to view details on all APs that are members of the AP group.

To view AP group membership:


1. Go to **Access Points** and click the **Group View** button.

2. View details on each member of the AP group, including its MAC address, IP address, Device Name, Model number, Status, Mesh Mode, Channel, and Serial Number. From the AP table, you can view the AP detail page of each AP.

NOTE

By default, only AP group view is displayed if there are more than 25 APs in the network.

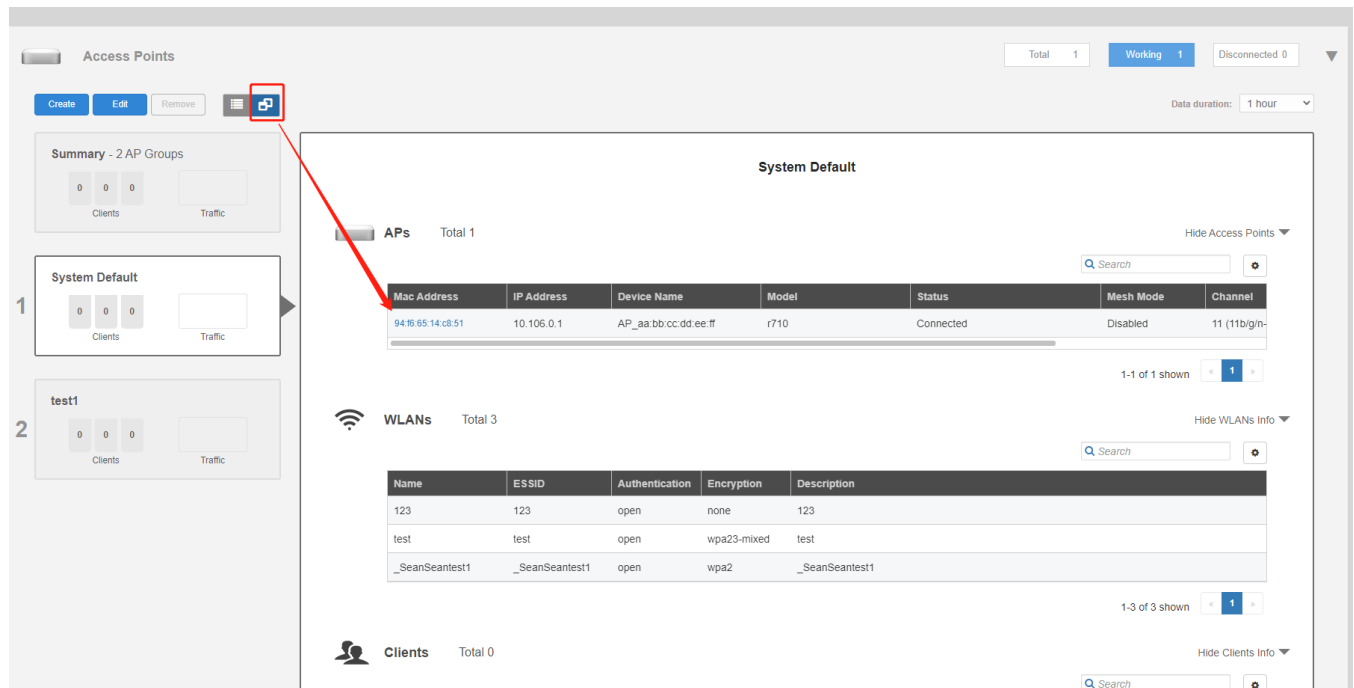FIGURE 185 Viewing Members of an AP Group



Modifying the System Default AP Group


If you want to configure global settings for default behavior for all access points, modify the System Default AP group and apply settings to all APs at once.

To modify the System Default Access Point group and apply global configuration:

1. Go to **Access Points**.

2. Select the **Access Point Groups** view, select the **System Default** access point group, and click the **Edit** button.

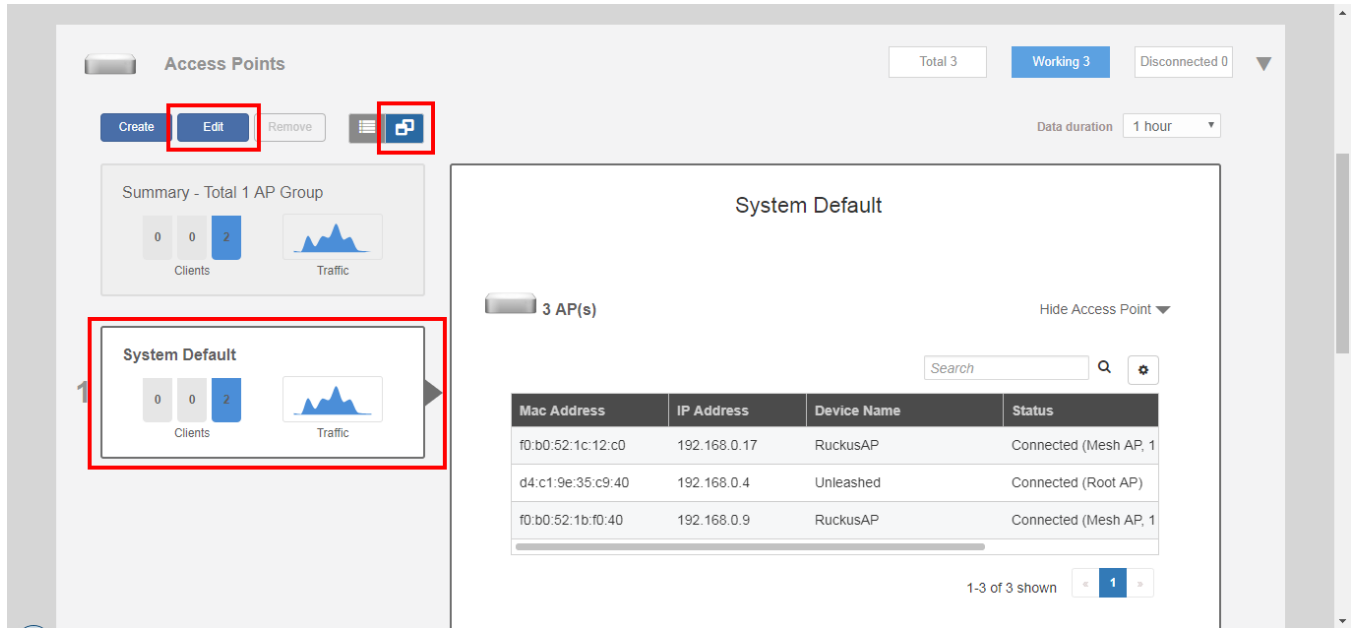FIGURE 186 Clicking Edit to Configure the AP Group



The *Edit AP Group* form appears.

3. Assign APs to or from this AP group using the left and right arrows on the *AP Assign* tab.
4. Assign WLANs to or from this AP group using the left and right arrows on the *WLAN Assign* tab.

5. On the *Radio B/G/N (2.4G)* and *Radio A/N/AC (5G)* tabs, modify any of the following settings that you want to apply to the System Default AP group.

- **Channel Range:** To limit the available channels for 2.4 GHz, 5 GHz Indoor and 5 GHz Outdoor channel selection, deselect any channels that you do not want the APs to use.

NOTE

For country codes "US" and "JP", channel 144 is supported if DFS channel is enabled.

- **Channelization:** Select Auto, 20MHz or 40MHz channel width for the 2.4 GHz radio, or Auto, 20, 40, or 80 MHz channel width for the 5 GHz radio.
- **Channel:** Select Auto or manually assign a channel for the 2.4 GHz or 5 GHz radio.
- **TX Power:** Allows you to manually set the transmit power on all 2.4 GHz or 5 GHz radios (default is Auto).

Max = max allowable Tx power according to country regulations

Min = 0dBm per chain for 11n APs, 2dBm per chain for 11ac APs


- **Call Admission Control:** (Disabled by default). Enable Wi-Fi Multimedia Admission Control (WMM-AC) to support Polycom/Spectralink VIEW certification.
- **WLAN Service:** This option allows users to disable WLAN service on the 2.4 or 5 GHz radios on all APs in the AP group.
- **Protection Mode:** If you activate Protection Mode, you control how 802.11 devices know when they should communicate with another device. The use of RTS/CTS (Request to Send/Clear to Send) reduces collisions and increases the performance of the network if hidden stations are present. However, RTS/CTS (and CTS-only) introduce overhead and may in fact reduce overall performance in some situations. Through the proper use of RTS/CTS and CTS-only, you can fine-tune the operation of your wireless LAN depending on the physical operating environment.
 - **CTS-only:** Choose this option to force all destination devices to acknowledge their ability to receive data when a transmission is initiated. Use this option for compliance with the Wi-Fi Alliance certification.
 - **RTS/CTS:** Choose this option to force both sending and receiving devices to confirm a data exchange on both ends before proceeding.
 - **None:** Choose this option to disable both RTS and CTS acknowledgment.

6. On the *Other* tab, modify settings for all APs of a specific model in the System Default AP group. For more information on model-specific controls, see [Modifying Model Specific Controls](#) on page 273.

- **Model Specific Control:** Select the AP model to which the settings will apply.
 - **Max Clients:** Set the maximum number of clients that can associate per AP. Note that different AP models have different maximum client limitations.
 - **Status LEDs:** When managed by ZoneDirector, you can disable the external LEDs on certain AP models. This can be useful if your APs are installed in a public location and you don't want to draw attention to them.
 - **PoE Operating Mode:** Options vary depending on AP model selected in *Model Specific Control*. For a list of PoE operating modes by AP model, refer to [Unleashed Access Point Power Supply Considerations](#) on page 467.
 - **Port Setting:** Refer to [Configuring AP Ethernet Ports](#) on page 297 for more information on configuring AP-specific Ethernet port settings.

7. Click **Finish** to save your changes.

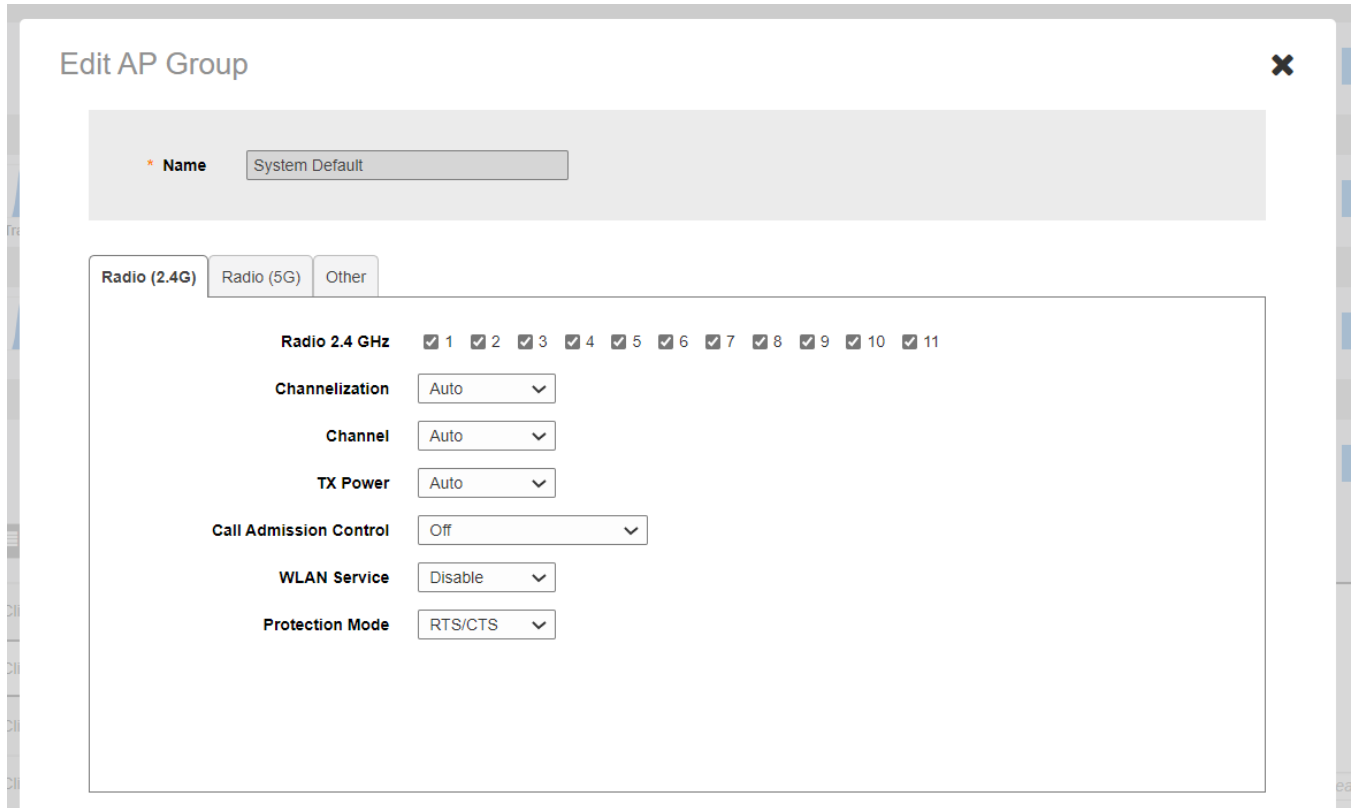FIGURE 187 Configuring AP Group Settings




Creating a New AP Group

Create new AP groups to apply custom settings to a group of APs distinct from the system default group's settings.

To create a new AP group:

1. Go to **Access Points > AP Groups**, and click **Create**.

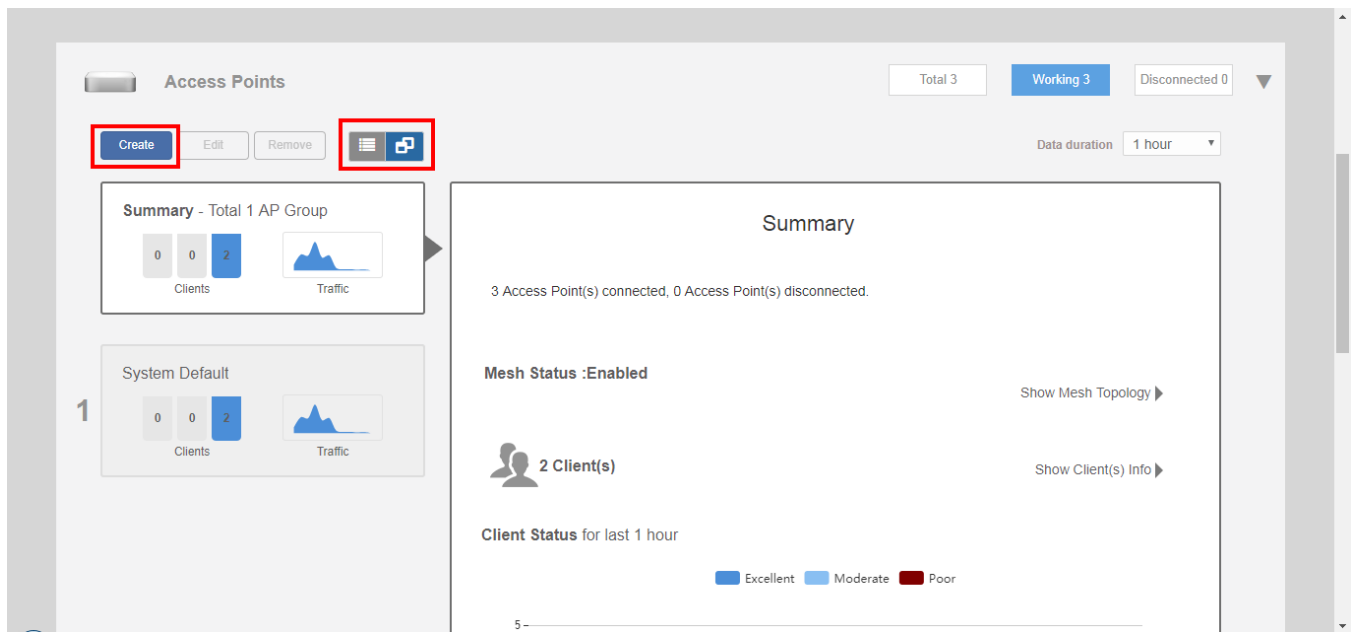FIGURE 188 Creating a New AP Group



The *Create AP Group* form appears.

2. Assign APs to or from this AP group using the left and right arrows on the *Step 1 - Assign APs* screen.
3. Assign WLANs to or from this AP group using the left and right arrows on the *Step 2 - Assign WLANs* screen.

Access Point Configuration

Working with AP Groups


4. On the *Radio B/G/N (2.4G)* and *Radio A/N/AC (5G)* tabs, modify any of the following settings that you want to apply to the group:
 - **Channel Range:** To limit the available channels for 2.4 GHz, 5 GHz Indoor and 5 GHz Outdoor channel selection, deselect any channels that you do not want the APs to use.
 - **Channelization:** Select Auto, 20MHz or 40MHz channel width for the 2.4 GHz radio, or Auto, 20, 40, or 80 MHz channel width for the 5 GHz radio.
 - **Channel:** Select Auto or manually assign a channel for the 2.4 GHz or 5 GHz radio.
 - **TX Power:** Allows you to manually set the transmit power on all 2.4 GHz or 5 GHz radios (default is Auto).

Max = max allowable Tx power according to country regulations

Min = 0dBm per chain for 11n APs, 2dBm per chain for 11ac APs
 - **Call Admission Control:** (Disabled by default). Enable Wi-Fi Multimedia Admission Control (WMM-AC) to support Polycom/Spectralink VIEW certification.
 - **WLAN Service:** This option allows users to disable WLAN service on the 2.4 or 5 GHz radios on all APs in the AP group.
 - **Protection Mode:** Protection Mode allows control over how 802.11 devices know when they should communicate with another device. The use of RTS/CTS (Request to Send/Clear to Send) reduces collisions and increases the performance of the network if hidden stations are present. However, RTS/CTS (and CTS-only) introduce overhead and may in fact reduce overall performance in some situations. Through the proper use of RTS/CTS and CTS-only, you can fine-tune the operation of your wireless LAN depending on the physical operating environment.
 - **CTS-only:** Choose this option to force all destination devices to acknowledge their ability to receive data when a transmission is initiated. Use this option for compliance with the Wi-Fi Alliance certification.
 - **RTS/CTS:** Choose this option to force both sending and receiving devices to confirm a data exchange on both ends before proceeding.
 - **None:** Choose this option to disable both RTS and CTS acknowledgment.

5. On the *Other* tab, modify any of the following settings that you want to apply to the System Default AP group:
 - **Model Specific Control:** Select the AP model to which the settings will apply. For more information, see *Modifying Model Specific Controls*.
 - **Max Clients:** Set the maximum number of clients that can associate per AP. Note that different AP models have different maximum client limitations.
 - **Status LEDs:** When managed by ZoneDirector, you can disable the external LEDs on certain AP models. This can be useful if your APs are installed in a public location and you don't want to draw attention to them.
 - **PoE Operating Mode:** Options vary depending on AP model selected in Model Specific Control. For a list of PoE operating modes by AP model, refer to *Unleashed Access Point Power Supply Considerations*.
 - **Port Setting:** Refer to *Configuring AP Ethernet Ports* for more information on configuring AP-specific Ethernet port settings.

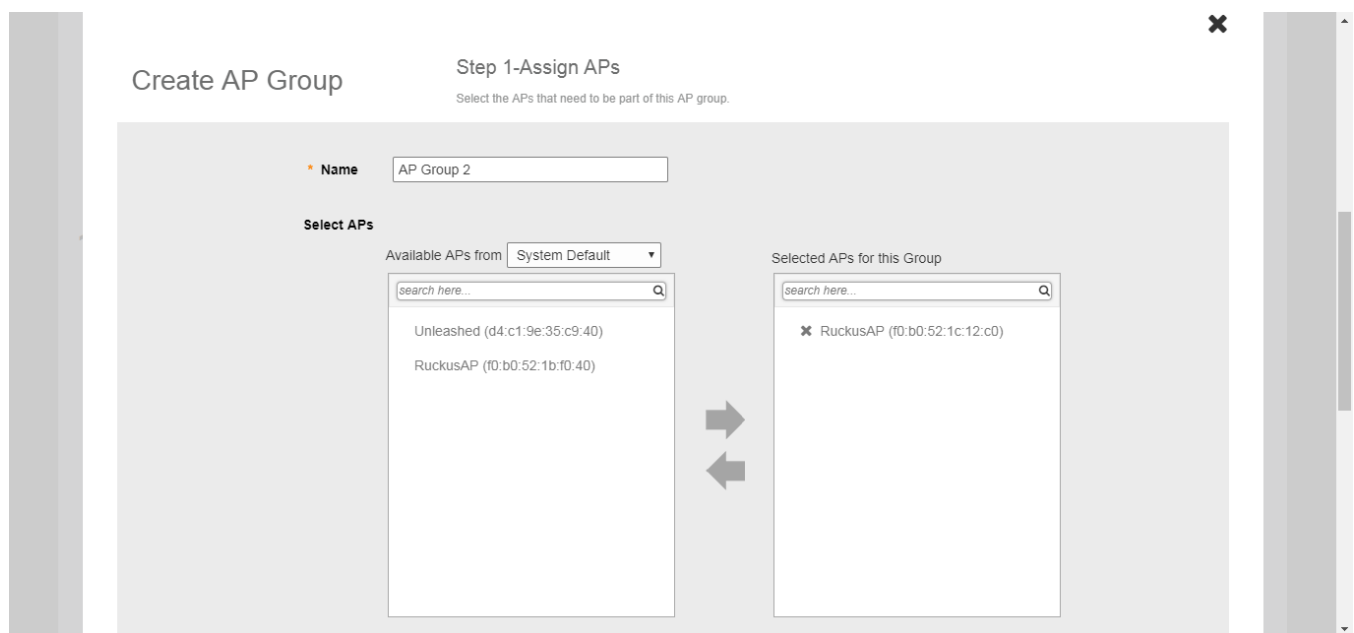FIGURE 189 Create new AP group




Modifying Model Specific Controls

The following settings can be applied to all APs of a particular model that are members of the AP group:

Some options are available for specific AP models only.

To configure model-specific settings for the AP group, select the AP model from the **Model Specific Control** list.

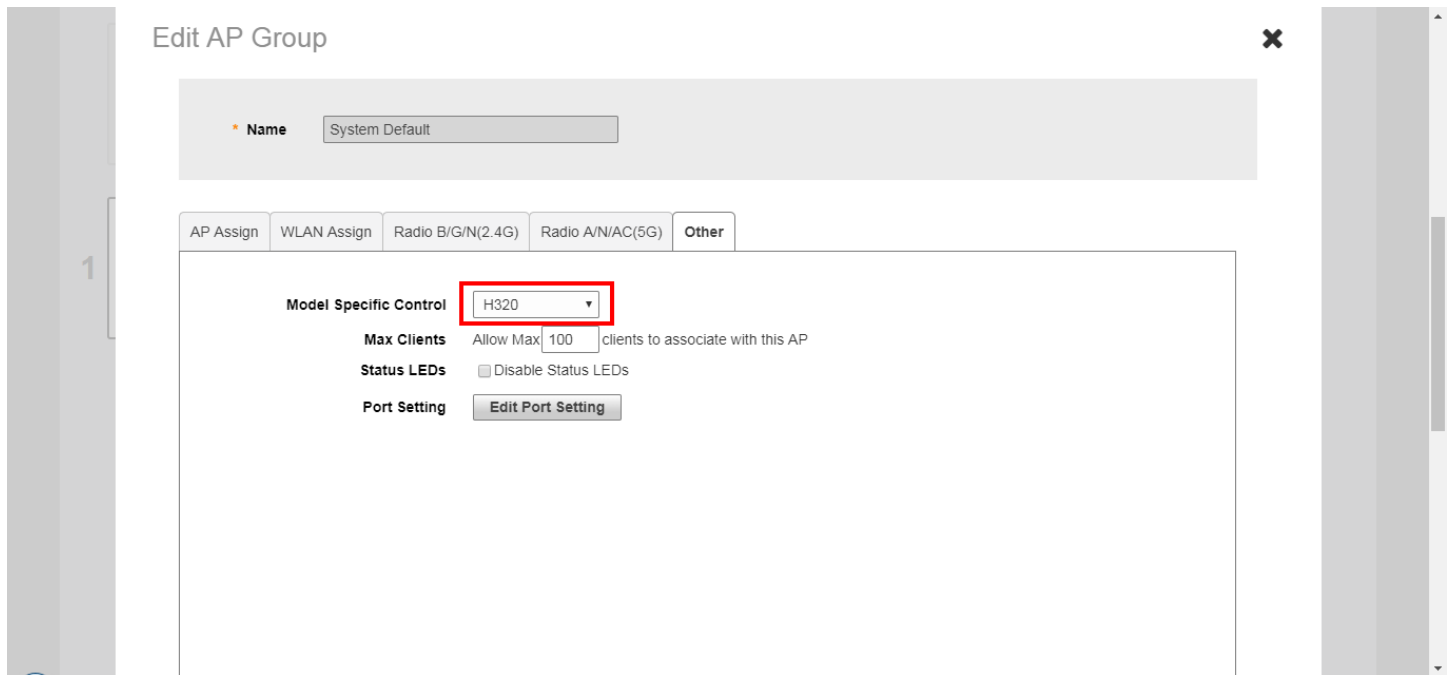FIGURE 190 Model Specific Controls




Configure any of the following settings for each model independently, and click **Finish** to save your changes:

- **Max Clients:** Set the maximum number of clients that can associate per AP. Note that different AP models have different maximum client limitations.
- **PoE Out Ports:** Enable PoE out ports (specific AP models only).
- **Status LEDs:** Disable the external LEDs on certain AP models. This can be useful if your APs are installed in a public location and you don't want to draw attention to them.
- **External Antenna:** On APs with external antenna options, select Enable for the external antenna to be enabled. When enabled, enter a gain value in the range of 0 to 90 dBi. Default is 3 dBi.
- **Port Settings:** Refer to [Configuring AP Ethernet Ports](#) on page 297 for more information on configuring AP-specific Ethernet port settings.
- **PoE Operating Mode:** Select PoE operating mode, Auto, 802.3af or 802.3at PoE (specific AP models only). Default is *Auto*. If 802.3af PoE is selected, the AP will operate in 802.3af mode (not 802.3at mode), and will consume less power than in 802.3at mode. However, when this option is selected, some AP features are disabled to reduce power consumption, such as the USB port and one of the Ethernet ports.

NOTE

On some APs, an additional mode - 802.3at+ PoE - is available. This mode enables all features on the AP but requires an Ethernet switch that supports the 802.3at+ standard due to the higher power draw from the port to which the AP is connected. For a list of PoE operating modes by AP model, refer to [Unleashed Access Point Power Supply Considerations](#) on page 467.

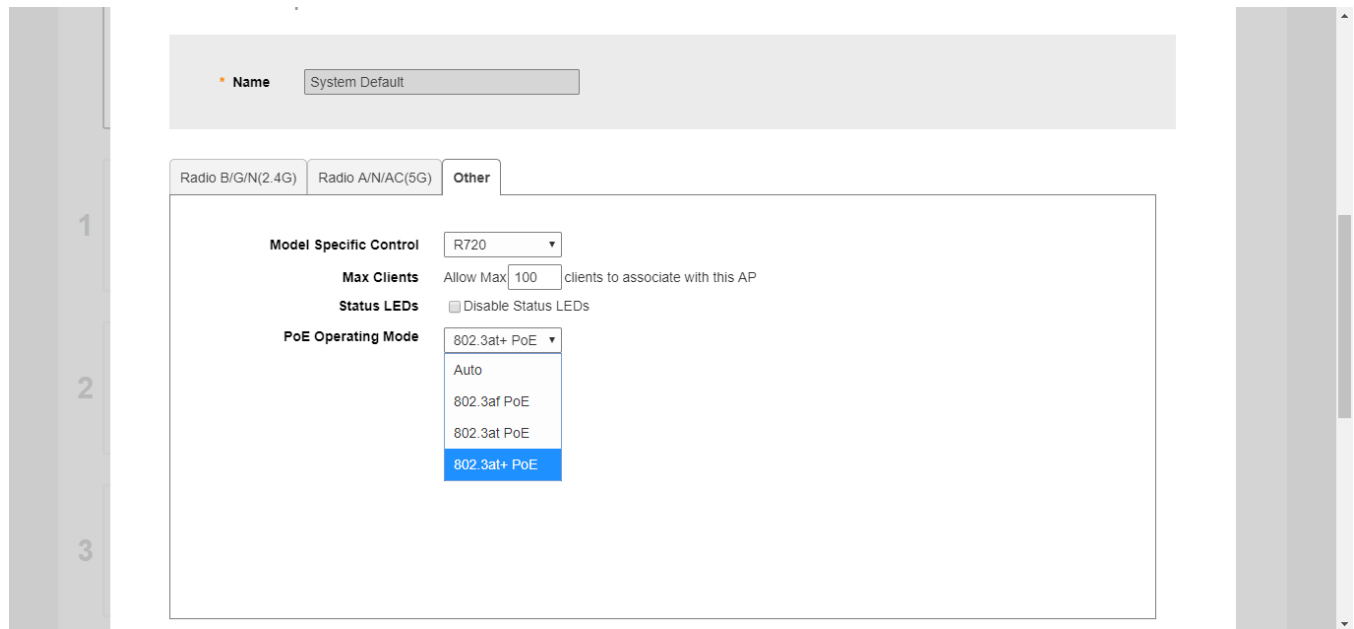FIGURE 191 PoE Operating Mode



Configuring AP Ethernet Ports

You can use AP groups to configure Ethernet ports on all APs of a certain model.

NOTE


Currently, only Unleashed H320 and H510 wall-plate APs provide Ethernet port configuration options.

To configure Ethernet ports for all APs of the same model:

1. Go to **Access Points**.
2. In the **AP Groups** view, click **Edit** for the group you want to configure.
3. On the **Other** tab, locate the **Model Specific Control** section, and select the AP model that you want to configure from the list.
4. Click the **Port Setting** button. The page refreshes to display the Ethernet ports on the AP model currently selected.
5. Deselect the check box next to **Enable** to disable this LAN port entirely. All ports are enabled by default.
6. Select **DHCP_Opt82** if you want to enable this option for this port (see *DHCP Option 82*).
7. For any enabled ports, you can choose whether the port will be used as a **Trunk Port**, an **Access Port** or a **General Port**. The following restrictions apply:
 - All APs must be configured with at least one Trunk Port.
 - For Wall Plate APs (such as the H510), the LAN5/Uplink port on the rear of the AP is defined as a Trunk Port and is not configurable. The front-facing LAN ports are configurable.
 - For all other APs, you can configure each port individually as either a Trunk Port, Access Port or General Port. (See *Designating Ethernet Port Type* for more information.)
8. To segment this port's traffic into a separate VLAN from the native VLAN, use the VLAN **Untag ID** field.
9. In **Guest VLAN**, enter the VLAN ID for the guest VLAN, if configured.

10. In **Dynamic VLAN**, enable the check box to enable dynamic VLAN assignment based on RADIUS settings.

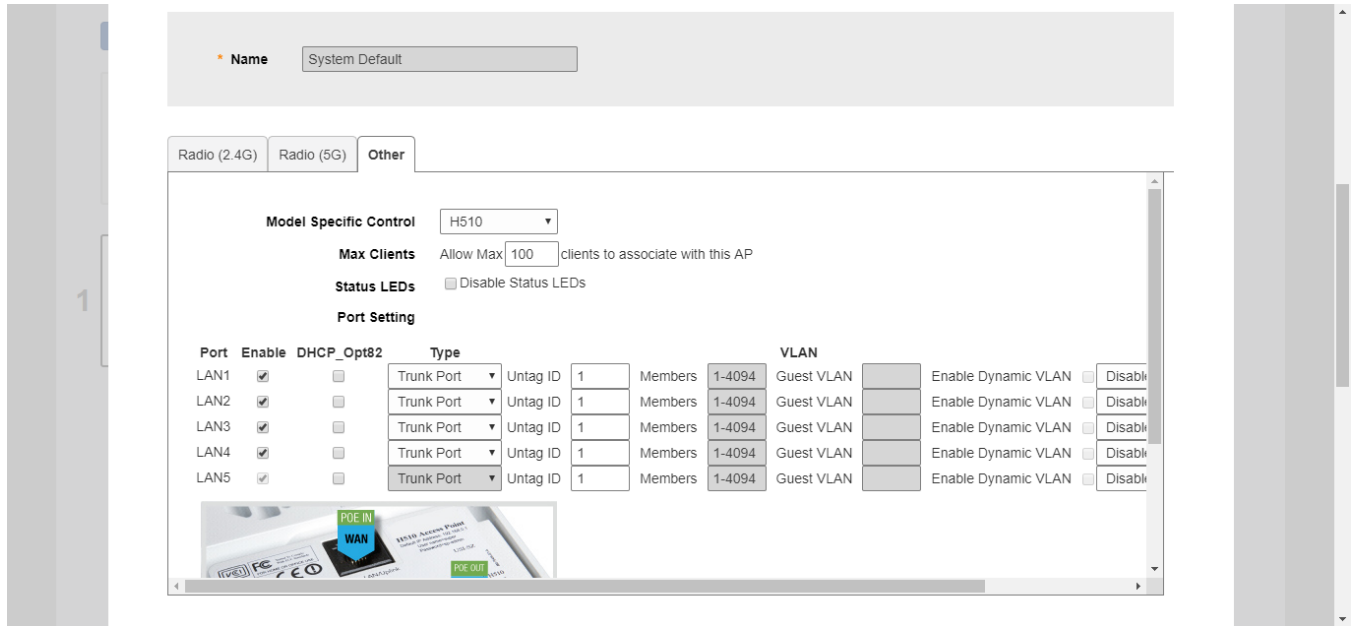FIGURE 192 Configure AP Ethernet ports



11. In **802.1X**, select whether the port will be used as an 802.1X Supplicant, Authenticator (port-based or MAC-based), or whether 802.1X is disabled on the port. AP Ethernet ports can be individually configured to serve as either an 802.1X supplicant (authenticating the AP to an upstream authenticator switch port), or as an 802.1X authenticator (receiving 802.1X authentication requests from downstream supplicants). A single port cannot provide both supplicant and authenticator functionality at the same time.

- **Disabled:** 802.1X authentication is disabled for this port.
- **Supplicant:** This port authenticates itself to an upstream Authenticator port.
- **Authenticator (Port-Based):** This port accepts auth requests from downstream stations. In Port-based mode, only a single MAC host must be authenticated for all hosts to be granted access to the network.
- **Authenticator (MAC-Based):** This port accepts auth requests from downstream stations. In MAC-based mode, each MAC host is individually authenticated. Each newly-learned MAC address triggers an EAPOL request-identify frame.

For more information on port based 802.1X, see *Using Port Based 802.1X*.

12. In **Authenticator** (options appear if any port is configured as an Authenticator), select an **Authentication Server** and **Accounting Server** against which to authenticate clients from the drop-down list.

Optionally, **Enable MAC authentication bypass (Use device MAC address as username and password)** to allow specific devices to bypass 802.1X authentication.

13. In **Supplicant** (options appear if any port is configured as a Supplicant), select the supplicant authentication method:

- **MAC Address:** Use the station's MAC address as the user name and password.
- **User Name and Password:** Enter the login info for authenticating this supplicant port to an upstream authenticator port.

14. Click **Finish** to save your changes.

FIGURE 193 H510 Port Settings: Enable, DHCP Option 82, Port Type and VLAN Untag ID

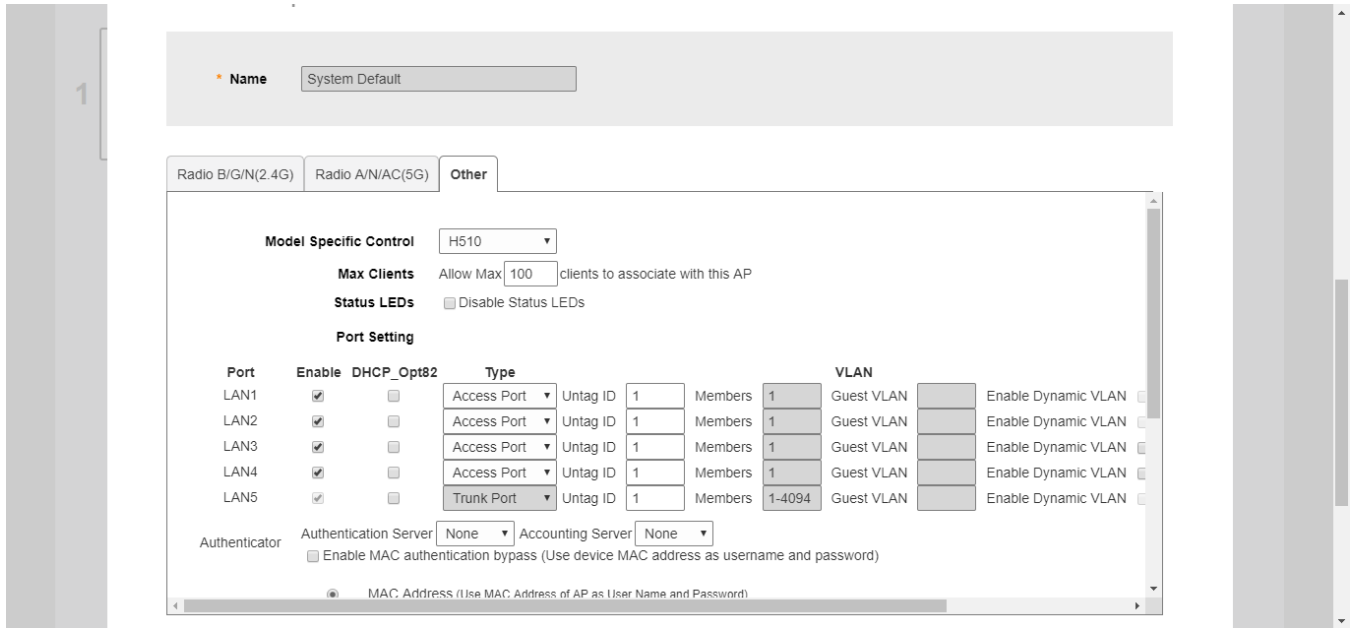


FIGURE 194 H510 Port Settings: Guest VLAN, Dynamic VLAN and 802.1X


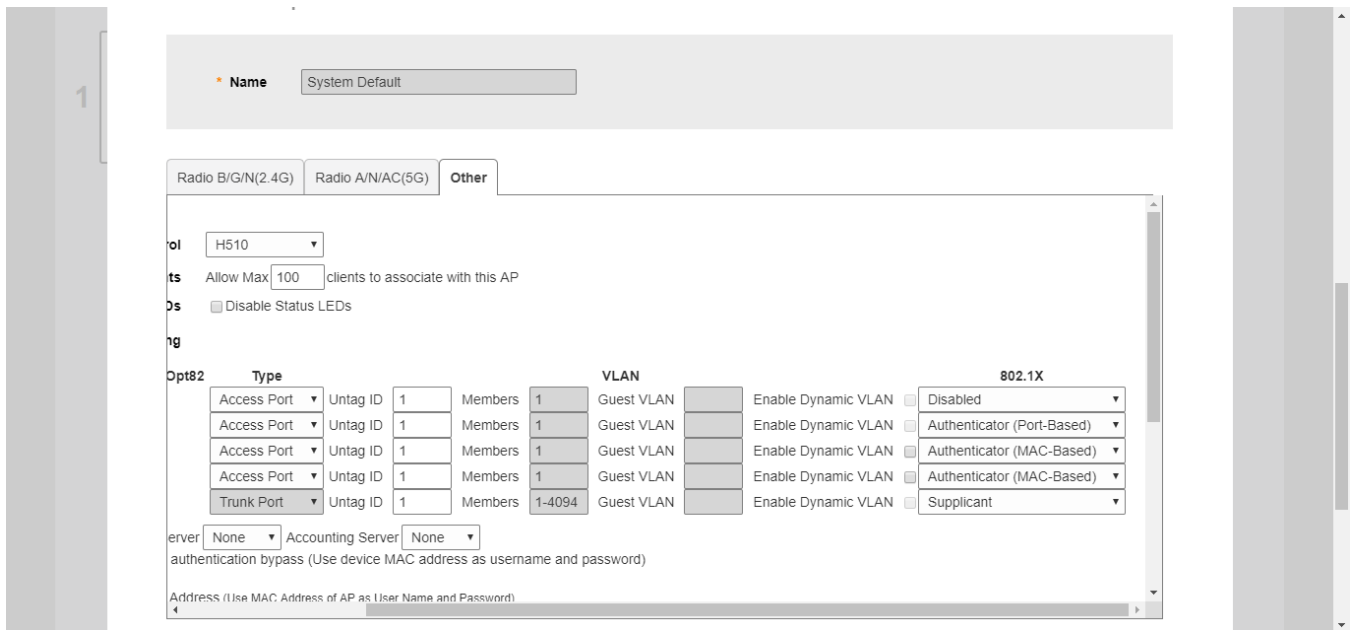


FIGURE 195 H510 Authenticator and Supplicant settings

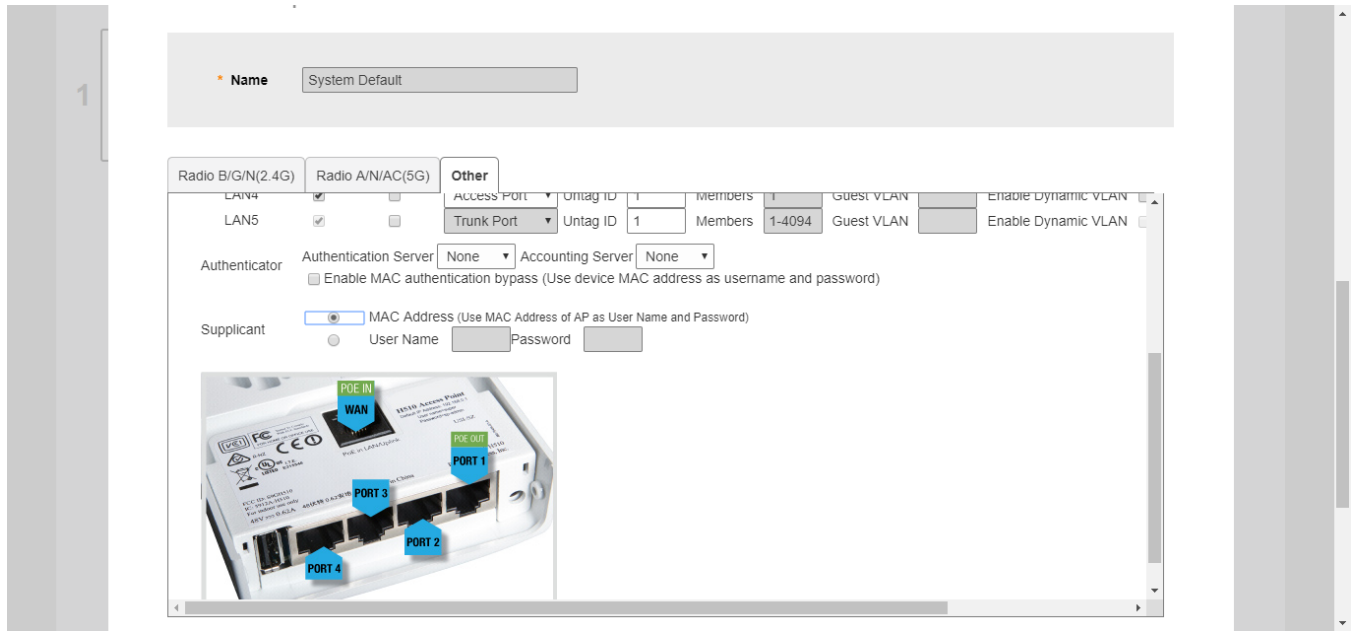

Designating Ethernet Port Type

Ethernet ports are defined as one of the following port types:

- Trunk Ports
- Access Ports
- General Ports

All three port types are used to define how to manage the following two aspects of VLAN processing:

- Which VLANs are processed vs. dropped
- What to do with untagged packets (in other words, Native VLAN)

For most Ruckus APs, you can set which ports you want to be your Access, Trunk and General Ports from the Unleashed web interface, as long as at least one port on each AP is designated as a Trunk Port.

NOTE

By default, all ports are enabled as Trunk Ports with Untag VLAN set as 1 (except for Wall Plate APs, such as H510, whose four front-bottom ports are enabled as Access Ports by default, and whose rear port is a Trunk Port and is non-configurable).

If configured as an Access Port, all untagged ingress traffic is sent to the configured Untag VLAN, and all egress traffic is sent untagged. If configured as a Trunk Port, all untagged ingress traffic is the configured Untag VLAN (by default, 1), and all VLAN-tagged traffic on VLANs 1-4094 will be seen when present on the network.

The default Untag VLAN for each port is VLAN 1. Change the Untag VLAN to:

- Segment all ingress traffic on this Access Port to a specific VLAN
- Redefine the Native VLAN on this Trunk Port to match your network configuration

Trunk Ports

Trunk links are required to pass VLAN information between switches. Trunking is a function that must be enabled on both sides of a link. If two switches are connected together, for example, both switch ports must be configured as trunk ports. The Trunk port is a member of all the VLANs that exist on the AP/switch and carries traffic for all VLANs between switches.

For a Trunk port, the VLAN Untag ID field is used to define the native VLAN - the VLAN into which untagged ingress packets are placed upon arrival. If your network uses a different VLAN as the native VLAN, configure the AP Trunk port's VLAN Untag ID with the native VLAN used throughout your network.

Access Ports

Access ports provide access to the network and can be configured as members of a specific VLAN, thereby separating the traffic on these ports from traffic on other VLANs.

All Access Ports are set to Untag (native) VLAN 1 by default. This means that all Access Ports belong to the native VLAN and are all part of a single broadcast domain. When untagged frames from a client arrive at an AP's Access Port, they are given an 802.1Q VLAN header with "1" as their VLAN ID before being passed onto the wired network.

When VLAN 1 traffic arrives destined for the client, the VLAN tag is removed and it is sent as plain (untagged) 802.11 traffic. When any tagged traffic other than VLAN 1 traffic arrives at the same Access Port, it is dropped rather than forwarded to the client.

To remove ports from the native VLAN and assign them to specific VLANs, select Access Port and enter any valid VLAN ID in the VLAN ID field (valid VLAN IDs are 2-4094).

The following table describes the behavior of incoming and outgoing traffic for Access Ports with VLANs configured.

TABLE 34 Access Ports with VLANs configured

VLAN Settings	Incoming Traffic (from the client)	Outgoing Traffic (to the client)
Access Port, Untag VLAN 1	All incoming traffic is native VLAN (VLAN 1).	All outgoing traffic on the port is sent untagged.
Access Port, Untag VLAN [2-4094]	All incoming traffic is sent to the VLANs specified.	Only traffic belonging to the specified VLAN is forwarded. All other VLAN traffic is dropped.

General Ports

General ports are user-defined ports that can have any combination of up to 20 VLAN IDs assigned. General ports function similarly to Trunk ports, except that where Trunk ports pass all VLAN traffic, General ports pass only the VLAN traffic that is defined by the user.

To configure an AP Ethernet port as a General port, select General Port and enter multiple valid VLAN IDs separated by commas or a range separated by a hyphen.

NOTE

You must also include the Untag (native) VLAN ID in the Members field when defining the VLANs that a General port will pass. For example, if you enter 1 as the Untag VLAN ID and want the port to pass traffic on VLANs 200 and 300, you would enter: **1,200,300**.

Using Port Based 802.1X

802.1X authentication provides the ability to secure the network and optionally bind service policies for an authenticated user.

NOTE

802.1X port settings are unavailable when mesh mode is enabled.

802.1X provides logical port control and leverages the EAP authentication and RADIUS protocols to allow the network policy to be effectively applied in real time, no matter where the user connects to the network.

Access Point Configuration

Restarting an AP

AP Ethernet ports can be individually configured to serve as either an 802.1X supplicant (authenticating the AP to an upstream authenticator switch port), or as an 802.1X authenticator (receiving 802.1X authentication requests from downstream supplicants). A single port cannot provide both supplicant and authenticator functionality at the same time.

If port based 802.1X is enabled on any ports, you can monitor connected wired clients by expanding the **Clients** Dashboard component and clicking **Wired Clients** to display a list of authenticated 802.1X wired clients.

FIGURE 196 Monitor currently connected 802.1X wired clients

The screenshot shows the 'Clients' dashboard with a sub-section for 'Wired Clients'. The 'Wired Clients' section is highlighted with a red box and contains the following text and table:

1 clients connected, 0 clients disconnected.

Wired Clients 0 wired clients connected

This table lists all currently connected 802.1X wired client devices. Only those devices with a status of "authorized" are permitted access to the network.

Show details Search [] [] []

Mac Address	User/IP	Access Point	VLAN	Status
No data available.				


0-0 of 0 shown < 1 >

Wireless Clients 1 wireless clients connected

Restarting an AP

To restart an AP, expand the Access Points section, click the AP's box on the left side, then click **Restart**.

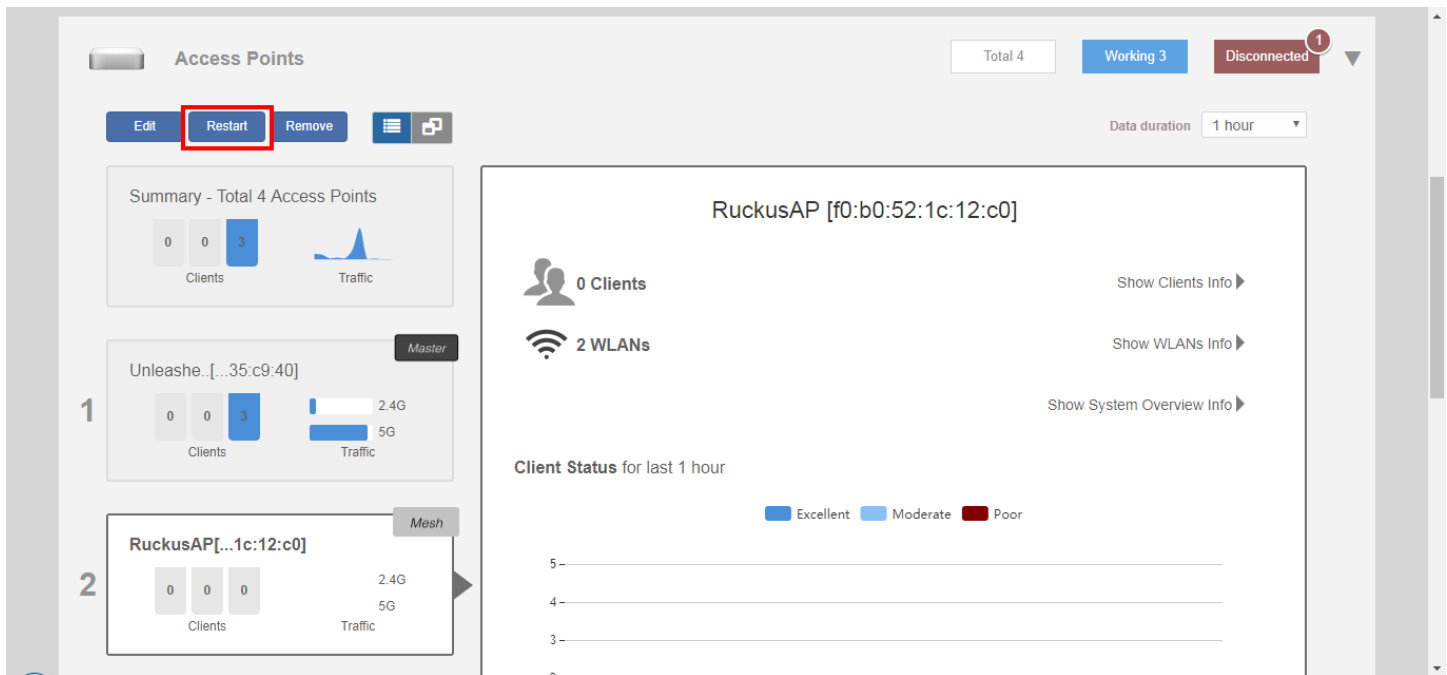FIGURE 197 Click Restart to reboot a single AP



NOTE


Restarting the Unleashed Master AP will prompt you to click **OK** to confirm, as the network will experience a brief service interruption during the restart process. Additionally, restarting the Master AP will force another AP to assume the role of Master (when more than one Unleashed AP exists on the network).

Removing an AP

To remove a member AP from the Unleashed network, expand the Access Points section, click the AP's box on the left side, then click **Remove**. Once removed, the **Approve** button becomes available. Click **Approve** to allow the AP to rejoin the Unleashed network.

Access Point Configuration
Removing an AP

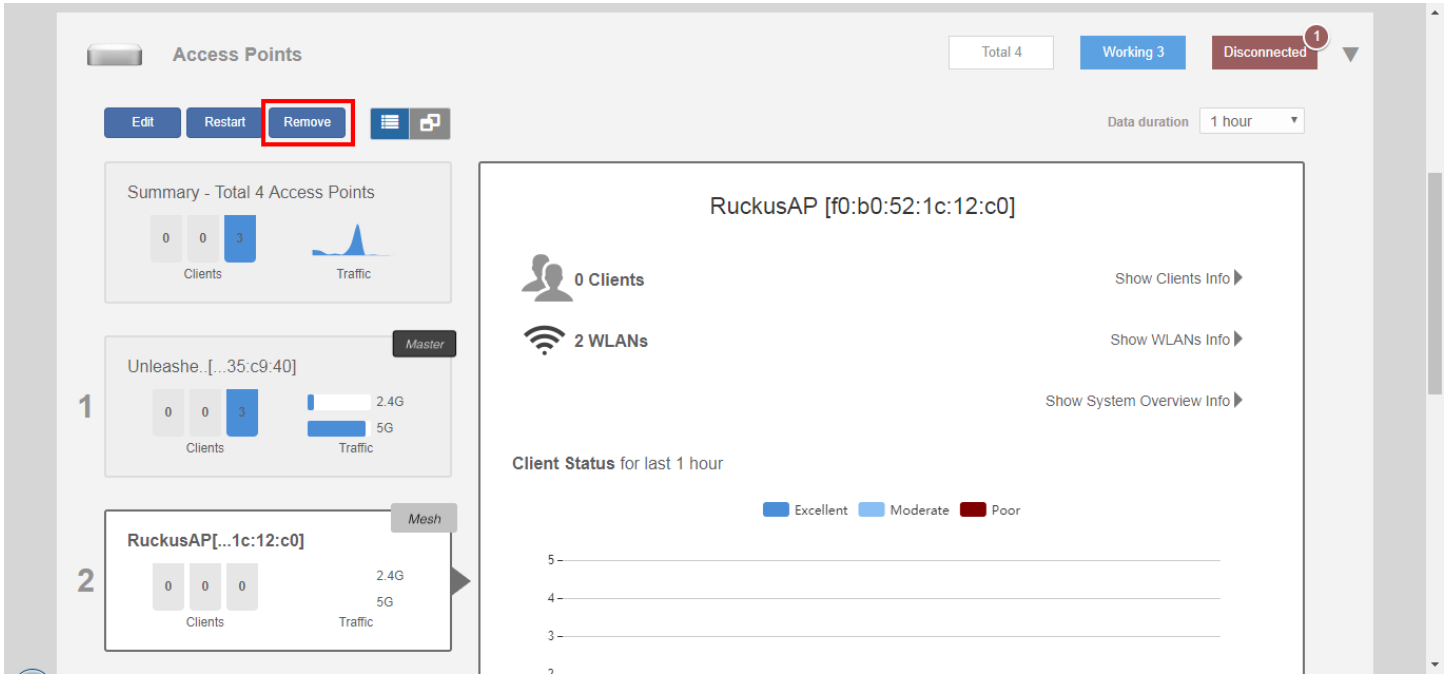FIGURE 198 Removing an AP



ICX Switch Management

- ICX Switch Management Overview..... 305
- Preparing an ICX Switch for Unleashed Management.....306
- Approving a New Switch to Join Unleashed..... 309
- Monitoring Connected ICX Switches..... 312
- Managing Switch Ports..... 314
- Backup and Restore Switch Configuration.....317
- Upgrading ICX Switch Firmware..... 320

ICX Switch Management Overview

Beginning with Unleashed release 200.8, the administrator can monitor and manage Ruckus ICX switches and routers in the ICX 7000 series and above. Unleashed can manage up to 8 switches at a time.

ICX switch management allows you to monitor status, view usage statistics, and perform basic management operations including configuration backup and firmware management.

The following capabilities are supported:

- ICX switch registration and authentication
- Switch inventory (including model, firmware version, and last backup)
- Health and performance monitoring (status, traffic stats, errors, clients) with alarms
- Switch configuration file backup and restore
- Firmware upgrades

Requirements

NOTE

For more information on ICX device capabilities and configuration, refer to the Ruckus FastIron documentation set available at the following URL:


<https://support.ruckuswireless.com>. On the site, select **Products > Ruckus ICX Switches > Technical Documents**, and choose the platform and document of interest.

The following items are required to manage ICX devices:

- The ICX switch must be running FastIron software version **08.0.90** or higher.
- The Unleashed Master AP's IP address must be reachable by the ICX device through the Management interface or through router interfaces.
- ICX devices will be automatically discovered by the Unleashed Master. If automatic switch approval is enabled, all ICX switches discovered on the network will be listed in the *Switches* dashboard component. To disable automatic approval, go to **Admin & Services > System > System Info > Switch Approval** and disable the **Approval** option.

ICX devices running either router or switch images can be managed by Unleashed.

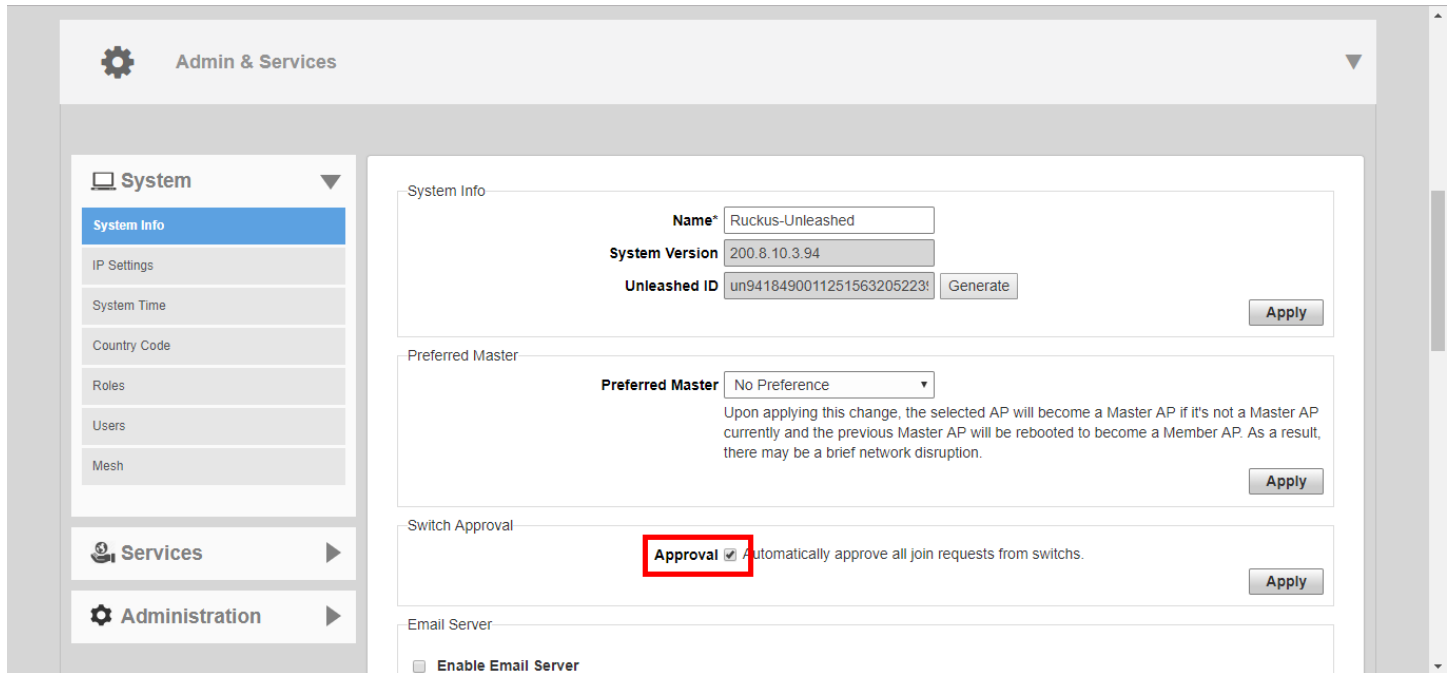FIGURE 199 Switch auto approval



Preparing an ICX Switch for Unleashed Management

Unleashed uses LLDP (Link Layer Discovery Protocol) for communication with the ICX switch. Preparing the switch for Unleashed management requires that the device is running compatible firmware that supports LLDP and that its management IP address and login name and password are discoverable by the Unleashed Master AP.

The easiest way to do this is to reset the switch to factory default settings and allow Unleashed to auto-discover and auto-configure the switch for Unleashed management.

Beginning with ICX version 8.0.90, ICX switches in factory default state use the default user name and password **super/sp-admin**. When the Unleashed Master AP connects to an ICX switch via LLDP, it will attempt to log in using this default username and password. If successful, Unleashed will automatically change the ICX login to match the Unleashed admin login name and password.

To prepare an ICX switch for Unleashed management:

1. Confirm that the switch is running FastIron firmware version 08.0.90 or later using the following command:

```
SSH@ICX7150-C12-Switch#show version
Copyright (c) Ruckus Networks, Inc. All rights reserved.
UNIT 1: compiled on Jun 6 2019 at 20:57:00 labeled as SPS08091
(28774816 bytes) from Primary SPS08091.bin (UFI)
SW: Version 08.0.91T211
Compressed Primary Boot Code size = 786944, Version:10.1.16T225 (mnz10116)
Compiled on Sat May 25 10:09:26 2019
...
...
```

2. If your device is running an earlier version, you must upgrade to version 08.0.90 or later. Refer to the *Release Notes*, *Upgrade Guide* and *Installation Guide* for the relevant FastIron release for upgrade instructions.

NOTE

Upgrading to a more recent release may require several steps (depending on the version of the original firmware) as each release has different upgrade requirements. Be sure to carefully read the FastIron documents to ensure a successful upgrade.

3. An ICX switch running 08.0.90 or later firmware in factory default state will attempt to register with an Unleashed Master AP via LLDP. An easy way to prepare a switch for Unleashed management is to reset the switch to factory default state. Use the following command to restore the switch to factory default settings:

```
SSH@ICX7150-C12-Switch#erase system factory-default
System will go for reload after factory reset. Please enter 'y' to confirm, 'n' to exit :
(enter 'y' or 'n'): y
*****
*                               Factory Reset Alert                               *
*****
* Please pay attention to the details listed below                               *
* 1. uboot params will be erased, you might want to                               *
* backup the uboot params                                                         *
* stop at uboot and do 'printenv' to read uboot params                             *
* 2. All configuration will be erased, you might want to                           *
* backup the config                                                                *
* 3. Core Files, Logs will be erased                                              *
* 4. SAU license will be restored to original SKU                                  *
* use show license sau for more details                                           *
* 5. XML license will be erased                                                  *
*****
*****
I have read the alert and factory reset can be performed now.
Please enter 'y' to confirm, 'n' to exit :
*****
(enter 'y' or 'n'):
```

4. When the factory reset is complete, the switch will reboot and perform LLDP neighbor discovery.
5. If **Auto Approval** is enabled (*Admin & Services > System > System Info > Switch Approval*), Unleashed will automatically approve the switch join request. If disabled, you must manually approve each switch join request.
6. The switch should now be visible on the Unleashed dashboard as connected, or "Pending" if auto-approval is disabled.
7. If the switch does not appear on the Unleashed dashboard after performing a factory reset, there are a number of possible explanations:
 - LLDP info does not exist: This typically indicates the switch is not running compatible firmware. Upgrade to 08.0.90 or later.
 - LLDP info exists, but Management IP info does not exist: This typically indicates the switch is in router mode. In this case, the admin must obtain the IP address from the router or DHCP server and then click the **Add** button to configure the IP address, admin name and password for the switch.
8. Use the following command to verify whether or not LLDP neighbor information exists:

```
SSH@ICX7150-C12-Switch#show lldp neighbors
Lcl Port Chassis ID      Port ID      Port Description      System Name
1/1/1      348f.2712.c950 348f.2712.c950 eth0                   RuckusAP
1/1/3      d4c1.9e35.c940 d4c1.9e35.c940 eth0                   Ruckus-Unleas~
SSH@ICX7150-C12-Switch#
```

ICX Switch Management

Preparing an ICX Switch for Unleashed Management

9. Additionally, you can verify whether the AP can receive LLDP information from its neighbors using the AP CLI. To check the AP's LLDP info, use the following command:

```
ruckus(ap-mode)# get lldp neighbors
-----
LLDP neighbors:
-----
Interface:   eth0, via: LLDP, RID: 1, Time: 3 days, 02:55:58
Chassis:
  ChassisID:  mac 78:a6:e1:2e:03:ce
  SysName:    ICX7150-C12-Switch
  SysDescr:   Not received
  MgmtIP:     192.168.0.24
  Capability: Bridge, on
Port:
  PortID:     mac 78:a6:e1:2e:03:d0
  PortDescr:  GigabitEthernet1/1/3
  MFS:        1522
  PMD autoneg: supported: yes, enabled: yes
    Adv:      10Base-T, HD: yes, FD: yes
    Adv:      100Base-TX, HD: yes, FD: yes
    Adv:      1000Base-T, HD: yes, FD: yes
  MAU oper type: 1000BaseTFD - Four-pair Category 5 UTP, full duplex mode
  MDI Power:    supported: yes, enabled: yes, pair control: no
  Device type:  PSE
  Power pairs:  signal
  Class:        class 4
  Power type:   2
  Power Source: unknown
  Power Priority: low
  PD requested power Value: 26200
  PSE allocated power Value: 26200
  UPOE:         0
-----
OK
ruckus(ap-mode)#
```

10. After approval, if the switch is in factory default state, Unleashed will log in to the switch and change the default username/password to the Unleashed admin login name and password, and begin managing the switch.
11. If the switch is not in factory default state, select the switch in "Pending" state and click **Approve**, then enter the Admin Name and Password to authenticate to the switch and then manage it automatically.
12. If the Unleashed login name and password are changed via the web interface, the new login will be synched to any connected switches that registered with Unleashed in factory default state. Connected switches that registered as non-factory default switches will remain unchanged and will require the user to manually approve them and enter the new user name and password.


Approving a New Switch to Join Unleashed

Once an ICX switch has been discovered, it is listed in the web interface as "pending" until the administrator approves the join request by entering the switch admin user name and password (if auto-approval is disabled).

To approve a new switch to join Unleashed management:

1. Expand the **Switches** component, and select a switch that is marked as "Pending" in the list on the left side of the page.

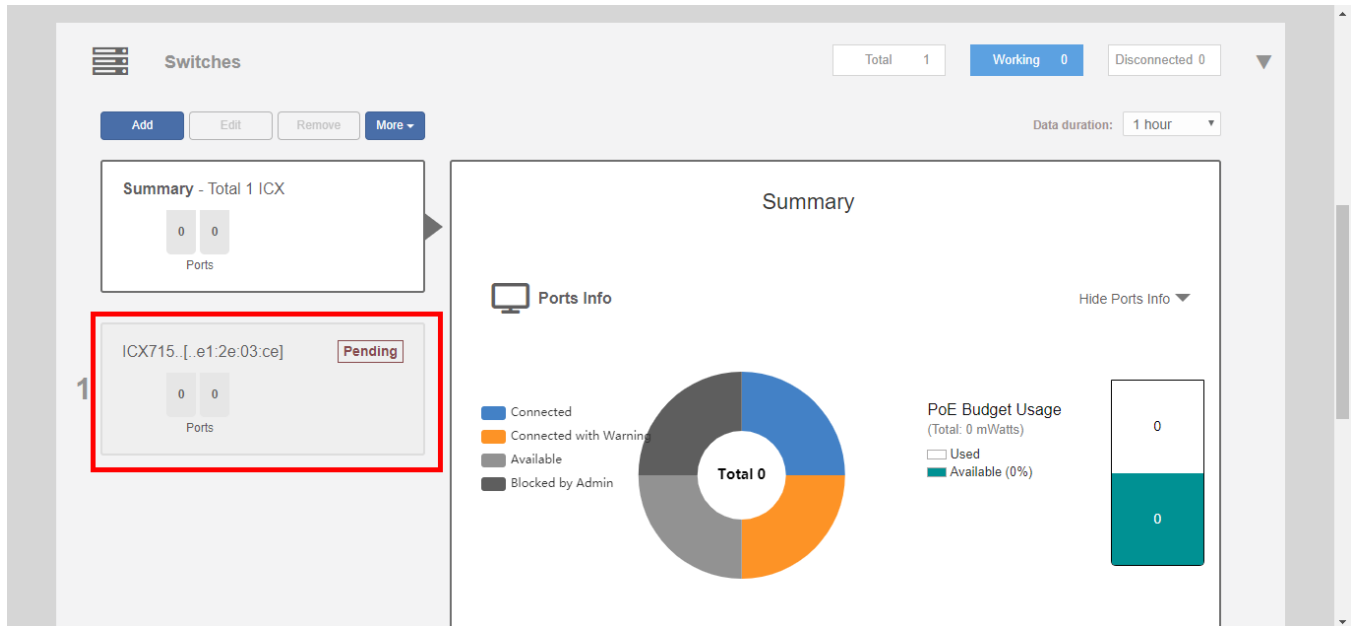FIGURE 200 Select a switch that is pending approval



NOTE


RUCKUS Unleashed does not recognize older versions of ICX switches and displays the following warning message: "Unleashed system only supports ICX firmware version 08.0.90 or later."

ICX Switch Management

Approving a New Switch to Join Unleashed


2. Click **Approve**. If the switch is in factory default state, it will automatically connect and be listed among the connected switch devices once the connection is established and the page is refreshed.

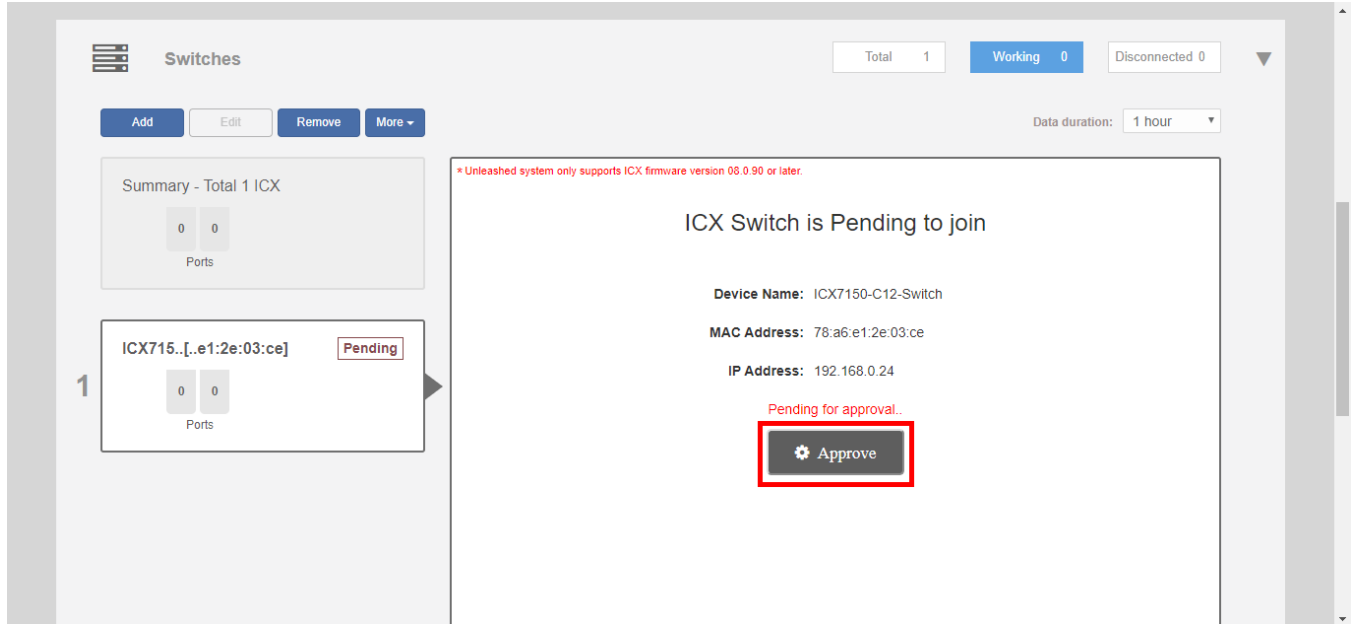FIGURE 201 Click Approve




3. If the switch is not in factory default state, the Unleashed Master is unable to login using the default user name and password, and the following message appears. Click **Continue** to manually enter the login credentials.

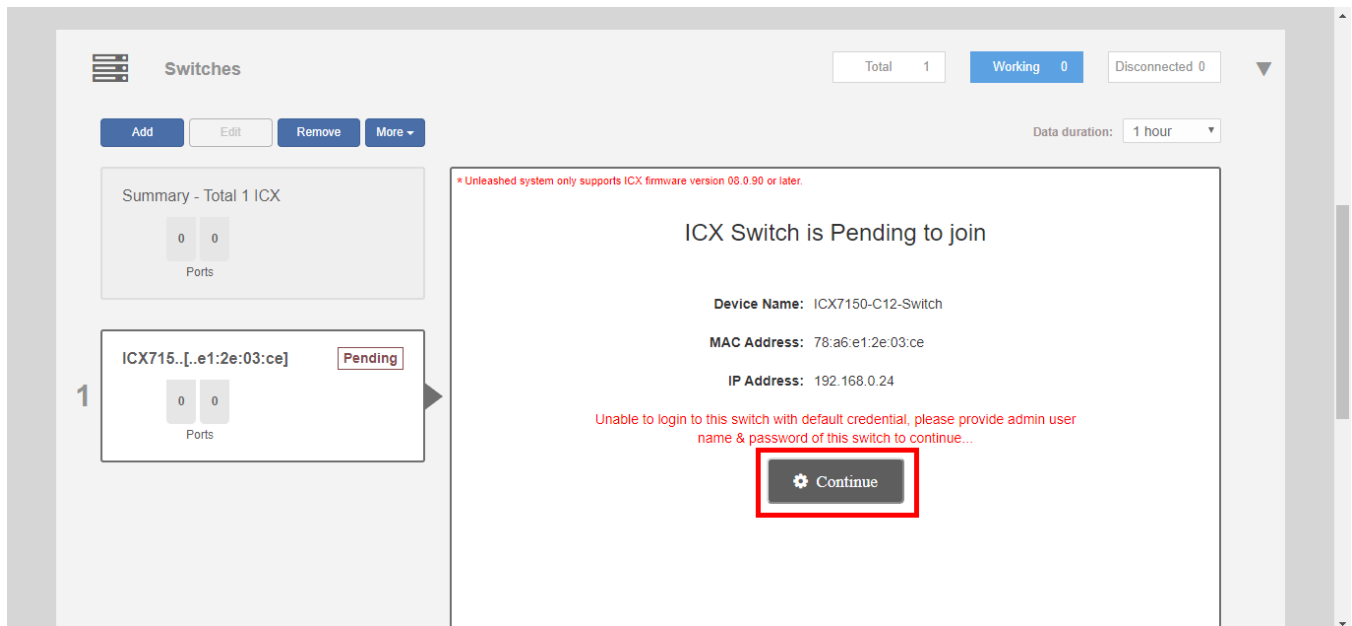FIGURE 202 Click Continue




4. In the *Approve Switch to Join Unleashed* dialog that appears, enter the **Admin Name** and **Password** to authenticate to the switch.

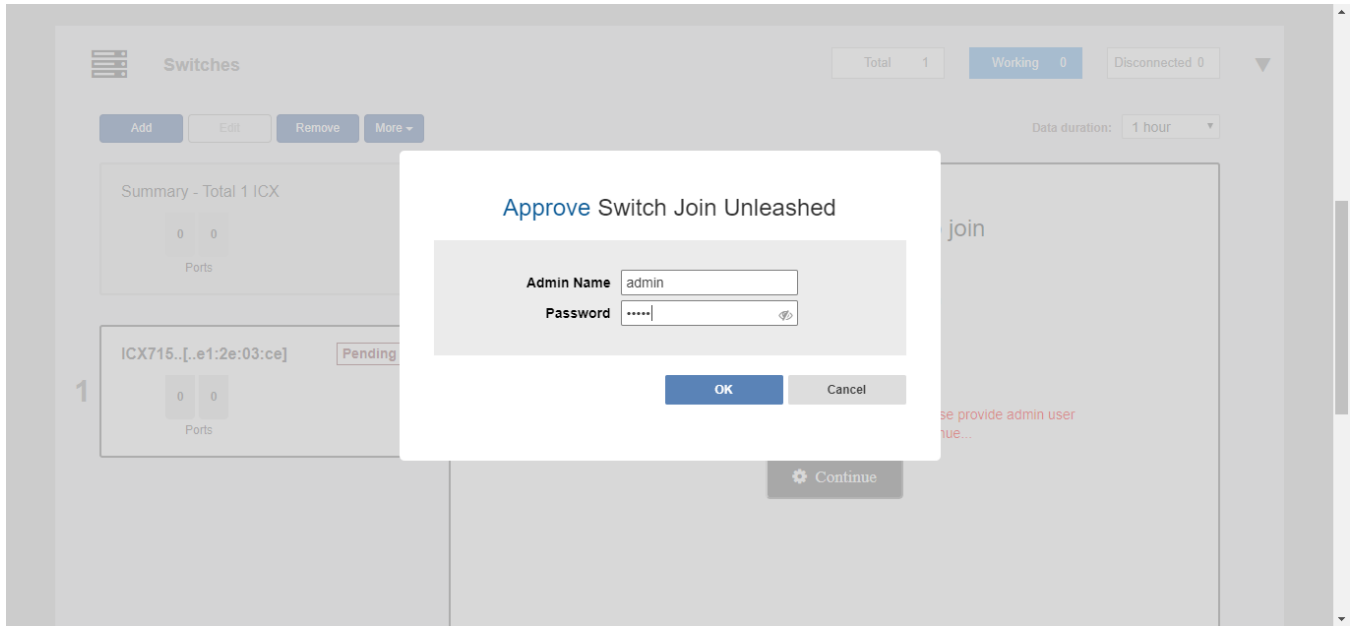FIGURE 203 Enter admin user name and password for switch authentication



5. Click **OK**. Unleashed immediately attempts to verify and approve the switch. If successful, the switch status will change to **Connecting** before joining Unleashed.

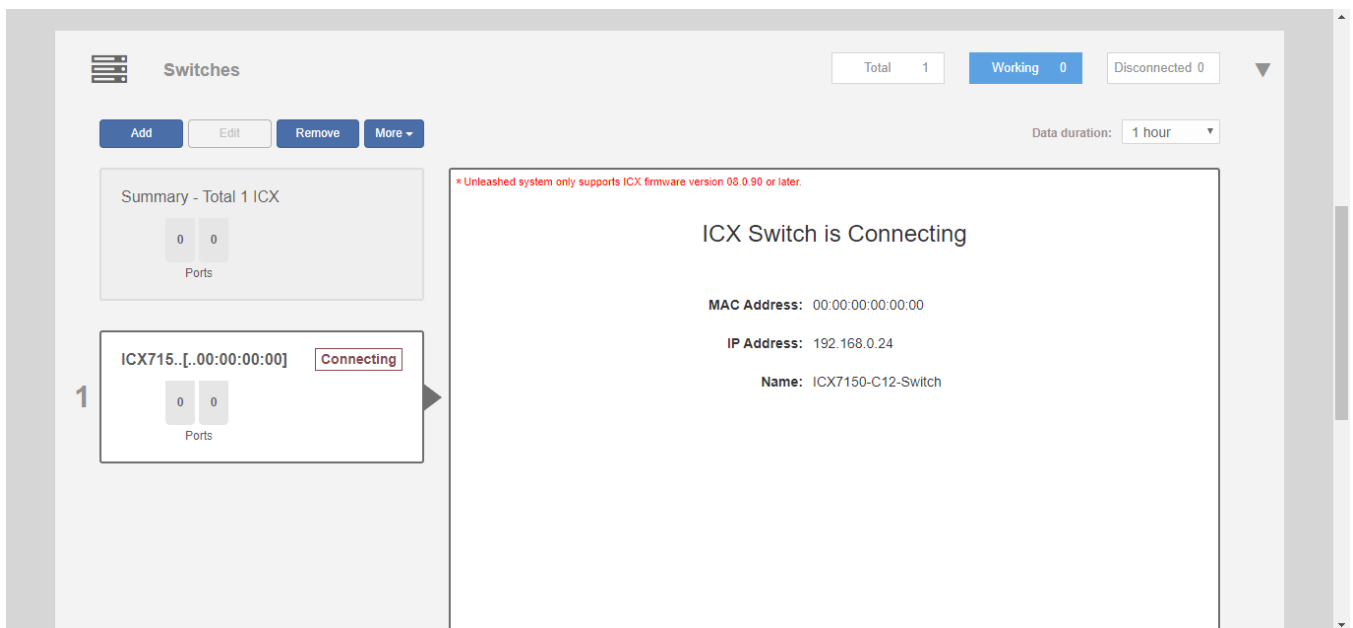FIGURE 204 ICX switch connecting




Monitoring Connected ICX Switches

Expand the **Switches** dashboard component and select a connected switch to view general information, port status, health details, and events and alarms on the selected switch.

The following details are displayed when the links are expanded:


- **General Info:** Displays general device information such as device name, IP address, MAC address, software version, and uptime.
- **Ports Info:** Displays the number of ports used and available, PoE power budget usage, and details on specific ports when selected from the port diagram or port list.
- **Health:** Displays hardware status information such as CPU and memory utilization.
- **Events & Alarms:** Displays a list of alarm and event system messages.

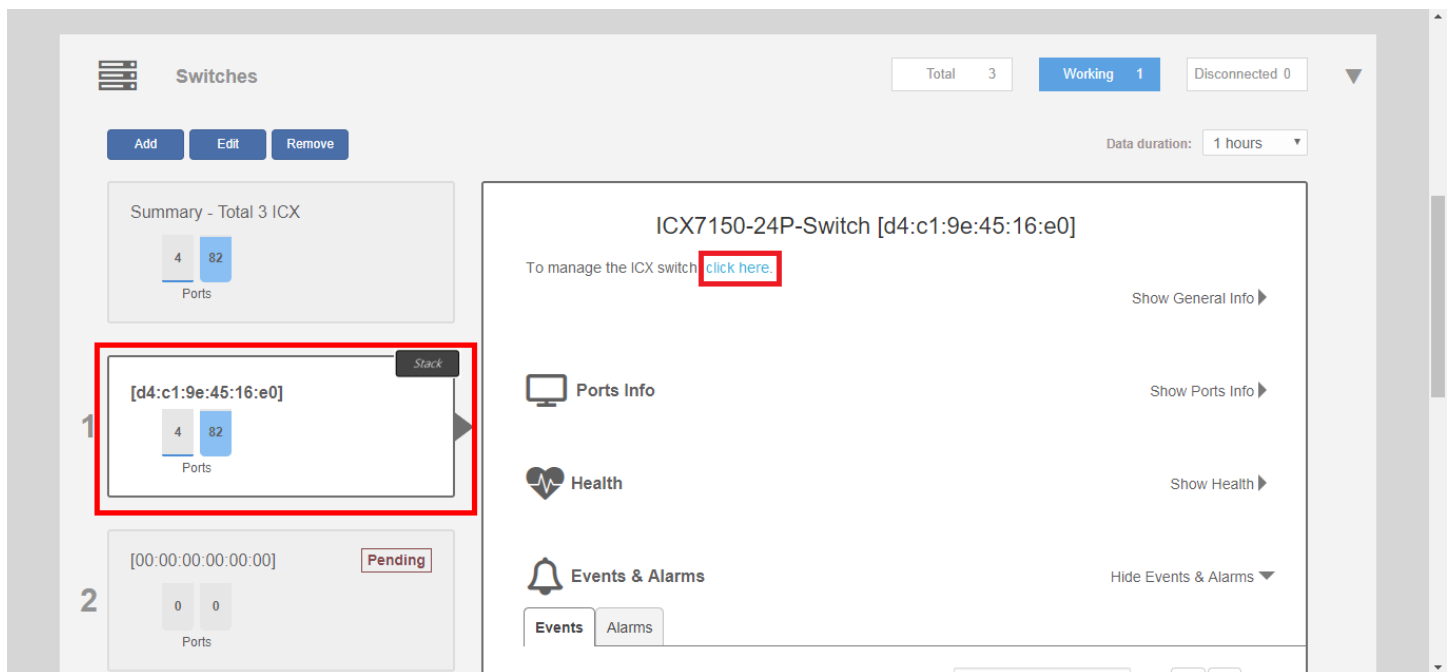FIGURE 205 Selecting a Switch to Monitor Details




Click **Show Health** to view the switch's health status information, including CPU and memory utilization, power supply usage, and temperature details. Hover over a segment of the charts to view time-specific details.

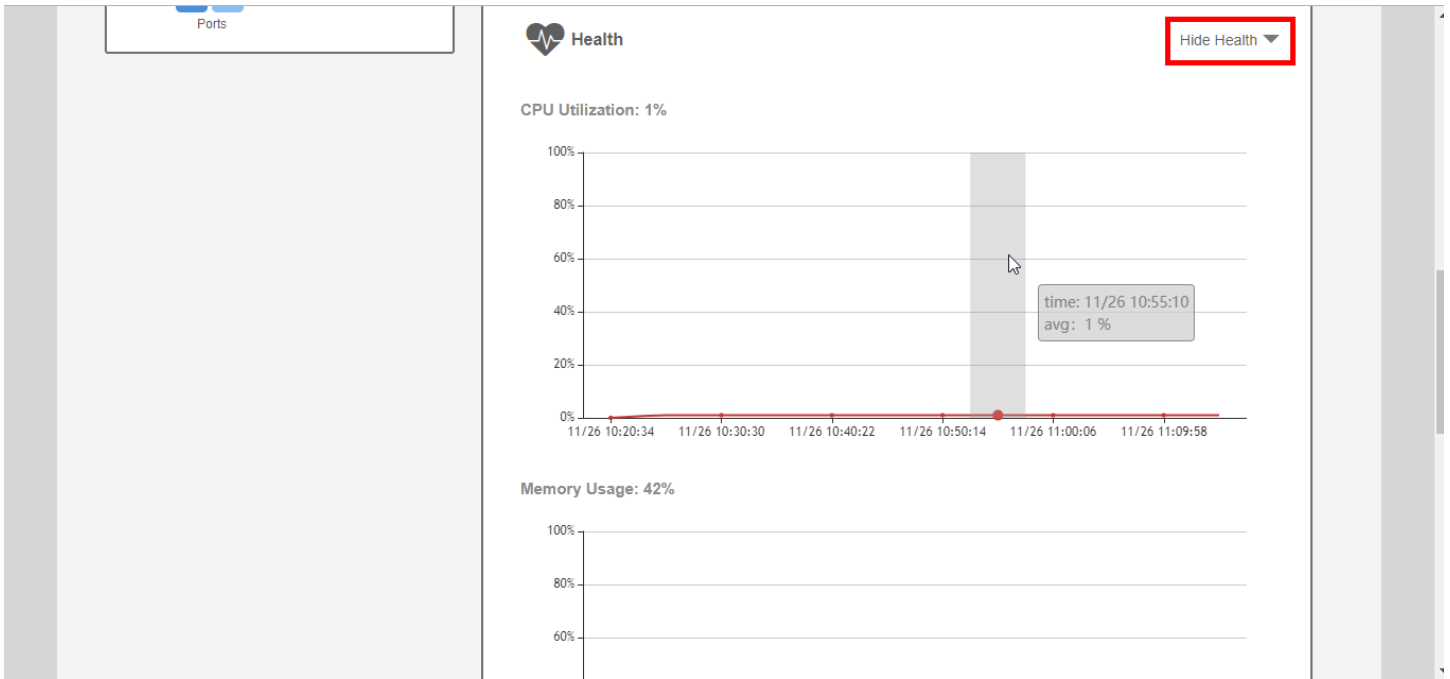FIGURE 206 Monitoring Switch Health Details



Click **Show Events & Alarms** to expand the section and view switch event and alarm lists.

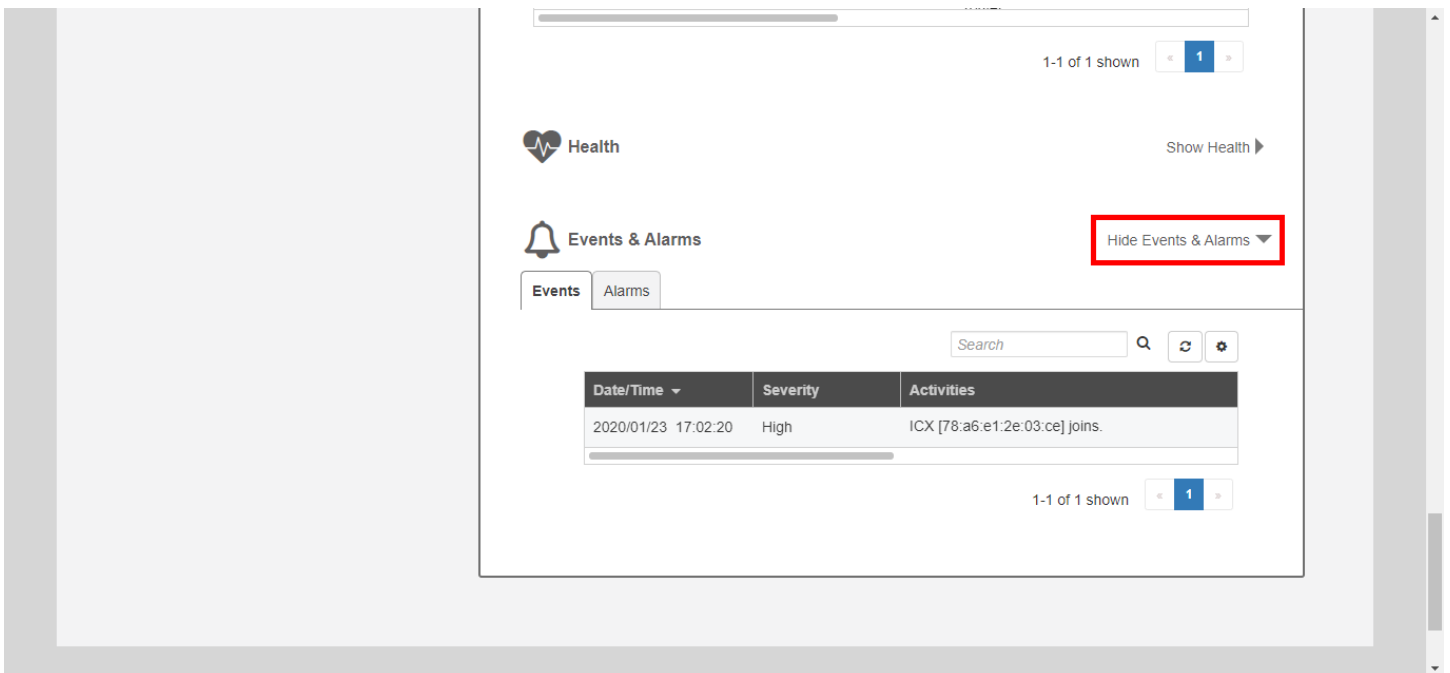
FIGURE 207 Viewing Switch Event and Alarm Lists



Accessing the RUCKUS Switch Home Page

To access the RUCKUS switch home page from within Unleashed without manual login, click the **To manage the ICX switch, click here** link. Enter the user name and password, and click **Login** to log in to the RUCKUS switch home page.

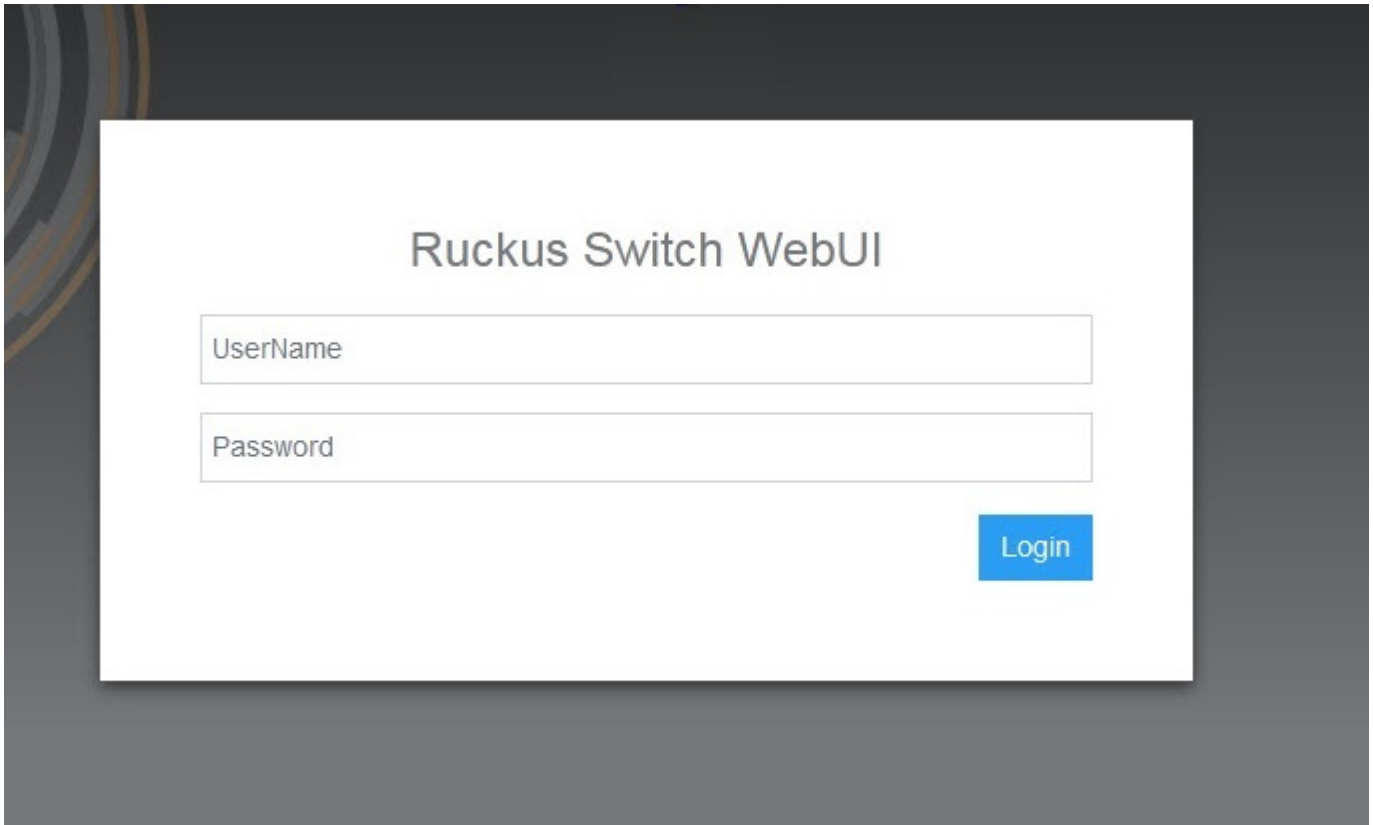FIGURE 208 Logging In to the RUCKUS Switch Home Page



NOTE

- Access to the RUCKUS switch home page is supported only for ICX firmware version 9.0.0 or later.
- Access to the RUCKUS switch home page redirection is available only when an ICX switch is connected.
- You can extend the available redirection window time. The standard available redirection window time is 10 minutes.

Managing Switch Ports


The "Ports Info" link expands to display information on overall switch status such as the number of ports used and available and PoE power budget usage. Individual switch ports can be managed by selecting the specific port from the switch port diagram or from the port list table below.

To manage ICX switch ports:

1. Expand the **Switches** dashboard component, and select a connected switch from the list on the left.


- Click **Show Ports Info** to expand the port details view.

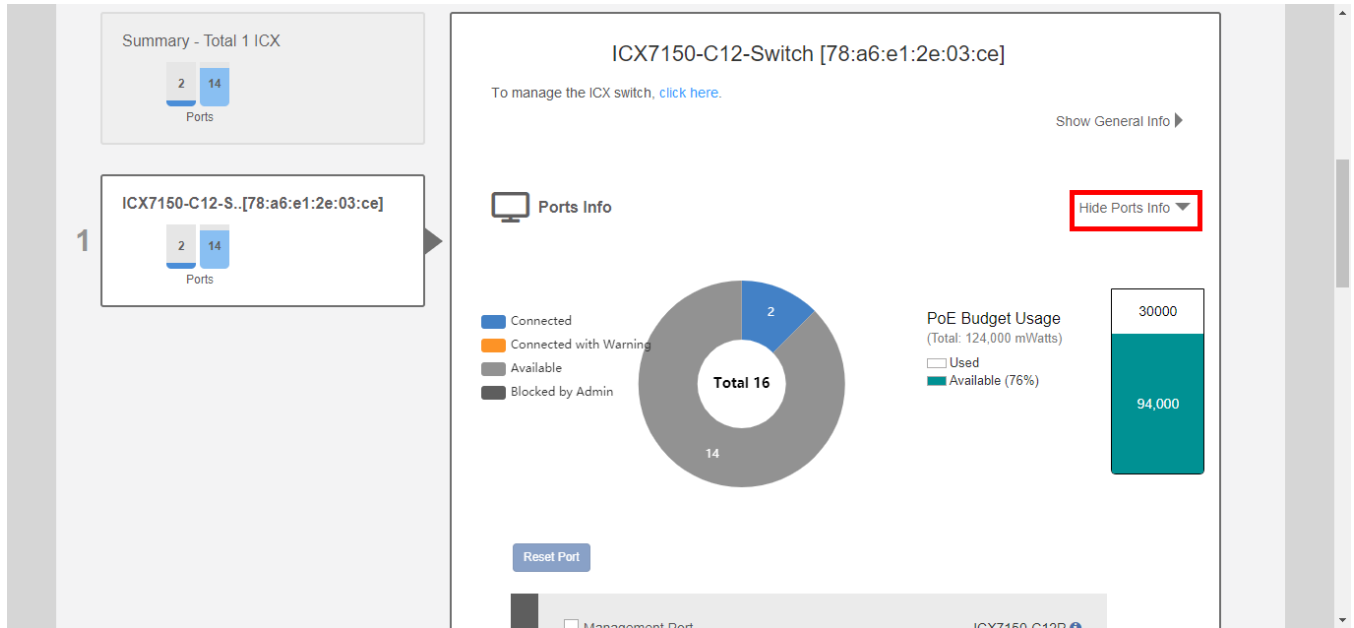FIGURE 209 The "Ports Info" view displays summary info and per-port details



- Select an individual port from the port diagram or port list table.

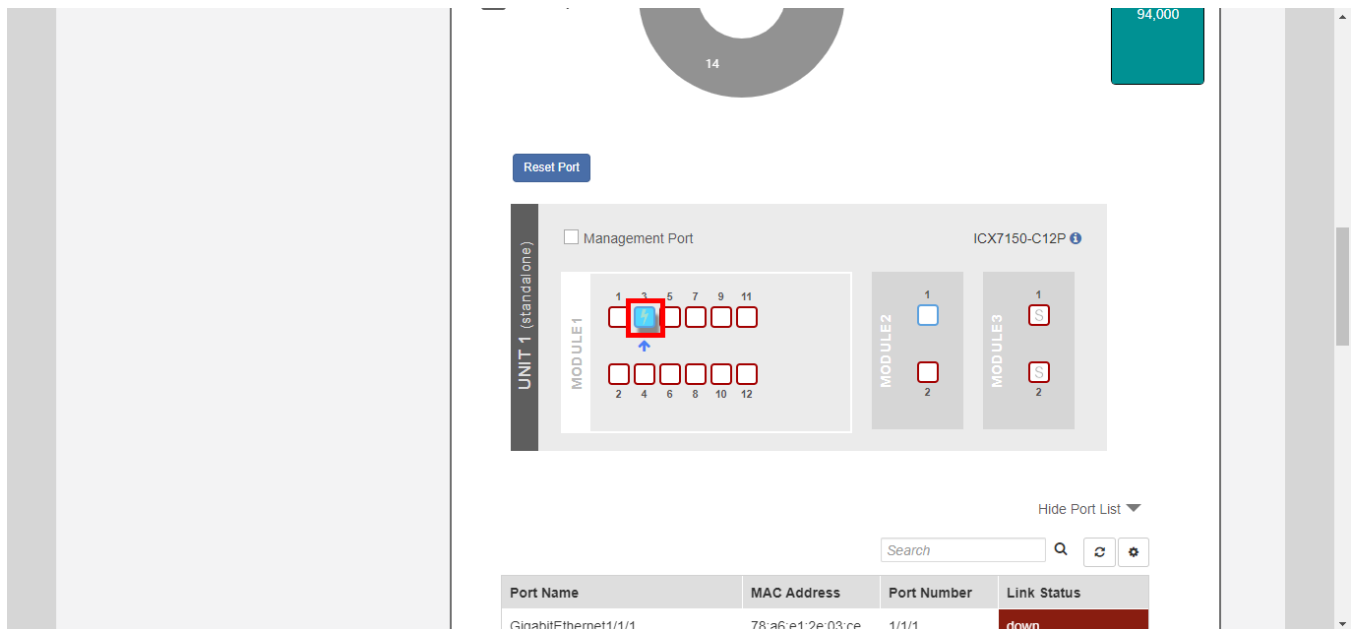
FIGURE 210 Select a switch port to display details on that port



- Review the details in the switch port list for the port selected.


- To reboot a device connected to a PoE switch port, click the **Reset Port** button. The port reset button can be used to power cycle a connected device by powering down and back up a PoE port.

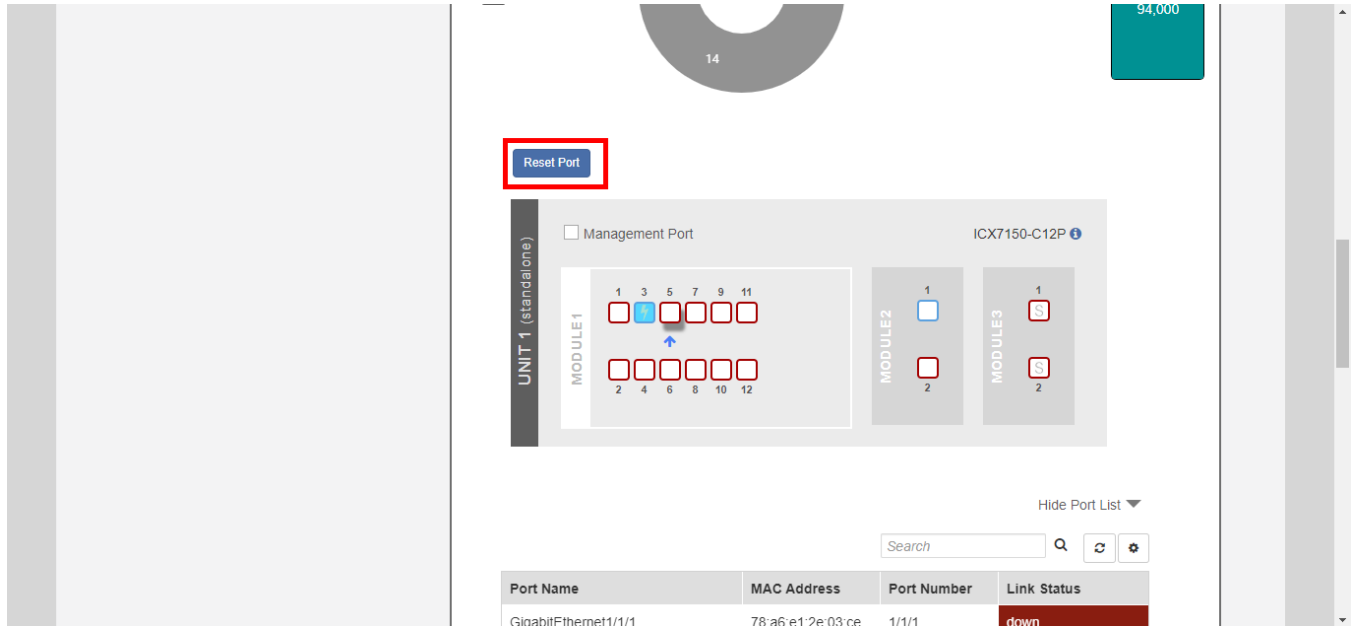FIGURE 211 Resetting a switch port



- Scroll down to view the traffic trend chart and LLDP neighbor list for a port.

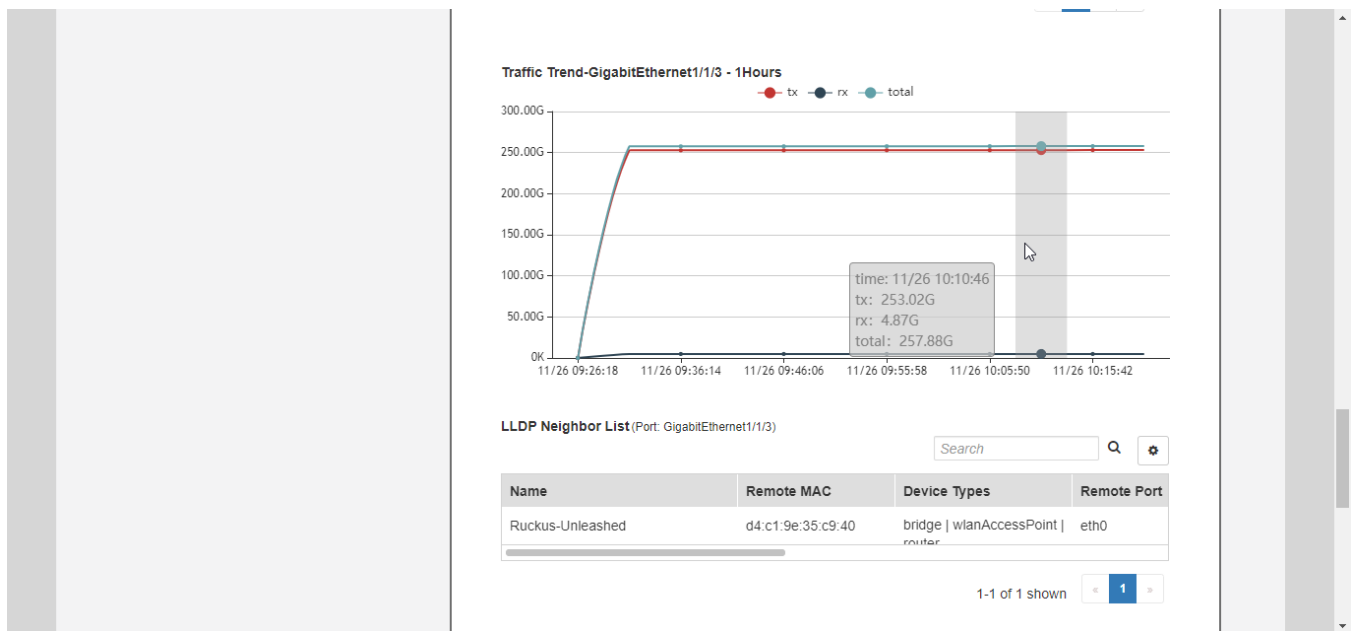FIGURE 212 Viewing a port's traffic statistics and LLDP neighbors




Backup and Restore Switch Configuration

Unleashed ICX switch management provides tools for performing a backup of current ICX switch configuration and restore to a previously saved configuration backup file.

Use the following procedure to perform a backup and restore of the current switch configuration:

1. Expand the *Switches* dashboard component and select a connected switch from the device list on the left.
2. Click **More > Back up**. The switch status displays *"Downloading"* as the configuration file is generated and prepared for download.

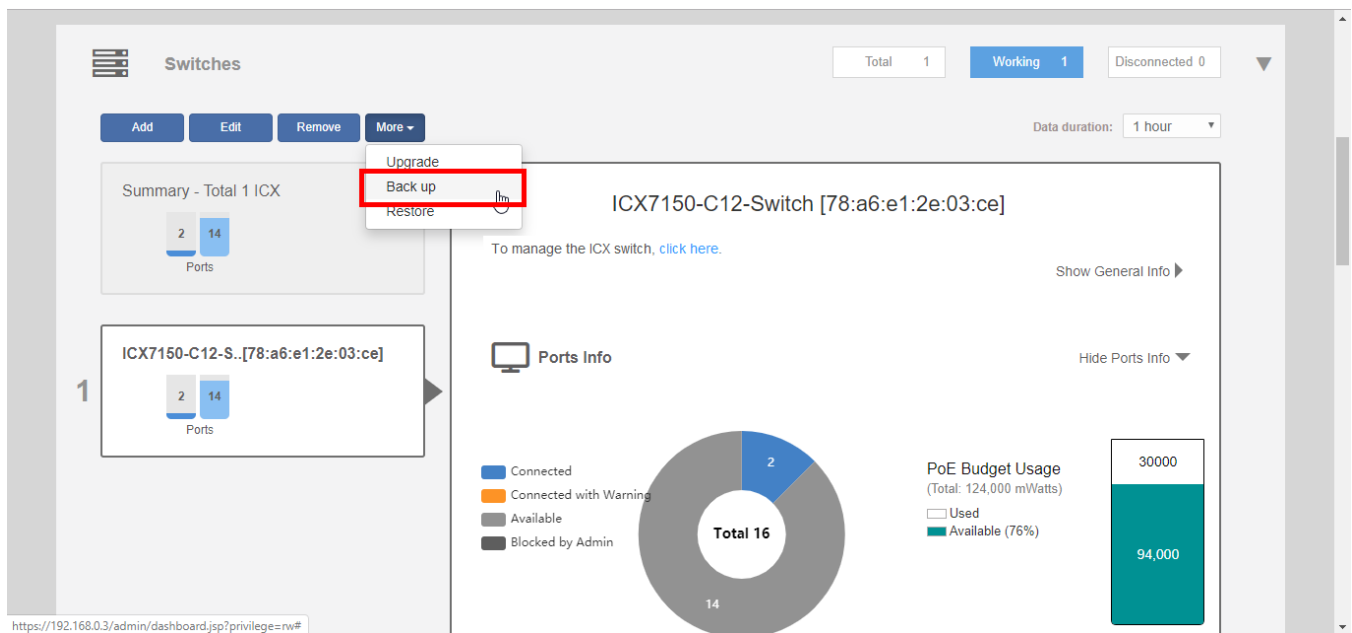
FIGURE 213 Backup Switch Configuration



3. When finished, the backup file is created as a .txt file that can be saved to your local computer.
4. Save the backup file to a convenient location.


- To restore configuration settings from a previously saved backup file, click **More > Restore**.

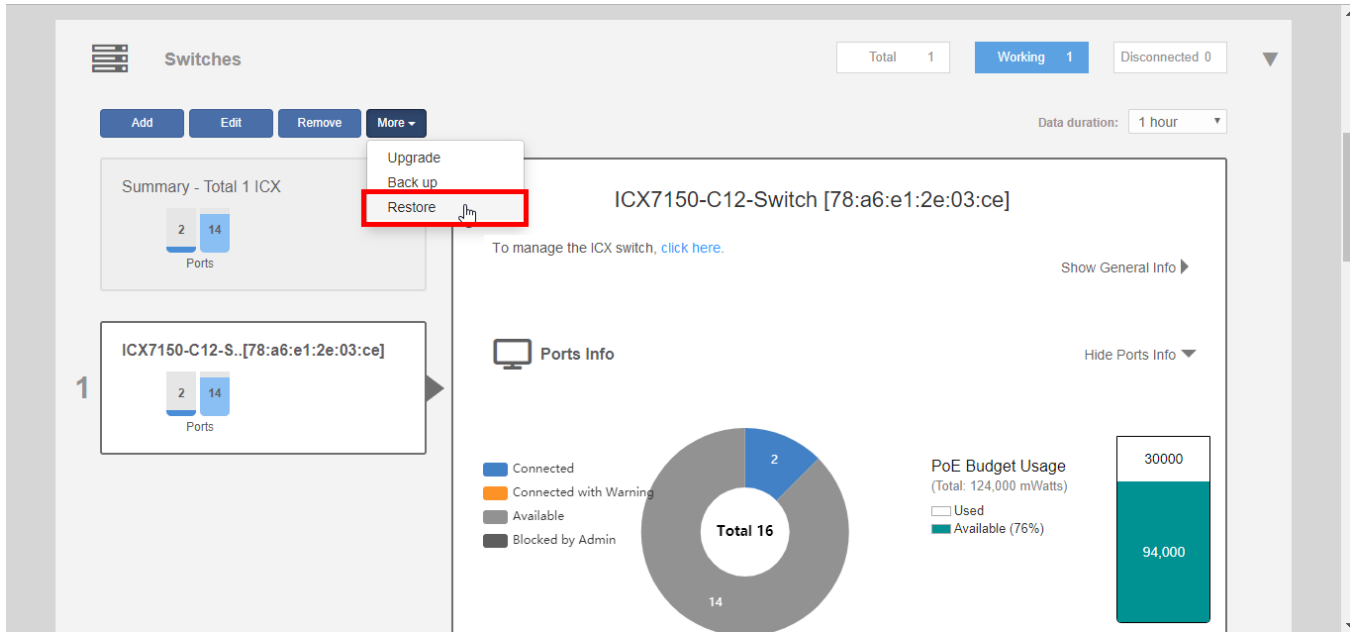FIGURE 214 Restore Switch Configuration




- In the *Restore* dialog, click **Choose File** and select a valid backup file.
- Click **Restore**.

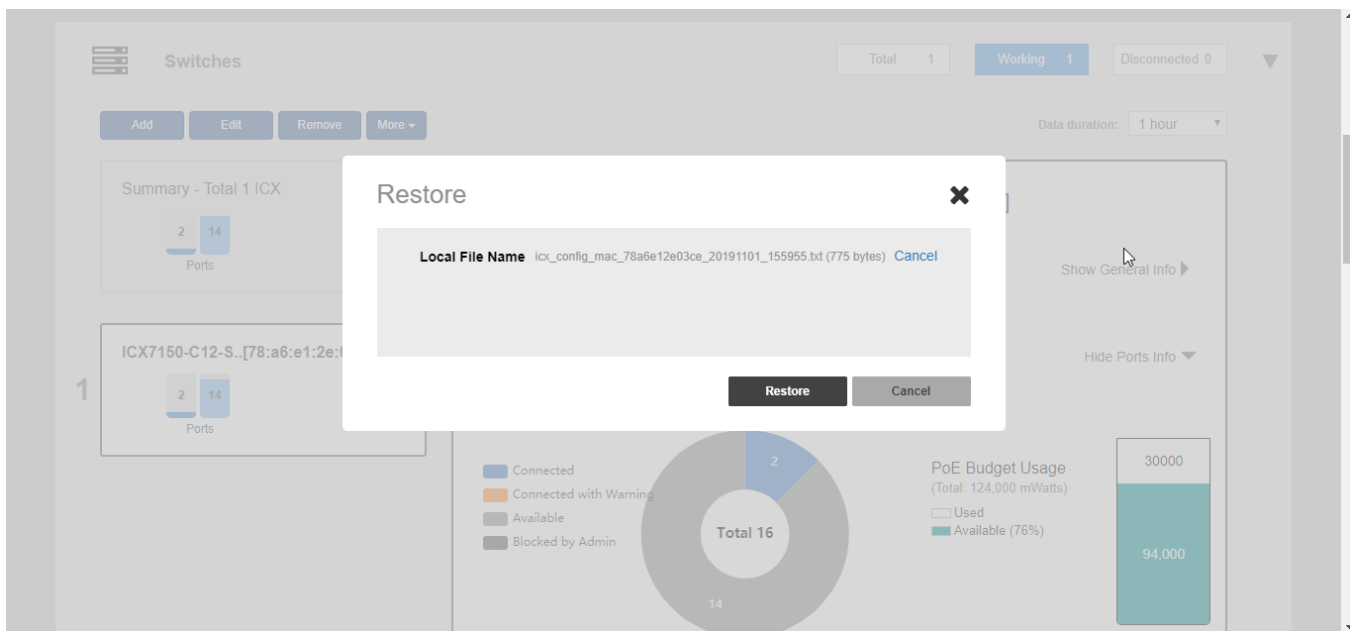FIGURE 215 Restore Configuration from Backup File




- A warning message appears notifying you that the restore process will cause a power outage to the Unleashed network. Click **Yes** to confirm.

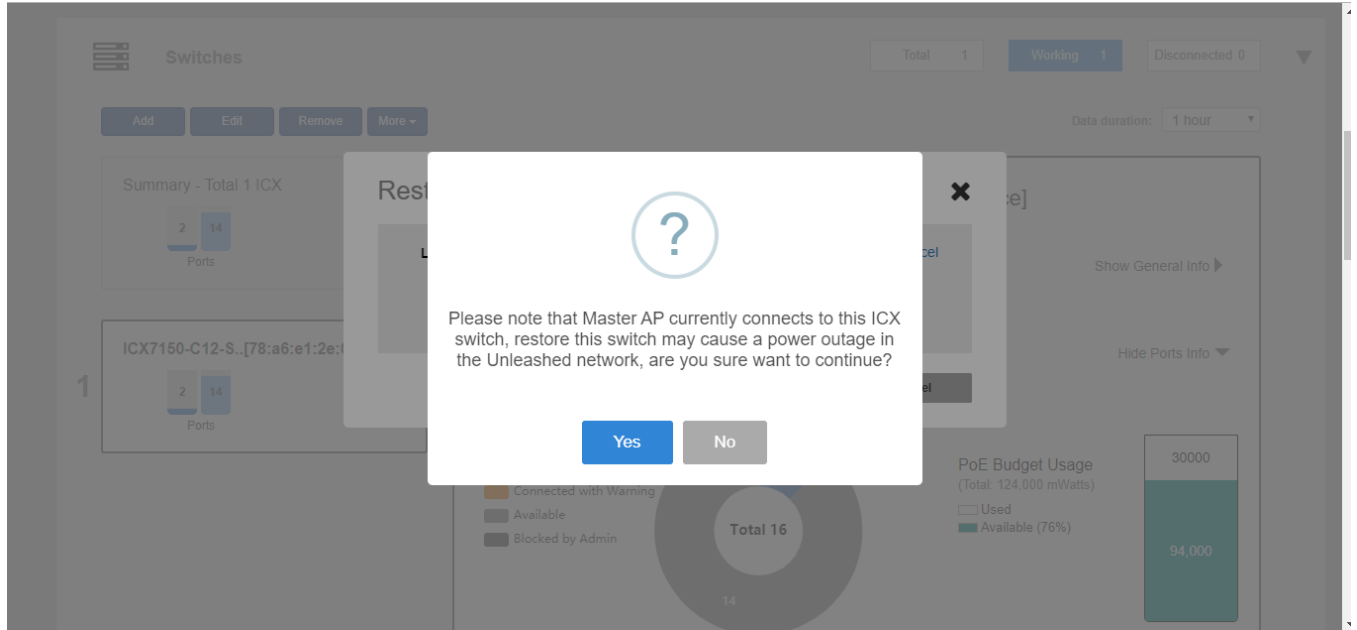FIGURE 216 Switch Restore Warning




- The *Switch restore in process* screen appears, notifying you that the restore process may take 10 minutes or more.

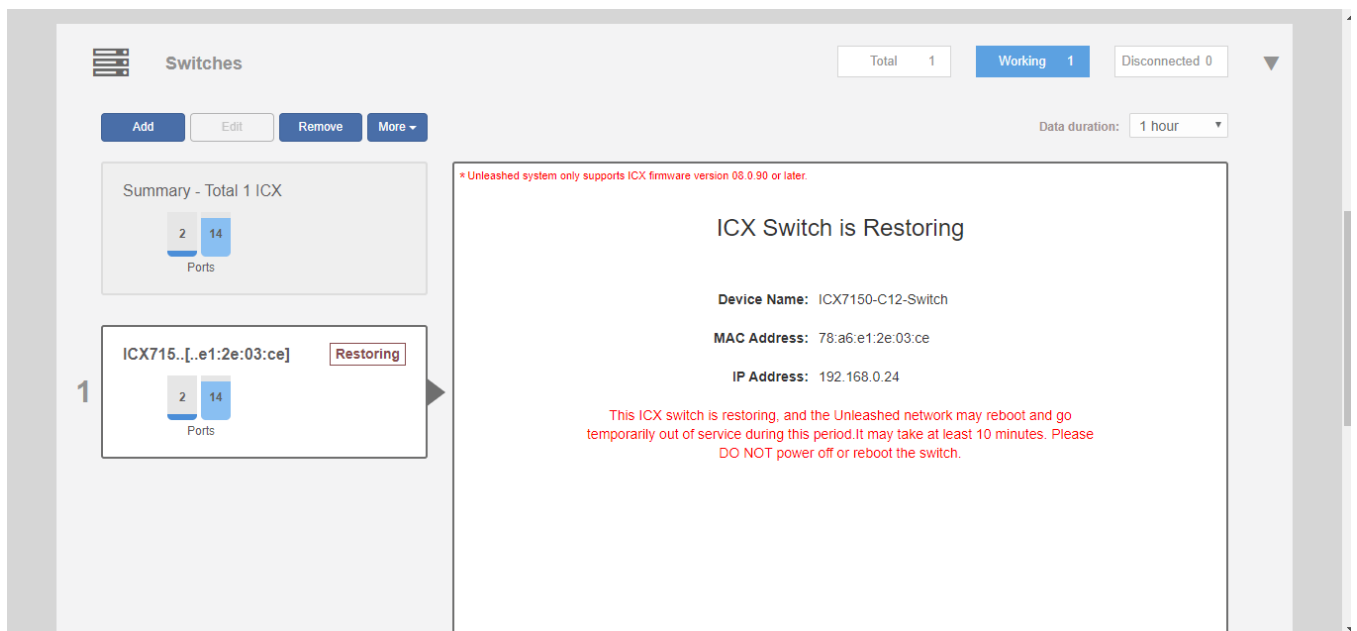FIGURE 217 Switch Restore in Process



10. The *Rebuilding the Unleashed Network* screen appears, displaying a progress bar. Do not power off or reboot the AP, or refresh your browser or click the browser's back button.

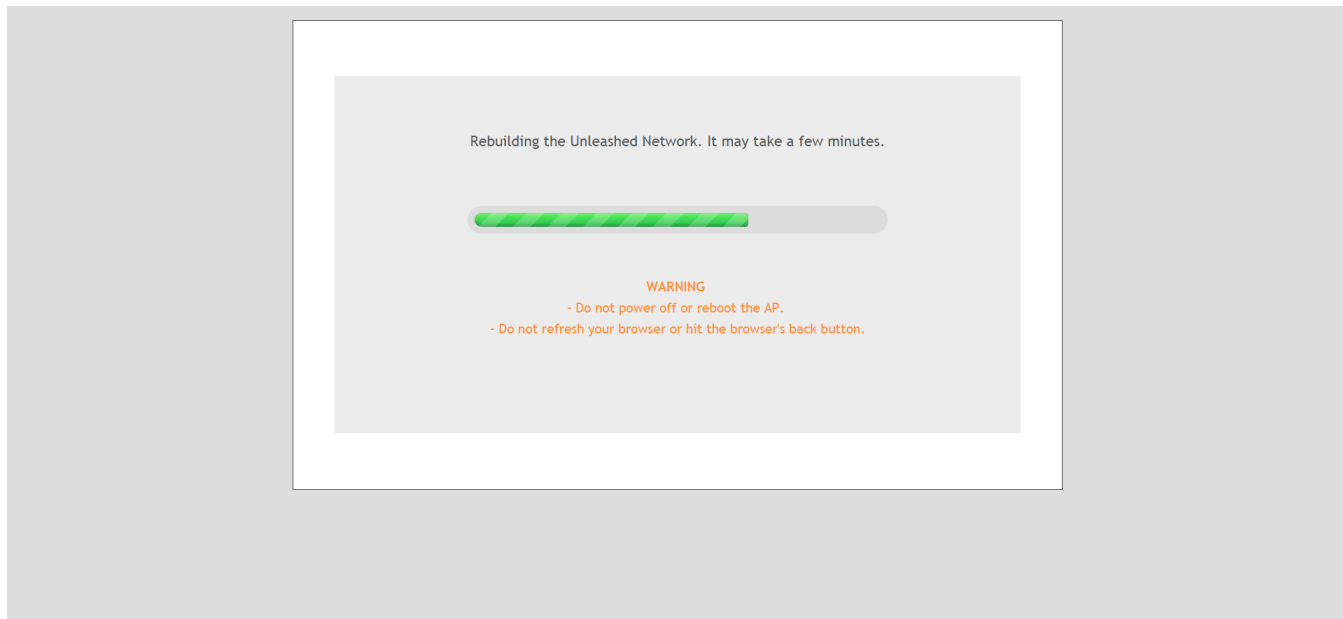FIGURE 218 Rebuilding Unleashed Network



11. When the process is finished, the restored switch appears in the connected device list.

Upgrading ICX Switch Firmware


Unleashed management requires FastIron firmware version 08.0.90 or later.

To upgrade the firmware of an ICX switch, use the following procedure:

1. Expand the *Switches* dashboard component and select a connected switch from the connected device list on the left.


2. Click **More > Upgrade**.

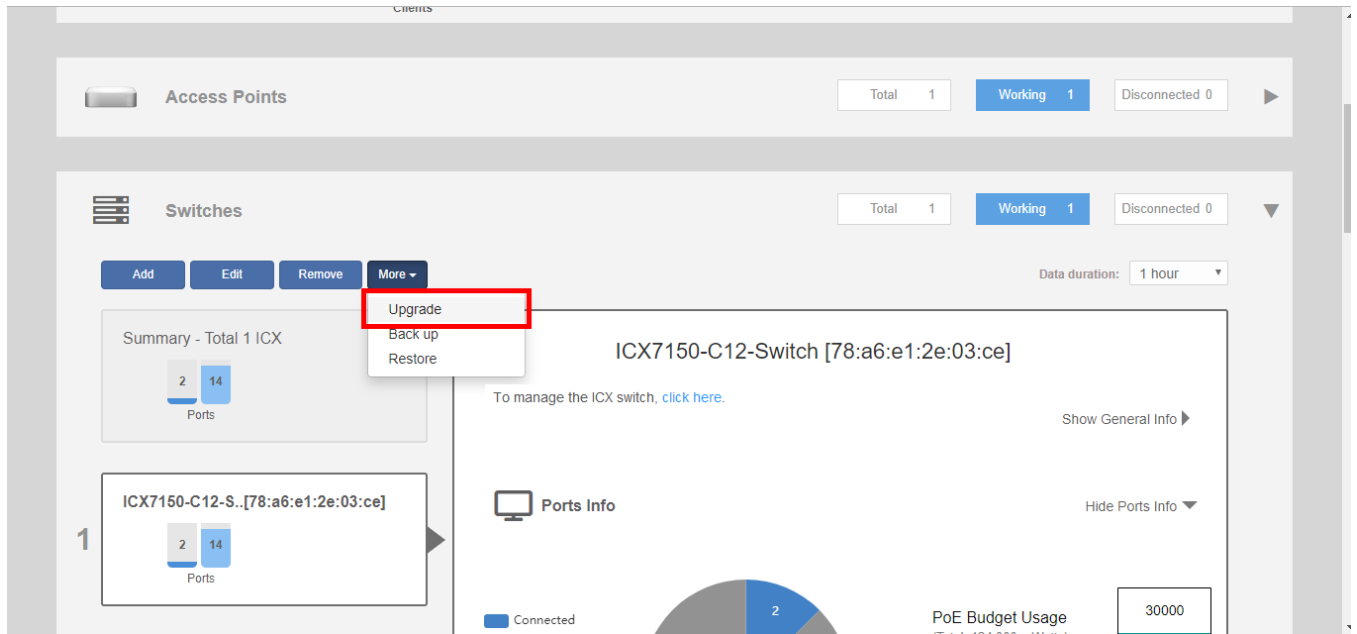FIGURE 219 Upgrading an ICX switch




3. In the *Upgrade* dialog, click **Choose File** and select a valid FastIron image file.

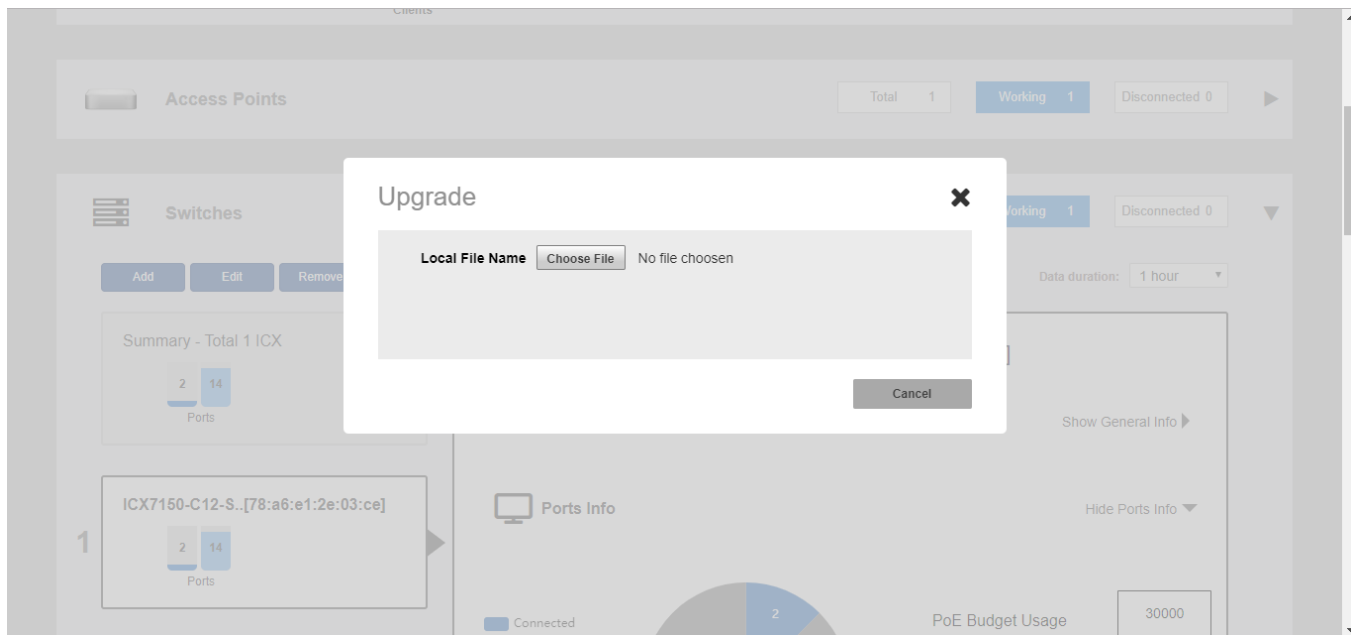FIGURE 220 Choose upgrade image file




- Click **Upgrade**. A warning message appears notifying you that the upgrade will cause a power outage to your Unleashed APs. Click **Yes** to continue.

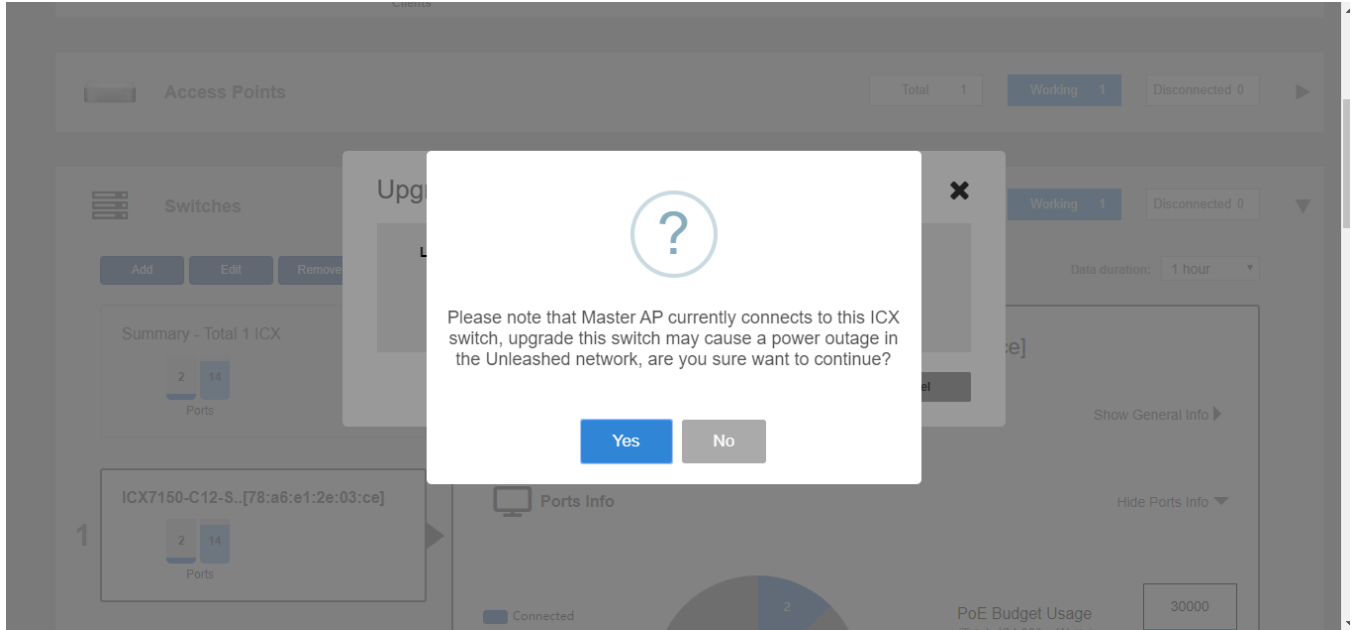FIGURE 221 Upgrade warning message



- When the upgrade is complete, Unleashed reboots and displays the switch in the connected device list.
- Verify the new firmware version from the **Show General Info** display.

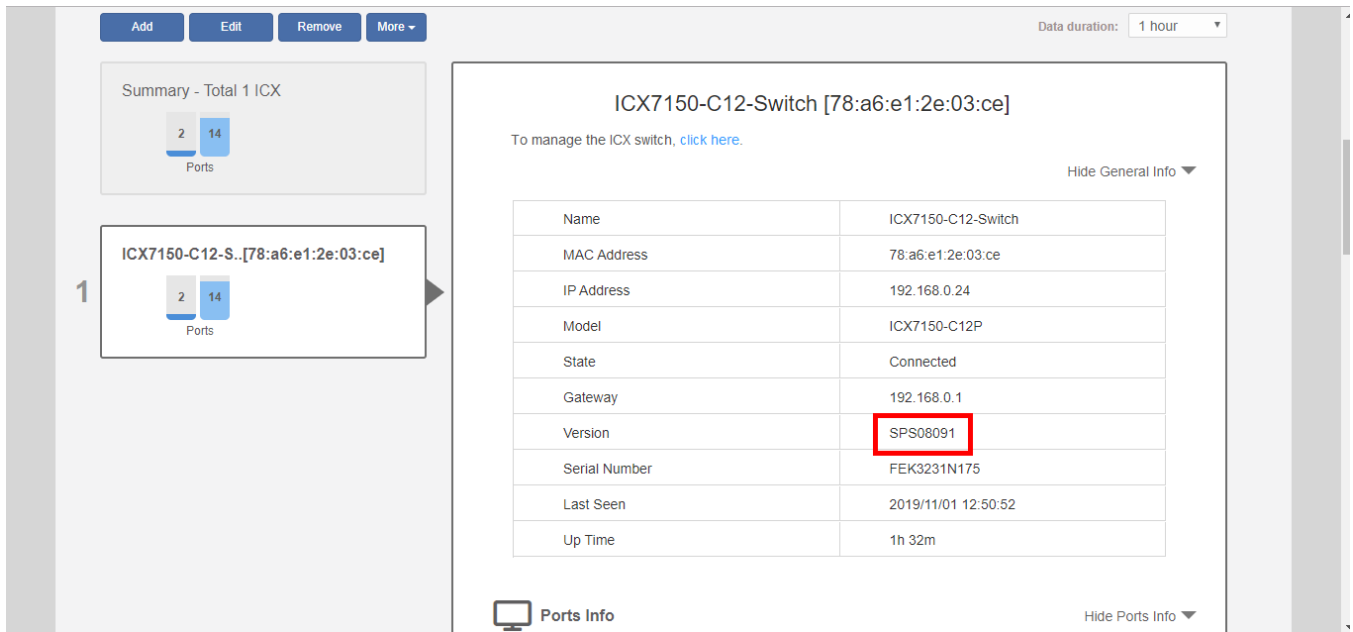FIGURE 222 Verify switch version



Working with Clients

- Client Management Overview..... 323
- Viewing the Clients List..... 323
- Renaming a Client..... 325
- Deleting a Client..... 327
- Permanently Blocking a Client Device..... 327
- Marking a Client as a Favorite..... 328
- Running a SpeedFlex Performance Test on a Wireless Client..... 329
- Client Connection Troubleshooting..... 333
- Marking a Client as a Legacy Device..... 335
- Adding User Accounts to the Internal User Database..... 335
- Authenticating Clients Using an External Database..... 336


Client Management Overview

The Unleashed Admin Interface provides tools for monitoring and managing wireless clients, including blocking and deleting client devices, viewing an overview of client traffic, and drilling down into details about a specific client's connection status and traffic statistics.

Viewing the Clients List

To view a list of currently connected wireless clients, expand the **Clients** section on the **Dashboard**.

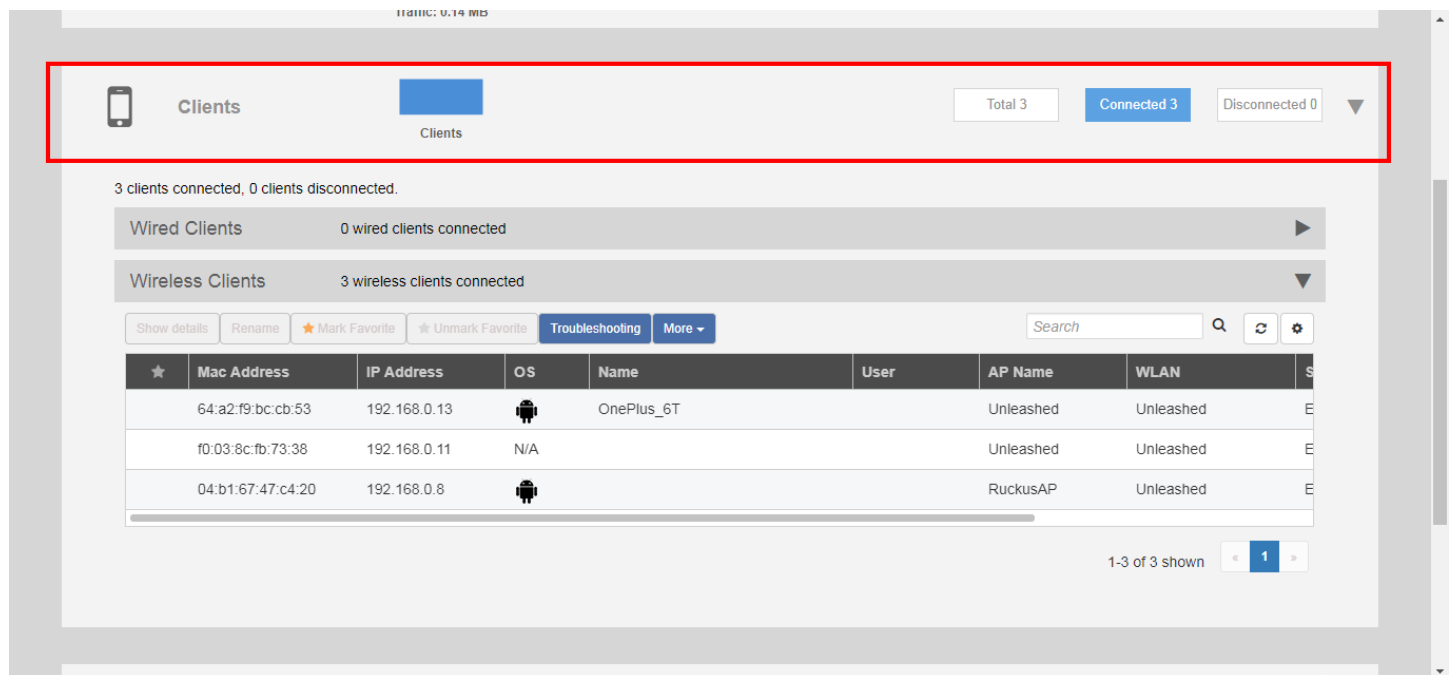FIGURE 223 Viewing the currently connected Clients list



Renaming a Client

Unleashed collects client host names from the client's operating system and displays them in client lists, tables and charts on the web interface. However, the host names provided by the OS are often not very useful in identifying clients on the network.


Entering a custom host name manually via the web interface is one way to address this issue.

Any renamed clients will be displayed using the new name whenever they are online. The maximum number of marked clients is 520. When this max is reached, Unleashed will delete the oldest renamed offline stations, 10 stations at a time, and trigger an alarm event to indicate the renamed stations have been deleted.

To rename a connected wireless client:

1. Open the **Clients** component, and select the client you want to rename from the list.
2. Click **Rename**.

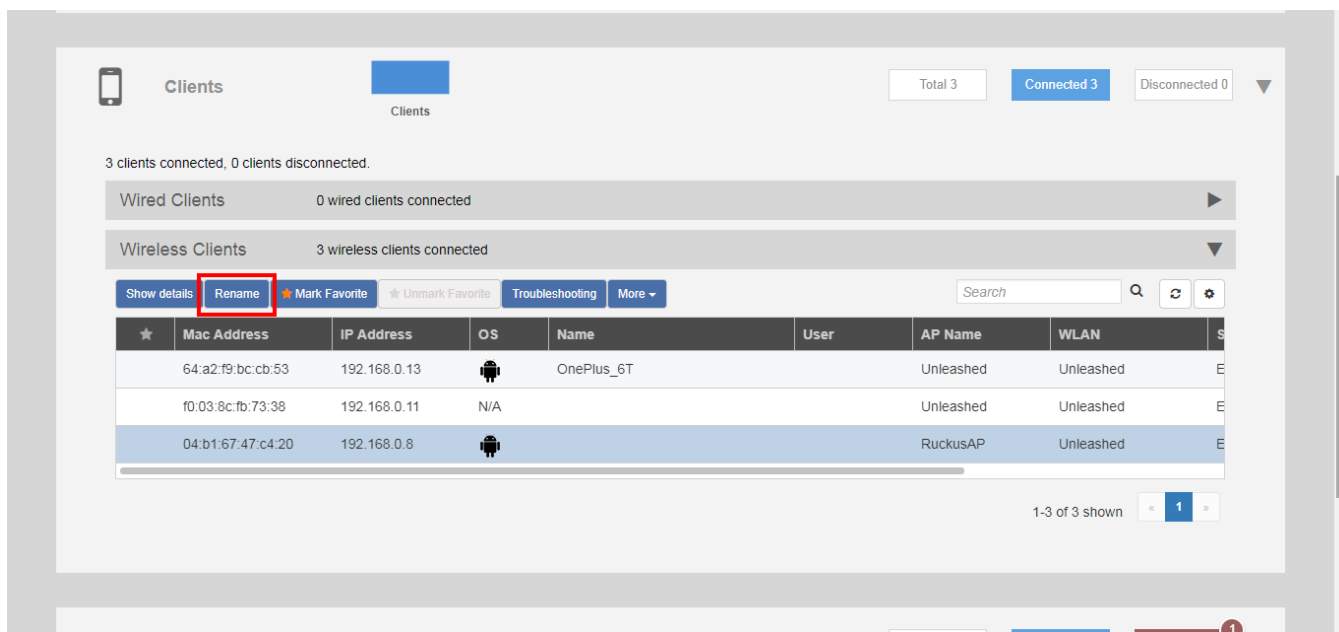FIGURE 226 Rename a client




The *Rename Client* dialog appears.

Working with Clients

Renaming a Client


3. Enter the **New Name**, and click **OK**.

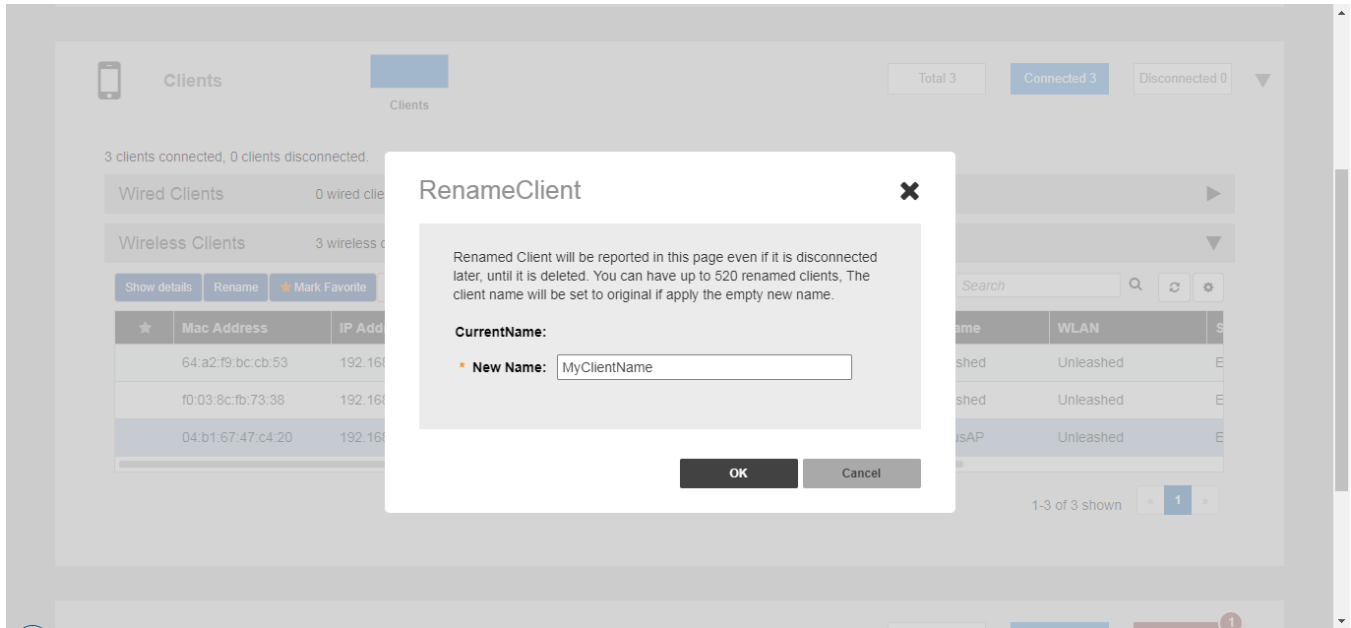FIGURE 227 Enter new client name



4. The new client name now appears in clients lists in the *Host Name* column.

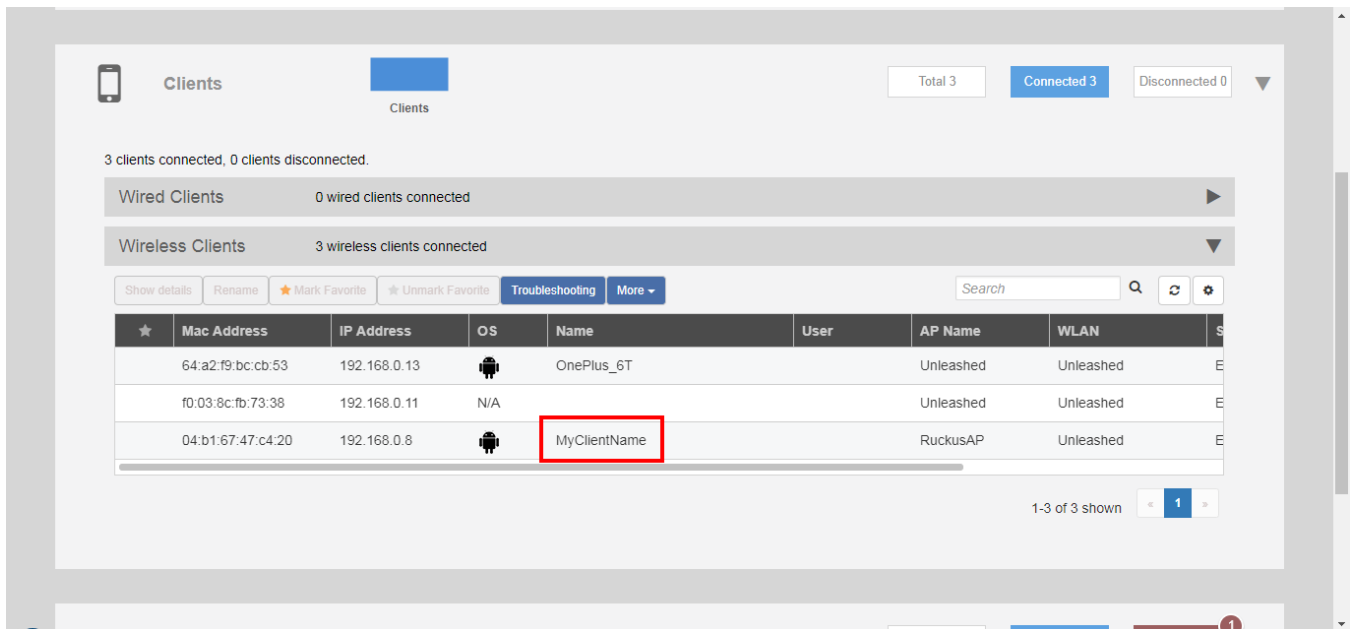FIGURE 228 New name appears in Host Name




Deleting a Client

Follow these steps to temporarily disconnect a client device from your WLAN. (The user can simply reconnect manually, if they prefer.) This is helpful as a troubleshooting tip for problematic network connections.

1. Expand the **Clients** component on the Dashboard.
2. Select a client from the list, and click **Delete**.

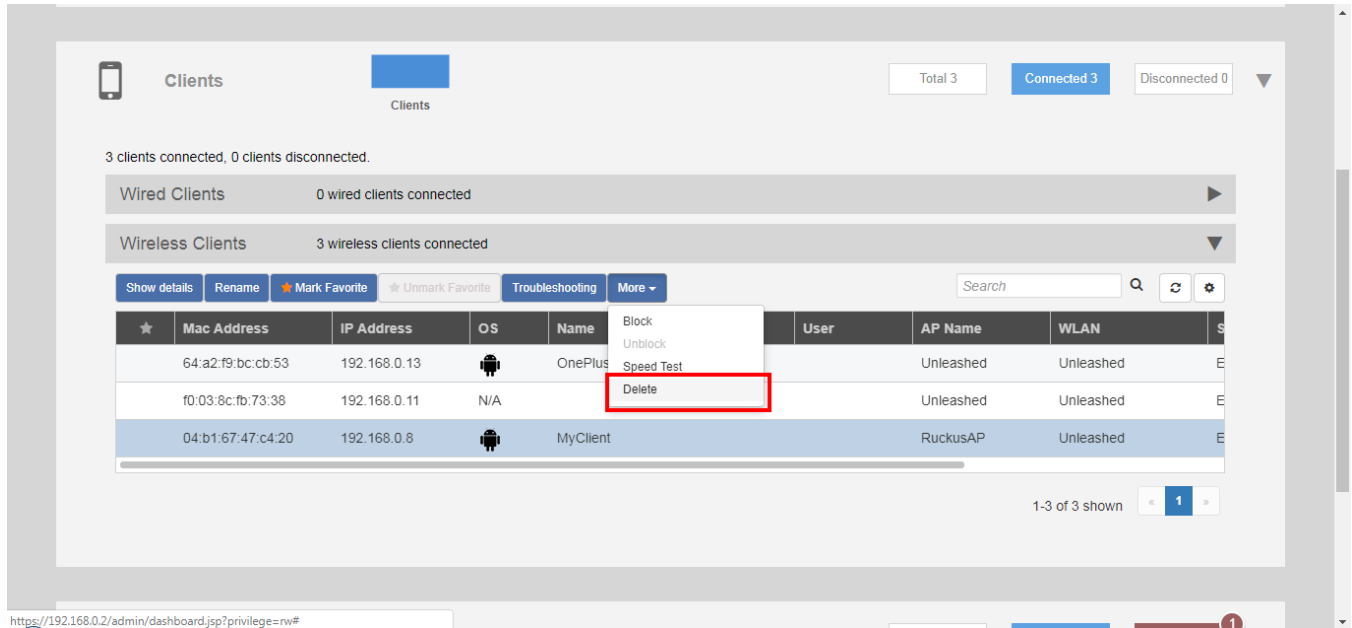FIGURE 229 Click the Delete button to temporarily delete a client. The client will be able to reconnect.



The entry is deleted from the Active Clients list, and the listed device is disconnected from your WLAN.

The user can reconnect at any time, which, if this proves to be a problem, may prompt you to consider [Permanently Blocking a Client Device](#) on page 327.

Permanently Blocking a Client Device

Follow these steps to permanently block a client device from WLAN connections.


1. Look at the *Status* column to identify any unauthorized users.

Working with Clients

Marking a Client as a Favorite

2. Select an AP from the list, and click the **Block** button from the **More** pull-down menu to move this client to the blocked clients list.

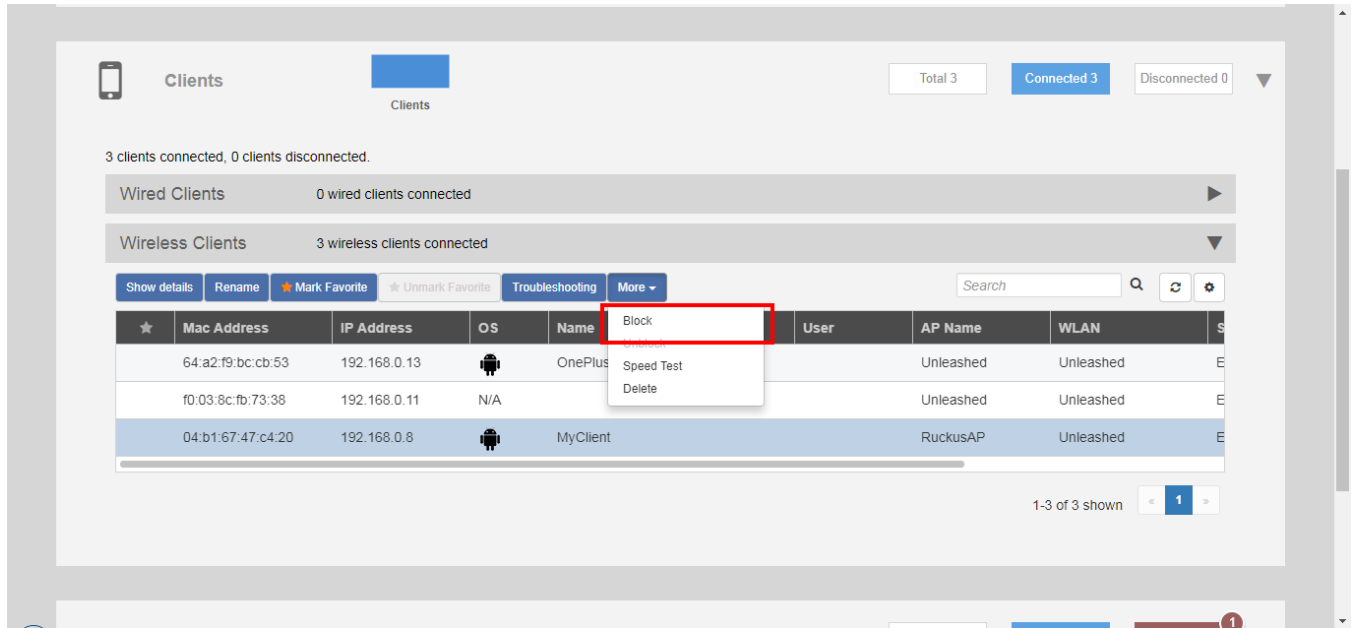FIGURE 230 Block a client to permanently prevent it from joining your network(s)



3. The status is changed to *Blocked*. This will prevent the listed device from using your Ruckus WLANs.

Marking a Client as a Favorite

Designating a client as a "favorite" client provides a way to monitor the client's behavior, triggering a report when the client goes online or offline.

NOTE


Unleashed supports a maximum of 20 favorite clients.

To mark a client as a favorite, use the following procedure:

1. Expand the **Clients** component on the Unleashed Dashboard.

2. Select a client from the list, and click **Mark Favorite**.

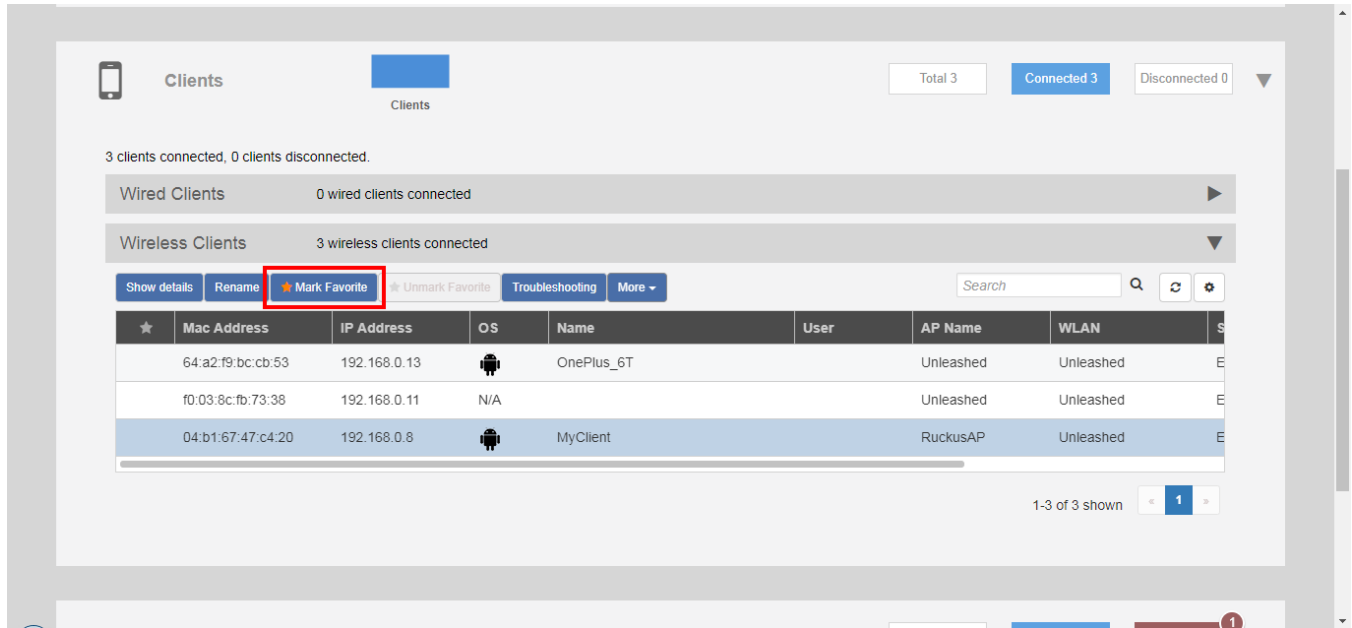FIGURE 231 Mark Favorite



An alarm event will be generated each time this client goes online or offline.

Running a SpeedFlex Performance Test on a Wireless Client

You can test the wireless throughput to a client using the SpeedFlex tool.

To do so, you will need to install and run the SpeedFlex application on the client device.


1. Expand the **Clients** menu.

Working with Clients

Running a SpeedFlex Performance Test on a Wireless Client


2. Select a client device from the list and click **Speed Test** from the **More** pull-down menu.

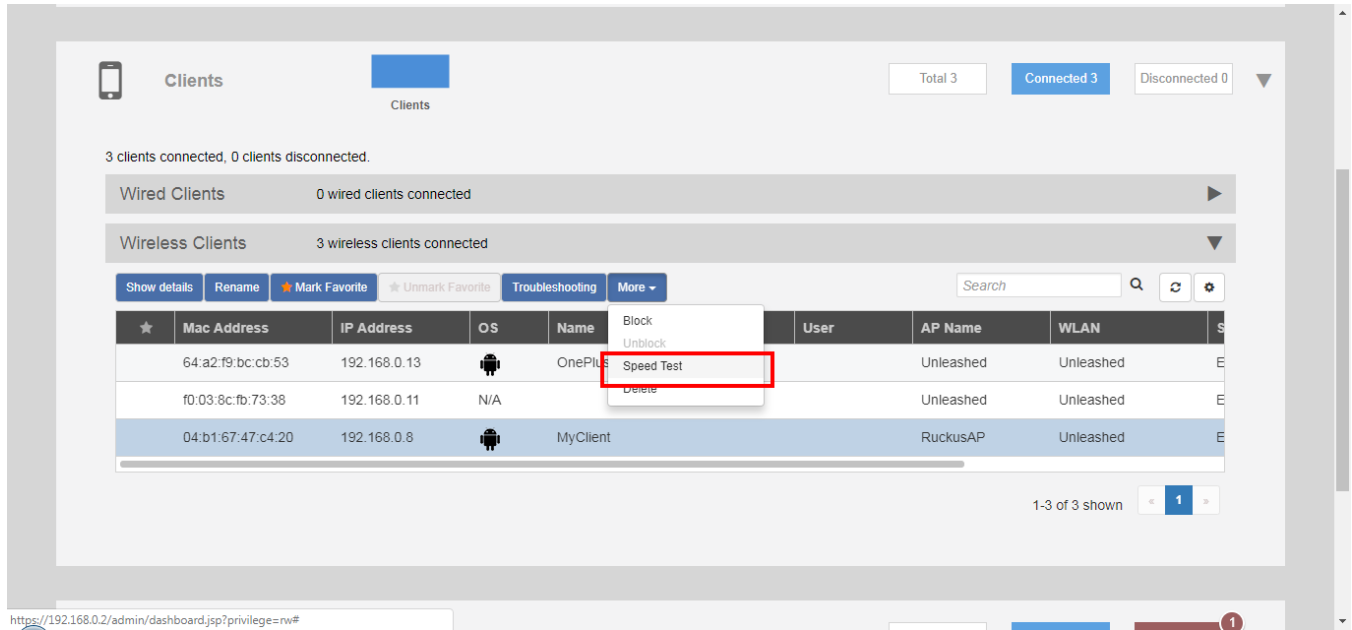FIGURE 232 Select a client and click Speed Test




3. A Speed Test dialog appears. Click **Start** to begin.
4. If the SpeedFlex application is not already running on the client, follow the instructions to install and run the application on your client device.

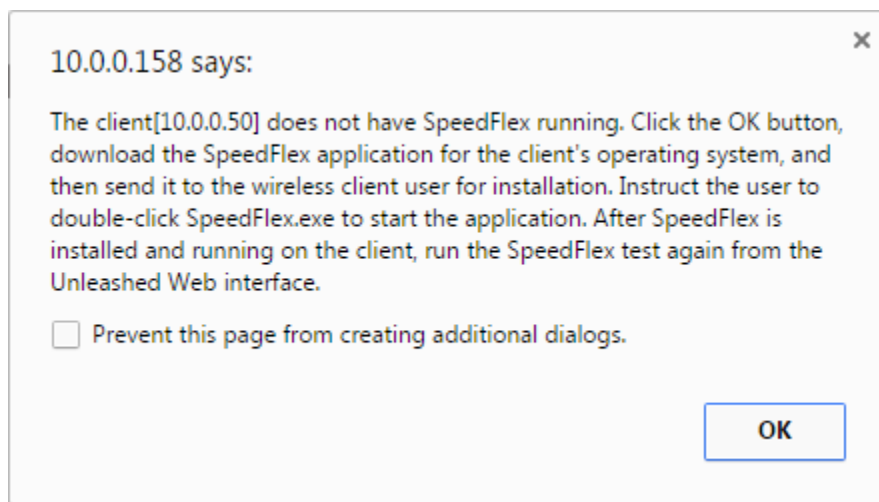FIGURE 233 The client does not have SpeedFlex running



5. Download the SpeedFlex application for your Operating System. Choices are:
 - Windows
 - Mac (Intel)
 - Android

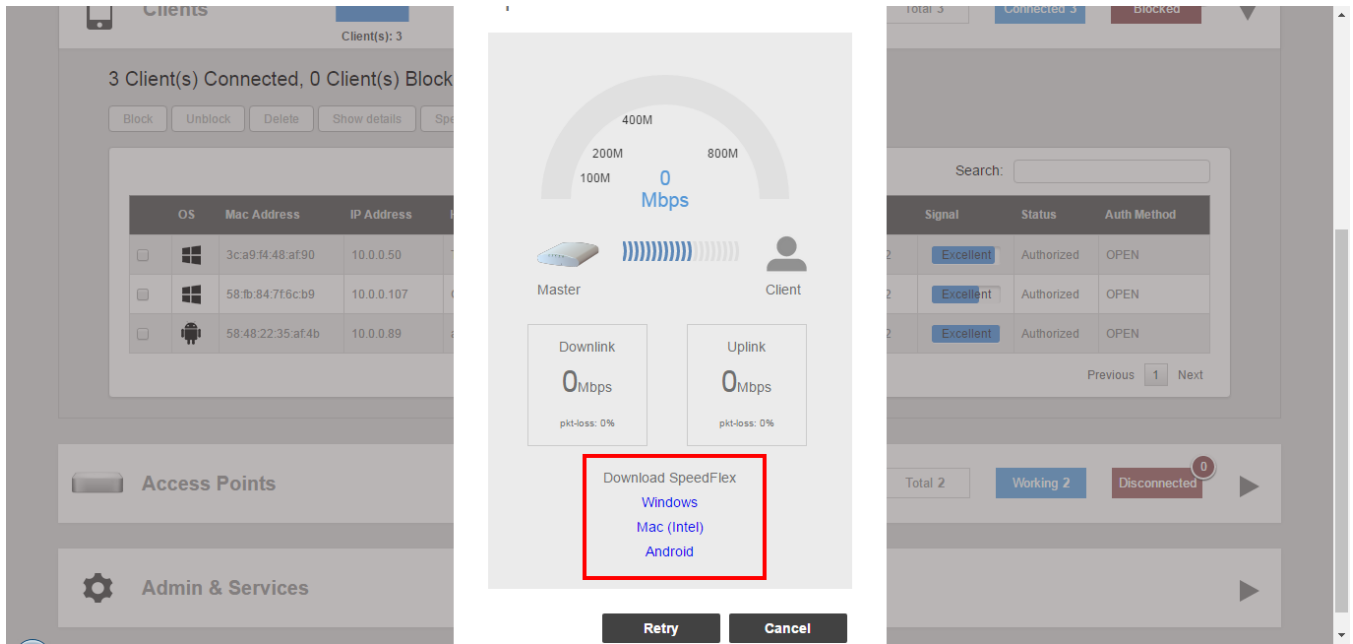FIGURE 234 Download SpeedFlex




6. Install and run the application.

Working with Clients

Running a SpeedFlex Performance Test on a Wireless Client


7. With the application running, click **Retry**.

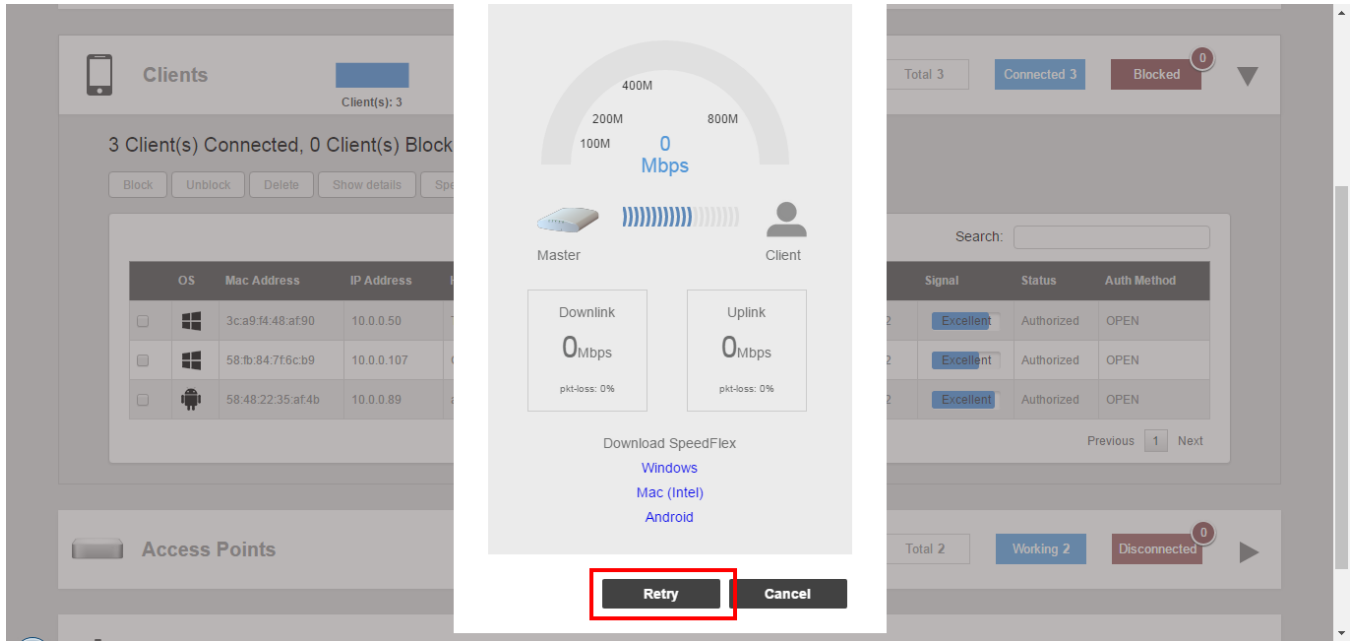FIGURE 235 Click Retry



8. When the test is complete, the average Downlink and Uplink speed results are displayed along with packet loss percentages.

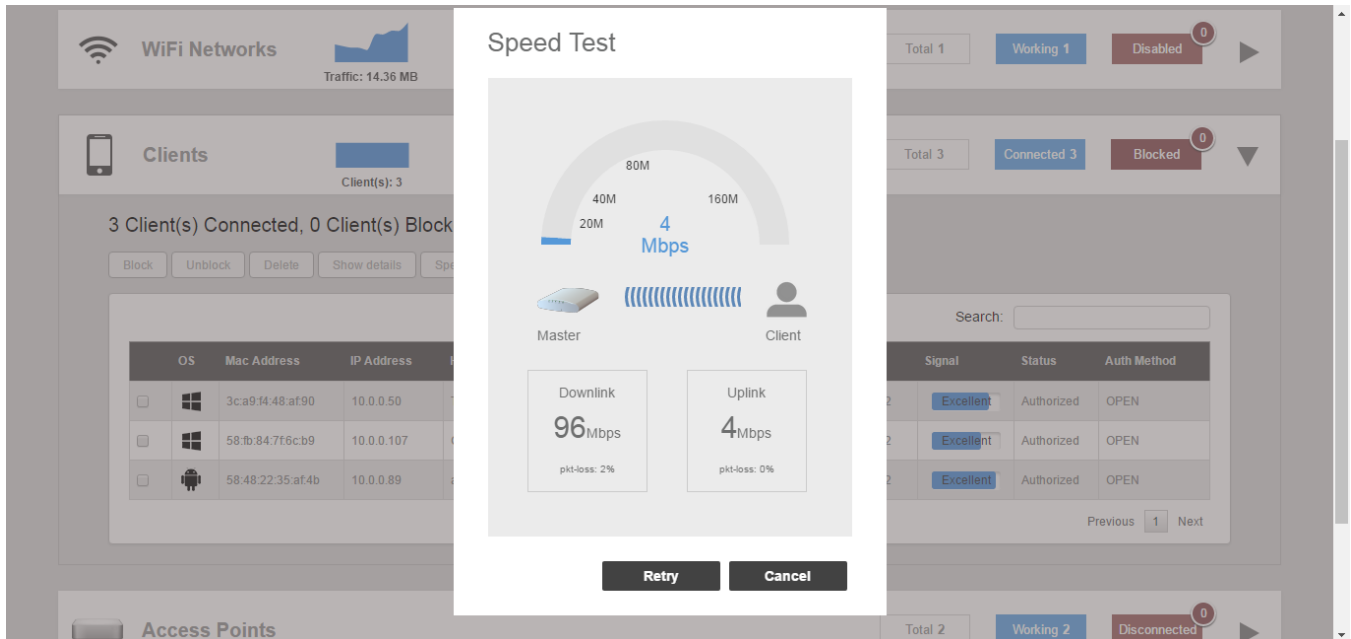FIGURE 236 SpeedFlex results



Client Connection Troubleshooting

The client connectivity trace feature is designed to help customers diagnose wireless client connection issues to determine why a client fails to connect to the wireless network.

To perform a client connectivity trace:

1. Open the **Clients** section, and select the problematic client from the list.

NOTE

Alternatively, go to **Admin & Services > Administration > Diagnostics > Client Troubleshooting**, and locate the **Client Connection Logs** section.


NOTE

As of release 200.8, client connection traces can be performed on clients connected to the following WLAN types:

- WPA2
- Web Auth
- Hotspot
- Guest Access

2. Click **Troubleshooting**.

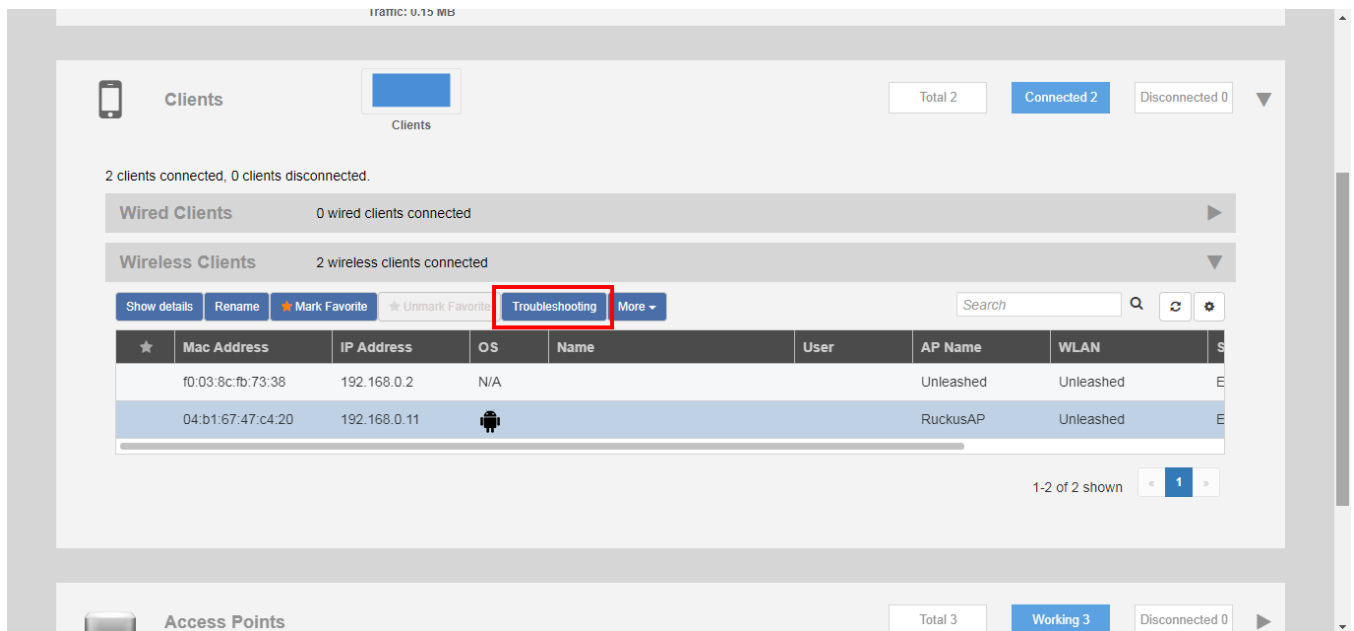FIGURE 237 Click Troubleshooting to perform client connectivity trace



The *Troubleshooting* screen appears.

- In *Connectivity Trace*, click the **Start** button to begin. The association trace begins. The page refreshes to display detailed results.

FIGURE 238 Click Start to begin connectivity trace


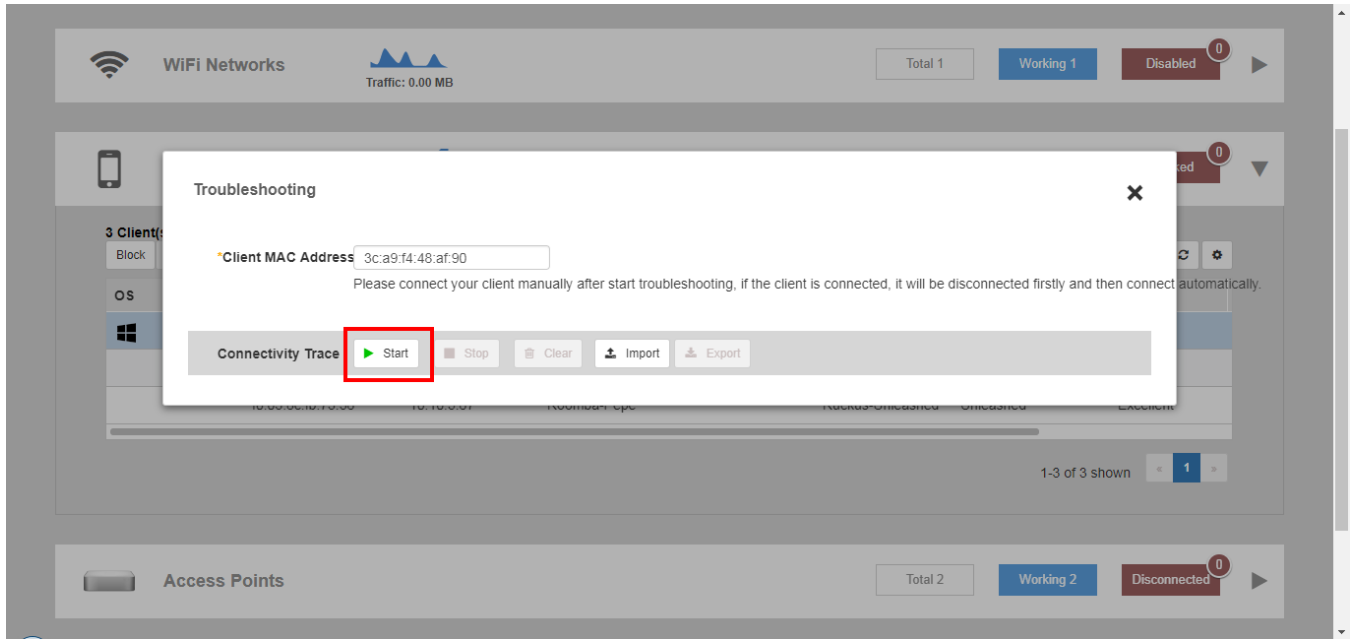


FIGURE 239 Connectivity trace in progress

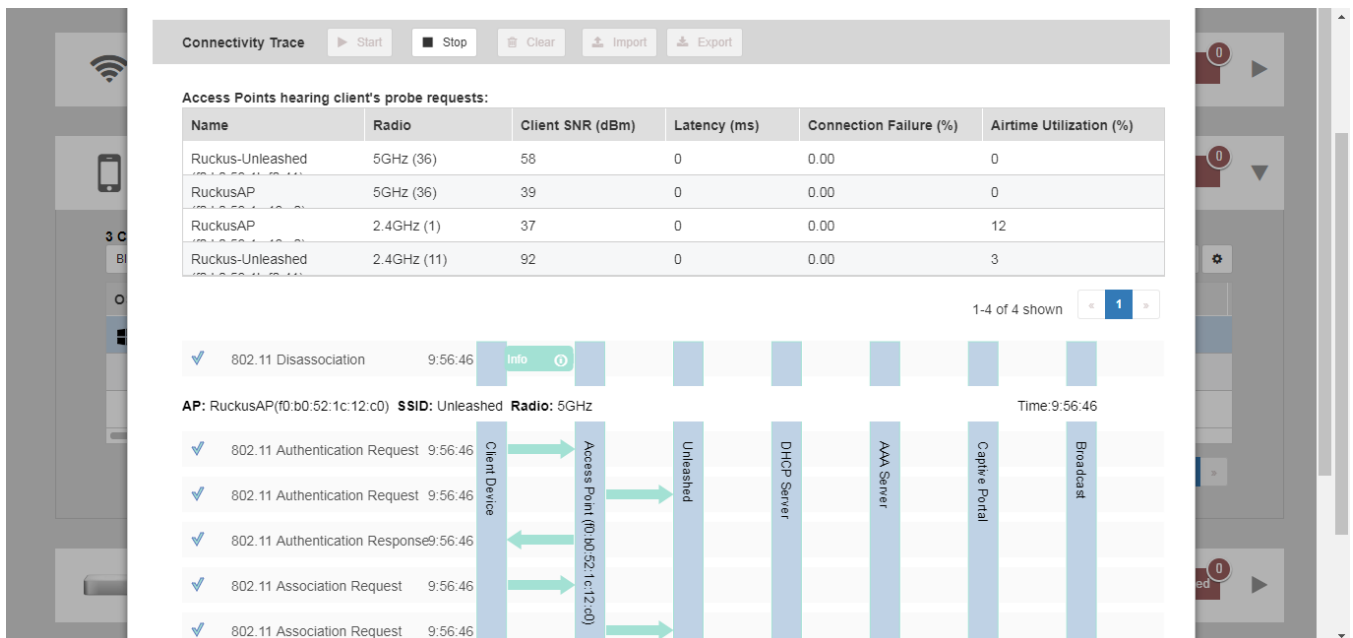

- Examine the results to isolate the problematic step in the process.
- If needed, you can download the client connectivity data to a file, which can later be imported for analysis. Click **Export** to download the data file and save it to your local computer. Click **Import** to import a previously exported file back into Unleashed.

Marking a Client as a Legacy Device

Designating a wireless client as a legacy device provides a way to change a password, but allows original connected wireless devices to continue using the previous password. On a large-scale deployment, marking a wireless client as a legacy device is effective because the customer is not required to change the passwords on all the connected wireless devices.

Complete the following steps to mark a wireless client as a legacy device.

1. From the Unleashed dashboard, expand the **Clients** component.
2. Under **Wireless Clients**, select a client from the list and click **Mark Legacy**.

FIGURE 240 Marking a Client as a Legacy Device

Favorite	Legacy Device	Mac Address	IP Address	Status	OS
Yes	Yes	28:16:ad:b4:71:de	192.168.10.245	Authorized	Windows
Yes	Yes	38:f9:d3:34:07:95	192.168.10.252	Authorized	Apple
Yes	Yes	34:36:3b:cd:eb:b0	192.168.10.250	Authorized	Apple
No	No	8e:3a:13:f0:05:7b	192.168.10.153	Authorized	Apple
No	Yes	7a:e2:d9:66:68:39	192.168.10.152	Authorized	Android
Yes	Yes	24:11:45:b7:c2:92	192.168.10.164	Authorized	Apple
Yes	Yes	92:c6:e3:66:2d:ae		Disconnected	Apple
Yes	Yes	16:8f:0b:00:b0:9e		Disconnected	Android
No	Yes	ca:50:f9:69:58:ca		Disconnected	N/A
No	Yes	96:76:53:3a:17:d4		Disconnected	N/A

The devices marked as legacy devices are allowed to connect to the WLAN with the previous password. For more information, refer to "Creating a New WLAN".

3. (Optional) Select a client and click **More > Unmark Legacy** to unmark the wireless client.

Adding User Accounts to the Internal User Database


1. Go to **Admin & Services > System > Users** and click **Create New**.
2. Enter a **User Name**, optional **Full Name**, **Password**, **Confirm Password**, and select a **Role** for this user.

Working with Clients

Authenticating Clients Using an External Database

3. Click **OK** to create the new user.

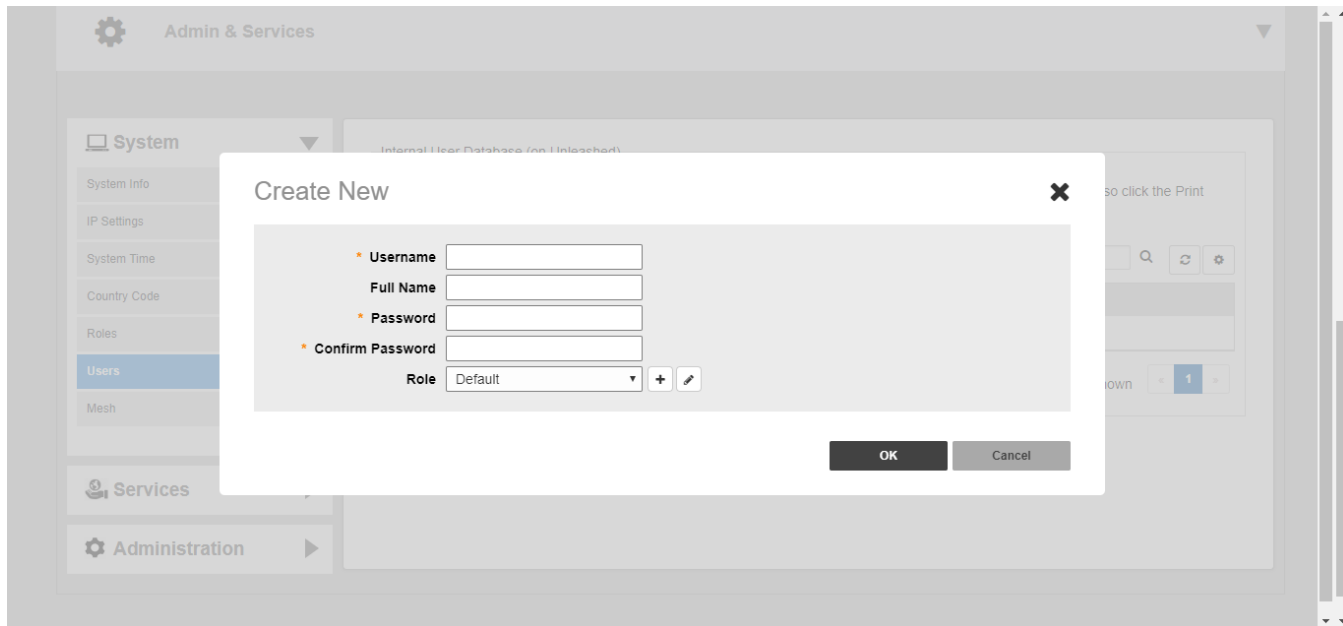FIGURE 241 Creating a new User on the Internal User Database



Authenticating Clients Using an External Database

In addition to the Internal User Database, Unleashed also supports authenticating clients using an external authentication server.

To enable this feature, you must first create an "AAA Server" entry, and then apply the AAA server to one or more WLANs with external authentication enabled. Unleashed supports the following types of external authentication servers:

- Microsoft Active Directory
- RADIUS

For more information on configuring AAA servers, see [AAA Servers](#) on page 380.

Configuring Admin & Services Settings

- [Admin & Services Overview](#)..... 337
- [System Settings](#).....337
- [Services](#)..... 379
- [Administration Settings](#)..... 427

Admin & Services Overview

The **Admin & Services** settings provide tools for use in managing many of the "under the hood" features of your Unleashed deployment.

These options allow you to configure system settings such as system name and IP address, configure services such as Application Recognition and Control, Guest Access and Hotspot services, and perform administration functions such as changing the admin user name and password, performing an upgrade and performing diagnostics.

The Admin & Services component is divided into the following sub-components:


- [System Settings](#) on page 337
- [Services](#) on page 379
- [Administration Settings](#) on page 427

System Settings

System settings include options for changing the system name, preferred Master AP, IP address, time zone, country code, users, user roles and mesh settings.

To configure system settings, click **Admin & Services > System**. The menu expands to display additional options under the **System** tab.

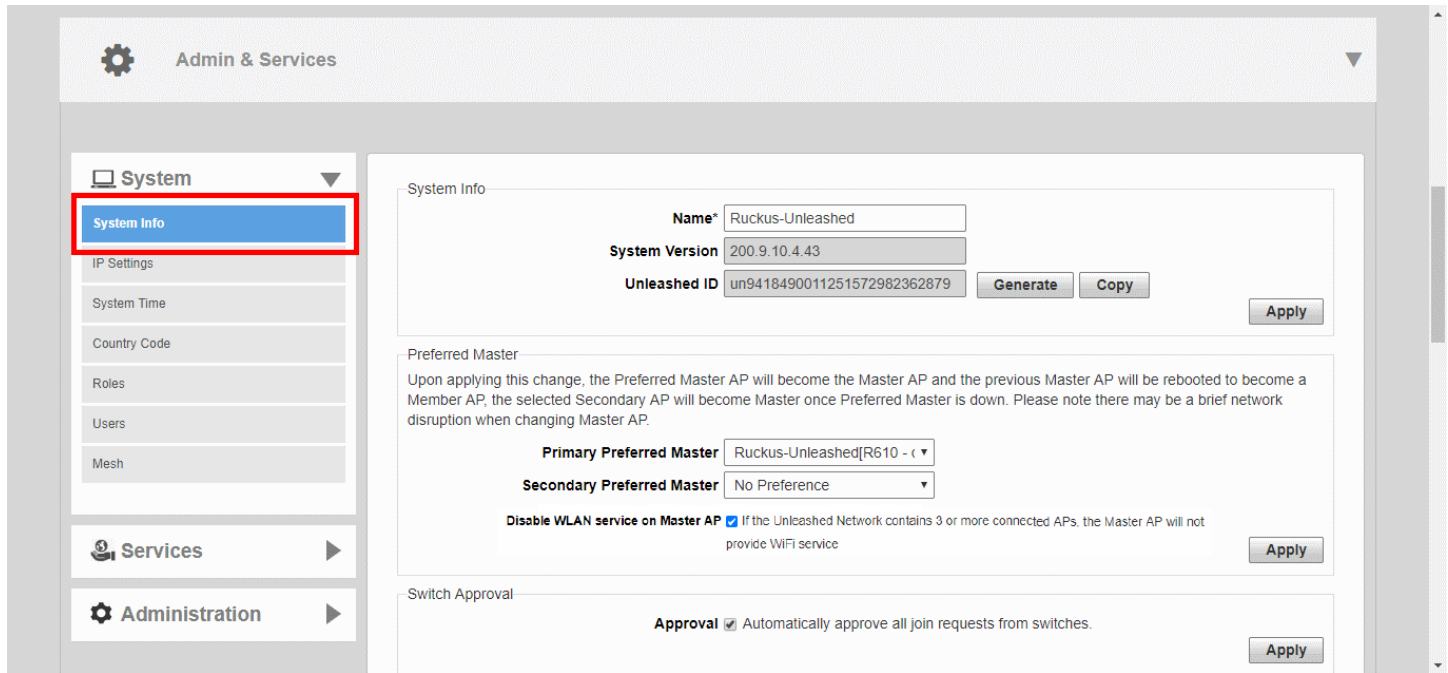FIGURE 242 Click Admin & Services, and expand the System tab to configure system settings



System Info Settings

System Info settings include options for configuring system name, preferred Master, automatic switch approval, email and SMS server settings.

Changing the System Name


The **System Info** page displays the current system firmware version and provides an option to reconfigure the system name.

To change the system name:

1. Go to **Admin & Services > System > System Info**.
2. In **System Name**, delete the text, and then type a new name. The name should be between 1 and 32 characters in length, using letters, numbers, underscores (`_`) and hyphens (`-`). Do not use spaces or other special characters. Do not start with a hyphen (`-`) or underscore (`_`). System names are case sensitive.

3. Click **Apply** to save your settings. The change goes into effect immediately.

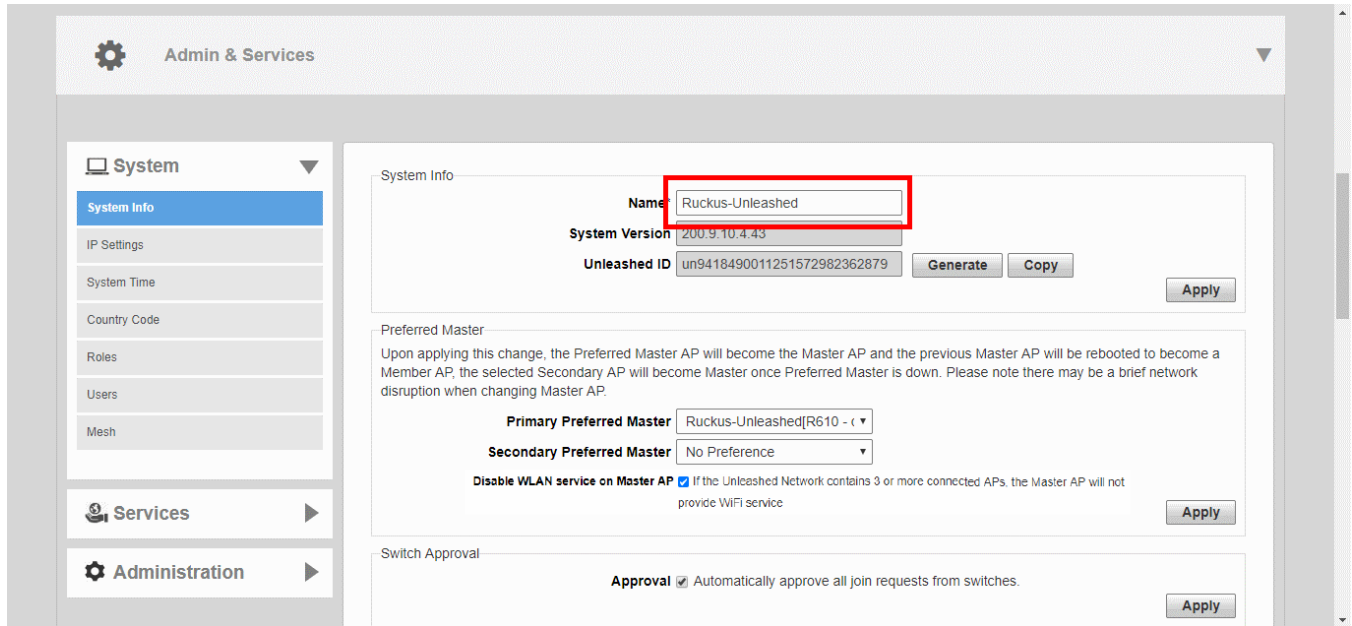FIGURE 243 The System Info page displays the firmware version and system name




Generating an Unleashed ID

The Unleashed ID uniquely identifies each Unleashed network for use in remote management via either the Unleashed Mobile App or the Unleashed Multi-Site Manager.

1. Go to *Admin & Services > System > System Info*.
2. Click the *Generate* button next to Unleashed ID.

3. A new ID number appears in the Unleashed ID field. You can now use this number for remote management of this Unleashed network using the Unleashed Mobile App or Unleashed Multi-Site Manager.

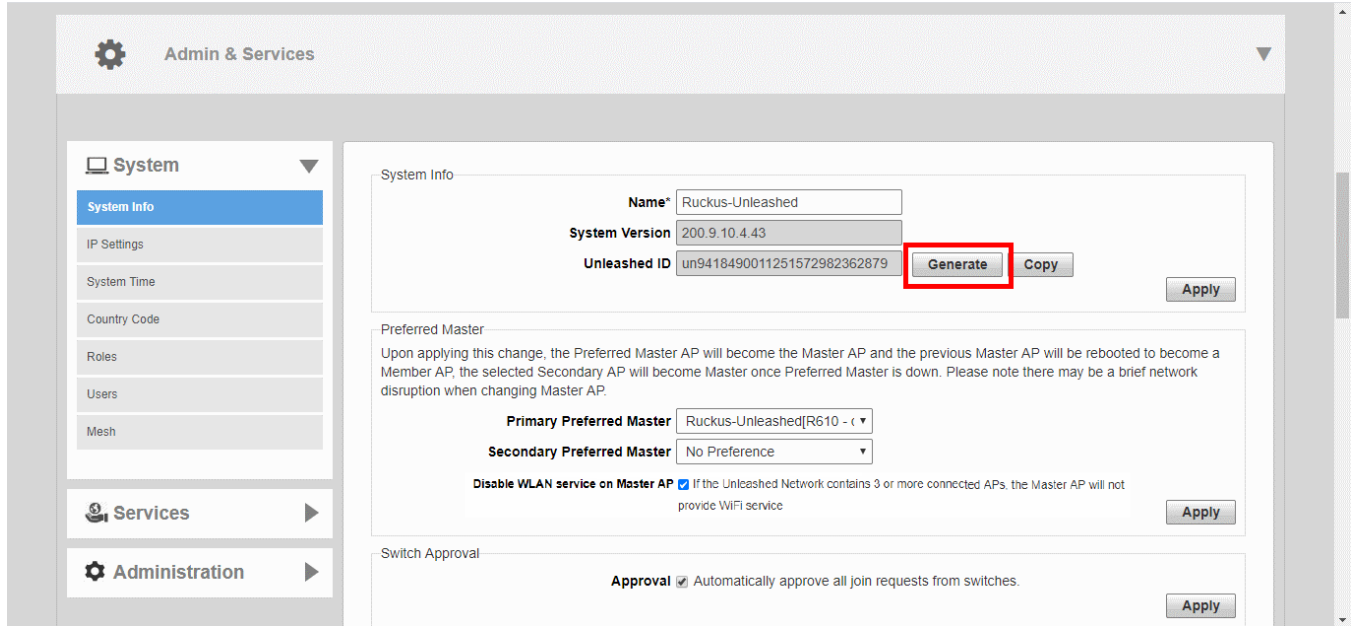FIGURE 244 Generating a new Unleashed ID for use in remote management



Designating a Preferred Master AP

The Preferred Master settings allows the admin to manually designate a primary and secondary preferred Master AP.

By default, there is no preference as to which AP should become the Master AP. The first AP that is deployed automatically becomes the Master AP, and if that Master AP goes offline for any reason, any other Ethernet-connected member AP can take over the Master role.

By using the *Preferred Master* options, the admin can designate which APs will have priority as the Master AP.


Select a specific AP to be the primary and secondary preferred Master AP. Under **Primary Preferred Master**, the APs are sorted and listed so that the best Master AP is displayed at the top of the list. The user can choose the best master as primary preferred Master. When the primary Master AP is offline, the secondary preferred Master will assume the Master role. When the primary preferred Master returns online, it will resume the role again once it rejoins the Unleashed network.

To configure primary and secondary Preferred Master APs:

1. Go to **Admin & Services > System > System Info** and locate the **Preferred Master** section.

2. Select a primary and optionally secondary Master AP from the list and click **Apply**.

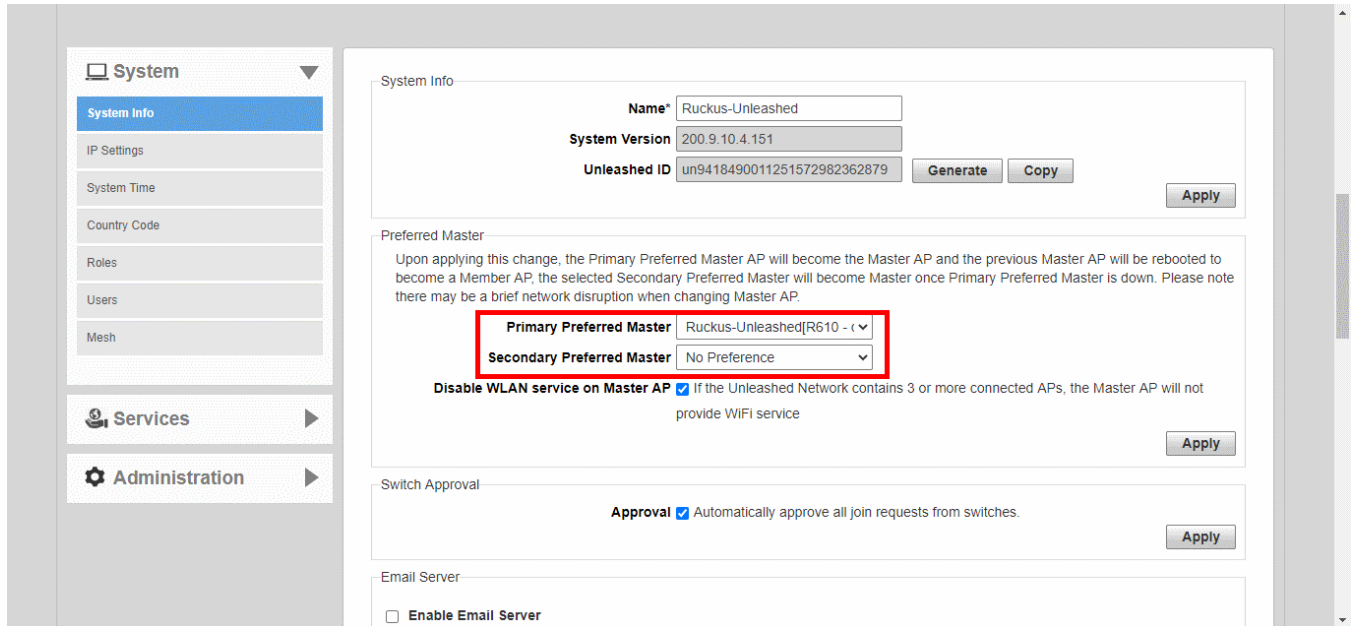FIGURE 245 Designate an AP as the Preferred Master



Disabling WLAN Service on the Master AP

Because the Master AP has to perform a number of tasks at once, it may be useful in some scenarios to reduce the compute load on the Master AP by disabling its WLAN service and allow the Master to focus on controller functions.

To disable WLAN service on the Master AP to allow it to focus on controller functions:


1. Go to *Admin & Services > System > System Info*.
2. In the *Preferred Master* section, deselect the **Enable WLAN service on Master AP** option.

3. Click **Apply** to save your changes.

NOTE

This feature will only take effect when the Unleashed network contains at least three other connected APs to provide WLAN service.

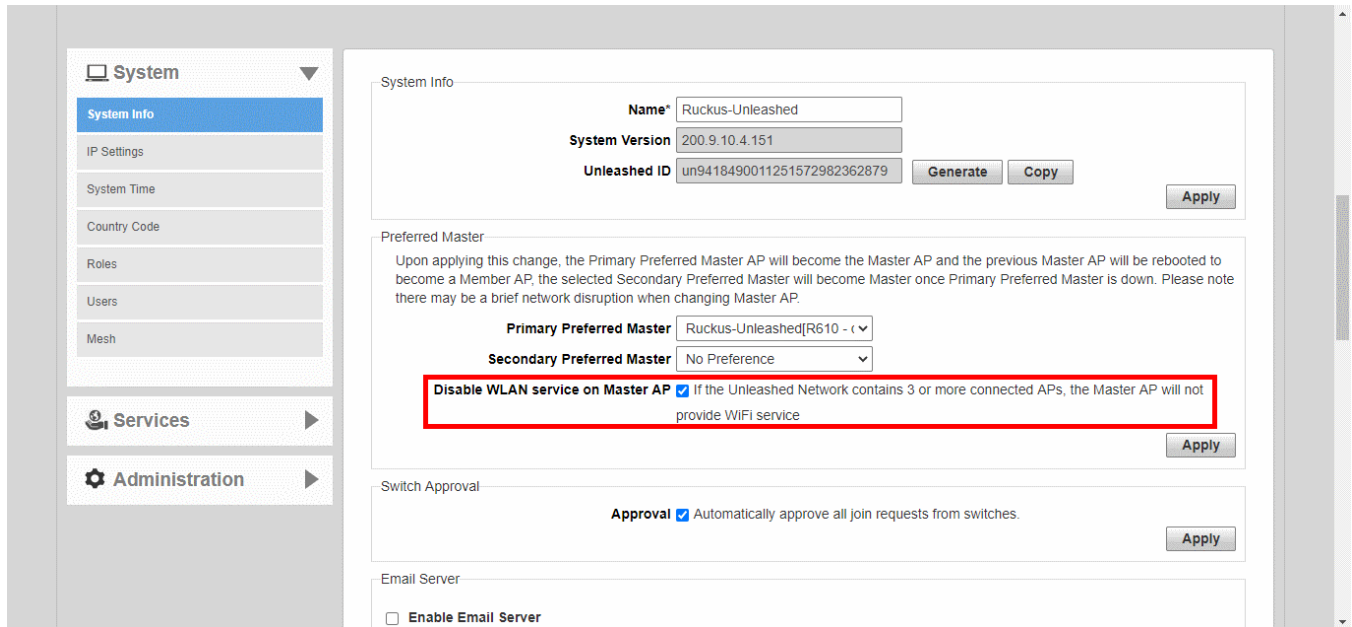FIGURE 246 Disabling Master AP WLAN service



Enabling Automatic Switch Approval

To enable automatic approval of Ruckus ICX switches, use the following procedure:

1. Go to *Admin & Services > System > System Info*, and locate the *Switch Approval* section.
2. Enable the **Approval** option.

3. Click **Apply** to save your changes.

FIGURE 247 Enable automatic approval of ICX switches

The screenshot shows the configuration page for 'System Settings'. On the left is a navigation sidebar with 'Administration' selected. The main content area is divided into sections: 'Preferred Master', 'Switch Approval', and 'Email Server'. In the 'Switch Approval' section, the 'Approval' checkbox is checked and highlighted with a red box, with the text 'Automatically approve all join requests from switches.' next to it. Below this, the 'Email Server' section is visible but the 'Enable Email Server' checkbox is unchecked.

Configuring Email Server Settings

In order for Unleashed to send guest pass codes to guest users via email, it needs to have an email server configured.

To configure email server SMTP settings:

1. Go to **Admin & Services > System > System Info**.
2. In the **Email Server** section, enable the **Enable Email Server** check box, and then enter the following:
 - **From email address:** Type the email address from which Unleashed will send email messages.
 - **SMTP Server name:** Type the full name of the server provided by your ISP or mail administrator. Often, the SMTP server name is in the format smtp.company.com.
 - **SMTP Server port:** Type the SMTP port number provided by your ISP or mail administrator. Often, the SMTP port number is 465 or 587. The default SMTP port value is 587.
 - **SMTP Authentication username:** Type the user name provided by your ISP or mail administrator. This might be just the part of your email address before the @ symbol, or it might be your complete email address. If you are using a free email service (such as Hotmail or Gmail), you typically have to type your complete email address.
 - **SMTP Authentication password:** Type the password that is associated with the user name above.
 - **Confirm SMTP Authentication password:** Retype the password you typed above to confirm.
 - **SMTP Encryption Options:** If your mail server uses TLS encryption, click the SMTP Encryption Options link, and then select the TLS check box. Additionally, select the STARTTLS check box that appears after you select the TLS check box. Check with your ISP or mail administrator for the correct encryption settings that you need to set.

- To verify that Unleashed can send email messages using the SMTP settings you configured, click the **Test** button.
 - If Unleashed is able to send the test message, the message **Success!** appears at the bottom of the Email Notification page.
 - If Unleashed is unable to send the test message, the message **Failed!** appears at the bottom of the Email Notification page. Go back to the previous step, and then verify that the SMTP settings are correct.
- Click **Apply**. The email server settings you configured become active immediately.

FIGURE 248 Email Server settings

The screenshot shows the 'Services' navigation menu on the left with 'Administration' selected. The main content area is titled 'Email Server' and includes the following settings:

- Switch Approval:** **Approval** Automatically approve all join requests from switches. **Apply**
- Email Server:**
 - Enable Email Server**
 - From Email Address:** test@example.com
 - SMTP Server Name:** smtp.example.com
 - SMTP Server Port:** 587
 - SMTP Authentication Username:** username
 - SMTP Authentication Password:**
 - Confirm SMTP Authentication Password:**
 - [SMTP Encryption Options](#)
 - Test** **Apply**
- SMS Settings:**
 - Enable SMS Server**
 - Country Code**
 - No default and ask user to input
 - Use default +12 and allow user to change
 - Use default +12 and disallow user to change
 - Twilio account information**
ACCOUNT SID: [input field] [\[register a new Twilio account\]](#)

Configuring SMS Server Settings

In order for Unleashed to send guest pass codes to guest users via SMS, it needs to have an SMS server configured.

To configure SMS server settings:

- Go to **Admin & Services > System > System Info**.
- In the **SMS Settings** section, enable the **Enable SMS Server** check box.
- In **Country Code**, select one of the following options:
 - CountryCode:** This option is only available with "Customized Server" SMS server type (for Twilio and Clickatell, the country code is mandatory and cannot be unchecked). When unchecked, the guest registration page does not support country code input.
 - No default and ask user to input:** The guest registration page does not provide a default country code and the guest user is asked to input one.
 - Use default and allow user to change:** The guest registration page provides a default country code and allows the guest user to change it.
 - Use default and disallow user to change:** The guest registration page provides a default country code and the guest user is not allowed to change it.
- Select **Twilio**, **Clickatell**, or **Customized Server**, depending on your SMS service provider.

5. Enter your **Account SID**, **Auth Token** and **From Phone Number** (Twilio) or your **User Name**, **Password** and **API ID** (Clickatell), or **Method** (Get or Post) and the URL for a custom SMS service provider.
6. Click the **Test** button to test your settings.
7. Once confirmed, click **Apply** to save your changes.

FIGURE 249 Configuring SMS settings

The screenshot displays the 'SMS Settings' configuration page. At the top, there is a section for 'SMTP Encryption Options' with a toggle switch. Below this, the 'SMS Settings' section is visible, featuring a 'Test' button and an 'Apply' button. The main configuration area includes a checkbox for 'Enable SMS Server'. Underneath, there are three radio button options for 'Country Code': 'No default and ask user to input', 'Use default +12 and allow user to change', and 'Use default +12 and disallow user to change'. The 'Twilio account information' section contains input fields for 'Account SID', 'Auth Token', and 'From PhoneNumber', with a link to 'register a new Twilio account'. The 'Clickatell account information' section has input fields for 'User Name', 'Password', 'API Id', and 'From PhoneNumber', with a link to 'register a new Clickatell account'. The 'Customized Server' section includes a 'Method' dropdown menu (currently set to 'GET') and a 'URL' text area.

IP Settings

The *IP Settings* page provides options for configuring the Unleashed Master AP's IP address, IP address mode, management IP interface and DHCP options.

Configuring Device IP Address Settings

If you need to update the IP address and DNS server settings of your Unleashed Master AP, follow the steps outlined below.

NOTE

As soon as the IP address has been changed (applied), you will be disconnected from your web interface connection to the Unleashed Master AP. You can log into the web interface again by using the new IP address in your web browser.

To change the IP address settings:


1. Go to **Admin & Services > System > IP Settings**.
2. Review the **IP Settings** options.

NOTE

Upon enabling Gateway mode, all devices will reboot immediately. See [Gateway Mode](#) on page 346.

3. Select one of the following:
 - **Manual:** If you select Manual, enter the correct information in the now-active fields (IP Address, Netmask, and Gateway are required).
 - **DHCP:** If you select DHCP, no further information is required. The Unleashed Master will obtain an IP address automatically.
4. Click **Apply** to save your settings. You will lose connection to the Unleashed Master.
5. To log back into the web interface, use the newly assigned IP address in your web browser or use the UPnP application to rediscover the Unleashed Master AP.

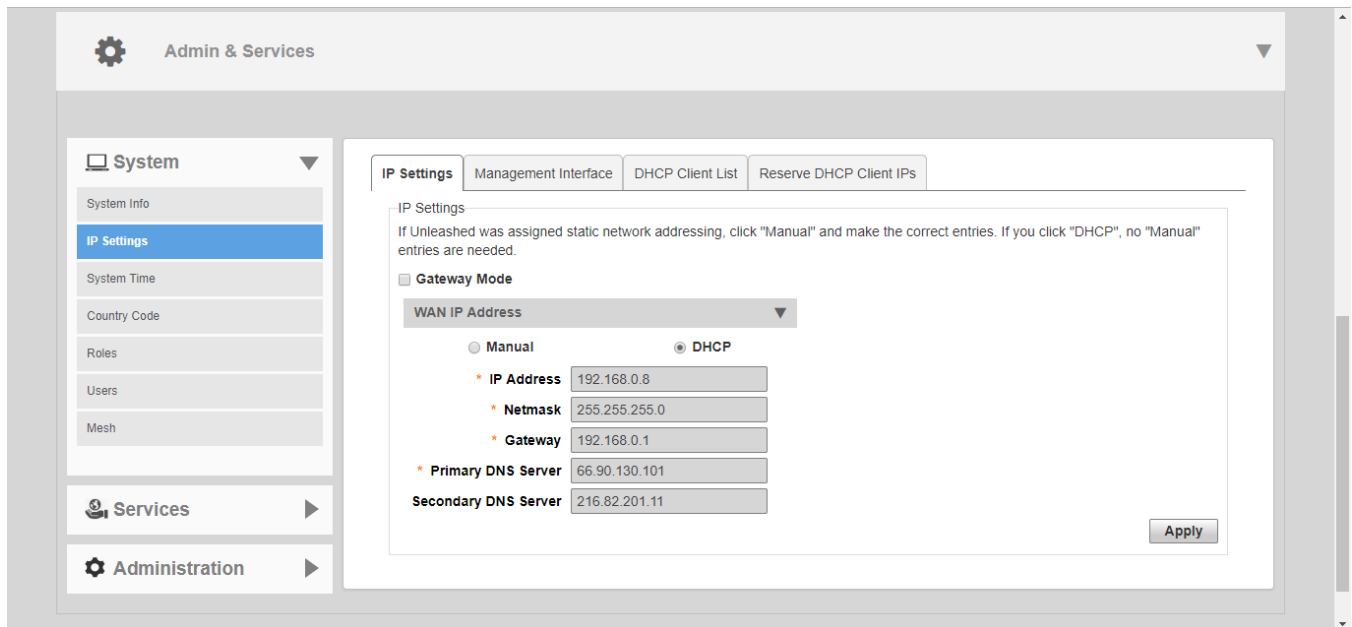FIGURE 250 Configuring device IP address settings



Gateway Mode


Gateway mode provides a solution for small and midsize business (SMB) customers who want to provide private IP addresses for clients and do not have an existing gateway router, or who connect to their Internet service provider (ISP) over PPPoE. Enabling Gateway mode provides Network Address Translation (NAT) and DHCP functionality to assign private IP addresses to member APs and clients.

Only the H350 AP and the H550 AP support dual WAN ports, where one Ethernet port is configured as the active WAN port and the other Ethernet port is configured as the standby WAN port for the RUCKUS Unleashed gateway. At any given point, only one Ethernet port acts as the active WAN port. The traffic moves through the active WAN port. If the active WAN port fails, the traffic is automatically switched to the standby WAN port until the active WAN port recovers.

NOTE

If Gateway mode is enabled, the maximum number of APs in a RUCKUS Unleashed network is 25, even if the Master AP can otherwise support more APs.

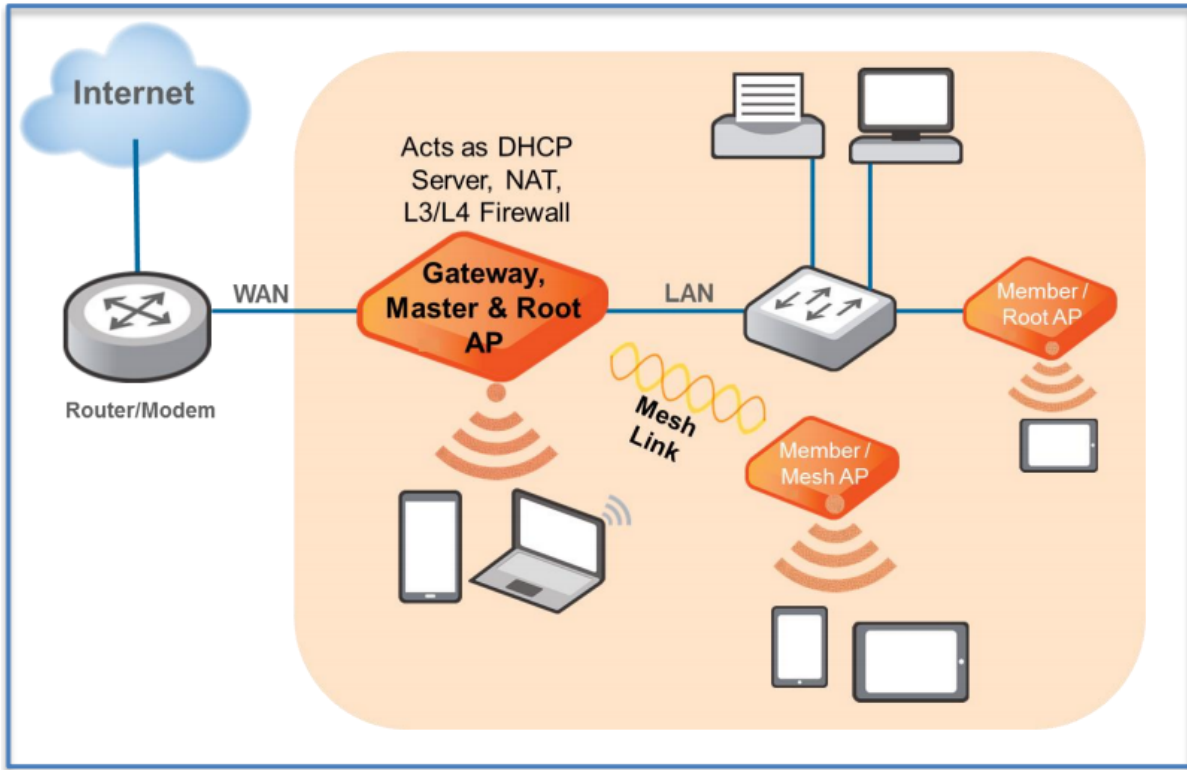FIGURE 251 Gateway Mode Topology



Gateway functionality can be restored with minimum user intervention when a Gateway Master AP is out of service. If the Gateway Master AP goes down, simply replace it with one of the member APs and connect the uplink Ethernet cable to the WAN port, and the member AP will become the new gateway.

If the gateway recovery mechanism does not work, you can still access the web interface of the new Master AP to configure it manually.

Configuring Gateway Mode

The Master AP can be configured to serve as a gateway router.

Complete the following steps to configure the Master AP as a gateway:

1. Go to **Admin & Services > System > IP Settings**.

- Under **IP Settings**, enable the **Gateway Mode** option and configure the WAN and LAN IP address settings.

NOTE

Alternatively, in the factory default state, you can connect to the Master AP and perform the initial setup as described in step 2b - Setup Using a Web Browser. On the second wizard screen (**Management IP**) select **Enabled** in **Gateway Mode**. Refer to [Advanced Install](#) on page 138 for more information.

FIGURE 252 Enabling Gateway Mode



- Designate which port will be the WAN (uplink) port. The Gateway AP must have at least two Ethernet ports. Under **WAN Selection**, use the AP diagram to identify which port is LAN1 and LAN2 on the AP, and select the relevant port from the **WAN Port** list.

FIGURE 253 Configuring WAN, Standby WAN, and LAN & WLAN IP Addresses

The screenshot shows a configuration interface with four main sections:

- WAN Port:** A dropdown menu is set to "PORT 1". Below it are radio buttons for "Manual", "DHCP" (selected), and "PPPoE". Fields for "IP Address" (10.223.38.237), "Netmask" (255.255.255.0), "Gateway" (10.223.38.254), "Primary DNS Server" (10.10.10.190), and "Secondary DNS Server" (10.10.10.10) are present.
- LAN & WLAN Client IP Addresses:** Fields for "Starting IP" (10.106.0.2), "Ending IP" (10.106.7.209), "Number of IPs" (2000), "Lease Time" (Twelve hours), "Primary DNS Server" (10.10.10.190), and "Secondary DNS Server" (10.10.10.10).
- Standby WAN Port:** A dropdown menu is set to "Disabled". Radio buttons for "Manual" (selected) and "DHCP" are shown. Fields for "IP Address", "Netmask", "Gateway", "Primary DNS Server", and "Secondary DNS Server" are empty.
- LAN & WLAN IP Address:** Fields for "Router IP" (10.106.0.1) and "Netmask" (255.255.0.0).

- Configure how the WAN (uplink) port obtains its IP address:
 - DHCP (Dynamic):** When **DHCP (Dynamic)** is selected, the WAN port is assigned an IP address automatically.
 - Manual (Static):** When **Manual (Static)** is selected, enter an IP address, netmask, gateway address, and primary DNS server addresses in the required fields, and (optionally) enter the secondary DNS server address.
 - PPPoE:** When PPPoE is selected, enter the PPPoE username and PPPoE password in the fields provided.
- Configure local subnet settings for the LAN port:
 - LAN & WLAN Client IP Addresses**
 - Starting IP and Ending IP:** Enter the first and last IP addresses that will be issued in this scope.
 - Number of IPs:** Enter the total number of addresses in this scope.
 - Lease Time:** Select a duration for IP address lease time from the list.
 - Primary DNS Server and Secondary DNS Server:** Enter the primary and secondary DNS server addresses.
 - LAN & WLAN IP Address**
 - Router IP:** Enter the IP address for the LAN port.
 - Netmask:** Enter the netmask.

Configuring Admin & Services Settings

System Settings

- Designate which port will be the standby WAN (uplink) port and configure how the standby WAN port obtains its IP address:
 - DHCP (Dynamic):** When **DHCP (Dynamic)** is selected, the WAN port is assigned an IP address automatically.
 - Manual (Static):** When **Manual (Static)** is selected, enter an IP address, netmask, gateway address, and primary DNS server address in the required fields, and (optionally) enter the secondary DNS server address.

NOTE

A standby WAN port is applicable only for the H350 AP and H550 AP.

- Click **Apply**. Once setup is complete, the Gateway AP will begin providing DHCP and NAT service for clients, and clients will be assigned IP addresses from the DHCP scope that you configured.

Gateway Mode Limitations and Considerations

There are several important limitations and factors to consider when enabling gateway mode.

- All Unleashed AP models with multiple Ethernet ports support gateway mode. If your network's WAN bandwidth is higher than 100 Mbps, Ruckus recommends using 802.11ac Wave 2 or later APs (such as R510, R610, R710, R720) to enjoy the fastest internet access experience.
- The Master AP acts as the gateway for both wired and wireless clients.
- The gateway AP provides IP addresses and performs NAT (routing) functions in addition to serving as the Unleashed Master AP, and servicing wireless clients. For this reason, it is preferable to use an AP with higher CPU/memory resources, especially 802.11ac Wave 2 or later APs (e.g., R510, R610, R710, R720) as the Gateway AP, if possible.
- If gateway mode is enabled, the maximum number of APs in an Unleashed network is 25, even if the Master AP could otherwise support more.
- No VLAN support in gateway mode.
- Bonjour Gateway is not supported in gateway mode (no VLANs).
- When Mesh is enabled in gateway mode, and when the WAN IP address is obtained via PPPoE, the Master AP cannot be part of a Mesh tree. However, Mesh can still be enabled and any member AP can be a Root AP or Mesh AP.
- The WAN and LAN IP addresses must be in different IP subnets, and the address ranges may not overlap.
- If gateway mode is enabled, redundancy is disabled. This means that if the Master (gateway) AP goes offline for any reason, a member AP will not be able to take over and become the new Master.

Configuring M510 as Unleashed Master in Gateway Mode


The Unleashed M510 provides additional options for configuring the LTE uplink mode.

To configure the M510 LTE WAN connection settings:

- Go to **Admin & Services > System > IP Settings**.

2. IN *WAN connection*, select one of the following options:
 - **Ethernet (Primary) with cellular failover:** M510 in Gateway Mode with the Ethernet port as the WAN port and the LTE connection as the backup WAN port, only one of which can be active at any time. If the Ethernet connection goes down, the LTE connection becomes active to provide a backup internet uplink.
 - **Cellular only:** M510 configured as Master AP in Gateway Mode with an LTE connection as the uplink WAN port.

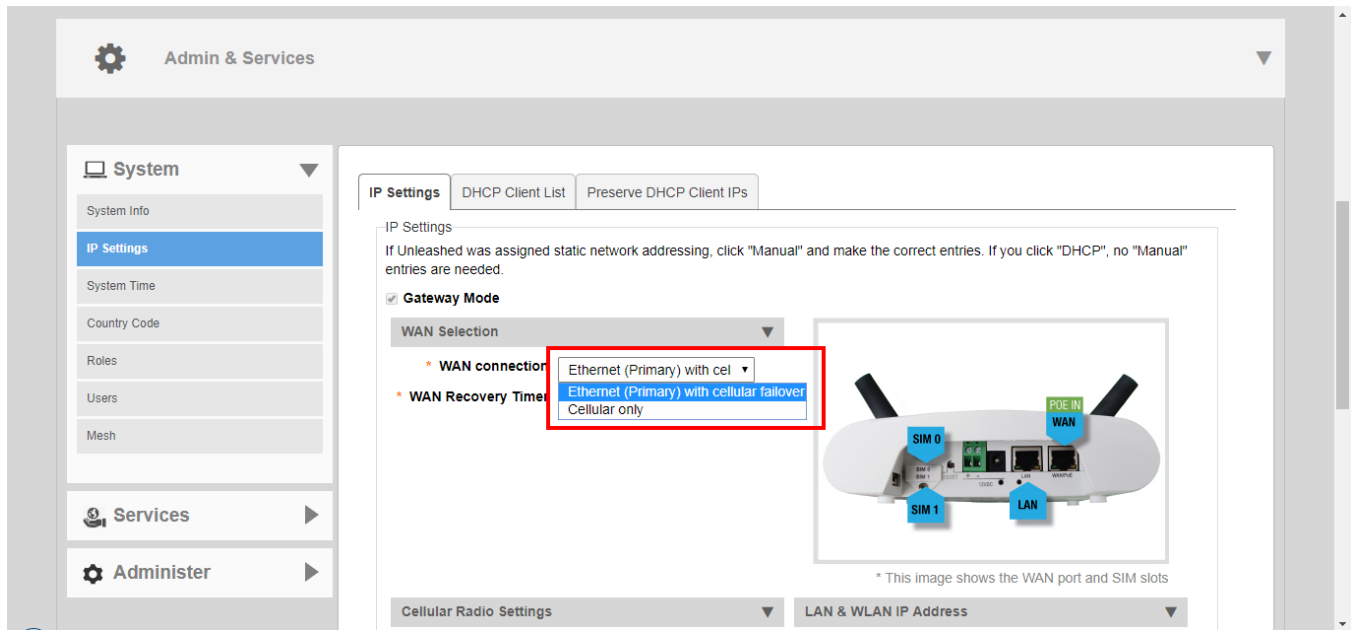FIGURE 254 Select WAN uplink connection mode



3. In **WAN Recovery Timer**, enter a value in seconds after which failover to LTE uplink will occur.
4. In **Cellular Radio Settings**, enter the Access Point Name for each SIM card. The APN identifies the mobile network operator and the data network that the client intends to connect to.
5. If the *Ethernet (Primary) with cellular failover* option is selected, configure the **WAN IP Address for Ethernet** settings:
 - **Manual:** Enter IP address, Netmask, Gateway and DNS addresses according to your network configuration.
 - **DHCP:** Automatically assign WAN IP address from a DHCP server on the network.

6. Configure internal WLAN and LAN IP address settings as described in *Configuring Device IP Address Settings*.

FIGURE 255 M510 Cellular Radio Settings



DHCP Server

RUCKUS Unleashed provides a built-in DHCP server that you can enable to assign IP addresses to devices that are connected to the RUCKUS Unleashed network. The internal DHCP server will only assign addresses to devices that are on its own subnet and part of the same VLAN.

NOTE

Before you can enable the built-in DHCP server, the Master AP must be assigned a manual (static) IP address. If you configured RUCKUS Unleashed to obtain its IP address from another DHCP server on the network, the options for the built-in DHCP server will not be visible on the *IP Settings* page.

Complete the following steps to configure the built-in DHCP server:

1. Go to **Admin & Services > System > IP Settings**.
2. Under **WAN IP Address**, select **Manual** and enter the static IP settings (IP address, netmask, gateway and DNS settings).
3. In *LAN and WLAN Client IP Addresses*, enable the **DHCP Server** check box.
4. **Starting IP**: Enter the first IP address that the built-in DHCP server will allocate to DHCP clients. The starting IP address must be on the same subnet as the IP address assigned to the Master AP. If the value that you entered is invalid, an error message appears and prompts you to let RUCKUS Unleashed automatically correct the value. Click **OK** to automatically correct the entry.
5. **Ending IP**: Enter the last IP address in the range that you want to allocate to requesting clients. The built-in DHCP server can allocate up to 512 IP addresses including the one assigned to the Master AP. The default value is 200.
6. **Lease Time**: Select a time period for which IP addresses will be allocated to DHCP clients. Options range from six hours to two weeks (the default is one week).

- Enter the primary and secondary DNS server addresses.

NOTE

In the gateway mode, the user can customize the DNS server setting for wireless clients. If the DNS server setting is ignored, the WAN interface DNS server setting is used.

- Click **Apply**.

NOTE

If you entered an invalid value in any of the text boxes, an error message appears and prompts you to let RUCKUS Unleashed automatically correct the value. Click **OK** to automatically correct the value.


NOTE

RUCKUS recommends that you only enable the built-in DHCP server if there are no other DHCP servers on the network. If you enable the built-in DHCP server, RUCKUS also recommends enabling rogue DHCP server detection. For more information, refer to [Rogue DHCP Server Detection](#) on page 418.

NOTE

Make sure the DHCP address pool is routable to the internet and non-overlapping with other devices. Because RUCKUS Unleashed in non-gateway mode does not support Network Address Translation (NAT), this is important to avoid IP address conflicts. For example, if your router uses the 192.168.0.x subnet, you must use any subnet *other* than 192.168.0.x for your RUCKUS Unleashed DHCP subnet.

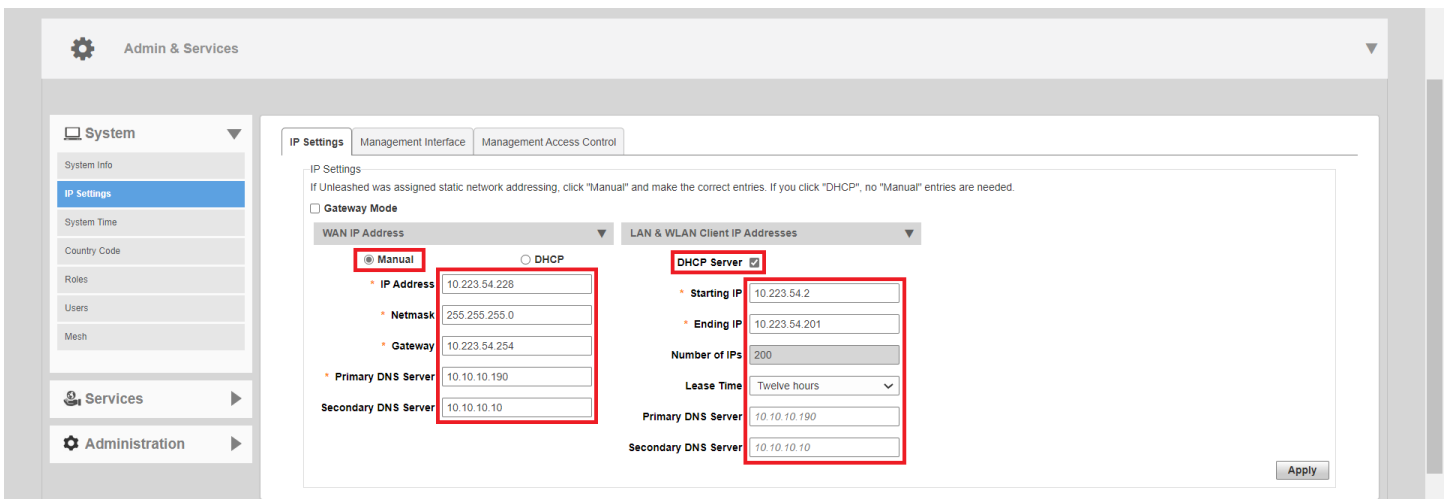
FIGURE 256 DHCP Server Configuration



DHCP Client List

The **Admin & Services > System > IP Settings > DHCP Client List** page displays a list of IP addresses assigned to clients by the Unleashed Master AP.

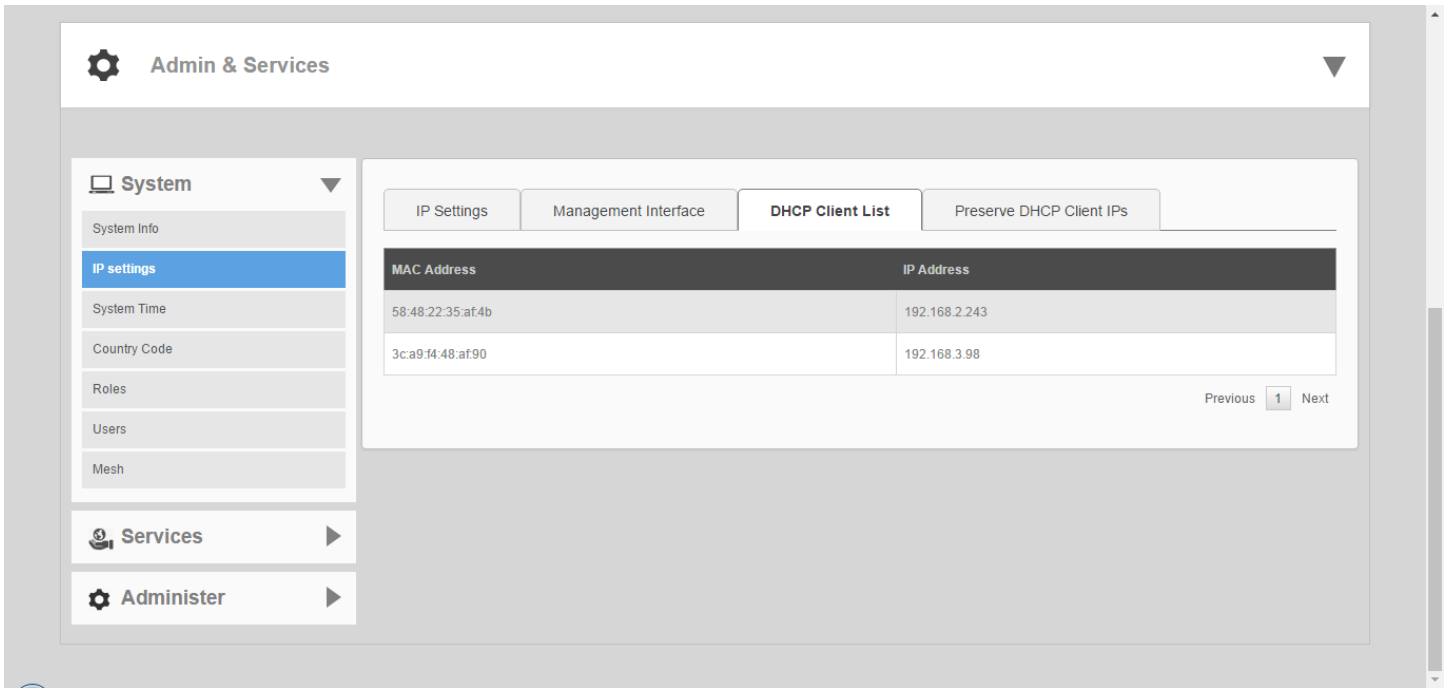FIGURE 257 DHCP Client List



Reserve DHCP Client IPs

Use this page to create a list of reserved IP addresses bound to specific MAC addresses.

To create an entry, click **Create New**, and enter the client's **MAC Address**, the **IP Address** you want to reserve, and optionally a **Description** of the device.

A maximum of 128 reserved IP address entries can be created.

FIGURE 258 Create New Reserved IP Address


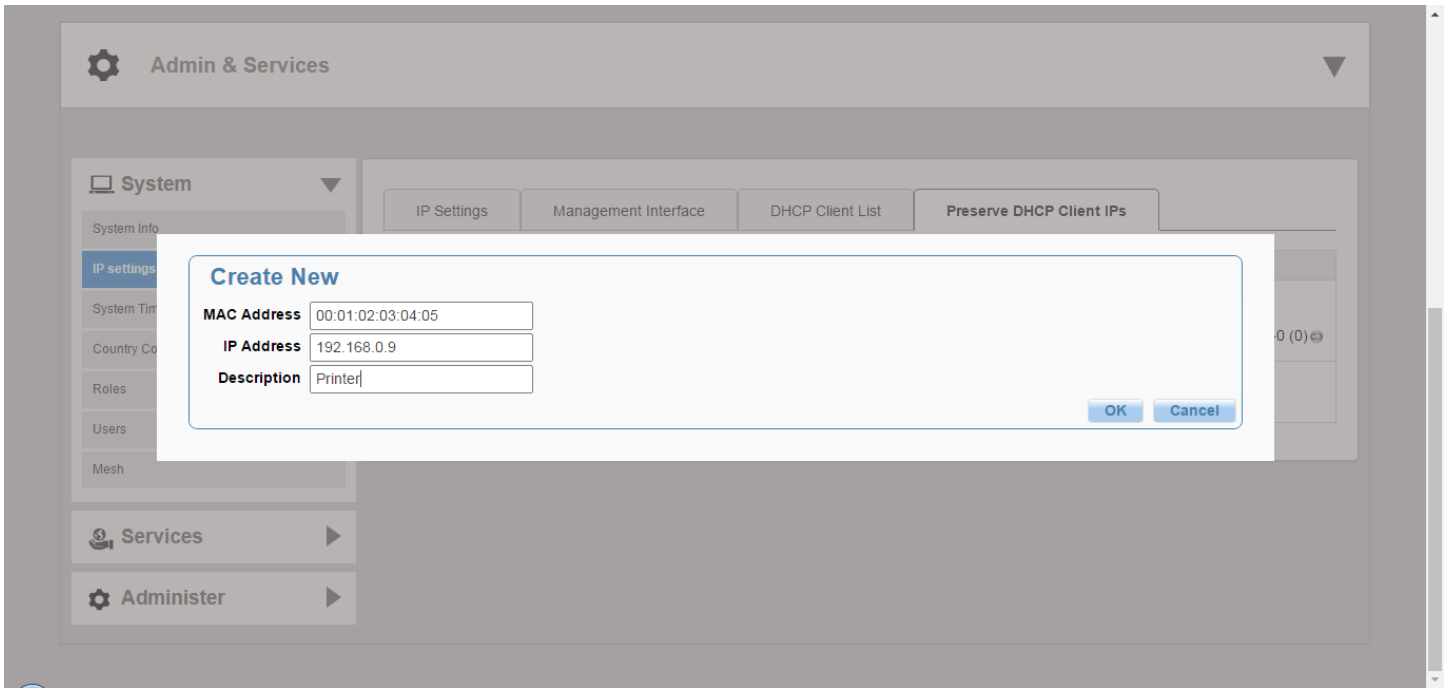


FIGURE 259 Reserved IP Addresses

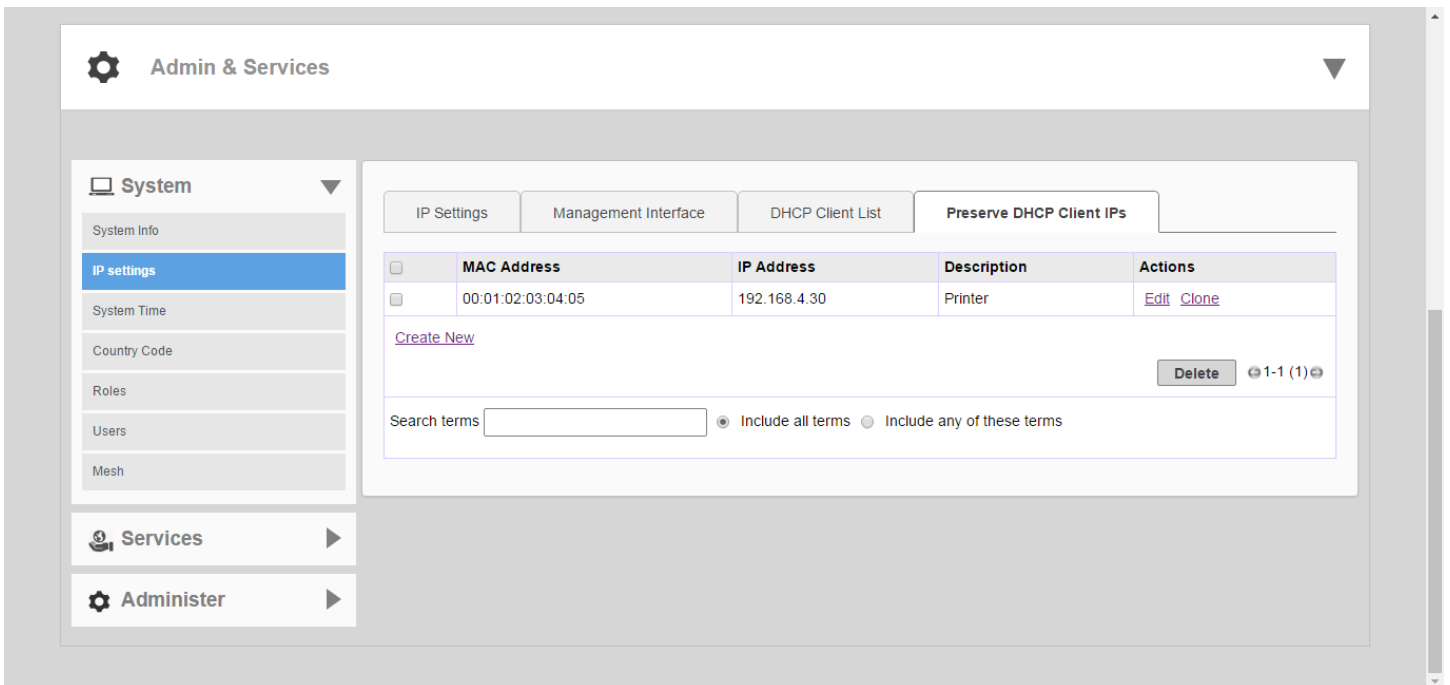

Configuring a Management Interface

The Management IP address can be configured to allow an administrator to manage the Unleashed network from a single IP address, regardless of which Unleashed AP is currently the Unleashed Master AP.

The Management IP can be reached from anywhere on the network as long as it is routable by way of the default Gateway configured in **Device IP Settings**. Then, you only have to remember one IP address.

Complete the following steps to configure a Management Interface:

1. Go to **Admin & Services > System > Device IP Settings**, and click the **Management Interface** tab.
2. Select the check box next to **Enable IPv4 Management Interface**.
3. Enter an **IP Address** and **Netmask**.
4. (Optional) Select **Enable VLAN for Management Interface** and enter **Access VLAN**.
5. (Optional) Enable the check box next to **Use for RADIUS services** to use this IP address for communication with a RADIUS authentication/accounting server. If enabled, the Master AP will send RADIUS packets through this management interface, and the RADIUS server only needs to record one IP address for the Unleashed network. Otherwise, it will record the addresses of all APs.
6. The **Use for SNMP services** check box is automatically enabled when a Management Interface is enabled, and this address will be used for SNMP communications, if enabled.

FIGURE 260 Management Interface

The screenshot shows the 'Admin & Services' configuration page. On the left is a sidebar with 'System' selected, containing options like System Info, IP Settings (highlighted), System Time, Country Code, Roles, Users, and Mesh. The main content area has three tabs: 'IP Settings', 'Management Interface' (selected), and 'Management Access Control'. Under the 'Management Interface' tab, there are several settings: 'Enable IPv4 Management Interface' (checked), a note to set the IP address in the same subnet if VLAN is disabled, 'IP Address' (192.168.30.30), 'Netmask' (255.255.255.0), 'Enable VLAN for Management Interface' (checked), 'Access VLAN' (193), 'Use for RADIUS services' (checked), and 'Use for SNMP services' (unchecked). An 'Apply' button is at the bottom right.


Configuring a Management Access Control

Management Access Control can be used to control access to the management interface of RUCKUS Unleashed.

When you create a management access control rule, all IP addresses and subnets other than those listed specifically listed are blocked from accessing the RUCKUS Unleashed web interface. Access can be restricted by subnet, single IP address, and IP address range.

1. Go to **Admin & Services > IP Settings > Management Access Control**.

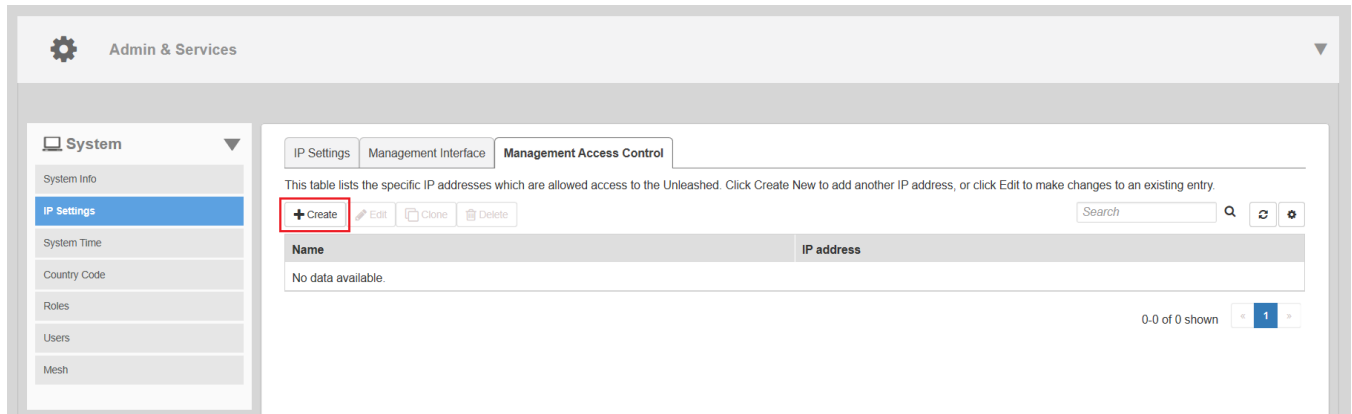
FIGURE 261 Management Access Control Tab



2. Click **Create**.

3. In the **Create New** dialog box, enter the following information:
 - a) In the **Name** field, enter the user name that you want to allow access to the RUCKUS Unleashed web interface.
 - b) For **Restriction**, select one of the options:
 - **Single**
 - **Range**
 - **Subnet**
 - c) In the **IP Address** field, enter a single IP address, a range of IP addresses, or a subnet based on your **Restriction** option.

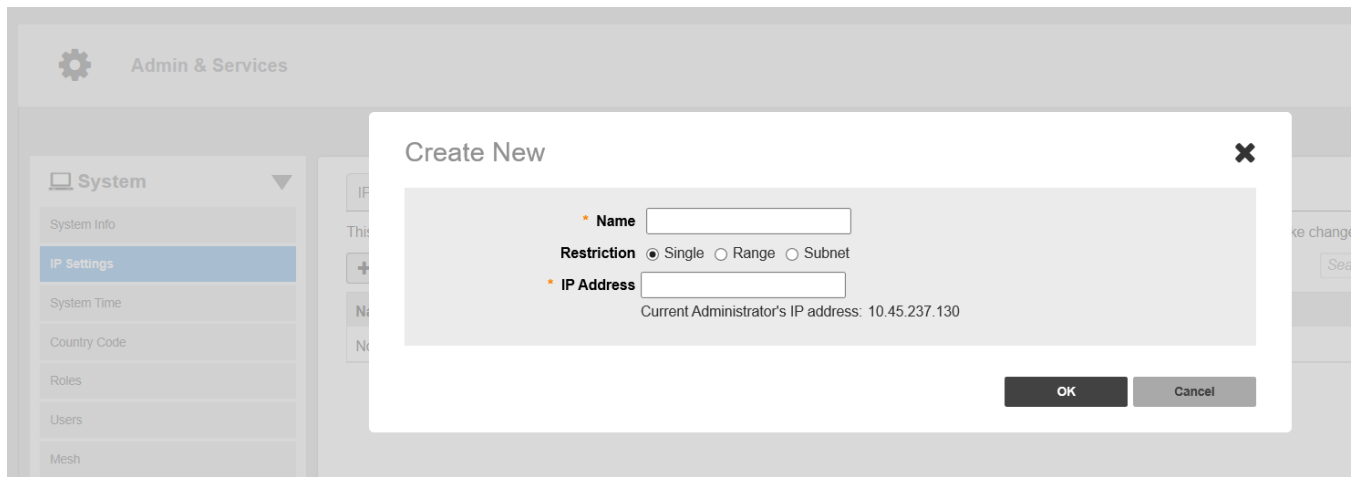FIGURE 262 Creating a New Management Access Control



4. Click **OK**.

Configuring the System Time

Many Unleashed features require that the Master AP maintains the proper system time.

Maintaining the proper time relies on periodically retrieving the time from a Network Time Protocol (NTP) server on the internet. By default, the Unleashed network automatically updates its system time using the Network Time Protocol (NTP), which periodically polls an NTP server and synchronizes its time with the NTP server.


You can also sync time with your PC to manually synchronize the internal clock with your admin PC's clock.

To configure the system time:

1. Go to **Admin & Services > System > System Time**.
2. Click **Refresh** to update the display (a static snapshot) from the internal clock.

3. Enable the **Use NTP to synchronize the Unleashed clock automatically** option.

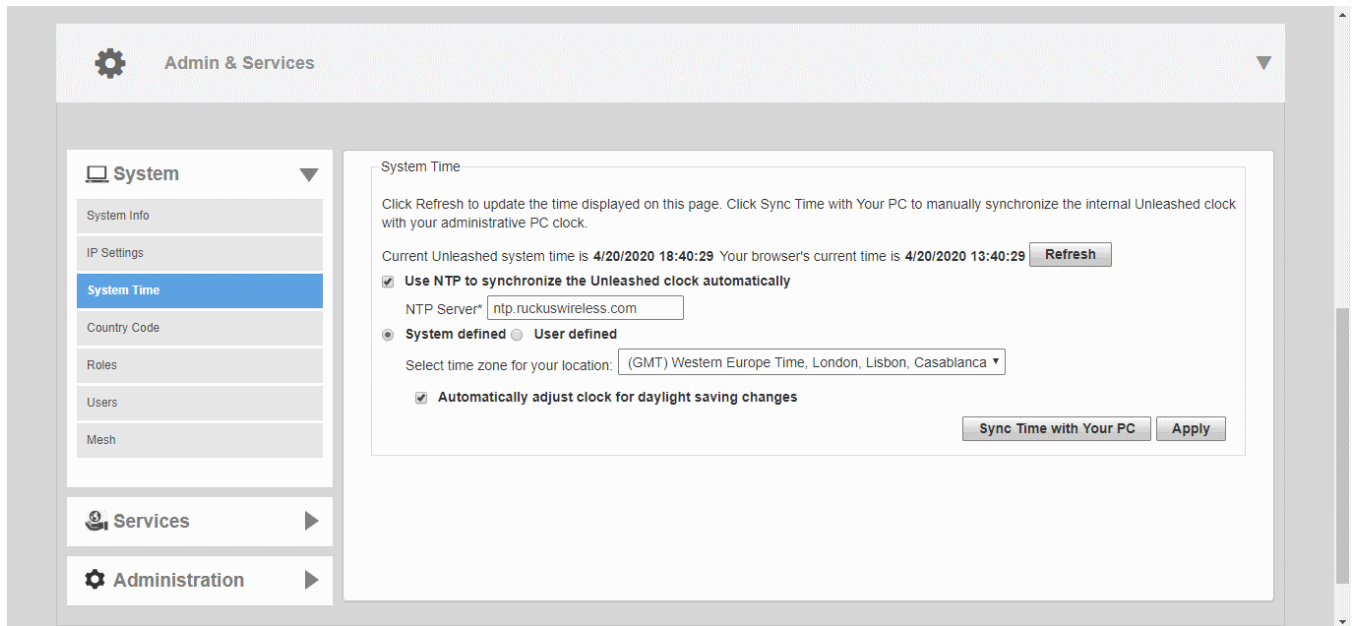FIGURE 263 Configuring the system time



4. Configure the **NTP Server**: The default NTP server is maintained by Ruckus, and is located at *ntp.ruckuswireless.com*. If you would like to use a different NTP server, enter the DNS name or IP address from which Unleashed will sync its clock.
5. Select **System defined** or **User defined** time zone. By default, the system-defined time zones are listed in the adjacent drop-down menu. For information on the user-defined time zone option, see [Configuring a User-Defined Time Zone](#) on page 359.
6. **Select time zone for your location**: Choose your time zone from the list. Setting the proper time zone ensures that time stamps on log files are in the proper time zone.
7. **Sync Time with your PC**: If needed, click this to update the internal clock with the current time settings from your administration PC.
8. Click **Apply** to save the results of any re-synchronization or NTP server settings changes.

Configuring a User-Defined Time Zone


The user-defined time zone option allows the admin to customize the time zone and daylight savings time start and end times.

To configure a user-defined time zone:

1. Go to *Admin & Services > System > System Time*.
2. Enable **Use NTP to synchronize the Unleashed clock automatically**, and select **User Defined**.
3. Select **GMT Offset** (hours and minutes) away from GMT.
4. Optionally, enable **Daylight Saving Time (DST)**, and enter the DST Start and DST End dates.

5. Click **Apply** to save your changes.

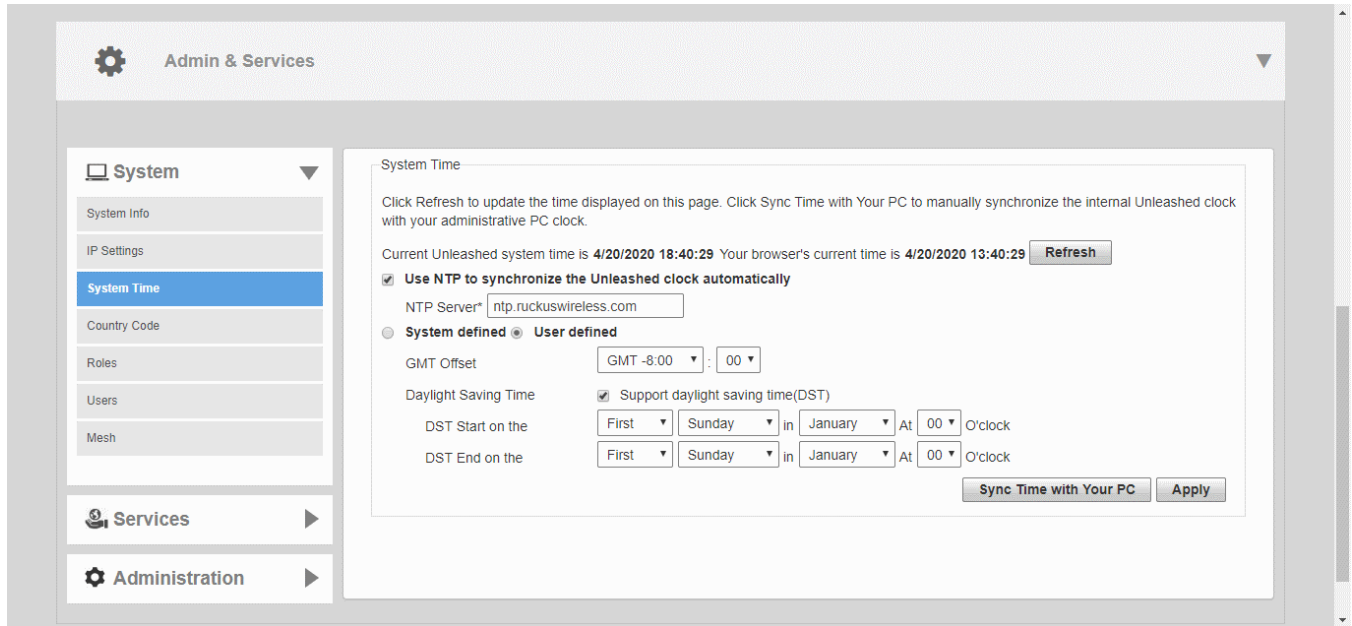FIGURE 264 Configuring a user-defined time zone



Setting the Country Code

Different countries and regions maintain different rules that govern which channels can be used for wireless communications. Setting the Country Code to the proper regulatory region ensures that your Unleashed network does not violate local and national regulatory restrictions.

Setting the Country Code for the Unleashed Master will also set the country code for all member APs under its control.

NOTE

Changes to the country code are applied to all Access Points in the Unleashed network.

NOTE

Unleashed APs sold in the United States are fixed to US country code, and cannot be changed.

To set the Country Code to the proper location:


1. Go to **Admin & Services > System > Country Code**.
2. Choose your location from the **Country Code** drop-down menu.
3. In **Channel Optimization**, select one of the following options:
 - **Optimize for Compatibility:** Allows the following channels: 36, 40, 44, 48, 149, 153, 157, 161, 165 (non-DFS channels).
 - **Optimize for Interoperability:** Allows all non-DFS channels plus channels 52, 56, 58, 60.
 - **Optimize for Performance:** Allows all DFS/non-DFS channels, including 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140.

NOTE

Note that these settings only affect Ruckus APs that support the extended DFS channel list.

4. Click **Apply** to save your settings.

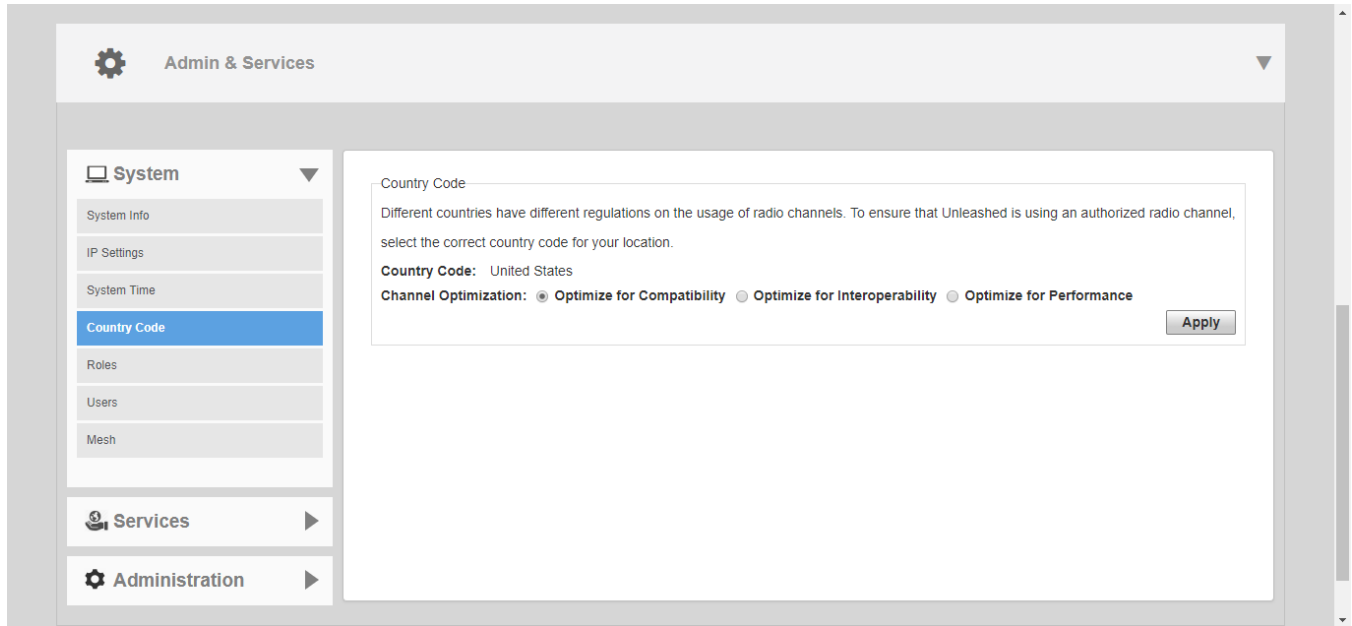FIGURE 265 The Country Code page



Channel Optimization

If your Country Code is set to "United States," an additional configuration option, **Channel Optimization**, is shown. This feature allows you to choose whether additional DFS (Dynamic Frequency Selection) channels in the 5 GHz band should be available for use by your APs.

Note that these settings only affect Ruckus APs that support the extended DFS channel list. Channel Optimization settings are described in the following table.

The 5 GHz channels available for AP use are the following:

- **Optimize for Compatibility:** 36, 40, 44, 48, 149, 153, 157, 161, 165 (non-DFS channels).
- **Optimize for Interoperability:** non-DFS channels plus channels 52, 56, 58, 60.
- **Optimize for Performance:** all DFS + non-DFS channels: 36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 149, 153, 157, 161.

TABLE 35 Channel Optimization settings for US Country Code

Setting	Description	Use this setting when
Optimize for Compatibility	DFS-capable Unleashed APs are limited to the same channels as all other APs (non-DFS channels only).	You have a mixture of APs that support DFS channels and other Ruckus APs that do not support DFS channels in a Smart Mesh configuration.
Optimize for Interoperability	Unleashed APs are limited to non-DFS channels, plus four DFS channels supported by Centrino systems (may not be compatible with other wireless NICs).	You have only DFS-capable APs in your network, or Smart Mesh is not enabled, and you are confident that all wireless clients support DFS channels.
Optimize for Performance	Unleashed APs can use all available DFS and non-DFS channels, without regard for compatibility or interoperability	You have only DFS-capable APs in your network, you are not concerned with DFS compatibility of client devices, and you want to make the maximum use of all possible available channels.

Channel Mode

The Channel Mode option allows you to configure outdoor APs to use channels regulated as indoor-only.

Some countries restrict certain 5 GHz channels to indoor use only. For instance, Germany restricts channels in the 5.15 GHz to 5.25 GHz band to indoor use. When an Unleashed outdoor AP is set to a country code where these restrictions apply, the AP can no longer be set to an indoor-only channel and will no longer select from amongst a channel set that includes these indoor-only channels when SmartSelect or Auto Channel selection is used, unless the administrator configures the AP to allow use of these channels.

For instance, if the AP is installed in a challenging indoor environment such as a warehouse, the administrator may want to allow the AP to use an indoor-only channel. These channels can be enabled for use through the web interface by configuring the **Channel Mode** and checking **Allow indoor channels**. If you have an indoor AP functioning as a Root AP with outdoor APs functioning as Mesh APs, the mesh backhaul link must initially use a non-indoor-only channel. Your outdoor Mesh APs may fail to join if the mesh backhaul link is using a restricted indoor-only channel.

Configuring User Roles


Unleashed provides a "Default" role that is automatically applied to all new user accounts.

This role links all users to the internal WLAN and permits access to all WLANs by default. As an alternative, you can create additional roles that you can assign to selected wireless network users, to limit their access to certain WLANs, to allow them to log in with non-standard client devices, or to grant permission to generate guest passes. (You can then edit the "default" role to disable the guest pass generation option.)

To create a new user Role:

1. Go to **Admin & Services > System > Roles**. The **Roles** page appears, displaying a Default role in the **Roles** table.
2. Click **Create**.

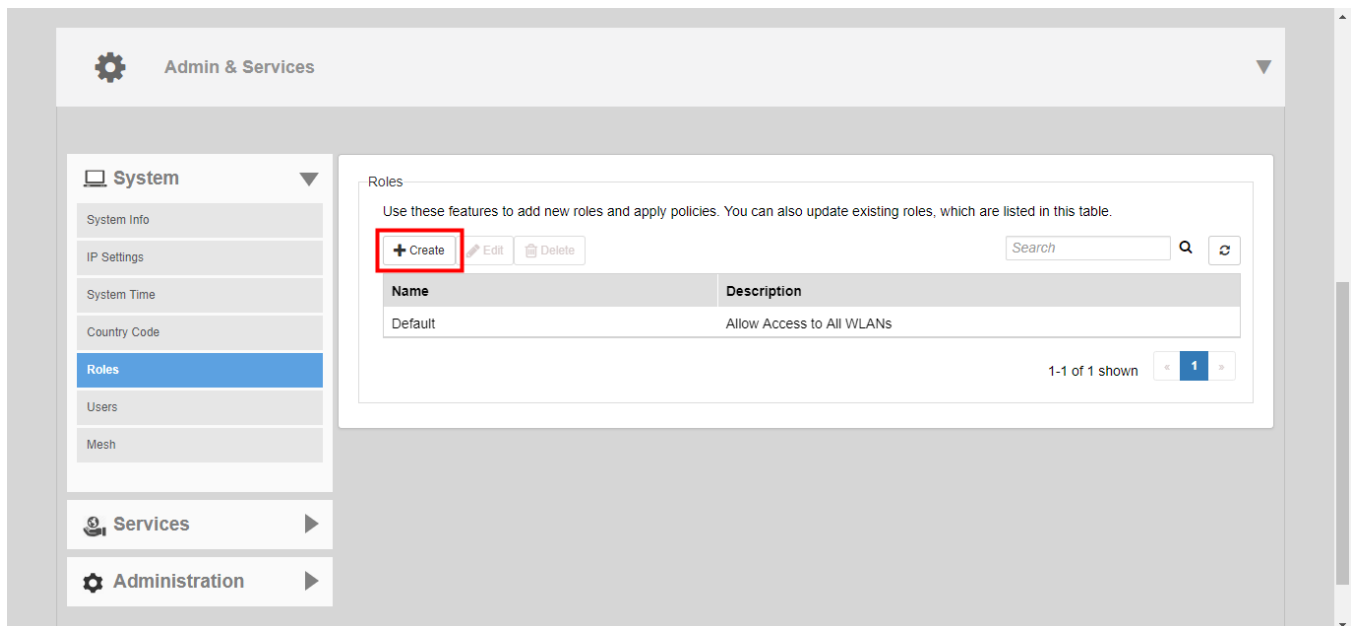FIGURE 266 Roles



3. Enter a **Name** and a short **Description** for this role.


4. Choose the options for this role from the following:
 - **Group Attributes:** Fill in this field only if you are creating a user role based on Group attributes extracted from an Active Directory server. Enter the User Group name here. Active Directory/LDAP users with the same group attributes are automatically mapped to this user role.
 - **Allow All WLANs:** You have two options: (1) Allow Access to all WLANs, or (2) Specify WLAN Access. If you select the second option, you must specify the WLANs by clicking the check box next to each one.
 - **Guest Pass:** If you want users with this role to have the permission to generate guest passes, enable this option.

NOTE

When creating a guest pass generator role, you must ensure that this role is given access to the guest WLAN/s. If you create a role and allow guest pass generation, but do not allow the role access the relevant WLANs, members of the "Guest Pass Generator" Role will be unable to generate guest passes for the guest WLAN.

- **Administration:** Enable this option to allow this user role admin privileges. Admin privileges are divided into two levels:
 - **Super Admin:** Allows users to perform all configuration and management tasks.
 - **Monitoring Admin:** Allows monitoring and viewing of operating status only.
5. When you finish, click **OK** to save your settings. This role is ready for assignment to authorized users.
 6. If you want to create additional roles with different policies, repeat this procedure.

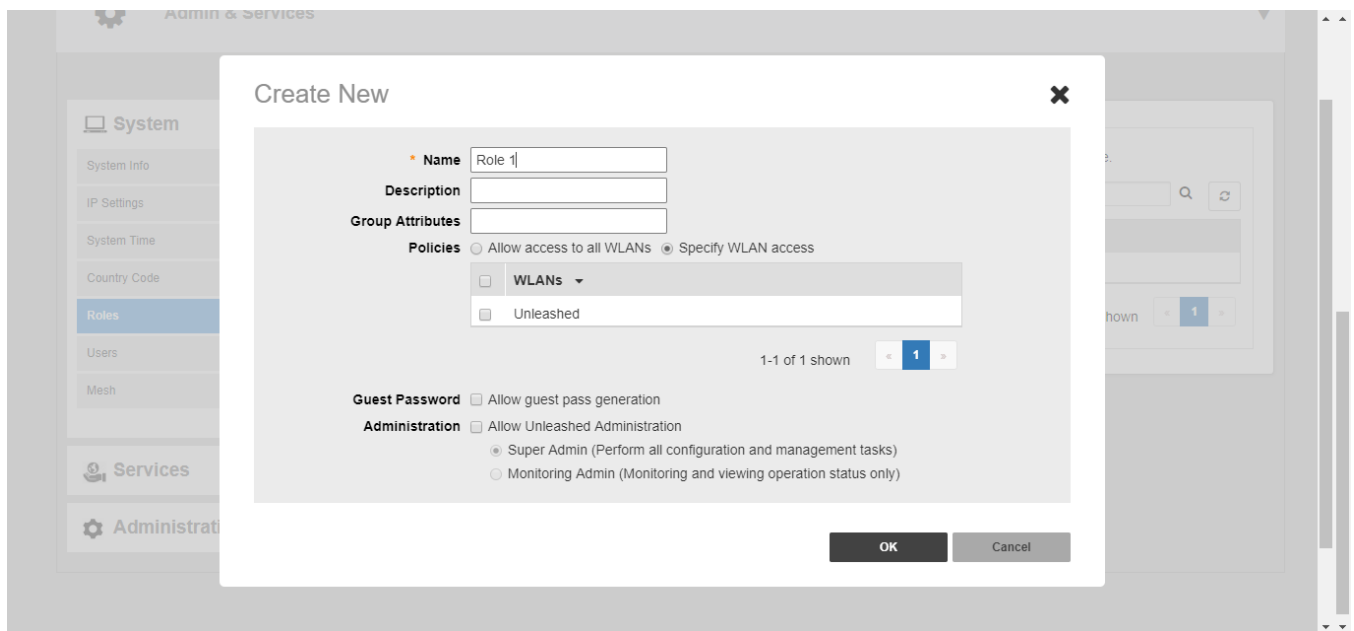FIGURE 267 Creating a new user Role



Adding New Users to the Local Database

Once the wireless network is set up, you can choose to authenticate wireless users using an external authentication server (Active Directory or RADIUS server), or to authenticate users by referring to accounts that are stored in the system's internal user database.

This section describes the procedures for managing users using the internal user database. For authentication using an external AAA server, see [AAA Servers](#) on page 380.

Configuring Admin & Services Settings

System Settings

To use the internal user database as the default authentication source and to create new user accounts in the internal database:

1. Go to **Admin & Services > System > Users**.
2. In the **Internal User Database** table, click **Create New**.
3. When the **Create New** form appears, fill in the text fields with the appropriate entries:
 - **User Name:** Enter a name for this user. User names must be 1-32 characters in length, using letters, numbers, underscores (_) and periods (.). User names are case-sensitive and may not begin with a number.
 - **Full Name:** Enter the assigned user's first and last name. The user name can be up to 64 characters, including special characters and spaces.
 - **Password:** Enter a unique password for this user, 4-32 characters in length, using a combination of letters, numbers and special characters including characters from (!) (char 33) to (~) (char 126). Passwords are case-sensitive.
 - **Confirm Password:** Re-enter the same password for this user.
4. If you have created roles that enable non-standard client logins or that gather staff members into workgroups, select the appropriate role for this user from the **Roles** drop-down menu. For more information on roles and their application, see [Configuring User Roles](#) on page 362.
5. Click **OK** to save your settings. Be sure to communicate the user name and password to the appropriate end user.

FIGURE 268 The Users Page


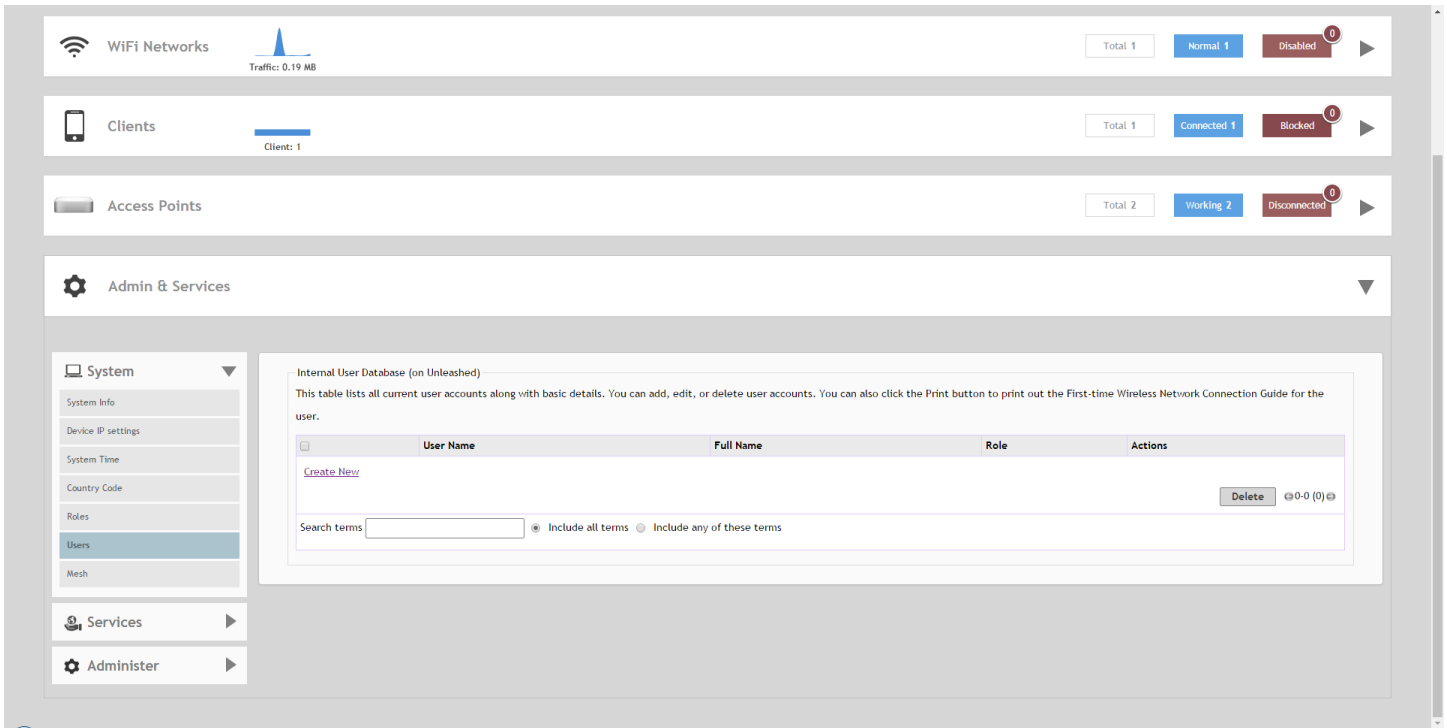


FIGURE 269 Creating a New User on the Internal Database

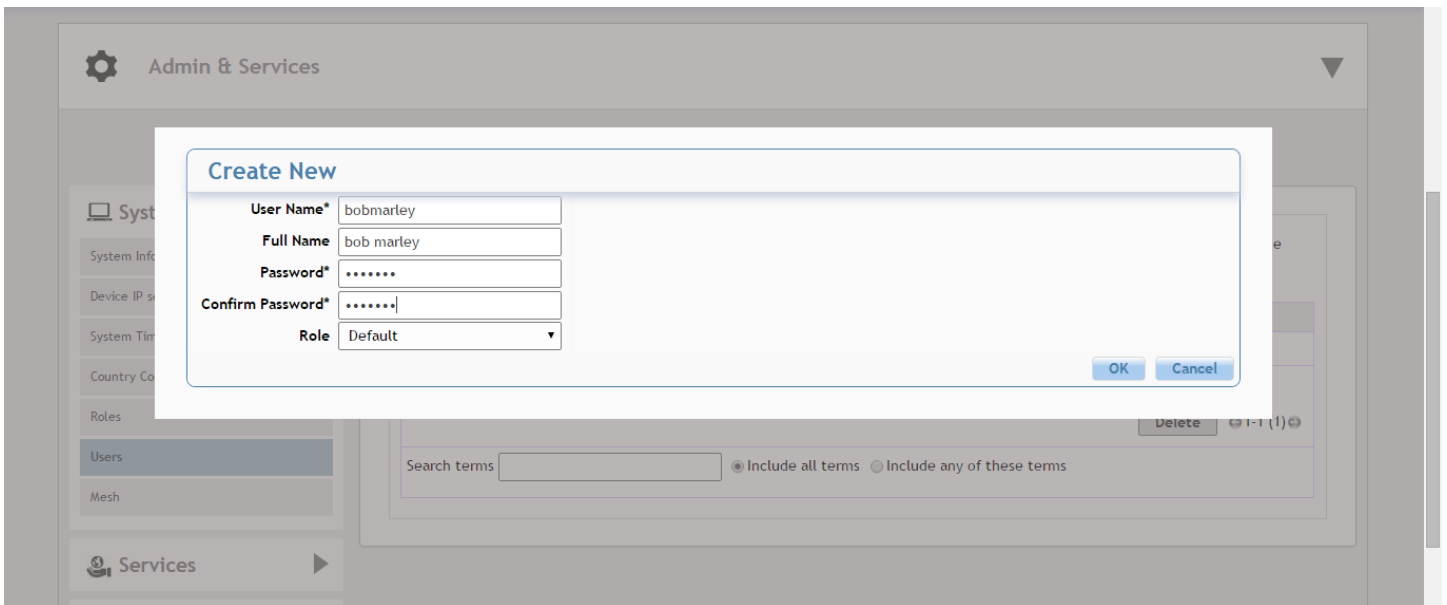

Changing an Existing User Account

1. Go to Admin & Services > System > Users.

2. When the **Users** features appear, locate the specific user account in the **Internal User Database** table, and then click **Edit**.
3. When the **Editing [user name]** form appears, make the needed changes.
4. If a role must be replaced, select a new **Role** for this user. (For more information, see [Configuring User Roles](#) on page 362.)
5. Click **OK** to save your changes. Be sure to communicate the relevant changes to the appropriate end user.

Importing Users into the Local Database using CSV File

1. From the dashboard, select **Admin & Services > System > Users**.
2. Under **Internal User Database**, click **More > Import** to import user profiles.

You can download a sample user profile using the link in **To download a example of profile, click here**.

FIGURE 270 Importing Users into the Local Database

Internal User Database (on Unleashed)

This table lists all current user accounts along with basic details. You can add, edit, or delete user accounts. You can click the Print button to print out the First-time Wireless Network Connection Guide for the user. You also can click the Import button to import user profiles. To download an example of profile [click here](#).

Users can access https://unleashed.ruckuswireless.com/user/user_changepass.jsp to change password.

Show QR Code


+ Create **Edit** **Delete** **More**

Username	Role
1239	Default

More dropdown menu:
 Clone
 Print
 Import

3. In the **Import User List** window, either drag-and-drop a file within the dotted area or click to upload the file.

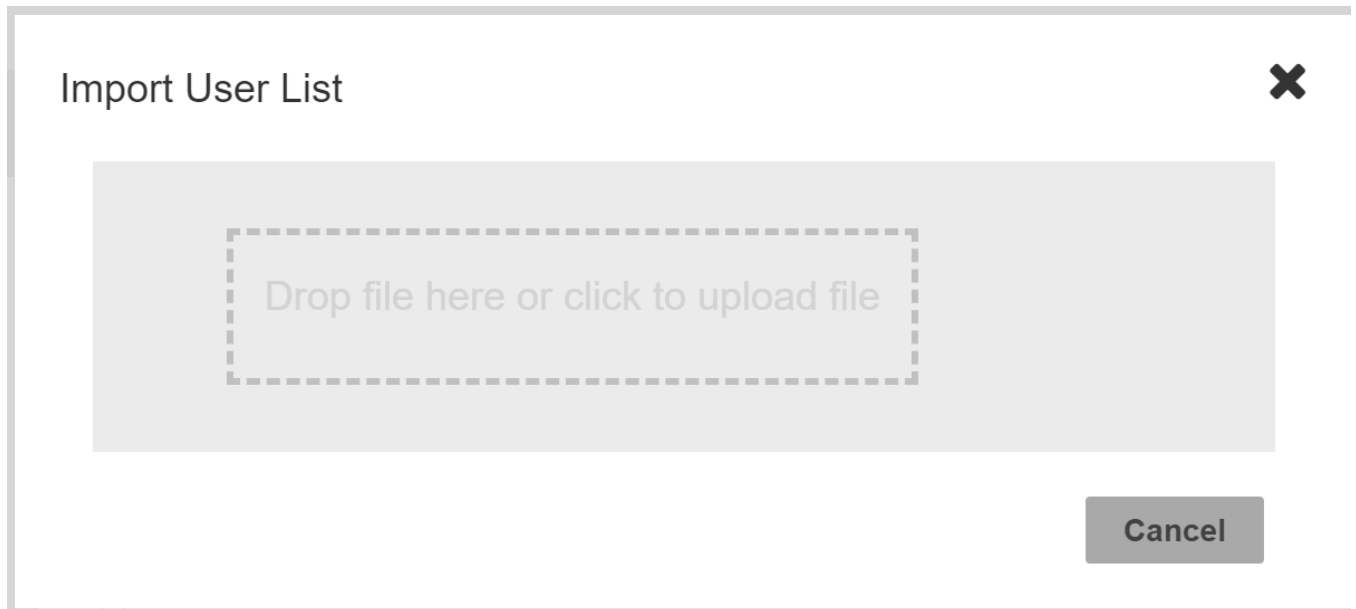FIGURE 271 Importing User List




Limitations and Considerations for CSV Import

- A CSV file can contain a maximum of 2048 accounts at one time. A maximum of 2048 accounts are stored in the local database.
- A CSV file must use the following format: Username,FullName,Password,RoleName.
 - Password can contain only between 4 through 32 characters, and cannot contain "< >" (angle brackets).
 - RoleName must be between 1 through 32 characters and cannot contain "< >" (angle brackets).
 - Username must be from 1 through 32 characters in length and can consist only of alphanumeric characters, underscore (_), and period (.), and Chinese characters.
 - FullName is not necessary.

Deleting a User Record

1. Go to **Admin & Services > System > Users**.
2. Review the **Internal User Database** table.
3. To delete one or more records, click the check boxes next to those account records, and click the **Delete** button.
4. When the confirmation dialog box appears, click **OK** to save your settings. The records are removed from the internal user database.

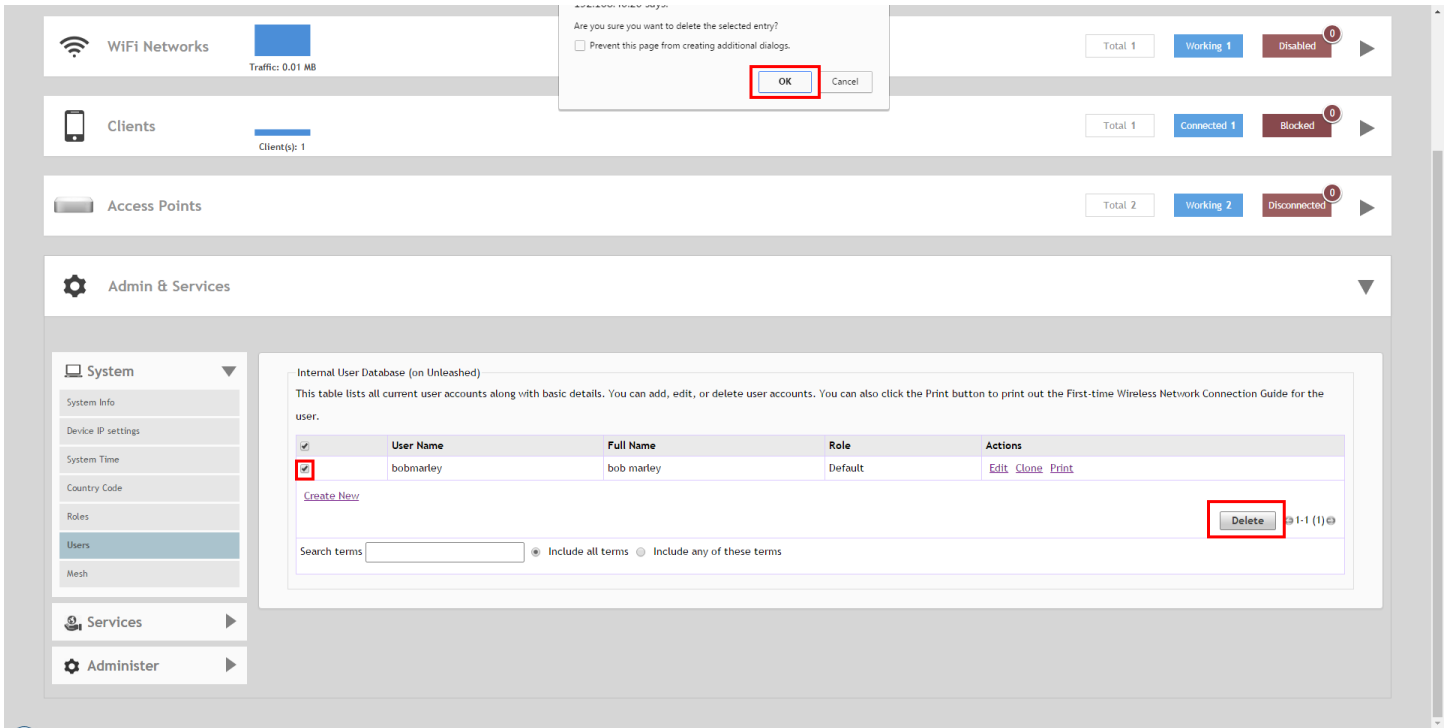FIGURE 272 Deleting a user from the internal database



Changing User Password

Users can change their account passwords without the aid of the administrator. Syslog maintains a record of the users who have changed their passwords, which reduces the workload of the administrator.

1. Go to https://unleashed.ruckuswireless.com/user/user_changepass.jsp or scan the QR code to reset the password.

2. In the **Change your password** dialog box, enter the following information:

a) For **Username**, enter your username.

The username must be from 1 through 32 characters in length and can consist only of alphanumeric characters, underscore (_), period (.), and Chinese characters.


b) For **Password**, enter your current password.

The password must be from 4 through 32 characters in length. The usage of a pair of special characters "< >" (angle brackets) is limited, but you can use the characters separately.

c) For **New Password**, enter your new password.

d) For **Confirm New Password**, enter your new password again.

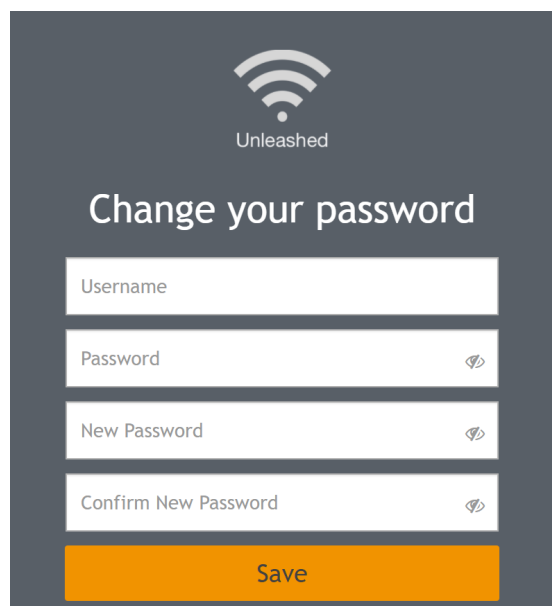FIGURE 273 Changing the Password for a Local Database User



3. Click **Save** to save the changes.

NOTE

If the authentication failed three times within five minutes, the login is disabled for three minutes.

Mesh Networking

Overview of Smart Mesh Networking

A Smart Mesh network is a peer-to-peer, multi-hop wireless network wherein participant nodes cooperate to route packets.

In a Ruckus Smart Mesh network, the routing nodes (that is, the access points forming the network), or "mesh nodes," form the network's backbone. Clients connect to the mesh nodes and use the backbone to communicate with one another, and, if permitted, with nodes on the internet. The mesh network enables clients to reach other systems by creating a path that 'hops' between nodes.

Configuring Admin & Services Settings

System Settings

Smart Mesh networking offers many advantages:

- Smart Mesh networks are self-healing: If any one of the nodes fails, the nodes note the blockage and re-route data.
- Smart Mesh networks are self-organizing: When a new node appears, it becomes assimilated into the mesh network.

In the Ruckus Smart Mesh network, all traffic going through the mesh links is encrypted. A passphrase is shared between mesh nodes to securely pass traffic. When deployed as a mesh network, Unleashed member APs communicate with the Unleashed Master AP either through a wired Ethernet connection (Root APs) or through the wireless connection using the 5 GHz radio (Mesh APs).

Smart Mesh Networking Terms

Before you begin deploying your Smart Mesh network, Ruckus recommends getting familiar with the following terms that are used in this document to describe wireless mesh networks.

TABLE 36 Mesh networking terms

Term	Definition
Mesh Node	A Ruckus Unleashed AP with mesh capability enabled.
Root AP (RAP)	A mesh node that communicates with the Unleashed Master AP through its Ethernet (wired) interface. The Unleashed Master AP itself must also be a Root AP.
Mesh AP (MAP)	A mesh node that communicates with the Unleashed Master AP through its wireless interface via a Root AP.
Ethernet-Linked Mesh AP (eMAP)	An eMAP is a mesh node that is connected to its uplink AP through a wired Ethernet cable, rather than wirelessly. eMAP nodes are used to bridge wireless LAN segments together.
Mesh Tree	Each Mesh AP can have exactly one uplink to a Root AP or another Mesh AP, and each Root AP or Mesh AP can have multiple Mesh APs connected to it, resulting in a tree-like topology. A single Unleashed Master AP can manage more than one mesh tree. There is no limit on the number of mesh trees per Unleashed Master. For example, an Unleashed network can consist of 1 mesh tree of 6 APs, 2 mesh trees of 3 APs each, or 3 mesh trees of 2 APs each.
Hop	The number of wireless mesh links a data packet takes from one Mesh AP to the Root AP. For example, if the Root AP is the uplink of Mesh AP 1, then Mesh AP 1 is one hop away from the Root AP. In the same scenario, if Mesh AP 1 is the uplink of Mesh AP 2, then Mesh AP 2 is two hops away from the Root AP. A maximum of 8 hops is supported.

See [Supported Mesh Topologies](#) on page 370 for more information.

Supported Mesh Topologies


Smart Mesh networks can be deployed in three types of topologies:

- Standard Topology
- Wireless Bridge Topology
- Hybrid Mesh Topology

Standard Topology

The standard Smart Mesh topology consists of the Unleashed Master AP and a number of Root APs and Mesh APs. In this topology, the Unleashed Master and the upstream router are connected to the same wired LAN segment. You can extend the reach of your wireless network by forming and connecting multiple mesh trees to the wired LAN segment. In this topology, all APs connected to the wired LAN are considered "Root APs," and any AP not connected to the wired LAN is considered a "Mesh AP."

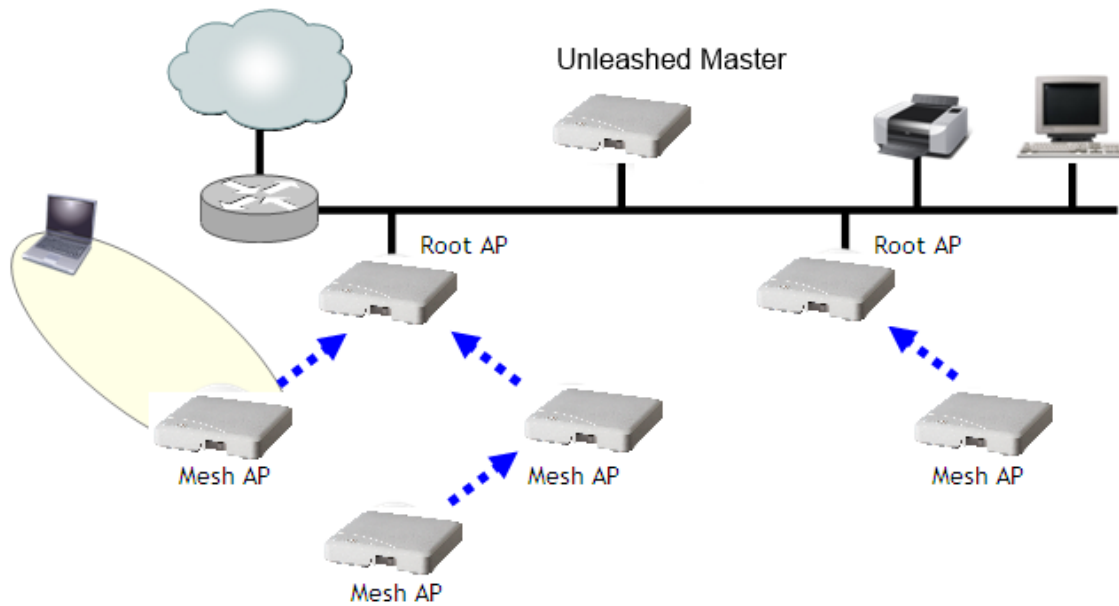
FIGURE 274 Mesh - standard topology



Wireless Bridge Topology

If you need to bridge isolated wired LAN segments, you can set up a mesh network using the wireless bridge topology. In this topology, the Unleashed Master and the upstream router are on the primary wired LAN segment, and another isolated wired segment exists that needs to be bridged to the primary LAN segment. You can bridge these two wired LAN segments by forming a wireless mesh link between the two wired segments, as shown in the figure below.

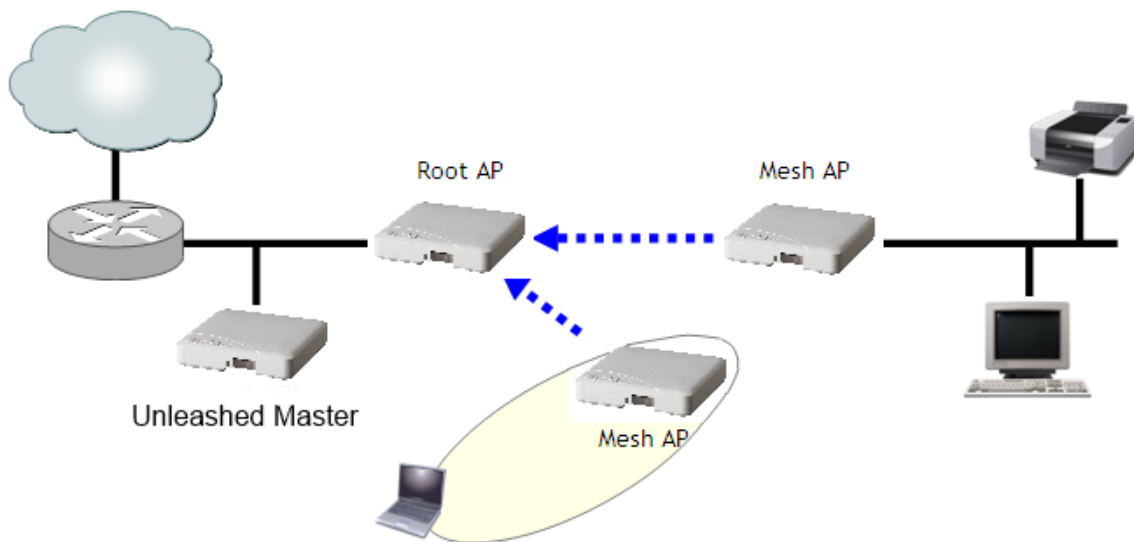FIGURE 275 Mesh - wireless bridge topology



Hybrid Mesh Topology

A third type of network topology can be configured using the Hybrid Mesh concept.

Ethernet-linked Mesh APs (eMAP) enable the extension of wireless mesh functionality to a wired LAN segment. An eMAP is a special kind of Mesh AP that uses a wired Ethernet link as its uplink rather than wireless. An eMAP is not considered a Root AP, despite the fact that it discovers the Unleashed Master through its Ethernet port.


Multiple eMAPs can be connected to a single Mesh AP to, for example, bridge a wired LAN segment inside a building to a wireless mesh outdoors.

In designing a mesh network, connecting an eMAP to a Mesh AP extends the Smart Mesh network without expending a wireless hop, and the eMAP can be set on a different channel to take advantage of spectrum reuse.

NOTE

The Unleashed Master AP cannot be an eMAP.

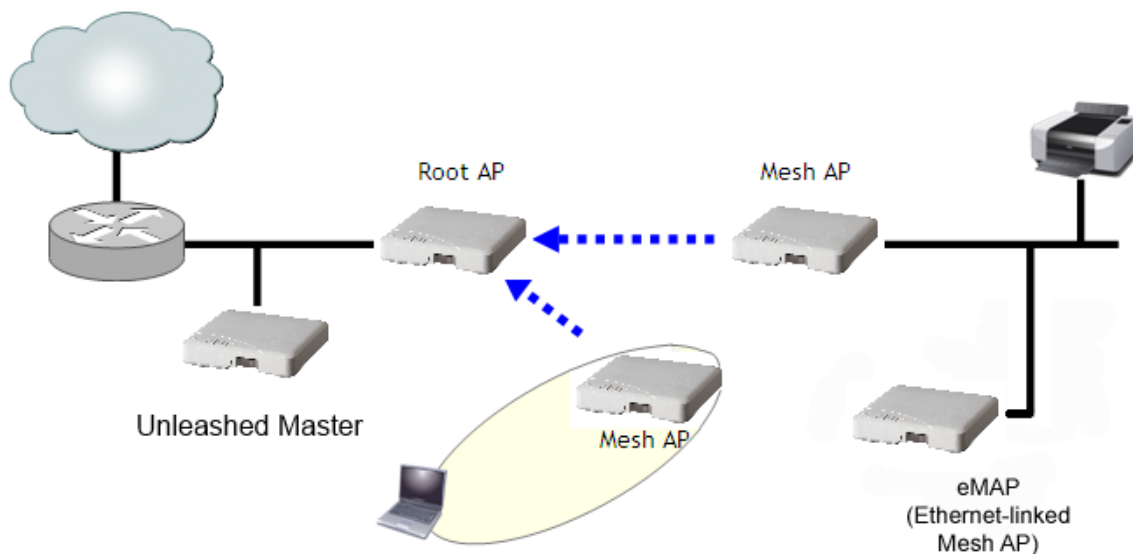FIGURE 276 eMAP - Hybrid Mesh topology



Configuring Mesh Settings

You can configure Mesh settings from the **Admin & Services > System > Mesh** page.

To configure Mesh settings, select **Enable Mesh**. Optionally, you can change the **Mesh Name (ESSID)** and the **Mesh Passphrase**, or click **Generate** to generate a new random Mesh passphrase. Under **Mesh Radio Option**, select **2.4 GHz** or **5 GHz**.

NOTE

Once you have enabled Mesh, you cannot disable it again without resetting the Master AP to factory defaults (see [Restore to Factory Settings](#) on page 430).

NOTE

If you enabled Mesh during the Setup Wizard process, you do not need to configure it again here.

NOTE

The Master AP cannot be a Mesh AP. The Master AP can only be a Root AP in a Mesh topology.


NOTE

2.4-GHz mesh radio does not support Zero Touch Mesh.

NOTE

Unleashed H320 does not support Mesh.

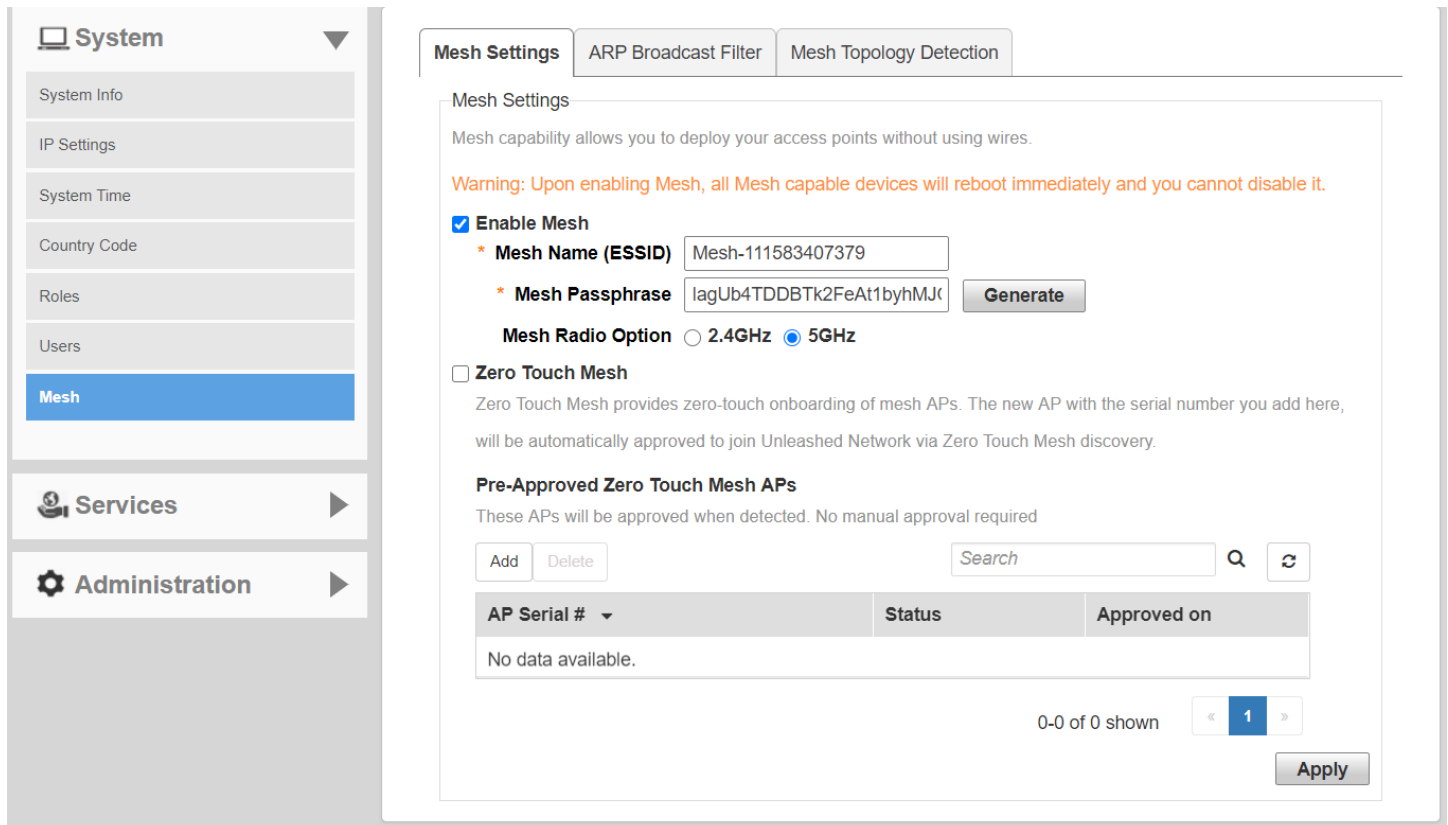FIGURE 277 Mesh Settings



Zero Touch Mesh


Zero Touch Mesh allows customers to skip the mesh configuration priming process, enabling Mesh APs already installed in their permanent locations to auto-discover, auto-provision and auto-form a mesh network without priming.

In most installations, Unleashed APs that are destined to become Mesh APs need to first be primed prior to deployment. They are first manually connected to the controller (Unleashed Master AP) via Ethernet to receive the provisioning parameters (Mesh SSID and PSK passphrase), and then unplugged from Ethernet and installed at their desired location.

Once installed, Mesh APs perform network discovery and associate to another Mesh AP (RAP, MAP or eMAP) that is beaconing the provisioned Mesh SSID.

This manual procedure can be skipped using the Zero Touch Mesh feature.

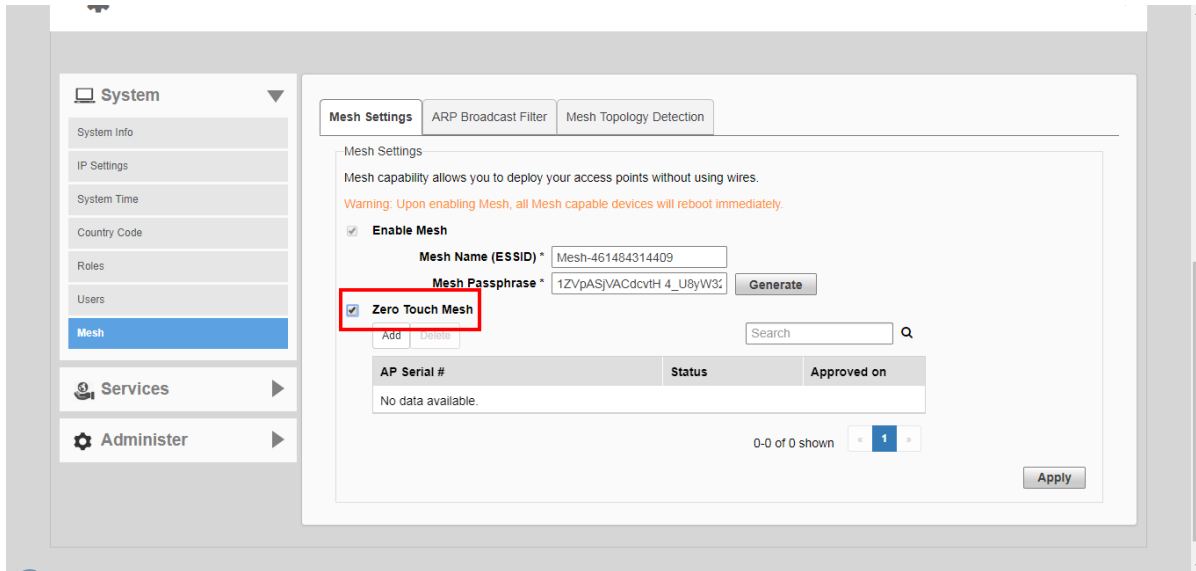FIGURE 278 Enabling Zero Touch Mesh



Onboarding Mesh APs with Zero Touch Mesh


To allow Unleashed Mesh APs to join the Mesh network without first connecting them via Ethernet, use the following procedure:

1. Go to **Admin & Services > System > Mesh**.
2. Select the check box to enable **Zero Touch Mesh**.
3. Click **Apply**.

The changes to the mesh settings will propagate through the mesh network.

4. Go to **Access Points > Summary > Show Zero Touch Mesh APs**.

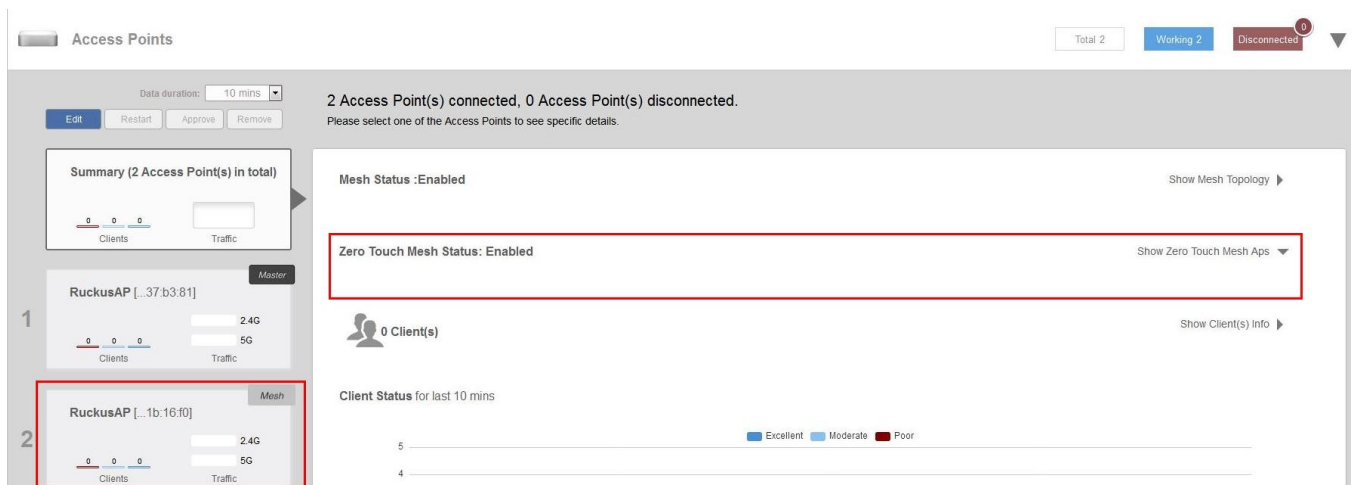FIGURE 279 Show Zero Touch Mesh APs



- When a supported AP attempts to join, it will appear in the *Zero Touch Mesh AP* table. Click the **Approve** button to approve the AP.

FIGURE 280 Waiting for connection

The screenshot shows the 'Access Points' management page. On the left, there is a summary for 'RuckusAP [...]37:b3:81]' with 0 clients and 0 traffic. The main area shows 'Mesh Status :Enabled' and 'Zero Touch Mesh Status: Enabled'. A table lists the AP details:

Access Points	Serial	Model	Status	Action
f0.3e:90:1b:16:f0	111604203423	R710	Waiting for connecting	

The 'Status' column for the AP is highlighted with a red box. Below the table, it shows '0 Client(s)' and 'Client Status for last 10 mins'.

FIGURE 281 Click Approve to allow the AP to join

This screenshot shows the same 'Access Points' page after the 'Approve' button has been clicked. The table now shows the AP status as 'Disapproved' with a green checkmark in the 'Action' column:


Access Points	Serial	Model	Status	Action
f0.3e:90:1b:16:f0	111604203423	R710	Disapproved	✓

The table is highlighted with a red box. The 'Client Status for last 10 mins' section is also visible at the bottom.

- To pre-approve APs by serial number, go to **Admin & Services > System > Mesh > Zero Touch Mesh**, and locate the *Pre-Approved Zero Touch Mesh* section.
- In the same section, click the **Add** button to add a new AP to the list of pre-approved Zero Touch Mesh APs.
The *Input AP Serial* window appears.

8. Enter the **AP Serial Number** of the AP to autoprovision, and click **OK**.

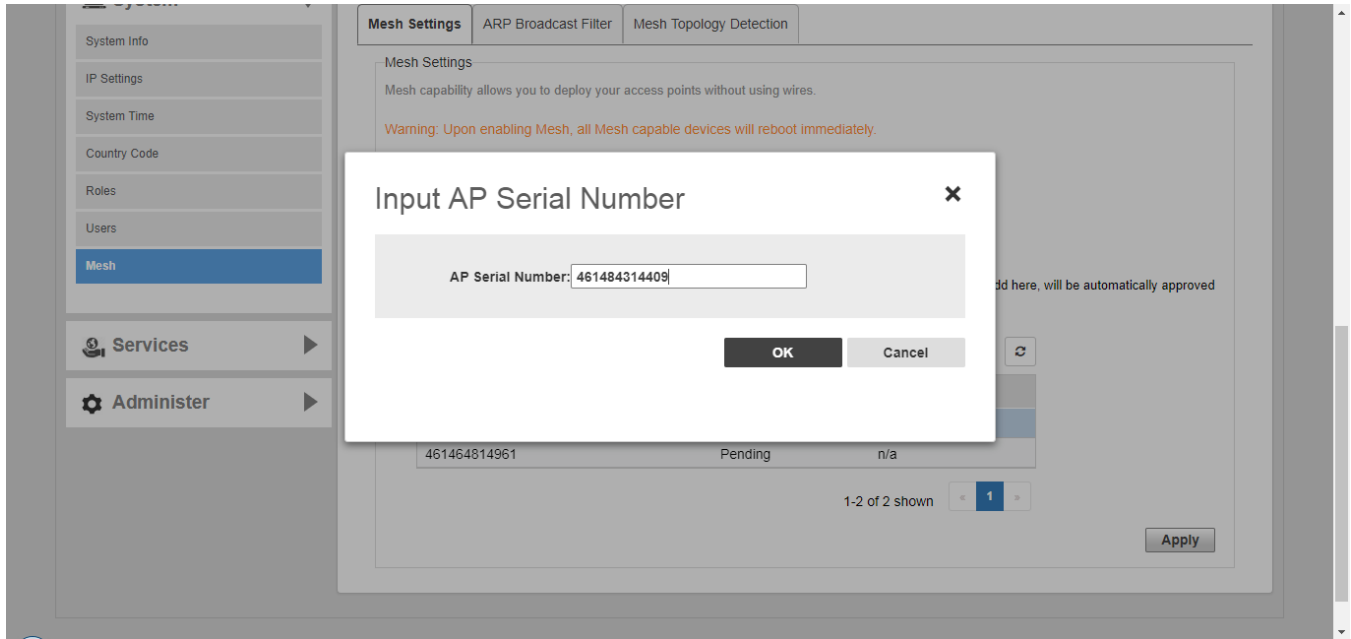FIGURE 282 Add AP serial number



The AP's serial number is added to the list.

9. Repeat for additional mesh APs.
10. Click **Apply**.

A message box appears notifying you that the process may take several minutes for the changes to propagate through the mesh network.

11. When the listed APs in factory default state come online, they will begin performing network discovery, auto-provisioning and finally association to another upstream AP the Unleashed network.


ARP Broadcast Filter

The ARP Broadcast Filter is used to minimize or limit the amount of broadcast ARP (Address Resolution Protocol) packets on the network.

The ARP Broadcast filter is designed to reduce IPv4 ARP broadcasts over the air. Once enabled, access points will sniff ARP responses and maintain a table of IP addresses to MAC address entries. When the AP receives an ARP broadcast request from a known host, the AP converts the broadcast request packet into a unicast request by replacing the broadcast address with the MAC address.

To enable ARP Broadcast Filter, select the check box and click **Apply**.

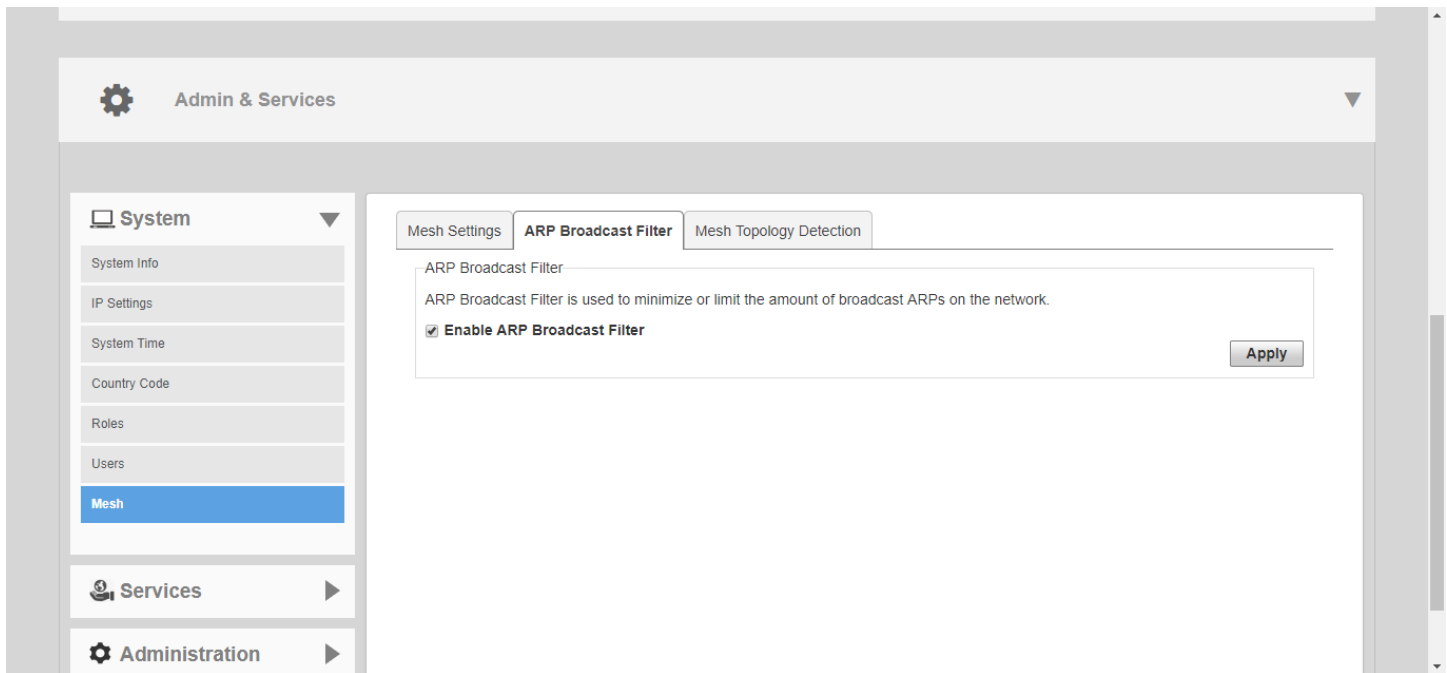FIGURE 283 ARP Broadcast Filter




Mesh Topology Detection

The Mesh Topology Detection feature allows you to set the number of mesh hops and mesh downlinks after which Unleashed will trigger a warning message.

For example, if you enable both options with a threshold value of 3 for each (default), Unleashed will trigger a warning event message when either of the following events occurs:

- A Mesh AP with 4 or more hops from a Root AP is detected.
- A Root AP with 4 or more downlink Mesh APs connected to it is detected.

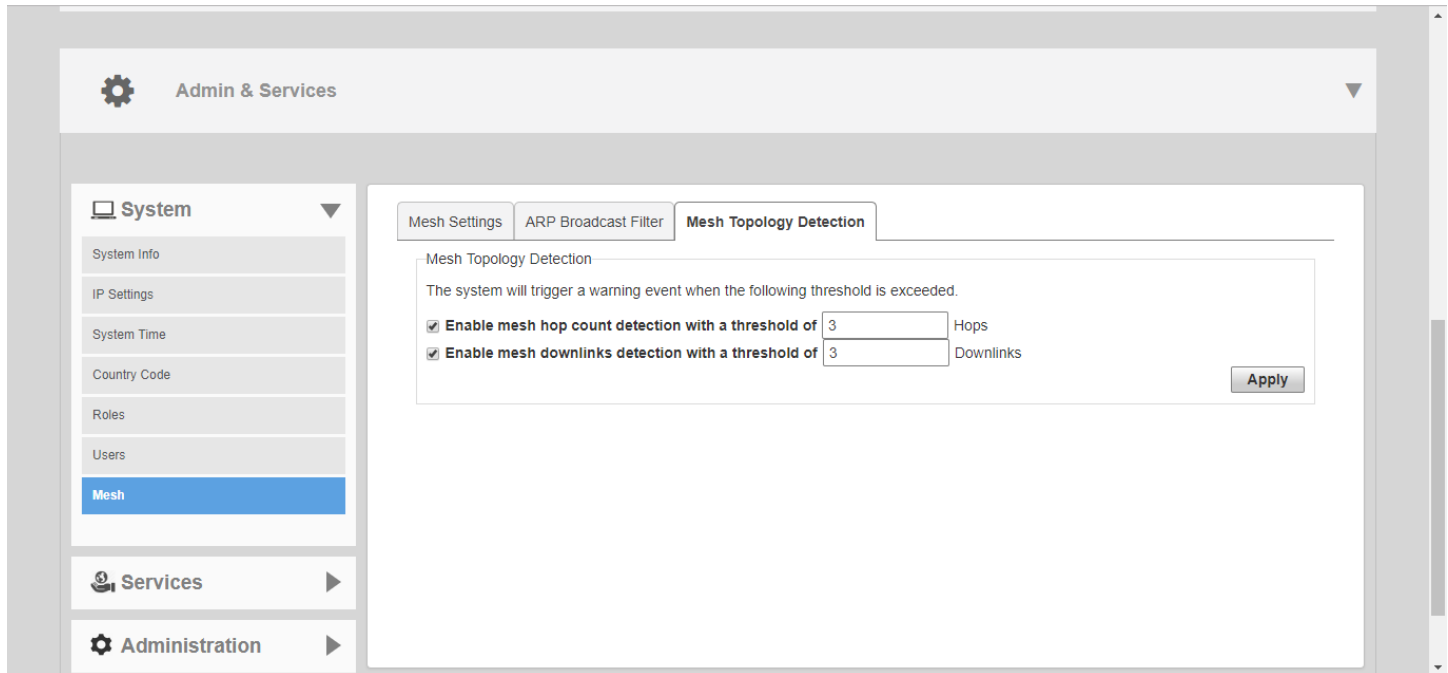FIGURE 284 Mesh Topology Detection



Enabling Log Delivery to Remote Syslog Server

Unleashed's internal log files can be configured for automatic delivery to a remote syslog server.

To enable log file delivery to a remote syslog server:

1. Go to **Admin & Services > System > System Info**, and scroll down to the *Log Settings* section at the bottom of the page.
2. Enable the **Remote Syslog** option and enter the IP address of the syslog server in the field provided.
3. Select one of the following options to control the content of the logs:
 - **All Syslog**: The controller sends all syslog messages configured in the *Debug Logs* section of the *Admin & Services > Administration > Diagnostics > Debug Info* page.
 - **Client Connection Logs Only**: The controller sends client connection logs only to the syslog server.
 - **Client Flow Data Only**: The controller sends client flow data only to the syslog server.
4. Optionally, enable the **Inherit remote syslog server for APs** option.

Enabling this feature allows the controller to supply client association information to a third party application that can then deploy ACL policies to a firewall based on client association information such as user name, IP, MAC address, etc. First, Unleashed retrieves client association information, then reorganizes the information and sends it to the syslog server, from which it can be collected by the third party software and sent to the firewall for access restrictions based on client association information.
5. Configure the **Facility Name** as follows:
 - **Keep Original**: Retain the original facility name.
 - **local0 - local7**: Specify facility name.

6. Set the **Priority Level** as follows:

- **All:** Include all syslog messages.
- 0(emerg), 1(alert), 2(crit), 3(err), 4(warning), 5(notice), 6(info), 7(debug): Lower numbers indicate higher priority. The syslog server will only receive logs whose priority levels are the same as or higher than the configured level.

FIGURE 285 Configuring syslog settings


The screenshot displays a configuration page for syslog settings. At the top, there are input fields for 'Password', 'API Id', and 'From PhoneNumber'. Below these is a radio button for 'Customized Server'. A 'Method' dropdown menu is set to 'GET', and a large 'URL' text area is present. 'Test' and 'Apply' buttons are located at the bottom right of this section. The 'Log Settings' section is highlighted with a red box and contains the following options: 'Remote Syslog' with a checked checkbox, 'Enable reporting to remote syslog server at' followed by an input field containing '10.10.1.11' and '(IP Address) for', a dropdown menu set to 'All Syslog', 'Inherit remote syslog server for APs' with a checked checkbox, 'Facility Name' dropdown set to '--Keep Original--', and 'Priority Level' dropdown set to '--ALL--'. An 'Apply' button is at the bottom right of the red box.

Services

The *Services* pages include options for configuring system services such as Application Recognition and Control, Bonjour Gateway, DPSK, Hotspot service and Guest Access services.

To configure system services, go to **Admin & Services > Services**.

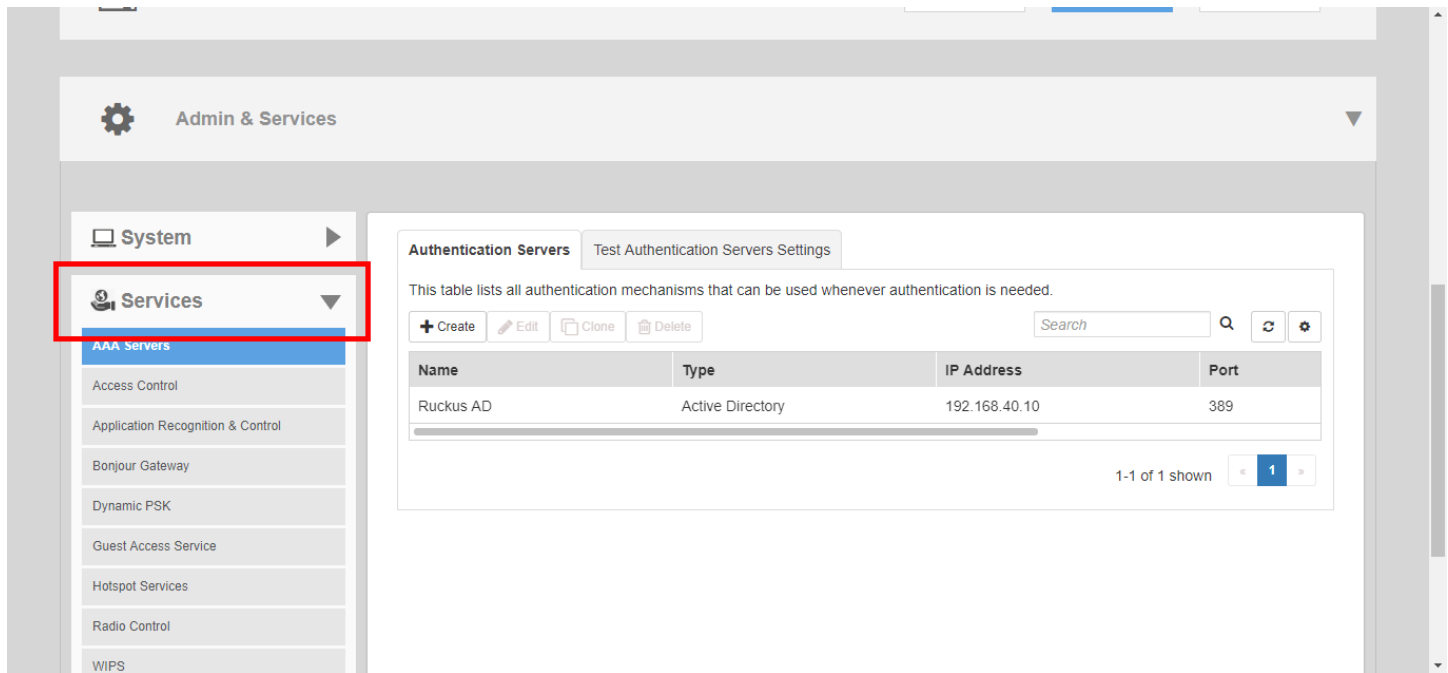FIGURE 286 The Admin & Services > Services page



AAA Servers

If you want to authenticate users against an external Authentication, Authorization and Accounting (AAA) server, you will need to first configure your AAA server, then point Unleashed to the AAA server so that requests will be passed through Unleashed before access is granted. This section describes the tasks that you need to perform on the Unleashed web interface to ensure your Unleashed APs can communicate with your AAA server.

For specific instructions on AAA server configuration, refer to the documentation that is supplied with your server.

Unleashed supports two types of AAA server:

- Microsoft Active Directory
- RADIUS

A maximum of 32 AAA server entries can be created, regardless of server type.

Configuring AAA Servers

Complete the following steps to configure RUCKUS Unleashed to authenticate users against an external Active Directory or RADIUS authentication server:

1. Go to **Admin & Services > Services > AAA Servers**.
2. In **Authentication Servers**, click **Create New**.
3. Enter the name for the AAA server.

4. Under **Type**, select the server type:
 - **Active Directory:** If you use a Microsoft AD server, configure the following settings:
 - **Global Catalog:** Enable Global Catalog for multi-domain AD authentication. If this option is enabled, you must also enter an Admin DN and Password so that RUCKUS Unleashed can query the Global Catalog.
 - **Encryption:** select Enable TLS encryption if you want to encrypt all authentication traffic between the client and the Active Directory server. The AD server must support TLS1.0, TLS1.1, or TLS1.2.
 - **Server Address:** Enter the IP address or the domain name of the AD server.
 - **Port:** The default port number (3268, or 636 if you have enabled TLS encryption) should not be changed unless you have configured your AD server to use a different port.
 - **Windows Domain Name:** Enter a domain name for single domain authentication, or leave blank for multi-domain authentication.
 - **RADIUS:** If your authentication server is a RADIUS server, configure the following settings:
 - **Encryption:** If you want to enable encryption of RADIUS packets using Transport Layer Security (TLS), select the Enable TLS encryption check box. This allows RADIUS authentication and accounting data to be passed safely across insecure networks such as the Internet.
 - **Auth Method:** Choose PAP or CHAP according to the authentication protocol used by your RADIUS server.
 - **Backup RADIUS:** If a backup RADIUS or RADIUS Accounting server is available, enable the check box next to Backup RADIUS and additional fields appear. Enter the relevant information for the backup server and click **OK**. When you have configured both a primary and backup RADIUS server, an additional option is available in the Test Authentication Settings section to choose to test against the primary or the backup RADIUS server.

NOTE

If Backup RADIUS is disabled, the server address format supports both domain name and IP address.

- **Server Address:** Enter the IP address of the RADIUS server (and backup RADIUS server, if enabled).
 - **Port:** The default port (1812) should not be changed unless you have configured your RADIUS server to use a different port.
 - **Shared Secret:** Enter a password for communication between RUCKUS Unleashed and the RADIUS server.
 - **Confirm Secret:** Repeat the shared secret.
 - **Retry Policy:** Enter a Request Timeout value (in seconds) and a Max Number of Retries value in the relevant fields.
5. Click **OK** to save your AAA server entry.

FIGURE 287 The AAA Servers Page

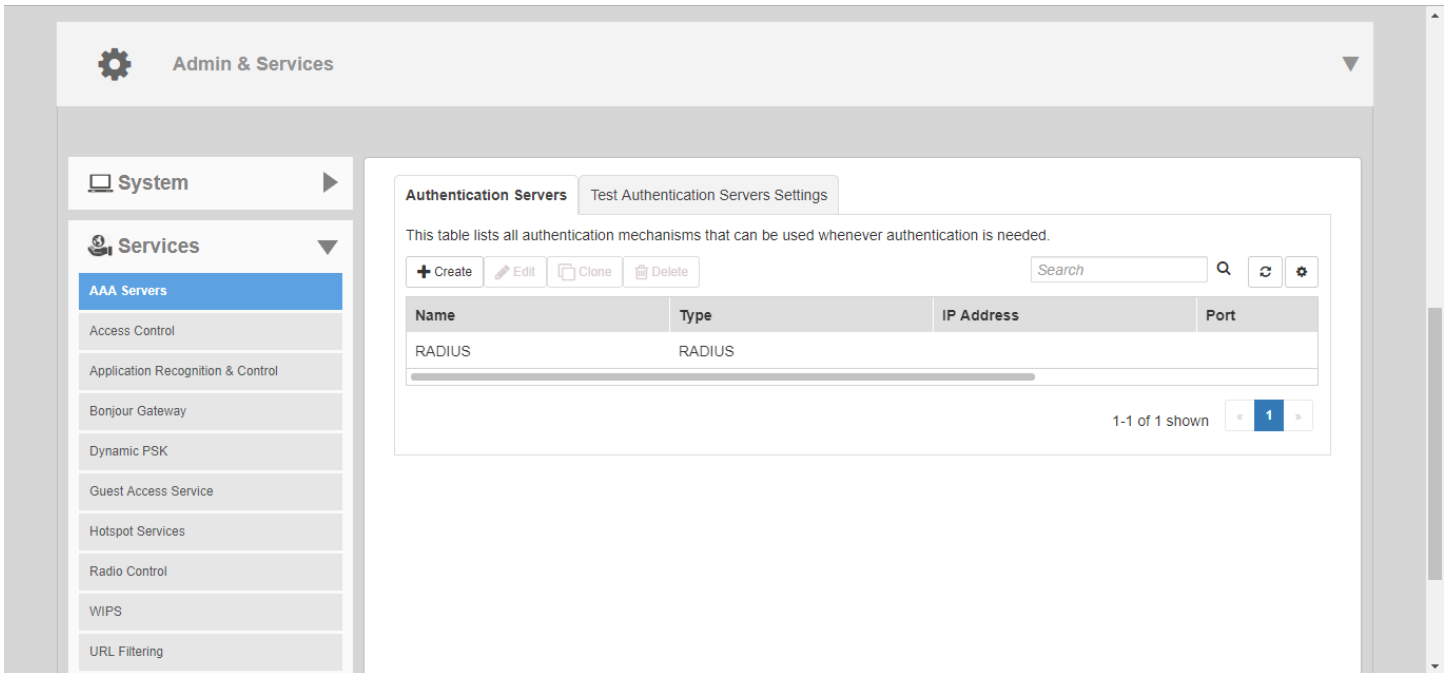


FIGURE 288 Microsoft Active Directory Server Configuration


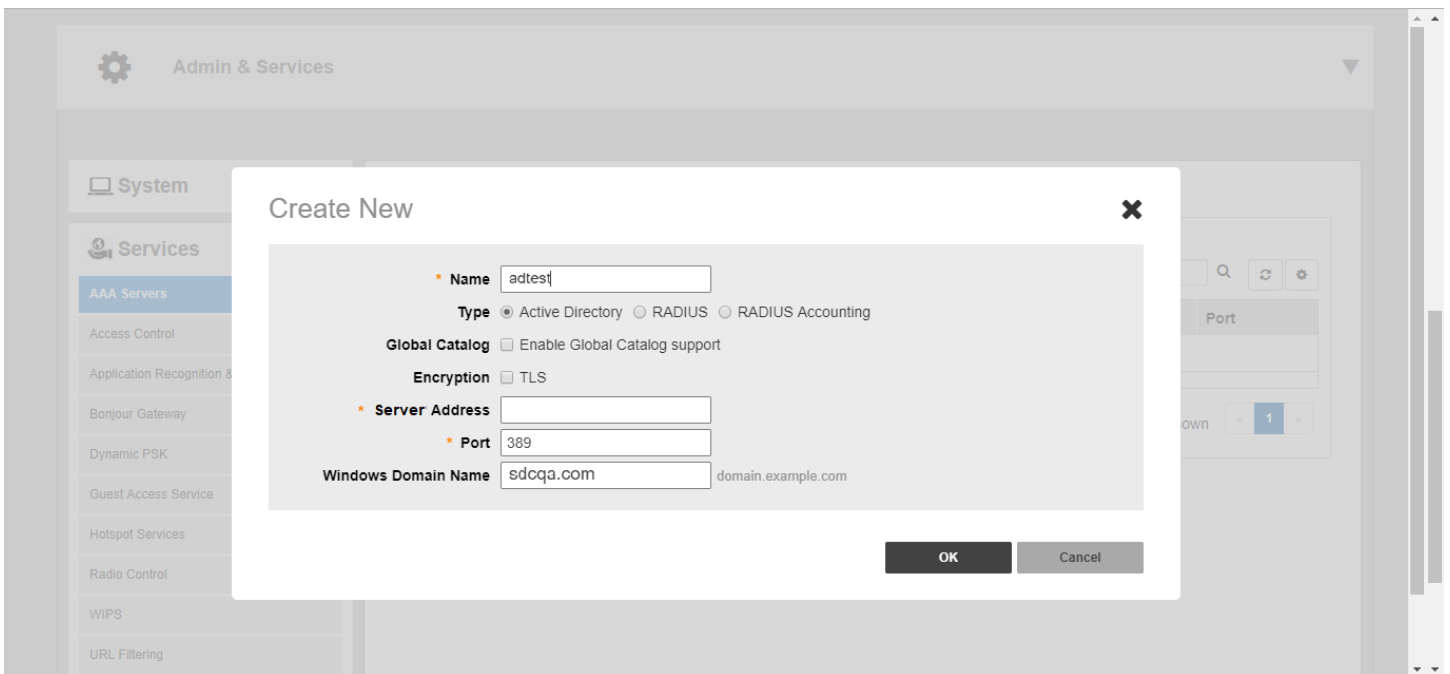


FIGURE 289 RADIUS or RADIUS Accounting Server Configuration

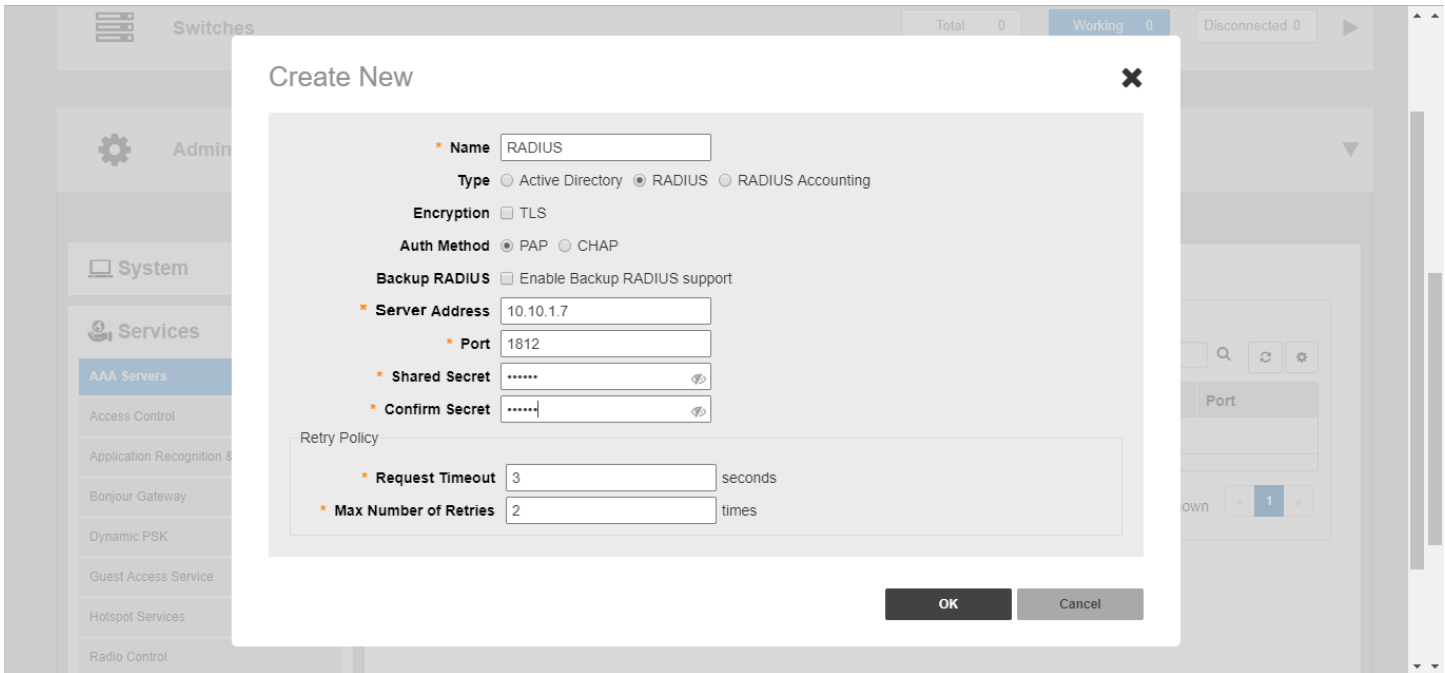

Limitations on configuring AAA Servers

- If a domain name can be resolved to more than one IP address, the first two IP addresses are used as the primary and secondary servers.
- If a domain name can be resolved to only one IP address, it is used as the primary server.
- If the first two IP addresses change, the backend resolves the domain name every 2 hours and updates the AAA configuration.
- If the domain name is incorrect, it is requested every 2 minutes.

Testing Authentication Settings

The **Test Authentication Settings** feature allows you to query an AAA server for a known authorized user, and return Groups associated with the user that can be used for configuring Roles within Unleashed.

After you have configured one or more authentication servers in Unleashed, perform this task to ensure that Unleashed can connect to the authentication server and retrieve the groups/attributes that you have configured for each user account.

To test the connection to the authentication server:

1. Go to **Admin & Services > Services > AAA Servers > Test Authentication Servers Settings**.
2. Select the authentication server that you want to use from the **Test Against** drop-down menu.
3. In **User Name** and **Password**, enter an Active Directory or RADIUS user name and password.
4. Click **Test**.

If Unleashed was able to connect to the authentication server and retrieve the configured groups/attributes, the information appears at the bottom of the page. The following is an example of the message that will appear when Unleashed authenticates successfully with the server:

```
Success! Groups associated with this user are "{group_name}". This user will be assigned a role of {role}.
```

Configuring Admin & Services Settings


Services

If the test was unsuccessful, there are several possible results (other than success) that will be displayed to inform you if you have entered information incorrectly:

- Admin invalid
- User name or password invalid

These results can be used to troubleshoot the reasons for failure to authenticate users to an AAA server.

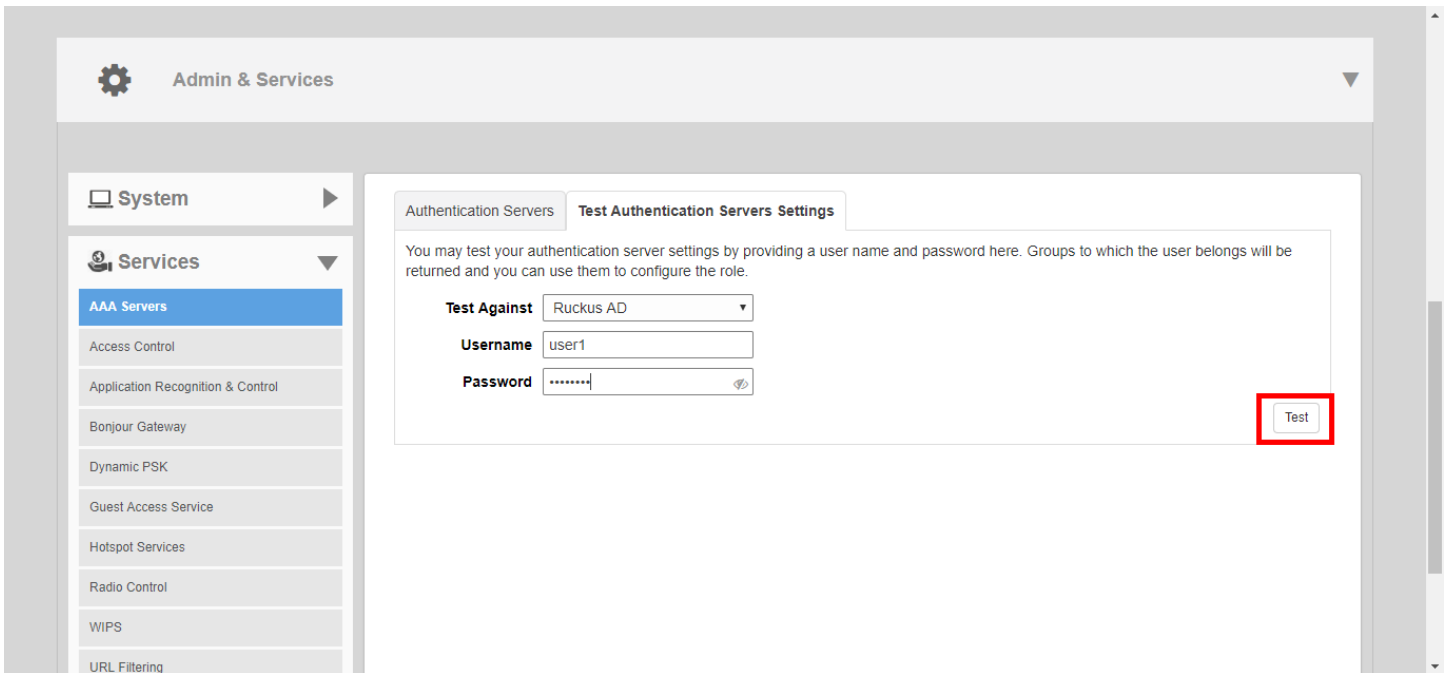
FIGURE 290 Testing authentication server settings



Access Control

RUCKUS Unleashed provides several options for controlling access to your networks, including Layer 2/MAC address level Access Control Lists (ACLs), Layer 3/Layer 4/IP Address ACLs, Device Access Policies to control clients by OS type, and Client Isolation Allowlists, which are necessary when Wireless Client Isolation is enabled on a WLAN.

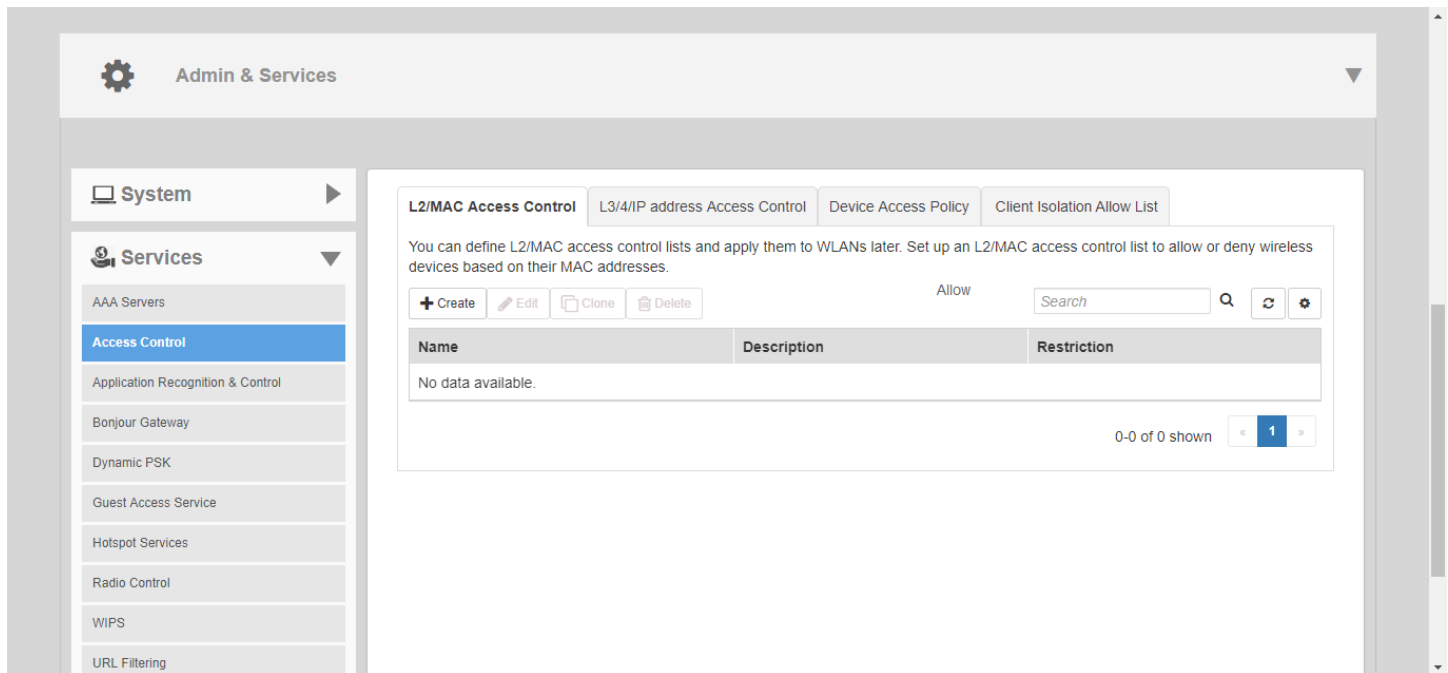FIGURE 291 Configuring Access Control



Creating a Layer 2/MAC Address Access Control List


Using the Access Controls configuration options, you can define Layer 2/MAC address ACLs, which can then be applied to one or more WLANs (upon WLAN creation or edit). ACLs are either allow-only or deny-only; that is, an ACL can be set up to allow only specified clients or to deny only specified clients. MAC addresses that are in the deny list are blocked at the AP, not necessarily at the Unleashed Master AP.

To configure an L2/MAC ACL:

1. Go to **Admin & Services > Services > Access Control > L2/MAC Access Control**.
2. Click **Create New**. The ACL **Create New** form appears.
3. Type a **Name** for the ACL, and optionally, a **Description** of the ACL.
4. Select the **Restriction** mode as either allow or deny.
5. Type a MAC address in the **MAC Address** text box, and then click **Create New** to save the address. The new MAC address that you added appears next to the Stations field. You can enter up to 128 MAC addresses per ACL.
6. Click **OK** to save the L2/MAC based ACL.

You can create up to 32 L2/MAC ACL rules and each rule can contain up to 128 MAC addresses. Each WLAN can be configured with one L2 ACL.

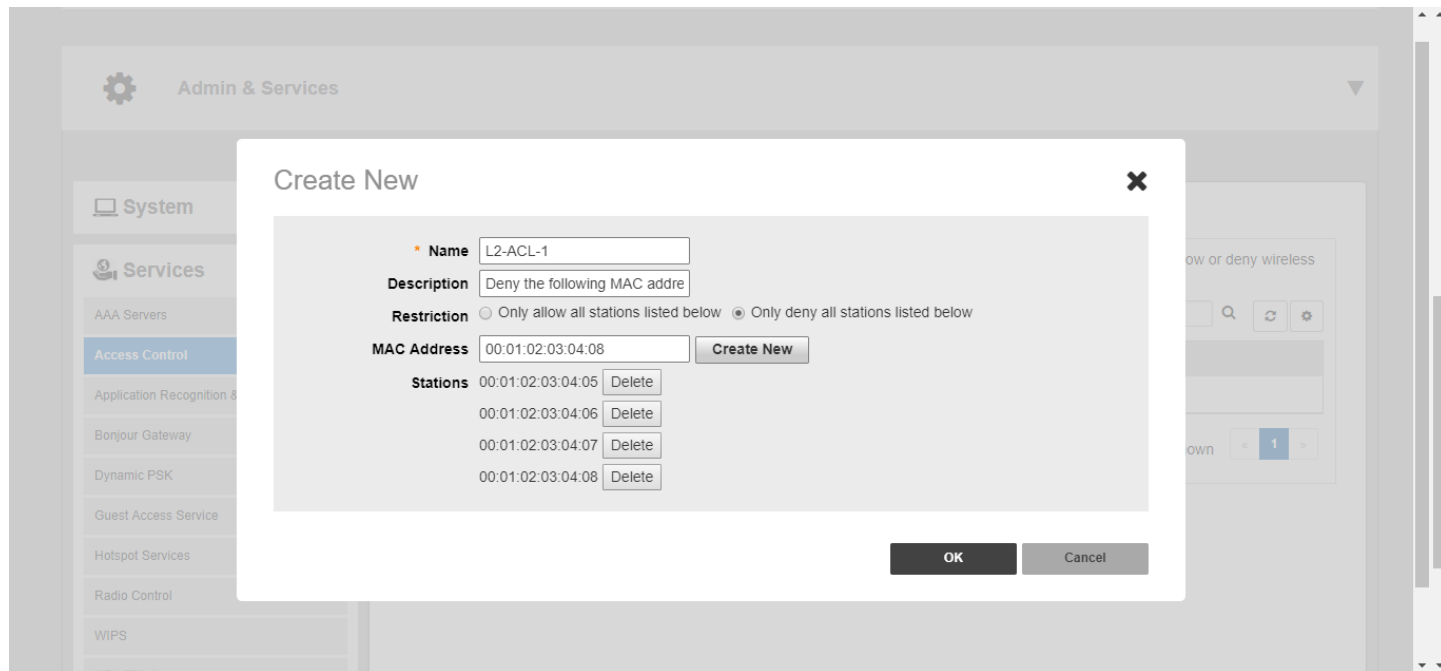FIGURE 292 Creating a Layer 2 ACL to deny specific MAC addresses



Creating a Layer 3/Layer 4/IP Address Access Control List

In addition to L2/MAC based ACLs, Unleashed also provides access control options at Layer 3 and Layer 4.

This means that you can configure the access control options based on a set of criteria, including:


- Destination IP Address
- Application
- Protocol
- Destination Port

To create an L3/L4/IP address based ACL:

1. Go to **Admin & Services > Services > Access Control > L3/4/IP Address Access Control**.
2. Click **Create New**. The ACL **Create New** form appears.
3. Type a **Name** for the ACL, and optionally, a **Description** of the ACL.
4. In **Default Mode**, set the default access privilege (allow all or deny all) that you want to grant all users by default.
5. In **Rules**, click **Create New** or click **Edit** to edit an existing rule.

6. Define each access policy by configuring a combination of the following:
 - **Type:** The access privilege (allow or deny) that this policy grants.
 - **Destination Address:** Enter an IP subnet and netmask of the network target to which you want to allow or deny access. (IP address must be in the format A.B.C.D/M, where M is the subnet mask.) Otherwise, select Any. For example, if you enter 192.168.0.1/24, the rule would allow or deny the entire Class C subnet. To allow/deny a single host, use /32 as the netmask.
 - **Application:** If you select a specific application from the menu, the Protocol and Destination Port options are automatically filled with the relevant values and are not configurable.
 - **Protocol:** Enter a network protocol number (0-254), as defined by the IANA (<http://www.iana.org/assignments/protocol-numbers/protocolnumbers.xhtml>) to allow or deny. Otherwise, select Any.
 - **Destination Port:** Enter a valid port number (1-65534) or port range (e.g., 80-443).
7. Click **OK** to save the ACL.
8. Repeat these steps to create up to 32 L3/L4/IP address-based access control rules.

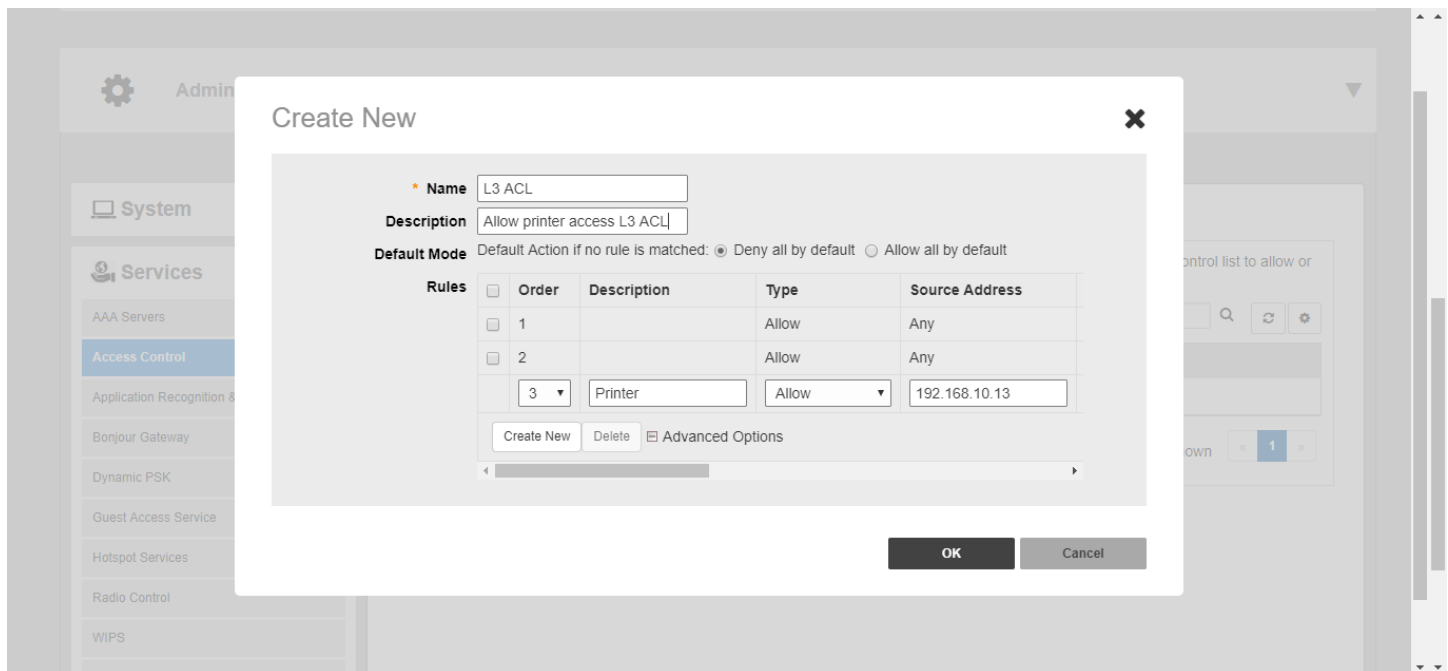FIGURE 293 Configuring a Layer 3/4/IP address-based ACL



Configuring Device Access Policies

In response to the ever-growing numbers of personally owned mobile devices such as smart phones and tablets being brought into the network, IT departments are requiring more sophisticated control over how devices connect, what types of devices can connect, and what they are allowed to do once connected.


Using the **Device Access Policy** settings, the Unleashed system can identify the type of client attempting to connect, and perform control actions such as permit/deny and rate limiting based on the device type.

Once a Device Access Policy has been created, you can apply the policy to any WLANs for which you want to control access by device type. You could, for example, allow only Apple iOS devices on one WLAN and only Linux devices on another.

To create a Device Access Policy:

1. Go to **Admin & Services > Services > Access Control > Device Access Policy**.
2. Click **Create New**.
3. Enter a **Name** and optionally a **Description** for the access policy.
4. In **Default Mode**, select **Deny all by default** or **Allow all by default**.
5. In **Rules**, you can create multiple OS-specific rules for each access policy.
 - **Description**: Description of the rule.
 - **OS/Type**: Select from any of the supported client types.
 - **Type**: Select rule type (allow or deny).
 - **Uplink/Downlink**: Set rate limiting for this client type.
6. Click **Save** to save the rule you created. You can create up to nine rules per access policy (one for each OS/Type).
7. To change the order in which rules are implemented, click the up or down arrows in the **Action** column. You can also **Edit** or **Clone** rules from the **Action** column.
8. To delete a rule, select the box next to the rule and click **Delete**.
9. Click **OK** to save the access policy. You can create up to 32 access policies (one access policy per WLAN).

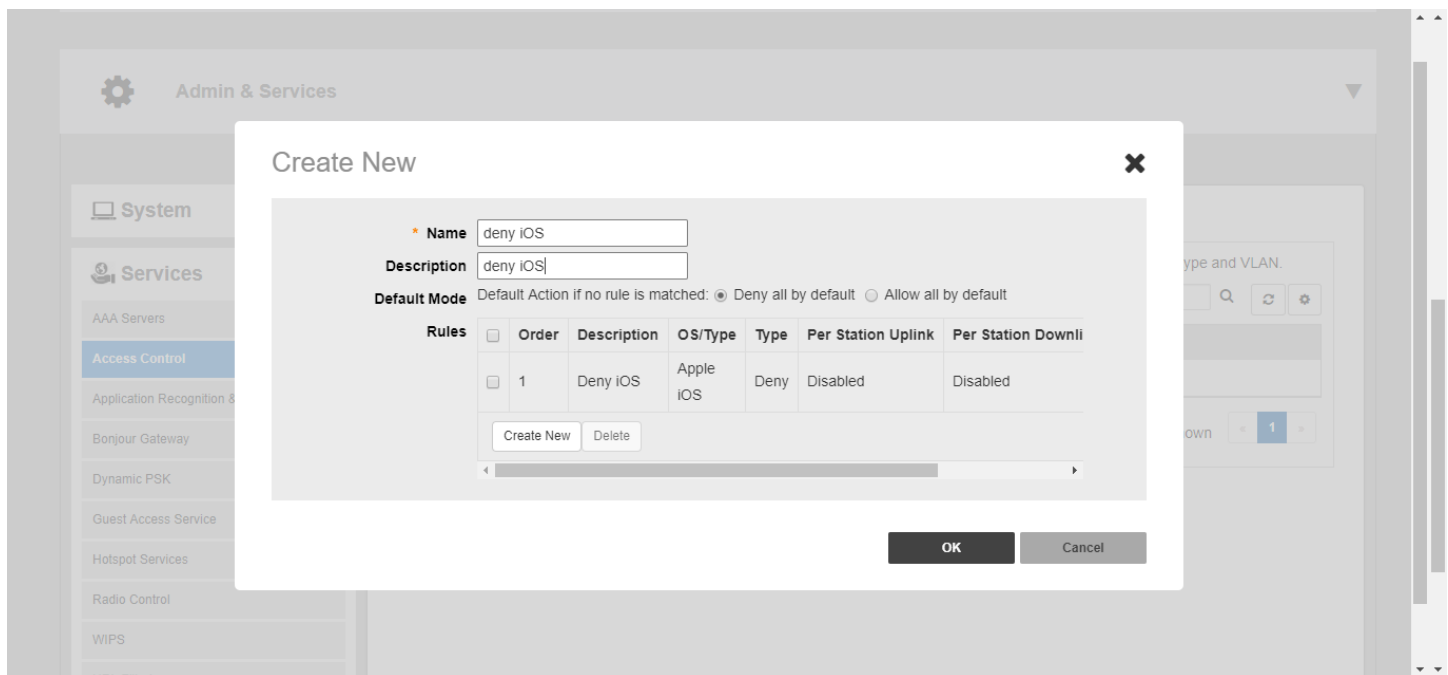FIGURE 294 Creating a Device Access Policy



Configuring Client Isolation Allow Lists

When Wireless Client Isolation is enabled on a WLAN, all communication between clients and other local devices is blocked at the Access Point.


To prevent clients from communicating with other nodes, the AP drops all ARP packets from stations on the WLAN where client isolation is enabled and which are destined to IP addresses that are not part of a per-WLAN allow list.

You can create exceptions to client isolation (such as allowing access to a local printer, for example) by creating Client Isolation Allow Lists.

To create a Client Isolation Allow List:

1. Go to **Admin & Services > Services > Access Control > Client Isolation Allow List**.
2. Click **Create New**.
3. Enter a **Name** and optionally a description for the allowlist policy.
4. **Auto Allowlist** is enabled by Default, which allows the APs to auto-discover gateway devices and add them to the isolation allowlist.
5. In **Rules**, you can create multiple device-specific rules for each device to be allow listed.
 - **Description:** Description of the device.
 - **MAC Address:** Enter the MAC address of the device.
 - **IPv4 Address:** Enter the IP address of the device.
6. Click **Save** to save the rule you created.
7. To change the order in which rules are implemented, select the order from the drop-down menu in the Order column. You can also **Edit** or **Clone** rules from the **Action** column. To delete a rule, select the box next to the rule and click **Delete**.
8. Click **OK** to save the allow list.

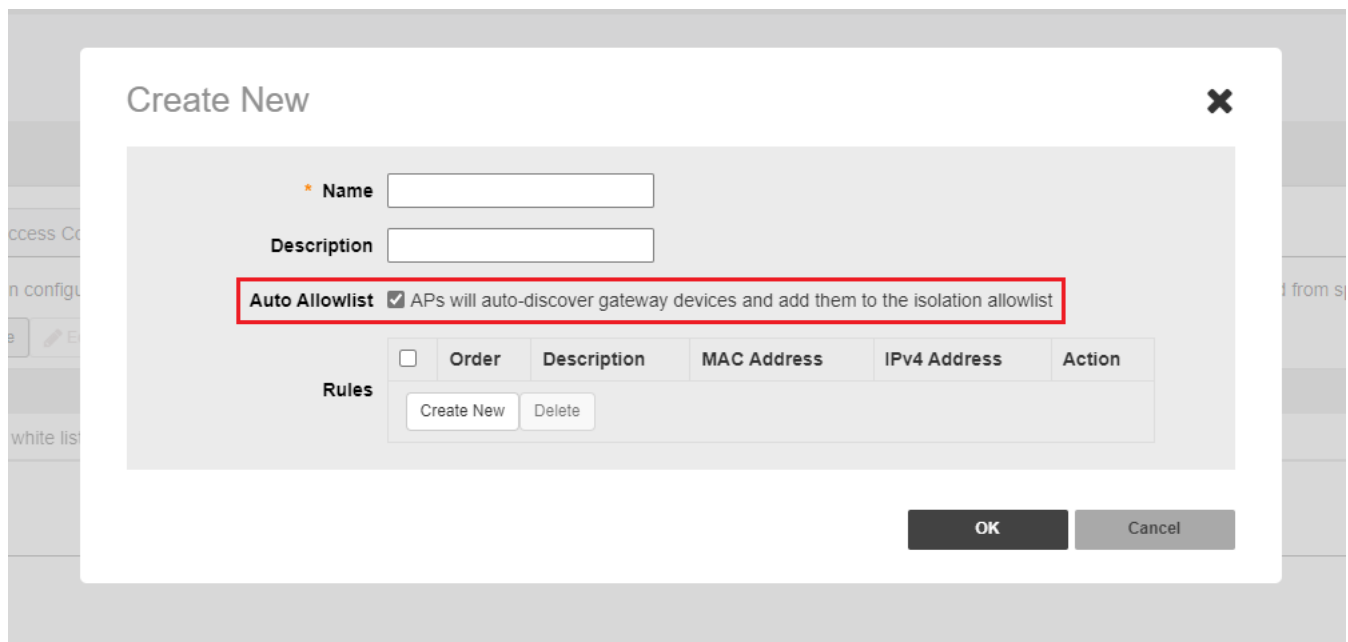FIGURE 295 Creating a Client Isolation Allow List



Application Recognition and Control

The Application Recognition and Control (ARC) features enable administrators to monitor which applications are generating the most wireless traffic, to apply filtering policies to prevent users from accessing certain applications or to rate limit certain applications, and to enhance the built-in application recognition capabilities with custom applications and port mappings.

Application Overview

The Application Overview page displays the top 10 applications and the top 10 clients by usage for the last 1 hour or 24 hour time period.

Use the drop-down menus at the top of the graphs to filter results by time period, AP group or SSID.

Configuring Admin & Services Settings

Services

You can also choose to display applications by their application name or by port number. Hover over a section of the pie chart to display a breakdown of total, uplink and downlink values.

The Top 10 clients chart also shows the client's MAC address and percentage of total traffic for this client when you hover over the pie chart.

FIGURE 296 Application Overview page

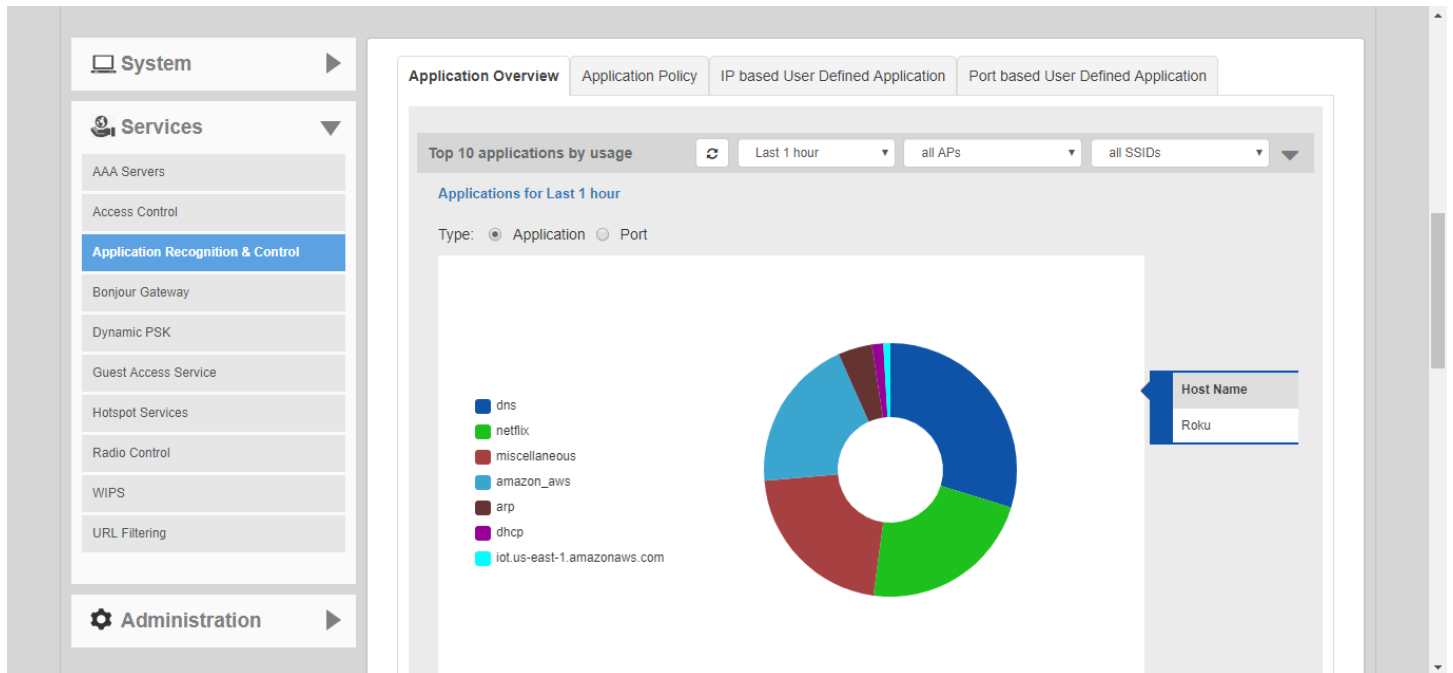


FIGURE 297 Application Performance


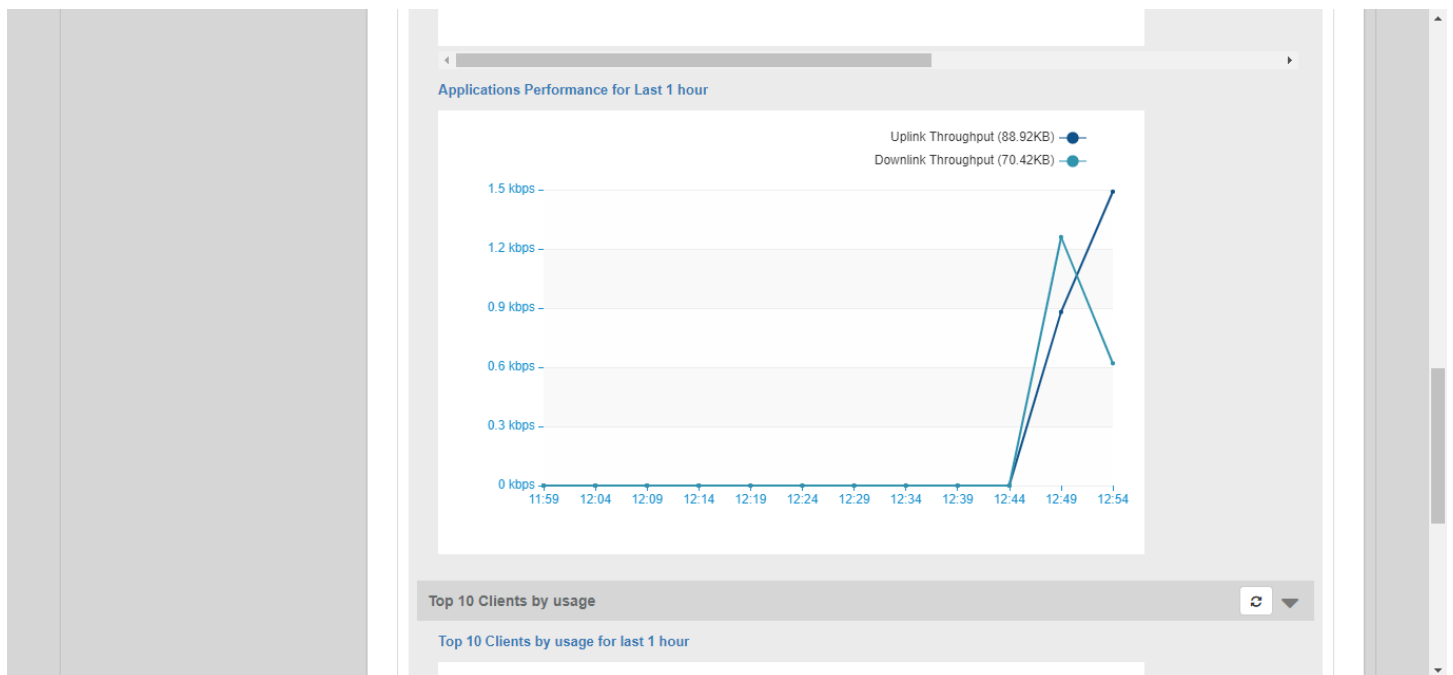


FIGURE 298 Top 10 clients by usage

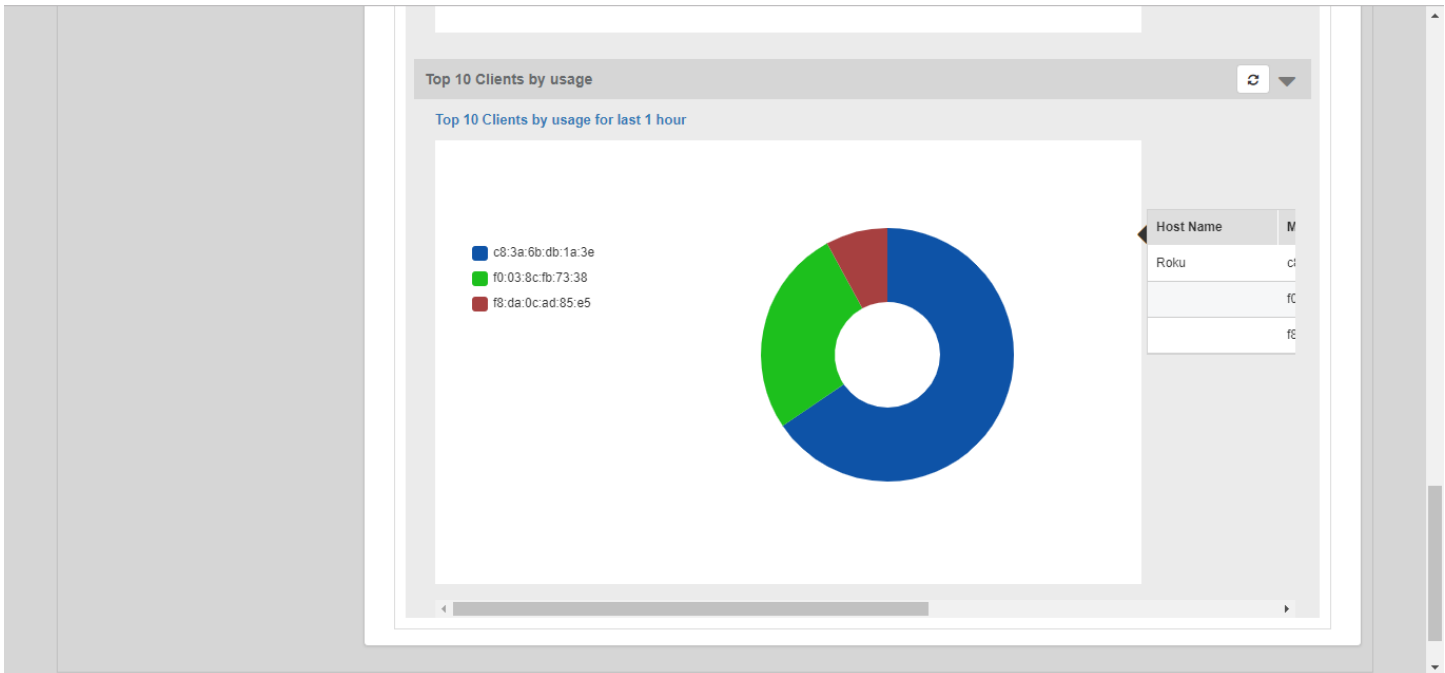

Application Policy

Application Policies can be configured to control access to applications or to control traffic generated by applications.

NOTE

For more information on Application Policies, see [Application Policies](#) on page 256.

In addition to creating an Application Policy directly from the WLAN advanced options configuration screens, you can also create multiple policies from the **Admin & Services > Services > Application Recognition and Control > Application Policy** page, and then apply them to your WLANs one by one from the WLAN advanced options.

To create an Application Policy:

1. Go to **Admin & Services > Services > Application Recognition and Control**, and click the **Application Policy** tab.
2. Click **Create New** to create a new policy.
3. Enter a **Name** and optionally a **Description** for the policy.
4. In **Rules**, click **Create New** to create a new rule for this policy.
5. In **Rule Type**, select the type of application control policy to enforce:
 - **Denial Rules:** Block the application completely.
 - **QoS:** Apply QoS prioritization rules to the application.
 - **Rate Limiting:** Limit traffic volume consumed by the application.
6. In **Application Type**, Select **HTTP Domain Name** or **Port**.
 - **System Defined:** Choose from a number of built-in categories.
 - **IP Based User Defined Application:** Choose from user-defined applications.
 - **Port Based User Defined Application:** Choose from user-defined applications.

Configuring Admin & Services Settings Services

7. Select an application to control from the **Select an application** field.
8. If Rate Limiting or QoS rule type is selected, configure the uplink and downlink speeds for rate limiting or the QoS marking and priority rules for QoS rules.
9. Click **Save** to save the rule, and click **OK** to save the policy.

FIGURE 299 Application Policy


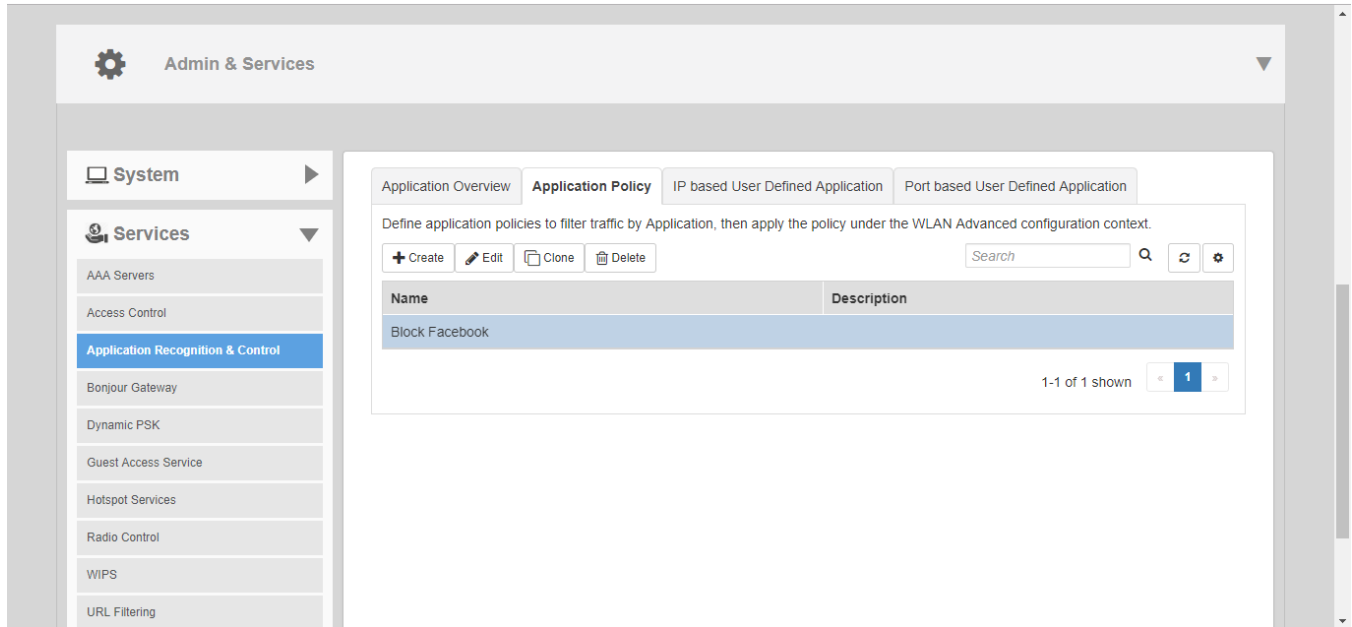


FIGURE 300 Creating a new Application Policy rule

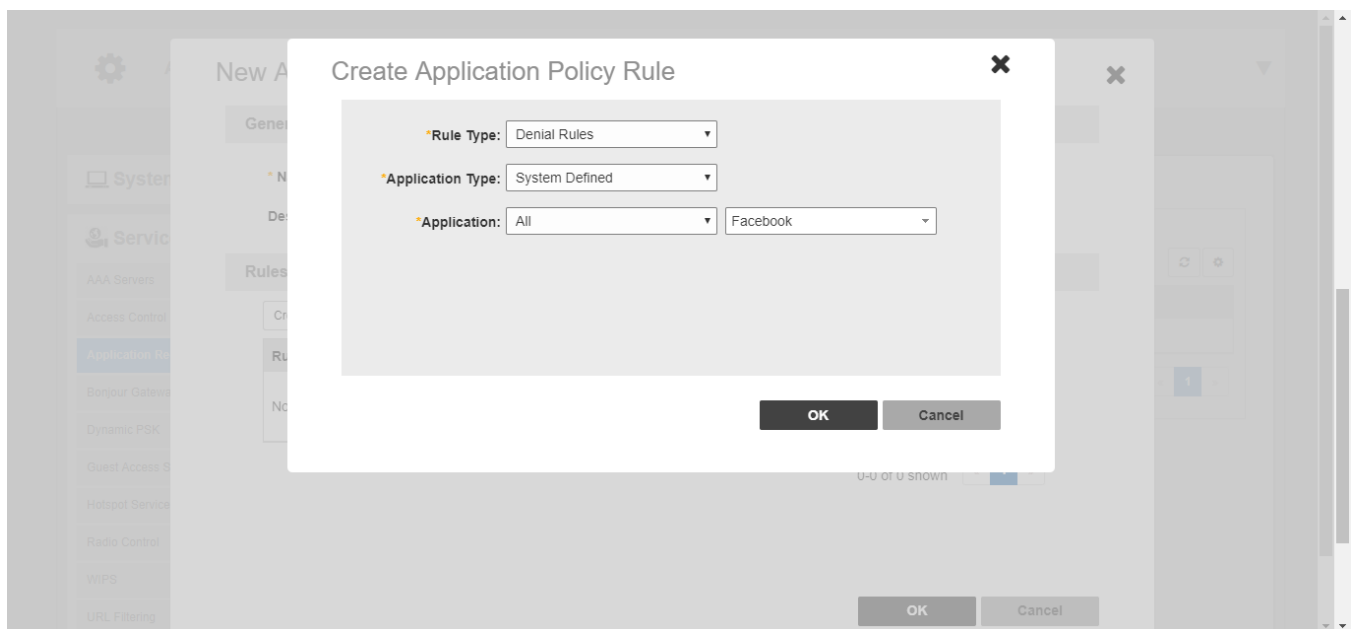

Applying an Application Policy to a WLAN

For instructions on applying an application policy to a WLAN, see [Configuring Advanced WLAN Options](#) on page 245.

User Defined Applications

When an application is unrecognized and generically (or incorrectly) categorized, you can configure an explicit application identification policy by IP Address/Mask, Port and Protocol. Wireless traffic that matches the configured policy will be displayed using the policy's name on the **Application Overview** page.

Unleashed provides two methods to create new user-defined applications:

- IP-based User Defined Applications
- Port based User Defined Applications

Application identification policies are implemented according to the following priority order:


1. IP-based user defined applications
2. System defined applications
3. Port-based user defined applications

IP Based User Defined Applications

The following figure shows how to configure an IP-based user defined application policy to identify a corporate accounting application.

Unleashed identifies wireless traffic matching this policy as "Well Paid Accounting" and displays this name in the application recognition pie charts and tables.

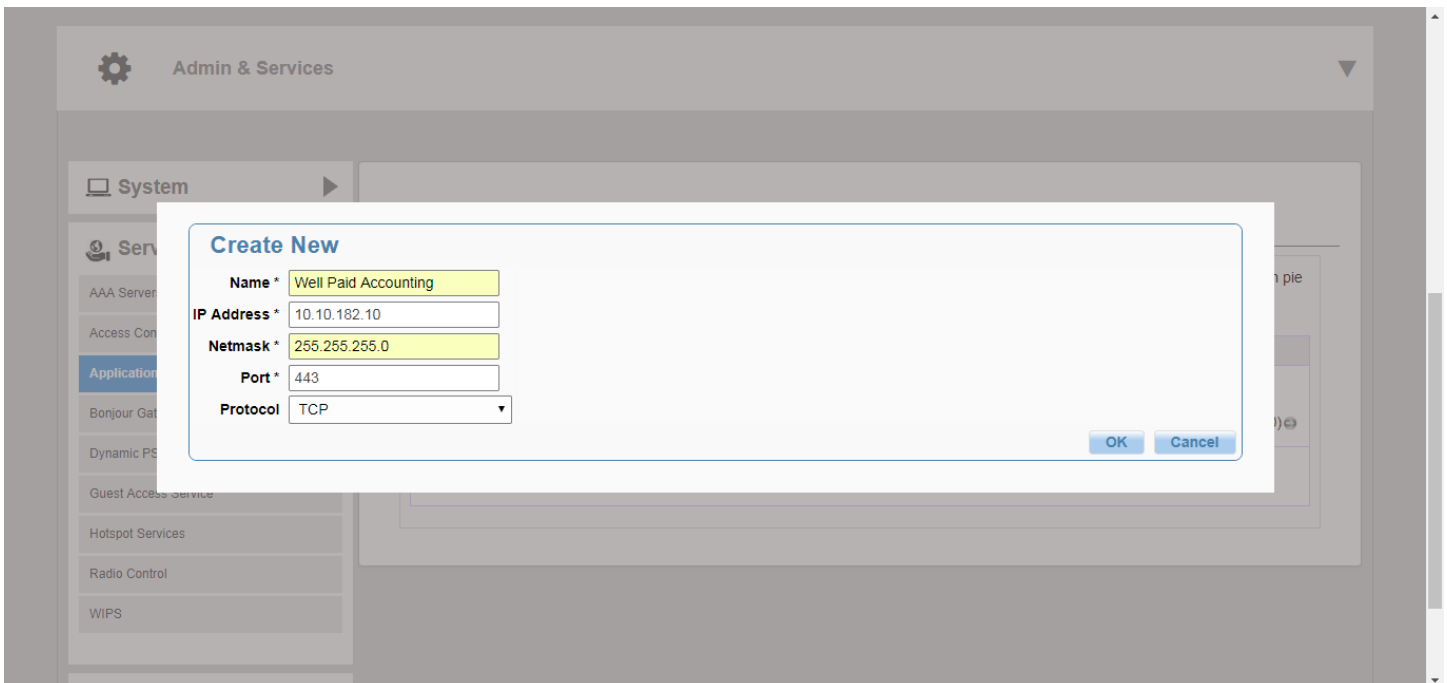FIGURE 301 Create new IP based User Defined Application



Port Based User Defined Applications

When an application is unrecognized and generically (or incorrectly) categorized you can configure an application identification policy by IP Port and Protocol.

Wireless traffic that matches a configured policy will be displayed using the policy's Description text in the Application Recognition pie charts. You can create new port-to-application name mappings individually using the *Port based User Defined Application* tab.

This type of application categorization is the least granular in configuration and hence it has the lowest priority as a means of application identification. If for example you configure a port-based user-defined Application for port 80/TCP, any such matching wireless traffic not identified by either an IP-based application or the default embedded applications will be identified as belonging to this application.

FIGURE 302 Application Port Mapping


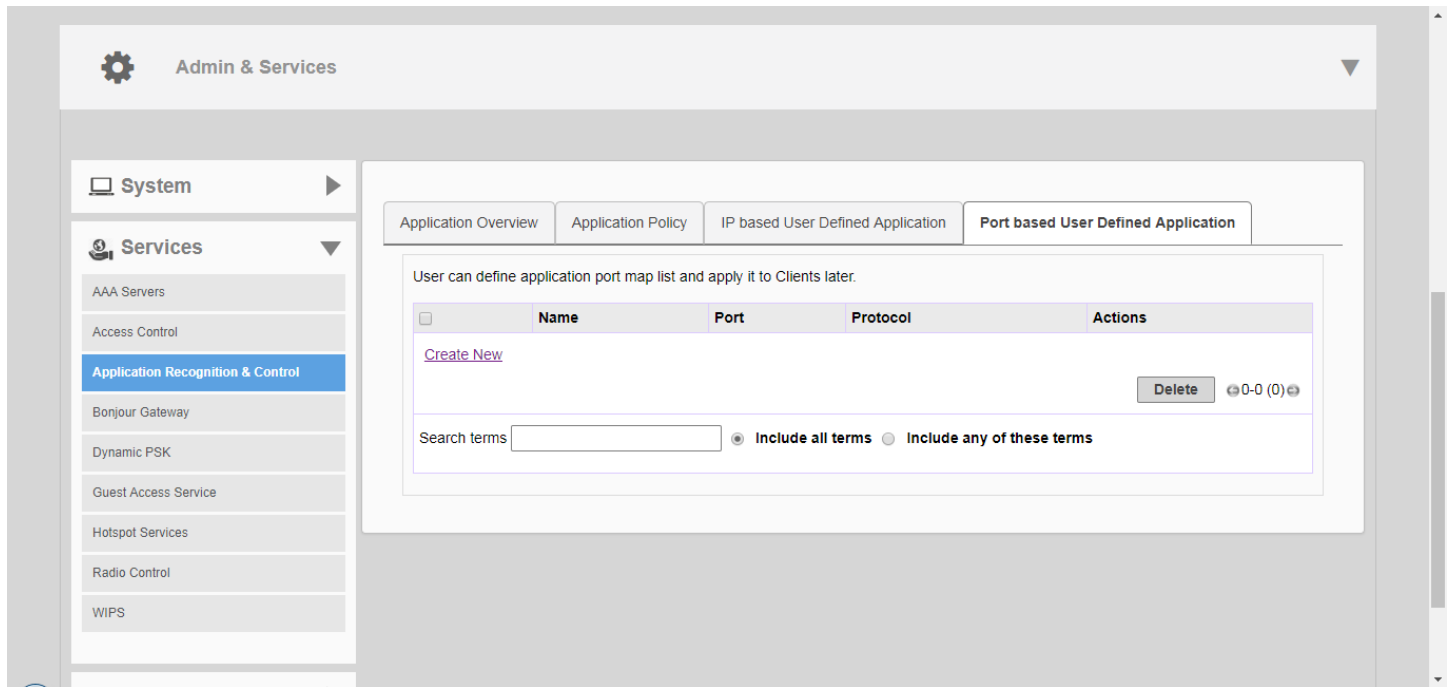


FIGURE 303 Create new port based user-defined application

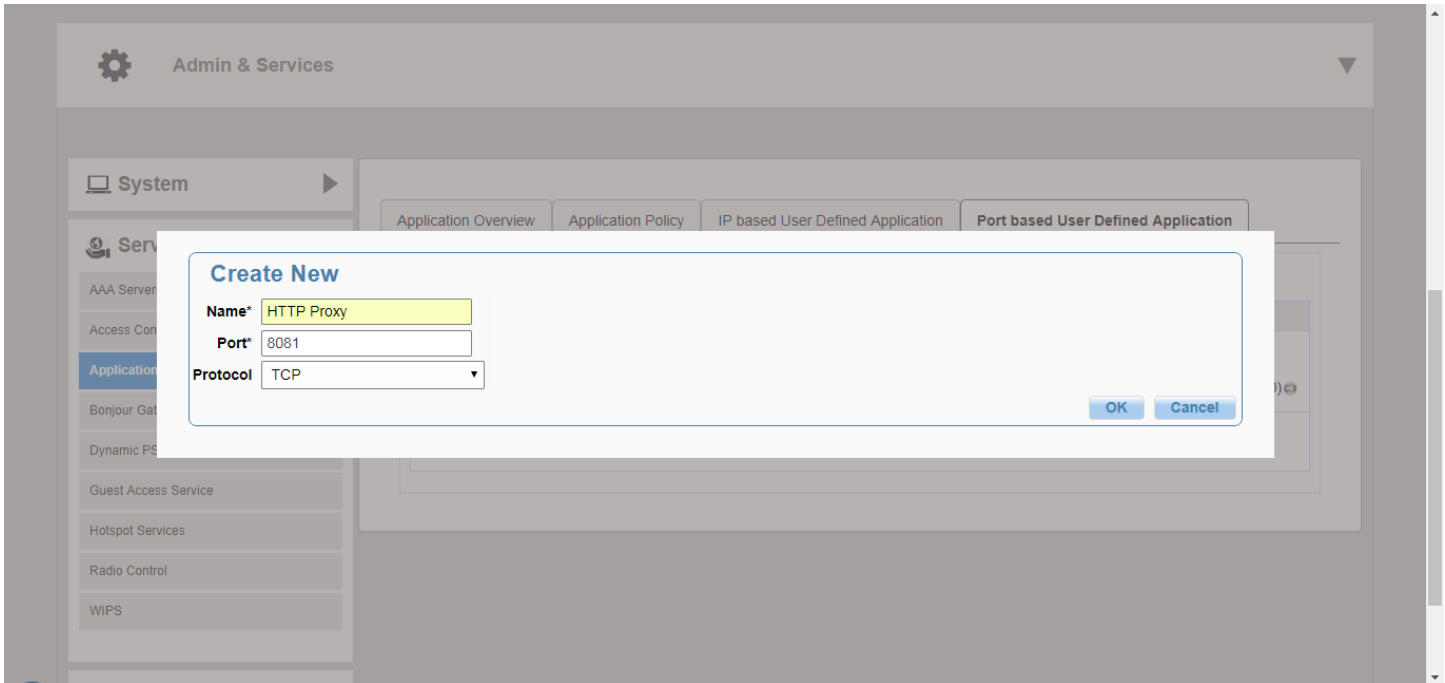The following figure shows how a port-based user-defined application policy could be used to identify all port 8081 wireless traffic as "HTTP Proxy" traffic and display this name in application recognition pie charts and tables.



Bonjour Gateway

Bonjour is a multicast-based discovery protocol (aka mDNS) that is primarily used by Apple and Google devices such as Apple TV, Apple Printers and Google Chromecast. As these devices advertise their services, client devices such as Apple Mac PCs and mobile devices such as iOS and Android phones can discover them using the Bonjour protocol.

Multicast applications such as Bonjour require special consideration when being deployed over wireless networks. Bonjour only works within a single broadcast domain, which is usually a small area. This is by design to prevent flooding a large network with multicast traffic. However, in some situations, a user may want to offer Bonjour services from one VLAN to another.

The Bonjour Gateway feature addresses this requirement by providing an mDNS proxy service configurable from the web interface to allow administrators to specify which types of Bonjour services can be accessed from/to which VLANs.

In order for the Bonjour Gateway to function, the following network configuration requirements must be met:

- The target networks must be segmented into VLANs.
- VLANs must be mapped to different WLANs.
- The controller must be connected to a VLAN trunk port.

Additionally, if the VLANs to be bridged by the gateway are on separate subnets the network has to be configured to route traffic between them.

Creating a Bonjour Gateway Service

The Bonjour Gateway service is essentially a list of rules for mapping services from one VLAN to another. Using the Bonjour Gateway feature, the Unleashed AP serves as the proxy for forwarding Bonjour packets to the designated VLANs.

To configure rules for bridging Bonjour services across VLANs:

1. Go to **Admin & Services > Services > Bonjour Gateway**.
2. Enable the check box next to **Enable Bonjour gateway on AP**.
3. Click **Create New** to create a new Bonjour service.
4. Enter a **Name** and optionally a **Description** for the service.
5. Click **Create New** to create a new rule.
6. In the **Create New** form, configure the following options:
 - **Bridge Service:** Select the Bonjour service from the list.
 - Selecting "Other" allows you to create custom rules, for example, creating a rule for "_googlecast._tcp" would allow you to bridge Chromecast services across VLANs.
 - **From VLAN:** Select the VLAN from which the Bonjour service will be advertised.
 - **To VLAN:** Select the VLAN to which the service should be made available.
 - **Notes:** Add optional notes for this rule.
7. Click **OK** to save your changes.
8. Repeat for any additional rules.

9. Click **Apply** to save the Bonjour Service.

FIGURE 304 Bonjour Gateway configuration


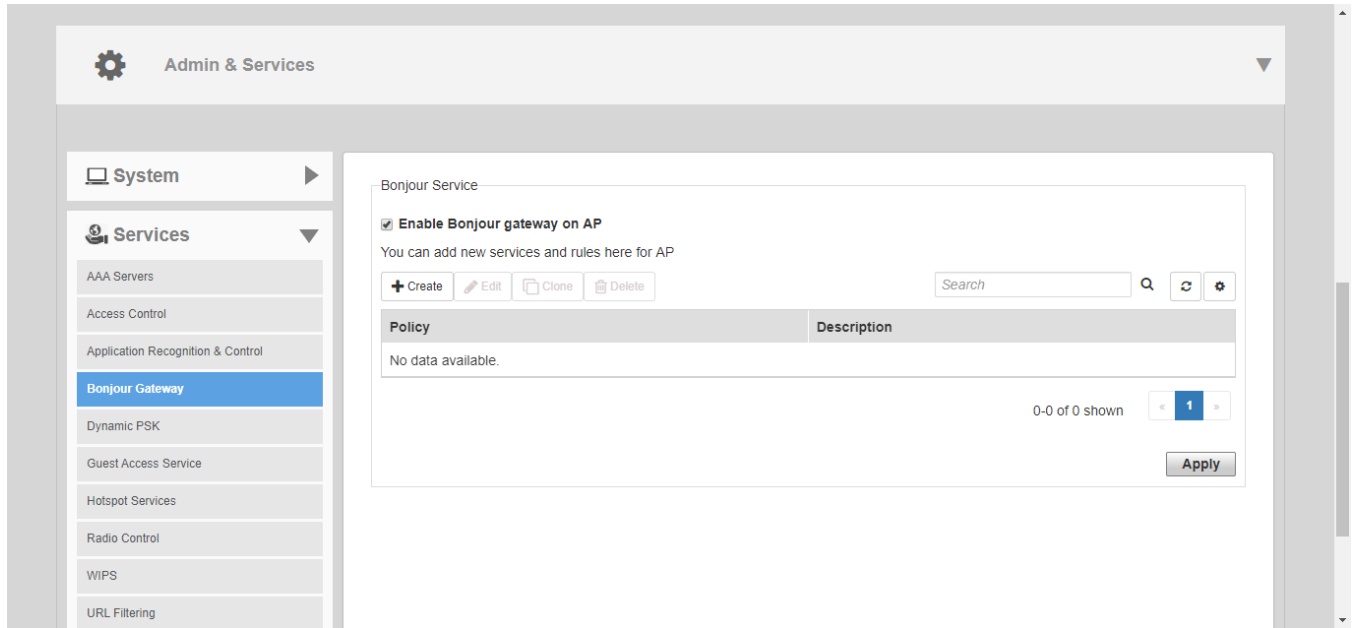


FIGURE 305 Create new Bonjour service

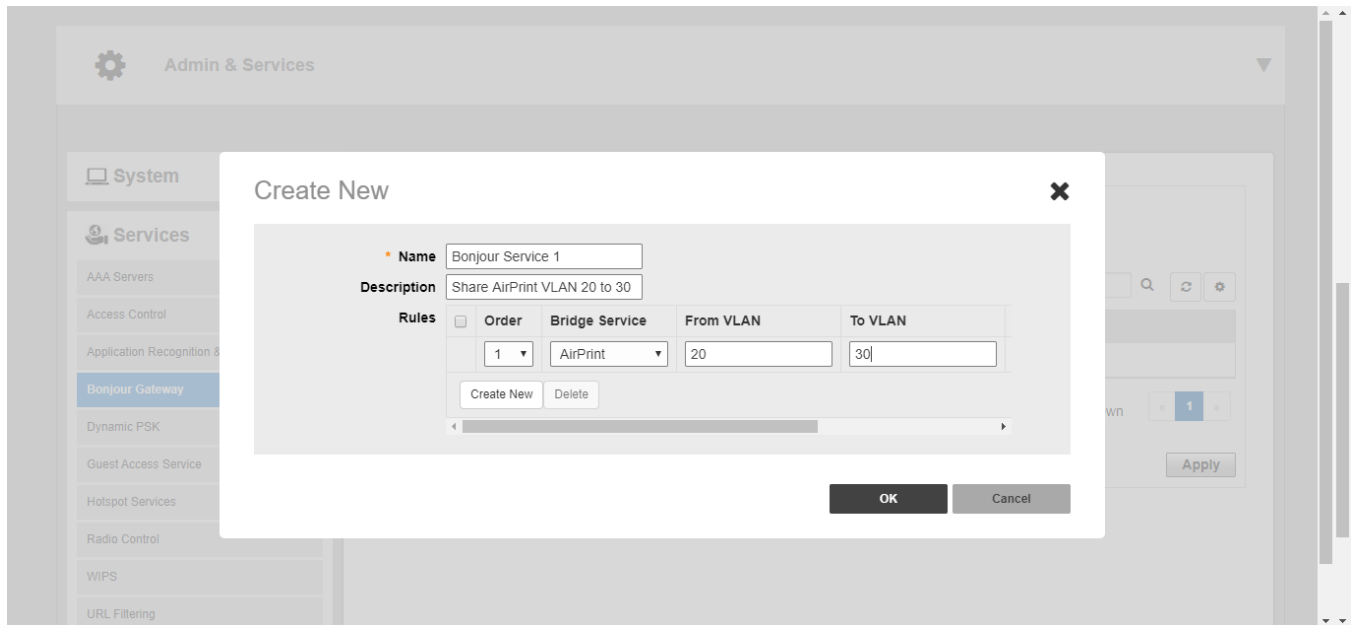

Deploying a Bonjour Service to an AP

Once a Bonjour Service has been created, you can select it from any Unleashed AP's configuration page to deploy the Bonjour bridging service from that AP.

NOTE


Bonjour services can consume significant memory and CPU resources (especially when a large number of rules is created). Therefore, Ruckus recommends deploying the Bonjour services to an AP that is not the Unleashed Master AP.

NOTE

It is only necessary to configure Bonjour service on one AP in the Unleashed network.

1. From the **Dashboard**, go to **Access Points > [select an AP] > Edit > Other**.
2. Enable the **Choose Bonjour Gateway** box, and select the service you created from the drop-down menu.
3. Click **OK** to save your changes.

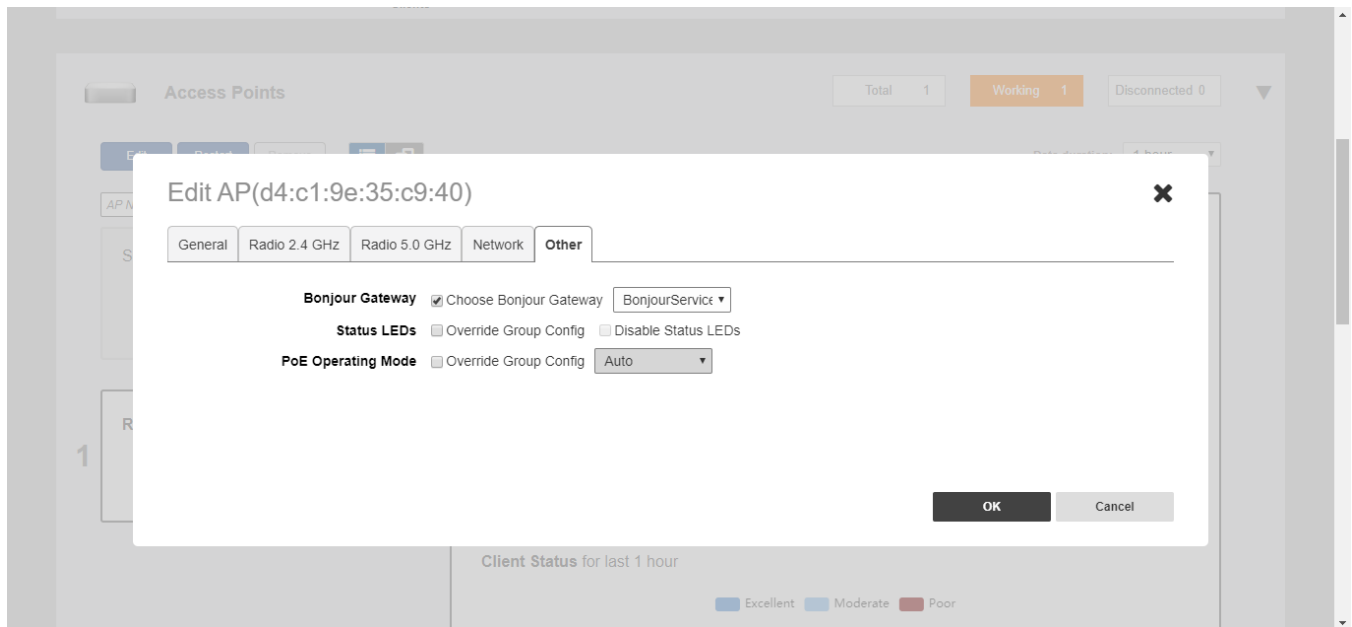FIGURE 306 Select Bonjour service to be deployed on an AP



Dynamic PSK

Use the *Services > Dynamic PSK* options to generate and manage admin-generated DPSKs.

Generating DPSKs in Batch


You can create between 1 and 50 Dynamic PSKs at once from the *Dynamic PSK Batch Generation* tab.

To generate DPSKs:

1. Go to *Admin & Services > Services > Dynamic PSK*.

2. In *Dynamic PSK Batch Generation*, enter the following options:
 - **Target WLAN:** Select the WLAN to which the DPSKs will be applied. (A WLAN with DPSK enabled must exist before this feature is available.)
 - **Number to Create:** Enter a number of DPSKs to generate (1-50, default 5).
 - **Dynamic VLAN ID:** Enter a valid VLAN ID, ranging from 1 through 4094.
 - **Upload a Profile:** Refer to *Uploading a Dynamic PSK Profile*.
3. Click **Generate** to generate the requested number of keys.

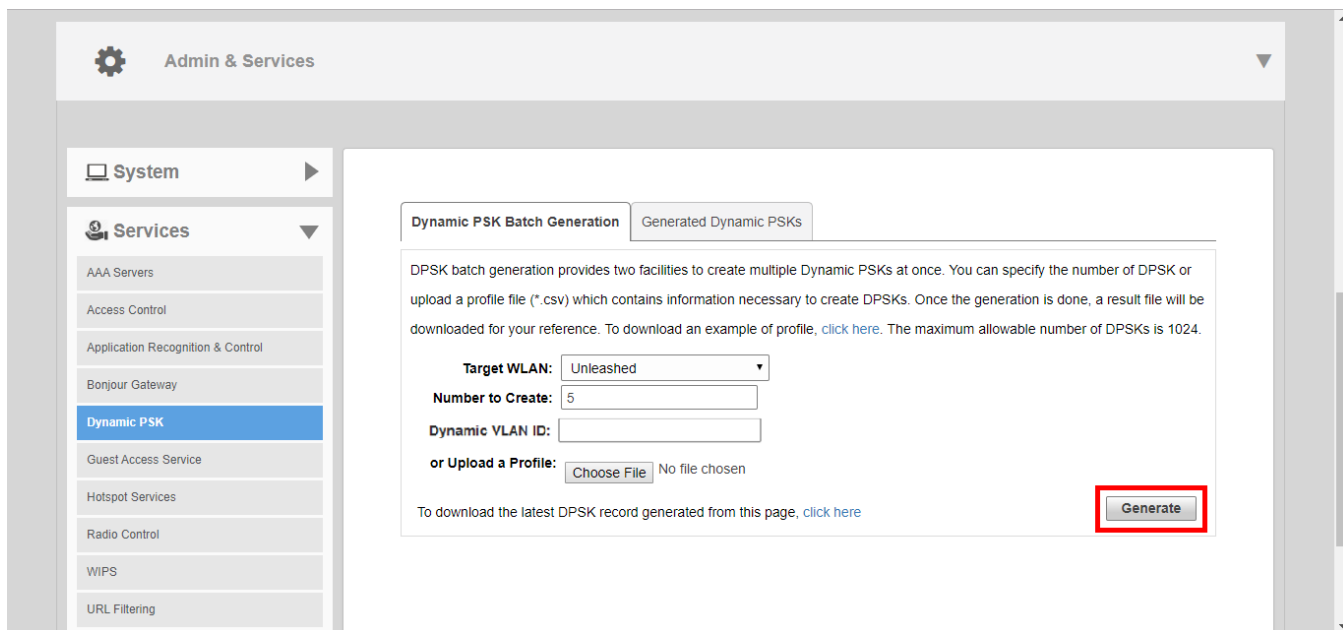FIGURE 307 Create DPSKs automatically



4. Click the *Generated Dynamic PSKs* tab to view the keys you created.

Uploading a Dynamic PSK Profile

Use this procedure to batch generate multiple DPSKs using a csv file that can be edited in a spreadsheet program (such as Microsoft Excel).

Creating a DPSK batch generation profile is useful if you want to customize the user names that will be used for accessing the DPSK WLAN, as opposed to user names such as "BatchDPSK_User_1," etc.

1. Go to **Admin & Services > Services > Dynamic PSK**.
2. In the **Dynamic PSK Batch Generation** tab, look for the following message: *To download an example of profile,click here*.
3. Click the **click here** link to download a sample profile.
4. Save the sample batch DPSK profile (in CSV format) to your computer.
5. Using a spreadsheet application, open the CSV file and edit the batch dynamic PSK profile by filling out the following columns:
 - **User Name:** (Required) Type the name of the user (one name per row).
 - **MAC Address:** (Optional) If you know the MAC address of the device that the user will be using, type it here.
6. Go back to the **Dynamic PSK Batch Generation** screen, and click the **Choose File** button to upload the CSV file you edited.

Configuring Admin & Services Settings

Services

7. Select the **Target WLAN** and **Number to Create**.
8. Click **Generate** to generate the custom DPSKs that you modified.

After the DPSKs have been generated, you can download the same file (with the passphrases filled in) by clicking the **Click Here** link at the end of the "To download the generated DPSK record,click here" sentence.

FIGURE 308 Dynamic PSK batch generation


The screenshot shows the 'Admin & Services' configuration page. On the left is a navigation menu with 'System' and 'Services' sections. Under 'Services', 'Dynamic PSK' is selected. The main content area is titled 'Dynamic PSK Batch Generation' and contains the following elements:

- Two tabs: 'Dynamic PSK Batch Generation' (active) and 'Generated Dynamic PSKs'.
- Text: 'DPSK batch generation provides two facilities to create multiple Dynamic PSKs at once. You can specify the number of DPSK or upload a profile file (*.csv) which contains information necessary to create DPSKs. Once the generation is done, a result file will be downloaded for your reference. To download an example of profile [click here](#). The maximum allowable number of DPSKs is 2048.'
- Form fields:
 - Target WLAN:** A dropdown menu with 'DPSK-WLAN' selected.
 - Number to Create:** A text input field containing the number '5'.
 - Dynamic VLAN ID:** An empty text input field.
 - or Upload a Profile:** A 'Choose File' button and the text 'No file chosen'.
- Text: 'To download the new DPSK record [click here](#)'.
- A 'Generate' button.

Viewing Generated DPSKs

In addition to downloading the generated DPSK record in CSV format, you can also view the DPSKs that have been generated from the *Generated Dynamic PSKs* tab.

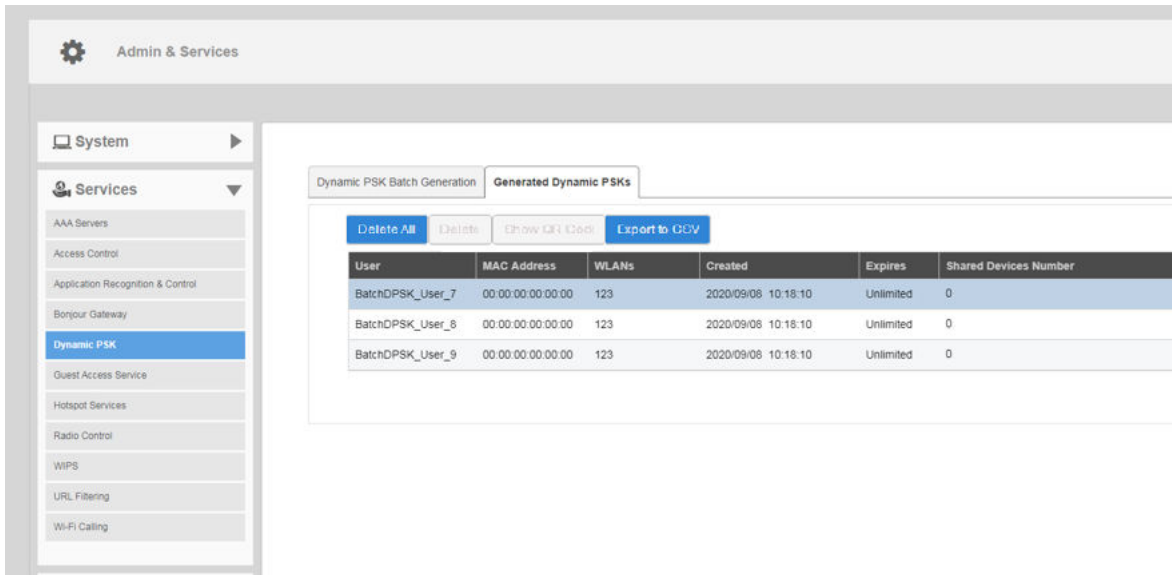FIGURE 309 Viewing Generated DPSKs



A WLAN-supported DPSK has the **Show QR Code** option to join a Wi-Fi network.

Click **Show QR Code** and the **QR Code** pop-up page is displayed. Click **Print** to print the QR code or scan the QR code using a smartphone camera.

FIGURE 310 QR Code Page

Do you want to print the QR code for this Wi-Fi network? ✕

1. How to use Wi-Fi QR code?

You can print and share it to your users, and ask them to open the camera app on the smartphone and hold it over the Code. A notification should pop up and connect them to the wireless network automatically. If this did not work, check the smartphone settings and make sure that the QR Code scanning feature is enabled. If it still not working, then you may need to ask your user to download a third-party QR Code scanner from smartphone app store.

2. How can I regenerate the QR code later?

You can to WiFi Networks page and select your WiFi, click the "More" button and then click "Show QR Code" from the dropdown list, a QR code page should pop up.



Print

Click **Export to CSV** to export all the generated DPSKs to a CSV file.


Guest Access Services

The *Guest Access Services* pages provide options for monitoring and managing existing guest passes, customizing guest pass format and delivery methods, and deleting admin-generated or self-service guest passes.

To configure guest access services, go to *Admin & Services > Services > Guest Access Service*.

For more information on guest access and configuring a guest access WLAN, see [Guest WLANs](#) on page 172 in *Creating a New WLAN*.

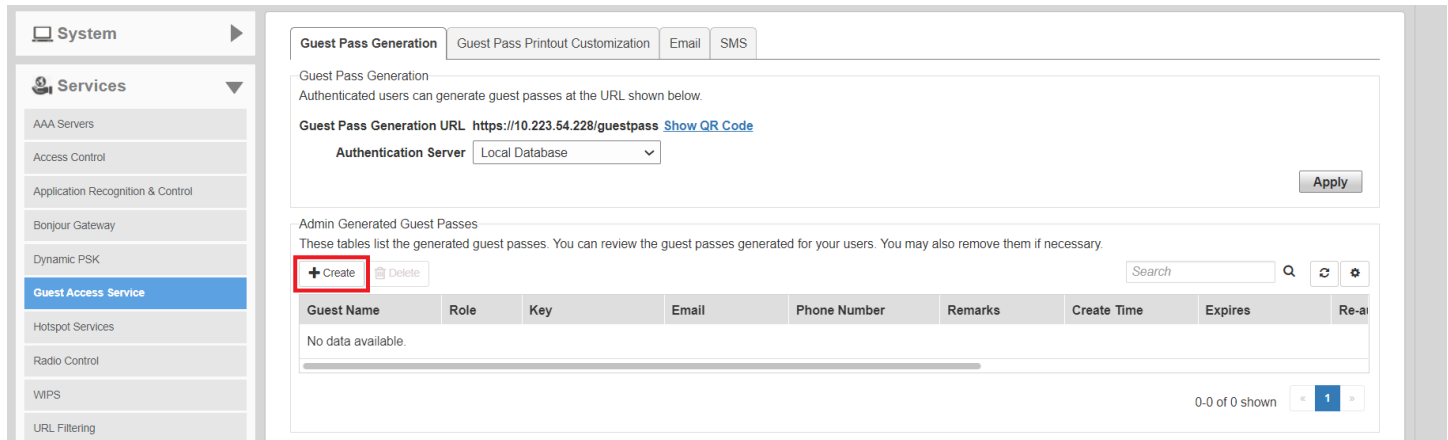FIGURE 311 Monitoring and Configuring Guest Pass Options



Click **Show QR Code** and the **QR Code** pop-up page is displayed. Click **Print** to print the QR code or scan the QR code using a smartphone camera.

FIGURE 312 QR Code Page

Do you want to print the QR code for this Wi-Fi network? ✕

1. How to use Wi-Fi QR code?

You can print and share it to your users, and ask them to open the camera app on the smartphone and hold it over the Code. A notification should pop up and connect them to the wireless network automatically. If this did not work, check the smartphone settings and make sure that the QR Code scanning feature is enabled. If it still not working, then you may need to ask your user to download a third-party QR Code scanner from smartphone app store.

2. How can I regenerate the QR code later?

You can to WiFi Networks page and select your WiFi, click the "More" button and then click "Show QR Code" from the dropdown list, a QR code page should pop up.



Print

An administrator can generate guest passes from the web interface. Under **Admin Generated Guest Passes**, click **Create**. For more information, refer [Generating a Guest Pass](#) on page 190.

Hotspot Services

A Hotspot Service is required to deploy a Hotspot (WISPr 1.0) WLAN.

You can create a Hotspot service when creating a new WLAN (by clicking **Create New** after you select Hotspot Service as the WLAN type), or you can create multiple Hotspot services from the Administration settings and then deploy them to your Hotspot WLANs afterwards.

Additionally, you can use the **Admin & Services** pages to edit or reconfigure Hotspot service policy settings after WLAN creation.

Creating a Hotspot Service

The **Admin & Services > Services > Hotspot Services** page can be used to configure a WISPr Hotspot service to provide public access to users. In addition to the Unleashed APs, you will need the following to deploy a Hotspot:

- **Captive Portal:** A special web page, typically a login page, to which users that have associated with your Hotspot will be redirected for authentication purposes. Users will need to enter a valid user name and password before they are allowed access to the Internet through the Hotspot. Open source captive portal packages, such as Chillispot, are available on the Internet. For a list of open source and commercial captive portal software, visit https://en.wikipedia.org/wiki/Captive_portal#Software_Captive_Portals, and
- **RADIUS Server:** A Remote Authentication Dial-In User Service (RADIUS) server through which users can authenticate.

For installation and configuration instructions for the captive portal and RADIUS server software, refer to the documentation that was provided with them. After completing the steps below, you will need to edit the WLAN(s) for which you want to enable Hotspot service, as described in *Assigning a WLAN to Provide Hotspot Service*.

Unleashed supports up to 32 WISPr Hotspot service entries, each of which can be assigned to multiple WLANs.

To create a Hotspot service:

1. Go to **Admin & Services > Services > Hotspot Service**. Alternatively, you can create a new Hotspot service from the WLAN creation page (**Dashboard > Wi-Fi Networks > Create > Hotspot > Hotspot Services > Create New**).
2. Click **Create New**. The **Create New** form appears.
3. From the **General** tab, in **Name**, enter a name for this Hotspot service.
4. In **WISPr Smart Client Support**, select whether to allow WISPr Smart Client support:
 - **None:** (default).
 - **Enabled:** Enable Smart Client support.

NOTE

The WISPr Smart Client is not provided by Ruckus - you will need to provide Smart Client software/hardware to your users if you select this option.

- **Only WISPr Smart Client allowed:** Choose this option to allow only clients that support WISPr Smart Client login to access this Hotspot. If this option is selected, a field appears in which you can enter instructions for clients attempting to log in using the Smart Client application.
 - **Smart Client HTTP Secure:** If Smart Client is enabled, choose whether to authenticate users over HTTP or HTTPS.
5. In **Login Page**, type the URL of the captive portal (the page where Hotspot users can log in to access the service).

6. Configure optional settings as preferred:
 - In **Start Page**, configure where users will be redirected after successful login. You could redirect them to the page that they want to visit, or you could set a different page where users will be redirected (for example, your company website).
 - In **User Session**, configure session timeout and grace period, both disabled by default.
 - **Session Timeout**: Specify a time limit after which users will be disconnected and required to log in again.
 - **Grace Period**: Allow disconnected users a grace period after disconnection, during which clients will not need to re-authenticate. Enter a number in minutes, between 1 and 144,000.
7. In the **Authentication** tab, select the AAA server that you want to use to authenticate users from the **Authentication Server** drop-down menu.
 - Options include **Local Database** and any AAA servers that you configured on the **Configure > AAA Servers** page.
 - **Enable MAC authentication bypass (no redirection)**: Enabling this option allows users with registered MAC addresses to be transparently authorized without having to log in. A user entry on the RADIUS server needs to be created using the client MAC address as both the user name and password. The MAC address format can be configured in one of the formats listed in MAC Authentication with an External RADIUS Server.
 - **Accounting Server**: (If you have an accounting server set up), select the server from the list and configure the frequency (in minutes) at which accounting data will be retrieved.
 - In **Wireless Client Isolation**: Choose whether clients connected to this Hotspot WLAN should be allowed to communicate with one another locally. See [Configuring Advanced WLAN Options](#) on page 245 for a description of the same feature for non-Hotspot WLANs.
 - **Location Information**: Enter *Location ID* and *Location Name* for this location if using Ruckus Smart Positioning location services.
8. On the **Walled Garden** and **Policy** tabs, configure optional settings as preferred:
 - In **Location Information**, enter Location ID and Location Name WISPr attributes, as specified by the Wi-Fi Alliance.
 - In **Walled Garden**, enter network destinations (URL or IP address) that users can access without going through authentication. A Walled Garden is a limited environment to which an unauthenticated user is given access for the purpose of setting up an account. After the account is established, the user is allowed out of the Walled Garden.
9. On the **Policy** tab, define L3/4 IP address access control rules for the Hotspot service to allow or deny wireless devices based on their IP address, port or protocol.
10. Click **OK** to save the Hotspot settings.

The page refreshes and the Hotspot service you created appears in the list. You may now assign this Hotspot service to the WLANs that you want to provide Hotspot Internet access, as described in [Assigning a WLAN to Provide Hotspot Service](#) on page 406.

FIGURE 313 The Hotspot Services page


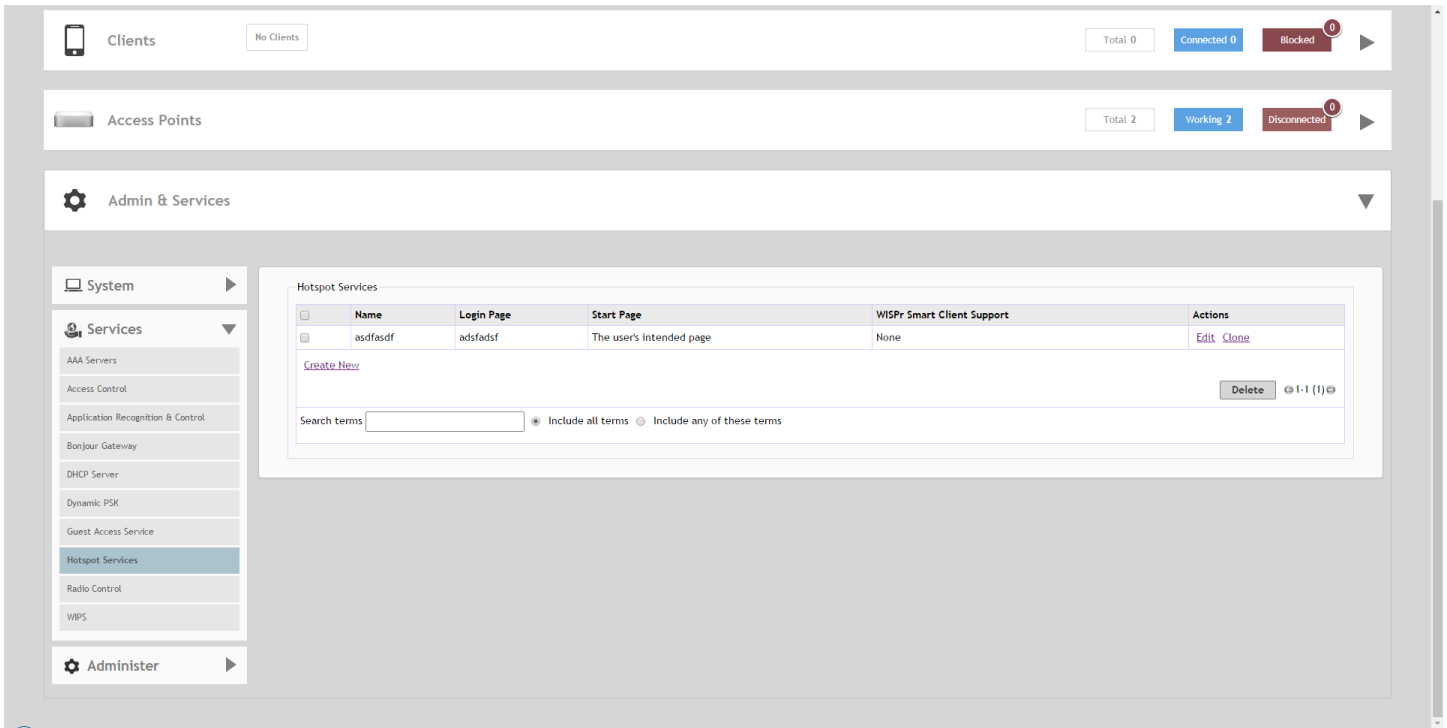


FIGURE 314 Creating a new Hotspot service

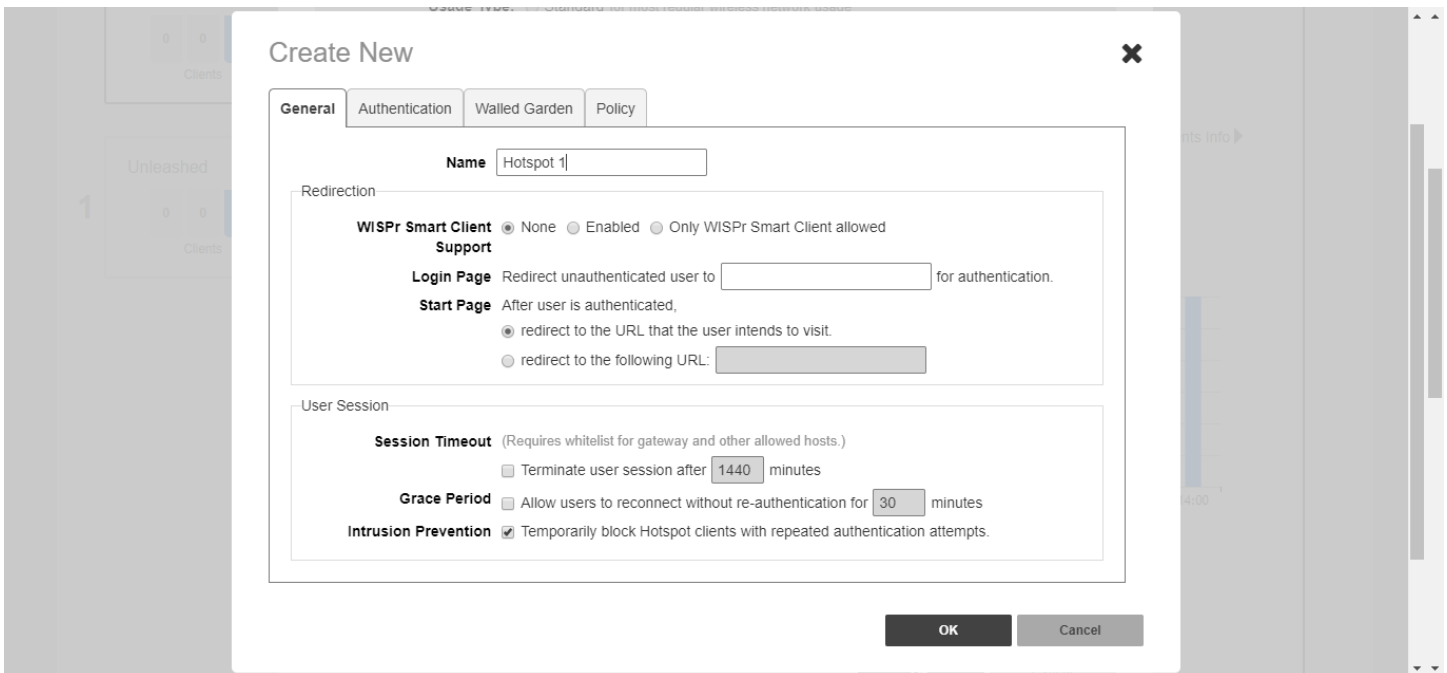


Assigning a WLAN to Provide Hotspot Service

Once you have created a Hotspot service, you need to specify the WLANs to which you want to deploy the Hotspot configuration.

To configure a WLAN to provide Hotspot service:

1. Go to **Dashboard > Wi-Fi Networks > [WLAN name] > Edit**.
2. In **Usage Type**, select **Hotspot Service**.
3. In **Hotspot Services**, select a Hotspot service from the list if you have already created one, or click **Create New** to begin creating a new Hotspot service for this WLAN. (See [Creating a Hotspot Service](#) on page 403).
4. In **Encryption Method**, choose one of the following:
 - **None:** (Default) Hotspot login is required.
 - **WPA2:** Requires the user to enter a WPA2 password to associate with the WLAN, in addition to the Hotspot login.
 - **WPA3:** Requires the user to enter a WPA3 password to associate with the WLAN, in addition to the Hotspot login.
 - **WPA2/WPA3-Mixed:** Requires the user to enter a WPA2 or WPA3 password to associate with the WLAN, in addition to the Hotspot login.
 - **OWE:** Does not require the user to enter an additional password (other than the Hotspot login).
5. Click **OK** to save your changes.

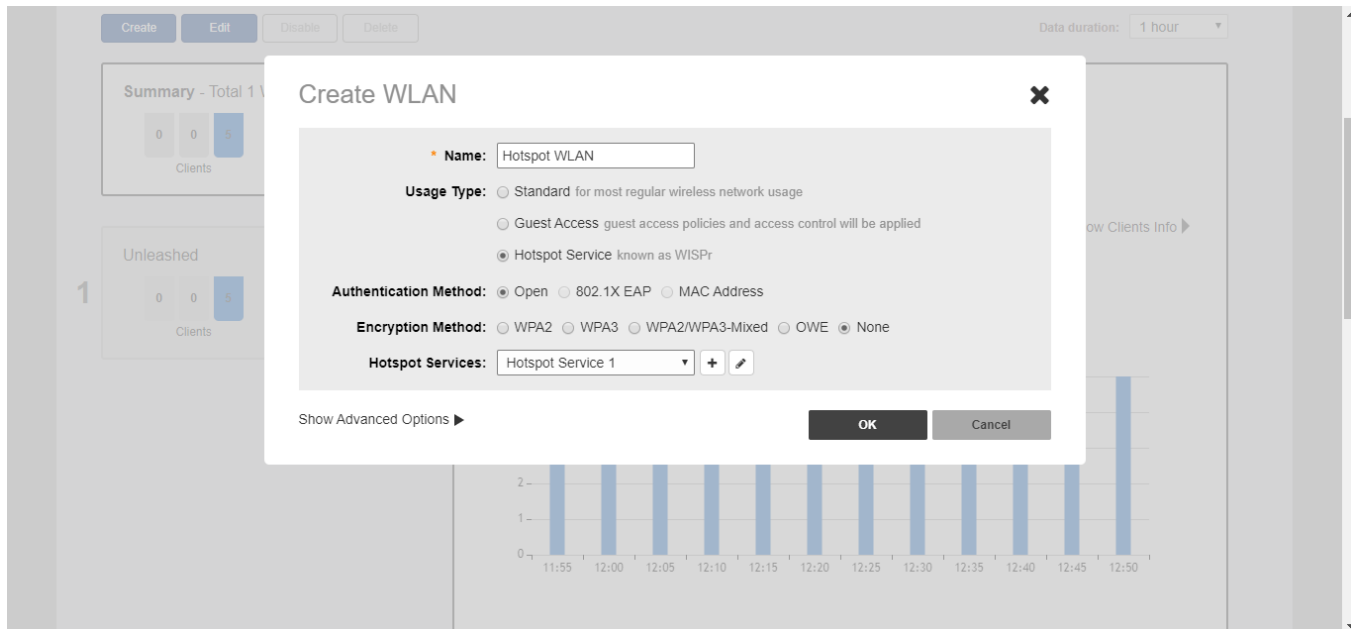FIGURE 315 Assigning a Hotspot service to a Hotspot WLAN



Radio Control

The Radio Control options include settings for automatic radio channel selection using Background Scanning or ChannelFly, client Load Balancing, Band Balancing and Radar Avoidance Pre-Scanning.

Self Healing

Unleashed uses built-in network "self healing" diagnostics and tuning tools to maximize wireless network performance.

Automatically Adjust AP Radio Power

Unleashed provides a feature to automatically adjust AP radio power to optimize coverage when interference is present. This feature is designed to turn down the power of an access point if the following conditions are met:

- The power is set to Auto in the AP configuration.
- The AP can hear another AP that is on the same channel and same Unleashed network.
- The AP can hear the other AP at a minimum of 50dB which means the Access Points are very close to each other.

Note that the 2.4G and 5G radio bands are considered independently. If all conditions are met, the AP will reduce its power by half. The other AP may or may not necessarily reduce its power simultaneously.

NOTE

In general, Ruckus does NOT recommend enabling this feature as it can lead to non-optimal AP power levels. With BeamFlex access points, Ruckus' general guidelines are to run access points at full power to maximize the throughput and SINR levels, thus maximizing data rates and performance.

Automatically Adjust 2.4GHz/5GHz Radio Channels Using Background Scanning

Using Background Scanning, the Unleashed Master AP regularly samples the activity in all Access Points to assess RF usage, to detect rogue APs and to determine the optimal channel for automatic channel selection.

These scans sample one channel at a time in each AP so as not to interfere with network use. You can, if you prefer, customize the automatic scanning of RF activity, deactivate it if you feel it's not helpful, or adjust the frequency, if you want scans at greater or fewer intervals (see [Background Scanning](#) on page 408).

NOTE

Background Scanning must be enabled to detect rogue APs on the network.

Automatically Adjust 2.4GHz/5GHz Radio Channels Using ChannelFly

The main difference between ChannelFly and Background Scanning is that ChannelFly determines the optimal channel based on real-time statistical analysis of actual throughput measurements, while Background Scanning uses channel measurement and other techniques to estimate the impact of interference on Wi-Fi capacity based on progressive scans of all available channels.

NOTE

If you enable ChannelFly, Background Scanning can still be used for adjusting radio power and rogue detection while ChannelFly manages the channel assignment. Both cannot be used at the same time for channel management.

Benefits of ChannelFly

With ChannelFly, the AP intelligently samples different channels while using them for service. ChannelFly assesses channel capacity every 15 seconds and changes channel when, based on historical data, a different channel is likely to offer higher capacity than the current channel. Each AP makes channel decisions based on this historical data and maintains an internal log of channel performance individually.

When ChannelFly changes channels, it utilizes 802.11h channel change announcements to seamlessly change channels with no packet loss and minimal impact to performance. The 802.11h channel change announcements affect both wireless clients and Ruckus mesh nodes in the 2.4 GHz and/or 5 GHz bands.

Configuring Admin & Services Settings

Services

Initially (in the first 30-60 minutes) there will be more frequent channel changes as ChannelFly learns the environment. However, once an AP has learned about the environment and which channels are most likely to offer the best throughput potential, channel changes will occur less frequently unless a large measured drop in throughput occurs.


ChannelFly can react to large measured drops in throughput capacity in as little as 15 seconds, while smaller drops in capacity may take longer to react to.

Disadvantages of ChannelFly

Compared to Background Scanning, ChannelFly takes considerably longer for the network to settle down. If you will be adding and removing APs to your network frequently, Background Scanning may be preferable. Additionally, if you have clients that do not support the 802.11h standard, ChannelFly may cause significant connectivity issues during the initial capacity assessment stage.

You can enable/disable ChannelFly per band. If you have 2.4 GHz clients that do not support 802.11h, Ruckus recommends disabling ChannelFly for 2.4 GHz but leaving it enabled for the 5 GHz band.

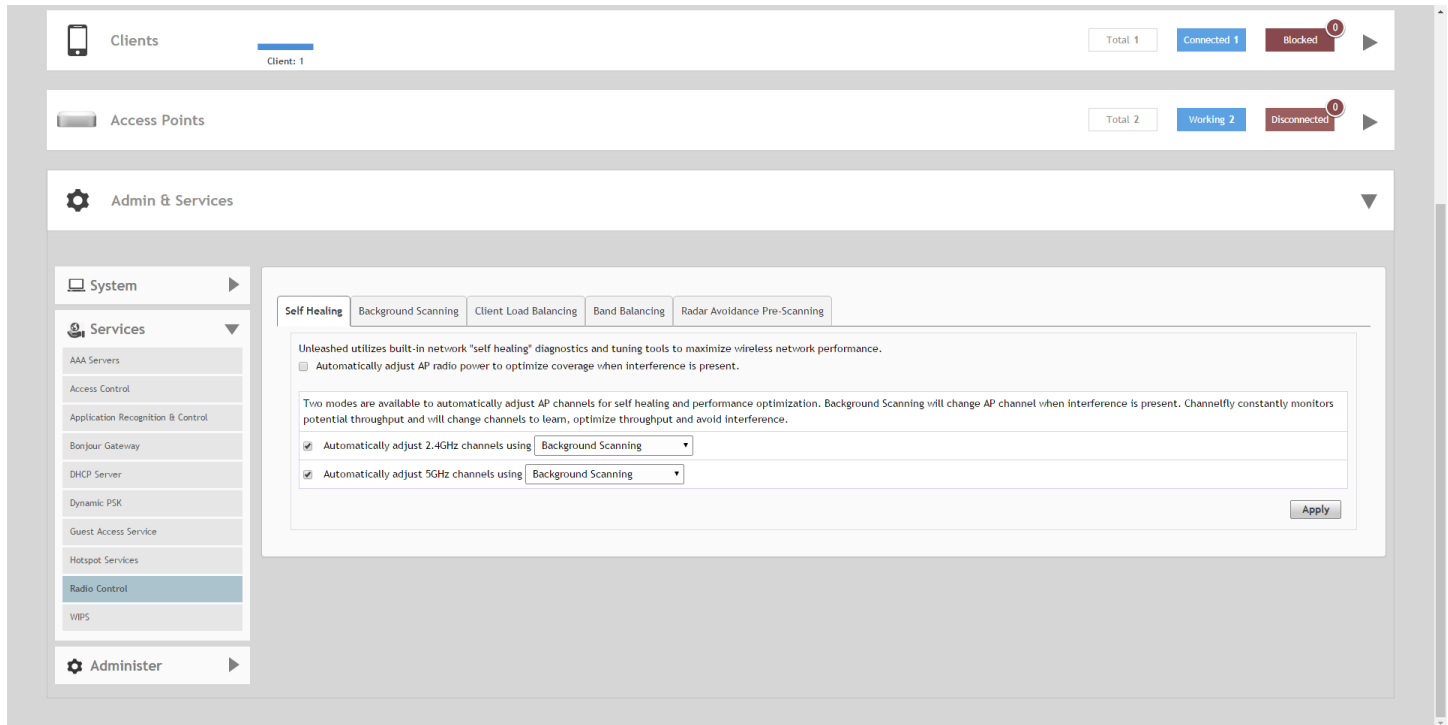FIGURE 316 Self Healing



Background Scanning

Scanning intervals can be configured on the 2.4 GHz and 5 GHz radios independently.

- **Run a background scan on the 2.4 GHz radio every []:** Select this check box enter the time interval (1~65535 seconds, default is 20) that you want to set between each scan.
- **Run a background scan on the 5 GHz radio every []:** Select this check box enter the time interval (1~65535 seconds, default is 20) that you want to set between each scan.


NOTE

If you want to disable Background Scanning, clear the check box; this should result in a minor increase in AP performance, but removes the detection of rogue APs. You can also decrease the scan frequency, as less frequent scanning improves overall AP performance.

NOTE


You can also disable Background Scanning on a per-WLAN basis from the **Dashboard > Wi-Fi Networks** screen. To disable scanning for a particular WLAN, click the **Edit** link next to the WLAN for which you want to disable scanning, open **Advanced Options**, select the **Radio Control** tab, and click the check box next to **Disable Background Scanning**.

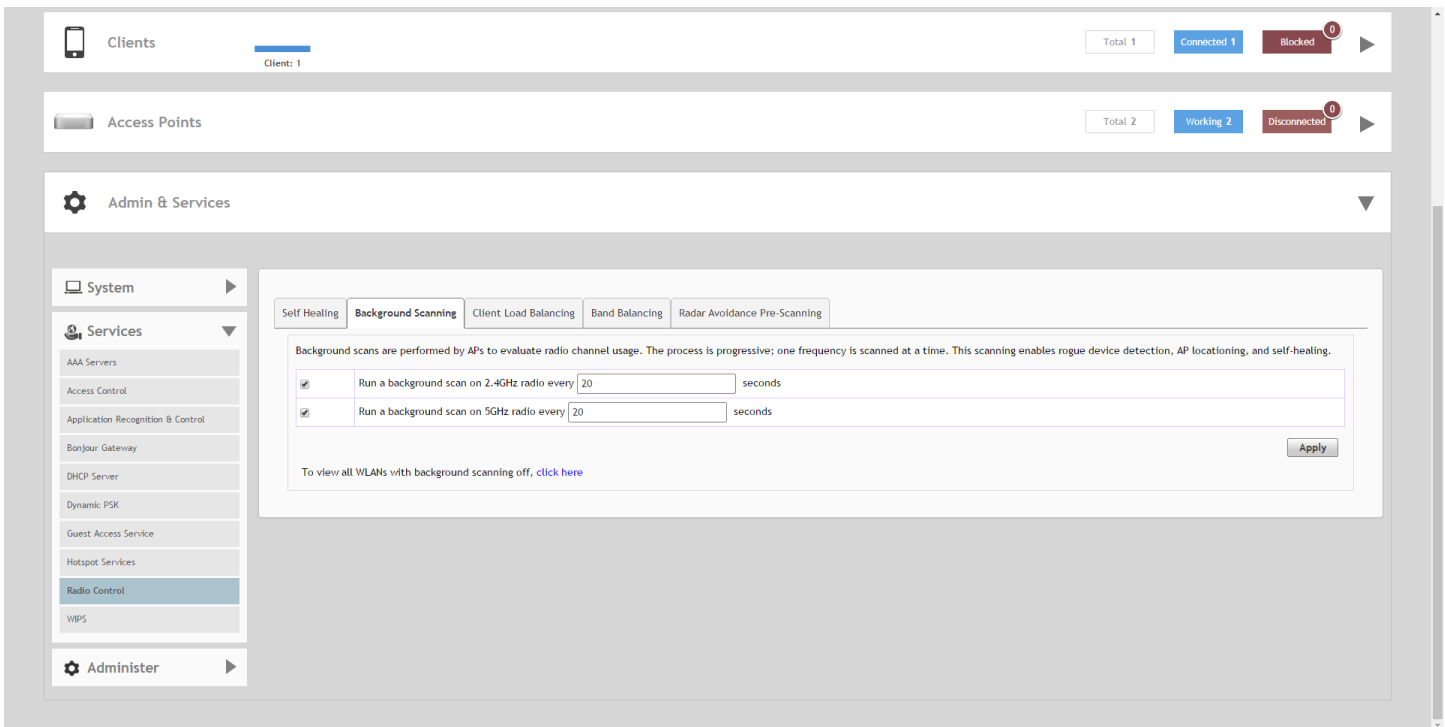FIGURE 317 Background Scanning



To see whether Background Scanning is enabled or disabled for a particular WLAN, click the **click here** link at the bottom of the page.

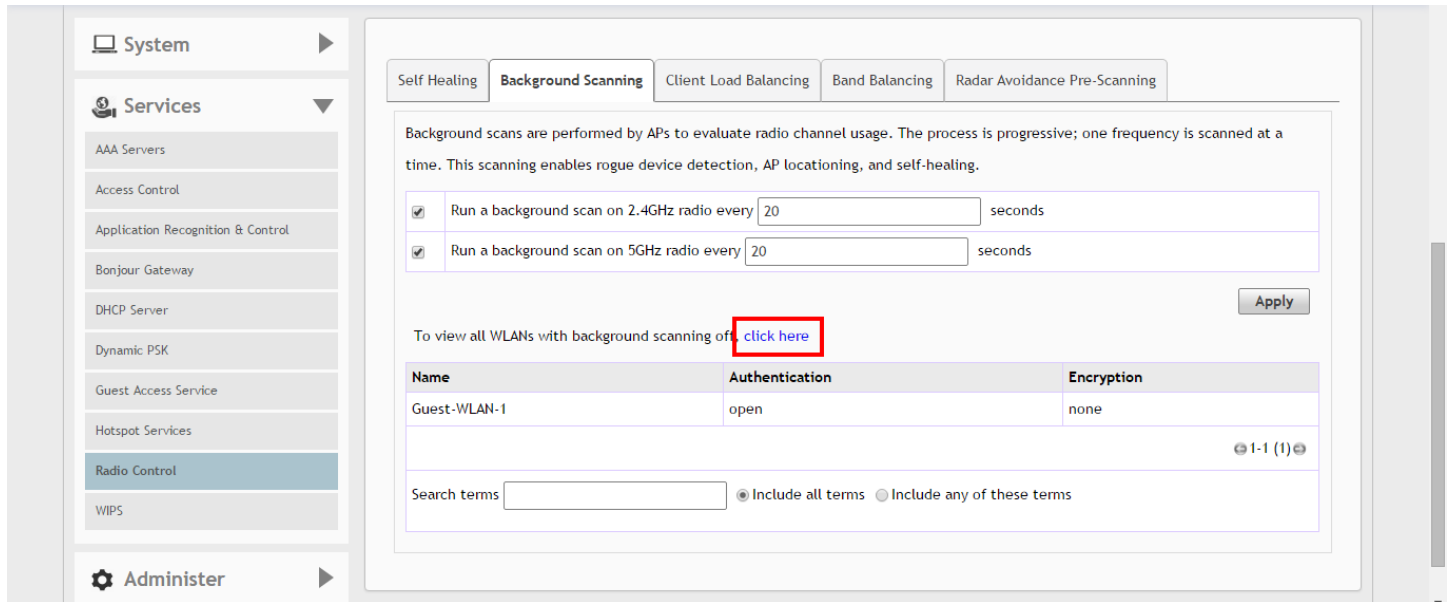FIGURE 318 Viewing the WLANs with Background Scanning Disabled



Client Load Balancing

Enabling load balancing can improve WLAN performance by helping to spread the client load between nearby access points, so that one AP does not get overloaded while another sits idle. The load balancing feature can be controlled from within the Unleashed web interface to balance the number of clients per radio on adjacent APs. "Adjacent APs" are determined at startup by measuring the RSSI during channel scans. After startup, Unleashed uses subsequent scans to update the list of adjacent radios periodically and when a new AP sends its first scan report. When an AP leaves, Unleashed immediately updates the list of adjacent radios and refreshes the client limits at each affected AP.

Once Unleashed is aware of which APs are adjacent to each other, it begins managing the client load by sending desired client limits to the APs. These limits are "soft values" that can be exceeded in several scenarios, including: (1) when a client's signal is so weak that it may not be able to support a link with another AP, and (2) when a client's signal is so strong that it really belongs on this AP.

The APs maintain these desired client limits and enforce them once they reach the limits by withholding probe responses and authentication responses on any radio that has reached its limit.

Key points on load balancing:

- Load balancing does not disassociate clients already connected.
- Load balancing takes action before a client association request, reducing the chance of client misbehavior.
- The process does not require any time-critical interaction between APs.
- Provides control of adjacent AP distance with safeguards against abandoning clients.
- Can be disabled on a per-WLAN basis; for instance, in a voice WLAN, load balancing may not be desired due to voice roaming considerations.
- Background scanning must be enabled on the WLAN for load balancing to work.


Enabling Load Balancing Globally

To enable Load Balancing globally:

1. Go to **Admin & Services > Services > Radio Control > Client Load Balancing**.

2. Enable the check box next to **Run load balancing on 2.4 GHz radio** or **Run load balancing on 5 GHz radio**, or both.
3. Enter **Adjacent Radio Threshold** (in dB), and click **Apply**.

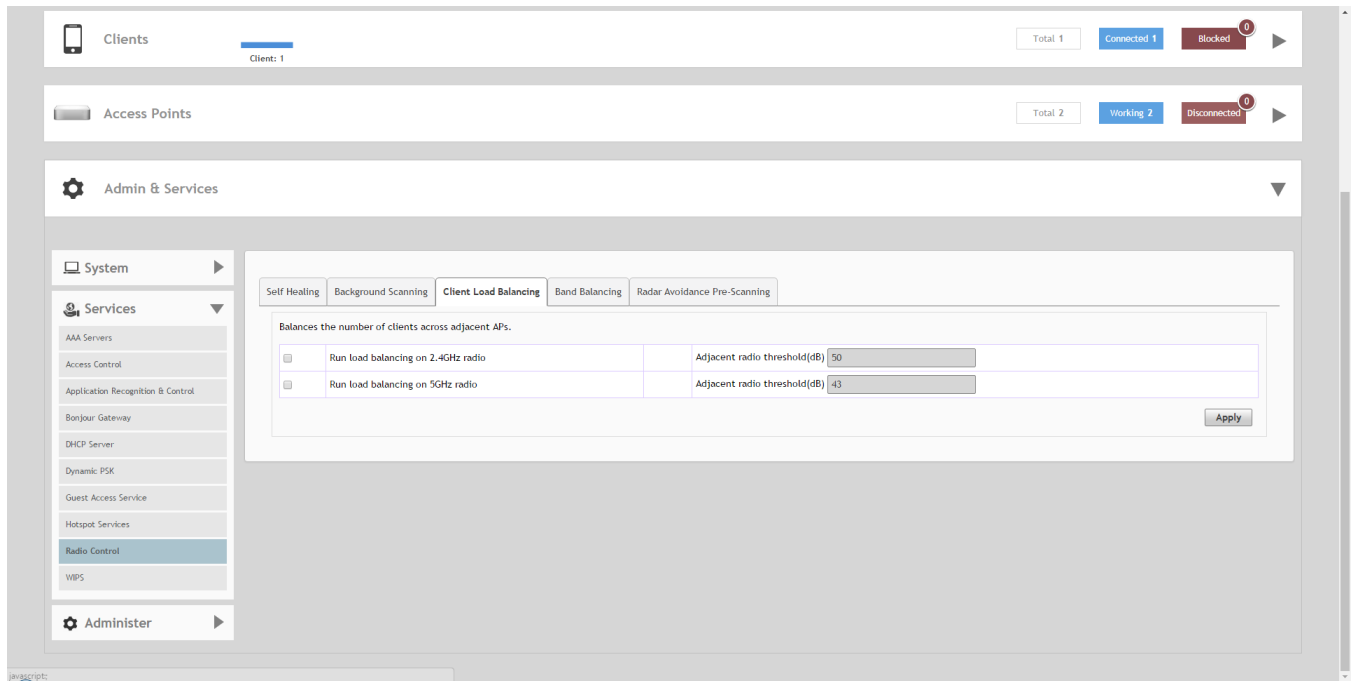FIGURE 319 Client Load Balancing




Disabling Load Balancing for a WLAN

To disable Load Balancing on a per-WLAN basis:

1. Go to **Wi-Fi Networks > Edit > Show advanced options > Radio Control**, and deselect the check box next to **Load Balancing**.

2. Click **OK** to save your changes.

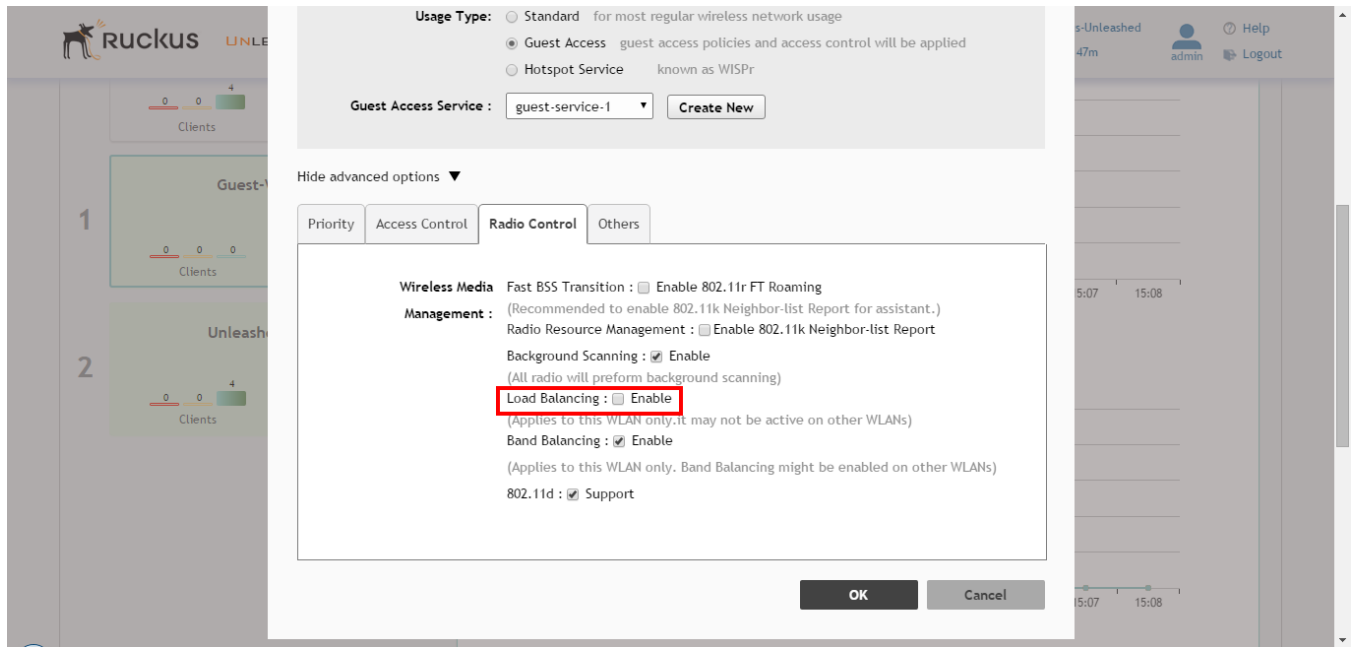FIGURE 320 Disable Load Balancing for a WLAN



Band Balancing


Band balancing attempts to balance the client load on radios by distributing clients between the 2.4 GHz and 5 GHz radios. This feature is disabled by default. To balance the number of clients connecting to the two radios on an AP, the AP encourages dual-band clients to connect to the 5 GHz band when the configured percentage threshold is reached.

To enable Band Balancing, select the check box next to **Percent of clients on 2.4 GHz radio**, and enter a value in the % field, which denotes the threshold above which dual-band clients will be encouraged to connect to the 5 GHz radio rather than the 2.4 GHz radio.

NOTE

When enabled globally here, this feature will be applied to all WLANs by default. To disable Band Balancing for a specific WLAN, edit the [Radio Control Settings](#) on page 259 for the WLAN using the WLAN Advanced Options.

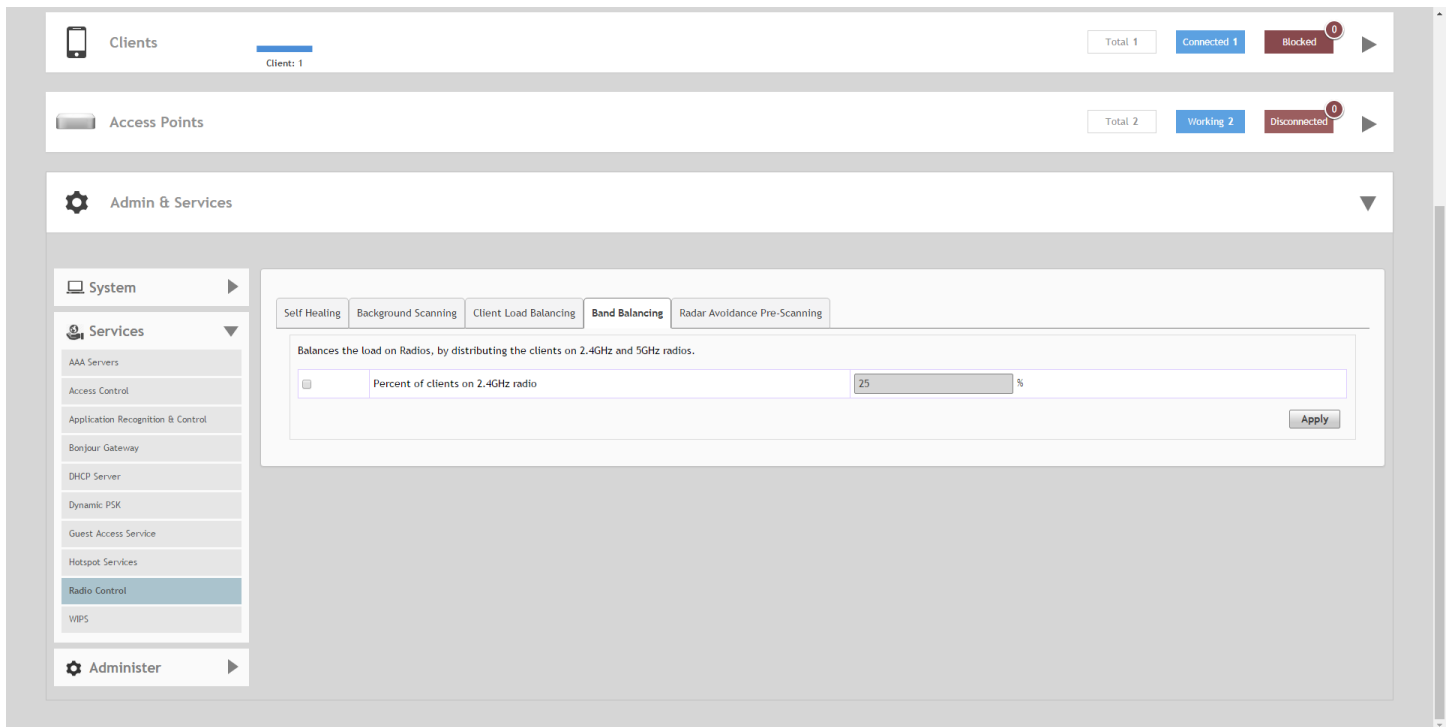
FIGURE 321 Band Balancing



Radar Avoidance Pre-Scanning

The Radar Avoidance Pre-Scanning (RAPS) setting allows pre-scanning of DFS channels in the 5 GHz band to ensure the channel is clear of radar signals prior to transmitting on the channel. This setting affects select outdoor dual band 802.11n/ac AP models only and has no impact on APs that do not support the feature. The option will also only be available if the Country Code settings are configured to allow use of DFS channels (see [Setting the Country Code](#) on page 360).

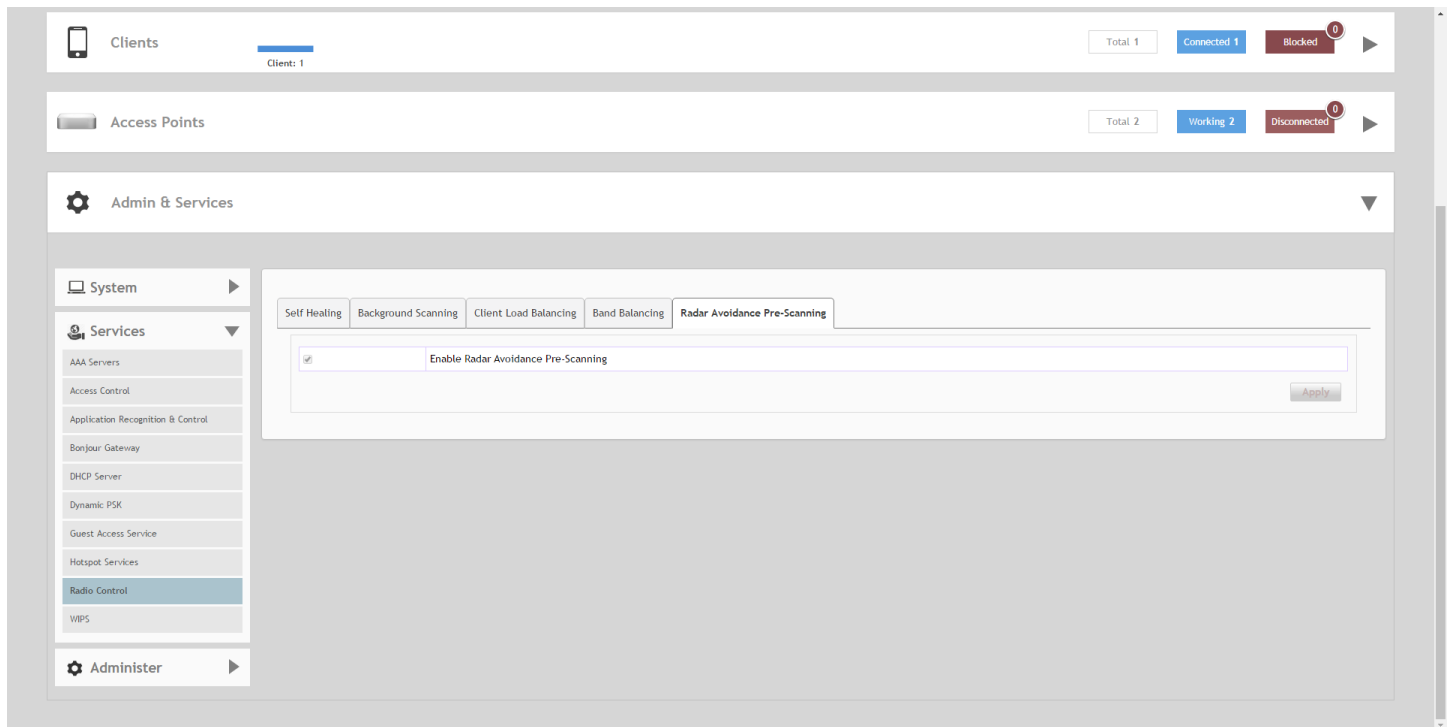FIGURE 322 Radar Avoidance Pre-Scanning



WIPS

Unleashed provides several built-in intrusion prevention features designed to protect the wireless network from security threats such as Denial of Service (DoS) attacks and intrusion attempts. These features, called Wireless Intrusion Prevention Services (WIPS), allow you to customize the actions to take and the notifications you would like to receive when each of the different threat types is detected.

Denial of Service (DoS)


Two options are provided to protect the wireless network from Denial of Service attacks.

To configure the DoS protection options:

1. Go to **Admin & Services > Services > WIPS > Denial of Service (DoS)**.
2. Configure the following settings:
 - **Protect my wireless network against excessive wireless requests:** If this capability is activated, excessive 802.11 probe request frames and management frames launched by malicious attackers will be discarded.
 - **Temporarily block wireless clients with repeated authentication failures for [] seconds:** If this capability is activated, any clients that repeatedly fail in attempting authentication will be temporarily blocked for a period of time (10~1200 seconds, default is 30).

3. Click **Apply** to save your changes.

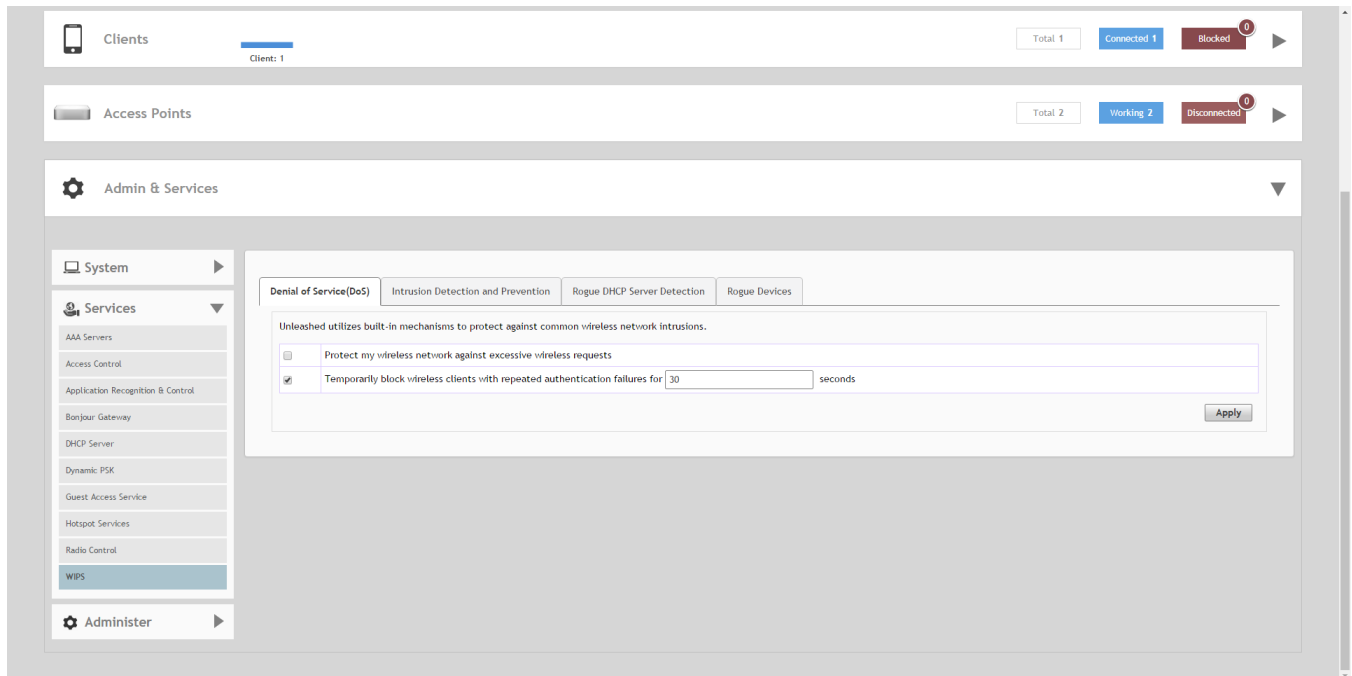FIGURE 323 Denial of Service (DoS)



Intrusion Detection and Prevention

Intrusion detection and prevention features rely on background scanning results to detect rogue access points connected to the network and optionally, prevent clients from connecting to malicious rogue APs.

Rogue Access Points

A "Rogue Access Point" is any access point detected by an Unleashed access point that is not part of the Unleashed network. Rogue devices are detected during off channel scans (background scanning) and are simply other access points that are not part of the Unleashed network (e.g., an access point at a nearby coffee shop, a neighbor's apartment or shopping mall).

Typically, rogue access points are not a threat, however there are certain types that do pose a threat that will be automatically identified as "malicious rogue APs." The three automatically identified malicious access point categories are as follows:

- **WLAN-Spoofing:** These are rogue access points that are beaconing the same WLAN name as an Unleashed access point. They pose a threat as someone may be attempting to use them as a honey pot to attract your clients into their network to attempt hacking or man-in-the-middle attacks to exploit passwords and other sensitive data.
- **Same-Network:** These are rogue access points that are detected by other access points as transmitting traffic on your internal network. They are detected by Unleashed access points seeing packets coming from a 'similar' MAC address to one of those detected from an over the air rogue AP. Similar MAC addresses are +5 MAC addresses lower or higher than the detected over the air MAC address.
- **MAC-spoofing:** These are rogue access points that are beaconing the same MAC address as an Unleashed access point. They pose a threat as someone may be attempting to use them as a honey pot to attract your clients into their network to attempt hacking or man-in-the-middle attacks to exploit passwords and other sensitive data.


Managing Rogue Devices

The Rogue Devices screen displays all currently active rogue APs that have been detected by any of the Unleashed APs on the network.

To monitor rogue devices and mark specific rogues as either "known" or "malicious" rogue APs:

1. Go to **Admin & Services > Services > WIPS > Rogue Devices**.
2. View the list of *Currently Active Rogue Devices* and take note of any rogues marked as "malicious."
3. To view which Unleashed APs are detecting this rogue AP, click the + icon next to the rogue AP to expand the display. Use this information to help investigate where the rogue device is located in your site for removing it.

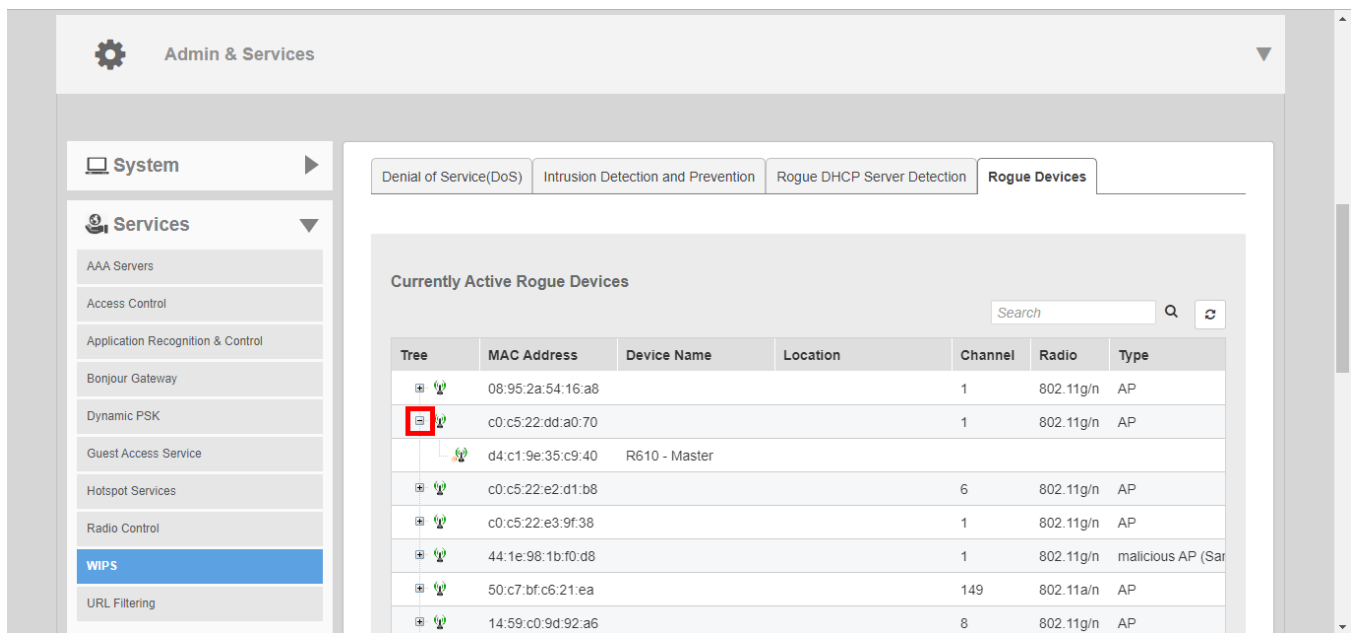
FIGURE 324 Monitoring rogue devices - expand the view to show which APs are detecting this rogue device



4. To mark a rogue device as a "Known" device (for example, a nearby neighbor's network), click **Mark As Known**. This device will no longer trigger rogue device detection alarm events on the *Administration > Diagnostics* pages.


- To mark a rogue device as "Malicious" rogue (with the goal of physically locating and removing the offending device), click **Mark as Malicious**.

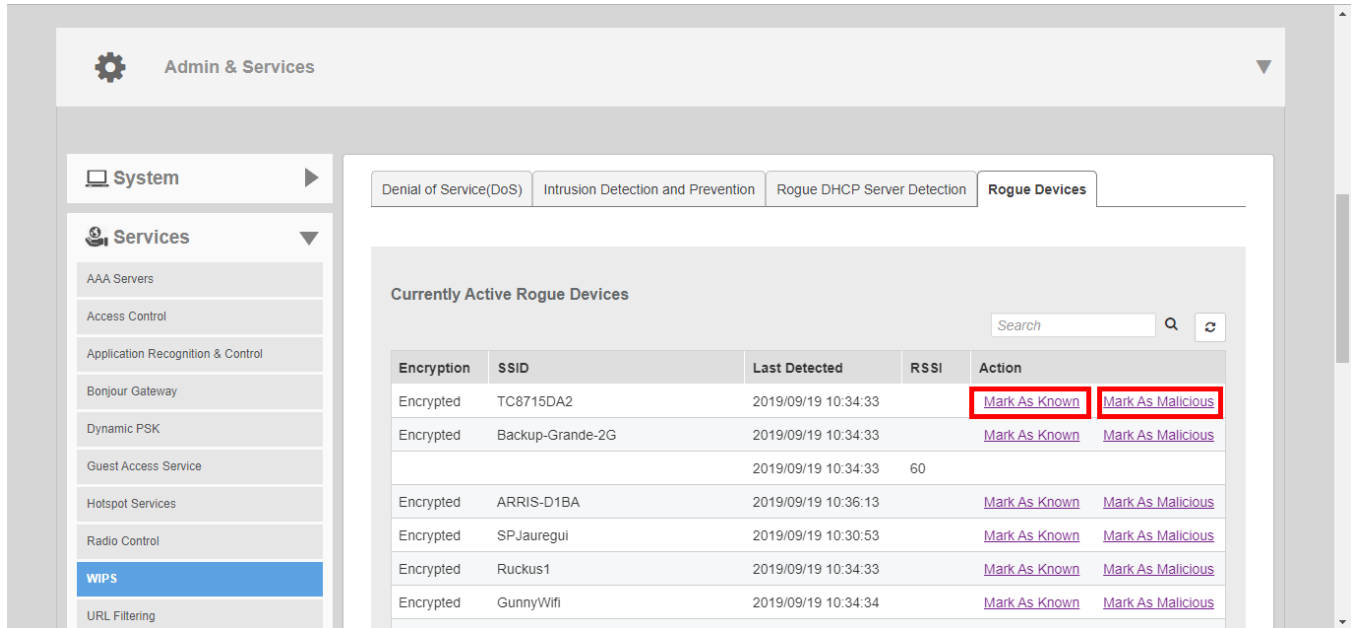FIGURE 325 Marking rogue devices as known or malicious



- You can monitor and manage the lists of known/recognized and user-blocked rogue devices using the two tables below.

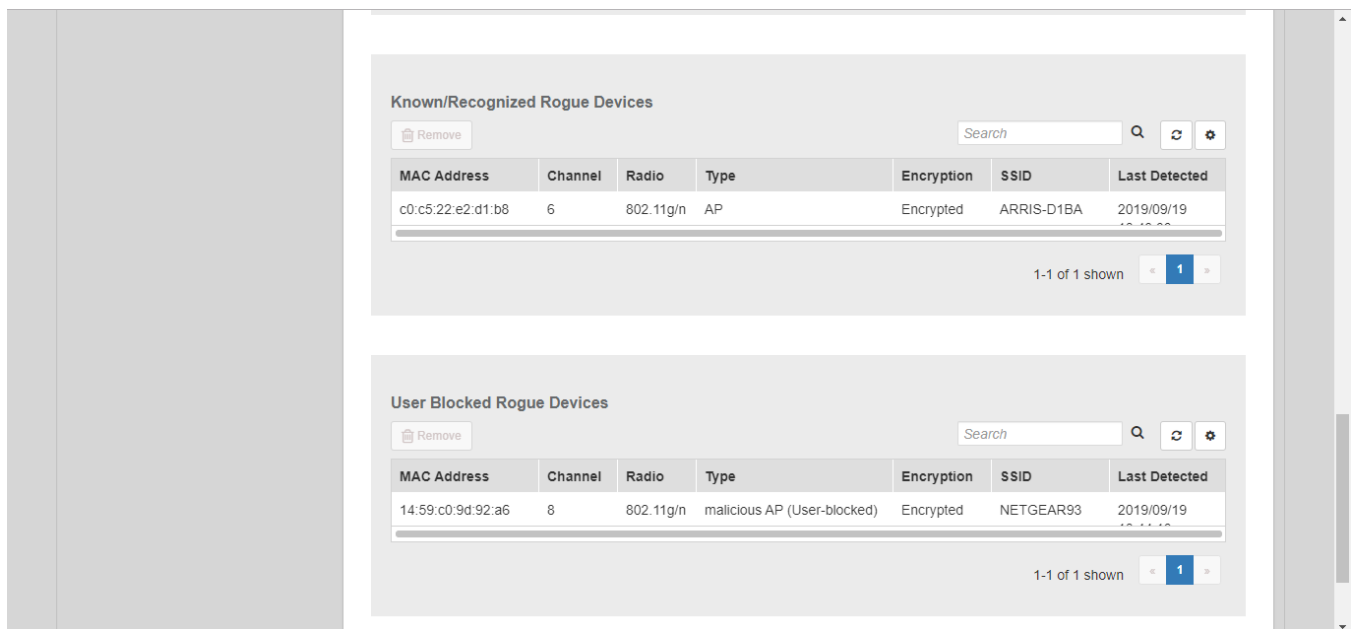FIGURE 326 Manage known rogue devices




Rogue AP Detection

To enable/disable and configure Rogue Access Point detection:

1. Go to **Admin & Services > Services > WIPS > Intrusion Detection and Prevention**.
2. Enable the **Enable report rogue devices** option to include rogue device detection in logs and email alarm event notifications.
3. Select which devices to include in rogue device reports:
 - **Report all rogue devices:** Send alerts for all rogue AP events.
 - **Report only malicious rogue devices of type:** Select which event types to report.
 - **SSID-spoofing:** A malicious rogue AP that uses the same SSID as ZoneDirector's AP, also known as an "Evil-twin" AP.
 - **Same-Network:** A malicious rogue AP that is connected to the same wired network.
 - **MAC-spoofing:** A malicious rogue AP that has the same BSSID (MAC) as one of the virtual APs managed by ZoneDirector.
 - **User-Blocked:** A rogue AP that has been marked as malicious by the user.
4. Enable the **Protect the network from malicious rogue access points** feature to automatically protect your network from network connected rogue APs, WLAN-spoofing APs and MAC-spoofing APs. When one of these rogue APs is detected (and this check box is enabled), the Ruckus AP automatically begins sending broadcast de-authentication messages spoofing the rogue's BWLAN (MAC) to prevent wireless clients from connecting to the malicious rogue AP. This option is disabled by default.
5. Click **Apply** to save your changes.

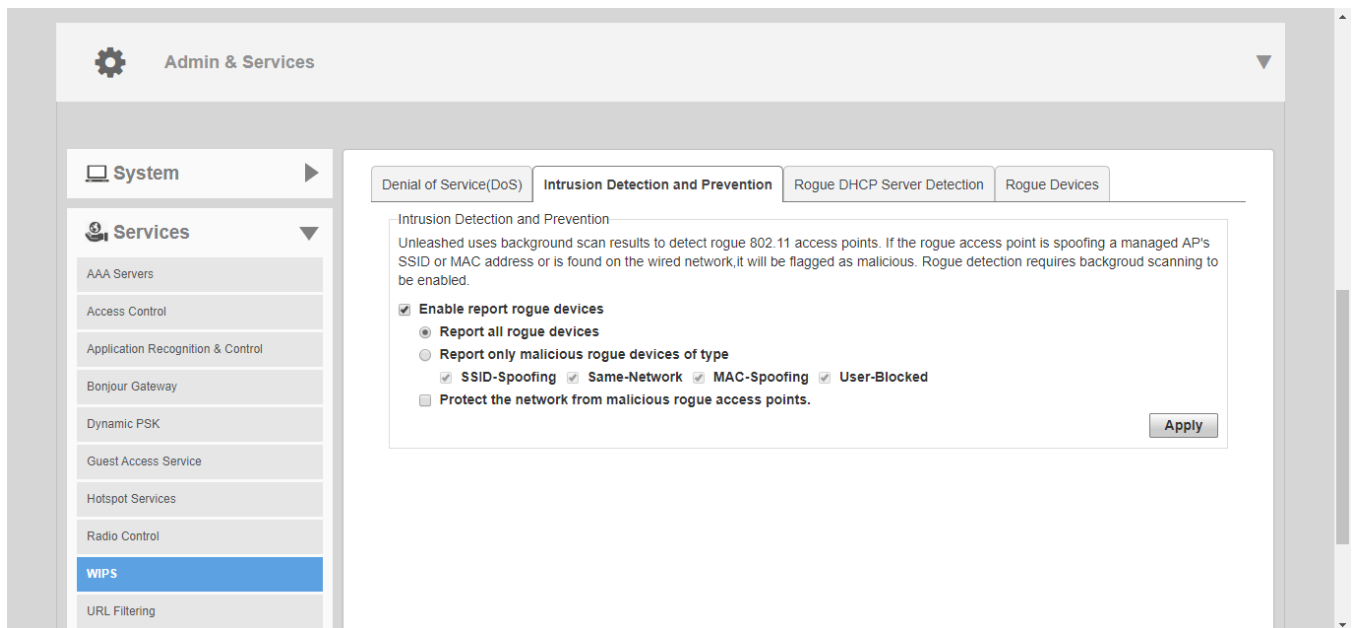FIGURE 327 Intrusion Detection and Prevention




Rogue DHCP Server Detection

A rogue DHCP server is a DHCP server that is not under the control of network administrators and is therefore unauthorized. When a rogue DHCP server is introduced to the network, it could start assigning invalid IP addresses, disrupting network connections or preventing client devices from accessing network services. It could also be used by hackers to compromise network security.

Typically, rogue DHCP servers are network devices (such as routers) with built-in DHCP server capability that has been enabled (often, unknowingly) by users. The rogue DHCP server detection feature can help you prevent connectivity and security issues that rogue DHCP servers may cause. When

this feature is enabled, RUCKUS Unleashed scans the network every five seconds for unauthorized DHCP servers and generates an event every time it detects a rogue DHCP server.

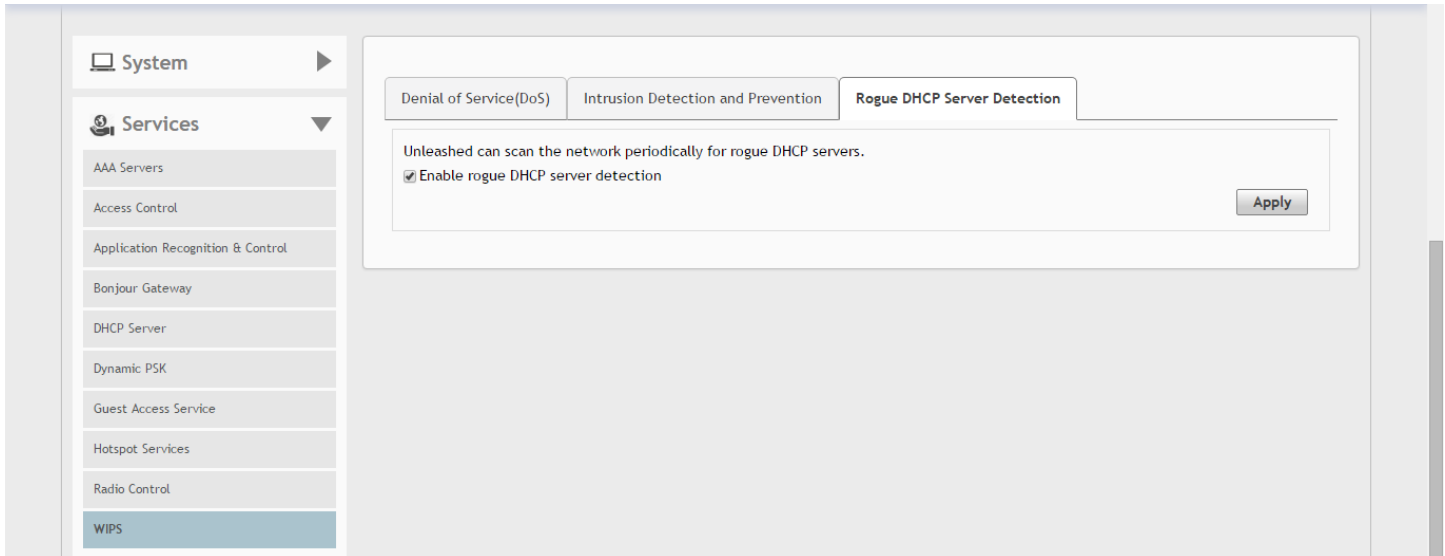FIGURE 328 Rogue DHCP Server Detection



URL Filtering

URL filtering allows administrators to manage internet usage by preventing access to inappropriate websites using a customizable combination of blocklists and allowlists.

The Ruckus URL filtering implementation uses a third-party web classification system that groups a wide variety of internet domains into various levels of inappropriate content, and allows flexible control according to the deployment environment.

Each website is categorized into one of the 83 categories. To find out which category a website falls into, see the Webroot BrightCloud Server site lookup tool (<https://www.brightcloud.com/tools/url-ip-lookup.php>).


To deploy URL filtering, you must create a URL filtering profile using either one of the preset category groups or a customized selection of categories. Once a profile is created, you can apply it to one or more WLANs.

There are four pre-defined category groups and one custom category group:

- **No adult content:** No adult content or nudity.
- **Clean and safe:** No adult content plus no malware, spyware, phishing, botnets or spamware.
- **Child and student friendly:** Clean and safe plus no alcohol, intimate apparel, dating, or weapons.
- **Strict:** Child and student friendly plus no streaming media, personal storage and games.
- **Custom:** Select the categories of traffic to block from the list.

Once enabled, you can view lists of the top URLs blocked by the system, top clients attempting to visit restricted domains, top allowed URLs and content categories by traffic volume, and other useful metrics from the URL Filtering Summary tab.

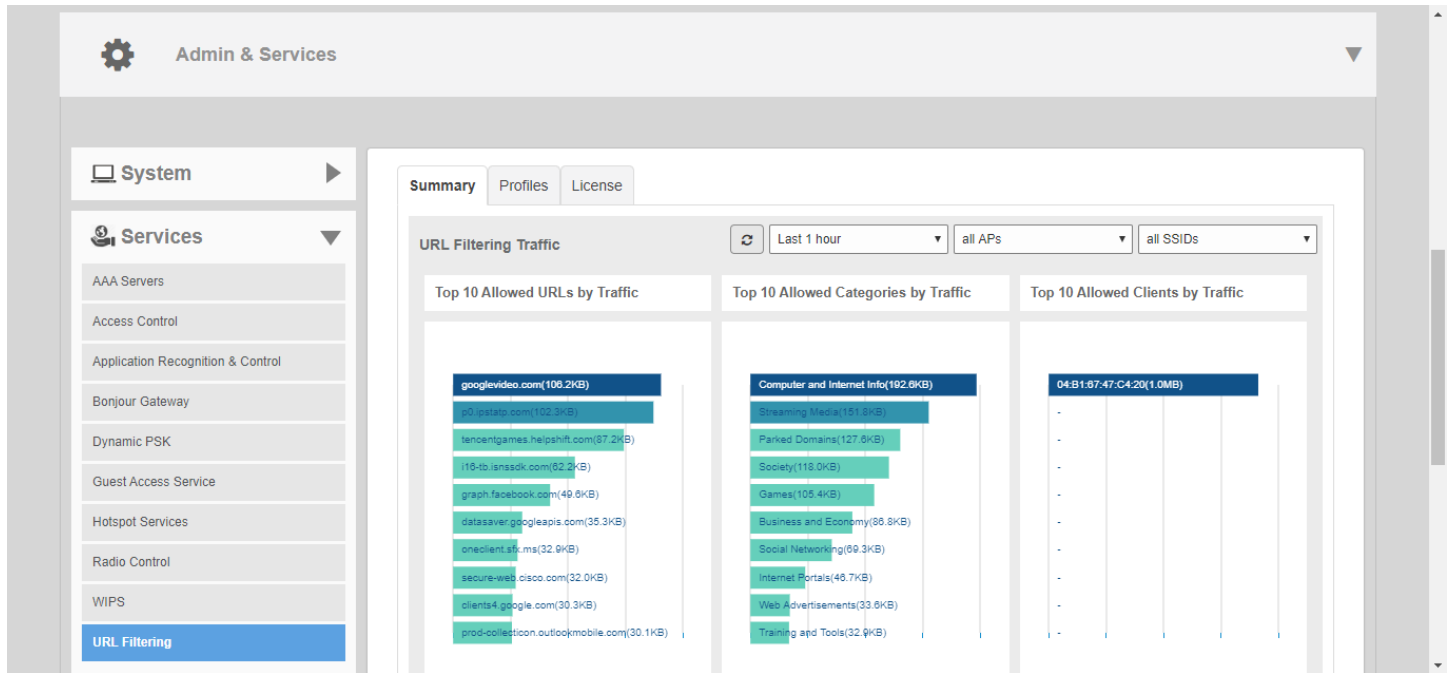FIGURE 329 URL Filtering



Creating a URL Filtering Profile


You must create a URL filtering profile before you can apply the profile to a WLAN or to a user role.

To create a URL filtering profile:

1. Go to **Admin & Services Services > URL Filtering**.
2. Click the **Profiles** tab.

3. Click **Create**. The *Create New* form appears.

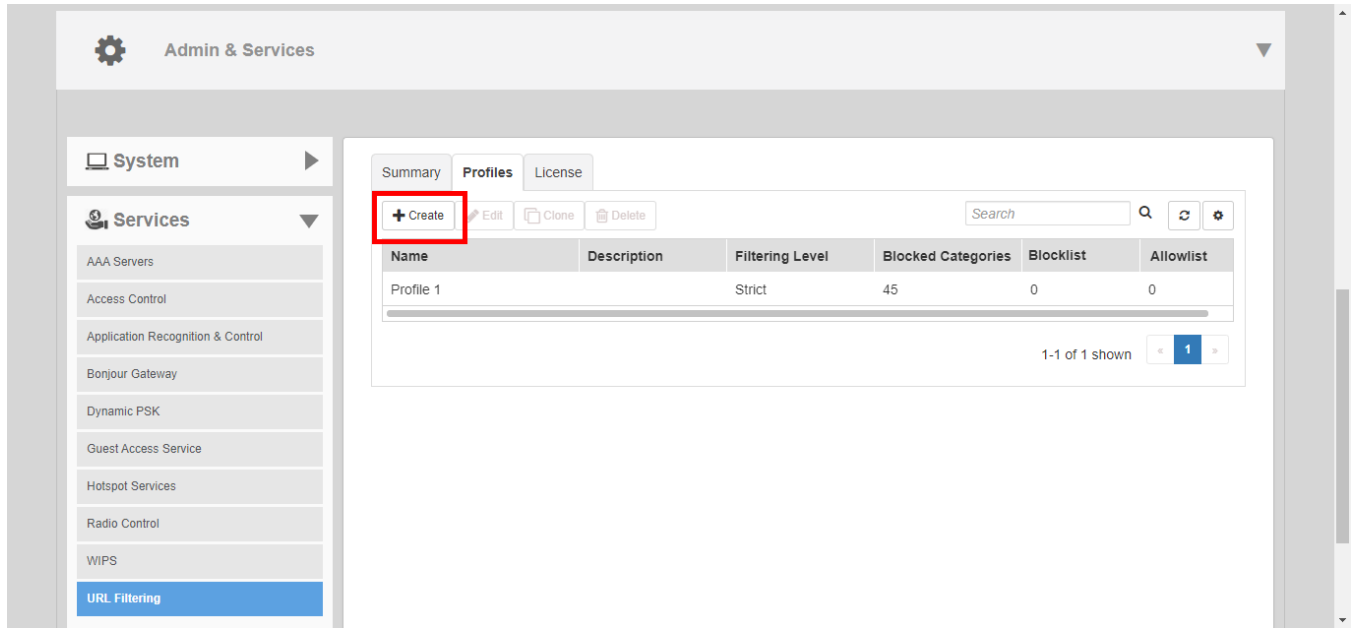FIGURE 330 Creating a URL Filtering Profile



4. Enter a **Name** and optionally a **Description** for this profile.

- Select one of the content filtering category groups, in increasing order of strictness, or select **Custom**, and select any number of individual categories.

FIGURE 331 Selecting Level of Strictness

Create New ✕

Note: Please ensure that configuration is consistent with Application policy. The URL filtering policy will take precedence.

General

Name:

Description:

Categories

[Click here to check category with URL or Domain or IP](#)

- No adult content: No adult content or nudity
- Clean and safe: No adult content plus, no malware, spyware, phishing, botnet or spamware
- Child and student friendly: Clean and safe plus no alcohol, intimate apparel, dating, or weapons
- Strict: Child and student friendly plus no streaming media, personal storage and games
- Custom: Please chose the contents you want to block in below checkbox group

▼ (25 Blocked) Blocked Categories

Blocklist & Allowlist

Blocklist	Order	Domain Name	Action
<input type="checkbox"/>			

FIGURE 332 Blocklisting or Allowlisting a Specific URL

[Click here to check category with URL or Domain or IP](#)

- No adult content: No adult content or nudity
- Clean and safe: No adult content plus, no malware, spyware, phishing, botnet or spamware
- Child and student friendly: Clean and safe plus no alcohol, intimate apparel, dating, or weapons
- Strict: Child and student friendly plus no streaming media, personal storage and games
- Custom: Please chose the contents you want to block in below checkbox group

▼ (25 Blocked) Blocked Categories

Blocklist & Allowlist

Blocklist	Order	Domain Name	Action
<input type="checkbox"/>			

Allowlist	Order	Domain Name	Action
<input type="checkbox"/>			

Safe Search

- Google Safe Search Enable Google Safe Search
- YouTube Safe Search Enable YouTube Safe Search
- Bing Safe Search Enable Bing Safe Search

- Optionally, in *Blocklist & Allowlist*, you can add custom URLs to either block or allow. Allowlist and blocklist entries override the rules configured above. A maximum of 16 blocklist and 16 allowlist entries can be created per profile.
- Optionally, in *Safe Search*, enable or disable "Safe Search" functionality from Google, Youtube, or Bing.

- Click **OK** to save your changes. A maximum of 32 profiles can be created.


Applying a URL Filtering Policy to a WLAN

Once a URL filtering policy has been created, you can apply it to your wireless networks using the following procedure.

To apply a URL filtering policy to a WLAN:

- Go to **WiFi Networks**, select the WLAN you would like to configure, and click **Edit**.
- Scroll down and expand the **Advanced Options** section.
- Click the **Access Control** tab.
- In **URL Filtering**, select **Enable** and choose a **URL Filtering Profile** from the drop-down list. Alternatively, click the + (Create New) icon to create a new profile and apply it to this WLAN.
- Click **OK** to save your changes.

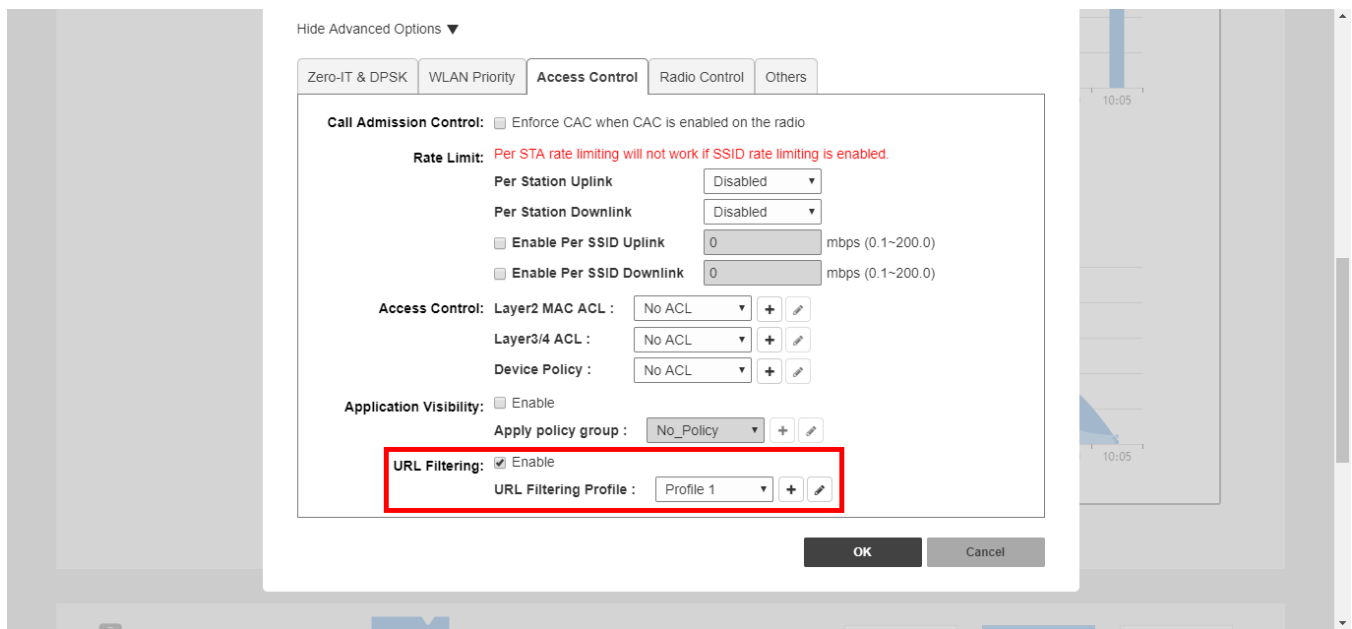FIGURE 333 Enabling URL filtering for a WLAN



Working with URL Filtering Licenses


URL filtering service requires an active URL filtering license to function. URL filtering licenses can be purchased from RUCKUS partners and distributors, and a temporary license is also available to allow customers to try out the service for a limited time before purchasing.

Complete the following steps to manage URL filtering licenses.

- Go to **Admin & Services > Services > URL Filtering**.

2. Click the **License** tab and select one of the following options:
 - **Update Services By File:** Import a new locally saved license file.
 - **Renew Services Online:** Connect to the RUCKUS license server to download a license file.
 - **Show Details:** Select the license file from the list and click **Show Details** to view license expiration details.

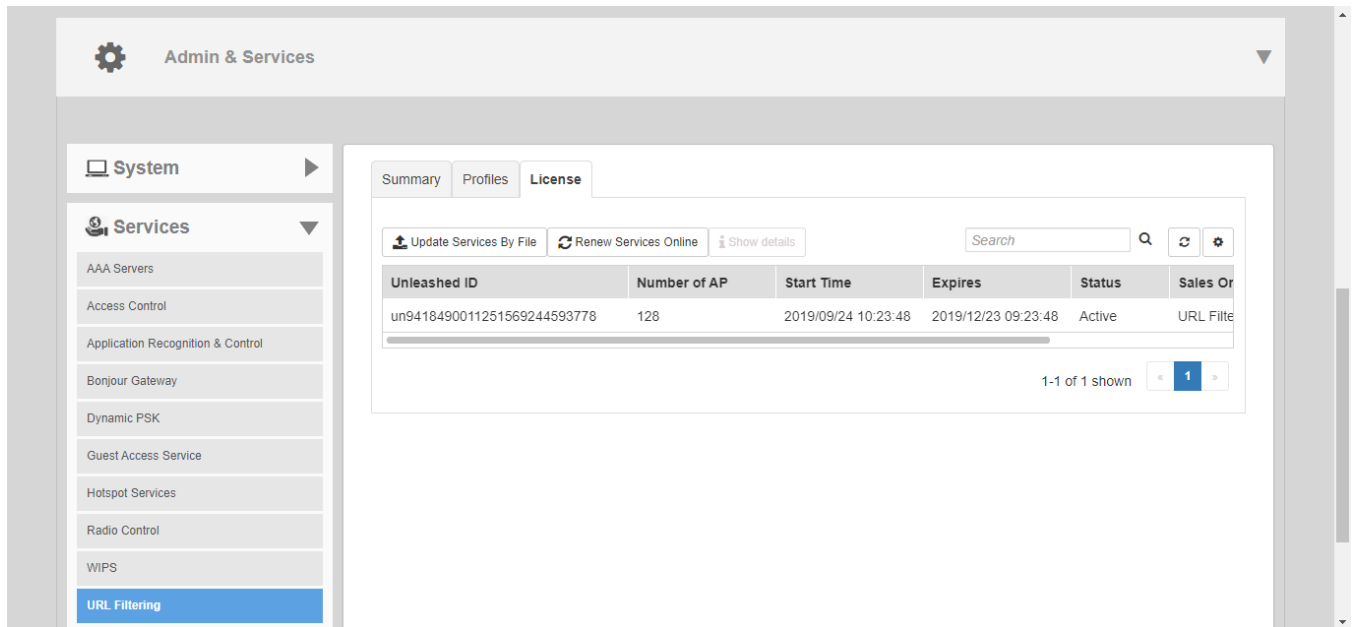FIGURE 334 Working with URL Filtering Licenses



Wi-Fi Calling

The RUCKUS Unleashed Wi-Fi Calling feature aims to provide better call quality by reducing latency, jitter, and roaming delays for voice calls over Wi-Fi.

To achieve this, the RUCKUS Unleashed access point must perform identification, classification, and marking of voice calls when Wi-Fi calling is enabled and a call is made from a supported client device. Once a call is identified, voice packets are classified and marked to be delivered over an Internet Protocol Security (IPsec) tunnel from the client through the AP and the controller and on to the mobile operator's data center.

The Wi-Fi calling provides the following benefits:

- Faster inter-AP roaming using RUCKUS SmartRoam along with standards-based .11r/k technologies minimizes IPsec session timeouts or teardowns to avoid call drops.
- Voice-aware SmartCast prioritization helps maintain sustained call quality even when there are other clients generating regular Internet packet data.
- A voice call on one SSID will be prioritized in the voice queue over Internet packet data from other SSIDs.

The process consists of the following steps:

1. User turns on Wi-Fi Calling in the phone menu, or turns on Wi-Fi and connects to the wireless network.
2. Client initiates a DNS lookup to the domain name of the Evolved Packet Data Gateway (ePDG) (for example, T-Mobile: ss.epdg.epc.mnc260.mcc310.pub.3gppnetwork.org).

NOTE

The ePDG on an LTE network acts as an interface between the user device and the non-trusted 3rd Generation Partnership Project (3GPP) access network (for example, Wi-Fi hotspot), providing a security mechanism through a secure IPsec tunnel that is established with the user device.

3. Client initiates an Internet Key Exchange version 2 (IKEv2) handshake towards the ePDG to authenticate and set up an IPsec tunnel.
4. Client initiates an IPsec session towards the ePDG.
5. User is notified that Wi-Fi Calling is activated.
6. User initiates a voice call. All voice traffic is tunneled to the ePDG within the IPsec tunnel.


Creating a Wi-Fi Calling Profile

A Wi-Fi calling profile must be associated to any WLAN with Wi-Fi calling enabled.

To create a Wi-Fi calling profile:

1. Go to **Admin & Services > Services > W-Fi Calling** and click the **Profiles** tab.
2. Click **Create** to create a new profile.
3. In the *Create New* dialog, enter the following to create a new profile:
 - **Name:** Enter a name for the profile.
 - **Description:** Optionally, enter a description of the profile.
 - **QoS Priority:** Select a priority from the list (typically, Voice for highest QoS priority).
 - **Evolved Packet Data Gateway (ePDG):** Click **Create New** to create a new ePDG entry. Enter **Domain Name** and optionally **IP address**, and click **Save** to save the entry.

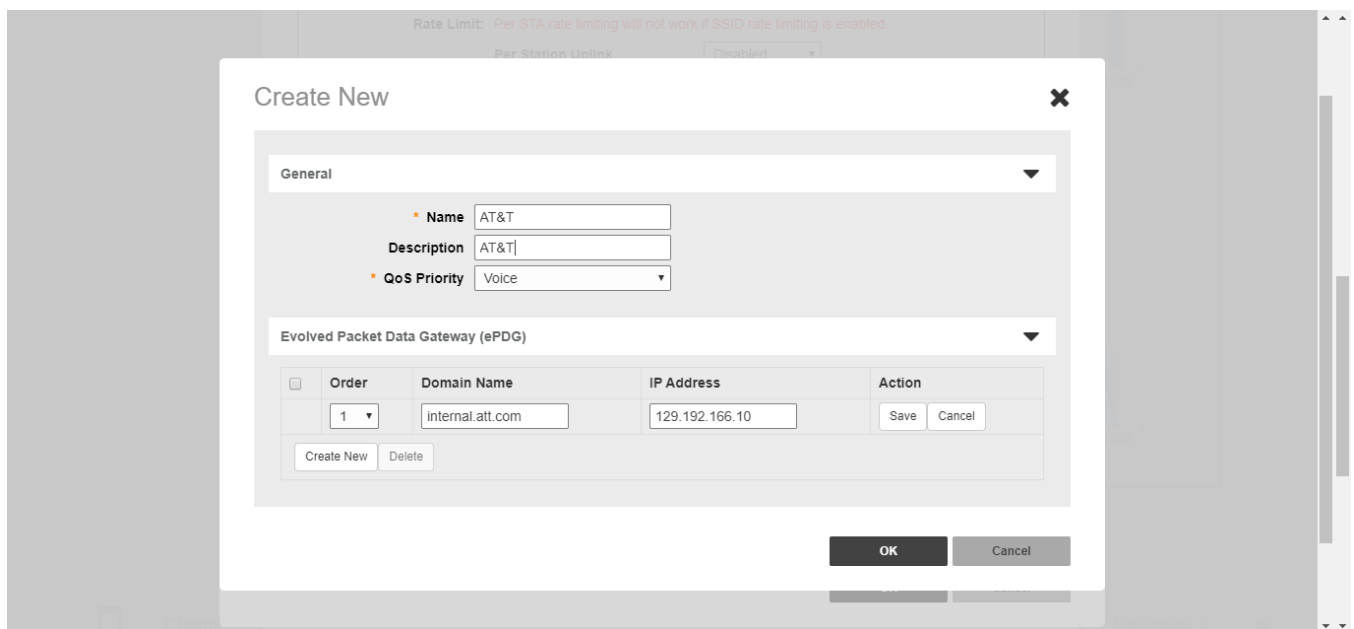FIGURE 335 Create a Wi-Fi calling profile




Enabling Wi-Fi Calling for a WLAN

Once a Wi-Fi calling profile has been created, you must configure each WLAN with one or more profiles to enable the feature for the WLAN.

To enable Wi-Fi calling for a WLAN:


1. Select the WLAN that will support Wi-Fi calling, and click **Edit**.
2. Click **Show Advanced Options > Access Control**.
3. In **WiFi Calling**, click **Edit** to select Wi-Fi calling profiles.
4. Select a profile from the list of *Available Profiles*, click the right arrow to move it to the list of *Selected Profiles*, and click **OK** to save your changes.

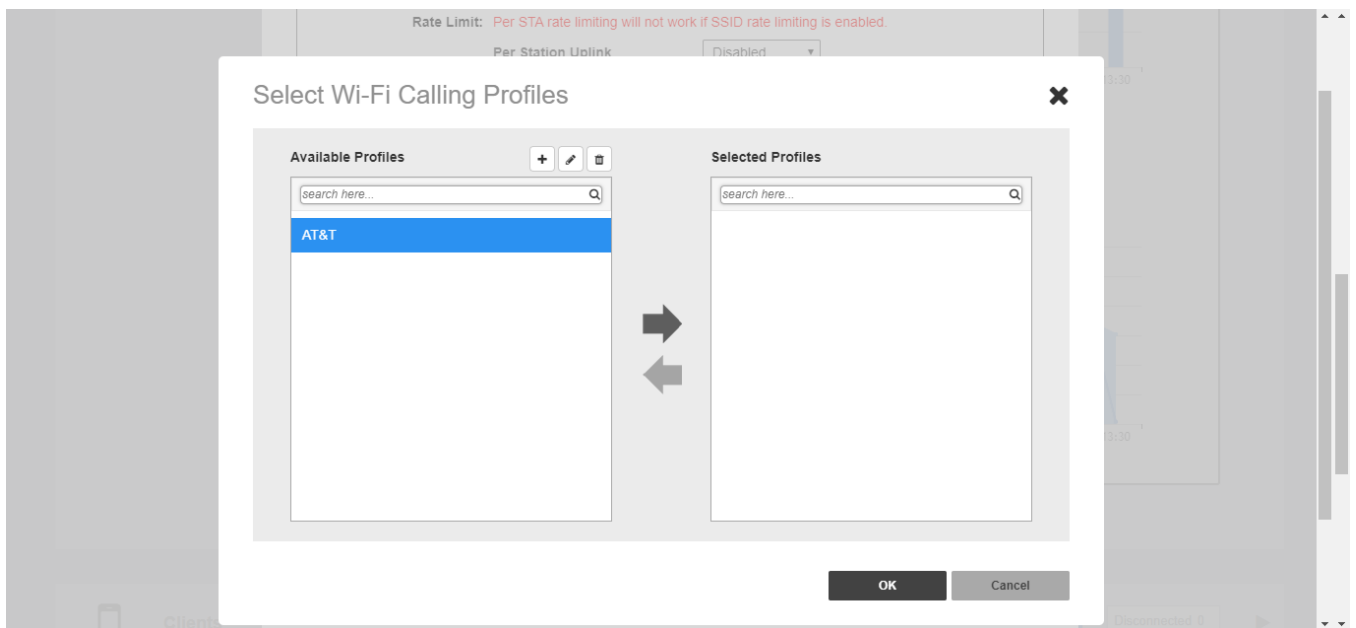FIGURE 336 Add profiles from the available profiles to selected profiles for the WLAN



- Click **OK** to save the changes to the WLAN advanced options.

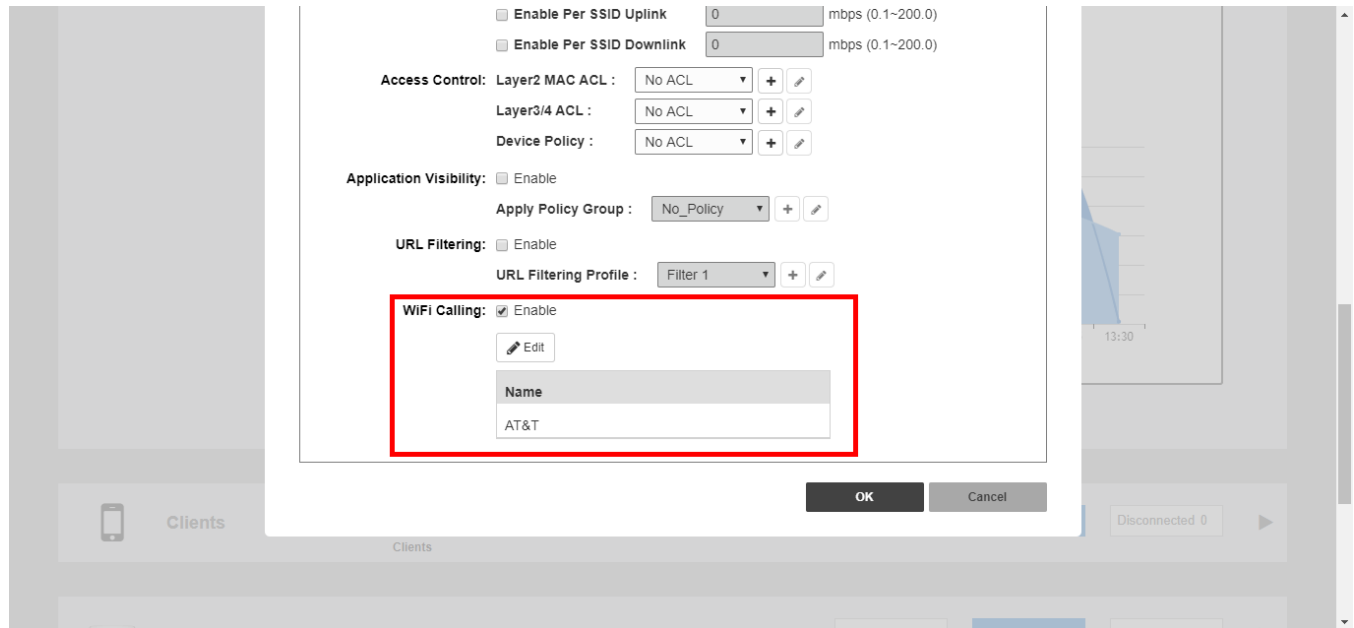FIGURE 337 Enabling Wi-Fi calling for a WLAN



Administration Settings

Administration settings that can be configured from the **Admin & Services > Administer** page include admin name/password, system backup and restore, upgrade, diagnostics and network management options.

Preferences

Use the **Administration > Preferences** page to set the user interface language and to change the Admin login name and password.

Configure the following admin preferences settings and click **Apply** to apply your changes:

- **Language:** Choose the web interface language.
- **Administrator Name/Password:** Change the current admin name and password.
 - **Authenticate using the admin name and password:** This is the default option. Use this option for standard login using an admin username/password.
 - **Authenticate with Auth Server:** Use this option to allow multiple users to perform admin functions based on Active Directory credentials. To enable this option, a valid Microsoft Active Directory AAA server object must be created so that Unleashed can authenticate users to the AD server. If enabled, optionally enable **Fallback to admin name/password if failed** to allow standard login if the AD authentication fails.
- **Setup Password Recovery:** Select this option, and enter a Security email, Security Question and Security Answer that can be used to recover the admin password in the event that the password is lost.

FIGURE 338 Configuring administrator preferences


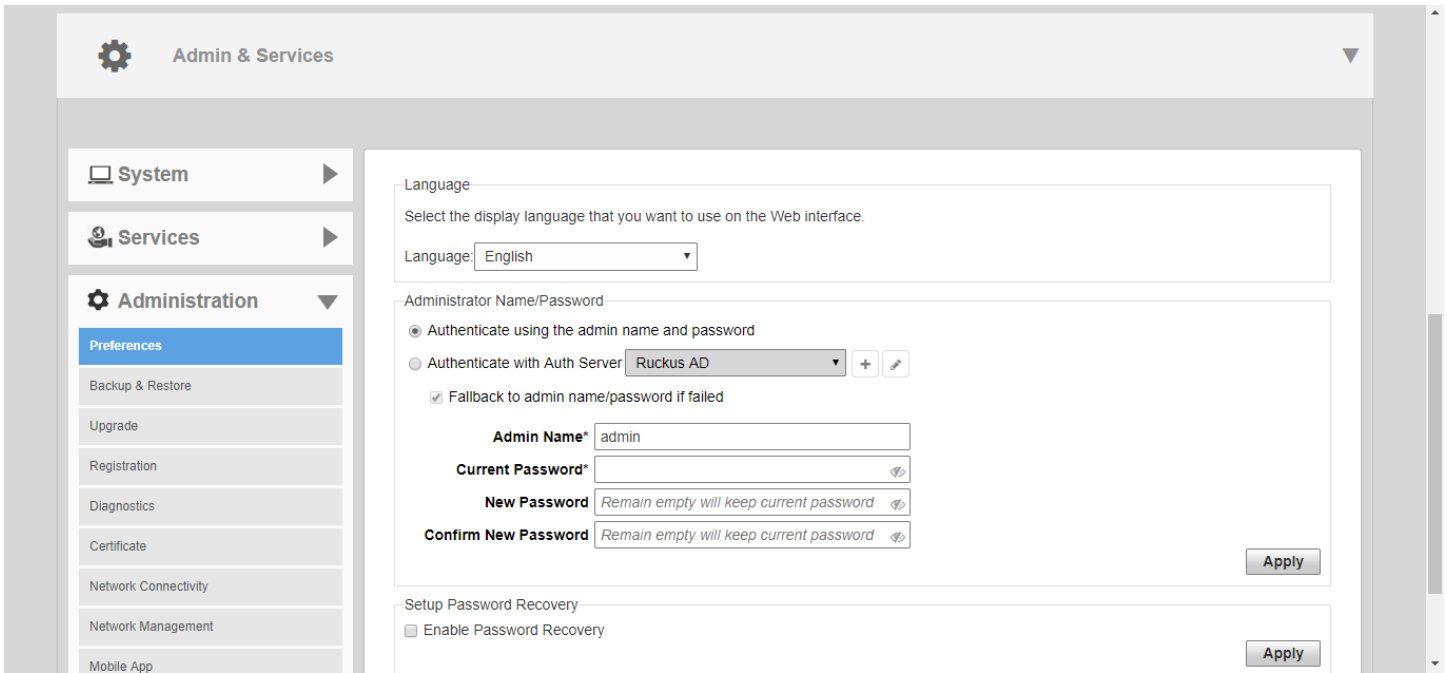


FIGURE 339 Enabling password recovery

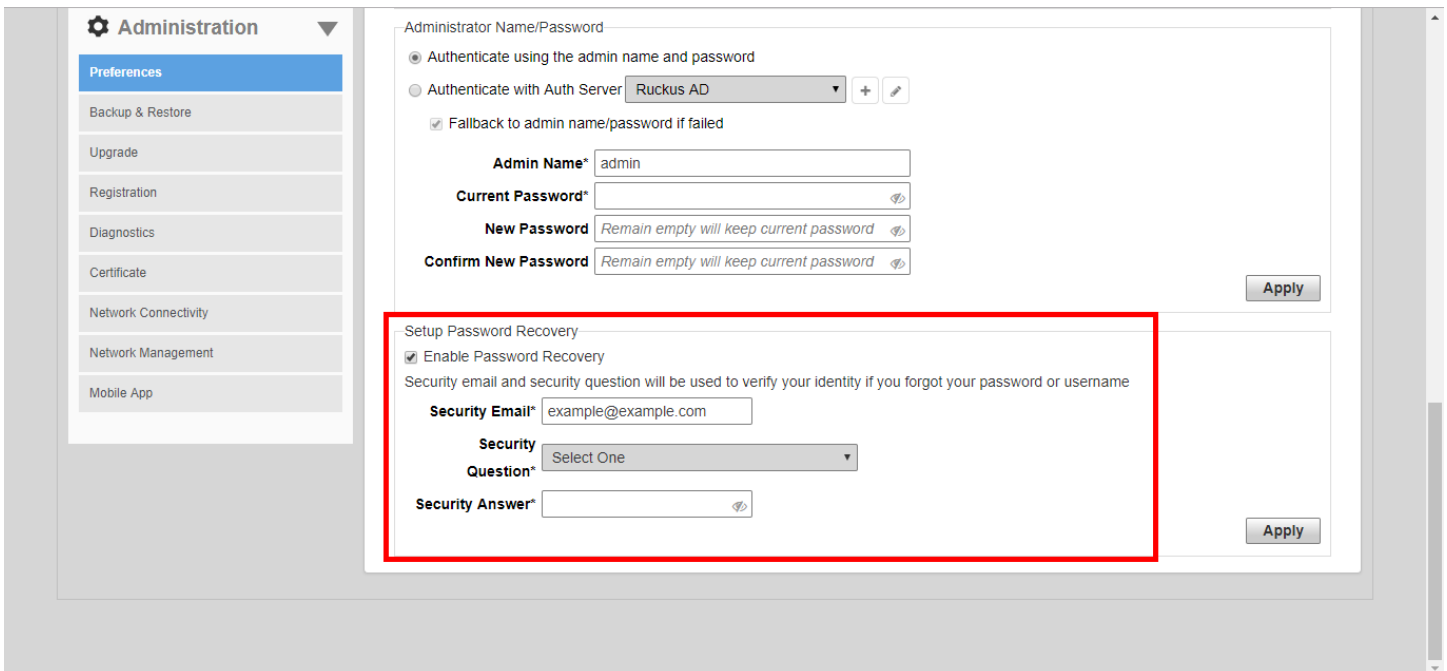

Backup and Restore

The **Backup & Restore** page provides options for backing up your current configuration, restoring the configuration from a previous backup file, or restoring the Unleashed Master AP to factory settings.

NOTE

The backup is a small encrypted file with a .bak extension saved to the location of your choosing.

To restore settings from a backup file, click **Browse**, then select your backup file, and click **Open**. Once the .bak file has been uploaded to Unleashed, select one of three restore options for your Unleashed network.

Options include:

- **Restore Everything**
- **Restore Everything except system name and IP address**
- **Restore only WLAN settings, ACLs, roles, users, country code and system time**

FIGURE 340 Backup and Restore


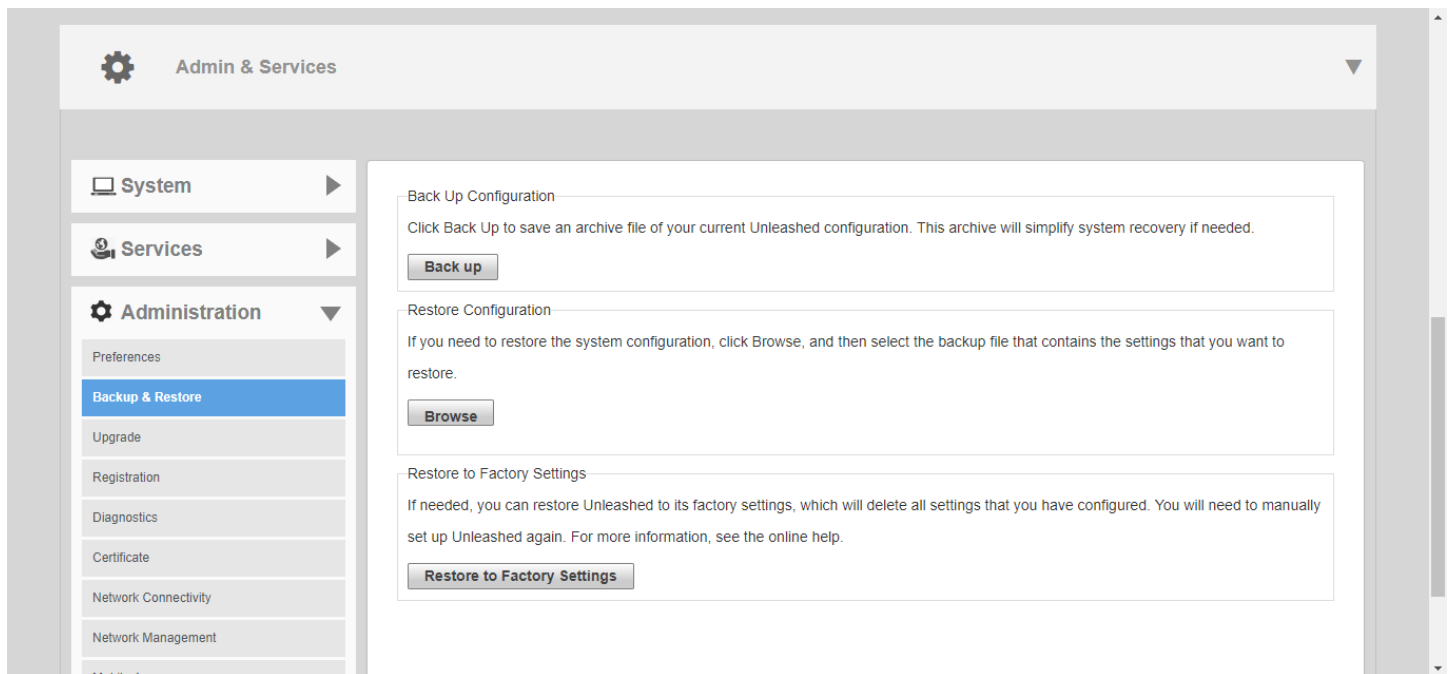


FIGURE 341 Choose a Restore type

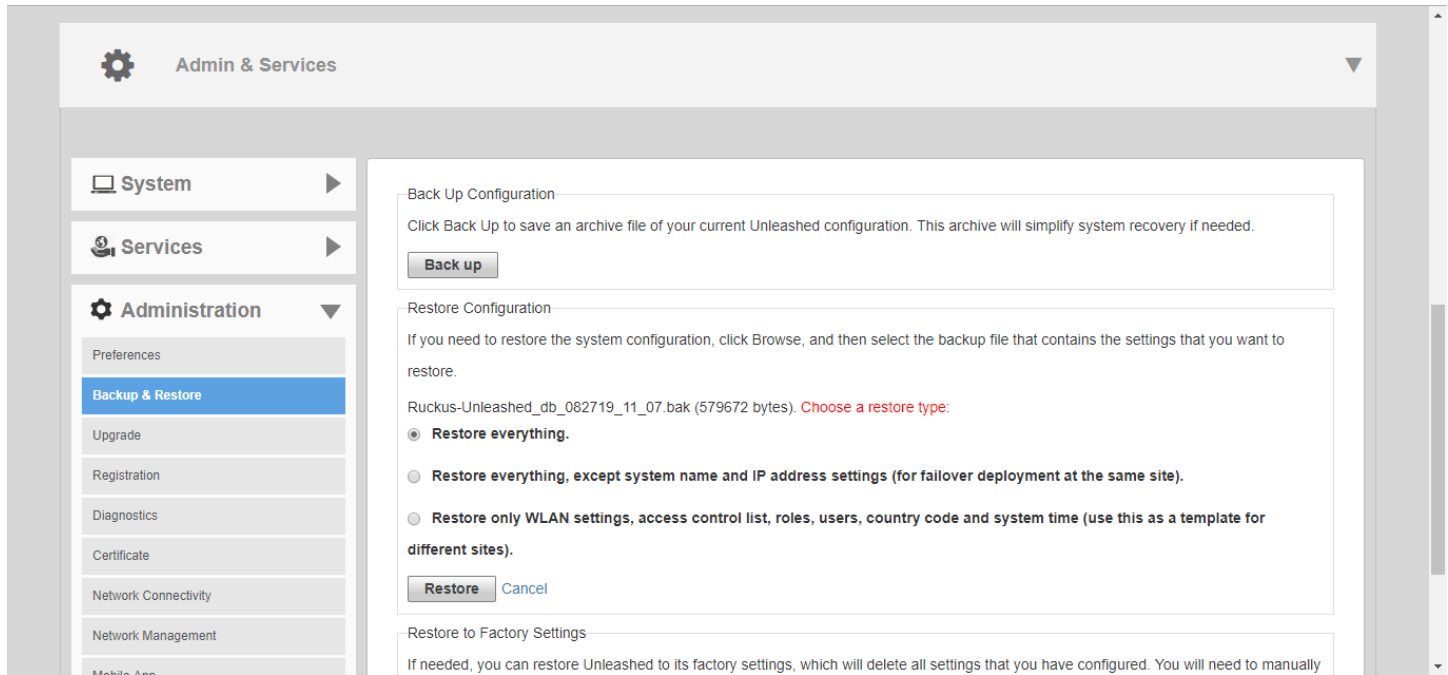

Restore to Factory Settings

In certain extreme conditions, you may want to re-initialize your Master AP and reset it to the factory default state. Once the Master has been reset to factory default state, all AP logs, client logs, application data and other records, wireless networks, user accounts, and any other configuration settings must be reconfigured.


Complete the following steps to reset your Master AP to factory default settings:

1. Go to **Admin & Services > Administer > Backup & Restore**.
2. Click **Restore to Factory Settings**.
3. Click **OK** to confirm.

The **Restoring Unleashed to factory settings** progress screen appears. Wait for this progress screen to finish before attempting to login again.

4. Repeat the initial setup and configuration procedures as described in [Setting Up an Unleashed Wi-Fi Network](#) on page 129.

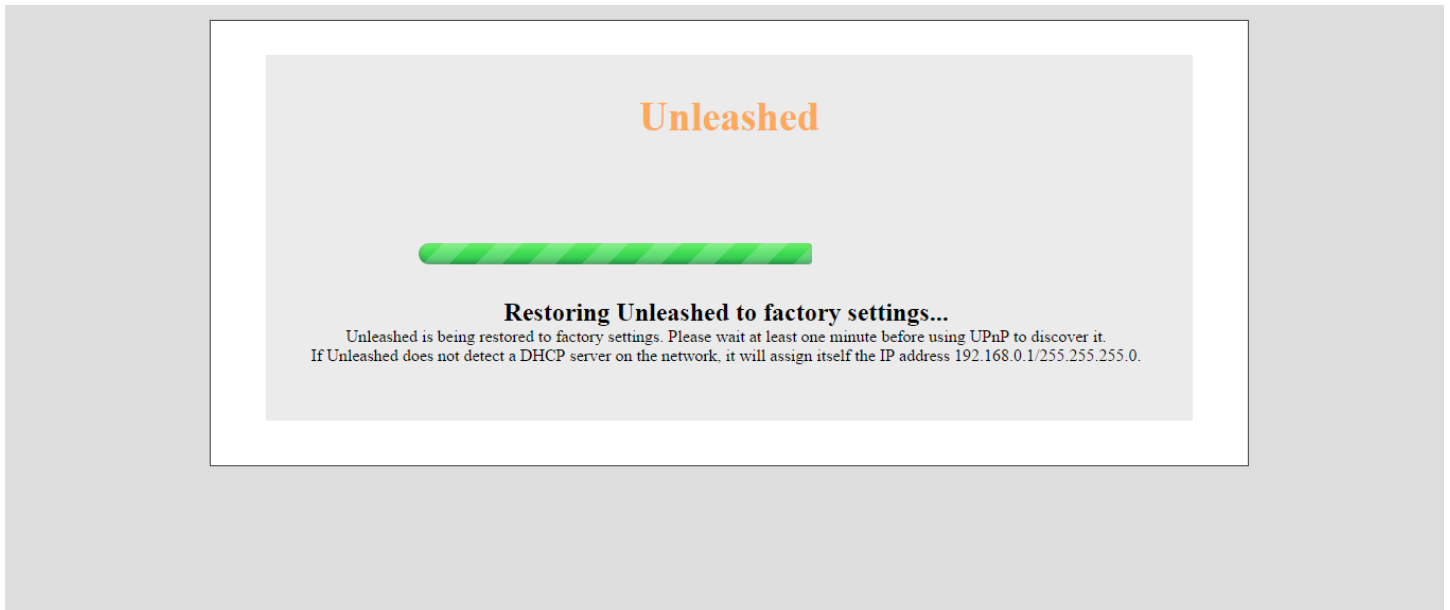FIGURE 342 Restore Factory Settings Progress Screen



Alternate Factory Default Reset Method

If you are unable to complete the software-based resetting of RUCKUS Unleashed to factory default, you can use the following "hard restore" method.

NOTE

Do not disconnect the Master AP from its power source until this procedure is complete.

1. Locate the **Reset** pin hole on the rear panel of the Master AP.
2. Insert a straightened paper clip in the hole and press for at least 6 seconds.

After the reset is complete, the PWR LED will initially be solid red, indicating bootup is in process. The LED then blinks green, indicating that the system is in the factory default state.


After you complete the Setup Wizard, the PWR LED will be steady green.

Rediscovering the Unleashed AP on the Network

If you do not know the IP address, you can rediscover an Unleashed AP on the network using UPnP or Bonjour service discovery.

To discover an Unleashed AP using UPnP (Windows clients only), go to the **Network** section of Windows Explorer (**Start > Network** or **Start > Computer > Network**). Locate the Unleashed device in the *Network Infrastructure* section. Double-click the icon to launch the web UI, or right-click and select **View device webpage**, or type the address displayed into your browser's navigation bar.

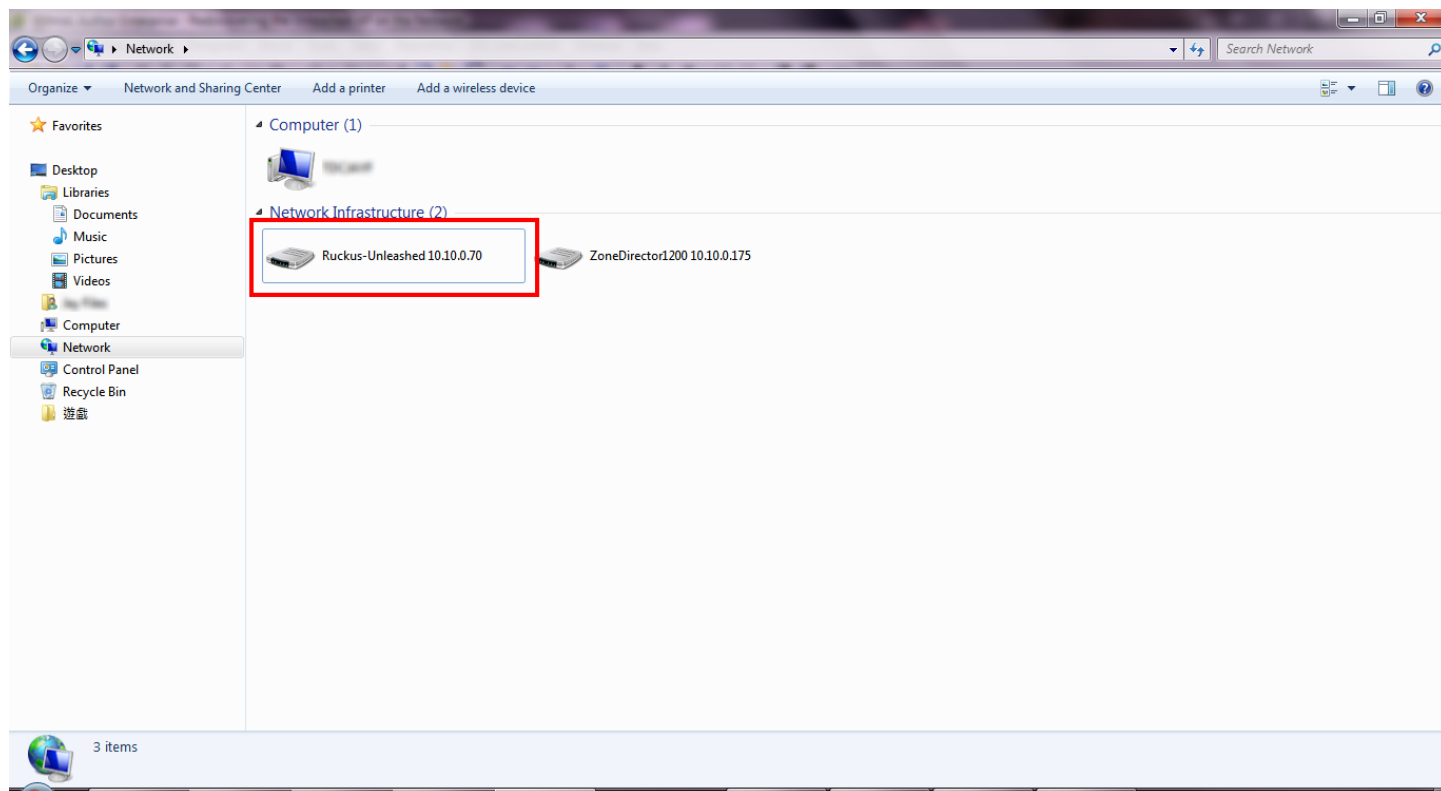FIGURE 343 Discovering Unleashed using UPnP in Windows



Additionally, Unleashed also supports Bonjour service discovery. Bonjour discovery allows devices running operating systems other than Windows (such as iOS and Android) to discover the Unleashed Master AP. This allows mobile clients to manage the system using the Unleashed Mobile App in addition to via web browser.

Upgrade

The **Upgrade** page displays the current firmware version and provides an **Upgrade** button which can be used to download the latest firmware and perform an upgrade of the entire Unleashed network.

Unleashed provides two methods of upgrading the firmware:

- [Online Upgrade](#) on page 432
- [Local Upgrade](#) on page 436

Online Upgrade

Use the online upgrade method to upgrade your RUCKUS Unleashed network with the latest firmware available from the RUCKUS Unleashed firmware server.

Complete the following steps to upgrade the Master AP and all connected member APs using the online upgrade method:

1. Go to **Admin & Services > Administer > Upgrade**.
2. Select **Online Upgrade**.

3. Under **Select Firmware Version**, select one of the available firmware versions.

NOTE


You can rollback to the previous image version and restore the configuration of the previous version. The roll back syncs automatically to all member APs. If the old Master AP reboot fails and a member AP becomes the Master AP, then the new Master AP can still roll back to the previous version with the corresponding configuration.

NOTE

Optionally, select **Auto reboot the system** to automatically reboot each AP after the firmware has been deployed to the AP. By default, this option is enabled. You may want to disable this option if you prefer to wait until all APs have the new firmware before rebooting them all at once. That is, if you have multiple Unleashed AP models that require different firmware image files, you can either select the **Auto reboot the system** option and wait until all the APs have finished downloading the firmware and the entire Unleashed network is automatically rebooted, or you could choose to wait until all the APs have finished downloading the firmware and click **Reboot** to reboot the entire Unleashed network.


- Click **Upgrade** to begin upgrading the APs shown in the list.

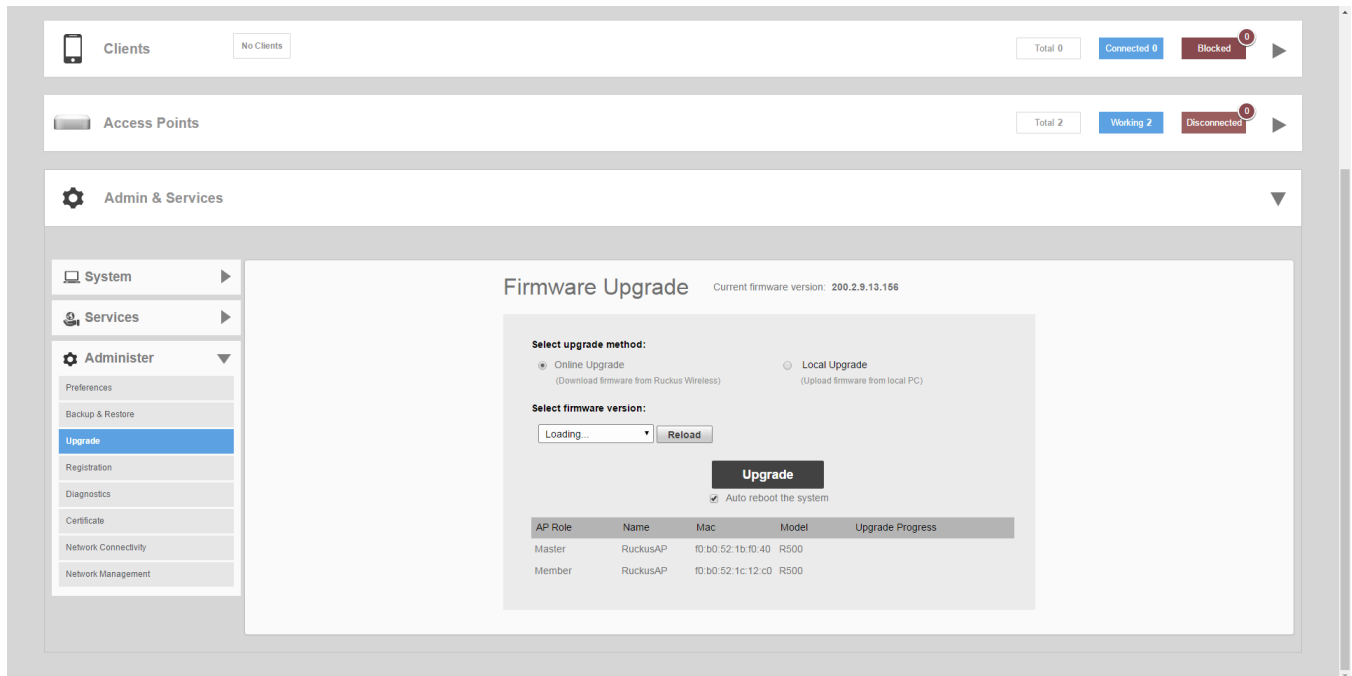FIGURE 344 Configuring Online Upgrade




The **Upgrade Progress** column displays the progress for each AP. Once completed, the column will display "Success 100%" next to each AP for which the upgrade was successful.

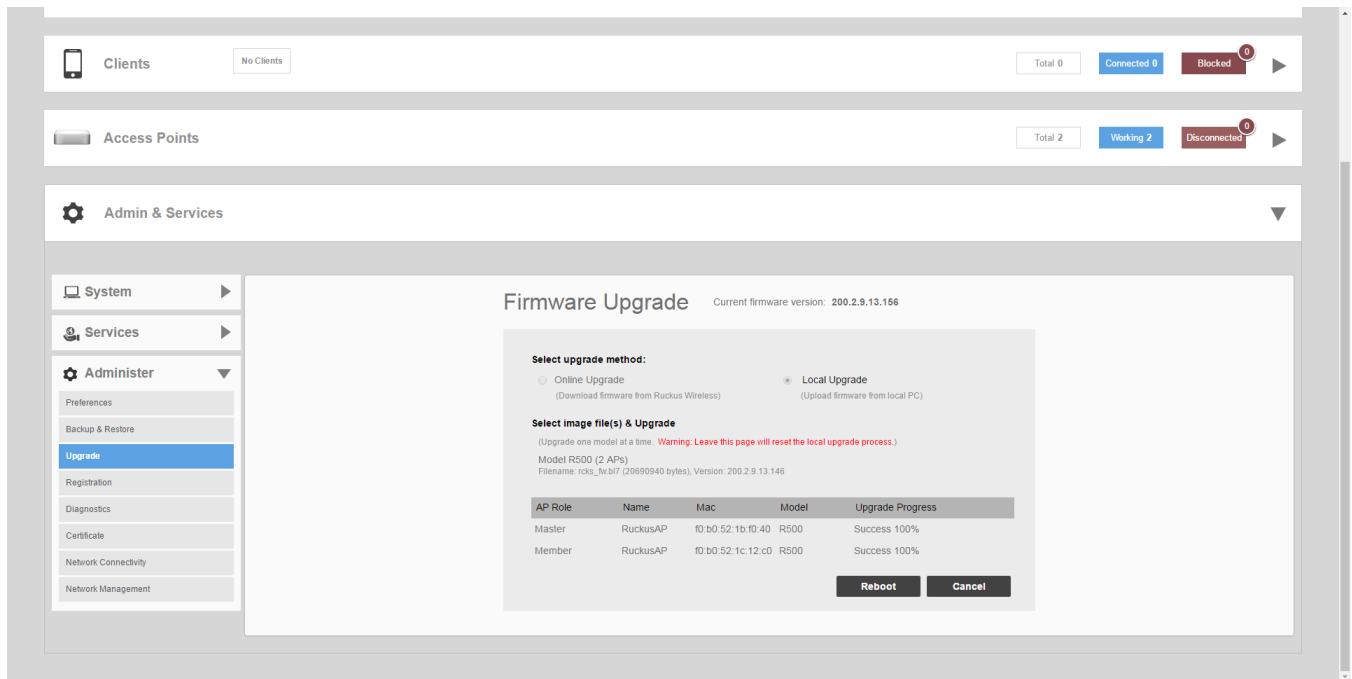FIGURE 345 Successful Online Upgrade



- When all of the APs in the list display "Success 100%" in the **Upgrade Progress** column, click **Reboot**. The **Rebuilding the Unleashed Network** progress screen appears.

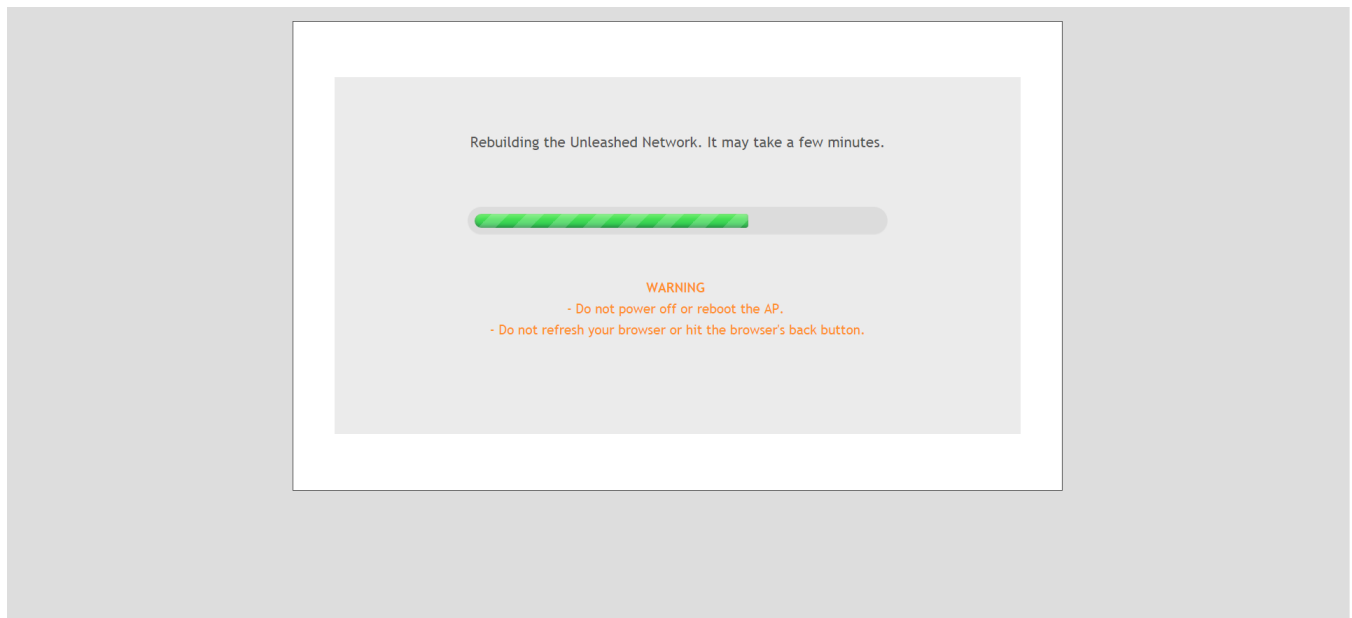FIGURE 346 Rebuilding the Unleashed Network Progress Screen



After the process is completed, you are redirected to the login page.

- Log in and go to **Admin & Services > System > System Info** to confirm the new software build number.


Local Upgrade

Use the Local Upgrade method to upgrade the network using firmware files that you have downloaded from the Ruckus Support site.

To upgrade the Master AP and all connected member APs using the Local Upgrade method, use the following procedure:

1. Go to **Admin & Services > Administer > Upgrade**.

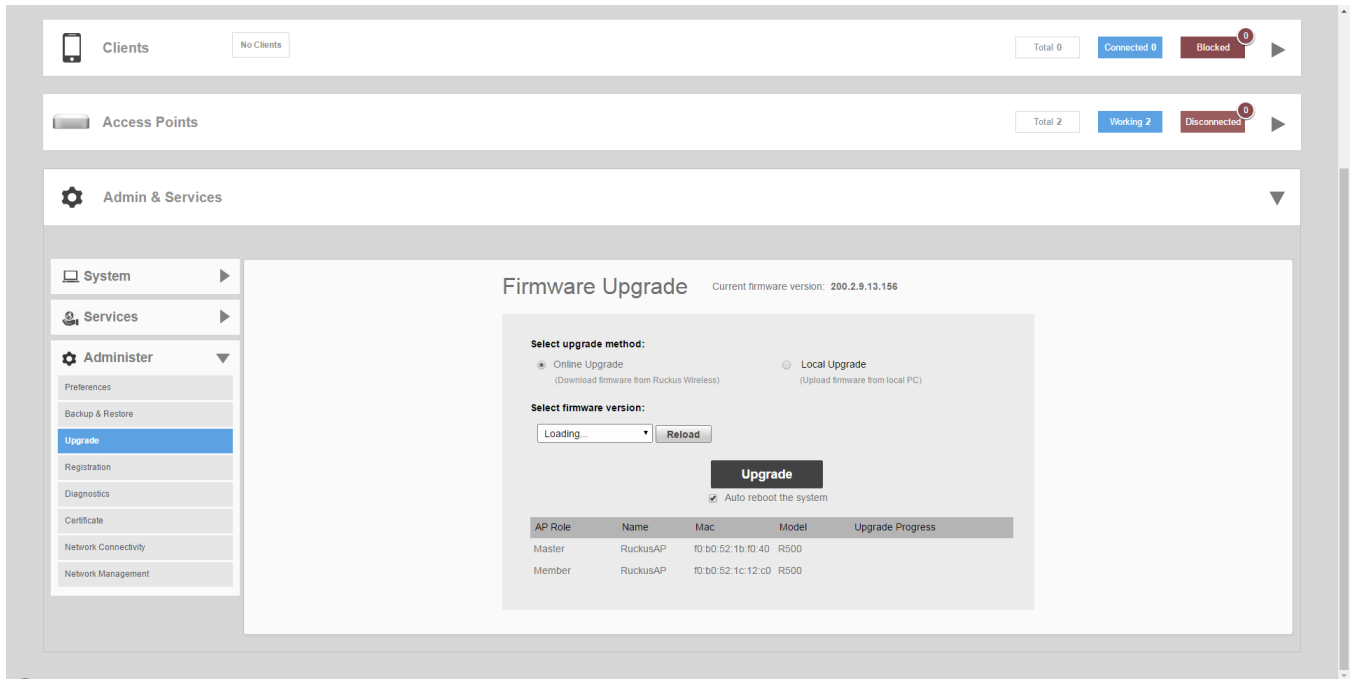FIGURE 347 The Upgrade Page



2. Select **Local Upgrade** as the upgrade method.

3. Click **Browse** to locate the firmware image file on your local computer.

RUCKUS Unleashed will perform a check to make sure it is the proper image for the AP model before proceeding.


NOTE

Each AP model has a different firmware image file that must be loaded onto the Master and then distributed to all member APs of that model. So, for example, if you have a mix of RUCKUS Unleashed R510 and R610 APs, you could upgrade all of the R510s first and then the R610s, or the other way around, but you cannot upgrade both models at once.

NOTE

While the upgrade process will check to make sure you do not try to upgrade an RUCKUS Unleashed AP with the incorrect model firmware, there is no check to ensure that you do not upgrade/downgrade an RUCKUS Unleashed AP to a RUCKUS Solo AP (standalone) firmware image. If you do this, the AP will no longer function as an RUCKUS Unleashed AP until RUCKUS Unleashed firmware is re-loaded onto it.

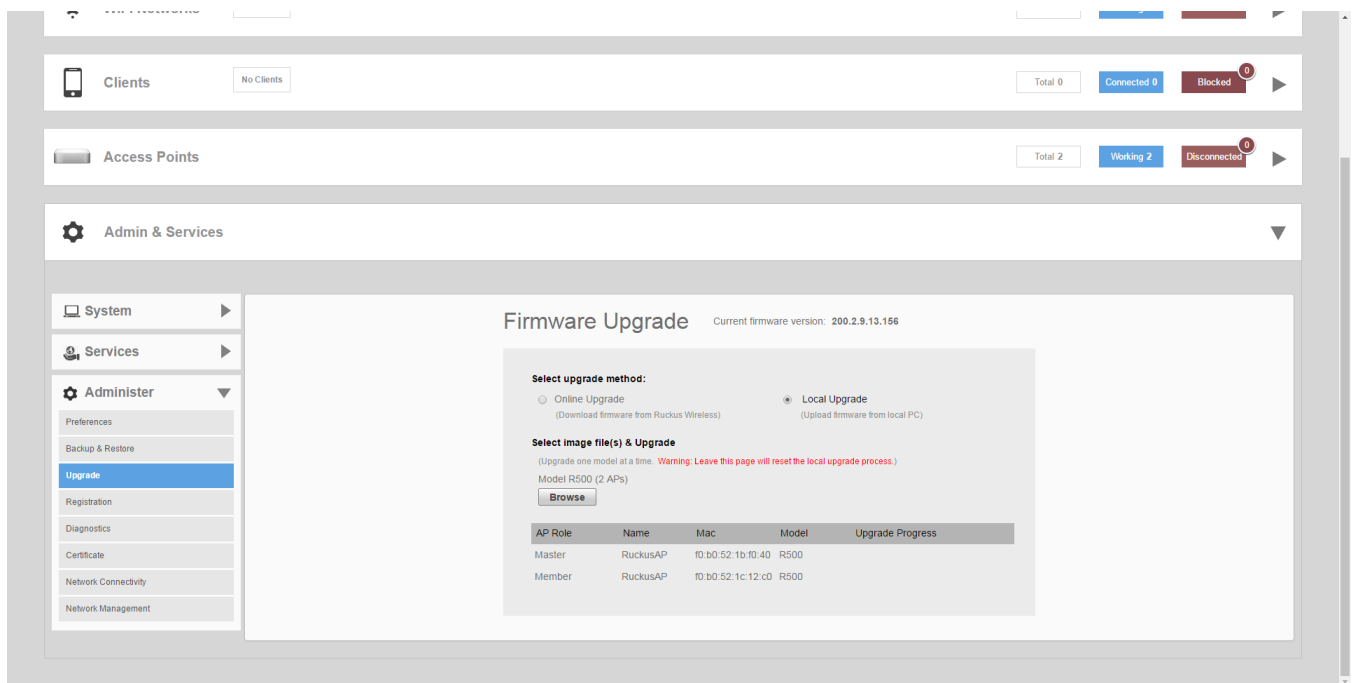
FIGURE 348 Local Upgrade



4. Click **Upgrade** to begin upgrading the APs shown in the list.

- The **Upgrade Progress** column displays the progress for each AP. Once completed, the column will display "Success 100%" next to each AP for which the upgrade was successful.

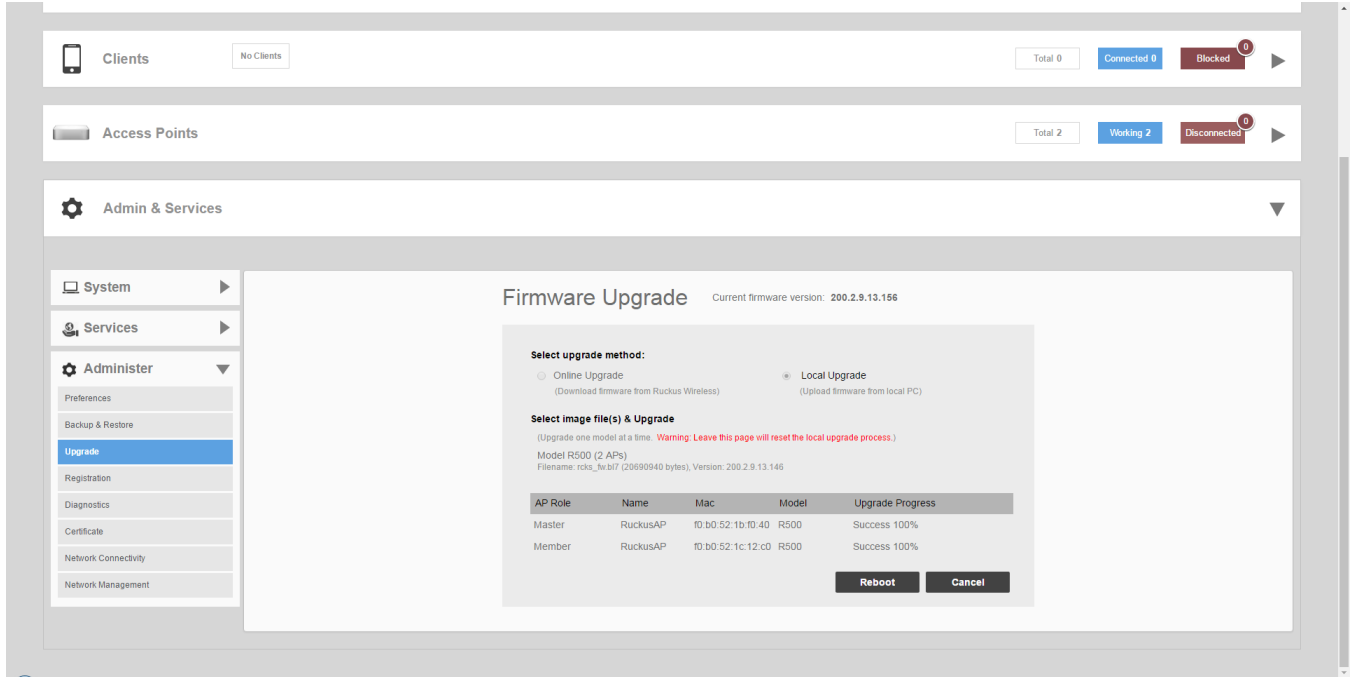
FIGURE 349 Upgrade successful, click Reboot to reboot the APs and apply the new firmware



- Repeat steps 3-5 for any additional AP models.

- When all of the APs in the list are displayed as "Success 100%" in the **Upgrade Progress** column, click **Reboot**. A "Rebuilding the Network" progress screen appears. Wait until the process completes.

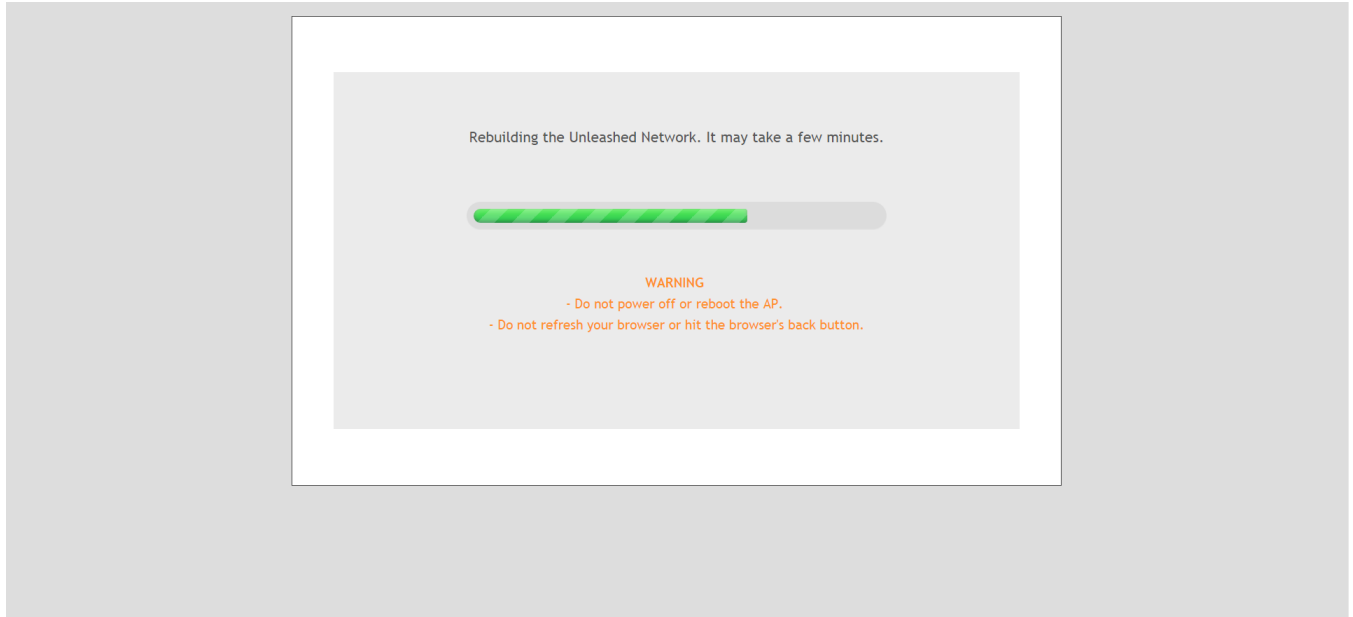FIGURE 350 "Rebuilding the Network" Progress Screen




- Once complete, you will be redirected to the login page.
- Log in and go to **Admin & Services > System > System Info** to confirm the new software build number.

Diagnostics

The *Diagnostics* pages provide options for troubleshooting and diagnostics, including configuration settings for alarms, viewing system event log messages, configuring which debug information is to be collected in log files, and saving the current logs to your local computer.

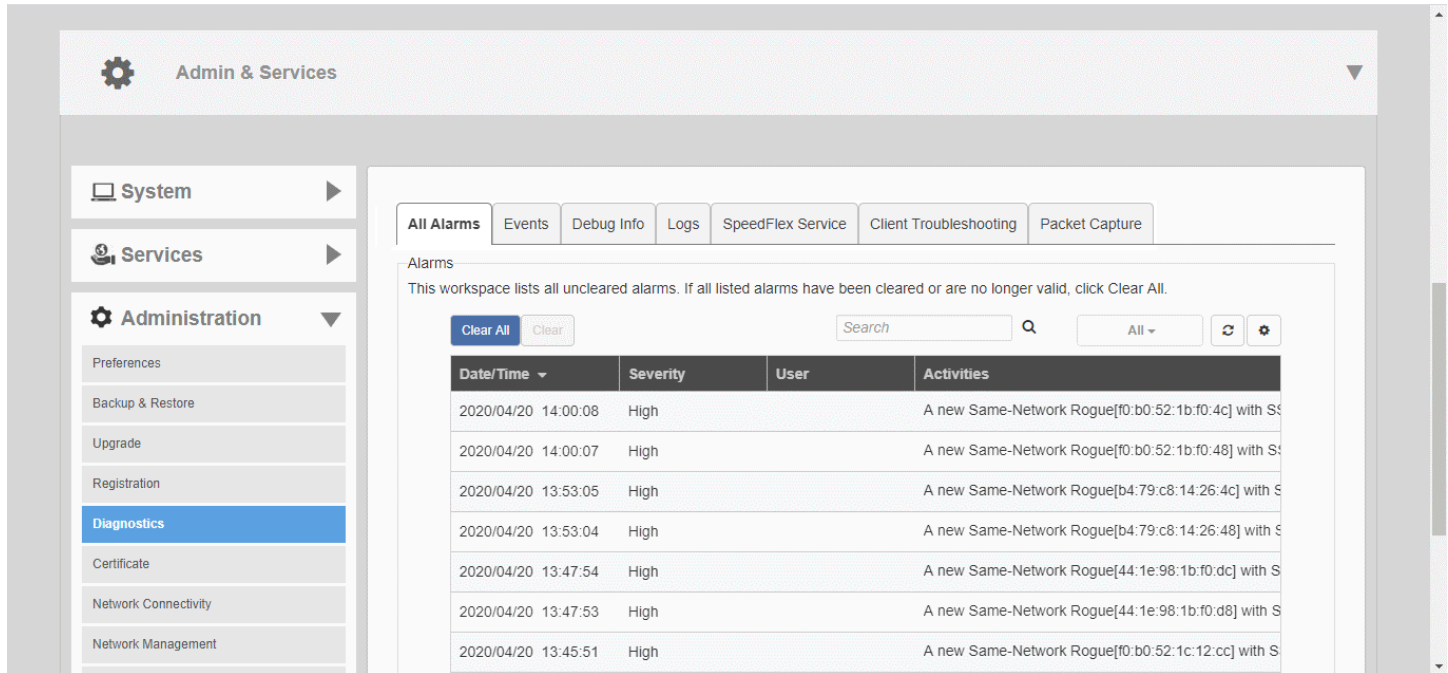FIGURE 351 Configuring Diagnostics Options



Viewing Alarms


The *All Alarms* page displays a list of all recent alarms. Alarms include important events such as when an AP loses contact with the Master AP, a rogue AP is detected, an authentication server becomes unreachable, or when a Master/Member role change is detected.

To view and clear recent alarm messages:

1. Go to **Admin & Services > Administration > Diagnostics > All Alarms**.
2. To delete an alarm event from the list, select it and click **Clear**.

3. Click **Clear All** to clear all alarm events from the list.

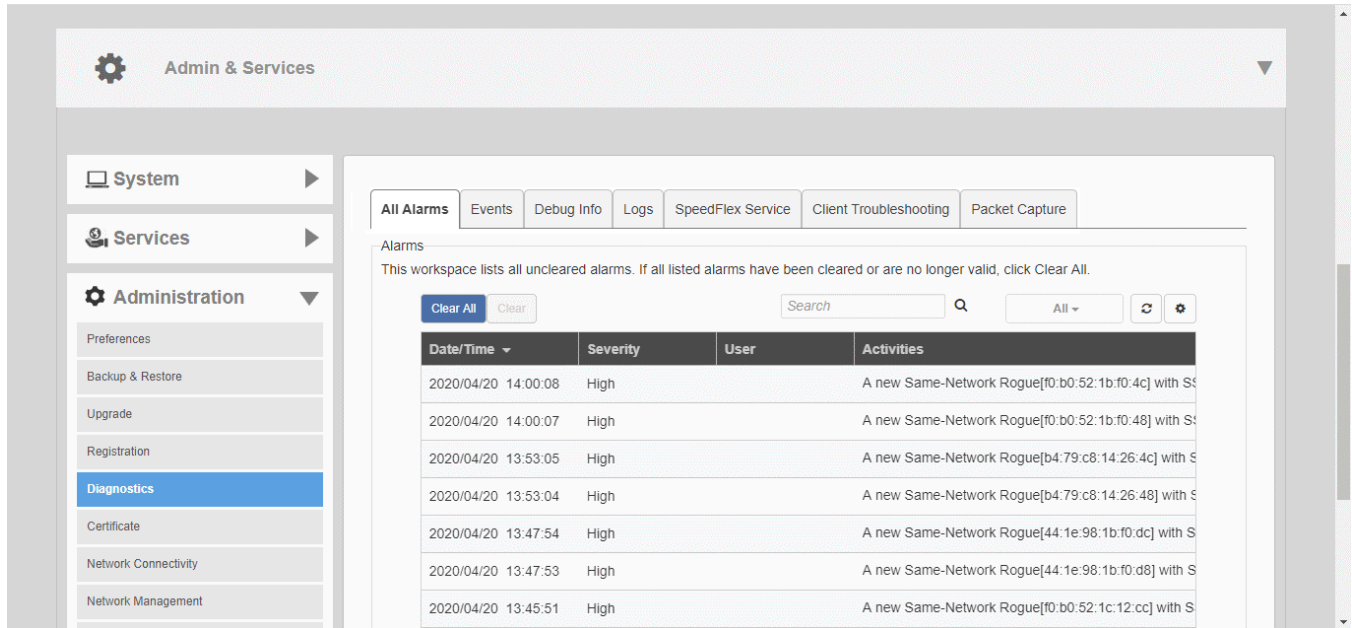FIGURE 352 Viewing a List of Alarm Event Messages



Viewing System Event Messages


The **Diagnostics > Events** page displays the most recent records in the Master AP's internal log file.

Compared to Alarms, Event messages include less critical messages - such as when an AP changes channel, a configuration sync is performed, a new client joins the network, etc.

You can customize the level of events to display in the Events list using the **Event Log Level** setting, as follows:

- **Any:** All event log levels will be displayed.
- **Critical & Warning:** Only events whose log level is "critical" or "warning" level appear.
- **Critical Only:** Only events whose log level is "critical" will appear.

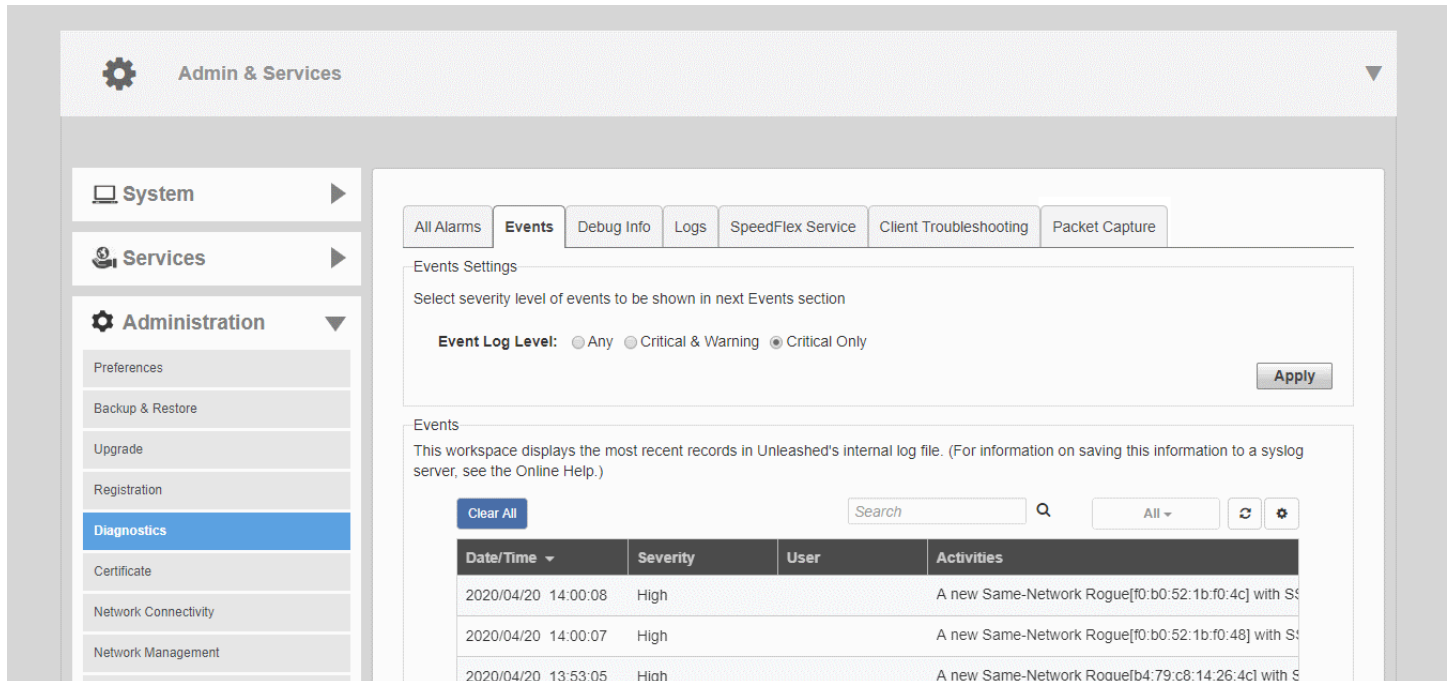FIGURE 353 The Events Page



Configuring Debug Logs

You can use the **Diagnostics > Debug Info** page to configure which debug components to include in log files and on the **Events** page.

NOTE

Check the box **Debug log per APs or clients MAC address** and enter AP/Client info to filter debug output for a specific AP or client.

You can also save the log files using the **Save Debug Info** button. If you request assistance from Ruckus technical support, you may be asked to supply detailed debug information from RUCKUS Unleashed.


Click the **Save Debug Info** button, and then save the file to your computer. You can then email this file to Ruckus Support to assist with troubleshooting.

NOTE

The Master AP's log files also contain all of the member APs' support info.

You can also allow the Master AP to automatically save log files to a specified FTP or TFTP server in the event of a controller process failure. By default, this feature is disabled. When enabled, the Master will send the core, dump, and debug files to an FTP/TFTP server before restart. This information can be very useful in debugging controller reboot issues. To enable this feature, select the check box next to **Enable upload debug logs to remote server**, select **FTP** or **TFTP**, and enter the server address only (for TFTP) or **Host, Port, Username** and **Password** (for FTP).

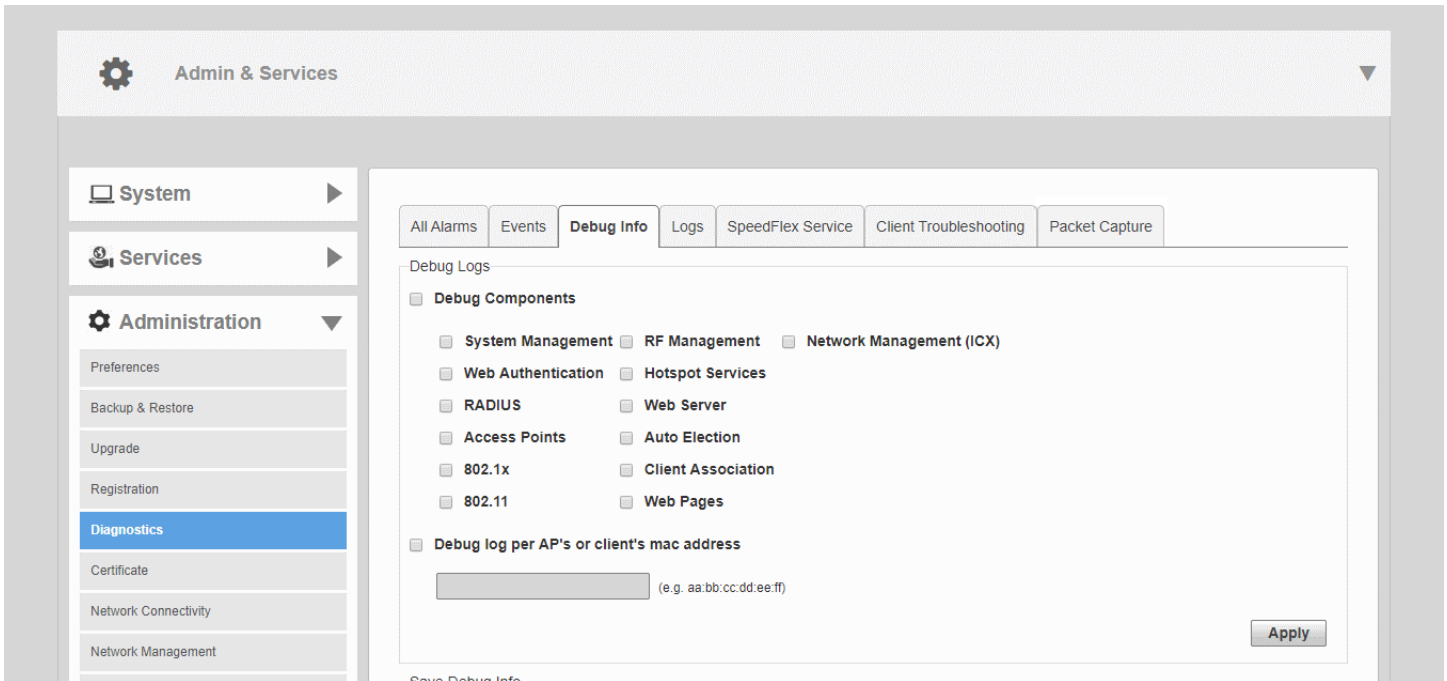
FIGURE 354 The Debug Info Page



Saving System Logs to Your Computer

The **Admin & Services > Administration > Diagnostics > Logs** page provides an option to view the AP's current system logs and an option to save the current log file as a .tar file to a local computer.

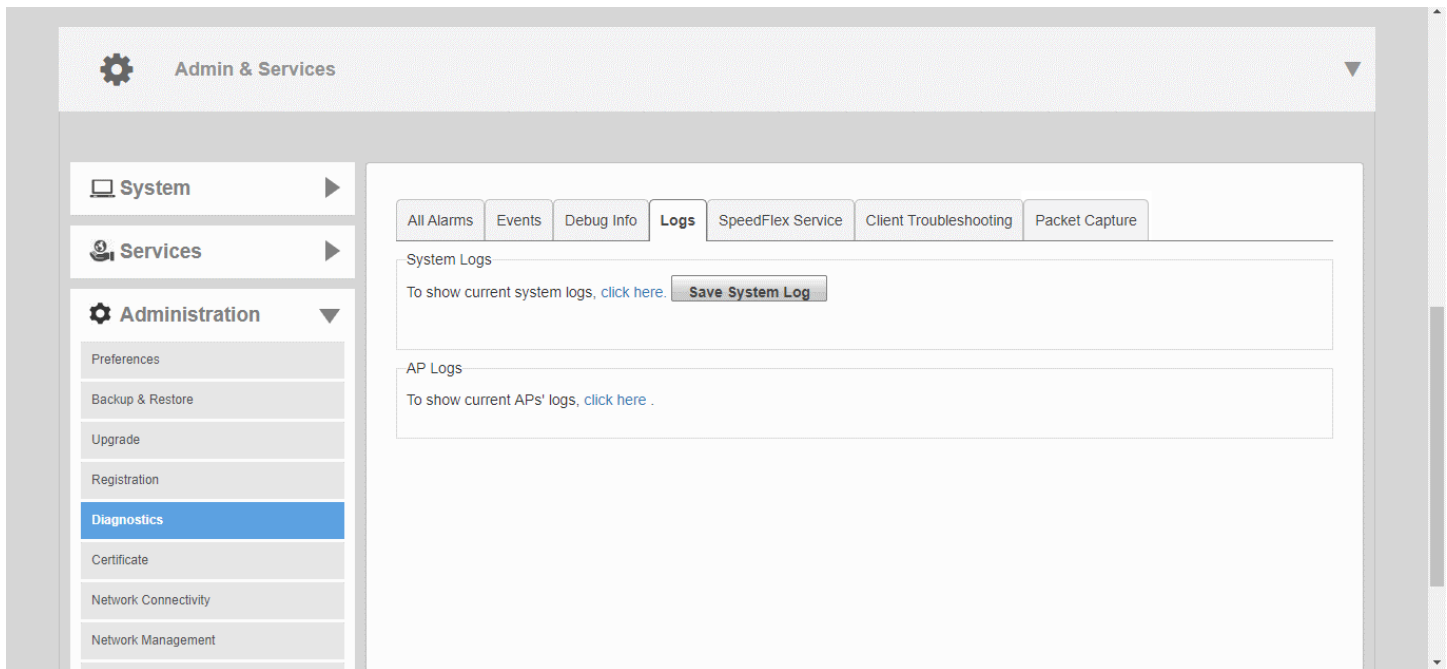FIGURE 355 The Logs Page




Viewing Current AP Logs

Use the AP Logs link to display a list of recent AP activity logs from the web interface and save the log file for troubleshooting analysis.

1. Go to **Admin & Services > Administration > Diagnostics > Logs**, and locate the AP Logs section.
2. Click the **“Click Here”** link next to **“To show current APs' logs...”** to view the log contents.

3. To save, select the text in the text box and copy/paste it into a text editor.

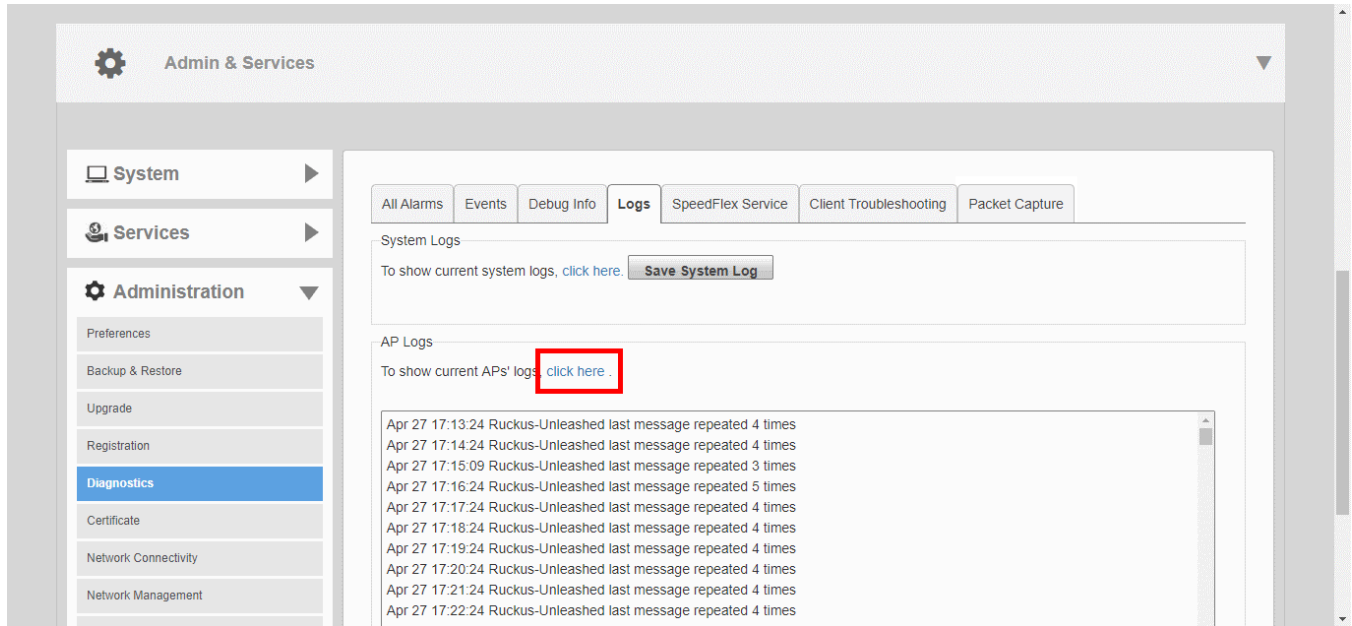FIGURE 356 Displaying Current AP Logs




SpeedFlex Service

SpeedFlex service (enabled by default) can be disabled to prevent mobile or web clients from performing a SpeedFlex performance test.

For more information on the SpeedFlex performance testing tool, see [Running a SpeedFlex Performance Test on a Wireless Client](#) on page 329.

To disable SpeedFlex, clear the **Enable SpeedFlex Service** option and click **Apply**.

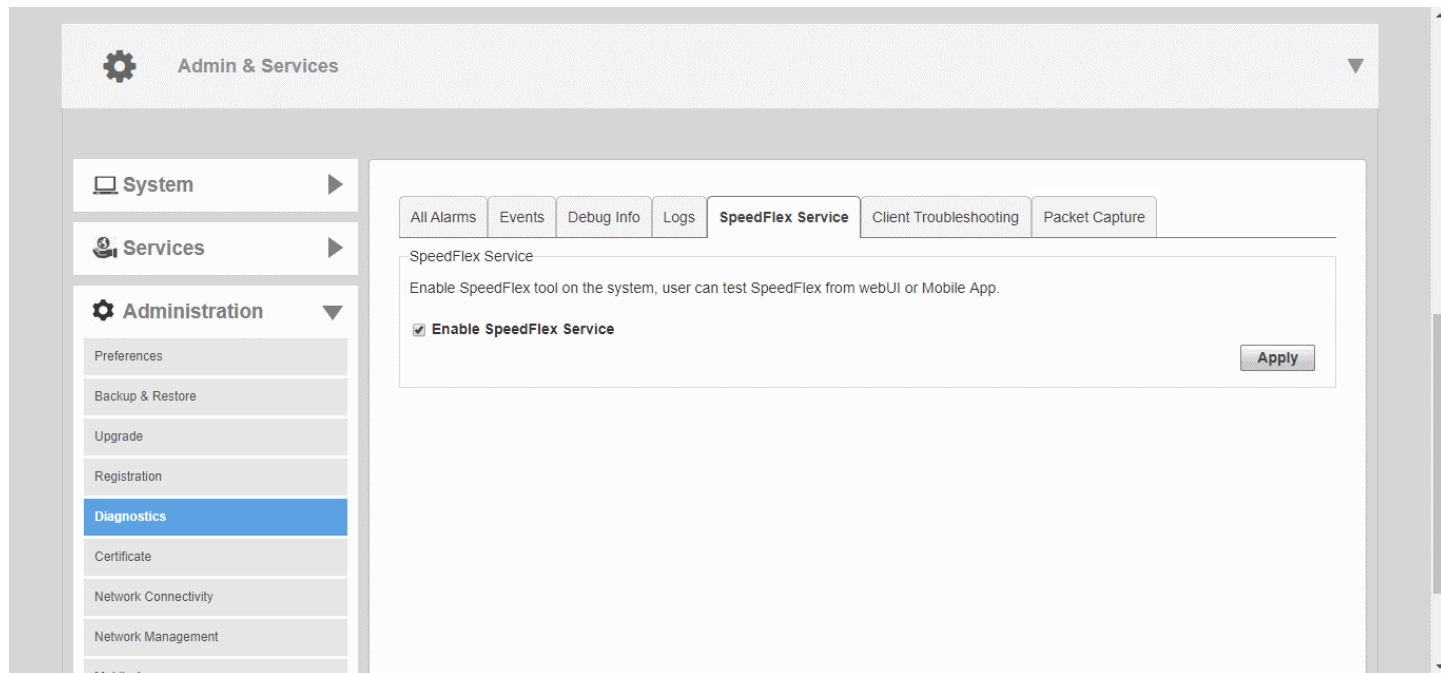FIGURE 357 Enabling or Disabling SpeedFlex Service



Client Connection Troubleshooting

The client connectivity trace feature is designed to help customers diagnose wireless client connection issues to determine why a client fails to connect to the wireless network.

To perform a client connectivity trace:

1. Open the **Clients** section, and select the problematic client from the list.

NOTE

Alternatively, go to **Admin & Services > Administration > Diagnostics > Client Troubleshooting**, and locate the **Client Connection Logs** section.


NOTE

As of release 200.8, client connection traces can be performed on clients connected to the following WLAN types:

- WPA2
- Web Auth
- Hotspot
- Guest Access

2. Click **Troubleshooting**.

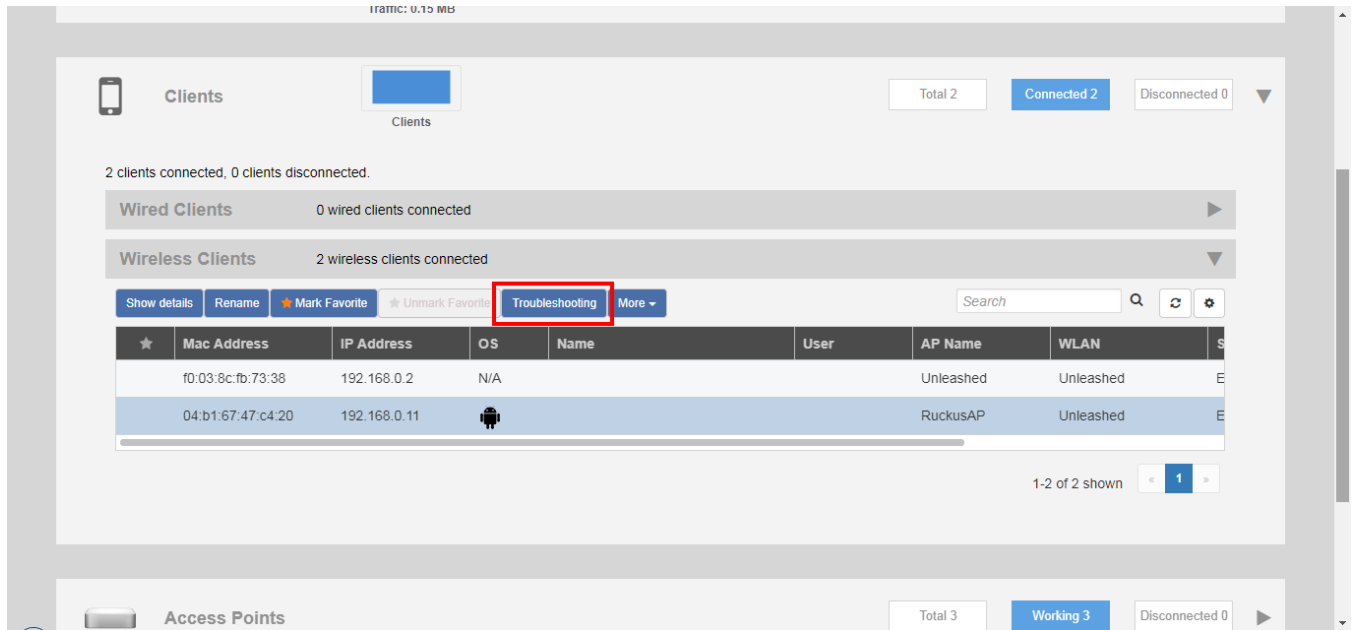FIGURE 358 Click **Troubleshooting** to perform client connectivity trace



The *Troubleshooting* screen appears.

3. In *Connectivity Trace*, click the **Start** button to begin. The association trace begins. The page refreshes to display detailed results.

FIGURE 359 Click Start to begin connectivity trace


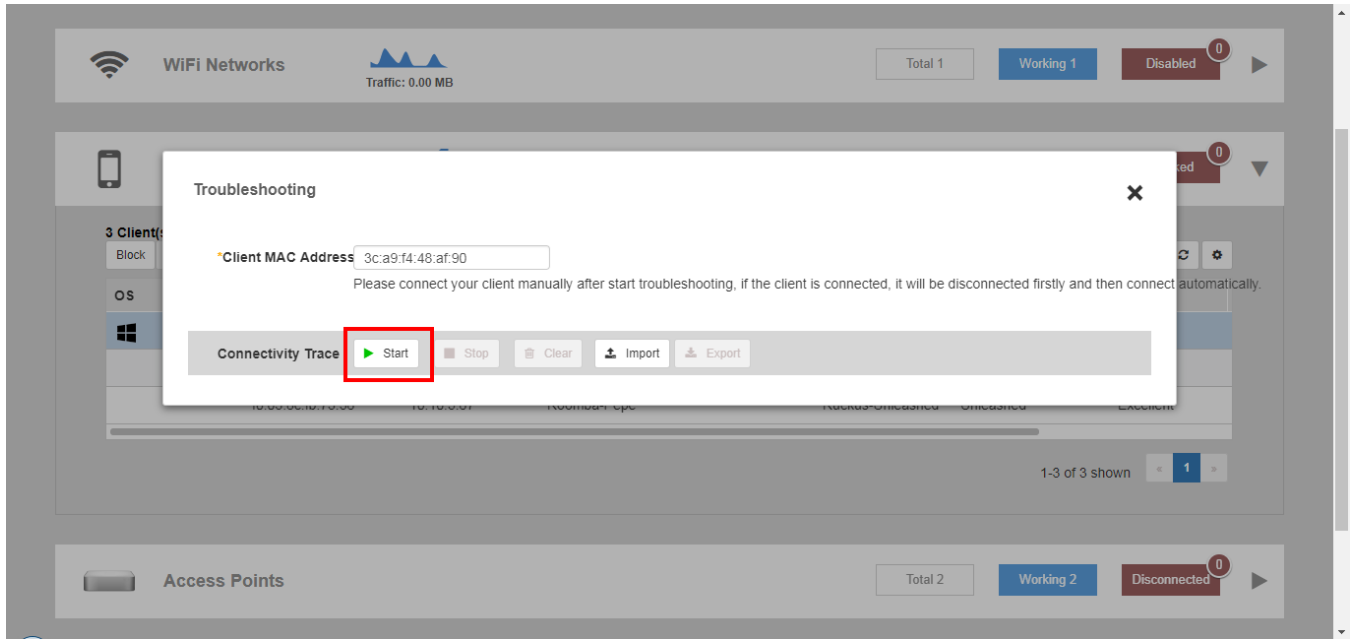


FIGURE 360 Connectivity trace in progress

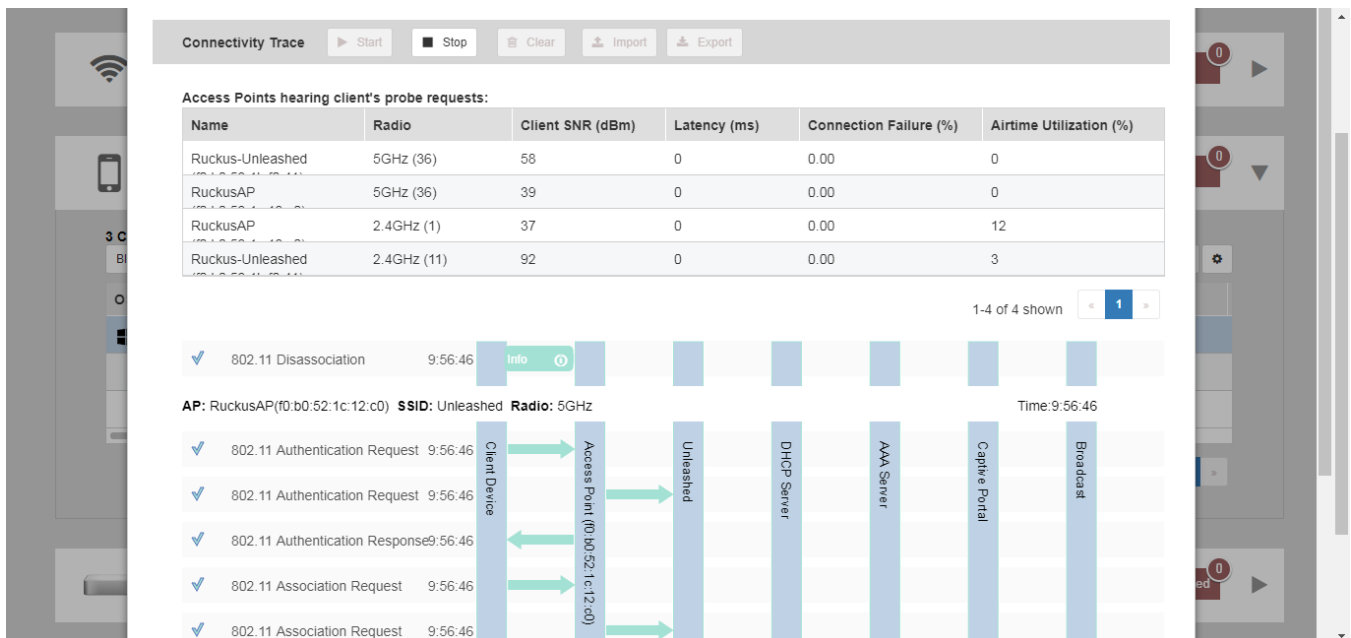

4. Examine the results to isolate the problematic step in the process.
5. If needed, you can download the client connectivity data to a file, which can later be imported for analysis. Click **Export** to download the data file and save it to your local computer. Click **Import** to import a previously exported file back into Unleashed.

Saving Client Connection Logs


Saving client connection logs may be helpful in troubleshooting client connectivity issues.

RUCKUS Unleashed provides two options for saving client connection logs - download the current log file immediately from the web interface, or configure RUCKUS Unleashed to send the logs to a syslog server automatically. For information on delivering logs to syslog, see *Customizing the Current Log Settings*.

To download and save current client connection logs:

1. Go to **Admin & Services > Administration > Diagnostics > Client Troubleshooting**, and locate the *Client Connection Logs* section.
2. In "To save client connection logs. [click here](#)," click the **click here** link.
3. Save the file to your local computer.

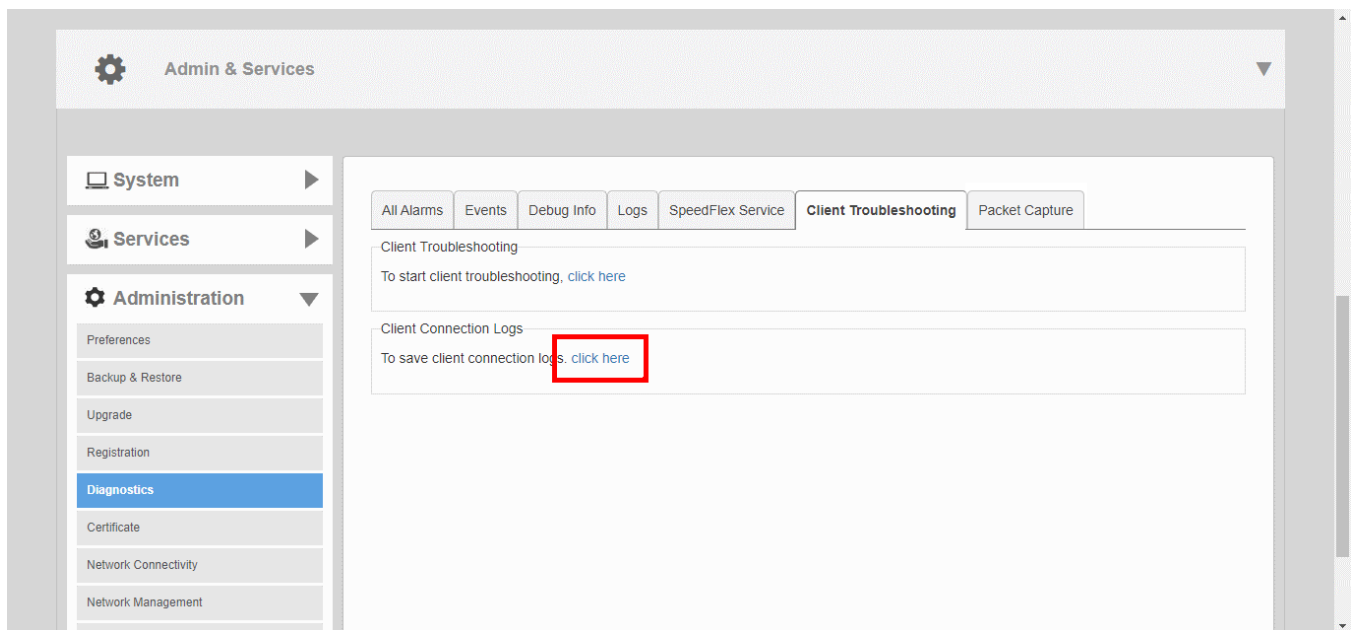FIGURE 361 Saving Client Connection Logs to a Local Computer




Capturing Remote Packets

Remote packet capture puts one or more APs into packet sniffer mode, allowing them to capture the wireless packets. The packets are either saved to local files or streamed to packet inspection program such as Wireshark for later analysis.

1. Go to **Admin & Services > Administration > Diagnostics > Packet Capture**.
2. For **Radio**, select **2.4 GHz** or **5 GHz**.

3. Under **Currently Managed APs**, select APs from the list and click **Add to Capture APs**.

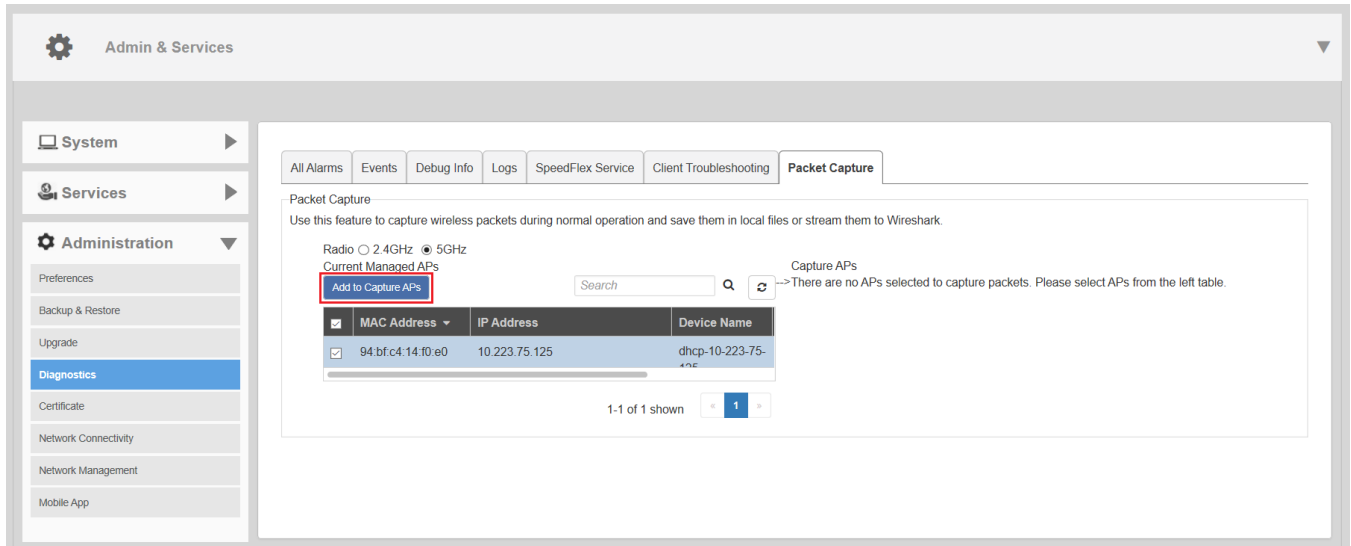
FIGURE 362 Adding Currently Managed APs to Capture APs



The selected currently managed APs are moved to the **Capture APs** table.

4. Select **Local Mode** or **Streaming Mode** as the capture mode.
 - To capture a limited snapshot on each AP, select **Local Mode**.
 - a. Click **Start** to begin capturing packets.
 - b. Click **Stop** to end the capture.
 - c. Click **Save** to save the packet capture to a local file.
 - To stream the captured packets to Wireshark, select **Streaming Mode**.
 - a. Click **Start** to launch Wireshark.
 - b. Select **Capture Options**. Under **Capture: Interface**, select **Remote**. A **Remote Interface** dialog box is displayed.
 - c. Under **Host**, enter the IP address of the AP you want to view. Leave the **Port** field empty and click **OK**.
The remote host interface list on the right side is updated.
 - d. Select **wifi0** or **wifi1** from the list, depending on whether you are streaming on the 2.4-GHz or 5-GHz radio.

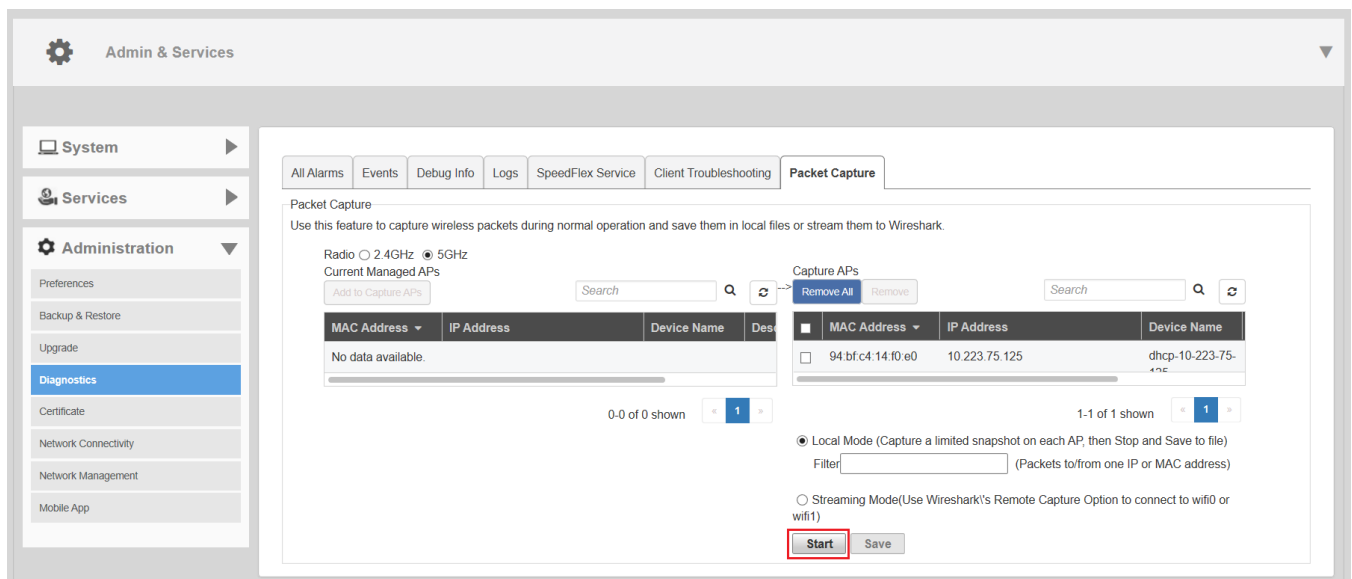FIGURE 363 Selecting the Capture Mode



Working with SSL Certificates

SSL certificates enable device or user identification, as well as secure communications.

Unleashed captive portal services and the web UI use an SSL certificate when establishing HTTPS connections.

The default SSL certificate that is installed on the Unleashed AP is self-signed and therefore not trusted by any web browser. This is the reason why the SSL security warnings appear when establishing an HTTPS connection to the Unleashed web interface.

To eliminate the security warnings, administrators may purchase a trusted SSL certificate from a public Certificate Authority (CA) and install it on the Unleashed Master AP.

The basic certificate installation process is as follows:

1. Generate a Certificate Signing Request (CSR) with the required requester information.
2. Submit the CSR to a public CA for signing.

Configuring Admin & Services Settings

Administration Settings

3. Receive a signed certificate from the CA.
4. Import the signed certificate into Unleashed.

Generating a Certificate Signing Request


If you do not have an existing SSL certificate, you will need to create a certificate signing request (CSR) file and send it to a certificate authority (CA) to purchase an SSL certificate.

The Unleashed web interface provides a form that you can use to create the CSR file. Fields with an asterisk (*) are required entries. Those without an asterisk are optional.

The **Admin & Services > Administer > Certificate** pages allow you to perform the following actions:

- Generate a certificate signing request.
- Import a signed certificate.
- View the currently installed certificate.
- Advanced Options link displays additional options
- Restore the default private key and certificate.
- Backup private key and certificate.
- Generate a new private key.

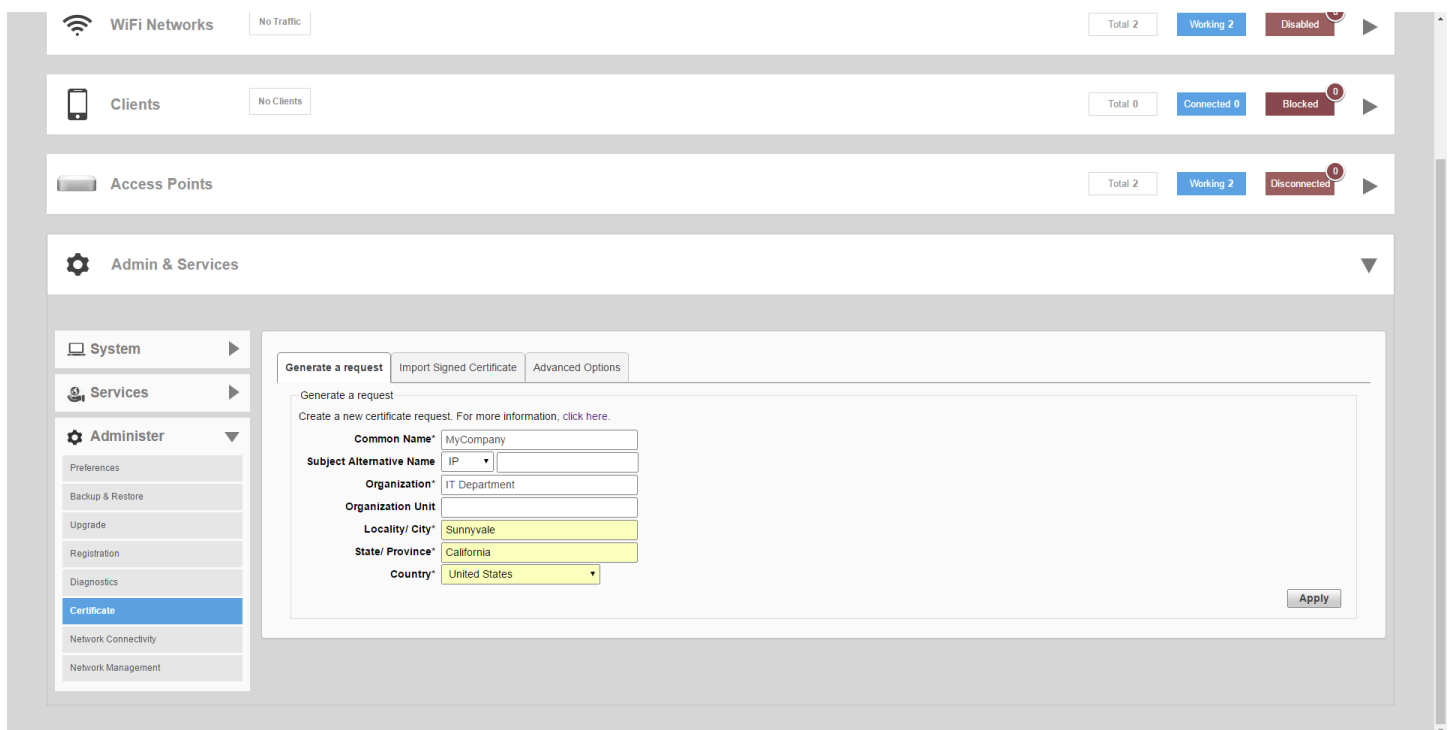FIGURE 364 SSL certificate screens



Creating a Certificate Request File

To create a certificate request file (CSR):

1. Go to **Admin & Services > Administer > Certificate**.
2. In the **Generate a Request** form, complete the following options:
 - **Common Name***: Enter your company's Fully Qualified Domain Name (FQDN). Typically, this will be "unleashed.[your company].com". You can also enter the Unleashed Master AP's IP address (e.g., "192.168.0.2"), or a familiar name by which the Unleashed web UI will be accessed in your browser (e.g., by device name such as "Unleashed").


NOTE

Ruckus recommends using the FQDN as the Common Name if possible. If your network does not have a DNS server, you may use the Unleashed Master AP's IP address instead. However, note that some CA's may not allow this.

- If you wish to access the Unleashed web UI from a public network via the internet you must use a Fully Qualified Domain Name (FQDN).
 - In all cases when using a familiar name there must be an appropriate private or public DNS entry to resolve the familiar name to the Unleashed AP's IP address.
 - If you use a familiar name, this name will be shown in the browser's URL whenever accessing the Unleashed web interfaces (i.e., administrator interface, standard captive portal and guest access captive portal).
- **Subject Alternative Name**: (Optional) Select either IP or DNS from the menu and enter either alternative IP addresses or alternate DNS names.
 - **Organization***: Type the complete legal name of your organization. Do not abbreviate your organization name.
 - **Organization Unit**: Division or department of the organization (for example, Network Management).
 - **Locality/City***: Type the city where your organization is legally located (for example, Sunnyvale).
 - **State/Province***: Type the state or province where your organization is legally located (for example, California). Do not abbreviate the state or province name.
 - **Country***: Select your country or region from the pull-down menu.
3. Click **Apply**. A dialog box appears and prompts you to save the CSR file (myreq.csr) that you have just created.

- Save the file to your computer.

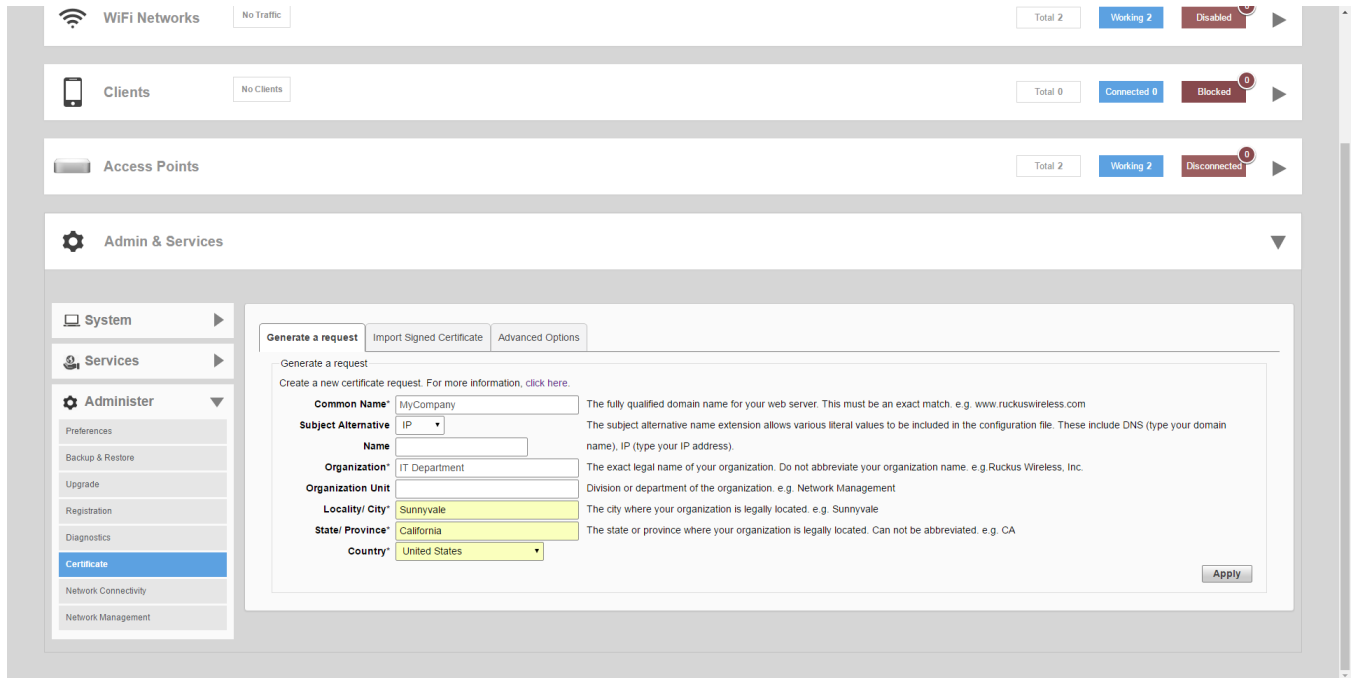FIGURE 365 Generating a CSR file



- Go to a certificate authority's web site and follow the instructions for purchasing an SSL certificate.
- When you are prompted for the certificate signing request, copy and paste the content of the text file that you saved to your local computer, and then complete the certificate purchase.

After the certificate authority approves your CSR, you will receive the SSL certificate via email. The following is an example of a signed certificate that you will receive from a certificate authority:

```
-----BEGIN CERTIFICATE-----
MIIFVjCCBD6gAwIBAgIQLfaGuqKukMumWhbVf5v4vDANBgkqhkiG9w0B
AQUFADCBSDELMAkGA1UEBhMCVVMxFTAVBgNVBAs0TD1Z1cm1TaWduLCBJ
bmMuMR8wHQYDVQQLBgEFBQcBAQRtMGswJAYIKwYBBQUHMAGGGGh0dHA6
Ly9vY3NwLnZ1cm1zaWduLmNvbTBDEggrBgEFBQcwAoY3aHR0cDovL1NW
U1NlY3VyZS1haWEudmVyaXNpZ24uY29tL1NWU1NlY3VyZTIwMDUtYWlh
LmNlcm1jBuBgggrBgEFBQcBDARiMGChXqBcMFowWDBWFglpbWFNzS9naWYw
ITAFMacGBSsOAwIaBBRLa7kolgYMu9BSOJsprEshiyEFGDAmFiRodHRw
Oi8vbG9nb3Y2ZXJpc2lnbi5jb20vZnNsb2dvMS5naWYwDQYJKoZIhvcN
AQEFBQADggEBAI/S2dmm/kgPeVALsIHmx-
751o4oq8+fwehRDBmQDaKiBvVXGZ5ZMnoc3DMYDjx0SrI9lkPsn223CV
3UVBZo385g1T4iKwXgcQ7WF6QcUYOE6HK+4ZGcHermFf3fv3C1-
FoCjq+zEu8ZboUf3fWbGprGRA+MR/dDI1dTptSUG7/zWjX05jC//
0pykSlDw/q8hgO8kq30S8JzCwkqrXJfQ050N4TJtgb/
YC4gwH3BuB9wqprjUahTiK1V1-
ju9bHB+bFkMWIIMIXc1Js62Jc1WzwFgaGUS2DLE8xICQ3wU1ez8RUPGn
wSxAYtZ2N7zDxYDP2tEi05j2cXY708mR3ni0C30=
-----END CERTIFICATE-----
```

- Copy the content of the signed certificate, and then paste it into a text file. Save the file.

You may now import the signed certificate into Unleashed. Refer to [Importing an SSL Certificate](#) on page 455 for instructions.

Importing an SSL Certificate

After you receive the signed certificate from the Certificate Authority, you must import it into Unleashed.

To import a signed certificate:


1. Click the **Browse** button and select the file that contains the certificate (in PEM format) to upload it.
2. If there are no intermediate CA certificates, then click the **Import** button to install the uploaded certificate.

NOTE

If the certificate does not match the currently installed private key you will be prompted to upload the correct private key.

3. If your Unleashed certificate was issued by an intermediate CA, then you must also import the intermediate CA's certificate (as well as all other intermediate CA certificates in the path to the root CA). In that event, you would receive intermediate CA certificate download instructions from the certificate vendor. To import an intermediate certificate:
 - a) After selecting the end certificate, click on the intermediate certificate import option.
 - b) Click the **Import** button to display the **Import Intermediate Certificates** form.
 - c) Click the **Browse** button and select the file containing the intermediate certificate (PEM format) to upload it.
 - d) If there are no additional intermediate certificates, click the **Import** button to install the uploaded certificate.
4. Alternatively, you can simplify this process by appending the intermediate CA certificate(s) to the Unleashed certificate file. Then, you just need to import a single file. The intermediate certificate(s) will be imported automatically. In this case, you will see multiple ---BEGIN CERTIFICATE--- and ---END CERTIFICATE--- pairs in the file.

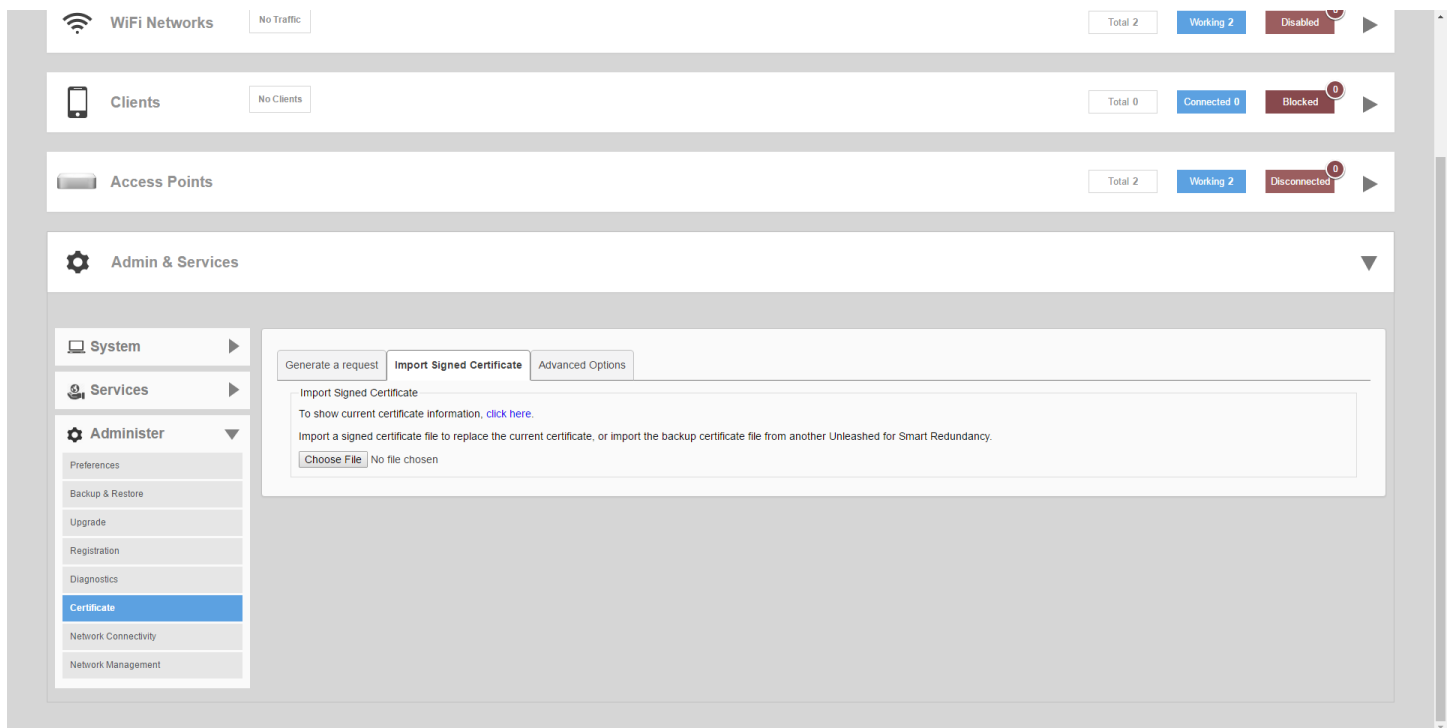FIGURE 366 Import signed certificate



SSL Certificate Advanced Options

The **Advanced Options** section allows you to perform additional certificate management functions.

These include the following:


- **Restore to Default Certificate/Private Key:** This deletes any certificate and private key that has been imported, and restores the factory default certificate/private key after restore and reboot.

NOTE

Restoring Unleashed to factory default state does not remove imported SSL certificates. Use this option to remove any imported certificates and revert to the factory default state.

- **Back Up Private Key:** Back up the current private key by downloading it for disaster recovery or for use on another Unleashed AP. If your Unleashed AP is replaced due to an RMA, you will need to restore the private key if you have installed a public certificate. Ensure that the private key is kept secure because the security of your SSL communications depends on it.
- **Back up certificates for Smart Redundancy:** If you have more than one Unleashed AP, you can install the same SSL certificate/private key pair on both devices. In this way, you can access the shared virtual management interface advertised in DNS for the same FQDN without seeing the security warning.
- **Back Up Trusted CA Information:** Use this option to apply the same trusted CA from this Unleashed AP to peer Unleashed APs. The file is output as a .tar.gz file containing all trusted Certificate Authority information currently installed on this Unleashed AP. This compressed file must be decompressed and the files imported into the peer Unleashed AP using the Add a Trusted CA feature described below.
- **Re-Generate Private Key of a Specific Key Length:** Use this option if your previous private key has been compromised or you need to use a stronger key (either 1024 or 2048 bits). Note that a new certificate must be generated and installed afterwards.
- **Add a Trusted CA:** Use this option to import CA information. Click the **Click Here** link to display all of the current trusted CA information, with each trusted CA separated by a string of number symbols ("#####"). Options include:
 - **Add a new trusted CA:** Import a single CA file.
 - **Cover all trusted CA:** Use the new trusted CA file to cover all existing trusted CA files

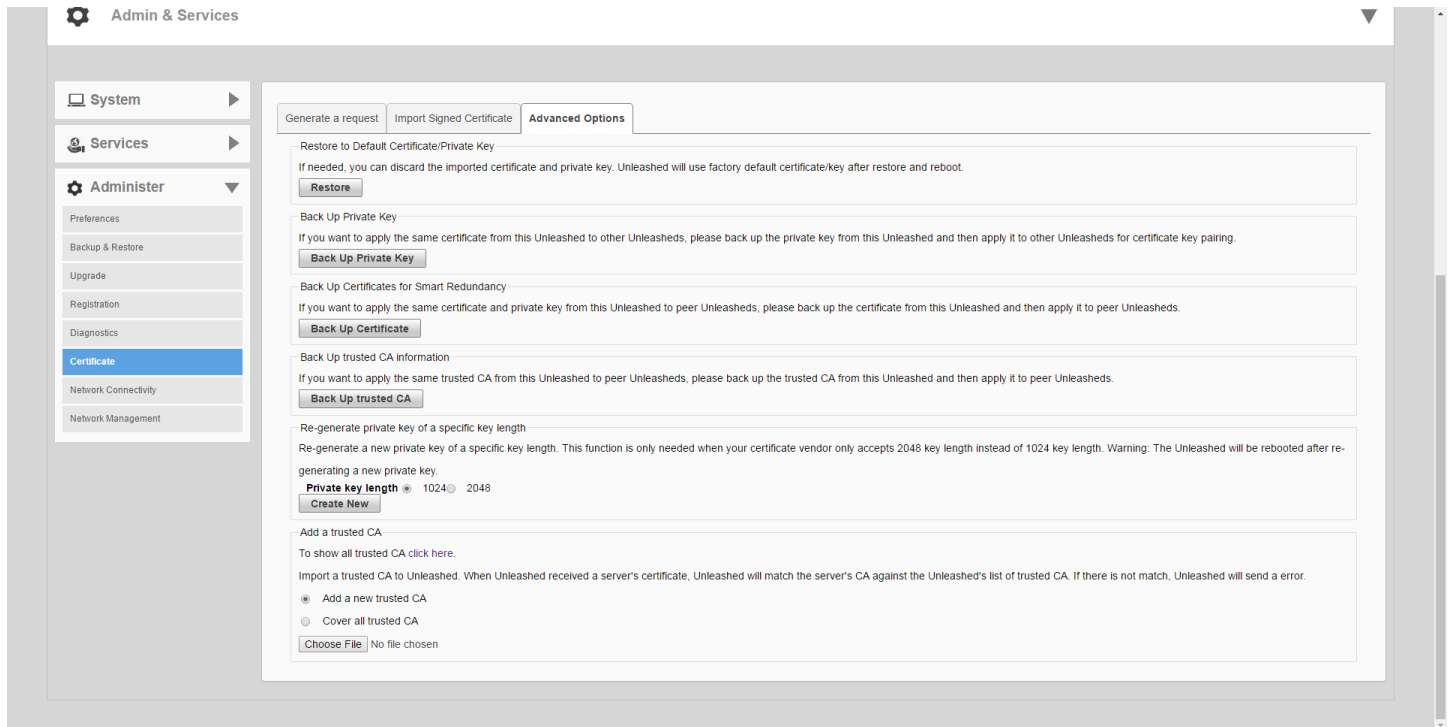
FIGURE 367 SSL Certificate Advanced Options



Testing Network Connectivity

The Unleashed web interface provides two common tools used to diagnose connectivity issues. The Network Connectivity tools - **Ping** and **Traceroute** - can be accessed from the **Admin & Services > Administer > Network Connectivity** page.

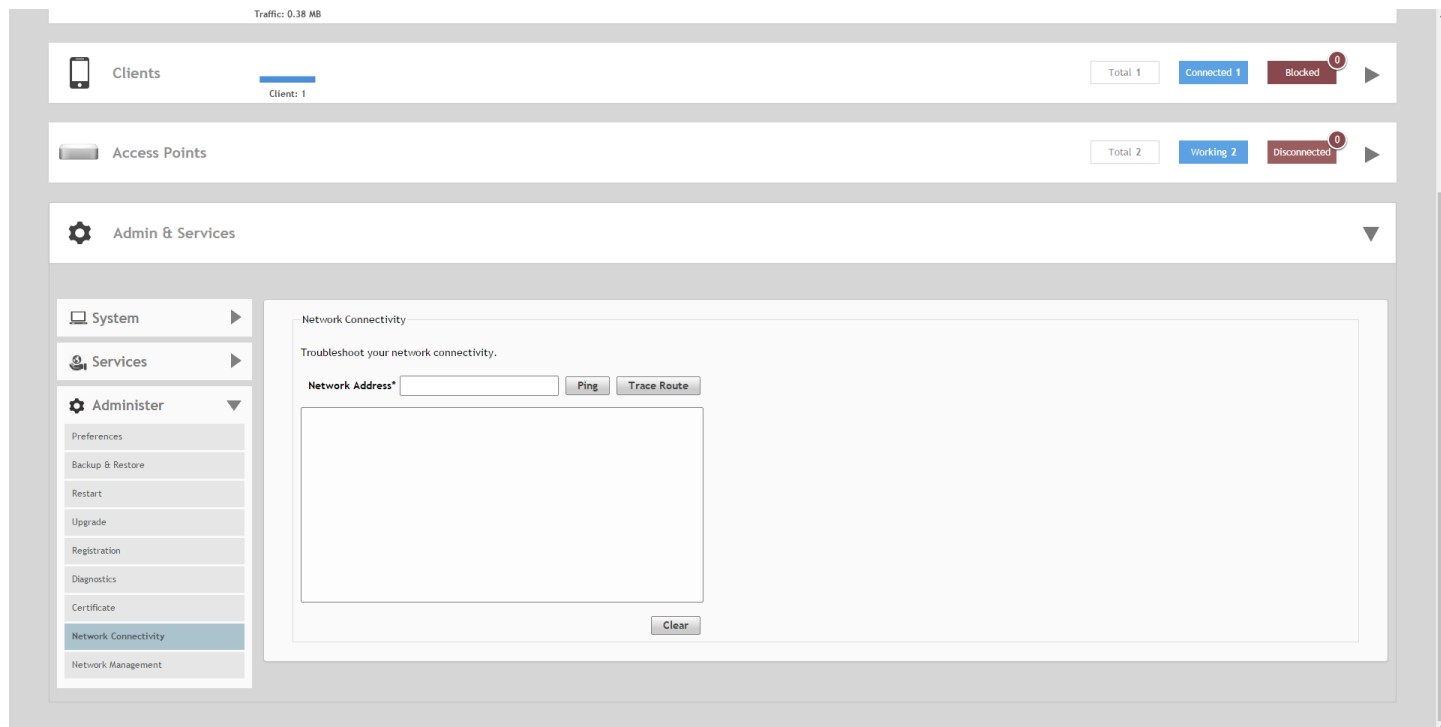FIGURE 368 Using Ping and Traceroute to test network connectivity



Network Management

Unleashed provides support for Simple Network Management Protocol (SNMP v2 and v3), which allows you to query system information such as system status, AP status, AP Ethernet port status, etc.

You can also enable SNMP traps to receive immediate notifications for possible AP and client issues.

NOTE

By default, all traps are disabled. If you need to enable a trap, you can do so using an SNMP SET command under the scalar MIB nodes: `ruckusUnleashedEventTrapSwitchCmd`.

The procedure for enabling the internal SNMP agent depends on whether your network is using SNMPv2 or SNMPv3. SNMPv3 mainly provides security enhancements over the earlier version, and therefore requires you to enter authorization passwords and encryption settings instead of simple clear text community strings.

Both SNMPv2 and SNMPv3 can be enabled at the same time. The SNMPv3 framework provides backward compatibility for SNMPv1 and SNMPv2c management applications so that existing management applications can still be used to manage Unleashed with SNMPv3 enabled.

NOTE

For a list of the MIB variables that you can get and set using SNMP, check the related SNMP documentation on the Ruckus Support website at <http://support.ruckuswireless.com/documents>.


SNMPv2

If your network uses SNMPv2:

1. Go to **Admin & Services > Administer > Network Management**.

2. On the **SNMPv2 Agent** tab, select the **Enable SNMP Agent** check box.
3. Enter the following information:
 - In **System Contact**, type your email address (optional).
 - In **System Location**, type the location of the ZoneDirector device (optional).
 - In **SNMP RO community** (required), set the read-only community string. Applications that send SNMP Get-Requests to Unleashed (to retrieve information) will need to send this string along with the request before they will be allowed access. The default value is public.
 - In **SNMP RW community** (required), set the read-write community string. Applications that send SNMP Set-Requests to Unleashed (to set certain SNMP MIB variables) will need to send this string along with the request before they will be allowed access. The default value is private.
4. Click **Apply** to save your changes.

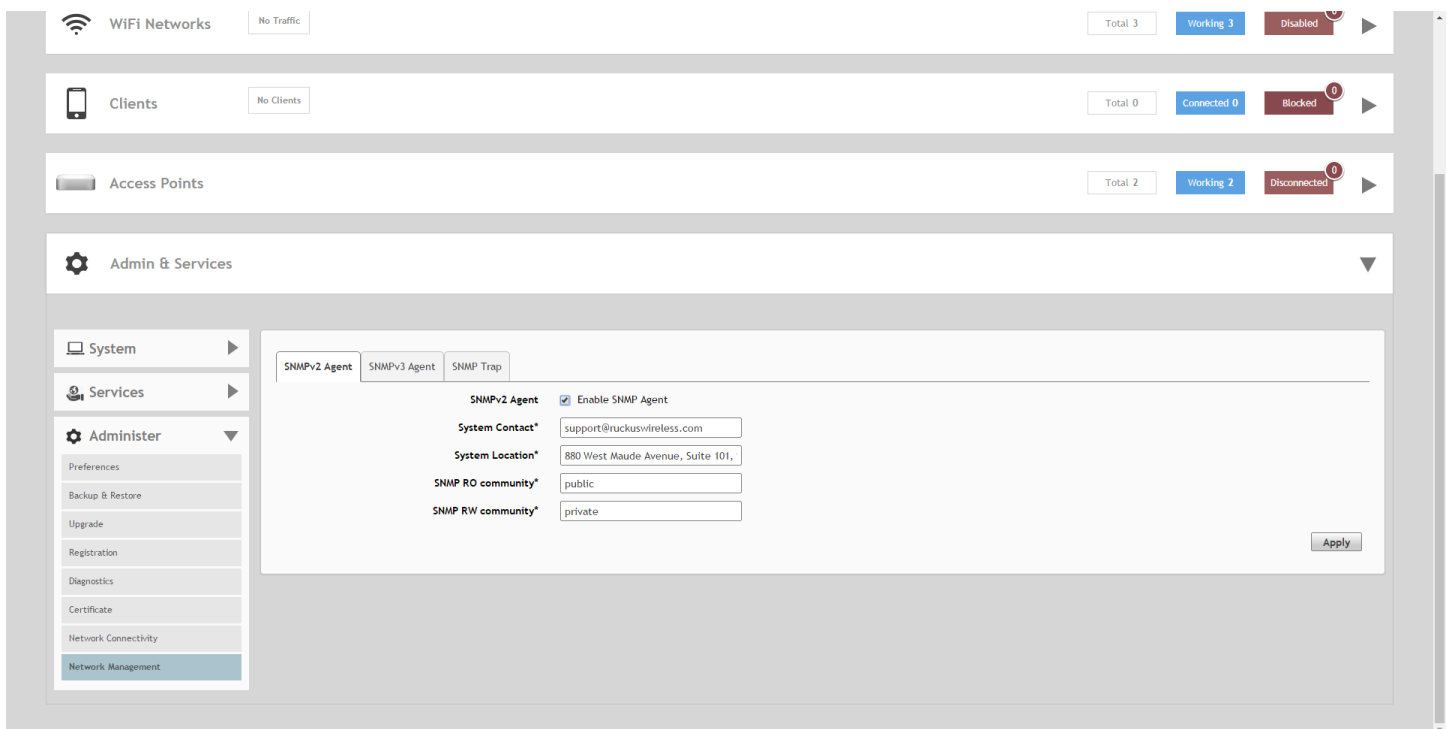FIGURE 369 SNMPv2 Agent



SNMPv3

If your network uses SNMPv3:


1. Go to **Admin & Services > Administer > Network Management**.
2. On the **SNMPv3 Agent** tab, select the **Enable SNMPv3 Agent** check box.

Configuring Admin & Services Settings

Administration Settings

- Enter the following information for both the **Read Only** and **Read-Write** privileges:
 - User:** Enter a user name between 1 and 31 characters.
 - Authentication:** Choose MD5 or SHA authentication method (default is MD5).
 - MD5:** Message-Digest algorithm 5, message hash function with 128-bit output.
 - SHA:** Secure Hash Algorithm, message hash function with 160-bit output.
 - Auth Pass Phrase:** Enter a passphrase between 8 and 32 characters in length.
 - Privacy:** Choose DES, AES or None.
 - DES:** Data Encryption Standard, data block cipher.
 - AES:** Advanced Encryption Standard, data block cipher.
 - None:** No Privacy passphrase is required.
 - Privacy Phrase:** If either DES or AES is selected, enter a Privacy phrase between 8 and 32 characters in length.
- Click **Apply** to save your changes.

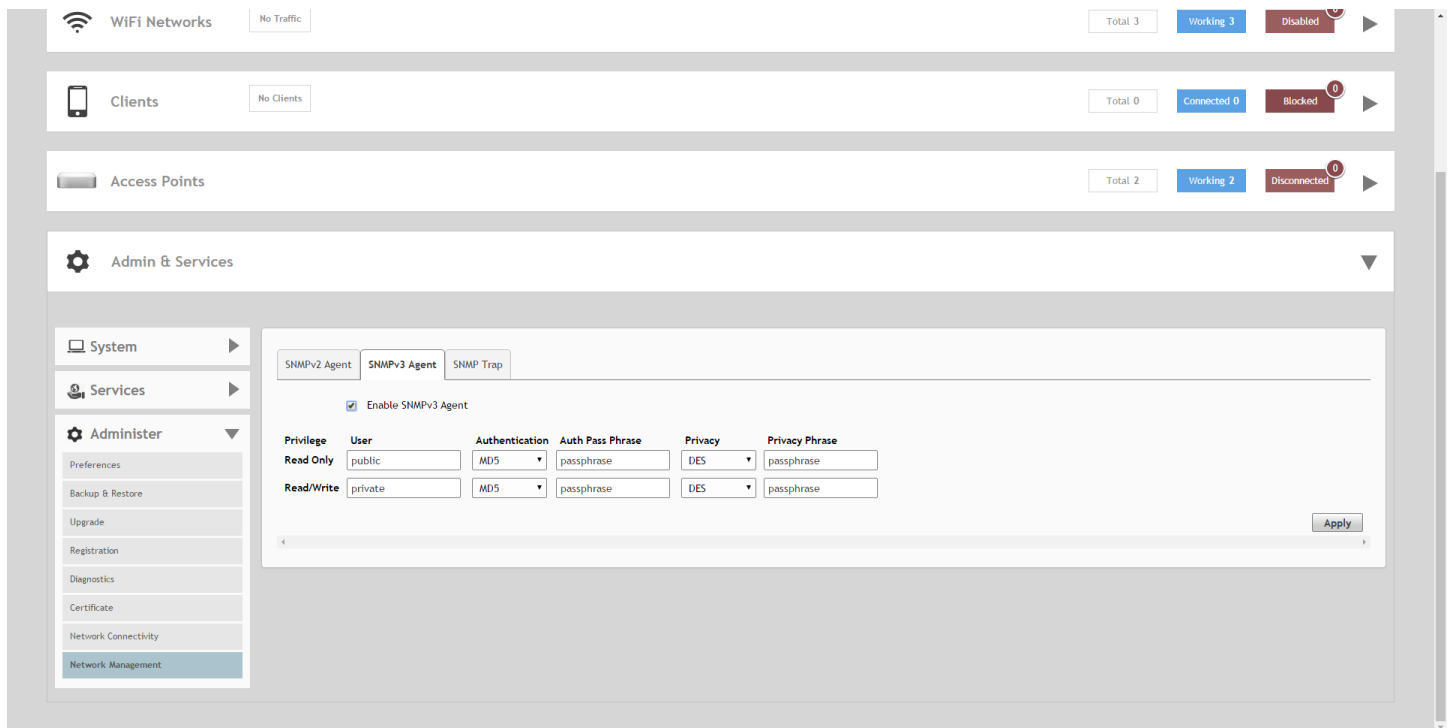FIGURE 370 SNMPv3 Agent



Enabling SNMP Trap Notifications

If you have an SNMP trap receiver on the network, you can configure Unleashed to send SNMP trap notifications to the server.


Enable this feature if you want to automatically receive notifications for AP and client events that indicate possible network issues.

To enable SNMP trap notifications:

- Go to **Admin & Services > Administer > Network Management**.
- On the **SNMP Trap** tab, select the **Enable SNMP Trap** check box.

3. In **SNMP Trap format**, select either **SNMPv2** or **SNMPv3**. You can select only one type of trap receiver. If you select SNMPv2, you only need to enter the IP addresses of up to four SNMP trap receivers on your network. If you select SNMPv3, enter up to four trap receiver IP addresses along with authentication method passphrase and privacy (encryption) settings.
4. Click **Apply** to save your changes.

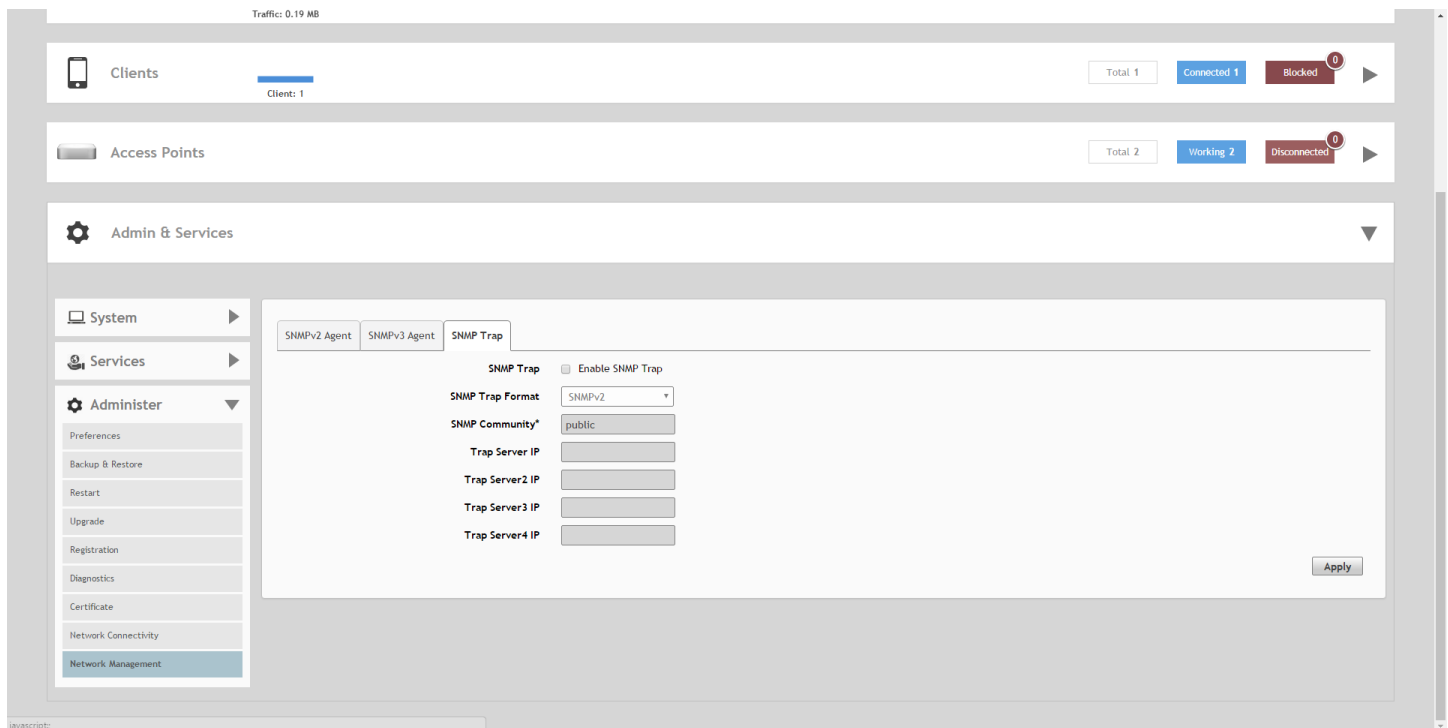FIGURE 371 SNMP Trap



Enabling Management via Unleashed Multi-Site Manager

If you have a Ruckus Unleashed Multi-Site Manager (UMM) server installed on the network, you can enable Unleashed Multi-Site Manager management to centralize monitoring and administration of your remote Unleashed deployments.

The Unleashed Multi-Site Manager allows customers to manage up to 300 Unleashed networks from a central location, enabling remote administration of multiple Unleashed deployments using a single admin user name and password.

The Unleashed Multi-Site Manager provides the following critical centralized network management functions:

- **Monitoring:** Provides the ability to view the overall health status of all Unleashed networks, events and alarms, placement of APs on a world map, and connected client information from the dashboard.
- **Reporting:** Detailed statistics reports are available including device inventories, client associations, resource monitoring, throughput capacity, etc.
- **Management:** Enables several management activities from a central location, including scheduled software upgrades, backup and restore tasks, and the ability to create cookie-cutter configuration templates for deployment at multiple sites.

To enable Unleashed Multi-Site Manager administration:


1. Go to **Admin & Services > Administer > Network Management**, and click the **Unleashed Multi-Site Manager Management** tab.
2. Under *Unleashed Multi-Site Manager Management*, select the **Enable management by Unleashed Multi-Site Manager** check box.

Configuring Admin & Services Settings

Administration Settings

3. In **URL**, type the Unleashed Multi-Site Manager DNS host name or IP address of the Unleashed Multi-Site Manager server.
4. In **Interval**, type the time interval (in minutes) at which Unleashed will send status updates to the Unleashed Multi-Site Manager server. The default interval is 15 minutes.
5. Click **Apply**. The message *Setting Applied* appears. You have completed enabling Unleashed Multi-Site Manager management. For more information on how to configure and manage your Unleashed deployment from the Unleashed Multi-Site Manager web interface, refer to the Unleashed Multi-Site Manager documentation.

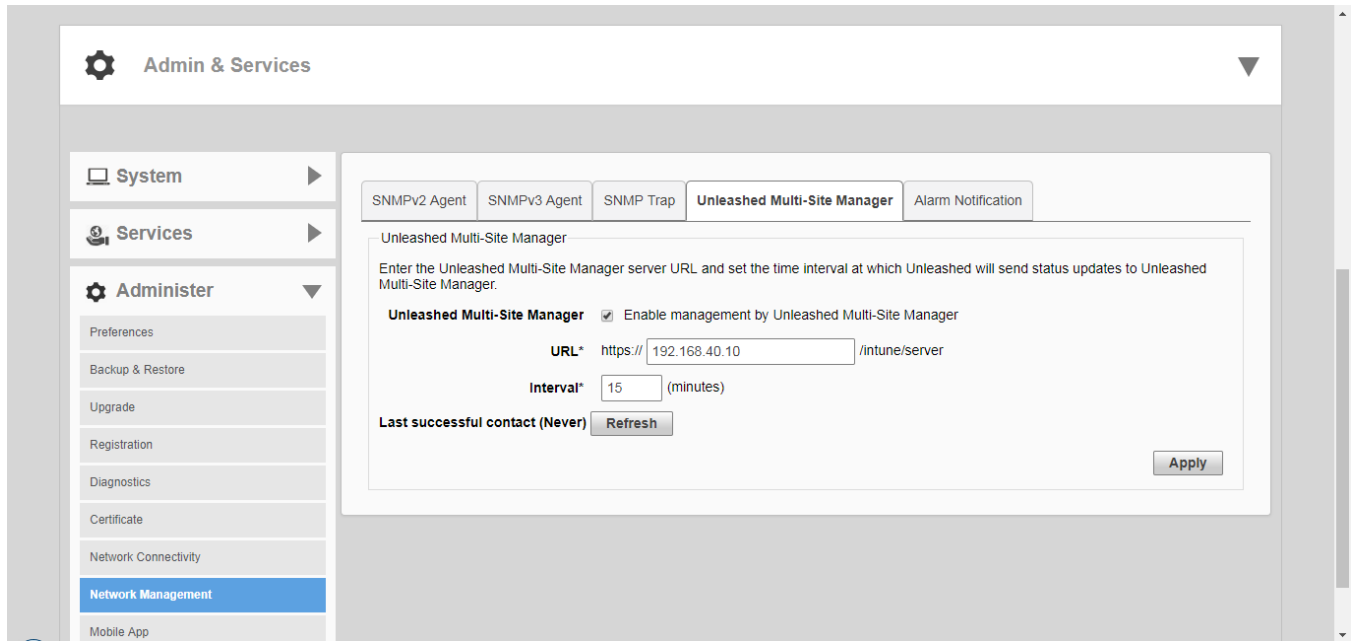FIGURE 372 Enabling Unleashed Multi-Site Manager management



Configuring Alarm Event Notification Settings

The web interface allows you to customize the content and delivery for a wide range of alarm events. When a matching event occurs, admins can be notified either through email or the mobile app.

To configure alarm event notifications and email/mobile app delivery:

1. Go to **Admin & Services > Administer > Network Management > Alarm Notification**.
2. In *Alarm Event*, select/deselect the event categories for which notifications will be delivered.
3. Click **Apply** to save your changes.
4. In *Email Address*, enable the check box and enter the destination address for alarm notifications. An email server must first have been configured from the *System > System Info* screen.

5. Click **Test** to test email delivery. Click **Apply** to save your changes.

FIGURE 373 Alarm Notification Settings

The screenshot shows the 'Alarm Notification' settings page. At the top, there are tabs for 'SNMPv2 Agent', 'SNMPv3 Agent', 'SNMP Trap', 'Unleashed Multi-Site Manager', and 'Alarm Notification'. Below the tabs, the 'Alarm Notification' section is active. It contains a list of alarm notification options, each with a checkbox. The 'Config Invalid' and 'Config Mismatch' options are highlighted with a red box. An 'Apply' button is located in the bottom right corner of the settings area.

Alarm Notification	AP Has Hardware Problem	RADIUS Authentication Server Unavailable
<input type="checkbox"/> Alarm Notification	<input checked="" type="checkbox"/> AP Has Joined	<input checked="" type="checkbox"/> Rogue DHCP Server Detected
	<input checked="" type="checkbox"/> AP Lost Contact	<input checked="" type="checkbox"/> SSID-spoofing AP Detected
	<input type="checkbox"/> AP Radio Off	<input checked="" type="checkbox"/> Same-Network Rogue AP Detected
	<input type="checkbox"/> AP Radio On	<input type="checkbox"/> Survivability entries reach maximum
	<input checked="" type="checkbox"/> Config Invalid	<input type="checkbox"/> URL Filtering is disabled
	<input checked="" type="checkbox"/> Config Mismatch	<input type="checkbox"/> URL Filtering license expired
	<input checked="" type="checkbox"/> External Gateway status change	<input type="checkbox"/> URL Filtering license file download fail
	<input type="checkbox"/> ICX Urgent Message	<input type="checkbox"/> URL Filtering license will expire
	<input checked="" type="checkbox"/> MAC-spoofing AP Detected	<input type="checkbox"/> SIM Card Remove
	<input checked="" type="checkbox"/> Master AP Change	<input type="checkbox"/> Favorite Client Disconnect
	<input checked="" type="checkbox"/> RADIUS Accounting Server Unavailable	<input type="checkbox"/> Favorite Client Connect

Enabling Mobile App Remote Management


The Unleashed mobile app provides another way to manage your Unleashed network - using an Android or iOS client.

To enable Unleashed mobile app remote management:

1. Go to **Admin & Services > Administration > Mobile App**.

2. On the **Mobile App Notification** tab, select whether to send a notification to the app when an alarm is triggered. Click **Test** to send a test notification, and click **Apply** to save your changes.

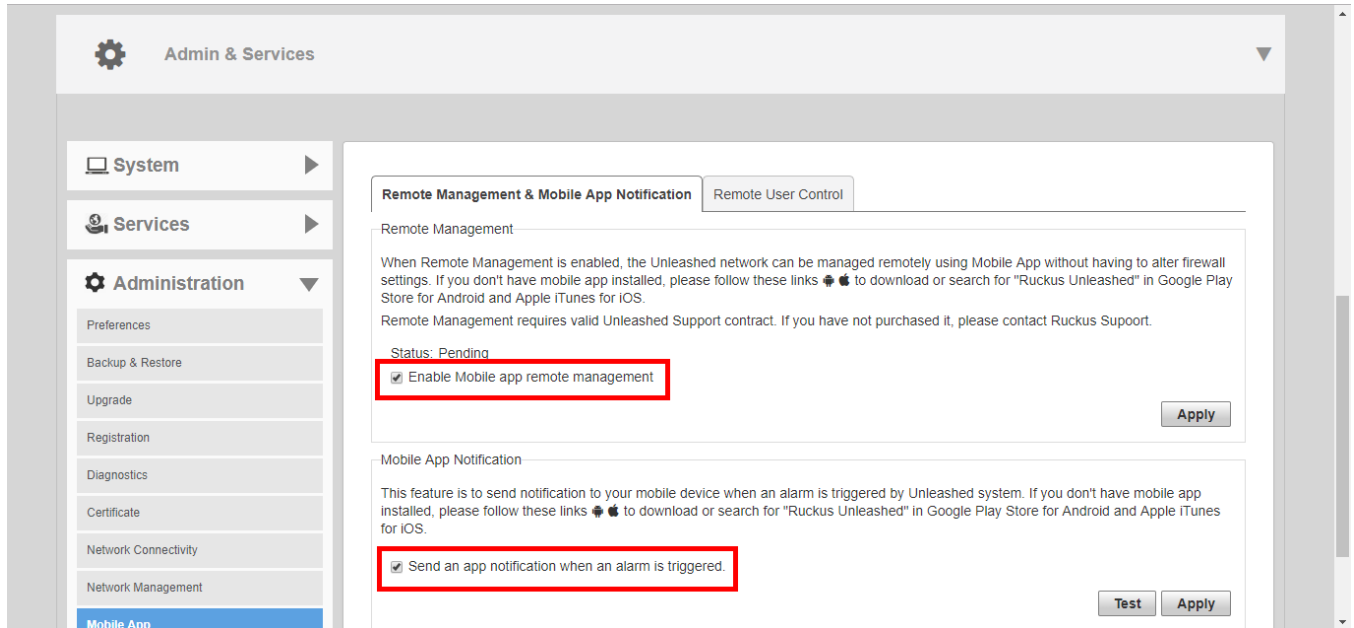FIGURE 374 Enabling mobile app remote management




3. Optionally, enable the check box next to **Enable Mobile app remote management**, and click **Apply**.

FIGURE 375 Remote Management

4. On the *Remote User Control* tab, you can view mobile app connections and block or unblock mobile app clients.

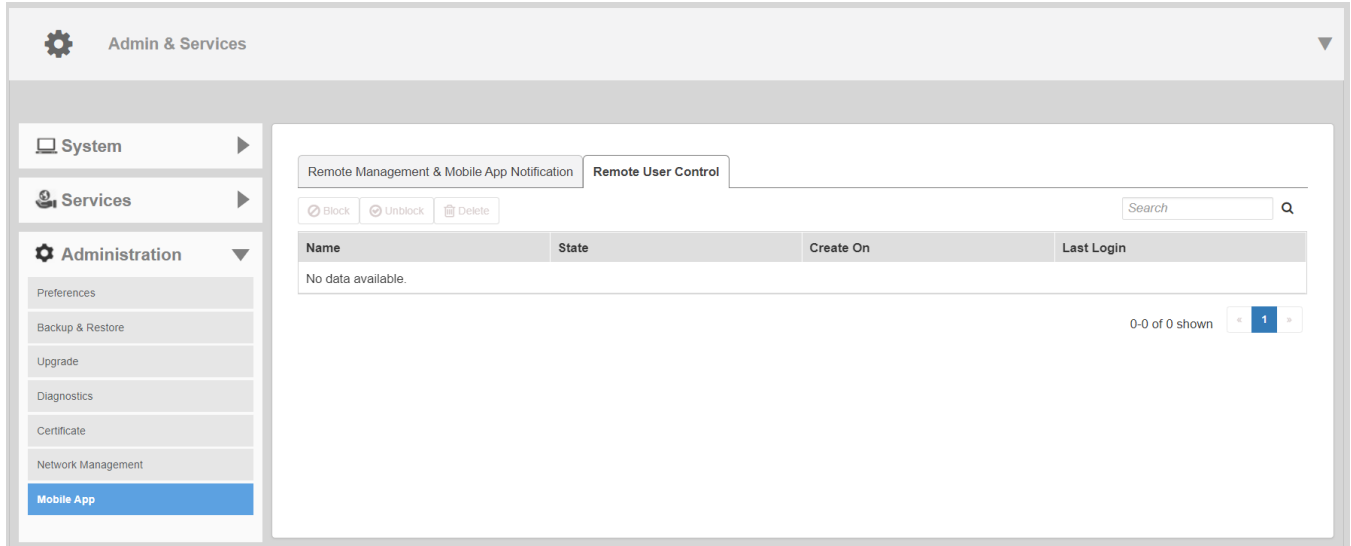FIGURE 376 Remote user control




Technical Support

You can request technical support to troubleshoot your Unleashed technical issues.

Complete the following steps to request technical support.

1. Select **Admin & Services > Administration > Technical Support**.

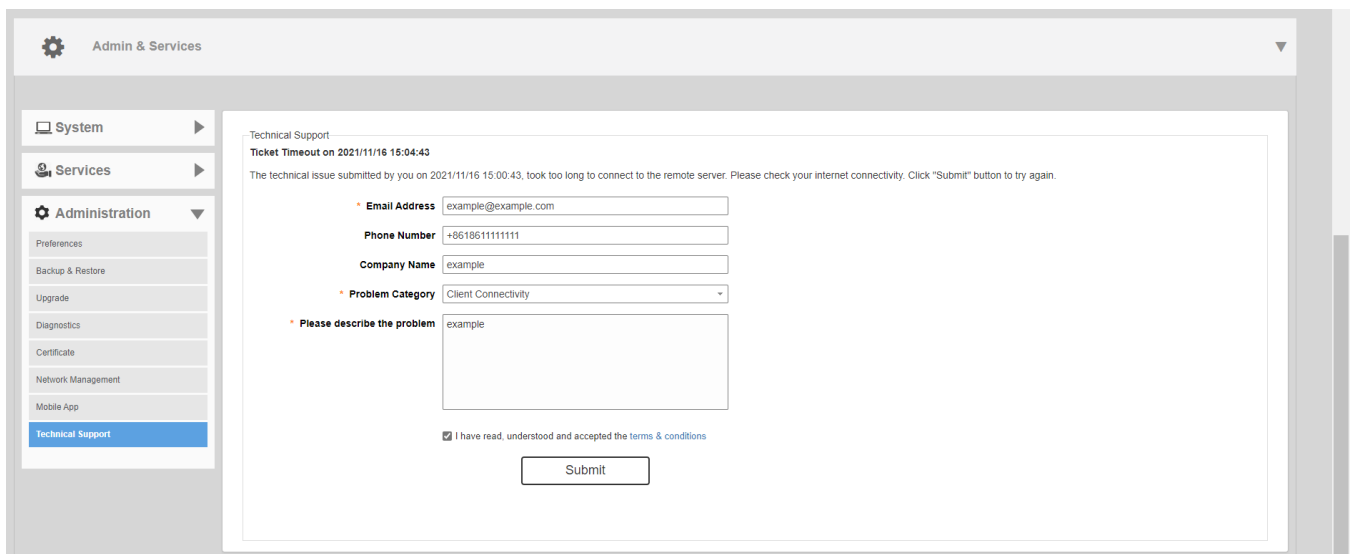FIGURE 377 Requesting Technical Support



Configuring Admin & Services Settings

Administration Settings

2. Enter your email address.
3. (Optional) Enter your phone number and company name.
4. From the **Problem Category** list, select a problem type.
5. Enter a description about your technical problem.
6. Select the **I have read, understood and accepted the terms & conditions** check box and click **Submit**.

NOTE

When you enable technical support, Unleashed disconnects from its registered UMM and connects to the RUCKUS remote UMM. After the requested technical support is completed, Unleashed registers back to UMM.


Unleashed Access Point Power Supply Considerations

- AP Power Warnings..... 467
- Power Limitations by PoE Mode and AP Model..... 469

AP Power Warnings

Beginning with release 200.8, the RUCKUS Unleashed dashboard displays warning icons when an AP is operating in reduced power mode.

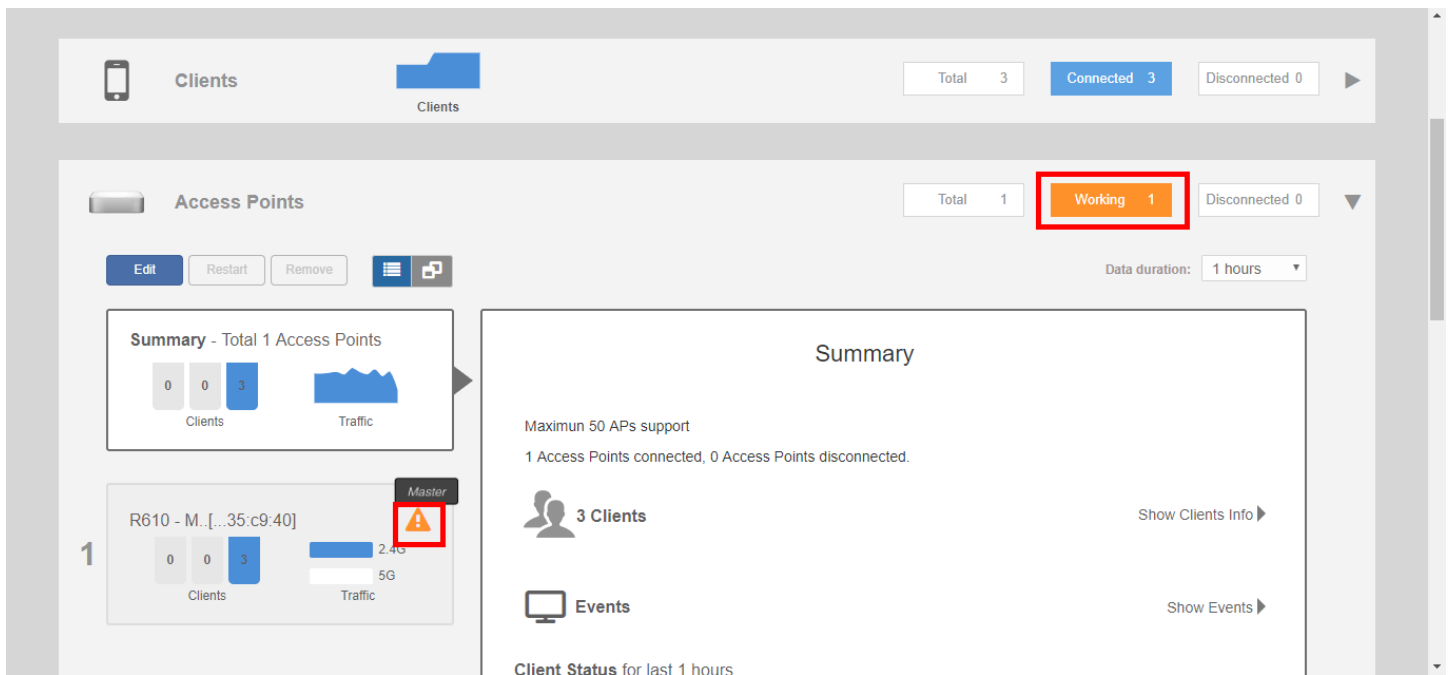FIGURE 378 Warning icons indicate an AP is operating in reduced-power mode



If a warning icon appears, click **Show AP Info** and locate the **Power Consumption Mode** entry. Refer to *Power Limitations by PoE Mode and AP Model* to see what limitations are in effect.

FIGURE 379 Showing AP Power Consumption Mode

The screenshot shows the 'System Overview' page for an AP. On the left, there is a summary card for 'Ruckus-U...[...35:c9:40]' with 'Clients' and 'Traffic' metrics. The main area is a table of system information:

Mac Address	d4:c1:9e:35:c9:40
IP Address	192.168.0.3
External IP:Port	192.168.0.3:12225
Model	R610
S/N	941849001125
Group Name	System Default
GPS Coordinates	
Mesh Type	Disabled
Current Channel(802.11a/n/ac)	149
Current Channel(802.11b/g/n)	6
Power Consumption Mode	802.3at PoE
Max Clients	100
Version	200.8.10.3.173
Role Fixed	no
Download Logs	Logs

If power supply deficiency is caused by incorrect power level negotiation between the AP and the switch/PoE injector, you can enforce the AP Power Level on the AP's configuration page. Go to **Access Points > [AP] > Edit > Other > PoE Operating Mode**. Enable **Override Group Config** and select a power mode from the menu.

FIGURE 380 Override PoE Operating Mode

The screenshot shows the 'Edit AP(d4:c1:9e:35:c9:40)' dialog box. The 'Other' tab is selected. In the 'PoE Operating Mode' section, the 'Override Group Config' checkbox is checked, and the dropdown menu is set to '802.3at PoE'. Other options include 'Bonjour Gateway' and 'Status LEDs'.

Power Limitations by PoE Mode and AP Model

The following tables list the Power over Ethernet (PoE) operating modes for each AP model, along with the performance and feature limitations when the AP is in any of the supported reduced power modes.

Indoor AP	Outdoor AP
R850	T610
R750	M510
R720	T750
R710	T750SE
R650	T350c
R610	T350d
R550	T350SE
H550	

R850

TABLE 37 R850 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	5Gbps Eth	1Gbps Eth	USB	IoT	Comments
DC		4/4	8/8	Enabled	Enabled	Enabled	N/A	
802.3af		1/4	1/8	Enabled	Disabled	Disabled	N/A	Not supported in operation mode
802.3at	25W	4/4	4/8	Enabled	Enabled	Enabled (0.5W)	N/A	
802.3bt/class5	35W	4/4	8/8	Enabled	Enabled	Enabled	N/A	
PoE injector (Model 480125A) 60W		4/4	4/8	Enabled	Enabled	Enabled	N/A	Force to 802.3bt/class5 from SZ GUI

R750

TABLE 38 R750 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	2.5Gbps Eth	1Gbps Eth	USB	IoT
DC		4/4	4/4	Enabled	Enabled	Enabled	Enabled
802.3af		2/4	2/4	Enabled	Disabled	Disabled	Disabled
802.3at	25W	4/4	4/4	Enabled	Enabled	Enabled	Enabled
PoE injector (Model 480125A) 60W		4/4	4/4	Enabled (1Gbps speed)	Enabled	Enabled	Enabled

R720

TABLE 39 R720 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	2.5Gbps Eth	1Gbps Eth	USB	Comments
--	----------------	------------	----------	-------------	-----------	-----	----------

Unleashed Access Point Power Supply Considerations
Power Limitations by PoE Mode and AP Model

TABLE 39 R720 PoE Modes (continued)

DC		4/4 (22dBm)	4/4 (23dBm)	Enabled	Enabled	Enabled	
802.3af		1/4 (20dBm)	1/4 (18dBm)	Enabled	Disabled	Disabled	
802.3at	25W	4/4 (20dBm)	4/4 (18dBm)	Enabled	Disabled	Disabled	
802.3bt/Class 5	35W	4/4 (22dBm)	4/4 (23dBm)	Enabled	Enabled	Enabled	
PoE injector (Model 480125A) 60W		4/4	4/4	Enabled	Enabled	Enabled	Force to 802.3bt/ Class 5 from GUI

R710

TABLE 40 R710 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth(PoE)	1Gbps Eth	USB
DC		4/4 (22dBm)	4/4 (20dBm)	Enabled	Enabled	Enabled
802.3af		2/4 (20dBm)	4/4 (19dBm)	Enabled	Disabled	Disabled
802.3at/Injector (Model 480125A)	25W	4/4 (22dBm)	4/4 (20dBm)	Enabled	Enabled	Enabled

R650

TABLE 41 R650 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	2.5Gbps Eth(PoE)	1Gbps Eth	USB	IoT
DC		2/2	4/4	Enabled	Enabled	Enabled	Enabled
802.3af		2/2	2/4	Enabled	Disabled	Disabled	Disabled
802.3at	25W	2/2	4/4	Enabled	Enabled	Enabled	Enabled
PoE Injector (Model 480125A)		2/2	4/4	Enabled (1Gbps speed)	Enabled	Enabled	Enabled

R610

TABLE 42 R610 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth(PoE)	1Gbps Eth	USB
DC		4/4	4/4	Enabled	Enabled	Enabled
802.3af		2/4	4/4	Enabled	Disabled	Disabled
802.3at/Injector (Model 480125A)	24W	4/4	4/4	Enabled	Enabled	Enabled

R550

TABLE 43 R550 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1bps Eth(PoE)	1Gbps Eth	USB	IoT
DC		2/2 (22 dBm)	2/2 (22 dBm)	Enabled	Enabled	Enabled	Enabled
802.3af		2/2 (10 dBm)	2/2 (18 dBm)	Enabled	Disabled	Disabled	Disabled
802.3at	25W	2/2 (22 dBm)	2/2 (22 dBm)	Enabled	Enabled	Enabled	Enabled

TABLE 43 R550 PoE Modes (continued)

PoE Injector (Model 480125A)		2/2 (22 dBm)	2/2 (22 dBm)	Enabled	Enabled	Enabled	Enabled
------------------------------	--	--------------	--------------	---------	---------	---------	---------

H550

FIGURE 381 H550 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx(16dBm)	5G Tx/Rx(19dBm)	1Gbps Eth	USB	IoT	PSE		
							POE_Out	Power @ PD	Maximum Cable Length
DC		2/2	2/2	Enabled	Enabled	Enabled	Enabled		
802.3af	12.95W	2/2	2/2	Enabled	Disabled	Enabled	Disabled	NA	NA
802.3at/injector	25W	2/2	2/2	Enabled	Enabled	Enabled	Disabled	NA	NA
					Enabled		Enabled	8.4W	20m
					Disabled		Enabled	12.4W	20m
802.3bt, uPoE, PoH	40W	2/2	2/2	Enabled	Enabled	Enabled	Enabled	12.95W	100m

T610

TABLE 44 T610 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth(PoE)	1Gbps Eth	USB
DC		3/3 (22dBm)	3/3 (20dBm)	Enabled	Enabled	Enabled (0.5W)
802.3af		2/3 (18dBm)	3/3 (20dBm)	Enabled	Disabled	Disabled
802.3at/Injector (Model 480125A)	25W	3/3 (22dBm)	3/3 (20dBm)	Enabled	Enabled	Enabled (0.5W)

M510

TABLE 45 M510 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth(PoE)	1Gbps Eth	USB
DC	Full	2/2 (23dBm)	2/2 (20dBm)	Enabled	Enabled	Enabled
802.3af	12.95W	1/2 (19dBm)	2/2 (19dBm)	Enabled	Disabled	Disabled
802.3at/Injector (Model 480125A)	25W	2/2 (23dBm)	2/2 (20dBm)	Enabled	Enabled	Enabled

T750

FIGURE 382 T750 PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	2.5Gbps Eth	1Gbps Eth	USB	IoT	PSE	Comment
DC		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	

Unleashed Access Point Power Supply Considerations

Power Limitations by PoE Mode and AP Model

802.3af		1/4	1/4	Enabled	Disabled	Disabled	Disabled	Disabled	Not supported operation mode
802.3at w/o USB	25W	4/4	4/4	Enabled	Enabled	Disabled	Enabled	Disabled	
802.3at w/ USB	25W	2/4	4/4	Enabled	Disabled	Enabled	Enabled	Disabled	Alt AT mode config by AP CLI
802.3bt/Class 5	35W	4/4	4/4	Enabled	Enabled	Enabled	Enabled	Disabled	
803.3bt/Class 6		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Disabled	51W by H/W negotiation
802.3bt/Class 7		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	62W by H/W negotiation
PoE injector (Model 480125A)		4/4	4/4	Enabled (1Gbps speed)	Enabled	Enabled	Enabled	Disabled	Force to 802.3bt/Class 5
PoE injector		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	Force to 802.3bt/Class 7

T750SE

FIGURE 383 T750SE PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	2.5Gbps Eth	1Gbps Eth	USB	IoT	PSE	Comment
DC		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	
802.3af		1/4	1/4	Enabled	Disabled	Disabled	Disabled	Disabled	Not supported operation mode
802.3at w/o USB	25W	4/4	4/4	Enabled	Enabled	Disabled	Enabled	Disabled	
802.3at w/ USB	25W	2/4	4/4	Enabled	Disabled	Enabled	Enabled	Disabled	Alt AT mode config by AP CLI
802.3bt/Class 5	35W	4/4	4/4	Enabled	Enabled	Enabled	Enabled	Disabled	
803.3bt/Class 6		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Disabled	51W by H/W negotiation
802.3bt/Class 7		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	62W by H/W negotiation
PoE injector (Model 480125A)		4/4	4/4	Enabled (1Gbps speed)	Enabled	Enabled	Enabled	Disabled	Force to 802.3bt/Class 5
PoE injector		4/4	4/4	Enabled	Enabled	Enabled	Enabled	Enabled	Force to 802.3bt/Class 7

T350c

FIGURE 384 T350c PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth	IoT
802.3af		2/2 (19dBm)	2/2 (18dBm)	Enabled	Disabled
802.3at/PoE injector	25W	2/2	2/2	Enabled	Enabled

T350d

FIGURE 385 T350d PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth	USB	IoT
DC		2/2	2/2	Enabled	Enabled	Enabled
802.3af		2/2 (19dBm)	2/2 (18dBm)	Enabled	Disabled	Disabled
802.3at/PoE injector	25W	2/2	2/2	Enabled	Enabled	Enabled

T350SE

FIGURE 386 T350SE PoE Modes

	LLDP Power Ask	2.4G Tx/Rx	5G Tx/Rx	1Gbps Eth	USB
DC/PoE injector		2/2	2/2	Enabled	Enabled
802.3at	25W	2/2	2/2	Enabled	Enabled
802.3af		2/2 (16dBm)	2/2 (16dBm)	Enabled	Disabled



© 2022 CommScope, Inc. All rights reserved.
350 West Java Dr., Sunnyvale, CA 94089 USA
<https://www.commscope.com>