



Alcatel-Lucent Enterprise - AWOS Release 3.0.3

OmniAccess Stellar AP User Guide

May 2018

060491-10 Rev. B

enterprise.alcatel-lucent.com

Alcatel-Lucent and the Alcatel-Lucent Enterprise logo are trademarks of Alcatel-Lucent. To view other trademarks used by affiliated companies of ALE Holding, visit: enterprise.alcatel-lucent.com/trademarks. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Neither ALE Holding nor any of its affiliates assumes any responsibility for inaccuracies contained herein. (2018)

Alcatel-Lucent 
Enterprise

Contents

1	How to Use This Manual	7
	Access Stellar AP Through the GUI	7
	Document Conventions	7
2	Configuration Sample	8
	Scenario 1: AP Group Without ALE OXO server	8
	Scenario 2: AP Group With ALE OXO Server (ZTP)	10
3	Connecting AP Group via Web Browser	12
	Prerequisites for Setting up and Accessing AP Group	12
	Connect to Pre-defined SSID and Browse URL	12
	Using the Initializing Wizard	13
	Connecting to the AP Group via Web	15
4	Introduction to the AP Group Web Management System	16
	Dashboard Overview	16
	WLAN Window	16
	AP Window	18
	Client Window	20
	Monitoring Window	22
	System Page	26
	General Window.....	26
	System Time Window.....	29
	Syslog Window.....	30
	Wireless Page.....	32
	RF Window	32
	wIDS/wIPS Window	34
	Performance Optimization Window.....	37
	Access Page	38
	Authentication Window	39
	Customized Portal Page Panel	42
	Customized Portal Page - Login by Account.....	43
	Customized Portal Page - Login by Access Code	43
	Customized Portal Page - Login by Terms of Use	43
	Client Blacklist & Whitelist Window	44
	Access Control List Window	46
5	WLAN Configuration	48
	Create New WLAN	48
	Create an Enterprise WLAN	48
	Create a Personal WLAN	51

Create a Captive Portal WLAN	54
Delete Your WLAN	56
Modify Your WLAN	57
Modify WLAN QoS	57
6 AP Management	58
AP Group Management.....	59
Import and Export AP Configuration	60
Upgrade AP Firmware.....	61
Modify AP Name and IP Address.....	63
Check AP Configuration Detail	65
Modify AP Transmission Power and Channel	66
AP LED Specification	67
Locate AP or Turn LED Off	67
Remove an AP from the Group	68
Allow an AP to Join the Group	69
How to Add a New AP to Group	69
How to Replace a Current AP in Group	70
How to Setup Wireless Networks With More Than 64 APs	70
How to Configure the AP if There is No DHCP server	70
7 Authentication Management	71
Authentication and Encryption Methods.....	71
How to Configure Captive Portal Authentication	74
Create a Captive Portal WLAN.....	74
Enable Captive Portal Service	74
Select Your Login Method	75
Create Users or Access Code.....	75
Customize Your Splash Page (Optional).....	77
Log User Behavior (Optional)	77
Specify Your Walled Garden (Optional).....	78
Specify Your Captive Portal Whitelist (Optional)	78
8 Tools	80
PMD.....	81
Reset the AP to Factory Default Settings.....	81
9 AP UI	82
Login to AP UI	82
AP Interface.....	83
AP Network	84
Configure Mesh/Bridge through AP UI.....	84
Configure DHCP through AP UI.....	85
Configure DNS Cache through AP UI	87

Configure NAT through AP UI	87
10 Web Management with HTTPS	88
Download the Certificate from AP.....	89
Install the Certificate on Different Platform accordingly	89
Case A: Microsoft Windows + Microsoft IE/Google Chrome.....	90
Case B: Microsoft Windows + Mozilla Firefox	92
Case C: Apple MAC OS X + Google Chrome	95
Case D: Apple MAC OS X + Mozilla Firefox.....	99
A. End-User Software License Agreement	101

Table of Figures

Figure 2-1 AP group without OXO.....	8
Figure 2-2 AP group with OXO.....	10
Figure 3-1 AP Group Login Page	13
Figure 3-2 Initialization Wizard-Welcome Page	13
Figure 3-3 Initialization Wizard-Modify Administrator Password.....	14
Figure 3-4 Initialization Wizard-Select country code and time zone.....	14
Figure 3-5 Initialization Wizard-Create New WLAN	14
Figure 3-6 Initialization Wizard-Complete Notice	15
Figure 4-1 Dashboard Overview.....	16
Figure 4-2 WLAN Window-Simplified Mode	17
Figure 4-3 WLAN Window-Advanced Mode	17
Figure 4-4 AP Window-Simplified Mode	18
Figure 4-5 AP Window-Advanced Mode	19
Figure 4-6 Clients Window-Simplified Mode	21
Figure 4-7 Clients Window-Advanced Mode.....	21
Figure 4-8 Monitoring Window - AP Group	23
Figure 4-9 Monitoring Window - WLAN.....	24
Figure 4-10 Monitoring Window - AP	24
Figure 4-11 Monitoring Window - Client	25
Figure 4-12 System page	26
Figure 4-13 General Window - Simplified Mode	27
Figure 4-14 General Configuration Window -Advanced Mode	27
Figure 4-15 Account Management Tab.....	28
Figure 4-16 Certificate Management Tab	29
Figure 4-17 System Time Window	30
Figure 4-18 Syslog Window.....	31
Figure 4-19 Wireless Page.....	32
Figure 4-20 RF-2.4GHz.....	32
Figure 4-21 RF-5GHz	33
Figure 4-22 RF Configuration Window	33
Figure 4-23 Edit RF Information	34
Figure 4-24 Top 5 AP interfered	35
Figure 4-25 wIDS/wIPS Configuration Window	36
Figure 4-26 Foreign AP Whitelist	37
Figure 4-27 Foreign AP Black List.....	37
Figure 4-28 Wireless Optimization Tab	38
Figure 4-29 Access Page.....	39
Figure 4-30 Authentication Window - Simplified Mode	39
Figure 4-31 Authentication Window - Internal Portal Server	40

Figure 4-32 Authentication Window - External Portal Server	40
Figure 4-33 Customized Portal Page	42
Figure 4-34 Customized Portal Page - Login by account.....	43
Figure 4-35 Customized Portal Page - Login by access code.....	43
Figure 4-36 Customized Portal Page - Login by Terms of use	44
Figure 4-37 Customized Portal Page - Terms of use.....	44
Figure 4-38 Black List Tab	45
Figure 4-39 Whitelist Tab	45
Figure 4-40 Walled Garden Tab	46
Figure 4-41 ACL Window - Simplified Mode	47
Figure 4-42 ACL Window - Advanced Mode	47
Figure 5-1 Create Enterprise WLAN - Simplified Mode.....	49
Figure 5-2 Create Enterprise WLAN - Advanced Mode	50
Figure 5-3 Create Personal WLAN - Simplified Mode	52
Figure 5-4 Create Personal WLAN - Advanced Mode	52
Figure 5-5 Create Captive Portal WLAN - Simplified Mode.....	54
Figure 5-6 Create Captive Portal WLAN - Advanced Mode	55
Figure 5-7 Delete a WLAN.....	57
Figure 5-8 Modify a WLAN.....	57
Figure 5-9 Modify WLAN QoS	58
Figure 6-1 AP Group Configuration Window	59
Figure 6-2 AP Group Information Location	59
Figure 6-3 AP Group Management IP	60
Figure 6-4 Export AP Group Configuration	60
Figure 6-5 Import AP Group Configuration	61
Figure 6-6 Update Single AP using Local Image File.....	62
Figure 6-7 Update Single AP from Remote TFTP Server	62
Figure 6-8 Update all APs' Firmware	63
Figure 6-9 Modify AP Name	64
Figure 6-10 Modify AP IP Address	65
Figure 6-11 Check AP Configuration Detail	66
Figure 6-12 RF Management	66
Figure 6-13 Turn LED off	67
Figure 6-14 Locate AP	68
Figure 6-15 Restore AP state	68
Figure 6-16 Remove an AP from Group	69
Figure 6-17 Allow AP to join group	69
Figure 7-1 Enterprise Authentication	72
Figure 7-2 SOHO Authentication	73
Figure 7-3 Authentication Security Type-Personal	73
Figure 7-4 Authentication Security Type-Enterprise	74
Figure 7-5 Create Captive Portal type WLAN.....	74
Figure 7-6 Enable Captive Portal Service	75
Figure 7-7 Select Your Login Method.....	75
Figure 7-8 Create Captive Portal Users.....	76
Figure 7-9 Create Access Code	77
Figure 7-10 Customize Your Splash Page	77
Figure 7-11 Log User Behavior	78
Figure 7-12 Wall Garden	78
Figure 7-13 Portal Whitelist	79
Figure 8-1 Tools in Dashboard.....	80
Figure 8-2 Troubleshooting Command	80
Figure 8-3 PMD	81
Figure 9-1 AP List - link to AP UI.....	82
Figure 9-2 AP UI.....	83
Figure 9-3 AP Interface.....	83

Figure 9-4 AP Network..... 84

Figure 9-5 Configure Mesh/Bridge..... 85

Figure 9-6 DHCP Server in AP group..... 86

Figure 9-7 DHCP Server..... 86

Figure 9-8 Source NAT 87

Figure 9-9 Destination NAT 88

Figure 10-1 HTTP Login Page..... 89

Figure 10-2 Download Certificate from AP..... 89

Figure 10-3 Case A - Step 1 90

Figure 10-4 Case A - Step 2..... 90

Figure 10-5 Case A - Step 3..... 91

Figure 10-6 Case A - Step 4..... 91

Figure 10-7 Case A - Step 5..... 92

Figure 10-8 Case A - Step 6..... 92

Figure 10-9 Case B - Step 1 93

Figure 10-10 Case B - Step 2..... 93

Figure 10-11 Case B - Step 3..... 94

Figure 10-12 Case B - Step 4..... 94

Figure 10-13 Case B - Step 5..... 95

Figure 10-14 Case C - Step 1 95

Figure 10-15 Case C - Step 2 96

Figure 10-16 Case C - Step 3 96

Figure 10-17 Case C - Step 4 97

Figure 10-18 Case C - Step 5 97

Figure 10-19 Case C - Step 6 98

Figure 10-20 Case C - Step 7 98

Figure 10-21 Case C - Step 8 99

Figure 10-22 Case C - Step 9 99

1 How to Use This Manual

This manual describes all features supported by the Stellar AP and provides instructions and examples for configuring ALE series Access Point (AP). It is designed for network administrators who are responsible for configuring and maintaining the Wi-Fi network. It assumes the reader is familiar with Layer2 and Layer3 networks and 802.11 protocols and related technologies. The manual covers an introduction to the Stellar AP and configuration samples. The examples describe the general steps of setting up a Wi-Fi network based on several typical deployment scenarios. It is useful for those new to the ALE Access Point configuration and those already familiar with the software wanting to know more about certain functions.

Access Stellar AP Through the GUI

This manual is developed for the Stellar AP GUI. Each Stellar AP supports up to three simultaneous GUI connections. The GUI is accessible through a standard web browser from a remote management console or workstation. The GUI includes configuration wizards that guide you to change administrator password and complete basic WLAN configuration. In addition to the wizards, the GUI includes a Dashboard monitoring feature that provides visibility into your wireless network's performance and usage. This allows you to easily locate and diagnose WLAN issues. For details on the GUI Dashboard, see [Dashboard Overview](#).

Document Conventions

The following conventions are used throughout this manual to emphasize important concepts:



Note

It indicates helpful suggestions, pertinent information, and important things to remember.



CAUTION

It indicates a risk of damage to your hardware or loss of data or some incorrect or improper operation that should be avoided.

2 Configuration Sample

This chapter describes the general steps to configure the Stellar AP with respect to several deployment topologies. Follow the configuration steps in the guide to configure your Stellar AP. This chapter contains the following topics:

[AP Group without ALE OXO server](#)

[AP Group with ALE OXO server \(ZTP\)](#)

Scenario 1: AP Group Without ALE OXO server

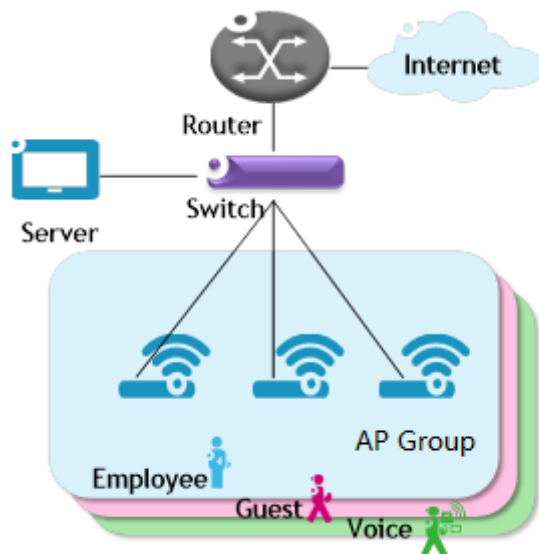


Figure 2-1 AP group without OXO

Following are the requirements for this scenario,

- ➔ There are three APs in this group. All APs connect to a standard PoE switch and the PoE switch connects to the core router. The core router provides DHCP server function to both APs and clients. The Primary Virtual Controller (PVC) in the group will be responsible for portal server, AP and client management and monitoring.
- ➔ All three APs broadcast three SSIDs: Employee, Guest and Voice.
- ➔ The Employee WLAN is used for company staff, by which both internal servers and the internet are accessible.

For security, this WLAN will use 802.1x authentication methods. Anyone who tries connecting to this WLAN will be requested to input the user name and password registered in an internal RADIUS server.

- ➔ The Guest WLAN is designed for guests and can access the internet ONLY. It uses a captive portal authentication and a portal page will pop up when browsing any website. Guest can access the Internet only after inputting the access code or user name and password provided by the network administrator. The splash page can be customized to the customer's style.
- ➔ The Voice WLAN is designed for VoIP application ONLY. It will authorize voice traffic to be highest priority in QoS profile so as to provide a stable voice connection. The SSID will be hidden and inaccessible to both internal and external networks.
- ➔ ALL APs usage and client connections are visible in the UI dashboard.

According to the topology, the clients are separate in three service VLANs (For example: VLAN 100, VLAN 200 and VLAN 300) while APs are in the management VLAN (default VLAN of the switch ports, for example: VLAN 1). The APs and clients will be assigned an IP address from the DHCP server via the router. The router is the default gateway for APs and clients. Following are the detailed configuration steps:

- ➔ **Step1:** Configure a PoE switch as follows:
 - 1) The ports used to connect the APs have their default (untagged) VLAN as the AP management VLAN;
 - 2) Add tagged VLANs to the ports for all WLANs that will be created on the APs;
 - 3) Tag (trunk) all of the user and AP-Management VLANs on the uplink between the switch and the router.
- ➔ **Step2:** Connect all APs to the PoE switch and all APs will obtain an IP address from the DHCP server. Login to the AP group, change the administrator password and initially create WLAN 'Employee' using the wizard. Refer to [Connect to pre-defined SSID and browse URL](#) and [Using the Initializing Wizard for details](#). Refer to [Modify Your WLAN](#) to set the mapping VLAN for WLAN 'Employee'.
- ➔ **Step3:** Create WLAN 'Guest' as per the steps in '[Create New WLAN](#)' and configure the captive portal authentication according to '[How to configure captive portal authentication](#)'.
- ➔ **Step4:** Create WLAN 'Voice' as per the steps in '[Create New WLAN](#)'.
- ➔ **Step5:** Configure ACLs according to [Access Control List](#) to restrict the access domain of each WLAN.
- ➔ **Step6:** Check AP, Client and monitor the performance in the dashboard. Refer to [Dashboard Overview](#) for detail.

Scenario 2: AP Group With ALE OXO Server (ZTP)

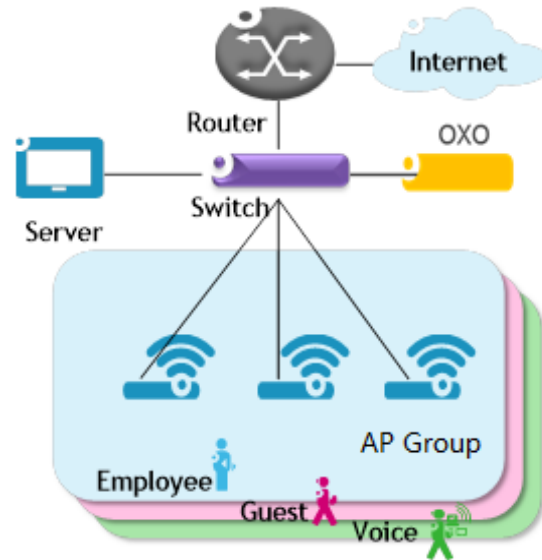


Figure 2-2 AP group with OXO

Following are the requirements for this scenario,

- ➔ There are three APs in this group. All APs connect to a standard PoE switch and the PoE switch connects to the core router and an ALE OXO server.
- ➔ All three APs broadcast three SSIDs: Employee, Guest, and Voice.
- ➔ The Employee WLAN is used for company staff, by which both internal servers and the internet are accessible.
For security, this WLAN will use 802.1x authentication methods. Anyone who tries connecting to this WLAN will be requested to input the user name and password registered in an internal RADIUS server.
- ➔ The Guest WLAN is designed for guests and has access to the internet ONLY. It uses a captive portal page authentication and a portal page will pop up when browsing any website. Guest can access the Internet only after inputting the access code or user name and password provided by the network administrator. The splash page of captive portal authentication can be customized to customer's style.
- ➔ The Voice WLAN is designed for VoIP application ONLY. It will authorize voice traffic to be highest priority in QoS profile so as to provide a stable voice connection. It will be hidden and inaccessible to both internal and external networks.
- ➔ ALL APs usage and client connections are visible in AP UI dashboard.

According to the topology, APs will be assigned an IP address from the OXO server. Router is the DHCP server for the clients. Following is the detailed configuration steps:

- ➔ **Step1:** Connect all APs to the PoE switch and all APs will obtain an IP address, download firmware (if necessary) and configuration file from the OXO server.

- ➔ **Step2:** The APs will reboot automatically to setup a group and allow configuration from the OXO server take effect, all three WLANs are created.
- ➔ **Step3:** Check AP, Client and monitor the performance in the dashboard. Refer to [Dashboard Overview](#) for detail.

3 Connecting AP Group via Web Browser

Prerequisites for Setting up and Accessing AP Group

- Connect all APs to switch and power up.
- Ensure that a DHCP server is present and accessible in the network. The AP group uses an external DHCP server for IP address management of the access points and the wireless clients.
- Ensure that a DNS server is available in the network, which helps to parse the web URL used to access the AP. (Refer to Note 3-1)
- It is recommended that your configuring terminal should have a compatible operating system and browser.

Recommended OS	Recommended Browser
<ul style="list-style-type: none">• Windows 7• Window 8• Window 10• MAC OS X 10.10• MAC OS X 10.11	<ul style="list-style-type: none">• Google Chrome 48 and later• Mozilla Firefox 48 and later• Internet Explorer 11 and later

After above prerequisites are met, proceed to: [Connect to pre-defined SSID and browse URL.](#)



Note 3-1: The process of connecting to a single AP through web is same as connecting to AP group.

Note 3-2: It is recommended to connect only one AP at a time to the network and complete the configuration, then plug in other APs one by one to synchronize the configurations.

Connect to Pre-defined SSID and Browse URL

The ALE WLAN solution is based on a group architecture. A maximum of 64 APs are supported in one AP Group (Not all AP1101). All APs have the same group ID that uniquely defines the AP group and all APs have to be in the same VLAN because the communication between group members is based on multicast. The group will select the Primary Virtual Controller (PVC) and Secondary Virtual Controller (SVC) based on the MAC address. The highest MAC address will be selected as the PVC and the one with the second highest MAC address will be set as the SVC. The PVC is responsible for the group management, such as configuration synchronization, usage data statistics, firmware upgrading, etc. and the SVC is the backup of the PVC. By default, the AP group will advertise the pre-defined SSID ‘mywifi-xxxx’ and you can connect to ‘mywifi-xxxx’ to browse the AP group GUI through <http://mywifi.al-enterprise.com:8080> to the initializing wizard. After you complete [Using the Initializing Wizard](#), the SSID ‘mywifi-xxxx’ will be deleted. (‘xxxx’ is the last two bytes of PVC’s MAC address)



Note 3-3: Besides the HTTP login method (port 8080), you can also login to the web manager using HTTPS protocol with the URL <https://mywifi.al-enterprise.com,more> details please refer to [Web management with](#)


Note [HTTPS](#)

Note 3-4: If there is no DNS server in the network, you can connect to the AP group directly using the IP address of any AP in the group, accessing “<http://a.b.c.d:8080>”. (a.b.c.d is the AP’s IP address)

Note 3-5: If there is no DHCP server in the network, the AP will default to the 192.168.1.254 address. See [How to Configure the AP if there is no DHCP server.](#)

Using the Initializing Wizard

Initializing wizard page is loaded by connecting to the pre-defined SSID accessing the URL <http://mywifi.al-enterprise.com:8080>. Login with the Administrator account and the default password ‘admin’, illustrated in Figure 3-1. If you want to manage the AP group with HTTPS protocol, refer to [Web management with HTTPS](#).

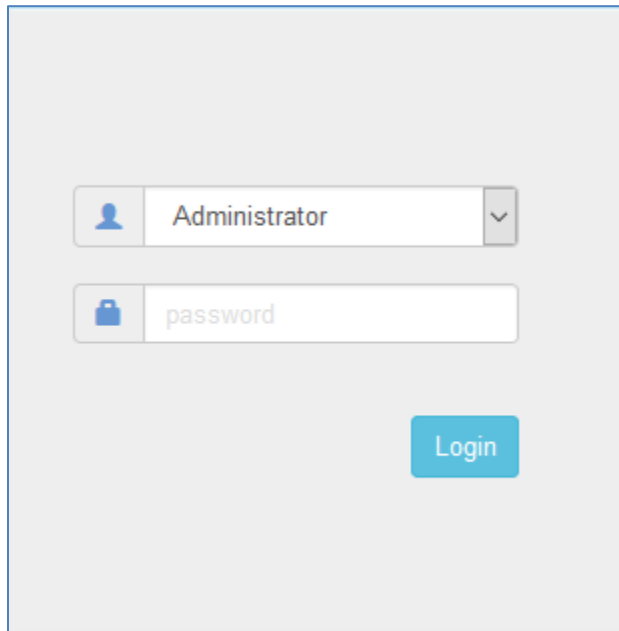


The screenshot shows a login interface with a light gray background. At the top, there is a dropdown menu with a blue person icon on the left and the text 'Administrator' in the center, with a small downward arrow on the right. Below this is a password input field with a blue padlock icon on the left and the text 'password' in the center. At the bottom right, there is a blue button with the text 'Login' in white.

Figure 3-1 AP Group Login Page

The following are the Initialization Wizards:

Step1: Welcome Page

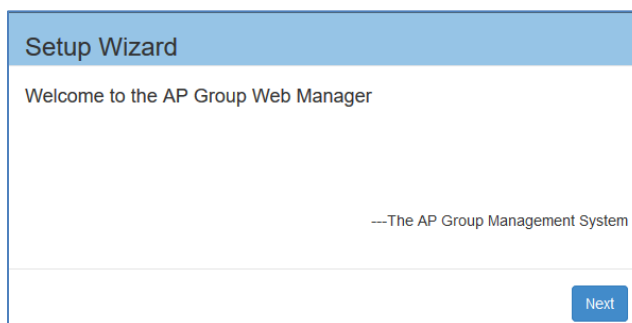

The screenshot shows a welcome page with a blue header bar containing the text 'Setup Wizard'. Below the header, the text 'Welcome to the AP Group Web Manager' is displayed. Further down, there is a line of text that reads '---The AP Group Management System'. At the bottom right corner, there is a blue button with the text 'Next' in white.

Figure 3-2 Initialization Wizard-Welcome Page

Step2: Change your Administrator password.

Setup Wizard

Step 1/2 Change your administrator password

Password:

Confirm:

[Save](#)

Figure 3-3 Initialization Wizard-Modify Administrator Password



Note 3-6: It is highly recommended and a best security practice to change the default passwords for the predefined login accounts.

Note

Step3: Select your country code and time zone. (Only for -RW models)

Setup Wizard

Step 2/3 Choose your Country or Region

Country/Region:

Time Zone:

[Save](#)

Figure 3-4 Initialization Wizard-Select country code and time zone

Step4: Create your own WLAN. You can click [‘Create New WLAN’](#) for details.

Setup Wizard

Step 2/2 Create New WLAN

WLAN Name:

Band: 2.4GHz 5GHz

Security Level:

Key Management:

Password Format:

Password:

Confirm:

[Save](#)

Figure 3-5 Initialization Wizard-Create New WLAN



Note

Note 3-7: The VLAN assignment for the WLAN is not available in the initial wizard phase. You can modify the mapping VLAN value after the initial setup is completed, using the steps described in “[Modify your WLAN](#)” section which can be used to modify existing WLANs.

Step5: Complete Confirmation Page

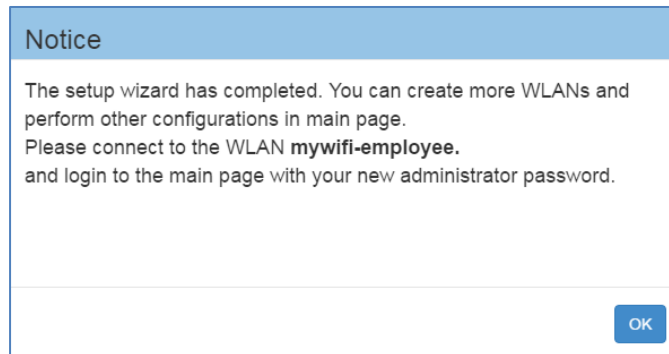


Figure 3-6 Initialization Wizard-Complete Notice



Note

Note 3-8: While configuring the Initialization Wizards, please make sure your configuring terminal is connected to the pre-defined WLAN 'mywifi-xxxx' to keep the communication operational between AP group (or AP) and web browser. If not, you may encounter the following prompt and fail to complete the wizard configuration correctly:



Note

Note 3-9: The pre-defined WLAN 'mywifi-xxxx' is deleted when the wizard is completed. For additional configuration through the wireless connection you need to connect to the new WLAN created in the wizard and then login to the web main page with your new administrator password.

Connecting to the AP Group via Web

When the initializing wizard has completed and new WLANs have been created, you can connect to each of the WLANs and browse the URL <http://mywifi.al-enterprise.com:8080> to manage the AP group.

Another way of connecting to the AP group web management system is through the AP group management IP address. For information on setting of the Management IP address refer to [AP Group Management](#).

The AP group web management system can be accessed through the wired network if the group management IP address is configured and is reachable.

4 Introduction to the AP Group Web Management System

Dashboard Overview

The Stellar AP provides a visualized dashboard for AP and client monitoring and configuration. As illustrated in Figure 4-1 Dashboard Overview, the dashboard is split into sub-windows for [WLAN Window](#), [AP Window](#), [Client Window](#) and [Monitoring Window](#), [System Page](#), [Wireless Page](#) and [Access Page](#). You can briefly check the WLANs, APs or Clients in the dashboard or double click the framework of each window to see the details.

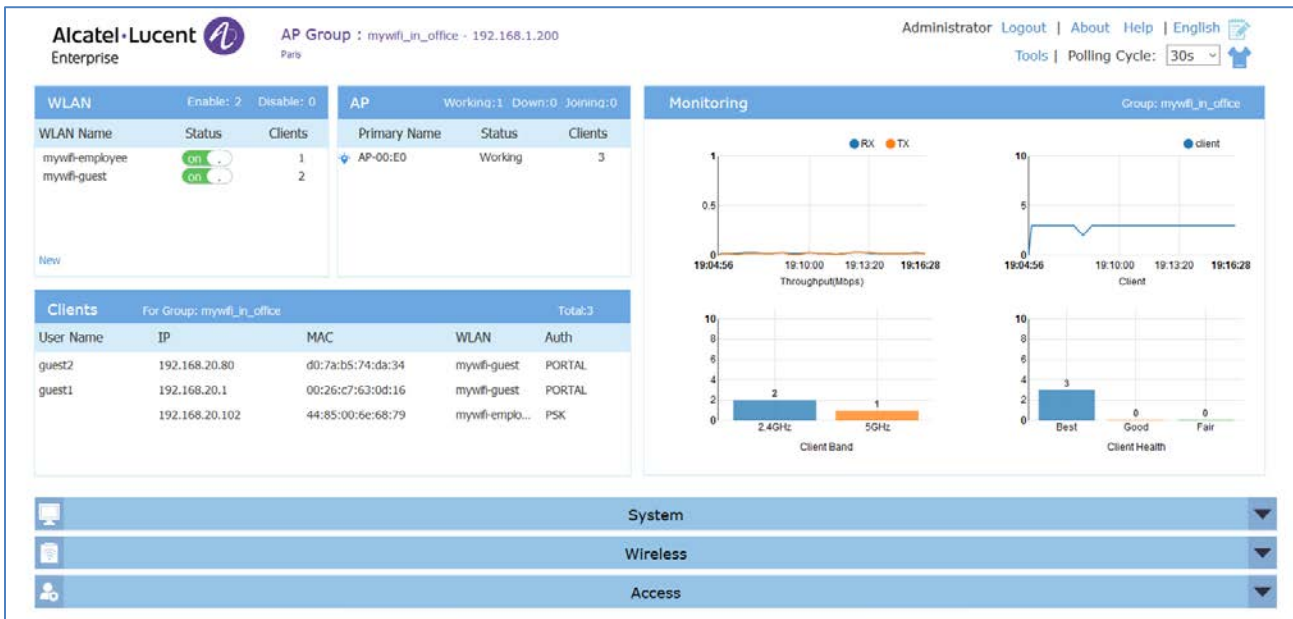


Figure 4-1 Dashboard Overview

WLAN Window

The WLAN configuration window is integrated with all WLAN related monitoring and operation tasks. There are two modes for the WLAN Window, Simplified Mode illustrated in Figure 4-2 and Advanced Mode illustrated in Figure 4-3. You can easily launch the Advanced Mode from Simplified Mode by clicking the WLAN Window Frame.

WLAN			Enable: 2	Disable: 0
WLAN Name	Status		Clients	
mywifi-employee	<input checked="" type="checkbox"/> on		1	
mywifi-guest	<input checked="" type="checkbox"/> on		2	

New

Figure 4-2 WLAN Window-Simplified Mode



Note 4-1: The label below displays the number of enabled or disabled WLANs.

Note

WLAN	Enable: 0	Disable: 1
------	-----------	------------

Table 4-1: Key word specification in WLAN Window (Simplified Mode)







WLAN Name	Label or name of WLAN, which is composed by 0-9, a-z or other string.
Status	Indicates the WLAN state, <input checked="" type="checkbox"/> on indicates that WLAN is in broadcast state, while <input type="checkbox"/> off indicates WLAN is not in broadcast state.
Clients	The number of users connected to the WLAN.
New	Launch the WLAN creation window.

WLAN Configuration				
WLAN Name	Status	Security Level	Captive Portal	Operate
mywifi-1X	Enable	enterprise	No	<input checked="" type="checkbox"/> <input type="checkbox"/> wmm
mywifi-employee	Enable	personal	No	<input checked="" type="checkbox"/> <input type="checkbox"/> wmm
mywifi-guest	Enable	open	Yes	<input checked="" type="checkbox"/> <input type="checkbox"/> wmm
mywifi-portal	Enable	open	Yes	<input checked="" type="checkbox"/> <input type="checkbox"/> wmm

Create

Figure 4-3 WLAN Window-Advanced Mode

Table 4-2 Key word specification in WLAN Configuration Window (Advanced Mode)

WLAN Name	Label or name of WLAN.
Status	Indicates the WLAN state,  indicates that WLAN is in broadcast state, while  indicates WLAN is not in broadcast state.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open.
Captive Portal	Indicates whether the WLAN is using captive portal authentication. Yes means the WLAN is configured with captive portal authentication, while No means the WLAN is without captive portal authentication.
Operate	Operation for the WLAN.  see Modify Your WLAN ,  see Delete Your WLAN ,  see Modify WLAN QoS .
	Link for Creating new WLAN, see Create New WLAN .

AP Window

AP Window is integrated with all APs and group related monitoring and configuration functions. Similar to the WLAN Window, there are two modes for AP Window, Simplified Mode illustrated in Figure 4-4 and Advanced Mode illustrated in Figure 4-5. You can easily launch the Advanced Mode from Simplified Mode by clicking the AP Window Frame.



AP		Working: 2 Down:0 Joining:0	
	Primary Name	Status	Clients
	AP-00:E0	Working	2
	AP-00:F0	Working	3


Figure 4-4 AP Window-Simplified Mode

Table 4-3 Key word specification in AP Window (Simplified Mode)

Primary Name	AP Mac address.
Status	Connection status of AP, there are three indication for AP status, they are Working, Down and Joining. See more in Note 4-2.
Clients	The total number of users currently connected to AP.



Note

Note 4-2: AP has three status indications when connecting to group, they are ‘working’ which indicates that AP has connected to the PVC successfully and is working normally, ‘Down’ indicates that AP is disconnected from the group, and ‘Joining’ indicates that AP is requesting to join the group but hasn’t completed yet. The Label in AP Window indicates the number of APs in each status. 

Select an AP from the AP Configuration Window (Advanced Mode), you can learn the detailed information of the AP, see in Figure 4-5.

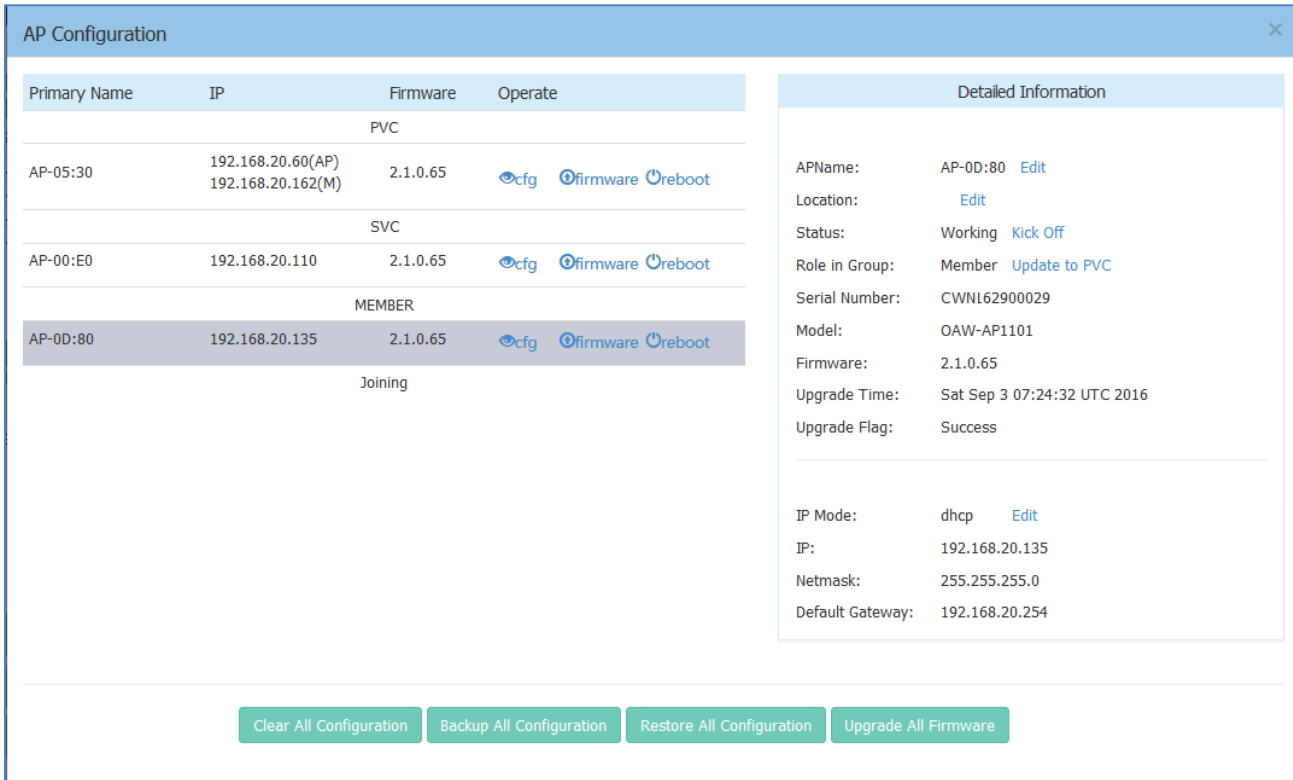










Figure 4-5 AP Window-Advanced Mode

Table 4-4: Key word specification in AP Configuration Window (Advanced Mode)

Primary Name	Name of the AP.
IP	IP address of the AP.
Firmware	Firmware version of the AP.
Operate	There are three optional operations for the AP:  ,  and  .
PVC	Primary Virtual Controller in the AP group.
SVC	Secondary Virtual Controller in the AP group.
MEMBER	Other member APs in the group except PVC/SVC.
Joining	APs in joining state, needs to be authorized to join the group.
Pending	APs in pending state, needs to upgrade the software to join the group.
Neighboring Group	Neighboring AP groups with different group ID.
	Checking the detailed configuration on the AP.
	Upgrading firmware for the AP.
	Execute to reboot the AP.
	Restore factory settings for all the APs in the group.
	Backup the configuration of the AP group.

Restore All Configuration	Restore the configuration for the AP group.
Upgrade All Firmware	Update the firmware for all the APs in the group.
Detailed Information	Detailed information for the selected AP.
AP Name	Name of the AP.
Location	Location of the AP.
Status	Connection status of AP, there are three indications for AP status, they are Working, Down and Joining. See more in Note 4-2.
Kick Off	Remove the AP from the group. When an AP is removed from the group, it changes into Joining state until the administrator permits it to join the group again. See more in Allow an AP to Join the Group .
Role in Group	AP role in the group, including PVC, SVC and Member.
Update to PVC	Upgrade the member or SVC to be the PVC of the AP group.
Serial Number	Serial Number of the AP selected.
Model	Product Model of the AP selected.
Upgrade Time	Last firmware upgrade time.
Upgrade Flag	Flag of last time firmware upgrade. Success means the firmware was upgraded successfully on the Upgrade Time, Failed means the firmware wasn't upgraded successfully on the Upgrade Time.
IP Mode	The way by which the AP attains its IP address, dynamically assigned from DCHP server or static IP configured manually. <input checked="" type="radio"/> DHCP <input type="radio"/> Static
IP	IPv4 address of the AP selected.
Netmask	Netmask of the IPv4 address of the AP selected.
Default Gateway	Default Gateway of the AP selected.

Client Window

Client Window displays all the connected clients. Similar to the WLAN Window, there are two modes for Client Window, Simplified Mode illustrated in Figure 4-6 and Advanced Mode illustrated in

The screenshot shows a 'Clients Information' window with a search bar and a close button. It contains a table of clients and a 'Client Detail' pane on the right.

User Name	IP	MAC	WLAN	Access Point		
	192.168.20.17	44:85:00:6e:68:79	2g5gmixed	AP-00:E0	✘	🗑️
guest1	192.168.20.12	a4:08:ea:02:10:e8	mywifi-g...	AP-00:E0	✘	🗑️
	192.168.20.210	98:f1:70:2c:52:e5	mywifi-psk	AP-00:E0	✘	🗑️

Client Detail

- User Name:
- IP: 192.168.20.17
- MAC: 44:85:00:6e:68:79
- WLAN: 2g5gmixed
- Access Point: 34:e7:0b:00:00:e0
- AP Name: AP-00:E0
- Auth: PSK
- Attached Band: 5GHz
- Online Time: 0days 0h 8m 52s
- Session Time:
- RSSI: 46
- Working Mode: 11AC_VHT80
- PHY Rx rate: 761Mbps
- PHY Tx rate: 761Mbps
- Rx rate: 0.01Mbps

Figure 4-7. You can launch the Advanced Mode from Simplified Mode by clicking the Client Window Frame.

Clients				For Group: mywifi_in_office	Total:3
User Name	IP	MAC	WLAN	Auth	
guest2	192.168.20.80	d0:7a:b5:74:da:34	mywifi-guest	PORTAL	
guest1	192.168.20.1	00:26:c7:63:0d:16	mywifi-guest	PORTAL	
	192.168.20.102	44:85:00:6e:68:79	mywifi-empl...	PSK	

Figure 4-6 Clients Window-Simplified Mode

Table 4-5: Key word specification in Client Window (Simplified Mode)

For Group: mywifi_in_office	Clients connected to the group.
For WLAN: mywifi-employee	Clients connected to the specified WLAN in the group.
For AP: 34:e7:0b:00:00:e0	Clients connected to the specified AP in the group.
User Name	User Name of the client.
IP	IPv4 address of the client.
MAC	MAC address of the client.
WLAN	WLAN to which the client connected.
Auth	Authentication type: Open, Portal (Captive portal), PSK (Personal), 802.1X (Enterprise).



Clients Information					Client Detail	
User Name	IP	MAC	WLAN	Access Point		
	192.168.20.17	44:85:00:6e:68:79	2g5gmixed	AP-00:E0	✖	🗑
guest1	192.168.20.12	a4:08:ea:02:10:e8	mywifi-g...	AP-00:E0	✖	🗑
	192.168.20.210	98:f1:70:2c:52:e5	mywifi-psk	AP-00:E0	✖	🗑

User Name:	
IP:	192.168.20.17
MAC:	44:85:00:6e:68:79
WLAN:	2g5gmixed
Access Point:	34:e7:0b:00:00:e0
AP Name:	AP-00:E0
Auth:	PSK
Attached Band:	5GHz
Online Time:	0days 0h 8m 52s
Session Time:	
RSSI:	46
Working Mode:	11AC_VHT80
PHY Rx rate:	761Mbps
PHY Tx rate:	761Mbps
Rx rate:	0.01Mbps

Figure 4-7 Clients Window-Advanced Mode

Table 4-6: Key word specification in Client Information Window (Advanced Mode)

User Name	User Name of the client.
IP	IPv4 address of the client.

MAC	MAC address of the client.
WLAN	WLAN to which the client connected.
Access Point	Access point to which the client connected.
	Force the client to disconnect the wireless network.
	Remove the client from the wireless network and put it within the blacklist. If removed, the client can be displayed and operated in the blacklist window .
AP Name	Name of access point that the client connected.
Auth	Authentication type: Open, Portal (Captive Portal), PSK (Personal), 802.1X (Enterprise).
Attached Band	The radio band through which the client attach to AP, 2.4GHz or 5GHz.
Online Time	Time when the client attached to the wireless network.
Session Time	Time when the client has passed the captive portal authentication, only for captive portal clients.
RSSI	Received Signal Strength Indication of the client, Value 0-99.
Working Mode	Wireless working mode of the client.
PHY Rx rate	Physical receive rate of the client.
PHY Tx rate	Physical sending rate of the client.
Rx rate	Packet receive rate of the client.
Tx rate	Packet sending rate of the client.
Download	Total download data size since the client connected to the wireless network.
Upload	Total upload data size since the client connected to the wireless network.
Device type	Device type of the client.
OS Type	Operating system type of the client.

Monitoring Window

The monitoring window displays the utilization of the wireless network, including statistics of traffic throughput and client working state.

The monitoring window can monitor from four different levels: group level, WLAN level, AP level and client level, illustrated in Figure 4-8, Figure 4-9, Figure 4-10 and Figure 4-11.

The group monitoring is the default display, you can select to monitor certain WLAN/AP/client from the WLAN Window/AP Window/Client Window on left side of the [Dashboard](#).

The monitoring window is automatically refreshed every 30 seconds by default, and the data polling cycle can be set to 30s /60s /120s.

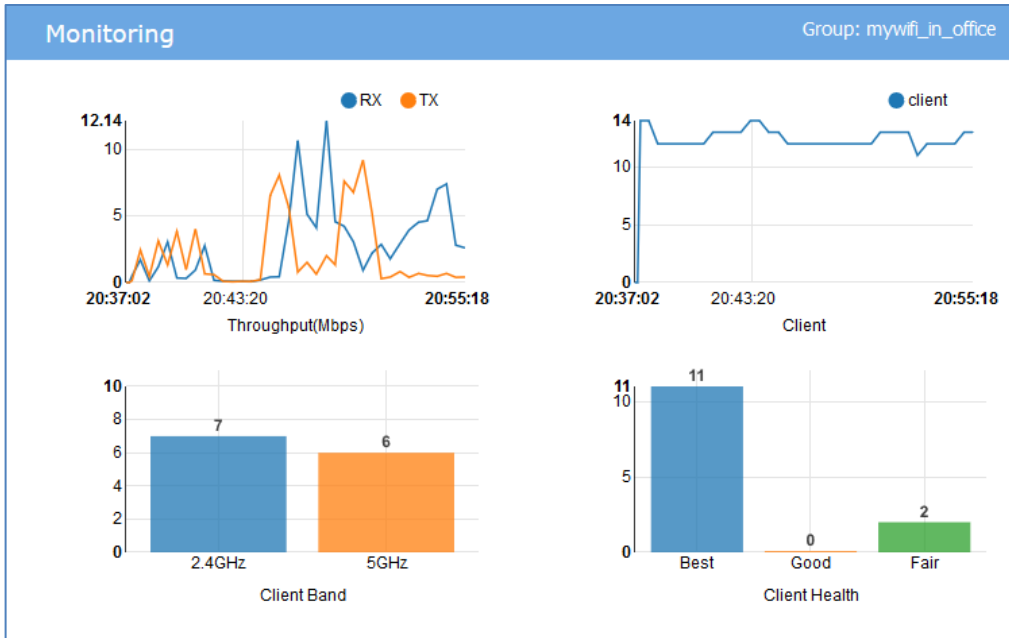


Figure 4-8 Monitoring Window - AP Group

Table 4-7: Key word specification in AP group Monitoring Window

RX	Total receiving rate of the AP group.
TX	Total sending rate of the AP group.
Client	The number of clients connected to the AP group.
Client Band	The working band distribution of clients connected to the AP group, including number of clients working on 2.4GHz band and number of clients working on 5GHz band.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: <ul style="list-style-type: none"> Best— Number of clients whose signal strength is more than 30. Good— Number of clients whose signal strength is between 15 -30. Fair—Number of clients whose signal strength is less than 15.

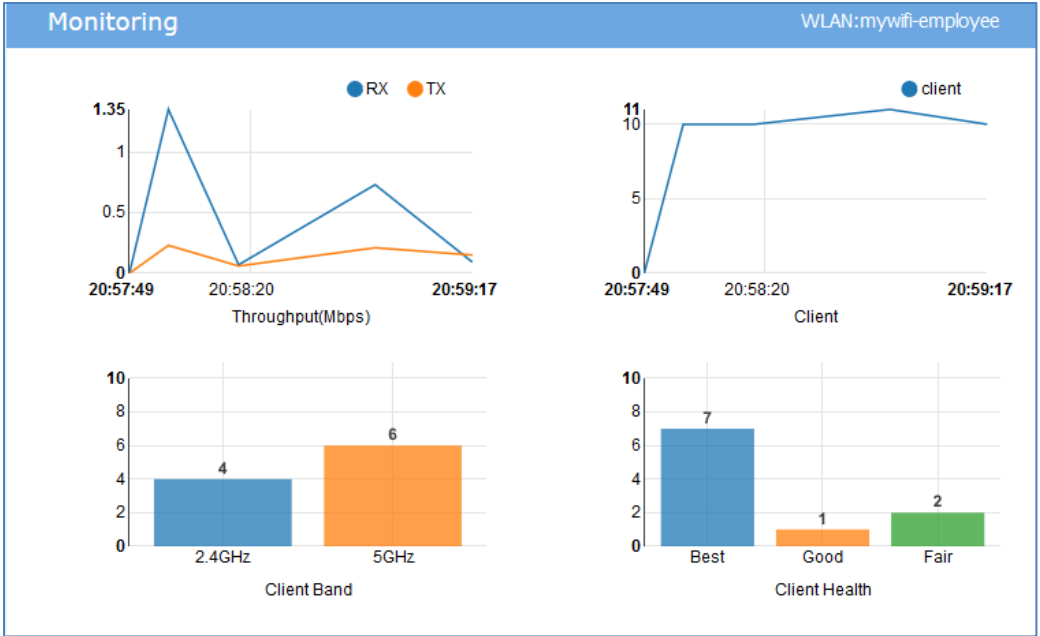


Figure 4-9 Monitoring Window - WLAN

Table 4-8: Key word specification in WLAN Monitoring Window

RX	Total receiving rate of the WLAN.
TX	Total sending rate of the WLAN.
Client	The number of clients connected to the WLAN.
Client Band	The working band distribution of clients connected to the WLAN, including number of clients working on 2.4GHz band and number of clients working on 5GHz band.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: <ul style="list-style-type: none"> Best— Number of clients which signal strength is more than 30. Good— Number of clients which signal strength is between 15 ~30. Fair—Number of clients which signal strength is less than 15.

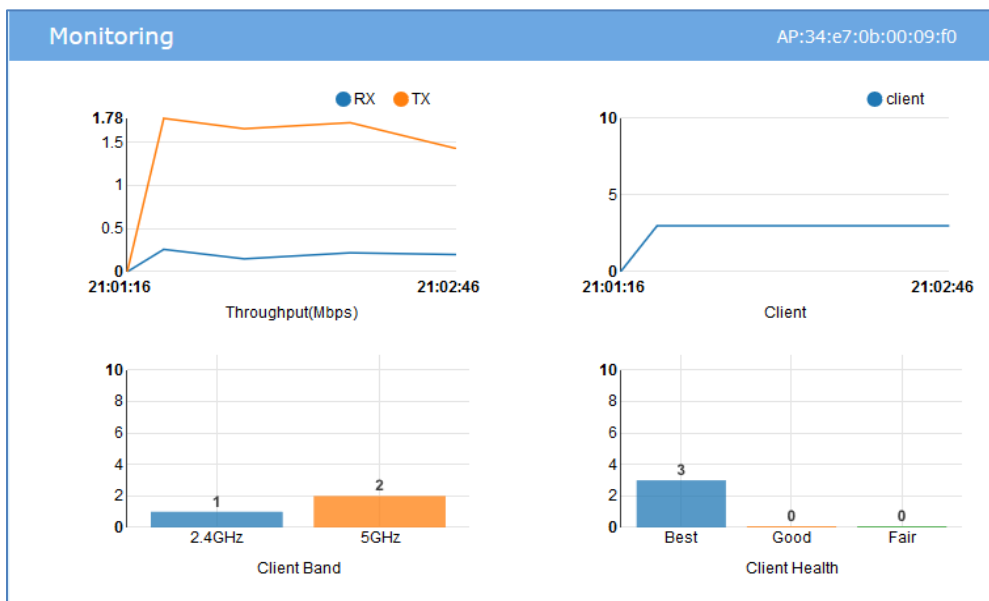


Figure 4-10 Monitoring Window - AP

Table 4-9: Key word specification in AP monitoring Window

RX	Total receiving rate of the AP.
TX	Total sending rate of the AP.
Client	The number of clients connected to the AP.
Client Band	The working band distribution of clients connected to the AP, including number of clients working on 2.4GHz band and number of clients working on 5GHz band.
Client Health	The wireless connection quality between client and Stellar AP, it is judged by the signals of client, and classified as below: <ul style="list-style-type: none"> • Best— Number of clients which signal strength is more than 30. • Good— Number of clients which signal strength is between 15 ~30. • Fair—Number of clients which signal strength is less than 15.

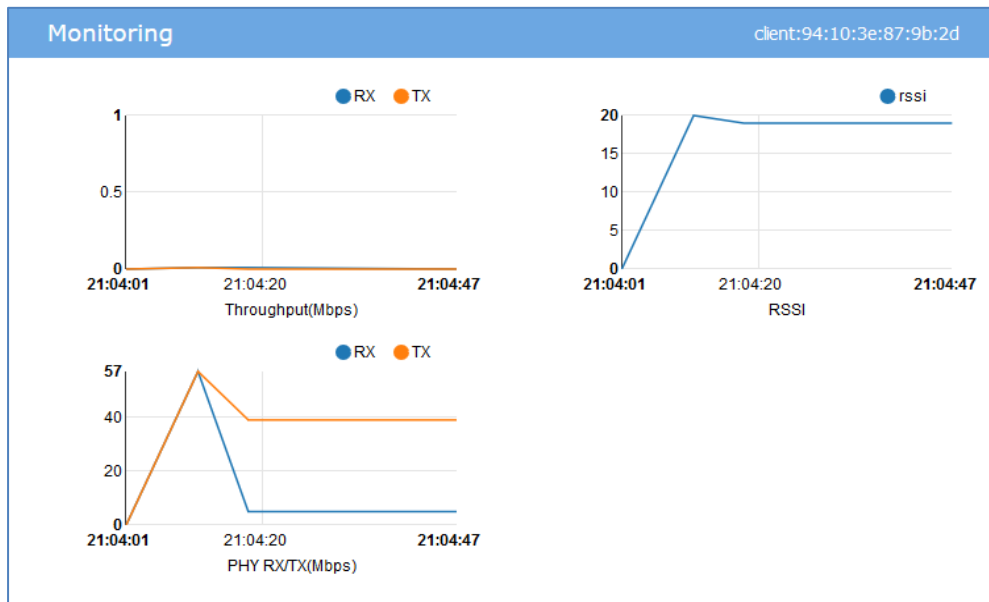


Figure 4-11 Monitoring Window - Client

Table 4-10: Key word specification in Client Monitoring Window

RX	Receiving rate of the client.
TX	Sending rate of the client.
RSSI	Received Signal Strength Indication of the client
PHY RX	Physical receiving rate of the client.
PHY TX	Physical sending rate of the client.



Note 4-3: The data shown in the monitoring window is collected and displayed while the window is open. The data is not stored and no historical view of the data is available.

Note

System Page

The System page focus on the basic settings of the AP group, including: AP group attributes, system management accounts, system time and syslog.

It is divided into three windows in System Page: General window, System Time window and Syslog window, illustrated in Figure 4-12 System page.

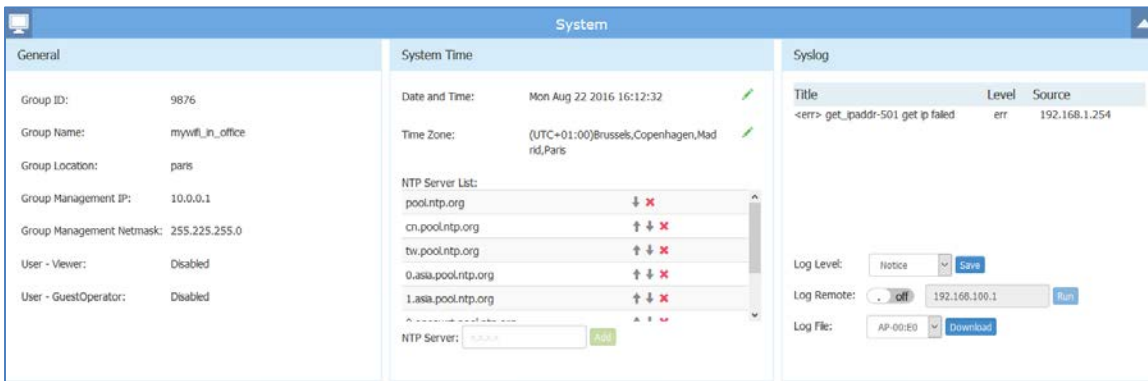


Figure 4-12 System page

General Window

General Window displays the basic information of the wireless system. There are two modes for General Window, Simplified Mode illustrated in Figure 4-13 General Window - Simplified Mode and Advanced Mode illustrated in Figure 4-14 General Configuration Window -Advanced Mode. You can launch the Advanced Mode from Simplified Mode by clicking the General Window Frame.

General	
Group ID:	8818
Group Name:	mywifi_in_office
Group Location:	Paris
Group Management IP:	192.168.20.162
Group Management Netmask:	255.225.255.0
User - Viewer:	Enable
User - GuestOperator:	Enable

Figure 4-13 General Window - Simplified Mode

The General Configuration window includes two tabs: **Group Info Management** and **Account management**, illustrated in Figure 4-14 .

Group Info Management

Group Info Management contains the basic information of the AP group, you can edit it with your own group settings to identify a private Wi-Fi network.

Figure 4-14 General Configuration Window -Advanced Mode

Table 4-11: Key word specification in Group Info Management Tab

Group Name	Name of the AP group.
Location	Location of the AP group.
Group Management IP	A virtual IP address for AP group management, default is 10.0.0.1, see more in Note 4-4.
Group Management Netmask	Netmask of Group Management IP.
Group ID	Identification of the AP group, default is 100.



Note

Note 4-4: AP of a group usually obtains its IP address dynamically from a DHCP server, and it is difficult to keep the same assigned IP address for the AP. So managing the AP group by the AP's dynamic IP address can be difficult. The Group Management IP (GMIP) is a static IP address configured for the AP group web management, and you can manage the AP group via accessing the URL: <http://GMIP:8080> by wired or wireless. The GMIP is configured on the PVC of the AP group, and you have to make sure the GMIP on the PVC is routable from your configuring terminal (browser). A recommended method is to choose an idle IP address from the AP group domain to configure as a GMIP.

Account Management

There are three login accounts with different privileges: Administrator, Viewer, and GuestOperator.

Administrator account allows configuring and viewing the whole system, Viewer account allows checking configuration and monitoring of WLAN operations, while GuestOperator ONLY has the privilege to edit the guest portal users. Each account can be logged in at the same time.

By default, only the Administrator account is enabled; Viewer and GuestOperator are disabled.

In the Account Management tab, you can enable/disable the Viewer and GuestOperator account, change the password for Administrator, Viewer and GuestOperator, illustrated in Figure 4-15.

The screenshot shows a web interface titled "General Configuration" with a sub-tab "Account Management". It contains three sections for user accounts: Administrator, Viewer, and GuestOperator. Each section has a "Password:" field with a strength indicator (e.g., "0-9a-zA_Z_") and a "Confirm:" field. The Viewer and GuestOperator sections also have "Enable/Disable" radio buttons. At the bottom, there is a "Tip: In order to ensure user security, please set the different password!" and "Cancel" and "Save" buttons.

Figure 4-15 Account Management Tab

The password must be composed by 0-9 or a-z with the length of 4 to 16 characters.

Certificate Management

AP support 3 types of build-in certificates, user can customize their own certificate on demand:

- (1) Internal Web Server - The certificate is utilized to setup the secure connection between web browser and AP web server for https management. By default, there is a build-in CA certificate generated by ALE with the domain 'mywifi.al-enterprise.com'. User can use open SSL to generate his/her own CA certificate and replace the default one (User needs to use domain 'mywifi.al-enterprise.com' for your own certificate because the login URL cannot be changed).
- (2) Internal Portal Server - The certificate is utilized to setup the secure connection between captive portal page and the AP web server for protecting the user login credentials being stolen. User can define its own captive login URL and replace the certificate accordingly.
- (3) External Portal Server - The certificate is utilized to setup the secure connection between captive portal page and the AP web server for protecting the user login credentials being stolen. User can define its own captive login URL and replace the certificate accordingly.

General Configuration

Group Info Management Account Management Certificate Management

Certificate

Name: (4-20 chars)

Certificate Type:

Certificate File: No file chosen

Password: (4-16 chars)

Confirm:

Certificate Format:

Certificate List

Name	Certificate	Type	Format	Status	Operate
------	-------------	------	--------	--------	---------

Figure 4-16 Certificate Management Tab

System Time Window

It is important to ensure the system time is correct, this is because proper communication between network elements and syslog for troubleshooting are based on the correct time.

Network Time Protocol (NTP) is a networking protocol for time synchronization between the elements across the network. If you don't have a private NTP server in your network, it is suggested to add your favorite NTP server and prioritize it to the top of the NTP Server List, or use the default NTP servers in the system, illustrated in Figure 4-17 System Time.

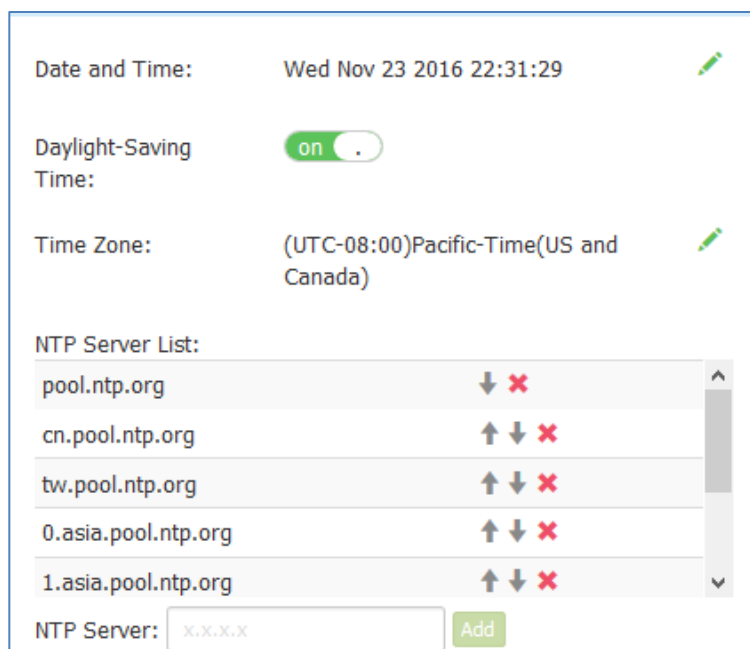


Figure 4-17 System Time Window

If configured, APs in the group synchronize the time with NTP sever in 15-minute intervals.

You can also specify the **Time Zone** and daylight-saving time of the AP group to coordinate with the local time. The daylight-saving time is automatically enabled on supporting time zone.



Note

Note 4-5: In order to ensure time synchronization, it is recommended to check the reachability before adding an NTP server. If the NTP server is not configured or is unreachable, an AP reboot may lead to variation in time.

Syslog Window

Syslog is a standard for message logging. Syslog is used for system management and security auditing as well as general informational, analysis, and debugging messages.

APs in group generate logs following the standard of Syslog, you can view logs and configure corresponding attributes in the Syslog Window.

Upper part of the Syslog Window displays **error** (and lower, see in Note 4-5) level Syslog generated by APs in the group.

Title is the content of the log message;

Level is the severity of the log message;

Source is the generator's IP address of the log message;

When you move the mouse cursor to certain row of log message, the generating time of the log displays, illustrated in Figure 4-18 Syslog Window.

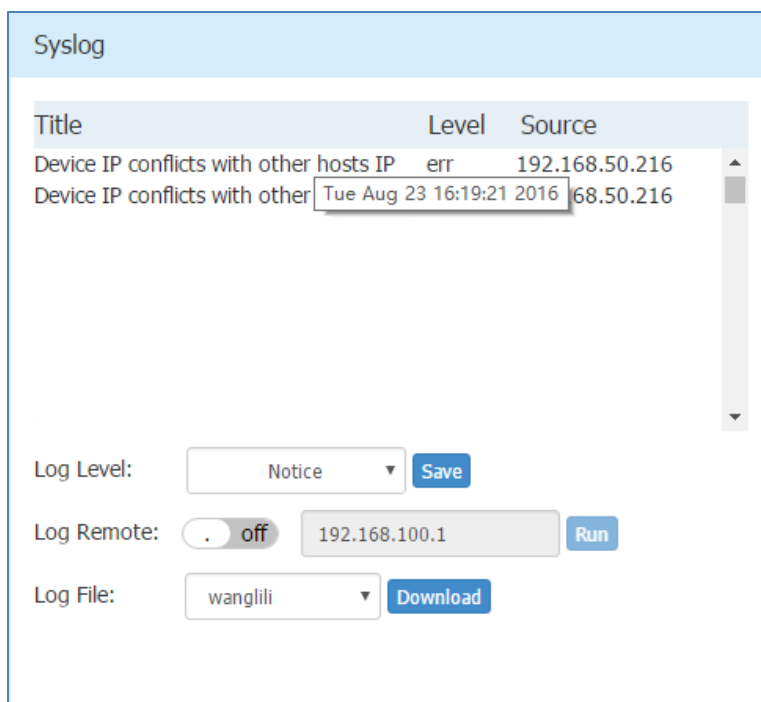


Figure 4-18 Syslog Window

Log Level: Setting of Syslog message severity. If certain level is specified, the AP group will generate Syslog messages including all lower levels. That is, if Syslog messages are separated by individual severity, a Warning level entry will also be included in Notice, Info and Debug processing. Notice is the default level of Syslog setting, and the system generates logs including levels of Notice, Warning, Error, Critical, Alert and Emergency.

Log Remote: Setting of remote log server. If configured and enabled, besides storage in local file, Syslog messages of all APs in group can be sent to and stored in the server once generated.

Log File: Download the log file on a selected AP in the group to your configuring machine. Syslog messages are stored in a local file when generated. For one AP, up to 1MB size of syslog messages can be saved in the local log file. The log file is FIFO, new syslog messages will replace the old ones if the size exceeds 1MB.



Note

Note 4-5: Syslog is divided into eight levels, and lowest level 0 is Emergency severity while highest level 7 is Debug severity. Definition of Syslog severity as follow:

Level Value	Severity	Keyword	Description
0	Emergency	emerg	System is unusable
1	Alert	alert	Should be corrected immediately
2	Critical	crit	Critical conditions
3	Error	err	Error conditions
4	Warning	warning	May indicate that an error will occur if action is not taken
5	Notice	notice	Events that are unusual, but not error conditions
6	Informational	info	Normal operational messages that require no action
7	Debug	debug	Information useful to developers for debugging the application

Wireless Page

The Wireless page focuses on advanced wireless functions, including three windows: RF (Radio Frequency), Wireless Intrusion Detection System/Wireless Intrusion Prevention System (wIDS/wIPS), and wireless performance optimization, illustrated in Figure 4-19 Wireless Page.

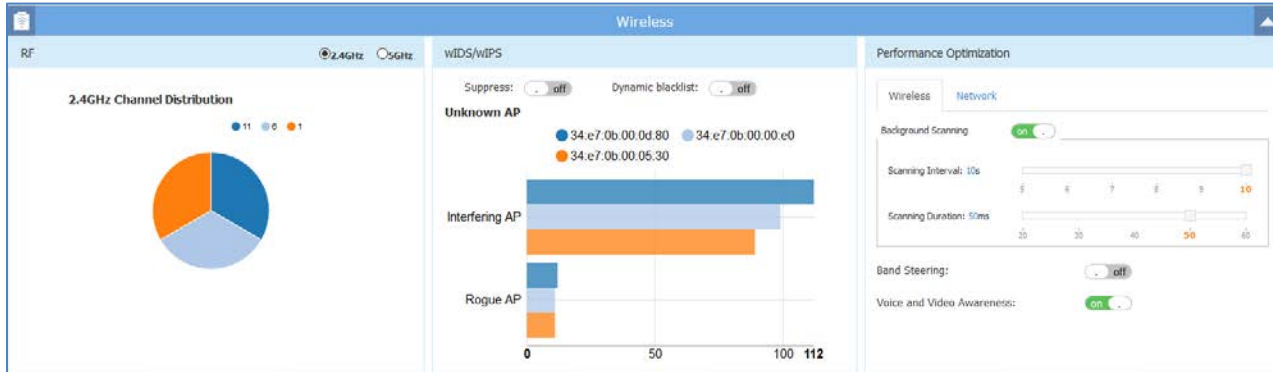


Figure 4-19 Wireless Page

RF Window

Radio Frequency (RF) window is for monitoring the wireless utilization and configuring wireless attributes like channel and transmitting power.

There are two modes for RF Window, Simplified Mode illustrated in Figure 4-20 RF-2.4GHz and Advanced Mode illustrated in Figure 4-22. You can launch the Advanced Mode from Simplified Mode by clicking the RF Window Frame.

Panel of RF displays the monitoring information of channel distribution, can be selected on 2.4G band or 5G band. Channels are separated by different colors, when you move the mouse cursor to the colored section of the pie chart, it displays the clients connected to the AP group through 2.4G band or 5G band, illustrated in Figure 4-20 RF-2.4GHz and Figure 4-21 RF-5GHz.

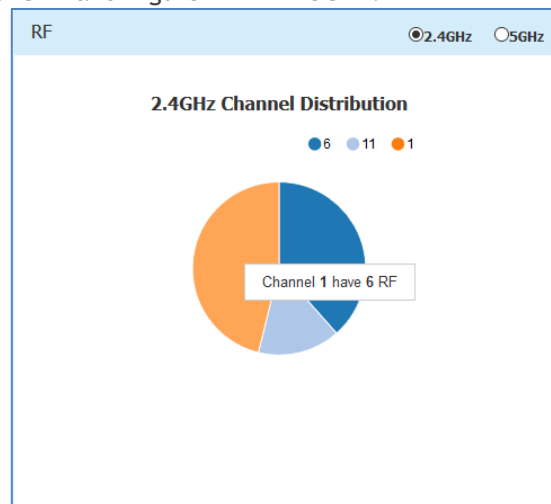


Figure 4-20 RF-2.4GHz

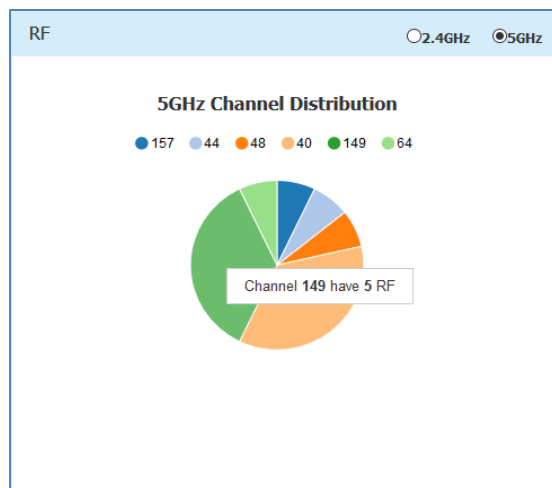


Figure 4-21 RF-5GHz

RF Configuration					RF Information	
AP	2.4GHz Channel	2.4GHz Power(dBm)	5GHz Channel	5GHz Power(dBm)		
AP-0D:80	auto(11)	auto(20)	auto(149)	auto(11)	AP Name: AP-0D:80	
AP-00:E0	auto(6)	auto(21)	auto(149)	auto(23)	AP MAC: 34:e7:0b:00:0d:80	
AP-05:30	auto(1)	auto(20)	auto(44)	auto(23)	2.4GHz	
					ACS: ON	
					APC: ON	
					Channel: auto(11)	
					Power(dBm): auto(20)	
					5GHz	
					ACS: ON	
					APC: ON	
					Channel: auto(149)	

Figure 4-22 RF Configuration Window

The left side of the RF Configuration window displays the list of working channels and transmitting power of all APs in the group. When you pick an AP from the list, its detailed RF information is displayed on the right side of the window, illustrated Figure 4-22.

By default, the working channel and transmitting power are automatically managed by Radio Dynamic Adjustment™ (RDA) technology. If you want to set the channel and power values for an AP manually, you need to disable the ACS/APC function on the AP, illustrated in Figure 4-23.

AP	2.4GHz Channel	2.4GHz Power(dBm)	5GHz Channel	5GHz Power(dBm)
AP-D7:50	auto(6)	auto(20)	auto(64)	auto(23)
AP-C2:70	auto(11)	auto(20)	auto(60)	auto(23)
AP-09:F0	auto(6)	auto(17)	auto(52)	auto(16)
AP-06:80	auto(1)	auto(17)	auto(132)	auto(22)
AP-05:90	auto(6)	auto(20)	auto(100)	auto(25)
AP-18:40	auto(1)	auto(14)	auto(56)	auto(16)
AP-C6:60	auto(1)	auto(17)	auto(116)	auto(25)
AP-1A:80	auto(11)	auto(17)	auto(100)	auto(22)
AP-0C:F0	auto(1)	auto(23)	auto(165)	auto(25)

Figure 4-23 Edit RF Information



Note

Note4-6: Radio Dynamic Adjustment™ (RDA) is a technology that adjusts the radio working channel and transmitting power according to the wireless environment around it. It includes Auto Channel Selection (ACS) and Auto Power Control (APC) functions. By default, RDA is enabled.

RDA relies on the background scanning feature. To ensure the RDA is effective, make sure the background scanning is ON, see “[Performance optimization Window](#)”.

wIDS/wIPS Window

wIDS/wIPS window focus on the wireless security of the Stellar AP network.

There are two modes for wIDS/wIPS Window, Simplified Mode illustrated in Figure 4-24 Figure 4-20 RF-2.4GHz and Advanced Mode illustrated in Figure 4-25. You can launch the Advanced Mode from Simplified Mode by clicking the wIDS/wIPS Window Frame.

Wireless is a borderless network and always works in an open environment which can be interfered with and attacked. It is useful to discover the surrounding wireless conditions, and based on that, provide instructions and tools to help administrators improve the quality of the wireless network. Usually there are two types of foreign unknown APs having a negative effect on the wireless network, they are interfering APs and rogue APs.

An **interfering AP** is an AP seen in the wireless environment but not connected to the wired network. The interfering AP can provide RF interference potentially, however, it is not considered a direct security threat, because it is not connected to the wired network.

A **rogue AP** is an unauthorized AP plugged into the wired side of the network or a foreign interfering AP broadcasting the same SSID with the AP group. A rogue AP is considered a security threat to the AP group.

Panel of wIDS/wIPS displays top 5 Stellar APs with interference from surrounding APs, and the top 5 Stellar APs with the most rogue APs surrounding, illustrated in Figure 4-24.

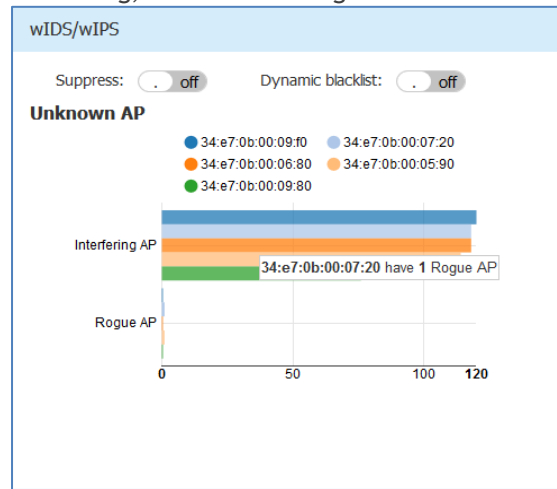


Figure 4-24 Top 5 AP interfered

AP whitelist: Both interfering APs and rogue APs are foreign unknown APs which can be found by background scanning and are listed in the unknown AP table, illustrated in Figure 4-25. However, some foreign APs found are trusted APs, those are not suitable for being classified as interfering APs or rogue APs. To avoid trusted foreign APs from being classified as interfering APs or rogue APs, you can add the trusted MAC address or MAC prefix to the AP whitelist, illustrated in Figure 4-26. If a foreign AP MAC address is added to the whitelist, it will not be displayed in the unknown AP list.

AP blacklist: Only rogue APs can be added to the blacklist. If a rogue AP is added to the blacklist, it cannot change its role to act as a client and access to the Stellar AP wireless network, illustrated in Figure 4-27.

Suppress: Enable/disable the function of rogue AP suppress. If enabled, the detecting Stellar AP will send DEAUTH frames to clients that have associated to the rogue AP, keeping the clients away from the unsafe wireless network. By default, the detecting Stellar AP does not send DEAUTH frames, see in Figure 4-24.

Dynamic blacklist: If enabled, all the rogue APs found will be added to the AP blacklist automatically, which prevents the rogue AP from changing its role to act as a client and access to Stellar AP wireless network. By default, the rogue AP is not added to the blacklist automatically, see in Figure 4-24.

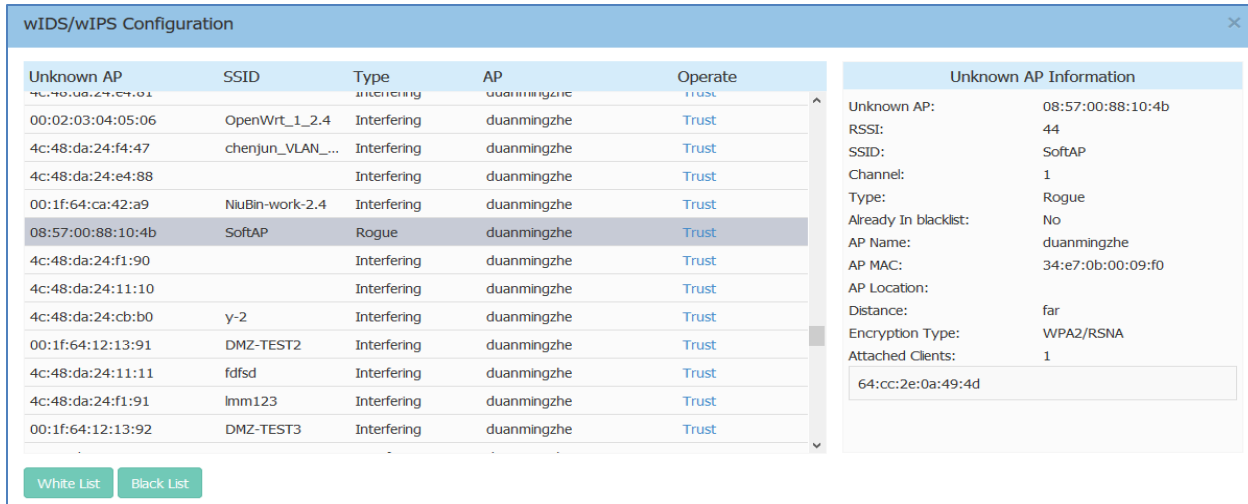


Figure 4-25 wIDS/wIPS Configuration Window

Table 4-12: Key word specification in wIDS/wIPS Configuration Window

Unknown AP Parameter	Specification
Unknown AP	MAC address of the unknown AP detected in the nearby.
SSID	SSID broadcasting by the unknown AP.
Type	Classified result of the unknown AP, can be interfering AP or rogue AP.
RSSI	Received Signal Strength Indication of the unknown AP.
Channel	Working channel of the unknown AP.
Already In Blacklist	Flag of rogue AP, depends on “the Dynamic blacklist” switch. If on, the rogue AP will be automatically added to the blacklist and the flag is true (Yes); If off or the unknown AP in list is not a rogue AP, the flag is false (No).
AP/AP Name	Name of detecting AP in the group.
AP MAC	MAC of detecting AP in the group.
AP Location	Location of detecting AP in the group.
Distance	Distance between unknown AP and the detecting AP in the group, it is measured by RSSI of the unknown AP: Nearest- RSSI>75; Near- 50<RSSI<75; Far-25<RSSI<50; Farthest-RSSI<25;
Encryption Type	The encryption type of the SSID being broadcast by the unknown AP.
Attached Clients	The number of clients attached to the unknown AP, and MAC of each client.
Operate	Operation to trust the foreign AP and delete it from the unknown AP list. If the foreign AP is trusted, its MAC address will be added to the whitelist.
White List	Whitelist of foreign APs. Those not considered as security threat to the Stellar AP network, you can add the trusted MAC address into whitelist manually, see more in Figure 4-26.
Black List	Blacklist of foreign APs. Those classified as rogue APs and pretending to act as a client to access the Stellar AP network. If <small>Dynamic blacklist:</small> <input checked="" type="checkbox"/> and there are detected rogue APs, all the rogue APs will be added to the blacklist automatically. You can remove a foreign AP from the blacklist by the Trust operation, see more in Figure 4-27.

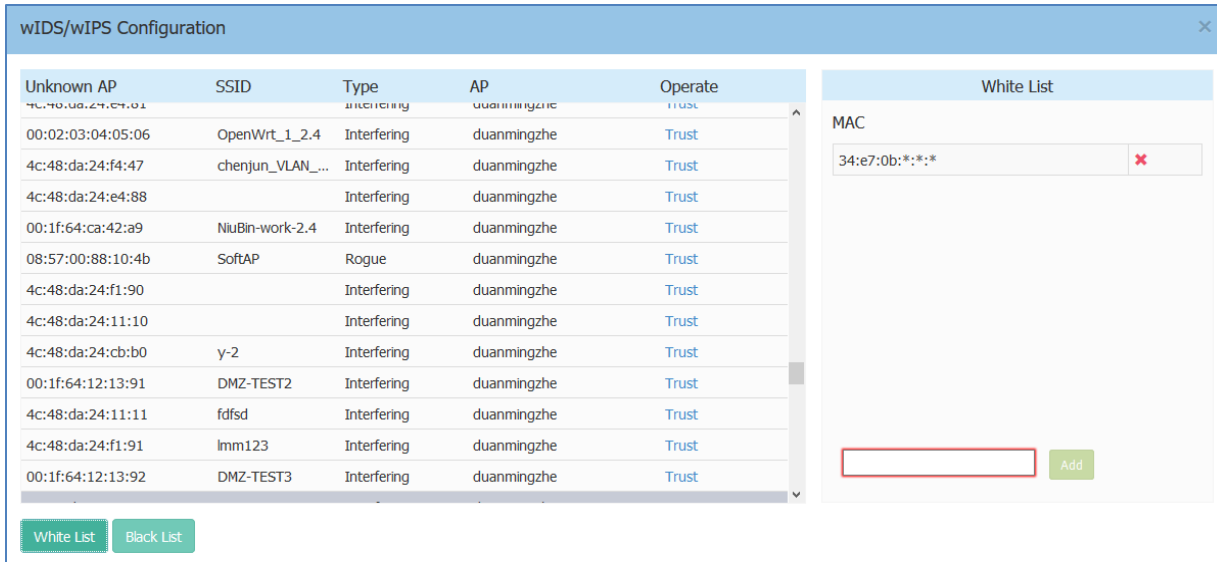


Figure 4-26 Foreign AP Whitelist

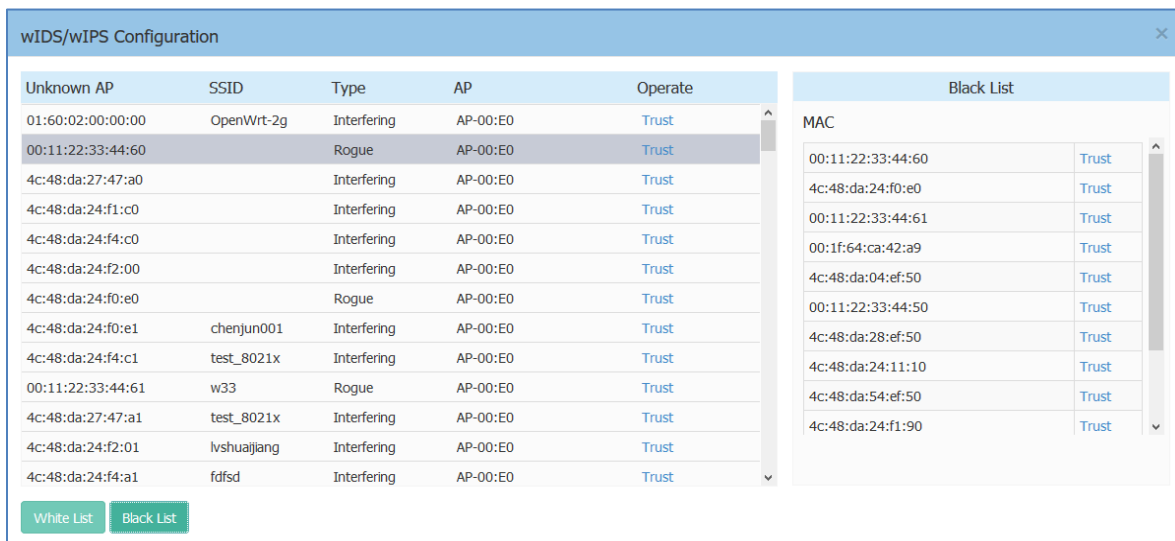


Figure 4-27 Foreign AP Black List

You can remove a foreign AP from the Unknown AP list or blacklist by the **Trust** operation. If you trust an unknown AP (interfering AP/rogue AP), it is removed from the Unknown AP list and blacklist, and its MAC address will be added to whitelist.

Performance Optimization Window

Wireless performance optimization is useful to enhance the quality of wireless service for users. The performance optimization includes Background Scanning, Band Steering, Voice and Video Awareness, and Multicast, illustrated in Figure 4-28.

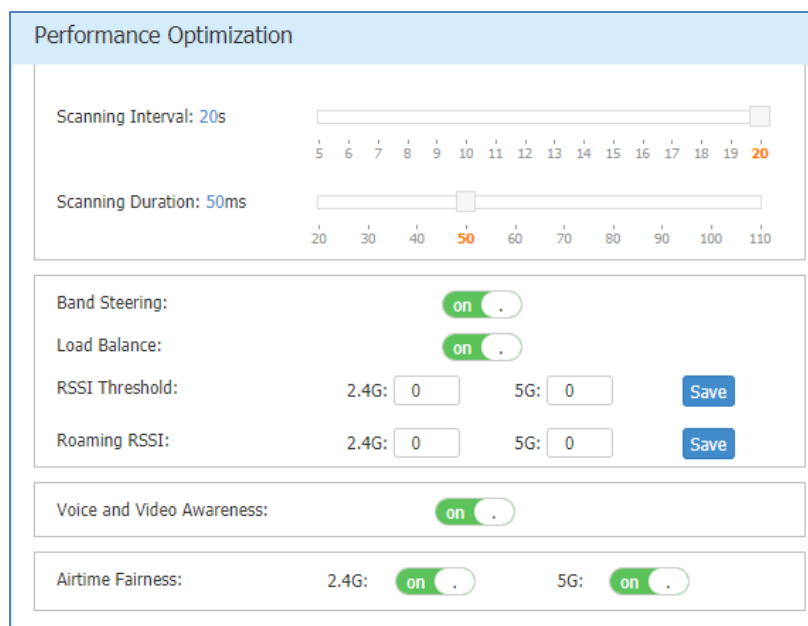


Figure 4-28 Wireless Optimization Tab

Background Scanning: Wireless networks operate in environments with electrical and radio frequency devices that can interfere with network communications. Microwave ovens, cordless phones, and even adjacent Wi-Fi networks are all potential sources of continuous or intermittent interference. The background scanning is able to examine the radio frequency (RF) environment in which the Wi-Fi network is operating, identify interference and classify its sources.

Background scanning is the basis for some advanced features such as: wIDS/wIPS, RDA (ACS/APC) etc. When it's turned OFF, the foreign AP detection and rogue suppression will stop and the RDA will drop its precision. By default, background scanning is enabled.

Voice and Video Awareness: Background scanning needs to be aware of existing traffic on the Stellar AP, if there is an ongoing voice/video service, scanning should not be done to ensure uninterrupted traffic; and allows to resume scanning when there is no active voice/video session. By default, Voice and Video Awareness feature is enabled.

Band Steering: Band steering supports **Prefer 5GHz**.

Prefer 5GHz feature assigns the clients to the 5 GHz band prior to the 2.4G band. Thus can reduce co-channel interference and increase available bandwidth for clients, because there are more channels on 5 GHz band. By default, band steering is enabled.

Load Balance: Based on the user amount of adjacent APs, clients are steered from a busy AP to an idle AP. By default, Load Balance is enabled.

Access Page

The Access page focuses on user access management including: user authentication, user blacklist and whitelist and user access control list.

The Access page is divided into three windows: Authentication window, Blacklist & Whitelist window, ACL window, illustrated in Figure 4-29.

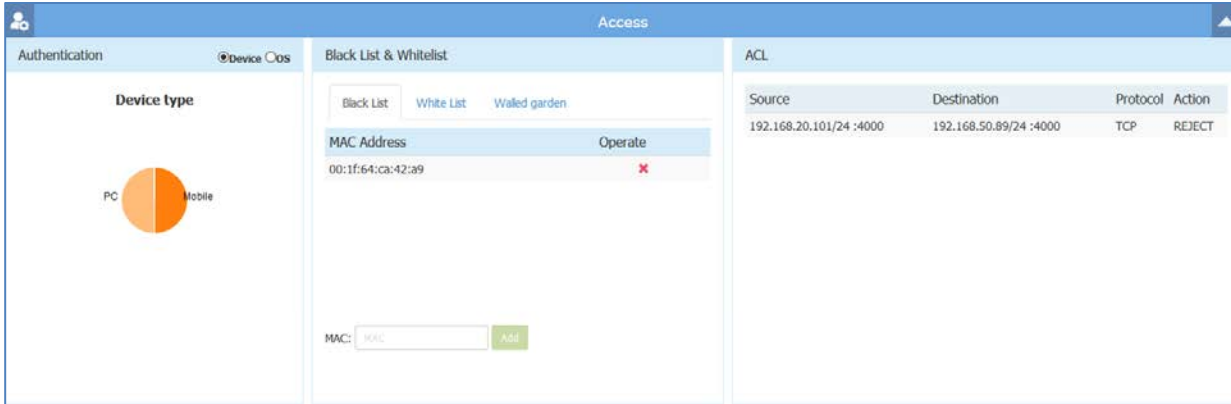


Figure 4-29 Access Page

Authentication Window

Authentication Window displays the user authentication and accessing information.

There are two modes for Authentication Window, Simplified Mode illustrated in Figure 4-30 and Advanced Mode illustrated in Figure 4-31. You can launch the Advanced Mode from Simplified Mode by clicking the Authentication Window Frame.




Figure 4-30 Authentication Window - Simplified Mode

The simplified Authentication Window displays the statistics information of the users' device and operating system, illustrated in Figure 4-30.

The advanced Authentication Window is mainly used to configure the captive portal authentication, illustrated in Figure 4-31.

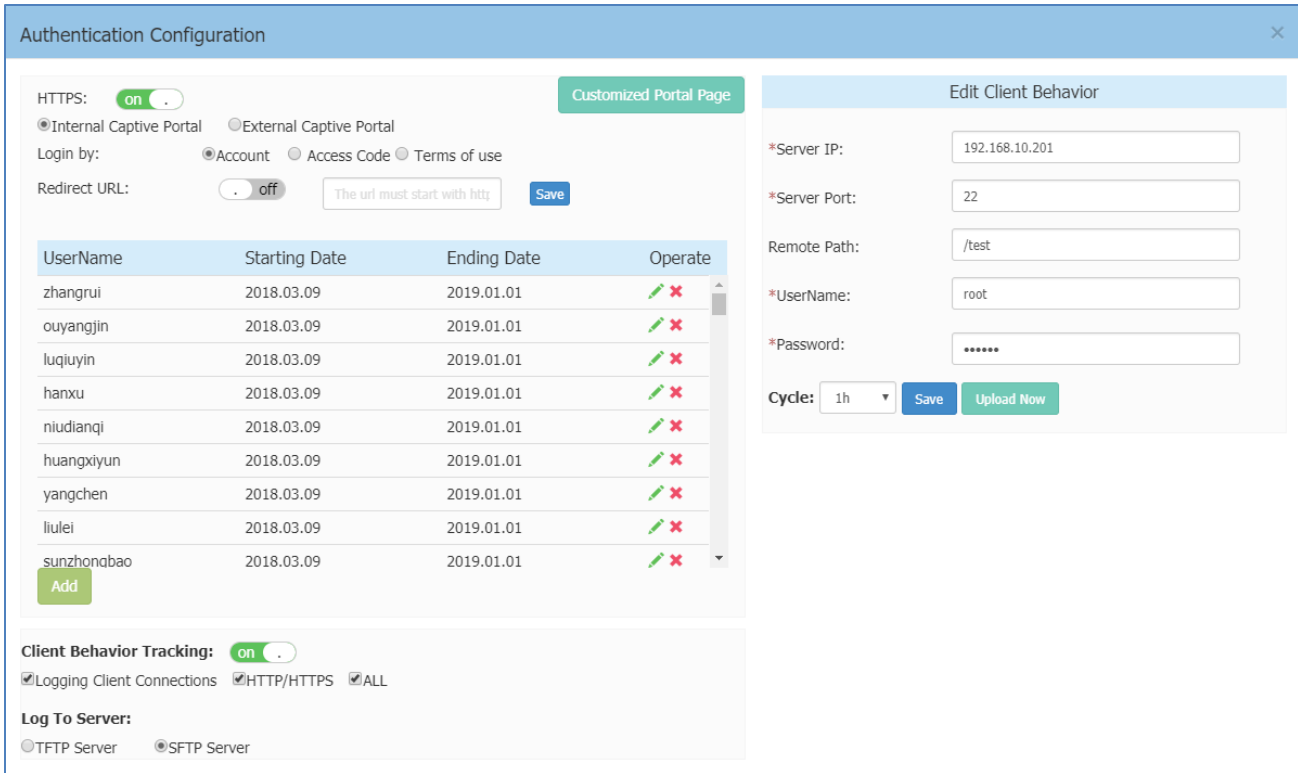


Figure 4-31 Authentication Window - Internal Portal Server

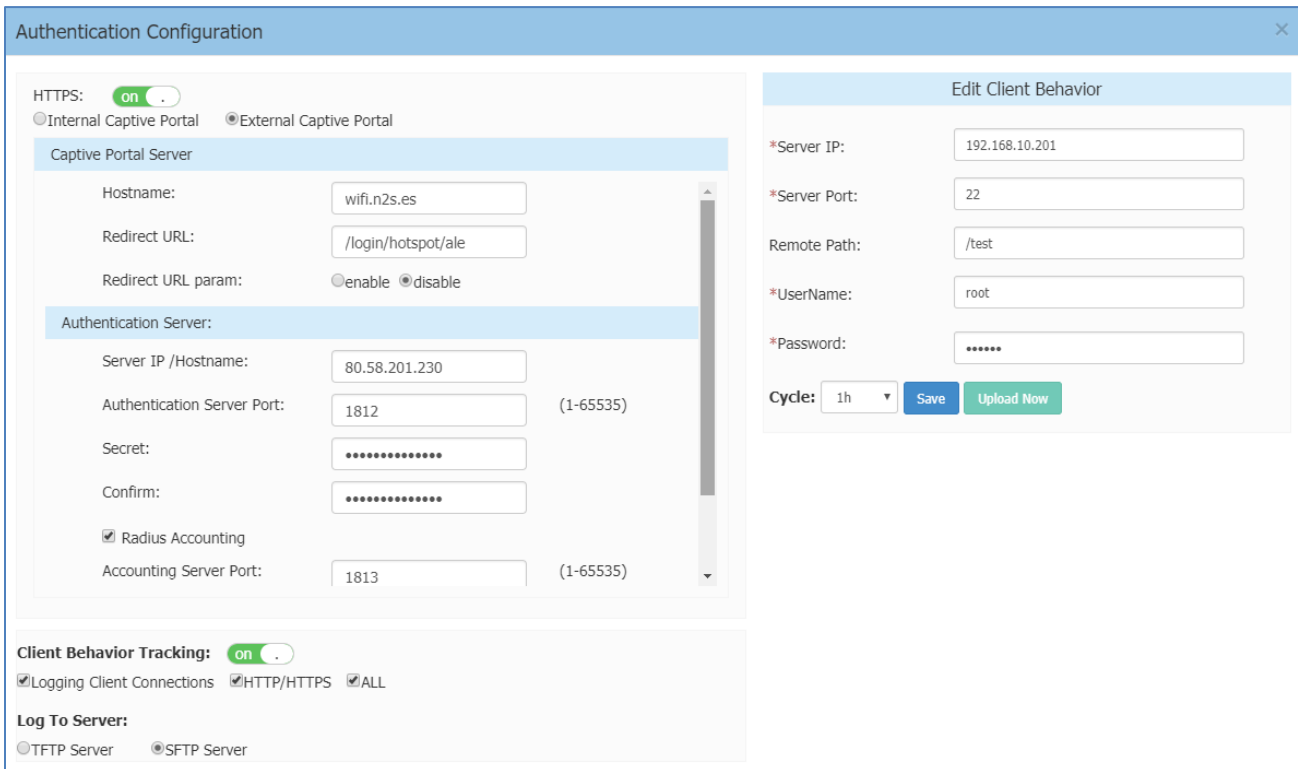


Figure 4-32 Authentication Window - External Portal Server

Table 4-13: Key word specification in Authentication Window (Advanced Mode)

HTTPs	Specify the captive portal login protocol, https or http.
Captive Portal Type	<ul style="list-style-type: none"> Internal Captive Portal - Use AP internal captive portal server for authentication. External Captive Portal - Use external captive portal server for authentication.
Login by: <input checked="" type="radio"/> Account <input type="radio"/> Access Code <input type="radio"/> Terms Of use	Login method used by the captive portal users, corresponding to different login page and credentials: <ul style="list-style-type: none"> Account - Login by user account, you need to add accounts for portal users, see Create Users or Access Code. The users enter their usernames and passwords to pass the authentication and access the wireless network, see more in Customized Portal Page - Login by Account. Access Code - Login by access code, you need to add access code for portal user, see Create Users or Access Code. The users enter the access code to pass the authentication, see more in Customized Portal Page - Login by access code. Terms of use - Login by terms of use. The users accept the terms of use and pass the authentication, see more in Customized Portal Page - Login by Terms of use.
Redirect URL: <input checked="" type="checkbox"/>	Redirect user to a specific URL defined by administrator. By default, it is disabled.
UserName	Account of captive portal user.
Starting Date	Account effective starting date.
Ending Date	Account effective ending date.
Operate	Edit or delete captive portal users.
<input type="button" value="Add"/>	Add users for captive portal authentication when using login by account.
<input type="button" value="Customized Portal Page"/>	Customized portal web page according to application requirement.
<input type="button" value="Preview"/>	Preview the customized portal web page.
<input type="button" value="Default"/>	Return the customized portal web page to the system default.
Client Behavior Tracking	Enable logging user behavior to a TFTP server, including: client online and client offline. More details can see in Note4-7.
Logging Client Connections	<ul style="list-style-type: none"> HTTP/HTTPS - Record the HTTP/HTTPS web session of wireless clients ALL - Record the all the session including HTTP/HTTPS of wireless clients
Log To Server	Specify the TFTP/sFTP server to restore the user behavior logs.
Cycle: <input type="text" value="1h"/> <input type="button" value="v"/>	Specify the cycle for uploading user behavior logs to TFTP server, can be set to 1 hour, 2 hours and 4 hours.
<input type="button" value="Save"/>	Save the TFTP setting for uploading user behavior logs.
<input type="button" value="Upload Now"/>	Upload the user behavior logs to the TFTP server manually.



Note 4-7: The log information of user behavior includes: username, user MAC, user IP, connecting WLAN, Online/Offline behavior and time stamp.

Note

Customized Portal Page Panel

You can customize your splash page used in the captive portal authentication by changing the Logo, background and terms of use, illustrated in Figure 4-33.

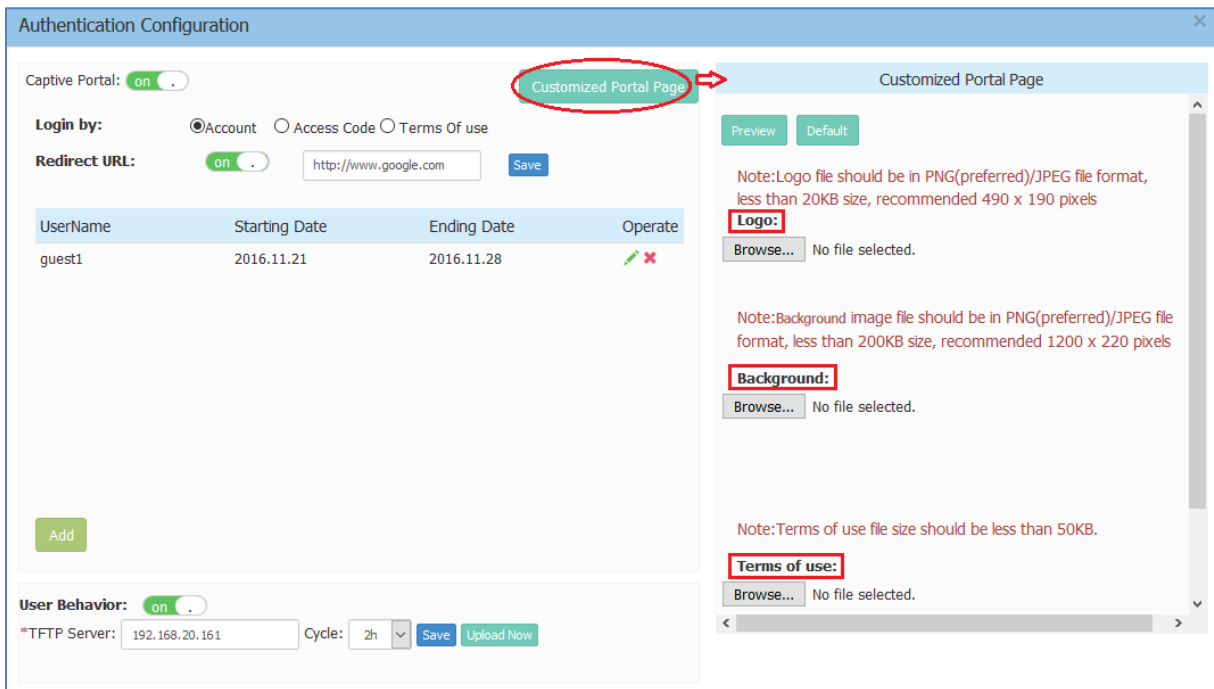


Figure 4-33 Customized Portal Page

There are three splash page templates provided by the system, you can choose your captive portal login method and customize your own splash page accordingly, see more in [Customized Portal Page - Login by Account](#), [Customized Portal Page - Login by access code](#) and [Customized Portal Page - Login by Terms of use](#).

Customized Portal Page - Login by Account

The screenshot shows the Alcatel-Lucent Enterprise login page. At the top left is the Alcatel-Lucent Enterprise logo, with a red arrow pointing to it labeled "LOGO". At the top center is a red arrow pointing down to a banner image labeled "Background". The banner image shows a stylized city skyline. Below the banner, the text reads "Please login to the network using your username and password." There are two input fields: "Username:" and "Password:". Below the password field is a checkbox labeled "I accept the terms of use" with a red arrow pointing to the text "Terms of use". Below the checkbox is a blue "Log In" button. At the bottom, there is a link: "Contact a staff member if you are experiencing difficulty logging in."

Figure 4-34 Customized Portal Page - Login by account

Customized Portal Page - Login by Access Code

The screenshot shows the Alcatel-Lucent Enterprise login page. At the top left is the Alcatel-Lucent Enterprise logo, with a red arrow pointing to it labeled "LOGO". At the top center is a red arrow pointing down to a banner image labeled "Background". The banner image shows a stylized city skyline. Below the banner, the text reads "Please login to the network using your access code." There is one input field: "Access Code:". Below the input field is a checkbox labeled "I accept the terms of use" with a red arrow pointing to the text "Terms of use". Below the checkbox is a blue "Login" button. At the bottom, there is a link: "Contact a staff member if you are experiencing difficulty logging in." At the bottom left corner, there is a copyright notice: "© 2016 Alcatel-Lucent".

Figure 4-35 Customized Portal Page - Login by access code

Customized Portal Page - Login by Terms of Use

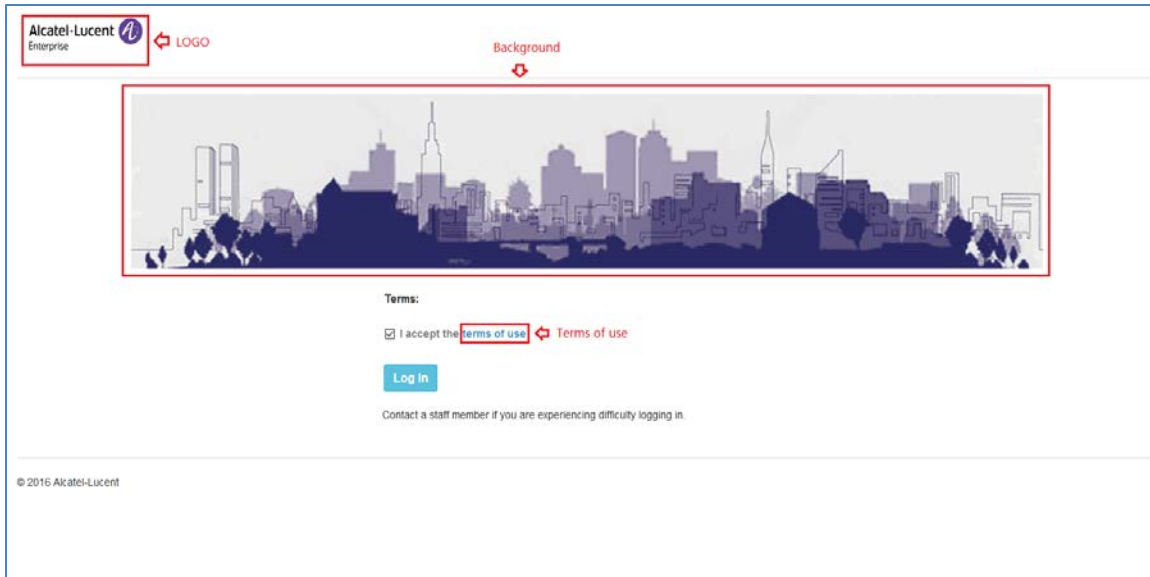


Figure 4-36 Customized Portal Page - Login by Terms of use



Figure 4-37 Customized Portal Page - Terms of use

Client Blacklist & Whitelist Window

Blacklist & Whitelist Window focuses on the basic access control mechanism for users connecting to the ALE WLAN network based on the client level. It includes three tabs: Black List Tab, Whitelist Tab and Wall Garden Tab.

Those clients on the blacklist are denied to associate to the Stellar AP wireless network. Once a client is in the blacklist, it cannot connect to any WLAN of any security level (Enterprise/Personal/Open). You can add/delete the blacklist based on client's MAC address, illustrated in Figure 4-38.

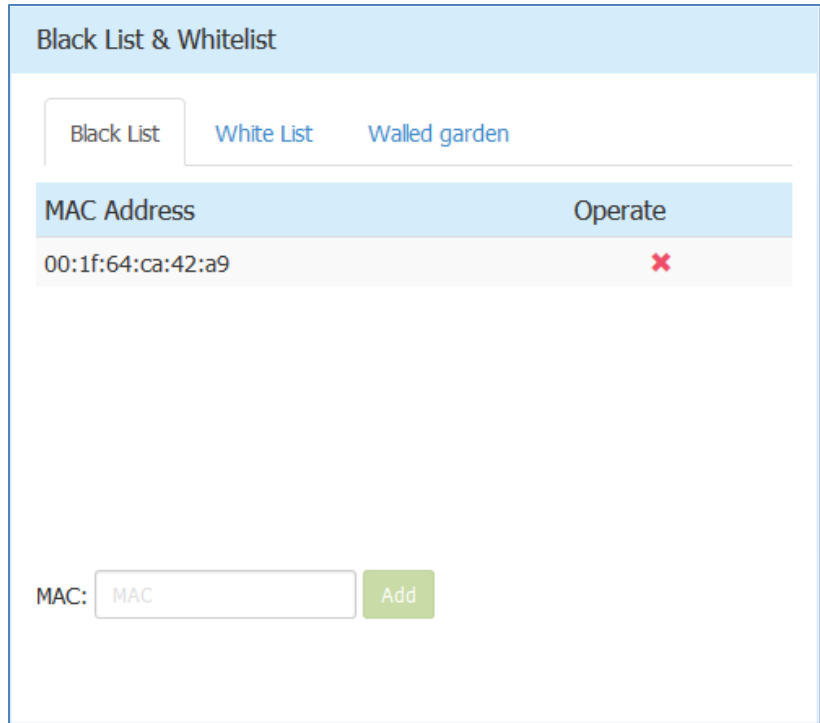


Figure 4-38 Black List Tab

The whitelist is applied to captive portal authentication ONLY. Those clients on the whitelist are permitted to access the network resource without passing the captive portal authentication. You can manually add/remove client(s) to/from the whitelist for captive portal authentication by MAC address, illustrated in Figure 4-39. The whitelist does not support Enterprise/Personal WLANs. This means that the clients in the whitelist are not allowed to access Enterprise/Personal WLANs without using correct credentials.

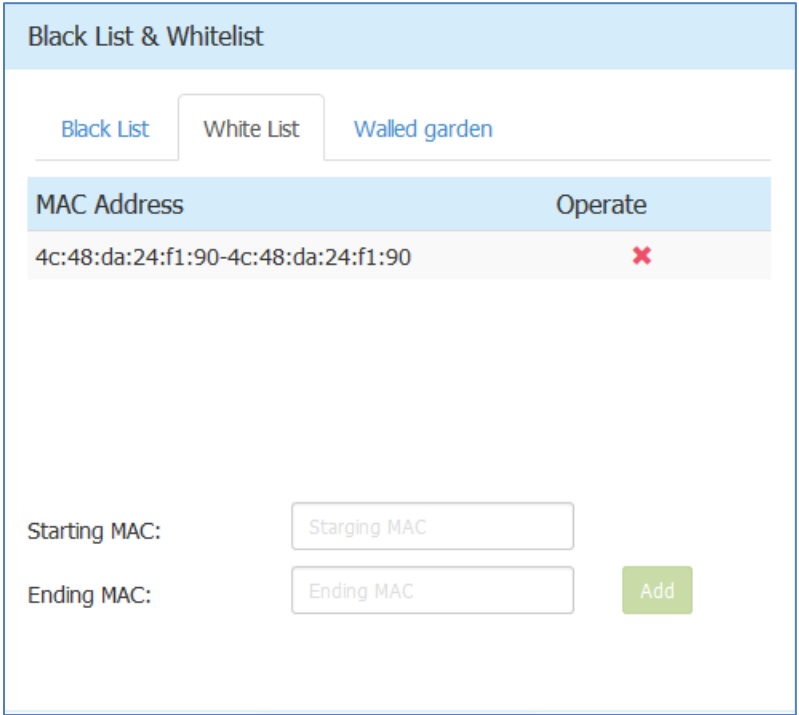


Figure 4-39 Whitelist Tab

The walled garden is a control mechanism over network resources, it restricts access to non-approved applications or content. The walled garden is applied for captive portal authentication ONLY. The client is able to access the network resource (For example: website of the hotel) before passing the captive portal authentication. You can add/remove allowed IP(s) to/from the walled garden, illustrated in Figure 4-40.

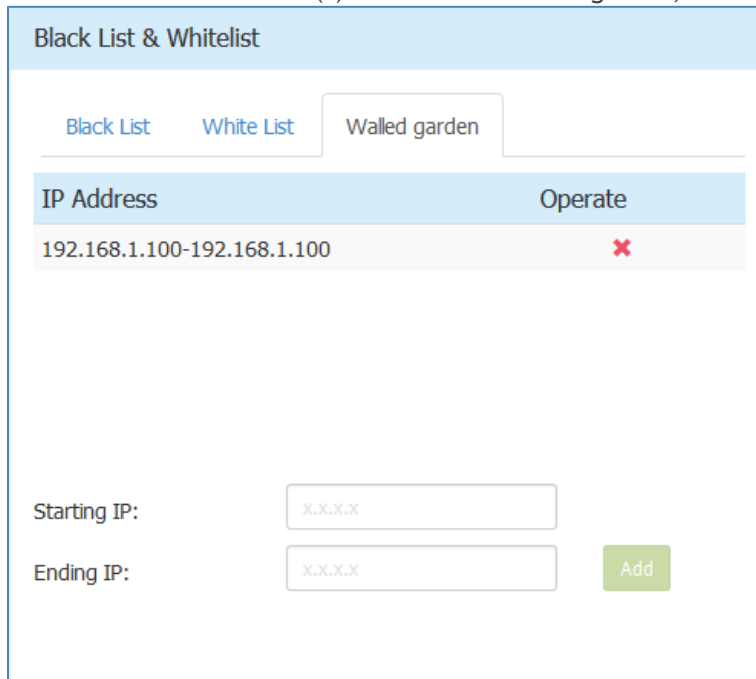


Figure 4-40 Walled Garden Tab



Note

Note 4-7: To allow the user to access some network resources (For example: office website or open file server) before passing the captive portal authentication, you have to know the IP address of the network resource and add it into the walled garden.

Access Control List Window

There are two modes for ACL Window, Simplified Mode illustrated in Figure 4-41 and Advanced Mode illustrated in Figure 4-42. You can launch the Advanced Mode from Simplified Mode by clicking the ACL Window Frame.

The simplified ACL Window displays the ACLs configured, illustrated in Figure 4-41.

You can create L3 ACLs using wildcard entries for both IP address and TCP/UDP/ICMP ports. See the advanced ACL Window illustrated in Figure 4-42.

The ACL rules created in the list are applied sequentially, based on the precedence of top-to-bottom.

By default, traffic is allowed to pass if no ACL rules are matched (Default ACL action is 'Accept').

ACL			
Source	Destination	Protocol	Action
192.168.20.101/24 :4000	192.168.50.89/24 :4000	TCP	REJECT

Figure 4-41 ACL Window - Simplified Mode

ACL Configuration ✕

Default ACL Action: Accept Reject

Source IP	Destination IP	Protocol	Action	Apply To	Operate
100.1.1.0/24	103.77.56.0/24	ALL	REJECT	HAN-Employee,H...	✔ ✘

Add

Edit ACL

*Source IP: Any

*Destination IP: Any

Source Port: Any

Destination Port: Any

Protocol Type: ▼

Action: ▼

*Apply To: Any

✘ Guest

✘ Enterprise

✘ Employee

Figure 4-42 ACL Window - Advanced Mode

Table 4-14 ACL Parameter Specification

Parameter	Specifications
Source IP	The source IP address.
Destination IP	The destination IP address.
Source Port	Source UDP or TCP port.
Destination Port	Destination UDP or TCP port.
IP Protocol	There are three options for IP Protocol, TCP, UDP or ICMP.
Action	Accept or Reject
Apply To	Indicate the scope which the ACL rule take effect, specific SSID or ALL



Note

Note 4-8: Stellar AP supports L2 ACLs, you can blacklist/white-list certain MACs or a range of MAC addresses, see [Blacklist & Whitelist Window](#). Also, you can setup rules based on 802.1p/DSCP while creating a new SSID, see [Modify WLAN QoS](#).

5 WLAN Configuration

Configuring WLAN should be the first step when setting up your Wi-Fi network. This section contains the following topics:

- [Create NEW WLAN](#)
- [Delete Your WLAN](#)
- [Modify Your WLAN](#)
- [Modify WLAN QoS](#)

Create New WLAN

To create a new WLAN, click on the hyperlink ‘New’ to launch the WLAN creation window. There are three security levels of WLANs that can be created: Enterprise, Personal and Open (Captive Portal).

Enterprise: Also referred to as 802.1X mode, this is designed for enterprise networks and requires a RADIUS authentication server. This requires a more complicated setup, but provides additional security (e.g. protection against dictionary attacks on short passwords). Various kinds of the Extensible Authentication Protocol (EAP) are used for authentication. Enterprise mode is available with both WPA and WPA2.

Personal: Also referred to as PSK (pre-shared key) mode, this is designed for home and small office networks and doesn't require an authentication server. Each wireless network device encrypts the network traffic using a 256 bit key. This key may be entered either as a string of 64 hexadecimal digits, or as a passphrase of 8 to 63 printable ASCII characters. Personal mode is available with both WPA and WPA2.

Open (Captive Portal): No Authentication or encryption method for the wireless network. User data will be transmitted as plain text transmit mode over the air. Captive portals are mainly used in wireless open networks where the users are shown a welcome message informing them of the conditions of access. Often captive portals are used for marketing and commercial communication purposes and they allow the providers of this service to display or send advertisements to users who connect to the Wi-Fi access points.

Create an Enterprise WLAN

Enterprise WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-1 and Figure 5-2. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are six essential parameters needed to be configured in simplified mode, they are WLAN Name, Security Level, Key Management and AuthServer, AuthPort and AuthSecret. Other parameters will be

considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-1 for details about each parameter.

Figure 5-1 Create Enterprise WLAN - Simplified Mode

Figure 5-2 Create Enterprise WLAN - Advanced Mode

Table 5-1: Key word specification in Enterprise WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security mode of WLAN, from high to low is Enterprise>Personal>Open. Here select the Enterprise mode.
Key Management	WPA2/WPA encryption method. It is applicable to Enterprise/Personal WLANs only.
AuthServer	IPv4 address of the authentication server (RADIUS).
AuthPort	Communication port of the authentication server. The default value is 1812.
AuthSecret	Shared secret key used by the authentication server, in ASCII format.
RADIUS Accounting	Select the checkbox if accounting service is needed. By default it is not selected.
AcctServer	IPv4 address of the accounting server.
AcctPort	Communication port of the accounting server. The default value is 1813.
AcctSecret	Shared secret key used by the accounting server, in ASCII format.
Inactivity Timeout Status	Enable/Disable inactivity timeout control
Inactivity Timeout Interval	Specify the inactivity timeout interval, default is 15 minutes
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.
VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4 GHz, 5 GHz, or All. The All option is selected by default.
Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 0 to 120. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
Client Isolate	Not permit the clients attached to same AP in the same WLAN to communicate with each other.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an Instant AP to request a voice client to transition to a specific Stellar AP, or suggest a set of preferred Stellar APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best Stellar AP to transition to as they roam.

802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, Stellar APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP
2.4G Client Rate Control	Enables/Disables 2.4G band accessing control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not permit to access, recommended value 12
5G Client Rate Control	Enables/Disables 5G band accessing control based on client data rate
5G Client Rate	5G band client with lower data speed will not permit to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
OKC	If OKC is enabled, a cached pairwise master key (PMK) is used when the client roams to a new AP. This allows faster roaming of clients without the need for a complete 802.1x authentication.
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

Create a Personal WLAN

Personal WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-3 and Figure 5-4. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are five essential parameters to be configured for a Personal WLAN in simplified mode, they are WLAN Name, Security Level, Key Management, Password Format and Password. Other parameters will be considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-2 for details about each parameter.

Create New WLAN [X]

WLAN Name:

Security Level:

Key Management:

Password Format:

Password:

Confirm:

[Advance](#)

Figure 5-3 Create Personal WLAN - Simplified Mode

Create New WLAN [X]

WLAN Name: (1- 32 chars)

Security Level:

Key Management:

Password Format:

Password:

Confirm:

Enable: Yes No

Hidden: Yes No

VLAN ID: (0-4094)

Band: 2.4GHz 5GHz

MaxClients Per Band: (1-120)

Upstream Per Client: (0-65536)kbps

Downstream Per Client: (0-65536)kbps

RSSIThreshold: (0-100)db

802.11r: off

[Hide](#)

Figure 5-4 Create Personal WLAN - Advanced Mode

Table 5-2: Key word specification in Personal WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open. Here select the Personal type.
Key Management	WPA2/WPA encryption method. It is applicable to Enterprise/Personal WLANs only.
Password Format	Password format of Personal WLAN. There are two password formats to be selected: Either as a string of 64 hexadecimal digits, or as a passphrase of 8 to 63 printable ASCII characters.
Password	Enter the password for the Personal WLAN.
Confirm	Reenter the password for the Personal WLAN.
Inactivity Timeout Status	Enable/Disable inactivity timeout control
Inactivity Timeout Interval	Specify the inactivity timeout interval, default is 15 minutes
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.
VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4 GHz, 5 GHz, or All. The All option is selected by default.
Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 0 to 120. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
Client Isolate	Not permit the clients attached to same AP in the same WLAN to communicate with each other.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an Instant AP to request a voice client to transition to a specific Stellar AP, or suggest a set of preferred Stellar APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best Stellar AP to transition to as they roam.
802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, Stellar APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP

2.4G Client Rate Control	Enables/Disables 2.4G band accessing control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not permit to access, recommended value 12
5G Client Rate Control	Enables/Disables 5G band accessing control based on client data rate
5G Client Rate	5G band client with lower data speed will not permit to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

Create a Captive Portal WLAN

Captive Portal WLAN creation window has two display modes, simplified mode and advanced mode, respectively illustrated in Figure 5-5 Create Captive Portal WLAN - Simplified Mode and Figure 5-6 Create Captive Portal WLAN - Advanced Mode. You can switch to advanced mode from simplified mode by clicking the hyperlink [Advance](#).

There are three essential parameters to be configured for a Captive Portal WLAN in simplified mode, they are WLAN Name, Security Level (Open) and Captive Portal (Yes). Other parameters will be considered as per the default value. To configure other advanced parameters, you must switch to advanced mode. Refer to Table 5-3 for details about each parameter.

Figure 5-5 Create Captive Portal WLAN - Simplified Mode

The screenshot shows a 'Create New WLAN' dialog box with the following fields and options:

- WLAN Name:** Text input field (1-32 chars)
- Security Level:** Dropdown menu set to 'Open'
- Captive Portal:** Radio buttons for 'Yes' (selected) and 'No'
- Enable:** Radio buttons for 'Yes' (selected) and 'No'
- Hidden:** Radio buttons for 'Yes' and 'No' (selected)
- VLAN ID:** Spin box set to '0' (0-4094)
- Band:** Checkboxes for '2.4GHz' and '5GHz' (both checked)
- MaxClients Per Band:** Spin box set to '64' (1-120)
- Upstream Per Client:** Spin box set to '0' (0-65536) kbps
- Downstream Per Client:** Spin box set to '0' (0-65536) kbps
- RSSIThreshold:** Spin box set to '0' (0-100) db

Buttons at the bottom: 'Hide' (text), 'Cancel' (orange), 'Save' (blue).

Figure 5-6 Create Captive Portal WLAN - Advanced Mode

Table 5-3: Key word specification in Captive Portal WLAN Configuration Window

WLAN Parameter	Specification
WLAN Name	Label or name of WLAN.
Security Level	Security Level of WLAN, from high to low is Enterprise>Personal>Open. Here select the Open type.
Captive Portal	Specify the captive portal authentication supporting state. Yes indicates the WLAN supports captive portal authentication, while No indicates the WLAN does not support captive portal authentication.
Inactivity Timeout Status	Enable/Disable inactivity timeout control
Inactivity Timeout Interval	Specify the inactivity timeout interval, default is 15 minutes
Enable	Specify the WLAN state, Yes indicates that WLAN is in broadcast state, while No indicates WLAN is not in broadcast state.
Hidden	Specify visibility of the WLAN, Yes indicates that WLAN is visible to users, while No indicates WLAN is invisible.
Multicast	This feature allows APs to convert multicast streams into unicast streams over the wireless network based on the IGMP snooping table. Enabling Multicast to Unicast can enhance the quality and reliability of video streams, while preserving the bandwidth available to the non-video services
Broadcast ARP	If enabled, AP will reply to client's ARP request instead of forwarding.
VLAN ID	Identifier of the VLAN to which the WLAN mapping, it is a user VLAN.
Band	Select a value to specify the band at which the network transmits radio signals. You can set the band to 2.4 GHz, 5 GHz, or All. The All option is selected by default.

Max Clients per band	Specify the maximum number of clients that can be configured for each BSSID on a WLAN. You can specify a value within the range of 0 to 120. The default value is 64.
Upstream Per Client	Specify the maximum upstream bandwidth limitation for each user.
Downstream Per Client	Specify the maximum downstream bandwidth limitation for each user.
Client Isolate	Not permit the clients attached to same AP in the same WLAN to communicate with each other.
802.11r	Select to enable IEEE 802.11r (Fast BSS Transition). The Fast BSS Transition mechanism minimizes the delay when a client transitions from one BSS to another within the same group.
802.11v	Enables/Disables 802.11v. 802.11v standard defines mechanisms for wireless network management enhancements and BSS transition management. It allows client devices to exchange information about the network topology and RF environment. The BSS transition management mechanism enables an Instant AP to request a voice client to transition to a specific Stellar AP, or suggest a set of preferred Stellar APs to a client, due to network load balancing or BSS termination. It also helps the client identify the best Stellar AP to transition to as they roam.
802.11k	Enables/Disables 802.11k. The 802.11k protocol enables APs and clients to dynamically measure the available radio resources. When 802.11k is enabled, Stellar APs and clients send neighbor reports, beacon reports, and link measurement reports to each other.
802.11b	Enables/Disables allowing 11b legacy clients connect to AP
802.11g	Enables/Disables allowing 11g legacy clients connect to AP
2.4G Client Rate Control	Enables/Disables 2.4G band accessing control based on client data rate
2.4G Client Rate	2.4G band client with lower data speed will not permit to access, recommended value 12
5G Client Rate Control	Enables/Disables 5G band accessing control based on client data rate
5G Client Rate	5G band client with lower data speed will not permit to access, recommended value 24
2.4G MGMT Rate Control	Enables/Disables 2.4G band wireless management frame rate control
2.4G MGMT Rate	2.4G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
5G MGMT Rate Control	Enables/Disables 5G band wireless management frame rate control
5G MGMT Rate	5G band wireless management frame transmit rate, higher value means less coverage, lower value means larger coverage
Cancel	The WLAN Creation Window is closed if you click 'Cancel' button.
Save	Click 'Save' to save the configuration and create the WLAN.

After the WLAN has been created, proceed to: [How to Configure Captive Portal Authentication](#) to complete the configuration.

Delete Your WLAN

In WLAN Window Advanced Mode Figure 4-3 WLAN Window-Advanced Mode, you can delete the WLAN by clicking the '✘' Button, as shown in Figure 5-7.

WLAN Configuration				
WLAN Name	Status	Security Level	Captive Portal	Operate
mywifi-1x	Enable	enterprise	No	 wmm
mywifi-employee	Enable	personal	No	 wmm
mywifi-guest	Enable	open	Yes	 wmm
mywifi-portal2	Disable	open	No	 wmm

Figure 5-7 Delete a WLAN

Modify Your WLAN

In WLAN Window Advanced Mode Figure 4-3 WLAN Window-Advanced Mode, you can modify the WLAN by clicking the ‘’ Button, shown in Figure 5-8. All configurable WLAN parameters will be displayed on the right of WLAN Window Advanced Mode, Enterprise WLAN see Table 5-1, Personal WLAN see Table 5-2 and Captive Portal WLAN see Table 5-3. Click to cancel the modification or click to save the configuration.

WLAN Name	Status	Security Level	Captive Portal	Operate
mywifi-1x	Enable	enterprise	No	 wmm
mywifi-employee	Enable	personal	No	 wmm
mywifi-guest	Enable	open	Yes	 wmm
mywifi-portal2	Disable	open	No	 wmm

Edit WLANInfo

WLAN Name: (1- 32 chars)

Security Level:

Key Management:

Password Format:

Password:

Confirm:

Enable: Yes No

Hidden: Yes No

MaxClients Per Band: (1-120)

RSSI Threshold: (0-100)db

Figure 5-8 Modify a WLAN

Modify WLAN QoS

Wi-Fi Multimedia (WMM) is a Wi-Fi Alliance interoperability certification, based on the IEEE 802.11e standard. It provides basic Quality of service (QoS) features to IEEE 802.11 networks. WMM prioritizes traffic according to four Access Categories (AC): voice (AC_VO), video (AC_VI), best effort (AC_BE), and

background (AC_BK). It is suitable for well-defined applications that require QoS, such as Voice over IP (VoIP) on Wi-Fi phones.

You can edit the mapping relationship between DSCP/802.1p values and WMM priorities for a WLAN on Stellar AP, illustrated in Figure 5-9.

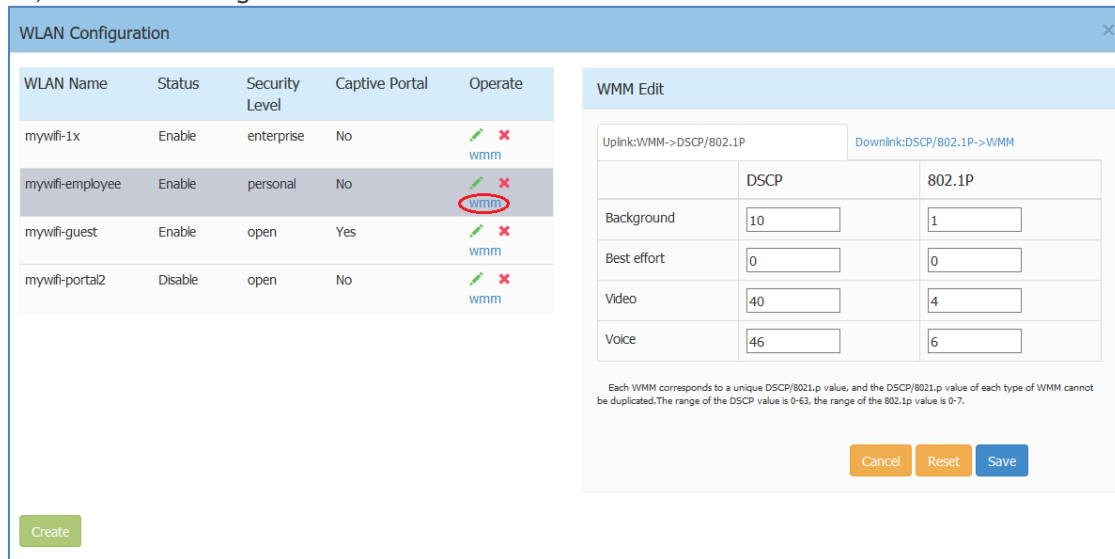


Figure 5-9 Modify WLAN QoS

6 AP Management

This chapter describes how to configure and manage your AP. The ALE Wi-Fi solution is a controller-less based architecture. The APs can establish an autonomous group, in which there are three types of AP roles, Primary Virtual Controller (PVC), Secondary Virtual Controller (SVC) and member AP. This chapter describes how to manage the group and how to check, backup, restore AP configuration and to upgrade firmware in GUI.

AP Management procedures described in this chapter include:

- [AP Group Management](#)
- [Import and Export AP Configuration](#)
- [Upgrade AP Firmware](#)
- [Modify AP Name and IP Address](#)
- [Check AP Configuration Detail](#)
- [Modify AP Transmission Power and Channel](#)
- [AP LED Specification](#)
- [Locate AP or Turn LED Off](#)
- [Kick off an AP from the group](#)
- [Allow an AP to join the group](#)
- [How to add a new AP to the group](#)
- [How to replace an current AP in the group](#)
- [How to Setup Wireless Networks with more than 64 APs](#)
- [How to Configure the AP if there is no DHCP server](#)

AP Group Management

By default, APs will have the group ID 100 and all APs that have the same group ID will align to the same group. The group will select the AP which has the highest MAC address as the PVC and the AP which has the second highest MAC address as the SVC. Each group has a management IP address that is a virtual IP and will be assigned to the PVC. When the PVC fails to respond due to an unexpected error or issue, the SVC will automatically upgrade to act as the PVC. There will be no interruption or service disturbance to member APs or any of the wireless users.

Table 6-1 describes the several group attributes parameters. To configure or modify the group attributes, launch the window ‘System-General Configuration’, as shown in Figure 6-1. AP group information will be displayed at the top of the Dashboard, as shown in Figure 6-2.

Table 6-1: AP Group Attribution Parameters Specification

Parameter	Specification
Group ID	Define a unique AP Group
Group Name	Name of the group
Location	Specify where you will deploy this group of APs. Provide specific name to identify the group location.
Group Management IP	It is a virtual IP address and will be dynamically assigned to the PVC. It is used for the group management and can be configured manually.
Group Management Netmask	Netmask of Group Management IP.

Figure 6-1 AP Group Configuration Window

Figure 6-2 AP Group Information Location

AP Configuration			
Primary Name	IP	Firmware	Operate
		PVC	
AP-00:E0	192.168.20.162(AP) 192.168.1.200(M)	2.1.0.63	
		SVC	
		MEMBER	
		Joining	

Figure 6-3 AP Group Management IP

There are two IP addresses on the PVC of the group, illustrated in Figure 6-3 (Navigate:Dashboard - AP Window - AP Configuration Window).

1. AP IP address [e.g.: 192.168.20.162(AP)] - The IP of the PVC which used to communicate with other Stellar APs in the group and with network entities outside the group. It can be set manually or assigned from a DHCP server in the network.

2. AP Group Management IP address [e.g.: 192.168.1.200(M)] - The virtual IP for the group management. It can be set by the administrator manually and as a static group management entrance through wired or wireless access.

Import and Export AP Configuration

In the AP Configuration Window (Navigate:Dashboard - AP Window - AP Configuration Window), you can backup, recover or clear the group configuration, illustrated in Figure 6-4 and Figure 6-5.

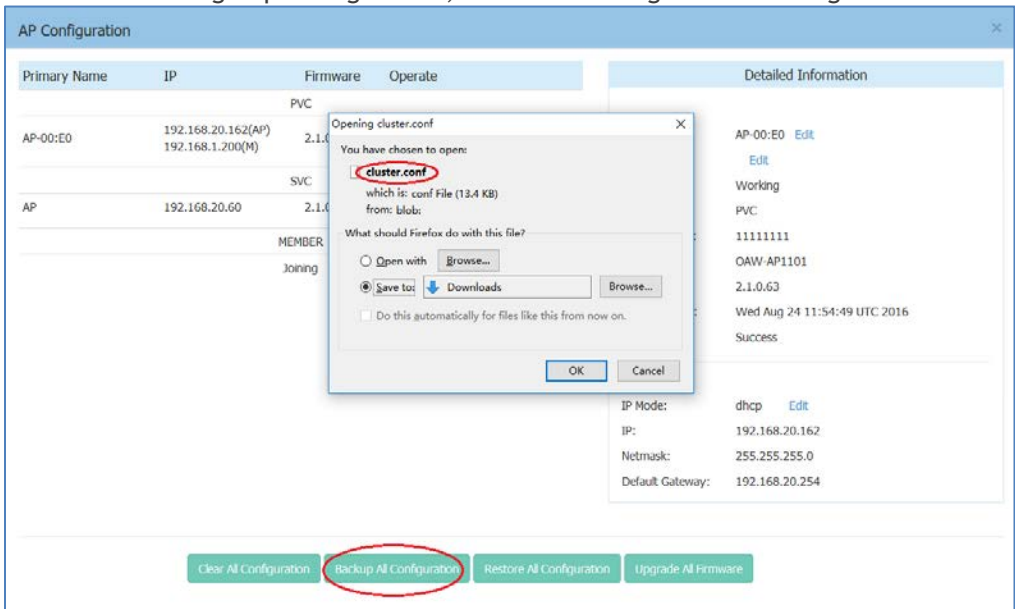


Figure 6-4 Export AP Group Configuration

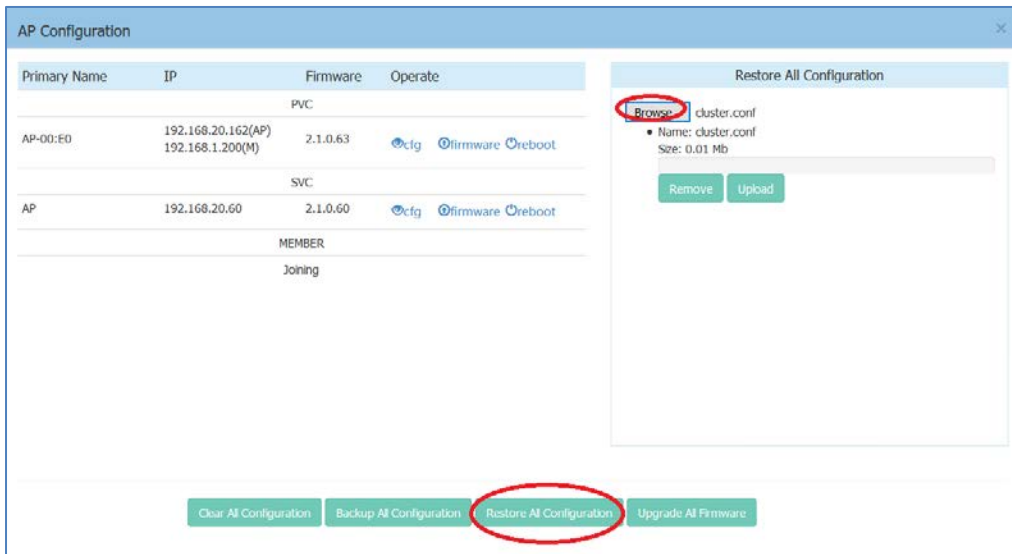


Figure 6-5 Import AP Group Configuration

Table 6-2: AP Group Configuration

Parameter	Specification
Clear All Configuration	Clear all AP configurations, return to factory state.
Backup All Configuration	Download and backup configuration file of AP group, it is recommended to do this when you have completed all configuration.
Restore All Configuration	Upload configuration file to all APs.
Upgrade All Firmware	Upgrade all AP's firmware.





Note

Note6-1: All configuration settings (clear, backup or restore) will be applied to the entire group. There is no need to select specific APs to apply configuration settings. The entire group of APs have one configuration file.

Upgrade AP Firmware

Before upgrading the AP you should prepare the firmware file to be upgraded. You can download the firmware file and save it in the local drive of the machine you are using to connect to the Stellar AP or save the firmware file in a remote TFTP server.

In the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**), there are separate entrances for upgrading a single AP or all the APs in a group:

- Upgrade single AP:** Select the AP to be upgraded from the AP list, click  to upload firmware, illustrated in Figure 6-6 and Figure 6-7. Generally, it takes approximately five minutes to upgrade the AP firmware.
- Upgrade all APs:** Click on  to open a dedicated upgrade page to upload separate AP firmware for each AP model and upgrade, illustrated in Figure 6-8.

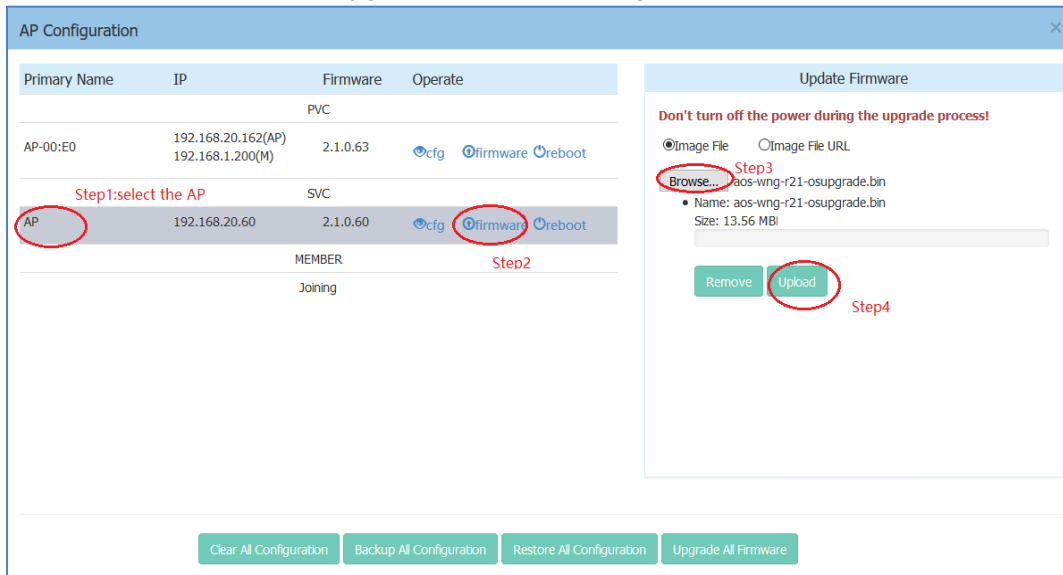


Figure 6-6 Update Single AP using Local Image File

You can also upload the AP firmware from a specified URL as shown in Figure 6-7.

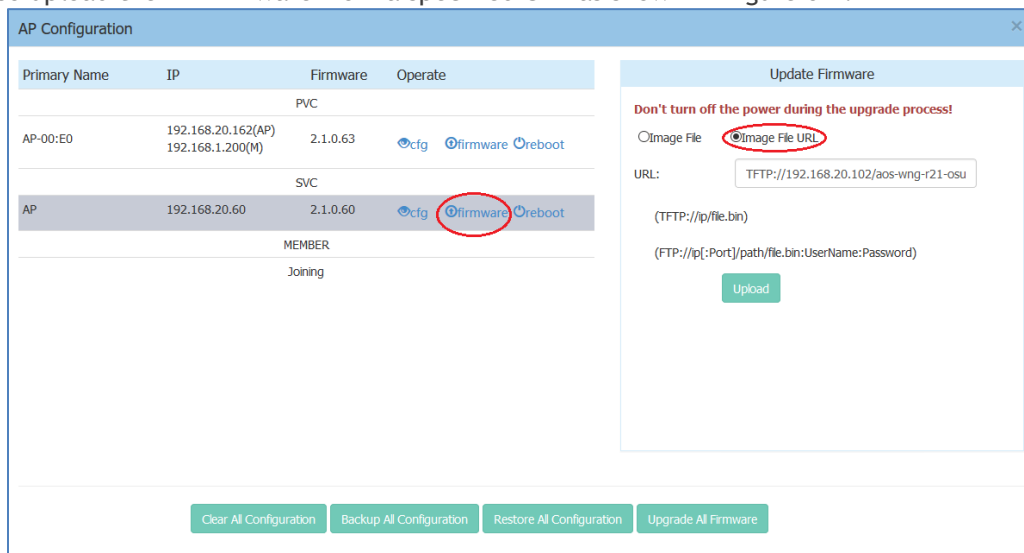


Figure 6-7 Update Single AP from Remote TFTP Server

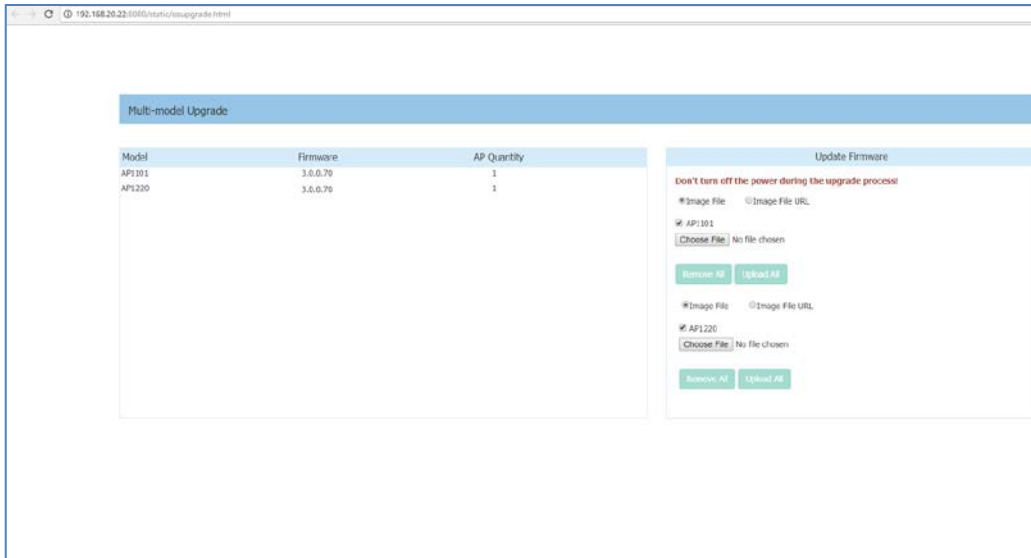


Figure 6-8 Update all APs' Firmware



Warning 6-1:

Don't turn off the power during the upgrade process!

CAUTION



Note 6-2: In order to make sure you're running the latest software, we strongly recommend to clear the browsing data in your browser after the software upgrade, including:

Note

- Cookies
- Cache

Modify AP Name and IP Address

In the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**), you can modify the name and other parameters as needed for the AP in Detailed Information panel.

→ **Modify AP Name**

Detailed Information	
APName:	AP-05:30 Edit
Location:	Edit
Status:	Working
Role in Group:	PVC
Serial Number:	NI9GG22Y006UC01
Model:	OAW-AP1101
Firmware:	2.1.0.65
Upgrade Time:	Wed Sep 7 02:27:11 UTC 2016
Upgrade Flag:	Success

Figure 6-9 Modify AP Name

Click on “**Edit**” to modify the AP name. Enter a name to identify the AP. By default, an Stellar AP is named with the last two bytes of its MAC address (e.g. 05:30 is the last-two-byte MAC address of the Stellar AP in Figure 6-9).

→ **Modify AP IP Address**

Enter an IP address to modify AP IP address. Stellar AP supports both static and dynamic IP addresses, illustrated in Figure 6-10.

Detailed Information	
APName:	AP Edit
Location:	Edit
Status:	Working Kick Off
Role in Group:	SVC
Serial Number:	NI9GG22Y006UC01
Model:	OAW-AP1101
Firmware:	2.1.0.60
Upgrade Time:	Fri Aug 19 15:18:42 UTC 2016
Upgrade Flag:	Success
<hr/>	
IP Mode:	dhcp Edit
IP:	192.168.20.60
Netmask:	255.255.255.0
Default Gateway:	192.168.20.254
<hr/>	
<input type="radio"/> DHCP <input checked="" type="radio"/> Static Cancel Save	
IP:	<input type="text" value="192.168.20.60"/>
Netmask:	<input type="text" value="255.255.255.0"/>
Default Gateway:	<input type="text" value="192.168.20.254"/>

Figure 6-10 Modify AP IP Address

Check AP Configuration Detail

Click  to verify AP configuration in the AP Configuration Window (Navigate: **Dashboard-AP Window-AP Configuration Window**).

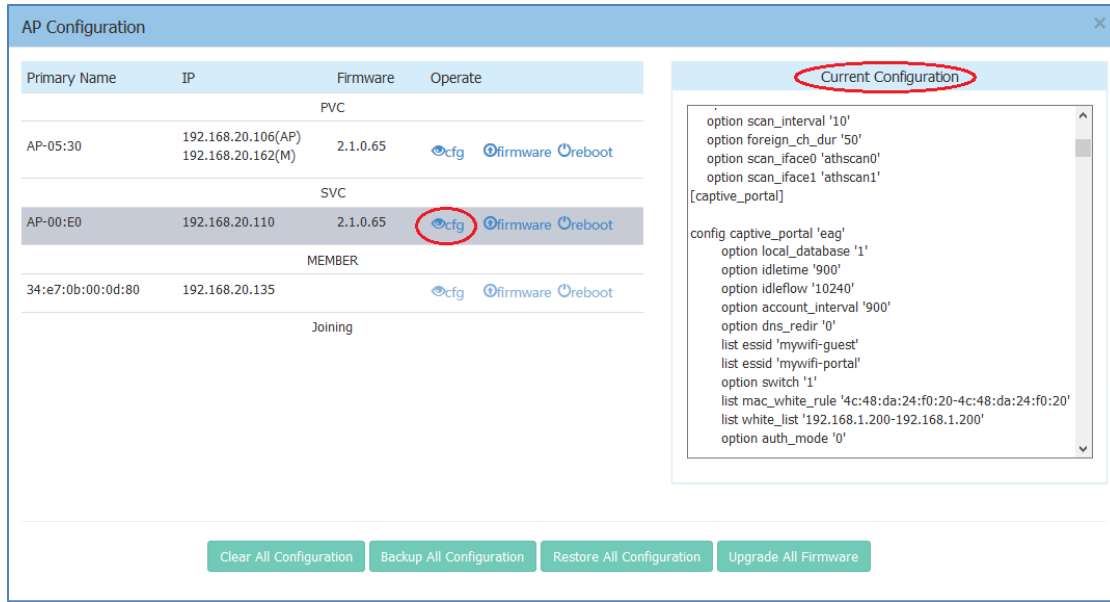


Figure 6-11 Check AP Configuration Detail

Modify AP Transmission Power and Channel

You can modify the transmission power and working channel for the Stellar AP in the RF Configuration Window. (Navigate: Dashboard-Wireless Page-RF Window-RF Configuration Window)

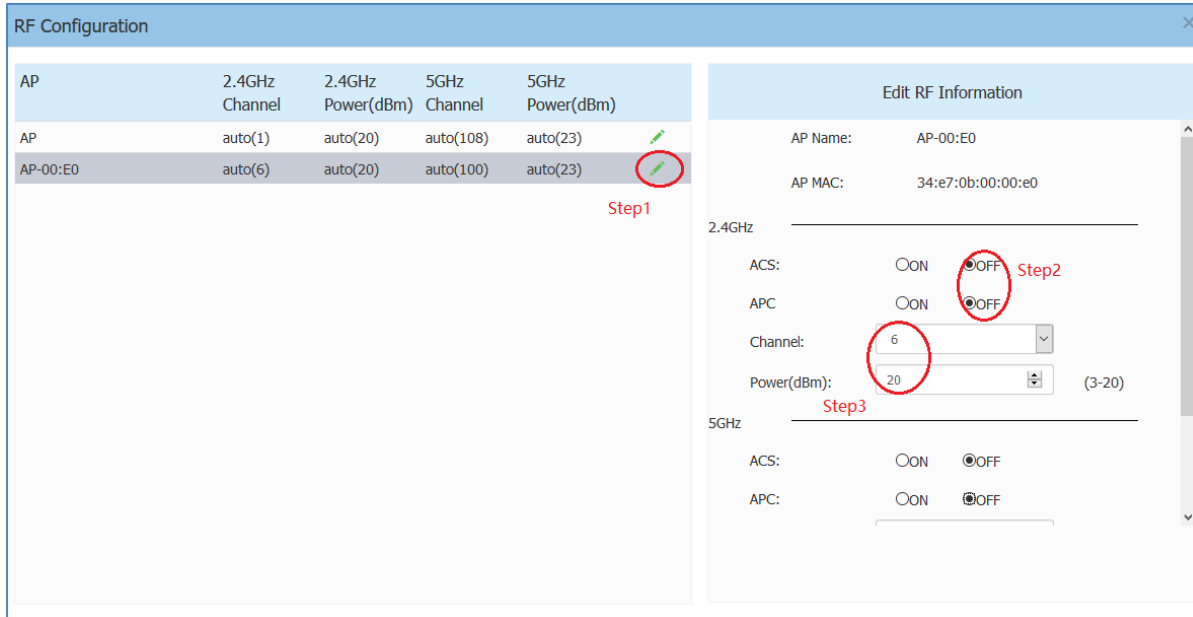


Figure 6-12 RF Management


Automatic Channel Selection (ACS) and Automatic Power Control (APC) are turned ON by default. The AP transmission power and channel are adjusted dynamically by default. If you disable ACS and APC the channel used by the AP and the transmit power must be set manually. In manual mode the AP transmit power can be adjusted in 1 dB increments. These values must be set for both radio bands.

AP LED Specification


Table 6-3: Describes the LED status during different stages of Stellar AP.

Red	Blue	Green	Time Line	Status
ON			Power on	Power on
ON			Bootloader-OS loading	System start up
Flash			System running	Network abnormal (Interface down)
		Flash	System running	Network normal, without SSID created
		ON	System running	Network normal, single band working, ether 2.4Ghz or 5Ghz working
	ON		System running	Network normal, dual bands working, 2.4Ghz and 5Ghz are both working
Flash	Flash		System running	Red and Blue LED rotate flash in a specific frequency; OS upgrading
Flash	Flash	Flash	System running	3 LED rotate flash in a specific frequency; Used for location an AP

Locate AP or Turn LED Off

Step1: Click  in AP Window of Dashboard to launch 'LED-Off/Locate' buttons.

Step2: Click 'LED-Off' to turn off the LED light.

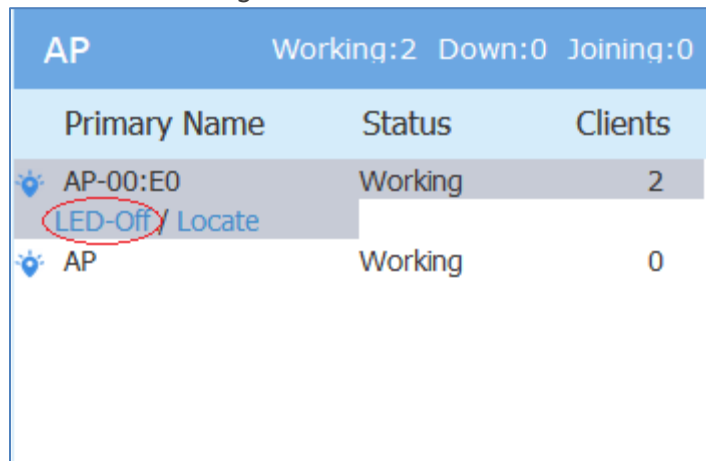



AP Working:2 Down:0 Joining:0		
Primary Name	Status	Clients
 AP-00:E0	Working	2
 AP	Working	0

Figure 6-13 Turn LED off

Step3: Click "Locate" to locate AP.



AP Working:2 Down:0 Joining:0		
Primary Name	Status	Clients
 AP-00:E0 LED-On / Locate	Working	2
 AP	Working	0

Figure 6-14 Locate AP

The Restore window appears. The LED blinks with red, blue and green color.

Step 4: Click "Restore" to return to the normal state.



AP Working:2 Down:0 Joining:0		
Primary Name	Status	Clients
 AP-00:E0 Restore	Working	2
 AP	Working	0

Figure 6-15 Restore AP state

Remove an AP from the Group

An AP is removed from the AP group list (PVC/SVC/Member) by selecting “kick off”. Then the AP enters a group blacklist, if it is not disconnected from the network it will move to the ‘**Joining**’ state, and without authorization is not permitted to be a member of group again.

See in Figure 6-16 and Figure 6-17.

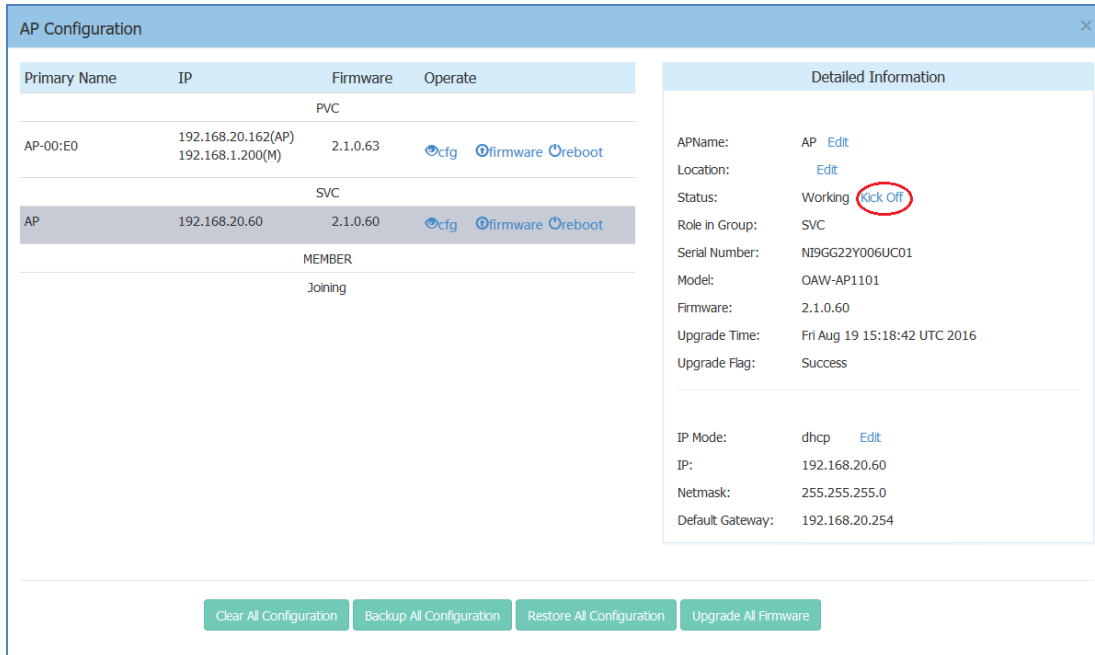


Figure 6-16 Remove an AP from Group

Allow an AP to Join the Group

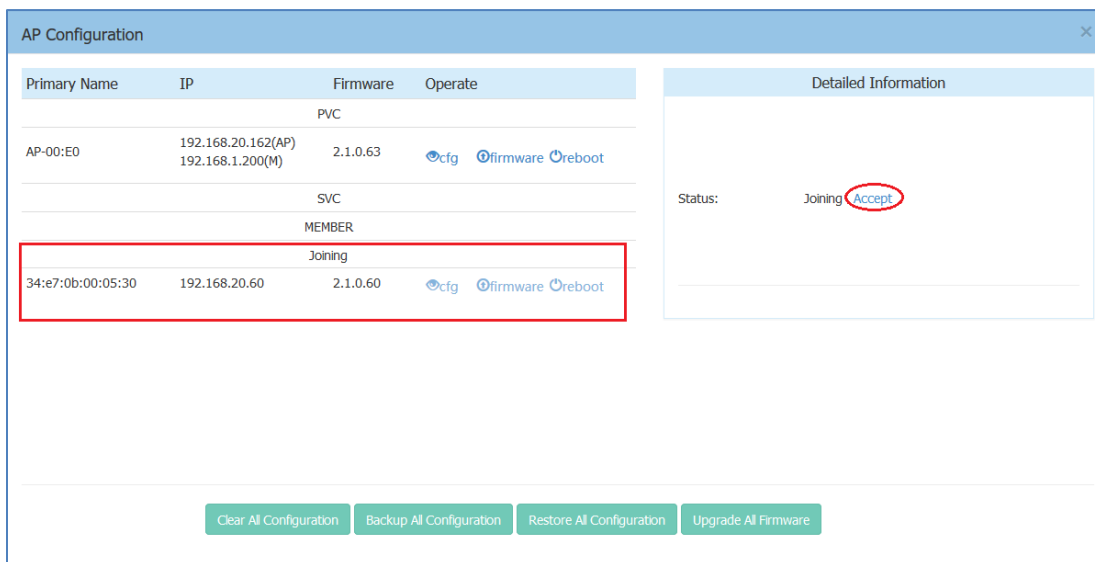


Figure 6-17 Allow AP to join group

In the displayed AP Configuration screen, an AP in 'Joining' state is in the group blacklist, the 'Accept' operation lets it join the group and removes it from the group blacklist.

How to Add a New AP to Group

To add a new AP to the group, ensure that the PVC is not in the 'Down' state. If the PVC is down, upgrade the SVC to be the PVC before plugging in the new AP.

How to Replace a Current AP in Group

1. **To replace the current PVC:** Upgrade the SVC to the PVC before disconnecting the old PVC. Then replace the old PVC with a new Stellar AP.
2. **To replace the SVC or a MEMBER of the group:** Disconnect and replace the SVC or member directly with a new Stellar AP, users on other Stellar APs will not be affected.

How to Setup Wireless Networks With More Than 64 APs

If you have more than 64 Stellar APs, you can setup more than one AP group to provide Wi-Fi service.

There are three methods to setup more than one AP group in the network:

Method one: Divide the Stellar APs into different subnets by changing the default VLAN of the switch ports to which the Stellar APs connect; for example: subnet-A uses default VLAN 100 while subnet-B uses default VLAN 200.

Method two: Setup up different group IDs for each AP group respectively. Perform the following steps:

1. Select the APs which you want to work in Group-A, plug in to the switch to build the first AP group;
2. Browse to the Group-A management interface and change its group ID. (For example: change the group ID from 100 to 8818), see in [General Window](#).
3. Repeat the above process to setup Group B/C/etc.

Method three: Deploy Stellar AP with ALE Omni Vista can scale up to 512 AP in one network.



Note

Note 6-3: Without Omni Vista management, each group is managed independently and roaming between groups is not supported.

How to Configure the AP if There is No DHCP server

Case one: If the APs reboot and the DHCP server is not accessible, all the APs return to the system default IP -192.168.1.254. This means there are duplicate IPs in the broadcast domain. All the APs work separately as the PVC and broadcast the same WLANs. In this case, it is highly recommended to fix the DHCP sever in the network and let the wireless service recover.

Case two: If you want to configure a single Stellar AP without a DHCP server, perform the following steps:

1. Connect the Stellar AP (default IP address is 192.168.1.254) to your configing terminal (laptop for example) directly with an Ethernet cable.
2. Specify a static IP address and a DNS sever for the network card of your laptop, for example: IP Address - 192.168.1.100; Subnet Mask - 255.255.255.0; Default Gateway - 192.168.1.254; DNS sever -192.168.1.254.
3. Browse <http://mywifi.al-enterprise.com:8080> or <http://192.168.1.254:8080> to configure the Stellar AP.

7 Authentication Management

As WLANs evolve from best-effort to mission-critical infrastructure, organizations are finding that the operational aspects of network security take on much greater importance. The ALE Wi-Fi solution supports enhanced security methods to assure your wireless connection is more secure to eliminate any type of potential sniffers and other security threats. The major features of the ALE WLAN are:

- **To secure users and network traffic in a WLAN** - ALE provides a full suite of authentication, encryption, and policy enforcement capabilities in an architecture that allows easy integration of additional security services.
- **Wireless Intrusion Prevention System (WIPS)** - To enforce no-wireless policies or detect attacks against a WLAN, ALE AP provides advanced threat detection and suppressing functions. An AP can scan the wireless environment and detect the potential rogue and restrict it from replying to user connection requests.

AP Security described in this chapter includes:

- [Authentication and Encryption Methods](#)
- [How to Configure Captive Portal Authentication](#)

Authentication and Encryption Methods

When creating a WLAN, select the security type as illustrated in Figure 7-3.

- **Open:** No Authentication or encryption method for this WLAN. User data will be transmitted as Plain text Transmit Mode.
- **Personal:** There will be several WPA, WPA2, AES and TKIP combinations available once you select Personal. This does not require an external RADIUS server as illustrated in Figure 7-3.
- **Enterprise:** Authentication method will be based on WPA Enterprise Architecture. Encryption method TKIP or AES is selected. An external RADIUS server is required as illustrated in Figure 7-4.



Note

Note 7-1: WPA uses 802.1X authentication which is one of the Extensible Authentication Protocol (EAP) types available today. 802.1X is a port-based network access control method for wired, as well as wireless, networks.

It was adopted as a standard by the IEEE in August of 2001. EAP handles the presentation of users' credentials, in the form of digital certificates (already widely used in Internet security), unique usernames and passwords, smart cards, secure IDs, or any other identity credential that the IT administrator is comfortable deploying. WPA allows flexibility in both the type of credentials that are used and in the selection of an EAP type.

TKIP encryption, 802.1X/EAP authentication and PSK technology in WPA are features that have been brought forward from WPA2. Additionally, WPA2 will provide a new, encryption scheme, the Advanced Encryption

Standard (AES). WPA2 offers a graceful transition path from WPA that presents a compelling case for upgrading to WPA now. WPA2 will offer a highly secure “mixed mode” that supports both WPA and WPA2 client workstations. This will allow for an orderly transition in large enterprises that cannot readily upgrade in a short period of time. Unlike the WEP/WPA mixed mode in WPA devices, WPA2’s mixed mode will support both WPA and WPA2. It delivers a high level of security to enterprises as they make the move to the even higher level of security offered in WPA2. Since Wi-Fi Protected Access (WPA) already provides strong encryption, the transition to WPA2 clients and APs can be done gradually, seamlessly, and with a high level of confidence that security will not be compromised.

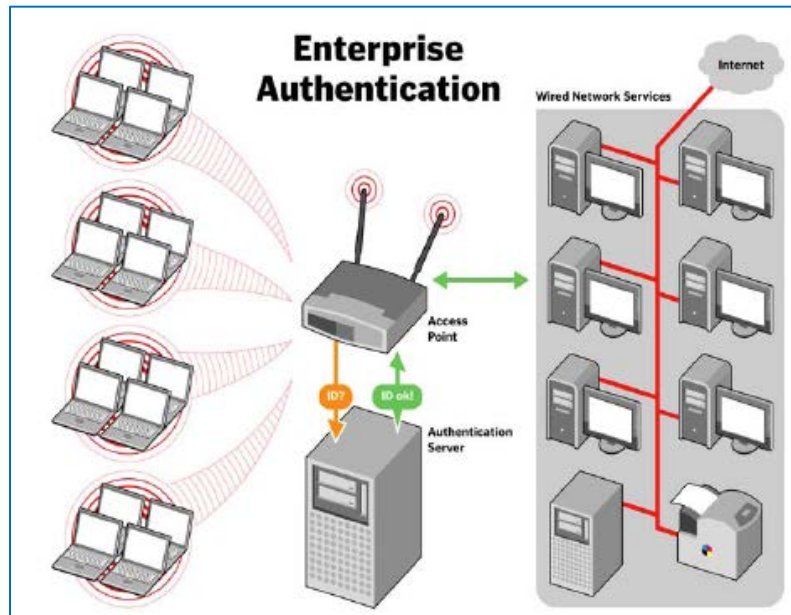


Figure 7-1 Enterprise Authentication

Users in small office and home office (SOHO) environments lack the budget and IT staff to install and maintain RADIUS authentication servers. WPA recognizes this by offering these users the benefits of WPA security through the use of a “pre-shared key” (PSK) or password. The PSK provides home and SOHO users with the same strong TKIP encryption, per packet key construction, and key management that WPA provides in the enterprise. The difference is that here, a password is manually entered on client devices and on the AP or wireless gateway and used for authentication. While not as robust as a full-blown RADIUS, EAP and 802.1X authentication approach, the PSK provides a useful alternative for smaller networks. Upgrading to Wi-Fi Protected Access in home and small office environments is simple. Users can purchase new WPA-enabled equipment or update installed equipment. For most users, the update is as easy as installing a new hardware driver.

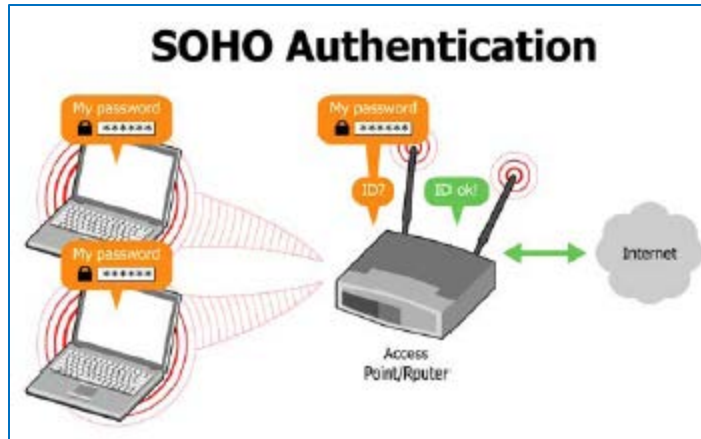


Figure 7-2 SOHO Authentication

One of WEP's chief weaknesses was that it used a small static key to initiate encryption. This 40-bit key is entered manually on the AP and on all clients that communicate with the AP. It does not change unless it is manually re-entered on all devices, a daunting labor-intensive task in a large organization. Cryptographic studies have demonstrated that an intruder who collects enough data can threaten a WEP network in three ways: by intercepting and decrypting the data that is being transmitted over the air, by altering the data that is communicated, and by deducing and forging the WEP key to gain unauthorized access to network and Internet services. This could be accomplished in a matter of hours on a busy, corporate WLAN.

Also, WEP lacks a means of authentication, validating user credentials to ensure that only those who should be on the network are allowed to access it. WPA addresses these flaws and brings additional safeguards to Wi-Fi security. WPA uses a greatly enhanced encryption scheme, Temporal Key Integrity Protocol (TKIP). Together with 802.1X/EAP authentication, TKIP employs a key hierarchy that greatly enhances protection. It also adds a Message Integrity Check (MIC, sometimes called "Michael") to protect against packet forgeries.

Figure 7-3 Authentication Security Type-Personal

The screenshot shows the 'Create New WLAN' configuration window. The 'Security Level' is set to 'Enterprise'. The 'Key Management' dropdown menu is open, showing three options: 'Both(wpa &wpa2)', 'Both(wpa &wpa2)', and 'wpa2-enterprise'. The 'AuthServer' field is empty. The 'AuthPort' is set to 1812. The 'AuthSecret' field is empty. The 'RADIUS Accounting' checkbox is unchecked. An 'Advance' button is visible at the bottom left.

Figure 7-4 Authentication Security Type-Enterprise

How to Configure Captive Portal Authentication

Create a Captive Portal WLAN

Navigate: Dashboard-WLAN window->'New' button.

The screenshot shows the 'Create New WLAN' configuration window. The 'WLAN Name' is 'mywifi-portal'. The 'Security Level' is set to 'Open'. The 'Captive Portal' radio button is selected 'Yes'. The 'Enable' radio button is selected 'Yes'. The 'Hidden' radio button is selected 'No'. The 'VLAN ID' is 0. The 'Band' checkboxes for '2.4GHz' and '5GHz' are both checked. The 'MaxClients Per Band' is 64. The 'Upstream Per Client' is 0. The 'Downstream Per Client' is 0. A red box highlights the 'Security Level' and 'Captive Portal' fields.

Figure 7-5 Create Captive Portal type WLAN

If you have created the captive portal WLAN, proceed to: [Enable Captive Portal Service.](#)

Enable Captive Portal Service

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

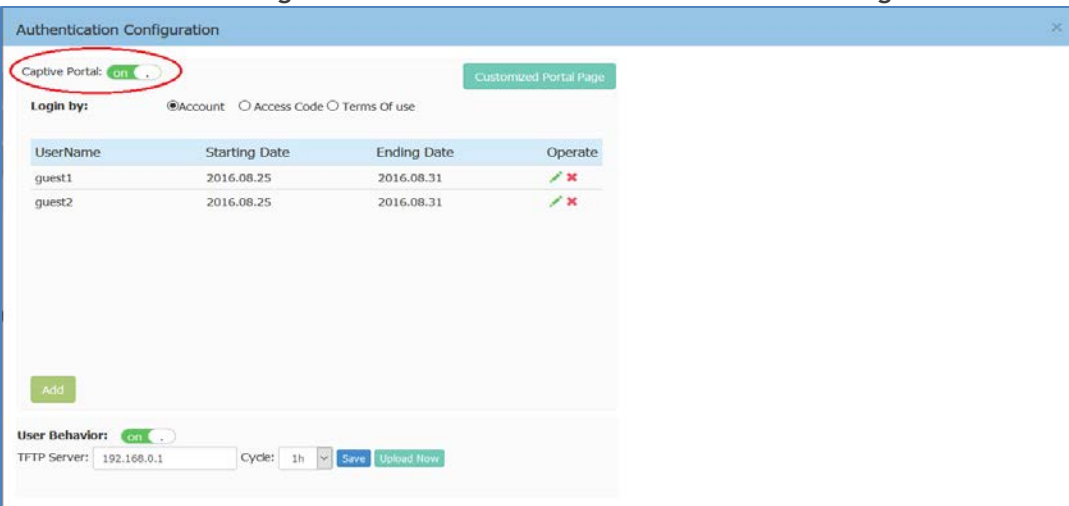


Figure 7-6 Enable Captive Portal Service

After you have enabled the captive portal service, proceed to: [Select Your Login Method.](#)

Select Your Login Method

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

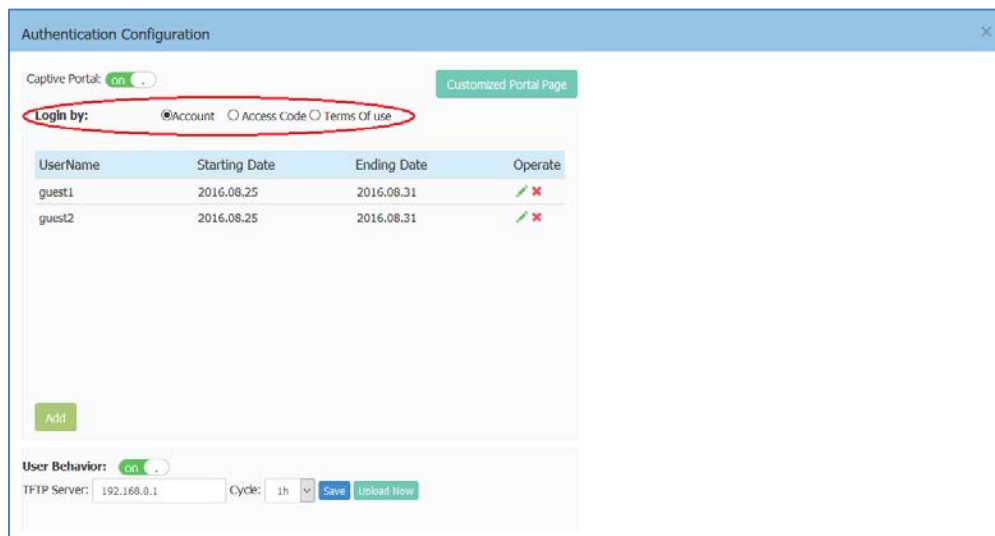


Figure 7-7 Select Your Login Method

There are three login methods for the captive portal authentication:

- (1) Login by account and password;
- (2) Login by unified access code for the organization;
- (3) Login by accepting terms of use;

If you have selected the account or access code login method, proceed to: [Create Users or Access Code.](#)

Create Users or Access Code

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window.

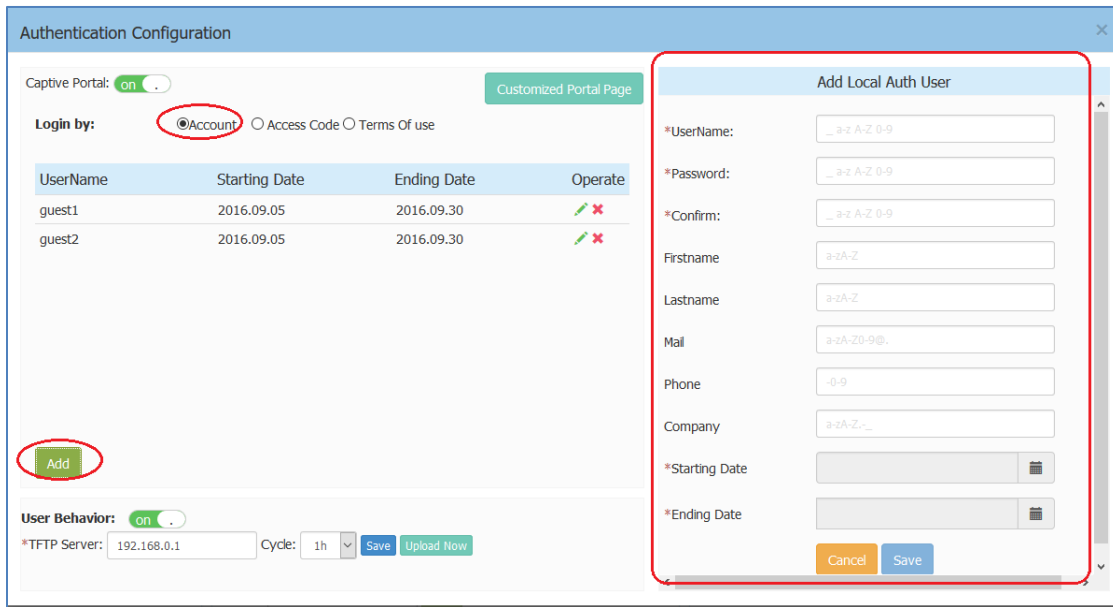


Figure 7-8 Create Captive Portal Users



Note

Note 7-2: If you have selected login by account method for the captive portal authentication, it ONLY supports users in the local user database. It does not support connecting to an external authentication server. You can add user accounts to the local user database, see in Figure 7-8.

Note 7-3: Single user account can be used by multiple devices simultaneously, there are no limits to the number of devices a captive portal user account can connect to the network.

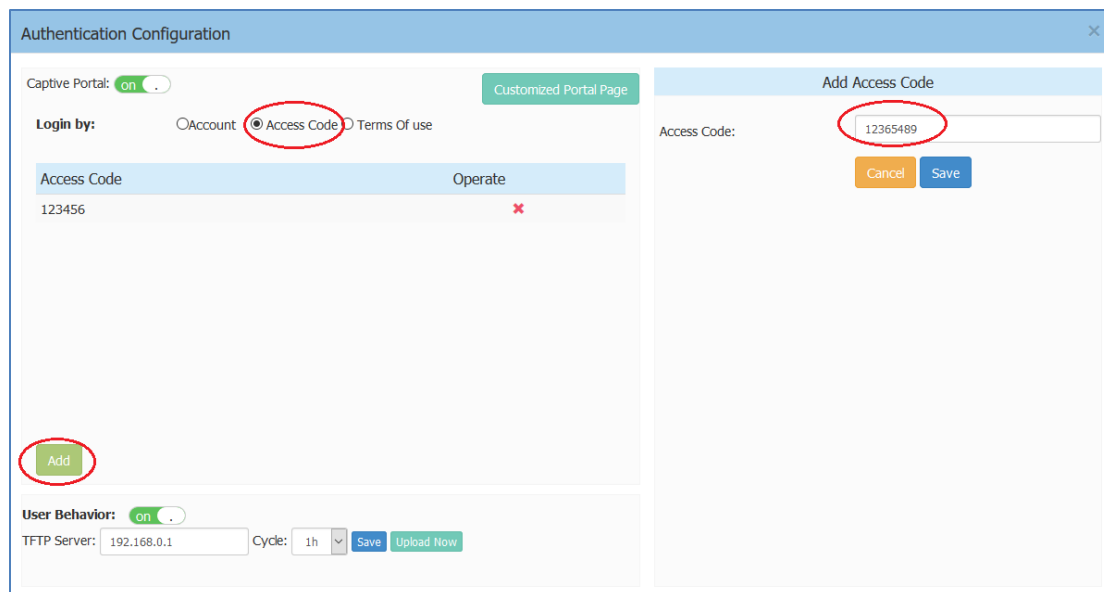


Figure 7-9 Create Access Code

Customize Your Splash Page (Optional)

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window-Customized Portal Page Panel.

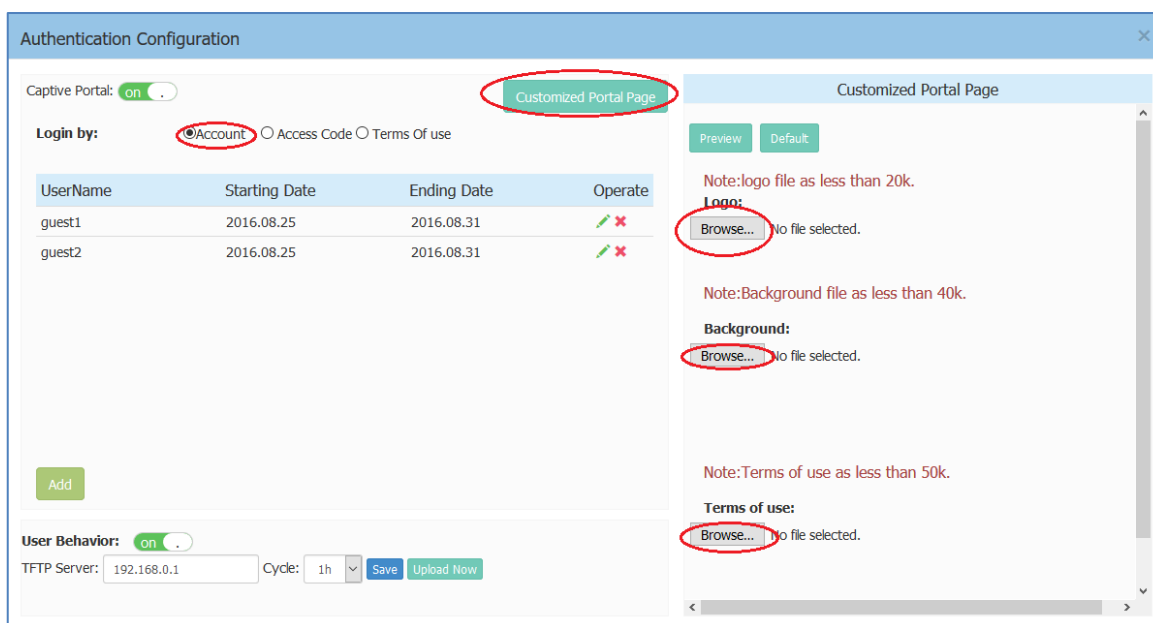


Figure 7-10 Customize Your Splash Page

Log User Behavior (Optional)

Navigate: Dashboard-Access Page-Authentication Window-Authentication Configuration Window

The user behaviors including online and offline are logged and sent to the specified TFTP server. The detailed information of the user behavior can refer to: [Authentication Configuration Window](#).

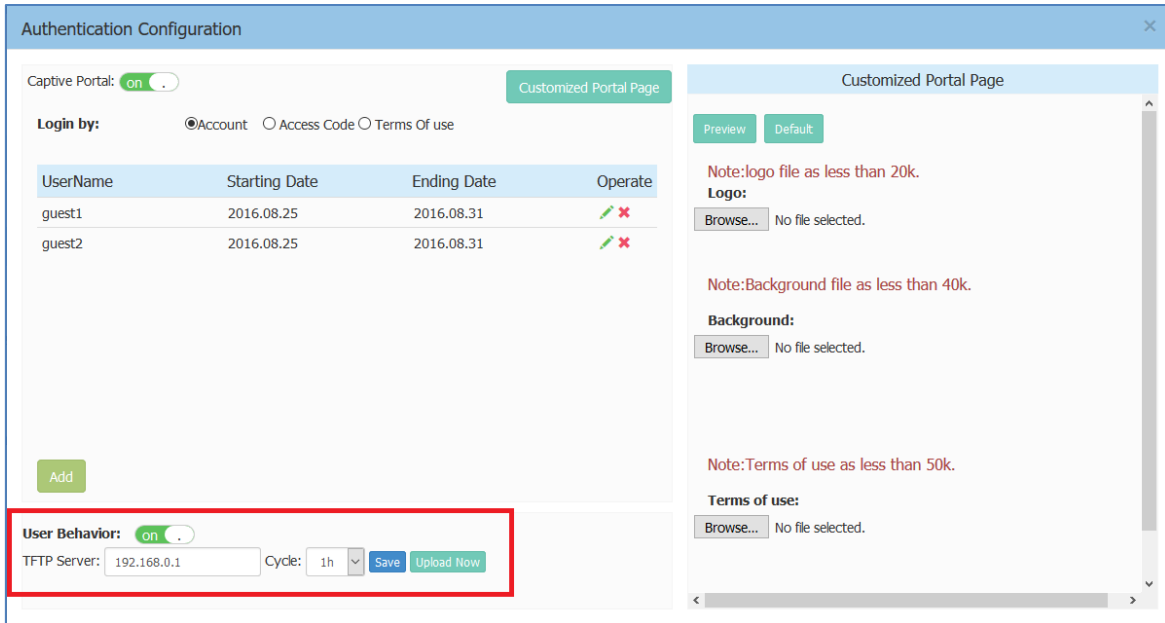


Figure 7-11 Log User Behavior

Specify Your Walled Garden (Optional)

Navigate: Dashboard-Access Page-Black List & Whitelist Window-Walled Garden Tab.

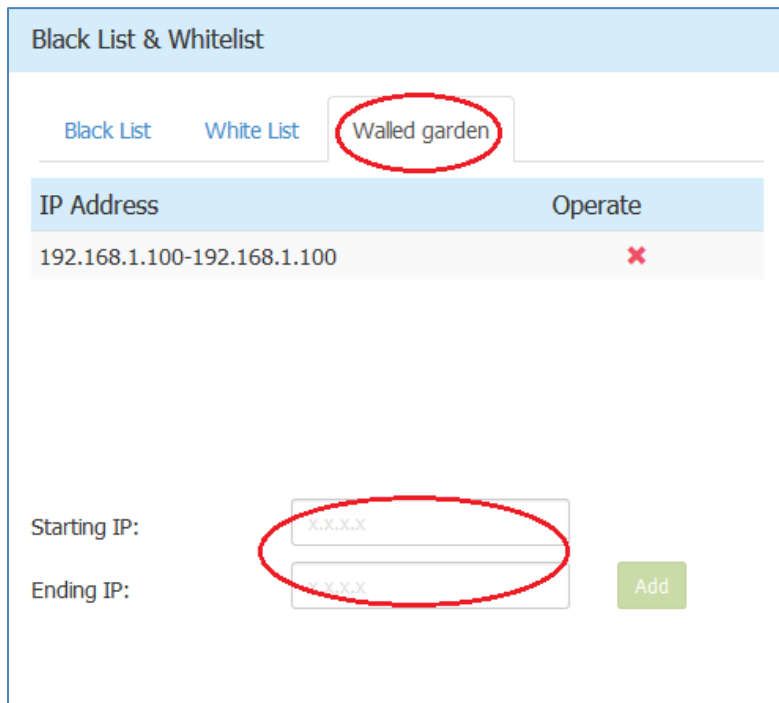


Figure 7-12 Wall Garden

Specify Your Captive Portal Whitelist (Optional)

Navigate: Dashboard-Access Page-Black List & Whitelist Window-White List Tab.

Black List & Whitelist

Black List **White List** Walled garden

MAC Address	Operate
4c:48:da:24:f1:90-4c:48:da:24:f1:90	✘

Starting MAC:

Ending MAC:

Figure 7-13 Portal Whitelist

8 Tools

Tools are several commands provided for diagnosing and troubleshooting. The commands are applied to a single AP in the group. You can select an AP from the group and execute a command to discover the running information of the AP, such as system health, wireless health and reboot reason. Illustrated in Figure 8-1, Figure 8-2.



Figure 8-1 Tools in Dashboard

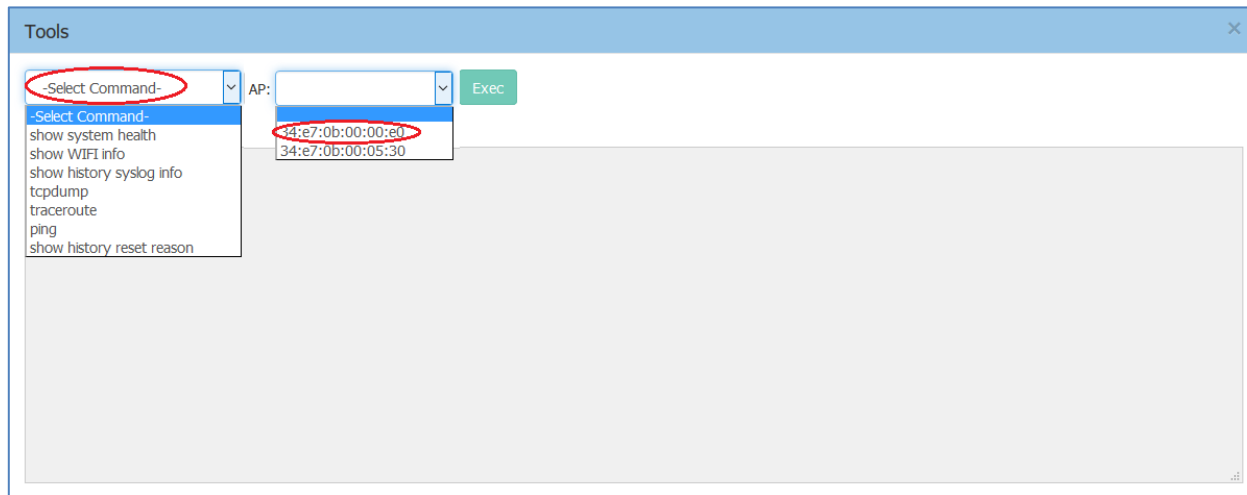


Figure 8-2 Troubleshooting Command

Table 8-1 describes the commands for troubleshooting.

Command	purpose
Show system health	Show system CPU and memory usage information of specified AP
Show WIFI Info	Show wireless interface information of specified AP

Show history Syslog info	Show historic Syslog messages generated in last time system running (Before this time system up) of specified AP
tracert	Traceroute from specified AP to another host in the network
Ping	Ping operation from specified AP to another host in the network
Show history reset reason	Show historic reboot reason of specified AP

PMD

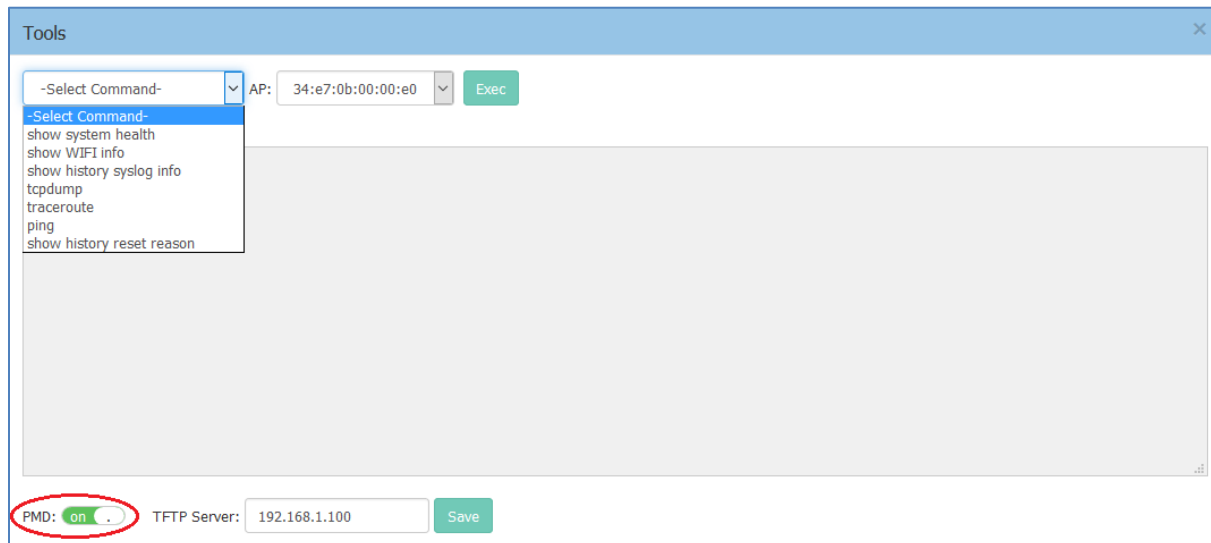


Figure 8-3 PMD

Post Mortem Dump (PMD) is a troubleshooting method helping to identify root cause of a core dump and exception pointers after a fatal crash. If PMD is enabled and configured, the AP will send PMD files to a specific TFTP server immediately when there is key process crashing on the AP. By default, PMD files sending to external TFTP server is disabled.

Reset the AP to Factory Default Settings

Press and hold the reset button for approximately 5 seconds then release. The LED will turn off and then turn red as the AP reboots to the factory default settings.

9 AP UI

AP UI is a dedicated web interface to monitor and configure single AP in the group, while group web management system is focus on cluster configuration as well as monitoring. In AP UI, you can:

- (1) Learn the WLANs status, connecting clients on the AP;
- (2) Configure DHCP/DNS/NAT services on the AP;
- (3) Configure wireless Mesh/Bridge feature for the AP;
- (4) Maintenance - Upgrade/Reset/Reboot the AP.

Login to AP UI

When AP is working in the Express mode, you need to login the group web management. In the AP List of group web, you can click the link to open a specific AP UI.

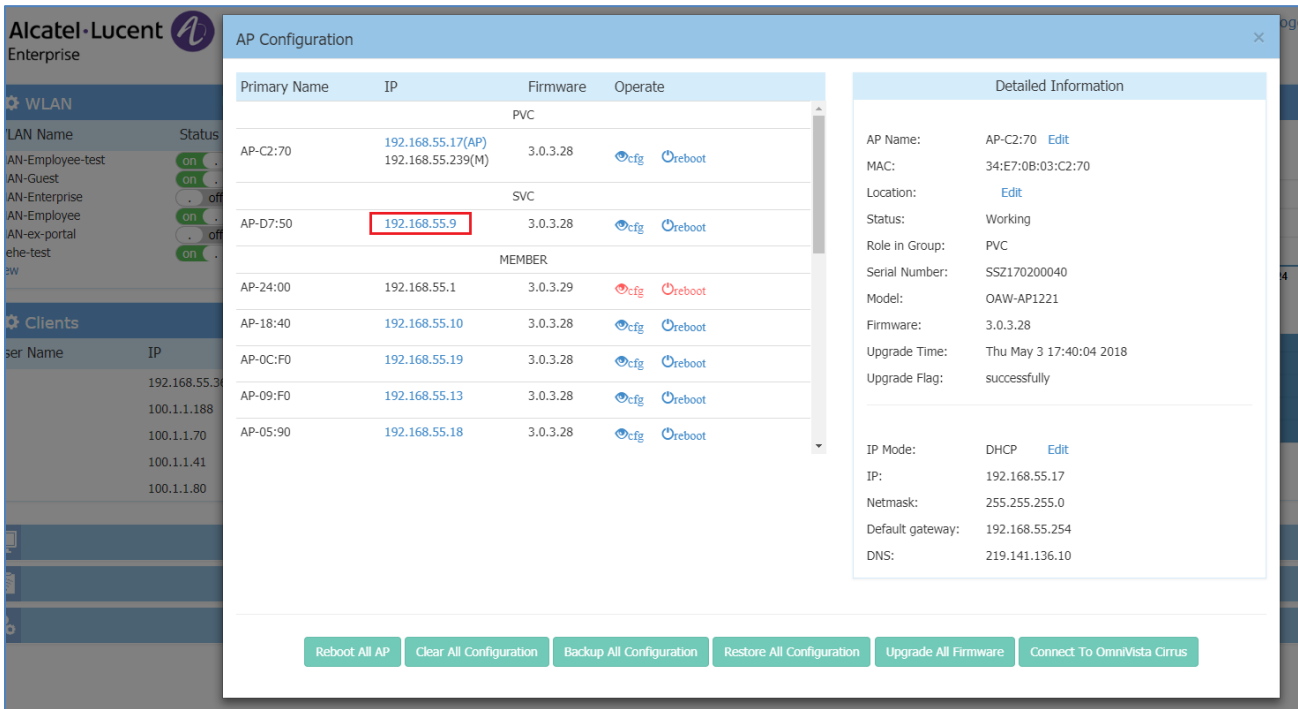


Figure 9-1 AP List - link to AP UI

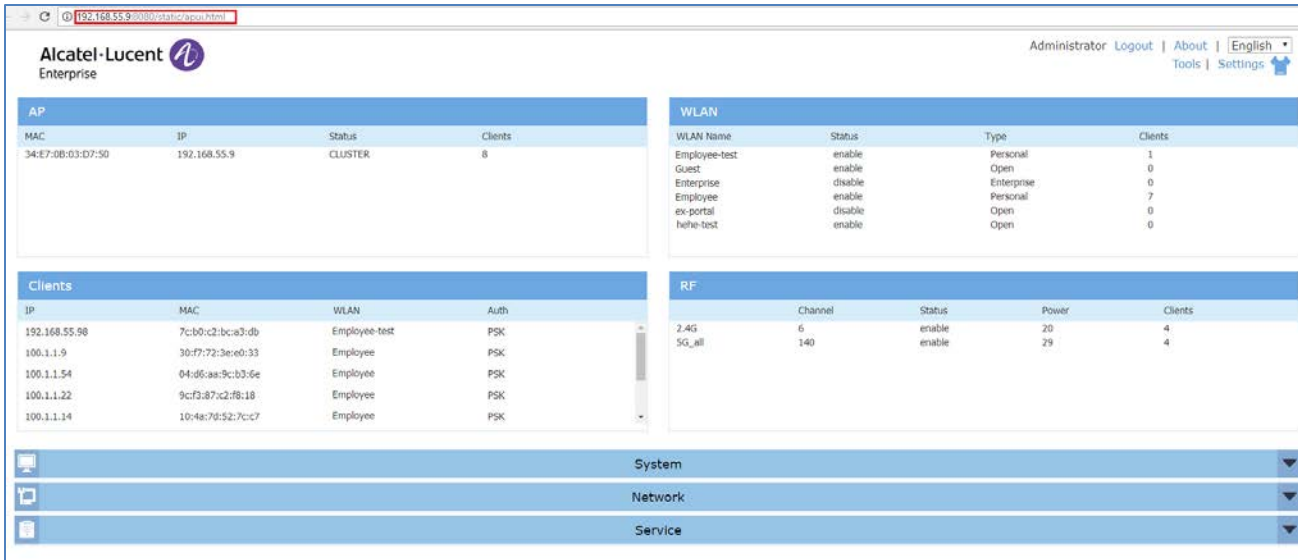


Figure 9-2 AP UI

When AP is working in the OmniVista Enterprise mode, you can open the AP UI through the “AP Web” hyperlink. More information can refer to help information on OmniVista platform.

AP Interface

Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration.

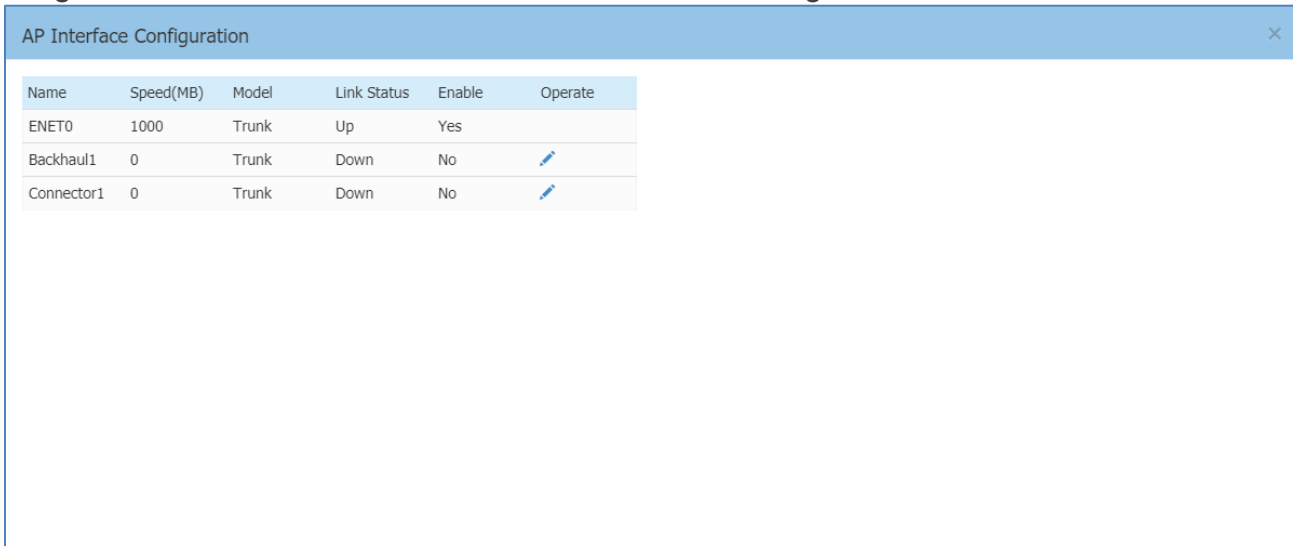


Figure 9-3 AP Interface

- ENET0 - Uplink interface of the AP.
- Backhaul1 - Uplink interface of the Mesh/Bridge link.
- Connector1 - Downlink interface of the Mesh/Bridge link.

For each AP interface

- Speed - Link speed of the AP interface.
- Mode - VLAN access mode or WLAN trunk mode.

- Link Status - Up/down.
- Enable - Indicate whether the AP interface is enabled or disabled.
- Operate - Can be applied to Backhaul1 or Connector1 interface for wireless mesh/bridge configuring.

AP Network

Navigate: AP-UI -> Network -> AP Networks.

The screenshot displays the 'AP Network Configuration' window. On the left, a table lists existing networks:

Name	Vlan	Protocol	IP Address	Operate
vlan667	667	Static		
vlan31	31	Static		
wan		DHCP	192.168.55.17	
vlan666	666	Static	100.1.1.1	

On the right, the 'Edit Network' form is shown for 'vlan666':

- Network Name: vlan666
- Vlan: 666
- Protocol: Static
- IP Address: 100.1.1.1
- Netmask: 255.255.255.0
- DNS: 192.168.55.17
- Default Route: off

Buttons for 'Cancel' and 'Save' are located at the bottom right of the form.

Figure 9-4 AP Network

- Network Name - Name of the network. There are 2 types of network on AP: VLAN networks mapping to WLAN (SSID); WAN networking mapping to AP uplink port.
- VLAN - VLAN ID mapping to specific WLAN (SSID).
- Protocol - IP address allocation for the network interface. IP address of a network interface is usually set as the gateway of the devices connecting the network.
 - DHCP - Indicates the interface IP address of the network is obtained from an outside DHCP server.
 - Static - Indicates the interface IP address of the network is manually set.
- Operate - Edit the AP network.
- IP Address - Interface IP address of the network.
- Netmask - Netmask of the network.
- DNS - DNS server for the network.
- Default Route - Indicate whether the interface of the network is default route of the AP. By default, WAN interface in the default route of the AP.

Configure Mesh/Bridge through AP UI

Navigate: AP-UI -> Network -> AP Interface -> AP Interface Configuration.

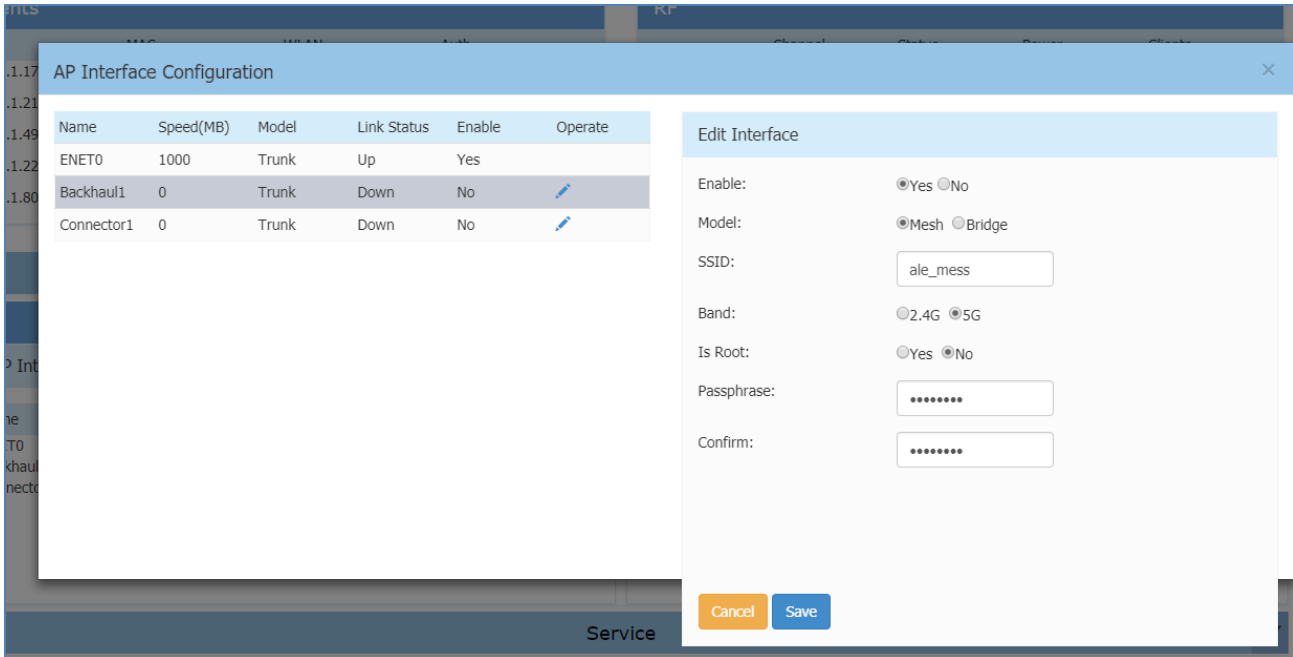


Figure 9-5 Configure Mesh/Bridge

Edit the Backhaul1/Connector1 interface:

- Enable - Enable/disable the wireless mesh/bridge on the AP.
- Mode - AP working mode, mesh mode or bridge mode.
- SSID - WLAN used to setup wireless mesh/bridge connection.
- Band - Mesh/bridge working band. All the mesh connection from root node to leaf shall be in the same band.
- Is Root - Specify the root node of the wireless mesh chain.
- Passphrase - Password of the WLAN used to setup wireless mesh/bridge connection.
- Confirm - Re-enter the password to confirm.

Configure DHCP through AP UI

Navigate: AP-UI -> Service -> DHCP.

For an AP group in the same L2 domain, you can setup DHCP server on a specific AP in the group.

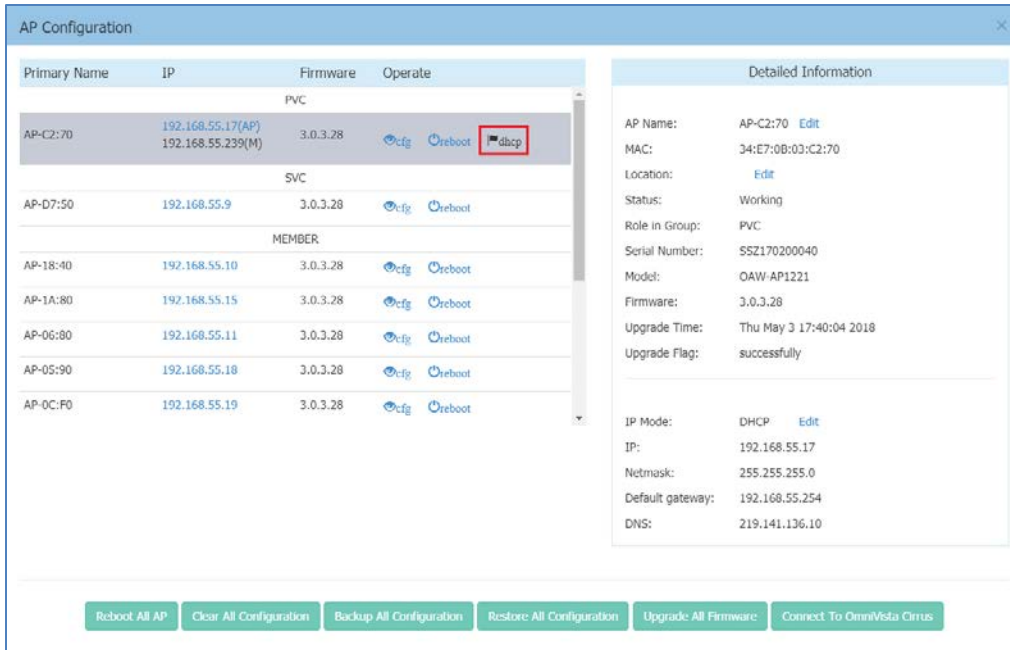


Figure 9-6 DHCP Server in AP group

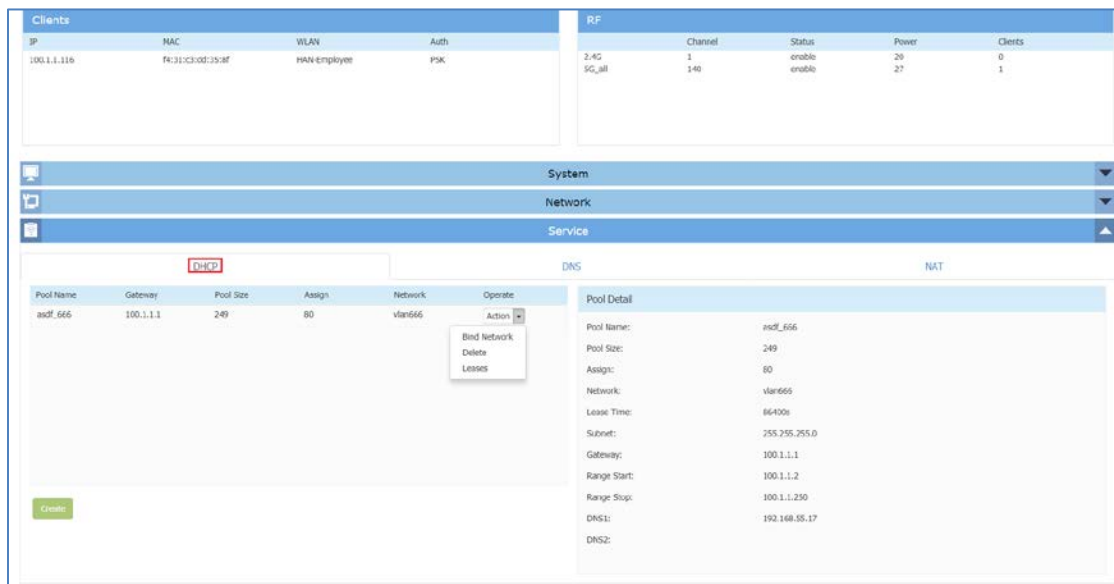


Figure 9-7 DHCP Server

- Pool Name - Name of the DHCP pool.
- Pool Size - Size of the DHCP pool.
- Assign - IP addresses have been allocated.
- Network - Network to which the DHCP pool is bound. A Network usually means the VLAN mapping to specific SSID or the AP WAN interface. All the networks are displayed in the window: AP UI -> Network -> AP Networks. You must map the VLAN to a SSID before it can be displayed in the AP UI.
- Lease Time - Period of time that the IP address allocated can be used by the device. By default, lease time is 24 hours.
- Subnet - Subnet of the DHCP pool.

- Gateway - Specify the gateway for the DHCP pool.
- Range Start - DHCP pool starting IP address.
- Range Stop - DHCP pool ending IP address.
- DNS1 - Primary DNS server for the DHCP pool.
- DNS2 - Secondary DNS server for the DHCP pool.
- Operate
 - Bind Network - Bind the DHCP pool to specific Network. Before binding, you need to configure the Network basic parameters in the 'AP UI -> Network -> AP Networks window'. Only Network with static IP (as gateway) can be bound to a DHCP pool.
 - Delete - Delete the DHCP pool.
 - Leases - Display the IP addresses which have been allocated to devices.

Configure DNS Cache through AP UI

Navigate: AP-UI -> Service -> DNS.

- Cache Size - Specify the size for the DNS cache.

Configure NAT through AP UI

Navigate: AP-UI -> Service -> NAT -> Source NAT.

Source NAT

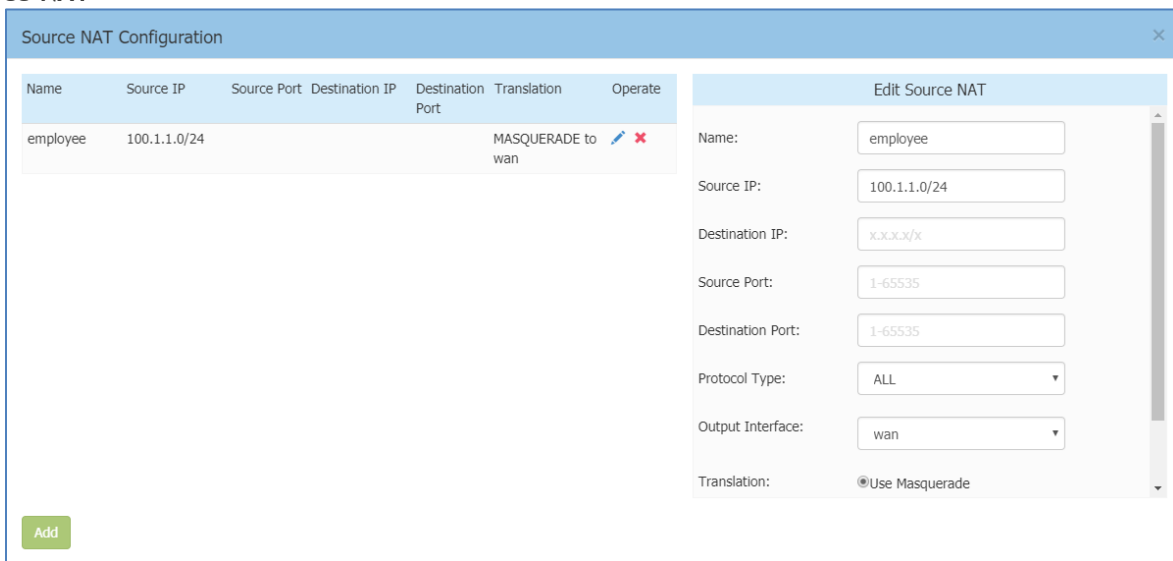


Figure 9-8 Source NAT

Source NAT can be utilized to translate the internal IP addresses to single external IP address while visiting Internet, by saving public IP address.

- Name - Name of the Source NAT rule.
- Source IP - Mapping source IP address of the NAT rule, single IP or segment.
- Destination IP - Mapping destination IP address of the NAT rule, single IP or segment.
- Source Port - Mapping source port of the NAT rule.
- Destination Port - Mapping destination port of the NAT rule.
- Protocol Type - Network protocol to which the NAT rule is applied.
- Output Interface - Specify the outbound interface of the NAT rule.
- Translation - Use Masquerade, indicates the internal IP addresses will be translated to the interface IP address (gateway) of the network.

Destination NAT

Name	Source IP	Source Port	Destination IP	Destination Port	Translation	Operate
------	-----------	-------------	----------------	------------------	-------------	---------

Add Destination NAT

Source IP: 106.78.34.108

Destination IP: 112.52.77.50

Source Port: 8090

Destination Port: 8090

Protocol Type: Both TCP and UDP

Input Interface: wan

*Translation: Specify Network Addr

IP: 192.168.1.100

Port: 8080

Add

Figure 9-9 Destination NAT

Destination NAT can be utilized to realize visiting specific server in the internal network from internet.

- Name - Name of the destination NAT rule.
- Source IP - Mapping source IP address of the NAT rule, single IP or segment.
- Destination IP - Mapping source port of the NAT rule.
- Source Port - Mapping source port of the NAT rule.
- Destination Port - Mapping destination port of the NAT rule.
- Protocol Type - Network protocol to which the NAT rule is applied.
- Input Interface - Specify the inbound interface of the NAT rule.
- Translation
 - IP - IP address to which the external IP address will be translated
 - Port - Port to which the external IP address will be translated

10 Web Management with HTTPS

There are two methods to login to the AP group web management system:

(1) HTTP protocol with URL <http://mywifi.al-enterprise.com:8080>, which is simpler and easier for the user without needing to install the digital certificate;

(2) HTTPS protocol with URL <https://mywifi.al-enterprise.com>, which is more secure communication between AP and the browser.

User can select his/her preferred managed method accordingly.

User can access the web manager directly with HTTP. If you want to access with HTTPS, a CA root needs to be downloaded from the AP and installed into the trust store of the browser used. The certificate installation procedure varies from operating system and browser combinations. You can follow below illustrated steps to install the root CA accordingly.

Download the Certificate from AP

In the HTTP login page, you can download the root certificate file “ALE-OmniAccess-WLAN.CRT” from AP, illustrated in Figure 10-1 and Figure 10-2.

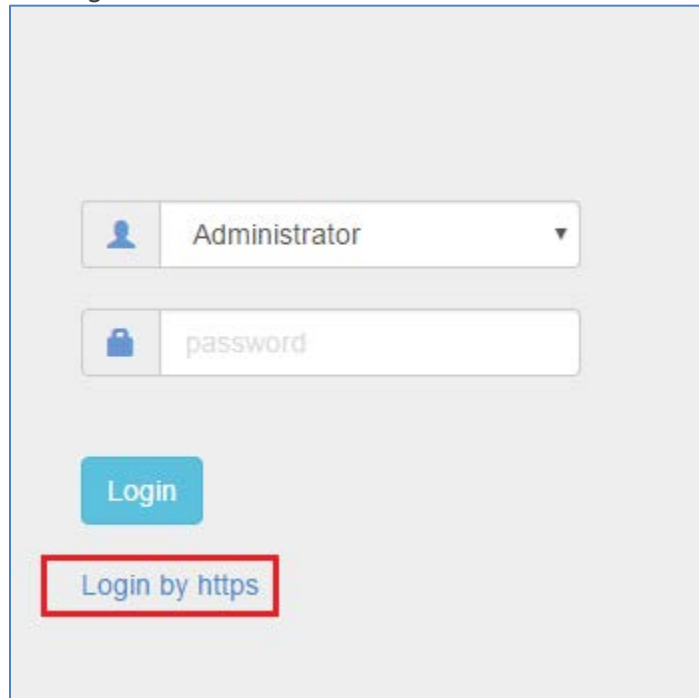


Figure 10-1 HTTP Login Page

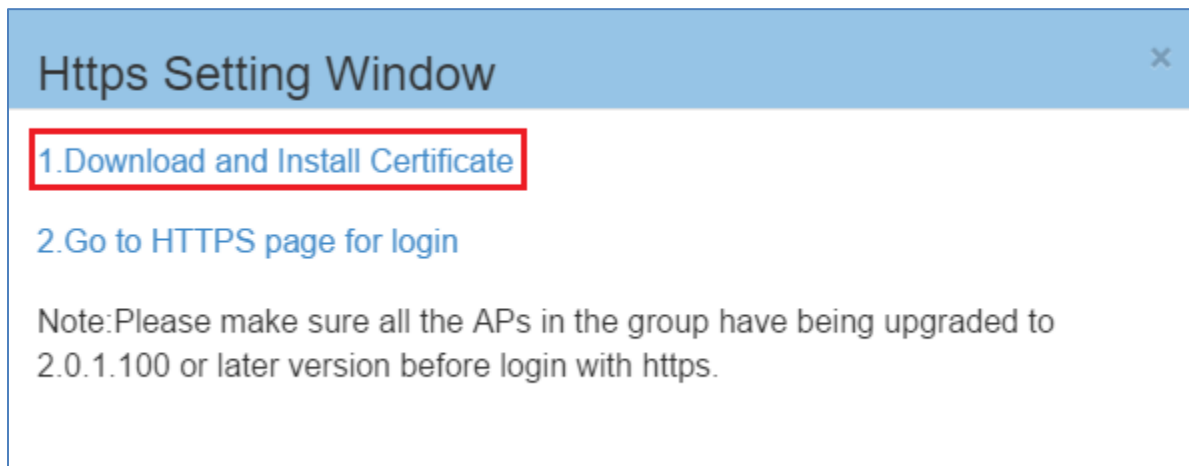


Figure 10-2 Download Certificate from AP

Install the Certificate on Different Platform accordingly

You can follow the demonstrated steps to install the certificate based on the operating system and browser combinations.

After you have installed the certificate successfully, you can access <https://mywifi.al-enterprise.com> to manage the AP group.

Case A: Microsoft Windows + Microsoft IE/Google Chrome

When using Microsoft IE or Google Chrome on Microsoft Windows platform, you can follow the steps illustrated from Figure 10-3 to Figure 10-8 to install the certificate.

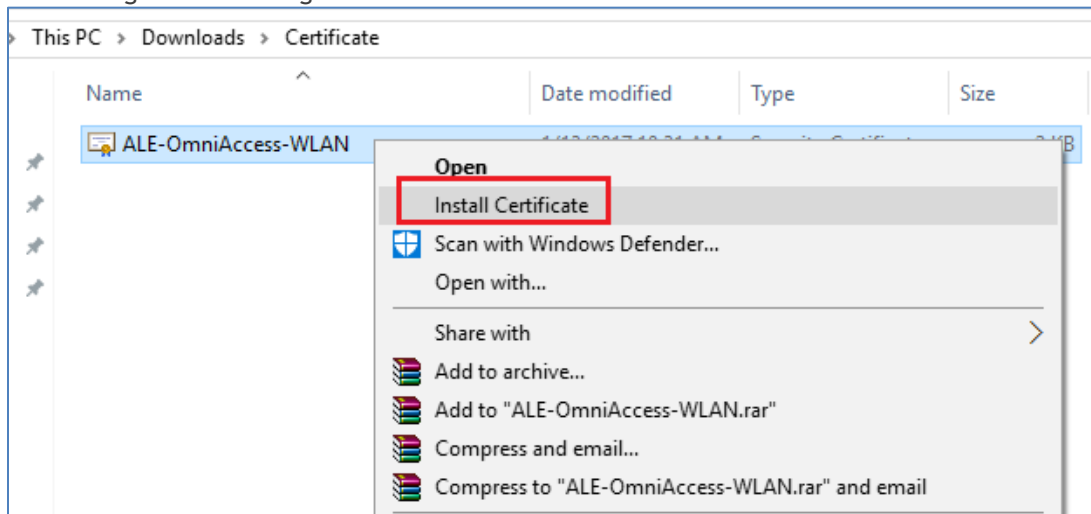


Figure 10-3 Case A - Step 1

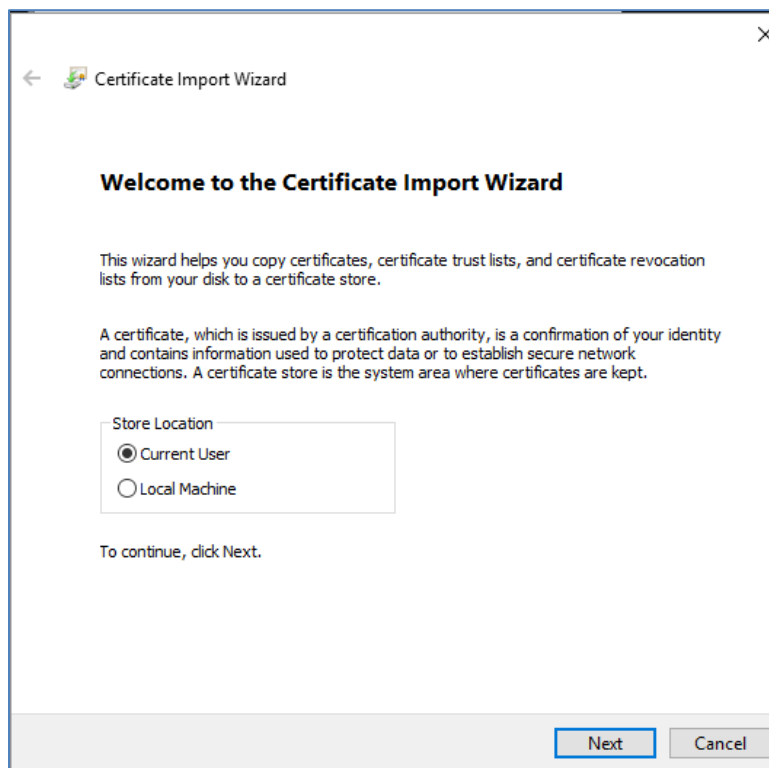


Figure 10-4 Case A - Step 2

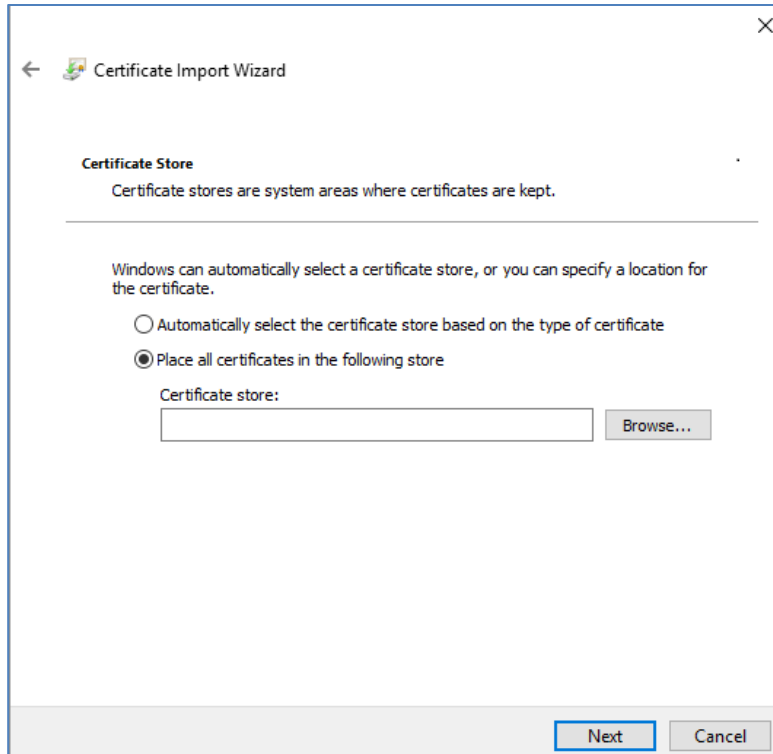


Figure 10-5 Case A - Step 3

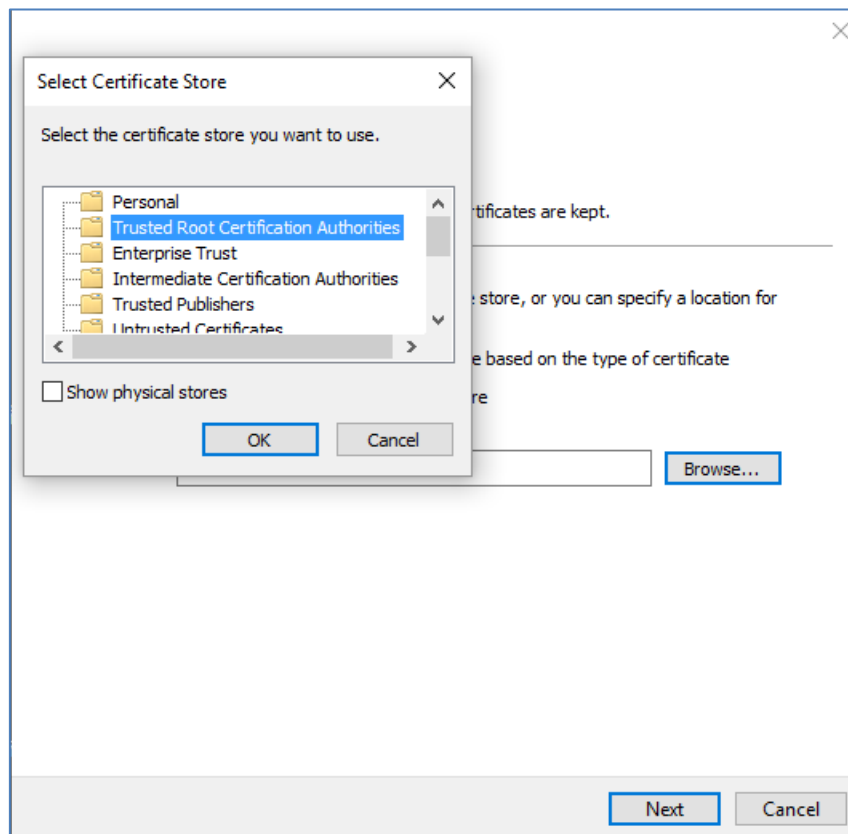


Figure 10-6 Case A - Step 4

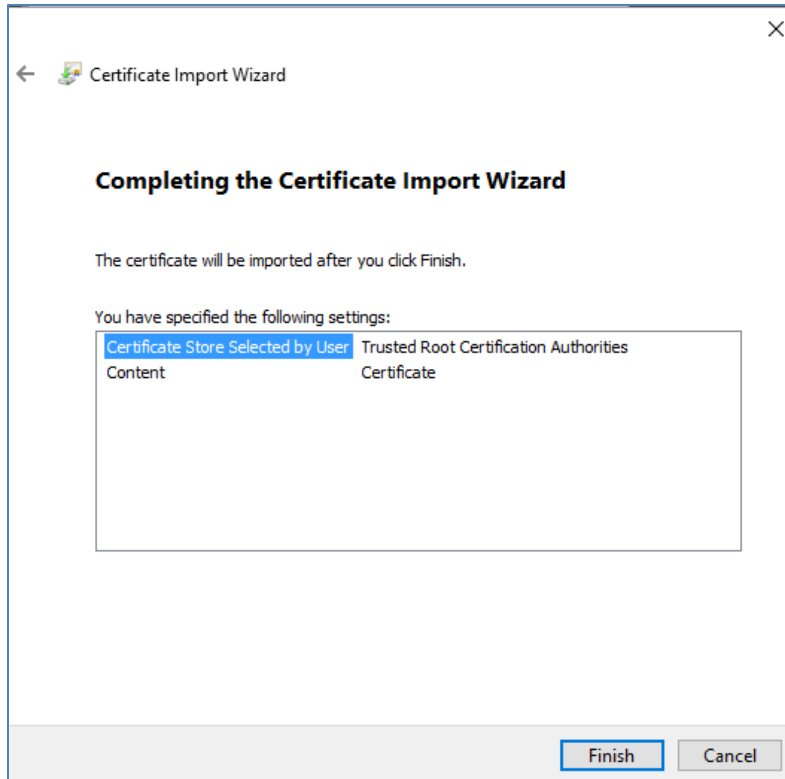


Figure 10-7 Case A - Step 5

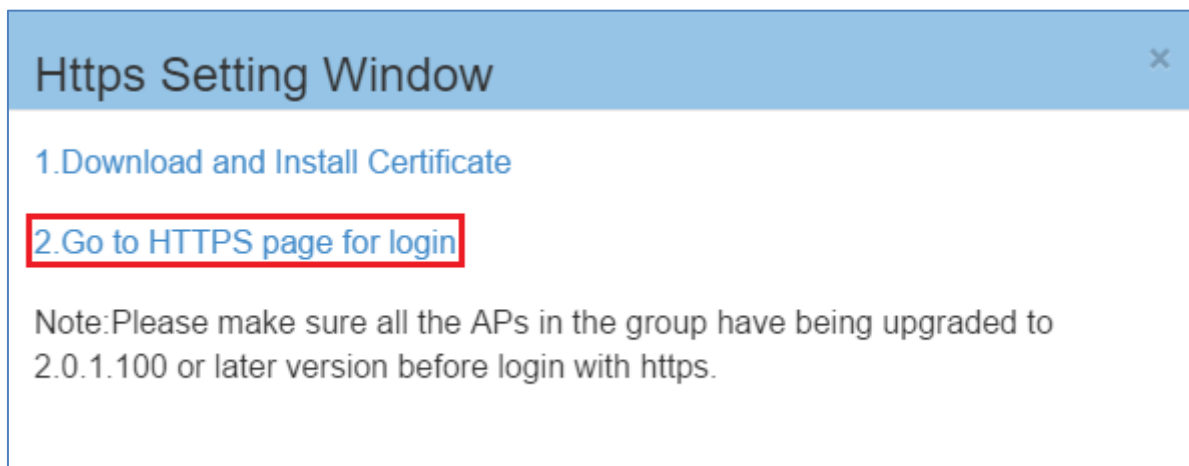


Figure 10-8 Case A - Step 6

Case B: Microsoft Windows + Mozilla Firefox

When using Mozilla Firefox browser on Microsoft Windows, you can follow the steps illustrated from Figure 10-9 to Figure 10-13 to install the certificate.

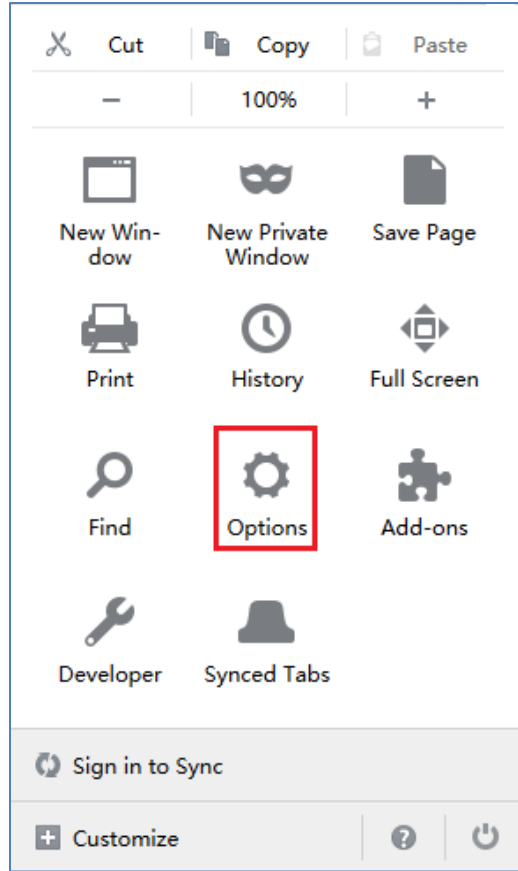


Figure 10-9 Case B - Step 1

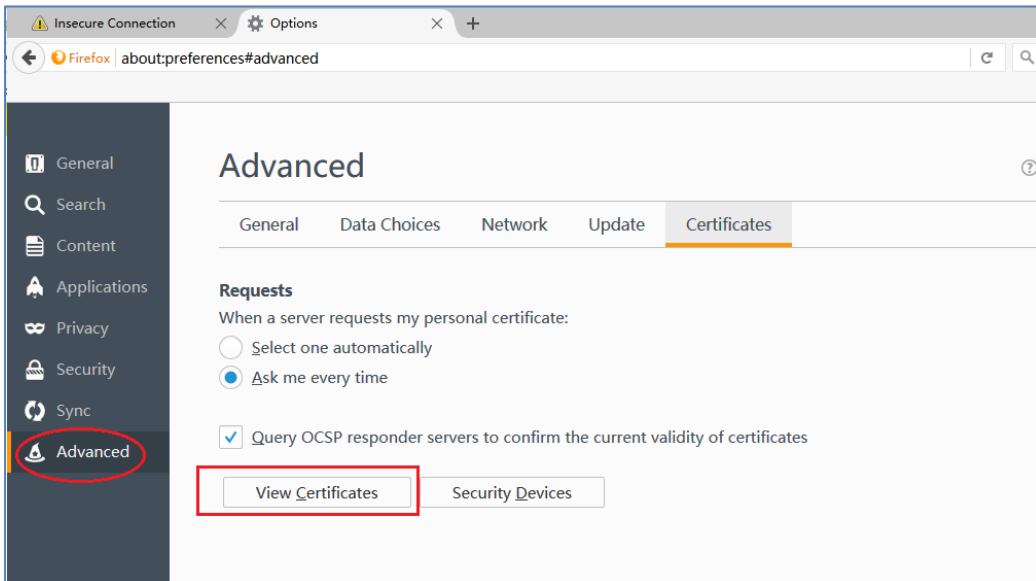


Figure 10-10 Case B - Step 2

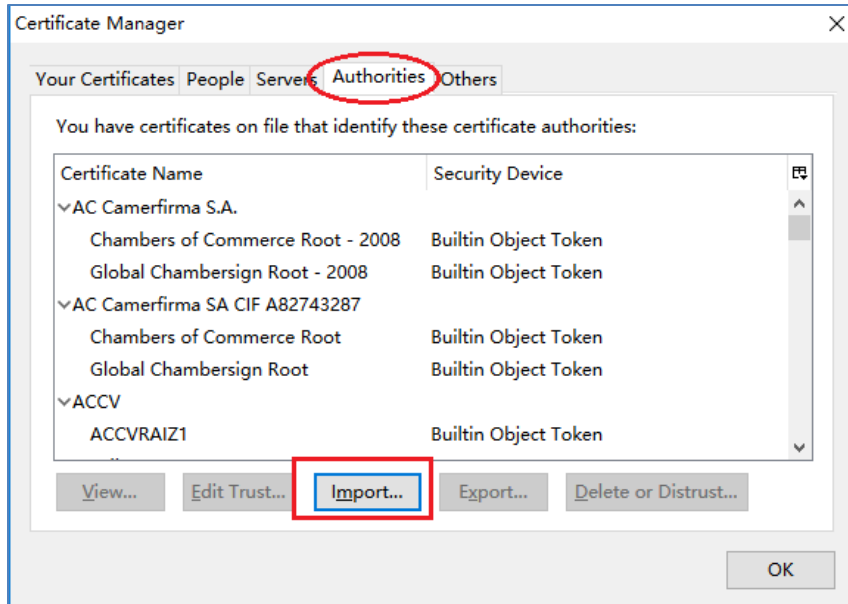


Figure 10-11 Case B - Step 3

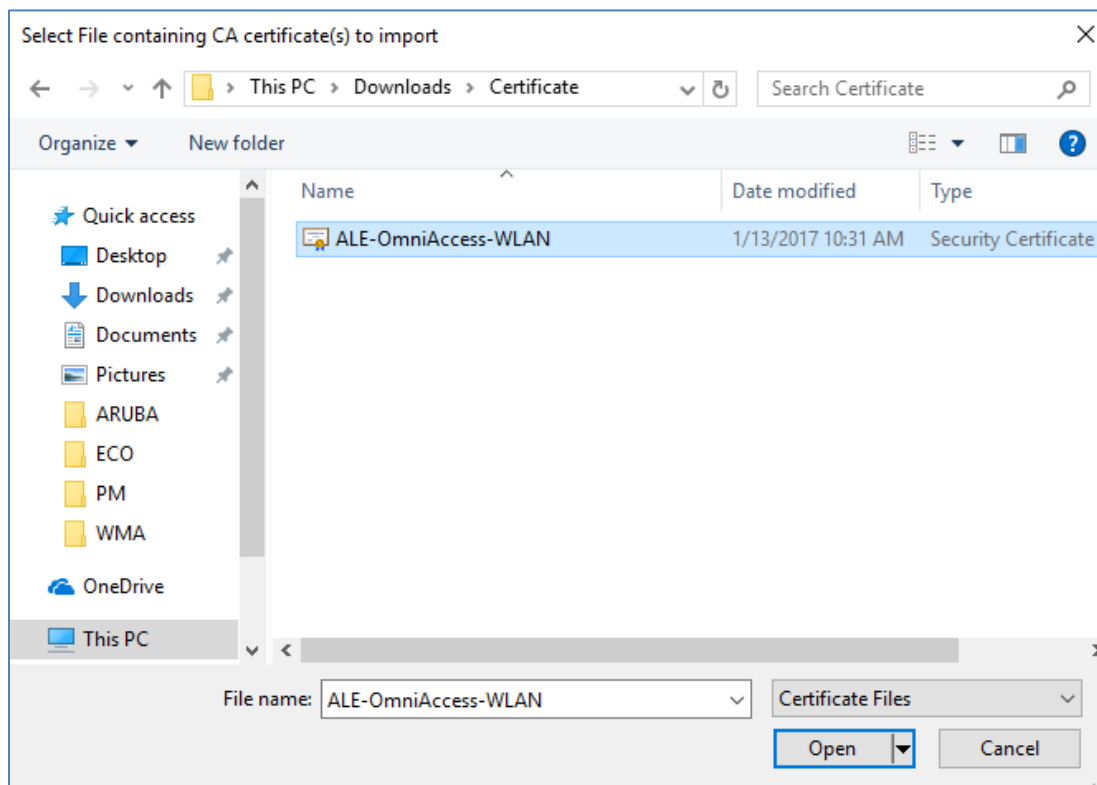


Figure 10-12 Case B - Step 4

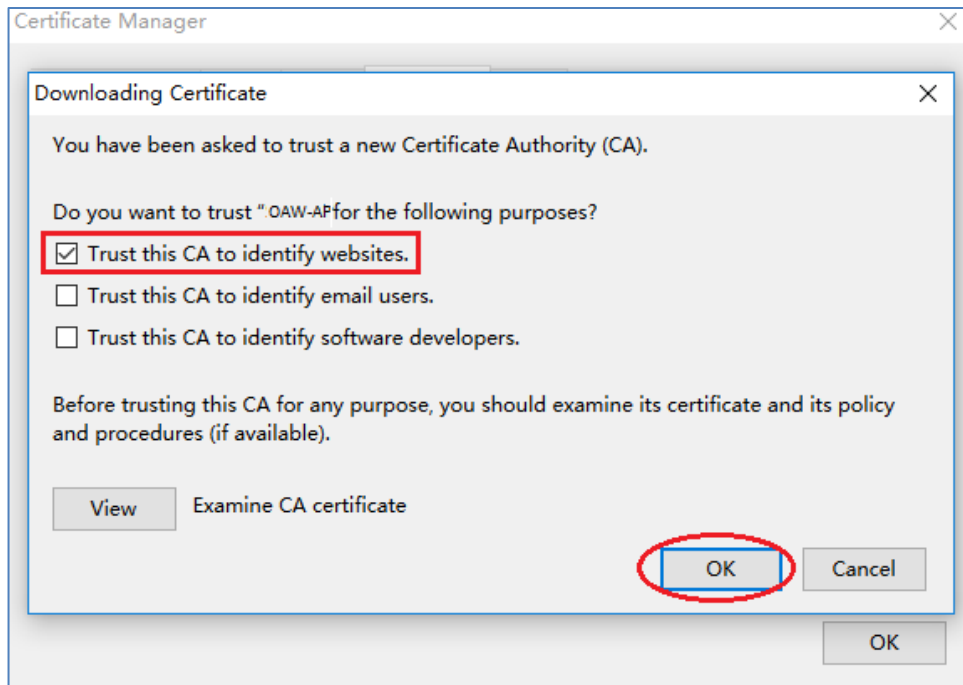


Figure 10-13 Case B - Step 5

Case C: Apple MAC OS X + Google Chrome

When using Google Chrome on Apple MAC OS X, you can follow the step illustrated from Figure 10-14 to Figure 10-22 to install the certificate.

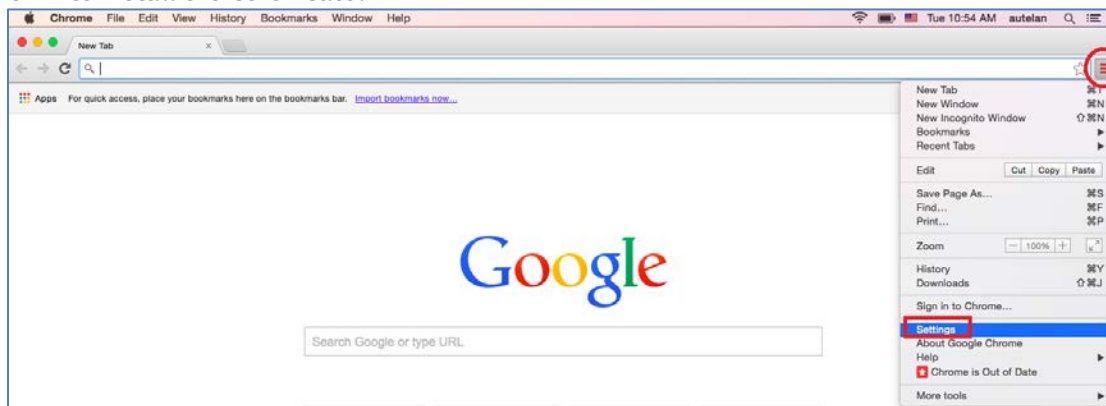


Figure 10-14 Case C - Step 1

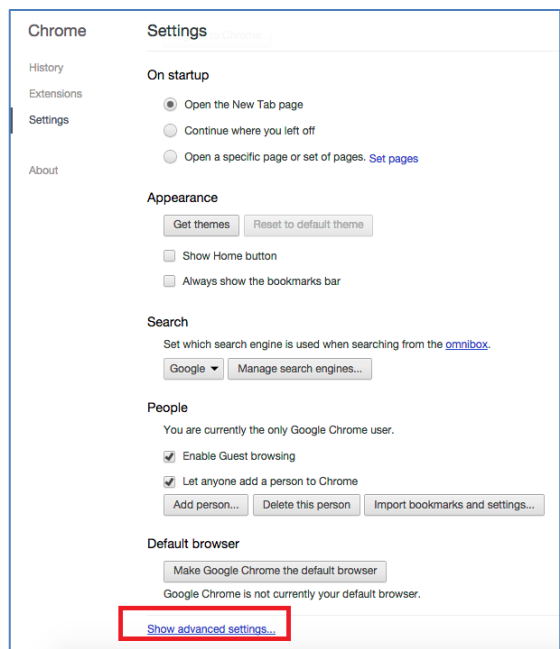


Figure 10-15 Case C - Step 2

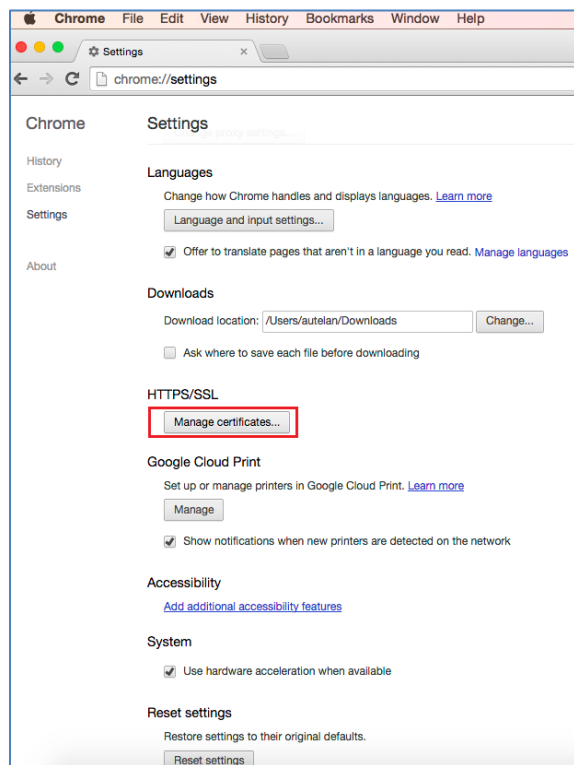


Figure 10-16 Case C - Step 3

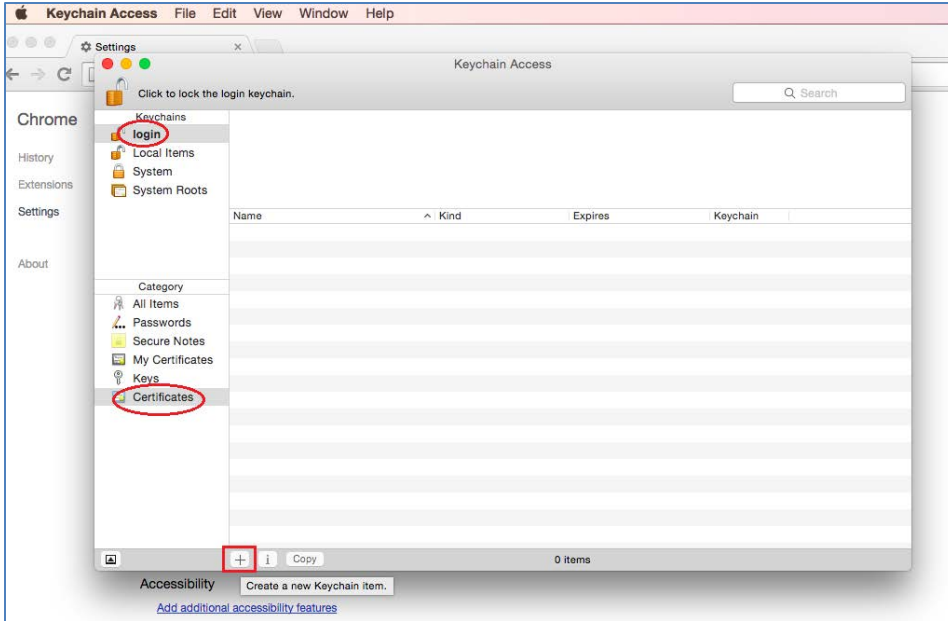


Figure 10-17 Case C - Step 4

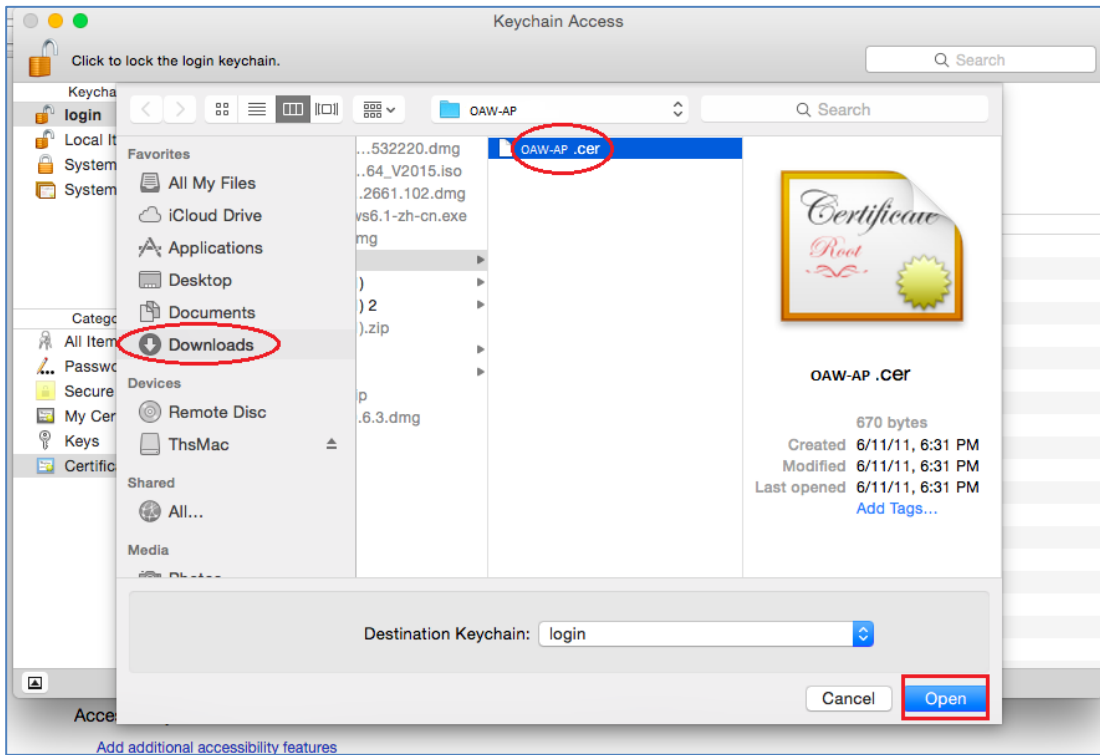


Figure 10-18 Case C - Step 5

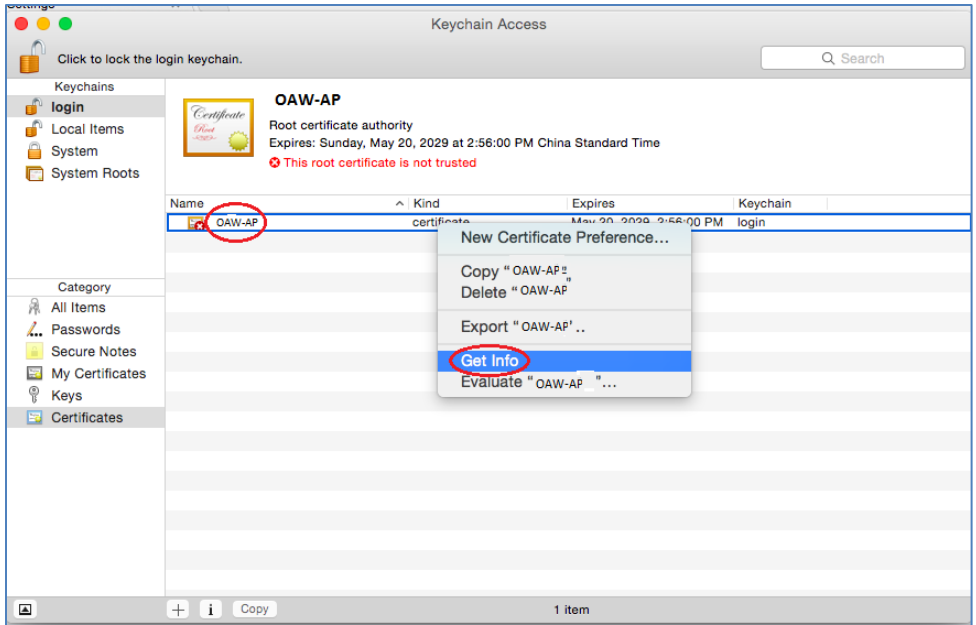


Figure 10-19 Case C - Step 6

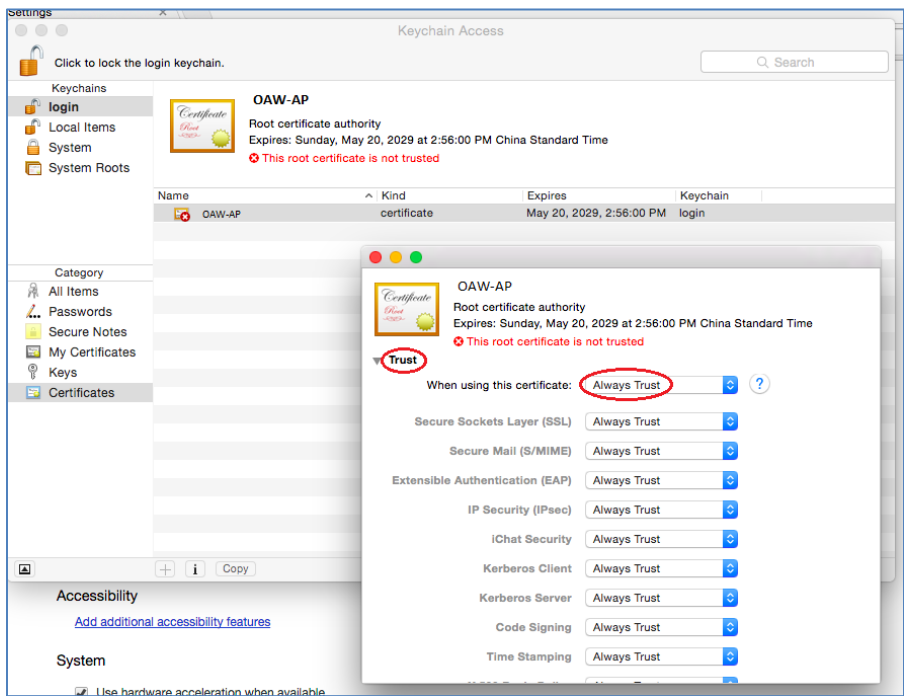


Figure 10-20 Case C - Step 7

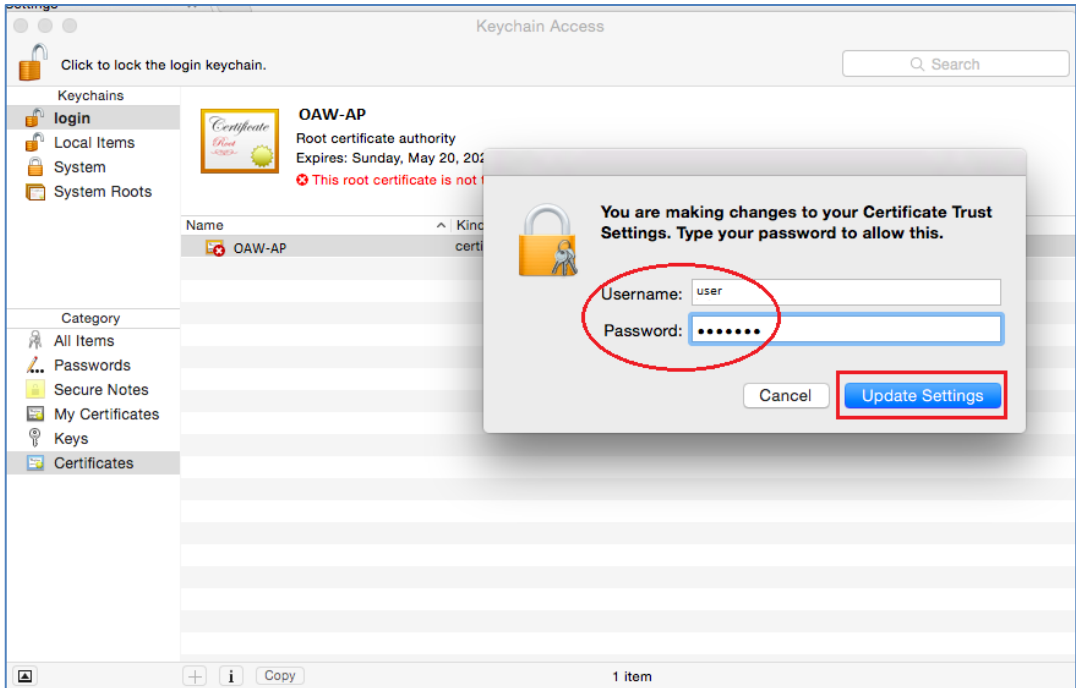


Figure 10-21 Case C - Step 8

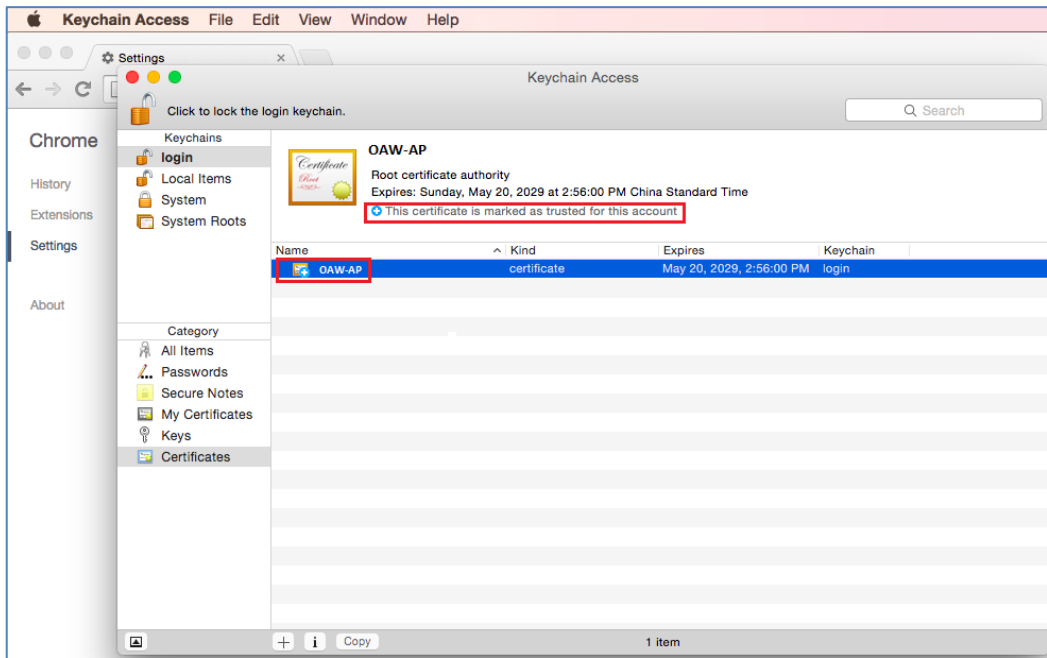


Figure 10-22 Case C - Step 9

Case D: Apple MAC OS X + Mozilla Firefox

When using Mozilla Firefox browser on Apple MAC OS X platform, go to [Case B: Microsoft Windows + Mozilla Firefox](#) and follow the steps to install the certificate.



Note

Note 9-1: The recommended operating system and web browser refer to [Prerequisites for Setting up and Accessing AP Group](#).

A. End-User Software License Agreement

ALCATEL-LUCENT ENTERPRISE USA, INC. ("ALU E")
SOFTWARE LICENSE AGREEMENT

IMPORTANT

Please read the terms and conditions of this license agreement carefully before installing or downloading this software. The installation and use of the software is subject to these terms and conditions (Agreement).

In this Agreement:

"Licensee" or You, Your and Yourself, means: the legal person or entity that by its authorized agents or representatives installs and/or uses, the Software.

"Software" (as defined in Section 1 below) for its own use and not for resale or distribution.

"Licensor" means Alcatel-Lucent Enterprise USA, Inc. or one of its Affiliated Companies or authorized distributors entitled to distribute the Software.

"Affiliated Companies" means any entity Controlling, Controlled by or under common Control, directly or indirectly, with Alcatel-Lucent Enterprise USA, Inc., "Control" means the ability to determine the management policies of a company or other entity through ownership of a majority of shares, by control of the board of management, by agreement or otherwise

Provided that You accept the terms and conditions of this Software License Agreement (the "Agreement") in accordance with the following paragraph and pay all applicable "License Fees", the Software shall be licensed subject to, and the use of the Software shall be governed by, this Agreement, except to the extent that a separate valid license agreement has been previously entered into between Licensee and Licensor that sets forth the terms and conditions for the use and license of the Software for the number of users for which, and on the platform on which Licensee is installing it, on terms and conditions equivalent to this Agreement ("Separate Agreement").

Notwithstanding anything to the contrary herein, if Licensee has entered into a Separate Agreement, the Software is licensed subject to the terms and conditions of the Separate Agreement and the provisions of the Separate Agreement shall supersede and replace any and all conflicting terms and conditions of this Agreement, even if Licensee clicks the accept button below. In such case, for the avoidance of doubt, the Separate Agreement and this Agreement shall not be deemed two concurrent agreements, and only the Separate Agreement shall be deemed entered into between Licensee and ALU E with respect to the Software.

IN THE EVENT WHERE NO SEPARATE AGREEMENT IS CURRENTLY IN FORCE, BY CLICKING THE ACCEPT BUTTON OR INSTALLING OR USING THE SOFTWARE, LICENSEE IS CONSENTING TO BE BOUND BY THE PROVISIONS OF THIS AGREEMENT AND IS BECOMING A PARTY TO THIS AGREEMENT. IF LICENSEE DOES NOT AGREE TO THE TERMS OF THIS AGREEMENT, CLICK THE BOX ADJACENT TO THE STATEMENT "I DO NOT ACCEPT THE LICENSE AGREEMENT" AND PROMPTLY DELETE ANY FILE CONTAINING THE SOFTWARE AND RETURN THE UNUSED SOFTWARE TO THE PARTY FROM WHOM YOU OBTAINED THE SOFTWARE. IF YOU HAVE ANY QUESTIONS ABOUT ANY PART OF THIS AGREEMENT PLEASE CONTACT YOUR ALE REPRESENTATIVE. LICENSEE IS ENCOURAGED TO SEEK LEGAL REVIEW OF THIS AGREEMENT PRIOR TO ACCEPTING IT.

1. License Grant and Restrictions of Use. This is a license, not a sales agreement, between the Licensee and ALU. Subject to Licensee paying all applicable fees, and subject to the terms set forth in this License Agreement ("Agreement"), ALU E or any of its Affiliated Companies, or, its local authorized Reseller or its authorized distributors from whom you purchased a license to use the software ("Licensor"), grants you this non-exclusive, non-transferable license to use the software program(s) delivered with this Agreement in

machine-readable form (the "Software"), and any documentation delivered with the Software (the "Documentation"). You shall not, and you shall not authorize other persons or entities to: (i) directly or indirectly, by electronic or other means, reproduce (except one copy for archival purposes), publish, distribute, rent, lease, sell, sublicense, assign or otherwise transfer the Software and Documentation or any part thereof or this Agreement; (ii) reverse-engineer, decompile, disassemble, merge, modify, use for competitive analysis, create derivative works of, or translate the Software or use any part of the Software outside the scope of the intended use of the Software; (iii) use the Software and Documentation for any purpose other than internal business purposes and not permit sublicensing, time sharing, rental, facility management, service bureau or application development use of the Software nor permit publication or distribution of results of any benchmark tests run on the Software without the express written permission of Licensor, or (iv) remove or obscure any copyright, trademark or other proprietary notices or legends from any portion of the Software, the Documentation or any associated documentation.

This license solely enables you to install the Software on one or more server computers and to use the Software on that concurrent number and type of server computers for which you have paid Licensor the applicable license fees. The Software is considered to be in use when it resides in memory or is otherwise stored on a machine. The Software might not be usable by you until you have obtained a license key that enables the Software. By obtaining a license key for the Software, you ratify your assent to this Agreement. You agree to ensure that anyone who uses the Software or Documentation does so only for your authorized use and complies with the terms of this Agreement. You may not use the Software to provide time-sharing, service bureau or other similar types of services to third parties.

If you use the Software within a country in the European Union, the Software Directive enacted by the Council of European Communities Directive dated 14 May, 1991, will apply to the examination of the Software to facilitate interoperability. You agree to notify Licensor of any such intended examination of the Software and may procure support and assistance from Licensor

2. Confidentiality. Licensor considers the Software to contain valuable trade secrets of ALU E, or it's licensors, the unauthorized disclosure of which could cause irreparable harm to ALU E or it's licensors. Except as expressly set forth herein, Licensee agrees to use reasonable efforts not to disclose the Software to any third party and not to use the Software other than for the purpose authorized by this License Agreement. This confidentiality obligation shall continue after any termination of this License Agreement.

3. Indemnity. Licensee agrees to indemnify, defend and hold Licensor harmless from any claim, lawsuit, legal proceeding, settlement or judgment (including without limitation Licensor's reasonable United States and local attorneys' and expert witnesses' fees and costs) arising out of or in connection with the unauthorized copying, marketing, performance or distribution of the Licensed Materials.

4. Limited Warranty. Unless a longer period is mandated by law, Licensor warrants that for a period of 90 days from the date of shipment of the media containing the Software to you, the Software, if operated as instructed, will perform substantially in accordance with the accompanying user documentation. Licensor's obligation under this warranty shall be limited as set forth below. Licensor does not warrant that the Software is totally free from error or omission or that its operation will be uninterrupted. All warranty obligations are void if the Software has been improperly installed or, except as allowed by applicable law, has been modified by a party other than Licensor.

EXCEPT FOR THE WARRANTIES SET FORTH ABOVE, THE LICENSED MATERIALS ARE LICENSED "AS IS" AND LICENSOR AND ITS SUPPLIERS AND/OR AUTHORIZED REPRESENTATIVES DISCLAIM ANY AND ALL OTHER WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING (WITHOUT LIMITATION) ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TITLE AND NON-INFRINGEMENT, PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, THAT SOFTWARE ERRORS (IF ANY) WILL BE CORRECTED, AND THAT THE SOFTWARE WILL OPERATE UNINTERRUPTED OR ERROR FREE. SOME STATES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES SO THE ABOVE EXCLUSIONS MAY NOT APPLY TO LICENSEE. THIS WARRANTY GIVES LICENSEE SPECIFIC LEGAL RIGHTS. LICENSEE MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

a. Specific Disclaimer for High Risk Activities: The Software are not designed or intended for use in high-risk activities, including, without limitation, nuclear facilities, aircraft navigation or aircraft communication systems, air traffic control, direct life support machines, or weapons systems, in which the failure of the Components could lead directly to death, personal injury, or severe physical or environmental damage ("High Risk Activities"). Licensor and its suppliers and/or authorized representatives specifically disclaim any express or implied warranty of fitness for High Risk Activities.

5. Limitation of Liability. Licensor's cumulative liability to Licensee or any other party for any loss or damages resulting from any claims, demands, or actions arising out of or relating to this License Agreement shall not exceed the license fee paid to LICENSOR for the Licensed Materials. IN NO EVENT SHALL LICENSOR AND ITS SUPPLIERS AND/OR AUTHORIZED REPRESENTATIVES BE LIABLE FOR ANY INDIRECT, INCIDENTAL, PUNITIVE, CONSEQUENTIAL, SPECIAL, OR EXEMPLARY DAMAGES, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR INTERRUPTION OR COMPUTER FAILURE OR MALFUNCTION OR LOSS OF PROFITS OR REVENUES, GOODWILL, INFORMATION OR DATA, OR ANY OTHER PECUNIARY LOSS, WHATSOEVER, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE), ARISING IN ANY WAY OUT OF THE USE OR MISUSE OF THE LICENSED MATERIALS, OR THE PROVISION OF OR FAILURE TO PROVIDE SUPPORT SERVICES, EVEN IF LICENSOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION TO INCIDENTAL OR CONSEQUENTIAL DAMAGES MAY NOT APPLY TO LICENSEE.

6. Taxes and Duties. Licensee will be responsible to pay any sales, use, value added, consumption or goods and services tax, import duties, or any other taxes or charges which may be applicable to this product or license.

7. Export Control. This product is subject to the jurisdiction of the United States. Licensee may not export or re-export the Licensed Materials, without complying with all United States export laws and regulations, including but not limited to (i) obtaining prior authorization from the U.S. Department of Commerce if a validated export license is required, and (ii) obtaining "written assurances" from licensees, if required.

8. Support and Maintenance. Except as may be provided in a separate agreement between Licensor and Licensee, if any, Licensor is under no obligation to maintain or support the copies of the Licensed Materials made and distributed hereunder and Licensor has no obligation to furnish Licensee with any further assistance, documentation or information of any nature or kind.

9. Term. This License Agreement is effective upon Licensee installing or downloading the Software and shall continue until terminated. Licensee may terminate this License Agreement at any time by returning the Licensed Materials and all copies thereof and extracts therefrom to Licensor and certifying to Licensor in writing that all Licensed Materials and all copies thereof and extracts therefrom have been returned or erased by the memory of Licensee's computer or made non-readable. Licensor may terminate this License Agreement upon the breach by Licensee of any term hereof. Upon such termination by Licensor, Licensee agrees to return to Licensor or destroy the Licensed Materials and all copies and portions thereof.

10. Governing Law. This License Agreement shall be construed and governed in accordance with the laws of the State of California and controlling U.S. federal law. No choice of law rules of any jurisdiction will apply.

11. Severability. Should any term of this License Agreement be declared void or unenforceable by any court of competent jurisdiction, this Agreement will remain in effect with the term omitted, unless omission would frustrate the intent of the parties, in which case this Agreement will immediately terminate.

12. No Waiver. The failure of either party to enforce any rights granted hereunder or to take action against the other party in the event of any breach hereunder shall not be deemed a waiver by that party as to subsequent enforcement of rights or subsequent actions in the event of future breaches.

13. Notes to United States Government Users. Software and documentation are provided with restricted rights. Use, duplication or disclosure by the government is subject to (i) restrictions set forth in GSA ADP Schedule Contract with ALU's reseller or distributor.(s), or (ii) restrictions set forth in subparagraph (c) (1) and (2) of 48 CFR 52.227-19, as applicable.

14. Third Party Materials. Licensee is notified that the Software contains or may be accompanied by or packaged with third party software and materials licensed to Licensor by certain Suppliers and/or Authorized Representatives. Some Suppliers and/or Authorized Representatives are third party beneficiaries to this License Agreement with full rights of enforcement. Please refer to the file entitled "Third Party Licenses and Notices" in the user's documentation residing on the media for the Suppliers and/or Authorized Representatives license and notice terms. You agree to accept the license terms, including Warranty terms, of any and all such third party end user license agreements included in the Software or Documentation.

15. The Asset Management feature may be chosen during installation, it collects and stores information such as; the make, model and serial number of Licensee's devices, the device software version numbers and system uptime information and such other information that would, in Licensor's sole discretion, be utilized to improve the customer experience. The information helps us to diagnose potential problems, if any, in the software. We may or may not use the diagnostic information, in our sole discretion, to provide support solutions, including updates, upgrades or services packs, if any are made generally available. We will not use the Asset Management feature to track, collect or upload any data that personally identifies You (such as your name, address, email address) except Customer information provided to us by You. Licensee may opt-out of providing this data during installation of the Software by, as the case may be, checking or un-checking the box adjacent to the Asset Management feature option. If the box next to the Asset Management feature option is not checked the option will not be activated. If You decide to activate the Asset Management feature after full installation, You may do so by following the instructions on the Preference page for Asset Management in You OmniVista 2500 client. Your use of the software constitutes your acknowledgment and agreement to the terms of use.

16. Entire Agreement. This Agreement is the complete and exclusive agreement between the parties with respect to the subject matter hereof, superseding and replacing any and all prior agreements, communications, and understandings (both written and oral) regarding such subject matter. This Agreement may only be modified, or any rights under it waived, by a written document executed by Officers of both parties. Any provisions of either purchase order, invoice, or similar document submitted by Licensee to Licensor, which are in addition to or inconsistent with the terms and conditions of this Agreement will be deemed stricken from such document.

17. Notices. If Licensee has any questions concerning this product or would like to otherwise contact ALU E, please write to:

Alcatel-Lucent Enterprise USA, Inc., 26801 West Agoura Road, Calabasas, CA 91301
ATTN: Sales.

Copyright 2016 Alcatel-Lucent Enterprise USA, Inc.

API User Guide

How to access API interface in Express mode

For the Northbound requirements, we provide five objects: user, group, ap, system, wlan. The process is as follows:

Step 1: Get PVC IP address

The web developer first needs to call the `system.getPvc` method via the following url to get the pvcip.

Url:

```
http://anyip address:8080/apiaccess
```

Step 2: Login to PVC

After that through the following url with pvcip call `user.logIn` method to get the session.

Url:

```
http://pvcip address:8080/apiaccess
```

If the PVC switch, you need to re-run Step1 to get a new pvcip.

Step 3: API access

After that through the following url with pvcip call other methods, each call must carry the session.

Url:

```
http://pvcip address:8080/apiaccess
```

If no method is called within 10 minutes, the session will be invalid.

Only by re-executing Step2 to get a valid session, other methods can be called normally.

Step 4: Logout

Finally, when you no longer call other methods, you need to call the `user.log_out` method to delete the session by using the following url.

Url:

```
http://pvcip address:8080/apiaccess
```

1.user object

For the user object, provide two methods: `user.logIn`, `user.logOut`.

user.logIn

Description:

```
This is the login method.
```

Request:

```

{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "user.logIn",
  "params": {
    "username": "Administrator",
    "password": "21232f297a57a5a743894a0e4a801fc3"
  }
}

```

Note: Only use the Administrator account to log in.

Request Parameters:

params	type	description
username	string	The default username is Administrator.
password	string	The default password is 21232f297a57a5a743894a0e4a801fc3.

Response:

```

{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Login success/Login log account lock/Login log Password error xxx/Login log account banned/Login log saveSessionid error/login log saveSessionValid error/Please access pvc/No params/No username/No password/Can not get password/The username is not Administrator",
    "sessionId": "2eb79fc698f7894349fe2605f37fdf3e"
  }
}

```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.
sessionId	string	Valid session, call other methods must be carry it. If success is false, then there will be no sessionId parameter.

user.logOut

Description:

This is the logout method.

Request:

```
{
  "id": 4,
  "jsonrpc": "2.0",
  "method": "user.logOut",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {}
}
```

Response:

```
{
  "id": 4,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Invalid session/Log out success/Log out fail/Please access
pvc"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.

2.ap object

For the ap object, provide two methods: ap.getSystemInfo, ap.getClient.

ap.getSystemInfo

Description:

```
Show AP details (AP Model, AP MAC, AP IP, UP time, AP SW version running).
```

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "ap.getSystemInfo",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {
    "apmac": "aa:bb:cc:dd:ee:ff"
  }
}
```

Request Parameters:

params	type	description
apmac	string	An ap mac.

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "apinfo": {
      "model": "OAW-AP1221",
      "mac": "aa:bb:cc:dd:ee:ff",
      "ip": "192.168.20.1",
      "uptime": 95458,
      "version": "3.0.0.57",
      "location": "home"
    },
    "success": "true/false",
    "message": "No id/No method/Invalid session/Please access pvc/No params/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/No topic/Mqtt pub fail/Mqtt timeout/Get ap info success"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.
apinfo	object	The details of ap. If success is false, then there will be no apinfo object.
model	string	Return ap's model, it belongs to apinfo object.
mac	string	Return ap's mac, it belongs to apinfo object.
ip	string	Return the ip address of ap, it belongs to apinfo object.
uptime	int	Return the total seconds of ap run time.
version	string	Return ap's version, it belongs to apinfo object.
location	string	Return ap's location, it belongs to apinfo object.

ap.getClient

Description:

Get the total number of clients connected on an ap, and also get the list of client connected on an ap.

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "ap.getClient",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {
    "apmac": "aa:bb:cc:dd:ee:ff"
  }
}
```

Request Parameters:

params	type	description
apmac	string	An ap mac.

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "total": 1,
    "users": [
      {
        "on_line": true,
        "mac": "b0:e2:35:24:e6:54",
        "ap": "46:07:5a:fa:a2:6a",
        "vap": "46:07:5a:fa:a2:77",
        "wlanid": 3,
        "radioid": 1,
        "AssociationSSID": "123",
        "AttachedBand": 5,
        "Channel": 161,
        "AuthType": "OPEN",
        "Portal_username": "",
        "ip": "192.168.20.189",
        "uptime": 15,
        "livetime": 0,
        "signal": 35,
        "mode": 19,
        "rx_rate": 390000,
        "rx_wifirate": 1733300,
        "rx_bytes": 72129,
        "tx_rate": 27000,
        "tx_wifirate": 1733300,
        "tx_bytes": 53132,
        "portal_enable": false,
        "portal_type": "wifidog",
        "portal_state": "know",
        "devtype": "Mobile",
        "hostname": "MI5-xiaomishouji",
        "ostype": "Android",
        "devmodel": "",
        "cputype": "",
        "delaytime": 9999999,
        "packetloss": 100,
        "rx_retr": 0,
        "tx_retr": 0,
        "up_package": 165,
        "down_package": 735,
        "up_rate": 6,
        "down_rate": 4
      }
    ]
  },
  "success": "true/false",
  "message": "No id/No method/Invalid session/Please access pvc/No params/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/No topic/Mqtt pub fail/Mqtt timeout/Get clients success/Um return error"
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.
total	int	Return the total number of clients connected on an ap. If success parameter is false, then there will be no total parameter.
users	array	Return the list of clients info connected on an ap. If success parameter is false, then there will be no users parameter.

3.system object

For the system object, provide three methods: system.saveConfig, system.getPvc,system.getApList.

system.saveConfig

Description:

Save the configuration for the cluster.

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "system.saveConfig",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {}
}
```

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Invalid session/Please access pvc/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/Mqtt pub fail/Mqtt timeout/Uc return error/Save config success"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.

system.getPvc

Description:

Show which ap is the pvc. Accessed by username & password

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "system.getPvc",
  "params": {
    "username": "Administrator",
    "password": "21232f297a57a5a743894a0e4a801fc3"
  }
}
```

Request Parameters:

params	type	description
username	string	The default username is Administrator.
password	string	The default password is 21232f297a57a5a743894a0e4a801fc3.

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "pvcip": "192.168.20.1",
    "success": "true/false",
    "message": "No id/No method/Get pvc success/Can not get password/Password wrong/No params/No username/No password"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.
pvcip	string	Return the ip address of pvc. The web developer first needs to call the method to get the pvcip. If success is false, then there will be no pvcip parameter.

system.getApList

Description:

Get the Ap List for the cluster.

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "system.getApList",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {}
}
```

Response:

```

{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "aps": [
      {
        "ap_name": "AP-2B:E0",
        "mac": "b0:e2:35:24:2b:e0",
        "ip": "192.168.20.189",
        "status": 3,
        "role": 1,
        "version": "3.0.3.13"
      },
      {
        "ap_name": "AP-E6:54",
        "mac": "b0:e2:35:24:e6:54",
        "ip": "192.168.20.182",
        "status": 3,
        "role": 2,
        "version": "3.0.3.13"
      }
    ],
    "success": "true/false",
    "message": "No id/No method/Invalid session/Please access pvc/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/Can't execute command/Get aplist success/The aplist is null"
  }
}

```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.
aps	array	Please refer to [Return aps Values].

Return aps Values:

aps	type	description
ap_name	string	Return ap's name.
mac	string	Return ap's mac.
ip	string	Return the ip address of ap.
status	integer	Return ap's status. 1:Joining; 2:Initializing;3:Working;4:Down.
role	integer	Return ap's role. 1:PVC;2:SVC;3:VC.
version	string	Return ap's version.

4.wlan object

For the wlan object, provide three methods: wlan.create, wlan.delete, wlan.get.

wlan.create

Description:

```
Create the various type of essid. It can be controllable time based.  
Allow creation of a essid as standard open.
```

Request:

```

{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "wlan.create",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {
    "ssid": "mywifi",
    "actionrange": "group",    //"group" or "all"
    "groupList": [
      "aa:bb:cc:dd:ee:f0",
      "aa:bb:cc:dd:ee:f1",
      "aa:bb:cc:dd:ee:f2"
    ],
    "allowBand": "all",
    "ssidEnable": "enable",
    "hideSSID": "disable",
    "securityLevel": "Personal",    //"Personal" or "Open" or "Enterprise"
    "encryptionType": "wpa-psk-aes",
    "passphrase": "12345678",
    "ap_bridge": "enable",
    "broadcastFilterARP": "disable",
    "multicastOptimization": "disable",
    "maxClientsPerBand": 13,
    "e0211rStatus": "disable",
    "e0211kStatus": "disable",
    "e0211vStatus": "disable",
    "okcStatus": "enable",
    "wlanTimer": {
      "enable": false,
      "periodType": "daily",        //"daily" or "weekend" or "weekday"
      "period": {
        "enable": false,           //false:all day, true:period start.
        "startTime": "10:59",     // hour and mins
        "endTime": "22:59"
      }
    },
    "upstreamBandwidth": 3,
    "downstreamBandwidth": 4,
    "redirectStatus": "disable",
    "vlanNumber": 123,
    "AuthServer": {
      "authenticationPort": 1812,
      "authIp": "192.168.21.123",
      "authSecret": "2345678"
    },
    "radiusAccounting": true,
    "AccServer": {
      "accountingPort": 1813,
      "accountIp": "192.168.21.111",
      "accountSecret": "123456"
    }
  }
}

```

Note: No matter which ap is applied to each WLAN, the number of wlan configured for each radio band can not more than seven.

Request Parameters:

params	type	validation	description
ssid	string	1-32 characters except space. It also can't begin with *.and end with □	Name that uniquely identifies a wireless network. If the name repeats, it will overwrite the wlan with the same name.
actionrange	enum	group/all	If the actionrange is group, the ssid will be enabled/disabled in the group. If the actionrange is all, the ssid will be enabled/disabled in all aps.
groupList	string	Valid apmac list	If the actionrange is group, the groupList need to be filled. If not, it does not need to be filled.
allowBand	enum	2.4/5/all	Configures the radio frequency band on which this ssid will be broadcast. You can select either 2.4 GHz, 5 GHz, or all to specify both bands.
ssidEnable	enum	enable/disable	Enables or disables the ssid.
hideSSID	enum	enable/disable	Enables or disables hiding of the ssid name in beacon frames. Note that hiding the ssid does very little to increase security.
securityLevel	enum	Open/Personal/Enterprise	
encryptionType	enum	wpa-psk-tkip, wpa-psk-aes, wpa-psk-aes-tkip, wpa2-psk-tkip, wpa2-psk-aes, dynamic-wep, wpa-tkip, wpa-aes, wpa2-tkip, wpa2-aes	If the securityLevel is Open, the encryptionType does not need to be filled. If the securityLevel is Personal, the encryptionType will be one of the following values: wpa-psk-tkip, wpa-psk-aes, wpa-psk-aes-tkip, wpa2-psk-tkip, wpa2-psk-aes. If the securityLevel is Enterprise, the encryptionType will be one of the following values: dynamic-wep, wpa-tkip, wpa-aes, wpa2-tkip, wpa2-aes.
passphrase	string	8-63 characters except space. It also can't include `=`"	WPA passphrase. If the securityLevel is Personal, this parameter needs to be filled. If not, it does not need to be filled.
ap_bridge	enum	enable/disable	
broadcastFilterARP	enum	enable/disable	
multicastOptimization	enum	enable/disable	

maxClientsPerBand	integer	1-120	
e0211rStatus	enum	enable/disable	If the securityLevel is Personal and Enterprise, this parameter need to be filled. If not, it does not need to be filled.
e0211kStatus	enum	enable/disable	
e0211vStatus	enum	enable/disable	
okcStatus	enum	enable/disable	If the securityLevel is Enterprise, this parameter need to be filled. If not, it does not need to be filled.
wlanTimer	object	Please refer to [Request wlanTimer Parameters]	
upstreamBandwidth	integer	0-65536	
downstreamBandwidth	integer	0-65536	
redirectStatus	enum	enable/disable	If the securityLevel is Open, this parameter need to be filled. If not, it does not need to be filled.
vlanNumber	integer	0-4094	
AuthServer	object	authenticationPort: 1-65535, authIp: valid IP, authSecret: 1-64 characters except space. It also can't include `=`	If the securityLevel is Enterprise, these parameters need to be filled. If not, it does not need to be filled.
radiusAccounting	bool	true/false	If the securityLevel is Enterprise, these parameters need to be filled.If not, it does not need to be filled.
AccServer	object	accountingPort: 1-65535, accountIp: valid IP, accountSecret: 1-64 characters except space. It also can't include `=`	If the securityLevel is Enterprise and the radiusAccounting is true, these parameters need to be filled.If not, it does not need to be filled.

Request wlanTimer Parameters:

wlanTimer	type	validation	description
enable	bool	true/false	If this parameter is true, time control is valid. If not, time control is invalid.
periodType	enum	daily/weekend/weekday	If the enable is true, this parameter need to be filled. If not, it does not need to be filled.
period	object	Please refer to [Request period Parameters]	If the enable is true, the period object need to be filled. If not, it does not need to be filled.

Request period Parameters:

Period	type	validation	description
enable	bool	true/false	If the enable is false, this wlan effective all day. If not, this wlan effective from startTime to endTime.
startTime	string	hour:mins	If the enable is true, this parameter need to be filled. If not, it does not need to be filled.
mins	string	hour:mins	If the enable is true, this parameter need to be filled. If not, it does not need to be filled.

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Invalid session/No params/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/Please access pvc/The parameter is wrong: xxx/Mqtt pub fail/Mqtt timeout/Wlan return error/Create wlan fail/Create wlan success/The number of wlan configured for each radio band can not more than seven"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.

wlan.delete

Description:

Delete the essid in a group.

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "wlan.delete",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {
    "ssid": "mywifi"
  }
}
```

Request Parameters:

params	type	description
ssid	string	Name that uniquely identifies a wireless network.

Response:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Invalid session/No params/Ubuss lookup id failed/Ubuss call nbm failed, status = xxx/Failed to get nbm return value/Please access pvc/No ssid/Mqtt pub fail/Mqtt timeout/Wlan return error/The ssid is not exist/Delete wlan fail/Delete wlan success"
  }
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully, this parameter is true.If the interface fails to call, this parameter is false.
message	string	Return the result information of the call.

wlan.get

Description:

Check if a given essid exists.
If it exists, return wlan information.

Request:

```
{
  "id": 1,
  "jsonrpc": "2.0",
  "method": "wlan.get",
  "session": "038e1d7b1735c6a5436ee9eae095879e",
  "params": {
    "ssid": "mywifi"
  }
}
```

Request Parameters:

params	type	description
ssid	string	Name that uniquely identifies a wireless network.

Response:

```

{
  "id": 1,
  "jsonrpc": "2.0",
  "result": {
    "success": "true/false",
    "message": "No id/No method/Invalid session/No params/Ubus lookup id failed/Ubus call
nbm failed, status = xxx/Failed to get nbm return value/Please access pvc/The essid is not
exist/No essid/Get wlan info error/Get wlan info success",
    "wlaninfo": {
      "ssid": "mywifi",
      "actionrange": "group",    //"group" or "all"
      "groupList": [
        "aa:bb:cc:dd:ee:f0",
        "aa:bb:cc:dd:ee:f1",
        "aa:bb:cc:dd:ee:f2"
      ],
      "allowBand": "all",
      "ssidEnable": "enable",
      "hideSSID": "disable",
      "securityLevel": "Enterprise",
      "encryptionType": "wpa-tkip",
      "ap_bridge": "enable",
      "broadcastFilterARP": "disable",
      "multicastOptimization": "disable",
      "maxClientsPerBand": 13,
      "e0211rStatus": "disable",
      "e0211kStatus": "disable",
      "e0211vStatus": "disable",
      "okcStatus": "enable",
      "wlanTimer": {
        "enable": true,
        "periodType": "daily",    //"daily" or "weekend" or "weekday"
        "period": {
          "enable": true,
          "startTime": "10:59",    // hour and mins
          "endTime": "22:59"
        }
      },
      "upstreamBandwidth": 3,
      "downstreamBandwidth": 4,
      "redirectStatus": "disable",
      "vlanNumber": 123,
      "AuthServer": {
        "authenticationPort": 1812,
        "authIp": "192.168.21.123"
      },
      "radiusAccounting": true,
      "AccServer": {
        "accountingPort": 1813,
        "accountIp": "192.168.21.111"
      }
    }
  }
}

```

```
}
```

Return Values:

result	type	description
success	string	If the interface is called successfully and the essid exists, this parameter is true.If the interface fails to call or the essid doesn't exist, this parameter is false.
message	string	Return the result information of the call.
wlaninfo	object	If success is true, wlaninfo will display the details of the wlan. Please refer to [Return wlanInfo Values] for details.

Return wlanInfo Values:

params	type	description
ssid	string	Name that uniquely identifies a wireless network.
actionrange	enum	It means the application scope of the ssid.
groupList	string	If the actionrange is group, the groupList will be displayed. If not, it will not to be displayed.
allowBand	enum	Configures the radio frequency band on which this ssid will be broadcast.
ssidEnable	enum	Enables or disables the ssid.
hideSSID	enum	Enables or disables hiding of the ssid name in beacon frames. Note that hiding the ssid does very little to increase security.
securityLevel	enum	
encryptionType	enum	If the securityLevel is Open, the encryptionType does not to be displayed. If not, it will to be displayed.
ap_bridge	enum	
broadcastFilterARP	enum	
multicastOptimization	enum	
maxClientsPerBand	integer	
e0211rStatus	enum	If the securityLevel is Personal and Enterprise, it will be displayed. If not, it will not to be displayed.
e0211kStatus	enum	
e0211vStatus	enum	
okcStatus	enum	If the securityLevel is Enterprise, it will be displayed. If not, it will not to be displayed.
wlanTimer	object	
upstreamBandwidth	integer	
downstreamBandwidth	integer	
redirectStatus	enum	If the securityLevel is Open, it will be displayed. If not, it will not to be displayed.
vlanNumber	integer	
AuthServer	object	If the securityLevel is Enterprise, these parameters will be displayed. If not, these parameters will not to be displayed.
radiusAccounting	bool	If the securityLevel is Enterprise, it will be displayed. If not, it will not

		to be displayed.
AccServer	object	If the securityLevel is Enterprise and the radiusAccounting is true, these parameters will be displayed. If not, these parameters will not to be displayed.