

# Ruckus Wireless SmartCell Gateway 200 and Virtual SmartZone High Scale

Alarm and Event Reference Guide for SmartZone 3.4

#### Copyright Notice and Proprietary Information

Copyright 2016. Ruckus Wireless, Inc. All rights reserved.

No part of this documentation may be used, reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Ruckus Wireless, Inc. ("Ruckus"), or as expressly provided by under license from Ruckus.

#### **Destination Control Statement**

Technical data contained in this publication may be subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

#### Disclaimer

THIS DOCUMENTATION AND ALL INFORMATION CONTAINED HEREIN ("MATERIAL") IS PROVIDED FOR GENERAL INFORMATION PURPOSES ONLY. RUCKUS AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THE MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE MATERIAL IS ERROR-FREE, ACCURATE OR RELIABLE. RUCKUS RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES TO THE MATERIAL AT ANY TIME.

#### Limitation of Liability

IN NO EVENT SHALL RUCKUS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY YOU OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT OR TORT, ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIAL.

#### **Trademarks**

Ruckus Wireless, Ruckus, the bark logo, ZoneFlex, FlexMaster, ZoneDirector, SmartMesh, Channelfly, Smartcell, Dynamic PSK, and Simply Better Wireless are trademarks of Ruckus Wireless, Inc. in the United States and other countries. All other product or company names may be trademarks of their respective owners.

## **Contents**

	About This Guide	
	Document Conventions	. 24
	Terminology	. 25
	Related Documentation	. 29
	Online Training Resources	. 29
	Documentation Feedback	. 29
1	Revision History	
	SmartZone Version 3.4	. 31
	New Alarm	. 31
	Displayed on the Web Interface	. 31
	New Event	. 31
	SmartZone Version 3.2.1	. 33
	New Alarm	. 33
	New Event	. 33
	Event on Web Interface	. 33
	SmartZone Version 3.2	. 34
	New Alarm	. 34
	Attribute Change	. 34
	Renamed Alarm	. 35
	New Event	. 35
	Severity Change	. 36
	Attribute Change	. 37
	Renamed Event	. 37
	Auto Clearance of Event	. 38
	SmartZone Version 3.1.1	. 38
	New Alarm	. 38
	New Event	. 38
	Re-added Event	. 39
	Renamed Event	. 39
	RuckOS Version 3.1	. 40
	New Alarm	
	Deprecated Alarm	

	Renamed Alarm
	New Event
	Modified Event Severity
	Renamed Event
	RuckOS Version 3.0
	New Alarm
	Deprecated Alarm
	Renamed Alarm Type51
	Modification of Alarm Severity
	Renamed Alarm
	New Event
	Deprecated Event
	Re-added Event
	Modifications to Event Severity56
	Renamed Event Type57
	Renamed Event
2	Alarm and Event Management
2	Alarm and Event Management
	Overview
	Alarm and Event Management
	Event Categories
	Event Attributes
	Generation of Alarm and Event
3	Alarm Types
	Accounting Alarms
	Accounting server not reachable
	Accounting failed over to secondary70
	Accounting fallback to primary
	AP accounting message mandatory parameter missing
	AP accounting message decode failed
	AP account message drop while no accounting start message
	Unauthorized CoA/DM message dropped
	AP Authentication Alarms
	RADIUS server unreachable
	LDAP server unreachable
	AD server unreachable
	WeChat ESP authentication server unreachable77
	WeChat ESP authentication server unresolvable

WeChat ESP DNAT server unreachable	78
WeChat ESP DNAT server unresolvable	79
AP Communication Alarms	80
AP rejected	80
AP configuration update failed	81
AP swap model mismatched	81
AP pre-provision model mismatched	82
AP firmware update failed	82
AP WLAN oversubscribed	
AP join zone failed	84
AP LBS Alarms	85
No LS responses	85
LS authentication failure	85
AP failed to connect to LS	86
AP State Change Alarms	87
AP rebooted by system	87
AP disconnected	88
AP deleted	88
AP cable modem interface down	89
Authentication Alarms	90
Authentication server not reachable	90
Authentication failed over to secondary	91
Authentication fallback to primary	91
AD/LDAP connectivity failure	92
Bind fails with AD/LDAP	93
Bind success with LDAP, but unable to find clear text password for the user	93
RADIUS fails to connect to AD NPS server	94
RADIUS fails to authenticate with AD NPS server	95
Control and Data Plane Interface Alarms	
GtpManager (DP) disconnected	
Cluster Alarms	
New node failed to join	97
Node removal failed	
Node out of service	
Cluster in maintenance state	
Cluster backup failed	
Cluster restore failed	
Cluster upgrade failed	
Cluster application stopped	102

Node bond interface down	
Node physical interface down	04
Cluster node rebooted	04
Cluster node shut down1	05
Disk usage exceed threshold	05
Resync NTP time	06
Cluster out of service	07
Cluster upload AP firmware failed	07
Cluster add AP firmware failed	80
Configuration backup failed	80
Configuration restore failed	09
Configuration Alarms	10
Zone configuration preparation failed	10
AP configuration generation failed	11
End-of-life AP model detected	12
Data Plane Alarms	13
Data plane configuration update failed	13
Data plane disconnected	14
Data plane physical interface down	14
Data plane rebooted	15
Data plane packet pool is under low water mark	15
Data plane packet pool is under critical low water mark	16
Data plane core dead	
Data plane process restarted	17
Data plane license is not enough	
Data plane upgrade failed	18
GA Interface Alarms	20
Connection to CGF failed	20
CDR transfer failed	21
CDR generation failed	22
Gn/S2a Interface Alarms1	23
GGSN restarted	23
GGSN not reachable	24
GGSN not resolved	24
PDNGW could not be resolved	25
PDNGW version not supported	
Associated PDNGW down	
Create session response failed	
Decode failed 1	

Modify bearer response failed	28
Delete session response failed	29
Delete bearer request failed	30
Update bearer request failed	30
CGF server not configured	31
GR Interface Alarms	32
Destination not reachable	32
App server down	33
App server inactive	33
Association establishment failed	34
Association down	35
Outbound routing failure	35
Did allocation failure	36
IPMI Alarms	37
ipmiVoltage	38
ipmiThempBB	39
ipmiThempFP14	40
ipmiThempIOH14	40
ipmiThempMemP14	41
ipmiThempPS	12
ipmiThempP	43
ipmiThempHSBP14	43
ipmiFan	14
ipmiPower	14
ipmiCurrent	45
ipmiFanStatus	45
ipmiPsStatus	46
ipmiDrvStatus	47
Licensing Alarms14	48
TTG session critical threshold	48
TTG session license exhausted	49
License going to expire	49
Insufficient license capacity	50
PMIPv6 Alarms	51
Config update failed	51
LMA ICMP unreachable	52
LMA failed over	52
DHCP connection lost	53
Session Alarms	54

Binding failed	154
STA Interface Alarms	155
STA authentication failed transport down	155
STA authentication failed failure response	156
STA authentication failed decode failure	157
STA re-authorization failed	157
STA response timer expired	158
Retransmission exhausted	159
System Alarms	160
No LS responses	161
LS authentication failure	161
{produce.short.name} failed to connect to LS	162
Syslog server unreachable	162
Process restart	163
Service unavailable	
Keepalive failure	164
Resource unavailable	164
HIP failed over	165
Diameter initialization error	166
Diameter peer transport failure	
Diameter CER error	167
Diameter peer add error	168
Diameter peer remove successful	169
Diameter realm entry error	169
Diameter failover to alternate peer	170
Diameter fail back to peer	171
Diameter CEA unknown peer	
Diameter no common application	
Process initiated.	
PMIPv6 unavailable	
Memory allocation failed	
Threshold Alarms	
CPU threshold exceeded	
Memory threshold exceeded	
Disk usage threshold exceeded	
License threshold exceeded	
Rate limit for TOR surpassed	
The number of users exceeded its limit	
The number of devices exceeded its limit	180

	Tunnel Alarms - Access Point
	AP softGRE gateway not reachable
	AP is disconnected from secure gateway181
	AP secure gateway association failure
4	Events Types
	3rd Party Access Point Events
	3rd party AP connected
	Accounting Events
	Accounting session started
	Accounting session start failed
	Accounting session disabled
	Accounting session stopped successfully
	Accounting session stopped failed
	Accounting session interim failed
	Accounting server not reachable
	Accounting failed over to secondary190
	Accounting fallback to primary
	AP accounting message mandatory parameter missing
	Unknown realm
	AP accounting message decode failed192
	AP accounting retransmission message dropped
	AP accounting response while invalid config
	AP account message drop while no accounting start message
	Unauthorized COA/DM message dropped195
	AP Authentication Events
	Radius server reachable196
	Radius server unreachable197
	LDAP server reachable
	LDAP server unreachable198
	AD server reachable198
	AD server unreachable199
	Wechat ESP authentication server reachable
	WeChat ESP authentication server unreachable
	WeChat ESP authentication server resolvable
	WeChat ESP authentication server unresolvable
	WeChat ESP DNAT server reachable
	WeChat ESP DNAT server unreachable
	WeChat ESP DNAT server resolvable

WeChat ESP DNAT server unresolvable	203
AP Communication Events	204
AP discovery succeeded	205
AP managed	205
AP rejected	206
AP firmware updated	206
AP firmware update failed	207
Updating AP firmware	207
Updating AP configuration	208
AP configuration updated	208
AP configuration update failed	209
AP pre-provision model mismatched	209
AP swap model mismatched	
AP WLAN oversubscribed	210
AP join zone failed	
AP illegal to change country code	211
Rogue AP	
SSID-spoofing rogue AP	212
MAC-spoofing rogue AP	213
Same-network rogue AP	213
Ad-hoc network device	214
Rogue AP disappeared	214
AP LBS Events	215
No LS responses	215
LS authentication failure	216
AP connected to LS	216
AP failed to connect to LS	
AP started location service	
AP stopped location service	
AP received passive calibration request	
AP received passive footfall request	
AP received unrecognized request	
AP Mesh Events	
EMAP downlink connected to MAP	
EMAP downlink disconnected from MAP	
EMAP uplink connected to MAP	
EMAP uplink disconnected from MAP	
MAP disconnected	222
MAP downlink connected	222

	MAP downlink connected to EMAP	223
	MAP downlink disconnected from EMAP	. 223
	RAP downlink connected to MAP	224
	MAP uplink connected to EMAP	224
	MAP uplink disconnected from EMAP	. 225
	MAP uplink connected to RAP	225
	MAP uplink connected to MAP	226
	Mesh state updated to MAP	226
	Mesh state updated to MAP no channel	. 227
	Mesh state updated to RAP	227
	Mesh state update to RAP no channel	228
	MAP downlink connected to MAP	228
	MAP downlink disconnected from MAP	. 229
	RAP downlink disconnected from MAP	. 229
A	AP State Change Events	230
	AP rebooted by user	. 230
	AP rebooted by system	. 231
	AP disconnected	231
	AP IP address updated	. 232
	AP reset to factory default	232
	AP channel updated	232
	AP country code updated	233
	AP channel updated because dynamic frequency selection (DFS) detected a radar	233
	AP change control plane	. 234
	AP connected	. 234
	AP deleted	234
	AP heartbeat lost	235
	AP tagged as critical	235
	AP cable modem interface down	
	AP brownout	236
	AP cable modem power-cycled by user.	
	AP smart monitor turn off WLAN	
	AP client load balancing limit reached	
	AP client load balancing limit recovered	
	AP WLAN state changed	
	AP capacity reached	
	AP capacity recovered	
	AP cable modem interface up	
	AP cable modem soft-rebooted by user	240

AP cable modem set to factory default by user	241
AP USB Events	242
AP USB software package downloaded	242
AP USB software package download failed	242
Authentication Events	243
Authentication server not reachable	243
Unknown realm	245
Authentication succeeded	245
Authentication failed	246
Pseudonym authentication succeeded	246
Pseudonym authentication failed	247
Fast re-authentication succeeded	248
Fast re-authentication failed	248
Authentication failed over to secondary	249
Authentication fallback to primary	250
AD/LDAP connected successfully	250
AD/LDAP connectivity failure	251
Bind fails with AD/LDAP	251
Bind success with LDAP, but unable to find clear text password for the user	252
RADIUS fails to connect to AD NPS server	252
RADIUS fails to authenticate with AD NPS server	253
Authorization Events	254
DM received from AAA	254
DM NACK sent to AAA	255
DM sent to NAS	255
DM NACK received from NAS	256
CoA received from AAA	256
CoA NACK sent to AAA	257
CoA sent NAS	257
CoA NAK received NAS	258
CoA authorize only access reject	258
CoA RWSG MWSG notification failure	259
Control and Data Plane Interface	260
DP connected	260
GtpManager (DP) disconnected	261
Session updated at DP	261
Session update at DP failed	262
Session deleted at DP	262
Session delete at DP failed	263

C2d configuration failed	
Dient Events	
Client authentication failed	. 266
Client joined	. 266
Client failed to join	. 267
Client disconnected	. 267
Client connection timed out	. 268
Client authorization successfully	. 268
Client authorization failed	. 269
Client session expired	. 269
Client roaming	. 270
Client logged out	. 270
3rd party client join	. 271
3rd party client inactivity timeout	. 271
3rd party client authorization	. 272
3rd party client authorization failure	. 272
3rd party client session expiration	. 273
3rd party client roaming	. 273
3rd party client session logout	. 274
Client roaming disconnected	. 274
Client blocked	. 275
Client grace period	. 275
Onboarding registration succeeded	. 276
Onboarding registration failed	. 276
Remediation succeeded	. 277
Remediation failed	. 277
Force DHCP disconnected	. 278
WDS device joined	. 278
WDS device left	. 279
Cluster Events	. 280
Cluster created successfully	. 281
New node joined successfully	. 281
New node failed to join	. 281
Node removal completed	. 282
Node removal failed	. 282
Node out of service	. 283
Cluster in maintenance state	. 283
Cluster back in service	. 284
Cluster backup completed	. 284

Cluster backup failed
Cluster restore completed
Cluster restore failed
Cluster node upgrade completed
Entire cluster upgraded successfully
Cluster upgrade failed
Cluster application stopped
Cluster application started
Cluster backup started
Cluster upgrade started
Cluster leader changed
Node bond interface down
Node bond interface up
Node IP address changed
Node physical interface down
Node physical interface up
Cluster node rebooted
NTP time synchronized
Cluster node shutdown
Cluster upload started
Cluster upload completed
Cluster upload failed
SSH tunnel switched
Cluster remove node started
Node back in service
Resync NTP Time
Disk usage exceed threshold
Cluster out of service
Initiated moving APs in node to a new cluster
Cluster upload vSZ-D firmware started
Cluster upload vSZ-D firmware completed
Cluster upload vSZ-D firmware failed
Cluster upload AP firmware started
Cluster upload AP firmware completed
Cluster upload AP firmware failed
Cluster add AP firmware started
Cluster add AP firmware completed
Cluster add AP firmware failed
Cluster name is changed

Configuration backup started
Configuration backup succeeded
Configuration backup failed
Configuration restore succeeded
Configuration restore failed
Node IPv6 address added
Node IPv6 address deleted
Configuration Events
Configuration updated
Configuration update failed
Configuration receive failed
Incorrect flat file configuration
Zone configuration preparation failed
AP configuration generation failed
End-of-life AP model detected
Data Plane Events
Data plane discovered
Data plane discovery failed
Data plane configuration updated
Data plane configuration update failed
Data plane rebooted
Data plane heartbeat lost
Data plane IP address updated
Data plane updated to a new control plane
Data plane status update failed
Data plane statistics update failed
Data plane connected
Data plane disconnected
Data plane physical interface down
Data plane physical interface up
Data plane packet pool is under low water mark
Data plane packet pool is under critical low water mark
Data plane packet pool is above high water mark
Data plane core dead
Data plane process restarted
Data plane discovery succeeded
Data plane managed
Data plane deleted
Data plane license is not enough

Data plane upgrade started	322
Data plane upgrading	323
Data plane upgrade succeeded	323
Data plane upgrade failed	324
DHCP Events	325
DHCP inform received	325
DHCP dcln received	326
GA Interface Events	327
Connection to CGF failed	327
CGF keepalive not responded	328
CDR transfer succeeded	328
CDR transfer failed	329
CDR generation failed	329
Gn/S2a Interface Events	330
GGSN restarted	330
GGSN not reachable	331
Echo response not received	331
GGSN not resolved	332
PDP context established	332
PDP create failed	333
PDP update by HLR succeeded	333
PDP update by HLR failed	334
PDP update by roaming succeeded	
PDP update by roaming failed	335
PDP update by GGSN succeeded	336
PDP update by GGSN failed	336
PDP delete by TTG succeeded	337
PDP delete by TTG failed	337
PDP delete by GGSN succeeded	338
PDP delete by GGSN failed	338
IP assigned	339
IP not assigned	339
Unknown UE	340
PDP update success COA	340
PDP update fail COA	
PDNGW could not be resolved	
PDNGW version not supported	
Associated PDNGW down	
Create session response failed	

Decode failed	. 344
Modify bearer response failed	. 344
Delete session response failed	. 345
Delete bearer request failed	. 345
Update bearer request failed	. 346
CGF server not configured	. 347
Gr Interface Event	. 348
Destination not reachable	. 349
Destination available	. 349
App server down	. 350
App server inactive	. 350
App server active	. 351
Association establishment failed	. 351
Association down	. 352
Association up	. 352
Send auth info success	. 353
Auth info sending failed	. 353
GPRS location update succeeded	. 354
GPRS location update failed	. 354
Insert sub data success	. 355
Insert sub data failed	. 355
Outbound routing failure	. 356
Did allocation failure	. 356
Restore data success	. 357
Restore data failed	. 357
IPMI Events	. 358
ipmiVoltage	. 358
ipmiThempBB	. 359
ipmiThempFP	. 359
ipmiThempIOH	. 360
ipmiThempMemP	. 360
ipmiThempPS	. 361
ipmiThempP	. 361
ipmiThempHSBP	. 362
ipmiFan	. 362
ipmiPower	. 363
ipmiCurrent	. 363
ipmiFanStatus	. 364
inmiPsStatus	. 364

ipmiDrvStatus	
ipmiREVotage	
ipmiREThempBB	
ipmiREThempFP	
ipmiREThempIOH	
ipmiREThempMemP	
ipmiREThempPS	
ipmiREThempP	
ipmiREThempHSBP	
ipmiREFan	
ipmiREPower	
ipmiRECurrent	
ipmiREFanStatus	
ipmiREPsStatus	
ipmiREDrvStatus	
Licensing Interface Events	
TTG session warning threshold	
TTG session major threshold	
TTG session critical threshold	
TTG session license exhausted	
License sync succeeded	
License sync failed	
License import succeeded	
License import failed	
License data changed	
License going to expire	
Insufficient license capacity	
_ocation Delivery Events	
Unavailable location info requested	
Incapable location info requested	
Unsupported location delivery request	
PMIPv6 Events	
Config update failed	
LMA ICMP reachable	
LMA ICMP unreachable	
LMA server unreachable	
LMA failed over	
DHCP connected	
DHCP connection lost	

Session Events	384
Session timeout	384
Delete all sessions	385
Binding succeeded	385
Binding failed	386
Binding time expired	386
Binding revoked	387
Binding released	387
STA Interface Events	388
STA successful authentication	388
STA authentication failed transport down	389
STA authentication failed failure response	389
STA authentication failed decode failure	390
STA session termination {produce.short.name} initiated success	390
STA session termination AAA initiated success	391
STA session termination AAA initiated failed	392
STA re-authorization successful	392
STA re-authorization failed	393
STA response timer expired	393
Retransmission exhausted	394
System Events	395
No LS responses	396
LS authentication failure	396
{produce.short.name} connected to LS	397
{produce.short.name} failed to connect to LS	397
{produce.short.name} received passive request	398
{produce.short.name} sent controller information report	398
{produce.short.name} received management request	399
{produce.short.name} sent AP info by venue report	399
{produce.short.name} sent query venues report	400
{produce.short.name} sent associated client report	
{produce.short.name} forwarded calibration request to AP	
{produce.short.name} forwarded footfall request to AP	401
{produce.short.name} received unrecognized request	
Syslog server reachable	402
Syslog server unreachable	
Syslog server switched	
Generate AP config for plane load rebalance succeeded	
Generate AP config for plane load rebalance failed	404

FTP transfer
FTP transfer error
File upload
Email sent successfully
Email sent failed
SMS sent successfully
SMS sent failed
Process restart
Service unavailable
Keepalive failure
Resource unavailable
HIP started
HIP stopped
HIP failed over
Standby HIP restarted
HIP cache cleaned412
Diameter initialization error
Diameter initialization
Diameter peer transport failure
Diameter CER error
Diameter CER success
Diameter invalid version
Diameter peer add error416
Diameter peer add successful
Diameter peer remove successful
Diameter realm entry error
Diameter failover to alternate peer
Diameter fail back to peer
Diameter CEA unknown peer419
Diameter no common application
ZD AP migrating
ZD AP migrated
ZD AP rejected
ZD AP migration failed
Database error
Recover cassandra error
Process initiated
PMIPv6 unavailable
Memory allocation failed

Process stopped	. 425
Threshold Events	. 426
CPU threshold exceeded	. 426
Memory threshold exceeded	. 427
Disk usage threshold exceeded	. 427
CPU threshold back to normal	. 428
Memory threshold back to normal	. 428
Disk threshold back to normal	. 428
License threshold exceeded	. 429
Rate limit threshold surpassed	. 429
Rate limit threshold restored	. 430
Rate limit for TOR surpassed	. 431
The number of users exceed its limit	. 431
The number of devices exceeded its limit	. 432
Tunnel Events - Access Point (AP)	. 433
Data plane accepted a tunnel request	. 433
Data plane rejected a tunnel request	
Data plane terminated a tunnel	
AP created a tunnel	. 435
AP tunnel disconnected	. 435
AP softGRE tunnel fails over primary to secondary	. 436
AP softGRE tunnel fails over secondary to primary	. 436
AP softGRE gateway reachable	. 437
AP softGRE gateway not reachable	. 437
Data plane set up a tunnel	. 438
AP secure gateway association success	. 438
AP is disconnected from secure gateway	. 439
AP secure gateway association failure	. 439
Tunnel Events - Data Plane	
DP sGRE GW unreachable	
DP sGRE keep alive timeout	
DP sGRE GW inactive	. 441
DP DHCPRelay no response	
DP DHCPRelay failover	
DP sGRE new tunnel	
DP sGRE del tunnel	
DP sGRE keepalive recovery	
DP DHCPRelay response recovery	
DP sGRE GW reachable	. 445

| DP sGRE GW active  |   | <br> |  | <br> | <br> | . 4 | 145 |
|--------------------|---|------|------|------|------|------|------|------|--|------|------|-----|-----|
| DP sGRE GW failove | r | <br> |  | <br> | <br> | . 4 | 146 |

#### Index

## **About This Guide**

This SmartZone ™ Alarm and Event Reference Guide describes the various types of alarms and events that the controller (SCG-200 or vSZ-H) generates. For each alarm and event this guide provides the code, type, attributes, and description.

This guide is written for service operators and system administrators who are responsible for managing, configuring, and troubleshooting Ruckus Wireless devices. Consequently, it assumes a basic working knowledge of local area networks, wireless networking, and wireless devices.

**NOTE** If release notes are shipped with your product and the information there differs from the information in this guide, follow the instructions in the release notes.

Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) or HTML on the Ruckus Wireless Support Web site at <a href="https://support.ruckuswireless.com/contact-us">https://support.ruckuswireless.com/contact-us</a>.

## **Document Conventions**

Table 1 and Table 2 list the text and notice conventions that are used throughout this guide.

Table 1. Text conventions

Convention	Description	Example
monospace	Represents information as it appears on screen	[Device name] >
monospace bold	Represents information that you enter	[Device name] > set ipaddr 10.0.0.12
default font bold	Keyboard keys, software buttons, and field names	On the <b>Start</b> menu, click <b>All Programs</b> .
italics	Screen or page names	Click <b>Advanced Settings</b> . The <i>Advanced Settings</i> page appears.

Table 2. Notice conventions

Notice Type	Description						
NOTE	Information that describes important features or instructions						
CAUTION!	Information that alerts you to potential loss of data or potential damage to an application, system, or device						
WARNING!	Information that alerts you to potential personal injury						

# **Terminology**

Table 3 lists the terms used in this guide.

Table 3. Terms used

Term	Description
3GPP	3rd Generation Partnership Project
AAA	Authentication, Authorization, and Accounting
AD	Active Directory
AMBR	Aggregate Maximum Bit Rate
AP	Access Point
APN	Access Point Name
ASP	Application Service Provider
ASPDN	ASP Down
ASPDN ACK	ASP Down Acknowledgment
ASR	Abort Session Request
AVP	Ruckus Vendor specific attribute Pair
BMD	Billing Mediation Device is a network component in a telecommunications network that receives, processes, reformats and sends information to other formats between network elements.
BSSID	Basic Service Set Identifier
CDF	Charging Data Function
CDR	Call Detail Record.  A formatted collection of information on chargeable events used for accounting and billing. For example, call set-up, call duration and amount of data transferred.
CEA	Capabilities Exchange Answer
CER	Capabilities Exchange Request
CGF	Charging Gateway Function
CHAP	Challenge Handshake Authentication Protocol
CIP	Channel Interface Processor
CLB	Client Load Balance

Table 3. Terms used

Term	Description
CNN	Configuration Change Notifier
CNR	Configuration Notification Receiver
CoA	Change of Authorization
Controller	Refers to either SCG-200 or vSZ-H as the case may be.
CPE	Customer-Premises Equipment
CTF	Charging Trigger Function
DEA	Diameter-EAP-Answer
DER	Diameter-EAP-Request
DHCP	Dynamic Host Configuration Protocol
DM	Dynamic Multipoint
DNS	Domain Name System
DPR	Diameter Disconnect Peer Request
DRT	Data Record Transfer
EAP	Extensible Authentication Protocol
EBI	EPS Bearer ID
EMAP	Ethernet Mesh AP
EPC	Evolved Packet Core
EPS	Evolved Packet System
F-TEID	Fully Qualified Tunnel Endpoint Identifier
FTP	File Transfer Protocol
Ga	Reference point between a CDF and the CGF for CDR transfer
GGSN	Gateway GPRS Support Node
GPDU	GTP Packet Data Unit
GPRS	General Packet Radio Service
GSN	GPRS Support Node
GSN APN	GPRS serving node, is application module in the SCG handling GTP messages
GTP	GPRS Tunneling Protocol

Table 3. Terms used

Term	Description	
GTP-C	GTP control plane	
GTP-U	GTP user plane	
GTP'	GPRS protocol, used for CDR transport. It is derived from GTP with enhancements to improve transport reliability necessary for CDRs	
GTPP	GPRS Tunneling Protocol Prime	
GTPv1-U	GTP version 1, user plane	
GTPv2-C	GTP version 2, control plane	
HIP	Host Identity Protocol	
HLR	Home Location Register	
ICMP	Internet Control Message Protocol	
IE	Information Element	
IMSI	International Mobile Subscriber Identity	
IP	Internet Protocol	
IP-CAN	IP Connectivity Access Network	
IPSP	IP Signalling Protocol	
LBS	Location Based Service	
LCS	Location Services	
LDAP	Lightweight Directory Access Protocol	
LMA	Local Mobility Anchor	
MAP	Mobile Application Part	
MCC	Mobile Country Code	
MNC	Mobile Network Code	
MOR	Maximum Outstanding Requests	
MS-ISDN	Mobile Subscriber Integrated Services Digital Network Number	
MTU	Maximum Transmission Unit	
MWSG	Metro Wireless Security Gateway	
NAS	Network Access Server	
NTP	Network Time Protocol)	

Table 3. Terms used

Term	Description	
P-GW	Packet Data Network Gateway	
PAA	PDN Address Allocation	
PCN	Packet switched Core network Node (SGSN, GGSN, S-GW, P-GW)	
PCO	Protocol Configuration Options	
PDN	Packet Data Network	
PDP	Packet Data Protocol	
PGW	PDN Gateway	
produce.short.name	Refers to either SCG or vSZ-H	
R-WSG/WSG	Ruckus Wireless Security Gateway	
RAC	Radio Access Controller	
RAP	Root Access Point	
RAR	Re-Auth Request	
RSSI	Received Signal Strength Indicator	
S-CDR	SGSN Call Detail Record	
SCG	Ruckus Wireless Smart Cell Gateway	
SCTP	Stream Control Transmission Protocol	
SCTP	Stream Control Transmission Protocol	
SG	Signalling Gateway	
SGSN	Serving GPRS Support Node	
SGW	Serving Gateway	
SSID	Service Set Identifier (SSID)	
STR	STR (Session Termination-Request)	
TCAP	Transaction Capabilities Application Part	
TCP	Transmission Control Protocol	
TEID	Tunnel End Point Identifier	
UDP	User Datagram Protocol	
UE	User Equipment	

Table 3. Terms used

Term	Description	
UI	Web User Interface	
USB	Universal Serial Bus	
WDS	Wireless Distribution System	

#### **Related Documentation**

For a complete list of documents that accompany this release, refer to the Release Notes.

## **Online Training Resources**

To access a variety of online Ruckus Wireless training modules, including free introductory courses to wireless networking essentials, site surveys, and Ruckus Wireless products, visit the Ruckus Wireless Training Portal at: https://training.ruckuswireless.com

#### **Documentation Feedback**

Ruckus Wireless is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Ruckus Wireless at:

docs@ruckuswireless.com

When contacting us, please include the following information:

- Document title
- Document part number (on the cover page)
- Page number (if appropriate)

#### For example:

- Ruckus Wireless SmartZone Administrator Guide Release 3.4
- Part number: 800-71105-001
- Page 300

**Revision History** 

1

This chapter contains revision history for:

- SmartZone Version 3.4
- SmartZone Version 3.2.1
- SmartZone Version 3.2
- SmartZone Version 3.1.1
- RuckOS Version 3.1
- RuckOS Version 3.0

## **SmartZone Version 3.4**

The following are the changes for version 3.4.

#### **New Alarm**

Alarm Code	Alarm	
850	clusterUploadAPFirmwareFailed	
853	clusterAddAPFirmwareFailed	
1021	zoneCfgPrepareFailed	
1022	apCfgGenFailed	
1023	cfgGenSkippedDueToEolAp	

#### Displayed on the Web Interface

Alarm Code	Attribute	Attribute Change
107	reason	AP [{apName&&apMac}] failed to update its firmware from [{fromVersion}] to [{toVersion}] failure reason [{reason}]

#### **New Event**

Event Code	Event	
848	clusterUploadAPFirmwareStart	
849	clusterUploadAPFirmwareSuccess	
850	clusterUploadAPFirmwareFailed	
851	clusterAddAPFirmwareStart	
852	clusterAddAPFirmwareSuccess	
853	clusterAddAPFirmwareFailed	
854	clusterNameChanged	
1021	zoneCfgPrepareFailed	
1022	apCfgGenFailed	

Event Code	Event
1023	cfgGenSkippedDueToEolAp

#### **SmartZone Version 3.2.1**

The following are the changes for version 3.2.1.

#### **New Alarm**

Alarm Code	Alarm
865	apCertificateExpire

#### **New Event**

Event CodeEvent226wdsDeviceJoin227wdsDeviceLeave865apCertificateExpire866apCertificateExpireClear3011recoverCassandraError

#### **Event on Web Interface**

Event Code	Existing Display	New Display
513	Data plane [{dpName&&dpKey}] disconnected from {produce.short.name} [{cpName  wsgIP}].	Data plane [{dpName&&dpKey}] disconnected from {produce.short.name} [{cpName  wsgIP}], Reason: [{reason}].

## SmartZone Version 3.2

The following are the changes for version 3.2.

#### **New Alarm**

Alarm Code	Alarm	
538	dpLicenselnsufficient	
553	dpUpgradeFailed	
751	syslogServerUnreachable	
835	resyncNTPTime	
1255	licenseGoingToExpire	
1256	apConnectionTerminatedDueToInsufficientLicense	
1752	racADLDAPFail	
1753	racADLDAPBindFail	
1754	racLDAPFailToFindPassword	
1755	racADNPSFail	
1756	racADNPSFailToAuthenticate	
2102	radiusServerUnreachable	
2122	IdapServerUnreachable	
2142	adServerUnreachable	
2152	espAuthServerUnreachable	
2154	espAuthServerUnResolvable	
2162	espDNATServerUnreachable	
2164	espDNATServerUnresolvable	

## **Attribute Change**

Module	Attribute	Attribute Change
Data Plane	dpMac	dpKey

#### **Renamed Alarm**

Alarm Code	Alarm Name	Renamed To
1202	DP Disconnected	GtpManager (DP) disconnected
7003		The number of users exceeded its limit
7004	The number of devices exceeded it's limit	The number of devices exceeded its limit

#### **New Event**

Event Code	Event	
370	apUsbSoftwarePackageDownloaded	
371	apUsbSoftwarePackageDownloadFailed	
530	dpDiscoverySuccess	
532	dpStatusManaged	
537	dpDeleted	
538	dpLicenseInsufficient	
550	dpUpgradeStart	
551	dpUpgrading	
552	dpUpgradeSuccess	
553	dpUpgradeFailed	
750	syslogServerReachable	
751	syslogServerUnreachable	
752	syslogServerSwitched	
770	planeLoadingRebalancingSucceeded	
771	planeLoadingRebalancingFailed	
845	clusterUploadVDPFirmwareStart	
846	uploadClusterVDPFirmwareSuccess	
847	uploadClusterVDPFirmwareFailed	

Event Code	Event	
1255	licenseGoingToExpire	
1256	apConnectionTerminatedDueToInsufficientLicense	
1751	racADLDAPSuccess	
1752	racADLDAPFail	
1753	racADLDAPBindFail	
1754	racLDAPFailToFindPassword	
1755	racADNPSFail	
1756	racADNPSFailToAuthenticate	
2151	espAuthServerReachable	
2152	espAuthServerUnreachable	
2153	espAuthServerResolvable	
2154	espAuthServerUnResolvable	
2161	espDNATServerReachable	
2162	espDNATServerUnreachable	
2163	espDNATServerResolvable	
2164	espDNATServerUnresolvable	

## **Severity Change**

Event Code and Event	Severity Changed From	Severity Changed To
516 - dpPktPoolLow	Major	Informational
517 - dpPktPoolCriticalLow	Critical	Major
519 - dpCoreDead	Critical	Major
837 - resyncNTPTime	Informational	Major
2102 - radiusServerUnreachable	Informational	Major
2122 - IdapServerUnreachable	Informational	Major
2142 - adServerUnreachable	Informational	Major

## **Attribute Change**

Module	Attribute	Attribute Change
Data Plane	dpMac	dpKey
AP Communication Events System Events	"model"="ZF7343"	"model"="R700"
System Events "model"="ZF7962",		"model"="R700", "firmware"="3.2.0.0.x"

#### **Renamed Event**

Event Code	Event Name	Renamed To
320	AP CLB limit reached	AP client load balancing limit reached
321	AP CLB limit recovered	AP client load balancing limit recovered
615	DP softGRE GW unreachable	DP sGRE GW unreachable
616	DP softGRE keep alive timeout	DP sGRE keep alive timeout
617	DP softGRE GW inactive	DP sGRE GW inactive
620	DP softGRE new tunnel	DP sGRE new tunnel
621	DP softGRE del tunnel	DP sGRE del tunnel
622	DP softGRE keepalive recovery	DP sGRE keepalive recovery
624	DP softGRE GW reachable	DP sGRE GW reachable
625	DP softGRE GW active	DP sGRE GW active
626	DP softGRE GW failover	DP sGRE GW failover
1202	DP Disconnected	GtpManager (DP) disconnected

#### **Auto Clearance of Event**

<b>Event Code</b>	Event Name
2102	This event triggers the alarm 2102, which is auto cleared by the event code 2101
2122	This event triggers the alarm 2122, which is auto cleared by the event code 2121
2142	This event triggers the alarm 2142, which is auto cleared by the event code 2141.

## **SmartZone Version 3.1.1**

The following are the changes for version 3.1.1.

#### **New Alarm**

Alarm Code	Alarm
661	ipsecTunnelDisAssociated
662	ipsecTunnelAssociateFailed

#### **New Event**

Event Code	Event
326	cmResetByUser
327	cmResetFactoryByUser
660	ipsecTunnelAssociated
661	ipsecTunnelDisassociated
662	ipsecTunnelAssociateFailed
844	clusterInitiatedMovingAp
2101	radiusServerReachable
2102	radiusServerUnreachable
2121	IdapServerReachable

Event Code	Event
2122	IdapServerUnreachable
2141	adServerReachable
2142	adServerUnreachable
2201	zoneInitiatedMovingAp
2501	nodelPv6Added
2502	nodelPv6Deleted

#### Re-added Event

Event Code	Event
101	apDiscoverySuccess

#### **Renamed Event**

Event Code	Event Name	Renamed To
318	,	AP cable modem power-cycled by user

## **RuckOS Version 3.1**

The following are the changes for version 3.1.

## **New Alarm**

Alarm Code	Alarm
516	dpPktPoolLow
517	dpPktPoolCriticalLow
519	dpCoreDead
520	dpProcessRestar
862	clusterCfgBackupFailed
864	clusterCfgRestoreFailed
1401	dialnitilizeErr
1403	diaPeerTransportFailure
1404	diaCERError
1407	diaPeerAddError
1409	diaPeerRemoveSuccess
1410	diaRealmEntryErr
1411	diaFailOverToAltPeer
1412	diaFailbackToPeer
1414	diaCEAUnknownPeer
1415	diaNoCommonApp
1551	staAuthFailedTransDown
1552	staAuthFailedFailureResp
1553	staAuthFailedDecodeFailure
1558	staReAuthFailed
1559	staResponseTimerExpired
1560	retransmitExausted
1651	authFailedOverToSecondary
1652	authFallbackToPrimary

Alarm Code	Alarm
1653	accFailedOverToSecondary
1654	accFallbackToPrimary
7003	tooManyUsers
7004	tooManyDevices

## **Deprecated Alarm**

Alarm Code	Alarm
1008	cfgUpdFailed
1902	unknownRealmAccounting
1909	apAcctRespWhileInvalidConfig

#### **Renamed Alarm**

Alarm Code	Alarm Type	Renamed To
701	No LS Responses	No LS responses
721	No LS Responses	No LS responses
1623	App Server Down	App server down
1624	App Server Inactive	App server inactive
1627	Association Down	Association down
1636	Outbound Routing Failure	Outbound routing failure
1637	Did Allocation Failure	Did allocation failure
1960	CGF Server Not Configured	CGF server not configured
1242	TTG Session Critical Threshold	TTG session critical threshold
1243	TTG Session License Exhausted	TTG session license exhausted
1302	Rate Limit for TOR surpassed	Rate limit for TOR surpassed
1911	Unauthorized CoA/DM message	Unauthorized COA/DM
	dropped	message dropped

#### **New Event**

Event Code	Event
223	remediationSuccess
224	remediationFailure
325	cableModemUp
520	dpProcessRestart
626	dpSgreGWFailOver
627	dpSetUpTunnel
860	clusterCfgBackupStart
861	clusterCfgBackupSuccess
862	clusterCfgBackupFailed
863	clusterCfgRestoreSuccess
864	clusterCfgRestoreSuccess
926	ipmiREVotage
927	ipmiREThempBB
928	ipmiREThempFP
929	ipmiREThempIOH
930	ipmiREThempMemP
931	ipmiREThempPS
932	ipmiREThempP
933	ipmiREThempHSBP
934	ipmiREFan
935	ipmiREPower
936	ipmiRECurrent
937	ipmiREFanStatus
938	ipmiREPsStatus
939	ipmiREDrvStatus
953	cpuThresholdBackToNormal
954	memoryThresholdBackToNormal

41

Event Code	Event
955	diskUsageThresholdBackToNormal
1401	dialnitilizeErr
1402	dialnitialization
1403	diaPeerTransportFailure
1404	diaCERError
1405	diaCERSuccess
1406	dialnvalidVer
1407	diaPeerAddError
1408	diaPeerAddSuccess
1409	diaPeerRemoveSuccess
1410	diaRealmEntryErr
1411	diaFailOverToAltPeer
1412	diaFailbackToPeer
1414	diaCEAUnknownPeer
1415	diaNoCommonApp
1550	staSucessfulAuthentication
1551	staAuthFailedTransDown
1552	staAuthFailedFailureResp
1553	staAuthFailedDecodeFailure
1554	staSessionTermSCGInitSuccess
1555	staSessionTermAAAInitSucess
1556	staSessionTermAAAInitFail
1557	staReAuthSuccess
1558	staReAuthFailed
1559	staResponseTimerExpired
1560	retransmitExausted
1651	authFailedOverToSecondary
1652	authFallbackToPrimary

Event Code	Event
1653	accFailedOverToSecondary
1654	accFallbackToPrimary
1655	unavailableLocInfoRequested
1656	incapableLocInfoRequested
1657	unSupportedLocDeliveryRequest
7001	tooManyUsers
7002	tooManyDevices

## **Modified Event Severity**

Event Code	Event	Severity	Changed To
516	dpPktPoolLow	Informational	Major
517	dpPktPoolCriticalLow	Major	Critical
519	dpCoreDead	Major	Critical
5006	ImalcmpUnreachable	Debug	Major

#### **Renamed Event**

Event Code	Event Name	Renamed To
181	Ssid-spoofing rogue AP	SSID-spoofing rogue AP
209	Client Roaming	Client roaming
211	3rd Party Client Join	3rd party client join
212	3rd Party Client Inactivity Timeout	3rd party client inactivity timeout
213	3rd Party Client Authorization	3rd party client authorization
214	3rd Party Client Authorization Failure	3rd party client authorization failure
215	3rd Party Client Session Expiration	3rd party client session expiration
216	3rd Party Client Roaming	3rd party client roaming

Event Code	Event Name	Renamed To	
217	3rd Party Client Session Logout	3rd party client session logout	
220	Client Grace Period	Client grace period	
308	AP channel updated because Dynamic Frequency Selection (DFS) detected a radar event	AP channel updated because dynamic frequency selection (DFS) detected a radar event	
317	AP Brownout	AP brownout	
323	AP capacity Reached	AP capacity reached	
405	eMAP downlink connected to MAP	EMAP downlink connected to MAP	
406	eMAP downlink disconnected from MAP	EMAP downlink disconnected from MAP	
407	eMAP uplink connected to MAP	EMAP uplink connected to MAP	
408	eMAP uplink disconnected from MAP	EMAP uplink disconnected from MAP	
422	Mesh state updated to MAP No Channel	Mesh state updated to MAP no channel	
424	Mesh state update to RAP No Channel	Mesh state update to RAP no channel	
515	Data plane physical Interface Up	Data plane physical interface up	
615	DP SoftgreGW Unreachable	DP softGRE GW unreachable	
616	DP Softgre Keep Alive Timeout	DP softGRE keep alive timeout	
617	DP SoftgreGW Inact	DP softGRE GW inactive	
618	DP DhcpRelay No Resp	DP DHCPRelay no response	
619	DP DhcpRelay FailOver	DP DHCPRelay failOver	
620	DP SoftGRE New Tunnel	DP softGRE new tunnel	
621	DP SoftGRE Del Tunnel	DP softGRE del tunnel	
622	DP SoftGRE Keepalive Recovery	DP softGRE keepalive recovery	
623	DP DhcpRelay Resp Recovery	DP DHCPRelay response recovery	

Event Code	Event Name	Renamed To	
624	DP SoftGRE GW Reachable	DP softGRE GW reachable	
625	DP SoftGRE GW Active	DP softGRE GW active	
701	No LS Responses	No LS responses	
707	AP received Passive Calibration Request	AP received passive calibration request	
708	AP received Passive Footfall Request	AP received passive footfall request	
709	AP received Unrecognized Request	AP received unrecognized request	
721	No LS Responses	No LS responses	
725	SCG received Passive Request	SCG received passive request	
727	SCG sent Controller Information report	SCG sent controller information report	
728	SCG received Management Request	SCG received management request	
729	SCG sent AP Info by Venue Report	SCG sent AP info by venue report	
730	SCG sent Query Venues Report	SCG sent query venues report	
731	SCG sent Associated Client Report	SCG sent associated client report	
732	SCG forwarded Calibration Request to AP	SCG forwarded calibration request to AP	
733	SCG forwarded Footfall Request to AP	SCG forwarded footfall request to AP	
734	SCG received Unrecognized Request	SCG received unrecognized request	
833	SSH Tunnel Switched	SSH tunnel switched	
970	FTP Transfer	FTP transfer	
971	FTP Transfer Error	FTP transfer error	
980	File Upload	File upload	

Event Code	Event Name	Renamed To	
981	Email Sent Successfully	Email sent successfully	
982	Email Sent Failed	Email sent failed	
983	SMS Sent Successfully	SMS sent successfully	
984	SMS Sent Failed	SMS sent failed	
1012	Incorrect Flat File Configuration	Incorrect flat file configuration	
1220	PDP update by Roaming succeeded	PDP update by roaming succeeded	
1221	PDP update by Roaming failed	PDP update by roaming failed	
1244	PDP Update Success COA	PDP update success COA	
1245	PDP Update Fail COA	PDP update fail COA	
1647	CoA Sent NAS	CoA sent NAS	
1648	CoA NAK Received NAS	CoA NAK received NAS	
1649	CoA Authorize Only Access Reject	CoA authorize only access reject	
1650	CoA RWSG MWSG Notification Failure	CoA RWSG MWSG notification failure	
1960	CGF Server Not Configured	CGF server not configured	
2001	ZD AP Migrating	ZD AP migrating	
2002	ZD AP Migrated	ZD AP migrated	
2003	ZD AP Rejected	ZD AP rejected	
2004	ZD AP Migration Failed	ZD AP migration failed	
1302	Rate Limit for TOR surpassed	Rate limit for TOR surpassed	
1911	Unauthorized CoA/DM message dropped	Unauthorized COA/DM message dropped	
1238	DHCP Inform Received	DHCP inform received	
1239	DHCP Dcln Received	DHCP decline received	
1240	TTG Session Warning Threshold	TTG session warning threshold	
1241	TTG Session Major Threshold	TTG session major threshold	
1242	TTG Session Critical Threshold	TTG session critical threshold	

Event Code	Event Name	Renamed To	
1243	TTG Session License Exhausted	TTG session license exhausted	
1620	Destination Available	Destination available	
1623	App Server Down	App server down	
1624	App Server Inactive	App server inactive	
1625	App Server Active	App server active	
1627	Association Down	Association down	
1628	Association Up	Association up	
1630	Send Auth Info Success	Send auth info success	
1634	Insert Sub Data Success	Insert sub data success	
1635	Insert Sub Data Failed	Insert sub data failed	
1636	Outbound Routing Failure	Outbound routing failure	
1637	Did Allocation Failure	Did allocation failure	
1639	Restore Data Success	Restore data success	
1640	Restore Data Failed	Restore data failed	
1641	DM Received from AAA	DM received from AAA	
1643	DM Sent to NAS	DM sent to NAS	
1644	DM NACK Received from NAS	DM NACK received from NAS	
1645	CoA Received from AAA	CoA received from AAA	
1801	3rdParty AP Connected	3rd party AP connected	

## **RuckOS Version 3.0**

The following are the changes for version RuckOS 3.0.

#### **New Alarm**

Table 4.

Alarm Code	Alarm
115	apJoinZoneFailed
510	dpReboot
614	apSoftGREGatewayNotReachable
701	apLBSNoResponses
702	apLBSAuthFailed
704	apLBSConnectFailed
721	scgLBSNoResponse
722	scgLBSAuthFailed
724	scgLBSConnectFailed
834	diskUsageExceed
1008	cfgUpdFailed
1302	rateLimitMORSurpassed
5001	processInit
5002	pmipUnavailable
5003	unallocatedMemory
5004	updateCfgFailed
5006	ImalcmpUnreachable
5008	lmaFailOver
5010	bindingFailure
5102	lostCnxnToDHCP

# **Deprecated Alarm**

Alarm Code	Alarm
106	apDiscoveryFail
109	apFirmwareUpdated
110	apConfUpdated
301	apRebootByUser
304	apFactoryReset
305	apConnected
307	apHeartbeatLost
309	cmRebootByUser
505	dpUpdateStatusFailed
506	dpUpdateStatisticFailed
507	dpConnected
508	dpPhyInterfaceUp
509	dpConfUpdated
603	dpTearDownTunnel
608	apBuildTunnelSuccess
609	apBuildTunnelFailed
610	apTunnelDisconnected
611	apSoftGRETunnelFailoverPtoS
612	apSoftGRETunnelFailoverStoP
812	upgradeClusterNodeSuccess
814	clusterLeaderChanged
815	upgradeEntireClusterSuccess
816	nodeBondInterfaceUp
817	nodePhyInterfaceUp
818	clusterBackToInService
819	backupClusterSuccess
820	newNodeJoinSuccess

Alarm Code	Alarm
821	clusterAppStart
822	removeNodeSuccess
823	restoreClusterSuccess
824	nodeBackToInService
833	sshTunnelSwitched
971	ftpTransferError
1010	smfRegFailed

## Renamed Alarm Type

Alarm Code	Alarm Type	Renamed To	
108	apWlanMismatched	apWlanOversubscribed	
1242	sessionCriticalThreshold	ttgSessionCriticalThreshold	
1243	sessionLicenseExausted	ttgSessionLicenseExausted	
1302	rateLimitTORSurpassed	rateLimitMORSurpassed	
1626	assocCantStart	assocEstbFailed	
1960	CGFServerNotConfigured	cgfServerNotConfigured	
5004	updateCgfFailed	updateCfgFailed	

## Modification of Alarm Severity

Alarm Code	Alarm	Severity	Severity Modified To
108	apWlanMismatched	Informational	Major
614	apSoftGREGatewayNotReachable	Major	Critical
960	licenseThresholdExceeded	Warning	Critical and Major
1636	outboundRoutingFailure	Major	Critical
1952	pdnGwVersionNotSupportedMsgReceived	Critical	Major

#### **Renamed Alarm**

Code	Alarm Name	Renamed To
104	AP model different with swap AP configuration	AP swap model mismatched
105	AP model different with pre-provision configuration	AP pre-provision model mismatched
108	AP WLAN mismatched	AP WLAN oversubscribed
809	Control plane interface down	Node bond interface down
810	Control plane physical interface down	Node physical interface down
952	Disk Usage threshold exceeded	Disk usage threshold exceeded
1003	Keep alive failure	Keepalive failure
1016	HIP Failover	HIP failed over
1202	Lost connection to Data plane	DP disconnected
1302	Rate Limit for Total Outstanding Requests (TOR) Surpassed	Rate Limit for MOR surpassed
1618	Destination Not reachable	Destination not reachable
1626	Association cannot Start	Association establishment failed
1902	Unknown realm accounting	Unknown realm
1909	apAcctRespWhileInvalidConfig	AP accounting response while invalid config
1910	apAcctMsgDropNoAcctStartMsg	AP account message drop while no accounting start message
1911	unauthorizedCoaDmMessageDropped	Unauthorized CoA/DM message dropped
1960	CGFServerNotConfigured	CGF Server Not Configured
5001	Initial Process	Process initiated
5002	PMIPv6 is Unavailable	PMIPv6 unavailable
5004	Update config failed	Config update failed
5006	LMA ICMP is unreachable	LMA ICMP unreachable
5008	LMA failover	LMA failed over

Code	Alarm Name	Renamed To
5010	Binding failure	Binding failed
5102	Lost DHCP connection	DHCP connection lost

#### **New Event**

Event Code	Event
115	apJoinZoneFailed
116	aplllgalToChangeCountryCode
180	genericRogueAPDetected
181	ssid-spoofingRogueAPDetected
182	mac-spoofingRogueAPDetected
183	same-networkRogueAPDetected
184	ad-hoc-networkRogueAPDetected
185	maliciousRogueAPTimeout
218	smartRoamDisconnect
219	clientBlockByDeviceType
220	clientGracePeriod
221	onboardingRegistrationSuccess
222	onboardingRegistrationFailure
225	forceDHCPDisconnect
319	319##smartMonitorTurnOffWLAN
320	apCLBlimitReached
321	apCLBlimitRecovered
322	apWLANStateChanged
323	apCapacityReached
324	apCapacityRecovered
516	dpPktPoolLow
517	dpPktPoolCriticalLow

Event Code	Event
518	dpPktPoolRecover
519	dpCoreDead
611	apSoftGRETunnelFailoverPtoS
612	apSoftGRETunnelFailoverStoP
613	apSoftGREGatewayReachable
614	apSoftGREGatewayNotReachable
701	apLBSNoResponses
702	apLBSAuthFailed
703	apLBSConnectSuccess
704	apLBSConnectFailed
705	apLBSStartLocationService
706	apLBSStopLocationService
707	apLBSRcvdPassiveCalReq
708	apLBSRcvdPassiveFFReq
709	apLBSRcvdUnrecognizedRequest
721	scgLBSNoResponse
722	scgLBSAuthFailed
723	scgLBSConnectSuccess
724	scgLBSConnectFailed
725	scgLBSStartLocationService
726	scgLBSRcvdNoPayload
727	scgLBSSentControllerInfo
728	scgLBSRcvdMgmtRequest
729	scgLBSSendAPInfobyVenueReport
730	scgLBSSendVenuesReport
731	scgLBSSendClientInfo
732	scgLBSFwdPassiveCalReq
733	scgLBSFwdPassiveFFReq

Event Code	Event
734	scgLBSRcvdUnrecognizedRequest
837	resyncNTPTime
838	diskUsageExceed
981	mailSendSuccess
982	mailSendFailed
983	smsSendSuccess
984	smsSendFailed
1250	licenseSyncSuccess
1251	licenseSyncFail
1252	licenseImportSuccess
1253	licenselmportFail
1254	licenseChanged
1300	rateLimitThresholdSurpassed
1301	rateLimitThresholdRestored
1302	rateLimitMORSurpassed
2001	zdAPMigrating
2002	zdAPMigrated
2003	zdAPRejected
2004	zdAPMigrationFailed
5001	processInit
5002	pmipUnavailable
5003	unallocatedMemory
5004	updateCfgFailed
5005	ImalcmpReachable
5006	ImalcmpUnreachable
5007	ImaHbUnreachable
5008	ImaFailOver
5009	bindingSuccess

Event Code	Event
5010	bindingFailure
5011	bindingExpired
5012	bindingRevoked
5013	bindingReleased
5100	processTerminated
5101	connectedToDHCP
5102	lostCnxnToDHCP

## **Deprecated Event**

Event Code	Event
101	apDiscoverySuccess
102	apDiscoveryFail
609	apBuildTunnelFailed
1004	keepAliveMissed
1010	smfRegFailed
1011	eventRegFailed

## Re-added Event

Event Code	Event
827	ntpTimeSynched

# Modifications to Event Severity

Event Code	Event Code	Severity	Changed To
114	apWlanOversubscribed	Informational	Major
320	apCLBlimitReached	Informational	Warning

Event Code	Event Code	Severity	Changed To
835	nodeBackToInService	Major	Informational
960	licenseThresholdExceeded	Informational	Warning
1007	cfgUpdSuccess	Debug	Informational
1008	cfgUpdFailed	Major	Debug
1009	cfgRcvFailed	Major	Debug
1201	connectedToDblade	Debug	Informational
1209	c2dCfgFailed	Informational	Warning
1301	rateLimitThresholdRestored	Major	Informational
1603	unknownRealm	Major	Debug
1908	apAcctRetransmittedMsgDropped	Major	Debug
1910	apAcctMsgDropNoAcctStartMsg	Major	Critical
1911	unauthorizedCoaDmMessageDro pped	Major	Critical
1952	pdnGwVersionNotSupportedMsg Received	Critical	Major
5006	ImalcmpUnreachable	Debug	Major

# Renamed Event Type

<b>Event Code</b>	Event Name	Renamed To
114	apWlanMismatched	apWlanOversubscribed
416	rmapDlinkConnectWithMap	rapDlinkConnectWithMap
511	dpUpdateStatisticFalied	dpUpdateStatisticFailed
1017	standbyHipRestart	hipStandbyRestart
1240	sessionWarningThreshold	ttgSessionWarningThreshold
1241	sessionMajorThreshold	ttgSessionMajorThreshold
1242	sessionCriticalThreshold	ttgSessionCriticalThreshold
1243	sessionLicenseExausted	ttgSessionLicenseExausted
1302	rateLimitTORSurpassed	rateLimitMORSurpassed

<b>Event Code</b>	Event Name	Renamed To
1626	assocCantStart	assocEstbFailed
1960	CGFServerNotConfigured	cgfServerNotConfigured

## **Renamed Event**

Code	Event Name	Renamed To
103	AP status changed to Managed	AP managed
112	AP model different with pre-provision configuration	AP pre-provision model mismatched
113	AP model different with swap AP configuration	AP swap model mismatched
114	AP WLAN mismatched	AP WLAN oversubscribed
202	Client joined successfully	Client joined
205	Client connection timed out due to inactivity	Client connection timed out
210	Client session logout	Client logged out
218	Client Roaming Disconnect	Client roaming disconnected
303	AP connection lost	AP disconnected
305	AP reset to factory default settings, new:	AP reset to factory default
311	AP change control plane	AP changed control plane
501	Data plane discovered successfully	Data plane discovered
620	DP Softgre New Tunnel	DP SoftGRE New Tunnel
621	DP Softgre Del Tunnel	DP SoftGRE Del Tunnel
622	DP Softgre KeepAlive Recovery	DP SoftGRE Keepalive Recovery
624	DP SoftgreGW Reachable	DP SoftGRE GW Reachable
625	DP SoftgreGW Active	DP SoftGRE GW Active
826	Cluster Node rebooted	Cluster node rebooted
828	Cluster node shutdown	Cluster node shut down

Code	Event Name	Renamed To	
1003	Keep alive failure	Keepalive failure	
1014	HIP Started	HIP started	
1015	HIP Stopped	HIP stopped	
1016	HIP Failover	HIP failed over	
1017	Hip Restart	Standby HIP restarted	
1018	HIP Cache Cleanup	HIP cache cleaned	
1007	Configuration update success	Configuration updated	
1201	Connected to Data plane	DP connected	
1202	Lost connection to Data plane	DP disconnected	
1205	Session updated at Data plane	Session updated at DP	
1206	Session update error at Data plane	Session update at DP failed	
1207	Session deleted at Data plane	Session deleted at DP	
1208	Session delete error at Data plane	Session delete at DP failed	
1217	Create PDP Failed	PDP create failed	
1218	Initial PDP updated successfully HLR	PDP update by HLR succeeded	
1219	Initial PDP updated fail HLR	PDP update by HLR failed	
1220	Initial PDP updated successfully Roam	PDP update by Roaming succeeded	
1221	Initial PDP updated fail Roam	PDP update by Roaming failed	
1222	Received PDP update successfully GGSN	PDP update by GGSN succeeded	
1223	Received PDP update fail GGSN	PDP update by GGSN failed	
1224	Initial PDP deleted successfully	PDP delete by TTG succeeded	
1225	Initial PDP deleted fail	PDP delete by TTG failed	
1226	Received PDP deleted successfully	PDP delete by GGSN succeeded	
1227	Received PDP deleted fail	PDP delete by GGSN failed	
1229	ipAssigned	IP assigned	
1300	Rate Limit Threshold Surpassed	Rate limit threshold surpassed	

Code	Event Name	Renamed To	
1301	Rate Limit Threshold Restored	Rate limit threshold restored	
1302	Rate Limit for Total Outstanding Requests (TOR) Surpassed	Rate Limit for TOR surpassed	
1604	Authentication success	Authentication succeeded	
1606	Pseudonym authentication success	Pseudonym authentication succeeded	
1608	Fast re-authentication success	Fast re-authentication succeeded	
1612	CGF keep alive not responded	CGF keepalive not responded	
1613	CDR transfer successful	CDR transfer succeeded	
1618	Destination Not Reachable	Destination not reachable	
1623	AppServer Down	App Server Down	
1624	AppServer Inactive	App Server Inactive	
1625	AppServer Active	App Server Active	
1626	Association can not Start	Association establishment failed	
1631	send Auth Info Failed	Auth info sending failed	
1632	Update GPRS Location Success	GPRS location update succeeded	
1633	Update GPRS Location Failed	GPRS location update failed	
1902	Unknown realm accounting	Unknown realm	
5001	Initial Process	Process initiated	
5002	PMIPv6 is Unavailable	PMIPv6 unavailable	
5004	Update config failed	Config update failed	
5005	LMA ICMP is reachable	LMA ICMP reachable	
5006	LMA ICMP is unreachable	LMA ICMP unreachable	
5007	LMA server is unreachable	LMA server unreachable	
5008	LMA failover	LMA failed over	
5009	Binding success	Binding succeeded	
5010	Binding failure	Binding failed	

Code	Event Name	Renamed To
5012	Revoke binding	Binding revoked
5013	Release binding	Binding released
5100	Stop process	Process stopped
5101	Connect To DHCP	DHCP connected
5102	Lost DHCP connection	DHCP connection lost

# **Alarm and Event Management**

2

#### In this chapter:

- Overview
- Alarm and Event Management

#### Overview

This guide lists and describes the various types of alarm and event that the controller generates. For each alarm and event, this guide provides the code, type, attributes, and description.

**NOTE:** Refer to About This Guide for the conventions used in this guide.

## **Alarm and Event Management**

This subsystem contains set of functions that help users to detect, isolate, and eventually correct malfunctions in the managed network. This section covers:

- Event Categories
- Event Attributes
- Generation of Alarm and Event

### **Event Categories**

Events are used for many different purposes, mainly for notifying users of certain conditions in the system components as well as the managed network. They can be classified into the following categories:

- Alarms: These are unexpected events indicating a condition that typically requires management attention
- Configuration Change Events: Configuration change events are events that inform of a configuration change effect on the device.
- Threshold Crossing Alerts: These are events that inform of a performance-related state variable that has exceeded a certain value. These events point to conditions that might require management attention to prevent network and service degradation.
- Logging Events: These are events that occur regularly and are expected to occur
  during the operation of a network, that indicate what is currently going on in the
  network. Some examples of these events include:
  - Activity on the network and service
  - Operator activity
  - System activity
  - Informational events Any other kind of event.

Debug and Informational events - All the debug and informational events
pertaining to TTG modules like RADIUS proxy, HIP, CIP and AUT are not
displayed on the Web Interface. This is because it reduces the performance
of the system since its large in numbers. Enabling display of these events on
the Web Interface is possible through CLI but it is not recommended.

#### **Event Attributes**

An event always includes the following attributes:

- Event Source: The identifier of the source component that generates the event
- Timestamp: The time when the event occurred
- Event Severity: Severity is classified as critical, major, minor, warning, informational or debug
- Event Type: The type of event that has occurred
- Event Information: Contains detail attribute fields in a key-value pair, where a list of field names is provided


#### Generation of Alarm and Event

The following are the steps of how alarm and event are generated.

- 1 Alarm
  - **a** An alarm is a persistent indication of a fault that clears only when the triggering condition had been resolved.
  - **b** An alarm can be filtered in the controller Web Interface based on:
    - Alarm Category Alarm classifications
    - Alarm Source: Source of the alarm
    - Alarm Status: Could either be outstanding or cleared
    - Acknowledge Time: The time when the alarm is acknowledged
    - Date and Time Date and time when the alarm is acknowledged
    - Severity: Severity is classified as critical, major or minor
    - Status Could either be cleared or outstanding
    - Type Alarm type
  - To view the below alarm information in the controller web interface navigate to Monitor > Alarms
    - Date and Time


- Code
- Alarm Type
- Severity
- Status
- Acknowledged on
- Cleared By
- Cleared On
- Comments
- Activity
- Actions
- **d** On an alarm generation, the controller web interface **Monitor > Alarms** provides the following information as seen in Figure 1.
  - Alarm console, which displays the cleared and outstanding alarms visible to the user who is currently logged on
  - Alarm summary, which lists various information such as outstanding alarm counts, unacknowledged alarm counts, etc.
  - Filtering features based on the alarm attributes.
  - You may clear an alarm or a set of alarms to let other administrators know that you have already resolved the issue. When you select a group of alarms, the Clear Alarms button is activated. Click this button. A text box appears where you can enter comments or notes about the resolved issue. Click Apply when done. To view the cleared alarms, select the cleared option.

Figure 1. Alarm

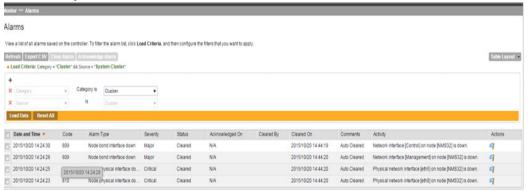

- **2** Event On an event generation the:
  - **a** The controller collects, receives, and maintains the raw events from the managed entities (control plane, data plane, access points, etc.). These raw events are kept in the database, and are automatically purged.
  - **b** The controller allows users to enable/disable certain event types from the managed entities.
    - Disabled events are filtered at the source whenever possible to minimize resources for processing events
    - Threshold events are triggered at the source whenever possible.
  - c The web interface provides event log window as seen in Figure 2 for users to visualize and analyze the events. Users are able to perform various operations on the events, such as filtration, aggregation and counting. o view the below event information in the controller web interface navigate to Monitor > Events.
    - Date and Time
    - Bato and min
    - Code
    - Type
    - Severity
    - Activity

Figure 2. Event

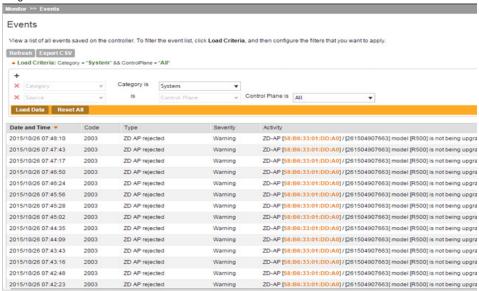

**NOTE:** Refer to Alarm Types and Events Types for the list of alarm and event that the SCG and vSZ-H generates.

**NOTE:** Refer to *SNMP MIB Reference Guide* for the list of SNMP alarm traps that the controller generates.

NOTE: Refer to Administrator Guide for Viewing of Alarms and Events.

**Alarm Types** 

This chapter provides information on the various types of alarms that the controller generates. Alarms are a subset of the events defined. Categories are inherited from the event.

#### In this chapter:

- Accounting Alarms
- AP Authentication Alarms
- AP Communication Alarms
- AP LBS Alarms
- AP State Change Alarms
- Authentication Alarms
- Control and Data Plane Interface Alarms
- Cluster Alarms
- Configuration Alarms
- Data Plane Alarms
- GA Interface Alarms
- Gn/S2a Interface Alarms
- GR Interface Alarms
- IPMI Alarms
- Licensing Alarms
- PMIPv6 Alarms
- Session Alarms
- STA Interface Alarms
- System Alarms
- Threshold Alarms
- Tunnel Alarms Access Point

## **Accounting Alarms**

Following are the alarms related to accounting.

- Accounting server not reachable
- Accounting fallback to primary
- Accounting fallback to primary
- AP accounting message mandatory parameter missing
- AP accounting message decode failed
- AP account message drop while no accounting start message
- Unauthorized CoA/DM message dropped

## Accounting server not reachable

Table 5. Accounting server not reachable alarm

Alarm	Accounting server not reachable
Alarm Type	accSrvrNotReachable
Alarm Code	1602
Severity	Major
Aggregation Policy	An alarm is raised for every event from the event code 1602. A single event triggers a single alarm.
Attribute	"mvnold"=12, "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="wlan.3gppnetwork.org", "radProxylp"="7.7.7.7", "accSrvrlp"="30.30.30.30", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Accounting Server [{accSrvrlp}] not reachable from Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the accounting server cannot be reached.
Recommended Actions	Manual intervention is required. Check the web interface for the connection to the AAA interface. Also, check if the RADIUS server can reach the AAA server interface.

## Accounting failed over to secondary

NOTE: This alarm is not applicable for vSZ-H.

Table 6.	Accounting failed over to secondary alarm

Table 6. Accounting failed over to secondary alarm			
Alarm	Accounting failed over to secondary		
Alarm Type	accFailedOverToSecondary		
Alarm Code	1653		
Severity	Major		
Aggregation Policy	An alarm is raised for every event from the event code 1653. A single event triggers a single alarm.		
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30"		
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [7.7.7.7] on SCG[2.2.2.2]		
Description	This alarm is triggered when the secondary accounting RADIUS server is available after the primary server becomes zombie or dead.		
Recommended Actions	No action is required.		

## Accounting fallback to primary

NOTE: This alarm is not applicable for vSZ-H.

Table 7. Accounting fallback to primary alarm

Alarm	Accounting fallback to primary
Alarm Type	accFallbackToPrimary
Alarm Code	1654
Severity	Major
Aggregation Policy	An alarm is raised for every event from the event code 1654. A single event triggers a single alarm.

Table 7. Accounting fallback to primary alarm

Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30"
Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the automatic fallback is enabled. The accounting failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.
Recommended Actions	No action is required.

# AP accounting message mandatory parameter missing

NOTE: This alarm is not applicable for vSZ-H.			
Table 8. AP accounting message mandatory parameter missing alarm			
Alarm	AP accounting message mandatory parameter missing		
Alarm Type	apAcctMsgMandatoryPrmMissing		
Alarm Code	1901		
Severity	Critical		
Aggregation Policy	From the event code 1901 an alarm is raised for every event. A single event triggers a single alarm.		
Attribute	"mvnold"="12", "wlanld"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org", "SCGMgmtlp"="2.2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"		
Displayed on the web interface	[{srcProcess}] Mandatory attribute missing in Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{uelmsi}@{realm}]		

Table 8. AP accounting message mandatory parameter missing alarm

Description	This alarm is triggered when the controller fails to the find the mandatory parameter in the RADIUS accounting message received from the AP. This mandatory parameter is required for generating the WAN-CDR.
Recommended Action	Download the RADIUS log file from the web interface to check the error cause.

# AP accounting message decode failed

NOTE: This alarm is not applicable for vSZ-H.

Table 9.	AP accounting message decode fai	led alarm

Table 9. AP accounting message decode failed alarm			
Alarm	AP accounting message decode failed		
Alarm Type	apAcctMsgDecodeFailed		
Alarm Code	1904		
Severity	Critical		
Aggregation Policy	From the event code 1904 an alarm is raised for every event. A single event triggers a single alarm.		
Attribute	"mvnold"="12", "wlanld"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"		
Displayed on the web interface	[{srcProcess}] Malformed Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]		
Description	This alarm is triggered when an AP accounting message decode fails due to a malformed packet.		
Recommended Action	Download the RADIUS log file from the web interface to check the error cause.		

# AP account message drop while no accounting start message

NOTE: This alarm is not applicable for vSZ-H.

T 1 1 10	A D .	1 1.9		1
Table 10	AP account mess	ade dron while no	accounting start	message alarm

Alarm	AP account message drop while no accounting start message	
Alarm Type	apAcctMsgDropNoAcctStartMsg	
Alarm Code	1910	
Severity	Critical	
Aggregation Policy	From the event code 1910 an alarm is raised for every event. A single event triggers a single alarm.	
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10",	
	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut",	
	"realm"="wlan.3gppnetwork.org",	
Displayed on the web interface	[{srcProcess}] Dropped Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]. Accounting session timer expired, stop or interim message not received, as Account Start not received from NAS/AP	
Description	This alarm is raised when accounting messages from the AP is dropped. The attributes <i>Acct Interim/Stop</i> message as account start is not received from the AP.	
Recommended Action	Check the accounting retransmit timer and retransmit count in the Access Point (AP) configuration. Also check if the interface from the AP to the controller is congested.	

# Unauthorized CoA/DM message dropped

NOTE: This alarm is not applicable for vSZ-H.

Table 11. Unauthorized CoA/DM message dropped alarm

Alarm	Unauthorized CoA/DM message dropped
Alarm Type	unauthorizedCoaDmMessageDropped
Alarm Code	1911
Severity	Critical
Aggregation Policy	From the event code 1911 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "wlanld"="1" "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "radSrvrlp"="7.7.7.7" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Dropped CoA/DM Packet received from AAA [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}], Received message from unauthorized AAA
Description	This alarm is triggered when the controller receives a Change of Authorization (CoA) or Dynamic Multipoint (DM) message from an unauthorized AAA server.
Recommended Action	Check the RADIUS configuration server settings in the RADIUS service profile. Check if the AAA server is authorized to send the change of authorization (CoA) or dynamic multipoint (DM) messages. If it is authorized, include for RADIUS server to send CoA/DM message in RADIUS service.

**NOTE:** Refer to Accounting Events.

## **AP Authentication Alarms**

Following are the alarms related to AP authentication.

- RADIUS server unreachable
- LDAP server unreachable
- AD server unreachable
- WeChat ESP authentication server unreachable
- WeChat ESP authentication server unresolvable
- WeChat ESP DNAT server unreachable
- WeChat ESP DNAT server unresolvable

#### **RADIUS** server unreachable

Table 12. RADIUS server unreachable alarm

Alarm	RADIUS server unreachable
Alarm Type	radiusServerUnreachable
Alarm Code	2102
Severity	Major
Aggregation Policy	From the event code 2102 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"="".
Auto Clearance	The alarm is auto cleared with the event code 2101.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach radius server [{ip}].
Description	This alarm is triggered when AP is unable to reach RADIUS server.
Recommended Actions	Check the network connectivity between AP and RADIUS server.

#### LDAP server unreachable

Table 13. LDAP server unreachable alarm

Alarm	LDAP server unreachable
Alarm Type	IdapServerUnreachable
Alarm Code	2122
Severity	Major
Aggregation Policy	From the event code 2122 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2121.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach LDAP server [{ip}].
Description	This alarm is triggered when AP is unable to reach LDAP server.
Recommended Actions	Check the network connectivity between AP and LDAP server.

#### AD server unreachable

Table 14. AD server unreachable alarm

AD server unreachable
adServerUnreachable
2142
Major
From the event code 2142 an alarm is raised for every event. A single event triggers a single alarm.
"apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
The alarm is auto cleared with the event code 2141.
AP [{apName&&apMac}] is unable to reach AD server [{ip}].

Table 14. AD server unreachable alarm

Description	This alarm is triggered when AP is unable to reach AD server.
Recommended Actions	Check the network connectivity between AP and AD server.

#### WeChat ESP authentication server unreachable

Table 15. WeChat ESP authentication server unreachable alarm

Alarm	WeChat ESP authentication server unreachable
Alarm Type	espAuthServerUnreachable
Alarm Code	2152
Severity	Major
Aggregation Policy	From the event code 2152 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2151
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach WeChat ESP authentication server [{ip}]
Description	This alarm is triggered when AP is unable to reach WeChat ESP authentication server.
Recommended Actions	.Check the network connectivity between controller web interface and WeChat ESP authentication server.

#### WeChat ESP authentication server unresolvable

Table 16. WeChat ESP authentication server unresolvable alarm

Alarm	WeChat ESP authentication server unresolvable
Alarm Type	espAuthServerUnResolvable
Alarm Code	2154
Severity	Major
Aggregation Policy	From the event code 2154 an alarm is raised for every event. A single event triggers a single alarm.

Table 16.	WeChat ESP	authentication	server	unresolvable	alarm

Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","profileId"="1","fw Version"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816- 3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2153.
Displayed on the web interface	AP [{apName&&apMac}] is unable to resolve WeChat ESP authentication server domain name [{dn}] to IP
Description	This alarm is triggered when AP is unable to resolve WeChat ESP authentication server domain name.
Recommended Actions	Check the DNS server configuration settings in the controller web interface.

#### WeChat ESP DNAT server unreachable

Table 17. WeChat ESP DNAT server unreachable alarm

Alarm	WeChat ESP DNAT server unreachable
Alarm Type	espDNATServerUnreachable
Alarm Code	2162
Severity	Major
Aggregation Policy	From the event code 2162 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2161.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach WeChat ESP DNAT server [{ip}].
Description	This alarm is triggered when the AP is unable to reach WeChat ESP DNAT server.
Recommended Actions	Check the network connectivity between controller web interface and WeChat ESP DNAT server.

#### WeChat ESP DNAT server unresolvable

Table 18. WeChat ESP DNAT server unresolvable alarm

Alarm	WeChat ESP DNAT server unresolvable	
Alarm Type	espDNATServerUnresolvable	
Alarm Code	2164	
Severity	Major	
Aggregation Policy	From the event code 2164 an alarm is raised for every event. A single event triggers a single alarm.	
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","profileId"="1","fw Version"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816- 3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""	
Auto Clearance	The alarm is auto cleared with the event code 2163.	
Displayed on the web interface	AP [{apName&&apMac}] is unable to resolve WeChat ESP DNAT server domain name [{dn}] to IP	
Description	This alarm is triggered when the AP is unable to resolve WeChat ESP DNAT server domain name.	
Recommended Actions	Check the DNS server configuration settings in the controller web interface.	

**NOTE:** Refer to AP Authentication Events.

# **AP Communication Alarms**

Following are the alarms related to access point communications.

- AP rejected
- AP configuration update failed
- AP swap model mismatched
- AP pre-provision model mismatched
- AP firmware update failed
- AP WLAN oversubscribed
- AP join zone failed

# AP rejected

Table 19. AP rejected alarm

Alarm	AP rejected
Alarm Type	apStatusRejected
Alarm Code	101
Severity	Minor
Aggregation Policy	From the event code 105 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 103.
Attribute	"apMac"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx", "reason"="xxx"
Displayed on the web interface	{produce.short.name} [{wsgIP}] rejected AP [{apName&&apMac}] because of [{reason}]
Description	This alarm is triggered when the AP is rejected.
Recommended Actions	Check if the number of licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses.

# AP configuration update failed

Table 20. AP configuration update failed alarm

Alarm	AP configuration update failed
Alarm Type	apConfUpdateFailed
Alarm Code	102
Severity	Major
fAggregation Policy	From the event code 111 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 110.
Attribute	"apMac"="xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] failed to update to configuration [{configID}]
Description	This alarm is triggered when the controller is unable to update the AP configuration details.
Recommended Actions	Retrieve the AP support text. Reboot the AP and trigger another configuration change for upgrading the AP. If it fails revert to the previous zone firmware.

# AP swap model mismatched

Table 21. AP swap model mismatched alarm

Alarm	AP swap model mismatched
Alarm Type	apModelDiffWithSwapOutAP
Alarm Code	104
Severity	Major
Aggregation Policy	From the event code 113 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx" "configModel"="xxx.xxx.xxx.xxx", "model"="xxx.xxx.xxx.xxx
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from swap configuration model [{configModel}]
Description	This alarm is triggered when the AP model differs from the swapped configuration model.

Table 21. AP swap model mismatched alarm

Recommended Actions   If the model is incorrect delete and rejoin the AP.
---

# AP pre-provision model mismatched

Table 22. AP pre-provision model mismatched alarm

Alarm	AP pre-provision model mismatched
Alarm Type	apModelDiffWithPreProvConfig
Alarm Code	105
Severity	Major
Aggregation Policy	From the event code 112 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx",
	"configModel"="xxx.xxx.xxx.xxx". "model"="xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from per-provision configuration model [{configModel}]
Description	This alarm is triggered when the AP model differs from the pre-provision configuration model.
Recommended Actions	If the model is incorrect delete the AP for the AP to rejoin to get the proper AP configuration.

# AP firmware update failed

Table 23. AP firmware update failed alarm

Alarm	AP firmware update failed
Alarm Type	apFirmwareUpdateFailed
Alarm Code	107
Severity	Major
Aggregation Policy	From the event code 107 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 106.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] failed to update its firmware from [{fromVersion}] to [{toVersion}] [{reason}]

Table 23. AP firmware update failed alarm

Description	This alarm is triggered when the AP fails to update the firmware details.
	Retrieve the AP support text. Reboot the AP and trigger another configuration change for upgrading the AP. If it fails revert to the previous zone firmware.

#### AP WLAN oversubscribed

Table 24. AP WLAN oversubscribed alarm

Alarm	AP WLAN oversubscribed
Alarm Type	apWlanOversubscribed
Alarm Code	1081
Severity	Major
Aggregation Policy	From the event code 114 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] does not have enough capacity to deploy all wlans. Only maximum wlan number of the AP can be deployed
Description	This alarm is triggered when the AP exceeds the maximum capacity for deploying all WLANs.
Recommended Actions	Any of the following are the recommended actions.
	Create a new WLAN group with WLANs. Ensure that it is not more than the AP's WLAN capacity. Apply the new WLAN group to either the AP or the AP's AP Group.
	Find the WLAN group used by the AP and reduce the number of WLAN

# AP join zone failed

NOTE: This alarm is not applicable for vSZ-H.

Table 25.	AP ioin	70na	fallad	alarm
Taule 70.	AF IUIII	ZUHE	ialitu	alallli

14510 201 711	join 2010 tanoa alam
Alarm	AP join zone failed
Alarm Type	apJoinZoneFailed
Alarm Code	115
Severity	Major
Aggregation Policy	From the event code 115 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "zoneUUID"="xx:xx:xx:xx:xx:xx",
	"targetZoneUUID"="xx:xx:xx:xx:xx:xx", "reason"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] failed to join to zone [{targetZoneName}].  Reason: [{reason}]
Description	This alarm is triggered when the AP fails to join the specified zone
Recommended Actions	Check if the number of RXGW (AP direct tunnel license) licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses.

**NOTE:** Refer to AP Communication Events.

# **AP LBS Alarms**

Following are the alarms related to AP Location Based Service (LBS).

- No LS responses
- LS authentication failure
- AP failed to connect to LS

# No LS responses

Table 26. No LS responses alarm

Alarm	No LS responses
Alarm Type	apLBSNoResponses
Alarm Code	701
Severity	Major
Aggregation Policy	From the event code 701 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx", "url"="","port"=""
Displayed on the SmartZone web interface	AP [{apName&&apMac}] no response from LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the AP does not get a response when trying to connect to the location based service.
Recommended Actions	This alarm is triggered when the location server fails to respond to the AP request due to an error or the server is a maintenance mode. Report this to the location server owner.

#### LS authentication failure

Table 27. LS authentication failure alarm

Alarm	LS authentication failure
Alarm Type	apLBSAuthFailed
Alarm Code	702
Severity	Major
Aggregation Policy	From the event code 702 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx", "url"="","port"=""

Table 27. LS authentication failure alarm

Displayed on the SmartZone web interface	AP [{apName&&apMac}] LBS authentication failed: url=[{url}], port=[{port}]
Description	This alarm is triggered due to the authentication failure on connecting to the location based service.
Recommended Actions	The password needs to be corrected in the LBS service page.

#### AP failed to connect to LS

Table 28. AP failed to connect to LS alarm

Alarm	AP failed to connect to LS
Alarm Type	apLBSConnectFailed
Alarm Code	704
Severity	Major
Aggregation Policy	From the event code 704 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 703.
Attribute	"apMac"="xx:xx:xx:xx:xx", "url"="","port"=""
Displayed on the SmartZone web interface	AP [{apName&&apMac}] connection failed to LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the AP fails to connect to the location based service.
Recommended Actions	This alarm is triggered either when the location server is unreachable or the network connection is unstable or the Domain Named System (DNS) configuration is incorrect. It is recommended to check all the three possible error codes - 701, 702 and 704.

NOTE: Refer to AP LBS Events.

# **AP State Change Alarms**

Following are the alarms related to access point state changes.

- AP rebooted by system
- AP disconnected
- AP deleted
- AP cable modem interface down

# AP rebooted by system

Table 29. AP rebooted by system alarm

Alarm	AP rebooted by system
Alarm Type	apRebootBySystem
Alarm Code	302
Severity	Major
Aggregation Policy	From the event code 302 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted by the system because of [{reason}]
Description	This alarm is triggered when system reboots the AP.
Recommended Actions	Check the reasons for the reboot. If the reason is unknown, retrieve the AP support text and send it to Ruckus support.

#### AP disconnected

Table 30. AP disconnected alarm

Alarm	AP disconnected
Alarm Type	apConnectionLost
Alarm Code	303
Severity	Major
Aggregation Policy	From the event code 303 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 312
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] disconnected
Description	This alarm is triggered when the AP disconnects from the controller.
Recommended Actions	Check the network and the communicator process on the controller. Try rebooting the AP locally.

#### AP deleted

Table 31. AP deleted alarm

Alarm	AP deleted
Alarm Type	apDeleted
Alarm Code	306
Severity	Major
Aggregation Policy	From the event code 313 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] deleted
Description	This alarm is triggered when the AP is deleted.
Recommended Actions	This is a user action and to confirm check the user audit.

#### AP cable modem interface down

Table 32. AP cable modem interface down alarm

Alarm	AP cable modem interface down
Alarm Type	cableModemDown
Alarm Code	308
Severity	Major
Aggregation Policy	From the event code 316 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 325.
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem interface is down
Description	This alarm is triggered when the AP cable modem interface is down.
Recommended Actions	Check cable modem. Try rebooting the cable modem.

**NOTE:** Refer to AP State Change Events.

## **Authentication Alarms**

The following are the alarms related to authentication.

- Authentication server not reachable
- Authentication failed over to secondary
- Authentication fallback to primary
- AD/LDAP connectivity failure
- Bind fails with AD/LDAP
- Bind success with LDAP, but unable to find clear text password for the user
- RADIUS fails to connect to AD NPS server.
- RADIUS fails to authenticate with AD NPS server

#### Authentication server not reachable

Table 33. Authentication server not reachable alarm

Alarm	Authentication server not reachable
Alarm Type	authSrvrNotReachable
Alarm Code	1601
Severity	Major
Aggregation Policy	From the event code 1601 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"=
	"wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "authSrvrlp"="20.20.20.20" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Authentication Server [{authSrvrlp}] not reachable from Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}].
Description	This alarm is triggered when the authentication fails since the primary or secondary servers are not reachable.
Recommended Actions	Manual intervention is required. Check the web interface for the interface from the controller to AAA server. Also check if the AAA server can be reached from the RADIUS server. Ensure that the AAA server is UP.

# Authentication failed over to secondary

Table 34. Authentication failed over to secondary alarm

Alarm	Authentication failed over to secondary
Alarm Type	authFailedOverToSecondary
Alarm Code	1651
Severity	Major
Aggregation Policy	From the event code 1651 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]a
Description	This alarm is triggered when the secondary RADIUS server is available after the primary server becomes zombie or dead.
Recommended Actions	No operator action is required.

# Authentication fallback to primary

Table 35. Authentication fallback to primary alarm

Alarm	Authentication fallback to primary
Alarm Type	authFallbackToPrimary
Alarm Code	1652
Severity	Major
Aggregation Policy	From the event code 1652 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtlp"="2.2.2.2"

Table 35. Authentication fallback to primary alarm

Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when automatic fallback is enable. Consequently, the authentication failover to the secondary server occurs and the revival timer for the primary server expires, and the requests falls back to the primary server.
Recommended Actions	No action is required.

# AD/LDAP connectivity failure

Table 36. AD/LDAP connectivity failure alarm

Alarm	AD/LDAP connectivity failure
Alarm Type	racADLDAPFail
Alarm Code	1752
Severity	Major
Aggregation Policy	From the event code 1752 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "SCGMgmtlp"="2.2.2.2" "desc"= "Connection to AD/LDAP fails"
Displayed on the web interface	[{srcProcess}] Connect to AD/LDAP[{authSrvrlp}] fails from SCG[{SCGMgmtlp}]
Description	This alarm is triggered when RADIUS server fails to connect with AD/LDAP server.
Recommended Actions	Check whether AD/LDAP server instance is running on the target machine
	Check whether the AD/LDAP server can be reached from the controller
	Verify if AD/LDAP server instances are listening on ports 3268 and 389
	Verify if the requests are reaching AD/LDAP servers by any packet capture tool (tcpdump, wireshark)

#### Bind fails with AD/LDAP

Table 37. Bind fails with AD/LDAP alarm

Alarm	Bind fails with AD/LDAP
Alarm Type	racADLDAPBindFail
Alarm Code	1753
Severity	Major
Aggregation Policy	From the event code 1753 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"= "1.1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Bind to AD/LDAP fails"
Displayed on the web interface	[{srcProcess}] Bind to AD/LDAP[{authSrvrlp}] fails from SCG[{SCGMgmtlp}] for User[{userName}]
Description	This alarm is triggered when RADIUS server binding fails to AD/LDAP server.
Recommended Actions	Verify the base and administrator domain names as configured in the controller web interface
	Verify the administrator user name and password as configured in the controller web interface
	Verify whether the configured administrator user name and password is authenticated by the AD/LDAP servers

# Bind success with LDAP, but unable to find clear text password for the user

Table 38. Bind success with LDAP, but unable to find clear text password for the user alarm

Alarm	Bind success with LDAP, but unable to find clear text password for the
	user
Alarm Type	racLDAPFailToFindPassword
Alarm Code	1754
Severity	Major
Aggregation Policy	From the event code 1754 an alarm is raised for every event. A single event triggers a single alarm.

Table 38. Bind success with LDAP, but unable to find clear text password for the user alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"= "testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Fail to find password"
Displayed on the web interface	[{srcProcess}] failed to find password from LDAP[{authSrvrlp}] for SCG[{SCGMgmtlp}] for User[{userName}]
Description	This alarm is triggered when binding is successful with LDAP server using root credentials but it is unable to retrieve the clear text password for the user.
Recommended Actions	Verify whether the given username and clear text password are configured in the LDAP server.

#### RADIUS fails to connect to AD NPS server

Table 39. RADIUS fails to connect to AD NPS server alarm

Alarm	RADIUS fails to connect to AD NPS server
Alarm Type	racADNPSFail
Alarm Code	1755
Severity	Major
Aggregation Policy	From the event code 1755 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12
	"srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"="testuser"
	"SCGMgmtlp"="2.2.2.2", "desc"= "Fails to connect to AD NPS server"
Displayed on the web interface	[{srcProcess}] Fails to connect to AD NPS[{authSrvrlp}] from SCG[{SCGMgmtlp}]
Description	This alarm is triggered when the RADIUS server fails to connect to the AD NPS server.
Recommended Actions	Verify if the configured NPS server instance is up and running (Network Policy Server)
	Verify if the NPS server instance is communicating on the standard RADIUS port 1812
	Ensure that Windows server where AD/NPS server is provisioned can be reached from the controller web interface

#### RADIUS fails to authenticate with AD NPS server

Table 40. RADIUS fails to authenticate with AD NPS server alarm

Alarm	RADIUS fails to authenticate with AD NPS server
Alarm Type	racADNPSFailToAuthenticate
Alarm Code	1756
Severity	Major
Aggregation Policy	From the event code 1756 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Fails to authenticate with AD NPS"
Displayed on the web interface	[{srcProcess}] Fails to authenticate AD NPS[{authSrvrlp}] on SCG[{SCGMgmtlp}] for User[{userName}
Description	This alarm is triggered when the RADIUS server fails to authenticate with the AD NPS server.
Recommended Actions	The shared secret for NPS server should be same as that of administrator password provisioned in the controller web interface for AD server
	NPS should be configured to accept request (CHAP and MSCHAPv2) from the controller
	For CHAP authentication to work the AD server should store the password in reversible encryption format
	Ensure that NPS is registered with AD server

**NOTE:** Refer to Authentication Events.

# Control and Data Plane Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following alarm is related to control and data plane.

• GtpManager (DP) disconnected

## GtpManager (DP) disconnected

Table 41. GtpManager (DP) disconnected alarm

Alarm	GtpManager (DP) disconnected
Alarm Type	lostCnxnToDblade
Alarm Code	1202
Severity	Major
Aggregation Policy	From the event code 1202 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1201.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut",
	"realm"="NA", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3",
	"SCGMgmtlp"="2.2.2.2
Displayed on the web interface	The connectivity between Control plane [{ctrlBladelp}] and Data plane [{dataBladelp}] is lost at {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered due to transmission control protocol (TCP) connection loss or when control plane is unable to complete the configuration procedure successfully.
Recommended Actions	A manual intervention is required. Refer to Control and Data Plane Interface event 1201.

NOTE: Refer to Control and Data Plane Interface.

## **Cluster Alarms**

Following are the alarms related to cluster.

- New node failed to join
- Node removal failed
- Node out of service
- Cluster in maintenance state
- Cluster backup failed
- Cluster restore failed
- Cluster upgrade failed
- Cluster application stopped
- Node bond interface down
- Node physical interface down
- Cluster node rebooted
- Cluster node shut down
- Disk usage exceed threshold
- Resync NTP time
- Cluster out of service
- Cluster upload AP firmware failed
- Cluster add AP firmware failed
- Configuration backup failed
- Configuration restore failed

## New node failed to join

Table 42. New node failed to join alarm

Alarm	New node failed to join
Alarm Type	newNodeJoinFailed
Alarm Code	801
Severity	Critical
Aggregation Policy	From the event code 803 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 802.

Table 42. New node failed to join alarm

Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	New node [{nodeMac}] ([{nodeName}]) failed to join cluster [{clusterName}]
Description	This alarm is triggered when a node fails to join a cluster session. The web interface displays the error message.
Recommended Actions	When the operation fails, the user can run the join process. If it continues to fail, please send the complete system log files (stored in the path - /opt/ ruckuswireless/controller/log/system for analysis to Ruckus support. Possible causes are:
	The joining node is unable to complete the syncing of data in time. This could be due to the existing node performing compaction/repair etc.
	The communication between the nodes may be broken. This could cause the operation to timeout such as IP address change or due to other events, which affects the network. Usually, it does not last for a long period of time.

#### Node removal failed

Table 43. Node removal failed alarm

Alarm	Node removal failed
Alarm Type	removeNodeFailed
Alarm Code	802
Severity	Major
Aggregation Policy	From the event code 805 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 804.
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] failed to remove from cluster [{clusterName}].
Description	This alarm is triggered when it is unable to remove a node from the cluster.

Table 43. Node removal failed alarm

Recommended Actions	In general, this alarm should rarely occur. If it occurs, restore to the
	previous backup file and please send the system log files (stored in the
	path -
	/opt/ ruckuswireless/controller/log/system for analysis to Ruckus
	support.

#### Node out of service

Table 44. Node out of service alarm

	•
Alarm	Node out of service
Alarm Type	nodeOutOfService
Alarm Code	803
Severity	Critical
Aggregation Policy	From the event code 806 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 835.
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is out of service.  Reason:[{reason}].
Description	This alarm is triggered when a node is out of service.
Recommended Actions	The operator/user needs to check the application/interface state.

# Cluster in maintenance state

Table 45. Cluster in maintenance state alarm

Alarm	Cluster in maintenance state
Alarm Type	clusterInMaintenanceState
Alarm Code	804
Severity	Critical
Aggregation Policy	From the event code 807 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 808.

Table 45. Cluster in maintenance state alarm

Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] is in maintenance state
Description	This alarm is triggered when a cluster is in a maintenance state.
Recommended Actions	Possible causes:
	The entire system backup is in process.
	In a two-node cluster, the remove-node process is working.
	For any other cause, please send the complete system log files (stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.

# Cluster backup failed

Table 46. Cluster backup failed alarm

Alarm	Cluster backup failed
Alarm Type	backupClusterFailed
Alarm Code	805
Severity	Major
Aggregation Policy	From the event code 810 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 809.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup failed. Reason:[{reason}].
Description	This alarm is triggered when a cluster backup fails.

Table 46. Cluster backup failed alarm

Recommended Actions	Check the disk usage. Try restoring the communication between nodes
	for a few more times. If the backup continues to fail or if you encounter
	Python script errors, please collect the complete system log files (stored
	in the path -
	/opt/ ruckuswireless/controller/log/system to Ruckus support for
	analysis. Possible causes:
	Insufficient disk space.
	Communication between nodes may be broken.
	Errors due to the underlying Python script.

# Cluster restore failed

Table 47. Cluster restore failed alarm

Alarm	Cluster restore failed
Alarm Type	restoreClusterFailed
Alarm Code	806
Severity	Major
Aggregation Policy	From the event code 812 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 811.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] restore failed. Reason:[{reason}].
Description	This alarm is triggered when a cluster restore fails.
Recommended Actions	Try a few more times. If the backup restore continues failing, please send the log files (stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.
	The possible cause could be that the command for all nodes in the cluster failed. This could be due to a broken communication link between the nodes.

# Cluster upgrade failed

Table 48. Cluster upgrade failed alarm

Alarm	Cluster upgrade failed
Alarm Type	upgradeClusterFailed
Alarm Code	807
Severity	Major
Aggregation Policy	From the event code 815 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 814.
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Cluster [{clusterName}] could not be upgraded from [{fromVersion}] to [{toVersion}]. Reason:[{reason}].
Description	This alarm is triggered when a version upgrade of a cluster fails.
Recommended Actions	Check the disk usage. Try restoring the communication between nodes for a few more times. If the backup continues to fail or if you encounter Python script errors, please collect and send the complete system log files (stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis. Possible causes:
	Insufficient disk space
	Communication between nodes might be broken.
	Errors due to the underlying Python script.

# Cluster application stopped

Table 49. Cluster application stopped alarm

Alarm	Cluster application stopped
Alarm Type	clusterAppStop
Alarm Code	808
Severity	Critical
Aggregation Policy	From the event code 816 an alarm is raised for every event. A single event triggers a single alarm.

Table 49. Cluster application stopped alarm

Auto Clearance	The alarm code is auto cleared with the event code 817.
Attribute	"appName"="xxxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Application [{appName}] on node [{nodeName}] stopped
Description	This alarm is triggered when the application on a node stops.
Recommended Actions	This could happen to any application for various reasons. Please collect and send the system log files of the stopped application (stored in the path - /opt/ ruckuswireless/controller/log/system to the application owner for analysis.

#### Node bond interface down

Table 50. Node bond interface down alarm

Alarm	Node bond interface down
Alarm Type	nodeBondInterfaceDown
Alarm Code	809
Severity	Major
Aggregation Policy	From the event code 821 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 822.
Attribute	"nodeName"="xxx", "nodeMac"="xxx",
	"ifName"="xxxx"
Displayed on the web interface	Network interface [{networkInterface  ifName}] on node [{nodeName}] is down.
Description	This alarm is triggered when the network interface of a node is down.
Recommended Actions	Check if the network cables of both the physical interfaces are broken. Alternatively, check if the physical interfaces for this bond interface are broken. Please send the log files stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.

# Node physical interface down

Table 51. Node physical interface down alarm

Alarm	Node physical interface down
Alarm Type	nodePhyInterfaceDown
Alarm Code	810
Severity	Critical
Aggregation Policy	From the event code 824 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 825.
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
	"ifName"="xxxx"
Displayed on the web interface	Physical network interface [{networkInterface  ifName}] on node [{nodeName}] is down.
Description	This alarm is triggered when the physical interface of a node is down.
Recommended Actions	Check if the network cables of both the physical interfaces are broken. Alternatively, check if the physical interfaces for this bond interface are broken. Please send the log files stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.

## Cluster node rebooted

Table 52. Cluster node rebooted alarm

-	
Alarm	Cluster node rebooted
Alarm Type	nodeRebooted
Alarm Code	811
Severity	Major
Aggregation Policy	From the event code 826 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xxx", "nodeMac"="xxx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] rebooted
Description	This alarm is triggered when the node is rebooted.

Table 52. Cluster node rebooted alarm

Recommended Actions	Usually, this occurs due to user actions like manual reboot of a node,
	upgrade or restoration of a cluster. Please send the log files stored in
	the path - /opt/ruckuswireless/controller/log/system to Ruckus support
	for analysis.

#### Cluster node shut down

Table 53. Cluster node shut down alarm

Alarm	Cluster node shut down
Alarm Type	nodeShutdown
Alarm Code	813
Severity	Major
Aggregation Policy	From the event code 828 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 826.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] has been shut down
Description	This alarm is triggered when the node shutdowns.
Recommended Actions	This usually occurs due to a user action. Please send the log files stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.

# Disk usage exceed threshold

Table 54. Disk usage exceed threshold alarm

Alarm	Disk usage exceed threshold
Alarm Type	diskUsageExceed
Alarm Code	834
Severity	Critical
Aggregation Policy	From the event code 838 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx", "status"="xx"

Table 54. Disk usage exceed threshold alarm

Displayed on the web interface	The disk usage of node [{nodeName}] is over {status}%.
Description	This alarm is triggered when the disk usage has reached the threshold limit. The disk usage percentage can be configured from 60% to 90%.
Recommended Actions	It is recommended that the user moves the backup files to the FTP server and deletes the moved backup files.

# Resync NTP time

Table 55. Resync NTP time alarm

. <u></u>	
Alarm	Resync NTP time
Alarm Type	resyncNTPTime
Alarm Code	835
Severity	Major
Aggregation Policy	From the event code 837 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx", "reason"="xx", "status"="xx"
Displayed on the web interface	Node [{nodeName}] resyncs time from [{reason}]. The time difference is [{status}] seconds.
Description	This alarm is triggered when the cluster time is not synchronized.
Recommended Actions	The trigger points of NTP time resync alarm are:
	Change in system time setting in the controller web interface
	Detection of current system time is more than 5 seconds when compared to the NTP server
	Reboot a node
	Change roles of cluster nodes
	If this alarm is not triggered by any of the conditions above, the operator or user needs to check the current system time to ensure it is accurate.

#### Cluster out of service

Table 56. Cluster out of service alarm

Alarm	Cluster out of service
Alarm Type	clusterOutOfService
Alarm Code	843
Severity	Critical
Aggregation Policy	From the event code 843 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 808.
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] is out of service.
Description	This alarm is triggered when the cluster service fails.
Recommended Actions	It is recommended that the operator or user checks the out of service node to locate the reason.

# Cluster upload AP firmware failed

Table 57. Cluster upload AP firmware failed alarm

Alarm	Cluster upload AP firmware failed
Alarm Type	clusterUploadAPFirmwareFailed
Alarm Code	850
Severity	Major
Aggregation Policy	From the event code 850 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 849
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware failed.
Description	This alarm is triggered when the cluster upload to AP firmware fails.
Recommended Actions	It is recommended that the operator uploads the AP patch.

#### Cluster add AP firmware failed

Table 58. Cluster add AP firmware failed alarm

Alarm	Cluster add AP firmware failed
Alarm Type	clusterAddAPFirmwareFailed
Alarm Code	853
Severity	Major
Aggregation Policy	From the event code 853 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 852
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] add AP firmware failed.
Description	This alarm is triggered when the cluster upload to AP firmware fails.
Recommended Actions	It is recommended that the operator applies the AP patch.

# Configuration backup failed

Table 59. Configuration backup failed alarm

Alarm	Configuration backup failed
Alarm Type	clusterCfgBackupFailed
Alarm Code	862
Severity	Major
Aggregation Policy	From the event code 862 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 861.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup failed.
Description	This alarm is triggered when the configuration backup fails.
Recommended Actions	Download the web log file from the controller web interface to check for errors.

# Configuration restore failed

Table 60. Configuration restore failed alarm

-	
Alarm	Configuration restore failed
Alarm Type	clusterCfgRestoreFailed
Alarm Code	864
Severity	Major
Aggregation Policy	From the event code 864 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 863.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore failed.
Description	This alarm is triggered when the cluster restoration fails.
Recommended Actions	Download the web log file from the web interface to check for errors.

**NOTE:** Refer to Cluster Events.

# **Configuration Alarms**

Following are the alarms related to configuration.

- · Zone configuration preparation failed
- AP configuration generation failed
- End-of-life AP model detected

## Zone configuration preparation failed

Table 61. Zone configuration preparation failed alarm

Alarm	Zone configuration preparation failed
Alarm Type	zoneCfgPrepareFailed
Alarm Code	1021
Severity	Major
Aggregation Policy	From the event code 1021 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone"
Displayed on the web interface	Failed to prepare zone [{zoneName}] configuration required by ap configuration generation
Description	This alarm is triggered when the controller is unable to prepare a zone configuration required by the AP.
Recommended Actions	APs under these zone stay functional but are unable to receive new settings. Contact Ruckus support to file an error bug along with the log file.

# AP configuration generation failed

Table 62. AP configuration generation failed alarm

Alarm	AP configuration generation failed
Alarm Type	apCfgGenFailed
Alarm Code	1022
Severity	Major
Aggregation Policy	From the event code 1022 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone", "apCfgGenFailedCount"="25"
Displayed on the web interface	Failed to generate configuration for [{apCfgGenFailedCount}] AP(s) under zone[{zoneName}]
Description	This alarm is triggered when the controller fails to generate the AP configuration under a particular zone.
Recommended Actions	APs under these zone stay functional but are unable to receive the new settings. Contact Ruckus support to file an error bug along with the log file.

#### End-of-life AP model detected

Table 63. End-of-life AP model detected alarm

Alarm	End-of-life AP model detected
Alarm Type	cfgGenSkippedDueToEoIAp
Alarm Code	1023
Severity	Major
Aggregation Policy	From the event code 1023 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone","model"= "R300,T300"
Displayed on the web interface	Detected usage of end-of-life ap model(s)[{model}] while generating configuration for AP(s) under zone[{zoneName}]
Description	This alarm is triggered when the controller detects the AP model's end- of-life under a certain zone.
Recommended Actions	These obsoleted APs occupies licensed AP space. Disconnect these unsupported AP models from the given zone by:
	Reset the APs to a factory setting using the AP command line
	Delete these APs through the controller Web Interface >     Configuration AP List

**NOTE:** Refer to Configuration Events.

#### **Data Plane Alarms**

NOTE: Alarms 510, 516, 517 and 519 are not applicable for vSZ-H.

Following are the alarms related to data plane.

- Data plane configuration update failed
- Data plane disconnected
- Data plane physical interface down
- Data plane rebooted
- Data plane packet pool is under low water mark
- Data plane packet pool is under critical low water mark
- Data plane core dead
- Data plane process restarted
- Data plane license is not enough
- Data plane upgrade failed

### Data plane configuration update failed

Table 64. Data plane configuration update failed alarm

Alarm	Data plane configuration update failed
Alarm Type	dpConfUpdateFailed
Alarm Code	501
Severity	Major
Aggregation Policy	From the event code 505 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 504
Attribute	"dpKey"="xx:xx:xx:xx:xx", "configID"=" 123456781234567"
Displayed on the web interface	Data plane [{dpName  dpKey}] failed to update to configuration [{configID}].
Description	This alarm is triggered when the data plane configuration update fails since it was unable to transfer the configuration update from the control plane to the data plane.

Table 64. Data plane configuration update failed alarm

Recommended Actions	Check the data plane configuration and the CPU utilization of the control
	plane. The possible cause could be of the server being busy at that
	particular moment. Check to see if the event is persistent.

## Data plane disconnected

Table 65. Data plane disconnected alarm

Alarm	Data plane disconnected
Alarm Type	dpDisconnected
Alarm Code	503
Severity	Critical
Aggregation Policy	From the event code 513 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 512.
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] disconnected from {produce.short.name} [{cpName  wsgIP}]
Description	This alarm is triggered when the data plane gets disconnected from the controller since it fails to update its status to the control plane.
Recommended Actions	Check if the communicator is still alive and if the cluster interface is working.

# Data plane physical interface down

Table 66. Data plane physical interface down alarm

Alarm	Data plane physical interface down
Alarm Type	dpPhyInterfaceDown
Alarm Code	504
Severity	Critical
Aggregation Policy	From the event code 514 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 515.
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx"

Table 66. Data plane physical interface down alarm

Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName  dpKey}] is down
Description	This alarm is triggered when the physical interface link of the data plane is down due to the fiber cable connection.
Recommended Actions	Check if the fiber cable between the data plane and the switch is firmly connected.

## Data plane rebooted

Table 67. Data plane rebooted alarm

Alarm	Data plane rebooted
Alarm Type	dpReboot
Alarm Code	510
Severity	Minor
Aggregation Policy	From the event code 506 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName  dpKey}] rebooted
Description	This alarm is triggered when the data plane is rebooted.
Recommended Actions	No action is required.

# Data plane packet pool is under low water mark

Table 68. Data plane packet pool is under low water mark alarm

Alarm	Data plane packet pool is under low water mark
Alarm Type	dpPktPoolLow
Alarm Code	516
Severity	Major
Aggregation Policy	From the event code 516 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 518.

Table 68. Data plane packet pool is under low water mark alarm

Attribute	"dpKey"="xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName  dpKey}] is under low-water mark.
Description	This alarm is triggered when the data core packet pool is below the water mark level.
Recommended Actions	The operator needs to check for network looping.

## Data plane packet pool is under critical low water mark

Table 69. Data plane's packet pool is under critical low water mark alarm

Alarm	Data plane packet pool is under critical low water mark
Alarm Type	dpPktPoolCriticalLow
Alarm Code	517
Severity	Critical
Aggregation Policy	From the event code 517 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	dpKey="xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName  dpKey}] is under critical low-water mark.
Description	This alarm is triggered when the data core packet pool reaches the critical water mark level.
Recommended Actions	The operator needs to check for network looping.

### Data plane core dead

Table 70. Data plane core dead alarm

Alarm	Data plane core dead
Alarm Type	dpCoreDead
Alarm Code	519
Severity	Critical
Aggregation Policy	From the event code 519 an alarm is raised for every event. A single event triggers a single alarm.

Table 70. Data plane core dead alarm

Attribute	dpKey="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName  dpKey}] has dead data core.
Description	This alarm is triggered when one or multiple data core packet pool is lost /dead.
Recommended Actions	No action required.

## Data plane process restarted

Table 71. Data plane process restarted alarm

Alarm	Data plane process restarted
Alarm Type	dpProcessRestart
Alarm Code	520
Severity	Major
Aggregation Policy	From the event code 520 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	dpKey="xx:xx:xx:xx:xx:xx", processName="xxxx"
Displayed on the web interface	[{processName}] process got re-started on data plane [{dpName&&dpKey}]
Description	This alarm is triggered when any process on data plane crashes and restarts.
Recommended Actions	No action required.

### Data plane license is not enough

NOTE: Alarm 538 is applicable only for vSZ-H.

Table 72. Data plane license is not enough alarm

Alarm	Data plane license is not enough
Alarm Type	dpLicenselnsufficient
Alarm Code	538
Severity	Major
Aggregation Policy	From the event code 538 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"count"= <delete-vdp-count></delete-vdp-count>
Displayed on the web interface	DP license is not enough, [{count}] instance of DP will be deleted.
Description	This alarm is triggered when the number of data plane licenses are insufficient.
Recommended Actions	Check if the number of data plane licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses and synchronize the licenses.

## Data plane upgrade failed

NOTE: Alarm 553 is applicable only for vSZ-H

Table 73. Data plane upgrade failed alarm

Alarm	Data plane upgrade failed
Alarm Type	dpLicenselnsufficient
Alarm Code	553
Severity	Major
Aggregation Policy	From the event code 553 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx"

Table 73. Data plane upgrade failed alarm

Displayed on the web interface	Data plane [{dpName&&dpKey}] failed to upgrade.
Description	This alarm is triggered when the data plane upgrade fails.
Recommended Actions	There are several possible reasons to trigger alarm 553. The operator has to ensure the accuracy of network connectivity and version availability. For advanced process, check the debug log for reason of upgrade failure. <i>Note:</i> Debug file includes the upgrade log file. The operator can get the debug log from vSZ web interface or through vSZ-D CLI.
	The operator can use the following vSZ-D CLI commands to:
	View the previous upgrade status and reason in case of a failure - ruckus# show upgrade-state/ruckus# show upgrade- history
	• Save the debug file for viewing - ruckus (debug) # save-log
	Check the connection status between vSZ and vSZ-D - ruckus# show status
	Check the current vSZ-D software version - ruckus # show version
	Note: Refer to the vSZ-D CLI Reference Guide for details on the CLI commands mentioned above.

**NOTE:** Refer to Data Plane Events.

## **GA Interface Alarms**

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to GA interface.

- Connection to CGF failed
- CDR transfer failed
- CDR generation failed

#### Connection to CGF failed

Table 74. Connection to CGF failed alarm

Alarm	Connection to CGF failed
Alarm Type	cnxnToCgfFailed
Alarm Code	1610
Severity	Major
Aggregation Policy	From the event code 1610 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1613.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="cip", "realm"="NA", "radSrvrlp"="7.7.7.7",
	"cgfSrvrlp"="40.40.40.40", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Connection with CGF [{cgfSrvrlp}] from RADServerlP [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the channel interface processor (CIP) or GPRS tunneling protocol prime (GTPP) stack detects a connection loss to the charging gateway function (CGF server.
Recommended Actions	Manual intervention is required. Refer to GA Interface Events code 1613. The attribute cgfSrvlp should match.

### **CDR** transfer failed

Table 75. CDR transfer failed alarm

Alarm	CDR transfer failed
Alarm Type	cdrTxfrFailed
Alarm Code	1614
Severity	Major
Aggregation Policy	From the event code 1614 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="cip", "realm"="wlan.3gppnetwork.org",
	"radSrvrlp"="7.7.7.7", "cgfSrvrlp"="40.40.40.40",
	"CGF Serv Intf"="2.2.2.2", "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	CDR transfer failed from RAD Server [{radSrvrlp}] to CGF [{cgfSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the call detail record transfer over Gn' fails.
Recommended Actions	Manual intervention is required. Check the web interface for the home location register (HLR) configuration and also if the HLR can be reached from the controller.

# CDR generation failed

Table 76. CDR generation failed alarm

-	
Alarm	CDR generation failed
Alarm Type	cdrGenerationFailed
Alarm Code	1615
Severity	Major
Aggregation Policy	From the event code 1615 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cip", "realm"="wlan.3gppnetwork.org", "radSrvrlp"="7.7.7.7", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Failed to generate CDR by RAD Server [{radSrvrlp}] in {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the controller is unable to format or generate certain CDRs.
Recommended Actions	Manual intervention is required. Download the CIP process log file to check the cause of the error.

**NOTE:** Refer to GA Interface Events.

### Gn/S2a Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to Gn/S2a interface.

- GGSN restarted
- GGSN not reachable
- GGSN not resolved
- PDNGW could not be resolved
- PDNGW version not supported
- Associated PDNGW down
- Create session response failed
- Decode failed
- Modify bearer response failed
- Delete session response failed
- Delete bearer request failed
- Update bearer request failed
- CGF server not configured

### **GGSN** restarted

Table 77. GGSN restarted alarms

Alarm	GGSN restarted
Alarm Type	ggsnRestarted
Alarm Code	1210
Severity	Major
Aggregation Policy	From the event code 1210 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",  "srcProcess"="sm", "realm"="NA", "gtpclp"="5.5.5.5",  "ggsnlp"="10.10.10.10.10", "SCGMgmtlp"="2.2.2.2",
Displayed on the web interface	GGSN [{ggsnlp}] connected to {produce.short.name} [{SCGMgmtlp}] (GTPC-IP [{gtpclp}]) is restarted.

Table 77. GGSN restarted alarms

Description	This alarm is triggered when the GTP control plane (GTP-C) receives a new recovery value.
Recommended Actions	Refer to the log file for Gateway GPRS Support Node (GGSN) restart.

#### **GGSN** not reachable

Table 78. GGSN not reachable alarms

Alarm	GGSN not reachable
Alarm Type	ggsnNotReachable
Alarm Code	1211
Severity	Major
Aggregation Policy	From the event code 1211 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="sm", "realm"="NA",
	"gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10",
	"SCGMgmtlp"="2.2.2.2",
Displayed on the web	GGSN [{ggsnlp}] connected to {produce.short.name} (GTPC-IP
interface	[{gtpclp}]) is not reachable
Description	This alarm is triggered when the echo request is timed out.
Recommended Actions	Refer to the log file.

### **GGSN** not resolved

Table 79. GGSN not resolved alarm

Alarm	GGSN not resolved
Alarm Type	ggsnNotResolved
Alarm Code	1215
Severity	Major
Aggregation Policy	From the event code 1215 an alarm is raised for every event. A single event triggers a single alarm.

Table 79. GGSN not resolved alarm

Attribute	"mvnold"="12","wlanld"="1", "zoneld"="10",
	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut",
	"realm"="wlan.3gppnetwork.org", "gtpclp"="5.5.5.5",
	"apn"="ruckuswireless.com", "SCGMgmtlp"="2.2.2.2",
	"ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345",
	"ueMsisdn"="98787",
Displayed on the web interface	Failed to resolve GGSN from APN [{apn}] for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]
Description	This alarm is triggered when the access point name (APN) fails at GGSN.
Recommended Actions	Manual intervention is required. Correct the DNS configuration in the controller web interface.

### PDNGW could not be resolved

Table 80. PDNGW could not be resolved alarm

Alarm	PDNGW could not be resolved
Alarm Type	pdnGwNotResolved
Alarm Code	1950
Severity	Critical
Aggregation Policy	From the event code 1950 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	mvnold"=12 "wlanld"=1 "zoneld"="10",  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", srcProcess"="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787" "APN"="ruckus.com"
Displayed on the web interface	[{srcProcess}] APN [{apn}] could not be resolved on {produce.short.name} [{SCGMgmtlp}], with username [{uelmsi}@{realm}]
Description	This alarm is triggered when the APN is unable to resolve to PDN Gateway (PDN GW).
Recommended Actions	Modify the DNS server configuration in the controller web interface.

# PDNGW version not supported

Table 81. PDNGW version not supported alarm

Alarm	PDNGW version not supported
Alarm Type	pdnGwVersionNotSupportedMsgReceived
Alarm Code	1952
Severity	Major
Aggregation Policy	From the event code 1952 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"= "NA" "gtpclp"="5.5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Version not supported message received from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}].
Description	This alarm is triggered when the version is not supported for messages received from PDN GW.
Recommended Actions	Verify and correct the GPRS tunneling protocol (GTP) version supported in the PGW is GTPv1 and GTPv2.

#### Associated PDNGW down

Table 82. Associated PDNGW down alarm

Associated PDNGW down
pdnGwAssociationDown
1953
Critical
From the event code 1953 an alarm is raised for every event. A single event triggers a single alarm.
"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"= "NA" "gtpclp"="5.5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
[{srcProcess}] Association with PDN GW with IP [{pgwlp}] from {produce.short.name} [{SCGMgmtlp}] down
This alarm is triggered when the association with PDN GW is down due to echo request time out or it fails to send messages to PDN GW.

Table 82. Associated PDNGW down alarm

Recommended Actions	Check the interface from the controller to PDN GW in the web interface
	to ensure it is reachable.

# Create session response failed

Table 83. Create session response failed alarm

Alarm	Create session response failed
Alarm Type	createSessionResponseFailed
Alarm Code	1954
Severity	Major
Aggregation Policy	From the event code 1954 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "wlanld"="1" "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5"  "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787" "apn"="ruckus.com" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	[{srcProcess}] Create Session response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This alarm is triggered when create session response from PDN GW fails as per the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

#### Decode failed

Table 84. Decode failed alarm

Alarm	Decode failed
Alarm Type	decodeFailed
Alarm Code	1955
Severity	Major
Aggregation Policy	From the event code 1955 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"= "NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Decode of message received from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed.
Description	This alarm is triggered when decoding of messages received from PDN GW fails.
Recommended Actions	Download the SM log to check the cause of the error.

# Modify bearer response failed

Table 85. Modify bearer response failed alarm

Alarm	Modify bearer response failed
Alarm Type	modifyBearerResponseFailed
Alarm Code	1956
Severity	Major
Aggregation Policy	From the event code 1956 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "wlanld"="1" "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5"  "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787" "apn"="ruckus.com" "cause"=" <reason failure="" for="">"</reason>

Table 85. Modify bearer response failed alarm

Displayed on the web interface	[{srcProcess}] Modify Bearer Response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This alarm is reported when the modify bearer response from PDN GW fails as per the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

# Delete session response failed

Table 86. Delete session response failed alarm

Alarm	Delete session response failed
Alarm Type	deleteSessionResponseFailed
Alarm Code	1957
Severity	Major
Aggregation Policy	From the event code 1957 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "wlanld"="1" "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5"  "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787" "apn"="ruckus.com" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	[{srcProcess}] Delete Session response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	Delete session response from PDN GW fails due to the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

## Delete bearer request failed

Table 87. Delete bearer request failed alarm

Alarm	Delete bearer request failed
Alarm Type	deleteBearerRequestFailed
Alarm Code	1958
Severity	Major
Aggregation Policy	From the event code 1958 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	[{srcProcess}] Delete Bearer Request from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This alarm is triggered when the delete bearer request from PDN GW fails.
Recommended Actions	Download the SM log to check the cause of the error.

# Update bearer request failed

Table 88. Update bearer request failed alarm

Alarm	Update bearer request failed
Alarm Type	updateBearerRequestFailed
Alarm Code	1959
Severity	Major
Aggregation Policy	From the event code 1959 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	[{srcProcess}] Update bearer request from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	Update bearer request failed, decode failed.

Table 88. Update bearer request failed alarm

Recommended Actions	Download the SM log to check the cause of the error.

# CGF server not configured

Table 89. CGF server not configured alarm

Alarm	CGF server not configured
Alarm Type	cgfServerNotConfigured
Alarm Code	1960
Severity	Major
Aggregation Policy	From the event code 1960 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="CIP" "realm"= "NA" "ggsnlp"="10.10.10.10" "SCGMgmtlp"="2.2.2.2" "radSrvrlp"="7.7.7.7" "cgfSrvrlP" = "1.1.1.1"
Displayed on the web interface	CGF server IP [{cgfSrvrlp}] received from PDN GW/GGSN with IP [{ggsnlp}] on {produce.short.name} [{SCGMgmtlp}] is not configured
Description	This alarm is triggered when the IP address of the CGF server received from GGSN/PDNGW is not configured in the controller web interface and therefore is not considered.
Recommended Actions	Check the controller web interface to ensure that the IP address of the CGF server received from PDNGW/GGSN is configured. If it is not configure navigate to Configurations > Services and Profiles > CGF Services to create the configuration.

NOTE: Refer to Gn/S2a Interface Events.

## **GR Interface Alarms**

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to GR interface.

- Destination not reachable
- App server down
- App server inactive
- · Association establishment failed
- Association down
- Outbound routing failure
- Did allocation failure

#### Destination not reachable

Table 90. Destination not reachable alarm

Alarm	Destination not reachable
Alarm Type	destNotReacheable
Alarm Code	1618
Severity	Critical
Aggregation Policy	From the event code 1618 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1620.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="hip", "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is unavailable
Description	This alarm is triggered when the point code is unreachable due to a pause indicator.
Recommended Actions	Manual intervention is required.

# App server down

Table 91. App server down alarm

Alarm	App server down
Alarm Type	appServerDown
Alarm Code	1623
Severity	Critical
Aggregation Policy	From the event code 1623 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1625.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "routingContext" ="1", "pointCode"="1.1.1", "SSN" = "7"
Displayed on the web interface	Application Server Down, Routing Context [{routingContext}], local Point Code [{pointCode}], local SSN [{SSN}]
Description	This alarm is triggered when the local application server is down due to the receipt of ASP down (ASPDN) or ASP down acknowledgment (ASPDN ACK) received from the remote IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

# App server inactive

Table 92. App server inactive alarm

Alarm	App server inactive
Alarm Type	appServerInactive
Alarm Code	1624
Severity	Critical
Aggregation Policy	From the event code 1624 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1625.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "routingContext" ="1", "pointCode"="1.1.1", "SSN" = "7"

Table 92. App server inactive alarm

Displayed on the web interface	Application Server Inactive, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This alarm is triggered when the local application server is inactive due to application service provider inactive (ASP_INACTIVE) or application service provider inactive acknowledgment (ASP_INACTIVE_ACK) from remote IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

### Association establishment failed

Table 93. Association establishment failed alarm

Alarm	Association establishment failed
Alarm Type	assocEstbFailed
Alarm Code	1626
Severity	Critical
Aggregation Policy	From the event code 1626 an alarm is raised for every five events or events occurring within a span of 2 minutes.
Auto Clearance	The alarm code is auto cleared with the event code 1628.
Attribute	"mvnold"="3", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="hip", "srcIP"="10.1.4.10", "srcPort"="2960",
	"destIP"="10.1.4.20", "destPort"="2960"
Displayed on the web interface	Unable to establish SCTP association. srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This alarm is triggered when it is unable to establish an association to the IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

#### Association down

Table 94. Association down alarm

Alarm	Association down
Alarm Type	assocDown
Alarm Code	1627
Severity	Critical
Aggregation Policy	From the event code 1627 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1628.
Attribute	"mvnold"="3", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "srcIP"="10.1.4.10", "srcPort"="2960", "destIP"="10.1.4.20", "destPort"="2960"
Displayed on the web interface	SCTP association DOWN. srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This alarm is triggered when the stream control transmission protocol (SCTP) association is down.
Recommended Actions	Manual intervention is required.

## Outbound routing failure

Table 95. Outbound routing failure alarm

Alama	Outle auged valuting failure
Alarm	Outbound routing failure
Alarm Type	outboundRoutingFailure
Alarm Code	1636
Severity	Critical
Aggregation Policy	From the event code 1636 an alarm is raised for every 10 events. Alarm is raised for 10 or more events or events occurring within a span of 60 seconds.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "operation"="updateGprsLocationReq", "hlrInstance"=" Operator_HLR", "uelmsi "=" 04844624203918"
Displayed on the web interface	Unable to route [{operation}] for IMSI [{uelmsi}] to HLR [{hlrInstance}]

Table 95. Outbound routing failure alarm

Description	This alarm is triggered when a transaction capabilities application part (TCAP) message is unable to route to its destination.
Recommended Actions	Manual intervention is required.

### Did allocation failure

Table 96. Did allocation failure alarm

Λ I ===	Diel alle estion feilum
Alarm	Did allocation failure
Alarm Type	didAllocationFailure
Alarm Code	1637
Severity	Critical
Aggregation Policy	From the event code 1637 an alarm is raised for every 50 events. Alarm is raised for 50 or more events or events occurring within a span of 60 seconds.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip"
Displayed on the web interface	HIP unable to allocate new dialogue
Description	This alarm is triggered when it is unable to allocate a dialogue identifier for a new transaction. This indicates an overload condition.
Recommended Actions	Manual intervention is required.

NOTE: Refer to Gr Interface Event.

#### **IPMI Alarms**

**NOTE:** This section is not applicable for vSZ-H.


Following are the alarms related to IPMIs.

- ipmiVoltage
- ipmiThempBB
- ipmiThempFP
- ipmiThempIOH
- ipmiThempMemP
- ipmiThempPS
- ipmiThempP
- ipmiThempHSBP
- ipmiFan
- ipmiPower
- ipmiCurrent
- ipmiFanStatus
- ipmiPsStatus
- ipmiDrvStatus

The controller has redundant six-fan cooling with four 80x38mm fans and two 60x38mm fans. There are four main cooling zones, as shown in Figure 3:

- Zone 1 contains fans 0 and 1, which cool CPU1 and all the components in this
  zone.
- Zone 2 contains fans 2 and 3, which cool CPU2, low-profile PCI cards, and all the other components in this zone.
- Zone 3 contains fans 4 and 5, which cool full-height/length PCI cards and all the other components in this area.
- Zone 4 is cooled by the power supply fans. This zone contains the SAS RAID and SAS/SATA boards. Cooling redundancy in this zone is only achieved when there are two power supplies installed.

Figure 3. Server Cooling Areas

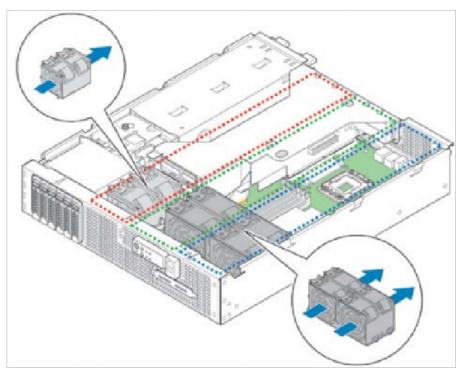

# ipmiVoltage

Table 97. ipmiVoltage alarm

Alarm	ipmiVoltage
Alarm Type	ipmiVotage
Alarm Code	901
Severity	Major
Aggregation Policy	From the event code 901 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 926.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}]

Table 97. ipmiVoltage alarm

Description	This alarm is triggered due to under/over voltage on the control plane.
	Baseboard threshold temperatures are:
	Critical high - 66 <sup>0</sup> C
	Non critical high - 61 <sup>0</sup> C
	Non critical low - 10 <sup>0</sup> C
	Critical low - 5 <sup>0</sup> C
Recommended Actions	Replace the power supply cord. If it does not work, the motherboard needs replacement.

# ipmiThempBB

Table 98. ipmiThempBB alarm

Alarm	ipmiThempBB
Alarm Type	ipmiThempBB
Alarm Code	902
Severity	Major
Aggregation Policy	From the event code 902 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 927.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Baseboard temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered due to the increase/decrease of the baseboard temperature status of the control plane. Baseboard threshold temperatures are in the range of 10 <sup>0</sup> Celsius to 61 <sup>0</sup> Celsius. The default threshold is 61 <sup>0</sup> C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

# ipmiThempFP

Table 99. ipmiThempFP alarm

Alarm	ipmiThempFP
Alarm Type	ipmiThempFP
Alarm Code	903
Severity	Major
Aggregation Policy	From the event code 903 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 928.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered due to increase/decrease of the front panel temperature status of the control plane. Front panel threshold temperatures are in the range of 5 <sup>0</sup> Celsius to 44 <sup>0</sup> Celsius. The default threshold is 44 <sup>0</sup> C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

# ipmiThempIOH

Table 100. ipmiThempIOH alarm

Alarm	ipmiThempIOH
Alarm Type	ipmiThemplOH
Alarm Code	904
Severity	Major
Aggregation Policy	From the event code 904 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 929.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}]

Table 100. ipmiThemplOH alarm

Description	This alarm is triggered when the chip set temperature status on the control plane increases/decreases. IOH thermal margin threshold temperatures are in the range of -20 <sup>0</sup> Celsius to 5 <sup>0</sup> Celsius. The default threshold is 5 <sup>0</sup> C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

# ipmiThempMemP

Table 101. ipmiThempMemP alarm

Alarm	ipmiThempMemP
Alarm Type	ipmiThempMemP
Alarm Code	905
Severity	Major
Aggregation Policy	From the event code 905 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 930.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's processor memory shows the status as either an increase/decrease in temperature. Process 1 memory thermal margin threshold temperatures are in the range of -20 <sup>0</sup> Celsius to 5 <sup>0</sup> Celsius. The default threshold is 5 <sup>0</sup> C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

# ipmiThempPS

Table 102. ipmiThempPS alarm

Alarm	ipmiThempPS
Alarm Type	ipmiThempPS
Alarm Code	906
Severity	Major
Aggregation Policy	From the event code 906 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 931.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's power supply shows the status as either an increase/decrease in temperature. Power supply 1 and power supply 2 threshold temperatures are in the range of -20 <sup>0</sup> Celsius to 5 <sup>0</sup> Celsius. The default threshold is 5 <sup>0</sup> C.
Recommended Actions	Replace the power supply cord. If the problem persists, decrease the ambient temperature.

# ipmiThempP

Table 103. ipmiThempP alarm

Alarm	ipmiThempP
Alarm Type	ipmiThempP
Alarm Code	907
Severity	Major
Aggregation Policy	From the event code 907 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 932.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the reading surpasses threshold value is <= 55° Celsius. The default threshold is 55°C.
Recommended Actions	Check and replace the CPU fan module if required. Decrease the ambient temperature if the fan module is working.

# ipmiThempHSBP

Table 104. ipmiThempHSBP alarm

Alarm	ipmiThempHSBP
Alarm Type	ipmiThempHSBP
Alarm Code	908
Severity	Major
Aggregation Policy	From the event code 908 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 933.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's hot swap backplane shows the status as either an increase/decrease in temperature in the range of 9 <sup>0</sup> Celsius to 55 <sup>0</sup> Celsius. The default threshold is 55 <sup>0</sup> C.

Table 104. ipmiThempHSBP alarm

Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan
	module is working.

# ipmiFan

Table 105. ipmiFan alarm

Alarm	ipmiFan
Alarm Type	ipmiFan
Alarm Code	909
Severity	Major
Aggregation Policy	From the event code 909 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 934.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's fan module status is shown.
Recommended Actions	Replace the fan module.

# ipmiPower

Table 106. ipmiPower alarm

Alarm	ipmiPower
Alarm Type	ipmiPower
Alarm Code	910
Severity	Major
Aggregation Policy	From the event code 910 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 935.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}]

#### Table 106. ipmiPower alarm

Description	This alarm is triggered when the control plane's power supply status is shown as a low/high input.
Recommended Actions	Replace the power supply cord.

# ipmiCurrent

Table 107. ipmiCurrent alarm

Alarm	ipmiCurrent
Alarm Type	ipmiCurrent
Alarm Code	911
Severity	Major
Aggregation Policy	From the event code 911 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 936.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] +12V% of maximum current output [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's power supply shows the status as maximum voltage.
Recommended Actions	Replace the power supply cord. If the problem persists, replace the mother board.

# ipmiFanStatus

Table 108. ipmiFanStatus alarm

Alarm	ipmiFanStatus
Alarm Type	ipmiFanStatus
Alarm Code	912
Severity	Major
Aggregation Policy	From the event code 912 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 937.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx

Table 108. ipmiFanStatus alarm

Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's fan module shows the status as not working.
Recommended Actions	Replace the fan module.

# ipmiPsStatus

Table 109. ipmiPsStatus alarm

Alarm	ipmiPsStatus
Alarm Type	ipmiPsStatus
Alarm Code	913
Severity	Major
Aggregation Policy	From the event code 913 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 938.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's power supply status is shown as a low/high input.
Recommended Actions	Check the power supply cord. If the problem persists, replace the power supply cord.

# ipmiDrvStatus

Table 110. ipmiDrvStatus alarm

Alarm	ipmiDrvStatus
Alarm Type	ipmiDrvStatus
Alarm Code	914
Severity	Major
Aggregation Policy	From the event code 914 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 939.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's disk drive status is shown as either not working or corrupted.
Recommended Actions	The operator / user needs to replace the hard disk drive.

NOTE: Refer to IPMI Events.

# **Licensing Alarms**

NOTE: Alarms 1242 and 1243 are not applicable for vSZ-H.

Following are the alarms related to licensing.

- TTG session critical threshold
- TTG session license exhausted
- License going to expire
- Insufficient license capacity

#### TTG session critical threshold

Table 111. TTG session critical threshold alarm

Alarm	TTG session critical threshold
Alarm Type	ttgSessionCriticalThreshold
Alarm Code	1242
Severity	Critical
Aggregation Policy	From the event code 1242 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtlp}] have reached critical level.
Description	This alarm is triggered when the number of user equipment attached to the system has reached the critical threshold limit.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

#### TTG session license exhausted

Table 112. TTG session license exhausted alarm

Alarm	TTG session license exhausted
Alarm Type	ttgSessionLicenseExausted
Alarm Code	1243
Severity	Critical
Aggregation Policy	From the event code 1243 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed of {produce.short.name} [{SCGMgmtlp}] have been exhausted for all sessions.
Description	This alarm is triggered when the number of user equipment attached to the system has exceeded the license limit.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

## License going to expire

Table 113. License going to expire alarm

License going to expire
licenseGoingToExpire
1255
Major
From the event code 1255 an alarm is raised for every event. A single event triggers a single alarm.
"nodeName"="xxx", "licenseType"=" xxx"
The [{licenseType}] on node [{nodeName}] will expire on [{associationTime}].
This alarm is triggered when the validity of the license is going to expire.
Check the validity of licenses. You would need to purchase additional licenses if validity expires.

## Insufficient license capacity

Table 114. Insufficient license capacity alarm

Alarm	Insufficient license capacity
Alarm Type	apConnectionTerminatedDueToInsufficientLicense
Alarm Code	1256
Severity	Major
Aggregation Policy	From the event code 1256 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"licenseType"=" xxx"
Displayed on the web interface	Insufficient [{licenseType}] license is detected and it will cause existing AP connections to terminate.
Description	This alarm is triggered when connected APs are rejected due to insufficient licenses.
Recommended Actions	Check the number of licenses. You would need to purchase additional licenses due to insufficient number of licenses.

NOTE: Refer to Licensing Interface Events.

## PMIPv6 Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to PMIPv6.

- Config update failed
- LMA ICMP unreachable
- LMA failed over
- DHCP connection lost

## Config update failed

Table 115. Config update failed alarm

Alarm	Config update failed
Alarm Type	updateCfgFailed
Alarm Code	5004
Severity	Major
Aggregation Policy	From the event code 5004 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2",
	"cause"="reason",
Displayed on the web interface	Failed to apply configuration [{cause}] in PMIPv6 process at {produce.short.name}[{SCGMgmtlp}]
Description	This alarm is logged when the PMIPv6 gets an error or a negative acknowledgment or improper/incomplete information from the D-bus client.
Recommended Actions	Check to ensure that the IP address of the CGF server received from PDNGW/GGSN is configured in the controller web interface > Configurations > Services and Profiles > CGF. Configure the IP address is it is missing.

#### LMA ICMP unreachable

Table 116. LMA ICMP unreachable alarm

Alarm	LMA ICMP unreachable
Alarm Type	ImalcmpUnreachable
Alarm Code	5006
Severity	Major
Aggregation Policy	From the event code 5006 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5005.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2", "lmalp"="1.1.1.1"
Displayed on the web interface	[{Imalp}] ICMP unreachable on {produce.short.name} [{SCGMgmtlp}].
Description	This alarm is triggered when the PMIPv6 daemon cannot connect to the LMA server through the internet control message protocol (ICMP) packet.
Recommended Actions	Check the network connectivity between local mobility anchor (LMA) and data plane. Also check the LMA server status from the LMA connectivity page on the controller web interface.

## LMA failed over

Table 117. LMA failed over alarm

Alarm	LMA failed over
Alarm Type	ImaFailOver
Alarm Code	5008
Severity	Major
Aggregation Policy	From the event code 5008 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2", "lmalp"="1.1.1.1"
Displayed on the web interface	[{Imalp}] Failover on {produce.short.name} [{ctrlBladeMac}]

Table 117. LMA failed over alarm

·	This alarm is logged when the standby LMA transits to an active mode. This includes the control plane identifier of the newly active LMA.
Recommended Actions	Check the LMA server status from the LMA connectivity page.

#### **DHCP** connection lost

**NOTE:** This alarm is not applicable for vSZ-H.

Table 118. DHCP connection lost alarm

Alarm	DHCP connection lost
Alarm Type	lostCnxnToDHCP
Alarm Code	5102
Severity	Major
Aggregation Policy	From the event code 5102 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5101.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2",
Displayed on the web interface	PMIPv6 process cannot connect to DHCP server on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is logged when the transmission control protocol (TCP) connection is lost or when the control plane fails to complete the configuration procedure.
Recommended Actions	Download the PMIPv6d and dynamic host configuration protocol (DHCP) server logs from the controller to check the error cause.

NOTE: Refer to PMIPv6 Events.

## **Session Alarms**

NOTE: This section is not applicable for vSZ-H.

Following is the alarm related to session.

Binding failed

## Binding failed

Table 119. Binding failed alarm

Alarm	Binding failed
Alarm Type	bindingFailure
Alarm Code	5010
Severity	Major
Aggregation Policy	From the event code 5010 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5009.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2",
	"Imalp"="1.1.1.1", "ueMacAddr"="aa:bb:cc:gg:hh:ii",
	"dataBladelp"="3.3.3.3", "uelpAddr"="5.5.5.5"
Displayed on the web	Binding for [{ueMacAddr}] UE binding update failure on
interface	{produce.short.name}-D [{dataBladelp}]. Failure Cause [{cause}].
Description	This alarm is logged when the mobile node binding fails.
Recommended Actions	No action is required.

NOTE: Refer to Session Events.

## **STA Interface Alarms**

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to STA interface.

- STA authentication failed transport down
- STA authentication failed failure response
- STA authentication failed decode failure
- STA re-authorization failed
- STA response timer expired
- Retransmission exhausted

### STA authentication failed transport down

Table 120. STA authentication failed transport down alarm

Alarm	STA authentication failed transport down
Alarm Type	staAuthFailedTransDown
Alarm Code	1551
Severity	Major
Aggregation Policy	From the event code 1551 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with AAA [{aaaSrvrlp}] failed as Transport is down
Description	This alarm is triggered when the authentication procedure with external AAA server failed and the STA interface transport is down.
Recommended Actions	The operator should check the interfaces from the controller to 3rd generation partnership project (3GPP) AAA server. Alternatively, check if the 3GPP AAA server is down.

## STA authentication failed failure response

Table 121. STA authentication failed failure response alarm

Alarm	STA authentication failed failure response
Alarm Type	staAuthFailedFailureResp
Alarm Code	1552
Severity	Major
Aggregation Policy	From the event code 1552 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345" "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode" = "Decode Failed"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with 3GPP AAA [{aaaSrvrlp}] failed, DEA with failure code [{resultCode}]
Description	This alarm is triggered when the authentication procedure with external AAA server failed. The diameter EAP answer (DEA) received from 3GPP AAA server failed with result code.
Recommended Actions	The operator should check the STA application logs. This could be a temporary failure response from the 3GPP AAA server.

#### STA authentication failed decode failure

Table 122. STA authentication failed decode failure alarm

Alarm	STA authentication failed decode failure
Alarm Type	staAuthFailedDecodeFailure
Alarm Code	1553
Severity	Major
Aggregation Policy	From the event code 1553 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA" "realm"="wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode" ="Decode Failed"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with 3GPP AAA [{aaaSrvrlp}] failed, DEA decode failed
Description	This alarm is triggered when the authentication procedure with external AAA server failed. The DEA received from 3GPP AAA server failed with result code.
Recommended Actions	The operator should check the STA application logs. This could be a temporary failure response from the 3GPP AAA server.

#### STA re-authorization failed

Table 123. STA re-authorization failed alarm

Alarm	STA re-authorization failed
Alarm Type	staReAuthFailed
Alarm Code	1558
Severity	Major
Aggregation Policy	From the event code 1558 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"

Table 123. STA re-authorization failed alarm

Displayed on the web interface	[{srcProcess}] Re-Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] from 3GPP AAA [{aaaSrvrlp}] failed
Description	This alarm is triggered when the 3GPP AAA server initiated reauthorization re-auth request (RAR) fails.
Recommended Actions	The operator should check the STA application logs. Also check the version of 3GPP specifications supported by 3GPP AAA server.

## STA response timer expired

Table 124. STA response timer expired alarm

Alarm	STA response timer expired
Alarm Type	staResponseTimerExpired
Alarm Code	1559
Severity	Major
Aggregation Policy	From the event code 1559 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Tx timer expired no response received from 3GPP AAA [{aaaSrvrlp}]
Description	This alarm is triggered when transaction timer expires. There is no response from 3GPP AAA server for the request sent by {produce.short.name}.
Recommended Actions	The operator should check the interfaces from the controller to 3GPP AAA server. Alternatively, check if the 3GPP AAA server is down.

#### Retransmission exhausted

Table 125. Retransmission exhausted alarm

Alarm	Retransmission exhausted
Alarm Type	retransmitExausted
Alarm Code	1560
Severity	Major
Aggregation Policy	From the event code 1560 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Retransmission for [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] to 3GPP AAA [{aaaSrvrlp}] failed. Retransmission of messages to 3GPP
Description	This alarm is triggered when retransmission to 3GPP AAA server fails and there is no response from 3GPP AAA server.
Recommended Actions	The operator should check the interfaces from the controller to 3GPP AAA server. Alternatively, check if the 3GPP AAA server is down.

NOTE: Refer to STA Interface Events.

## System Alarms

Following are the alarms with the system log severity.

NOTE: {produce.short.name} refers to SCG or vSZ-H

- No LS responses
- LS authentication failure
- {produce.short.name} failed to connect to LS
- Syslog server unreachable
- Process restart
- Service unavailable
- Keepalive failure
- Resource unavailable
- HIP failed over
- Diameter initialization error
- Diameter peer transport failure
- Diameter CER error
- Diameter peer add error
- Diameter peer remove successful
- Diameter realm entry error
- Diameter failover to alternate peer
- Diameter fail back to peer
- Diameter CEA unknown peer
- Diameter no common application
- Process initiated
- PMIPv6 unavailable
- Memory allocation failed

## No LS responses

Table 126. No LS responses alarm

Alarm	No LS responses
Alarm Type	scgLBSNoResponse
Alarm Code	721
Severity	Major
Aggregation Policy	From the event code 721 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtlp}] no response from LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the controller does not get a response while connecting to the location based service.
Recommended Actions	Check if location server is working properly.

#### LS authentication failure

Table 127. LS authentication failure alarm

Alarm	LS authentication failure
Alarm Type	scgLBSAuthFailed
Alarm Code	722
Severity	Major
Aggregation Policy	From the event code 722 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtlp}] authentication failed: url=[{url}], port=[{port}]
Description	This alarm is triggered due to the authentication failure on connecting to the location based service.
Recommended Actions	Check the location server password.

## {produce.short.name} failed to connect to LS

Table 128. {produce.short.name} failed to connect to LS alarm

Alarm	{produce.short.name} failed to connect to LS
Alarm Type	scgLBSConnectFailed
Alarm Code	724
Severity	Major
Aggregation Policy	From the event code 724 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 723.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtlp}] connection failed to LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the controller fails to connect to the location based service.
Recommended Actions	Check the location service configuration. Also check the network connectivity between the controller and location server.

## Syslog server unreachable

Table 129. Syslog server unreachable alarm

Alarm	Syslog server unreachable
Alarm Type	syslogServerUnreachable
Alarm Code	751
Severity	Major
Aggregation Policy	From the event code 751 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 750.
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "syslogServerAddress"="xxx.xxx.xxx.xxx"
Displayed on the SmartZone web interface	Syslog server [{syslogServerAddress}] is unreachable on {produce.short.name}.
Description	This alarm is triggered when the syslog server is unreachable.

Table 129. Syslog server unreachable alarm

Recommended Actions	Check the network between the controller and the syslog server.
---------------------	---

#### **Process restart**

Table 130. Process restart alarm

Alarm	Process restart
Alarm Type	processRestart
Alarm Code	1001
Severity	Major
Aggregation Policy	From the event code 1001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc",
	"realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{processName}] process got re-started on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when any process crashes and restarts.
Recommended Actions	Download the process log file from the controller web interface to understand the cause of the error.

#### Service unavailable

Table 131. Service unavailable alarm

Alarm	Service unavailable
Alarm Type	serviceUnavailable
Alarm Code	1002
Severity	Critical
Aggregation Policy	From the event code 1002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc",
	"realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{processName}] process is not stable on {produce.short.name} [{SCGMgmtlp}]

Table 131. Service unavailable alarm

Description	This alarm is triggered when the process repeatedly restarts and is unstable.
Recommended Actions	A manual intervention is required. Download the process log file from the controller web interface to find the cause of the error.

# Keepalive failure

Table 132. Keepalive failure alarm

Alarm	Keepalive failure
Alarm Type	keepAliveFailure
Alarm Code	1003
Severity	Major
Aggregation Policy	From the event code 1003 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] on {produce.short.name} [{SCGMgmtlp}] restarted [{processName}] process
Description	This alarm is triggered when the <i>mon/nc</i> restarts the process due to a keep alive failure.
Recommended Actions	Download the process log file from the controller web interface to locate the cause of the error.

## Resource unavailable

Table 133. Resource unavailable alarm

Alarm	Resource unavailable
Alarm Type	resourceUnavailable
Alarm Code	1006
Severity	Critical
Aggregation Policy	From the event code 1006 an alarm is raised for every event. A single event triggers a single alarm.

Table 133. Resource unavailable alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd",
	"realm"="NA", "SCGMgmtlp"="3.3.3.3', "cause"="xx"
Displayed on the web interface	System resource [{cause}] not available in [{srcProcess}] process at {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is generated due to unavailability of any other system resource, such as memcached.
Recommended Actions	A manual intervention is required. Check the memcached process. Also check if the <i>br1</i> interface is running.

#### HIP failed over

Table 134. HIP failed over alarm

Alarm	HIP failed over
Alarm Type	hipFailover
Alarm Code	1016
Severity	Major
Aggregation Policy	Alarm is raised for every event from event code 1016. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP",
	"realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102"
Displayed on the web interface	[{srcProcess}] Node transitioned to Active on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is logged when the standby host identity protocol (HIP) transits to an active node and is included in control plane identifier of the newly active HIP.
Recommended Actions	A manual intervention is required.

#### Diameter initialization error

NOTE: This alarm is not applicable for vSZ-H.

Table 135. Diameter initialization error alarm

	1
Alarm	Diameter initialization error
Alarm Type	dialnitilizeErr
Alarm Code	1401
Severity	Critical
Aggregation Policy	An alarm is raised for every 2events within a duration of 30 minutes.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" <application name="">" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "desc" = "Diameter Stack Initialization Failure on {produce.short.name}"</application>
Displayed on the web interface	[{srcProcess}] Diameter Stack Initialization Failure on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered due to stack initialization failure.
Recommended Actions	Check the network interface settings and port settings. The port could be in use by another application.

## Diameter peer transport failure

Table 136. Diameter peer transport failure alarm

Alarm	Diameter peer transport failure
Alarm Type	diaPeerTransportFailure
Alarm Code	1403
Severity	Major
Aggregation Policy	A single event triggers a single alarm.

Table 136. Diameter peer transport failure alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc"  = "Failed to read from peer socket"</application>
Displayed on the web interface	[{srcProcess}] Failed to read from peer [{peerName}] Transport Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the diameter stack fails to read from the peer socket and the peer transport is down.
Recommended Actions	Check if the transport is up for the peer. Peer application may not be running.

#### Diameter CER error

Table 137. Diameter CER error alarm

Alarm	Diameter CER error
Alarm Type	diaCERError
Alarm Code	1404
Severity	Critical
Aggregation Policy	A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc"  = "Failed to read from peer socket"</application>
Displayed on the web interface	[{srcProcess}] Failed to decode CER from Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the diameter stack fails to decode the capabilities exchange request (CER) received from peer.
Recommended Actions	Check if the transport is up for the peer. Peer application may not be running.

# Diameter peer add error

NOTE: This alarm is not applicable for vSZ-H.

#### Table 138. Diameter peer add error alarm

Alarm	Diameter peer add error					
Alarm Type	diaPeerAddError					
Alarm Code	1407					
Severity	Critical					
Aggregation Policy	A single event triggers a single alarm.					
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc"  = "Failed to add Peer" "cause"="Cause Value"</application>					
Displayed on the web interface	[{srcProcess}] Failed to add Peer [{peerName}], Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]					
Description	This alarm is triggered when the diameter stack fails to add a peer to the peer table.					
Recommended Actions	Check if the peer IP address is reachable and if the peer responds to the configured port.					

## Diameter peer remove successful

**NOTE:** This alarm is not applicable for vSZ-H.

Table 139. Diameter peer remove successful alarm

Alarm	Diameter peer remove successful					
Alarm Type	diaPeerRemoveSuccess					
Alarm Code	1409					
Severity	Major					
Aggregation Policy	A single event triggers a single alarm.					
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com""desc"  = "Peer removal success"</application>					
Displayed on the web interface	[{srcProcess}] Peer [{peerName}] Realm [{peerRealmName}] removal is successful on {produce.short.name} [{SCGMgmtlp}]					
Description	This alarm is triggered when the peer is removed successfully from the table. The remote peer sends a diameter disconnect peer request (DPR) with the cause of not wanting to talk.					
Recommended Actions	Ensure that the peer removal is intentional. It is also removed when the peer sends a cause message.					

## Diameter realm entry error

Table 140. Diameter realm entry error alarm

Alarm	Diameter realm entry error			
Alarm Type	aRealmEntryErr			
Alarm Code	1410			
Severity	Major			
Aggregation Policy	A single event triggers a single alarm.			

Table 140. Diameter realm entry error alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"=" <application name="">" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerRealmName" = "organization.com" "peerName" = "OCS1" "desc" = "Failed to add route for Realm"</application>
Displayed on the web interface	[{srcProcess}] Failed to add route for Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered due to realm route entry add error. This may arise when the realm entry exists and another realm entry is added. Creating two diameter services with same realm name causes this problem.
Recommended Actions	Ensure that peer supports the application for the given realm and is up and running.

## Diameter failover to alternate peer

Table 141. Diameter failover to alternate peer alarm

Alarm	Diameter failover to alternate peer					
Alarm Type	diaFailOverToAltPeer					
Alarm Code	1411					
Severity	Major					
Aggregation Policy	A single event triggers a single alarm.					
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerName"=ÖCS1  "peerRealmName" = "organization.com" "altPeerName" = "OCS2"  "altPeerRealmName" = "india.internal.net" "desc" = "Fwd to alt peer"</application>					
Displayed on the web interface	[{srcProcess}] Fwd from Peer [{peerName}] to AltPeer [{altPeerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]					
Description	This alarm is triggered due to retransmission to an alternate peer.					

Table 141. Diameter failover to alternate peer alarm

Recommended Actions	Verify that the failover has occurred to the alternate peer and the reques			
	is processed by the same peer. Also verify if the primary peer is havir			
	a problem or is not reachable.			

## Diameter fail back to peer

Table 142. Diameter fail back to peer alarm

Alarm	Diameter fail back to peer				
Alarm Type	diaFailbackToPeer				
Alarm Code	412				
Severity	Major				
Aggregation Policy	A single event triggers a single alarm.				
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerName"=ÖCS1  "peerRealmName" = "organization.com" "altPeerName" = "OCS2"  "altPeerRealmName" = "india.internal.net" "desc" = "Failback to main peer"</application>				
Displayed on the web interface	[{srcProcess}] Failback to Main Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]				
Description	This alarm is triggered due to retransmission to the main peer in case of a failover.				
Recommended Actions	Verify that the primary peer is restored and the request is processed by the primary peer.				

## Diameter CEA unknown peer

**NOTE:** This alarm is not applicable for vSZ-H.

Table 143. Diameter CEA unknown peer alarm

Alarm	Diameter CEA unknown peer				
Alarm Type	diaCEAUnknownPeer				
Alarm Code	1414				
Severity	Critical				
Aggregation Policy	A single event triggers a single alarm.				
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="SessMgr" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerName"=ÖCS8 "peerRealmName" = "organization.com" "desc" = "CEA received from Unknown peer"				
Displayed on the web interface	[{srcProcess}] CEA received from Unknown Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]				
Description	This alarm is triggered when the capabilities exchange answer (CEA) is received from an unknown peer.				
Recommended Actions	Verify that the origin host received from capabilities exchange answer (CEA) is not in the remote service configuration.				

## Diameter no common application

Table 144. Diameter no common application alarm

Alarm	Diameter no common application			
Alarm Type	iaNoCommonApp			
Alarm Code	1415			
Severity	Critical			
Aggregation Policy	A single event triggers a single alarm.			

Table 144. Diameter no common application alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"=" <application name="">" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerName"=ÖCS1 "peerRealmName" = "organization.com""desc" = "No common App with peer"</application>
Displayed on the web interface	[{srcProcess}] No common App with Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the common application is not with the peer.
Recommended Actions	Verify that the peer is in the remote service configuration and is sending the capability negotiation message that the authentication application identifier is not compliant to the remote service.

## **Process initiated**

NOTE: Th		

Table 14	45. Pi	rocess	initiated	a	arm
----------	--------	--------	-----------	---	-----

Alarm	Process initiated
Alarm Type	processInit
Alarm Code	5001
Severity	Major
Aggregation Policy	From the event code 5001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process got re-started on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is logged when PMIPv6 process restarts.
Recommended Actions	A manual intervention is required. Download the PMIPv6d log file from the controller to check the cause of error.

#### PMIPv6 unavailable

NOTE: This alarm is not applicable for vSZ-H.

#### Table 146. PMIPv6 unavailable alarm

Table 116. 11ml ve dhavallable didill	
Alarm	PMIPv6 unavailable
Alarm Type	pmipUnavailable
Alarm Code	5002
Severity	Critical
Aggregation Policy	From the event code 5002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBfladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process is not stable on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is logged when the PMIPv6 process repeatedly restarts and is not stable.
Recommended Actions	Check the PMIPv6d application log and status from the controller web interface.

# Memory allocation failed

NOTE: This alarm is not applicable for vSZ-H.

Table 147. Memory allocation failed alarm

Alarm	Memory allocation failed
Alarm Type	unallocatedMemory
Alarm Code	5003
Severity	Critical
Aggregation Policy	From the event code 5003 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Insufficient Heap Memory in PMIPv6 process at {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is logged when the memory allocation fails in the PMIPv6 process.
Recommended Actions	Check the PMIPv6d application log and status from the controller web interface.

NOTE: Refer to System Alarms.

## **Threshold Alarms**

Following are the alarms related to threshold system set.

- CPU threshold exceeded
- Memory threshold exceeded
- Disk usage threshold exceeded
- License threshold exceeded
- Rate limit for TOR surpassed
- The number of users exceeded its limit
- The number of devices exceeded its limit

#### CPU threshold exceeded

Table 148. CPU threshold exceeded alarm

Alarm	CPU threshold exceeded
Alarm Type	cpuThresholdExceeded
Alarm Code	950
Severity	Critical
Aggregation Policy	From the event code 950 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 953.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This alarm is triggered when the CPU usage exceeds the threshold limit. The CPU threshold value is 80%.
Recommended Actions	Check CPU/memory/disk information for any unexpected value. Keep monitoring the CPU for higher values than the threshold or set it to only one peak value. If the CPU value is high, please take a snapshot log, containing the information and send it to Ruckus Wireless support.  Alternatively, if an application is abnormal, restart the service or restart the controller. This may resolve the issue.

## Memory threshold exceeded

Table 149. Memory threshold exceeded alarm

Alarm	Memory threshold exceeded
Alarm Type	memoryThresholdExceeded
Alarm Code	951
Severity	Critical
Aggregation Policy	From the event code 951 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 954.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This alarm is triggered when the memory usage exceeds the threshold limit. The memory threshold value is 85% for SCG and 90% for vSZ-H.
Recommended Actions	Check CPU/memory/disk information for any unexpected value. Keep monitoring the CPU for higher values than the threshold or set it to only one peak value. If the CPU value is high, please take a snapshot log, containing the information and send it to Ruckus Wireless support. Alternatively, if an application is abnormal, restart the service or restart the controller. This may resolve the issue.

## Disk usage threshold exceeded

Table 150. Disk usage threshold exceeded alarm

Alarm	Disk usage threshold exceeded
Alarm Type	diskUsageThresholdExceeded
Alarm Code	952
Severity	Critical
Aggregation Policy	From the event code 952 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 955.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"

Table 150. Disk usage threshold exceeded alarm

Displayed on the web interface	Disk usage threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This alarm is triggered when the disk usage exceeds the threshold limit. The disk threshold value is 80%.
Recommended Actions	Check the backup files for disk usage. Each backup file may occupy a large disk space based on the database size. If there are multiple backup files/versions in the controller, it is recommended to delete the older backup files to free disk usage. If the problem persists, please take a screen shot and send it to Ruckus Wireless support.

## License threshold exceeded

Table 151. License threshold exceeded alarm

Alarm	License threshold exceeded
Alarm Type	licenseThresholdExceeded
Alarm Code	960
Severity	Critical 90%
	Major 80%
Aggregation Policy	From the event code 960 an alarm is raised for every event. A single
	event triggers a single alarm.
Attribute	"perc"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "nodeName"="box1",
	"licenseType"="SG00"
Displayed on the web	[{licenseType}] limit reached at [{perc}%].
interface	
Description	This alarm is triggered when maximum number of licenses is utilized.
Recommended Actions	Check the license purchase and usage numbers. Alternatively, you
	would need to buy new licenses.

## Rate limit for TOR surpassed

Table 152. Rate limit for TOR surpassed alarm

Alarm	Rate limit for TOR surpassed
Alarm Type	rateLimitTORSurpassed
Alarm Code	1302
Severity	Critical
Aggregation Policy	From the event code 1302 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1301.
Attributef	"mvnold"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "UserName"=abc@xyz.com, "realm"="wlan.3gppnetwor" "SCGMgmtlp"="2.2.2.2.2", "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct", "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000, "THRESHOLD"="500", "TOR"="501"
Displayed on the web interface	Maximum Outstanding Requests (MOR) surpassed for AAA Server [{aaaSrvrlp}] and ServerType [{AAAServerType}]. Dropping requests to be proxied to AAA.
Description	This alarm is triggered when maximum outstanding requests (MOR) is surpassed.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

#### The number of users exceeded its limit

Table 153. The number of users exceeded its limit

Alarm	The number of users exceeded its limit
Alarm Type	tooManyUsers
Alarm Code	7003
Severity	Major
Aggregation Policy	From the event code 7001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	No attributes for this alarm.

Table 153. The number of users exceeded its limit

Displayed on the web interface	The number of users exceed the specified limit.
Description	This alarm is triggered when the number of users exceeds the specified limit.
Recommended Actions	No action is required.

## The number of devices exceeded its limit

Table 154. The number of devices exceeded its limit alarm

Alews	The provide as of also is an assessment its line it
Alarm	The number of devices exceeded its limit
Alarm Type	tooManyDevices
Alarm Code	7004
Severity	Major
Aggregation Policy	From the event code 7002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	No attributes for this alarm.
Displayed on the web interface	The number of devices exceeded the limit.
Description	This alarm is triggered the number of devices exceeds the specified limit.
Recommended Actions	No action is required.

**NOTE:** Refer to Threshold Events.

## **Tunnel Alarms - Access Point**

Following are the alarms related to tunnel.

- AP softGRE gateway not reachable
- · AP is disconnected from secure gateway
- AP secure gateway association failure

#### AP softGRE gateway not reachable

Table 155. AP softGRE gateway not reachable alarm

Alarm	AP softGRE gateway not reachable
Alarm Type	apSoftGREGatewayNotReachable
Alarm Code	614
Severity	Critical
Aggregation Policy	From the event code 614 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 613.
Attribute	"apMac"="xx:xx:xx:xx:xx", "softGREGatewayList"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach the following gateways: [{softGREGatewayList}]
Description	The AP fails to connect to the soft-GRE gateway.
Recommended Actions	Check the primary and secondary soft-GRE gateway.

## AP is disconnected from secure gateway

Table 156. AP is disconnected from secure gateway alarm

Alarm	AP is disconnected from secure gateway
Alarm Type	ipsecTunnelDisassociated
Alarm Code	661
Severity	Major
Aggregation Policy	From the event code 661 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	apMac="xx:xx:xx:xx:xx","ipsecGWAddress"="x.x.x.x"

Table 156. AP is disconnected from secure gateway alarm

Displayed on the web interface	AP [{apName&&apMac}] is disconnected from secure gateway [{ipsecGWAddress}].
Description	This alarm is triggered when the AP is disconnected from secure gateway.
Recommended Actions	No action required.

# AP secure gateway association failure

Table 157. AP secure gateway association failure alarm

Alarm	AP secure gateway association failure
Alarm Type	ipsecTunnelAssociateFailed
Alarm Code	662
Severity	Major
Aggregation Policy	From the event code 662 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 660
Attribute	apMac="xx:xx:xx:xx:xx","ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] is unable to establish secure gateway with [{ipsecGWAddress}
Description	This alarm is triggered when the AP is unable to connect to the secure gateway.
Recommended Actions	No action required.

NOTE: Refer to Tunnel Events - Access Point (AP).

**Events Types** 

4

This chapter provides information on the following types of events that the controller generates:

- 3rd Party Access Point Events
- Accounting Events
- AP Authentication Events
- AP Communication Events
- AP LBS Events
- AP Mesh Events
- AP State Change Events
- AP USB Events
- Authentication Events
- Authorization Events
- Control and Data Plane Interface
- Client Events
- Cluster Events
- Configuration Events
- Data Plane Events
- DHCP Events
- GA Interface Events
- Gn/S2a Interface Events
- Gr Interface Event
- IPMI Events
- Licensing Interface Events
- Location Delivery Events
- PMIPv6 Events
- Session Events
- STA Interface Events
- System Events
- Threshold Events
- Tunnel Events Access Point (AP)
- Tunnel Events Data Plane

# **3rd Party Access Point Events**

NOTE: This event is not applicable for vSZ-H.

Following event is related to 3rd party access points.

• 3rd party AP connected

## 3rd party AP connected

Table 158. 3rdparty AP connected event

Event	3rd party AP connected
Event Type	3rdPartyAPConnected
Event Code	1801
Severity	Debug
Attribute	"mvnold"=12,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtlp"="2.2.2.2" "apMac"="aa:bb:cc:dd:ee:aa" "aplpAddress"="10.1.4.11" "srcProcess"="radius"
Displayed on the web interface	3rd Party AP with Ip [{aplpAddress}] and MAC [{apMac}] is connected to Control plane [{ctrlBladeMac}] in zone [{zoneName}]
Description	This event occurs when a non-Ruckus AP connects to the controller.

# **Accounting Events**

**NOTE:** This event is not applicable for vSZ-H.

Following events are related to accounting.

- Accounting session started
- Accounting session start failed
- Accounting session disabled
- Accounting session stopped successfully
- Accounting session stopped failed
- Accounting session interim failed
- Accounting server not reachable
- Accounting failed over to secondary
- Accounting fallback to primary
- AP accounting message mandatory parameter missing
- Unknown realm
- AP accounting message decode failed
- AP accounting retransmission message dropped
- AP accounting response while invalid config
- AP account message drop while no accounting start message
- Unauthorized COA/DM message dropped

#### Accounting session started

**NOTE:** This event is not applicable for vSZ-H.

#### Table 159. Accounting session started event

Event	Accounting session started
Event Type	accSessStarted
Event Code	1232
Severity	Debug

Table 159. Accounting session started event

Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Accounting session started for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the accounting session starts. It is applicable for tunnel termination gateway (TTG) or packet data gateway (PDG) provided accounting process is enabled for the session.

# Accounting session start failed

Table 160. Accounting session start failed event

Event	Accounting session start failed
Event Type	accSessStartFailed
Event Code	1233
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	Accounting session could not be started for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because [{cause}]
Description	This event occurs when the accounting session fails to start. This event is applicable for TTG/PDG provided accounting process is enabled for the session.

### Accounting session disabled

NOTE: This event is not applicable for vSZ-H.

Table 161. Accounting session disabled event

Event	Accounting session disabled
Event Type	accSessDisabled
Event Code	1234
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Accounting session disabled for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the accounting is disabled for the session.

# Accounting session stopped successfully

Table 162. Accounting session stopped successfully event

Event	Accounting session stopped successfully
Event Type	accSessStopSucc
Event Code	1246
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Accounting session stopped for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}].

Table 162. Accounting session stopped successfully event

Description	This event occurs when the accounting session stops. This event is applicable for TTG/PDG provided accounting process is enabled for the
	session.

## Accounting session stopped failed

**NOTE:** This event is not applicable for vSZ-H.

Table 163. Accounting session stopped failed event

Event	Accounting session stopped failed	
Event Type	accSessStopFail	
Event Code	1247	
Severity	Debug	
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"=" <reason failure="" for="">"</reason>	
Displayed on the web interface	No Response received or Error Stopping accounting session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because [{cause}]. Accounting session locally cleared	
Description	This event occurs when the controller does not receive a response or receives an error response for accounting stop. This event is applicable for TTG/PDG provided accounting process is enabled for the session.	

# Accounting session interim failed

Table 164. Accounting session interim failed event

Event	Accounting session interim failed
Event Type	accSessInterimFail
Event Code	1248

Table 164. Accounting session interim failed event

Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	No Response received or Error response received for accounting interim request for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because [{cause}]
Description	This event occurs when the controller receives an error response for the accounting interim request. This event is applicable for TTG/PDG provided accounting process is enabled for the session.

# Accounting server not reachable

Table 165. Accounting server not reachable event

Event	Accounting server not reachable
Event Type	accSrvrNotReachable
Event Code	1602
Severity	Major
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff",
	"srcProcess"="radiusd", "realm"="wlan.3gppnetwork.org",
	"radProxylp"="7.7.7.7", "accSrvrlp"="30.30.30.30",
	"SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Accounting Server [{accSrvrlp}] not reachable from Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the controller is unable to connect to either the primary or secondary accounting server.

### Accounting failed over to secondary

**NOTE:** This event is not applicable for vSZ-H.

Table 166. Accounting failed over to secondary event

Event	Accounting failed over to secondary
Event Type	accFailedOverToSecondary
Event Code	1653
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the secondary accounting RADIUS server is available after the primary server becomes zombie or dead.

# Accounting fallback to primary

Table 167. Accounting fallback to primary event

Event	Accounting fallback to primary
Event Type	accFallbackToPrimary
Event Code	1654
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtlp"="2.2.2.2"

Table 167. Accounting fallback to primary event

Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the automatic fallback is enabled. The accounting failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.

# AP accounting message mandatory parameter missing

NOTE: T	his event	is not a	policable	for vSZ-H.
---------	-----------	----------	-----------	------------

Table 168. AP accounting message mandatory parameter missing event

Event	AP accounting message mandatory parameter missing
Event Type	apAcctMsgMandatoryPrmMissing
Event Code	1901
Severity	Critical
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "userName" = "hello@world.com", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueMsisdn"="98787", "aplpAddress"="10.1.4.11"
Displayed on the web interface	[{srcProcess}] Mandatory attribute missing in Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]
Description	This event occurs when the controller fails to the find the mandatory parameter in the RADIUS accounting message received from the AP. This is a mandatory parameter for generating the W-AN-CDR.

#### Unknown realm

NOTE: This event is not applicable for vSZ-H.

Table 169. Unknown realm event

Event	Unknown realm
Event Type	unknownRealmAccounting
Event Code	1902
Severity	Debug
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "userName"="acb@xyz.com", "SCGMgmtlp"="2.2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueMsisdn"="98787", "aplpAddress"="10.1.4.11"
Displayed on the web interface	[{srcProcess}] Failed to find realm for Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]
Description	This event occurs when the controller fails to find realm configuration for the accounting messages received from the AP.

# AP accounting message decode failed

Table 170. AP accounting message decode failed event

Event	AP accounting message decode failed
Event Type	apAcctMsgDecodeFailed
Event Code	1904
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut",
	"SCGMgmtlp"="2.2.2.2", "aplpAddress"="10.1.4.11"
Displayed on the web interface	[{srcProcess}] Malformed Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]

Table 170. AP accounting message decode failed event

Description	This event occurs when the AP accounting message decode fails due
	to receipt of a malformed packet.

# AP accounting retransmission message dropped

NOTE: This event is not applicable for vSZ-H.

Table 171. AP accounting retransmission message dropped event

-	
Event	AP accounting retransmission message dropped
Event Type	apAcctRetransmittedMsgDropped
Event Code	1908
Severity	Debug
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787" "aplpAddress"="10.1.4.11"
Displayed on the web interface	[{srcProcess}] Accounting message from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}] dropped, {produce.short.name} did not receive Accounting start message.
Description	This event occurs when the retransmitted accounting message is dropped while the call detail record is generated and the transfer to charging gateway function server is in progress.

# AP accounting response while invalid config

Table 172. AP accounting response while invalid config event

Event	AP accounting response while invalid config
Event Type	apAcctRespWhileInvalidConfig
Event Code	1909
Severity	Debug

Table 172. AP accounting response while invalid config event

Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10",  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org", "userName"="abc@xyz.com",  "SCGMgmtlp"="2.2.2.2", "aplpAddress"="10.1.4.11"
Displayed on the web interface	[{srcProcess}] sending dummy response for Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]. Configuration is incorrect in {produce.short.name} to forward received message nor to generate CDR
Description	This event occurs when the controller sends a dummy response to the AP accounting message since the configuration in the controller is incorrect. The event could either occur when forwarding received messages or when generating call detail records.

# AP account message drop while no accounting start message

Table 173. AP account message drop while no accounting start message event

Event	AP account message drop while no accounting start message
Event Type	apAcctMsgDropNoAcctStartMsg
Event Code	1910
Severity	Critical
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org", "userName"="abc@xyz.com","SCGMgmtlp"="2.2.2.2","aplpAddress" ="10.1.4.11"
Displayed on the web interface	[{srcProcess}] Dropped Accounting Packet received from AP [{aplpAddress}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]. Accounting session timer expired, stop or interim message not received, as Account Start not received from NAS/AP
Description	This event occurs when the accounting session timer expires. Stop or interim messages are not received since the account start is not received from the network access server (NAS) or access point (AP).

### Unauthorized COA/DM message dropped

Table 174. Unauthorized COA/DM message dropped event

Event	Unauthorized COA/DM message dropped
	0 11
Event Type	unauthorizedCoaDmMessageDropped
Event Code	1911
Severity	Critical
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10"
	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"
	"realm"="wlan.3gppnetwork.org" "userName"="abc@xyz.com",
	"radSrvrlp"="7.7.7.7", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Dropped CoA/DM Packet received from AAA [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}], with username [{userName}]. Received message from unauthorized AAA
Description	This event occurs when the controller receives a change of authorization (CoA) or dynamic multipoint (DM) messages from an unauthorized AAA server.

**NOTE:** Refer to Accounting Alarms.

#### **AP Authentication Events**

Following are the events related to authentication.

- Radius server reachable
- Radius server unreachable
- LDAP server reachable
- LDAP server unreachable
- AD server reachable
- AD server unreachable
- Wechat FSP authentication server reachable
- WeChat ESP authentication server unreachable
- WeChat FSP authentication server resolvable
- WeChat ESP authentication server unresolvable
- WeChat ESP DNAT server reachable
- WeChat ESP DNAT server unreachable
- WeChat ESP DNAT server resolvable
- WeChat ESP DNAT server unresolvable

#### Radius server reachable

Table 175. Radius server reachable event

Event	Radius server reachable
Event Type	radiusServerReachable
Event Code	2101
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach radius server [{ip}] successfully.
Description	This event occurs when the AP is able to reach the radius server successfully.

#### Radius server unreachable

Table 176. Radius server unreachable event

Event	Radius server unreachable
Event Type	radiusServerUnreachable
Event Code	2102
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach radius server [{ip}].
Description	This event occurs when the AP is unable to reach the radius server.
Auto Clearance	This event triggers the alarm 2102, which is auto cleared by the event code 2101

#### LDAP server reachable

Table 177. LDAP server reachable event

Event	LDAP server reachable
Event Type	IdapServerReachable
Event Code	2121
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach LDAP server [{ip}] successfully.
Description	This event occurs when AP is able to reach the lightweight directory access protocol (LDAP) server successfully.

#### LDAP server unreachable

Table 178. LDAP server unreachable event

Event	LDAP server unreachable
Event Type	IdapServerUnreachable
Event Code	2122
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach LDAP server [{ip}].
Description	This event occurs when AP is unable to reach the LDAP server.
Auto Clearance	This event triggers the alarm 2122, which is auto cleared by the event code 2121.

#### AD server reachable

Table 179. AD server reachable event

Event	AD server reachable
Event Type	adServerReachable
Event Code	2141
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach AD server [{ip}].
Description	This event occurs when AP is able to reach the active directory successfully.

#### AD server unreachable

Table 180. AD server unreachable event

Event	AD server unreachable
Event Type	adServerUnreachable
Event Code	2142
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx:,"ip"="17.0.0.12","fwVersion"="3.2.0.0.x"," model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach AD server [{ip}].
Description	This event occurs when AP is unable able to reach the active directory.
Auto Clearance	This event triggers the alarm 2142, which is auto cleared by the event code 2141.

#### Wechat ESP authentication server reachable

Table 181. Wechat ESP authentication server reachable event

Event	Wechat ESP authentication server reachable
Event Type	espAuthServerReachable
Event Code	2151
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach WeChat ESP authentication server [{ip}] successfully.
Description	This event occurs when AP successfully reaches WeChat ESP authentication server.

#### WeChat ESP authentication server unreachable

Table 182. WeChat ESP authentication server unreachable event

Event	WeChat ESP authentication server unreachable
Event Type	espAuthServerUnreachable
Event Code	2152
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach WeChat ESP authentication server [{ip}]
Description	This event occurs when AP fails to reach WeChat ESP authentication server.
Auto Clearance	This event triggers the alarm 2152, which is auto cleared by the event code 2151

#### WeChat ESP authentication server resolvable

Table 183. WeChat ESP authentication server resolvable event

Event	WeChat ESP authentication server resolvable
Event Type	espAuthServerResolvable
Event Code	2153
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","ip"="17.0.0.12"," profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to resolve WeChat ESP authentication server domain name [{dn}] to [{ip}] successfully.
Description	This event occurs when AP successfully resolves WeChat ESP authentication server domain name.

#### WeChat ESP authentication server unresolvable

Table 184. WeChat ESP authentication server unresolvable event

Event	WeChat ESP authentication server unresolvable
Event Type	espAuthServerUnResolvable
Event Code	2154
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","profileId"="1","fw Version"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816- 3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to resolve WeChat ESP authentication server domain name [{dn}] to IP.
Description	This event occurs when AP fails to resolves WeChat ESP authentication server domain name.
Auto Clearance	This event triggers the alarm 2154, which is auto cleared by the event code 2153.

#### WeChat ESP DNAT server reachable

Table 185. WeChat ESP DNAT server reachable event

Event	WeChat ESP DNAT server reachable
Event Type	espDNATServerReachable
Event Code	2161
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach WeChat ESP DNAT server [{ip}] successfully.
Description	This event occurs when AP successfully able to reach WeChat ESP DNAT server.

#### WeChat ESP DNAT server unreachable

Table 186. WeChat ESP DNAT server unreachable event

Event	WeChat ESP DNAT server unreachable
Event Type	espDNATServerUnreachable
Event Code	2162
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach WeChat ESP DNAT server [{ip}].
Description	This event occurs when AP fails to reach WeChat ESP DNAT server.
Auto Clearance	This event triggers the alarm 2162, which is auto cleared by the event code 2161

#### WeChat ESP DNAT server resolvable

Table 187. WeChat ESP DNAT server resolvable event

Event	WeChat ESP DNAT server resolvable
Event Type	espDNATServerResolvable
Event Code	2163
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","ip"="17.0.0.12"," profileId"="1","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to resolve WeChat ESP DNAT server domain name [{dn}] to [{ip}] successfully.
Description	This event occurs when AP successfully resolve WeChat ESP DNAT server domain name.

#### WeChat ESP DNAT server unresolvable

Table 188. WeChat ESP DNAT server unresolvable event

Event	WeChat ESP DNAT server unresolvable
Event Type	espDNATServerUnresolvable
Event Code	2164
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx","dn"="www.test.com","profileId"="1","fw Version"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816- 3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is unable to resolve WeChat ESP DNAT server domain name [{dn}] to IP.
Description	This event occurs when AP fails to resolve WeChat ESP DNAT server domain name.
Auto Clearance	This event triggers the alarm 2164, which is auto cleared by the event code 2163

**NOTE:** Refer to AP Authentication Alarms.

#### **AP Communication Events**

All events from AP are appended with firmware, model name, zone ID (if there is no zone ID, the key will not be present) at the end. Following are the events related to AP communications.

- AP discovery succeeded
- AP managed
- AP rejected
- AP firmware updated
- AP firmware update failed
- Updating AP firmware
- Updating AP configuration
- AP configuration updated
- AP configuration update failed
- AP pre-provision model mismatched
- AP swap model mismatched
- AP WLAN oversubscribed
- AP join zone failed
- Rogue AP
- SSID-spoofing rogue AP
- MAC-spoofing rogue AP
- Same-network rogue AP
- Ad-hoc network device
- Rogue AP disappeared

# AP discovery succeeded

Table 189. AP discovery succeeded event

Event	AP discovery succeeded
Event Type	apDiscoverySuccess
Event Code	101
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx,, "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] sent a discovery request to {produce.short.name} [{wsgIP}].
Description	This event occurs when AP sends a discovery request to the {produce.short.name} successfully.

# AP managed

Table 190. AP managed event

Event	AP managed
Event Type	apStatusManaged
Event Code	103
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] approved by {produce.short.name} [{wsgIP}].
Description	This event occurs when the AP is approved by the controller.

# AP rejected

Table 191. AP rejected event

Event	AP rejected
Event Type	apStatusRejected
Event Code	105
Severity	Minor
Attribute	"apMac"="xxx.xxx.xxx", "wsgIP"="xxx.xxx.xxx",
	"reason"="xxxxxx"
Displayed on the web interface	{produce.short.name} [{wsgIP}] rejected AP [{apName&&apMac}] because of [{reason}].]
Description	This event occurs when the AP is rejected by the controller.
Auto Clearance	This event triggers the alarm 101, which is auto cleared by the event code 103.

# AP firmware updated

Table 192. AP firmware updated event

Event	AP firmware updated
Event Type	apFirmwareUpdated
Event Code	106
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx", "configID"="23456781234", "toVersion"="x.x.x", "fromVersion"="x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] updated its firmware from [{fromVersion}] to [{toVersion}].
Description	This event occurs when the AP successfully updates the firmware details to the controller.

# AP firmware update failed

Table 193. AP firmware update failed event

Event	AP firmware update failed
Event Type	apFirmwareUpdateFailed
Event Code	107
Severity	Major
Attribute	"apMac"="xxx.xxx.xxx", "configID"="23456781234", "toVersion"="x.x.x.", "fromVersion"="x.x.x."
Displayed on the web interface	AP [{apName&&apMac}] failed to update its firmware from [{fromVersion}] to [{toVersion}].
Description	This event occurs when the AP fails to update the firmware details to the controller.
Auto Clearance	This event triggers the alarm 107, which is auto cleared by the event code 106.

# **Updating AP firmware**

Table 194. Updating AP firmware event

Event	Updating AP firmware
Event Type	apFirmwareApplying
Event Code	108
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx", "configID"="23456781234", "toVersion"="x.x.x.", "fromVersion"="x.x.x."
Displayed on the web interface	AP [{apName&&apMac}] firmware is being updated from [{fromVersion}] to [{toVersion}].
Description	This event occurs when AP updates its firmware.

# **Updating AP configuration**

Table 195. Updating AP configuration event

Event	Updating AP configuration
Event Type	apConfApplying
Event Code	109
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] is being updated to new configuration ID [{configID}]
Description	This event occurs when AP updates its configuration.

# AP configuration updated

Table 196. AP configuration updated event

Event	AP configuration updated
Event Type	apConfUpdated
Event Code	110
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] updated to configuration [{configID}]
Description	This event occurs when the AP successfully updates the existing configuration details to the controller.

## AP configuration update failed

Table 197. AP configuration update failed event

Event	AP configuration update failed
Event Type	apConfUpdateFailed
Event Code	111
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] failed to update to configuration [{configID}].
Description	This event occurs when the AP fails to update the configuration details to the controller.
Auto Clearance	This event triggers the alarm 102, which is auto cleared by the event code 110.

# AP pre-provision model mismatched

Table 198. AP pre-provision model mismatched event

Event	AP pre-provision model mismatched
Event Type	apModelDiffWithPreProvConfig
Event Code	112
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx",
	"configModel"="ZF7962" "model"="R700"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from per-provision configuration model [configModel]
Description	This event occurs when the AP model differs from the configuration model.

# AP swap model mismatched

Table 199. AP swap model mismatched event

Event	AP swap model mismatched
Event Type	apModelDiffWithSwapOutAP
Event Code	113
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx",
	"configModel"="xxx.xxx.xxx" "model"="R700"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from swap configuration model [{configModel}].
Description	This event occurs when the AP model differs from the swap configuration model.

#### AP WLAN oversubscribed

Table 200. AP WLAN oversubscribed event

Event	AP WLAN oversubscribed
Event Type	apWlanOversubscribed
Event Code	114
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] does not have enough capacity to deploy all wlans. Only maximum wlan number of the AP can be deployed
Description	This event occurs when the AP exceeds the maximum capacity for deploying all WLANs.

# AP join zone failed

Table 201. AP join zone failed event

Event	AP join zone failed
Event Type	apJoinZoneFailed
Event Code	115
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "zoneUUID"="xx:xx:xx:xx:xx",
	"targetZoneUUID"="xx:xx:xx:xx:xx", "reason"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] failed to join to zone [{targetZoneName}]. Reason: [{reason}]
Description	This event occurs when the AP fails to join the specified zone.

# AP illegal to change country code

Table 202. AP illegal to change country code event

Event	AP illegal to change country code
Event Type	aplllgalToChangeCountryCode
Event Code	116
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] does not support country code change.
Description	This event occurs when attempting to change the country code for an AP. Changing of country code is not allowed.

# Rogue AP

Table 203. Rogue AP event

Event	Rogue AP
Event Type	genericRogueAPDetected
Event Code	180
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	Rogue AP[{rogueMac}] with SSID[{ssid}] is detected by [{apName&&apMac}] on channel[{channel}].
Description	This event occurs when the AP detects a rogue AP.

# SSID-spoofing rogue AP

Table 204. SSID-spoofing rogue AP event

Event	SSID-spoofing rogue AP
Event Type	ssid-spoofingRogueAPDetected
Event Code	181
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	SSID-spoofing AP[{rogueMac}] with SSID[{ssid}] is detected by [{apName&&apMac}] on channel[{channel}].
Description	This event occurs when the AP detects a rogue AP with the same service set identifier (SSID).

# MAC-spoofing rogue AP

Table 205. MAC-spoofing rogue AP event

Event	MAC-spoofing rogue AP
Event Type	mac-spoofingRogueAPDetected
Event Code	182
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxxx", "channel"="xx"
Displayed on the web interface	MAC-spoofing AP[{rogueMac}] with SSID[{ssid}] is detected by [{apName&&apMac}] on channel[{channel}].
Description	This event occurs when the AP detects a rogue AP having the same basic service set identifier (BSSID).

# Same-network rogue AP

Table 206. Same-network rogue AP event

Event	Same-network rogue AP
Event Type	same-networkRogueAPDetected
Event Code	183
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	Same-network AP[{rogueMac}] with SSID[{ssid}] is detected by [{apName&&apMac}] on channel[{channel}].
Description	This event occurs when the AP detects a rogue AP which has the same network.

#### Ad-hoc network device

Table 207. Ad-hoc network rogue device event

Event	Ad-hoc network device
Event Type	ad-hoc-networkRogueAPDetecte
Event Code	184
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	Ad-hoc network device[{rogueMac}] with SSID[{ssid}] is detected by [{apName&&apMac}] on channel[{channel}]
Description	This event occurs when the AP detects an ad-hoc network device.

# Rogue AP disappeared

Table 208. Rogue AP disappeared event

Event	Rogue AP disappeared
Event Type	maliciousRogueAPTimeout
Event Code	185
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Malicious rogue [{rogueMac}] detected by [{apName&&apMac}] goes away.
Description	This event occurs when the rogue AP disappears.

**NOTE:** Refer to AP Communication Alarms.

#### **AP LBS Events**

The following are the events related to AP Location Based Service (LBS).

- No LS responses
- LS authentication failure
- AP connected to LS
- AP failed to connect to LS
- AP started location service
- AP stopped location service
- AP received passive calibration request
- AP received passive footfall request
- AP received unrecognized request

# No LS responses

Table 209. No LS responses event

Event	No LS responses
Event Type	apLBSNoResponses
Event Code	701
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:, "url"="", "port"=""
Displayed on the web interface	AP [{apName&&apMac}] no response from LS: url=[{url}], port=[{port}]
Description	This event occurs when the AP does not get a response when trying to connect to the location based service.

#### LS authentication failure

Table 210. LS authentication failure event

Event	LS authentication failure
Event Type	apLBSAuthFailed
Event Code	702
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName&&apMac}] LBS authentication failed: url= [{url}], port= [{port}]
Description	This event occurs due to the authentication failure on connecting to the location based service.

# AP connected to LS

Table 211. AP connected to LS event

Event	AP connected to LS
Event Type	apLBSConnectSuccess
Event Code	703
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:, "url"="", "port"=""
Displayed on the web interface	AP [{apName&&apMac}] connected to LS: url= [{url}], port= [{port}]
Description	This event occurs when the AP successfully connects to the location based service.

# AP failed to connect to LS

Table 212. AP failed to connect to LS event

Event	AP failed to connect to LS
Event Type	apLBSConnectFailed
Event Code	704
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName&&apMac}] connection failed to LS: url= [{url}], port= [{port}]
Description	This event occurs when the AP fails to connect to the location based service.
Auto Clearance	This event triggers the alarm 704, which is auto cleared by the event code 703.

#### AP started location service

Table 213. AP started location service event

Event	AP started location service
Event Type	apLBSStartLocationService
Event Code	705
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "venue"=""
Displayed on the web interface	AP [{apName&&apMac}] Start Ruckus Location Service: venue= [{venue}], band= [{band}]
Description	This event occurs when the AP starts to get the location data.

## AP stopped location service

Table 214. AP stopped location service event

Event	AP stopped location service
Event Type	apLBSStopLocationService
Event Code	706
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "venue"=""
Displayed on the web interface	AP [{apName&&apMac}] Stop Ruckus Location Service: venue= [{venue}], band= [{band}]
Description	This event occurs when the AP stops getting the location data.

## AP received passive calibration request

Table 215. AP received passive calibration request event

Event	AP received passive calibration request
Event Type	apLBSRcvdPassiveCalReq
Event Code	707
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration, ="", "band"="", "count"=""
Displayed on the web interface	AP [{apName&&apMac}] received Passive Calibration Request: interval=[{interval}s], duration=[{duration}m], band=[{band}]
Description	This event occurs when the AP receives the passive calibration request.

## AP received passive footfall request

Table 216. AP received passive footfall request event

Event	AP received passive footfall request
Event Type	apLBSRcvdPassiveFFReq
Event Code	708
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration, ="", "band"=""
Displayed on the web interface	AP [{apName&&apMac}] received Passive Footfall Request: interval=[{interval}s], duration=[{duration}m], band=[{band}]
Description	This event occurs when the AP receives the passive footfall request.

## AP received unrecognized request

Table 217. AP received unrecognized request event

Event	AP received unrecognized request
Event Type	apLBSRcvdUnrecognizedRequest
Event Code	709
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "type"="", "length"="", "SCGMgmtlp"=""
Displayed on the web interface	AP [{apName&&apMac}] received Unrecognized Request: type = [{type}], length = [{length}]
Description	This event occurs when the AP receives an unrecognized request.

NOTE: Refer to AP LBS Alarms.

#### **AP Mesh Events**

Following are the events related to access point (AP) mesh.

- EMAP downlink connected to MAP
- EMAP downlink disconnected from MAP
- EMAP uplink connected to MAP
- EMAP uplink disconnected from MAP
- MAP disconnected
- MAP downlink connected
- MAP downlink connected to EMAP
- MAP downlink disconnected from EMAP
- RAP downlink connected to MAP
- MAP uplink connected to EMAP
- MAP uplink disconnected from EMAP
- MAP uplink connected to RAP
- MAP uplink connected to MAP
- Mesh state updated to MAP
- Mesh state updated to MAP no channel
- Mesh state updated to RAP
- Mesh state update to RAP no channel
- MAP downlink connected to MAP
- MAP downlink disconnected from MAP
- RAP downlink disconnected from MAP

#### **EMAP** downlink connected to MAP

Table 218. EMAP downlink connected to MAP event

Event	EMAP downlink connected to MAP
Event Type	emapDlinkConnectWithMap
Event Code	405
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac="xx:xx:xx:xx:xx:xx"

Table 218. EMAP downlink connected to MAP event

Displayed on the web interface	eMAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}].
Description	This event occurs when mobile application part (MAP) to Ethernet Mesh AP (EMAP) connection is successful.

#### **EMAP** downlink disconnected from MAP

Table 219. EMAP downlink disconnected from MAP event

Event	EMAP downlink disconnected from MAP
Event Type	emapDlinkDisconnectWithMap
Event Code	406
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{mapName&&mapMac}] disconnects from eMAP [{apName&&apMac}].
Description	This event occurs when MAP disconnects from Ethernet Mesh AP

## EMAP uplink connected to MAP

Table 220. EMAP uplink connected to MAP event

Event	EMAP uplink connected to MAP
Event Type	emapUlinkConnectWithMap
Event Code	407
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx","mapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{apName&&apMac}] uplink connected to MAP [{mapName&&mapMac}]
Description	This event occurs when Ethernet Mesh AP uplink connection to MAP is successful.

## **EMAP** uplink disconnected from MAP

Table 221. EMAP uplink disconnected from MAP event

Event	EMAP uplink disconnected from MAP
Event Type	emapUlinkDisconnectWithMap
Event Code	408
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{apName&&apMac}] uplink disconnected from MAP [{mapName&&mapMac}]
Description	This event occurs when Ethernet Mesh AP uplink disconnects from MAP.

#### MAP disconnected

Table 222. MAP disconnected event

Event	MAP disconnected
Event Type	mapDisconnected
Event Code	411
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{xapName&&xapMac}] disconnected from AP [{apName&&apMac}]
Description	This event occurs when MAP disconnects from AP.

#### MAP downlink connected

Table 223. MAP downlink connected event

Event	MAP downlink connected
Event Type	mapDlinkConnected
Event Code	412
Severity	Informational
Attribute	"mapMac="xx:xx:xx:xx:xx"

Table 223. MAP downlink connected event

Displayed on the web	MAP [{apName&&apMac}] downlink connected
interface	
Description	This event occurs when MAP downlink connects to the AP.

#### MAP downlink connected to EMAP

Table 224. MAP downlink connected to EMAP event

Event	MAP downlink connected to EMAP
Event Type	mapDlinkConnectWitheMap
Event Code	413
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] accepted connection from eMAP [{emapName&&emapMac}]
Description	This event occurs when MAP accepts the connection from Ethernet Mesh AP.

#### MAP downlink disconnected from EMAP

Table 225. MAP downlink disconnected from EMAP event

Event	MAP downlink disconnected from EMAP
Event Type	mapDlinkDisconnectWitheMap
Event Code	414
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{emapName&&emapMac}] disconnected from MAP [{apName&&apMac}]
Description	This event occurs when Ethernet Mesh AP disconnects from MAP.

#### RAP downlink connected to MAP

Table 226. RAP downlink connected to MAP event

Event	RAP downlink connected to MAP
Event Type	rapDlinkConnectWithMap
Event Code	416
Severity	Informational
Attribute	"rapMac"="xx:xx:xx:xx:xx:xx", "mapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	RAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}]
Description	This event occurs when the root access point (RAP) accepts MAP connection.

## MAP uplink connected to EMAP

Table 227. MAP uplink connected to EMAP event

Event	MAP uplink connected to EMAP
Event Type	mapUlinkConnectToeMap
Event Code	417
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac="xx:xx:xx:xx:xx:xx",
	"rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to eMAP [{emapName&&emapMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when MAP successfully connects to Ethernet Mesh AP with received signal strength indicator (RSSI) (across links).

## MAP uplink disconnected from EMAP

Table 228. MAP uplink disconnected from EMAP event

Event	MAP uplink disconnected from EMAP
Event Type	mapUlinkDisconnectToeMap
Event Code	418
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] disconnected from eMAP [{emapName&&emapMac}]
Description	This event occurs when MAP disconnects from Ethernet Mesh AP.

## MAP uplink connected to RAP

Table 229. MAP uplink connected to RAP event

Event	MAP uplink connected to RAP
Event Type	mapUlinkConnectToRap
Event Code	419
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "rootMac="xx:xx:xx:xx:xx:xx",
	"rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to RAP [{rootName&&rootMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when MAP connects to RAP with RSSI (across links).

## MAP uplink connected to MAP

Table 230. MAP uplink connected to MAP event

Event	MAP uplink connected to MAP
Event Type	mapUlinkConnectToMap
Event Code	420
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "secondMapMac="xx:xx:xx:xx:xx:xx", "rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to MAP [{secondMapName&&secondMapMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when the MAP connects to a second MAP with RSSI (across links).

## Mesh state updated to MAP

Table 231. Mesh state updated to MAP event

Event	Mach state undeted to MAD
Everit	Mesh state updated to MAP
Event Type	meshStateUpdateToMap
Event Code	421
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx",, "mapMac"="xx:xx:xx:xx:xx:xx", "numHop"="x", "channel"="xx", "downlinkState"="xx", "radio"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] uplinks to [{mapName&&mapMac}] across [{numHop}] hops on channel [{channel}] at [{radio}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to MAP uplinks across hops on channel radio (with downlink).

## Mesh state updated to MAP no channel

Table 232. Mesh state updated to MAP no channel event

Event	Mesh state updated to MAP no channel
Event Type	meshStateUpdateToMapNoChannel
Event Code	422
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx",,"mapMac"="xx:xx:xx:xx:xx:xx", "numHop"="x", "downlinkState"="xx"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] uplinks to [{mapName&&mapMac}] across [{numHop}] hops with downlink [{downlinkState}]
Description	This event occurs when the AP is set to MAP links across hops (with downlink).

## Mesh state updated to RAP

Table 233. Mesh state updated to RAP event

Event	Mesh state updated to RAP
Event Type	meshStateUpdateToRap
Event Code	423
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx", "channel"="xx", "downlinkState"="xx", "radio"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] on channel [{channel}] at [{radio}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to channel radio (with downlink).

## Mesh state update to RAP no channel

Table 234. Mesh state update to RAP no channel event

Event	Mesh state update to RAP no channel
Event Type	meshStateUpdateToRapNoChannel
Event Code	424
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx", "downlinkState"="xx"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to downlink.

#### MAP downlink connected to MAP

Table 235. MAP downlink connected to MAP event

Event	MAP downlink connected to MAP
Event Type	mapDlinkConnectWithMap
Event Code	425
Severity	Informational
Attribute	"mapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}]
Description	This event occurs when the MAP accepts a connection from another MAP.

#### MAP downlink disconnected from MAP

Table 236. MAP downlink disconnected from MAP event

Event	MAP downlink disconnected from MAP
Event Type	mapDlinkDisconnectWithMap
Event Code	426
Severity	Informational
Attribute	"secondMapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{secondMapName&&secondMapMac}] disconnected from MAP [{apName&&apMac}]
Description	This event occurs when the MAP disconnects from a second MAP.

#### RAP downlink disconnected from MAP

Table 237. RAP downlink disconnected from MAP event

Event	RAP downlink disconnected from MAP
Event Type	rapDlinkDisconnectWithMap
Event Code	427
Severity	Informational
Attribute	"secondMapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{secondMapName&&secondMapMac}] disconnected from RAP [{apName&&apMac}]
Description	This event occurs when the MAP disconnects from RAP.

## **AP State Change Events**

Following are the events related to access point state changes.

AP rebooted by user	AP rebooted by system	AP disconnected
AP IP address updated	AP reset to factory default	AP channel updated
AP country code updated	AP channel updated because dynamic frequency selection (DFS) detected a radar	AP change control plane
AP connected	AP deleted	AP heartbeat lost
AP tagged as critical	AP cable modem interface down	AP brownout
AP cable modem power-cycled by user	AP smart monitor turn off WLAN	AP client load balancing limit reached
AP client load balancing limit recovered	AP WLAN state changed	AP capacity reached
AP capacity recovered	AP cable modem interface up	AP cable modem soft- rebooted by user
AP cable modem set to factory default by user		

## AP rebooted by user

Table 238. AP rebooted by user event

Event	AP rebooted by user
Event Type	apRebootByUser
Event Code	301
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted because of [{reason}]
Description	This event occurs when an AP has to reboot.

## AP rebooted by system

Table 239. AP rebooted by system event

Event	AP rebooted by system
Event Type	apRebootBySystem
Event Code	302
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted by the system because of [{reason}]
Description	This event occurs when the system reboots the AP.

#### AP disconnected

Table 240. AP disconnected event

Event	AP disconnected	
Event Type	apConnectionLost (detected on the server)	
Event Code	303	
Severity	Major	
Attribute	"apMac"="xx:xx:xx:xx:xx"	
Displayed on the web interface	AP [{apName&&apMac}] disconnected	
Description	This event occurs when the AP disconnects from the controller.	
Auto Clearance	This event triggers the alarm 303, which is auto cleared by the event code 312.	

## AP IP address updated

Table 241. AP IP address updated event

Event	AP IP address updated
Event Type	apIPChanged
Event Code	304
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] reset because of an IP address change
Description	This event occurs when the AP is reset due to a change in the IP address.

## AP reset to factory default

Table 242. AP reset to factory default event

Event	AP reset to factory default
Event Type	apFactoryReset
Event Code	305
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] reset to factory default settings
Description	This event occurs when the AP is reset to factory default settings.

## AP channel updated

Table 243. AP channel updated event

Event	AP channel updated
Event Type	apChannelChanged
Event Code	306
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio"="xxx", "fromChannel"="xx", "toChannel"="xx"

Table 243. AP channel updated event

Displayed on the web interface	AP [{apName&&apMac}] detected interference on radio [{radio}] and has switched from channel [{fromChannel}] to channel [{toChannel}]
Description	This event occurs when the AP detects the radio interference and switches to another channel.

## AP country code updated

Table 244. AP country code updated event

Event	AP country code updated
Event Type	apCountryCodeChanged
Event Code	307
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] reset because of a country code change
Description	This event occurs when a change in country code causes the AP to reset.

# AP channel updated because dynamic frequency selection (DFS) detected a radar

Table 245. AP channel updated because dynamic frequency selection (DFS) detected a radar event

Event	AP channel updated because dynamic frequency selection (DFS) detected a radar
Event Type	apDfsRadarEvent
Event Code	308
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio"="xxx", "channel"="xx"
Displayed on the web interface	AP [{apName&&apMac}] detected radar burst on radio [{radio}] and channel [{channel}] went into non-occupancy period
Description	This event occurs when the AP detects a radar burst on the radio and the channel moves to a non-occupancy mode.

## AP change control plane

Table 246. AP change control plane event

Event	AP change control plane
Event Type	apChangeControlBlade
Event Code	311
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "oldwsgIP"="xxx.xxx.xxx.xxx",
	"newwsgIP"="xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] switched from {produce.short.name} [{oldCpName  oldWsgIP}] to {produce.short.name} [{cpName  newWsgIP}].
Description	This event occurs when the AP switches from an existing controller connection to a new connection.

#### AP connected

Table 247. AP connected event

Event	AP connected
Event Type	apConnected
Event Code	312
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] connected because of [{reason}].
Description	This event occurs when the AP is connected.

#### AP deleted

Table 248. AP deleted event

Event	AP deleted
Event Type	apDeleted (detected on the server)
Event Code	313
Severity	Major

Table 248. AP deleted event

Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] deleted
Description	This event occurs when the AP is deleted on the server side.

#### AP heartbeat lost

Table 249. AP heartbeat lost event

Event	AP heartbeat lost
Event Type	apHeartbeatLost
Event Code	314
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] heartbeat lost.
Description	This event occurs when the AP is deleted due to a lost heartbeat.

## AP tagged as critical

Table 250. AP tagged as critical event

Event	AP tagged as critical
Event Type	apTaggedAsCritical
Event Code	315
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] tagged as critical
Description	This event occurs when the AP is tagged critical.

#### AP cable modem interface down

Table 251. AP cable modem interface down event

Event	AP cable modem interface down
Event Type	cableModemDown
Event Code	316
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem interface is down
Description	This event occurs when the AP cable modem interface is down.
Auto Clearance	This event triggers the alarm 308, which is auto cleared by the event code 325.

#### AP brownout

Table 252. AP brownout event

	1.5.
Event	AP brownout
Event Type	apBrownout
Event Code	317
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apMac}] voltage deviation on [{cause}] port
Description	This event occurs due to a voltage deviation on the AP port.

## AP cable modem power-cycled by user

Table 253. AP cable modem power-cycled by user event

Event	AP cable modem power-cycled by user
Event Type	cmRebootByUser
Event Code	318
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"

Table 253. AP cable modem power-cycled by user event

Displayed on the web interface	AP [{apName&&apMac}] cable modem power-cycled because of [{reason}].]
Description	This event occurs when AP cable modem is power-cycled because the user executes the power-cycle CLI command.

#### AP smart monitor turn off WLAN

Table 254. AP smart monitor turn off WLAN event

Event	AP smart monitor turn off WLAN
Event Type	smartMonitorTurnOffWLAN
Event Code	319
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "turnOffTime"="", "turnOnTime"=""
Displayed on the web interface	AP [{apName&&apMac}] turned off WLANs by Smart Monitor on [{time(turnOffTime)}] and turn on WLANs on [{time(turnOnTime)}]
Description	This event occurs when the smart monitor of the AP turns off the WLAN.

## AP client load balancing limit reached

Table 255. AP client load balancing limit reached event

Event	AP client load balancing limit reached
Event Type	apCLBlimitReached
Event Code	320
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "bssid"="xx:xx:xx:xx:xx", "clb-load-limit"="", "cur-load"="", "min-clbpartner-bssid"="", "min-clbpartner-load"="", "num-clbpartners"=""
Displayed on the web interface	AP [{apname@apMac}] reached client load limit, [{cur-load}] / [{clb-load-limit}], on WLAN [{ssid}]
Description	This event occurs when the AP reaches the client loading balance (CLB) limit. The adjacent threshold limit value is 50 for 2.4GHz radio and 43 for 5GHz radio.

## AP client load balancing limit recovered

Table 256. AP client load balancing limit recovered event

Event	AP client load balancing limit recovered
Event Type	apCLBlimitRecovered
Event Code	321
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "bssid"="xx:xx:xx:xx:xx", "clb-load-limit"="", "cur-load"="",
Displayed on the web interface	AP[{apname@apMac}] recovered from client load limit, [{cur-load}] / [{clb-load-limit}], on WLAN [{ssid}]
Description	This event occurs when the AP is recovered from client load balance (CLB) limit. The adjacent threshold limit value is 50 for 2.4GHz radio and 43 for 5GHz radio.

## AP WLAN state changed

Table 257. AP WLAN state changed event

Event	AP WLAN state changed
Event Type	apWLANStateChanged
Event Code	322
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx:" "state"="enable   disable" "ssid"="xxxxx" "apTime"="Tue Apr 22 12:15:00 2014" "reason"="State changed according to service schedule   State changed by adminstrator"
Displayed on the web interface	AP [{apName&&apMac}] {state} WLAN[{ssid}] on [{apTime}]. Reason: [{reason}].
Description	This event occurs when the WLAN state changes as per the service schedule or as per the service type setting.

## AP capacity reached

Table 258. AP capacity reached event

Event	AP capacity reached
Event Type	apCapacityReached
Event Code	323
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "radio":"",
Displayed on the web interface	AP [{{apName&&apMac}}] radio [{radio}] stopped accepting clients because the client association threshold has been reached.
Description	This event occurs when an AP rejects a client due to the threshold limit reached by the client.

## AP capacity recovered

Table 259. AP capacity recovered event

Event	AP capacity recovered
Event Type	apCapacityRecovered
Event Code	324
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "radio":"",
Displayed on the web interface	AP [{{apName&&apMac}}] radio [{radio}] started accepting clients again because current client association is now below the threshold.
Description	This event occurs when the AP starts accepting clients again because the current client association is below the threshold limit.

## AP cable modem interface up

Table 260. AP cable modem interface up event

Event	AP cable modem interface up
Event Type	cableModemUp
Event Code	325
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem interface is up.
Description	This event occurs when the AP cable modem interface is up.

## AP cable modem soft-rebooted by user

Table 261. AP cable modem soft-rebooted by user event

Event	AP cable modem soft-rebooted by user
Event Type	cmResetByUser
Event Code	326
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx","reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem soft-reboot because of [{reason}].
Description	This event occurs when the AP cable modem is softly rebooted because the user executes the soft-reboot CLI command.

## AP cable modem set to factory default by user

Table 262. AP cable modem set to factory default by user event

Event	AP cable modem set to factory default by user
Event Type	cmResetFactoryByUser
Event Code	327
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx","reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem set to factory default because of [{reason}].
Description	This event occurs when AP cable modem is reset to factory default because the user executes the set factory command line interface (CLI) command.

**NOTE:** Refer to AP State Change Alarms.

#### **AP USB Events**

Following are the events related to AP USB (Universal Serial Bus).

- AP USB software package downloaded
- AP USB software package download failed

## AP USB software package downloaded

Table 263. AP USB software package downloaded event

Fvent	AP USB software package downloaded
LVEIII	Al OOD SORWare package downloaded
Event Type	apUsbSoftwarePackageDownloaded
Event Code	370
Severity	Informational
Attribute	"apMac="xx:xx:xx:xx:xx", "usbSoftwareName="19d2-fff5(v1.0)"
Displayed on the web interface	AP [{apName&&apMac}] downloaded USB software package [{usbSoftwareName}] successfully.
Description	This event occurs when AP successfully downloads its USB software package.

#### AP USB software package download failed

Table 264. AP USB software package download failed event

Event	AP USB software package download failed
Event Type	apUsbSoftwarePackageDownloadFailed
Event Code	371
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx", usbSoftwareName="19d2-fff5(v1.0)"
Displayed on the web interface	AP [{apName&&apMac}] failed to download USB software package [{usbSoftwareName}]
Description	This event occurs when the AP fails to download its USB software package.

#### **Authentication Events**

The following are the events related to authentication.

- Authentication server not reachable
- Unknown realm
- Authentication succeeded
- Authentication failed
- Pseudonym authentication succeeded
- Pseudonym authentication failed
- Fast re-authentication succeeded
- Fast re-authentication failed
- Authentication failed over to secondary
- Authentication fallback to primary
- AD/LDAP connected successfully
- AD/LDAP connectivity failure
- Bind fails with AD/LDAP
- Bind success with LDAP, but unable to find clear text password for the user
- RADIUS fails to connect to AD NPS server
- RADIUS fails to authenticate with AD NPS server

#### Authentication server not reachable

Table 265. Authentication server not reachable event

Event	Authentication server not reachable
Event Type	authSrvrNotReachable
Event Code	1601
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org" "radProxylp"="7.7.7.7" "authSrvrlp"="20.20.20.20" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Authentication Server [{authSrvrlp}] not reachable from Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]

#### Table 265. Authentication server not reachable event

Description	This event occurs when the authentication fails since the primary or
	secondary servers are not reachable.

#### Unknown realm

NOTE: This event is not applicable for vSZ-H.

Table 266. Unknown realm event

Event	Unknown realm
Event Type	unknownRealm
Event Code	1603
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org"
Displayed on the web interface	Realm [{realm}] could not be resolved to a AAA server
Description	This event occurs when the authentication realm resolution fails.

#### **Authentication succeeded**

Table 267. Authentication succeeded event

Event	Authentication succeeded
Event Type	authSuccess
Event Code	1604
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Authentication successful for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs when the RADIUS accept is sent back to the AP. This event applies only for TTG/PDG session.  Note: The attribute Permanent ID is used for authentication.

#### Authentication failed

Table 268. Authentication failed event

Event	Authentication failed
Event Type	authFailed
Event Code	1605
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd"  "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii"  "uelmsi"="12345","ueMsisdn"="98787", "cause"=" <cause failure="" of="">" "authType"="EAP-SIM/AKA"</cause>
Displayed on the web interface	Authentication failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. Cause = [{cause}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs when the RADIUS reject is sent back and the MS-ISDN is provided (if available).  Note: The attribute Permanent ID is used for authentication.

## Pseudonym authentication succeeded

**NOTE:** This event is not applicable for vSZ-H.

Table 269. Pseudonym authentication succeeded event

Event	Pseudonym authentication succeeded
Event Type	pseudonymAuthSuccess
Event Code	1606
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "authType"="EAP-SIM/AKA"

Table 269. Pseudonym authentication succeeded event

Displayed on the web interface	Pseudonym ID based authentication successful for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs when the RADIUS accept is sent back to the AP. This event is applicable when the controller acts as a host AAA server and is applicable only for TTG/PDG session.  Note: The attribute Pseudonym ID is used for authentication.

## Pseudonym authentication failed

NOTE: This event is not applicable for vSZ-H.

Table 270. Pseudonym authentication failed event

	•
Event	Pseudonym authentication failed
Event Type	pseudonymAuthFailed
Event Code	1607
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1 "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd"  "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii"  "uelmsi"="12345","ueMsisdn"="98787" "cause"=" <cause failure="" of="">" "authType"="EAP-SIM/AKA"</cause>
Displayed on the web interface	Pseudonym ID based authentication failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. Cause = [{cause}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs when the RADIUS reject is sent back for pseudonym authentication. This event is applicable when the controller acts as a host AAA server. The mobile subscriber integrated services digital network number (MS-ISDN) is provided (if available).  Note: The attribute Pseudonym ID is used for authentication.

#### Fast re-authentication succeeded

NOTE: This event is not applicable for vSZ-H.

Table 271. Fast re-authentication succeeded event

Event	Fast re-authentication succeeded
Event Type	fastReauthSuccess
Event Code	1608
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Fast re-auth ID based authentication successful for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs after resending RADIUS accept back to AP. This event is applicable when, the {produce.short.name} acts as a hosted AAA server and for TTG/PDG session.  Note: FastReauth ID is used for authentication.

## Fast re-authentication failed

NOTE: This event is not applicable for vSZ-H.

Table 272. Fast re-authentication failed event

Event	Fast re-authentication failed
Event Type	fastReauthFailed
Event Code	1609
Severity	Debug

Table 272. Fast re-authentication failed event

Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "cause"=" <cause failure="" of="">" "authType"="EAP-SIM/AKA"</cause>
Displayed on the web interface	Fast re-auth ID based authentication failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]. Cause = [{cause}]. {produce.short.name} used is [{SCGMgmtlp}]
Description	This event occurs when the RADIUS reject is sent back for fast reauthentication. This event applies when the controller acts as a host AAA server. The MS-ISDN is provided (if available).  Note: Attribute FastReuathID is used for reauthentication.

## Authentication failed over to secondary

Table 273. Authentication failed over to secondary event

Event	Authentication failed over to secondary
Event Type	authFailedOverToSecondary
Event Code	1651
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the secondary authentication RADIUS server is available after the primary server becomes zombie or dead.

## Authentication fallback to primary

Table 274. Authentication fallback to primary event

Event	Authentication fallback to primary
Event Type	authFallbackToPrimary
Event Code	1652
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff"  "srcProcess"="radiusd" "realm"=  "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7"  "primary"="20.20.20.20" "secondary"="30.30.30.30"  "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxylp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the automatic fallback is enabled. The authentication failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.

## AD/LDAP connected successfully

Table 275. AD/LDAP connected successfully event

Event	AD/LDAP connected successfully
Event Type	racADLDAPSuccess
Event Code	1751
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"= "1.1.1.1" "SCGMgmtlp"="2.2.2.2", "desc"="Successful connection to AD/LDAP"
Displayed on the web interface	[{srcProcess}] Connect to AD/LDAP[{authSrvrlp}] successfully from SCG[{SCGMgmtlp}]
Description	This event occurs when RADIUS connection to AD/LDAP server is successful.

## AD/LDAP connectivity failure

Table 276. AD/LDAP connectivity failure event

Event	AD/LDAP connectivity failure
Event Type	racADLDAPFail
Event Code	1752
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "SCGMgmtlp"="2.2.2.2" "desc"= "Connection to AD/LDAP fails"
Displayed on the web interface	[{srcProcess}] Connect to AD/LDAP[{authSrvrlp}] fails from SCG[{SCGMgmtlp}]
Description	This event occurs when RADIUS fails to connect to AD/LDAP server.

#### Bind fails with AD/LDAP

Table 277. Bind fails with AD/LDAP event

Event	Bind fails with AD/LDAP
Event Type	racADLDAPBindFail
Event Code	1753
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"= "1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Bind to AD/LDAP fails"
Displayed on the web interface	[{srcProcess}] Bind to AD/LDAP[{authSrvrlp}] fails from SCG[{SCGMgmtlp}] for User[{userName}]
Description	This event occurs when RADIUS binding fails to AD/LDAP server.

# Bind success with LDAP, but unable to find clear text password for the user

Table 278. Bind success with LDAP, but unable to find clear text password for the user event

Event	Bind success with LDAP but unable to find clear text password for the user
Event Type	racLDAPFailToFindPassword
Event Code	1754
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"= "testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Fail to find password"
Displayed on the web interface	[{srcProcess}] failed to find password from LDAP [{authSrvrlp}] for SCG[{SCGMgmtlp}] for User[{userName}]
Description	This event occurs when binding is successful with LDAP using root credential but is unable to retrieve the clear text password for the user.

#### RADIUS fails to connect to AD NPS server

Table 279. RADIUS fails to connect to AD NPS server event

•	
Event	RADIUS fails to connect to AD NPS server
Event Type	racADNPSFail
Event Code	1755
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"= "Fails to connect to AD NPS server"
Displayed on the web interface	[{srcProcess}] Fails to connect to AD NPS [{authSrvrlp}] from SCG[{SCGMgmtlp}]
Description	This event occurs when RADIUS fails to connect to AD NPS server.

#### RADIUS fails to authenticate with AD NPS server

Table 280. RADIUS fails to authenticate with AD NPS server event

Event	RADIUS fails to authenticate with AD NPS server
Event Type	racADNPSFailToAuthenticate
Event Code	1756
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Fails to authenticate with AD NPS"
Displayed on the web interface	[{srcProcess}] Fails to authenticate AD NPS[{authSrvrlp}] on SCG [{SCGMgmtlp}] for User[{userName}]
Description	This event occurs when RADIUS fails to authenticate with AD NPS server.

**NOTE:** Refer to Authentication Alarms.

### **Authorization Events**

The following are the events related to authorization (DM/CoA).

- DM received from AAA
- DM NACK sent to AAA
- DM sent to NAS
- DM NACK received from NAS
- CoA received from AAA
- CoA NACK sent to AAA
- CoA sent NAS
- CoA NAK received NAS
- CoA authorize only access reject
- CoA RWSG MWSG notification failure

#### DM received from AAA

Table 281. DM received from AAA event

Event	DM received from AAA
Event Type	dmRcvdAAA
Event Code	1641
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS DM received by RAC [{radSrvrlp}] from AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when the radio access controller (RAC) receives a disconnected message from the AAA server.

### DM NACK sent to AAA

Table 282. DM NACK sent to AAA event

Event	DM NACK sent to AAA
Event Type	dmNackSntAAA
Event Code	1642
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS DM NACK sent by RAC [{radSrvrlp}] to AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when RAC sends a disconnected not acknowledged message to the AAA server.

### DM sent to NAS

Table 283. DM sent to NAS event

Event	DM sent to NAS
Event Type	dmSntNAS
Event Code	1643
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "naslp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS DM sent to NAS [{rmtRadSrvrlp}] by RAC [{radSrvrlp}] for [{userName}]
Description	This event occurs when RAC sends a disconnected message to the network access server [proxy of received disconnected message or the disconnected message as initiated by the controller].

### **DM NACK received from NAS**

Table 284. DM NACK received from NAS event

Event	DM NACK received from NAS
Event Type	dmNackRcvdNAS
Event Code	1644
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "naslp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2", "cause"=""
Displayed on the web interface	RADIUS DM NACK received by RAC [{radSrvrlp}] from NAS [{naslp}] for [{userName}]]
Description	This event occurs when the radio access control receives disconnect message, which is not acknowledged from the NAS server.

### CoA received from AAA

Table 285. CoA received from AAA event

Event	CoA received from AAA
Event Type	coaRcvdAAA
Event Code	1645
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS CoA received by RAC [{radSrvrlp}] from AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when radio access control receives a change of authorization message from the AAA server.

### CoA NACK sent to AAA

Table 286. CoA NACK sent to AAA event

Event	CoA NACK sent to AAA
Event Type	coaNackSntAAA
Event Code	1646
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS CoA NACK sent by RAC [{radSrvrlp}] to AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when radio access control sends a change of authorization, not acknowledged to the AAA server.

### CoA sent NAS

Table 287. CoA sent NAS event

Event	CoA sent NAS
Event Type	coaSentNas
Event Code	1647
Severity	Debug
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "userName"="abc@xyz.com" "radSrvrlp"="1.1.1.1" "naslp"="3.3.3.3" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	CoA requests proxied/forwarded to NAS(AP) [{naslp}].
Description	This event occurs when the controller forwards/proxy of change of authorization to the NAS server.

### CoA NAK received NAS

Table 288. CoA NAK received NAS event

Event	CoA NAK received NAS
Event Type	coaNakRcvdNas
Event Code	1648
Severity	Debug
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "userName"="abc@xyz.com" "radSrvrlp"="1.1.1.1" "naslp"="3.3.3.3.3" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	CoA NAK received from NAS(AP) for forwarded/proxied CoA [{radSrvrlp}]
Description	This event occurs when a change of authorization, not acknowledged is received from the NAS server.

# CoA authorize only access reject

Table 289. CoA authorize only access reject event

Event	CoA authorize only access reject
Event Type	coaAuthorizeOnlyAccessReject
Event Code	1649
Severity	Critical
Attribute	"mvnold"="12" "wlanld"="1","zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "aaaSrvrlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787","rmtRadSrvrlp"="40.40.40.40"
Displayed on the web interface	CoA Authorize Only unsuccessful for AAA Server [rmtRadSrvrlp] for UE [ueMacAddr]
Description	This event occurs when the change of authorization is rejected.

### CoA RWSG MWSG notification failure

Table 290. CoA RWSG MWSG notification failure event

Event	CoA RWSG MWSG notification failure
Event Type	coaRWSGMWSGNotifFailure
Event Code	1650
Severity	Major
Attribute	mvnold"=12 "wlanld"=1 "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd"  "userName"=abc@xyz.com  "realm"="wlan.mnc080.mcc405.3gppnetwork.org"  "SCGMgmtlp"="2.2.2.2" "apType" = "  "ueMacAddr"="aa:bb:cc:gg:hh:ii"
Displayed on the web interface	Session Modify MWSG-RWSG Notification Failure/No response received
Description	This event occurs when the change of authorization in RADIUS /metro wireless service gateway notification fails.

## **Control and Data Plane Interface**

NOTE: This event is not applicable for vSZ-H.

Following are the events related to control and data plane events.

- DP connected
- GtpManager (DP) disconnected
- Session updated at DP
- Session update at DP failed
- Session deleted at DP
- Session delete at DP failed
- C2d configuration failed

#### **DP** connected

Table 291. DP connected event

Event	DP connected
Event Type	connectedToDblade
Event Code	1201
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	The connectivity between Control plane [{ctrlBladelp}] and Data plane [{dataBladelp}] is established at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when control plane completes the configuration procedure successfully.

## GtpManager (DP) disconnected

Table 292. GtpManager (DP) disconnected event

Event	GtpManager (DP) disconnected
Event Type	lostCnxnToDblade
Event Code	1202
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	The connectivity between Control plane [{ctrlBladelp}] and Data plane [{dataBladelp}] is lost at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when either the transmission control protocol connection is lost or when the control plane is unable to complete the configuration procedure.
Auto Clearance	This event triggers the alarm 1202, which is auto cleared by the event code 1201.

## Session updated at DP

Table 293. Session updated at DP event

Event	Session updated at DP
Event Type	sessUpdatedAtDblade
Event Code	1205
Severity	Debug
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10", "srcProcess"="aut", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has been updated at Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the session updates the request (C-D-SESS-UPD-REQ) successfully.

## Session update at DP failed

Table 294. Session update at DP failed event

Event	Session update at DP failed
Event Type	sessUpdateErrAtDblade
Event Code	1206
Severity	Debug
Attribute	"mvnold"="12", "wlanld"="1", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "zoneld"="10", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has failed to update at Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the session update request fails (C-D-SESS-UPD-REQ). This is either due to a request timeout or a failed response.

### Session deleted at DP

Table 295. Session deleted at DP event

Event	Session deleted at DP
Event Type	sessDeletedAtDblade
Event Code	1207
Severity	Debug
Attribute	"mvnold"="12", "wlanld"="1""zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has been deleted from Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]

Table 295. Session deleted at DP event

Description	This event occurs when the session deletes request (C-D-SESS-DEL-
	REQ) is successfully acknowledged.

### Session delete at DP failed

Table 296. Session delete at DP failed event

Event	Session delete at DP failed
Event Type	sessDeleteErrAtDblade
Event Code	1208
Severity	Debug
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has failed to delete from Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the session delete request (C-D-SESS-DEL-REQ) results in a timeout or a failed response.

# C2d configuration failed

Table 297. C2d configuration failed event

Event	C2d configuration failed
Event Type	c2dCfgFailed
Event Code	1209
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA" "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "cause"=" <what configured="" was="">"</what>
Displayed on the web interface	Configuration [{cause}] from Control plane [{ctrlBladelp}] failed to apply on Data plane [{dataBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the configuration request (C-D-CFG-REQ) results in a timeout or a failed response.

**NOTE:** Refer to Control and Data Plane Interface.

### **Client Events**

All client events from the AP will be appended with tenant ID ("tenantUUID": "xxxxxx"). Following are the events related to clients.

- Client authentication failed
- Client joined
- Client failed to join
- Client disconnected
- Client connection timed out
- Client authorization successfully
- Client authorization failed
- Client session expired
- Client roaming
- Client logged out
- 3rd party client join
- · 3rd party client inactivity timeout
- 3rd party client authorization
- 3rd party client authorization failure
- 3rd party client session expiration
- 3rd party client roaming
- 3rd party client session logout
- Client roaming disconnected
- Client blocked
- Client grace period
- Onboarding registration succeeded
- Onboarding registration failed
- Remediation succeeded
- Remediation failed
- Force DHCP disconnected
- WDS device joined
- WDS device left

### Client authentication failed

Table 298. Client authentication failed event

Event	Client authentication failed
Event Type	clientAuthFailure
Event Code	201
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "userId"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] failed to join WLAN [{ssid}] from AP [{apName&&apMac}] due to authentication failure.
Description	This event occurs when the client fails to join WLAN on the AP due to an authentication failure.

## Client joined

Table 299. Client joined event

Event	Client joined
Event Type	clientJoin
Event Code	202
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] joined WLAN [{ssid}] from AP [{apName&&apMac}].
Description	This event occurs when the client session joins the WLAN on AP.

## Client failed to join

Table 300. Client failed to join event

Event	Client failed to join
Event Type	clientJoinFailure
Event Code	203
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx"
	"userld"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] failed to join WLAN [{ssid}] from AP [{apName&apMac}].
Description	This event occurs when the client fails to connect to the WLAN on the AP.

### Client disconnected

Table 301. Client disconnected event

Event	Client disconnected
Event Type	clientDisconnect
Event Code	204
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx",
	"ssid"="xxxxx", "assoicationTime"="600", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanld"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="", "userld"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] disconnected from WLAN [{ssid}] on AP [{apName&&apMac}]
Description	This event occurs when the client disconnects from WLAN on AP.

### Client connection timed out

Table 302. Client connection timed out event

Event	Client connection timed out
Event Type	clientInactivityTimeout
Event Code	205
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"ssid"="xxxxx", "assoicationTime"="600", "wlanId"="xxxxx",
	"userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="",
	"apLocation"="", "username"="", "osType"="", "radio"="",
	"vlanId"=, "sessionDuration"=, "txBytes"=, "rxBytes"=,
	"rssi"="", "receivedSignalStrength"="", "apGps"="",
	"hostname"="", "encryption"="",, "userId"="uuid"
Displayed on the web	Client [{userName  IP  clientMac}] disconnected from WLAN [{ssid}] on
interface	AP [{apName&&apMac}] due to inactivity
Description	This event occurs when client disconnects from WLAN on AP due to inactivity.

# Client authorization successfully

Table 303. Client authorization successfully event

Event	Client authorization successfully
Event Type	clientAuthorization
Event Code	206
Severity	Informational
Attribute	""apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] of WLAN [{ssid}] from AP [{apName&&apMac}] was authorized.
Description	This event occurs when the client on WLAN AP is authorized.

### Client authorization failed

Table 304. Client authorization failed event

Event	Client authorization failed
Event Type	clientAuthorizationFailure
Event Code	207
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx",
	"ssid"="xxxxx", "wlanld"="xxxxxx", "userName"="xxxxx",
	"clientIP"="x.x.x.x" "userId"="uuid"
Displayed on the web	Client [{userName  IP  clientMac}] of WLAN [{ssid}] from AP
interface	[{apName&&apMac}] was not authorized.
Description	This event occurs when the client on WLAN AP authorization fails.

## Client session expired

Table 305. Client session expired event

Event	Client session expired
Event Type	clientSessionExpiration
Event Code	208
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanld"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="" "userId"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] exceeded the session time limit. Session terminated.
Description	This event occurs when the client exceeds the session time limit resulting in a session termination.

## Client roaming

Table 306. Client roaming event

Event	Client roaming
Event Type	clientRoaming
Event Code	209
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x" "userId"="uuid"
Displayed on the web interface	AP [{apName&&apMac}] radio [{toRadio}] detected client [{userName  IP  clientMac}] in WLAN [{ssid}] roam from AP [{fromApName&&fromApMac}].
Description	This event occurs when the AP radio detects a client.

## Client logged out

Table 307. Client logged out event

Event	Client logged out
Event Type	clientSessionLogout
Event Code	210
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanld"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="" "userld"="uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] session logout.
Description	This event occurs when a client session is logged out.

## 3rd party client join

NOTE: This event is not applicable for vSZ-H.

Table 308. 3rd party client join event

Event	3rd party client join
Event Type	3rdPtyClientJoin
Event Code	211
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientlP  clientMac}] joined Zone [{zoneName}] on DP [{{dpName&dpKey}}].
Description	This event occurs when a 3rd party client joins the AP zone session on the data plane.

## 3rd party client inactivity timeout

NOTE: This event is not applicable for vSZ-H.

Table 309. 3rd party client inactivity timeout event

Event	3rd party client inactivity timeout
Event Type	3rdPtyClientInactivityTimeout
Event Code	212
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientlP  clientMac}] disconnected from Zone [{zoneName}] on DP [{dpName&&dpKey}] due to inactivity.
Description	This event occurs when 3rd party client disconnects from an AP zone session on the data plane due to inactivity.

### 3rd party client authorization

NOTE: This event is not applicable for vSZ-H.

Table 310. 3rd party client authorization event

Event	3rd party client authorization
Event Type	3rdPtyClientAuthorization
Event Code	213
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd Party client [{clientIP  clientMac}] of Zone [{zoneName}] on DP [{{dpName&&dpKey}}] was authorized.
Description	This event occurs when 3rd party client on AP zone session is authorized.

## 3rd party client authorization failure

NOTE: This event is not applicable for vSZ-H.

Table 311. 3rd party client authorization failure event

Event	3rd party client authorization failure
Event Type	3rdPtyClientAuthorizationFailure
Event Code	214
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"clientIP"="x.x.x.x", "zoneUUID"="xxxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientlP  clientMac}] of Zone [{zoneName}] on DP [{{dpName&dpKey}}] was not authorized.
Description	This event occurs when the 3rd party client on the AP zone session is not authorized.

## 3rd party client session expiration

NOTE: This event is not applicable for vSZ-H.

Table 312. 3rd party client session expiration event

Event	3rd party client session expiration
Event Type	3rdPtyClientSessionExpiration
Event Code	215
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"clientIP"="x.x.x.x", "zoneUUID"="xxxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP  clientMac}] of Zone [{zoneName}] on DP [{dpName  dpKey}] exceeded the session time limit. Session terminated.
Description	This event occurs when the 3rd party client on the AP zone exceeds the session time limit, resulting in session termination.

## 3rd party client roaming

NOTE: This event is not applicable for vSZ-H.

Table 313. 3rd party client roaming event

Event	3rd party client roaming
Event Type	3rdPtyClientRoaming
Event Code	216
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx",
	"clientIP"="x.x.x.x", "zoneUUID"="xxxxxxx", "userId"="uuid"
Displayed on the web	DataPlane [{dpName  dpKey}] detected 3rd party client
interface	[{clientIP  clientMac}] in Zone [{zoneName}] on DP
	[{dpName  fromDpMac}].
Description	This event occurs when the data plane detects a 3rd party client in the AP zone.

## 3rd party client session logout

NOTE: This event is not applicable for vSZ-H.

Table 314. 3rd party client session logout event

Event	3rd party client session logout
Event Type	3rdPtyClientSessionLogout
Event Code	217
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP  clientMac}] of Zone [{zoneName}] on DP [{dpName  dpKey}] occurred session logout.
Description	This event occurs when 3rd party client on AP zone data plane occurs. This results in a session logs out.

## Client roaming disconnected

Table 315. Client roaming disconnected event

Event	Client roaming disconnected
Event Type	smartRoamDisconnect
Event Code	218
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "radio"="", "vlanId"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="", "ni_rx_rssilo_cnt"="", "ni_rx_tot_cnt"="", "ns_rx_rssilo_cnt"="", "ns_rx_tot_cnt"="", "ni_tx_xput_lo_cnt"="", "ni_tx_xput_lo_dur"="", "Instantaneous rssi"="", "Xput"="", "userId"=""uuid"
Displayed on the web interface	Client [{userName  IP  clientMac}] disconnected from WLAN [{ssid}] on AP [{apName&&apMac}] due to SmartRoam policy.

Table 315. Client roaming disconnected event

Description	This event occurs when the client disconnects from the WLALN due to
	a smart roam policy.

### Client blocked

Table 316. Client blocked event

Event	Client blocked
Event Type	clientBlockByDeviceType
Event Code	219
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "deviceType"="xxxxx", "ssid"="xxxxx", "wlanId"="xxxxx",
Displayed on the web interface	Client [{clientMac}] was recognized as [{deviceType}], and blocked by a device policy in AP [{apMac}]
Description	This event occurs when a client is blocked by a device policy.

## Client grace period

Table 317. Client grace period event

Event	Client grace period
Event Type	clientGracePeriod
Event Code	220
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x"
Displayed on the web interface	Client [{userName  clientIP  clientMac}] reconnects WLAN [{ssid}] on AP [{apName&&apMac}] within grace period. No additional authentication is required.
Description	This event occurs when the when the STa interface reconnects and authorizes due to the grace period.

## Onboarding registration succeeded

Table 318. Onboarding registration succeeded event

Event	Onboarding registration succeeded
Event Type	onboardingRegistrationSuccess
Event Code	221
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid", "apLocation"="xxxx", "groupName"="xxxx", "vlanId"="xxxx", "osType"="xxxx", "userAgent"="xxxx"
Displayed on the web interface	Client [{userName  clientlP  clientMac}] of WLAN [{ssid}] on AP [{apName&apMac}] on boarding registration succeeded.
Description	This event occurs when the client on boarding registration is successful.

## Onboarding registration failed

Table 319. Onboarding registration failed event

Event	Onboarding registration failed
Event Type	onboardingRegistrationFailure
Event Code	222
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanld"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid", "apLocation"="xxxx", "groupName"="xxxx", "vlanld"="xxxx", "osType"="xxxx", "userAgent"="xxxx", "reason"="xxxxx"
Displayed on the web interface	Client [{userName  clientIP  clientMac}] of WLAN [{ssid}] on AP [{apName&&apMac}] on boarding registration failed because of [{reason}].
Description	This event occurs when the client onboarding registration fails.

### Remediation succeeded

Table 320. Remediation succeeded event

Event	Remediation succeeded
Event Type	remediationSuccess
Event Code	223
Severity	Informational
Attribute	"remediationType"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "userName"="xxxxx", "userId"="uuid", "reason"="xxxxx"
Displayed on the web interface	Remediation of type [{remediationType}] finished successfully on client [{clientIP  clientMac}] for user [{userName}].
Description	This event occurs when the client remediation is successful.

### Remediation failed

Table 321. Remediation failed event

Event	Remediation failed
Event Type	remediationFailure
Event Code	224
Severity	Informational
Attribute	"remediationType"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "userName"="xxxxx", "userId"="uuid"
Displayed on the web interface	Remediation of type [{remediationType}] failed on client [{clientIP  clientMac}] for user [{userName}].
Description	This event occurs when the client remediation fails.

### Force DHCP disconnected

Table 322. Force DHCP disconnected event

Event	Force DHCP disconnected
Event Type	forceDHCPDisconnect
Event Code	225
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "ssid"="xxxxx", "bssid"="", "wlanId"="xxxxx", "tenantUUID"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "vlanId"=, "radio"="", "encryption"="",
Displayed on the web interface	Client [{userName  IP  clientMac}] disconnected from WLAN [{ssid}] on AP [{apName&apMac}] due to force-dhcp.
Description	This event occurs when the client disconnects by force from the dynamic host configuration protocol.

## WDS device joined

Table 323. WDS device joined event

Event	WDS device joined
Event Type	wdsDeviceJoin
Event Code	226
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "wdsDevicetMac"="xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:
Displayed on the web interface	Device [{wdsDeviceMac}] sends traffic via Client [{clientMac}] in AP [{apName&&apMac}].
Description	This event occurs when a subscriber device joins the network provided by a Customer-Premises Equipment (CPE) of a client associated AP through a wireless distribution system (WDS) mode.

### WDS device left

Table 324. WDS device left event

Event	WDS device left
Event Type	wdsDeviceLeave
Event Code	227
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx", "wdsDevicetMac"="xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:
Displayed on the web interface	Device [{wdsDeviceMac}] stops traffic via Client [{clientMac}] in AP [{apName&&apMac}].
Description	This event occurs when a subscriber device leaves the network provided by a CPE client associated to an AP through WDS.

# **Cluster Events**

Following are the events related to clusters.

Cluster created successfully	New node joined successfully	New node failed to join
Node removal completed	Node removal failed	Node out of service
Cluster in maintenance state	Cluster back in service	Cluster backup completed
Cluster backup failed	Cluster restore completed	Cluster restore failed
Cluster node upgrade completed	Entire cluster upgraded successfully	Cluster upgrade failed
Cluster application stopped	Cluster application started	Cluster backup started
Cluster upgrade started	Cluster leader changed	Node bond interface down
Node bond interface up	Node IP address changed	Node physical interface down
Node physical interface up	Cluster node rebooted	NTP time synchronized
Cluster node shutdown	Cluster upload started	Cluster upload completed
Cluster upload failed	SSH tunnel switched	Cluster remove node started
Node back in service	Resync NTP Time	Disk usage exceed threshold
Cluster out of service	Initiated moving APs in node to a new cluster	Cluster upload vSZ-D firmware started
Cluster upload vSZ-D firmware completed	Cluster upload vSZ-D firmware failed	Cluster upload AP firmware started
Cluster upload AP firmware completed	Cluster upload AP firmware failed	Cluster add AP firmware started
Cluster add AP firmware completed	Cluster add AP firmware failed	Cluster name is changed
Configuration backup started	Configuration backup succeeded	Configuration backup failed
Configuration restore succeeded	Configuration restore failed	Node IPv6 address added
Node IPv6 address deleted		
	•	•

## Cluster created successfully

Table 325. Cluster created successfully event

Event	Cluster created successfully
Event Type	clusterCreatedSuccess
Event Code	801
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Cluster [{clusterName}] created with node [{nodeName}]
Description	This event occurs when a cluster and a node are created.

## New node joined successfully

Table 326. New node joined successfully event

Event	New node joined successfully
Event Type	newNodeJoinSuccess
Event Code	802
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:
Displayed on the web interface	New node [{nodeName}] joined cluster [{clusterName}]
Description	This event occurs when a node joins a cluster session.

## New node failed to join

Table 327. New node failed to join event

Event	New node failed to join
Event Type	newNodeJoinFailed
Event Code	803
Severity	Critical

Table 327. New node failed to join event

Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	New node [{nodeName}] failed to join cluster [{clusterName}]
Description	This event occurs when a node fails to join a cluster session. The controller web interface displays the error message.
Auto Clearance	This event triggers the alarm 801, which is auto cleared by the event code 802.

## Node removal completed

Table 328. Node removal completed event

Event	Node removal completed
Event Type	removeNodeSuccess
Event Code	804
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] removed from cluster [{clusterName}]
Description	This event occurs when a node is removed from the cluster session.

### Node removal failed

Table 329. Node removal failed event

Event	Node removal failed
Event Type	removeNodeFailed
Event Code	805
Severity	Major
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] failed to remove from cluster [{clusterName}].

Table 329. Node removal failed event

Description	This event occurs when a node cannot be removed from the cluster.
	This event triggers the alarm 802, which is auto cleared by the event code 804.

### Node out of service

Table 330. Node out of service event

	· ·
Event	Node out of service
Event Type	nodeOutOfService
Event Code	806
Severity	Critical
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is out of service. Reason:[{reason}].
Description	This event occurs when a node is out of service.
Auto Clearance	This event triggers the alarm 803, which is auto cleared by the event code 835.

### Cluster in maintenance state

Table 331. Cluster in maintenance state event

Event	Cluster in maintenance state
Event Type	clusterInMaintenanceState
Event Code	807
Severity	Critical
Attribute	"clusterName"="xxx"
Displayed on the web interface	[{clusterName}] is in maintenance state
Description	This event occurs when a node is in a maintenance state.
Auto Clearance	This event triggers the alarm 804, which is auto cleared by the event code 808.

### Cluster back in service

Table 332. Cluster back in service event

Event	Cluster back in service
Event Type	clusterBackToInService
Event Code	808
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	[{clusterName}] is now in service
Description	This event occurs when a cluster is back in service.

## Cluster backup completed

Table 333. Cluster backup completed event

Event	Cluster backup completed
Event Type	backupClusterSuccess
Event Code	809
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup completed
Description	This event occurs when a cluster backup is complete.

## Cluster backup failed

Table 334. Cluster backup failed event

Event	Cluster backup failed
Event Type	backupClusterFailed
Event Code	810
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup failed. Reason[{reason}].

Table 334. Cluster backup failed event

Description	This event occurs when a cluster backup fails.
	This event triggers the alarm 805, which is auto cleared by the event code 809.

# Cluster restore completed

Table 335. Cluster restore completed event

Event	Cluster restore completed
Event Type	restoreClusterSuccess
Event Code	811
Severity	Informational
Attribute	"nodeName"="xxx", "clusterName"="xxx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] restore completed
Description	This event occurs when restoration of a node to a cluster is successful.

### Cluster restore failed

Table 336. Cluster restore failed event

Event	Cluster restore failed
Event Type	restoreClusterFailed
Event Code	812
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] restore failed. Reason [{reason}].
Description	This event occurs when restoration of a node in a cluster fails.
Auto Clearance	This event triggers the alarm 806, which is auto cleared by the event code 811.

## Cluster node upgrade completed

Table 337. Cluster node upgrade completed event

Event	Cluster node upgrade completed
Event Type	upgradeClusterNodeSuccess
Event Code	813
Severity	Informational
Attribute	clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx", "fromVersion"="x.x",
	"toVersion"="x.x"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] upgraded from [{fromVersion}] to [{toVersion}]
Description	This event occurs when version upgrade of a node is successful.

## Entire cluster upgraded successfully

Table 338. Entire cluster upgraded successfully event

Event	Entire cluster upgraded successfully
Event Type	upgradeEntireClusterSuccess
Event Code	814
Severity	Informational
Attribute	clusterName"="xxx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Cluster [{clusterName}] upgraded from [{fromVersion}] to [{toVersion}].
Description	This event occurs when version upgrade of a cluster is successful.

# Cluster upgrade failed

Table 339. Cluster upgrade failed event

Event	Cluster upgrade failed
Event Type	upgradeClusterFailed
Event Code	815
Severity	Major
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"="xx:xx:xx:xx:xx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Cluster [{clusterName}] could not be upgraded from [{fromVersion}] to [{toVersion}].
Description	This event occurs when the version upgrade of a cluster fails.
Auto Clearance	This event triggers the alarm 807, which is auto cleared by the event code 814.

## Cluster application stopped

Table 340. Cluster application stopped event

Event	Cluster application stopped
Event Type	clusterAppStop
Event Code	816
Severity	Critical
Attribute	"appName"="xxxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx",
Displayed on the web interface	Application [{appName}] on node [{nodeName}] stopped
Description	This event occurs when an application on node is stopped.
Auto Clearance	This event triggers the alarm 808, which is auto cleared by the event code 817.

## Cluster application started

Table 341. Cluster application started event

Event	Cluster application started
Event Type	clusterAppStart
Event Code	817
Severity	Informational
Attribute	"appName"="xxxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx:,
Displayed on the web interface	Application [{appName}] on node [{nodeName}] started
Description	This event occurs when an application on node starts.

## Cluster backup started

Table 342. Cluster backup started event

Event	Cluster backup started
Event Type	clusterBackupStart
Event Code	818
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx",
	"nodeMac"=" xx:xx:xx:xx:xx",
Displayed on the web interface	Starting backup in cluster[{clusterName}]
Description	This event occurs when a backup for a node commences.

# Cluster upgrade started

Table 343. Cluster upgrade started event

Event	Cluster upgrade started
Event Type	clusterUpgradeStart
Event Code	819
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Starting upgrade in cluster[{clusterName}]
Description	This event occurs when an upgrade for a node commences.

## Cluster leader changed

Table 344. Cluster leader changed event

Event	Cluster leader changed
Event Type	clusterLeaderChanged
Event Code	820
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] promoted to leader
Description	This event occurs when a node is changed to a lead node.

#### Node bond interface down

Table 345. Node bond interface down event

Event	Node bond interface down
Event Type	nodeBondInterfaceDown
Event Code	821
Severity	Major
Attribute	"nodeMac"=" xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Network interface [{networkInterface  ifName}] on node [{nodeName}] is down.
Description	This event occurs when the network interface of a node is down.
Auto Clearance	This event triggers the alarm 809, which is auto cleared by the event code 822.

# Node bond interface up

Table 346. Node bond interface up event

Event Code 822  Severity Informational  Attribute "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx", "ifName"="xxxx"  Displayed on the web Network interface [{networkInterface  ifName}] on node [{nodeName}]	Event	Node bond interface up
Severity Informational  Attribute "nodeName"="xxxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"  Displayed on the web Network interface [{networkInterface  ifName}] on node [{nodeName}]	Event Type	nodeBondInterfaceUp
Attribute "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"  Displayed on the web Network interface [{networkInterface  ifName}] on node [{nodeName}]	Event Code	822
Displayed on the web Network interface [{networkInterface  ifName}] on node [{nodeName}]	Severity	Informational
	Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx", "ifName"="xxxx"
	1 7	Network interface [{networkInterface  ifName}] on node [{nodeName}] is up.
Description This event occurs when the network interface of a node is up.	Description	This event occurs when the network interface of a node is up.

### Node IP address changed

Table 347. Node IP address changed event

Event	Node IP address changed
Event Type	nodelPChanged
Event Code	823
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "ifName"="xxxx", "ip"="xxx.xxx.xxx.xxx"
Displayed on the web interface	IP address of network interface [{networkInterface  ifName}] on node [{nodeName}] changed to [{ip}].
Description	This event occurs when the node's network interface IP address changes.

## Node physical interface down

Table 348. Node physical interface down event

Event	Node physical interface down
Event Type	nodePhyInterfaceDown
Event Code	824
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Physical network interface [{networkInterface  ifName}] on node [{nodeName}] is down.
Description	This event occurs when the node's physical interface is down.
Auto Clearance	This event triggers the alarm 810, which is auto cleared by the event code 825.

# Node physical interface up

Table 349. Node physical interface up event

Event	Node physical interface up
Event Type	nodePhyInterfaceUp
Event Code	825
Severity	Informational
Attribute	"nodeMac"=" xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Physical network interface [{networkInterface  ifName}] on node [{nodeName}] is up.
Description	This event occurs when the node's physical interface is up.

#### Cluster node rebooted

Table 350. Cluster node rebooted event

Event	Cluster node rebooted
Event Type	nodeRebooted
Event Code	826
Severity	Major
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx", "clusterName"="xxx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] rebooted
Description	This event occurs when the node, belonging to a cluster reboots.

# NTP time synchronized

Table 351. NTP time synchronized event

Event	NTP time synchronized
Event Type	ntpTimeSynched
Event Code	827
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Date and time settings on node [{nodeName}] synchronized with NTP server
Description	This event occurs when the date and time settings of a node synchronizes with the NTP server.

#### Cluster node shutdown

Table 352. Cluster node shutdown event

Event	Cluster node shutdown
Event Type	nodeShutdown
Event Code	828
Severity	Major
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] has been shut down
Description	This event occurs when the node is shut down.
Auto Clearance	This event triggers the alarm 813, which is auto cleared by the event code 826.

# Cluster upload started

Table 353. Cluster upload started event

Event	Cluster upload started
Event Type	clusterUploadStart
Event Code	830
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting upload in cluster [{clusterName}].
Description	This event occurs when the cluster upload process starts.

# Cluster upload completed

Table 354. Cluster upload completed event

Event	Cluster upload completed
Event Type	uploadClusterSuccess
Event Code	831
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload completed
Description	This event occurs when the cluster upload process is successful.

#### Cluster upload failed

Table 355. Cluster upload failed event

Event	Cluster upload failed
Event Type	uploadClusterFailed
Event Code	832
Severity	Major
Attribute	"clusterName"="xxx", "reason"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload failed. Reason:[{reason}]
Description	This event occurs when the cluster upload process fails.

#### SSH tunnel switched

Table 356. SSH tunnel switched event

Event	SSH tunnel switched
Event Type	sshTunnelSwitched
Event Code	833
Severity	Major
Attribute	"clusterName"="xx", "nodeName"="xx", "nodeMac"="xx.xx.xx.xx.xx", "wsgMgmtlp"="xx.xx.xx.xx", "status"="ON->OFF", "sourceBladeUUID"="054ee469"
Displayed on the web interface	Node [{nodeName}] SSH tunnel switched [{status}]
Description	This event occurs when the SSH tunnel is switched.

#### Cluster remove node started

Table 357. Cluster remove node started event

Event	Cluster remove node started
Event Type	removeNodeStarted
Event Code	834
Severity	Informational

Table 357. Cluster remove node started event

Attribute	"clusterName"="xxx", "nodeName" ="xxx", "nodeMac"="xx:xx:xx:xx"
Displayed on the web interface	Start to remove node [{nodeName}] from cluster [{clusterName}]
Description	This event occurs when the node start is removed.

#### Node back in service

Table 358. Node back in service event

Event	Node back in service
Event Type	nodeBackToInService
Event Code	835
Severity	Informational
Attribute	"clusterName"="xx", "nodeName" ="xxx", "nodeMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is in service
Description	This event occurs when a node status changes to 'in service'.

# **Resync NTP Time**

Table 359. Resync NTP Time event

Event	Resync NTP Time
Event Type	resyncNTPTime
Event Code	837
Severity	Major
Attribute	"nodeName"="xx", "status"="xx"
Displayed on the web interface	Node [{nodeName}] resyncs time from [{reason}]. The time difference is [{status}] seconds.
Description	This event occurs when cluster time is not synchronized.

# Disk usage exceed threshold

Table 360. Disk usage exceed threshold

Event	Disk usage exceed threshold
Event Type	diskUsageExceed
Event Code	838
Severity	Critical
Attribute	"nodeName"="xx", "status"="xx"
Displayed on the web interface	The disk usage of node [{nodeName}] is over {status}%.
Description	This event occurs when the disk usage exceeds the threshold limit of 96%. For event 838, the threshold is 95%.

#### Cluster out of service

Table 361. Cluster out of service event

Event	Cluster out of service
Event Type	clusterOutOfService
Event Code	843
Severity	Critical
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] is out of service.
Description	This event occurs when the cluster is out of service.
Auto Clearance	This event triggers the alarm 843, which is auto cleared by the event code 808.

#### Initiated moving APs in node to a new cluster

Table 362. Initiated moving APs in node to a new cluster event

Event	Initiated moving APs in node to a new cluster
Event Type	clusterInitiatedMovingAp
Event Code	844
Severity	Informational
Attribute	"nodeName"="xxx"
	"clusterName"="xxx"
Displayed on the web interface	Initiated moving APs in node [{nodeName}] of cluster [{clusterName}] to a new cluster.
Description	This event occurs when the command to move the APs in the node to another cluster is received.

NOTE: Events 845, 846 and 847 are not applicable for SCG.

#### Cluster upload vSZ-D firmware started

Table 363. Cluster upload vSZ-D firmware started event

Event	Cluster upload vSZ-D firmware started
Event Type	clusterUploadVDPFirmwareStart
Event Code	845
Severity	Informational
Attribute	"clusterName"="xx"
Displayed on the web interface	Starting upload vSZ-D firmware in cluster [{clusterName}]
Description	This event occurs when the cluster starts and uploads vSZ-data plane firmware.

#### Cluster upload vSZ-D firmware completed

Table 364. Cluster upload vSZ-D firmware completed event

Event	Cluster upload vSZ-D firmware completed
Event Type	uploadClusterVDPFirmwareSuccess
Event Code	846
Severity	Informational
Attribute	"clusterName"="xxx" "status"="StartTime:yyyy-MM-dd hh:mm:ss, EndTime:yyyy-MM-dd hh:mm:ss, Duration:hh:mm:ss"
Displayed on the web interface	Cluster [{clusterName}] upload vSZ-D firmware completed. [{status}]
Description	This event occurs when the cluster upload process of vSZ-data plane firmware is successful.

#### Cluster upload vSZ-D firmware failed

Table 365. Cluster upload vSZ-D firmware failed event

Event	Cluster upload vSZ-D firmware failed
Event Type	uploadClusterVDPFirmwareFailed
Event Code	847
Severity	Informational
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload vSZ-D firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster upload process of vSZ-data plane firmware fails.

### Cluster upload AP firmware started

Table 366. Cluster upload AP firmware started event

Event	Cluster upload AP firmware started
Event Type	clusterUploadAPFirmwareStart
Event Code	848
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting upload AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster upload process to the AP firmware starts.

## Cluster upload AP firmware completed

Table 367. Cluster upload AP firmware completed event

Event	Cluster upload AP firmware completed
Event Type	clusterUploadAPFirmwareSuccess
Event Code	849
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware completed.
Description	This event occurs when the cluster upload process to the AP firmware is successful.

#### Cluster upload AP firmware failed

Table 368. Cluster upload AP firmware failed event

Event	Cluster upload AP firmware failed
Event Type	clusterUploadAPFirmwareFailed
Event Code	850
Severity	Major
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster upload process to the AP firmware fails.

#### Cluster add AP firmware started

Table 369. Cluster add AP firmware started event

Event	Cluster add AP firmware started
Event Type	clusterAddAPFirmwareStart
Event Code	851
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting add AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster add process to the AP firmware process starts.

# Cluster add AP firmware completed

Table 370. Cluster add AP firmware completed event

Event	Cluster add AP firmware completed
Event Type	clusterAddAPFirmwareSuccess
Event Code	852
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting add AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster add process to the AP firmware is successful.

#### Cluster add AP firmware failed

Table 371. Cluster add AP firmware failed event

Event	Cluster add AP firmware failed
Event Type	clusterAddAPFirmwareFailed
Event Code	853
Severity	Major
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] add AP firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster add process to the AP firmware fails.

## Cluster name is changed

Table 372. Cluster name is changed event

Event	Cluster name is changed
Event Type	clusterNameChanged
Event Code	854
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster name is changed to [{clusterName}]
Description	This event occurs when the cluster node name is modified. By enabling email and SNMP notification in the controller user interface (Configuration > System > Event Management) of the event, SNMP
	trap and email will be generated on successful cluster-name modification.
	Cluster name change will fail if any node in either a two, three or four node cluster is out of service. For example, if in a three node cluster, any one node is powered off or the Ethernet cable is unplugged, cluster name change will fail.

# Configuration backup started

Table 373. Configuration backup started event

Event	Configuration backup started
Event Type	clusterCfgBackupStart
Event Code	860
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup is started.
Description	This event occurs when cluster configuration backup starts.

#### Configuration backup succeeded

Table 374. Configuration backup succeeded

Event	Configuration backup succeeded
Event Type	clusterCfgBackupSuccess
Event Code	861
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup succeeded.
Description	This event occurs when cluster backup configuration is successful.

## Configuration backup failed

Table 375. Configuration backup failed event

Event	Configuration backup failed
Event Type	clusterCfgBackupFailed
Event Code	862
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup failed.
Description	This event occurs when backup configuration fails.
Auto Clearance	This event triggers the alarm 862, which is auto cleared by the event code 861.

## Configuration restore succeeded

Table 376. Configuration restore succeeded event

Event	Configuration restore succeeded
Event Type	clusterCfgRestoreSuccess
Event Code	863
Severity	Informational
Attribute	"clusterName"="xxx"

Table 376. Configuration restore succeeded event

Displayed on the web interface	Cluster [{clusterName}] configuration restore succeeded.
Description	This event occurs when the cluster restore configuration is successful.

#### Configuration restore failed

Table 377. Configuration restore failed event

Event	Configuration restore failed
Event Type	clusterCfgRestoreFailed
Event Code	864
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore failed.
Description	This event occurs when the restore configuration fails.
Auto Clearance	This event triggers the alarm 864, which is auto cleared by the event code 863.

#### Node IPv6 address added

Table 378. Node IPv6 address added event

Event	Node IPv6 address added
Event Type	nodelPv6Added
Event Code	2501
Severity	Informational
Attribute	"nodeMac"="xxx", "ifName"=" xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network interface [{networkInterface  ifName}] on node [{nodeName}] added IPv6 address [{ip}].
Description	This event occurs when the node adds the IPv6 address.

#### Node IPv6 address deleted

Table 379. Node IPv6 address deleted event

Event	Node IPv6 address deleted
Event Type	nodelPv6Deleted
Event Code	2502
Severity	Informational
Attribute	"nodeMac"="xxx", "ifName"=" xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx"
Displayed on the web interface	Network interface [{networkInterface  ifName}] on node [{nodeName}] deleted IPv6 address [{ip}].
Description	This event occurs when the node deletes the IPv6 address.

**NOTE:** Refer to Cluster Alarms.

# **Configuration Events**

Following are the events related to configuration.

- Configuration updated
- Configuration update failed
- Configuration receive failed
- Incorrect flat file configuration
- Zone configuration preparation failed
- AP configuration generation failed
- End-of-life AP model detected

#### Configuration updated

Table 380. Configuration updated event

Event	Configuration updated
Event Type	cfgUpdSuccess
Event Code	1007
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cnr", "realm"="NA" "processName"="aut" "SCGMgmtlp"="x.x.x.x" "cause"="xx"
Displayed on the web interface	Configuration [{cause}] applied successfully in [{processName}] process at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the configuration notification receiver (CNR) process successfully applies the configuration to the modules.

### Configuration update failed

Table 381. Configuration update failed event

Event	Configuration update failed	
Event Type	cfgUpdFailed	
Event Code	1008	
Severity	Debug	
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cnr" "realm"="NA"	
	"processName"="aut" "SCGMgmtlp"="x.x.x.x" "cause"="xx"	

Table 381. Configuration update failed event

Displayed on the web interface	Failed to apply configuration [{cause}] in [{processName}] process at {produce.short.name} [{SCGMgmtlp}].
Description	This event occurs when the CNR receives a negative acknowledgment when applying the configuration settings to the module. Possible cause is that a particular process/module is down.

## Configuration receive failed

Table 382. Configuration receive failed event

Event	Configuration receive failed
Event Type	cfgRcvFailed
Event Code	1009
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cnr" "realm"="NA" "SCGMgmtlp"="x.x.x.x", "cause"="xx"
Displayed on the web interface	Failed to fetch configuration [{cause}] by CNR in {produce.short.name} [{SCGMgmtlp}].
Description	This event occurs when the CNR receives an error or negative acknowledgment/improper/incomplete information from the configuration change notifier (CCN).

# Incorrect flat file configuration

Table 383. Incorrect flat file configuration event

Event	Incorrect flat file configuration
Event Type	incorrectFlatFileCfg
Event Code	1012
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut", "realm"="NA", "SCGMgmtlp"="xxxx", "cause"="xxx", "file"="xxx"
Displayed on the web interface	[{srcProcess}] detected an configuration parameter is incorrectly configured in file [{file}] at {produce.short.name} [{SCGMgmtlp}].

Table 383. Incorrect flat file configuration event

Description	This event occurs when any flat file configuration parameter is not
	semantically or syntactically correct.

#### Zone configuration preparation failed

Table 384. Zone configuration preparation failed event

Event	Zone configuration preparation failed
Event Type	zoneCfgPrepareFailed
Event Code	1021
Severity	Major
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone"
Displayed on the web interface	Failed to prepare zone [{zoneName}] configuration required by ap configuration generation
Description	This event occurs when the controller is unable to prepare a zone configuration required by the AP.

## AP configuration generation failed

Table 385. AP configuration generation failed event

AP configuration generation failed
apCfgGenFailed
1022
Major
"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone", "apCfgGenFailedCount"="25"
Failed to generate configuration for [{apCfgGenFailedCount}] AP(s) under zone[{zoneName}].
This event occurs when the controller fails to generate the AP configuration under a particular zone.

#### End-of-life AP model detected

Table 386. End-of-life AP model detected event

Event	End-of-life AP model detected
Event Type	cfgGenSkippedDueToEoIAp
Event Code	1023
Severity	Major
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone","model"= "R300,T300"
Displayed on the web interface	Detected usage of end-of-life ap model(s)[{model}] while generating configuration for AP(s) under zone[{zoneName}].
Description	This event occurs when the controller detects the AP model's end-of-life under a certain zone.

**NOTE:** Refer to Configuration Alarms.

# **Data Plane Events**

**NOTE:** Events 530, 532, 537, 538, 550, 551, 552 and 553 are not applicable for SCG.

Following are the events related to data plane.

Data plane discovered	Data plane discovery failed	Data plane configuration updated
Data plane configuration update failed	Data plane rebooted	Data plane heartbeat lost
Data plane IP address updated	Data plane updated to a new control plane	Data plane status update failed
Data plane statistics update failed	Data plane connected	Data plane disconnected
Data plane physical interface down	Data plane physical interface up	Data plane packet pool is under low water mark
Data plane packet pool is under critical low water mark	Data plane packet pool is above high water mark	Data plane core dead
Data plane process restarted	Data plane discovery succeeded	Data plane managed
Data plane deleted	Data plane license is not enough	Data plane upgrade started
Data plane upgrading	Data plane upgrade succeeded	Data plane upgrade failed

#### Data plane discovered

Table 387. Data plane discovered event

Event	Data plane discovered
Event Type	dpDiscoverySuccess (server side detect)
Event Code	501
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] sent a connection request to {produce.short.name} [{cpName  wsgIP}].

Table 387. Data plane discovered event

Description	This event occurs when the data plane successfully connects to the
	controller.

# Data plane discovery failed

Table 388. Data plane discovery failed event

Event	Data plane discovery failed
Event Type	dpDiscoveryFail (detected on the server side)
Event Code	502
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] failed to send a discovery request to {produce.short.name} [{cpName  wsgIP}].
Description	This event occurs when the data plane fails to connect to the controller.

# Data plane configuration updated

Table 389. Data plane configuration updated event

Event	Data plane configuration updated
Event Type	dpConfUpdated
Event Code	504
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "configID"= "123456781234567"
Displayed on the web interface	Data plane [{dpName  dpKey}] updated to configuration [{configID}].
Description	This event occurs when the data plane configuration is updated.

#### Data plane configuration update failed

Table 390. Data plane configuration update failed event

Event	Data plane configuration update failed
Event Type	dpConfUpdateFailed
Event Code	505
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx", "configID"=" 123456781234567"
Displayed on the web interface	Data plane [{dpName  dpKey}] failed to update to configuration [{configID}]
Description	This event occurs when the data plane configuration update fails.
Auto Clearance	This event triggers the alarm 501, which is auto cleared by the event code 504.

#### Data plane rebooted

Table 391. Data plane rebooted event

Event	Data plane rebooted
Event Type	dpReboot (server side detect)
Event Code	506
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName  dpKey}] rebooted
Description	This event occurs when the data plane is rebooted.

### Data plane heartbeat lost

Table 392. Data plane heartbeat lost event

Event	Data plane heartbeat lost
Event Type	dpLostConnection (detected on the server side)
Event Code	507
Severity	Informational

Table 392. Data plane heartbeat lost event

Attribute	"dpKey"="xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName  dpKey}] heartbeat lost.
Description	This event occurs when the data plane heartbeat lost.

### Data plane IP address updated

Table 393. Data plane IP address updated event

Event	Data plane IP address updated
Event Type	dpIPChanged
Event Code	508
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName  dpKey}] IP address changed
Description	This event occurs when the IP address of the data plane is modified.

## Data plane updated to a new control plane

Table 394. Data plane updated to a new control plane event

Event	Data plane updated to a new control plane
Event Type	dpChangeControlBlade
Event Code	509
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "oldwsgIP"="xxx.xxx.xxx.xxx",
	"newwsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] switched from {produce.short.name} [{oldCpName  oldWsgIP}] to [{cpName  newWsgIP}].
Description	This event occurs when the data plane connects to a new controller instance.

#### Data plane status update failed

Table 395. Data plane status update failed event

Event	Data plane status update failed
Event Type	dpUpdateStatusFailed
Event Code	510
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] failed to update its status to {produce.short.name} [{cpName  wsgIP}].
Description	This event occurs when the data plane fails to update its status on the controller.

# Data plane statistics update failed

Table 396. Data plane statistics update failed event

Event	Data plane statistics update failed
Event Type	dpUpdateStatisticFailed
Event Code	511
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] failed to update its statistics to {produce.short.name} [{cpName  wsgIP}].
Description	This event occurs when the data plane fails to update statistics to the controller.

#### Data plane connected

Table 397. Data plane connected event

Event	Data plane connected
Event Type	dpConnected
Event Code	512
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] connected to {produce.short.name} [{cpName  wsgIP}].
Description	This event occurs when the data plane connects to the controller.

# Data plane disconnected

Table 398. Data plane disconnected event

Event	Data plane disconnected
Event Type	dpDisconnected
Event Code	513
Severity	Critical
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] disconnected from {produce.short.name} {cpName  wsgIP}].
Description	This event occurs when the data plane disconnects from the controller.
Auto Clearance	This event triggers the alarm 503, which is auto cleared by the event code 512.

#### Data plane physical interface down

Table 399. Data plane physical interface down event

Event	Data plane physical interface down
Event Type	dpPhyInterfaceDown
Event Code	514
Severity	Critical
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName  dpKey}] is down.
Description	This event occurs when the network link of the data plane is down.
Auto Clearance	This event triggers the alarm 504, which is auto cleared by the event code 515.

## Data plane physical interface up

Table 400. Data plane physical interface up event

Event	Data plane physical interface up
Event Type	dpPhyInterfaceUp
Event Code	515
Severity	Informational
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName  dpKey}] is up.
Description	This event occurs when the network link of the data plane is up.

# Data plane packet pool is under low water mark

Table 401. Data plane packet pool is under low water mark event

Event	Data plane packet pool is under low water mark
Event Type	dpPktPoolLow
Event Code	516
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName  dpKey}] is under low-water mark.
Description	This event occurs when the data core packet pool is below the water mark level.
Auto Clearance	This event triggers the alarm 516, which is auto cleared by the event code 518.

#### Data plane packet pool is under critical low water mark

Table 402. Data plane's packet pool is under critical low water mark event

Event	Data plane packet pool is under critical low water mark
Event Type	dpPktPoolCriticalLow
Event Code	517
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName  dpKey}] is under critical low-water mark.
Description	This event occurs when the data core packet pool reaches the critical water mark level.

## Data plane packet pool is above high water mark

Table 403. Data plane packet pool is above high water mark event

Event	Data plane packet pool is above high water mark
Event Type	dpPktPoolRecover
Event Code	518
Severity	Informational
Attribute	dpKey="xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName  dpKey}] is above high-water mark
Description	This event occurs when the data plane's packet pool is recovered when it is above high-water mark.

#### Data plane core dead

Table 404. Data plane core dead event

El	Data also a social del
Event	Data plane core dead
Event Type	dpCoreDead
Event Code	519
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] has dead data core.
Description	This event occurs when one or multiple data core packet pool is lost / dead.

#### Data plane process restarted

Table 405. Data plane process restarted event

Event	Data plane process restarted
Event Type	dpProcessRestart
Event Code	520
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx:xx", processName="xxxx"
Displayed on the web interface	[{processName}] on data plane [{dpName&&dpKey}] is restarted.
Description	This event occurs when any process on the data plane crashes and restarts.

NOTE: Event 530 is not applicable for SCG.

## Data plane discovery succeeded

Table 406. Data plane discovery succeeded event

Event	Data plane discovery succeeded
Event Type	dpDiscoverySuccess
Event Code	530
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] sent a discovery request to {produce.short.name} [{wsgIP}].
Description	This event occurs when data plane sends a discovery request to the {produce.short.name} successfully.

NOTE: Event 532 is not applicable for SCG.

#### Data plane managed

Table 407. Data plane managed event

Event	Data plane managed
Event Type	dpStatusManaged
Event Code	532
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] approved by {produce.short.name} [{wsgIP}].
Description	This event occurs when data plane is approved by the {produce.short.name}.

**NOTE:** Events 537, 538, 550, 551, 552 and 553 are not applicable for SCG.

## Data plane deleted

Table 408. Data plane deleted event

Event	Data plane deleted
Event Type	dpDeleted
Event Code	537
Severity	Informational
Attribute	"dpKey"="xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] deleted.
Description	This event occurs when data plane is deleted.

#### Data plane license is not enough

Table 409. Data plane license is not enough event

Event	Data plane license is not enough
Event Type	dpLicenselnsufficient
Event Code	538
Severity	Major
Attribute	"count"= <delete-vdp-count></delete-vdp-count>
Displayed on the web interface	Data plane license is not enough, [{count}] instance of data plane will be deleted.
Description	This event occurs when data plane licenses are insufficient.

# Data plane upgrade started

Table 410. Data plane upgrade started event

Event	Data plane upgrade started
Event Type	dpUpgradeStart
Event Code	550
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}]started the upgrade process.
Description	This event occurs when data plane starts the upgrade process.

# Data plane upgrading

Table 411. Data plane upgrading event

Event	Data plane upgrading
Event Type	dpUpgrading
Event Code	551
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] is upgrading.
Description	This event occurs when data plane starts to upgrade programs and configuration.

# Data plane upgrade succeeded

Table 412. Data plane upgrade succeeded event

Event	Data plane upgrade succeeded
Event Type	dpUpgradeSuccess
Event Code	552
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] has been upgraded successfully.
Description	This event occurs when data plane upgrade is successful.

# Data plane upgrade failed

Table 413. Data plane upgrade failed event

Event	Data plane upgrade failed
Event Type	dpUpgradeFailed
Event Code	553
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] failed to upgrade.
Description	This event occurs when data plane upgrade fails.
Auto Clearance	This event triggers the alarm 553, which is auto cleared by the event code 552.

**NOTE:** Refer to Data Plane Alarms.

# **DHCP Events**

**NOTE:** This event is not applicable for vSZ-H.

Following are the events related to DHCP (Dynamic Host Configuration Protocol).

- DHCP inform received
- DHCP dcln received

#### **DHCP** inform received

Table 414. DHCP inform received event

Event	DHCP inform received
Event Type	dhcplnfmRcvd
Event Code	1238
Severity	Informational
Attribute	"mvnold"=NA "wlanld"=NA,"zoneld"="NA" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="dhcp","realm"="NA" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	DHCP Inform was received by {produce.short.name} [{SCGMgmtlp}] from UE [{ueMacAddr}]
Description	This event occurs when the controller receives the DHCP information.

### **DHCP** dcln received

Table 415. DHCP dcln received event

Event	DHCP dcln received
Event Type	dhcpDclnRcvd
Event Code	1239
Severity	Major
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut","realm"="NA" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	DHCP Decline was received by {produce.short.name} [{SCGMgmtlp}] from UE [{ueMacAddr}]
Description	This event occurs when the controller receives the DHCP declined message. The GTP (GPRS Tunneling Protocol) tunnel is deleted and recreated.

## **GA Interface Events**

NOTE: This section is not applicable for vSZ-H.

Following are the events related to the GA interface (CDRs and GTP').

- Connection to CGF failed
- CGF keepalive not responded
- CDR transfer succeeded
- CDR transfer failed
- CDR generation failed

#### Connection to CGF failed

Table 416. Connection to CGF failed event

Event	Connection to CGF failed
Event Type	cnxnToCgfFailed
Event Code	1610
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="NA", "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Connection with CGF [{cgfSrvrlp}] from RADServerIP [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when channel interface processor (CIP) or GPRS tunneling protocol prime (GTPP) stack detects a connection loss to the charging gateway function (CGF server.
Auto Clearance	This event triggers the alarm 1610, which is auto cleared by the event code 1613.

## CGF keepalive not responded

Table 417. CGF keepalive not responded event

Event	CGF keepalive not responded
Event Type	cgfKeepAliveNotResponded
Event Code	1612
Severity	Informational
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="NA","radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Heartbeat missed between RAD Server [{radSrvrlp}] and CGF Server [{cgfSrvrlp}] in {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when channel interface processor does not receive an acknowledgment for a keep alive request.

### CDR transfer succeeded

Table 418. CDR transfer succeeded event

Event	CDR transfer succeeded
Event Type	cdrTxfrSuccessful
Event Code	1613
Severity	Debug
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="wlan.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	CDR Transfer successful from RAD Server [{radSrvrlp}] to CGF [{cgfSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the call details record is successfully transferred.

### **CDR** transfer failed

Table 419. CDR transfer failed event

Event	CDR transfer failed
Event Type	cdrTxfrFailed
Event Code	1614
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2.2" "cause"=" <reason failure="" for="">"</reason>
Displayed on the web interface	CDR Transfer failed from RAD Server [{radSrvrlp}] to CGF [{cgfSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the call detail record transfers fails.

# CDR generation failed

Table 420. CDR generation failed event

Event	CDR generation failed
Event Type	cdrGenerationFailed
Event Code	1615
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="wlan.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Failed to generate CDR by RAD Server [{radSrvrlp}] in {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the controller cannot format/generate the call detail records.

**NOTE:** Refer to GA Interface Alarms.

# **Gn/S2a Interface Events**

**NOTE:** This event is not applicable for vSZ-H.

Following are the events related to Gn/S2a interface.

GGSN restarted	GGSN not reachable	Echo response not received
GGSN not resolved	PDP context established	PDP create failed
PDP update by HLR succeeded	PDP update by HLR failed	PDP update by roaming succeeded
PDP update by roaming failed	PDP update by GGSN succeeded	PDP update by GGSN failed
PDP delete by TTG succeeded	PDP delete by TTG failed	PDP delete by GGSN succeeded
PDP delete by GGSN failed	IP assigned	IP not assigned
Unknown UE	PDP update success COA	PDP update fail COA
PDNGW could not be resolved	PDNGW version not supported	Associated PDNGW down
Create session response failed	Decode failed	Modify bearer response failed
Delete session response failed	Delete bearer request failed	Update bearer request failed
CGF server not configured		

#### **GGSN** restarted

Table 421. GGSN restarted event

Event	GGSN restarted
Event Type	ggsnRestarted
Event Code	1210
Severity	Major
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm" "realm"="NA" "gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	GGSN [{ggsnlp}] connected to {produce.short.name} [{SCGMgmtlp}] (GTPC-IP [{gtpclp}]) is restarted

Table 421. GGSN restarted event

Description	This event occurs when GPRS protocol control plane receives a new
	recovery value.

### **GGSN** not reachable

Table 422. GGSN not reachable event

Event	GGSN not reachable
Event Type	ggsnNotReachable
Event Code	1211
Severity	Major
Attribute	"mvnold"="12","ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm","realm"="NA", "gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	GGSN [{ggsnlp}] connected to {produce.short.name} (GTPC-IP [{gtpclp}]) is not reachable
Description	This event occurs when echo request is timed out.

# Echo response not received

Table 423. Echo response not received event

Event	Echo response not received
Event Type	echoRspNotRcvd
Event Code	1212
Severity	Informational
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm" "realm"="NA" "gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	GGSN [{ggsnlp}] did not respond to Echo Request from {produce.short.name} (GTPC-IP [{gtpclp}]) is not reachable
Description	This event occurs when GPRS protocol control plane does not receive an acknowledgment for the single echo request.

### **GGSN** not resolved

Table 424. GGSN not resolved event

Event	GGSN not resolved
Event Type	ggsnNotResolved
Event Code	1215
Severity	Major
Attribute	"mvnold"="12", "wlanld"="1", "zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5"  "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787"
Displayed on the web interface	Failed to resolve GGSN from APN [{apn}] for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}]
Description	This even occurs when access point name is unable to resolve to gateway GPRS support node.

### PDP context established

Table 425. PDP context established event

Event	PDP context established
Event Type	pdpCtxtEstablished
Event Code	1216
Severity	Debug
Attribute	"mvnold"=12,"wlanld"=1 "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	PDP context created for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when packet data protocol is established.

### PDP create failed

Table 426. PDP create failed event

Event	PDP create failed
Event	FDF Cleate falled
Event Type	crtPdpFailed
Event Code	1217
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	PDP context create failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]. Cause [{cause}]
Description	This event occurs when create packet data protocol fails.

# PDP update by HLR succeeded

Table 427. PDP update by HLR succeeded event

Event	PDP update by HLR succeeded
Event Type	initPdpUpdSuccHlr
Event Code	1218
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5"  "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii"  "uelmsi"="12345","ueMsisdn"="98787" "hlrEvent"=" <event from="" hlr="" received="">"</event>
Displayed on the web interface	PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because of [hlrEvent] from HLR

Table 427. PDP update by HLR succeeded event

Description	This event occurs when packet data protocol context is updated
	successfully. Update is initiated by tunneling termination gateway (TTG)
	control plane as a result of the home location register (HLR) initiation.

## PDP update by HLR failed

Table 428. PDP update by HLR failed event

Event	PDP update by HLR failed
Event Type	initPdpUpdFailureHlr
Event Code	1219
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5"  "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii"  "uelmsi"="12345","ueMsisdn"="98787" "cause"="cause of error"  "hlrEvent"=" <event from="" hlr="" received="">"</event>
Displayed on the web interface	PDP context update initiated because of HLR Event [{hlrEvent}] failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]. Failure Cause [{cause}]
Description	This event occurs when update packet data protocol fails. Update is initiated by TTG control plane as a result of HLR initiation.

## PDP update by roaming succeeded

Table 429. PDP update by roaming succeeded event

Event	PDP update by roaming succeeded
Event Type	initPdpUpdSuccRoam
Event Code	1220
Severity	Debug

Table 429. PDP update by roaming succeeded event

Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5"  "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787"
Displayed on the web interface	PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because of UE Roaming
Description	This event occurs when packet data protocol context is updated successfully. Update is initiated by TTG control plane as a result of user equipment.

# PDP update by roaming failed

Table 430. PDP update by roaming failed event

Event	PDP update by roaming failed
Event Type	initPdpUpdFailureRoam
Event Code	1221
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	PDP context update initiated because of UE Roaming failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] Failure Cause [{cause}]
Description	This event occurs when the packet data protocol update fails. This is initiated by TTG control plane as a result of user equipment.

## PDP update by GGSN succeeded

Table 431. PDP update by GGSN succeeded event

Event	PDP update by GGSN succeeded
Event Type	recvPdpUpdSuccGgsn
Event Code	1222
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	GGSN initiated; PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when packet data protocol is updated successfully, which is initiated by the GGSN.

# PDP update by GGSN failed

Table 432. PDP update by GGSN failed event

Event	PDP update by GGSN failed
Event Type	recvPdpUpdFailureGgsn
Event Code	1223
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtpclp"="5.5.5.5" "ggsnlp"="10.10.10.10" "ueMacAddr"="NA" "uelmsi"="NA" "apn"="NA" "SCGMgmtlp"="2.2.2.2" "cause"="cause of error"
Displayed on the web interface	GGSN initiated; PDP context update received from IP [{ggsnlp}] at {produce.short.name} [{SCGMgmtlp}] is failed. Cause [{cause}]
Description	This event occurs when the packet data protocol update fails.

# PDP delete by TTG succeeded

Table 433. PDP delete by TTG succeeded event

Event	PDP delete by TTG succeeded
Event Type	initPdpDelSucc
Event Code	1224
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787"
Displayed on the web interface	{produce.short.name} initiated; PDP context deleted for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when packet data protocol delete is successful.

# PDP delete by TTG failed

Table 434. PDP delete by TTG failed event

Event	PDP delete by TTG failed
Event Type	initPdpDelFailure
Event Code	1225
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	{produce.short.name} initiated; PDP context delete failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]. Cause [{cause}]
Description	This event occurs when packet data protocol delete fails.

## PDP delete by GGSN succeeded

Table 435. PDP delete by GGSN succeeded event

Event	PDP delete by GGSN succeeded
Event Type	recvPdpDelSucc
Event Code	1226
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	GGSN initiated; PDP context deleted for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when packet data protocol delete is successful, as initiated by the GGSN.

# PDP delete by GGSN failed

Table 436. PDP delete by GGSN failed event

Event	PDP delete by GGSN failed
Event Type	recvPdpDelFailure
Event Code	1227
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtpclp"="5.5.5.5" "ggsnlp"="10.10.10.10" "ueMacAddr"="NA" "uelmsi"="NA" "apn"="NA" "SCGMgmtlp"="2.2.2.2" "cause"="cause of error"
Displayed on the web interface	GGSN initiated; PDP context delete received from IP [{ggsnlp}] at {produce.short.name} [{SCGMgmtlp}] is failed. Cause [{cause}].
Description	This event occurs when delete packet data protocol fails. Delete is initiated by GGSN.

# IP assigned

Table 437. IP assigned event

Event	IP assigned
Event Type	ipAssigned
Event Code	1229
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "uelpAddr"="5.5.5.5"
Displayed on the web interface	UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] was assigned IP [{uelpAddr}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when IP address is assigned to the user equipment. This event is applicable for TTG/PDG sessions only.

# IP not assigned

Table 438. IP not assigned event

Event	IP not assigned
Event Type	ipNotAssigned
Event Code	1230
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "cause"=" <why assigned="" be="" could="" ip="" not="">"</why>
Displayed on the web interface	IP could not be assigned to UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because [{cause}]
Description	This event occurs when the IP address is not assigned to user euipment. This event is applicable for TTG/PDG sessions only.

### **Unknown UE**

Table 439. Unknown UE event

Event	Unknown UE
Event Type	unknownUE
Event Code	1231
Severity	Minor
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "cause"="Subscriber Info Not Found" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Received request from un-known UE [{ueMacAddr}] in {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when TTG control plane receives either a DHCP message or a trigger from data plane. It is unable to find the user equipment in the session context.

# PDP update success COA

Table 440. PDP update success COA event

Event	PDP update success COA
Event Type	pdpUpdSuccCOA
Event Code	1244
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "aaaSrvrlp"="5.5.5.5"
Displayed on the web interface	PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}] because of COA from AAA server [{aaaSrvrlp}]
Description	This event occurs when the packet data protocol update is successful when initiating the update process based on the change of authorization received from the external AAA server.

## PDP update fail COA

Table 441. PDP update fail COA event

Event	PDP update fail COA
Event Type	pdpUpdFailCOA
Event Code	1245
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345","ueMsisdn"="98787" "aaaSrvrlp"="5.5.5.5" "cause"="cause of error"
Displayed on the web interface	PDP context update initiated because of COA from AAA server [{gtpclp}] failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]. Failure Cause [{cause}].
Description	This event occurs when the packet data protocol update fails when initiating the update process based on the change of authorization received from the external AAA server.

## PDNGW could not be resolved

Table 442. PDNGW could not be resolved event

Event	PDNGW could not be resolved
Event Type	pdnGwNotResolved
Event Code	1950
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "apn"="ruckus.com"
Displayed on the web interface	[{srcProcess}] APN [{apn}] could not be resolved on {produce.short.name} [{SCGMgmtlp}], with username [{uelmsi}@{realm}]

Table 442. PDNGW could not be resolved event

Description	This event occurs when the access point name is unable to resolve to
	PDN GW.

# PDNGW version not supported

Table 443. PDNGW version not supported event

Event	PDNGW version not supported
Event Type	pdnGwVersionNotSupportedMsgReceived
Event Code	1952
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii""uelmsi"="12345","ueMsisdn"="98787" "APN"="ruckus.com", "pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Version not supported message received from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the version is not supported for messages received from PDN GW.

### **Associated PDNGW down**

Table 444. Associated PDNGW down event

Event	Associated PDNGW down
Event Type	pdnGwAssociationDown
Event Code	1953
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com","pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Association with PDN GW with IP [{pgwlp}] from {produce.short.name} [{SCGMgmtlp}] down
Description	This event occurs when the association with PDN GW is down due to echo request time out or it fails to send messages to PDN GW.

# Create session response failed

Table 445. Create session response failed event

Event	Create session response failed
Event Type	createSessionResponseFailed
Event Code	1954
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com" "cause"="xx","pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Create Session response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This event occurs when create session response from PDN GW fails with a cause.

### Decode failed

Table 446. Decode failed event

Event	Decode failed
Event Type	decodeFailed
Event Code	1955
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com", "pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Decode of message received from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed
Description	This event occurs when decoding of messages received from PDN GW fails.

# Modify bearer response failed

Table 447. Modify bearer response failed event

Event	Modify bearer response failed
Event Type	modifyBearerResponseFailed
Event Code	1956
Severity	Major
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787", "APN"="ruckus.com"  "cause"="xx","pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Modify Bearer Response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This event occurs when modify bearer response from PDN GW fails with a cause.

## Delete session response failed

Table 448. Delete session response failed event

Event	Delete session response failed
Event Type	deleteSessionResponseFailed
Event Code	1957
Severity	Major
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2"  "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345"  "ueMsisdn"="98787" "APN"="ruckus.com"  "cause"="xx","pgwlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Delete Session response from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This event occurs when the delete session response from PDN GW fails.

# Delete bearer request failed

Table 449. Delete bearer request failed event

Event	Delete bearer request failed
Event Type	deleteBearerRequestFailed
Event Code	1958
Severity	Major
Attribute	mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com","cause"=" <reason failure="" for="">","pgwlp"="1.1.1.1"</reason>
Displayed on the web interface	[{srcProcess}] Delete Bearer Request from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]

Table 449. Delete bearer request failed event

Description	This event occurs when the delete bearer request from PDN GW fails
	with decode error.

# Update bearer request failed

Table 450. Update bearer request failed event

Event	Update bearer request failed
Event Type	updateBearerRequestFailed
Event Code	1959
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com", "cause"=" <reason failure="" for="">", "pgwlp"="1.1.1.1"</reason>
Displayed on the web interface	[{srcProcess}] Update bearer request from PDN GW with IP [{pgwlp}] on {produce.short.name} [{SCGMgmtlp}] failed, for UE with username [{uelmsi}@{realm}] because [{cause}]
Description	This event occurs when the update bearer request fails with a decode error.

# CGF server not configured

Table 451. CGF server not configured event

Event	CGF server not configured
Event Type	cgfServerNotConfigured
Event Code	1960
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="CIP" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"=ruckus.com "cgfSrvrlp" = "1.1.1.1", "ggsnlp"="10.10.10.10"
Displayed on the web interface	CGF server IP [{cgfSrvrlp}] received from PDN GW/GGSN with IP [{ggsnlp}] on {produce.short.name} [{SCGMgmtlp}] is not configured
Description	This event occurs when the IP address of the charging gateway function server received from GGSN/PDNGW is not configured in the controller web interface.

NOTE: Refer to Gn/S2a Interface Alarms.

### Gr Interface Event

NOTE: This section is not applicable for vSZ-H.

Following are the events related to GR interface.

- Destination not reachable
- Destination available
- App server down
- App server inactive
- App server active
- Association establishment failed
- Association down
- Association up
- Send auth info success
- Auth info sending failed
- · GPRS location update succeeded
- GPRS location update failed
- Insert sub data success
- Insert sub data failed
- Outbound routing failure
- Did allocation failure
- Restore data success
- Restore data failed

### Destination not reachable

Table 452. Destination not reachable event

Event	Destination not reachable
Event Type	destNotRecheable
Event Code	1618
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is unavailable
Description	This event occurs when the point code is unreachable due to a pause indicator
Auto Clearance	This event triggers the alarm 1618, which is auto cleared by the event code 1620.

### **Destination available**

Table 453. Destination available event

Event	Destination available
Event Type	destAvailable
Event Code	1620
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is available
Description	This event occurs when the point code is available due to the resume indicator.

# App server down

Table 454. App server down event

Event	App server down
Event Type	appServerDown
Event Code	1623
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" ="1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Down, Routing Context [{routingContext}], local Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is down from the remote IP security protocol (IPSP) or controller.
Auto Clearance	This event triggers the alarm 1623, which is auto cleared by the event code 1625.

# App server inactive

Table 455. App server inactive event

_	
Event	App server inactive
Event Type	appServerInactive
Event Code	1624
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" ="1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Inactive, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is inactive from the remote IPSP/controller.
Auto Clearance	This event triggers the alarm 1624, which is auto cleared by the event code 1625.

## App server active

Table 456. App server active event

Event	App server active
Event Type	appServerActive
Event Code	1625
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" ="1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Active, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is active from the remote IPSP or signalling gateway (SG).

### Association establishment failed

Table 457. Association establishment failed event

Event	Association establishment failed
Event Type	assocEstbFailed
Event Code	1626
Severity	Critical
Attribute	"mvnold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip"
Displayed on the web interface	Failed to establish SCTP association. SCTP Abort received from srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This event occurs when it is unable to establish an association to the controller/IPSP.
Auto Clearance	This event triggers the alarm 1626, which is auto cleared by the event code 1628.

### Association down

Table 458. Association down event

Event	Association down
Event Type	assocDown
Event Code	1627
Severity	Critical
Attribute	"mvnold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "srcIP"="10.1.4.10" "srcPort"="2960" "destIP"="10.1.4.20" "destPort"="2960"
Displayed on the web interface	SCTP association DOWN srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This event occurs when the stream control transmission protocol (SCTP) association is down.
Auto Clearance	This event triggers the alarm 1627, which is auto cleared by the event code 1628.

## Association up

Table 459. Association up event

Event	Association up
Event Type	assocUp
Event Code	1628
Severity	Critical
Attribute	"mvnold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "srcIP"="10.1.4.10" "srcPort"="2960" "destIP"="10.1.4.20" "destPort"="2960"
Displayed on the web interface	SCTP association UP. srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This event occurs when the SCTP association is UP.

### Send auth info success

Table 460. Send auth info success event

Event	Send auth info success
Event Type	sendAuthInfoSuccess
Event Code	1630
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918"
Displayed on the web interface	MAP-SendAuthInfo Operation successful from IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when authentication parameters are successfully retrieved.

## Auth info sending failed

Table 461. Auth info sending failed event

Event	Auth info sending failed
Event Type	sendAuthInfoFailed
Event Code	1631
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-SendAuthInfo Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to retrieve the authentication parameters.

## GPRS location update succeeded

Table 462. GPRS location update succeeded event

Event	GPRS location update succeeded
Event Type	updateGprsLocSuccess
Event Code	1632
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918"
Displayed on the web interface	MAP-UpdateGprsLocationOperationSuccessfulforIMSI[{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully updates the GPRS location operation.

## GPRS location update failed

Table 463. GPRS location update failed event

Event	GPRS location update failed
Event Type	updateGprsLocFailed
Event Code	1633
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-UpdateGprsLocation Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when the GPRS location update process fails.

### Insert sub data success

Table 464. Insert sub data success event

Event	Insert sub data success
Event Type	insertSubDataSuccess
Event Code	1634
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918"
Displayed on the web interface	MAP-InsertSubscriberData Operation Successful for IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully inserts the subscriber data operation.

### Insert sub data failed

Table 465. Insert sub data failed event

Event	Insert sub data failed
Event Type	insertSubDataFailed
Event Code	1635
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918" "cause"="ASN decode error"
Displayed on the web interface	MAP-InsertSubscriberData Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to insert the subscriber data operation

# Outbound routing failure

Table 466. Outbound routing failure event

Event	Outbound routing failure
Event Type	outboundRoutingFailure
Event Code	1636
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "operation"="updateGprsLocationReq" "hlrInstance"=" Vodafone_HLR" "uelmsi "=" 04844624203918"
Displayed on the web interface	Unable to route [{operation}] for IMSI [{uelmsi}] to HLR [{hlrInstance}]
Description	This event occurs when it is unable to route transaction capabilities application (TCAP) message to the destination.

### Did allocation failure

Table 467. Did allocation failure event

Event	Did allocation failure
Event Type	didAllocationFailure
Event Code	1637
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip"
Displayed on the web interface	HIP unable to allocate new dialogue
Description	This event occurs when it is unable to allocate the dialogue identifier for a new transaction. This indicates an overload condition.

### Restore data success

Table 468. Restore data success event

Event	Restore data success
Event Type	restoreDataSuccess
Event Code	1639
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi "="04844624203918"
Displayed on the web interface	MAP-RestoreData Operation Successful for IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully restores the data operation.

### Restore data failed

Table 469. Restore data failed event

Event	Restore data failed
Event Type	restoreDataFailed
Event Code	1640
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-RestoreData Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to restore the data operation.

NOTE: Refer to GR Interface Alarms.

## **IPMI** Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to IPMIs.

ipmiVoltage	ipmiThempBB	ipmiThempFP
ipmiThempIOH	ipmiThempMemP	ipmiThempPS
ipmiThempP	ipmiThempHSBP	ipmiFan
ipmiPower	ipmiCurrent	ipmiFanStatus
ipmiPsStatus	ipmiDrvStatus	ipmiREVotage
ipmiREThempBB	ipmiREThempFP	ipmiREThempIOH
ipmiREThempMemP	ipmiREThempPS	ipmiREThempP
ipmiREThempHSBP	ipmiREFan	ipmiREPower
ipmiRECurrent	ipmiREFanStatus	ipmiREPsStatus
ipmiREDrvStatus		

# ipmiVoltage

Table 470. ipmiVoltage event

Event	ipmiVoltage
Event Type	ipmiVoltage
Event Code	901
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}]
Description	This event occurs due to under /over voltage on the control plane.  Baseboard threshold temperatures are:  Critical high - 66 <sup>0</sup> C  Non critical high - 61 <sup>0</sup> C  Non critical low - 10 <sup>0</sup> C  Critical low - 5 <sup>0</sup> C

Table 470. ipmiVoltage event

Auto Clearance	This event triggers the alarm 901, which is auto cleared by the event
	code 926.

# ipmiThempBB

Table 471. ipmiThempBB event

Event	ipmiThempBB
Event Type	ipmiThempBB
Event Code	902
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Baseboard temperature [{status}] on controlplane [{nodeMac}]
Description	This event occurs when the baseboard temperature status is sent. Baseboard threshold temperatures are in the range of 10 <sup>0</sup> Celsius to 61 <sup>0</sup> Celsius. The default threshold is 61 <sup>0</sup> C.
Auto Clearance	This event triggers the alarm 902, which is auto cleared by the event code 927.

# ipmiThempFP

Table 472. ipmiThempFP event

Event	ipmiThempFP
Event Type	ipmiThempFP
Event Code	903
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the front panel temperature status is sent. Front panel threshold temperatures are in the range of 5 <sup>0</sup> Celsius to 44 <sup>0</sup> Celsius. The default threshold is 44 <sup>0</sup> C.

Table 472. ipmiThempFP event

Auto Clearance	This event triggers the alarm 903, which is auto cleared by the event
	code 928.

# ipmiThempIOH

Table 473. ipmiThempIOH event

Event	ipmiThempIOH
Event Type	ipmiThempIOH
Event Code	904
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the chip set temperature status is sent. IOH thermal margin threshold temperatures are in the range of $-20^{0}$ Celsius to $5^{0}$ Celsius. The default threshold is $5^{0}$ C.
Auto Clearance	This event triggers the alarm 904, which is auto cleared by the event code 929.

# ipmiThempMemP

Table 474. ipmiThempMemP event

Event	ipmiThempMemP
Event Type	ipmiThempMemP
Event Code	905
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the processor memory temperature status is sent. Process 1 memory thermal margin threshold temperatures are in the range of -20 <sup>0</sup> Celsius to 5 <sup>0</sup> Celsius. The default threshold is 5 <sup>0</sup> C.

Table 474. ipmiThempMemP event

Auto Clearance	This event triggers the alarm 905, which is auto cleared by the event
	code 930.

# ipmiThempPS

Table 475. ipmiThempPS event

Event	ipmiThempPS
Event Type	ipmiThempPS
Event Code	906
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply temperature status is sent. Power supply 1 and power supply 2 threshold temperatures are in the range of -20 <sup>0</sup> Celsius to 5 <sup>0</sup> Celsius. The default threshold is 5 <sup>0</sup> C.
Auto Clearance	This event triggers the alarm 906, which is auto cleared by the event code 931.

# ipmiThempP

Table 476. ipmiThempP event

Event	ipmiThempP
Event Type	ipmiThempP
Event Code	907
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This event is triggered when the threshold value is in the range of 10 to 110 Celsius. The default threshold is 110C.
Auto Clearance	This event triggers the alarm 907, which is auto cleared by the event code 932.

# ipmiThempHSBP

Table 477. ipmiThempHSBP event

Event	ipmiThempHSBP
Event Type	ipmiThempHSBP
Event Code	908
Severity	Majorf
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the hot swap back plane temperature status in the range of 9 <sup>0</sup> Celsius to 55 <sup>0</sup> Celsius. The default threshold is 55 <sup>0</sup> C.
Auto Clearance	This event triggers the alarm 908, which is auto cleared by the event code 933.

## ipmiFan

Table 478. ipmiFan event

Event	ipmiFan
Event Type	ipmiFan
Event Code	909
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}]
Description	This event occurs when the system fan module status is sent.
Auto Clearance	This event triggers the alarm 909, which is auto cleared by the event code 934.

## ipmiPower

Table 479. ipmiPower event

Event	ipmiPower
Event Type	ipmiPower
Event Code	910
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}]
Description	This event occurs when the AC power input status is sent.
Auto Clearance	This event triggers the alarm 910, which is auto cleared by the event code 935.

# ipmiCurrent

Table 480. ipmiCurrent event

Event	ipmiCurrent
Event Type	ipmiCurrent
Event Code	911
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] +12V% of maximum current output [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply and the maximum voltage output status is sent.
Auto Clearance	This event triggers the alarm 911, which is auto cleared by the event code 936.

# ipmiFanStatus

Table 481. ipmiFanStatus event

Event	ipmiFanStatus
Event Type	ipmiFanStatus
Event Code	912
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the fan module status is sent.
Auto Clearance	This event triggers the alarm 912, which is auto cleared by the event code 937.

## ipmiPsStatus

Table 482. ipmiPsStatus event

Event	ipmiPsStatus
Event Type	ipmiPsStatus
Event Code	913
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply status is sent.
Auto Clearance	This event triggers the alarm 913, which is auto cleared by the event code 938.

## ipmiDrvStatus

Table 483. ipmiDrvStatus event

Event	ipmiDrvStatus
Event Type	ipmiDrvStatus
Event Code	914
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the disk drive status is sent.
Auto Clearance	This event triggers the alarm 914, which is auto cleared by the event code 939.

## ipmiREVotage

Table 484. ipmiREVotage event

Event	ipmiREVotage
Event Type	ipmiREVotage
Event Code	926
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}].
Description	This event occurs when the baseboard voltage comes back to the normal status.

## ipmiREThempBB

Table 485. ipmiREThempBB event

Event	ipmiREThempBB
Event Type	ipmiREThempBB
Event Code	927
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Baseboard temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the baseboard temperature comes back to the normal status.

## ipmiREThempFP

Table 486. ipmiREThempFP event

Event	ipmiREThempFP
Event Type	ipmiREThempFP
Event Code	928
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the front panel temperature comes back to the normal status.

## ipmiREThempIOH

Table 487. ipmiREThempIOH event

Event	ipmiREThemplOH
Event Type	ipmiREThempIOH
Event Code	929
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx

Table 487. ipmiREThempIOH event

Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the chipset temperature comes back to the normal status.

## ipmiREThempMemP

Table 488. ipmiREThempMemP event

Event	ipmiREThempMemP
Event Type	ipmiREThempMemP
Event Code	930
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the processor memory temperature comes back to the normal status.

## ipmiREThempPS

Table 489. ipmiREThempPS event

Event	ipmiREThempPS
Event Type	ipmiREThempPS
Event Code	931
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the power supply temperature comes back to the normal status.

## ipmiREThempP

Table 490. ipmiREThempP event

Event	ipmiREThempP
Event Type	ipmiREThempP
Event Code	932
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the processor temperature comes back to the normal status.

## **ipmiREThempHSBP**

Table 491. ipmiREThempHSBP event

Event	ipmiREThempHSBP
Event Type	ipmiREThempHSBP
Event Code	933
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the hot swap backplane temperature comes back to the normal status.

## ipmiREFan

Table 492. ipmiREFan event

Event	ipmiREFan
Event Type	ipmiREFan
Event Code	934
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx

Table 492. ipmiREFan event

Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}].
Description	This event occurs when the system fan module comes back to the normal status.

## ipmiREPower

Table 493. ipmiREPower event

Event	ipmiREPower
Event Type	ipmiREPower
Event Code	935
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}].
Description	This event occurs when the AC power supply comes back to the normal status.

## ipmiRECurrent

Table 494. ipmiRECurrent event

Event	ipmiRECurrent
Event Type	ipmiRECurrent
Event Code	936
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:xx:
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}].
Description	This event occurs when the AC power supply comes back to the normal status.

## ipmiREFanStatus

Table 495. ipmiREFanStatus event

Event	ipmiREFanStatus
Event Type	ipmiREFanStatus
Event Code	937
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}].
Description	This event occurs when the fan module comes back to the normal status.

## **ipmiREPsStatus**

Table 496. ipmiREPsStatus event

Event	ipmiREPsStatus
Event Type	ipmiREPsStatus
Event Code	938
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}].
Description	This event occurs when the power supply comes back to the normal status.

# ipmiREDrvStatus

Table 497. ipmiREDrvStatus event

Event	ipmiREDrvStatus
Event Type	ipmiREDrvStatus
Event Code	939
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx:xx
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}].
Description	This event occurs when the disk drive status comes back to the normal status.

NOTE: Refer to IPMI Alarms.

## **Licensing Interface Events**

Following are the events related to licensing.

- TTG session warning threshold
- TTG session major threshold
- TTG session critical threshold
- TTG session license exhausted
- License sync succeeded
- License sync failed
- License import succeeded
- License import failed
- License data changed
- License going to expire
- Insufficient license capacity

## TTG session warning threshold

NOTE: This event is not applicable for vSZ-H.

#### Table 498. TTG session warning threshold event

Event	TTG session warning threshold
Event Type	ttgSessionWarningThreshold
Event Code	1240
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtlp}] have reached warning level.
Description	This event occurs when the number of user equipment attached to the system has reached the critical threshold limit.

## TTG session major threshold

NOTE: This event is not applicable for vSZ-H.

#### Table 499. TTG session major threshold event

Event	TTG session major threshold
Event Type	ttgSessionMajorThreshold
Event Code	1241
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtlp}] have reached major level.
Description	This event occurs when the number of user equipment attached to the system has reached the major threshold limit.

#### TTG session critical threshold

**NOTE:** This event is not applicable for vSZ-H.

#### Table 500. TTG session critical threshold event

Event	TTG session critical threshold
Event Type	ttgSessionCriticalThreshold
Event Code	1242
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtlp}] have reached critical level.
Description	This event occurs when the number of user equipment attached to the system has reached the critical threshold limit.

#### TTG session license exhausted

NOTE: This event is not applicable for vSZ-H.

Table 501. TTG session license exhausted event

Event	TTG session license exhausted
Event Type	ttgSessionLicenseExausted
Event Code	1243
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed of {produce.short.name} [{SCGMgmtlp}] have been exhausted for all sessions.
Description	This event occurs when the number of user equipment attached to the system has exceeded the license limit.

## License sync succeeded

Table 502. License sync succeeded event

Event	License sync succeeded
Event Type	licenseSyncSuccess
Event Code	1250
Severity	Informational
Attribute	"nodeName"="xxxxxxxx", "licenseServerName"="ruckuswireless.flexeraoperation.com"
Displayed on the web interface	Node [{nodeName}] sync-up license with license server [{licenseServerName}] succeeded.
Description	This event occurs when the controller successfully synchronizes the license data with the license server.

## License sync failed

Table 503. License sync failed event

Event	License sync failed
Event Type	licenseSyncFail
Event Code	1251
Severity	Warning
Attribute	"nodeName"="xxxxxxxx", "licenseServerName"="ruckuswireless.flexeraoperation.com"
Displayed on the web interface	Node [{nodeName}] sync-up license with license server [{licenseServerName}] failed.
Description	This event occurs when the controller fails to synchronize the license data with the license server.

## License import succeeded

Table 504. License import succeeded event

Event	License import succeeded
Event Type	licenselmportSuccess
Event Code	1252
Severity	Informational
Attribute	"nodeName"="xxxxxxxx",
Displayed on the web interface	Node [{nodeName}] import license data succeeded.
Description	This event occurs when the controller successfully imports the license data

## License import failed

Table 505. License import failed event

Event	License import failed
Event Type	licenselmportFail
Event Code	1253
Severity	Warning
Attribute	"nodeName"="xxxxxxxx",
Displayed on the web interface	Node [{nodeName}] import license data failed.
Description	This event occurs when the controller fails to imports the license data

## License data changed

Table 506. License data changed event

<u> </u>	
Event	License data changed
Event Type	licenseChanged
Event Code	1254
Severity	Informational
Attribute	"nodeName"="xxxxxxxx",
Displayed on the web interface	Node [{nodeName}] license data has been changed.
Description	This event occurs when the controller license data is modified.

## License going to expire

Table 507. License going to expire event

Event	License going to expire
Event Type	licenseGoingToExpire
Event Code	1255
Severity	Major
Attribute	"nodeName"="xxx", "licenseType"=" xxx"
Displayed on the web interface	The [{licenseType}] on node [{nodeName}] will expire on [{associationTime}].

Table 507. License going to expire event

Description	This event occurs when the validity of the license is going to expire.
1	

## Insufficient license capacity

Table 508. Insufficient license capacity event

Event	Insufficient license capacity
Event Type	apConnectionTerminatedDueToInsufficientLicense
Event Code	1256
Severity	Major
Attribute	"licenseType"=" xxx"
Displayed on the web interface	Insufficient [{licenseType}] license is detected and it will cause existing AP connections to terminate.
Description	This event occurs when connected APs are rejected due to insufficient licenses.

**NOTE:** Refer to Licensing Alarms.

# **Location Delivery Events**

NOTE: This section is not applicable for vSZ-H.

Following are the events related to location delivery.

- Unavailable location info requested
- Incapable location info requested
- Unsupported location delivery request

## Unavailable location info requested

Table 509. Unavailable location info requested event

Event	Unavailable location info requested
Event Type	unavailableLocInfoRequested
Event Code	1655
Severity	Debug
Attribute	"mvnold"=12, "wlanld"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="operator realm", "radSrvrlp"="1.1.1.1", "requestedInfo"="target location geo location, etc", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	AAA [{radSrvrlp}] requests [{requestedInfo}] that is not available with {produce.short.name}[{SCGMgmtlp}]
Description	This event occurs when the AAA server requests for the location information, which is not available at the controller. For example, the AAA server requests for the target location even after the controller communicating that it can only support NAS locations.

## Incapable location info requested

Table 510. Incapable location info requested event

Event	Incapable location info requested			
Event Type	incapableLocInfoRequested			
Event Code	1656			
Severity	Debug			
Attribute	"mvnold"=12, "wlanld"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff""srcProcess"="radius" "realm"="operator realm", "radSrvrlp"="1.1.1.1", "requestedInfo"="target location geo location, etc", "SCGMgmtlp"="2.2.2.2"			
Displayed on the web interface	AAA [{radSrvrlp}] requests [{requestedInfo}] that is not advertised by {produce.short.name}[{SCGMgmtlp}]			
Description	This event occurs when the AAA server requests for location information though the controller does not advertise that it is capable of delivering the location information.			

## Unsupported location delivery request

Table 511. Unsupported location delivery request event

Event	Unsupported location delivery request			
Event Type	unSupportedLocDeliveryRequest			
Event Code	1657			
Severity	Debug			
Attribute	"mvnold"=12, "wlanld"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radius" "realm"="operator realm", "radSrvrlp"="1.1.1.1" "requestedMethod"="out of band initial request, etc" "SCGMgmtlp"="2.2.2.2"			
Displayed on the web interface	AAA [{radSrvrlp}] requests [{requestedInfo}] that is not supported by {produce.short.name}[{SCGMgmtlp}].			
Description	This event occurs when the AAA server requests for a delivery method that is not supported by the controller.			

## **PMIPv6 Events**

NOTE: This section is not applicable for vSZ-H.

Following are the events related to PMIPv6.

- · Config update failed
- LMA ICMP reachable
- LMA ICMP unreachable
- LMA server unreachable
- LMA failed over
- DHCP connected
- DHCP connection lost

## Config update failed

Table 512. Config update failed event

Event	Config update failed			
Event Type	updateCfgFailed			
Event Code	5004			
Severity	Major			
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2","cause"= "reason"			
Displayed on the web interface	Failed to apply configuration [{cause}] in PMIPv6 process at {produce.short.name} [{SCGMgmtlp}]			
Description	This event occurs when the PMIPv6 receives an error or negative acknowledgment or improper/incomplete information from D-bus client.			

#### LMA ICMP reachable

Table 513. LMA ICMP reachable event

Event	LMA ICMP reachable			
Event Type	ImalcmpReachable			
Event Code	5005			
Severity	Debug			

Table 513. LMA ICMP reachable event

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2","Imalp"= "1.1.1.1"  [{Imalp}] ICMP reachable on {produce.short.name} [{SCGMgmtlp}]	
Displayed on the web interface		
Description	This event occurs when the PMIPv6 daemon connects to the local mobility anchor (LMA) server through the internet control message protocol (ICMP) packet.	

#### LMA ICMP unreachable

Table 514. LMA ICMP unreachable event

Event	LMA ICMP unreachable			
Event Type	ImalcmpUnreachable			
Event Code	5006			
Severity	Debug			
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2","Imalp"= "1.1.1.1"			
Displayed on the web interface	[{Imalp}] ICMP unreachable on {produce.short.name} [{SCGMgmtlp}]			
Description	This event occurs when the PMIPv6 daemon is unable to connect to the local mobility anchor (LMA) server through the ICMP packet.			
Auto Clearance	This event triggers the alarm 5006, which is auto cleared by the event code 5005.			

#### LMA server unreachable

Table 515. LMA server unreachable event

Event	LMA server unreachable
Event Type	ImaHbUnreachable
Event Code	5007
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2","Imalp"= "1.1.1.1"

Table 515. LMA server unreachable event

Displayed on the web interface	[{Imalp}] fail have been detected on {produce.short.name} [{SCGMgmtlp}]	
Description	This event occurs when the PMIPv6 daemon detects either restart or failure of the LMA server.	

#### LMA failed over

Table 516. LMA failed over event

Event	LMA failed over			
Event Type	ImaFailOver			
Event Code	5008			
Severity	Major			
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2","Imalp"= "1.1.1.1"			
Displayed on the web interface	[{Imalp}] Failover on {produce.short.name} [{SCGMgmtlp}]			
Description	This event s logged when the standby LMA transits to an active mode. This includes the control plane identifier of the newly active LMA.			

#### **DHCP** connected

Table 517. DHCP connected event

Event	DHCP connected			
Event Type	connectedToDHCP			
Event Code	5101			
Severity	Debug			
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2"			
Displayed on the web interface	PMIPv6 process connect to DHCP server successfully on {produce.short.name} [{SCGMgmtlp}]			
Description	This event occurs when the PMIPv6 completes the configuration procedure successfully.			

#### **DHCP** connection lost

Table 518. DHCP connection lost event

DHCP connection lost		
lostCnxnToDHCP		
5102		
Debug		
"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","SCGMgmtlp"="2.2.2.2"		
PMIPv6 process cannot connect to DHCP server on {produce.short.name} [{SCGMgmtlp}]		
This event occurs when the connection between PMIPv6 process and DHCP server is lost.		
This event triggers the alarm 5102, which is auto cleared by the event code 5101.		

NOTE: Refer to PMIPv6 Alarms.

## **Session Events**

Following are the events related to session interface (UE TTG sessions)

- Session timeout
- Delete all sessions
- Binding succeeded
- Binding failed
- Binding time expired
- Binding revoked
- Binding released

#### Session timeout

Table 5	10	Session	timeout	event

Event	Session timeout
Event Type	sessTimeout
Event Code	1235
Severity	Debug
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10"  "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut"  "realm"="wlan.3gppnetwork.org" "ueMacAddr"="bb:aa:dd:dd:ee:ff"  "cause"="Session Timeout" "SCGMgmtlp"="2.2.2.2"  "uelmsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] got deleted due to Session Timeout on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when a session is deleted due to a timeout specified by the AAA server.

#### Delete all sessions

Table 520. Delete all sessions event

Event	Delete all sessions
Event Type	delAllSess
Event Code	1237
Severity	Minor
Attribute	"mvnold"="NA" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="NA" "cause"="Admin Delete" "SCGMgmtlp"="2.2.2.2."
Displayed on the web interface	All sessions got terminated on {produce.short.name} [{SCGMgmtlp}] due to [{cause}]
Description	This event occurs when all sessions are deleted based on the indicators received from the controller web interface or CLI.

## Binding succeeded

Table 521. Binding succeeded event

Event	Binding succeeded
Event Type	bindingSuccess
Event Code	5009
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtlp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelpAddr"="5.5.5.5" "dataBladelp"="3.3.3.3"
Displayed on the web interface	[{ueMacAddr}] UE binding update successful on {produce.short.name}-D [{dataBladelp}], and get IP address: [{uelpAddr}] from LMA: [{lmalp}]
Description	This event occurs when the mobile node binding update is successful.

## Binding failed

NOTE: This event is not applicable for vSZ-H.

Table 522. Binding failed event

Event	Binding failed
Event Type	bindingFailure
Event Code	5010
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtlp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladelp"="3.3.3.3" "uelpAddr"="5.5.5.5" "cause"="failure cause"
Displayed on the web interface	Binding for [{ueMacAddr}] UE binding update failure on {produce.short.name}-D [{dataBladelp}]. Failure Cause [{cause}].
Description	This event occurs when mobile node binding update fails.
Auto Clearance	This event triggers the alarm 5010, which is auto cleared by the event code 5009.

## Binding time expired

Table 523. Binding time expired event

Event	Binding time expired
Event Type	bindingExpired
Event Code	5011
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2" "lmalp"="1.1.1.1", "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladelp"="3.3.3.3" "uelpAddr"="5.5.5.5"
Displayed on the web interface	[{ueMacAddr}] UE Binding expired on {produce.short.name}-D [{dataBladelp}]
Description	This event occurs when the binding expires.

## Binding revoked

NOTE: This event is not applicable for vSZ-H.

Table 524. Binding revoked event

Event	Binding revoked
Event Type	bindingRevoked
Event Code	5012
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtlp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladelp"="3.3.3.3" "uelpAddr"="5.5.5.5"
Displayed on the web interface	[{ueMacAddr}] UE Binding have been revoked on {produce.short.name}-D [{dataBladelp}]
Description	This event occurs when the binding is revoked on the controller.

## Binding released

Table 525. Binding released event

Event	Binding released
Event Type	bindingReleased
Event Code	5013
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtlp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladelp"="3.3.3.3" "uelpAddr"="5.5.5.5"
Displayed on the web interface	[{ueMacAddr}] UE Binding have been released on {produce.short.name}-D [{dataBladelp}]
Description	This event occurs when some mobile node binding are released.

**NOTE:** Refer to Session Alarms.

#### **STA Interface Events**

NOTE: This section is not applicable for vSZ-H.

Following are the events related to STA interface.

- STA successful authentication
- STA authentication failed transport down
- STA authentication failed failure response
- STA authentication failed decode failure
- STA session termination {produce.short.name} initiated success
- STA session termination AAA initiated success
- STA session termination AAA initiated failed
- STA re-authorization successful
- STA re-authorization failed
- STA response timer expired
- Retransmission exhausted

#### STA successful authentication

Table 526. STA successful authentication event

Event	STA successful authentication
Event Type	staSuccessfulAuthentication
Event Code	1550
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaServlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with AAA server [{aaaSrvrlp}] Successful

Table 526. STA successful authentication event

Description	This event occurs when the authentication procedure with external
	3GPP AAA server is successful. The diameter EAP request (DER is
	received from the 3GPP AAA server with result code as successful.

## STA authentication failed transport down

Table 527. STA authentication failed transport down event

Event	STA authentication failed transport down
Event Type	staAuthFailedTransDown
Event Code	1551
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with AAA [{aaaSrvrlp}] failed as Transport is down
Description	This event occurs when the authentication procedure with external AAA server fails and the STA transport is down.

## STA authentication failed failure response

Table 528. STA authentication failed failure response event

Event	STA authentication failed failure response
Event Type	staAuthFailedFailureResp
Event Code	1552
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode" = "Decode Failed"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with 3GPP AAA [{aaaSrvrlp}] failed, DEA with failure code [{resultCode}]

Table 528. STA authentication failed failure response event

Description	This event occurs when the authentication procedure with external AAA
	server fails. The diameter EAP answer received from 3GPP AAA server
	fails with result code.

#### STA authentication failed decode failure

Table 529. STA authentication failed decode failure event

-	
Event	STA authentication failed decode failure
Event Type	staAuthFailedDecodeFailure
Event Code	1553
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode"="xyz"
Displayed on the web interface	[{srcProcess}] Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with 3GPP AAA [{aaaSrvrlp}] failed, DEA decode failed
Description	This event occurs when the authentication procedure with external 3GPP AAA server fails. The DEA received from 3GPP AAA server fails with result code.

# STA session termination {produce.short.name} initiated success

Table 530. STA session termination {produce.short.name} initiated success event

Event	STA session termination {produce.short.name} initiated success
Event Type	staSessionTermSCGInitSuccess
Event Code	1554
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"

Table 530. STA session termination {produce.short.name} initiated success event

Displayed on the web interface	[{srcProcess}] session termination of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] with 3GPP AAA [{aaaSrvrlp}] successful
Description	This event occurs when the controller initiated session termination-r (STR) is received and successfully terminated by the STA interface.

#### STA session termination AAA initiated success

Table 531. STA session termination AAA initiated success event

Event	STA session termination AAA initiated success
Event Type	staSessionTermAAAInitSucess
Event Code	1555
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Session Termination of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] from 3GPP AAA [{aaaSrvrlp}] sucessful. AS-R request from AAA
Description	This event occurs when the controller receives and successfully terminates the abort session request (ASR) initiated by the 3GPP AAA server.

#### STA session termination AAA initiated failed

Table 532. STA session termination AAA initiated failed event

Event	STA session termination AAA initiated failed
Event Type	staSessionTermAAAInitFailed
Event Code	1556
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Session Termination of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] from 3GPP AAA [{aaaSrvrlp}] failed. AS-R request from AAA
Description	This event occurs when the controller does not receive the abort session request initiated by the 3GPP AAA server.

#### STA re-authorization successful

Table 533. STA re-authorization successful event

Event	STA re-authorization successful
Event Type	staReAuthSuccess
Event Code	1557
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"="wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Re-Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] from 3GPP AAA [{aaaSrvrlp}] successful
Description	This event occurs when the 3GPP AAA initiated reauthorization re-auth request (RAR) is successful.

#### STA re-authorization failed

Table 534. STA re-authorization failed event

Event	STA re-authorization failed
Event Type	staReAuthFailed
Event Code	1558
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Re-Auth of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] from 3GPP AAA [{aaaSrvrlp}] failed
Description	This event occurs when the 3GPP AAA initiated reauthorization re-auth request fails.

## STA response timer expired

Table 535. STA response timer expired event

Event	STA response timer expired
Event Type	staResponseTimerExpired
Event Code	1559
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Tx timer expired no response received from 3GPP AAA [{aaaSrvrlp}]
Description	This event occurs when the Tx timer expires and the controller does not receive a response from 3GPP AAA server.

#### Retransmission exhausted

Table 536. Retransmission exhausted event

Event	Retransmission exhausted
Event Type	retransmitExausted
Event Code	1560
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtlp"="2.2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[{srcProcess}] Retransmission for [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtlp}] to 3GPP AAA [{aaaSrvrlp}] failed. Retransmission of messages to 3GPP AAA [{resultCode}] failed
Description	This event occurs when the retransmission from the 3GPP AAA server fails.

NOTE: Refer to STA Interface Alarms.

# **System Events**

Following are the events with the system log severity.

NOTE: {produce.short.name} refers to SCG or vSZ-H

No LS responses	LS authentication failure	{produce.short.name} connected to LS
{produce.short.name} failed to connect to LS	{produce.short.name} received passive request	{produce.short.name} sent controller information report
{produce.short.name} received management request	{produce.short.name} sent AP info by venue report	{produce.short.name} sent associated client report
{produce.short.name} forwarded calibration request to AP	{produce.short.name} forwarded calibration request to AP	{produce.short.name} forwarded footfall request to AP
{produce.short.name} received unrecognized request	Syslog server reachable	Syslog server unreachable
Syslog server switched	Generate AP config for plane load rebalance succeeded	Generate AP config for plane load rebalance failed
FTP transfer	FTP transfer error	File upload
Email sent successfully	Email sent failed	SMS sent successfully
SMS sent failed	Process restart	Service unavailable
Keepalive failure	Resource unavailable	HIP started
HIP stopped	HIP failed over	Standby HIP restarted
HIP cache cleaned	Diameter initialization error	Diameter initialization
Diameter peer transport failure	Diameter CER error	Diameter CER success
Diameter invalid version	Diameter peer add error	Diameter peer add successful
Diameter peer remove	Diameter realm entry error	Diameter failover to alternate peer
successful		
•	Diameter CEA unknown peer	Diameter no common application

ZD AP migration failed	Database error	Recover cassandra error
Process initiated	PMIPv6 unavailable	Memory allocation failed
Process stopped		

## No LS responses

Table 537. No LS responses event

Event	No LS responses
Event Type	scgLBSNoResponse
Event Code	721
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] no response from LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller does not get a response while connecting to the location based service.

## LS authentication failure

Table 538. LS authentication failure event

Event	LS authentication failure
Event Type	scgLBSAuthFailed
Event Code	722
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] authentication failed: url=[{url}], port=[{port}]
Description	This event occurs due to the authentication failure on connecting to the location based service.

## {produce.short.name} connected to LS

Table 539. {produce.short.name} connected to LS event

Event	{produce.short.name} connected to LS
Event Type	scgLBSConnectSuccess
Event Code	723
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] connected to LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller successfully connects to the location based service.

## {produce.short.name} failed to connect to LS

Table 540. {produce.short.name} failed to connect to LS event

Event	{produce.short.name} failed to connect to LS
Event Type	scgLBSConnectFailed
Event Code	724
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] connection failed to LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller failed to connect to the location based service.
Auto Clearance	This event triggers the alarm 724, which is auto cleared by the event code 723.

# {produce.short.name} received passive request

Table 541. {produce.short.name} received passive request event

Event	{produce.short.name} received passive request
Event Type	scgLBSStartLocationService
Event Code	725
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx:", "type"="", "venue"="", "SCGMgmtlp"="", "band"=""
Displayed on the web interface	SmartZone [{SCGMgmtlp}] received Passive Request, band=[{band}], type=[{type}]
Description	This event occurs when the controller receives a passive request.

# {produce.short.name} sent controller information report

Table 542. {produce.short.name} sent controller information report event

Event	{produce.short.name} sent controller information report
Event Type	scgLBSSentControllerInfo
Event Code	727
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "api"="", "sw"="", "clusterName"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] sent Controller Info Report: mac =[{mac}], api=[{api}], sw=[{sw}], clusterName =[{clusterName}]
Description	This event occurs when the controller sends the controller information report.

### {produce.short.name} received management request

Table 543. {produce.short.name} received management request event

Event	{produce.short.name} received management request
Event Type	scgLBSRcvdMgmtRequest
Event Code	728
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "venue"="","type"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] received Management Request: venue=[{venue}], type=[{type}]
Description	This event occurs when the controller receives the management request.

### {produce.short.name} sent AP info by venue report

Table 544. {produce.short.name} sent AP info by venue report event

Event	{produce.short.name} sent AP info by venue report
Event Type	scgLBSSendAPInfobyVenueReport
Event Code	729
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "venue"="","count"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] sent AP Info by Venue Report: venue=[{venue}], count =[{count}]
Description	This event occurs when the controller sends the venue report regarding AP information.

### {produce.short.name} sent query venues report

Table 545. {produce.short.name} sent query venues report event

Event	{produce.short.name} sent query venues report
Event Type	scgLBSSendVenuesReport
Event Code	730
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "count"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] sent Query Venues Report: count=[{count}]
Description	This event occurs when the controller sends the query venue report.

# {produce.short.name} sent associated client report

Table 546. {produce.short.name} sent associated client report event

Event	{produce.short.name} sent associated client report
Event Type	scgLBSSendClientInfo
Event Code	731
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "count"="", "SCGMgmtlp"="", "type"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] sent Associated Client Report: count= [{count}], type= [{type}]
Description	This event occurs when the controller sends the associated client report.

# {produce.short.name} forwarded calibration request to AP

Table 547. {produce.short.name} forwarded calibration request to AP event

Event	{produce.short.name} forwarded calibration request to AP
Event Type	scgLBSFwdPassiveCalReq
Event Code	732
Severity	Informational
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "SCGMgmtlp"="", "apMac"="xx:xx:xx:xx:xx", "venue "="", "interval"="", "duration "="", "band"="", "count"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] forward Passive Calibration Request to [{apName&&apMac}]: venue= [{venue}], interval= [{interval}], duration= [{duration}], band= [{band}], count= [{count}]
Description	This event occurs when the controller sends a forward calibration request to the AP on its reconnection to the controller.

# {produce.short.name} forwarded footfall request to AP

Table 548. {produce.short.name} forwarded footfall request to AP event

Event	{produce.short.name} forwarded footfall request to AP
Event Type	scgLBSFwdPassiveFFReq
Event Code	733
Severity	Informational
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "SCGMgmtlp"="", "apMac"="xx:xx:xx:xx:xx:xx", "venue "="", "interval"="", "duration "="", "band"="
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] forward Passive Footfall Request to [{apName&&apMac}]: venue= [{venue}], interval= [{interval}], duration= [{duration}], band= [{band}]
Description	This event occurs when the controller sends a forward footfall request to the AP on its reconnection to the controller.

### {produce.short.name} received unrecognized request

Table 549. {produce.short.name} received unrecognized request event

Event	{produce.short.name} received unrecognized request
Event Type	scgLBSRcvdUnrecognizedRequest
Event Code	734
Severity	Warning
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx", "type"="", "length"="", "SCGMgmtlp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtlp}] received Unrecognized: length =[{length}]
Description	This event occurs when the controller receives an unrecognized request.

# Syslog server reachable

Table 550. Syslog server reachable event

Event	Syslog server reachable
Event Type	syslogServerReachable
Event Code	750
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx",
	"syslogServerAddress"="xxx.xxx.xxxx.xxxx"
Displayed on the web	Syslog server [{syslogServerAddress}] is reachable on
interface	{produce.short.name}.
Description	This event occurs when the syslog server can be reached.

# Syslog server unreachable

Table 551. Syslog server unreachable event

Event	Syslog server unreachable
Event Type	syslogServerUnreachable
Event Code	751
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "syslogServerAddress"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Syslog server [{syslogServerAddress}] is unreachable on {produce.short.name}.
Description	This event occurs when the syslog server is unreachable.
Auto Clearance	This event triggers the alarm 751, which is auto cleared by the event code 750.

# Syslog server switched

Table 552. Syslog server switched event

Event	Syslog server switched
Event Type	syslogServerSwitched
Event Code	752
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx", "srcAddress"="xxx.xxx.xxx", "destAddress"="xxx.xxx.xxx"
Displayed on the web interface	Syslog server is switched from [{srcAddress}] to [{destAddress}] on {produce.short.name}.
Description	This event occurs when the syslog server is switched.

### Generate AP config for plane load rebalance succeeded

Table 553. Generate AP config for plane load rebalance succeeded event

Event	Generate AP config for plane load rebalance succeeded
Event Type	planeLoadingRebalancingSucceeded
Event Code	770
Severity	Informational
Attribute	No attributes for this event.
Displayed on the web interface	Generate new AP configs for plane's loading re-balancing succeeded.
Description	This event occurs when the user executes the load of data plane for rebalancing and generates a new AP configuration successfully.

### Generate AP config for plane load rebalance failed

Table 554. Generate AP config for plane load rebalance failed event

Event	Generate AP config for plane load rebalance failed
Event Type	planeLoadingRebalancingFailed
Event Code	771
Severity	Informational
Attribute	
Displayed on the web interface	Generate new AP configs for plane's loading re-balancing failed.
Description	This event occurs when the user executes the load of data plane for rebalancing and generation of a new AP configuration fails.

#### FTP transfer

Table 555. FTP transfer event

Event	FTP transfer
Event Type	ftpTransfer
Event Code	970
Severity	Informational
Attribute	"ip"="xxx.xxx.xxx", "portID"="xxxx", "reason"="xxxxx"
Displayed on the web interface	File [{reason}] transferred to FTP server [{ip}:{portID}] successfully
Description	This event occurs when a file transfer to the FTP server is successful.

#### FTP transfer error

Table 556. FTP transfer error event

Event	FTP transfer error
Event Type	ftpTransferError
Event Code	971
Severity	Warning
Attribute	"ip"="xxx.xxx.xxx", "portID"="xxxx", "reason"="xxxxx"
Displayed on the web interface	File [{reason}] transferred to FTP server [{ip}:{portID}] unsuccessfully
Description	This event occurs when the file transfer to the FTP server fails.

# File upload

Table 557. File upload event

Event	File upload
Event Type	fileUpload
Event Code	980
Severity	Informational
Attribute	"ip"="xxx.xxx.xxx","cause"="xxxxx"
Displayed on the web interface	Backup file [{cause}] uploading from [{ip}] failed

Table 557. File upload event

Description This event occurs when the backup file upload fails.	
--	--

# Email sent successfully

Table 558. Email sent successfully event

Event	Email sent successfully
Event Type	mailSendSuccess
Event Code	981
Severity	Informational
Attribute	"srcProcess"="xxxxx", "receiver"= "xxxxx", "nodeMac"="xxxxx","nodeName"="xxxxx","tenantUUID"="xxxxx"
Displayed on the web interface	[{srcProcess}] sent email to [{receiver}] successfully.
Description	This event occurs when system sends mail successfully.

#### **Email sent failed**

Table 559. Email sent failed event

Event	Email sent failed
Event Type	mailSendFailed
Event Code	982
Severity	Warning
Attribute	"srcProcess"="xxxxx","receiver"= "xxxxx", "nodeMac"="xxxxx", "nodeName"="xxxxxx", "tenantUUID"="xxxxx"
Displayed on the web interface	[{srcProcess}] sent email to [{receiver}] failed.
Description	This event occurs when the system fails to send the mail.

# SMS sent successfully

Table 560. SMS sent successfully event

Event	SMS sent successfully
Event Type	smsSendSuccess
Event Code	983
Severity	Informational
Attribute	"srcProcess"="xxxxx","receiver"= "xxxxx",
	"nodeMac"="xxxxx","nodeName"="xxxxx","tenantUUID"="xxxxx"
Displayed on the web interface	[{srcProcess}] sent short message to [{receiver}] successfully.
Description	This event occurs when system sends the short message successfully.

#### SMS sent failed

Table 561. SMS sent failed event

Event	SMS sent failed
Event Type	smsSendFailed
Event Code	984
Severity	Warning
Attribute	"srcProcess"="xxxxx","receiver"= "xxxxx",
	"reason"="xxxxx","nodeMac"="xxxxx","nodeName"="xxxxx","tenantU UID"="xxxxx"
Displayed on the web interface	[{srcProcess}] sent short message to [{receiver}] failed, reason: [{reason}].
Description	This event occurs when system fails to send the short message.

#### **Process restart**

Table 562. Process restart event

Event	Process restart
Event Type	processRestart
Event Code	1001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{processName}] process got re-started on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when any process crashes and restarts.

#### Service unavailable

Table 563. Service unavailable event

Event	Service unavailable
Event Type	serviceUnavailable
Event Code	1002
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[{processName}] process is not stable on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the process repeatedly restarts and is unstable.

# Keepalive failure

Table 564. Keepalive failure event

Event	Keepalive failure	
Event Type	keepAliveFailure	
Event Code	1003	
Severity	Major	
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtlp"="2.2.2.2"	
Displayed on the web interface	[{srcProcess}] on {produce.short.name} [{SCGMgmtlp}] restarted [{processName}] process.	
Description	This event occurs when the <i>mon/nc</i> restarts the process due to a keep alive failure.	

### Resource unavailable

Table 565. Resource unavailable event

Event	Resource unavailable
Event Type	resourceUnavailable
Event Code	1006
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="NA", "SCGMgmtlp"="3.3.3.3', "cause"="xx"
Displayed on the web interface	System resource [{cause}] not available in [{srcProcess}] process at {produce.short.name} [{SCGMgmtlp}]
Description	This event is generated due to unavailability of any other system resource, such as memcached.

#### **HIP** started

NOTE: This event is not applicable for vSZ-H.

Tahle	566	HIP	started	event
Table	000.	1 1111	Startou	CVCIIL

Event	HIP started
Event Type	hipStarted
Event Code	1014
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102"
Displayed on the web interface	[{srcProcess}] process gets Started on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the HIP instance starts.

# **HIP** stopped

Table 567. HIP stopped event

Event	HIP stopped
Event Type	hipStopped
Event Code	1015
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102"
Displayed on the web interface	[{srcProcess}] process stopped HIP on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when HIP is stopped.

#### HIP failed over

NOTE: This event is not applicable for vSZ-H.

Table 568. HIP failed over event

Event	HIP failed over
Event Type	hipFailover
Event Code	1016
Severity	Major
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102"
Displayed on the web interface	[{srcProcess}] Node transitioned to Active on {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when the standby HIP transits to an active mode and includes the control plane identifier of the newly active HIP.

# Standby HIP restarted

Table 569. Standby HIP restarted event

Event	Standby HIP restarted
Event Type	hipStandbyRestart
Event Code	1017
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102"
Displayed on the web interface	[{srcProcess}] Standby HIP node failed detected from Active {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when the active node detects failure of the standby node.

#### HIP cache cleaned

NOTE: This event is not applicable for vSZ-H.

Table 570. HIP cache cleaned event

Event	HIP cache cleaned	
Event Type	hipCacheCleanup	
Event Code	1018	
Severity	Informational	
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtlp"="100.13.0.102", mvnold="12", hlrProfileName="HLR1",	
Displayed on the web interface	[{srcProcess}] Cache cleanup started on {produce.short.name} [{SCGMgmtlp}]	
Description	This event is generated when the cache cleanup process is completed.	

#### Diameter initialization error

Table 571. Diameter initialization error event

Event	Diameter initialization error
Event Type	dialnitilizeErr
Event Code	1401
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","srcProcess"=" <application name="">" "realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","desc" = "Diameter Stack Initialization Failure on {produce.short.name}"</application>
Displayed on the web interface	[{srcProcess}] Diameter Stack Initialization Failure on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due to stack initialization failure.

#### Diameter initialization

NOTE: This event is not applicable for vSZ-H.

Table 572. Diameter initialization event

Event	Diameter initialization
Event Type	dialnitialization
Event Code	1402
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","desc" = "Diameter Stack Initialization is Successful"</application>
Displayed on the web interface	[{srcProcess}] Diameter Stack up and running on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due to diameter stack is up and running.

# Diameter peer transport failure

Table 573. Diameter peer transport failure event

Event	Diameter peer transport failure
Event Type	diaPeerTransportFailure
Event Code	1403
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerlp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "operator.com","desc" = "Failed to read from peer socket"</application>
Displayed on the web interface	[{srcProcess}] Failed to read from peer [{peerName}] Transport Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]

Table 573. Diameter peer transport failure event

Description	This event occurs when the transport with the peer is down and the
	stack fails to read the data.

#### Diameter CER error

NOTE: This event is not applicable for vSZ-H.

Table 574. Diameter CER error event

Event	Diameter CER error
Event Type	diaCERError
Event Code	1404
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerlp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "operator.com","desc" = "Failed to decode CER from Peer"</application>
Displayed on the web interface	[{srcProcess}] Failed to decode CER from Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the diameter stack fails to decode the capabilities exchange request (CER) received from peer.

#### **Diameter CER success**

Table 575. Diameter CER success event

Event	Diameter CER success
Event Type	diaCERSuccess
Event Code	1405
Severity	Debug

Table 575. Diameter CER success event

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerlp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "organization.com","desc" = "Successfully decoded CER received from Peer"</application>
Displayed on the web interface	[{srcProcess}] CER Success From Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the CER received from peer is successfully decoded.

#### Diameter invalid version

Table 576. Diameter invalid version event

Event	Diameter invalid version
Event Type	dialnvalidVer
Event Code	1406
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "src Process"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerlp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "organization.com","desc" = "Invalid version in Diameter header of received CER from peer"</application>
Displayed on the web interface	[{srcProcess}] Invalid version in Diameter header in CER from Peer [{peerName}], Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the version in the diameter header of received CER is invalid.

### Diameter peer add error

**NOTE:** This event is not applicable for vSZ-H.

Table 577. Diameter peer add error event

Event	Diameter peer add error
Event Type	diaPeerAddError
Event Code	1407
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc"  = "Failed to add Peer" "appropriate cause"</application>
Displayed on the web interface	[{srcProcess}] Failed to add Peer [{peerName}], Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the diameter stack fails to add a peer to the peer table.

### Diameter peer add successful

Table 578. Diameter peer add successful event

Event	Diameter peer add successful
Event Type	diaPeerAddSuccess
Event Code	1408
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com", "originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerlp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "organization.com","desc" = "Peer addition successful"</application>

Table 578. Diameter peer add successful event

Displayed on the web	[{srcProcess}] Peer [{peerName}] Realm [{peerRealmName}] addition is
interface	successful on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the peer addition is successful.

#### Diameter peer remove successful

NOTE: This event is not applicable for vSZ-H.

#### Table 579. Diameter peer remove successful event

Event	Diameter peer remove successful
Event Type	diaPeerRemoveSuccess
Event Code	1409
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2.2" "peerlp" = "3.3.3.3"  "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc"  = "Peer removal success"</application>
Displayed on the web interface	[{srcProcess}] Peer [{peerName}] Realm [{peerRealmName}] removal is successful on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the peer is removed successfully from the table. The remote peer sends a diameter disconnect peer request (DPR) with the cause of not wanting to talk. In such instances, the peer is removed from the table.

### Diameter realm entry error

NOTE: This event is not applicable for vSZ-H.

#### Table 580. Diameter realm entry error event

Event	Diameter realm entry error
Event Type	diaRealmEntryErr
Event Code	1410

Table 580. Diameter realm entry error event

Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerRealmName" =  "organization.com" "peerName" = "OCS1" "desc" = "Failed to add route for Realm"</application>
Displayed on the web interface	[{srcProcess}] Failed to add route for Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due to realm route entry add error. This may arise when the realm entry exists and another realm entry is added. Creating two diameter services with same realm name causes this problem.

# Diameter failover to alternate peer

Table 581. Diameter failover to alternate peer event

•	1
Event	Diameter failover to alternate peer
Event Type	diaFailOverToAltPeer
Event Code	1411
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerName"="OCS1","peerRealmName" = "Vodafone.com","altPeerName" = "OCS2","altPeerRealmName" = "india.internal.net""desc" = "Fwd to alt peer"</application>
Displayed on the web interface	[{srcProcess}] Fwd from Peer [{peerName}] to AltPeer [{altPeerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due to retransmission to an alternate peer.

### Diameter fail back to peer

NOTE: This event is not applicable for vSZ-H.

Table 582. Diameter fail back to peer event

	Diameter feil book to near
Event	Diameter fail back to peer
Event Type	diaFailbackToPeer
Event Code	1412
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"=" <application name="">","realm"="ruckus.com","originHost" = "Node1","SCGMgmtlp"="2.2.2.2","peerName"="OCS1", "peerRealmName" = "Vodafone.com","altPeerName" = "OCS2","altPeerRealmName" = "india.internal.net","desc" = "Failback to main peer"</application>
Displayed on the web interface	[{srcProcess}] Failback to Main Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due to retransmission to the main peer in case of a fail back.

# Diameter CEA unknown peer

Table 583. Diameter CEA unknown peer event

Event	Diameter CEA unknown peer
Event Type	diaCEAUnknownPeer
Event Code	1414
Severity	Critical

Table 583. Diameter CEA unknown peer event

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", srcProcess"="SessMgr", "realm"="ruckus.com","originHost" = "Node1","
	SCGMgmtlp"="2.2.2.2","peerName"="OCS8","peerRealmName" = "Vodafone.com","desc" = "CEA received from Unknown peer
Displayed on the web interface	[{srcProcess}] CEA received from Unknown Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs due when the capabilities exchange answer (CEA) is received from an unknown peer.

### Diameter no common application

Table 584. Diameter no common application event

Event	Diameter no common application
Event Type	diaNoCommonApp
Event Code	1415
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12  "srcProcess"=" <application name="">" "realm"="ruckus.com"  "originHost" = "Node1" "SCGMgmtlp"="2.2.2.2" "peerName"=ÖCS1  "peerRealmName" = "organization.com""desc" = "No common App with peer"</application>
Displayed on the web interface	[{srcProcess}] No common App with Peer [{peerName}] Realm [{peerRealmName}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the common application is not with the peer.

# **ZD AP migrating**

Table 585. ZD AP migrating event

Event	ZD AP migrating
Event Type	zdAPMigrating
Event Code	2001
Severity	Informational
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962", "firmware"="3.0.0.0.0"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] is upgrading with {produce.short.name} AP firmware version - [{firmware}]
Description	This event occurs when a ZoneDirector AP is upgrading with the controller AP firmware image.

# **ZD AP migrated**

Table 586. ZD AP migrated event

Event	ZD AP migrated
Event Type	zdAPMigrated
Event Code	2002
Severity	Informational
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="R700", "firmware"="3.2.0.0.x"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] has been upgraded with {produce.short.name} AP firmware version - [{firmware}]
Description	This event occurs when a ZoneDirector AP has upgraded its firmware with the controller AP firmware image.

# **ZD AP rejected**

Table 587. ZD AP rejected event

Event	ZD AP rejected
Event Type	zdAPRejected
Event Code	2003
Severity	Warning
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] is not being upgraded with {produce.short.name} AP firmware because of ACL setting.
Description	This event occurs when the ZoneDirector AP is not upgraded with the controller AP firmware because of ACL setting.

# ZD AP migration failed

Table 588. ZD AP migration failed event

Event	ZD AP migration failed
Event Type	zdAPMigrationFailed
Event Code	2004
Severity	Major
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962", "firmware"="3.0.0.0.0"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] is failed to upgrade with {produce.short.name} AP firmware version - [{firmware}]
Description	This event occurs when the Zone Director AP fails to upgrade with the controller AP firmware image.

#### Database error

Table 589. Database error event

Event	Database error
Event Type	cassandraError
Event Code	3001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2", reason="reason",
Displayed on the web interface	Database internal error on node [{nodeName}], reason: [{reason}].
Description	This event occurs due to internal errors on the database.

#### Recover cassandra error

Table 590. Recover cassandra error event

Event	Recover cassandra error
Event Type	recoverCassandraError
Event Code	3011
Severity	Informational
Attribute	"nodeName"="xxx","reason"="recovery reason"
Displayed on the web interface	Recover database error on node [{nodeName}], reason: []
Description	This event occurs when the internal errors on the database are fixed.

#### **Process initiated**

NOTE: This event is not applicable for vSZ-H.

Table 591. Process initiated event

Event	Process initiated
Event Type	processInit
Event Code	5001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process got re-started on {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when PMIPv6 process crashes and restarts.

# PMIPv6 unavailable

Table 592. PMIPv6 unavailable event

Event	PMIPv6 unavailable
Event Type	pmipUnavailable
Event Code	5002
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process is not stable on {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when the PMIPv6 process repeatedly restarts and is not stable.

### Memory allocation failed

NOTE: This event is not applicable for vSZ-H.

Table 593. Memory allocation failed event

Event	Memory allocation failed
Event Type	unallocatedMemory
Event Code	5003
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Insufficient Heap Memory in PMIPv6 process at {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when the memory allocation fails in the PMIPv6 process.

# **Process stopped**

NOTE: This event is not applicable for vSZ-H.

Table 594. Process stopped event

Event	Process stopped
Event Type	processStop
Event Code	5100
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtlp"="2.2.2.2",
Displayed on the web interface	PMIPv6 process stop on {produce.short.name} [{SCGMgmtlp}]
Description	This event is logged when the PMIPv6 process stops

**NOTE:** Refer to System Alarms.

#### **Threshold Events**

Following are the events related to threshold system set.

- CPU threshold exceeded
- Memory threshold exceeded
- Disk usage threshold exceeded
- CPU threshold back to normal
- Memory threshold back to normal
- Disk threshold back to normal
- License threshold exceeded
- Rate limit threshold surpassed
- Rate limit threshold restored
- Rate limit for TOR surpassed
- The number of users exceed its limit
- The number of devices exceeded its limit

#### CPU threshold exceeded

Table 595. CPU threshold exceeded event

Event	CPU threshold exceeded
Event Type	cpuThresholdExceeded
Event Code	950
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] exceeded on control plane [{nodeName}-C]
Description	This event occurs when the CPU usage exceeds the threshold limit of 80%.
Auto Clearance	This event triggers the alarm 950, which is auto cleared by the event code 954.

### Memory threshold exceeded

Table 596. Memory threshold exceeded event

Event	Memory threshold exceeded
Event Type	memoryThresholdExceeded
Event Code	951
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This event occurs when the memory usage exceeds the threshold limit of 85% and for vSZ-H the limit is 90%.
Auto Clearance	This event triggers the alarm 951, which is auto cleared by the event code 954.

# Disk usage threshold exceeded

Table 597. Disk usage threshold exceeded event

Event	Disk usage threshold exceeded
Event Type	diskUsageThresholdExceeded
Event Code	952
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Disk usage threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This event occurs when the disk usage exceeds the threshold limit of 80%.
Auto Clearance	This event triggers the alarm 952, which is auto cleared by the event code 955.

#### CPU threshold back to normal

Table 598. CPU threshold back to normal event

Event	CPU threshold back to normal
Event Type	cpuThresholdBackToNormal
Event Code	953
Severity	Informational
Attribute	"nodeName"="xxx","nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] got back to normal on control plane [{nodeName}-C].
Description	This event occurs when the CPU usage comes back to normal.

# Memory threshold back to normal

Table 599. Memory threshold back to normal event

Event	Memory threshold back to normal
Event Type	memoryThresholdBackToNormal
Event Code	954
Severity	Informational
Attribute	"nodeName"="xxx","nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] got back to normal on control plane [{nodeName}-C].
Description	This event occurs when the memory usage comes back to normal.

#### Disk threshold back to normal

Table 600. Disk threshold back to normal event

Event	Disk threshold back to normal
Event Type	diskUsageThresholdBackToNormal
Event Code	955
Severity	Informational
Attribute	"nodeName"="xxx","nodeMac"="xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Disk threshold [{perc}%] got back to normal on control plane [{nodeName}-C].

Table 600. Disk threshold back to normal event

Description	This event occurs when the disk usage comes back to normal.
-------------	---

#### License threshold exceeded

Table 601. License threshold exceeded event

Event	License threshold exceeded
Event Type	licenseThresholdExceeded
Event Code	960
Severity	Critical 90%; Major 80%; Informational 70%;
Attribute	"perc"="xxx", "nodeName"="", "nodeMac"="xx:xx:xx:xx:xx:xx", licenseType="SG00"
Displayed on the web interface	[{licenseType}] limit reached at [{perc}%]
Description	This event occurs when the number of user equipment is attached to the system has exceeded the license limit.

# Rate limit threshold surpassed

Table 602. Rate limit threshold surpassed event

Event	Rate limit threshold surpassed
Event Type	rateLimitThresholdSurpassed
Event Code	1300
Severity	Major
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtlp"="2.2.2.2" "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Threshold surpassed for AAA Server [{aaaSrvrlp}] and ServerType [{AAAServerType}]

Table 602. Rate limit threshold surpassed event

Description	This event occurs when the rate limit threshold is surpassed. The
	threshold limit for this event is dependent on the maximum outstanding
	request (MOR) value as configured in the web interface of Authentication
	or Accounting Service. For example, if the MOR value is 1000, and
	threshold limit is set to 70%, then this event will be raised when total
	outstanding requests for this server exceeds the limit of 701.

#### Rate limit threshold restored

Table 603. Rate limit threshold restored event

Event	Rate limit threshold restored
Event Type	rateLimitThresholdRestored
Event Code	1301
Severity	Informational
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtlp"="2.2.2.2" "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Threshold restored for AAA Server [{aaaSrvrlp}] and ServerType [{AAAServerType}]
Description	This event occurs when the rate limit threshold is restored. The threshold limit for this event is dependent on the maximum outstanding request (MOR) value as configured in the web interface of Authentication or Accounting Service. For example, if the MOR value is 1000, and threshold limit is set to 70%, then this event will be raised when total outstanding requests for this server is lesser or equal to 700.

### Rate limit for TOR surpassed

Table 604. Rate limit for TOR surpassed event

Event	Rate limit for TOR surpassed
Event Type	rateLimitMORSurpassed
Event Code	1302
Severity	Critical
Attribute	"mvnold"=12 "wlanld"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtlp"="2.2.2.2" "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Maximum Outstanding Requests (MOR) surpassed for AAA Server [{aaaSrvrlp}] and ServerType [{AAAServerType}]. Dropping requests to be proxied to AAA.
Description	This event occurs when the rate limit for maximum outstanding requests (MOR) is surpassed. The threshold limit for this event is dependent on the maximum outstanding request (MOR) value as configured in the web interface of Authentication or Accounting Service. For example, if the MOR value is 1000, and threshold limit is set to 70%, then this event will be raised when total outstanding requests for this server exceeds 1000.
Auto Clearance	This event triggers the alarm1302, which is auto cleared by the event code 1301.

#### The number of users exceed its limit

Table 605. The number of users exceed its limit event

Event	The number of users exceed its limit
Event Type	tooManyUsers
Event Code	7001
Severity	Major
Attribute	No attributes for this event.

Table 605. The number of users exceed its limit event

Displayed on the web interface	The number of users exceeded its limit.
Description	This event occurs when the number of users exceeds the specified limit. The threshold limit for SCG-200 and vSZ-H is 950000.

#### The number of devices exceeded its limit

Table 606. The number of devices exceeded its limit event

Event	The number of devices exceeded its limit
Event Type	tooManyDevices
Event Code	7002
Severity	Major
Attribute	No attributes for this event.
Displayed on the web interface	The number of devices exceeded its limit
Description	This event occurs when the number of devices exceeds the specified limit. The threshold limit for SCG-200 and vSZ-H is 2850000.

**NOTE:** Refer to Threshold Alarms.

# **Tunnel Events - Access Point (AP)**

Following are the events related to tunnel events on access point.

- Data plane accepted a tunnel request
- Data plane rejected a tunnel request
- Data plane terminated a tunnel
- AP created a tunnel
- AP tunnel disconnected
- AP softGRE tunnel fails over primary to secondary
- AP softGRE tunnel fails over secondary to primary
- AP softGRE gateway reachable
- AP softGRE gateway not reachable
- Data plane set up a tunnel
- AP secure gateway association success
- AP is disconnected from secure gateway
- AP secure gateway association failure

**NOTE:** Event codes 601 to 610 are not applicable for vSZ-H.

### Data plane accepted a tunnel request

Table 607. Data plane accepted a tunnel request event

Event	Data plane accepted a tunnel request
Event Type	dpAcceptTunnelRequest
Event Code	601
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName  dpKey}] accepted a tunnel request from AP [{apName&&apMac}].
Description	This event occurs when the data plane accepts a tunnel request from the AP.

## Data plane rejected a tunnel request

Table 608. Data plane rejected a tunnel request event

Event	Data plane rejected a tunnel request
Event Type	dpRejectTunnelRequest
Event Code	602
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx", "reason"="xxxxxxxxxxxxx"
Displayed on the web interface	Data plane [{dpName  dpKey}] rejected a tunnel request from AP [{apName&apMac}] because of reason [{reason}].
Description	This event occurs when the data plane rejects a tunnel request from the AP.

## Data plane terminated a tunnel

Table 609. Data plane terminated a tunnel event

Event	Data plane terminated a tunnel
Event Type	dpTearDownTunnel
Event Code	603
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx", "reason"="xx"
Displayed on the web interface	Data plane [{dpName  dpKey}] terminated a tunnel from AP [{apName&apMac}]. Reason: [{reason}]
Description	This event occurs when the data plane terminates a tunnel from the AP.

### AP created a tunnel

Table 610. AP created a tunnel event

Event	AP created a tunnel
Event Type	apBuildTunnelSuccess
Event Code	608
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dpIP"="xxx.xxx.xxx.xxx",
Displayed on the web interface	AP [{apName&&apMac}] created a tunnel to data plane [{dpIP}].
Description	This event occurs when AP creates a tunnel to the data plane.

### AP tunnel disconnected

Table 611. AP tunnel disconnected event

Event	AP tunnel disconnected
Event Type	apTunnelDisconnected
Event Code	610
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx", "dpIP"="xxx.xxx.xxx.xxx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] disconnected from data plane [{dpIP}]. Reason: [{reason}]
Description	This event occurs when AP disconnects from the data plane.

NOTE: Event codes 601 to 610 are not applicable for vSZ-H.

## AP softGRE tunnel fails over primary to secondary

Table 612. AP softGRE tunnel fails over primary to secondary event

Event	AP softGRE tunnel fails over primary to secondary
Event Type	apSoftGRETunnelFailoverPtoS
Event Code	611
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:, "primaryGRE"="xxx.xxx.xxx.xxx", "secondaryGRE"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] fails over from primaryGRE [{primaryGRE}] to secondaryGRE[{secondaryGRE}].
Description	This event occurs when AP moves from a primary to a secondary GRE.

## AP softGRE tunnel fails over secondary to primary

Table 613. AP softGRE tunnel fails over secondary to primary event

Event	AP softGRE tunnel fails over secondary to primary
Event Type	apSoftGRETunnelFailoverStoP
Event Code	612
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "primaryGRE"="xxx.xxx.xxx.xxx", "secondaryGRE"="xxxx"
Displayed on the web interface	AP [{apName&&apMac}] fails over from secondaryGRE[{secondaryGRE}] to primaryGRE[{primaryGRE}].
Description	This event occurs when AP moves from a secondary to a primary GRE.

## AP softGRE gateway reachable

Table 614. AP softGRE gateway reachable event

Event	AP softGRE gateway reachable
Event Type	apSoftGREGatewayReachable
Event Code	613
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "softgreGW"="xxx.xxx.xxx.xxx", "softgreGWAddress"="xxxx"
Displayed on the web interface	AP [{apname&&apMac}] is able to reach [{softgreGW}] [{softgreGWAddress}] successfully
Description	This event occurs when AP builds a soft GRE tunnel successfully.

## AP softGRE gateway not reachable

Table 615. AP softGRE gateway not reachable event

Event	AP softGRE gateway not reachable
Event Type	apSoftGREGatewayNotReachable
Event Code	614
Severity	Critical
Attribute	"apMac"="xx:xx:xx:xx:xx", "softGREGatewayList"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach the following gateways: [{softGREGatewayList}].
Description	This event occurs when AP fails to build a soft GRE tunnel either on the primary or the secondary GRE.
Auto Clearance	This event triggers the alarm 614, which is auto cleared by the event code 613.

## Data plane set up a tunnel

NOTE: This event is not applicable for vSZ-H.

Table 616. Data plane set up a tunnel event

Event	Data plane set up a tunnel
Event Type	dpSetUpTunnel
Event Code	627
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName  dfpMac}] set up a tunnel from AP [{apName&&apMac}].
Description	This event occurs when the data plane sets up a tunnel from the AP.

# AP secure gateway association success

Table 617. AP secure gateway association success event

Event	AP secure gateway association success
Event Type	ipsecTunnelAssociated
Event Code	660
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:,"ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] is able to reach secure gateway [{ipsecGWAddress}] successfully.
Description	This event occurs when the AP is able to reach the secure gateway successfully.

## AP is disconnected from secure gateway

Table 618. AP is disconnected from secure gateway event

Event	AP is disconnected from secure gateway
Event Type	ipsecTunnelDisassociated
Event Code	661
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:,"ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] is disconnected from secure gateway [{ipsecGWAddress}].
Description	This event occurs when the AP is disconnected from secure gateway.

## AP secure gateway association failure

Table 619. AP secure gateway association failure event

Event	AP secure gateway association failure
Event Type	ipsecTunnelAssociateFailed
Event Code	662
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:,"ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] is unable to establish secure gateway with [{ipsecGWAddress}].
Description	This event occurs when the AP is unable to reach the secure gateway.
Auto Clearance	This event triggers the alarm 662, which is auto cleared by the event code 660.

NOTE: Refer to Tunnel Alarms - Access Point.

### **Tunnel Events - Data Plane**

NOTE: Events 621 and 626 are not applicable for vSZ-H.

Following are the events related to tunnel events on the data plane.

- DP sGRE GW unreachable
- DP sGRE keep alive timeout
- DP sGRE GW inactive
- DP DHCPRelay no response
- DP DHCPRelay failover
- DP sGRE new tunnel
- DP sGRE del tunnel
- DP sGRE keepalive recovery
- DP DHCPRelay response recovery
- DP sGRE GW reachable
- DP sGRE GW active
- DP sGRE GW failover

### DP sGRE GW unreachable

Table 620. DP sGRE GW unreachable event

Event	DP sGRE GW unreachable
Event Type	dpSgreGWUnreachable
Event Code	615
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected Core Gateway [{GatewayIP}] is unreachable.
Description	This event occurs when the data plane detects that a core network gateway is unreachable.

## DP sGRE keep alive timeout

Table 621. DP sGRE keep alive timeout event

Event	DP sGRE keep alive timeout
Event Type	dpSgreKeepAliveTimeout
Event Code	616
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x
Displayed on the web interface	Data plane [{dpName  dpKey}] detected Keepalive packet to Core Gateway [{GatewayIP}] is lost due to timeout
Description	This event occurs when the data plane detects that a keep alive packet to the core network gateway is lost due to a timeout.

### DP sGRE GW inactive

Table 622. DP sGRE GW inactive event

Event	DP sGRE GW inactive
Event Type	dpSgreGWInact
Event Code	617
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x
Displayed on the web interface	Data plane [{dpName  dpKey}] detected [{GatewayIP}] is inactive because there is no RX traffic
Description	This event occurs when the data plane detects that a core network gateway is inactive.

## DP DHCPRelay no response

Table 623. DP DHCPRelay no response event

Event	DP DHCPRelay no response
Event Type	dpDhcpRelayNoResp
Event Code	618
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected no response from DHCP server [{dhcpIP}] for a while
Description	This event occurs when the data plane does not get a response from the DHCP server.

# DP DHCPRelay failover

Table 624. DP DHCPRelay failover event

Event	DP DHCPRelay failover
Event Type	dpDhcpRelayFailOver
Event Code	619
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "preDhcpIP"="x.x.x.x", "curDhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected DHCP server fail-over from [{preDhcpIP}] to [{curDhcpIP}]
Description	This event occurs when the data plane detects a DHCP server relay falls.

### DP sGRE new tunnel

Table 625. DP sGRE new tunnel event

Event	DP sGRE new tunnel
Event Type	dpSgreNewTunnel
Event Code	620
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "greType"="L2oGRE, L3oGRE",
Displayed on the web interface	Data plane [{dpName  dpKey}] established a [{greType}] tunnel with AP[{apIP}].
Description	This event occurs when the data plane establishes a tunnel with AP.

### DP sGRE del tunnel

Table 626. DP sGRE del tunnel event

Event	DP sGRE del tunnel
Event Type	dpSgreDelTunnel
Event Code	621
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "greType"="L2oGRE, L3oGRE", "aplpAddress"="x.x.x.x"
Displayed on the web interface	Dataplane [{dpName  dpKey}] lost a [{greType}] tunnel connection to AP[{apIP}].
Description	This event occurs when access tunnel is disconnected due to a timeout.

## DP sGRE keepalive recovery

Table 627. DP sGRE keepalive recovery event

Event	DP sGRE keepalive recovery
Event Type	dpSgreKeepAliveRecovery
Event Code	622
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected KeepAlive packet to Core Gateway [{gatewayIP}] is now responsive.
Description	The event occurs when the core gateway resumes answering to keepalive.

## DP DHCPRelay response recovery

Table 628. DP DHCPRelay response recovery event

Event	DP DHCPRelay response recovery
Event Type	dpDhcpRelayRespRecovery
Event Code	623
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected DHCP server [{dhcplP}] is now responsive
Description	This event occurs when the DHCP server resumes answering the relay request from data plane.

### DP sGRE GW reachable

Table 629. DP sGRE GW reachable event

Event	DP sGRE GW reachable
Event Type	dpSgreGWReachable
Event Code	624
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected Core Gateway [{gatewayIP}] is now reachable
Description	This event occurs when the core gateway is reachable.

### DP sGRE GW active

Table 630. DP sGRE GW active event

Event	DP sGRE GW active
Event Type	dpSgreGWAct
Event Code	625
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:, "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName  dpKey}] detected [{gatewayIP}] is now active
Description	This event occurs when core gateway changes to an active mode.

## DP sGRE GW failover

Table 631. DP sGRE GW failover event

Event	DP sGRE GW failover
Event Type	dpSgreGWFailOver
Event Code	626
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx", "preGatewaylp"="x.x.x.x", "curGatewaylP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName/dpKey}] switched over from CoreGateway[{preGatewayIP}] to CoreGateway[{curGatewayIP}].
Description	This event occurs when the data plane switches to the other gateway due to failover threshold limit.

NOTE: Refer to Tunnel Alarms - Access Point.

## Index

#### **Numerics** ad/LDAP connected successfully 250 ad/LDAP connectivity failure 251 3rd party access point 184 ad/Idap connectivity failure 92 3rd Party Access Point Events 184 ad-hoc network device 214 3rd party AP connected 184 ad-hoc-networkRoqueAPDetecte 214 3rd party client authorization 272 adServerUnreachable 76 3rd party client authorization failure 272 alarm 63, 64 3rd party client inactivity timeout 271 alarm and event management 63 3rd party client join 271 ap account message drop while no ac-3rd party client roaming 273 counting start message 73, 194 3rd party client session expiration 273 ap accounting message decode failed 72, 3rd party client session logout 274 3rdPartyAPConnected 184 ap accounting message mandatory pa-3rdPtvClientAuthorization 272 rameter missing 71, 191 3rdPtyClientAuthorizationFailure 272 ap accounting response while invalid con-3rdPtyClientInactivityTimeou 271 fia 193 3rdPtyClientJoin 271 ap accounting retransmission message 3rdPtyClientRoaming 273 dropped 193 3rdPtyClientSessionExpiration 273 AP brownout 236 3rdPtyClientSessionLogout 274 ap cable modem interface down 89, 236 ap cable modem power-cycled by user Α ap cable modem set to factory default by accFailedOverToSecondary 70, 190 user 241 accFallbackToPrimary 70, 190 ap cable modem soft-rebooted by user accounting alarms 69 240 accounting failed over to secondary 70. ap capacity reached 239 190 ap capacity recovered 239 accounting fallback to primary 70, 190 ap change control plane 234 accounting server not reachable 69, 189 ap channel updated 232 accounting session disabled 187 ap channel updated dfs detected a radar accounting session interim failed 188 accounting session start failed 186 ap client load balancing limit reached 237 accounting session started 185 ap client load balancing limit recovered accounting session stopped failed 188 238 accounting session stopped successfully ap communication alarms 80 187 ap communication events 204, 242 accSessDisabled 187 ap configuration generation failed 111, accSessInterimFail 188 309 accSessStarted 185 ap configuration update failed 81, 209 accSessStartFailed 186 ap configuration updated 208 accSessStopFail 188 ap connected 234 accSessStopSucc 187 ap connected to Is 216 accSrvrNotReachable 69, 189 ap country code updated 233 ad server unreachable 76

ap created a tunnel 435

ap deleted 88, 234	apAcctMsgDecodeFailed 192
ap disconnected 88, 231	apAcctMsgDropNoAcctStartMsg 73
ap discovery succeeded 205	194
AP failed to connect to LS 86	apAcctMsgMandatoryPrmMissing 71
ap failed to connect to Is 217	191
ap firmware update failed 82, 207	apAcctRespWhileInvalidConfig 193
ap firmware updated 206	apAcctRetransmittedMsgDropped 193
ap heartbeat lost 235	apBrownout 236
ap illegal to change country code 211	apBuildTunnelSuccess 435
ap ip address updated 232	apCapacityReached 239
ap is disconnected from secure gateway	apCapacityRecovered 239
181, 439	apCfgGenFailed 111, 309
ap join zone failed 84, 211	apChangeControlBlade 234
ap managed 205	apChannelChanged 232
ap mesh events 220	apCLBlimitReached 237
ap pre-provision model mismatched 82,	apCLBlimitRecovered 238
209	apConfApplying 208
ap rebooted by system 87, 231	apConfUpdated 208
ap rebooted by user 230	apConfUpdateFailed 81, 209
ap received passive calibration request	apConnected 234
218	apConnectionTerminatedDueToInsuffi-
ap received passive footfall request 219	cientLicense 377
AP received unrecognized request 219	apCountryCodeChanged 233
ap rejected 80, 206	apDeleted 234
ap reset to factory default 232	apDfsRadarEvent 233
ap secure gateway association failure 439	apDiscoverySuccess 205
ap secure gateway association success	apFirmwareApplying 207
438	apFirmwareUpdated 206
ap smart monitor turn off wlan 237	apFirmwareUpdateFailed 82, 207
ap softgre gateway not reachable 181,	apHeartbeatLost 235
437	apllIgalToChangeCountryCode 211
ap softgre gateway reachable 437	apIPChanged 232
ap softgre tunnel fails over primary to sec-	apJoinZoneFailed 84, 211
ondary 436	apLBSAuthFailed 85, 216
ap softgre tunnel fails over secondary to	apLBSConnectFailed 86, 217
primary 436 ap started location service 217	apLBSConnectSuccess 216 apLBSNoResponses 85, 215
ap state change alarms 87	
ap state change events 230	apLBSRcvdPassiveCalReq 218 apLBSRcvdPassiveFFReq 219
ap stopped location service 218	apLBSRcvdUnrecognizedRequest 219
ap swap model mismatched 81, 210	380
ap tagged as critical 235	apLBSStartLocationService 217
ap tunnel disconnected 435	apLBSStopLocationService 218
ap USB software package download failed	apModelDiffWithPreProvConfig 82, 99
242	209, 283
ap USB software package downloaded	apModelDiffWithSwapOutAP 81, 210
242	apP cable modem interface up 240
ap WLAN oversubscribed 83	app server active 351
ap wlan oversubscribed 210	app server down 133, 350
an wlan state changed 238	app server inactive 133, 350

appServerActive 351 appServerDown 133, 350 appServerInactive 133, 350 apRebootBySystem 87, 231 apSoftGREGatewayNotReachable 181, 437 apSoftGREGatewavReachable 437 apSoftGRETunnelFailoverPtoS 436 apSoftGRETunnelFailoverStoP 436 apStatusManaged 205 apStatusRejected 80, 206 apTaggedAsCritical 235 apTunnelDisconnected 435 apUsbSoftwarePackageDownloaded 242 apUsbSoftwarePackageDownloadFailed apWlanOversubscribed 83, 210 apWLANStateChanged 238 assocDown 135, 352 assocEstbFailed 134, 351 associated PDNGW down 342 associated pdngw down 126 association down 135, 352 association establishment failed 134, 351 association up 352 assocUp 352 auth info sending failed 353 authentication alarms 90 authentication events 243 authentication failed 246 authentication failed over to secondary 91, 249 authentication fallback to primary 91, 250 authentication server not reachable 90, 243 authentication succeeded 245 authFailed 246 authFailedOverToSecondary 91, 249 authFallbackToPrimary 91, 250 authorization events 254 authSrvrNotReachable 90, 243 authSuccess 245 auto cleared 75, 76, 77, 78, 79, 80, 81, 82, 86, 88, 89, 96, 97, 98, 99, 100, 101, 102, 103, 104, 105, 107, 108, 109, 113, 114, 115, 120, 132, 133, 134, 135, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 152, 153, 154, 162, 176, 177, 179, 181, 182, 200, 201, 202, 203, 206, 207, 209,

217, 231, 236, 261, 282, 283, 285, 287, 290, 291, 293, 297, 304, 305, 313, 316, 317, 318, 324, 327, 349, 350, 351, 352, 359, 360, 361, 362, 363, 364, 365, 381, 383, 386, 397, 403, 426, 427, 431, 437, 439 aystem alarms 160

#### В

backupClusterFailed 100, 284
backupClusterSuccess 284
bind fails with AD/LDAP 93, 251
bind success with LDAP 93, 252
binding failed 154, 386
binding released 387
binding revoked 387
binding succeeded 385
binding time expired 386
bindingExpired 386
bindingFailure 154, 386
bindingReleased 387
bindingRevoked 387
bindingRevoked 387
bindingRevoked 387
bindingSuccess 385

### C

c2d configuration failed 264 c2dCfaFailed 264 cableModemDown 236 cableModemUp 240 cassandraError 423 cdr generation failed 122, 329 cdr transfer failed 121, 329 cdr transfer succeeded 328 cdrGenerationFailed 122 cdrTxfrFailed 121 ceate session response failed 127, 343 cfgGenSkippedDueToEolAp 310 cfgRcvFailed 308 cfgUpdFailed 307 cfgUpdSuccess 307 caf server not configured 131, 347 cgfServerNotConfigured 131, 347 client authentication failed 266 client authorization failed 269 client authorization successfully 268 client blocked 275 client connection timed out 268 client disconnected 267

client events 265 cluster upload AP firmware started 300 client failed to join 267 cluster upload completed 294 client grace period 275 cluster upload failed 295 client joined 266 cluster upload started 294 client logged out 270 cluster upload vSZ-D firmware failed 299 clusterAddAPFirmwareFailed 108, 302 client roaming 270 client roaming disconnected 274 clusterAddAPFirmwareStart 301 client session expired 269 clusterAddAPFirmwareSuccess 302 clientAuthFailure 266 clusterAppStart 288 clientAuthorization 268 clusterAppStop 102, 287 clientAuthorizationFailure 269 clusterBackToInService 284 clientBlockByDeviceType 275 clusterBackupStart 288 clientDisconnect 267 clusterCfgBackupFailed 108, 304 clientGracePeriod 275 clusterCfqBackupStart 303 clientlnactivityTimeout 268 clusterCfgBackupSuccess 303 client Join 266 clusterCfgRestoreFailed 109, 304 clientJoinFailure 267 clusterCfqRestoreSuccess 304 clientRoaming 270 clusterCreatedSuccess 281 clusterLeaderChanged 289 clientSessionExpiration 269 clientSessionLogout 270 clusterNameChanged 303 cluster add AP firmware completed 302 clusterOutOfService 107, 297 Cluster add AP firmware failed 108 clusterUpgradeStart 289 cluster add AP firmware failed 302 clusterUploadAPFirmwareFailed 107, cluster add AP firmware started 301 301 cluster application started 288 clusterUploadAPFirmwareStart 300 cluster application stopped 102, 287 clusterUploadAPFirmwareSuccess 300 cluster back in service 284 cmRebootByUser 236 cluster backup completed 284 cmResetBvUser 240 cluster backup failed 100, 284 cmResetFactoryByUser 241 cluster backup started 288 coA authorize only access reject 258 coA nack sent to AAA 257 cluster created successfully 281 cluster events 280 coA NAK received NAS 258 cluster in maintenance state 99, 283 coA received from AAA 256 cluster leader changed 289 coA RWSG MWSG notification failure 259 cluster name is changed 303 coA sent NAS 257 cluster node rebooted 104, 292 coaAuthorizeOnlyAccessReject 258 cluster node shut down 105 coaNackSntAAA 257 cluster node shutdown 293 coaNakRcvdNas 258 coaRcvdAAA 256 cluster node upgrade completed 286 cluster out of service 107, 297 coaRWSGMWSGNotifFailure 259 cluster remove node started 295 coaSentNas 257 cluster restore completed 285 config update failed 151, 380 configuration 110 cluster restore failed 101, 285 Cluster upgrade failed 102 Configuration backup failed 108 cluster upgrade failed 287 configuration backup failed 304 cluster upgrade started 289 configuration backup started 303 cluster upload AP firmware completed configuration backup succeeded 303 300 configuration events 307 cluster upload AP firmware failed 107, configuration receive failed 308 301 configuration restore failed 109, 304

configuration restore succeeded 304 data plane upgrade failed 118, 324 data plane upgrade started 322 configuration update failed 307 configuration updated 307 data plane upgrade succeeded 323 configuration-change events 63 database error 423 connected to LS 397 datablade alarms 113 connectedToDblade 260 debua 64 connectedToDHCP 382 decode failed 128, 344 connection to cqf failed 120, 327 delAllSess 385 control and data plane 96, 260 delete all sessions 385 cpu threshold back to normal 428 delete bearer request failed 130, 345 cpu threshold exceeded 176, 426 delete session response failed 129, 345 deleteBearerRequestFailed 130 cpuThresholdBackToNormal 428 deleteSessionResponseFailed 129 cpuThresholdExceeded 176, 426 destAvailable 349 destination available 349 D destination not reachable 132, 349 data plane 113, 311 destNotReacheable 132 data plane accepted a tunnel request 433 destNotRecheable 349 data plane configuration update failed dhcp connected 382 113, 313 dhcp connection lost 153, 383 data plane configuration updated 312 dhcp dcln received 326 data plane connected 316 dhcp events 325 data plane core dead 116, 319 dhcp inform received 325 data plane disconnected 114, 316 diaCEAUnknownPeer 172, 419 data plane discovered 311 diaCERError 167, 414 data plane discovery failed 312 diaCERSuccess 414 data plane discovery succeeded 320 diaFailbackToPeer 171, 419 data plane heartbeat lost 313 diaFailOverToAltPeer 170, 418 data plane ip address updated 314 dialnitialization 413 data plane license is not enough 118, dialnitilizeErr 166, 412 322 dialnvalidVer 415 data plane managed 321 diameter CEA unknown peer 172, 419 data plane packet pool is above high water diameter CER error 167, 414 diameter CER success 414 data plane packet pool is under critical low diameter fail back to peer 171, 419 water mark 116, 318 diameter fail over to alternate peer 170, data plane packet pool is under low water mark 115, 318 diameter initialization 413 data plane physical interface down 114, diameter initialization error 166, 412 317 diameter invalid version 415 data plane physical interface up 317 diameter no common application 172, data plane process restarted 117, 320 420 data plane rebooted 115, 313 diameter peer add error 168, 416 data plane rejected a tunnel request 434 diameter peer add successful 416 data plane set up a tunnel 438 diameter peer remove successful 169, data plane statistics update failed 315 417 data plane status update failed 315 diameter peer transport failure 166, 413 data plane terminated a tunnel 434 diameter realm entry error 169, 417 data plane updated to a new control plane diaNoCommonApp 172, 420

diaPeerAddError 168, 416

314

diaPeerAddSuccess 416 diaPeerRemoveSuccess 169, 417 diaPeerTransportFailure 166, 413 diaRealmEntryErr 169, 417 did allocation failure 136, 356 didAllocationFailure 136, 356 disk threshold back to normal 428 disk usage exceed threshold 105, 297 disk usage threshold exceeded 177, 427 diskUsageExceed 105, 297 diskUsageThresholdExceeded 177, 427 dm nack received from NAS 256 dm nack sent to AAA 255 dm received from AAA 254 dm sent to NAS 255 dmNackRcvdNAS 256 dmNackSntAAA 255 dmRcvdAAA 254 dmSntNAS 255 DP connected 260 dp dhcprelav failover 442 DP DHCPRelay no response 442 dp dhcprelay response recovery 444 dp sGRE del tunnel 443 dp sGRE GW active 445 do sGRE GW failover 446 dp sGRE GW inactive 441 dp sGRE GW reachable 445 do sGRE GW unreachable 440 dp sGRE keep alive timeout 441 dp sGRE new tunnel 443 dpAcceptTunnelRequest 433 dpCoreDead 36, 116, 319 dpDeleted 321 dpDhcpRelayFailOver 442 dpDhcpRelayNoResp 442 dpDhcpRelayRespRecovery 444 dpDisconnected 114 dpDiscovervSuccess 320 dpLicenselnsufficient 118, 322 dpP sGRE keepalive recovery 444 dpPhvInterfaceDown 114 dpPktPoolCriticalLow 36, 116, 318 dpPktPoolLow 36, 115, 318 dpPktPoolRecover 319 dpProcessRestart 117, 320 dpReboot 115 dpRejectTunnelRequest 434 dpSetUpTunnel 438 dpSgreDelTunnel 443

dpSgreGWAct 445
dpSgreGWFailOver 446
dpSgreGWInact 441
dpSgreGWReachable 445
dpSgreGWUnreachable 440
dpSgreKeepAliveRecovery 444
dpSgreKeepAliveTimeout 441
dpSgreNewTunnel 443
dpStatusManaged 321
dpTearDownTunnel 434
dpUpdateStatisticFailed 315
dpUpgradeFailed 324
dpUpgradeStart 322
dpUpgradeSuccess 323
dpUpgrading 323

### Ε

echo response not received 331 email sent failed 406 email sent successfully 406 emap downlink connected to map 220 emap downlink disconnected from map 221 emap uplink connected to map 221 emap uplink disconnected from map 222 emapDlinkConnectWithMap 220 emapDlinkDisconnectWithMap 221 emapUlinkConnectWithMap 221 emapUlinkDisconnectWithMap 222 end -of-life AP model detected 112, 310 entire cluster upgraded successfully 286 espAuthServerReachable 199 espAuthServerResolvable 200 espAuthServerUnreachable 77, 200 espAuthServerUnResolvable 77, 201 espDNATServerReachable 201 espDNATServerResolvable 202 espDNATServerUnreachable 78, 202 espDNATServerUnresolvable 79, 203 event 64 event attributes 64 event categories 63 event detail information 64 event severity 64 event source 64 event type 64

#### F hipStarted 410 hipStopped 410 failed to connect to LS 162, 397 fast re-authentication failed 248 fast re-authentication succeeded 248 fastReauthFailed 248 incapable location info requested 379 fastReauthSuccess 248 incapableLocInfoRequested 379 file upload 405 incorrect flat file configuration 308 fileUpload 405 informational 64 force DHCP disconnected 278 insert sub data failed 355 forceDHCPDisconnect 278 insert sub data success 355 forwarded calibration request to AP 401 insertSubDataFailed 355 forwarded footfall request to AP 401 insertSubDataSuccess 355 ftp transfer 405 insufficient license capacity 377 ftp transfer error 405 ip assigned 339 ftpTransfer 405 ip not assigned 339 ftpTransferError 405 ipmi alarms 137 ipmi events 358 ipmiCurrent 145, 363 G ipmiDrvStatus 147, 365 ga interface alarms 120 ipmiFan 144, 362 ga interface events 327 ipmiFanStatus 145, 364 generate AP config for plane load rebalipmiPower 144, 363 ance failed 404 ipmiPsStatus 146, 364 generate AP config for plane load rebalipmiRECurrent 369 ance succeeded 404 ipmiREDryStatus 371 generation of event and alarm 64 ipmiREFan 368 genericRogueAPDetected 212 ipmiREFanStatus 370 ggsn not reachable 124, 331 ipmiREPower 369 ggsn not resolved 124, 332 ipmiREPsStatus 370 gasn restarted 123, 330 ipmiREThempBB 366 ggsnNotReachable 124 ipmiREThempFP 366 ggsnNotResolved 124 ipmiREThempHSBP 368 ggsnRestarted 123 ipmiREThempIOH 366 gn S2a interface alarms 123 ipmiREThempMemP 367 gn S2a interface events 330 ipmiREThempP 368 gprs location update failed 354 ipmiREThempPS 367 aprs location update succeeded 354 ipmiREVotage 365 ar interface alarms 132 ipmiThempBB 139, 359 ar interface event 348 ipmiThempFP 140, 359 gtpManager (DP) disconnected 96, 261 ipmiThempHSBP 143, 362 ipmiThempIOH 140, 360 н ipmiThempMemP 141, 360 ipmiThempP 143, 361 hIP cache cleaned 412 ipmiThempPS 142, 361 hIP failed over 165, 411 ipmiVoltage 138, 358 hip started 410 ipmiVotage 138 hip stopped 410 ipsecTunnelAssociated 438 hipCacheCleanup 412

ipsecTunnelAssociateFailed 439

ipsecTunnelDisassociated 181, 439

hipFailover 165, 173, 411, 424

hipStandbyRestart 411

#### Κ

keepalive failure 164, 409 keepAliveFailure 164, 409

#### L

Idap server unreachable 76 IdapServerUnreachable 76 license data changed 376 license going to expire 149, 376 license import failed 376 license import succeeded 375 license sync failed 375 license sync succeeded 374 license threshold exceeded 178, 429 licenseChanged 376 licenseGoingToExpire 149, 376 licenselmportFail 376 licenselmportSuccess 375 licenseSvncFail 375 licenseSyncSuccess 374 licenseThresholdExceeded 178, 429 licensing alarms 148 licensing interface events 372 Ima failed over 152, 382 IMA ICMP is unreachable 381 Ima icmp is unreachable 152 Ima ICMP reachable 380 IMA server unreachable 381 ImaFailOver 152, 382 ImaHbUnreachable 381 ImalcmpReachable 380 ImalcmpUnreachable 152, 381 logging events 63 lostCnxnToDblade 96, 261 lostCnxnToDHCP 153, 383 LS authentication failure 85, 161 Is authentication failure 216, 396

### М

MAC-spoofing rogue AP 213
mac-spoofingRogueAPDetected 213
mailSendFailed 406
mailSendSuccess 406
maliciousRogueAPTimeout 214
map disconnected 222
map downlink connected 222
map downlink connected to emap 223
map downlink connected to map 228

map downlink disconnected from emap 223 map downlink disconnected from map 229 map uplink connected to emap 224 map uplink connected to map 226 map uplink connected to rap 225 map uplink disconnected from emap 225 mapDisconnected 222 mapDlinkConnected 222 mapDlinkConnectWitheMap 223 mapDlinkConnectWithMap 228 mapDlinkDisconnectWitheMap 223 mapDlinkDisconnectWithMap 229 mapUlinkConnectToeMap 224 mapUlinkConnectToMap 226 mapUlinkConnectToRap 225 mapUlinkDisconnectToeMap 225 Memory allocation failed 175 memory allocation failed 425 memory threshold back to normal 428 memory threshold exceeded 177, 427 memoryThresholdBackToNormal 428 memoryThresholdExceeded 177, 427 Mesh state update to rap no channel 228 mesh state updated to map 226 mesh state updated to map no channel 227 mesh state updated to RAP 227 meshStateUpdateToMap 226 meshStateUpdateToMapNoChannel 227 meshStateUpdateToRap 227 meshStateUpdateToRapNoChannel 228 modify bearer response failed 128, 344 modifyBearerResponseFailed 128

#### N

new node failed to join 97, 281
new node joined successfully 281
newNodeJoinFailed 97, 281
newNodeJoinSuccess 281
No LS responses 85, 215
no LS responses 161
no Is responses 396
node back in service 296
node bond interface down 103, 290
node bond interface up 290
Node ip address changed 291
node out of service 99, 283

node physical interface down 104, 291 node physical interface up 292 node removal completed 282 node removal failed 98, 282 nodeBondInterfaceDown 103, 290 nodeBondInterfaceUp 290 nodeIPChanged 291 nodeOutOfService 99, 283 nodePhyInterfaceUp 292 nodeShutdown 105, 293 ntp time synchronized 293 number of devices exceeded it's limit 180 number of users exceeded it's limit 179

#### 0

onboarding registration failed 276 onboarding registration succeeded 276 onboardingRegistrationFailure 276 onboardingRegistrationSuccess 276 outbound routing failure 135, 356 outboundRoutingFailure 135, 356 overview 63

### P

pdf update success coa 340 pdnaw could not be resolved 125, 341 pdngw version not supported 126, 342 pdnGwAssociationDown 126, 342 pdnGwNotResolved 125, 341 pdnGwVersionNotSupportedMsgReceived 126, 342 pdp context established 332 pdp delete by GGSN failed 338 pdp delete by GGSN succeeded 338 pdp delete by TTG failed 337 pdp delete by TTG succeeded 337 pdp update by GGSN failed 336 pdp update by GGSN succeeded 336 pdp update by HLR failed 334 pdp update by HLR succeeded 333 pdp update by roaming failed 335 pdp update by roaming succeeded 334 pdp update fail COA 341 pdpUpdFailCOA 341 pdpUpdSuccCOA 340 planeLoadingRebalancingFailed 404 planeLoadingRebalancingSucceeded

404
pmipUnavailable 174, 424
pMIPv6 unavailable 174, 424
process initiated 173, 424
process restart 163, 408
process stopped 425
processRestart 163, 408
processStop 425
pseudonym authentication failed 247
pseudonym authentication succeeded 246
pseudonymAuthFailed 247
pseudonymAuthFailed 247
pseudonymAuthSuccess 246

racADLDAPBindFail 93, 251

#### R

racADLDAPFail 92, 251 racADLDAPSuccess 250 racADNPSFail 94, 252 racADNPSFailToAuthenticate 95, 253 racLDAPFailToFindPassword 93, 252 radius fails to authenticate with AD NPS server 95, 253 radius fails to connect to AD NPS server 94. 252 radius server reachable 196 radius server unreachable 75, 197 radiusServerUnreachable 75 rap downlink connected to map 224 rap downlink disconnected from map 229 rapDlinkConnectWithMap 224 rapDlinkDisconnectWithMap 229 rate limit for TOR surpassed 179, 431 rate limit threshold restored 430 rate limit threshold surpassed 429 rateLimitMORSurpassed 179, 431 rateLimitThresholdRestored 430 rateLimitThresholdSurpassed 429 received management request 399 received passive request 398 received unrecognized request 402 recover cassandra error 423 recoverCassandraError 423 remediation failed 277 remediation succeeded 277 remediationFailure 277 remediationSuccess 277 removeNodeFailed 98, 282 removeNodeSuccess 282

resource unavailable 164, 409
resourceUnavailable 164, 409
restore data failed 357
restore data success 357
restoreClusterFailed 101, 285
restoreClusterSuccess 285
restoreDataFailed 357
restoreDataSuccess 357
resync NTP Time 296
resync NTP time 106
resyncNTPTime 36, 106, 296
retransmission exhausted 159, 394
retransmitExausted 159, 394
Rogue AP 212
rogue AP disappeared 214

### S

same network roque ap 213 same-networkRogueAPDetected 213 scg forwarded footfall request to AP 401 scgLBSAuthFailed 161, 396 scaLBSConnectFailed 162, 397 scaLBSConnectSuccess 397 scaLBSFwdPassiveCalRea 401 scgLBSFwdPassiveFFReq 401 scaLBSNoResponse 161, 396 scgLBSRcvdMgmtRequest 399 scgLBSRcvdUnrecognizedRequest 402 scaLBSSendAPInfobyVenueReport 399 scgLBSSendClientInfo 400 scgLBSSendVenuesReport 400 scqLBSSentControllerInfo 398 scaLBSStartLocationService 398 send auth info success 353 sendAuthInfoFailed 353 sendAuthInfoSuccess 353 sent AP info by venue report 399 sent associated client report 400 sent controller information report 398 sent query venues report 400 service unavailable 163, 408 serviceUnavailable 163, 408 sessDeletedAtDblade 262 sessDeleteErrAtDblade 263 session delete at DP failed 263 session deleted at DP 262 session interface events 384 session license exhausted 374 session timeout 384

session update at DP failed 262 session updated at DP 261 sessTimeout 384 sessUpdatedAtDblade 261 sessUpdateErrAtDblade 262 smartMonitorTurnOffWLAN 237 smartRoamDisconnect 274 sms sent failed 407 sms sent successfully 407 smsSendFailed 407 smsSendSuccess 407 ssh tunnel switched 295 ssid-spoofing rogue AP 212 ssid-spoofingRoqueAPDetected 212 STA 393 sta authentication failed decode failure 157, 390 sta authentication failed failure response 156, 389 sta authentication failed transport down 155, 389 sta reauthorization failed 157, 393 sta reauthorization successful 392 sta response timer expired 158, 393 sta session termination AAA initiated failed sta session termination AAA initiated success 391 sta session termination SCG initiated success 390 sta successful authentication 388 staAuthFailedDecodeFailure 157, 390 staAuthFailedFailureResp 156, 389 staAuthFailedTransDown 155, 389 standby HIP restarted 411 staReAuthFailed 157, 393 staReAuthSuccess 392 staResponseTimerExpired 158, 393 staSessionTermAAAInitFailed 392 staSessionTermAAAInitSucess 391 staSessionTermSCGInitSuccess 390 staSuccessfulAuthentication 388 syslog server reachable 402 syslog server switched 403 syslog server unreachable 162, 403 syslogServerReachable 402 syslogServerSwitched 403 syslogServerUnreachable 162, 403 system interface events 395

#### T

threshold alarms 176
threshold events 426
threshold-crossing alerts 63
timestamp 64
tooManyUsers 179
ttg session critical threshold 148, 373
ttg session license exhausted 149
ttg session major threshold 373
ttg session warning threshold 372
ttgSessionCriticalThreshold 148, 373
ttgSessionLicenseExausted 149, 374
ttgSessionMajorThreshold 373
ttgSessionWarningThreshold 372
tunnel alarms 181
tunnel events - datablade 440

#### U

unallocatedMemory 175, 425 unauthorized COA/DM message dropped 195 unauthorized CoA/DM message dropped 74 unauthorizedCoaDmMessageDropped 74. 195 Unavailable location info requested 378 unavailableLocInfoRequested 378 unknown realm 192, 245 unknown ue 340 unknownRealm 245 unknownRealmAccounting 192 unsupported location delivery request 379 unSupportedLocDeliveryRequest 379 update bearer request failed 130, 346 updateBearerRequestFailed 130 updateCfgFailed 151 updateGprsLocFailed 354 updateGprsLocSuccess 354 updating ap configuration 208 updating ap firmware 207 upgradeClusterFailed 102, 287 upgradeClusterNodeSuccess 286 upgradeEntireClusterSuccess 286 uploadClusterVDPFirmwareFailed 299

#### W

wds device joined 278

wds device left 279 wdsDeviceJoin 278 wdsDeviceLeave 279 wechat ESP authentication server reachable 199 weChat ESP authentication server resolvable 200 WeChat ESP authentication server unreachable 200 weChat ESP authentication server unreachable 77 weChat ESP authentication server unresolvable 77, 201 weChat ESP DNAT server reachable 201 weChat ESP DNAT server resolvable 202 weChat ESP DNAT server unreachable 78, 202 weChat ESP DNAT server unresolvable 79. 203

### Z

zD AP Migrated 421
zd AP Migrating 421
ZD AP Migration Failed 422
zD AP Rejected 422
zdAPMigrated 421
zdAPMigrating 421
zdAPMigrationFailed 422
zdAPRejected 422
zone configuration preparation failed 110, 309
zoneCfqPrepareFailed 110, 111, 309

