

RUCKUS SmartZone vSZ-H and vSZ-E SNMP MIB Reference, 6.0.0

Supporting SmartZone 6.0.0

Copyright, Trademark and Proprietary Rights Information

© 2021 CommScope, Inc. All rights reserved.

No part of this content may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation, or adaptation) without written permission from CommScope, Inc. and/or its affiliates ("CommScope"). CommScope reserves the right to revise or change this content from time to time without obligation on the part of CommScope to provide notification of such revision or change.

Export Restrictions

These products and associated technical data (in print or electronic form) may be subject to export control laws of the United States of America. It is your responsibility to determine the applicable regulations and to comply with them. The following notice is applicable for all products or technology subject to export control:

These items are controlled by the U.S. Government and authorized for export only to the country of ultimate destination for use by the ultimate consignee or end-user(s) herein identified. They may not be resold, transferred, or otherwise disposed of, to any other country or to any person other than the authorized ultimate consignee or end-user(s), either in their original form or after being incorporated into other items, without first obtaining approval from the U.S. government or as otherwise authorized by U.S. law and regulations.

Disclaimer

THIS CONTENT AND ASSOCIATED PRODUCTS OR SERVICES ("MATERIALS"), ARE PROVIDED "AS IS" AND WITHOUT WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT PERMISSIBLE PURSUANT TO APPLICABLE LAW, COMMSCOPE DISCLAIMS ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, TITLE, NON-INFRINGEMENT, FREEDOM FROM COMPUTER VIRUS, AND WARRANTIES ARISING FROM COURSE OF DEALING OR COURSE OF PERFORMANCE. CommScope does not represent or warrant that the functions described or contained in the Materials will be uninterrupted or error-free, that defects will be corrected, or are free of viruses or other harmful components. CommScope does not make any warranties or representations regarding the use of the Materials in terms of their completeness, correctness, accuracy, adequacy, usefulness, timeliness, reliability or otherwise. As a condition of your use of the Materials, you warrant to CommScope that you will not make use thereof for any purpose that is unlawful or prohibited by their associated terms of use.

Limitation of Liability

IN NO EVENT SHALL COMMSCOPE, COMMSCOPE AFFILIATES, OR THEIR OFFICERS, DIRECTORS, EMPLOYEES, AGENTS, SUPPLIERS, LICENSORS AND THIRD PARTY PARTNERS, BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, INCIDENTAL, EXEMPLARY OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER, EVEN IF COMMSCOPE HAS BEEN PREVIOUSLY ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, WHETHER IN AN ACTION UNDER CONTRACT, TORT, OR ANY OTHER THEORY ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIALS. Because some jurisdictions do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of liability for consequential or incidental damages, some of the above limitations may not apply to you.

Trademarks

ARRIS, the ARRIS logo, COMMSCOPE, RUCKUS, RUCKUS WIRELESS, the Ruckus logo, the Big Dog design, BEAMFLEX, CHANNELFLY, FASTIRON, ICX, SMARTCELL and UNLEASHED are trademarks of CommScope, Inc. and/or its affiliates. Wi-Fi Alliance, Wi-Fi, the Wi-Fi logo, Wi-Fi Certified, the Wi-Fi CERTIFIED logo, Wi-Fi Protected Access, the Wi-Fi Protected Setup logo, Wi-Fi Protected Setup, Wi-Fi Multimedia and WPA2 and WMM are trademarks or registered trademarks of Wi-Fi Alliance. All other trademarks are the property of their respective owners.

Contents

Preface	21
Document Conventions.....	21
Notes, Cautions, and Safety Warnings.....	21
Command Syntax Conventions.....	21
Document Feedback.....	22
RUCKUS Product Documentation Resources.....	22
Online Training Resources.....	22
Contacting RUCKUS Customer Services and Support.....	23
What Support Do I Need?.....	23
Open a Case.....	23
Self-Service Resources.....	23
About this Guide	25
Introduction.....	25
What's New in this Document.....	25
Terminology.....	26
References.....	27
SNMP Configuration and Standard MIB and OID	29
Overview.....	29
Enabling and Disabling SNMP Traps.....	29
Updating SNMP V2 and V3 Configuration Flow and SNMP Logs.....	30
Standard MIB.....	32
Host Resource MIB.....	32
UCD MIB.....	33
SNMPv2 MIB (RFC3418).....	33
RFC1213 MIB (RFC1213).....	33
Decoding Traps.....	33
Generate Traps Using CLI.....	34
SNMP Agent for APs.....	34
Limitations.....	34
Enable SNMP Agent.....	35
Enable Override Settings.....	37
View SNMP Configuration.....	40
Disable SNMP Agents.....	40
Using SNMP Walk Scripts.....	45
Steps for using SNMP Walk Scripts.....	45
Setup Environment.....	45
Installing SNMP Client Tool.....	46
Ruckus MIB files in the MIB directory.....	46
Tips for Writing Your Own Scripts.....	46
Ruckus Event MIB	49
Introduction.....	49
Ruckus Event Trap.....	49
ruckusSCGSystemMiscEventTrap.....	55
ruckusSCGUpgradeSuccessTrap.....	55
ruckusSCGUpgradeFailedTrap.....	56

ruckusSCGNodeRestartedTrap.....	56
ruckusSCGNodeShutdownTrap.....	57
ruckusSCGCPUsageThresholdExceededTrap.....	57
ruckusSCGMemoryUsageThresholdExceededTrap.....	58
ruckusSCGDiskUsageThresholdExceededTrap.....	59
ruckusSCGLicenseUsageThresholdExceededTrap.....	59
ruckusSCGAPMiscEventTrap.....	60
ruckusSCGAPConnectedTrap.....	60
ruckusSCGAPDeletedTrap.....	61
ruckusSCGAPDisconnectedTrap.....	62
ruckusSCGAPLostHeartbeatTrap.....	62
ruckusSCGAPRebootTrap.....	63
ruckusSCGCriticalAPConnectedTrap.....	64
ruckusSCGCriticalAPDisconnectedTrap.....	64
ruckusSCGAPRejectedTrap.....	65
ruckusSCGAPConfUpdateFailedTrap.....	66
ruckusSCGAPConfUpdatedTrap.....	66
ruckusSCGAPSwapOutModelDiffTrap.....	67
ruckusSCGAPPreProvisionModelDiffTrap.....	68
ruckusSCGAPDiscoveryFailTrap.....	68
ruckusSCGAPFirmwareUpdateFailedTrap.....	69
ruckusSCGAPFirmwareUpdatedTrap.....	70
ruckusSCGAPWlanOversubscribedTrap.....	70
ruckusSCGAPFactoryResetTrap.....	71
ruckusSCGCableModemDownTrap.....	72
ruckusSCGCableModemRebootTrap.....	72
ruckusSCGAPJoinZoneFailedTrap.....	73
ruckusSCGAPManagedTrap.....	74
ruckusSCGCPUsageThresholdBackToNormalTrap.....	74
ruckusSCGMemoryUsageThresholdBackToNormalTrap.....	75
ruckusSCGDiskUsageThresholdBackToNormalTrap.....	75
ruckusSCGCableModemUpTrap.....	76
ruckusSCGAPDiscoverySuccessTrap.....	76
ruckusSCGCMResetByUserTrap.....	77
ruckusSCGCMResetFactoryByUserTrap.....	78
ruckusSCGMaliciousRogueAPTimeoutTrap.....	78
ruckusSCGAPLBSConnectSuccessTrap.....	79
ruckusSCGAPLBSNoResponsesTrap.....	80
ruckusSCGAPLBSAuthFailedTrap.....	80
ruckusSCGAPLBSConnectFailedTrap.....	81
ruckusSCGGeneralRogueAPTrap.....	82
ruckusSCGAPTunnelBuildFailedTrap.....	82
ruckusSCGAPTunnelBuildSuccessTrap.....	83
ruckusSCGAPTunnelDisconnectedTrap.....	84
ruckusSCGAPSoftGRETunnelFailoverPtoSTrap.....	85
ruckusSCGAPSoftGRETunnelFailoverStoPTrap.....	86
ruckusSCGAPSoftGREGatewayNotReachableTrap.....	86
ruckusSCGAPSoftGREGatewayReachableTrap.....	87
ruckusSCGDPCConfUpdateFailedTrap.....	88
ruckusSCGDPLostHeartbeatTrap.....	88

ruckusSCGDPDisconnectedTrap.....	89
ruckusSCGDPPhyInterfaceDownTrap.....	89
ruckusSCGDPStatusUpdateFailedTrap.....	90
ruckusSCGDPStatisticUpdateFaliedTrap.....	90
ruckusSCGDPConnectedTrap.....	90
ruckusSCGDPPhyInterfaceUpTrap.....	91
ruckusSCGDPCnfUpdatedTrap.....	91
ruckusSCGDPTunnelTearDownTrap.....	92
ruckusSCGDPRebootTrap.....	92
ruckusSCGDPAcceptTunnelRequestTrap.....	92
ruckusSCGDPrejectTunnelRequestTrap.....	93
ruckusSCGDPSgreGWUnreachableTrap.....	93
ruckusSCGDPSgreGWReachableTrap.....	94
ruckusSCGDPTunnelSetUpTrap.....	94
ruckusSCGDPDiscoverySuccessTrap.....	95
ruckusSCGDPDiscoveryFailTrap.....	95
ruckusSCGDPSgreGWInactTrap.....	96
ruckusSCGDPSgreGWActTrap.....	96
ruckusSCGDPPktPoolLowTrap.....	96
ruckusSCGDPPktPoolCriticalLowTrap.....	97
ruckusSCGDPPktPoolRecoverTrap.....	97
ruckusSCGDPCoreDeadTrap.....	98
ruckusSCGDDeletedTrap.....	98
ruckusSCGDPUgradeStartTrap.....	99
ruckusSCGDPUgradingTrap.....	99
ruckusSCGDPUgradeSuccessTrap.....	99
ruckusSCGDPUgradeFailedTrap.....	100
ruckusSCGClientMiscEventTrap.....	100
ruckusSCGNodeJoinFailedTrap.....	101
ruckusSCGNodeRemoveFailedTrap.....	101
ruckusSCGNodeOutOfServiceTrap.....	102
ruckusSCGClusterInMaintenanceStateTrap.....	102
ruckusSCGClusterBackupFailedTrap.....	102
ruckusSCGClusterRestoreFailedTrap.....	103
ruckusSCGClusterAppStoppedTrap.....	103
ruckusSCGNodeBondInterfaceDownTrap.....	104
ruckusSCGNodePhyInterfaceDownTrap.....	104
ruckusSCGClusterLeaderChangedTrap.....	105
ruckusSCGClusterUpgradeSuccessTrap.....	105
ruckusSCGNodeBondInterfaceUpTrap.....	106
ruckusSCGNodePhyInterfaceUpTrap.....	106
ruckusSCGClusterBackToInServiceTrap.....	107
ruckusSCGBackupClusterSuccessTrap.....	107
ruckusSCGNodeJoinSuccessTrap.....	108
ruckusSCGClusterAppStartTrap.....	108
ruckusSCGNodeRemoveSuccessTrap.....	108
ruckusSCGClusterRestoreSuccessTrap.....	109
ruckusSCGNodeBackToInServiceTrap.....	109
ruckusSCGSshTunnelSwitchedTrap.....	110
ruckusSCGClusterCfgBackupStartTrap.....	110

ruckusSCGClusterCfgBackupSuccessTrap.....	111
ruckusSCGClusterCfgBackupFailedTrap.....	111
ruckusSCGClusterCfgRestoreSuccessTrap.....	111
ruckusSCGClusterCfgRestoreFailedTrap.....	112
ruckusSCGClusterUploadSuccessTrap.....	112
ruckusSCGClusterUploadFailedTrap.....	113
ruckusSCGClusterOutOfServiceTrap.....	113
ruckusSCGClusterUploadVDPFirmwareStartTrap.....	113
ruckusSCGClusterUploadVDPFirmwareSuccessTrap.....	114
ruckusSCGClusterUploadVDPFirmwareFailedTrap.....	114
ruckusSCGIpmiVotageTrap.....	115
ruckusSCGIpmiTempBBTrap.....	115
ruckusSCGIpmiTempFPTrap.....	116
ruckusSCGIpmiTempIOHTrap.....	116
ruckusSCGIpmiTempMemPTrap.....	117
ruckusSCGIpmiTempPSTrap.....	117
ruckusSCGIpmiTempPTrap.....	118
ruckusSCGIpmiTempHSBPTrap.....	118
ruckusSCGIpmiFanTrap.....	119
ruckusSCGIpmiPowerTrap.....	119
ruckusSCGIpmiCurrentTrap.....	120
ruckusSCGIpmiFanStatusTrap.....	120
ruckusSCGIpmiPsStatusTrap.....	121
ruckusSCGIpmiDrvStatusTrap.....	121
ruckusSCGIpmiREVotageTrap.....	122
ruckusSCGIpmiRETempBBTrap.....	122
ruckusSCGIpmiRETempFPTrap.....	122
ruckusSCGIpmiRETempIOHTrap.....	123
ruckusSCGIpmiRETempMemPTrap.....	123
ruckusSCGIpmiRETempPSTrap.....	124
ruckusSCGIpmiRETempPTrap.....	124
ruckusSCGIpmiRETempHSBPTrap.....	125
ruckusSCGIpmiREFanTrap.....	125
ruckusSCGIpmiREPowerTrap.....	126
ruckusSCGIpmiRECurrentTrap.....	126
ruckusSCGIpmiREFanStatusTrap.....	126
ruckusSCGIpmiREPsStatusTrap.....	127
ruckusSCGIpmiREDrvStatusTrap.....	127
ruckusSCGFtpTransferErrorTrap.....	128
ruckuscsvFtpTransfer.....	128
ruckuscsvFtpTransferError.....	129
ruckuscsvFtpTransferMaxRetryReached.....	129
ruckuscsvDiskThresholdExceeded.....	130
ruckuscsvDiskMaxCapacityReached.....	130
csvDiskThresholdBackToNormal.....	131
ruckusSCGSystemLBSConnectSuccessTrap.....	131
ruckusSCGSystemLBSNoResponseTrap.....	132
ruckusSCGSystemLBSAuthFailedTrap.....	132
ruckusSCGSystemLBSConnectFailedTrap.....	132
ruckusSCGProcessRestartTrap.....	133

ruckusSCGServiceUnavailableTrap.....	133
ruckusSCGKeepAliveFailureTrap.....	134
ruckusSCGResourceUnavailableTrap.....	134
ruckusSCGSmfRegFailedTrap.....	135
ruckusSCGHipFailoverTrap.....	135
ruckusSCGConfUpdFailedTrap.....	136
ruckusSCGConfRcvFailedTrap.....	136
ruckusSCGLostCnxnToDbladeTrap.....	137
ruckusSCGGsnRestartedTrap.....	137
ruckusSCGGsnNotReachableTrap.....	138
ruckusSCGGsnNotResolvedTrap.....	138
ruckusSCGUnknownUETrap.....	139
ruckusSCGAuthSvrNotReachableTrap.....	139
ruckusSCGAccSvrNotReachableTrap.....	140
ruckusSCGUnknownRealmTrap.....	140
ruckusSCGAuthFailedNonPermanentIDTrap.....	141
ruckusSCGCnxnToCgfFailedTrap.....	141
ruckusSCGCdrTransferFailedTrap.....	142
ruckusSCGCdrGenerateFailedTrap.....	142
ruckusSCGDestNotRecheableTrap.....	143
ruckusSCGAppServerDownTrap.....	143
ruckusSCGAppServerInactiveTrap.....	144
ruckusSCGAssocCantStartTrap.....	145
ruckusSCGAssocDownTrap.....	145
ruckusSCGOutboundRoutingFailedTrap.....	146
ruckusSCGDidAllocationFailureTrap.....	146
ruckusSCGPdnGwUnresolvedTrap.....	147
ruckusSCGPdnGwVersionUnsupportedTrap.....	147
ruckusSCGPdnGwAssociationDownTrap.....	148
ruckusSCGCreateSessionResponseFailedTrap.....	148
ruckusSCGDecodeFailedTrap.....	149
ruckusSCGModifyBearerResponseFailedTrap.....	149
ruckusSCGDeleteSessionResponseFailedTrap.....	150
ruckusSCGDeleteBearerRequestFailedTrap.....	150
ruckusSCGUpdateBearerRequestFailedTrap.....	151
ruckusSCGCgfServerNotConfiguredTrap.....	151
ruckusSCGTtgSessionCriticalThresholdTrap.....	152
ruckusSCGTtgSessionLicenseInsufficientTrap.....	152
ruckusSCGAPAcctMsgMandatoryPrmMissingTrap.....	153
ruckusSCGAPAcctUnknownRealmTrap.....	153
ruckusSCGAPAcctMsgDecodeFailedTrap.....	154
ruckusSCGAPAcctRespWhileInvalidConfigTrap.....	154
ruckusSCGAPAcctMsgDropNoAcctStartMsgTrap.....	155
ruckusSCGUnauthorizedCoaDmMessageDroppedTrap.....	156
ruckusSCGConnectedToDbladeTrap.....	156
ruckusSCGDestAvailableTrap.....	157
ruckusSCGAppServerActiveTrap.....	157
ruckusSCGAssocUpTrap.....	157
ruckusSCGSessUpdatedAtDbladeTrap.....	158
ruckusSCGSessUpdateErrAtDbladeTrap.....	159

ruckusSCGSessDeletedAtDbladeTrap.....	159
ruckusSCGSessDeleteErrAtDbladeTrap.....	160
ruckusSCGLicenseSyncSuccessTrap.....	160
ruckusSCGLicenseSyncFailedTrap.....	160
ruckusSCGLicenseImportSuccessTrap.....	161
ruckusSCGLicenseImportFailedTrap.....	161
ruckusSCGSyslogServerReachableTrap.....	162
ruckusSCGSyslogServerUnreachableTrap.....	162
ruckusSCGSyslogServerSwitchedTrap.....	162
ruckusSCGAPRadiusServerReachableTrap.....	163
ruckusSCGAPRadiusServerUnreachableTrap.....	163
ruckusSCGAPLDAPServerReachableTrap.....	164
ruckusSCGAPLDAPServerUnreachableTrap.....	165
ruckusSCGAPADServerReachableTrap.....	166
ruckusSCGAPADServerUnreachableTrap.....	166
ruckusSCGAPUsbSoftwarePackageDownloadedTrap.....	167
ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap.....	168
ruckusSCGEspAuthServerReachableTrap.....	169
ruckusSCGEspAuthServerUnreachableTrap.....	169
ruckusSCGEspAuthServerResolvableTrap.....	170
ruckusSCGEspAuthServerUnResolvableTrap.....	171
ruckusSCGEspDNATServerReachableTrap.....	171
ruckusSCGEspDNATServerUnreachableTrap.....	172
ruckusSCGEspDNATServerResolvableTrap.....	173
ruckusSCGEspDNATServerUnresolvableTrap.....	173
ruckusRateLimitTORSurpassedTrap.....	174
ruckusSCGIPSecTunnelAssociatedTrap.....	175
ruckusSCGIPSecTunnelDisassociatedTrap.....	175
ruckusSCGIPSecTunnelAssociateFailedTrap.....	176
ruckusSCGPmipProcessInitTrap.....	177
ruckusSCGPmipUnavailableTrap.....	177
ruckusSCGPmipUnallocatedMemoryTrap.....	178
ruckusSCGPmipUpdateCgfFailedTrap.....	178
ruckusSCGPmipLMAIcmpUnreachableTrap.....	178
ruckusSCGPmipLMAFailOverTrap.....	179
ruckusSCGPmipBindingFailureTrap.....	179
ruckusSCGPmiplostCnxnToDHCPTrap.....	180
ruckusSCGPmipLMAIcmpReachableTrap.....	180
ruckusSCGPmipBindingSuccessTrap.....	181
ruckusSCGPmipConnectedToDHCPTrap.....	181
ruckusSCGPmipProcessStoppedTrap.....	182
Ruckus Event Object.....	182
ruckusSCGEventDescription.....	185
ruckusSCGClusterName.....	185
ruckusSCGEventCode.....	185
ruckusSCGProcessName.....	185
ruckusSCGEventCtrlIP	185
ruckusSCGEventSeverity	186
ruckusSCGEventType	186
ruckusSCGEventNodeMgmtIp	186

ruckusSCGEventNodeName	186
ruckusSCGCPUPerc.....	186
ruckusSCGMemoryPerc.....	187
ruckusSCGDiskPerc.....	187
ruckusSCGEventMacAddr.....	187
ruckusSCGEventFirmwareVersion.....	187
ruckusSCGEventUpgradedFirmwareVersion.....	187
ruckusSCGEventAPMacAddr.....	188
ruckusSCGEventReason.....	188
ruckusSCGEventAPName.....	188
ruckusSCGEventAPIP.....	188
ruckusSCGEventAPLocation.....	188
ruckusSCGEventAPGPSCoordinates.....	189
ruckusSCGEventAPDescription.....	189
ruckusSCGEventZoneName.....	189
ruckusSCGAPModel.....	189
ruckusSCGConfigAPModel.....	189
ruckusSCGAPConfigID.....	190
ruckusSCGEventTargetZoneName.....	190
ruckusSCGEventAPIPv6.....	190
ruckusSCGLBSURL.....	190
ruckusSCGLBSPort.....	190
ruckusSCGEventSSID.....	191
ruckusSCGEventRogueMac.....	191
ruckusPrimaryGRE.....	191
ruckusSecondaryGRE.....	191
ruckusSoftGREGatewayList.....	191
ruckusSCGSoftGREGWAddress.....	192
ruckusSCGEventClientMacAddr.....	192
ruckusSCGDPPKey.....	192
ruckusSCGDPCConfigID.....	192
ruckusSCGDPIP.....	192
ruckusSCGDPPacketPoolID.....	193
ruckusSCGNetworkPortID.....	193
ruckusSCGNetworkInterface.....	193
ruckusSCGSwitchStatus.....	193
ruckusSCGTemperatureStatus.....	193
ruckusSCGProcessorId.....	194
ruckusSCGFanId.....	194
ruckusSCGFanStatus.....	194
ruckusSCGPsId.....	194
ruckusSCGPsStatus.....	194
ruckusSCGDrvId.....	195
ruckusSCGDrvStatus.....	195
ruckusSCGLicenseType.....	195
ruckusSCGLicenseUsagePerc.....	195
ruckusSCGLicenseServerName.....	195
ruckusSCGIPSecGWAddress.....	196
ruckusSCGSyslogServerAddress.....	196
ruckusSCGSrcSyslogServerAddress.....	196

ruckusSCGDestSyslogServerAddress.....	196
ruckusSCGFtpIp.....	196
ruckusSCGFtpPort.....	197
ruckusSCGSrcProcess.....	197
ruckusSCGGsnIp.....	197
ruckusSCGtpclp.....	197
ruckusSCGApn.....	197
ruckusSCGUEImsi.....	198
ruckusSCGUEMsisdn.....	198
ruckusSCGAuthSrvIp.....	198
ruckusSCGRadProxyIp.....	198
ruckusSCGAccSrvIp.....	198
ruckusSCGRealm.....	199
ruckusSCGgfSrvIp.....	199
ruckusSCGRadSrvIp.....	199
ruckusSCGciIp.....	199
ruckusSCGPointCode.....	199
ruckusSCGCongLevel.....	200
ruckusSCGSSN.....	200
ruckusSCGRoutingContext.....	200
ruckusSCGSrcIP.....	200
ruckusSCGSrcPort.....	200
ruckusSCGDestIP.....	201
ruckusSCGDestPort.....	201
ruckusSCGOperation.....	201
ruckusSCGHlrInstance.....	201
ruckusSCGUserName.....	201
ruckusSCGPgwIp.....	202
ruckusSCGFileName.....	202
ruckusSCGLDAPsrvIp.....	202
ruckusSCGADSrvIp.....	202
ruckusSCGSoftwareName.....	202
ruckusSCGDomainName.....	203
ruckusSCGDNATIp.....	203
ruckusSCGLMAIp.....	203
Ruckus System MIB.....	205
Introduction.....	205
ruckusSystemStatsNumAP.....	205
ruckusSystemStatsNumSta.....	205
ruckusSystemStatsWLANTotalRxPkts.....	205
ruckusSystemStatsWLANTotalRxBytes.....	206
ruckusSystemStatsWLANTotalRxMulticast.....	206
ruckusSystemStatsWLANTotalTxPkts.....	206
ruckusSystemStatsWLANTotalTxBytes.....	206
ruckusSystemStatsWLANTotalTxMulticast.....	206
ruckusSystemStatsWLANTotalTxFail.....	207
ruckusSystemStatsWLANTotalTxRetry.....	207
ruckusSystemStatsSerialNumber.....	207
Ruckus System Command (SysCommands).....	207
ruckusCTRLSysCmdReboot.....	207

Ruckus Controller System Node Table.....	208
ruckusCtrlSystemNodeEntry.....	208
ruckusCtrlSystemNodeName.....	208
ruckusCtrlSystemNodeMgmtIp.....	208
ruckusCtrlSystemNodeMgmtIpv6.....	209
ruckusCtrlSystemNodeMgmtMac.....	209
ruckusCtrlSystemNodeModel.....	209
ruckusCtrlSystemNodeVersion.....	209
ruckusCtrlSystemNodeSerialNumber.....	209
ruckusCtrlSystemNodeUptime.....	210
ruckusCtrlSystemNodeNumApLicense.....	210
ruckusCtrlSystemNodeNumApConnected.....	210
ruckusCtrlSystemNodeStatus.....	210
ruckusCtrlSystemClusterStatus.....	210
ruckusCtrlSystemNodeClusterHASState.....	211
ruckusCtrlSystemNodeClusterHARoles.....	211
Ruckus Controller Domain Table.....	211
RuckusCtrlDomainEntry.....	211
ruckusCtrlDomainId.....	211
ruckusCtrlDomainName.....	212
ruckusCtrlDomainNumSubdomains.....	212
ruckusCtrlDomainParentDomainId.....	212
ruckusCtrlDomainNumZones.....	212
ruckusCtrlDomainNumApConnected.....	212
ruckusCtrlDomainNumApDisconnected.....	213
Ruckus Controller Zone Table.....	213
RuckusCtrlZoneEntry.....	213
ruckusCtrlZoneDomainId.....	213
ruckusCtrlZoneId.....	213
ruckusCtrlZoneName.....	214
ruckusCtrlZoneCountryCode.....	214
ruckusCtrlZoneNumApConnected.....	214
ruckusCtrlZoneNumApDisconnected.....	214
Ruckus WLAN MIB.....	215
Ruckus SCG WLAN Statistics.....	215
Ruckus WLAN.....	215
Ruckus WLAN AP.....	216
Ruckus SCG WLAN.....	217
Ruckus SCG AP Statistics.....	219
Ruckus SCG WLAN SoftGRE Statistics.....	226
Ruckus SCG Configuration WLAN Statistics.....	230
ruckusSCGConfigWLANID.....	231
ruckusSCGConfigWLANSSID.....	231
ruckusSCGConfigWLANDescription.....	231
ruckusSCGConfigWLANName.....	231
ruckusSCGZoneName.....	231
ruckusSCGConfigWLANWLANServiceType.....	232
ruckusSCGConfigWLANAuthentication.....	232
ruckusSCGConfigWLANEncryption.....	232
ruckusSCGConfigWLANWEPKeyIndex.....	232

ruckusSCGConfigWLANWEPKey.....	232
ruckusSCGConfigWLANWPAciperType.....	233
ruckusSCGConfigWLANWPAKey.....	233
ruckusSCGConfigWLANWirelessClientIsolation.....	233
ruckusSCGConfigWLANZeroTActivation.....	233
ruckusSCGConfigWLANServicePriority.....	233
ruckusSCGConfigWLANAccountingUpdateInterval.....	234
ruckusSCGConfigWLANVlanID.....	234
ruckusSCGConfigWLANHideSSID.....	234
ruckusSCGConfigWLANMaxClientsPerAP.....	234
ruckusSCGConfigWLANSAEPassphrase.....	234
Ruckus SCG Client Information.....	235
ruckusCtrlClientMac.....	235
ruckusCtrlClientStatus.....	235
Ruckus TTG MIB.....	237
Introduction.....	237
Ruckus AAA.....	237
ruckusAAAAaalp.....	237
ruckusAAANumSuccAuthPerm.....	238
ruckusAAANumFailAuthPerm.....	238
ruckusAAANumSuccAuthPsd.....	238
ruckusAAANumFailAuthPsd.....	238
ruckusAAANumSuccFastAuth.....	238
ruckusAAANumFailFastAuth.....	239
ruckusAAANumAuthUnknPsd.....	239
ruckusAAANumAuthUnknFR.....	239
ruckusAAANumIncompleteAuth.....	239
ruckusAAANumSuccAcc.....	239
ruckusAAANumFailAcc.....	240
ruckusAAANumRadAcsRq.....	240
ruckusAAANumRadAcsAcpt.....	240
ruckusAAANumRadAcsChlg.....	240
ruckusAAANumRadAcsRej.....	240
ruckusAAANumRadAccRq.....	241
ruckusAAANumRadAccAcpt.....	241
ruckusAAANumRadCoaRq.....	241
ruckusAAANumSuccCoaAcpt.....	241
ruckusAAANumFailCoaAcpt.....	241
ruckusAAANumRadDmRq.....	242
ruckusAAANumSuccDmAcpt.....	242
ruckusAAANumFailDmAcpt.....	242
ruckusAAAIndex.....	242
Ruckus AAA Proxy.....	242
ruckusAAAProxyAaalp.....	243
ruckusAAAProxyNumSuccAuth.....	243
ruckusAAAProxyNumFailAuth.....	243
ruckusAAAProxyNumIncmpltAuth.....	243
ruckusAAAProxyNumSuccAcc.....	244
ruckusAAAProxyNumFailAcc.....	244
ruckusAAAProxyNumAcsRqRcvdNas.....	244

ruckusAAAProxyNumAcsRqSntAaa.....	244
ruckusAAAProxyNumAcsChRcvdAaa.....	244
ruckusAAAProxyNumAcsChSntNas.....	245
ruckusAAAProxyNumAcsAcpRcvdAaa.....	245
ruckusAAAProxyNumAcsAcpSntNas.....	245
ruckusAAAProxyNumAcsRejRcvdAaa.....	245
ruckusAAAProxyNumAcsRejSntNas.....	245
ruckusAAAProxyNumAccRqRcvdNas.....	246
ruckusAAAProxyNumAccRqSntAaa.....	246
ruckusAAAProxyNumAccRspRcdAaa.....	246
ruckusAAAProxyNumAccRspSntNas.....	246
ruckusAAAProxyNumCoaRcvdAaa.....	246
ruckusAAAProxyNumCoaSucSntAaa.....	247
ruckusAAAProxyNumCoaFailSntAaa.....	247
ruckusAAAProxyNumDmRcvdAaa.....	247
ruckusAAAProxyNumDmSntNas.....	247
ruckusAAAProxyNumDmSucRcdNas.....	247
ruckusAAAProxyNumDmSucSntAaa.....	248
ruckusAAAProxyNumDmFailRcdNas.....	248
ruckusAAAProxyNumDmFailSntAaa.....	248
ruckusAAAProxyIndex.....	248
Ruckus CGF.....	248
ruckusCGFCgfSvcName.....	249
ruckusCGFCgfIp.....	249
ruckusCGFNumSuccCdrTxfd.....	249
ruckusCGFNumCdrTxfrFail.....	249
ruckusCGFNumCdrPossDup.....	250
ruckusCGFNumCdrRlsReq.....	250
ruckusCGFNumCdrCnclReq.....	250
ruckusCGFNumDrtrReqSnt.....	250
ruckusCGFNumDrtrSucRspRcvd.....	250
ruckusCGFNumDrtrFailRspRcvd.....	251
ruckusCGFIndex.....	251
Ruckus GTPU.....	251
ruckusGTPUGgsnIPAddr.....	251
ruckusGTPUTxPkts.....	252
ruckusGTPUTxBytes.....	252
ruckusGTPURxPkts.....	252
ruckusGTPURxBytes.....	252
ruckusGTPUTxDrops.....	252
ruckusGTPURxDrops.....	253
ruckusGTPUNumBadGTPU.....	253
ruckusGTPUNumRXTeidInvalid.....	253
ruckusGTPUNumTXTeidInvalid.....	253
ruckusGTPUNumOfEchoRX.....	253
ruckusGTPUIndex.....	254
Ruckus GGSN GTPC.....	254
ruckusGGSNGTPCGgsnIp.....	254
ruckusGGSNGTPCNumActPdp.....	254
ruckusGGSNGTPCSuccPdpCrt.....	255

ruckusGGSNGTPCFailPdpCrt.....	255
ruckusGGSNGTPCSuccPdpUpdRcvd.....	255
ruckusGGSNGTPCFailPdpUpdRcvd.....	255
ruckusGGSNGTPCSuccPdpUpdInitRM.....	255
ruckusGGSNGTPCFailPdpUpdInitRM.....	256
ruckusGGSNGTPCSuccPdpUpdInitAAA.....	256
ruckusGGSNGTPCFailPdpUpdInitAAA.....	256
ruckusGGSNGTPCSuccPdpUpdInitHLR.....	256
ruckusGGSNGTPCFailPdpUpdInitHLR.....	256
ruckusGGSNGTPCSuccDelPdpRcvd.....	257
ruckusGGSNGTPCFailDelPdpRcvd.....	257
ruckusGGSNGTPCSuccDelPdpInitErr.....	257
ruckusGGSNGTPCFailDelPdpInitErr.....	257
ruckusGGSNGTPCSuccDelPdpInitDM.....	257
ruckusGGSNGTPCFailDelPdpInitDM.....	258
ruckusGGSNGTPCSuccDelPdpInitHLR.....	258
ruckusGGSNGTPCFailDelPdpInitHLR.....	258
ruckusGGSNGTPCSuccDelPdpInitSCG.....	258
ruckusGGSNGTPCFailDelPdpInitSCG.....	258
ruckusGGSNGTPCSuccDelPdpInitAP.....	259
ruckusGGSNGTPCFailDelPdpInitAP.....	259
ruckusGGSNGTPCSuccDelPdpInitD.....	259
ruckusGGSNGTPCFailDelPdpInitD.....	259
ruckusGGSNGTPCSuccDelPdpInitClnt.....	259
ruckusGGSNGTPCFailDelPdpInitClnt.....	260
ruckusGGSNGTPCIndex.....	260
Ruckus HLR.....	260
ruckusHLRHlrSrvcName.....	260
ruckusHLRNumSucAuthInfoReqSim.....	261
ruckusHLRNumAuthInfoRqErrHlrSim.....	261
ruckusHLRNumAuthInfoRqTmotSim.....	261
ruckusHLRNumSucAuthInfoReqAka.....	261
ruckusHLRNumAuthInfoRqErrHlrAka.....	261
ruckusHLRNumAuthInfoRqTmotAka.....	262
ruckusHLRNumUpdGprsSuccSim.....	262
ruckusHLRNumUpdGprsFailErrSim.....	262
ruckusHLRNumUpdGprsFailTmoSim.....	262
ruckusHLRNumUpdGprsSuccAka.....	262
ruckusHLRNumUpdGprsFailErrAka.....	263
ruckusHLRNumUpdGprsFailTmoAka.....	263
ruckusHLRNumRstDtaSuccSim.....	263
ruckusHLRNumRstDtaFailErrHlrSim.....	263
ruckusHLRNumRstDtaFailTmoSim.....	263
ruckusHLRNumRstDtaSuccAka.....	264
ruckusHLRNumRstDtaFailErrHlrAka.....	264
ruckusHLRNumRstDtaFailTmoAka.....	264
ruckusHLRNumInsrtDtaSuccSim.....	264
ruckusHLRNumInsrtDtaFailSim.....	264
ruckusHLRNumInsrtDtaSuccAka.....	265
ruckusHLRNumInsrtDtaFailAka.....	265

ruckusHLRNumSalsrtDtaSucc.....	265
ruckusHLRNumSalsrtDtaFailUnkS.....	265
ruckusHLRNumSalsrtDtaFailErr.....	265
ruckusHLRNumCfgAssoc.....	266
ruckusHLRNumActAssoc.....	266
ruckusHLRNumRtgFail.....	266
ruckusHLRIndex.....	266
Ruckus AP MIB.....	267
Ruckus Controller AP Group Table.....	267
ruckusCtrlApGroupEntry.....	268
ruckusCtrlApGroupZoneld.....	268
ruckusCtrlApGroupId.....	268
ruckusCtrlApGroupName.....	268
ruckusCtrlApGroupNumApConnected.....	268
ruckusCtrlApGroupNumApDisconnected.....	269
Ruckus Controller Summary AP Table.....	269
ruckusCtrlSummaryApEntry.....	271
ruckusCtrlSummaryApIndexType.....	271
ruckusCtrlSummaryApIndexUUID.....	271
ruckusCtrlSummaryApDomainId.....	271
ruckusCtrlSummaryApZoneld.....	271
ruckusCtrlSummaryApApGroupId.....	272
ruckusCtrlSummaryApMac.....	272
ruckusCtrlSummaryApDomainName.....	272
ruckusCtrlSummaryApZoneName.....	272
ruckusCtrlSummaryApName.....	273
ruckusCtrlSummaryApLocation.....	273
Ruckus Controller AP Client Table.....	273
ruckusCtrlApClientEntry.....	274
ruckusCtrlApClientApMac.....	274
ruckusCtrlApClientMac.....	274
Ruckus Controller AP Table.....	274
ruckusCtrlApEntry.....	277
ruckusCtrlApMac.....	277
ruckusCtrlApDomainId.....	277
ruckusCtrlApDomainName.....	277
ruckusCtrlApZoneld.....	277
ruckusCtrlApZoneName.....	278
ruckusCtrlApApGroupId.....	278
ruckusCtrlApApGroupName.....	278
ruckusCtrlApIp.....	278
ruckusCtrlApIpv6.....	278
ruckusCtrlApNetmask.....	279
ruckusCtrlApGateway.....	279
ruckusCtrlApIpDnsSvr1.....	279
ruckusCtrlApIpDnsSvr2.....	279
ruckusCtrlApIpv6DnsSvr1.....	279
ruckusCtrlApIpv6DnsSvr2.....	280
ruckusCtrlApName.....	280
ruckusCtrlApDescription.....	280

ruckusCtrlApStatus.....	280
ruckusCtrlApModel.....	280
ruckusCtrlApSerialNumber.....	281
ruckusCtrlApSwVersion.....	281
ruckusCtrlApLocation.....	281
ruckusCtrlApGpsInfo.....	281
ruckusCtrlApTemperature.....	281
ruckusCtrlApUptime.....	282
ruckusCtrlApLastConfSyncTime.....	282
ruckusCtrlApCpuUtilization.....	282
ruckusCtrlApTotalMemory.....	282
ruckusCtrlApFreeMemory.....	282
ruckusCtrlApFreeStorage.....	283
ruckusCtrlApEtherPortStatus.....	283
ruckusCtrlApCableModemMac.....	283
ruckusCtrlApCableModemSerialNumber.....	283
ruckusCtrlApNumRadios.....	284
ruckusCtrlApNumWlans.....	284
ruckusCtrlApNumAssocClients.....	284
ruckusCtrlApStatsRxBytes.....	284
ruckusCtrlApStatsTxBytes.....	284
ruckusCtrlApStatsRxDataBytes.....	285
ruckusCtrlApStatsTxDataBytes.....	285
ruckusCtrlApStatsRxPkts.....	285
ruckusCtrlApStatsTxPkts.....	285
ruckusCtrlApStatsRxDataPkts.....	285
ruckusCtrlApStatsTxDataPkts.....	286
ruckusCtrlApStatsRxErrorPkts.....	286
ruckusCtrlApStatsTxErrorPkts.....	286
ruckusCtrlApStatsRxDropPkts.....	286
ruckusCtrlApStatsTxDropPkts.....	286
ruckusCtrlApMeshRole.....	287
ruckusCtrlApNumMeshHops.....	287
ruckusCtrlApConnectScgCplp.....	287
ruckusCtrlApConnectScgCplpv6.....	287
ruckusCtrlApConnectScgDplp.....	287
ruckusCtrlApConnectScgDplpv6.....	288
ruckusCtrlApLanStatsRxBytes.....	288
ruckusCtrlApLanStatsTxBytes.....	288
ruckusCtrlApLanStatsRxPkts.....	288
ruckusCtrlApLanStatsTxPkts.....	288
ruckusCtrlApLanStatsRxErrorPkts.....	289
ruckusCtrlApLanStatsTxErrorPkts.....	289
ruckusCtrlApLanStatsRxDroppedPkts.....	289
ruckusCtrlApLanStatsTxDroppedPkts.....	289
ruckusCtrlApIpssecRxBytes.....	289
ruckusCtrlApIpssecTxBytes.....	290
ruckusCtrlApIpssecRxPkts.....	290
ruckusCtrlApIpssecTxPkts.....	290
ruckusCtrlApIpssecRxDropPkts.....	290

ruckusCtrlAPIpsecTxDropPkts.....	290
ruckusCtrlAPIpsecSessionTime.....	291
ruckusCtrlAPIpsecRxIdleTime.....	291
ruckusCtrlAPIpsecTxIdleTime.....	291
Ruckus Controller Radio Table.....	291
ruckusCtrlApRadioEntry.....	293
ruckusCtrlApRadioApMac.....	294
ruckusCtrlApRadioIndex.....	294
ruckusCtrlApRadioNumWlans.....	294
ruckusCtrlApRadioType.....	294
ruckusCtrlApRadioChannelWidth.....	295
ruckusCtrlApRadioChannel.....	295
ruckusCtrlApRadioTxPower.....	295
ruckusCtrlApRadioBeaconPeriod.....	295
ruckusCtrlApRadioPowerMgmtEnable.....	295
ruckusCtrlApRadioMeshEnable.....	296
ruckusCtrlApRadioStatsRxAirtime.....	296
ruckusCtrlApRadioStatsTxAirtime.....	296
ruckusCtrlApRadioStatsBusyAirtime.....	296
ruckusCtrlApRadioStatsTotalAirtime.....	297
ruckusCtrlApRadioAntennaGain.....	297
ruckusCtrlApRadioStatsSnr.....	297
ruckusCtrlApRadioStatsNoiseFloor.....	297
ruckusCtrlApRadioStatsNumAssocClients.....	297
ruckusCtrlApRadioStatsNumAuthClients.....	298
ruckusCtrlApRadioStatsNumMaxClients.....	298
ruckusCtrlApRadioStatsPhyError.....	298
ruckusCtrlApRadioStatsRxWepFail.....	298
ruckusCtrlApRadioStatsRxDecryptCrcError.....	298
ruckusCtrlApRadioStatsRxMicError.....	299
ruckusCtrlApRadioStatsRxBytes.....	299
ruckusCtrlApRadioStatsTxBytes.....	299
ruckusCtrlApRadioStatsRxPkts.....	299
ruckusCtrlApRadioStatsTxPkts.....	299
ruckusCtrlApRadioStatsRxMcastPkts.....	300
ruckusCtrlApRadioStatsTxMcastPkts.....	300
ruckusCtrlApRadioStatsRxErrorPkts.....	300
ruckusCtrlApRadioStatsTxErrorPkts.....	300
ruckusCtrlApRadioStatsRxPktErrorRate.....	300
ruckusCtrlApRadioStatsTxPktErrorRate.....	301
ruckusCtrlApRadioStatsTxPktRetryRate.....	301
ruckusCtrlApRadioStatsTxRetryPkts.....	301
ruckusCtrlApRadioStatsRxDropPkts.....	301
ruckusCtrlApRadioStatsTxDropPkts.....	301
ruckusCtrlApRadioStatsNumAuthReqs.....	302
ruckusCtrlApRadioStatsNumAuthResps.....	302
ruckusCtrlApRadioStatsNumAuthSuccess.....	302
ruckusCtrlApRadioStatsNumAuthFail.....	302
ruckusCtrlApRadioStatsAuthFailRate.....	302
ruckusCtrlApRadioStatsNumAssocReq.....	303

ruckusCtrlApRadioStatsNumAssocResp.....	303
ruckusCtrlApRadioStatsNumReassocReq.....	303
ruckusCtrlApRadioStatsNumReassocResp.....	303
ruckusCtrlApRadioStatsNumAssocSuccess.....	303
ruckusCtrlApRadioStatsNumAssocFail.....	304
ruckusCtrlApRadioStatsAssocSuccessRate.....	304
ruckusCtrlApRadioStatsAssocFailRate.....	304
Ruckus Controller AP WLAN Table.....	304
ruckusCtrlApWlanEntry.....	305
ruckusCtrlApWlanApMac.....	306
ruckusCtrlApWlanRadioIndex.....	306
ruckusCtrlApWlanBssid.....	306
ruckusCtrlApWlanAuthMethod.....	306
ruckusCtrlApWlanEncryptMethod.....	307
ruckusCtrlApWlanId.....	307
ruckusCtrlApWlanName.....	307
ruckusCtrlApWlanRadioChannel.....	307
ruckusCtrlApWlanSsid.....	307
ruckusCtrlApWlanVlanId.....	308
ruckusCtrlApWlanRtsThreshold.....	308
ruckusCtrlApWlanDownRateLimit.....	308
ruckusCtrlApWlanUpRateLimit.....	308
ruckusCtrlApWlanIsBcastDisable.....	308
ruckusCtrlApWlanIsGuest.....	309
ruckusCtrlApWlanIsTunnel.....	309
ruckusCtrlApWlanStatsNumAssocClients.....	309
ruckusCtrlApWlanStatsRxPkts.....	309
ruckusCtrlApWlanStatsTxPkts.....	309
ruckusCtrlApWlanStatsRxBytes.....	310
ruckusCtrlApWlanStatsTxBytes.....	310
ruckusCtrlApWlanStatsRxDataBytes.....	310
ruckusCtrlApWlanStatsTxDataBytes.....	310
ruckusCtrlApWlanStatsRxDataPkts.....	310
ruckusCtrlApWlanStatsTxDataPkts.....	311
ruckusCtrlApWlanStatsRxBcastDataPkts.....	311
ruckusCtrlApWlanStatsTxBcastDataPkts.....	311
ruckusCtrlApWlanStatsRxMcastDataPkts.....	311
ruckusCtrlApWlanStatsTxMcastDataPkts.....	311
ruckusCtrlApWlanStatsNumAssocReq.....	312
ruckusCtrlApWlanStatsNumAssocResp.....	312
ruckusCtrlApWlanStatsNumReassocReq.....	312
ruckusCtrlApWlanStatsNumReassocResp.....	312
ruckusCtrlApWlanStatsNumAuthReq.....	312
ruckusCtrlApWlanStatsNumAuthResp.....	313
ruckusCtrlApWlanStatsNumAuthSuccess.....	313
ruckusCtrlApWlanStatsNumAuthFail.....	313
ruckusCtrlApWlanStatsAuthFailRate.....	313
ruckusCtrlApWlanStatsNumAssocFail.....	313
Ruckus Controller Client Table.....	314
ruckusCtrlClientEntry.....	315

ruckusCtrlClientMac.....	315
ruckusCtrlClientIpp.....	315
ruckusCtrlClientIppv6.....	315
ruckusCtrlClientApMac.....	316
ruckusCtrlClientWlanBssid.....	316
ruckusCtrlClientSsid.....	316
ruckusCtrlClientRadioIndex.....	316
ruckusCtrlClientRadioType.....	316
ruckusCtrlClientRadioChannel.....	317
ruckusCtrlClientUsername.....	317
ruckusCtrlClientVlanId.....	317
ruckusCtrlClientOsType.....	317
ruckusCtrlClientStatus.....	318
ruckusCtrlClientAuthMode.....	318
ruckusCtrlClientStatsRssi.....	318
ruckusCtrlClientStatsSnr.....	318
ruckusCtrlClientStatsNoiseFloor.....	318
ruckusCtrlClientStatsThroughput.....	319
ruckusCtrlClientStatsRxDataBytes.....	319
ruckusCtrlClientStatsTxDataBytes.....	319
ruckusCtrlClientStatsRxDataPkts.....	319
ruckusCtrlClientStatsTxDataPkts.....	319
ruckusCtrlClientStatsTxAvgByteRate.....	320
ruckusCtrlClientStatsTxRetry.....	320
ruckusCtrlClientStatsRxError.....	320
ruckusCtrlClientStatsTxError.....	320
ruckusCtrlClientStatsTxRetryBytes.....	320
ruckusCtrlClientStatsTxDropPkts.....	321
AP Wired Client Table.....	321
ruckusCTRLApWiredClientEntry.....	321
ruckusCtrlApWiredClientApMac.....	322
ruckusCtrlApWiredClientMac.....	322
Ruckus Wired Client Table.....	322
ruckusCTRLWiredClientEntry.....	323
ruckusCtrlWiredClientMac.....	323
ruckusCtrlWiredClientUserName.....	323
ruckusCtrlWiredClientLanPort.....	324
ruckusCtrlWiredClientVlanId.....	324
ruckusCtrlWiredClientIpp.....	324
ruckusCtrlWiredClientIppv6.....	324
ruckusCtrlWiredClientApMac.....	324
ruckusCtrlWiredClientAuthStatus.....	325
ruckusCtrlWiredClientRxFrames.....	325
ruckusCtrlWiredClientTxFrames.....	325
ruckusCtrlWiredClientRxBytes.....	325
ruckusCtrlWiredClientTxBytes.....	325
ruckusCtrlWiredClientRxUcastPkts.....	326
ruckusCtrlWiredClientTxUcastPkts.....	326
ruckusCtrlWiredClientRxMcastPkts.....	326
ruckusCtrlWiredClientTxMcastPkts.....	326

ruckusCtrlWiredClientRxMcastLegacyPkts.....	326
ruckusCtrlWiredClientRxBcastPkts.....	327
ruckusCtrlWiredClientTxBcastPkts.....	327
ruckusCtrlWiredClientRxDroppedPkts.....	327
ruckusCtrlWiredClientTxDroppedPkts.....	327
ruckusCtrlWiredClientRxEapolPkts.....	327
ruckusCtrlWiredClientTxEapolPkts.....	328
Ruckus IPv6 MIB.....	329
IP-FORWARD-MIB.....	329
inetCidrRouteTable.....	329
IP-MIB.....	331
ipv6IpForwarding.....	331
ipv6IpDefaultHopLimit.....	331
ipv6InterfaceTableLastChange.....	332
ipv6InterfaceTable.....	332
ipSystemStatsTable.....	333
iplfStatsTable.....	340
ipAddressPrefixTable.....	347
ipAddressTable.....	348
ipNetToPhysicalTable.....	350
ipv6ScopeZoneIndexTable.....	351
icmpStatsTable.....	354
icmpMsgStatsTable.....	354
TCP-MIB.....	355
tcpListenerTable.....	355
tcpConnectionTable.....	355
UDP-MIB.....	356
udpEndpointTable.....	356
IPV6-MIB.....	356
ipv6Forwarding.....	356
ipv6DefaultHopLimit.....	356
ipv6Interfaces.....	357
ipv6IfTable.....	357
SmartZone Event Traps.....	359
ruckusSCGSystemMiscEventTrap.....	359
ruckusSCGAPMiscEventTrap.....	362
ruckusSCGClientMiscEventTrap.....	363
Frequently Asked Questions.....	365
Timeout	365
SNMP Reports	366
Difference in SNMP Data.....	366
Modifying SNMP HostName.....	367
Determining the Timeout Value	367
Determining the Query Interval.....	367
Determining the Query Interval for AP Related Tables.....	367

Preface

- Document Conventions..... 21
- Command Syntax Conventions..... 21
- Document Feedback..... 22
- RUCKUS Product Documentation Resources..... 22
- Online Training Resources..... 22
- Contacting RUCKUS Customer Services and Support..... 23

Document Conventions

The following table lists the text conventions that are used throughout this guide.

TABLE 1 Text Conventions

Convention	Description	Example
monospace	Identifies command syntax examples	<code>device(config)# interface ethernet 1/1/6</code>
bold	User interface (UI) components such as screen or page names, keyboard keys, software buttons, and field names	On the Start menu, click All Programs .
<i>italics</i>	Publication titles	Refer to the <i>RUCKUS Small Cell Release Notes</i> for more information.

Notes, Cautions, and Safety Warnings

Notes, cautions, and warning statements may be used in this document. They are listed in the order of increasing severity of potential hazards.

NOTE

A NOTE provides a tip, guidance, or advice, emphasizes important information, or provides a reference to related information.

ATTENTION

An ATTENTION statement indicates some information that you must read before continuing with the current action or task.



CAUTION

A CAUTION statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A DANGER statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Command Syntax Conventions

Bold and italic text identify command syntax components. Delimiters and operators define groupings of parameters and their logical relationships.

Convention	Description
bold text	Identifies command names, keywords, and command options.

Preface

Document Feedback

Convention	Description
<i>italic text</i>	Identifies a variable.
[]	Syntax components displayed within square brackets are optional. Default responses to system prompts are enclosed in square brackets.
{x y z}	A choice of required parameters is enclosed in curly brackets separated by vertical bars. You must select one of the options.
x y	A vertical bar separates mutually exclusive elements.
< >	Nonprinting characters, for example, passwords, are enclosed in angle brackets.
...	Repeat the previous element, for example, <i>member</i> [<i>member</i> ...].
\	Indicates a "soft" line break in command examples. If a backslash separates two lines of a command input, enter the entire command at the prompt without the backslash.

Document Feedback

RUCKUS is interested in improving its documentation and welcomes your comments and suggestions.

You can email your comments to RUCKUS at #Ruckus-Docs@commscope.com.

When contacting us, include the following information:

- Document title and release number
- Document part number (on the cover page)
- Page number (if appropriate)

For example:

- RUCKUS SmartZone Upgrade Guide, Release 5.0
- Part number: 800-71850-001 Rev A
- Page 7

RUCKUS Product Documentation Resources

Visit the RUCKUS website to locate related documentation for your product and additional RUCKUS resources.

Release Notes and other user documentation are available at <https://support.ruckuswireless.com/documents>. You can locate the documentation by product or perform a text search. Access to Release Notes requires an active support contract and a RUCKUS Support Portal user account. Other technical documentation content is available without logging in to the RUCKUS Support Portal.

White papers, data sheets, and other product documentation are available at <https://www.ruckuswireless.com>.

Online Training Resources

To access a variety of online RUCKUS training modules, including free introductory courses to wireless networking essentials, site surveys, and products, visit the RUCKUS Training Portal at <https://training.ruckuswireless.com>.

Contacting RUCKUS Customer Services and Support

The Customer Services and Support (CSS) organization is available to provide assistance to customers with active warranties on their RUCKUS products, and customers and partners with active support contracts.

For product support information and details on contacting the Support Team, go directly to the RUCKUS Support Portal using <https://support.ruckuswireless.com>, or go to <https://www.ruckuswireless.com> and select **Support**.

What Support Do I Need?

Technical issues are usually described in terms of priority (or severity). To determine if you need to call and open a case or access the self-service resources, use the following criteria:

- Priority 1 (P1)—Critical. Network or service is down and business is impacted. No known workaround. Go to the **Open a Case** section.
- Priority 2 (P2)—High. Network or service is impacted, but not down. Business impact may be high. Workaround may be available. Go to the **Open a Case** section.
- Priority 3 (P3)—Medium. Network or service is moderately impacted, but most business remains functional. Go to the **Self-Service Resources** section.
- Priority 4 (P4)—Low. Requests for information, product documentation, or product enhancements. Go to the **Self-Service Resources** section.

Open a Case

When your entire network is down (P1), or severely impacted (P2), call the appropriate telephone number listed below to get help:

- Continental United States: 1-855-782-5871
- Canada: 1-855-782-5871
- Europe, Middle East, Africa, Central and South America, and Asia Pacific, toll-free numbers are available at <https://support.ruckuswireless.com/contact-us> and Live Chat is also available.
- Worldwide toll number for our support organization. Phone charges will apply: +1-650-265-0903

We suggest that you keep a physical note of the appropriate support number in case you have an entire network outage.

Self-Service Resources

The RUCKUS Support Portal at <https://support.ruckuswireless.com> offers a number of tools to help you to research and resolve problems with your RUCKUS products, including:

- Technical Documentation—<https://support.ruckuswireless.com/documents>
- Community Forums—<https://forums.ruckuswireless.com/ruckuswireless/categories>
- Knowledge Base Articles—<https://support.ruckuswireless.com/answers>
- Software Downloads and Release Notes—https://support.ruckuswireless.com/#products_grid
- Security Bulletins—<https://support.ruckuswireless.com/security>

Using these resources will help you to resolve some issues, and will provide TAC with additional data from your troubleshooting analysis if you still require assistance through a support case or RMA. If you still require help, open and manage your case at https://support.ruckuswireless.com/case_management.

About this Guide

- Introduction..... 25
- What's New in this Document..... 25
- Terminology..... 26
- References..... 27

Introduction

This **SmartZone™ SNMP MIB Reference Guide** describes the SNMP Management Information Bases (MIBs) that the SmartCell

This guide is written for service operators and system administrators who are responsible for managing, configuring, and troubleshooting Ruckus devices. Consequently, it assumes a basic working knowledge of local area networks, wireless networking, and wireless devices.

NOTE

If release notes are shipped with your product and the information there differs from the information in this guide, follow the instructions in the release notes.

Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) or HTML on the support site at <https://support.ruckuswireless.com/contact-us>.

What's New in this Document

TABLE 2 Summary of Enhancements in SmartZone Release 6.0.0

Revision Number	Description	Location	Publication Date
A	237 - ClientSession Renewal	ruckusSCGClientMiscEventTrap on page 363	April 2021
A	355 - apPoEModeChange	ruckusSCGClientMiscEventTrap on page 363	April 2021
A	888 - clusterBackupDownloadStart	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	889 - restoreClusterForFailedUpgradeSuccesses	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2181 - http2ServerReachable	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2182 - http2ServerUnreachable	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2183 - coaRcvdHttp2	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2184 - unauthorizedCoaDmMessageDroppedHttp2	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2185 - dmRcvdHttp2	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2301 - socialMediaAuthenticationSuccess	ruckusSCGSystemMiscEventTrap on page 359	April 2021

About this Guide

Terminology

TABLE 2 Summary of Enhancements in SmartZone Release 6.0.0 (continued)

Revision Number	Description	Location	Publication Date
A	2302 - socialMediaNotReceivedAutzCode	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	2303 - socialMediaNotReceivedAccessToken	ruckusSCGSystemMiscEventTrap on page 359	April 2021
	8021 - signaturePackageDownloadFailed	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	8022 - signaturePackageCheckInstallableFailed	ruckusSCGSystemMiscEventTrap on page 359	April 2021
	8023 - signaturePackageInstallFailed	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	21050 - switchClusterFailover	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	21060 - switchRehomeFailover	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	21061 - clusterRedundancySwitchRehomeIncomplete	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	21070 - switchSwitchover	ruckusSCGSystemMiscEventTrap on page 359	April 2021
A	21071 - switchSwitchoverFailed	ruckusSCGSystemMiscEventTrap on page 359	April 2021

Terminology

The following table lists the terms used in this guide.

TABLE 3 Terms used in this guide

Term	Description
AAA	Authentication, Authorization, and Accounting
AP	Access Point
APN	Access Point Name
CDR	Call Detail Record
CGF	Charging Data Function
CIP	Channel Interface Processor
DHCP	Dynamic Host Configuration Protocol
EAP-AKA	Extensible Authentication Protocol for Authentication and Key Agreement
EAP-SIM	Extensible Authentication Protocol for GSM Subscriber Identity Module
GGSN	Gateway GPRS Support Node
GSN	GPRS Support Node
GTP-C	GPRS Tunneling Protocol – Control Plane
HIP	HLR Interface Process
HLR	Home Location Register
IPSP	IP Signaling Point
MIB	Management Information Bases

TABLE 3 Terms used in this guide (continued)

Term	Description
NAK	Negative Acknowledgment
NBI	Northbound Interface
OID	Object Identifier
PDG	Packet Data Gateway
SCG-CBlade	SCG Controller Blade
SCG-DBlade	SCG Data Blade
SG	Signaling Gateway
SMF	System Management Framework
SNMP	Simple Network Management Protocol
TCP	Transmission Control Protocol
TTG	Tunnel Termination Gateway
UE	User Equipment
UE-IP	User Equipment - IP Address
UE-MAC	User Equipment - MAC Address

References

The following table lists the specifications and standards that are referred to in this guide.

TABLE 4 References used in this guide

No.	Reference Number	Description
1	RFC3418	Defines managed objects that describe the behavior of a Simple Network Management Protocol (SNMP) entity
2	RFC1213	Defines the second version of the Management Information Base (MIB-II) for use with network management protocols on TCP/IP-based Internets.

SNMP Configuration and Standard MIB and OID

- Overview..... 29
- Enabling and Disabling SNMP Traps..... 29
- Updating SNMP V2 and V3 Configuration Flow and SNMP Logs..... 30
- Standard MIB..... 32
- Decoding Traps..... 33
- Generate Traps Using CLI..... 34
- SNMP Agent for APs..... 34
- Using SNMP Walk Scripts..... 45

Overview

This document describes the SNMP management information bases (MIBs) that the controller supports. It also describes the overall design of the controller SNMP agent.

The controller SNMP agent allows its northbound portal application to monitor the system via SNMP GET operation and also notifies the critical events by sending traps. The controller supports V2 community and V3 versions of SNMP. It also supports configuring the system via SNMP SET from this release. See [Updating SNMP V2 and V3 Configuration Flow and SNMP Logs](#) on page 30.

NOTE

For information on how to enable SNMP traps and configure the SNMP V2 and V3 settings on the controller web interface, refer to the *SmartZone Administrator Guide*.

NOTE

Refer to [About this Guide](#) on page 25 for conventions used in this guide.


NOTE

For details on alarms and events refer to *SmartZone Alarms and Events Guide*.

Enabling and Disabling SNMP Traps

In the controller web interface navigate to **System > General Settings > SNMP Agent** to either enable or disable the SNMP notifications as shown in the following figure.

FIGURE 1 SNMP notifications

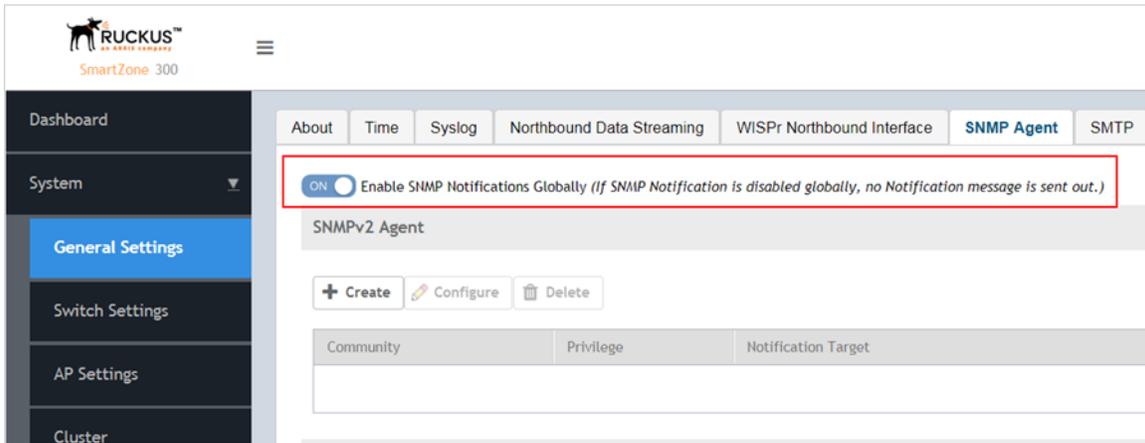

If the SNMP notification is disabled, it will not send any messages to the receiver. It also does not allow any community or a user to enable or configure the notification target address.

Updating SNMP V2 and V3 Configuration Flow and SNMP Logs

Using the controller web interface, you add or update V2 and V3 communities / users and set the operation (set/get/trap) configurations, as shown in Figure 2 and Figure 3. Navigate to **System > General Settings > SNMP Agent** to create SNMP V2 and V3 agents.

NOTE

For information on how to enable the SNMP V2 and V3 settings on the controller web interface, refer to the *Administrator Guide*.

The controller supports a maximum of eight SNMP user profiles and eight trap destinations for SNMPv2 and SNMv3. In the previous releases this was unlimited.

FIGURE 2 Create or enable SNMP V2


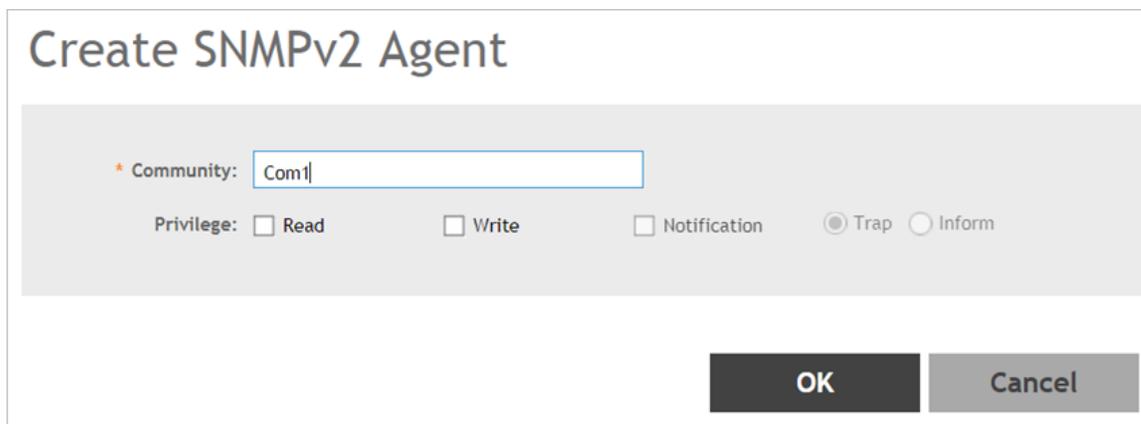


FIGURE 3 Create or enable SNMP V3

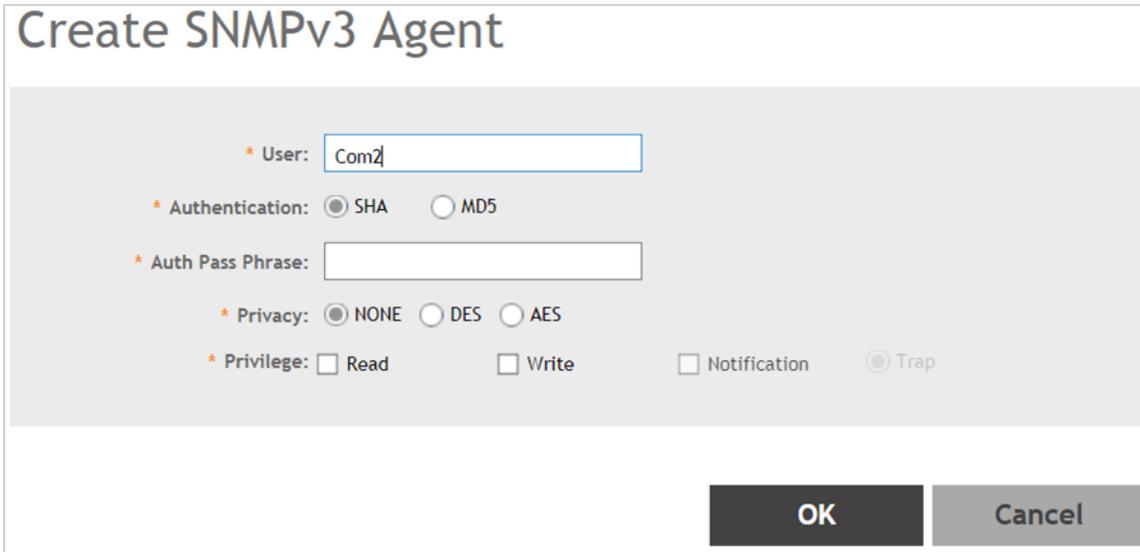

The screenshot shows a configuration window titled "Create SNMPv3 Agent". It contains several fields and options:


- User:** A text input field containing "Com2".
- Authentication:** Radio buttons for "SHA" (selected) and "MD5".
- Auth Pass Phrase:** An empty text input field.
- Privacy:** Radio buttons for "NONE" (selected), "DES", and "AES".
- Privilege:** Checkboxes for "Read", "Write", "Notification", and "Trap". The "Trap" checkbox is selected.

At the bottom right, there are two buttons: "OK" and "Cancel".

SNMP Logs

On the controller web interface, navigate to **Diagnostics > Application Log** to view the SNMP logs. SNMP is listed in the *Application Name* column.

FIGURE 4 SNMP logs

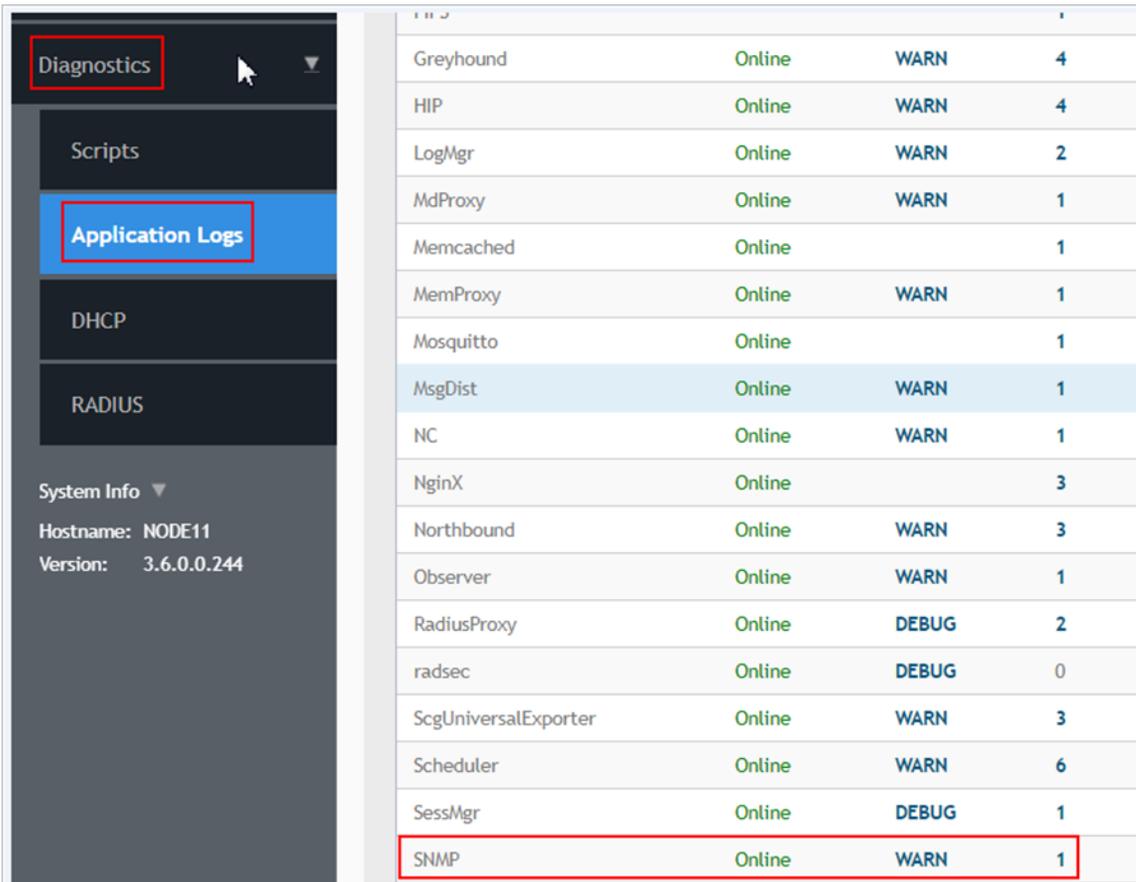

Greyhound	Online	WARN	4
HIP	Online	WARN	4
LogMgr	Online	WARN	2
MdProxy	Online	WARN	1
Memcached	Online		1
MemProxy	Online	WARN	1
Mosquitto	Online		1
MsgDist	Online	WARN	1
NC	Online	WARN	1
NginX	Online		3
Northbound	Online	WARN	3
Observer	Online	WARN	1
RadiusProxy	Online	DEBUG	2
radsec	Online	DEBUG	0
ScgUniversalExporter	Online	WARN	3
Scheduler	Online	WARN	6
SessMgr	Online	DEBUG	1
SNMP	Online	WARN	1

Standard MIB

Standard MIBs that the controller supports include:

- [Host Resource MIB](#) on page 32
- [UCD MIB](#) on page 33
- [SNMPv2 MIB \(RFC3418\)](#) on page 33
- [RFC1213 MIB \(RFC1213\)](#) on page 33

Host Resource MIB

Host resource MIB is a standard MIB for monitoring the resource status on controller. The term “host” refers to any computer that communicates with other similar computers attached to the Internet and that is directly used by one or more users.

NOTE

To get disk information use the Host Resource MIB OID.1.3.6.1.2.1.25.2.3.

UCD MIB

The UCD SNMP MIB contains system performance data, which was designed for ease of numerical management routines. This MIB is no longer maintained by the University of California. It is now on life support-mode and maintained by the NET-SNMP project.

- To get CPU information use the UCD SNM MIB OIDs.
 - .1.3.6.1.4.1.2021.10.1.3.1 (1 minute load)
 - .1.3.6.1.4.1.2021.10.1.3.2 (5 minute load)
 - .1.3.6.1.4.1.2021.10.1.3.3 (15 minute load)
- To get memory information use the OID.1.3.6.1.4.1.2021.4

SNMPv2 MIB (RFC3418)

SNMPv2-MIB (RFC3418) defines managed objects that describe the behavior of a Simple Network Management Protocol (SNMP) entity.

NOTE

RFC3418 obsoletes RFC1907 – the management information base for v2 of the Simple Network Management Protocol (SNMPv2).

RFC1213 MIB (RFC1213)

RFC1213-MIB (RFC1213) defines the second version of the management information base (MIB-II) for use with network management protocols on TCP/IP- based Internets. This RFC specifies an IAB standards track protocol for the Internet community, and requests discussion and suggestions for improvements.

NOTE

To get network information use the OID.1.3.6.1.2.1.2.2.

NOTE

For more information about RFC1213-MIB (RFC1213), refer to the current edition of the “IAB Official Protocol Standards” for the standardization state and status of this protocol. Distribution of this memo is unlimited.

Ruckus private MIBs are categorized into the following types:

- [Ruckus Event MIB](#) on page 49
- [Ruckus System MIB](#) on page 205
- [Ruckus WLAN MIB](#) on page 215
- [Ruckus TTG MIB](#) on page 237
- [SmartZone Event Traps](#) on page 359

Decoding Traps

To extract the variable bindings from the trap, it is recommended to use the OID (of the variables) instead of their positions. The reason is that the OID never changes while the position may change when additional variables are added to the trap. For example, the ruckusSCGSystemMiscEventTrap trap may originally contain the following four variable bindings:

```
ruckusSCGEventSeverity  
ruckusSCGEventType  
ruckusSCGEventDescription  
ruckusSCGEventCode
```

SNMP Configuration and Standard MIB and OID

Generate Traps Using CLI

Assuming in a future release, a new variable binding - ruckusSCGEventReason, is added to this trap, then ruckusSCGSystemMiscEventTrap trap will have the following five variable bindings:

```
ruckusSCGEventSeverity
ruckusSCGEventType
ruckusSCGEventReason
ruckusSCGEventDescription
ruckusSCGEventCode
```

If the variable bindings are extracted based on the position, the original logic fails when the binding - ruckusSCGEventReason is added.

Though a newly-added variable binding is normally added at the end of the existing binding, sometimes it may be placed in the middle to make it consistent with other traps.

NOTE

For details on variable OIDs refer to [Ruckus Event Object](#) on page 182.

Generate Traps Using CLI

Using the CLI console execute the following commands to trigger SNMP traps. These set of commands is for testing purposes, where fake or test traps are generated manually to test communication and message parsing with upper systems.

NOTE

Make sure that the option *Enable SNMP* is enabled before running the following CLI commands. In the web interface navigate to **System > General Settings > SNMP Agent** to enable the option.

FIGURE 5 SNMP Traps Using CLI

```
SZ300-2(diagnostic)# trigger-trap
all          trigger all traps

<eventcode>  Multi-Traps separated by comma, for example: trigger-trap 123
,122,133

SZ300-2(diagnostic)# trigger-trap all
Successful operation

SZ300-2(diagnostic)# trigger-trap 960
Successful operation
```

SNMP Agent for APs

APs by default have SNMP Agent disabled. This can be changed either using the controller's interface or CLI console.

Limitations

- Only one target notification is allowed in both SNMP v2 and v3 agents

- You can have a maximum count of three (3) each for community and user groups
- Community or users should not have the same privileges. For example:
 - Read or write or notification privileges should not be enabled in two communities
 - Read or write or notification should not be enabled in two users

Enable SNMP Agent

Option 1 - User Interface

In the controller interface navigate to **Access Points > Zone**. Click on the + sign to add the zone. In the create Zone page select **AP SNMP Options** for all the APs in the controller as seen in the below screen.

Privilege option - **target** refers to adding SNMP target notification and **inform** refers to sending SNMP information notifications to the selected community.

NOTE


For AP SNMP Inform privilege option for SNMP v3 Agent is not supported.

FIGURE 6 Enabling SNMP options for Zone APs

The screenshot shows a configuration page for a Zone. At the top, there are fields for 'Name' and 'Description', and radio buttons for 'Type' (Domain, Zone, AP Group). Below this is a 'Configuration' section with a dropdown menu set to 'AP SNMP Options'. Under this dropdown, there is a toggle for 'Enable AP SNMP' which is turned ON. Below that is the 'SNMPv2 Agent' section, which includes a table with columns for 'Community', 'Privilege', and 'Notification Target'. At the bottom of the configuration section, there is a 'SNMPv3 Agent' section. At the very bottom of the page, there are 'OK' and 'Cancel' buttons.

To enable SNMP options in Zone templates navigate to **System > Templates > Zone Templates**. Select **AP SNMP Options** for all the APs in the controller as seen in the below figure.

FIGURE 7 Enabling SNMP options for Zone Templates

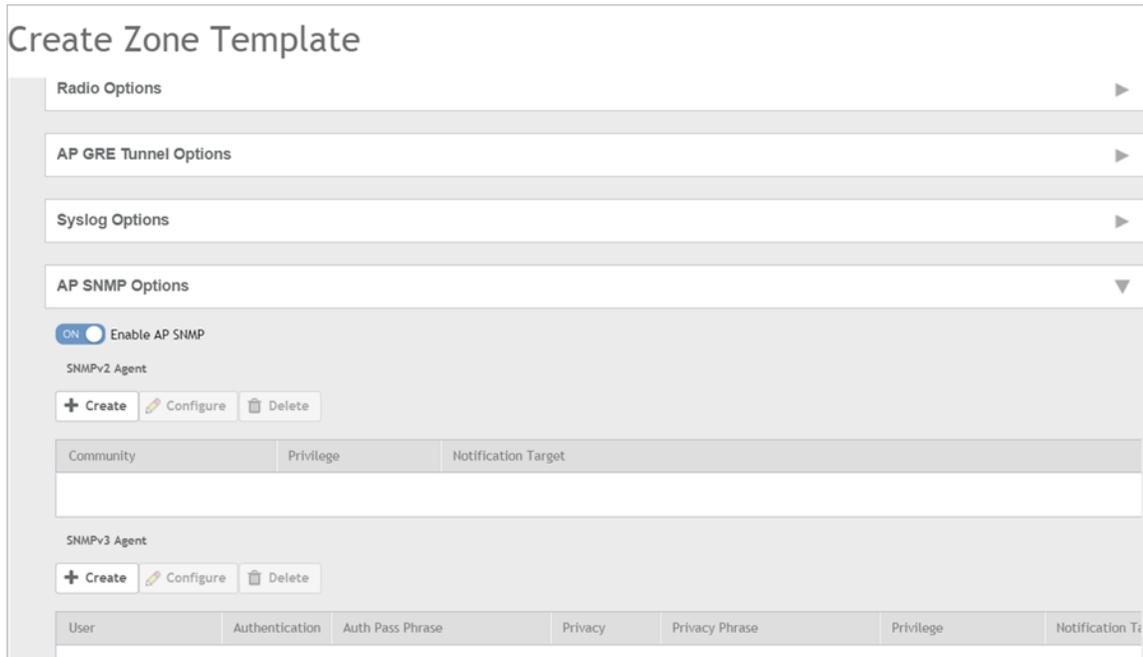

Option 2 - CLI Console

Using the CLI console login with your administrator user credentials. Execute the common settings AP SNMP options to enable the SNMP agents as seen in the following figure. This setting will be applied to all APs connected to the controller.

FIGURE 8 Enabling SNMP options using CLI

```
NMS32(config)# zone NMS_Zone1_POE
NMS32(config-zone)# ap-snmp-options
NMS32(config-zone-ap-snmp-options)# ap-snmp
NMS32(config-zone-ap-snmp-options)# snmp-v
snmp-v2-community snmp-v3-user
NMS32(config-zone-ap-snmp-options)# snmp-v2-community admin
NMS32(config-zone-ap-snmp-options-snmp-v2-community)# read
NMS32(config-zone-ap-snmp-options-snmp-v2-community)# write
NMS32(config-zone-ap-snmp-options-snmp-v2-community)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-zone-ap-snmp-options)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-zone)# exit
Do you want to update this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config)#
```


Enable Override Settings

If you want to set up a different policy for a specific AP, you need to enable the override option for a particular AP or for a AP Group.

Option 1 - User Interface


Using the controller interface navigate to **Access Points**. Select the AP and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to enable the *Override* option for a particular AP as seen in the following figure.

FIGURE 9 Setting the Override option for a particular AP

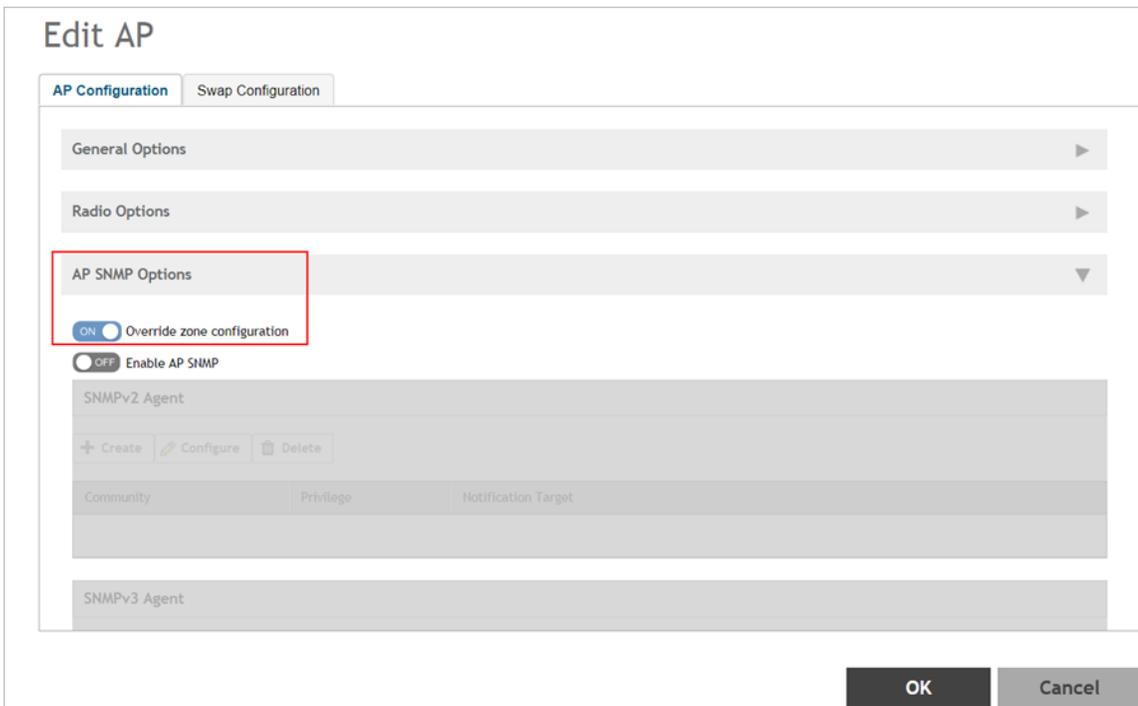


Using the controller interface navigate to **Access Points**. Select the AP Group and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to enable the *Override* option for a particular AP Group in an AP as seen in the below figure.

FIGURE 10 Setting the Override option for a AP Group

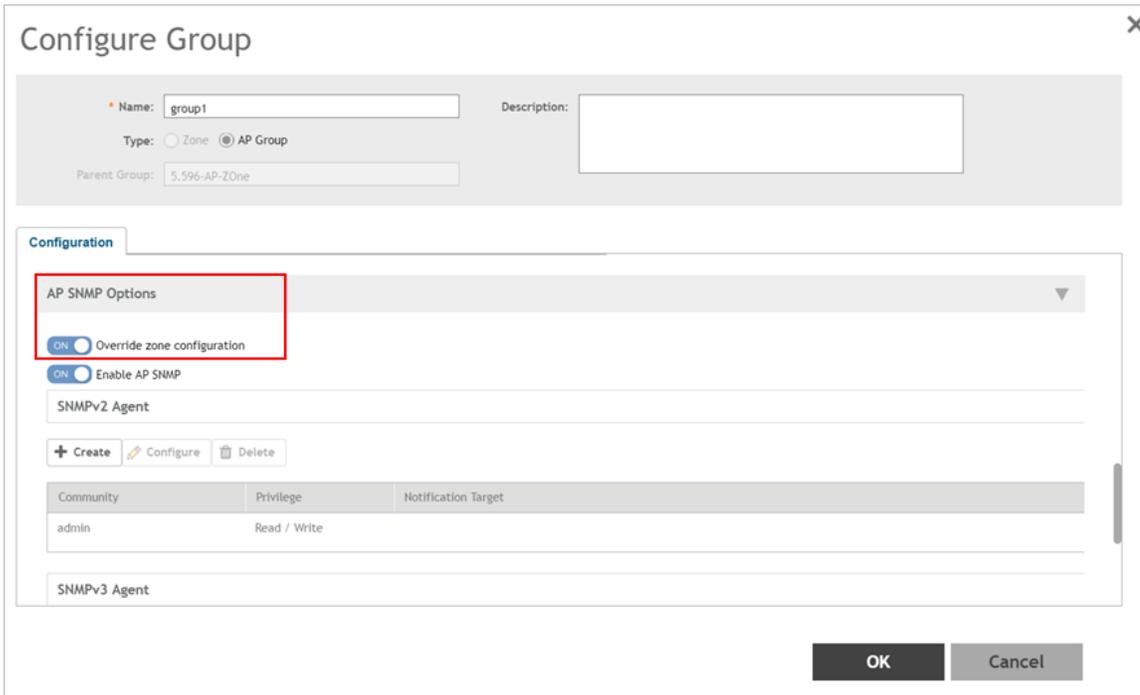

Using the controller interface navigate to **Access Points**. Select the Zone and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to enable the *Override* option for a particular Zone in an AP as seen in the below figure.

FIGURE 11 Setting the Override option for Zone in an AP

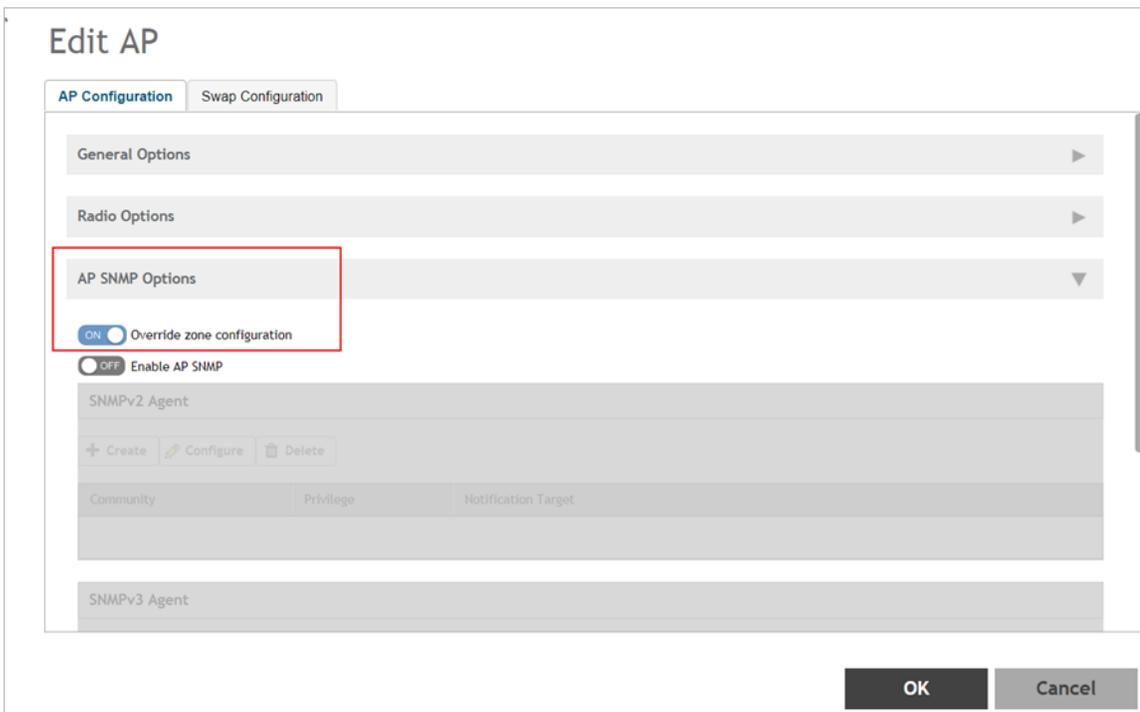

Option 2 - CLI Console

Login to CLI console with your administrator user credentials. Execute the common settings commands as seen in the following figure. This setting will be applied to a particular AP.

FIGURE 12 Setting the Override option using CLI for a AP

```
NMS32(config)# ap 2C:C5:D3:01:85:40
NMS32(config-ap)# override-ap-snmp-options
NMS32(config-ap)# ap-snmp-options
NMS32(config-ap-ap-snmp-options)# ap-snmp
NMS32(config-ap-ap-snmp-options)# snmp-v2-community test
NMS32(config-ap-ap-snmp-options-snmp-v2-community)# read
NMS32(config-ap-ap-snmp-options-snmp-v2-community)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-ap-ap-snmp-options)# yes
NMS32(config-ap-ap-snmp-options)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-ap)#
```

Login to CLI console with your administrator user credentials. Execute the common settings commands as seen in the following figure. This setting will be applied to a AP Group.

FIGURE 13 Setting the Override option using CLI for a AP Group

```
NMS32(config-zone)# ap-group Grp1
NMS32(config-zone-ap-group)# override-ap-snmp-options
NMS32(config-zone-ap-group)# ap-snmp-options
NMS32(config-zone-ap-group-ap-snmp-options)# ap-snmp
NMS32(config-zone-ap-group-ap-snmp-options)# snmp-v2-community apgroupsnmp
NMS32(config-zone-ap-group-ap-snmp-options-snmp-v2-community)# read
NMS32(config-zone-ap-group-ap-snmp-options-snmp-v2-community)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-zone-ap-group-ap-snmp-options)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-zone-ap-group)# exit
Do you want to save this context configuration (or input 'no' to cancel)? [yes/no] yes
NMS32(config-zone)#
```

Apart from that, you can not only enable or disable SNMP, but also configure SNMPv2/v3 communities.

View SNMP Configuration

To view the SNMP configurations applied to Access Points, login to AP CLI console. Execute the command `GET SNMP` as shown in the following figure.


FIGURE 14 AP GET SNMP

```
rksccli: get snmp
SNMP enable : enable
SNMP version : v2c and v3
SNMPv2 ro community : admin
SNMPv2 rw community :
SNMPv2 sys contact : https://support.ruckuswireless.com/contact_us
SNMPv2 sys location :
SNMPv2 trap enable : disable
SNMPv2 trap server :
SNMPv2 trap/inform : TRAP
OK
rksccli:
rksccli: get snmpv3
SNMP enable : enable
SNMP version : v2c and v3
SNMPv3 ro username : ruckus
SNMPv3 ro auth type :
SNMPv3 ro auth key :
SNMPv3 ro privacy type :
SNMPv3 ro privacy key :
SNMPv3 rw username : ruckus
SNMPv3 rw auth type :
SNMPv3 rw auth key :
SNMPv3 rw privacy type :
SNMPv3 rw privacy key :
SNMPv3 trap enable : enable
SNMPv3 trap Svr Ip : 172.19.7.88
SNMPv3 trap username : test
SNMPv3 trap auth type : SHA
SNMPv3 trap auth key : testing123
SNMPv3 trap privacy type : DES
SNMPv3 trap privacy key : testing123
SNMPv3 trap/inform : TRAP
OK
rksccli:
```

Disable SNMP Agents

Using the controller interface navigate to **Access Points**. Select the AP and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to disable the *AP SNMP* option for all APs as seen in the below figure. Make sure that the *Enable AP SNMP* button is turned off.


FIGURE 15 Disable AP SNMP for all APs

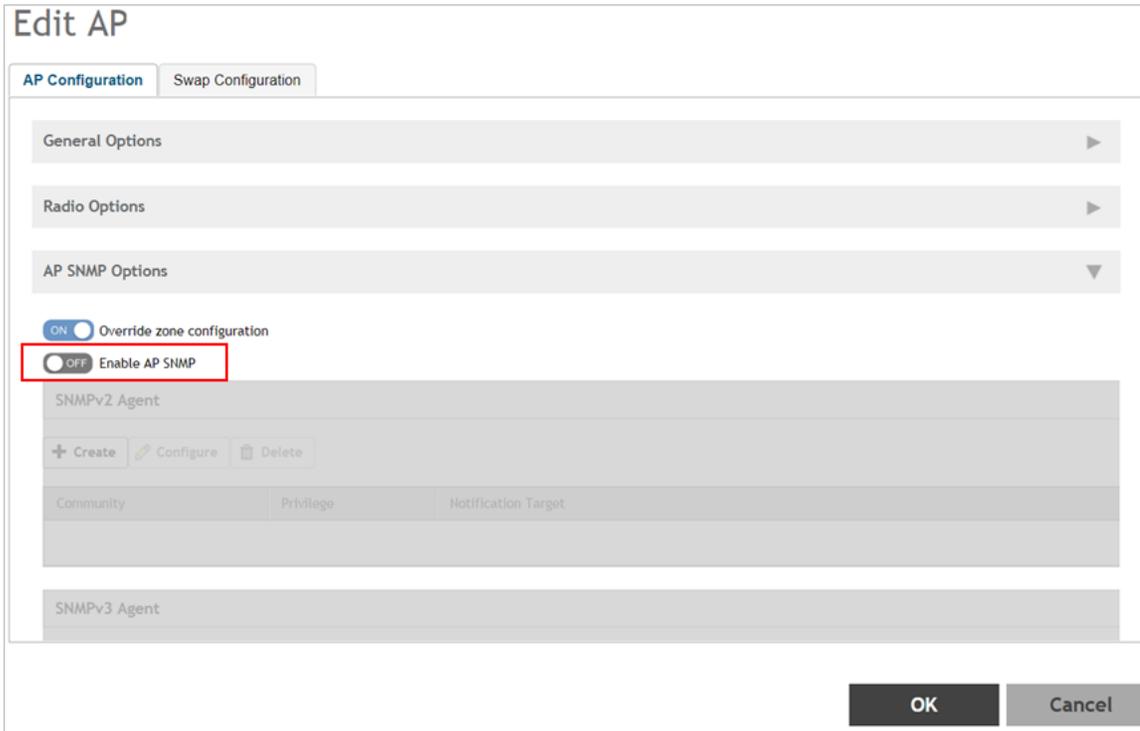

Using the controller interface navigate to **Access Points**. Select the AP and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to disable the *AP SNMP* option in a Zone for all APs as seen in the below figure. Make sure that the *Enable AP SNMP* button is turned off.

SNMP Configuration and Standard MIB and OID
SNMP Agent for APs

FIGURE 16 Disable AP SNMP for APs in a AP Zone

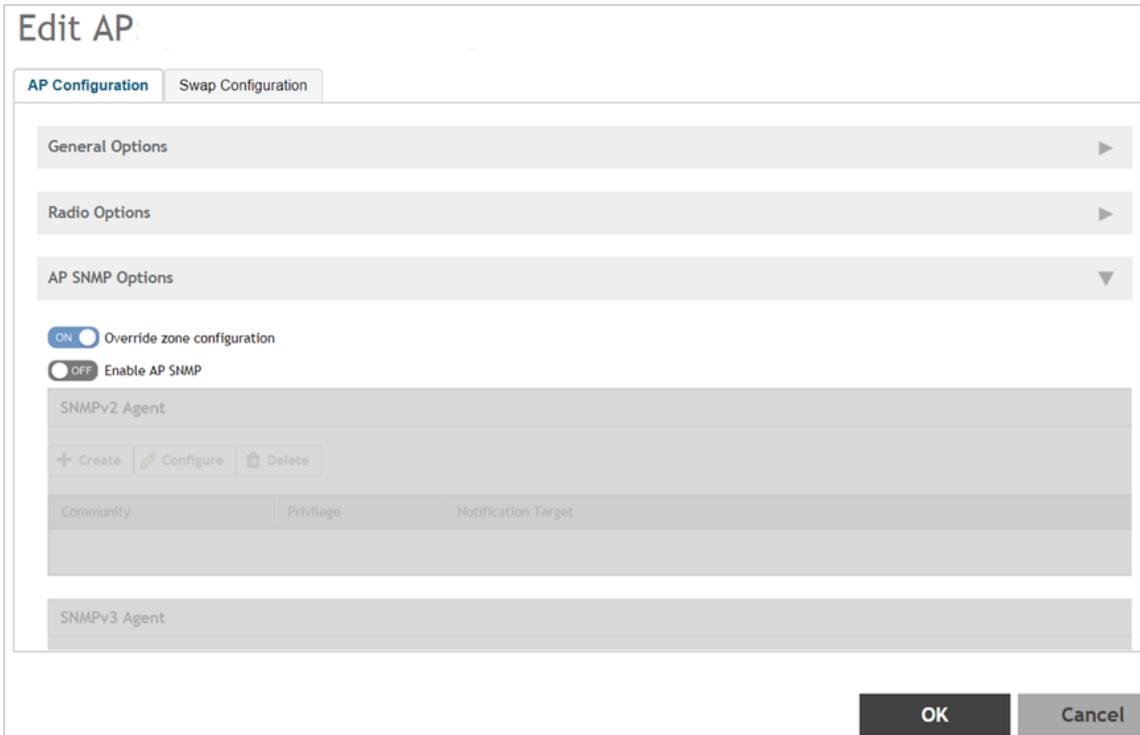


Using the controller interface navigate to **Access Points**. Select the AP Group and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to disable the AP SNMP option in a AP Group for all APs as seen in the below figure. Make sure that the *Enable AP SNMP* button is turned off.

FIGURE 17 Disable AP SNMP for AP Group in a AP Zone

The screenshot shows the 'Configure Group' interface. At the top, there are fields for 'Name' (377) and 'Description' (q). Below these are radio buttons for 'Type' (Domain, Zone, AP Group), with 'Zone' selected. A 'Parent Group' field is set to 'System'. The main section is titled 'Configuration' and contains a dropdown menu for 'AP SNMP Options'. Below this, the 'Enable AP SNMP' option is shown as a toggle switch that is turned off, highlighted with a red box. Underneath are sections for 'SNMPv2 Agent' and 'SNMPv3 Agent', each with 'Create', 'Configure', and 'Delete' buttons. At the bottom right, there are 'OK' and 'Cancel' buttons.


To disable AP SNMP for AP Zone in Zone Template navigate to the controller user interface **System > Templates > Zone Template**. Select the required zone template and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to disable the **AP SNMP** option. Make sure that the *Enable AP SNMP* button is turned off.

FIGURE 18 Disable AP SNMP for AP Zone in a AP Zone Template

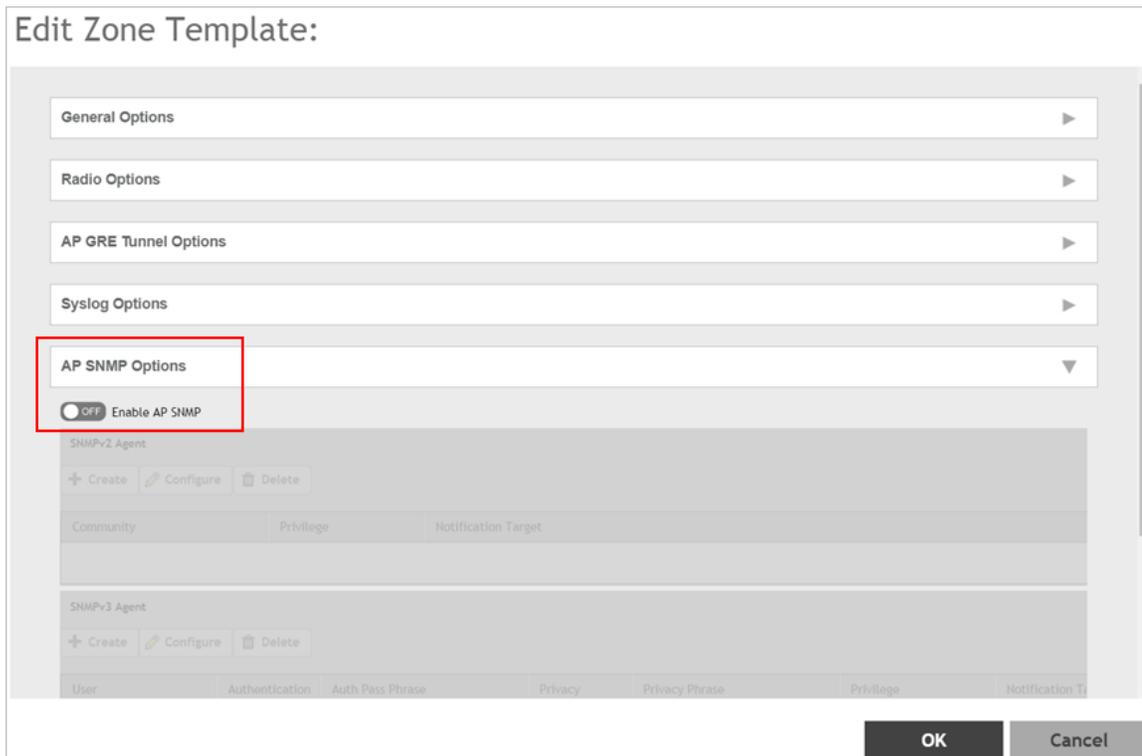

To disable AP SNMP for an AP Zone in a Zone Template pertaining to AP Groups navigate to the controller user interface **Access Points**. . Select the AP Group and click on the **Configuration** tab. In the configuration page select **AP SNMP Options** to disable the *AP SNMP* option in a AP Group for all APs as seen in the below figure. Make sure that the *Enable AP SNMP* button is turned off.

FIGURE 19 Disable AP SNMP for AP Zone in a AP Zone Template in AP Group

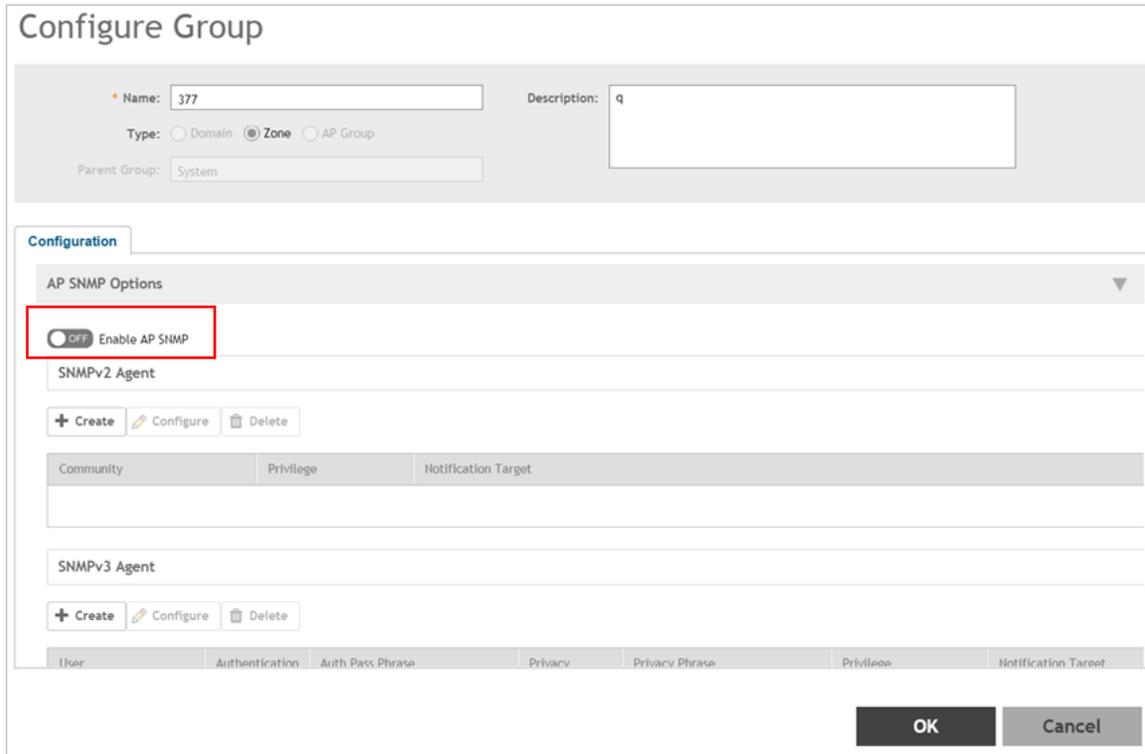

Using SNMP Walk Scripts

The following procedure helps you in creating sample shell scripts to query all entries in RuckusCtrlAp related tables (AP, AP Radio, AP WLAN).

Steps for using SNMP Walk Scripts

The following are the steps for using SNMP walk scripts.

1. Get the MAC list using ruckusCTRLSummaryApTable
2. Translate all output MAC addresses in the OID format
3. Utilize SNMP cache. It gets all the attributes (based on the rows first and not column) of an AP through snmpget or snmpwalk.

Do retry for unsuccessful APs if required.

NOTE

The below scripts are example codes for walking through all the APs in the controller.

Setup Environment

The following is the requirement to setup the required environment.

- **Shell:** Dash or bash
- **Operating System:** Linux

Procedure

1. Install NET SNMP client tools (snmpget and snmpwalk) by referring to <http://www.net-snmp.org/download.html>.
2. Save the downloaded MIB files in the MIB directory.
3. Ensure that the following MIB files are installed in the system
 - a. IANAifType-MIB
 - b. IF-MIB
 - c. IPV6-TC
 - d. SNMPv2-CONF
 - e. SNMPv2-SMI
 - f. SNMPv2-TC

Installing SNMP Client Tool

Execute the following script to install SNMP client using:

Ubuntu

```
apt-get install snmp
```

RedHat

```
yum install net-snmp net-snmp-libs net-snmp-utils
```

Ruckus MIB files in the MIB directory

Execute the following script to save the Ruckus MIB files in the MIB directory using:

Ubuntu and RedHat

```
cd RUCKUS_MIB_Directory  
sudo cp RUCKUS-*.txt /usr/share/snmp/mibs/
```

Usage

Execute the following script to use the Ruckus MIB files.

```
sh <sample_script>.sh <SZ IP address> <snmpcmd options>
```

SNMP CMD Options

Refer to the OPTIONS section in <http://net-snmp.sourceforge.net/docs/man/snmpcmd.html>. For example, using SNMPv2 with read community *public* for controller with the IP address 172.17.1.2.

```
sh walk_ruckusCTRLApTable_sample.sh 172.17.1.2 -mall -v2c -c public
```

where *-mall* is an option required for these scripts or you may not be able to get the results.

Tips for Writing Your Own Scripts

1. Use *-Oe* with snmpget/snmpwalk to output index(MAC address) in OID format.
2. snmpget can send 128 OIDs at a time.
3. Always get all OIDs of the same AP first, instead of OIDs for all APs.

4. AP related tables cache data for 15 seconds. This means that you may get the same result if you do not wait for cache timeout.
5. You can use NET-SNMP-AGENT-MIB::nsCacheStatus to check cache status of a table. If your system supports snmpset, you can also force it to clean cache via snmpset.
6. Be careful with the output format. Refer to OUTPUT OPTIONS link <http://net-snmp.sourceforge.net/docs/man/snmpcmd.html>

Ruckus Event MIB

- Introduction.....49
- Ruckus Event Trap.....49
- Ruckus Event Object..... 182

Introduction

The objects contained in the RUCKUS-SCG-EVENT-MIB group define the events for the controller to send trap event notifications.

NOTE

For details on alarms and events refer to *SmartZone Alarms and Events Guide*.

Ruckus Event Trap

The following tables list the MIB, OID, and description of each object in the RUCKUS-EVENT group.

NOTE

The **Cleared by Matching** row contains the information that a user can use to clear the corresponding trap.

Trap Name	Object Identifier
ruckusSCGSystemMiscEventTrap on page 55	.1.3.6.1.4.1.25053.2.10.1.1
ruckusSCGUpgradeSuccessTrap on page 55	.1.3.6.1.4.1.25053.2.10.1.2
ruckusSCGUpgradeFailedTrap on page 56	.1.3.6.1.4.1.25053.2.10.1.3
ruckusSCGNodeRestartedTrap on page 56	.1.3.6.1.4.1.25053.2.10.1.4
ruckusSCGNodeShutdownTrap on page 57	.1.3.6.1.4.1.25053.2.10.1.5
ruckusSCGCPUIUsageThresholdExceededTrap on page 57	.1.3.6.1.4.1.25053.2.10.1.6
ruckusSCGMemoryUsageThresholdExceededTrap on page 58	.1.3.6.1.4.1.25053.2.10.1.7
ruckusSCGDiskUsageThresholdExceededTrap on page 59	.1.3.6.1.4.1.25053.2.10.1.8
ruckusSCGLicenseUsageThresholdExceededTrap on page 59	.1.3.6.1.4.1.25053.2.10.1.19
ruckusSCGAPMiscEventTrap on page 60	.1.3.6.1.4.1.25053.2.10.1.20
ruckusSCGAPConnectedTrap on page 60	.1.3.6.1.4.1.25053.2.10.1.21
ruckusSCGAPDeletedTrap on page 61	.1.3.6.1.4.1.25053.2.10.1.22
ruckusSCGAPDisconnectedTrap on page 62	.1.3.6.1.4.1.25053.2.10.1.23
ruckusSCGAPLostHeartbeatTrap on page 62	.1.3.6.1.4.1.25053.2.10.1.24
ruckusSCGAPRebootTrap on page 63	.1.3.6.1.4.1.25053.2.10.1.25
ruckusSCGCriticalAPConnectedTrap on page 64	.1.3.6.1.4.1.25053.2.10.1.26
ruckusSCGCriticalAPDisconnectedTrap on page 64	.1.3.6.1.4.1.25053.2.10.1.27
ruckusSCGAPRejectedTrap on page 65	.1.3.6.1.4.1.25053.2.10.1.28
ruckusSCGAPConfUpdateFailedTrap on page 66	.1.3.6.1.4.1.25053.2.10.1.29
ruckusSCGAPConfUpdatedTrap on page 66	.1.3.6.1.4.1.25053.2.10.1.30
ruckusSCGAPSwapOutModelDiffTrap on page 67	.1.3.6.1.4.1.25053.2.10.1.31
ruckusSCGAPPreProvisionModelDiffTrap on page 68	.1.3.6.1.4.1.25053.2.10.1.32

Ruckus Event MIB
Ruckus Event Trap

Trap Name	Object Identifier
ruckusSCGAPDiscoveryFailTrap on page 68	.1.3.6.1.4.1.25053.2.10.1.33
ruckusSCGAPFirmwareUpdateFailedTrap on page 69	.1.3.6.1.4.1.25053.2.10.1.34
ruckusSCGAPFirmwareUpdatedTrap on page 70	.1.3.6.1.4.1.25053.2.10.1.35
ruckusSCGAPWlanOversubscribedTrap on page 70	.1.3.6.1.4.1.25053.2.10.1.36
ruckusSCGAPFactoryResetTrap on page 71	.1.3.6.1.4.1.25053.2.10.1.37
ruckusSCGCableModemDownTrap on page 72	.1.3.6.1.4.1.25053.2.10.1.38
ruckusSCGCableModemRebootTrap on page 72	.1.3.6.1.4.1.25053.2.10.1.39
ruckusSCGAPJoinZoneFailedTrap on page 73	.1.3.6.1.4.1.25053.2.10.1.40
ruckusSCGAPManagedTrap on page 74	.1.3.6.1.4.1.25053.2.10.1.41
ruckusSCGCPUIUsageThresholdBackToNormalTrap on page 74	.1.3.6.1.4.1.25053.2.10.1.42
ruckusSCGMemoryUsageThresholdBackToNormalTrap on page 75	.1.3.6.1.4.1.25053.2.10.1.43
ruckusSCGDiskUsageThresholdBackToNormalTrap on page 75	.1.3.6.1.4.1.25053.2.10.1.44
ruckusSCGCableModemUpTrap on page 76	.1.3.6.1.4.1.25053.2.10.1.45
ruckusSCGAPDiscoverySuccessTrap on page 76	.1.3.6.1.4.1.25053.2.10.1.46
ruckusSCGCMResetByUserTrap on page 77	.1.3.6.1.4.1.25053.2.10.1.47
ruckusSCGCMResetFactoryByUserTrap on page 78	.1.3.6.1.4.1.25053.2.10.1.48
ruckusSCGMaliciousRogueAPTimeoutTrap on page 78	.1.3.6.1.4.1.25053.2.10.1.54
ruckusSCGAPLBSConnectSuccessTrap on page 79	.1.3.6.1.4.1.25053.2.10.1.55
ruckusSCGAPLBSNoResponsesTrap on page 80	.1.3.6.1.4.1.25053.2.10.1.56
ruckusSCGAPLBSAuthFailedTrap on page 80	.1.3.6.1.4.1.25053.2.10.1.57
ruckusSCGAPLBSConnectFailedTrap on page 81	.1.3.6.1.4.1.25053.2.10.1.58
ruckusSCGGeneralRogueAPTrap on page 82	.1.3.6.1.4.1.25053.2.10.1.59
ruckusSCGAPTunnelBuildFailedTrap on page 82	.1.3.6.1.4.1.25053.2.10.1.60
ruckusSCGAPTunnelBuildSuccessTrap on page 83	.1.3.6.1.4.1.25053.2.10.1.61
ruckusSCGAPTunnelDisconnectedTrap on page 84	.1.3.6.1.4.1.25053.2.10.1.62
ruckusSCGAPSoftGRE Tunnel Failover PtoS Trap on page 85	.1.3.6.1.4.1.25053.2.10.1.65
ruckusSCGAPSoftGRE Tunnel Failover StoP Trap on page 86	.1.3.6.1.4.1.25053.2.10.1.66
ruckusSCGAPSoftGRE Gateway Not Reachable Trap on page 86	.1.3.6.1.4.1.25053.2.10.1.67
ruckusSCGAPSoftGRE Gateway Reachable Trap on page 87	.1.3.6.1.4.1.25053.2.10.1.68
ruckusSCGDPCConfUpdateFailedTrap on page 88	.1.3.6.1.4.1.25053.2.10.1.70
ruckusSCGDPLostHeartbeatTrap on page 88	.1.3.6.1.4.1.25053.2.10.1.71
ruckusSCGDPCDisconnectedTrap on page 89	.1.3.6.1.4.1.25053.2.10.1.72
ruckusSCGDPPhyInterfaceDownTrap on page 89	.1.3.6.1.4.1.25053.2.10.1.73
ruckusSCGDPCStatusUpdateFailedTrap on page 90	.1.3.6.1.4.1.25053.2.10.1.74
ruckusSCGDPCStatisticUpdateFailedTrap on page 90	.1.3.6.1.4.1.25053.2.10.1.75
ruckusSCGDPCConnectedTrap on page 90	.1.3.6.1.4.1.25053.2.10.1.76
ruckusSCGDPPhyInterfaceUpTrap on page 91	.1.3.6.1.4.1.25053.2.10.1.77
ruckusSCGDPCConfUpdatedTrap on page 91	.1.3.6.1.4.1.25053.2.10.1.78
ruckusSCGDPTunnelTearDownTrap on page 92	.1.3.6.1.4.1.25053.2.10.1.79
ruckusSCGDPRRebootTrap on page 92	.1.3.6.1.4.1.25053.2.10.1.80
ruckusSCGDPAcceptTunnelRequestTrap on page 92	.1.3.6.1.4.1.25053.2.10.1.81
ruckusSCGDPRRejectTunnelRequestTrap on page 93	.1.3.6.1.4.1.25053.2.10.1.82

Trap Name	Object Identifier
ruckusSCGDPSgreGWUnreachableTrap on page 93	.1.3.6.1.4.1.25053.2.10.1.83
ruckusSCGDPSgreGWReachableTrap on page 94	.1.3.6.1.4.1.25053.2.10.1.84
ruckusSCGDPTunnelSetUpTrap on page 94	.1.3.6.1.4.1.25053.2.10.1.85
ruckusSCGDPPDiscoverySuccessTrap on page 95	.1.3.6.1.4.1.25053.2.10.1.86
ruckusSCGDPPDiscoveryFailTrap on page 95	.1.3.6.1.4.1.25053.2.10.1.87
ruckusSCGDPSgreGWInactTrap on page 96	.1.3.6.1.4.1.25053.2.10.1.88
ruckusSCGDPSgreGWActTrap on page 96	.1.3.6.1.4.1.25053.2.10.1.89
ruckusSCGDPPktPoolLowTrap on page 96	.1.3.6.1.4.1.25053.2.10.1.90
ruckusSCGDPPktPoolCriticalLowTrap on page 97	.1.3.6.1.4.1.25053.2.10.1.91
ruckusSCGDPPktPoolRecoverTrap on page 97	.1.3.6.1.4.1.25053.2.10.1.92
ruckusSCGDPCoreDeadTrap on page 98	.1.3.6.1.4.1.25053.2.10.1.93
ruckusSCGDPPDeletedTrap on page 98	.1.3.6.1.4.1.25053.2.10.1.94
ruckusSCGDPUUpgradeStartTrap on page 99	.1.3.6.1.4.1.25053.2.10.1.95
ruckusSCGDPUgradingTrap on page 99	.1.3.6.1.4.1.25053.2.10.1.96
ruckusSCGDPUUpgradeSuccessTrap on page 99	.1.3.6.1.4.1.25053.2.10.1.97
ruckusSCGDPUUpgradeFailedTrap on page 100	.1.3.6.1.4.1.25053.2.10.1.98
ruckusSCGClientMiscEventTrap on page 100	.1.3.6.1.4.1.25053.2.10.1.100
ruckusSCGNodeJoinFailedTrap on page 101	.1.3.6.1.4.1.25053.2.10.1.200
ruckusSCGNodeRemoveFailedTrap on page 101	.1.3.6.1.4.1.25053.2.10.1.201
ruckusSCGNodeOutOfServiceTrap on page 102	.1.3.6.1.4.1.25053.2.10.1.202
ruckusSCGClusterInMaintenanceStateTrap on page 102	.1.3.6.1.4.1.25053.2.10.1.203
ruckusSCGClusterBackupFailedTrap on page 102	.1.3.6.1.4.1.25053.2.10.1.204
ruckusSCGClusterRestoreFailedTrap on page 103	.1.3.6.1.4.1.25053.2.10.1.205
ruckusSCGClusterAppStoppedTrap on page 103	.1.3.6.1.4.1.25053.2.10.1.206
ruckusSCGNodeBondInterfaceDownTrap on page 104	.1.3.6.1.4.1.25053.2.10.1.207
ruckusSCGNodePhyInterfaceDownTrap on page 104	.1.3.6.1.4.1.25053.2.10.1.208
ruckusSCGClusterLeaderChangedTrap on page 105	.1.3.6.1.4.1.25053.2.10.1.209
ruckusSCGClusterUpgradeSuccessTrap on page 105	.1.3.6.1.4.1.25053.2.10.1.210
ruckusSCGNodeBondInterfaceUpTrap on page 106	.1.3.6.1.4.1.25053.2.10.1.211
ruckusSCGNodePhyInterfaceUpTrap on page 106	.1.3.6.1.4.1.25053.2.10.1.212
ruckusSCGClusterBackToInServiceTrap on page 107	.1.3.6.1.4.1.25053.2.10.1.216
ruckusSCGBackupClusterSuccessTrap on page 107	.1.3.6.1.4.1.25053.2.10.1.217
ruckusSCGNodeJoinSuccessTrap on page 108	.1.3.6.1.4.1.25053.2.10.1.218
ruckusSCGClusterAppStartTrap on page 108	.1.3.6.1.4.1.25053.2.10.1.219
ruckusSCGNodeRemoveSuccessTrap on page 108	.1.3.6.1.4.1.25053.2.10.1.220
ruckusSCGClusterRestoreSuccessTrap on page 109	.1.3.6.1.4.1.25053.2.10.1.221
ruckusSCGNodeBackToInServiceTrap on page 109	.1.3.6.1.4.1.25053.2.10.1.222
ruckusSCGSshTunnelSwitchedTrap on page 110	.1.3.6.1.4.1.25053.2.10.1.223
ruckusSCGClusterCfgBackupStartTrap on page 110	.1.3.6.1.4.1.25053.2.10.1.224
ruckusSCGClusterCfgBackupSuccessTrap on page 111	.1.3.6.1.4.1.25053.2.10.1.225
ruckusSCGClusterCfgBackupFailedTrap on page 111	.1.3.6.1.4.1.25053.2.10.1.226
ruckusSCGClusterCfgRestoreSuccessTrap on page 111	.1.3.6.1.4.1.25053.2.10.1.227

Ruckus Event MIB
Ruckus Event Trap

Trap Name	Object Identifier
ruckusSCGClusterCfgRestoreFailedTrap on page 112	.1.3.6.1.4.1.25053.2.10.1.228
ruckusSCGClusterUploadSuccessTrap on page 112	.1.3.6.1.4.1.25053.2.10.1.229
ruckusSCGClusterUploadFailedTrap on page 113	.1.3.6.1.4.1.25053.2.10.1.230
ruckusSCGClusterOutOfServiceTrap on page 113	.1.3.6.1.4.1.25053.2.10.1.231
ruckusSCGClusterUploadVDPFirmwareStartTrap on page 113	.1.3.6.1.4.1.25053.2.10.1.232
ruckusSCGClusterUploadVDPFirmwareSuccessTrap on page 114	.1.3.6.1.4.1.25053.2.10.1.233
ruckusSCGClusterUploadVDPFirmwareFailedTrap on page 114	.1.3.6.1.4.1.25053.2.10.1.234
ruckusSCGIpmiVotageTrap on page 115	.1.3.6.1.4.1.25053.2.10.1.250
ruckusSCGIpmiTempBBTrap on page 115	.1.3.6.1.4.1.25053.2.10.1.251
ruckusSCGIpmiTempFPTrap on page 116	.1.3.6.1.4.1.25053.2.10.1.252
ruckusSCGIpmiTempIOHTrap on page 116	.1.3.6.1.4.1.25053.2.10.1.253
ruckusSCGIpmiTempMemPTrap on page 117	.1.3.6.1.4.1.25053.2.10.1.254
ruckusSCGIpmiTempPSTrap on page 117	.1.3.6.1.4.1.25053.2.10.1.255
ruckusSCGIpmiTempPTrap on page 118	.1.3.6.1.4.1.25053.2.10.1.256
ruckusSCGIpmiTempHSBPTrap on page 118	.1.3.6.1.4.1.25053.2.10.1.257
ruckusSCGIpmiFanTrap on page 119	.1.3.6.1.4.1.25053.2.10.1.258
ruckusSCGIpmiPowerTrap on page 119	.1.3.6.1.4.1.25053.2.10.1.259
ruckusSCGIpmiCurrentTrap on page 120	.1.3.6.1.4.1.25053.2.10.1.260
ruckusSCGIpmiFanStatusTrap on page 120	.1.3.6.1.4.1.25053.2.10.1.261
ruckusSCGIpmiPsStatusTrap on page 121	.1.3.6.1.4.1.25053.2.10.1.262
ruckusSCGIpmiDrvStatusTrap on page 121	.1.3.6.1.4.1.25053.2.10.1.263
ruckusSCGIpmiREVotageTrap on page 122	.1.3.6.1.4.1.25053.2.10.1.264
ruckusSCGIpmiRETempBBTrap on page 122	.1.3.6.1.4.1.25053.2.10.1.265
ruckusSCGIpmiRETempFPTrap on page 122	.1.3.6.1.4.1.25053.2.10.1.266
ruckusSCGIpmiRETempIOHTrap on page 123	.1.3.6.1.4.1.25053.2.10.1.267
ruckusSCGIpmiRETempMemPTrap on page 123	.1.3.6.1.4.1.25053.2.10.1.268
ruckusSCGIpmiRETempPSTrap on page 124	.1.3.6.1.4.1.25053.2.10.1.269
ruckusSCGIpmiRETempPTrap on page 124	.1.3.6.1.4.1.25053.2.10.1.270
ruckusSCGIpmiRETempHSBPTrap on page 125	.1.3.6.1.4.1.25053.2.10.1.271
ruckusSCGIpmiREFanTrap on page 125	.1.3.6.1.4.1.25053.2.10.1.272
ruckusSCGIpmiREPowerTrap on page 126	.1.3.6.1.4.1.25053.2.10.1.273
ruckusSCGIpmiRECurrentTrap on page 126	.1.3.6.1.4.1.25053.2.10.1.274
ruckusSCGIpmiREFanStatusTrap on page 126	.1.3.6.1.4.1.25053.2.10.1.275
ruckusSCGIpmiREPsStatusTrap on page 127	.1.3.6.1.4.1.25053.2.10.1.276
ruckusSCGIpmiREDrvStatusTrap on page 127	.1.3.6.1.4.1.25053.2.10.1.277
ruckusSCGFtpTransferErrorTrap on page 128	.1.3.6.1.4.1.25053.2.10.1.280
ruckuscsvFtpTransfer on page 128	.1.3.6.1.4.1.25053.2.10.1.281
ruckuscsvFtpTransferError on page 129	.1.3.6.1.4.1.25053.2.10.1.282
ruckuscsvFtpTransferMaxRetryReached on page 129	.1.3.6.1.4.1.25053.2.10.1.283
ruckuscsvDiskThresholdExceeded on page 130	.1.3.6.1.4.1.25053.2.10.1.284
ruckuscsvDiskMaxCapacityReached on page 130	.1.3.6.1.4.1.25053.2.10.1.285
csvDiskThresholdBackToNormal on page 131	.1.3.6.1.4.1.25053.2.10.1.286

Trap Name	Object Identifier
ruckusSCGSystemLBSCoconnectSuccessTrap on page 131	.1.3.6.1.4.1.25053.2.10.1.290
ruckusSCGSystemLBSCoconnectNoResponseTrap on page 132	.1.3.6.1.4.1.25053.2.10.1.291
ruckusSCGSystemLBSCoconnectAuthFailedTrap on page 132	.1.3.6.1.4.1.25053.2.10.1.292
ruckusSCGSystemLBSCoconnectFailedTrap on page 132	.1.3.6.1.4.1.25053.2.10.1.293
ruckusSCGProcessRestartTrap on page 133	.1.3.6.1.4.1.25053.2.10.1.300
ruckusSCGServiceUnavailableTrap on page 133	.1.3.6.1.4.1.25053.2.10.1.301
ruckusSCGKeepAliveFailureTrap on page 134	.1.3.6.1.4.1.25053.2.10.1.302
ruckusSCGResourceUnavailableTrap on page 134	.1.3.6.1.4.1.25053.2.10.1.304
ruckusSCGSmfRegFailedTrap on page 135	.1.3.6.1.4.1.25053.2.10.1.305
ruckusSCGHipFailoverTrap on page 135	.1.3.6.1.4.1.25053.2.10.1.306
ruckusSCGConfUpdFailedTrap on page 136	.1.3.6.1.4.1.25053.2.10.1.307
ruckusSCGConfRcvFailedTrap on page 136	.1.3.6.1.4.1.25053.2.10.1.308
ruckusSCGLostCnxnToDbladeTrap on page 137	.1.3.6.1.4.1.25053.2.10.1.309
ruckusSCGGsnRestartedTrap on page 137	.1.3.6.1.4.1.25053.2.10.1.310
ruckusSCGGsnNotReachableTrap on page 138	.1.3.6.1.4.1.25053.2.10.1.311
ruckusSCGGsnNotResolvedTrap on page 138	.1.3.6.1.4.1.25053.2.10.1.312
ruckusSCGUnknownUETrap on page 139	.1.3.6.1.4.1.25053.2.10.1.313
ruckusSCGAuthSrvrNotReachableTrap on page 139	.1.3.6.1.4.1.25053.2.10.1.314
ruckusSCGAccSrvrNotReachableTrap on page 140	.1.3.6.1.4.1.25053.2.10.1.315
ruckusSCGUnknownRealmTrap on page 140	.1.3.6.1.4.1.25053.2.10.1.316
ruckusSCGAuthFailedNonPermanentIDTrap on page 141	.1.3.6.1.4.1.25053.2.10.1.317
ruckusSCGCnxnToCgfFailedTrap on page 141	.1.3.6.1.4.1.25053.2.10.1.318
ruckusSCGCdrTransferFailedTrap on page 142	.1.3.6.1.4.1.25053.2.10.1.319
ruckusSCGCdrGenerateFailedTrap on page 142	.1.3.6.1.4.1.25053.2.10.1.320
ruckusSCGDestNotRecheableTrap on page 143	.1.3.6.1.4.1.25053.2.10.1.321
ruckusSCGAppServerDownTrap on page 143	.1.3.6.1.4.1.25053.2.10.1.324
ruckusSCGAppServerInactiveTrap on page 144	.1.3.6.1.4.1.25053.2.10.1.325
ruckusSCGAssocCantStartTrap on page 145	.1.3.6.1.4.1.25053.2.10.1.326
ruckusSCGAssocDownTrap on page 145	.1.3.6.1.4.1.25053.2.10.1.327
ruckusSCGOutboundRoutingFailedTrap on page 146	.1.3.6.1.4.1.25053.2.10.1.328
ruckusSCGDidAllocationFailureTrap on page 146	.1.3.6.1.4.1.25053.2.10.1.329
ruckusSCGPdnGwUnresolvedTrap on page 147	.1.3.6.1.4.1.25053.2.10.1.331
ruckusSCGPdnGwVersionUnsupportedTrap on page 147	.1.3.6.1.4.1.25053.2.10.1.332
ruckusSCGPdnGwAssociationDownTrap on page 148	.1.3.6.1.4.1.25053.2.10.1.333
ruckusSCGCreateSessionResponseFailedTrap on page 148	.1.3.6.1.4.1.25053.2.10.1.334
ruckusSCGDecodeFailedTrap on page 149	.1.3.6.1.4.1.25053.2.10.1.335
ruckusSCGModifyBearerResponseFailedTrap on page 149	.1.3.6.1.4.1.25053.2.10.1.336
ruckusSCGDeleteSessionResponseFailedTrap on page 150	.1.3.6.1.4.1.25053.2.10.1.337
ruckusSCGDeleteBearerRequestFailedTrap on page 150	.1.3.6.1.4.1.25053.2.10.1.338
ruckusSCGUpdateBearerRequestFailedTrap on page 151	.1.3.6.1.4.1.25053.2.10.1.339
ruckusSCGCgfServerNotConfiguredTrap on page 151	.1.3.6.1.4.1.25053.2.10.1.340
ruckusSCGTtgSessionCriticalThresholdTrap on page 152	.1.3.6.1.4.1.25053.2.10.1.342

Ruckus Event MIB
Ruckus Event Trap

Trap Name	Object Identifier
ruckusSCGTtgSessionLicenseInsufficientTrap on page 152	.1.3.6.1.4.1.25053.2.10.1.343
ruckusSCGAPacctMsgMandatoryPrmMissingTrap on page 153	.1.3.6.1.4.1.25053.2.10.1.344
ruckusSCGAcctUnknownRealmTrap on page 153	.1.3.6.1.4.1.25053.2.10.1.345
ruckusSCGAPacctMsgDecodeFailedTrap on page 154	.1.3.6.1.4.1.25053.2.10.1.346
ruckusSCGAPacctRespWhileInvalidConfigTrap on page 154	.1.3.6.1.4.1.25053.2.10.1.347
ruckusSCGAPacctMsgDropNoAcctStartMsgTrap on page 155	.1.3.6.1.4.1.25053.2.10.1.348
ruckusSCGUnauthorizedCoaDmMessageDroppedTrap on page 156	.1.3.6.1.4.1.25053.2.10.1.349
ruckusSCGConnectedToDbladeTrap on page 156	.1.3.6.1.4.1.25053.2.10.1.350
ruckusSCGDestAvailableTrap on page 157	.1.3.6.1.4.1.25053.2.10.1.351
ruckusSCGAppServerActiveTrap on page 157	.1.3.6.1.4.1.25053.2.10.1.352
ruckusSCGAssocUpTrap on page 157	.1.3.6.1.4.1.25053.2.10.1.353
ruckusSCGSessUpdatedAtDbladeTrap on page 158	.1.3.6.1.4.1.25053.2.10.1.354
ruckusSCGSessUpdateErrAtDbladeTrap on page 159	.1.3.6.1.4.1.25053.2.10.1.355
ruckusSCGSessDeletedAtDbladeTrap on page 159	.1.3.6.1.4.1.25053.2.10.1.356
ruckusSCGSessDeleteErrAtDbladeTrap on page 160	.1.3.6.1.4.1.25053.2.10.1.357
ruckusSCGLicenseSyncSuccessTrap on page 160	.1.3.6.1.4.1.25053.2.10.1.358
ruckusSCGLicenseSyncFailedTrap on page 160	.1.3.6.1.4.1.25053.2.10.1.359
ruckusSCGLicenseImportSuccessTrap on page 161	.1.3.6.1.4.1.25053.2.10.1.360
ruckusSCGLicenseImportFailedTrap on page 161	.1.3.6.1.4.1.25053.2.10.1.361
ruckusSCGSyslogServerReachableTrap on page 162	.1.3.6.1.4.1.25053.2.10.1.370
ruckusSCGSyslogServerUnreachableTrap on page 162	.1.3.6.1.4.1.25053.2.10.1.371
ruckusSCGSyslogServerSwitchedTrap on page 162	.1.3.6.1.4.1.25053.2.10.1.372
ruckusSCGAPRadiusServerReachableTrap on page 163	.1.3.6.1.4.1.25053.2.10.1.400
ruckusSCGAPRadiusServerUnreachableTrap on page 163	.1.3.6.1.4.1.25053.2.10.1.401
ruckusSCGAPLDAPServerReachableTrap on page 164	.1.3.6.1.4.1.25053.2.10.1.402
ruckusSCGAPLDAPServerUnreachableTrap on page 165	.1.3.6.1.4.1.25053.2.10.1.403
ruckusSCGAPADServerReachableTrap on page 166	.1.3.6.1.4.1.25053.2.10.1.404
ruckusSCGAPADServerUnreachableTrap on page 166	.1.3.6.1.4.1.25053.2.10.1.405
ruckusSCGAPUsbSoftwarePackageDownloadedTrap on page 167	.1.3.6.1.4.1.25053.2.10.1.406
ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap on page 168	.1.3.6.1.4.1.25053.2.10.1.407
ruckusSCGEspAuthServerReachableTrap on page 169	.1.3.6.1.4.1.25053.2.10.1.408
ruckusSCGEspAuthServerUnreachableTrap on page 169	.1.3.6.1.4.1.25053.2.10.1.409
ruckusSCGEspAuthServerResolvableTrap on page 170	.1.3.6.1.4.1.25053.2.10.1.410
ruckusSCGEspAuthServerUnResolvableTrap on page 171	.1.3.6.1.4.1.25053.2.10.1.411
ruckusSCGEspDNATServerReachableTrap on page 171	.1.3.6.1.4.1.25053.2.10.1.412
ruckusSCGEspDNATServerUnreachableTrap on page 172	.1.3.6.1.4.1.25053.2.10.1.413
ruckusSCGEspDNATServerResolvableTrap on page 173	.1.3.6.1.4.1.25053.2.10.1.414
ruckusSCGEspDNATServerUnresolvableTrap on page 173	.1.3.6.1.4.1.25053.2.10.1.415
ruckusRateLimitTORSurpassedTrap on page 174	.1.3.6.1.4.1.25053.2.10.1.500
ruckusSCGIPSecTunnelAssociatedTrap on page 175	.1.3.6.1.4.1.25053.2.10.1.600
ruckusSCGIPSecTunnelDisassociatedTrap on page 175	.1.3.6.1.4.1.25053.2.10.1.601
ruckusSCGIPSecTunnelAssociateFailedTrap on page 176	.1.3.6.1.4.1.25053.2.10.1.602

Trap Name	Object Identifier
ruckusSCGPmipProcessInitTrap on page 177	.1.3.6.1.4.1.25053.2.10.1.700
ruckusSCGPmipUnavailableTrap on page 177	.1.3.6.1.4.1.25053.2.10.1.701
ruckusSCGPmipUnallocatedMemoryTrap on page 178	.1.3.6.1.4.1.25053.2.10.1.702
ruckusSCGPmipUpdateCgffailedTrap on page 178	.1.3.6.1.4.1.25053.2.10.1.703
ruckusSCGPmipLMAIcmpUnreachableTrap on page 178	.1.3.6.1.4.1.25053.2.10.1.704
ruckusSCGPmipLMAFailOverTrap on page 179	.1.3.6.1.4.1.25053.2.10.1.705
ruckusSCGPmipBindingFailureTrap on page 179	.1.3.6.1.4.1.25053.2.10.1.706
ruckusSCGPmiplostCnxnToDHCPTrap on page 180	.1.3.6.1.4.1.25053.2.10.1.707
ruckusSCGPmipLMAIcmpReachableTrap on page 180	.1.3.6.1.4.1.25053.2.10.1.708
ruckusSCGPmipBindingSuccessTrap on page 181	.1.3.6.1.4.1.25053.2.10.1.709
ruckusSCGPmipConnectedToDHCPTrap on page 181	.1.3.6.1.4.1.25053.2.10.1.710
ruckusSCGPmipProcessStoppedTrap on page 182	.1.3.6.1.4.1.25053.2.10.1.711

NOTE

Auto clearance of SNMP trap occurs when a trap is cleared by another trap. The **Cleared by SNMP Trap** row indicates the auto clearance information. All other traps are cleared manually. The **Cleared by Matching** row contains the information that a user can use to clear the corresponding trap.

ruckusSCGSystemMiscEventTrap

TABLE 5 ruckusSCGSystemMiscEventTrap

Object Name	ruckusSCGSystemMiscEventTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.1
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventDescription ruckusSCGEventCode
Description	Generic trap triggered by administrator specified miscellaneous event. The event severity, event type, event description and event code are displayed.
Generated by Event Code	Refer to SmartZone Event Traps on page 359 - ruckusSCGSystemMiscEventTrap on page 359

ruckusSCGUpgradeSuccessTrap

TABLE 6 ruckusSCGUpgradeSuccessTrap

Object Name	ruckusSCGUpgradeSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.2
Trap Severity	Informational

TABLE 6 ruckusSCGUpgradeSuccessTrap (continued)

Object Name	ruckusSCGUpgradeSuccessTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventFirmwareVersion ruckusSCGEventUpgradedFirmwareVersion ruckusSCGEventCode
Description	Triggered by the controller upgrade success event. The event severity, event type, node name, MAC IP address, management IP address, firmware version, upgraded firmware version and event code are displayed.
Generated by Event Code	813:upgradeClusterNodeSuccess

ruckusSCGUpgradeFailedTrap

TABLE 7 ruckusSCGUpgradeFailedTrap

Object Name	ruckusSCGUpgradeFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.3
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventFirmwareVersion ruckusSCGEventUpgradedFirmwareVersion ruckusSCGEventCode
Description	Triggered by the controller upgrade failure event. The event severity, event type, firmware version, upgraded firmware version and event code are displayed.
Generated by Event Code	815:upgradeClusterFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterUpgradeSuccessTrap on page 105 (.1.3.6.1.4.1.25053.2.10.1.2.10).

ruckusSCGNodeRestartedTrap

TABLE 8 ruckusSCGNodeRestartedTrap

Object Name	ruckusSCGNodeRestartedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.4
Trap Severity	Major

TABLE 8 ruckusSCGNodeRestartedTrap (continued)

Object Name	ruckusSCGNodeRestartedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by the controller restart event. The event severity, event type, node name, MAC IP address, management IP address, restart reason and event code are displayed.
Generated by Event Code	826:nodeRebooted

ruckusSCGNodeShutdownTrap

TABLE 9 ruckusSCGNodeShutdownTrap

Object Name	ruckusSCGNodeShutdownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.5
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the controller shutdown event. The event severity, event type, node name, MAC IP address, management IP address and event code are displayed.
Generated by Event Code	828:nodeShutdown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodeRestartedTrap on page 56 (.1.3.6.1.4.1.25053.2.10.1.4)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGCPUsageThresholdExceededTrap

TABLE 10 ruckusSCGCPUsageThresholdExceededTrap

Object Name	ruckusSCGCPUsageThresholdExceededTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.6
Trap Severity	Critical

TABLE 10 ruckusSCGCPUsageThresholdExceededTrap (continued)

Object Name	ruckusSCGCPUsageThresholdExceededTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGCPUPerc ruckusSCGEventCode
Description	Triggered by the controller CPU threshold exceeded event. The usage percentage can be configured as 60% to 90%. This trap is sent if the usage percentage exceeds the configured threshold. Navigate to Configuration > SCG/vSZ-H System > Event Threshold to define CPU, threshold. The event severity, event type, node name, MAC IP address, CPU usage percentage and the event code are displayed.
Generated by Event Code	950:cpuThresholdExceeded
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGCPUsageThresholdBackToNormalTrap on page 74 (.1.3.6.1.4.1.25053.2.10.1.42)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGMemoryUsageThresholdExceededTrap

TABLE 11 ruckusSCGMemoryUsageThresholdExceededTrap

Object Name	ruckusSCGMemoryUsageThresholdExceededTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.7
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGMemoryPerc ruckusSCGEventCode
Description	Triggered by the controller memory threshold exceeded event. The usage percentage can be configured as 60% to 90%. This trap will be sent if the usage percentage exceeds the configured threshold. Navigate to Configuration > SCG /vSZ-H System > Event Threshold to define memory usage threshold. The event severity, event type, node name, MAC IP address, memory usage percent and event code are displayed.
Generated by Event Code	951:memoryThresholdExceeded
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGMemoryUsageThresholdBackToNormalTrap on page 75 (.1.3.6.1.4.1.25053.2.10.1.43)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGDiskUsageThresholdExceededTrap

TABLE 12 ruckusSCGDiskUsageThresholdExceededTrap

Object Name	ruckusSCGDiskUsageThresholdExceededTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.8
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGDiskPerc ruckusSCGEventCode
Description	Triggered when there is a controller disk usage threshold exceeded event. The usage percentage can be configured as 60% to 90%. This trap will be sent if the usage percentage exceeds the configured threshold. Navigate to Configuration > SCG/vSZ-H System > Event Threshold to define disk usage threshold. The event severity, event type, node name, MAC IP address, disk usage percent and event code are displayed.
Generated by Event Code	952:diskUsageThresholdExceeded
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDiskUsageThresholdBackToNormalTrap on page 75 (.1.3.6.1.4.1.25053.2.10.1.44)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGLicenseUsageThresholdExceededTrap

TABLE 13 ruckusSCGLicenseUsageThresholdExceededTrap

Object Name	ruckusSCGLicenseUsageThresholdExceededTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.19
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGLicenseType ruckusSCGLicenseUsagePerc ruckusSCGEventCode
Description	Triggered by the controller license usage threshold exceeded event. This trap is sent if the license usage percentage reaches or exceeds 70%. The severity will be: <ul style="list-style-type: none"> • Critical if the license usage percentage is >=90%. • Major if the license usage percentage is >=80 and <90% • Informational, if the license usage percentage is >= 70% and <80% The event severity, event type, license type, license usage percent and event code are displayed.
Generated by Event Code	960:licenseThresholdExceeded

ruckusSCGAPMiscEventTrap

TABLE 14 ruckusSCGAPMiscEventTrap

Object Name	ruckusSCGAPMiscEventTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.20
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventDescription ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Generic trap triggered by AP related miscellaneous event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP GPS coordinates, event description, AP description, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	Refer to SmartZone Event Traps on page 359 - ruckusSCGAPMiscEventTrap on page 362

ruckusSCGAPConnectedTrap

TABLE 15 ruckusSCGAPConnectedTrap

Object Name	ruckusSCGAPConnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.21
Trap Severity	Informational

TABLE 15 ruckusSCGAPConnectedTrap (continued)

Object Name	ruckusSCGAPConnectedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the n AP connected event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event reason, event code and AP IPv6 address are displayed.
Generated by Event Code	312:apConnected.

ruckusSCGAPDeletedTrap

TABLE 16 ruckusSCGAPDeletedTrap

Object Name	ruckusSCGAPDeletedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.22
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP deleted event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	313:apDeleted

ruckusSCGAPDisconnectedTrap

TABLE 17 ruckusSCGAPDisconnectedTrap

Object Name	ruckusSCGAPDisconnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.23
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by AP connection lost event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	303:apConnectionLost
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPConnectedTrap on page 60 (.1.3.6.1.4.1.25053.2.10.1.21) and ruckusSCGCriticalAPConnectedTrap on page 64 (.1.3.6.1.4.1.25053.2.10.1.26)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPLostHeartbeatTrap

TABLE 18 ruckusSCGAPLostHeartbeatTrap

Object Name	ruckusSCGAPLostHeartbeatTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.24
Trap Severity	Informational

TABLE 18 ruckusSCGAPLostHeartbeatTrap (continued)

Object Name	ruckusSCGAPLostHeartbeatTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the controller lost AP heart beat event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	314:apHeartbeatLost
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPConnectedTrap on page 60 (.1.3.6.1.4.1.25053.2.10.1.21) and ruckusSCGCriticalAPConnectedTrap on page 64 (.1.3.6.1.4.1.25053.2.10.1.26)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPRebootTrap

TABLE 19 ruckusSCGAPRebootTrap

Object Name	ruckusSCGAPRebootTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.25
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 19 ruckusSCGAPRebootTrap (continued)

Object Name	ruckusSCGAPRebootTrap
Description	Triggered by the AP reboot event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, reboot reason, event code and AP IPv6 address are displayed.
Generated by Event Code	301:apRebootByUser; 302:apRebootBySystem

ruckusSCGCriticalAPConnectedTrap

TABLE 20 ruckusSCGCriticalAPConnectedTrap

Object Name	ruckusSCGCriticalAPConnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.26
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIIPv6
Description	Triggered by critical AP connected event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, join reason, event code and AP IPv6 address are displayed.
Generated by Event Code	312:apConnected

ruckusSCGCriticalAPDisconnectedTrap

TABLE 21 ruckusSCGCriticalAPDisconnectedTrap

Object Name	ruckusSCGCriticalAPDisconnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.27
Trap Severity	Major

TABLE 21 ruckusSCGCriticalAPDisconnectedTrap (continued)

Object Name	ruckusSCGCriticalAPDisconnectedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by critical AP connection lost event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	303:apConnectionLost
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPConnectedTrap on page 64 (.1.3.6.1.4.1.25053.2.10.1.26)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPRejectedTrap

TABLE 22 ruckusSCGAPRejectedTrap

Object Name	ruckusSCGAPRejectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.28
Trap Severity	Minor
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCtrlIP ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 22 ruckusSCGAPRejectedTrap (continued)

Object Name	ruckusSCGAPRejectedTrap
Description	Triggered by the AP rejected event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, controller control IP address, reject reason, event code and AP IPv6 address are displayed.
Generated by Event Code	105:apStatusRejected
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPManagedTrap on page 74 (.1.3.6.1.4.1.25053.2.10.1.41)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPConfUpdateFailedTrap

TABLE 23 ruckusSCGAPConfUpdateFailedTrap

Object Name	ruckusSCGAPConfUpdateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.29
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAPConfigID ruckusSCGEventCode ruckusSCGEventAPIIPv6
Description	Triggered by the AP configuration update failed event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, configure ID, event code and AP IPv6 address are displayed.
Generated by Event Code	111:apConfUpdateFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPConfUpdatedTrap on page 66 (.1.3.6.1.4.1.25053.2.10.1.30)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPConfUpdatedTrap

TABLE 24 ruckusSCGAPConfUpdatedTrap

Object Name	ruckusSCGAPConfUpdatedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.30

TABLE 24 ruckusSCGAPConfUpdatedTrap (continued)

Object Name	ruckusSCGAPConfUpdatedTrap
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAPConfigID ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by AP configuration updated event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, configure ID and event code and AP IPv6 address are displayed.
Generated by Event Code	110:apConfUpdated

ruckusSCGAPSwapOutModelDiffTrap

TABLE 25 ruckusSCGAPSwapOutModelDiffTrap

Object Name	ruckusSCGAPSwapOutModelDiffTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.31
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAPModel ruckusSCGConfigAPModel ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 25 ruckusSCGAPSwapOutModelDiffTrap (continued)

Object Name	ruckusSCGAPSwapOutModelDiffTrap
Description	Triggered when the AP model is different from the imported swap AP model. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, AP mode, configure AP model, event code and AP IPv6 address are displayed.
Generated by Event Code	113:apModelDiffWithSwapOutAP

ruckusSCGAPPreProvisionModelDiffTrap

TABLE 26 ruckusSCGAPPreProvisionModelDiffTrap

Object Name	ruckusSCGAPPreProvisionModelDiffTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.32
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAPModel ruckusSCGConfigAPModel ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when the AP model is different from imported pre-provision AP model. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, AP mode, configure AP model, event code and AP IPv6 address are displayed.
Generated by Event Code	112:apModelDiffWithPreProvConfig

ruckusSCGAPDiscoveryFailTrap

TABLE 27 ruckusSCGAPDiscoveryFailTrap

Object Name	ruckusSCGAPDiscoveryFailTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.33
Trap Severity	Major

TABLE 27 ruckusSCGAPDiscoveryFailTrap (continued)

Object Name	ruckusSCGAPDiscoveryFailTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCtrlIP ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP discovery failed event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, controller control IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	102:apDiscoveryFail

ruckusSCGAPFirmwareUpdateFailedTrap

TABLE 28 ruckusSCGAPFirmwareUpdateFailedTrap

Object Name	ruckusSCGAPFirmwareUpdateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.34
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by AP firmware update failed event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	107:apFirmwareUpdateFailed

TABLE 28 ruckusSCGAPFirmwareUpdateFailedTrap (continued)

Object Name	ruckusSCGAPFirmwareUpdateFailedTrap
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPFirmwareUpdatedTrap on page 70 (.1.3.6.1.4.1.25053.2.10.1.35)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPFirmwareUpdatedTrap

TABLE 29 ruckusSCGAPFirmwareUpdatedTrap

Object Name	ruckusSCGAPFirmwareUpdatedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.35
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by AP firmware update success event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	106:apFirmwareUpdated

ruckusSCGAPWlanOversubscribedTrap

TABLE 30 ruckusSCGAPWlanOversubscribedTrap

Object Name	ruckusSCGAPWlanOversubscribedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.36
Trap Severity	Major

TABLE 30 ruckusSCGAPWlanOversubscribedTrap (continued)

Object Name	ruckusSCGAPWlanOversubscribedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode
Description	Triggered by AP WLAN mismatch event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name and event code are displayed.
Generated by Event Code	114:apWlanMismatched

ruckusSCGAPFactoryResetTrap

TABLE 31 ruckusSCGAPFactoryResetTrap

Object Name	ruckusSCGAPFactoryResetTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.37
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP factory reset event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	305:apFactoryReset

ruckusSCGCableModemDownTrap

TABLE 32 ruckusSCGCableModemDownTrap

Object Name	ruckusSCGCableModemDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.38
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP cable modem down event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	316:cableModemDown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGCableModemUpTrap on page 76 (.1.3.6.1.4.1.25053.2.10.1.45)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGCableModemRebootTrap

TABLE 33 ruckusSCGCableModemRebootTrap

Object Name	ruckusSCGCableModemRebootTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.39
Trap Severity	Informational

TABLE 33 ruckusSCGCableModemRebootTrap (continued)

Object Name	ruckusSCGCableModemRebootTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when there is an AP cable modem reboot event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	318:cmRebootByUser

ruckusSCGAPJoinZoneFailedTrap

NOTE

This trap is not applicable for vSZ-H.

TABLE 34 ruckusSCGAPJoinZoneFailedTrap

Object Name	ruckusSCGAPJoinZoneFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.40
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventTargetZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 34 ruckusSCGAPJoinZoneFailedTrap (continued)

Object Name	ruckusSCGAPJoinZoneFailedTrap
Description	Triggered when the AP failed to join the specified zone event. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, target zone name, failure reason, event code and AP IPv6 address are displayed.
Generated by Event Code	115:apJoinZoneFailed

ruckusSCGAPManagedTrap

TABLE 35 ruckusSCGAPManagedTrap

Object Name	ruckusSCGAPManagedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.41
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCtrlIP ruckusSCGEventCode
Description	Triggered when there is an AP managed event. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, control IP address and event code are displayed.
Generated by Event Code	103:apStatusManaged

ruckusSCGCPUUsageThresholdBackToNormalTrap

TABLE 36 ruckusSCGCPUUsageThresholdBackToNormalTrap

Object Name	ruckusSCGCPUUsageThresholdBackToNormalTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.42
Trap Severity	Informational

TABLE 36 ruckusSCGCPUsageThresholdBackToNormalTrap (continued)

Object Name	ruckusSCGCPUsageThresholdBackToNormalTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGCPUPerc ruckusSCGEventCode
Description	Triggered by the controller CPU threshold back to normal event. The event severity, event type, event node name, MAC address, CPU threshold percentage and event code are displayed.
Generated by Event Code	953:cpuThresholdBackToNormal

ruckusSCGMemoryUsageThresholdBackToNormalTrap

TABLE 37 ruckusSCGMemoryUsageThresholdBackToNormalTrap

Object Name	ruckusSCGMemoryUsageThresholdBackToNormalTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.43
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGMemoryPerc ruckusSCGEventCode
Description	Triggered by the controller memory threshold back to normal event. The event severity, event type, event node name, MAC address, memory threshold percentage and event code are displayed.
Generated by Event Code	954:memoryThresholdBackToNormal

ruckusSCGDiskUsageThresholdBackToNormalTrap

TABLE 38 ruckusSCGDiskUsageThresholdBackToNormalTrap

Object Name	ruckusSCGDiskUsageThresholdBackToNormalTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.44
Trap Severity	Informational

TABLE 38 ruckusSCGDiskUsageThresholdBackToNormalTrap (continued)

Object Name	ruckusSCGDiskUsageThresholdBackToNormalTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGDiskPerc ruckusSCGEventCode
Description	Triggered by the controller disk threshold back to normal event. The event severity, event type, event node name, MAC address, disk usage percentage and event code are displayed.
Generated by Event Code	955:diskUsageThresholdBackToNormal

ruckusSCGCableModemUpTrap

TABLE 39 ruckusSCGCableModemUpTrap

Object Name	ruckusSCGCableModemUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.45
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP cable model modem UP event. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	325:cableModemUp

ruckusSCGAPDiscoverySuccessTrap

TABLE 40 ruckusSCGAPDiscoverySuccessTrap

Object Name	ruckusSCGAPDiscoverySuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.46

TABLE 40 ruckusSCGAPDiscoverySuccessTrap (continued)

Object Name	ruckusSCGAPDiscoverySuccessTrap
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCtrlIP ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the AP is discovered successfully. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event control IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	101:apDiscoverySuccess

ruckusSCGCMResetByUserTrap

TABLE 41 ruckusSCGCMResetByUserTrap

Object Name	ruckusSCGCMResetByUserTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.47
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 41 ruckusSCGCMResetByUserTrap (continued)

Object Name	ruckusSCGCMResetByUserTrap
Description	Triggered by the event where the AP cable modem starts a soft reboot triggered by the user. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event reason, event code and AP IPv6 address are displayed.
Generated by Event Code	326:cmResetByUser

ruckusSCGCMResetFactoryByUserTrap

TABLE 42 ruckusSCGCMResetFactoryByUserTrap

Object Name	ruckusSCGCMResetFactoryByUserTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.48
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the AP cable modem is set to factory default by the user. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event reason, event code and AP IPv6 address are displayed.
Generated by Event Code	327:cmResetFactoryByUser

ruckusSCGMaliciousRogueAPTimeoutTrap

TABLE 43 ruckusSCGMaliciousRogueAPTimeoutTrap

Object Name	ruckusSCGMaliciousRogueAPTimeoutTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.54
Trap Severity	Informational

TABLE 43 ruckusSCGMaliciousRogueAPTimeoutTrap (continued)

Object Name	ruckusSCGMaliciousRogueAPTimeoutTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventRogueMac ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when the rogue AP disappears. The event severity, event type, rogue AP MAC IP address, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IP v6 are displayed.
Generated by Event Code	185:maliciousRogueAPTimeout

ruckusSCGAPLBSConnectSuccessTrap

TABLE 44 ruckusSCGAPLBSConnectSuccessTrap

Object Name	ruckusSCGAPLBSConnectSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.55
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when the AP successfully connect to the LS event. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, LBS server URL, LBS port, event code and AP IPv6 address

TABLE 44 ruckusSCGAPLBSConnectSuccessTrap (continued)

Object Name	ruckusSCGAPLBSConnectSuccessTrap
Generated by Event Code	703:apLBSConnectSuccess

ruckusSCGAPLBSNoResponsesTrap

TABLE 45 ruckusSCGAPLBSNoResponsesTrap

Object Name	ruckusSCGAPLBSNoResponsesTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.56
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when an event is raised since the LS fails to respond to the connecting AP. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, LBS server URL, LBS port, event code and AP IPv6 address.
Generated by Event Code	701:apLBSNoResponses

ruckusSCGAPLBSAuthFailedTrap

TABLE 46 ruckusSCGAPLBSAuthFailedTrap

Object Name	ruckusSCGAPLBSAuthFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.57
Trap Severity	Major

TABLE 46 ruckusSCGAPLBSAuthFailedTrap (continued)

Object Name	ruckusSCGAPLBSAuthFailedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the authentication failure event when the AP tries connecting to the LS. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, LBS server URL, LBS port, event code and AP IPv6 address.
Generated by Event Code	702:apLBSAuthFailed

ruckusSCGAPLBSConnectFailedTrap

TABLE 47 ruckusSCGAPLBSConnectFailedTrap

Object Name	ruckusSCGAPLBSConnectFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.58
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 47 ruckusSCGAPLBSConnectFailedTrap (continued)

Object Name	ruckusSCGAPLBSConnectFailedTrap
Description	An event is raised when the AP fails in connecting to LS. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, LBS server URL, LBS port, event code and AP IPv6 address.
Generated by Event Code	704:apLBSConnectFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPLBSConnectSuccessTrap on page 79 (.1.3.6.1.4.1.25053.2.10.1.55)
Cleared by Matching	ruckusSCGEventAPMacAddr(.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGGeneralRogueAPTrap

TABLE 48 ruckusSCGGeneralRogueAPTrap

Object Name	ruckusSCGGeneralRogueAPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.59
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventRogueMac ruckusSCGEventSSID ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when the AP detects a rogue AP classified by policy event. The event severity, event type, rogue AP MAC IP address, ssid, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, event code and AP IPv6 address are displayed.
Generated by Event Code	186:generalRogueAPDetected

ruckusSCGAPTunnelBuildFailedTrap

TABLE 49 ruckusSCGAPTunnelBuildFailedTrap

Object Name	ruckusSCGAPTunnelBuildFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.60
Trap Severity	Informational

TABLE 49 ruckusSCGAPTunnelBuildFailedTrap (continued)

Object Name	ruckusSCGAPTunnelBuildFailedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDPIP ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP build tunnel failed event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, controller DP IP address, failure reason, event code and AP IPv6 address are displayed.
Generated by Event Code	609:apBuildTunnelFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPTunnelBuildSuccessTrap on page 83 (.1.3.6.1.4.1.25053.2.10.1.61)
Cleared by Matching	ruckusSCGEventAPMacAddr(.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPTunnelBuildSuccessTrap

TABLE 50 ruckusSCGAPTunnelBuildSuccessTrap

Object Name	ruckusSCGAPTunnelBuildSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.61
Trap Severity	Informational

TABLE 50 ruckusSCGAPTunnelBuildSuccessTrap (continued)

Object Name	ruckusSCGAPTunnelBuildSuccessTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDPIP ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP build tunnel success event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, controller DP IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	608:apBuildTunnelSuccess

ruckusSCGAPTunnelDisconnectedTrap

TABLE 51 ruckusSCGAPTunnelDisconnectedTrap

Object Name	ruckusSCGAPTunnelDisconnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.62
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDPIP ruckusSCGEventReason ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 51 ruckusSCGAPTunnelDisconnectedTrap (continued)

Object Name	ruckusSCGAPTunnelDisconnectedTrap
Description	Triggered by the AP tunnel disconnected event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, controller DP IP address, failure reason, event code and AP IPv6 address are displayed.
Generated by Event Code	610:apTunnelDisconnected
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPTunnelBuildSuccessTrap on page 83 (.1.3.6.1.4.1.25053.2.10.1.61)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPSoftGRE Tunnel Failover PtoS Trap

TABLE 52 ruckusSCGAPSoftGRE Tunnel Failover PtoS Trap

Object Name	ruckusSCGAPSoftGRE Tunnel Failover PtoS Trap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.65
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusPrimaryGRE ruckusSecondaryGRE ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP SoftGRE tunnel failing over from the primary server to the secondary server event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, primary GRE gateway, secondary GRE gateway, event code and AP IPv6 address are displayed.
Generated by Event Code	611:apSoftGRE Tunnel Failover PtoS
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPSoftGREGatewayReachableTrap on page 87 (.1.3.6.1.4.1.25053.2.10.1.68)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPSoftGRE TunnelFailoverStoPTrap

TABLE 53 ruckusSCGAPSoftGRE TunnelFailoverStoPTrap

Object Name	ruckusSCGAPSoftGRE TunnelFailoverStoPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.66
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusPrimaryGRE ruckusSecondaryGRE ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the AP SoftGRE tunnel failing over from the secondary server to the primary secondary event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, primary GRE gateway, secondary GRE gateway, event code and AP IPv6 address are displayed.
Generated by Event Code	612:apSoftGRE TunnelFailoverStoP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPSoftGREGatewayReachableTrap on page 87 (.1.3.6.1.4.1.25053.2.10.1.68)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPSoftGRE GatewayNotReachableTrap

TABLE 54 ruckusSCGAPSoftGRE GatewayNotReachableTrap

Object Name	ruckusSCGAPSoftGRE GatewayNotReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.67
Trap Severity	Critical

TABLE 54 ruckusSCGAPSoftGREGatewayNotReachableTrap (continued)

Object Name	ruckusSCGAPSoftGREGatewayNotReachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSoftGREGatewayList ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered when the AP cannot ping/reach the SoftGRE gateway. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, soft GRE gateway list, event code and AP IPv6 address are displayed.
Generated by Event Code	614:apSoftGREGatewayNotReachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPSoftGREGatewayReachableTrap on page 87 (.1.3.6.1.4.1.25053.2.10.1.68)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGAPSoftGREGatewayReachableTrap

TABLE 55 ruckusSCGAPSoftGREGatewayReachableTrap

Object Name	ruckusSCGAPSoftGREGatewayNotReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.68
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGSoftGREGWAddress ruckusSCGEventCode

TABLE 55 ruckusSCGAPSoftGREGatewayReachableTrap (continued)

Object Name	ruckusSCGAPSoftGREGatewayNotReachableTrap
Description	Triggered when there is an AP SoftGRE gateway reachable event. The event severity, event type, AP name, AP MAC IP address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, soft GRE gateway address and event code are displayed.
Generated by Event Code	613:apSoftGREGatewayReachable

ruckusSCGDPCConfUpdateFailedTrap

TABLE 56 ruckusSCGDPCConfUpdateFailedTrap

Object Name	ruckusSCGDPCConfUpdateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.70
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPCKey ruckusSCGDPCConfigID ruckusSCGEventCode
Description	Triggered by the data plane configuration update failed event. The data plane can get the updated configuration settings from the control plane, but cannot apply the updated configuration changes. The event severity, event type, data plane identifier, configuration UUID and event code are displayed.
Generated by Event Code	505:dpConfUpdateFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPCConfUpdatedTrap on page 91 (.1.3.6.1.4.1.25053.2.10.1.78)
Cleared by Matching	ruckusSCGDPCKey(.1.3.6.1.4.1.25053.2.10.2.80.0)

ruckusSCGDPLostHeartbeatTrap

TABLE 57 ruckusSCGDPLostHeartbeatTrap

Object Name	ruckusSCGDPLostHeartbeatTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.71
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPCKey ruckusSCGEventCode
Description	Triggered by the data plane lost heart beat event. The event severity, event type, data plane identifier, and event code are displayed.
Generated by Event Code	507:dpLostConnection
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPCConnectedTrap on page 90 (.1.3.6.1.4.1.25053.2.10.1.76)

TABLE 57 ruckusSCGDPLostHeartbeatTrap (continued)

Object Name	ruckusSCGDPLostHeartbeatTrap
Cleared by Matching	ruckusSCGDPPKey(.1.3.6.1.4.1.25053.2.10.2.80.0)

ruckusSCGDPPDisconnectedTrap

TABLE 58 ruckusSCGDPPDisconnectedTrap

Object Name	ruckusSCGDPPDisconnectedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.72
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPPKey ruckusSCGEventCtrlIP ruckusSCGEventCode
Description	Triggered by the data plane disconnected event. The event severity, event code, event type, data plane identifier, controller control IP address and event code are displayed.
Generated by Event Code	513:dpDisconnected
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPPConnectedTrap on page 90 (.1.3.6.1.4.1.25053.2.10.1.76)
Cleared by Matching	ruckusSCGDPPKey (.1.3.6.1.4.1.25053.2.10.2.80.0)

ruckusSCGDPPPhyInterfaceDownTrap

TABLE 59 ruckusSCGDPPPhyInterfaceDownTrap

Object Name	ruckusSCGDPPPhyInterfaceDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.73
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPPKey ruckusSCGNetworkPortID ruckusSCGEventCode
Description	Triggered by the data plane physical interface detected as down event. The event severity, event type, data plane identifier, network port ID and event code are displayed.
Generated by Event Code	514:dpPhyInterfaceDown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPPPhyInterfaceUpTrap on page 91 (.1.3.6.1.4.1.25053.2.10.1.77).
Cleared by Matching	ruckusSCGDPPKey (.1.3.6.1.4.1.25053.2.10.2.80.0) ruckusSCGNetworkPortID (.1.3.6.1.4.1.25053.2.10.2.100.0)

ruckusSCGDPStatusUpdateFailedTrap

TABLE 60 ruckusSCGDPStatusUpdateFailedTrap

Object Name	ruckusSCGDPStatusUpdateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.74
Trap Severity	Minor
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the data plane status update failed event. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	510:dpUpdateStatusFailed

ruckusSCGDPStatisticUpdateFailedTrap

TABLE 61 ruckusSCGDPStatisticUpdateFailedTrap

Object Name	ruckusSCGDPStatisticUpdateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.75
Trap Severity	Minor
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the data plane update statistics failed event. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	511:dpUpdateStatisticFailed

ruckusSCGDPCONNECTEDTrap

TABLE 62 ruckusSCGDPCONNECTEDTrap

Object Name	ruckusSCGDPCONNECTEDTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.76
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCtrlIP ruckusSCGEventCode

TABLE 62 ruckusSCGDPCConnectedTrap (continued)

Object Name	ruckusSCGDPCConnectedTrap
Description	Triggered by the data plane connected event. The event severity, event type, data plane identifier, controller control IP and event code are displayed.
Generated by Event Code	512:dpConnected

ruckusSCGDPPhyInterfaceUpTrap

TABLE 63 ruckusSCGDPPhyInterfaceUpTrap

Object Name	ruckusSCGDPPhyInterfaceUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.77
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGNetworkPortID ruckusSCGEventCode
Description	Triggered by the data plane physical interface up event. The event severity, event type, data plane identifier, controller network port ID and event code are displayed.
Generated by Event Code	515:dpPhyInterfaceUp

ruckusSCGDPCConfUpdatedTrap

TABLE 64 ruckusSCGDPCConfUpdatedTrap

Object Name	ruckusSCGDPCConfUpdatedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.78
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGDPCConfID ruckusSCGEventCode
Description	Triggered by the data plane configuration updated event. The event severity, event type, data plane identifier, configuration UUID and event code are displayed.
Generated by Event Code	504:dpConfUpdated

ruckusSCGDPTunnelTearDownTrap

TABLE 65 ruckusSCGDPTunnelTearDownTrap

Object Name	ruckusSCGDPTunnelTearDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.79
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventAPMacAddr ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by the data plane tunnel tear down event. The event severity, event type, data plane identifier, AP MAC IP address, event reason and event code are displayed.
Generated by Event Code	603:dpTearDownTunnel
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPTunnelSetUpTrap on page 94 (.1.3.6.1.4.1.25053.2.10.1.85)
Cleared by Matching	ruckusSCGDPKey (.1.3.6.1.4.1.25053.2.10.2.80.0) ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGDPrebootTrap

NOTE

This trap is not applicable for vSZ-H.

TABLE 66 ruckusSCGDPrebootTrap

Object Name	ruckusSCGDPrebootTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.80
Trap Severity	Minor
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the data plane reboot event. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	506:dpReboot

ruckusSCGDPAcceptTunnelRequestTrap

TABLE 67 ruckusSCGDPAcceptTunnelRequestTrap

Object Name	ruckusSCGDPAcceptTunnelRequestTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 67 ruckusSCGDPAcceptTunnelRequestTrap (continued)

Object Name	ruckusSCGDPAcceptTunnelRequestTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.81
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventAPMacAddr ruckusSCGEventCode
Description	Triggered by the event where the data plane accepts a tunnel request from AP. The event severity, event type, data plane identifier, MAC address and event code are displayed.
Generated by Event Code	601:dpAcceptTunnelRequest

ruckusSCGDPrejectTunnelRequestTrap

TABLE 68 ruckusSCGDPrejectTunnelRequestTrap

Object Name	ruckusSCGDPrejectTunnelRequestTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.82
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventAPMacAddr ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by the event where the data plane rejects the tunnel request from AP. The event severity, event type, data plane identifier, MAC address, event reason and event code are displayed.
Generated by Event Code	602:dpRejectTunnelRequest

ruckusSCGDPSgreGWUnreachableTrap

TABLE 69 ruckusSCGDPSgreGWUnreachableTrap

Object Name	ruckusSCGDPSgreGWUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.83
Trap Severity	Informational

TABLE 69 ruckusSCGDPSgreGWUnreachableTrap (continued)

Object Name	ruckusSCGDPSgreGWUnreachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGSoftGREGWAddress ruckusSCGEventCode
Description	Triggered by the event where the data plane detects that the core network gateway is not reachable. The event severity, event type, data plane identifier, SoftGRE IP address and event code are displayed.
Generated by Event Code	615:dpSgreGWUnreachable

ruckusSCGDPSgreGWReachableTrap

TABLE 70 ruckusSCGDPSgreGWReachableTrap

Object Name	ruckusSCGDPSgreGWReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.84
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGSoftGREGWAddress ruckusSCGEventCode
Description	Triggered by the event where the data plane detects that the core network gateway is reachable. The event severity, event type, data plane identifier, SoftGRE IP address and event code are displayed.
Generated by Event Code	624:dpSgreGWReachable

ruckusSCGDPTunnelSetUpTrap

NOTE

This trap is not applicable for vSZ-H.

TABLE 71 ruckusSCGDPTunnelSetUpTrap

Object Name	ruckusSCGDPTunnelSetUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.85
Trap Severity	Informational

TABLE 71 ruckusSCGDPTunnelSetUpTrap (continued)

Object Name	ruckusSCGDPTunnelSetUpTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventAPMacAddr ruckusSCGEventCode
Description	Triggered by data plane tunnel set up event. The event severity, event type, data plane identifier, AP MAC address and event code are displayed.
Generated by Event Code	627:dpSetUpTunnel

ruckusSCGDPDiscoverySuccessTrap

TABLE 72 ruckusSCGDPDiscoverySuccessTrap

Object Name	ruckusSCGDPDiscoverySuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.86
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCtrlIP ruckusSCGEventCode
Description	Triggered by the event where the data plane is successfully discovered. The event severity, event type, data plane identifier, controller event IP address and event code are displayed.
Generated by Event Code	501:dpDiscoverySuccess

ruckusSCGDPDiscoveryFailTrap

TABLE 73 ruckusSCGDPDiscoveryFailTrap

Object Name	ruckusSCGDPDiscoveryFailTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.87
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCtrlIP ruckusSCGEventCode
Description	Triggered by the event where it fails to discover the data plane. The event severity, event type, data plane identifier, controller event IP address and event code are displayed.

TABLE 73 ruckusSCGDPSDiscoveryFailTrap (continued)

Object Name	ruckusSCGDPSDiscoveryFailTrap
Generated by Event Code	502:dpDiscoveryFail

ruckusSCGDPSgreGWInactTrap

TABLE 74 ruckusSCGDPSgreGWInactTrap

Object Name	ruckusSCGDPSgreGWInactTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.88
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGSoftGREGWAddress ruckusSCGEventCode
Description	Triggered by the event where the data plane fails to detect that the core network gateway is inactive. The event severity, event type, data plane identifier, SoftGRE GW IP address and event code are displayed.
Generated by Event Code	617:dpSgreGWInact

ruckusSCGDPSgreGWActTrap

TABLE 75 ruckusSCGDPSgreGWActTrap

Object Name	ruckusSCGDPSgreGWActTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.89
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGSoftGREGWAddress ruckusSCGEventCode
Description	Triggered by the event where the data plane detect that the core network gateway is active. The event severity, event type, data plane identifier, SoftGRE GW IP address and event code are displayed.
Generated by Event Code	625:dpSgreGWAct

ruckusSCGDPPktPoolLowTrap

TABLE 76 ruckusSCGDPPktPoolLowTrap

Object Name	ruckusSCGDPPktPoolLowTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 76 ruckusSCGDPPktPoolLowTrap (continued)

Object Name	ruckusSCGDPPktPoolLowTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.90
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPPKey ruckusSCGDPPacketPoolID ruckusSCGEventCode
Description	Triggered by the event where the data core packet pool is below the low water mark. The event severity, event type, data plane identifier, controller data plane packet pool identifier and event code are displayed.
Generated by Event Code	516:dpPktPoolLow
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPPktPoolRecoverTrap on page 97 (.1.3.6.1.4.1.25053.2.10.1.92)
Cleared by Matching	ruckusSCGDPPKey (.1.3.6.1.4.1.25053.2.10.2.80.0) ruckusSCGDPPacketPoolID (.1.3.6.1.4.1.25053.2.10.2.83.0)

ruckusSCGDPPktPoolCriticalLowTrap

TABLE 77 ruckusSCGDPPktPoolCriticalLowTrap

Object Name	ruckusSCGDPPktPoolCriticalLowTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.91
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPPKey ruckusSCGDPPacketPoolID ruckusSCGEventCode
Description	Triggered by the event where the data core packet pool is below the critical low water threshold mark. The event severity, event type, data plane identifier, controller data plane packet pool ID and event code are displayed.
Generated by Event Code	517:dpPktPoolCriticalLow

ruckusSCGDPPktPoolRecoverTrap

TABLE 78 ruckusSCGDPPktPoolRecoverTrap

Object Name	ruckusSCGDPPktPoolRecoverTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.92
Trap Severity	Informational

TABLE 78 ruckusSCGDPPktPoolRecoverTrap (continued)

Object Name	ruckusSCGDPPktPoolRecoverTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGDPPacketPoolID ruckusSCGEventCode
Description	Triggered by the event where the data core packet pool is above the high water threshold mark. The event severity, event type, data plane identifier, controller data plane packet pool ID and event code are displayed.
Generated by Event Code	518:dpPktPoolRecover

ruckusSCGDPCoreDeadTrap

TABLE 79 ruckusSCGDPCoreDeadTrap

Object Name	ruckusSCGDPCoreDeadTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.93
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event where there are one or multiple data core packets that are dropped / dead. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	519:dpCoreDead

ruckusSCGDPDeletedTrap

TABLE 80 ruckusSCGDPDeletedTrap

Object Name	ruckusSCGDPDeletedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.94
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event where data plane is deleted. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	537:dpDeleted

ruckusSCGDPUpgradeStartTrap

TABLE 81 ruckusSCGDPUpgradeStartTrap

Object Name	ruckusSCGDPUpgradeStartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.95
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event of data plane starting the upgrade process. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	550:dpUpgradeStart

ruckusSCGDPUpgradingTrap

TABLE 82 ruckusSCGDPUpgradingTrap

Object Name	ruckusSCGDPUpgradingTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.96
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event when data plane starts the upgrade program and configuration. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	551:dpUpgrading

ruckusSCGDPUpgradeSuccessTrap

TABLE 83 ruckusSCGDPUpgradeSuccessTrap

Object Name	ruckusSCGDPUpgradeSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.97
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event of data plane upgrade being successful. The event severity, event type, data plane identifier and event code are displayed.

TABLE 83 ruckusSCGDPUpgradeSuccessTrap (continued)

Object Name	ruckusSCGDPUpgradeSuccessTrap
Generated by Event Code	552:dpUpgradeSucces

ruckusSCGDPUpgradeFailedTrap

TABLE 84 ruckusSCGDPUpgradeFailedTrap

Object Name	ruckusSCGDPUpgradeFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.98
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDPKey ruckusSCGEventCode
Description	Triggered by the event of data plane upgrade failing. The event severity, event type, data plane identifier and event code are displayed.
Generated by Event Code	553:dpUpgradeFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDPUpgradeSuccessTrap on page 99 (.1.3.6.1.4.1.25053.2.10.1.97)
Cleared by Matching	ruckusSCGDPKey (.1.3.6.1.4.1.25053.2.10.2.80.0)

ruckusSCGClientMiscEventTrap

TABLE 85 ruckusSCGClientMiscEventTrap

Object Name	ruckusSCGClientMiscEventTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.100
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventClientMacAddr ruckusSCGEventDescription ruckusSCGEventCode
Description	Generic trap triggered by specified client related miscellaneous event. The event severity, event type, client MAC address, event description and event code are displayed.
Generated by Event Code	Refer to appendix SmartZone Event Traps on page 359 - ruckusSCGClientMiscEventTrap on page 363

ruckusSCGNodeJoinFailedTrap

TABLE 86 ruckusSCGNodeJoinFailedTrap

Object Name	ruckusSCGNodeJoinFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.200
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by new node failing to join event. The event severity, event type, node name, node MAC IP address, cluster name and event code are displayed.
Generated by Event Code	803:newNodeJoinFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodeJoinSuccessTrap on page 108 (.1.3.6.1.4.1.25053.2.10.1.218)
Cleared by Matching	ruckusSCGEventMacAddr(.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGNodeRemoveFailedTrap

TABLE 87 ruckusSCGNodeRemoveFailedTrap

Object Name	ruckusSCGNodeRemoveFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.201
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by remove node failed event. The event severity, event type, node name, node MAC IP address, cluster name and event code are displayed.
Generated by Event Code	805:removeNodeFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodeRemoveSuccessTrap on page 108 (.1.3.6.1.4.1.25053.2.10.1.220)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGNodeOutOfServiceTrap

TABLE 88 ruckusSCGNodeOutOfServiceTrap

Object Name	ruckusSCGNodeOutOfServiceTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.202
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by node out of service event. The event severity, event type, node name, node MAC IP address, cluster name and event code are displayed.
Generated by Event Code	806:nodeOutOfService
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodeBackToInServiceTrap on page 109 (.1.3.6.1.4.1.25053.2.10.1.222)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGClusterInMaintenanceStateTrap

TABLE 89 ruckusSCGClusterInMaintenanceStateTrap

Object Name	ruckusSCGClusterInMaintenanceStateTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.203
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered when a cluster is put into maintenance state event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	807:clusterInMaintenanceState
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterBackToInServiceTrap on page 107 (.1.3.6.1.4.1.25053.2.10.1.216)

ruckusSCGClusterBackupFailedTrap

TABLE 90 ruckusSCGClusterBackupFailedTrap

Object Name	ruckusSCGClusterBackupFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.204

TABLE 90 ruckusSCGClusterBackupFailedTrap (continued)

Object Name	ruckusSCGClusterBackupFailedTrap
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered when a cluster failed to create a backup event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	810:backupClusterFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGBackupClusterSuccessTrap on page 107 (.1.3.6.1.4.1.25053.2.10.1.217)

ruckusSCGClusterRestoreFailedTrap

TABLE 91 ruckusSCGClusterRestoreFailedTrap

Object Name	ruckusSCGClusterRestoreFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.205
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered when a cluster failed to restore a backup event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	812:restoreClusterFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterRestoreSuccessTrap on page 109 (.1.3.6.1.4.1.25053.2.10.1.221)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGClusterAppStoppedTrap

TABLE 92 ruckusSCGClusterAppStoppedTrap

Object Name	ruckusSCGClusterAppStoppedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.206
Trap Severity	Critical

TABLE 92 ruckusSCGClusterAppStoppedTrap (continued)

Object Name	ruckusSCGClusterAppStoppedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessName ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when an application has stopped running/functioning. The event severity, event type, application name, controller node name, node MAC IP address and event code are displayed.
Generated by Event Code	816:clusterAppStop
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterAppStartTrap on page 108 (.1.3.6.1.4.1.25053.2.10.1.219)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGProcessName (.1.3.6.1.4.1.25053.2.10.2.11.0)

ruckusSCGNodeBondInterfaceDownTrap

TABLE 93 ruckusSCGNodeBondInterfaceDownTrap

Object Name	ruckusSCGNodeBondInterfaceDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.207
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGNetworkInterface ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by node bond interface down event. The event severity, event type, network interface, controller node name, node MAC IP address and event code are displayed.
Generated by Event Code	821:nodeBondInterfaceDown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodeBondInterfaceUpTrap on page 106 (.1.3.6.1.4.1.25053.2.10.1.211)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGNetworkInterface (.1.3.6.1.4.1.25053.2.10.2.101.0)

ruckusSCGNodePhyInterfaceDownTrap

TABLE 94 ruckusSCGNodePhyInterfaceDownTrap

Object Name	ruckusSCGNodePhyInterfaceDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 94 ruckusSCGNodePhyInterfaceDownTrap (continued)

Object Name	ruckusSCGNodePhyInterfaceDownTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.208
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGNetworkInterface ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by node physical interface down event. The event severity, event type, network interface, controller node name, node MAC IP address and event code are displayed.
Generated by Event Code	824:nodePhyInterfaceDown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGNodePhyInterfaceUpTrap on page 106 (.1.3.6.1.4.1.25053.2.10.1.212)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGNetworkInterface (.1.3.6.1.4.1.25053.2.10.2.101.0)

ruckusSCGClusterLeaderChangedTrap

TABLE 95 ruckusSCGClusterLeaderChangedTrap

Object Name	ruckusSCGClusterLeaderChangedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.209
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by cluster leader changed event. The event severity, event type, controller node name, node MAC address, cluster name and event code are displayed.
Generated by Event Code	820:clusterLeaderChanged

ruckusSCGClusterUpgradeSuccessTrap

TABLE 96 ruckusSCGClusterUpgradeSuccessTrap

Object Name	ruckusSCGClusterUpgradeSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.210
Trap Severity	Informational

TABLE 96 ruckusSCGClusterUpgradeSuccessTrap (continued)

Object Name	ruckusSCGClusterUpgradeSuccessTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventFirmwareVersion ruckusSCGEventUpgradedFirmwareVersion ruckusSCGEventCode
Description	Triggered when the entire cluster has been successfully upgraded. The event severity, event type, cluster name, firmware version, upgraded firmware version and event code are displayed.
Generated by Event Code	814:upgradeEntireClusterSuccess

ruckusSCGNodeBondInterfaceUpTrap

TABLE 97 ruckusSCGNodeBondInterfaceUpTrap

Object Name	ruckusSCGNodeBondInterfaceUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.211
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGNetworkInterface ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by node bond interface up event. The event severity, event type, network interface, controller node name, controller MAC IP address and event code are displayed.
Generated by Event Code	822:nodeBondInterfaceUp

ruckusSCGNodePhyInterfaceUpTrap

TABLE 98 ruckusSCGNodePhyInterfaceUpTrap

Object Name	ruckusSCGNodePhyInterfaceUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.212
Trap Severity	Informational

TABLE 98 ruckusSCGNodePhyInterfaceUpTrap (continued)

Object Name	ruckusSCGNodePhyInterfaceUpTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGNetworkInterface ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by node physical interface up event. The event severity, event type, network interface, controller node name, controller MAC IP address and event code are displayed.
Generated by Event Code	825:nodePhyInterfaceUp

ruckusSCGClusterBackToInServiceTrap

TABLE 99 ruckusSCGClusterBackToInServiceTrap

Object Name	ruckusSCGClusterBackToInServiceTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.216
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGNetworkInterface ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when a cluster is back in service. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	808:clusterBackToInService

ruckusSCGBackupClusterSuccessTrap

TABLE 100 ruckusSCGBackupClusterSuccessTrap

Object Name	ruckusSCGBackupClusterSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.217
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by backup cluster success event. The event severity, event type, cluster name and event code are displayed.

TABLE 100 ruckusSCGBackupClusterSuccessTrap (continued)

Object Name	ruckusSCGBackupClusterSuccessTrap
Generated by Event Code	809:backupClusterSuccess

ruckusSCGNodeJoinSuccessTrap

TABLE 101 ruckusSCGNodeJoinSuccessTrap

Object Name	ruckusSCGNodeJoinSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.218
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by new node join success event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	802:newNodeJoinSuccess

ruckusSCGClusterAppStartTrap

TABLE 102 ruckusSCGClusterAppStartTrap

Object Name	ruckusSCGClusterAppStartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.219
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessName ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when a cluster application starts. The event severity, event type, application name, controller node name, node MAC address and event code are displayed.
Generated by Event Code	817:clusterAppStart

ruckusSCGNodeRemoveSuccessTrap

TABLE 103 ruckusSCGNodeRemoveSuccessTrap

Object Name	ruckusSCGNodeRemoveSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.220

TABLE 103 ruckusSCGNodeRemoveSuccessTrap (continued)

Object Name	ruckusSCGNodeRemoveSuccessTrap
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by successful removal of a node. The event severity, event type, controller node name, node MAC address, cluster name and event code are displayed.
Generated by Event Code	804:removeNodeSuccess

ruckusSCGClusterRestoreSuccessTrap

TABLE 104 ruckusSCGClusterRestoreSuccessTrap

Object Name	ruckusSCGClusterRestoreSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.221
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered when a cluster has been successfully restored. The event severity, event type, controller node name, node MAC address, cluster name and event code are displayed.
Generated by Event Code	811:restoreClusterSuccess

ruckusSCGNodeBackToInServiceTrap

TABLE 105 ruckusSCGNodeBackToInServiceTrap

Object Name	ruckusSCGNodeBackToInServiceTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.222
Trap Severity	Informational

TABLE 105 ruckusSCGNodeBackToInServiceTrap (continued)

Object Name	ruckusSCGNodeBackToInServiceTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by node back to in service event. The event severity, event type, controller node name, node MAC address, cluster name and event code are displayed.
Generated by Event Code	835:nodeBackToInService

ruckusSCGSshTunnelSwitchedTrap

TABLE 106 ruckusSCGSshTunnelSwitchedTrap

Object Name	ruckusSCGSshTunnelSwitchedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.223
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventMacAddr ruckusSCGClusterName ruckusSCGSwitchStatus ruckusSCGEventCode
Description	Triggered by SSH tunnel switched event. The event severity, event type, controller node name, node MAC address, cluster name, switch status and event code are displayed.
Generated by Event Code	833:sshTunnelSwitched

ruckusSCGClusterCfgBackupStartTrap

TABLE 107 ruckusSCGClusterCfgBackupStartTrap

Object Name	ruckusSCGClusterCfgBackupStartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.224
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode

TABLE 107 ruckusSCGClusterCfgBackupStartTrap (continued)

Object Name	ruckusSCGClusterCfgBackupStartTrap
Description	Triggered by configuration backup start event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	860:clusterCfgBackupStart

ruckusSCGClusterCfgBackupSuccessTrap

TABLE 108 ruckusSCGClusterCfgBackupSuccessTrap

Object Name	ruckusSCGClusterCfgBackupSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.225
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by successful configuration backup event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	861:clusterCfgBackupSuccess

ruckusSCGClusterCfgBackupFailedTrap

TABLE 109 ruckusSCGClusterCfgBackupFailedTrap

Object Name	ruckusSCGClusterCfgBackupFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.226
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by failed configuration backup event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	862:clusterCfgBackupFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterCfgBackupSuccessTrap on page 111 (.1.3.6.1.4.1.25053.2.10.1.225)

ruckusSCGClusterCfgRestoreSuccessTrap

TABLE 110 ruckusSCGClusterCfgRestoreSuccessTrap

Object Name	ruckusSCGClusterCfgRestoreSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 110 ruckusSCGClusterCfgRestoreSuccessTrap (continued)

Object Name	ruckusSCGClusterCfgRestoreSuccessTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.227
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by successful configuration restoration event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	863:clusterCfgRestoreSuccess

ruckusSCGClusterCfgRestoreFailedTrap

TABLE 111 ruckusSCGClusterCfgRestoreFailedTrap

Object Name	ruckusSCGClusterCfgRestoreFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.228
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by failed configuration restoration event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	864:clusterCfgRestoreFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterCfgRestoreSuccessTrap on page 111 (.1.3.6.1.4.1.25053.2.10.1.227)

ruckusSCGClusterUploadSuccessTrap

TABLE 112 ruckusSCGClusterUploadSuccessTrap

Object Name	ruckusSCGClusterUploadSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.229
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by successful cluster upload event. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	831:uploadClusterSuccess

ruckusSCGClusterUploadFailedTrap

TABLE 113 ruckusSCGClusterUploadFailedTrap

Object Name	ruckusSCGClusterUploadFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.230
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by failed cluster upload event. The event severity, event type, cluster name, reason and event code are displayed.
Generated by Event Code	832:uploadClusterFailed

ruckusSCGClusterOutOfServiceTrap

TABLE 114 ruckusSCGClusterOutOfServiceTrap

Object Name	ruckusSCGClusterOutOfServiceTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.231
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by the event when the cluster is out of service. The event severity, event type, cluster name, reason and event code are displayed.
Generated by Event Code	843:clusterOutOfService
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGClusterBackToInServiceTrap on page 107 (.1.3.6.1.4.1.25053.2.10.1.216)

ruckusSCGClusterUploadVDPFirmwareStartTrap

TABLE 115 ruckusSCGClusterUploadVDPFirmwareStartTrap

Object Name	ruckusSCGClusterUploadVDPFirmwareStartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.232
Trap Severity	Informational

TABLE 115 ruckusSCGClusterUploadVDPFirmwareStartTrap (continued)

Object Name	ruckusSCGClusterUploadVDPFirmwareStartTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by the event when the when the cluster starts and uploads virtual data plane. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	845:clusterUploadVDPFirmwareStart

ruckusSCGClusterUploadVDPFirmwareSuccessTrap

TABLE 116 ruckusSCGClusterUploadVDPFirmwareSuccessTrap

Object Name	ruckusSCGClusterUploadVDPFirmwareSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.233
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventCode
Description	Triggered by the event when cluster uploads the virtual data plane firmware is successful. The event severity, event type, cluster name and event code are displayed.
Generated by Event Code	846:uploadClusterVDPFirmwareSuccess

ruckusSCGClusterUploadVDPFirmwareFailedTrap

TABLE 117 ruckusSCGClusterUploadVDPFirmwareFailedTrap

Object Name	ruckusSCGClusterUploadVDPFirmwareFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.234
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGClusterName ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by the event when cluster uploads the virtual data plane firmware fails. The event severity, event type, cluster name, reason and event code are displayed.
Generated by Event Code	847:uploadClusterVDPFirmwareFailed

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.250 to .1.3.6.1.4.1.25053.2.11.1.277 are not applicable for vSZ-H.

ruckusSCGIpmiVotageTrap

TABLE 118 ruckusSCGIpmiVotageTrap

Object Name	ruckusSCGIpmiVotageTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.250
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by baseboard voltage event. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed. Note: The temperature status is based on the event 902 - Baseboard temperature <code>[[status]]</code> on control plane <code>[[nodeMac]]</code> .
Generated by Event Code	901:ipmiVotage
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREVotageTrap on page 122 (.1.3.6.1.4.1.25053.2.10.1.264)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGIpmiTempBBTrap

TABLE 119 ruckusSCGIpmiTempBBTrap

Object Name	ruckusSCGIpmiTempBBTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.251
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by baseboard temperature event. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	902:ipmiThempBB
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempBBTrap on page 122 (.1.3.6.1.4.1.25053.2.10.1.265)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGIpmiTempFPTrap

TABLE 120 ruckusSCGIpmiTempFPTrap

Object Name	ruckusSCGIpmiTempFPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.252
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when the front panel temperature. This is based on the temperature status and controller node MAC details. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	903:ipmiThempFP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempFPTrap on page 122 (.1.3.6.1.4.1.25053.2.10.1.266).
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGIpmiTempIOHTrap

TABLE 121 ruckusSCGIpmiTempIOHTrap

Object Name	ruckusSCGIpmiTempIOHTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.253
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by chipset temperature event. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	904:ipmiThempIOH
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempIOHTrap on page 123 (.1.3.6.1.4.1.25053.2.10.1.267)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGIpmiTempMemPTrap

TABLE 122 ruckusSCGIpmiTempMemPTrap

Object Name	ruckusSCGIpmiTempMemPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.254
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessorId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by processor memory temperature event. The event severity, event type, processor ID, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	905:ipmiThempMemP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempMemPTrap on page 123 (.1.3.6.1.4.1.25053.2.10.1.268)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGProcessorId (.1.3.6.1.4.1.25053.2.10.2.121.0)

ruckusSCGIpmiTempPSTrap

TABLE 123 ruckusSCGIpmiTempPSTrap

Object Name	ruckusSCGIpmiTempPSTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.255
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by power supply temperature event. The event severity, event type, controller node name, power supply id, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	906:ipmiThempPS
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempPSTrap on page 124 (.1.3.6.1.4.1.25053.2.10.1.269)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGPsId (.1.3.6.1.4.1.25053.2.10.2.124.0)

ruckusSCGIpmiTempPTrap

TABLE 124 ruckusSCGIpmiTempPTrap

Object Name	ruckusSCGIpmiTempPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.256
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessorId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by processor temperature event. The event severity, event type, processor ID, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	907:ipmiThempP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempPTrap on page 124 (.1.3.6.1.4.1.25053.2.10.1.270)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGProcessorId (.1.3.6.1.4.1.25053.2.10.2.121.0)

ruckusSCGIpmiTempHSBPTrap

TABLE 125 ruckusSCGIpmiTempHSBPTrap

Object Name	ruckusSCGIpmiTempHSBPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.257
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by hot swap backplane temperature event. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	908:ipmiThempHSBP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRETempHSBPTrap on page 125 (.1.3.6.1.4.1.25053.2.10.1.271)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGIpmiFanTrap

TABLE 126 ruckusSCGIpmiFanTrap

Object Name	ruckusSCGIpmiFanTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.258
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGFanId ruckusSCGFanStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when the system fan fails. The event severity, event type, fan id, fan status, controller node MAC IP address and event code are displayed.
Generated by Event Code	909:ipmiFan
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREFanTrap on page 125 (.1.3.6.1.4.1.25053.2.10.1.272)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGFanId (.1.3.6.1.4.1.25053.2.10.2.122.0)

ruckusSCGIpmiPowerTrap

TABLE 127 ruckusSCGIpmiPowerTrap

Object Name	ruckusSCGIpmiPowerTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.259
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by power supply input event. The event severity, event type, power supply ID, power supply status, controller node MAC IP address and event code are displayed.
Generated by Event Code	910:ipmiPower
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREPowerTrap on page 126 (.1.3.6.1.4.1.25053.2.10.1.273)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGPsId (.1.3.6.1.4.1.25053.2.10.2.124.0)

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.250 to .1.3.6.1.4.1.25053.2.11.1.277 are not applicable for vSZ-H.

ruckusSCGIpmiCurrentTrap

TABLE 128 ruckusSCGIpmiCurrentTrap

Object Name	ruckusSCGIpmiCurrentTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.260
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by power supply current output [is too high >1A or is too low <0.5] event. The event severity, event type, power supply ID, power supply status, controller node MAC IP address and event code are displayed.
Generated by Event Code	911:ipmiCurrent
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiRECurrentTrap on page 126 (.1.3.6.1.4.1.25053.2.10.1.274)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGPsId (.1.3.6.1.4.1.25053.2.10.2.124.0)

ruckusSCGIpmiFanStatusTrap

TABLE 129 ruckusSCGIpmiFanStatusTrap

Object Name	ruckusSCGIpmiFanStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.261
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGFanId ruckusSCGFanStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by fan module event. The event severity, event type, fan id, fan status, controller node MAC IP address and event code are displayed.
Generated by Event Code	912:ipmiFanStatus
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREFanStatusTrap on page 126 (.1.3.6.1.4.1.25053.2.10.1.275)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGFanId (.1.3.6.1.4.1.25053.2.10.2.122.0)

ruckusSCGIpmiPsStatusTrap

TABLE 130 ruckusSCGIpmiPsStatusTrap

Object Name	ruckusSCGIpmiPsStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.262
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the power supply event. The event severity, event type, power supply ID and status, controller node MAC IP address and event code are displayed.
Generated by Event Code	913:ipmiPsStatus
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREPsStatusTrap on page 127 (.1.3.6.1.4.1.25053.2.10.1.276)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGPsId (.1.3.6.1.4.1.25053.2.10.2.124.0)

ruckusSCGIpmiDrvStatusTrap

TABLE 131 ruckusSCGIpmiDrvStatusTrap

Object Name	ruckusSCGIpmiDrvStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.263
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDrvId ruckusSCGDrvStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by disk drive event. The event severity, event type, disk drive id, disk drive status, controller node MAC IP address and event code are displayed.
Generated by Event Code	914:ipmiDrvStatus
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIpmiREDrvStatusTrap on page 127 (.1.3.6.1.4.1.25053.2.10.1.277)
Cleared by Matching	ruckusSCGEventMacAddr (.1.3.6.1.4.1.25053.2.10.2.20.0) ruckusSCGDrvId (.1.3.6.1.4.1.25053.2.10.2.126.0)

ruckusSCGIpmiREVotageTrap

TABLE 132 ruckusSCGIpmiREVotageTrap

Object Name	ruckusSCGIpmiREVotageTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.264
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the voltage status recovers to normal condition. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	926:ipmiREVotage

ruckusSCGIpmiRETempBBTrap

TABLE 133 ruckusSCGIpmiRETempBBTrap

Object Name	ruckusSCGIpmiRETempBBTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.265
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the base board temperature status recovers to normal condition. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	927:ipmiREThempBB

ruckusSCGIpmiRETempFPTrap

TABLE 134 ruckusSCGIpmiRETempFPTrap

Object Name	ruckusSCGIpmiRETempFPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.266
Trap Severity	Informational

TABLE 134 ruckusSCGIpmiRETempFPTrap (continued)

Object Name	ruckusSCGIpmiRETempFPTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the front panel temperature status recovers to normal condition. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	928:ipmiREThempFP

ruckusSCGIpmiRETempIOHTrap

TABLE 135 ruckusSCGIpmiRETempIOHTrap

Object Name	ruckusSCGIpmiRETempIOHTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.267
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the chip set temperature status recovers to normal condition. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	929:ipmiREThempIOH

ruckusSCGIpmiRETempMemPTrap

TABLE 136 ruckusSCGIpmiRETempMemPTrap

Object Name	ruckusSCGIpmiRETempMemPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.268
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessorId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode

TABLE 136 ruckusSCGIpmiRETempMemPTrap (continued)

Object Name	ruckusSCGIpmiRETempMemPTrap
Description	Triggered by the event where the processor memory temperature status recovers to normal condition. The event severity, event type, processor ID, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	930:ipmiREThempMemP

ruckusSCGIpmiRETempPSTrap

TABLE 137 ruckusSCGIpmiRETempPSTrap

Object Name	ruckusSCGIpmiRETempPSTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.269
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the power supply temperature status recovers to normal condition. The event severity, event type, power supply ID, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	931:ipmiREThempPS

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.250 to .1.3.6.1.4.1.25053.2.11.1.277 are not applicable for vSZ-H.

ruckusSCGIpmiRETempPTrap

TABLE 138 ruckusSCGIpmiRETempPTrap

Object Name	ruckusSCGIpmiRETempPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.270
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessorId ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the processor temperature status recovers to normal condition. The event severity, event type, processor ID, temperature status, controller node MAC IP address and event code are displayed.

TABLE 138 ruckusSCGIpmiRETempPTrap (continued)

Object Name	ruckusSCGIpmiRETempPTrap
Generated by Event Code	932:ipmiREThempP

ruckusSCGIpmiRETempHSBPTrap

TABLE 139 ruckusSCGIpmiRETempHSBPTrap

Object Name	ruckusSCGIpmiRETempHSBPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.271
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGTemperatureStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the hot swap backplane temperature status recovers to normal condition. The event severity, event type, temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	933:ipmiREThempHSBP

ruckusSCGIpmiREFanTrap

TABLE 140 ruckusSCGIpmiREFanTrap

Object Name	ruckusSCGIpmiREFanTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.272
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGFanId ruckusSCGFanStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where the system fan module status recovers to normal condition. The event severity, event type, fan ID, fan temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	934:ipmiREFan

ruckusSCGIpmiREPowerTrap

TABLE 141 ruckusSCGIpmiREPowerTrap

Object Name	ruckusSCGIpmiREPowerTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.273
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where power supply AC input status recovers to normal condition. The event severity, event type, power supply ID, power supply temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	935:ipmiREPower

ruckusSCGIpmiRECurrentTrap

TABLE 142 ruckusSCGIpmiRECurrentTrap

Object Name	ruckusSCGIpmiRECurrentTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.274
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where power supply and the maximum voltage output status recovers to normal condition. The event severity, event type, power supply ID, power supply temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	936:ipmiRECurrent

ruckusSCGIpmiREFanStatusTrap

TABLE 143 ruckusSCGIpmiREFanStatusTrap

Object Name	ruckusSCGIpmiREFanStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.275

TABLE 143 ruckusSCGIpmiREFanStatusTrap (continued)

Object Name	ruckusSCGIpmiREFanStatusTrap
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGFanId ruckusSCGFanStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where fan module status recovers to normal condition. The event severity, event type, fan ID, fan temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	937:ipmiREFanStatus

ruckusSCGIpmiREPsStatusTrap

TABLE 144 ruckusSCGIpmiREPsStatusTrap

Object Name	ruckusSCGIpmiREPsStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.276
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPsId ruckusSCGPsStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where power supply status recovers to normal condition. The event severity, event type, power supply ID, power supply temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	938:ipmiREPsStatus

ruckusSCGIpmiREDrvStatusTrap

TABLE 145 ruckusSCGIpmiREDrvStatusTrap

Object Name	ruckusSCGIpmiREDrvStatusTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.277
Trap Severity	Informational

TABLE 145 ruckusSCGIpmiREDrvStatusTrap (continued)

Object Name	ruckusSCGIpmiREDrvStatusTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGDrvid ruckusSCGDrvStatus ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event where disk drive status recovers to normal condition. The event severity, event type, disk drive ID, disk drive temperature status, controller node MAC IP address and event code are displayed.
Generated by Event Code	939:ipmiREDrvStatus

ruckusSCGFtpTransferErrorTrap

TABLE 146 ruckusSCGFtpTransferErrorTrap

Object Name	ruckusSCGFtpTransferErrorTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.280
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGFtpIp ruckusSCGFtpPort ruckusSCGFileName ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by FTP transfer error event. The event severity, event type, FTP server IP address, FTP server port, file name, controller node MAC IP address and event code are displayed.
Generated by Event Code	971:ftpTransferError

ruckuscsvFtpTransfer

TABLE 147 ruckuscsvFtpTransfer

Object Name	ruckuscsvFtpTransfer
Parent Node	ruckusSCGEventObjects
Object Identifier	1.3.6.1.4.1.25053.2.10.1.281
Trap Severity	Informational

TABLE 147 ruckuscsvFtpTransfer (continued)

Object Name	ruckuscsvFtpTransfer
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGFtp ruckusSCGFtpPort ruckusSCGFileName ruckusSCGEventNodeName
Description	This event occurs when CSV export file transfer to FTP server is successful.
Generated by Event Code	972

ruckuscsvFtpTransferError

TABLE 148 ruckuscsvFtpTransferError

Object Name	csvFtpTransferError
Parent Node	ruckusSCGEventObjects
Object Identifier	1.3.6.1.4.1.25053.2.10.1.282
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGFtp ruckusSCGFtpPort ruckusSCGFileName ruckusSCGEventNodeName
Description	This event occurs when CSV export file transfer to the FTP server fails.
Generated by Event Code	973

ruckuscsvFtpTransferMaxRetryReached

TABLE 149 csvFtpTransferMaxRetryReached

Object Name	ruckuscsvFtpTransferMaxRetryReached
Parent Node	ruckusSCGEventObjects
Object Identifier	1.3.6.1.4.1.25053.2.10.1.283
Trap Severity	Major

TABLE 149 csvFtpTransferMaxRetryReached (continued)

Object Name	ruckuscsvFtpTransferMaxRetryReached
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGFtpIp ruckusSCGFtpPort ruckusSCGFileName ruckusSCGEventNodeName
Description	This event occurs after CSV export file transfer max retries reached.
Generated by Event Code	974

ruckuscsvDiskThresholdExceeded

TABLE 150 ruckuscsvDiskThresholdExceeded

Object Name	ruckuscsvDiskThresholdExceeded
Parent Node	ruckusSCGEventObjects
Object Identifier	1.3.6.1.4.1.25053.2.10.1.284
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGDiskThreshold ruckusSCGDiskAvailableDiskSize
Description	This event occurs when CSV export disk size has exceeded the threshold limit.
Generated by Event Code	975

ruckuscsvDiskMaxCapacityReached

TABLE 151 ruckuscsvDiskMaxCapacityReached

Object Name	ruckuscsvDiskMaxCapacityReached
Parent Node	ruckusSCGEventObjects
Object Identifier	1.3.6.1.4.1.25053.2.10.1.285
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGDiskAllocatedDiskSize
Description	This event occurs when CSV export disk maximum capacity reached.

TABLE 151 ruckuscsvDiskMaxCapacityReached (continued)

Object Name	ruckuscsvDiskMaxCapacityReached
Generated by Event Code	976

csvDiskThresholdBackToNormal

TABLE 152 csvDiskThresholdBackToNormal

Object Name	csvDiskThresholdBackToNormal
Parent Node	csvDiskThresholdBackToNormal
Object Identifier	1.3.6.1.4.1.25053.2.10.1.286
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventCode ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGDiskCurrentUsedPercent ruckusSCGDiskAvailableDiskSize
Description	This event occurs when CSV export disk threshold back to normal.
Generated by Event Code	977

ruckusSCGSystemLBSCoconnectSuccessTrap

TABLE 153 ruckusSCGSystemLBSCoconnectSuccessTrap

Object Name	ruckusSCGSystemLBSCoconnectSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.290
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode
Description	Triggered by the event when the controller successfully connects to the LS. The event severity, event type, controller node MAC address, management IP address, LBS server URL, LBS port and event code are displayed.
Generated by Event Code	723:scgLBSCoconnectSuccess

ruckusSCGSystemLBSNoResponseTrap

TABLE 154 ruckusSCGSystemLBSNoResponseTrap

Object Name	ruckusSCGSystemLBSNoResponseTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.291
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode
Description	Triggered by the controller failure response event when connecting to the LS. The event severity, event type, controller node MAC address, management IP address, LBS server URL, LBS port and event code are displayed.
Generated by Event Code	721:scgLBSNoResponse

ruckusSCGSystemLBSAuthFailedTrap

TABLE 155 ruckusSCGSystemLBSAuthFailedTrap

Object Name	ruckusSCGSystemLBSAuthFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.292
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode
Description	TriggeredTriggered by the controller authentication failure event when connecting to the LS. The event severity, event type, controller node MAC address, management IP address, LBS server URL, LBS port and event code are displayed.
Generated by Event Code	722:scgLBSAuthFailed

ruckusSCGSystemLBSConnectFailedTrap

TABLE 156 ruckusSCGSystemLBSConnectFailedTrap

Object Name	ruckusSCGSystemLBSConnectFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 156 ruckusSCGSystemLBSCConnectFailedTrap (continued)

Object Name	ruckusSCGSystemLBSCConnectFailedTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.293
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGLBSURL ruckusSCGLBSPort ruckusSCGEventCode
Description	Triggered by the controller failed to connect to LS event. The event severity, event type, controller node MAC address, management IP address, LBS server URL, LBS port and event code are displayed.
Generated by Event Code	724:scgLBSCConnectFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGSystemLBSCConnectSuccessTrap on page 131 (.1.3.6.1.4.1.25053.2.10.1.290)
Cleared by Matching	ruckusSCGEventMacAddr(.1.3.6.1.4.1.25053.2.10.2.20.0)

ruckusSCGProcessRestartTrap

TABLE 157 ruckusSCGProcessRestartTrap

Object Name	ruckusSCGProcessRestartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.300
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by process restart event. The event severity, event type, process name, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1001:processRestart

ruckusSCGServiceUnavailableTrap

TABLE 158 ruckusSCGServiceUnavailableTrap

Object Name	ruckusSCGServiceUnavailableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.301

TABLE 158 ruckusSCGServiceUnavailableTrap (continued)

Object Name	ruckusSCGServiceUnavailableTrap
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by service unavailable event. The event severity, event type, process name, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1002:serviceUnavailable

ruckusSCGKeepAliveFailureTrap

TABLE 159 ruckusSCGKeepAliveFailureTrap

Object Name	ruckusSCGKeepAliveFailureTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.302
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGProcessName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by service keep alive failure event. The event severity, event type, source process name, process name, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1003:keepAliveFailure

ruckusSCGResourceUnavailableTrap

TABLE 160 ruckusSCGResourceUnavailableTrap

Object Name	ruckusSCGResourceUnavailableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.304
Trap Severity	Critical

TABLE 160 ruckusSCGResourceUnavailableTrap (continued)

Object Name	ruckusSCGResourceUnavailableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by resource unavailable event. The event severity, event type, source process name, controller node MAC IP address, management IP address, reason and event code are displayed.
Generated by Event Code	1006:resourceUnavailable

ruckusSCGSmfRegFailedTrap

TABLE 161 ruckusSCGSmfRegFailedTrap

Object Name	ruckusSCGSmfRegFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.305
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by SMF (System Management Framework) registration failed event. The event severity, event type, source process name, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1010:smfRegFailed

ruckusSCGHipFailoverTrap

NOTE

This trap is not applicable for vSZ-H.

TABLE 162 ruckusSCGHipFailoverTrap

Object Name	ruckusSCGHipFailoverTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.306
Trap Severity	Major

TABLE 162 ruckusSCGHipFailoverTrap (continued)

Object Name	ruckusSCGHipFailoverTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by HIP (HLR Interface Process) failover event. The event severity, event type, source process name, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1016:hipFailover

ruckusSCGConfUpdFailedTrap

TABLE 163 ruckusSCGConfUpdFailedTrap

Object Name	ruckusSCGConfUpdFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.307
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGProcessName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by configuration update failed event. The event severity, event type, process name, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1008:cfgUpdFailed

ruckusSCGConfRcvFailedTrap

TABLE 164 ruckusSCGConfRcvFailedTrap

Object Name	ruckusSCGConfRcvFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.308
Trap Severity	Debug

TABLE 164 ruckusSCGConfRcvFailedTrap (continued)

Object Name	ruckusSCGConfRcvFailedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered when the controller receives a message from the AP on failure to update the configuration. The event severity, event type, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1009:cfgRcvFailed

ruckusSCGLostCnxnToDbladeTrap

TABLE 165 ruckusSCGLostCnxnToDbladeTrap

Object Name	ruckusSCGLostCnxnToDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.309
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered when the controller loses connection to the data plane. The event severity, event type, controller control IP address, DP IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1202:lostCnxnToDblade
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGConnectedToDbladeTrap on page 156 (.1.3.6.1.4.1.25053.2.10.1.350)
Cleared by Matching	ruckusSCGEventCtrlIP (.1.3.6.1.4.1.25053.2.10.2.12.0) ruckusSCGDPIP (.1.3.6.1.4.1.25053.2.10.2.82.0)

ruckusSCGGsnRestartedTrap

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.310 to .1.3.6.1.4.1.25053.2.11.1.313 are not applicable for vSZ-H.

TABLE 166 ruckusSCGGsnRestartedTrap

Object Name	ruckusSCGGsnRestartedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 166 ruckusSCGGgsnRestartedTrap (continued)

Object Name	ruckusSCGGgsnRestartedTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.310
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGGgsnIp ruckusSCGGtpclp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by GGSN restarted event. The event severity, event type, GGSN IP address, GTP IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1210:ggsnRestarted

ruckusSCGGgsnNotReachableTrap

TABLE 167 ruckusSCGGgsnNotReachableTrap

Object Name	ruckusSCGGgsnNotReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.311
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGGgsnIp ruckusSCGGtpclp ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by GGSN gateway not reachable event. The event severity, event type, GGSN IP address, GTP IP address, controller node MAC IP address and event code are displayed.
Generated by Event Code	1211:ggsnNotReachable

ruckusSCGGgsnNotResolvedTrap

TABLE 168 ruckusSCGGgsnNotResolvedTrap

Object Name	ruckusSCGGgsnNotResolvedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.312
Trap Severity	Major

TABLE 168 ruckusSCGGsnNotResolvedTrap (continued)

Object Name	ruckusSCGGsnNotResolvedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGApn ruckusSCGUEImsi ruckusSCGUEmsidn ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by GGSN not resolved event. The event occurs when the echo request is timed out. The event severity, event type, APN, UE IMSI, UE msidn, controller node MAC IP address and event code are displayed.
Generated by Event Code	1215:ggsnNotResolved

ruckusSCGUnknownUETrap

TABLE 169 ruckusSCGUnknownUETrap

Object Name	ruckusSCGUnknownUETrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.313
Trap Severity	Minor
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventClientMacAddr ruckusSCGUEmsidn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by unknown UE event. The controller data plane receives the DHCP or data packets from the UE. If the controller control plane is unable to locate the subscriber information for the DHCP or data packets received from the UE, a trap event is raised. The event severity, event type, client MAC address, user equipment MSISDN, controller node MAC IP address, management IP address and event code are displayed. Note: User equipment has no authentication.
Generated by Event Code	1231:unknownUE

ruckusSCGAuthSrvrNotReachableTrap

TABLE 170 ruckusSCGAuthSrvrNotReachableTrap

Object Name	ruckusSCGAuthSrvrNotReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.314

TABLE 170 ruckusSCGAuthSvrNotReachableTrap (continued)

Object Name	ruckusSCGAuthSvrNotReachableTrap
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGAuthSvrIp ruckusSCGRadProxyIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by authentication server not reachable event. The event severity, event type, authentication server IP address, radius proxy IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1601:authSvrNotReachable

ruckusSCGAccSvrNotReachableTrap

TABLE 171 ruckusSCGAccSvrNotReachableTrap

Object Name	ruckusSCGAccSvrNotReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.315
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGAccSvrIp ruckusSCGRadProxyIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by accounting server not reachable event. The event severity, event type, accounting server IP address, radius proxy IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1602:accSvrNotReachable

ruckusSCGUnknownRealmTrap

NOTE

This trap is not applicable for vSZ-H.

TABLE 172 ruckusSCGUnknownRealmTrap

Object Name	ruckusSCGUnknownRealmTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.316

TABLE 172 ruckusSCGUnknownRealmTrap (continued)

Object Name	ruckusSCGUnknownRealmTrap
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by unknown realm event. There is a mandatory configuration for no matching realm and it is considered as failure trap. The event severity, event type, realm name, controller node MAC IP address and event code are displayed.
Generated by Event Code	1603:unknownRealm

ruckusSCGAuthFailedNonPermanentIDTrap

TABLE 173 ruckusSCGAuthFailedNonPermanentIDTrap

Object Name	ruckusSCGAuthFailedNonPermanentIDTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.317
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGUEImsi ruckusSCGUEMsisdn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered when there is non-permanent ID authentication failed event. The event severity, event type, UE IMSI, UE msisdn, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1617:non-permanentIDauthenticationfailed

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.318 to .1.3.6.1.4.1.25053.2.11.1.346 are not applicable for vSZ-H.

ruckusSCGCnxnToCgfFailedTrap

TABLE 174 ruckusSCGCnxnToCgfFailedTrap

Object Name	ruckusSCGCnxnToCgfFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.318
Trap Severity	Major

TABLE 174 ruckusSCGCnxnToCgfFailedTrap (continued)

Object Name	ruckusSCGCnxnToCgfFailedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGCgfSrvrIp ruckusSCGRadSrvrIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by connection to CGF failed event. The event severity, event type, CGF sever IP address, radius server IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1610:cnxnToCgfFailed

ruckusSCGCdrTransferFailedTrap

TABLE 175 ruckusSCGCdrTransferFailedTrap

Object Name	ruckusSCGCdrTransferFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.319
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGCgfSrvrIp ruckusSCGRadSrvrIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by CDR transfer failed event. The event severity, event type, CGF sever IP address, radius server IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1614:cdrTxfrFailed

ruckusSCGCdrGenerateFailedTrap

TABLE 176 ruckusSCGCdrGenerateFailedTrap

Object Name	ruckusSCGCdrGenerateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.320
Trap Severity	Major

TABLE 176 ruckusSCGCdrGenerateFailedTrap (continued)

Object Name	ruckusSCGCdrGenerateFailedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGRadSrvrIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by CDR generation failed event. The event severity, event type, radius server IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1615:cdrGenerationFailed

ruckusSCGDestNotRecheableTrap

TABLE 177 ruckusSCGDestNotRecheableTrap

Object Name	ruckusSCGDestNotRecheableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.321
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPointCode ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by destination not reachable event. Destination refers to HLR point code is not reachable from the controller. The event severity, event type, point code, controller node MAC IP address and event code are displayed.
Generated by Event Code	1618:destNotRecheable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGDestAvailableTrap on page 157 (.1.3.6.1.4.1.25053.2.10.1.351)
Cleared by Matching	:ruckusSCGPointCode (.1.3.6.1.4.1.25053.2.10.2.314.0)

ruckusSCGAppServerDownTrap

TABLE 178 ruckusSCGAppServerDownTrap

Object Name	ruckusSCGAppServerDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.324
Trap Severity	Critical

TABLE 178 ruckusSCGAppServerDownTrap (continued)

Object Name	ruckusSCGAppServerDownTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGRoutingContext ruckusSCGPointCode ruckusSCGSSN ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when the application server does not respond to keep alive query. The event severity, event type, routing context, local point code, local SSN, controller node MAC address and event code are displayed.
Generated by Event Code	1623:appServerDown
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAppServerActiveTrap on page 157 (.1.3.6.1.4.1.25053.2.10.1.352)
Cleared by Matching	ruckusSCGPointCode (.1.3.6.1.4.1.25053.2.10.2.314.0)

ruckusSCGAppServerInactiveTrap

TABLE 179 ruckusSCGAppServerInactiveTrap

Object Name	ruckusSCGAppServerInactiveTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.325
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGRoutingContext ruckusSCGPointCode ruckusSCGSSN ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by application server inactive event. The event severity, event type, routing context, local point code, local SSN, controller node MAC IP address and event code are displayed.
Generated by Event Code	1624:appServerInactive
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAppServerActiveTrap on page 157 (.1.3.6.1.4.1.25053.2.10.1.352)
Cleared by Matching	ruckusSCGPointCode (.1.3.6.1.4.1.25053.2.10.2.314.0)

ruckusSCGAssocCantStartTrap

TABLE 180 ruckusSCGAssocCantStartTrap

Object Name	ruckusSCGAssocCantStartTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.326
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcIP ruckusSCGSrcPort ruckusSCGDestIP ruckusSCGDestPort ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered when a client does not initiate the association request after successful authentication. The event severity, event type, source IP address, source port, destination IP address, destination port, controller node MAC IP address and event code are displayed.
Generated by Event Code	1626:assocCantStart
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAssocUpTrap on page 157 (.1.3.6.1.4.1.25053.2.10.1.353)

ruckusSCGAssocDownTrap

TABLE 181 ruckusSCGAssocDownTrap

Object Name	ruckusSCGAssocDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.327
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcIP ruckusSCGSrcPort ruckusSCGDestIP ruckusSCGDestPort ruckusSCGEventMacAddr ruckusSCGEventCode
Description	It is SCTP association down where the controller acts as client when connecting to HLR/SG (Signalling Gateway) When the SCTP association goes down this event is raised. The event severity, event type, source IP address, source port, destination IP address, destination port, controller node MAC IP address and event code are displayed.
Generated by Event Code	1627:assocDown

TABLE 181 ruckusSCGAssocDownTrap (continued)

Object Name	ruckusSCGAssocDownTrap
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAssocUpTrap on page 157 (.1.3.6.1.4.1.25053.2.10.1.353)

ruckusSCGOutboundRoutingFailedTrap

TABLE 182 ruckusSCGOutboundRoutingFailedTrap

Object Name	ruckusSCGOutboundRoutingFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.328
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGOperation ruckusSCGUEImsi ruckusSCGHLrInstance ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by outbound routing failure event. The event severity, event type, route operation, UE IMSI, HLR instance, controller node MAC IP address and event code are displayed.
Generated by Event Code	1636:outboundRoutingFailure

ruckusSCGDidAllocationFailureTrap

TABLE 183 ruckusSCGDidAllocationFailureTrap

Object Name	ruckusSCGDidAllocationFailureTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.329
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by DID allocation failure event. The event severity, event type, node MAC IP address and event code are displayed.
Generated by Event Code	1637:didAllocationFailure

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.318 to .1.3.6.1.4.1.25053.2.11.1.346 are not applicable for vSZ-H.

ruckusSCGPdnGwUnresolvedTrap

TABLE 184 ruckusSCGPdnGwUnresolvedTrap

Object Name	ruckusSCGPdnGwUnresolvedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.331
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGApn ruckusSCGUEImsi ruckusSCGUEmsdn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by PDN gateway not resolved event. The event severity, event type, source process name, APN, UE IMSI, UE msidsn, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1950:pdnGwNotResolved

ruckusSCGPdnGwVersionUnsupportedTrap

TABLE 185 ruckusSCGPdnGwVersionUnsupportedTrap

Object Name	ruckusSCGPdnGwVersionUnsupportedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.332
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by PDN gateway version not supported event. The event severity, event type, source process name, PGW IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1952:pdnGwVersionNotSupportedMsgReceived

ruckusSCGPdnGwAssociationDownTrap

TABLE 186 ruckusSCGPdnGwAssociationDownTrap

Object Name	ruckusSCGPdnGwAssociationDownTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.333
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered when the controller cannot associate with the PDN gateway. The event severity, event type, source process name, PGW IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1953:pdnGwAssociationDown

ruckusSCGCreateSessionResponseFailedTrap

TABLE 187 ruckusSCGCreateSessionResponseFailedTrap

Object Name	ruckusSCGCreateSessionResponseFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.334
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGUEImsi ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by create session response failed event. This event is raised if the P-GW sends a failure response for the create session request (Gn/S2a-Interface) with the cause. The event severity, event type, source process name, PGW IP address, UE IMSI, realm name, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1954:createSessionResponseFailed

ruckusSCGDecodeFailedTrap

TABLE 188 ruckusSCGDecodeFailedTrap

Object Name	ruckusSCGDecodeFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.335
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by decode failed event.This event is raised if the controller is unable to decode any message (Gn/S2a-Interface) from P-GW. The event severity, event type, source process name, PGW IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1955:decodeFailed

ruckusSCGModifyBearerResponseFailedTrap

TABLE 189 ruckusSCGModifyBearerResponseFailedTrap

Object Name	ruckusSCGModifyBearerResponseFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.336
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGUEImsi ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by modify bearer response failed event. The event severity, event type, source process name, PGW IP address, UE IMSI, realm name, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1956:modifyBearerResponseFailed

ruckusSCGDeleteSessionResponseFailedTrap

TABLE 190 ruckusSCGDeleteSessionResponseFailedTrap

Object Name	ruckusSCGDeleteSessionResponseFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.337
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGUEImsi ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by delete session response failed event. The event severity, event type, source process name, PGW IP address, UE IMSI, realm name, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1957:deleteSessionResponseFailed

ruckusSCGDeleteBearerRequestFailedTrap

TABLE 191 ruckusSCGDeleteBearerRequestFailedTrap

Object Name	ruckusSCGDeleteBearerRequestFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.338
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGUEImsi ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by delete bearer request failed event. The event severity, event type, source process name, PGW IP address, UE IMSI, realm name, controller node MAC IP address, management IP address, failure reason and event code are displayed.

TABLE 191 ruckusSCGDeleteBearerRequestFailedTrap (continued)

Object Name	ruckusSCGDeleteBearerRequestFailedTrap
Generated by Event Code	1958:deleteBearerRequestFailed

ruckusSCGUpdateBearerRequestFailedTrap

TABLE 192 ruckusSCGUpdateBearerRequestFailedTrap

Object Name	ruckusSCGUpdateBearerRequestFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.339
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGPgwIp ruckusSCGUEImsi ruckusSCGRealm ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventReason ruckusSCGEventCode
Description	Triggered by update bearer request failed event. The event severity, event type, source process name, PGW IP address, UE IMSI, realm name, controller node MAC IP address, management IP address, failure reason and event code are displayed.
Generated by Event Code	1959:updateBearerRequestFailed

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.318 to .1.3.6.1.4.1.25053.2.11.1.346 are not applicable for vSZ-H.

ruckusSCGCgfServerNotConfiguredTrap

TABLE 193 ruckusSCGCgfServerNotConfiguredTrap

Object Name	ruckusSCGCgfServerNotConfiguredTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.340
Trap Severity	Major

TABLE 193 ruckusSCGCgfServerNotConfiguredTrap (continued)

Object Name	ruckusSCGCgfServerNotConfiguredTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGCgfSrvrIp ruckusSCGGgsnIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered when the controller receives a packet from a CGF server IP address but the GGSN or PDN gateway is not configured. The event severity, event type, CGF sever IP address, GGSN IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	1960:CGFServerNotConfigured

ruckusSCGTtgSessionCriticalThresholdTrap

TABLE 194 ruckusSCGTtgSessionCriticalThresholdTrap

Object Name	ruckusSCGTtgSessionCriticalThresholdTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.342
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by TTG session critical threshold event. This event is raised when the licenses have reached the critical threshold and will be auto cleared. The event severity, event type, controller node MAC IP address and event code are displayed.
Generated by Event Code	1242:sessionCriticalThreshold

ruckusSCGTtgSessionLicenseInsufficientTrap

TABLE 195 ruckusSCGTtgSessionLicenseInsufficientTrap

Object Name	ruckusSCGTtgSessionLicenseInsufficientTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.343
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventCode

TABLE 195 ruckusSCGTtgSessionLicenseInsufficientTrap (continued)

Object Name	ruckusSCGTtgSessionLicenseInsufficientTrap
Description	Triggered when the controller has used up/does not have any more TTG session license. The event severity, event type, controller node MAC IP address and event code are displayed.
Generated by Event Code	1243:sessionLicenseExhausted

ruckusSCGAPacctMsgMandatoryPrmMissingTrap

TABLE 196 ruckusSCGAPacctMsgMandatoryPrmMissingTrap

Object Name	ruckusSCGAPacctMsgMandatoryPrmMissingTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.344
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventAPIP ruckusSCGUserName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode ruckusSCGEventAPIIPv6
Description	Triggered by the event where the mandatory parameter of AP accounting message is missing. In RADIUS accounting packets, if any of the mandatory parameters such as acct-sess-Id, called/calling-station-id are missing an event trap is raised. The event severity, event type, source process name, AP IP address, user name, controller node MAC address, management IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	1901:apAcctMsgMandatoryPrmMissing

ruckusSCGAcctUnknownRealmTrap

TABLE 197 ruckusSCGAcctUnknownRealmTrap

Object Name	ruckusSCGAcctUnknownRealmTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.345
Trap Severity	Debug

TABLE 197 ruckusSCGAcctUnknownRealmTrap (continued)

Object Name	ruckusSCGAcctUnknownRealmTrap
Bindings	<p>ruckusSCGEventSeverity</p> <p>ruckusSCGEventType</p> <p>ruckusSCGSrcProcess</p> <p>ruckusSCGEventAPIP</p> <p>ruckusSCGUserName</p> <p>ruckusSCGEventMacAddr</p> <p>ruckusSCGEventNodeMgmtIp</p> <p>ruckusSCGEventCode</p> <p>ruckusSCGEventAPIIPv6</p>
Description	<p>Triggered by unknown realm accounting event. There is a mandatory configuration for no-matching realm and it is not considered as failed event.</p> <p>The event severity, event type, source process name, AP IP address, user name, controller node MAC IP address, management IP address, event code and AP IPv6 address are displayed.</p>
Generated by Event Code	1902:unknownRealmAccounting

ruckusSCGAPAcctMsgDecodeFailedTrap

TABLE 198 ruckusSCGAPAcctMsgDecodeFailedTrap

Object Name	ruckusSCGAcctUnknownRealmTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.346
Trap Severity	Critical
Bindings	<p>ruckusSCGEventSeverity</p> <p>ruckusSCGEventType</p> <p>ruckusSCGSrcProcess</p> <p>ruckusSCGEventAPIP</p> <p>ruckusSCGEventMacAddr</p> <p>ruckusSCGEventNodeMgmtIp</p> <p>ruckusSCGEventCode</p> <p>ruckusSCGEventAPIIPv6</p>
Description	<p>Triggered by AP accounting message decode failed event. The event severity, event type, source process name, AP IP address, UE IMSI, controller node MAC IP address, management IP address, event code and AP IPv6 address are displayed.</p>
Generated by Event Code	1904:apAcctMsgDecodeFailed

ruckusSCGAPAcctRespWhileInvalidConfigTrap

TABLE 199 ruckusSCGAPAcctRespWhileInvalidConfigTrap

Object Name	ruckusSCGAPAcctRespWhileInvalidConfigTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 199 ruckusSCGAPAcctRespWhileInvalidConfigTrap (continued)

Object Name	ruckusSCGAPAcctRespWhileInvalidConfigTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.347
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventAPIP ruckusSCGUserName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the controller sends a response to AP accounting message but the configuration is incorrect in the controller for forwarding received message or for generating CDRs. The event severity, event type, source process name, AP IP address, user name, controller node MAC IP address, management IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	1909:apAcctRespWhileInvalidConfig

ruckusSCGAPAcctMsgDropNoAcctStartMsgTrap

TABLE 200 ruckusSCGAPAcctMsgDropNoAcctStartMsgTrap

Object Name	ruckusSCGAPAcctMsgDropNoAcctStartMsgTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.348
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventAPIP ruckusSCGUserName ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the accounting message from AP is dropped from the Acct Interim/Stop message since the account start is not received from the AP. The event severity, event type, source process name, AP IP address, user name, controller node MAC IP address, management IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	1910:apAcctMsgDropNoAcctStartMsg

ruckusSCGUnauthorizedCoaDmMessageDroppedTrap

TABLE 201 ruckusSCGUnauthorizedCoaDmMessageDroppedTrap

Object Name	ruckusSCGUnauthorizedCoaDmMessageDroppedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.349
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcProcess ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event where the controller receives COA/DM from an unauthorized AAA server. The event severity, event type, source process name, controller node MACIP address, management IP address and event code are displayed.
Generated by Event Code	1911:unauthorizedCoaDmMessageDropped

ruckusSCGConnectedToDbladeTrap

TABLE 202 ruckusSCGConnectedToDbladeTrap

Object Name	ruckusSCGConnectedToDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.350
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by successful connection to data plane event. The event severity, event type, control plane IP address, data plane IP address, controller node MACIP address, management IP address and event code are displayed.
Generated by Event Code	1201:connectedToDblade

ruckusSCGDestAvailableTrap

NOTE

Traps .1.3.6.1.4.1.25053.2.10.1.351 to .1.3.6.1.4.1.25053.2.10.1.353 are not applicable for vSZ-H.

TABLE 203 ruckusSCGDestAvailableTrap

Object Name	ruckusSCGDestAvailableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.351
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGPointCode ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by destination availability event. The event severity, event type, point code, controller node MAC address and event code are displayed.
Generated by Event Code	1620:destAvailable

ruckusSCGAppServerActiveTrap

TABLE 204 ruckusSCGAppServerActiveTrap

Object Name	ruckusSCGAppServerActiveTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.352
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGRoutingContext ruckusSCGPointCode ruckusSCGSSN ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by application server active event. The event severity, event type, routing context, point code, SSN ID, controller node MAC address and event code are displayed.
Generated by Event Code	1625:appServerActive

ruckusSCGAssocUpTrap

TABLE 205 ruckusSCGAssocUpTrap

Object Name	ruckusSCGAssocUpTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 205 ruckusSCGAssocUpTrap (continued)

Object Name	ruckusSCGAssocUpTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.353
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcIP ruckusSCGSrcPort ruckusSCGDestIP ruckusSCGDestPort ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by association UP event. The event severity, event type, source IP address, source port number, destination IP address, destination port, controller node MAC address and event code are displayed.
Generated by Event Code	1628:assocUp

ruckusSCGSessUpdatedAtDbladeTrap

TABLE 206 ruckusSCGSessUpdatedAtDbladeTrap

Object Name	ruckusSCGSessUpdatedAtDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.354
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGUEImsi ruckusSCGUEMsisdn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by successful update of session request (C-D-SESS-UPD-REQ) event. The event severity, event type, control IP address, data plane IP address, IMSI code, MSIDN code, controller node MAC address and event code are displayed.
Generated by Event Code	1205:sessUpdatedAtDblade

ruckusSCGSessUpdateErrAtDbladeTrap

TABLE 207 ruckusSCGSessUpdateErrAtDbladeTrap

Object Name	ruckusSCGSessUpdateErrAtDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.355
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGUEImsi ruckusSCGUEMsidn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by failed deletion of session request (C-D-SESS-DEL-REQ) event. The event severity, event type, control IP address, data plane IP address, IMSI code, MSIDN code, controller node MAC address and event code are displayed.
Generated by Event Code	1206:sessUpdateErrAtDblade

ruckusSCGSessDeletedAtDbladeTrap

TABLE 208 ruckusSCGSessDeletedAtDbladeTrap

Object Name	ruckusSCGSessDeletedAtDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.356
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGUEImsi ruckusSCGUEMsidn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by successful deletion of session request (C-D-SESS-DEL-REQ) event. The event severity, event type, control IP address, data plane IP address, IMSI code, MSIDN code, controller node MAC address and event code are displayed.
Generated by Event Code	1207:sessDeletedAtDblade

ruckusSCGSessDeleteErrAtDbladeTrap

TABLE 209 ruckusSCGSessDeleteErrAtDbladeTrap

Object Name	ruckusSCGSessDeleteErrAtDbladeTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.357
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventCtrlIP ruckusSCGDPIP ruckusSCGUEImsi ruckusSCGUEMsidn ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by deletion of session request (C-D-SESS-DEL-REQ) failed event. The event severity, event type, control IP address, data plane IP address, IMSI code, MSIDN code, controller node MAC address and event code are displayed.
Generated by Event Code	1208:sessDeleteErrAtDblade

ruckusSCGLicenseSyncSuccessTrap

TABLE 210 ruckusSCGLicenseSyncSuccessTrap

Object Name	ruckusSCGLicenseSyncSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.358
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGLicenseServerName ruckusSCGEventCode
Description	Triggered by successful synchronization of license data with the license server event. The event severity, event type, node name, license server name and event code are displayed.
Generated by Event Code	1250:licenseSyncSuccess

ruckusSCGLicenseSyncFailedTrap

TABLE 211 ruckusSCGLicenseSyncFailedTrap

Object Name	ruckusSCGLicenseSyncFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 211 ruckusSCGLicenseSyncFailedTrap (continued)

Object Name	ruckusSCGLicenseSyncFailedTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.359
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGLicenseServerName ruckusSCGEventCode
Description	Triggered by synchronization of license data with the license server failed event. The event severity, event type, node name, license server name and event code are displayed.
Generated by Event Code	1251:licenseSyncFail

ruckusSCGLicenseImportSuccessTrap

TABLE 212 ruckusSCGLicenseImportSuccessTrap

Object Name	ruckusSCGLicenseImportSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.360
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventCode
Description	Triggered by successful import of license data event. The event severity, event type, node name, and event code are displayed.
Generated by Event Code	1252:licenseImportSuccess

ruckusSCGLicenseImportFailedTrap

TABLE 213 ruckusSCGLicenseImportFailedTrap

Object Name	ruckusSCGLicenseImportFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.361
Trap Severity	Warning
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventNodeName ruckusSCGEventCode
Description	Triggered by import of license data failed event. The event severity, event type, node name, and event code are displayed.
Generated by Event Code	1253:licenseImportFail

ruckusSCGSyslogServerReachableTrap

TABLE 214 ruckusSCGSyslogServerReachableTrap

Object Name	ruckusSCGSyslogServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.370
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSyslogServerAddress ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event when the syslog server is reachable. The event severity, event type, syslog server address, event MAC address and event code are displayed.
Generated by Event Code	750:syslogServerReachable

ruckusSCGSyslogServerUnreachableTrap

TABLE 215 ruckusSCGSyslogServerUnreachableTrap

Object Name	ruckusSCGSyslogServerUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.371
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSyslogServerAddress ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event when the syslog server is unreachable. The event severity, event type, syslog server address, event MAC address and event code are displayed.
Generated by Event Code	751:syslogServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGSyslogServerReachableTrap on page 162 (.1.3.6.1.4.1.25053.2.10.1.370)
Cleared by Matching	ruckusSCGSyslogServerAddress(.1.3.6.1.4.1.25053.2.10.2.154.0)

ruckusSCGSyslogServerSwitchedTrap

TABLE 216 ruckusSCGSyslogServerSwitchedTrap

Object Name	ruckusSCGSyslogServerSwitchedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.372
Trap Severity	Informational

TABLE 216 ruckusSCGSyslogServerSwitchedTrap (continued)

Object Name	ruckusSCGSyslogServerSwitchedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGSrcSyslogServerAddress ruckusSCGDestSyslogServerAddress ruckusSCGEventMacAddr ruckusSCGEventCode
Description	Triggered by the event when the syslog server is switched. The event severity, event type, syslog server source and destination address, event MAC address and event code are displayed.
Generated by Event Code	752:syslogServerSwitched

ruckusSCGAPRadiusServerReachableTrap

TABLE 217 ruckusSCGAPRadiusServerReachableTrap

Object Name	ruckusSCGAPRadiusServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.400
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGRadSrvrIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP is able to reach the radius server successfully. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2101:radiusServerReachable

ruckusSCGAPRadiusServerUnreachableTrap

TABLE 218 ruckusSCGAPRadiusServerUnreachableTrap

Object Name	ruckusSCGAPRadiusServerUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)

TABLE 218 ruckusSCGAPRadiusServerUnreachableTrap (continued)

Object Name	ruckusSCGAPRadiusServerUnreachableTrap
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.401
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGRadSrvrIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to reach the radius server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2102:radiusServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPRadiusServerReachableTrap on page 163 (.1.3.6.1.4.1.25053.2.10.1.400)
Cleared by Matching	ruckusSCGEventAPMacAddr(.1.3.6.1.4.1.25053.2.10.2.23.0) ruckusSCGRadSrvrIp(.1.3.6.1.4.1.25053.2.10.2.312.0)

ruckusSCGAPLDAPServerReachableTrap

TABLE 219 ruckusSCGAPLDAPServerReachableTrap

Object Name	ruckusSCGAPLDAPServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.402
Trap Severity	Major

TABLE 219 ruckusSCGAPLDAPServerReachableTrap (continued)

Object Name	ruckusSCGAPLDAPServerReachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLDAPServerIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP is able to reach the lightweight directory access protocol (LDAP) server successfully. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2121:ldapServerReachable

ruckusSCGAPLDAPServerUnreachableTrap

TABLE 220 ruckusSCGAPLDAPServerUnreachableTrap

Object Name	ruckusSCGAPLDAPServerUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.403
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGLDAPServerIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to reach the lightweight directory access protocol (LDAP) server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.

TABLE 220 ruckusSCGAPLDAPServerUnreachableTrap (continued)

Object Name	ruckusSCGAPLDAPServerUnreachableTrap
Generated by Event Code	2122:ldapServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPLDAPServerReachableTrap on page 164 (.1.3.6.1.4.1.25053.2.10.1.402)
Cleared by Matching	ruckusSCGEventAPMacAddr(.1.3.6.1.4.1.25053.2.10.2.23.0) ruckusSCGLDAPSrVrIp(.1.3.6.1.4.1.25053.2.10.2.327.0)

ruckusSCGAPADServerReachableTrap

TABLE 221 ruckusSCGAPADServerReachableTrap

Object Name	ruckusSCGAPADServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.404
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGADSrVrIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP is able to reach the active directory successfully. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2141:adServerReachable

ruckusSCGAPADServerUnreachableTrap

TABLE 222 ruckusSCGAPADServerUnreachableTrap

Object Name	ruckusSCGAPADServerUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.405
Trap Severity	Major

TABLE 222 ruckusSCGAPADServerUnreachableTrap (continued)

Object Name	ruckusSCGAPADServerUnreachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGADSrvrlp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to reach AD server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2142:adServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGAPADServerReachableTrap on page 166 (.1.3.6.1.4.1.25053.2.10.1.404)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0) ruckusSCGADSrvrlp (.1.3.6.1.4.1.25053.2.10.2.328.0)

ruckusSCGAPUsbSoftwarePackageDownloadedTrap

TABLE 223 ruckusSCGAPUsbSoftwarePackageDownloadedTrap

Object Name	ruckusSCGAPUsbSoftwarePackageDownloadedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.406
Trap Severity	Informational

TABLE 223 ruckusSCGAPUsbSoftwarePackageDownloadedTrap (continued)

Object Name	ruckusSCGAPUsbSoftwarePackageDownloadedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGSoftwareName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP successfully downloads its USB (Universal Serial Bus) software. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, software name, event code and AP IPv6 address are displayed.
Generated by Event Code	370:apUsbSoftwarePackageDownloaded

ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap

TABLE 224 ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap

Object Name	ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.407
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGSoftwareName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to downloads its USB (Universal Serial Bus) software. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, software name, event code and AP IPv6 address are displayed.

TABLE 224 ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap (continued)

Object Name	ruckusSCGAPUsbSoftwarePackageDownloadFailedTrap
Generated by Event Code	371:apUsbSoftwarePackageDownloadFailed

ruckusSCGEspAuthServerReachableTrap

TABLE 225 ruckusSCGEspAuthServerReachableTrap

Object Name	ruckusSCGEspAuthServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.408
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAuthSrvrIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP successfully reaches WeChat ESP authentication server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, authentication server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2151:espAuthServerReachable

ruckusSCGEspAuthServerUnreachableTrap

TABLE 226 ruckusSCGEspAuthServerUnreachableTrap

Object Name	ruckusSCGEspAuthServerUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.409
Trap Severity	Informational

TABLE 226 ruckusSCGEspAuthServerUnreachableTrap (continued)

Object Name	ruckusSCGEspAuthServerUnreachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGAuthSrvrIp ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to reach WeChat ESP authentication server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, authentication server IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2152:espAuthServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGEspAuthServerReachableTrap on page 169 (.1.3.6.1.4.1.25053.2.10.1.408)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGEspAuthServerResolvableTrap

TABLE 227 ruckusSCGEspAuthServerResolvableTrap

Object Name	ruckusSCGEspAuthServerResolvableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.410
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDomainName ruckusSCGEventCode ruckusSCGEventAPIPv6

TABLE 227 ruckusSCGEspAuthServerResolvableTrap (continued)

Object Name	ruckusSCGEspAuthServerResolvableTrap
Description	Triggered by the event when AP successfully resolves WeChat ESP authentication server domain name. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, domain name, event code and AP IPv6 address are displayed.
Generated by Event Code	2153:espAuthServerResolvable

ruckusSCGEspAuthServerUnResolvableTrap

TABLE 228 ruckusSCGEspAuthServerUnResolvableTrap

Object Name	ruckusSCGEspAuthServerUnResolvableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.411
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDomainName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP fails to resolve WeChat ESP authentication server domain name. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, domain name, event code and AP IPv6 address are displayed.
Generated by Event Code	2154:espAuthServerUnResolvable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGEspAuthServerResolvableTrap on page 170 (.1.3.6.1.4.1.25053.2.10.1.410)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGEspDNATServerReachableTrap

TABLE 229 ruckusSCGEspDNATServerReachableTrap

Object Name	ruckusSCGEspDNATServerReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.412
Trap Severity	Informational

TABLE 229 ruckusSCGEspDNATServerReachableTrap (continued)

Object Name	ruckusSCGEspDNATServerReachableTrap
Bindings	ruckusSCGEEventSeverity ruckusSCGEEventType ruckusSCGEEventAPName ruckusSCGEEventAPMacAddr ruckusSCGEEventAPIP ruckusSCGEEventAPLocation ruckusSCGEEventAPDescription ruckusSCGEEventAPGPSCoordinates ruckusSCGEEventZoneName ruckusSCGDNATIp ruckusSCGEEventCode ruckusSCGEEventAPIPv6
Description	Triggered by the event when AP successfully reaches WeChat ESP DNAT server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, DNA IP address, event code and AP IPv6 address are displayed.
Generated by Event Code	2161:espDNATServerReachable

ruckusSCGEspDNATServerUnreachableTrap

TABLE 230 ruckusSCGEspDNATServerUnreachableTrap

Object Name	ruckusSCGEspDNATServerUnreachableTrap
Parent Node	ruckusSCGEEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.413
Trap Severity	Major
Bindings	ruckusSCGEEventSeverity ruckusSCGEEventType ruckusSCGEEventAPName ruckusSCGEEventAPMacAddr ruckusSCGEEventAPIP ruckusSCGEEventAPLocation ruckusSCGEEventAPDescription ruckusSCGEEventAPGPSCoordinates ruckusSCGEEventZoneName ruckusSCGDNATIp ruckusSCGEEventCode ruckusSCGEEventAPIPv6
Description	Triggered by the event when AP fails to reach WeChat ESP DNAT server. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, DNA IP address, event code and AP IPv6 address are displayed.

TABLE 230 ruckusSCGEspDNATServerUnreachableTrap (continued)

Object Name	ruckusSCGEspDNATServerUnreachableTrap
Generated by Event Code	2162:espDNATServerUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGEspDNATServerReachableTrap on page 171 (.1.3.6.1.4.1.25053.2.10.1.412)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusSCGEspDNATServerResolvableTrap

TABLE 231 ruckusSCGEspDNATServerResolvableTrap

Object Name	ruckusSCGEspDNATServerResolvableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.414
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGDomainName ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event when AP successfully resolves WeChat ESP DNAT server domain name The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, domain name, event code and AP IPv6 address are displayed.
Generated by Event Code	2163:espDNATServerResolvable

ruckusSCGEspDNATServerUnresolvableTrap

TABLE 232 ruckusSCGEspDNATServerUnresolvableTrap

Object Name	ruckusSCGEspDNATServerUnresolvableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.415
Trap Severity	Major

TABLE 232 ruckusSCGEspDNATServerUnresolvableTrap (continued)

Object Name	ruckusSCGEspDNATServerUnresolvableTrap
Bindings	ruckusSCGEEventSeverity ruckusSCGEEventType ruckusSCGEEventAPName ruckusSCGEEventAPMacAddr ruckusSCGEEventAPIP ruckusSCGEEventAPLocation ruckusSCGEEventAPDescription ruckusSCGEEventAPGPSCoordinates ruckusSCGEEventZoneName ruckusSCGDomainName ruckusSCGEEventCode ruckusSCGEEventAPIIPv6
Description	Triggered by the event AP fails to resolve WeChat ESP DNAT server domain name. The event severity, event type, AP name, AP MAC address, AP IP address, AP location, AP description, AP GPS coordinates, zone name, domain name, event code and AP IPv6 address are displayed.
Generated by Event Code	2164:espDNATServerUnresolvable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGEspDNATServerResolvableTrap on page 173 (.1.3.6.1.4.1.25053.2.10.1.414)
Cleared by Matching	ruckusSCGEEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

ruckusRateLimitTORSurpassedTrap

TABLE 233 ruckusRateLimitTORSurpassedTrap

Object Name	ruckusRateLimitTORSurpassedTrap
Parent Node	ruckusSCGEEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.500
Trap Severity	Critical
Bindings	ruckusSCGEEventSeverity ruckusSCGEEventType ruckusSCGRadSvrIp ruckusSCGEEventCode
Description	Triggered by the event where the controller receives the rate limit for Total Outstanding Requests (TOR) is surpassed. The event severity, event type, AAA server IP address and event code are displayed.
Generated by Event Code	1302:rateLimitTORSurpassed

ruckusSCGIPSecTunnelAssociatedTrap

TABLE 234 ruckusSCGIPSecTunnelAssociatedTrap

Object Name	ruckusSCGIPSecTunnelAssociatedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.600
Trap Severity	Informational
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGIPSecGWAddress ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the AP is able to reach the secure gateway successfully. The event severity, event type, AP name, MAC address, IP address, location, description, GPS coordinates, zone name, IPsec gateway address, event code and IPv6 version are displayed.
Generated by Event Code	660:ipsecTunnelAssociated

ruckusSCGIPSecTunnelDisassociatedTrap

TABLE 235 ruckusSCGIPSecTunnelDisassociatedTrap

Object Name	ruckusSCGIPSecTunnelDisassociatedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.601
Trap Severity	Major

TABLE 235 ruckusSCGIPSecTunnelDisassociatedTrap (continued)

Object Name	ruckusSCGIPSecTunnelDisassociatedTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGIPSecGWAddress ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the AP is disconnected from the secure gateway. The event severity, event type, AP name, MAC address, IP address, location, description, GPS coordinates, zone name, IPsec gateway address, event code and IPv6 version are displayed.
Generated by Event Code	661:ipsecTunnelDisassociated

ruckusSCGIPSecTunnelAssociateFailedTrap

TABLE 236 ruckusSCGIPSecTunnelAssociateFailedTrap

Object Name	ruckusSCGIPSecTunnelAssociateFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.602
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventAPName ruckusSCGEventAPMacAddr ruckusSCGEventAPIP ruckusSCGEventAPLocation ruckusSCGEventAPDescription ruckusSCGEventAPGPSCoordinates ruckusSCGEventZoneName ruckusSCGIPSecGWAddress ruckusSCGEventCode ruckusSCGEventAPIPv6
Description	Triggered by the event where the AP is unable to reach the secure gateway. The event severity, event type, AP name, MAC address, IP address, location, description, GPS coordinates, zone name, IPsec gateway address, event code and IPv6 version are displayed.

TABLE 236 ruckusSCGIPSecTunnelAssociateFailedTrap (continued)

Object Name	ruckusSCGIPSecTunnelAssociateFailedTrap
Generated by Event Code	662:ipsecTunnelAssociateFailed
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGIPSecTunnelAssociatedTrap on page 175 (.1.3.6.1.4.1.25053.2.10.1.600)
Cleared by Matching	ruckusSCGEventAPMacAddr (.1.3.6.1.4.1.25053.2.10.2.23.0)

NOTE

Traps .1.3.6.1.4.1.25053.2.11.1.700 to .1.3.6.1.4.1.25053.2.11.1.711 are not applicable for vSZ-H.

ruckusSCGPmipProcessInitTrap

TABLE 237 ruckusSCGPmipProcessInitTrap

Object Name	ruckusSCGPmipProcessInitTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.700
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the PMIPv6 process crash and restart event. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5001:processInit

ruckusSCGPmipUnavailableTrap

TABLE 238 ruckusSCGPmipUnavailableTrap

Object Name	ruckusSCGPmipUnavailableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.701
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event where the PMIPv6 process repeatedly restarts. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5002:pmipUnavailable

ruckusSCGPmipUnallocatedMemoryTrap

TABLE 239 ruckusSCGPmipUnallocatedMemoryTrap

Object Name	ruckusSCGPmipUnallocatedMemoryTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.702
Trap Severity	Critical
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event due to memory allocation failure in the PMIPv6 process. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5003:unallocatedMemory

ruckusSCGPmipUpdateCgfFailedTrap

TABLE 240 ruckusSCGPmipUpdateCgfFailedTrap

Object Name	ruckusSCGPmipUpdateCgfFailedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.703
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event where the PMIPv6 process fails to apply the configuration changes. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5004:updateCgfFailed

ruckusSCGPmipLMAIcmpUnreachableTrap

TABLE 241 ruckusSCGPmipLMAIcmpUnreachableTrap

Object Name	ruckusSCGPmipLMAIcmpUnreachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.704
Trap Severity	Debug

TABLE 241 ruckusSCGPmipLMAIcmpUnreachableTrap (continued)

Object Name	ruckusSCGPmipLMAIcmpUnreachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGLMAIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event where the PMIPv6 daemon is unable to reach the LMA server through the ICMP packet. The event severity, event type, LMA IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5006:lmalcmpUnreachable
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGPmipLMAIcmpReachableTrap on page 180 (.1.3.6.1.4.1.25053.2.10.1.708)
Cleared by Matching	ruckusSCGLMAIp (.1.3.6.1.4.1.25053.2.10.2.400.0)

ruckusSCGPmipLMAFailOverTrap

TABLE 242 ruckusSCGPmipLMAFailOverTrap

Object Name	ruckusSCGPmipLMAFailOverTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.705
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGLMAIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by LMA failover event. The event severity, event type, LMA IP address, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5008:lmaFailOver

ruckusSCGPmipBindingFailureTrap

TABLE 243 ruckusSCGPmipBindingFailureTrap

Object Name	ruckusSCGPmipBindingFailureTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.706
Trap Severity	Major

TABLE 243 ruckusSCGPmipBindingFailureTrap (continued)

Object Name	ruckusSCGPmipBindingFailureTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by MN binding failure from LMA server event. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5010:bindingFailure
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGPmipBindingSuccessTrap on page 181 (.1.3.6.1.4.1.25053.2.10.1.709)

ruckusSCGPmiplostCnxnToDHCPTrap

TABLE 244 ruckusSCGPmiplostCnxnToDHCPTrap

Object Name	ruckusSCGPmiplostCnxnToDHCPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.707
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by the event where the PMIPv6 process is unable to connect to the DHCP server. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5102:lostCnxnToDHCP
Cleared by SNMP Trap	This SNMP trap is cleared by ruckusSCGPmipConnectedToDHCPTrap on page 181 (.1.3.6.1.4.1.25053.2.10.1.710)

ruckusSCGPmipLMAIcmpReachableTrap

TABLE 245 ruckusSCGPmipLMAIcmpReachableTrap

Object Name	ruckusSCGPmipLMAIcmpReachableTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.708
Trap Severity	Debug

TABLE 245 ruckusSCGPmipLMAIcmpReachableTrap (continued)

Object Name	ruckusSCGPmipLMAIcmpReachableTrap
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGLMAIp ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by successful event where the received PMIPv6 daemon reaches the LMA server through the ICMP packet. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5005:lmalcmpReachable

ruckusSCGPmipBindingSuccessTrap

TABLE 246 ruckusSCGPmipBindingSuccessTrap

Object Name	ruckusSCGPmipBindingSuccessTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.709
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by successful binding of the received MN packet from the LMA server. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5009:bindingSuccess

ruckusSCGPmipConnectedToDHCPTrap

TABLE 247 ruckusSCGPmipConnectedToDHCPTrap

Object Name	ruckusSCGPmipConnectedToDHCPTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.710
Trap Severity	Debug
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode

TABLE 247 ruckusSCGPmipConnectedToDHCPTrap (continued)

Object Name	ruckusSCGPmipConnectedToDHCPTrap
Description	Triggered by the event the received PMIPv6 process successfully connects to the DHCP server. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5101:connectedToDHCP

ruckusSCGPmipProcessStoppedTrap

TABLE 248 ruckusSCGPmipProcessStoppedTrap

Object Name	ruckusSCGPmipProcessStoppedTrap
Parent Node	ruckusSCGEventTraps (RUCKUS-EVENT-MIB)
Object Identifier	.1.3.6.1.4.1.25053.2.10.1.711
Trap Severity	Major
Bindings	ruckusSCGEventSeverity ruckusSCGEventType ruckusSCGEventMacAddr ruckusSCGEventNodeMgmtIp ruckusSCGEventCode
Description	Triggered by PMIPv6 process stopped event. The event severity, event type, controller node MAC IP address, management IP address and event code are displayed.
Generated by Event Code	5100:processStop

Ruckus Event Object

The objects contained in the RUCKUS-SCG-EVENT-Object group define the events for sending trap event notifications by the controller. All traps are triggered by events. The following are the trap object definitions.

Event Object	Object Identifier
ruckusSCGEventDescription on page 185	.1.3.6.1.4.1.25053.2.10.2.1
ruckusSCGClusterName on page 185	.1.3.6.1.4.1.25053.2.10.2.2
ruckusSCGEventCode on page 185	.1.3.6.1.4.1.25053.2.10.2.10
ruckusSCGProcessName on page 185	.1.3.6.1.4.1.25053.2.10.2.11
ruckusSCGEventCtrlIP on page 185	.1.3.6.1.4.1.25053.2.10.2.12
ruckusSCGEventSeverity on page 186	.1.3.6.1.4.1.25053.2.10.2.13
ruckusSCGEventType on page 186	.1.3.6.1.4.1.25053.2.10.2.14
ruckusSCGEventNodeMgmtIp on page 186	.1.3.6.1.4.1.25053.2.10.2.15
ruckusSCGEventNodeName on page 186	.1.3.6.1.4.1.25053.2.10.2.16
ruckusSCGCPUPerc on page 186	.1.3.6.1.4.1.25053.2.10.2.17
ruckusSCGMemoryPerc on page 187	.1.3.6.1.4.1.25053.2.10.2.18
ruckusSCGDiskPerc on page 187	.1.3.6.1.4.1.25053.2.10.2.19
ruckusSCGEventMacAddr on page 187	.1.3.6.1.4.1.25053.2.10.2.20
ruckusSCGEventFirmwareVersion on page 187	.1.3.6.1.4.1.25053.2.10.2.21

Event Object	Object Identifier
ruckusSCGEventUpgradedFirmwareVersion on page 187	.1.3.6.1.4.1.25053.2.10.2.22
ruckusSCGEventAPMacAddr on page 188	.1.3.6.1.4.1.25053.2.10.2.23
ruckusSCGEventReason on page 188	.1.3.6.1.4.1.25053.2.10.2.24
ruckusSCGEventAPName on page 188	.1.3.6.1.4.1.25053.2.10.2.25
ruckusSCGEventAPIP on page 188	.1.3.6.1.4.1.25053.2.10.2.26
ruckusSCGEventAPLocation on page 188	.1.3.6.1.4.1.25053.2.10.2.27
ruckusSCGEventAPGPSCoordinates on page 189	.1.3.6.1.4.1.25053.2.10.2.28
ruckusSCGEventAPDescription on page 189	.1.3.6.1.4.1.25053.2.10.2.29
ruckusSCGEventZoneName on page 189	.1.3.6.1.4.1.25053.2.10.2.30
ruckusSCGAPModel on page 189	.1.3.6.1.4.1.25053.2.10.2.31
ruckusSCGConfigAPModel on page 189	.1.3.6.1.4.1.25053.2.10.2.32
ruckusSCGAPConfigID on page 190	.1.3.6.1.4.1.25053.2.10.2.33
ruckusSCGEventTargetZoneName on page 190	.1.3.6.1.4.1.25053.2.10.2.34
ruckusSCGEventAPIIPv6 on page 190	.1.3.6.1.4.1.25053.2.10.2.35
ruckusSCGLBSURL on page 190	.1.3.6.1.4.1.25053.2.10.2.38
ruckusSCGLBSPort on page 190	.1.3.6.1.4.1.25053.2.10.2.39
ruckusSCGEventSSID on page 191	.1.3.6.1.4.1.25053.2.10.2.40
ruckusSCGEventRogueMac on page 191	.1.3.6.1.4.1.25053.2.10.2.45
ruckusPrimaryGRE on page 191	.1.3.6.1.4.1.25053.2.10.2.46
ruckusSecondaryGRE on page 191	.1.3.6.1.4.1.25053.2.10.2.47
ruckusSoftGREGatewayList on page 191	.1.3.6.1.4.1.25053.2.10.2.48
ruckusSCGSoftGREGWAddress on page 192	.1.3.6.1.4.1.25053.2.10.2.49
ruckusSCGEventClientMacAddr on page 192	.1.3.6.1.4.1.25053.2.10.2.50
ruckusSCGDPCKey on page 192	.1.3.6.1.4.1.25053.2.10.2.80
ruckusSCGDPCConfigID on page 192	.1.3.6.1.4.1.25053.2.10.2.81
ruckusSCGDPIP on page 192	.1.3.6.1.4.1.25053.2.10.2.82
ruckusSCGDPPacketPoolID on page 193	.1.3.6.1.4.1.25053.2.10.2.83
ruckusSCGNetworkPortID on page 193	.1.3.6.1.4.1.25053.2.10.2.100
ruckusSCGNetworkInterface on page 193	.1.3.6.1.4.1.25053.2.10.2.101
ruckusSCGSwitchStatus on page 193	.1.3.6.1.4.1.25053.2.10.2.102
ruckusSCGTemperatureStatus on page 193	.1.3.6.1.4.1.25053.2.10.2.120
ruckusSCGProcessorId on page 194	.1.3.6.1.4.1.25053.2.10.2.121
ruckusSCGFanId on page 194	.1.3.6.1.4.1.25053.2.10.2.122
ruckusSCGFanStatus on page 194	.1.3.6.1.4.1.25053.2.10.2.123
ruckusSCGPsId on page 194	.1.3.6.1.4.1.25053.2.10.2.124
ruckusSCGPsStatus on page 194	.1.3.6.1.4.1.25053.2.10.2.125
ruckusSCGDrvId on page 195	.1.3.6.1.4.1.25053.2.10.2.126
ruckusSCGDrvStatus on page 195	.1.3.6.1.4.1.25053.2.10.2.127
ruckusSCGLicenseType on page 195	.1.3.6.1.4.1.25053.2.10.2.150
ruckusSCGLicenseUsagePerc on page 195	.1.3.6.1.4.1.25053.2.10.2.151
ruckusSCGLicenseServerName on page 195	.1.3.6.1.4.1.25053.2.10.2.152
ruckusSCGIPSecGWAddress on page 196	.1.3.6.1.4.1.25053.2.10.2.153

Ruckus Event MIB
Ruckus Event Object

Event Object	Object Identifier
ruckusSCGSyslogServerAddress on page 196	.1.3.6.1.4.1.25053.2.10.2.154
ruckusSCGSrcSyslogServerAddress on page 196	.1.3.6.1.4.1.25053.2.10.2.155
ruckusSCGDestSyslogServerAddress on page 196	.1.3.6.1.4.1.25053.2.10.2.156
ruckusSCGFtplp on page 196	.1.3.6.1.4.1.25053.2.10.2.200
ruckusSCGFtpPort on page 197	.1.3.6.1.4.1.25053.2.10.2.201
ruckusSCGSrcProcess on page 197	.1.3.6.1.4.1.25053.2.10.2.301
ruckusSCGGsnlp on page 197	.1.3.6.1.4.1.25053.2.10.2.302
ruckusSCGGtpclp on page 197	.1.3.6.1.4.1.25053.2.10.2.303
ruckusSCGApn on page 197	.1.3.6.1.4.1.25053.2.10.2.304
ruckusSCGUEImsi on page 198	.1.3.6.1.4.1.25053.2.10.2.305
ruckusSCGUEMsisdn on page 198	.1.3.6.1.4.1.25053.2.10.2.306
ruckusSCGAuthSrvrlp on page 198	.1.3.6.1.4.1.25053.2.10.2.307
ruckusSCGRadProxyIp on page 198	.1.3.6.1.4.1.25053.2.10.2.308
ruckusSCGAccSrvrlp on page 198	.1.3.6.1.4.1.25053.2.10.2.309
ruckusSCGRealm on page 199	.1.3.6.1.4.1.25053.2.10.2.310
ruckusSCGCgfSrvrlp on page 199	.1.3.6.1.4.1.25053.2.10.2.311
ruckusSCGRadSrvrlp on page 199	.1.3.6.1.4.1.25053.2.10.2.312
ruckusSCGCiplp on page 199	.1.3.6.1.4.1.25053.2.10.2.313
ruckusSCGPointCode on page 199	.1.3.6.1.4.1.25053.2.10.2.314
ruckusSCGCongLevel on page 200	.1.3.6.1.4.1.25053.2.10.2.315
ruckusSCGSSN on page 200	.1.3.6.1.4.1.25053.2.10.2.316
ruckusSCGRoutingContext on page 200	.1.3.6.1.4.1.25053.2.10.2.317
ruckusSCGSrcIP on page 200	.1.3.6.1.4.1.25053.2.10.2.318
ruckusSCGSrcPort on page 200	.1.3.6.1.4.1.25053.2.10.2.319
ruckusSCGDestIP on page 201	.1.3.6.1.4.1.25053.2.10.2.320
ruckusSCGDestPort on page 201	.1.3.6.1.4.1.25053.2.10.2.321
ruckusSCGOperation on page 201	.1.3.6.1.4.1.25053.2.10.2.322
ruckusSCGHlrInstance on page 201	.1.3.6.1.4.1.25053.2.10.2.323
ruckusSCGUserName on page 201	.1.3.6.1.4.1.25053.2.10.2.324
ruckusSCGPgwlp on page 202	.1.3.6.1.4.1.25053.2.10.2.325
ruckusSCGFileName on page 202	.1.3.6.1.4.1.25053.2.10.2.326
ruckusSCGLDAPSrvrlp on page 202	.1.3.6.1.4.1.25053.2.10.2.327
ruckusSCGADSrvrlp on page 202	.1.3.6.1.4.1.25053.2.10.2.328
ruckusSCGSoftwareName on page 202	.1.3.6.1.4.1.25053.2.10.2.329
ruckusSCGDomainName on page 203	.1.3.6.1.4.1.25053.2.10.2.330
ruckusSCGDNATIp on page 203	.1.3.6.1.4.1.25053.2.10.2.331
ruckusSCGLMAlp on page 203	.1.3.6.1.4.1.25053.2.10.2.400

ruckusSCGEventDescription

TABLE 249 ruckusSCGEventDescription

Object Name	ruckusSCGEventDescription
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.1
Description	Event description.

ruckusSCGClusterName

TABLE 250 ruckusSCGClusterName

Object Name	ruckusSCGClusterName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.2
Description	The controller cluster name

ruckusSCGEventCode

TABLE 251 ruckusSCGEventCode

Object Name	ruckusSCGEventCode
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.10
Description	The event code

ruckusSCGProcessName

TABLE 252 ruckusSCGProcessName

Object Name	ruckusSCGProcessName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.11
Description	The process name.

ruckusSCGEventCtrlIP

TABLE 253 ruckusSCGEventCtrlIP

Object Name	ruckusSCGEventCtrlIP
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.12
Description	The controller node control IP address.

ruckusSCGEventSeverity

TABLE 254 ruckusSCGEventSeverity

Object Name	ruckusSCGEventSeverity
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.13
Description	The event severity.

ruckusSCGEventType

TABLE 255 ruckusSCGEventType

Object Name	ruckusSCGEventType
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.14
Description	The event type.

ruckusSCGEventNodeMgmtIp

TABLE 256 ruckusSCGEventNodeMgmtIp

Object Name	ruckusSCGEventNodeMgmtIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.15
Description	The controller management IP address.

ruckusSCGEventNodeName

TABLE 257 ruckusSCGEventNodeName

Object Name	ruckusSCGEventNodeName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.16
Description	The controller node name.

ruckusSCGCPUPerc

TABLE 258 ruckusSCGCPUPerc

Object Name	ruckusSCGCPUPerc
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.17
Description	The controller CPU usage in percentage.

ruckusSCGMemoryPerc

TABLE 259 ruckusSCGMemoryPerc

Object Name	ruckusSCGMemoryPerc
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.18
Description	The controller memory usage in percentage.

ruckusSCGDiskPerc

TABLE 260 ruckusSCGDiskPerc

Object Name	ruckusSCGDiskPerc
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.19
Description	The controller disk usage in percentage.

ruckusSCGEventMacAddr

TABLE 261 ruckusSCGEventMacAddr

Object Name	ruckusSCGEventMacAddr
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.20
Description	The controller MAC IP address

ruckusSCGEventFirmwareVersion

TABLE 262 ruckusSCGEventFirmwareVersion

Object Name	ruckusSCGEventFirmwareVersion
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.21
Description	The controller firmware version.

ruckusSCGEventUpgradedFirmwareVersion

TABLE 263 ruckusSCGEventUpgradedFirmwareVersion

Object Name	ruckusSCGEventUpgradedFirmwareVersion
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.22
Description	The controller upgrade firmware version.

ruckusSCGEventAPMacAddr

TABLE 264 ruckusSCGEventAPMacAddr

Object Name	ruckusSCGEventAPMacAddr
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.23
Description	The AP MAC IP address

ruckusSCGEventReason

TABLE 265 ruckusSCGEventReason

Object Name	ruckusSCGEventReason
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.24
Description	The event reason.

ruckusSCGEventAPName

TABLE 266 ruckusSCGEventAPName

Object Name	ruckusSCGEventAPName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.25
Description	The AP name.

ruckusSCGEventAPIP

TABLE 267 ruckusSCGEventAPIP

Object Name	ruckusSCGEventAPIP
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.26
Description	The AP IP address.

ruckusSCGEventAPLocation

TABLE 268 ruckusSCGEventAPLocation

Object Name	ruckusSCGEventAPLocation
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.27
Description	The AP location.

ruckusSCGEventAPGPSCoordinates

TABLE 269 ruckusSCGEventAPGPSCoordinates

Object Name	ruckusSCGEventAPGPSCoordinates
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.28
Description	The AP GPS coordinates.

ruckusSCGEventAPDescription

TABLE 270 ruckusSCGEventAPDescription

Object Name	ruckusSCGEventAPDescription
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.29
Description	The AP description

ruckusSCGEventZoneName

TABLE 271 ruckusSCGEventZoneName

Object Name	ruckusSCGEventZoneName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.30
Description	The zone name.

ruckusSCGAPModel

TABLE 272 ruckusSCGAPModel

Object Name	ruckusSCGAPModel
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.31
Description	The AP model.

ruckusSCGConfigAPModel

TABLE 273 ruckusSCGConfigAPModel

Object Name	ruckusSCGConfigAPModel
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.32
Description	The configured AP model.

ruckusSCGAPConfigID

TABLE 274 ruckusSCGAPConfigID

Object Name	ruckusSCGAPConfigID
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.33
Description	The AP configuration UUID.

ruckusSCGEventTargetZoneName

TABLE 275 ruckusSCGEventTargetZoneName

Object Name	ruckusSCGEventTargetZoneName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.34
Description	The AP target zone.

ruckusSCGEventAPIIPv6

TABLE 276 ruckusSCGEventAPIIPv6

Object Name	ruckusSCGEventAPIIPv6
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.35
Description	The AP IP v6 address.

ruckusSCGLBSURL

TABLE 277 ruckusSCGLBSURL

Object Name	ruckusSCGLBSURL
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.38
Description	The LBS server URL

ruckusSCGLBSPort

TABLE 278 ruckusSCGLBSPort

Object Name	ruckusSCGLBSPort
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.39
Description	The LBS server port number.

ruckusSCGEventSSID

TABLE 279 ruckusSCGEventSSID

Object Name	ruckusSCGEventSSID
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.40
Description	The SSID number.

ruckusSCGEventRogueMac

TABLE 280 ruckusSCGEventRogueMac

Object Name	ruckusSCGEventRogueMac
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.45
Description	The Mac address of the rouge AP.

ruckusPrimaryGRE

TABLE 281 ruckusPrimaryGRE

Object Name	ruckusPrimaryGRE
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.46
Description	The primary GRE gateway.

ruckusSecondaryGRE

TABLE 282 ruckusSecondaryGRE

Object Name	ruckusSecondaryGRE
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.47
Description	The secondary GRE gateway.

ruckusSoftGREGatewayList

TABLE 283 ruckusSoftGREGatewayList

Object Name	ruckusSoftGREGatewayList
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.48
Description	The SoftGRE gateway list.

ruckusSCGSoftGREGWAddress

TABLE 284 ruckusSCGSoftGREGWAddress

Object Name	ruckusSCGSoftGREGWAddress
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.49
Description	The SoftGRE gateway IP address.

ruckusSCGEventClientMacAddr

TABLE 285 ruckusSCGEventClientMacAddr

Object Name	ruckusSCGEventClientMacAddr
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.50
Description	The client MAC IP address.

ruckusSCGDPPKey

TABLE 286 ruckusSCGDPPKey

Object Name	ruckusSCGDPPKey
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.80
Description	The data plane identifier.

ruckusSCGDPConfigID

TABLE 287 ruckusSCGDPConfigID

Object Name	ruckusSCGDPConfigID
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.81
Description	The data plane configuration ID.

ruckusSCGDPIP

TABLE 288 ruckusSCGDPIP

Object Name	ruckusSCGDPIP
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.82
Description	IP address of data plane.

ruckusSCGDPPacketPoolID

TABLE 289 ruckusSCGDPPacketPoolID

Object Name	ruckusSCGDPPacketPoolID
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.83
Description	Packet pool ID of data plane.

ruckusSCGNetworkPortID

TABLE 290 ruckusSCGNetworkPortID

Object Name	ruckusSCGNetworkPortID
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.100
Description	The network port ID.

ruckusSCGNetworkInterface

TABLE 291 ruckusSCGNetworkInterface

Object Name	ruckusSCGNetworkInterface
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.101
Description	The network interface.

ruckusSCGSwitchStatus

TABLE 292 ruckusSCGSwitchStatus

Object Name	ruckusSCGSwitchStatus
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.102
Description	The switch status.

ruckusSCGTemperatureStatus

TABLE 293 ruckusSCGTemperatureStatus

Object Name	ruckusSCGTemperatureStatus
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.120
Description	The temperature status.

ruckusSCGProcessorId

TABLE 294 ruckusSCGProcessorId

Object Name	ruckusSCGProcessorId
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.121
Description	The processor ID.

ruckusSCGFanId

TABLE 295 ruckusSCGFanId

Object Name	ruckusSCGFanId
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.122
Description	The fan module ID.

ruckusSCGFanStatus

TABLE 296 ruckusSCGFanStatus

Object Name	ruckusSCGFanStatus
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.123
Description	The fan module status.

ruckusSCGPsId

TABLE 297 ruckusSCGPsId

Object Name	ruckusSCGPsId
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.124
Description	The power supply ID.

ruckusSCGPsStatus

TABLE 298 ruckusSCGPsStatus

Object Name	ruckusSCGPsStatus
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.125
Description	The power supply status.

ruckusSCGDrvId

TABLE 299 ruckusSCGDrvId

Object Name	ruckusSCGDrvId
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.126
Description	The drive ID.

ruckusSCGDrvStatus

TABLE 300 ruckusSCGDrvStatus

Object Name	ruckusSCGDrvStatus
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.127
Description	The drive status.

ruckusSCGLicenseType

TABLE 301 ruckusSCGLicenseType

Object Name	ruckusSCGLicenseType
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.150
Description	The license type.

ruckusSCGLicenseUsagePerc

TABLE 302 ruckusSCGLicenseUsagePerc

Object Name	ruckusSCGLicenseUsagePerc
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.151
Description	The license usage in percentage.

ruckusSCGLicenseServerName

TABLE 303 ruckusSCGLicenseServerName

Object Name	ruckusSCGLicenseServerName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.152
Description	The license server name.

ruckusSCGIPSecGWAddress

TABLE 304 ruckusSCGIPSecGWAddress

Object Name	ruckusSCGIPSecGWAddress
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.153
Description	The secure gateway address.

ruckusSCGSyslogServerAddress

TABLE 305 ruckusSCGSyslogServerAddress

Object Name	ruckusSCGSyslogServerAddress
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.154
Description	The syslog server address.

ruckusSCGSrcSyslogServerAddress

TABLE 306 ruckusSCGSrcSyslogServerAddress

Object Name	ruckusSCGSrcSyslogServerAddress
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.155
Description	The source syslog server address.

ruckusSCGDestSyslogServerAddress

TABLE 307 ruckusSCGDestSyslogServerAddress

Object Name	ruckusSCGDestSyslogServerAddress
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.156
Description	The source syslog server address.

ruckusSCGFtpIp

TABLE 308 ruckusSCGFtpIp

Object Name	ruckusSCGFtpIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.200
Description	The FTP server IP address.

ruckusSCGFtpPort

TABLE 309 ruckusSCGFtpPort

Object Name	ruckusSCGFtpPort
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.201
Description	The FTP server port.

ruckusSCGSrcProcess

TABLE 310 ruckusSCGSrcProcess

Object Name	ruckusSCGSrcProcess
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.301
Description	The source process name.

ruckusSCGGgsnIp

TABLE 311 ruckusSCGGgsnIp

Object Name	ruckusSCGGgsnIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.302
Description	The GGSN IP address.

ruckusSCGGtpclp

TABLE 312 ruckusSCGGtpclp

Object Name	ruckusSCGGtpclp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.303
Description	The GTP IP address.

ruckusSCGApn

TABLE 313 ruckusSCGApn

Object Name	ruckusSCGApn
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.304
Description	The APN name.

ruckusSCGUEImsi

TABLE 314 ruckusSCGUEImsi

Object Name	ruckusSCGUEImsi
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.305
Description	The UE IMSI.

ruckusSCGUEMsisdn

TABLE 315 ruckusSCGUEMsisdn

Object Name	ruckusSCGUEMsisdn
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.306
Description	The UE MSISDN.

ruckusSCGAuthSrvrIp

TABLE 316 ruckusSCGAuthSrvrIp

Object Name	ruckusSCGAuthSrvrIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.307
Description	The authentication server IP address.

ruckusSCGRadProxyIp

TABLE 317 ruckusSCGRadProxyIp

Object Name	ruckusSCGRadProxyIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.308
Description	The RADIUS proxy IP address.

ruckusSCGAccSrvrIp

TABLE 318 ruckusSCGAccSrvrIp

Object Name	ruckusSCGAccSrvrIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.309
Description	The accounting server IP address.

ruckusSCGRealm

TABLE 319 ruckusSCGRealm

Object Name	ruckusSCGRealm
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.310
Description	The realm name.

ruckusSCGCgfSrvrIp

TABLE 320 ruckusSCGCgfSrvrIp

Object Name	ruckusSCGCgfSrvrIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.311
Description	The CGF IP address.

ruckusSCGRadSrvrIp

TABLE 321 ruckusSCGRadSrvrIp

Object Name	ruckusSCGRadSrvrIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.312
Description	The RADIUS server IP address.

ruckusSCGCiIp

TABLE 322 ruckusSCGCiIp

Object Name	ruckusSCGCiIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.313
Description	The CIP IP address.

ruckusSCGPointCode

TABLE 323 ruckusSCGPointCode

Object Name	ruckusSCGPointCode
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.314
Description	The point code.

ruckusSCGCongLevel

TABLE 324 ruckusSCGCongLevel

Object Name	ruckusSCGCongLevel
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.315
Description	The level of congestion.

ruckusSCGSSN

TABLE 325 ruckusSCGSSN

Object Name	ruckusSCGSSN
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.316
Description	The SSN.

ruckusSCGRoutingContext

TABLE 326 ruckusSCGRoutingContext

Object Name	ruckusSCGRoutingContext
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.317
Description	The routing context.

ruckusSCGSrcIP

TABLE 327 ruckusSCGSrcIP

Object Name	ruckusSCGSrcIP
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.318
Description	The source IP address.

ruckusSCGSrcPort

TABLE 328 ruckusSCGSrcPort

Object Name	ruckusSCGSrcPort
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.319
Description	The source port.

ruckusSCGDestIP

TABLE 329 ruckusSCGDestIP

Object Name	ruckusSCGDestIP
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.320
Description	The destination IP address.

ruckusSCGDestPort

TABLE 330 ruckusSCGDestPort

Object Name	ruckusSCGDestPort
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.321
Description	The destination port.

ruckusSCGOperation

TABLE 331 ruckusSCGOperation

Object Name	ruckusSCGOperation
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.322
Description	The operation name.

ruckusSCGHLRInstance

TABLE 332 ruckusSCGHLRInstance

Object Name	ruckusSCGHLRInstance
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.323
Description	The HLR instance.

ruckusSCGUserName

TABLE 333 ruckusSCGUserName

Object Name	ruckusSCGUserName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.324
Description	The user name.

ruckusSCGPgwIp

TABLE 334 ruckusSCGPgwIp

Object Name	ruckusSCGPgwIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.325
Description	The PGW IP address.

ruckusSCGFileName

TABLE 335 ruckusSCGFileName

Object Name	ruckusSCGFileName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.326
Description	The file name.

ruckusSCGLDAPsrvIp

TABLE 336 ruckusSCGLDAPsrvIp

Object Name	ruckusSCGLDAPsrvIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.327
Description	The LDAP server IP address.

ruckusSCGADsrvIp

TABLE 337 ruckusSCGADsrvIp

Object Name	ruckusSCGADsrvIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.328
Description	The AD server IP address.

ruckusSCGSoftwareName

TABLE 338 ruckusSCGSoftwareName

Object Name	ruckusSCGSoftwareName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.329
Description	The software name.

ruckusSCGDomainName

TABLE 339 ruckusSCGDomainName

Object Name	ruckusSCGDomainName
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.330
Description	The domain name.

ruckusSCGDNATIp

TABLE 340 ruckusSCGDNATIp

Object Name	ruckusSCGDNATIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.331
Description	The DNAT server IP address.

ruckusSCGLMAIp

TABLE 341 ruckusSCGLMAIp

Object Name	ruckusSCGLMAIp
Parent Node	ruckusSCGEventObjects
Object Identifier	.1.3.6.1.4.1.25053.2.10.2.400
Description	The LMA IP address

Ruckus System MIB

- Introduction..... 205
- Ruckus System Command (SysCommands)..... 207
- Ruckus Controller System Node Table..... 208
- Ruckus Controller Domain Table..... 211
- Ruckus Controller Zone Table..... 213

Introduction

The objects contained in the RUCKUS-SCG-SYSTEM-MIB group provides information about the controller system, including its WLAN traffic, managed APs, wireless clients associated with the managed APs, and CPU and memory utilization.

NOTE

For details on alarms and events refer to *SmartZone Alarms and Events Guide*.

ruckusSystemStatsNumAP

TABLE 342 ruckusSystemStatsNumAP

Object Name	ruckusSystemStatsNumAP
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.1
Description	The number of APs.

ruckusSystemStatsNumSta

TABLE 343 ruckusSystemStatsNumSta

Object Name	ruckusSystemStatsNumSta
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.2
Description	The number of associated clients.

ruckusSystemStatsWLANTotalRxPkts

TABLE 344 ruckusSystemStatsWLANTotalRxPkts

Object Name	ruckusSystemStatsWLANTotalRxPkts
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.5
Description	The total number of received packets in WLAN.

ruckusSystemStatsWLANTotalRxBytes

TABLE 345 ruckusSystemStatsWLANTotalRxBytes

Object Name	ruckusSystemStatsWLANTotalRxBytes
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.6
Description	The total number of received bytes in WLAN.

ruckusSystemStatsWLANTotalRxMulticast

TABLE 346 ruckusSystemStatsWLANTotalRxMulticast

Object Name	ruckusSystemStatsWLANTotalRxMulticast
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.7
Description	The total number of received multicast packets in WLAN.

ruckusSystemStatsWLANTotalTxPkts

TABLE 347 ruckusSystemStatsWLANTotalTxPkts

Object Name	ruckusSystemStatsWLANTotalTxPkts
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.8
Description	The total number of transmitted packets in WLAN.

ruckusSystemStatsWLANTotalTxBytes

TABLE 348 ruckusSystemStatsWLANTotalTxBytes

Object Name	ruckusSystemStatsWLANTotalTxBytes
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.9
Description	The total number of transmitted bytes in WLAN.

ruckusSystemStatsWLANTotalTxMulticast

TABLE 349 ruckusSystemStatsWLANTotalTxMulticast

Object Name	ruckusSystemStatsWLANTotalTxMulticast
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.10
Description	The total number of transmitted multicast packets in WLAN.

ruckusSystemStatsWLANTotalTxFail

TABLE 350 ruckusSystemStatsWLANTotalTxFail

Object Name	ruckusSystemStatsWLANTotalTxFail
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.11
Description	The total number of failed transmitted packets in WLAN

ruckusSystemStatsWLANTotalTxRetry

TABLE 351 ruckusSystemStatsWLANTotalTxRetry

Object Name	ruckusSystemStatsWLANTotalTxRetry
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.12
Description	The total number of retry transmitted packets in WLAN

ruckusSystemStatsSerialNumber

TABLE 352 ruckusSystemStatsSerialNumber

Object Name	ruckusSystemStatsSerialNumber
Parent Node	ruckusSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.3.1.1.1.15.13
Description	The controller serial number.

Ruckus System Command (SysCommands)

System command (**SysCommands**) MIBs define the performing system commands for SZ node. Users can use the `snmpset` `OID.0 <value type> <value>` to perform system commands. For example,

```
snmpset -v2c -c private -m172.17.50.100 RUCKUS-CTRL- MIB::ruckusCTRLSysCmdReboot.0 i run-reboot
```

NOTE

. 0 is appended after the OID.

ruckusCTRLSysCmdReboot

TABLE 353 ruckusCTRLSysCmdReboot

Object Name	ruckusCTRLSysCmdReboot
Parent Node	ruckusSZSystemStats
Object Identifier	.1.3.6.1.4.1.25053.1.4.1.1.1.15.13

TABLE 353 ruckusCTRLSysCmdReboot (continued)

Object Name	ruckusCTRLSysCmdReboot
Description	<p>This object defines the system command for SZ node. Command to reboot SZ is:</p> <ul style="list-style-type: none"> • 0 - Normal (default value), which means that the system has completed the reboot command or the system has been rebooted. • 1 - Run-reboot - once the value is set as run-reboot, user cannot stop it until the system is setup again. Users can only set OID as this value. <p>NOTE This command may fail to reboot the system due to the cluster operation.</p> <p>If it set as reboot successfully, SNMP daemon will be stopped immediately. Therefore, it should wait until the system is up again. For example: <code>snmpset -v2c -c private -mall 172.17.50.100 RUCKUS-CTRL-MIB::ruckusCTRLSysCmdReboot.0 i run-reboot</code></p>

Ruckus Controller System Node Table

The following MIBs contained in the controller **System Node** table (**ruckusCtrlSystemNodeTable**) define the system information of each node in a cluster.

The index of the table is `ruckusCtrlSystemNodeSerialNumber`.

ruckusCtrlSystemNodeEntry

TABLE 354 ruckusCtrlSystemNodeEntry

Object Name	ruckusCtrlSystemNodeEntry
Parent Node	ruckusCtrlSystemNodeEntry
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1
Description	The index to this table is <code>ruckusCtrlSystemNodeSerialNumber</code> .

ruckusCtrlSystemNodeName

TABLE 355 ruckusCtrlSystemNodeName

Object Name	ruckusCtrlSystemNodeName
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.2
Description	Displays the node name.

ruckusCtrlSystemNodeMgmtIp

TABLE 356 ruckusCtrlSystemNodeMgmtIp

Object Name	ruckusCtrlSystemNodeMgmtIp
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.11
Description	The node Management IP address.

ruckusCtrlSystemNodeMgmtIpv6

TABLE 357 ruckusCtrlSystemNodeMgmtIpv6

Object Name	ruckusCtrlSystemNodeMgmtIpv6
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.12
Description	The node Management IP v6 address.

ruckusCtrlSystemNodeMgmtMac

TABLE 358 ruckusCtrlSystemNodeMgmtMac

Object Name	ruckusCtrlSystemNodeMgmtMac
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.13
Description	The node Management MAC address.

ruckusCtrlSystemNodeModel

TABLE 359 ruckusCtrlSystemNodeModel

Object Name	ruckusCtrlSystemNodeModel
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.13
Description	Displays the node model.

ruckusCtrlSystemNodeVersion

TABLE 360 ruckusCtrlSystemNodeVersion

Object Name	ruckusCtrlSystemNodeVersion
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.19
Description	Displays the controller software version.

ruckusCtrlSystemNodeSerialNumber

TABLE 361 ruckusCtrlSystemNodeSerialNumber

Object Name	ruckusCtrlSystemNodeSerialNumber
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1
Description	Displays the serial number of the node

ruckusCtrlSystemNodeUptime

TABLE 362 ruckusCtrlSystemNodeUptime

Object Name	ruckusCtrlSystemNodeUptime
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1.16
Description	UP time of the node.

ruckusCtrlSystemNodeNumApLicense

TABLE 363 ruckusCtrlSystemNodeNumApLicense

Object Name	ruckusCtrlSystemNodeNumApLicense
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1.10
Description	Number of AP licenses for this node.

ruckusCtrlSystemNodeNumApConnected

TABLE 364 ruckusCtrlSystemNodeNumApConnected

Object Name	ruckusCtrlSystemNodeNumApConnected
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1.19
Description	Number of APs currently connected to this node.

ruckusCtrlSystemNodeStatus

TABLE 365 ruckusCtrlSystemNodeStatus

Object Name	ruckusCtrlSystemNodeStatus
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1.17
Description	System status of the node, where the status is: out-of-service(0) in-service(8)

ruckusCtrlSystemClusterStatus

TABLE 366 ruckusCtrlSystemClusterStatus

Object Name	ruckusCtrlSystemClusterStatus
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.1.18
Description	Displays the cluster status, where the status is: <ul style="list-style-type: none"> • in-service(0) • out-of-service(1) • maintenance(2) • network-partitio-suspected(4)

ruckusCtrlSystemNodeClusterHAState

TABLE 367 ruckusCtrlSystemNodeClusterHAState

Object Name	ruckusCtrlSystemNodeClusterHAState
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.26
Description	Displays the cluster HA status, where the status is: <ul style="list-style-type: none"> enable (1) disable (2)

ruckusCtrlSystemNodeClusterHARoles

TABLE 368 ruckusCtrlSystemNodeClusterHARoles

Object Name	ruckusCtrlSystemNodeClusterHARoles
Parent Node	ruckusCtrlSystemNodeTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.1.27
Description	Displays the cluster HA role, where the status is: <ul style="list-style-type: none"> active (1) standby (2) none (3)

Ruckus Controller Domain Table

The Following MIBs define the attributes for controller **Domain** table (**ruckusCtrlDomainTable**) for users to easily retrieve the information for all domains.

The index of the table is the DomainId, such that users can also get the information for a specific domain.

RuckusCtrlDomainEntry

TABLE 369 RuckusCtrlDomainEntry

Object Name	RuckusCtrlDomainEntry
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1
Description	The index to this table is DomainId.

ruckusCtrlDomainId

TABLE 370 ruckusCtrlDomainId

Object Name	ruckusCtrlDomainId
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.1
Description	The index of the domain UUID.

ruckusCtrlDomainName

TABLE 371 ruckusCtrlDomainName

Object Name	ruckusCtrlDomainName
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.2
Description	Displays the domain name.

ruckusCtrlDomainNumSubdomains

TABLE 372 ruckusCtrlDomainNumSubdomains

Object Name	ruckusCtrlDomainNumSubdomains
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.3
Description	The number of sub domains in the domain.

ruckusCtrlDomainParentDomainId

TABLE 373 ruckusCtrlDomainParentDomainId

Object Name	ruckusCtrlDomainParentDomainId
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.8
Description	Domain UUID of the parent domain for this domain.

ruckusCtrlDomainNumZones

TABLE 374 ruckusCtrlDomainNumZones

Object Name	ruckusCtrlDomainNumZones
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.9
Description	Number of zones in the domain.

ruckusCtrlDomainNumApConnected

TABLE 375 ruckusCtrlDomainNumApConnected

Object Name	ruckusCtrlDomainNumApConnected
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.2.1.10
Description	Number of APs in the domain that are currently connected to the controller.

ruckusCtrlDomainNumApDisconnected

TABLE 376 ruckusCtrlDomainNumApDisconnected

Object Name	ruckusCtrlDomainNumApDisconnected
Parent Node	ruckusCtrlDomainTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.11
Description	Number of APs in the domain that are currently disconnected from the controller.

Ruckus Controller Zone Table

The following MIBs define the information for the controller **Zone** table (**ruckusCtrlZoneTable**) for users to easily retrieve the information for all zones. The index of the table is the *DomainId* and *Zoneld*.

To query:

- all zones in domain1, use the below command:
`snmpwalk ruckusCtrlZoneTable.domain1`
- a specific zone1 in domain1, use the below command:
`snmpwalk ruckusCtrlZoneTable.domain1.zone1`
- a specific zone1 in an unknown domain, use the below command:
`snmpwalk ruckusCtrlZoneTable.all.zone1`

RuckusCtrlZoneEntry

TABLE 377 RuckusCtrlZoneEntry

Object Name	RuckusCtrlZoneEntry
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.3.1
Description	The index to this table is DomainId and Zoneld.

ruckusCtrlZoneDomainId

TABLE 378 ruckusCtrlZoneDomainId

Object Name	ruckusCtrlZoneDomainId
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.3.1.1
Description	The index is DomainId.

ruckusCtrlZoneld

TABLE 379 ruckusCtrlZoneld

Object Name	ruckusCtrlZoneld
Parent Node	ruckusCtrlZoneTable

TABLE 379 ruckusCtrlZoneId (continued)

Object Name	ruckusCtrlZoneId
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.3.1.2
Description	The index is ZoneId.

ruckusCtrlZoneName

TABLE 380 ruckusCtrlZoneName

Object Name	ruckusCtrlZoneName
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.3.1.3
Description	Displays the zone name.

ruckusCtrlZoneCountryCode

TABLE 381 ruckusCtrlZoneCountryCode

Object Name	ruckusCtrlZoneCountryCode
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.3.1.4
Description	Displays the country code of the zone.

ruckusCtrlZoneNumApConnected

TABLE 382 ruckusCtrlZoneNumApConnected

Object Name	ruckusCtrlZoneNumApConnected
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.3.1.9
Description	The number of APs in the zone that are currently connected to the controller.

ruckusCtrlZoneNumApDisconnected

TABLE 383 ruckusCtrlZoneNumApDisconnected

Object Name	ruckusCtrlZoneNumApDisconnected
Parent Node	ruckusCtrlZoneTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.3.1.10
Description	Number of APs in the zone that are currently disconnected from the controller.

Ruckus WLAN MIB

- [Ruckus SCG WLAN Statistics.....](#) 215
- [Ruckus SCG Configuration WLAN Statistics.....](#) 230
- [Ruckus SCG Client Information.....](#) 235

Ruckus SCG WLAN Statistics

The objects contained in the RUCKUS-SCG-WLAN-MIB provides information about WLANs and their statistics, including SSIDs, WLAN traffic, client count, AP information, etc.

NOTE

For details on alarms and events refer to *SmartZone Alarms and Events Guide*.

This section contains:

- [Ruckus WLAN](#) on page 215
- [Ruckus WLAN AP](#) on page 216
- [Ruckus SCG WLAN](#) on page 217
- [Ruckus SCG AP Statistics](#) on page 219
- [Ruckus SCG WLAN SoftGRE Statistics](#) on page 226

Ruckus WLAN

The following are the MIBs for RUCKUS-WLAN group.

- [ruckusWLANSSID](#) on page 215
- [ruckusWLANNumSta](#) on page 216
- [ruckusWLANRxBytes](#) on page 216
- [ruckusWLANTxBytes](#) on page 216
- [ruckusWLANIndex](#) on page 216

ruckusWLANSSID

TABLE 384 ruckusWLANSSID

Object Name	ruckusWLANSSID
Parent Node	ruckusWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.1.1.1
Description	The SSID of WLAN.

ruckusWLANNumSta

TABLE 385 ruckusWLANNumSta

Object Name	ruckusWLANNumSta
Parent Node	ruckusWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.1.1.12
Description	The number of client devices.

ruckusWLANRxBytes

TABLE 386 ruckusWLANRxBytes

Object Name	ruckusWLANRxBytes
Parent Node	ruckusWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.1.1.14
Description	The number of received bytes.

ruckusWLANTxBytes

TABLE 387 ruckusWLANTxBytes

Object Name	ruckusWLANTxBytes
Parent Node	ruckusWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.1.1.16
Description	The number of transmitted bytes.

ruckusWLANIndex

TABLE 388 ruckusWLANIndex

Object Name	ruckusWLANIndex
Parent Node	ruckusWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.1.1.19
Description	The unique value for each WLAN.

Ruckus WLAN AP

The following are the MIBs for RUCKUS-WLANAP group.

- [ruckusWLANAPMacAddr](#) on page 217
- [ruckusWLANAPUptime](#) on page 217
- [ruckusWLANAPSWversion](#) on page 217
- [ruckusWLANAPIPAddr](#) on page 217
- [ruckusWLANAPNumSta](#) on page 217

ruckusWLANAPMacAddr

TABLE 389 ruckusWLANAPMacAddr

Object Name	ruckusWLANAPMacAddr
Parent Node	ruckusWLANAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.1.1.1
Description	The MAC IP address of the AP.

ruckusWLANAPUptime

TABLE 390 ruckusWLANAPUptime

Object Name	ruckusWLANAPUptime
Parent Node	ruckusWLANAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.1.1.6
Description	The AP uptime.

ruckusWLANAPSWversion

TABLE 391 ruckusWLANAPSWversion

Object Name	ruckusWLANAPSWversion
Parent Node	ruckusWLANAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.1.1.7
Description	The software version.

ruckusWLANAPIPAddr

TABLE 392 ruckusWLANAPIPAddr

Object Name	ruckusWLANAPIPAddr
Parent Node	ruckusWLANAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.1.1.10
Description	The IP address.

ruckusWLANAPNumSta

TABLE 393 ruckusWLANAPNumSta

Object Name	ruckusWLANAPNumSta
Parent Node	ruckusWLANAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.1.1.15
Description	The number of client devices.

Ruckus SCG WLAN

The following are the MIBs for RUCKUS-SCGWLAN group.

- [ruckusSCGWLANSSID](#) on page 218

- [ruckusSCGWLANZone](#) on page 218
- [ruckusSCGWLANDomain](#) on page 218
- [ruckusSCGWLANNumSta](#) on page 218
- [ruckusSCGWLANRxBytes](#) on page 219
- [ruckusSCGWLANTxBytes](#) on page 219
- [ruckusSCGWLANAauthType](#) on page 219
- [ruckusSCGWLANIndex](#) on page 219

ruckusSCGWLANSSID

TABLE 394 ruckusSCGWLANSSID

Object Name	ruckusSCGWLANSSID
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.1
Description	The SSID of WLAN.

ruckusSCGWLANZone

TABLE 395 ruckusSCGWLANZone

Object Name	ruckusSCGWLANZone
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.2
Description	The WLAN zone.

ruckusSCGWLANDomain

TABLE 396 ruckusSCGWLANDomain

Object Name	ruckusSCGWLANDomain
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.3
Description	The WLAN domain.

ruckusSCGWLANNumSta

TABLE 397 ruckusSCGWLANNumSta

Object Name	ruckusSCGWLANNumSta
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.12
Description	The number of client devices.

ruckusSCGWLANRxBytes

TABLE 398 ruckusSCGWLANRxBytes

Object Name	ruckusSCGWLANRxBytes
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.14
Description	The number of received bytes.

ruckusSCGWLANTxBytes

TABLE 399 ruckusSCGWLANTxBytes

Object Name	ruckusSCGWLANTxBytes
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.16
Description	The number of transmitted bytes.

ruckusSCGWLANAuthType

TABLE 400 ruckusSCGWLANAuthType

Object Name	ruckusSCGWLANAuthType
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.17
Description	The authentication type.

ruckusSCGWLANIndex

TABLE 401 ruckusSCGWLANIndex

Object Name	ruckusSCGWLANIndex
Parent Node	ruckusSCGWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.1.2.1.99
Description	The unique value for each WLAN.

Ruckus SCG AP Statistics

The following are the MIBs for RUCKUS-SCGAP group.

MIB	MIB
ruckusSCGAPMac on page 220	ruckusSCGAPGroup on page 220
ruckusSCGAPZone on page 220	ruckusSCGAPDomain on page 220
ruckusSCGAPDomain on page 220	ruckusSCGAPUptime on page 221
ruckusSCGAPFWversion on page 221	ruckusSCGAPModel on page 221
ruckusSCGAPSerial on page 221	ruckusSCGAPIp on page 222
ruckusSCGAPIPType on page 222	ruckusSCGAPExtIp on page 222
ruckusSCGAPExtPort on page 222	ruckusSCGAPNumSta on page 222

Ruckus WLAN MIB

Ruckus SCG WLAN Statistics

MIB	MIB
ruckusSCGAPConnStatus on page 223	ruckusSCGAPRegStatus on page 223
ruckusSCGAPConfigStatus on page 223	ruckusSCGAPLocation on page 223
ruckusSCGAPGPSInfo on page 223	ruckusSCGAPMeshRole on page 224
ruckusSCGAPDescription on page 224	ruckusSCGAPRXBytes on page 224
ruckusSCGAPTXBytes on page 224	ruckusSCGAPIpsecSessionTime on page 224
ruckusSCGAPIpsecTXPkts on page 225	ruckusSCGAPIpsecRXPkts on page 225
ruckusSCGAPIpsecTXBytes on page 225	ruckusSCGAPIpsecRXBytes on page 225
ruckusSCGAPIpsecTXPktsDropped on page 225	ruckusSCGAPIpsecRXPktsDropped on page 226
ruckusSCGAPIpsecTXIdleTime on page 226	ruckusSCGAPIpsecRXIdleTime on page 226
ruckusSCGAPIPV6Addr on page 226	

ruckusSCGAPMac

TABLE 402 ruckusSCGAPMac

Object Name	ruckusSCGAPMac
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.1
Description	The MAC IP address of the AP.

ruckusSCGAPGroup

TABLE 403 ruckusSCGAPGroup

Object Name	ruckusSCGAPGroup
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.2
Description	The AP group.

ruckusSCGAPZone

TABLE 404 ruckusSCGAPZone

Object Name	ruckusSCGAPZone
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.3
Description	The AP zone.

ruckusSCGAPDomain

TABLE 405 ruckusSCGAPDomain

Object Name	ruckusSCGAPDomain
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.4
Description	The AP domain.

ruckusSCGAPName

TABLE 406 ruckusSCGAPName

Object Name	ruckusSCGAPName
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.5
Description	The AP name.

ruckusSCGAPUptime

TABLE 407 ruckusSCGAPUptime

Object Name	ruckusSCGAPUptime
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.6
Description	The AP uptime.

ruckusSCGAPFWversion

TABLE 408 ruckusSCGAPFWversion

Object Name	ruckusSCGAPFWversion
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.7
Description	The AP firmware version.

ruckusSCGAPModel

TABLE 409 ruckusSCGAPModel

Object Name	ruckusSCGAPModel
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.8
Description	The AP model.

ruckusSCGAPSerial

TABLE 410 ruckusSCGAPSerial

Object Name	ruckusSCGAPSerial
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.9
Description	The AP serial number.

ruckusSCGAPIp

TABLE 411 ruckusSCGAPIp

Object Name	ruckusSCGAPIp
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.10
Description	The AP IP address.

ruckusSCGAPIPType

TABLE 412 ruckusSCGAPIPType

Object Name	ruckusSCGAPIPType
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.11
Description	The AP IP address type.

ruckusSCGAPExtIp

TABLE 413 ruckusSCGAPExtIp

Object Name	ruckusSCGAPExtIp
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.12
Description	The external IP address.

ruckusSCGAPExtPort

TABLE 414 ruckusSCGAPExtPort

Object Name	ruckusSCGAPExtPort
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.13
Description	The external port number.

ruckusSCGAPNumSta

TABLE 415 ruckusSCGAPNumSta

Object Name	ruckusSCGAPNumSta
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.15
Description	The number of stations.

ruckusSCGAPConnStatus

TABLE 416 ruckusSCGAPConnStatus

Object Name	ruckusSCGAPConnStatus
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.16
Description	The connection status.

ruckusSCGAPRegStatus

TABLE 417 ruckusSCGAPRegStatus

Object Name	ruckusSCGAPRegStatus
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.17
Description	The registration status, which could either be pending, approved, rejected or swapped.

ruckusSCGAPConfigStatus

TABLE 418 ruckusSCGAPConfigStatus

Object Name	ruckusSCGAPConfigStatus
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.18
Description	The AP configuration status.

ruckusSCGAPLocation

TABLE 419 ruckusSCGAPLocation

Object Name	ruckusSCGAPLocation
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.19
Description	The AP location.

ruckusSCGAPGPSInfo

TABLE 420 ruckusSCGAPGPSInfo

Object Name	ruckusSCGAPGPSInfo
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.20
Description	The GPS information.

ruckusSCGAPMeshRole

TABLE 421 ruckusSCGAPMeshRole

Object Name	ruckusSCGAPMeshRole
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.21
Description	The AP mesh role.

ruckusSCGAPDescription

TABLE 422 ruckusSCGAPDescription

Object Name	ruckusSCGAPDescription
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.22
Description	The AP description.

ruckusSCGAPRXBytes

TABLE 423 ruckusSCGAPRXBytes

Object Name	ruckusSCGAPRXBytes
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.30
Description	The number of received bytes.

ruckusSCGAPTXXBytes

TABLE 424 ruckusSCGAPTXXBytes

Object Name	ruckusSCGAPTXXBytes
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.31
Description	The number of transmitted bytes.

ruckusSCGAPIpsecSessionTime

TABLE 425 ruckusSCGAPIpsecSessionTime

Object Name	ruckusSCGAPIpsecSessionTime
Parent Node	ruckusSCGAPTable
Object Identifier	1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.50
Description	The IPsec session time in seconds.

ruckusSCGAPIpsecTXPkts

TABLE 426 ruckusSCGAPIpsecTXPkts

Object Name	ruckusSCGAPIpsecTXPkts
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.55
Description	The number of packets transmitted in IPsec session.

ruckusSCGAPIpsecRXPkts

TABLE 427 ruckusSCGAPIpsecRXPkts

Object Name	ruckusSCGAPIpsecRXPkts
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.56
Description	The number of packets received in IPsec session.

ruckusSCGAPIpsecTXBytes

TABLE 428 ruckusSCGAPIpsecTXBytes

Object Name	ruckusSCGAPIpsecTXBytes
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.57
Description	The number of bytes transmitted in IPsec session.

ruckusSCGAPIpsecRXBytes

TABLE 429 ruckusSCGAPIpsecRXBytes

Object Name	ruckusSCGAPIpsecRXBytes
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.58
Description	The number of bytes received in IPsec session.

ruckusSCGAPIpsecTXPktsDropped

TABLE 430 ruckusSCGAPIpsecTXPktsDropped

Object Name	ruckusSCGAPIpsecTXPktsDropped
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.59
Description	The number of transmitted packets that were dropped in IPsec session.

ruckusSCGAPIpsecRXPktsDropped

TABLE 431 ruckusSCGAPIpsecRXPktsDropped

Object Name	ruckusSCGAPIpsecRXPktsDropped
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.60
Description	The number of received packets that were dropped in IPsec session.

ruckusSCGAPIpsecTXIdleTime

TABLE 432 ruckusSCGAPIpsecTXIdleTime

Object Name	ruckusSCGAPIpsecTXIdleTime
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.65
Description	The number of seconds since the last transmitted packet in IPsec session.

ruckusSCGAPIpsecRXIdleTime

TABLE 433 ruckusSCGAPIpsecRXIdleTime

Object Name	ruckusSCGAPIpsecRXIdleTime
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.66
Description	The number of seconds since the last received packet in IPsec session.

ruckusSCGAPIPV6Addr

TABLE 434 ruckusSCGAPIPV6Addr

Object Name	ruckusSCGAPIPV6Addr
Parent Node	ruckusSCGAPTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.2.1.150
Description	The IPv6 address of the AP.

Ruckus SCG WLAN SoftGRE Statistics

The following are the MIBs for RUCKUS-SCGWLANSoftGRE group.

- [ruckusSCGWLANAPSoftGREMacAddr](#) on page 227
- [ruckusSCGWLANAPSoftGREIndex](#) on page 227
- [ruckusSCGWLANAPSoftGREGWAddr](#) on page 227
- [ruckusSCGWLANAPSoftGREActive](#) on page 227
- [ruckusSCGWLANAPSoftGRETxBkts](#) on page 228
- [ruckusSCGWLANAPSoftGRETxBkts](#) on page 228
- [ruckusSCGWLANAPSoftGRERxBkts](#) on page 228
- [ruckusSCGWLANAPSoftGRERxBkts](#) on page 228

- [ruckusSCGWLANAPSoftGRETxErroredPkts](#) on page 228
- [ruckusSCGWLANAPSoftGRETxPktsErr](#) on page 229
- [ruckusSCGWLANAPSoftGRETxPktsDropped](#) on page 229
- [ruckusSCGWLANAPSoftGRETxPktsDropped](#) on page 229
- [ruckusSCGWLANAPSoftGRETxPktsFrag](#) on page 229
- [ruckusSCGWLANAPSoftGREICMPTotal](#) on page 229
- [ruckusSCGWLANAPSoftGREICMPNoReply](#) on page 230
- [ruckusSCGWLANAPSoftGREDisconnect](#) on page 230

ruckusSCGWLANAPSoftGREMacAddr

TABLE 435 ruckusSCGWLANAPSoftGREMacAddr

Object Name	ruckusSCGWLANAPSoftGREMacAddr
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.1
Description	The MAC IP address of the AP.

ruckusSCGWLANAPSoftGREIndex

TABLE 436 ruckusSCGWLANAPSoftGREIndex

Object Name	ruckusSCGWLANAPSoftGREIndex
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.2
Description	The SoftGRE server index.

ruckusSCGWLANAPSoftGREGWAddr

TABLE 437 ruckusSCGWLANAPSoftGREGWAddr

Object Name	ruckusSCGWLANAPSoftGREGWAddr
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.3
Description	The IP address or the FQDN of the SoftGRE server.

ruckusSCGWLANAPSoftGREActive

TABLE 438 ruckusSCGWLANAPSoftGREActive

Object Name	ruckusSCGWLANAPSoftGREActive
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.4
Description	The status of the SoftGRE server as either active or inactive.

ruckusSCGWLANAPSoftGRETxPkts

TABLE 439 ruckusSCGWLANAPSoftGRETxPkts

Object Name	ruckusSCGWLANAPSoftGRETxPkts
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.5
Description	The number of transmitted packets.

ruckusSCGWLANAPSoftGRETxBytes

TABLE 440 ruckusSCGWLANAPSoftGRETxBytes

Object Name	ruckusSCGWLANAPSoftGRETxBytes
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.6
Description	The number of transmitted bytes.

ruckusSCGWLANAPSoftGRERxPkts

TABLE 441 ruckusSCGWLANAPSoftGRERxPkts

Object Name	ruckusSCGWLANAPSoftGRERxPkts
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.7
Description	The number of received packets.

ruckusSCGWLANAPSoftGRERxBytes

TABLE 442 ruckusSCGWLANAPSoftGRERxBytes

Object Name	ruckusSCGWLANAPSoftGRERxBytes
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.8
Description	The number of received bytes.

ruckusSCGWLANAPSoftGRETxPktsErr

TABLE 443 ruckusSCGWLANAPSoftGRETxPktsErr

Object Name	ruckusSCGWLANAPSoftGRETxPktsErr
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.9
Description	The number of transmitted packets that had errors.

ruckusSCGWLANAPSoftGRERxPktsErr

TABLE 444 ruckusSCGWLANAPSoftGRERxPktsErr

Object Name	ruckusSCGWLANAPSoftGRERxPktsErr
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.10
Description	The number of received packets that had errors.

ruckusSCGWLANAPSoftGRETxBktsDropped

TABLE 445 ruckusSCGWLANAPSoftGRETxBktsDropped

Object Name	ruckusSCGWLANAPSoftGRETxBktsDropped
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.11
Description	The number of transmitted packets that dropped.

ruckusSCGWLANAPSoftGRERxPktsDropped

TABLE 446 ruckusSCGWLANAPSoftGRERxPktsDropped

Object Name	ruckusSCGWLANAPSoftGRERxPktsDropped
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.12
Description	The number of received packets that dropped.

ruckusSCGWLANAPSoftGRETxBktsFrag

TABLE 447 ruckusSCGWLANAPSoftGRETxBktsFrag

Object Name	ruckusSCGWLANAPSoftGRETxBktsFrag
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.13
Description	The number of oversized transmitted packets.

ruckusSCGWLANAPSoftGREICMPTotal

TABLE 448 ruckusSCGWLANAPSoftGREICMPTotal

Object Name	ruckusSCGWLANAPSoftGREICMPTotal
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.14
Description	The number of ICMP keep alive request messages.

ruckusSCGWLANAPSoftGREICMPNoReply**TABLE 449** ruckusSCGWLANAPSoftGREICMPNoReply

Object Name	ruckusSCGWLANAPSoftGREICMPNoReply
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.15
Description	The number of ICMP keep alive request messages that did not get a response.

ruckusSCGWLANAPSoftGREDisconnect**TABLE 450** ruckusSCGWLANAPSoftGREDisconnect

Object Name	ruckusSCGWLANAPSoftGREDisconnect
Parent Node	ruckusSCGWLANAPSoftGREStatsTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.1.1.2.3.1.16
Description	The number of disconnected messages.

Ruckus SCG Configuration WLAN Statistics

NOTE

SNMP set for ruckusSCGConfigWLANTable supports only a few OIDs. Read-only indicates that the particular SNMP set will not be supported.

The following are the MIBs for WLAN configuration nodes.

- [ruckusSCGConfigWLANID](#) on page 231
- [ruckusSCGConfigWLANSSID](#) on page 231
- [ruckusSCGConfigWLANDescription](#) on page 231
- [ruckusSCGConfigWLANName](#) on page 231
- [ruckusSCGZoneName](#) on page 231
- [ruckusSCGConfigWLANWLANServiceType](#) on page 232
- [ruckusSCGConfigWLANAuthentication](#) on page 232
- [ruckusSCGConfigWLANEncryption](#) on page 232
- [ruckusSCGConfigWLANWEPKeyIndex](#) on page 232
- [ruckusSCGConfigWLANWEPKey](#) on page 232
- [ruckusSCGConfigWLANWPACipherType](#) on page 233
- [ruckusSCGConfigWLANWPAKey](#) on page 233
- [ruckusSCGConfigWLANWirelessClientIsolation](#) on page 233
- [ruckusSCGConfigWLANZeroITActivation](#) on page 233
- [ruckusSCGConfigWLANServicePriority](#) on page 233
- [ruckusSCGConfigWLANAccountingUpdateInterval](#) on page 234
- [ruckusSCGConfigWLANVlanID](#) on page 234
- [ruckusSCGConfigWLANHideSSID](#) on page 234
- [ruckusSCGConfigWLANMaxClientsPerAP](#) on page 234

ruckusSCGConfigWLANID

TABLE 451 ruckusSCGConfigWLANID

Object Name	ruckusSCGConfigWLANID (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.1
Description	The wireless LAN (WLAN) identifier.

ruckusSCGConfigWLANSSID

TABLE 452 ruckusSCGConfigWLANSSID

Object Name	ruckusSCGConfigWLANSSID (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.2
Description	SSID for the wireless LAN (WLAN).

ruckusSCGConfigWLANDescription

TABLE 453 ruckusSCGConfigWLANDescription

Object Name	ruckusSCGConfigWLANDescription
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.3
Description	Description of the wireless LAN (WLAN).

ruckusSCGConfigWLANName

TABLE 454 ruckusSCGConfigWLANName

Object Name	ruckusSCGConfigWLANName (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.4
Description	Name of the wireless LAN (WLAN).

ruckusSCGZoneName

TABLE 455 ruckusSCGZoneName

Object Name	ruckusSCGZoneName (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.5
Description	Zone name of the wireless LAN (WLAN).

ruckusSCGConfigWLANWLANServiceType

TABLE 456 ruckusSCGConfigWLANWLANServiceType

Object Name	ruckusSCGConfigWLANWLANServiceType (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.8
Description	Service type of the wireless LAN (WLAN).

ruckusSCGConfigWLANAuthentication

TABLE 457 ruckusSCGConfigWLANAuthentication

Object Name	ruckusSCGConfigWLANAuthentication (read-only)
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.10
Description	Authentication method specified for the wireless LAN (WLAN).

ruckusSCGConfigWLANEncryption

TABLE 458 ruckusSCGConfigWLANEncryption

Object Name	ruckusSCGConfigWLANEncryption
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.12
Description	Encryption method specified for the wireless LAN (WLAN).

ruckusSCGConfigWLANWEPKeyIndex

TABLE 459 ruckusSCGConfigWLANWEPKeyIndex

Object Name	ruckusSCGConfigWLANWEPKeyIndex
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.15
Description	Specify the WEP key index for WEP encryption.

ruckusSCGConfigWLANWEPKey

TABLE 460 ruckusSCGConfigWLANWEPKey

Object Name	ruckusSCGConfigWLANWEPKey
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.16
Description	Specify the passphrase for WEP encryption method.

ruckusSCGConfigWLANWPACipherType

TABLE 461 ruckusSCGConfigWLANWPACipherType

Object Name	ruckusSCGConfigWLANWEPEKey
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.20
Description	Specify the cypher method for WPA encryption.

ruckusSCGConfigWLANWPAKey

TABLE 462 ruckusSCGConfigWLANWPAKey

Object Name	ruckusSCGConfigWLANWPAKey
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.21
Description	Specify the passphrase for WPA encryption.

ruckusSCGConfigWLANWirelessClientIsolation

TABLE 463 ruckusSCGConfigWLANWirelessClientIsolation

Object Name	ruckusSCGConfigWLANWirelessClientIsolation
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.128
Description	Specify the wireless client Isolation, where clients will be unable to communicate with each other or access any of the restricted subnet.

ruckusSCGConfigWLANZeroITActivation

TABLE 464 ruckusSCGConfigWLANZeroITActivation

Object Name	ruckusSCGConfigWLANZeroITActivation
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.30
Description	Enable the Zero IT activation service for wireless LAN.

ruckusSCGConfigWLANServicePriority

TABLE 465 ruckusSCGConfigWLANServicePriority

Object Name	ruckusSCGConfigWLANServicePriority
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.32
Description	Specify the quality of service (QOS) priority for wireless LAN.

ruckusSCGConfigWLANAccountingUpdateInterval

TABLE 466 ruckusSCGConfigWLANAccountingUpdateInterval

Object Name	ruckusSCGConfigWLANAccountingUpdateInterval
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.36
Description	Specify the interval in minutes for updating the accounting server.

ruckusSCGConfigWLANVlanID

TABLE 467 ruckusSCGConfigWLANVlanID

Object Name	ruckusSCGConfigWLANVlanID
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.45
Description	Specify the VLAN identifier of WLAN. If the VLAN ID is 1packets from WLAN will be untagged.

ruckusSCGConfigWLANHideSSID

TABLE 468 ruckusSCGConfigWLANHideSSID

Object Name	ruckusSCGConfigWLANHideSSID
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.50
Description	SSID will not be broadcasted by activating the hide tag.

ruckusSCGConfigWLANMaxClientsPerAP

TABLE 469 ruckusSCGConfigWLANMaxClientsPerAP

Object Name	ruckusSCGConfigWLANMaxClientsPerAP
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.2.2.1.1.1.1.55
Description	Specify the number of client devices that the AP can service for wireless LAN.

ruckusSCGConfigWLANSAEPassphrase

TABLE 470 ruckusSCGConfigWLANSAEPassphrase

Object Name	ruckusSCGConfigWLANSAEPassphrase
Parent Node	ruckusSCGConfigWLANTable
Object Identifier	.1.3.6.1.4.1.25053.1.4.2.2.1.1.1.1.23
Description	Specifies the SAE passphrase for WPA3 encryption.

Ruckus SCG Client Information

The following are the MIBs for client information nodes. These MIBs indicate information on the user equipment's MAC address and status. Operators would need to append the user equipment's MAC address to the string length of 6 (decimal format) as index after each OID to get the required information.

For MAC address of C8:AA:7C:8E:67:C4, it must be translated to equivalent decimal value of 202.170.124.142.103.196 for the query.

For example, use the following command to get the status of the client (with MAC C8:AA:7C:8E:67:C4):

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-MIB::ruckusCtrlClientStatus.  
6.202.170.124.142.103.196
```

NOTE

Length of the string index should always be 6. Read only indicates that the particular SNMP set will not be supported.

- [ruckusCtrlClientMac](#) on page 235
- [ruckusCtrlClientStatus](#) on page 235

ruckusCtrlClientMac

TABLE 471 ruckusCtrlClientMac

Object Name	ruckusCtrlClientMac (read only)
Parent Node	ruckusCtrlClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.1
Description	MAC address of the user equipment

ruckusCtrlClientStatus

TABLE 472 ruckusCtrlClientStatus

Object Name	ruckusCtrlClientStatus (read only)
Parent Node	ruckusCtrlClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.20
Description	The client status is either: 1 Unauthorized 2 Authorized

Ruckus TTG MIB

- Introduction..... 237
- Ruckus AAA..... 237
- Ruckus AAA Proxy..... 242
- Ruckus CGF..... 248
- Ruckus GTPU..... 251
- Ruckus GGSN GTPC..... 254
- Ruckus HLR..... 260

Introduction

The objects contained in the RUCKUS-TTG-MIB group provide information about TTG and their statistics.

NOTE

For details on alarms and events refer to *SmartZone Alarms and Events Guide*.

Ruckus AAA

The following are the MIBs for RUCKUS-AAA group.

MIB	MIB	MIB
ruckusAAAAaalp on page 237	ruckusAAANumSuccAuthPerm on page 238	ruckusAAANumFailAuthPerm on page 238
ruckusAAANumSuccAuthPsd on page 238	ruckusAAANumFailAuthPsd on page 238	ruckusAAANumSuccFastAuth on page 238
ruckusAAANumFailFastAuth on page 239	ruckusAAANumAuthUnknPsd on page 239	ruckusAAANumAuthUnknFR on page 239
ruckusAAANumIncompleteAuth on page 239	ruckusAAANumSuccAcc on page 239	ruckusAAANumFailAcc on page 240
ruckusAAANumRadAcsRq on page 240	ruckusAAANumRadAcsAcpt on page 240	ruckusAAANumRadAcsChlg on page 240
ruckusAAANumRadAcsRej on page 240	ruckusAAANumRadAccRq on page 241	ruckusAAANumRadAccAcpt on page 241
ruckusAAANumRadCoaRq on page 241	ruckusAAANumSuccCoaAcpt on page 241	ruckusAAANumFailCoaAcpt on page 241
ruckusAAANumRadDmRq on page 242	ruckusAAANumSuccDmAcpt on page 242	ruckusAAANumFailDmAcpt on page 242
ruckusAAAIndex on page 242		

ruckusAAAAaalp

TABLE 473 ruckusAAAAaalp

Object Name	ruckusAAAAaalp
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1
Description	The IP address of the AAA server

ruckusAAANumSuccAuthPerm

TABLE 474 ruckusAAANumSuccAuthPerm

Object Name	ruckusAAANumSuccAuthPerm
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.2
Description	The number of successful authentications using the Permanent ID .

ruckusAAANumFailAuthPerm

TABLE 475 ruckusAAANumFailAuthPerm

Object Name	ruckusAAANumFailAuthPerm
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.3
Description	The number of failed authentications using the Permanent ID .

ruckusAAANumSuccAuthPsd

TABLE 476 ruckusAAANumSuccAuthPsd

Object Name	ruckusAAANumSuccAuthPsd
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.4
Description	The number of successful authentications using the Pseudonym ID .

ruckusAAANumFailAuthPsd

TABLE 477 ruckusAAANumFailAuthPsd

Object Name	ruckusAAANumFailAuthPsd
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.5
Description	The number of failed authentications using the Pseudonym ID .

ruckusAAANumSuccFastAuth

TABLE 478 ruckusAAANumSuccFastAuth

Object Name	ruckusAAANumSuccFastAuth
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.6
Description	The number of successful authentications using Fast Re-auth ID .

ruckusAAANumFailFastAuth

TABLE 479 ruckusAAANumFailFastAuth

Object Name	ruckusAAANumFailFastAuth
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.7
Description	The number of failed authentications using Fast Re-auth ID .

ruckusAAANumAuthUnknPsd

TABLE 480 ruckusAAANumAuthUnknPsd

Object Name	ruckusAAANumAuthUnknPsd
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.8
Description	The number of authentication request for unknown Pseudonym ID .

ruckusAAANumAuthUnknFR

TABLE 481 ruckusAAANumAuthUnknFR

Object Name	ruckusAAANumAuthUnknFR
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.9
Description	The number of authentication request for unknown Fast Re-auth ID .

ruckusAAANumIncompleteAuth

TABLE 482 ruckusAAANumIncompleteAuth

Object Name	ruckusAAANumIncompleteAuth
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.10
Description	The number of incomplete authentications done.

ruckusAAANumSuccAcc

TABLE 483 ruckusAAANumSuccAcc

Object Name	ruckusAAANumSuccAcc
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.11
Description	The number of successful accounting sessions established.

ruckusAAANumFailAcc

TABLE 484 ruckusAAANumFailAcc

Object Name	ruckusAAANumFailAcc
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1.12
Description	The number of accounting sessions that could not be established.

ruckusAAANumRadAcsRq

TABLE 485 ruckusAAANumRadAcsRq

Object Name	ruckusAAANumRadAcsRq
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1.13
Description	The number of RADIUS access requests received from the NAS server.

ruckusAAANumRadAcsAcpt

TABLE 486 ruckusAAANumRadAcsAcpt

Object Name	ruckusAAANumRadAcsAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1.14
Description	The number of RADIUS access accepts sent to the NAS server.

ruckusAAANumRadAcsChlg

TABLE 487 ruckusAAANumRadAcsChlg

Object Name	ruckusAAANumRadAcsChlg
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1.15
Description	The number of RADIUS access challenge sent to the NAS server.

ruckusAAANumRadAcsRej

TABLE 488 ruckusAAANumRadAcsRej

Object Name	ruckusAAANumRadAcsRej
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.1.16
Description	The number of RADIUS access rejects sent to the NAS sever.

ruckusAAANumRadAccRq

TABLE 489 ruckusAAANumRadAccRq

Object Name	ruckusAAANumRadAccRq
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.17
Description	The number of RADIUS accounting requests received.

ruckusAAANumRadAccAcpt

TABLE 490 ruckusAAANumRadAccAcpt

Object Name	ruckusAAANumRadAccAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.18
Description	The number of RADIUS accounting accept sent.

ruckusAAANumRadCoaRq

TABLE 491 ruckusAAANumRadCoaRq

Object Name	ruckusAAANumRadCoaRq
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.19
Description	The number of RADIUS CoA requests sent to the NAS server.

ruckusAAANumSuccCoaAcpt

TABLE 492 ruckusAAANumSuccCoaAcpt

Object Name	ruckusAAANumSuccCoaAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.20
Description	The number of RADIUS CoA success responses received.

ruckusAAANumFailCoaAcpt

TABLE 493 ruckusAAANumFailCoaAcpt

Object Name	ruckusAAANumFailCoaAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.21
Description	The number of RADIUS CoA failure responses received.

ruckusAAANumRadDmRq

TABLE 494 ruckusAAANumRadDmRq

Object Name	ruckusAAANumRadDmRq
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.22
Description	The number of RADIUS DM requests sent.

ruckusAAANumSuccDmAcpt

TABLE 495 ruckusAAANumSuccDmAcpt

Object Name	ruckusAAANumSuccDmAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.23
Description	The number of RADIUS DM success responses received.

ruckusAAANumFailDmAcpt

TABLE 496 ruckusAAANumFailDmAcpt

Object Name	ruckusAAANumFailDmAcpt
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.24
Description	The number of RADIUS DM failure responses received.

ruckusAAAIndex

TABLE 497 ruckusAAAIndex

Object Name	ruckusAAAIndex
Parent Node	ruckusAAATable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.1.1.99
Description	The AAA index.

Ruckus AAA Proxy

The following are the MIBs for RUCKUS-AAA-Proxy group.

MIB	MIB	MIB
ruckusAAAProxyAaalp on page 243	ruckusAAAProxyNumSuccAuth on page 243	ruckusAAAProxyNumFailAuth on page 243
ruckusAAAProxyNumIncmpltAuth on page 243	ruckusAAAProxyNumSuccAcc on page 244	ruckusAAAProxyNumFailAcc on page 244
ruckusAAAProxyNumAcsRqRcvdNas on page 244	ruckusAAAProxyNumAcsRqSntAaa on page 244	ruckusAAAProxyNumAcsChRcvdAaa on page 244
ruckusAAAProxyNumAcsChSntNas on page 245	ruckusAAAProxyNumAcsAcpRcvdAaa on page 245	ruckusAAAProxyNumAcsAcpRcvdAaa on page 245
ruckusAAAProxyNumAcsAcpSntNas on page 245	ruckusAAAProxyNumAcsRejRcvdAaa on page 245	ruckusAAAProxyNumAcsRejSntNas on page 245

MIB	MIB	MIB
ruckusAAAProxyNumAccRqRcvdNas on page 246	ruckusAAAProxyNumAccRqSntAaa on page 246	ruckusAAAProxyNumAccRspRcdAaa on page 246
ruckusAAAProxyNumAccRspSntNas on page 246	ruckusAAAProxyNumCoaRcvdAaa on page 246	ruckusAAAProxyNumCoaSucSntAaa on page 247
ruckusAAAProxyNumCoaFailSntAaa on page 247	ruckusAAAProxyNumDmRcvdAaa on page 247	ruckusAAAProxyNumDmSucRcdNas on page 247
ruckusAAAProxyNumDmSucSntAaa on page 248	ruckusAAAProxyNumDmFailRcdNas on page 248	ruckusAAAProxyNumDmFailSntAaa on page 248
ruckusAAAProxyIndex on page 248		

ruckusAAAProxyAaalp

TABLE 498 ruckusAAAProxyAaalp

Object Name	ruckusAAAProxyAaalp
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.1
Description	The IP address of the AAA proxy server.

ruckusAAAProxyNumSuccAuth

TABLE 499 ruckusAAAProxyNumSuccAuth

Object Name	ruckusAAAProxyNumSuccAuth
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.2
Description	The number of successful authentications.

ruckusAAAProxyNumFailAuth

TABLE 500 ruckusAAAProxyNumFailAuth

Object Name	ruckusAAAProxyNumFailAuth
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.3
Description	The number of failed authentications.

ruckusAAAProxyNumIncmpltAuth

TABLE 501 ruckusAAAProxyNumIncmpltAuth

Object Name	ruckusAAAProxyNumIncmpltAuth
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.4
Description	The number of incomplete authentications.

ruckusAAAProxyNumSuccAcc

TABLE 502 ruckusAAAProxyNumSuccAcc

Object Name	ruckusAAAProxyNumSuccAcc
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.5
Description	The number of successful accounting sessions established.

ruckusAAAProxyNumFailAcc

TABLE 503 ruckusAAAProxyNumFailAcc

Object Name	ruckusAAAProxyNumFailAcc
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.6
Description	The number of accounting sessions that could not be established.

ruckusAAAProxyNumAcsRqRcvdNas

TABLE 504 ruckusAAAProxyNumAcsRqRcvdNas

Object Name	ruckusAAAProxyNumAcsRqRcvdNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.7
Description	The number of RADIUS access requests received from the NAS server.

ruckusAAAProxyNumAcsRqSntAaa

TABLE 505 ruckusAAAProxyNumAcsRqSntAaa

Object Name	ruckusAAAProxyNumAcsRqSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.8
Description	The number of RADIUS access requests sent to the AAA server.

ruckusAAAProxyNumAcsChRcvdAaa

TABLE 506 ruckusAAAProxyNumAcsChRcvdAaa

Object Name	ruckusAAAProxyNumAcsChRcvdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.9
Description	The number of RADIUS access challenge received from the AAA server.

ruckusAAAProxyNumAcsChSntNas

TABLE 507 ruckusAAAProxyNumAcsChSntNas

Object Name	ruckusAAAProxyNumAcsChSntNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.10
Description	The number of RADIUS access challenge sent to the NAS server.

ruckusAAAProxyNumAcsAcpRcvdAaa

TABLE 508 ruckusAAAProxyNumAcsAcpRcvdAaa

Object Name	ruckusAAAProxyNumAcsAcpRcvdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.11
Description	The number of RADIUS access accepts received from the AAA server.

ruckusAAAProxyNumAcsAcpSntNas

TABLE 509 ruckusAAAProxyNumAcsAcpSntNas

Object Name	ruckusAAAProxyNumAcsAcpSntNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.12
Description	The number of RADIUS access accepts sent to the NAS server.

ruckusAAAProxyNumAcsRejRcvdAaa

TABLE 510 ruckusAAAProxyNumAcsRejRcvdAaa

Object Name	ruckusAAAProxyNumAcsRejRcvdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.13
Description	The number of RADIUS access rejects received from the AAA server.

ruckusAAAProxyNumAcsRejSntNas

TABLE 511 ruckusAAAProxyNumAcsRejSntNas

Object Name	ruckusAAAProxyNumAcsRejSntNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.14
Description	The number of RADIUS access rejects sent to the NAS server.

ruckusAAAProxyNumAccRqRcvdNas

TABLE 512 ruckusAAAProxyNumAccRqRcvdNas

Object Name	ruckusAAAProxyNumAccRqRcvdNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.15
Description	The number of RADIUS accounting requests received from the NAS server.

ruckusAAAProxyNumAccRqSntAaa

TABLE 513 ruckusAAAProxyNumAccRqSntAaa

Object Name	ruckusAAAProxyNumAccRqSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.16
Description	The number of RADIUS accounting requests sent to the AAA server.

ruckusAAAProxyNumAccRspRcdAaa

TABLE 514 ruckusAAAProxyNumAccRspRcdAaa

Object Name	ruckusAAAProxyNumAccRspRcdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.17
Description	The number of RADIUS accounting response received from the AAA server.

ruckusAAAProxyNumAccRspSntNas

TABLE 515 ruckusAAAProxyNumAccRspSntNas

Object Name	ruckusAAAProxyNumAccRspSntNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.18
Description	The number of RADIUS accounting response sent to the NAS server.

ruckusAAAProxyNumCoaRcvdAaa

TABLE 516 ruckusAAAProxyNumCoaRcvdAaa

Object Name	ruckusAAAProxyNumCoaRcvdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.19
Description	The number of RADIUS CoA requests received from the AAA server.

ruckusAAAProxyNumCoaSucSntAaa

TABLE 517 ruckusAAAProxyNumCoaSucSntAaa

Object Name	ruckusAAAProxyNumCoaSucSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.20
Description	The number of RADIUS CoA success responses sent to the AAA server.

ruckusAAAProxyNumCoaFailSntAaa

TABLE 518 ruckusAAAProxyNumCoaFailSntAaa

Object Name	ruckusAAAProxyNumCoaFailSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.21
Description	The number of RADIUS CoA failure responses sent to the AAA server.

ruckusAAAProxyNumDmRcvdAaa

TABLE 519 ruckusAAAProxyNumDmRcvdAaa

Object Name	ruckusAAAProxyNumDmRcvdAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.22
Description	The number of RADIUS DM requests received from the AAA server.

ruckusAAAProxyNumDmSntNas

TABLE 520 ruckusAAAProxyNumDmSntNas

Object Name	ruckusAAAProxyNumDmSntNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.23
Description	The number of RADIUS DM requests sent to the NAS server.

ruckusAAAProxyNumDmSucRcdNas

TABLE 521 ruckusAAAProxyNumDmSucRcdNas

Object Name	ruckusAAAProxyNumDmSucRcdNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.24
Description	The number of RADIUS DM success responses received from the NAS server.

ruckusAAAProxyNumDmSucSntAaa

TABLE 522 ruckusAAAProxyNumDmSucSntAaa

Object Name	ruckusAAAProxyNumDmSucSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.25
Description	The number of RADIUS DM success responses sent to the AAA server.

ruckusAAAProxyNumDmFailRcdNas

TABLE 523 ruckusAAAProxyNumDmFailRcdNas

Object Name	ruckusAAAProxyNumDmFailRcdNas
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.26
Description	The number of RADIUS DM failure responses received from the NAS server.

ruckusAAAProxyNumDmFailSntAaa

TABLE 524 ruckusAAAProxyNumDmFailSntAaa

Object Name	ruckusAAAProxyNumDmFailSntAaa
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.27
Description	The number of RADIUS DM failure responses sent to the AAA server.

ruckusAAAProxyIndex

TABLE 525 ruckusAAAProxyIndex

Object Name	ruckusAAAProxyIndex
Parent Node	ruckusAAAProxyTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.2.1.1.99
Description	The AAA proxy index.

Ruckus CGF

The following are the MIBs for RUCKUS-CGF group.

- [ruckusCGFCgfSvcName](#) on page 249
- [ruckusCGFCgfIp](#) on page 249
- [ruckusCGFNumSuccCdrTxfd](#) on page 249
- [ruckusCGFNumCdrTxfrFail](#) on page 249
- [ruckusCGFNumCdrPossDup](#) on page 250
- [ruckusCGFNumCdrRIsReq](#) on page 250

- [ruckusCGFNumCdrCnclReq](#) on page 250
- [ruckusCGFNumDrtrReqSnt](#) on page 250
- [ruckusCGFNumDrtrSucRspRcvd](#) on page 250
- [ruckusCGFNumDrtrFailRspRcvd](#) on page 251
- [ruckusCGFIndex](#) on page 251

ruckusCGFCgfSrvcName

TABLE 526 ruckusCGFCgfSrvcName

Object Name	ruckusCGFCgfSrvcName
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.1
Description	The CGF service name as configured in the controller web interface.

ruckusCGFCgflp

TABLE 527 ruckusCGFCgflp

Object Name	ruckusCGFCgflp
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.2
Description	The IP address of the CGF server.

ruckusCGFNumSuccCdrTxfd

TABLE 528 ruckusCGFNumSuccCdrTxfd

Object Name	ruckusCGFNumSuccCdrTxfd
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.3
Description	The number of successful CDRs transferred to the CGF server.

ruckusCGFNumCdrTxfrFail

TABLE 529 ruckusCGFNumCdrTxfrFail

Object Name	ruckusCGFNumCdrTxfrFail
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.4
Description	The number of failed CDRs transfer.

ruckusCGFNumCdrPossDup

TABLE 530 ruckusCGFNumCdrPossDup

Object Name	ruckusCGFNumCdrPossDup
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.5
Description	The number of CDRs sent as duplicates.

ruckusCGFNumCdrRlsReq

TABLE 531 ruckusCGFNumCdrRlsReq

Object Name	ruckusCGFNumCdrRlsReq
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.6
Description	The number of CDRs that the controller requires to be released from the CGF server.

ruckusCGFNumCdrCnclReq

TABLE 532 ruckusCGFNumCdrCnclReq

Object Name	ruckusCGFNumCdrCnclReq
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.7
Description	The number of CDRs that the controller requires to be canceled from the CGF server.

ruckusCGFNumDrtrReqSnt

TABLE 533 ruckusCGFNumDrtrReqSnt

Object Name	ruckusCGFNumDrtrReqSnt
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.8
Description	The number of data record transfer request sent.

ruckusCGFNumDrtrSucRspRcvd

TABLE 534 ruckusCGFNumDrtrSucRspRcvd

Object Name	ruckusCGFNumDrtrSucRspRcvd
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.9
Description	The number of successful data record transfer responses received.

ruckusCGFNumDrtrFailRspRcvd

TABLE 535 ruckusCGFNumDrtrFailRspRcvd

Object Name	ruckusCGFNumDrtrFailRspRcvd
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.10
Description	The number of failed data record transfer responses.

ruckusCGFIndex

TABLE 536 ruckusCGFIndex

Object Name	ruckusCGFIndex
Parent Node	ruckusCGFTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.3.1.1.99
Description	The CGF index.

Ruckus GTPU

The following are the MIBs for RUCKUS-GTPU group.

- [ruckusGTPUGgsnIPAddr](#) on page 251
- [ruckusGTPUTxPkts](#) on page 252
- [ruckusGTPUTxBytes](#) on page 252
- [ruckusGTPURxPkts](#) on page 252
- [ruckusGTPURxBytes](#) on page 252
- [ruckusGTPUTxDrops](#) on page 252
- [ruckusGTPURxDrops](#) on page 253
- [ruckusGTPUNumBadGTPU](#) on page 253
- [ruckusGTPUNumRXTeidInvalid](#) on page 253
- [ruckusGTPUNumTXTeidInvalid](#) on page 253
- [ruckusGTPUNumOfEchoRX](#) on page 253
- [ruckusGTPUIndex](#) on page 254

ruckusGTPUGgsnIPAddr

TABLE 537 ruckusGTPUGgsnIPAddr

Object Name	ruckusGTPUGgsnIPAddr
Parent Node	ruckusGTPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.1
Description	The GGSN IP address.

ruckusGPUTxPkts

TABLE 538 ruckusGPUTxPkts

Object Name	ruckusGPUTxPkts
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.2
Description	The number of packets sent to GGSN.

ruckusGPUTxBytes

TABLE 539 ruckusGPUTxBytes

Object Name	ruckusGPUTxBytes
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.3
Description	The number of bytes sent to GGSN.

ruckusGTPURxPkts

TABLE 540 ruckusGTPURxPkts

Object Name	ruckusGTPURxPkts
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.4
Description	The number of packets received from GGSN.

ruckusGTPURxBytes

TABLE 541 ruckusGTPURxBytes

Object Name	ruckusGTPURxBytes
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.5
Description	The number of bytes received from GGSN.

ruckusGPUTxDrops

TABLE 542 ruckusGPUTxDrops

Object Name	ruckusGPUTxDrops
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.6
Description	The number of packets sent to GGSN that failed.

ruckusGTPURxDrops

TABLE 543 ruckusGTPURxDrops

Object Name	ruckusGTPURxDrops
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.7
Description	The number of packets sent from GGSN that failed.

ruckusGTPUNumBadGTPU

TABLE 544 ruckusGTPUNumBadGTPU

Object Name	ruckusGTPUNumBadGTPU
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.8
Description	The number of packets received from GGSN with bad GTP header.

ruckusGTPUNumRXTeidInvalid

TABLE 545 ruckusGTPUNumRXTeidInvalid

Object Name	ruckusGTPUNumRXTeidInvalid
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.9
Description	The number of packets received from GGSN with bad TEID.

ruckusGTPUNumTXTeidInvalid

TABLE 546 ruckusGTPUNumTXTeidInvalid

Object Name	ruckusGTPUNumTXTeidInvalid
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.10
Description	The number of packets sent to GGSN with bad / unknown TEID.

ruckusGTPUNumOfEchoRX

TABLE 547 ruckusGTPUNumOfEchoRX

Object Name	ruckusGTPUNumOfEchoRX
Parent Node	ruckusGPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.11
Description	The number of GTPU echo requests received from GGSN.

ruckusGTPUIndex

TABLE 548 ruckusGTPUIndex

Object Name	ruckusGTPUIndex
Parent Node	ruckusGTPUTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.4.1.1.99
Description	The GTPU index.

Ruckus GGSN GTPC

The following are the MIBs for RUCKUS-GGSNGTPC group.

MIB	MIB	MIB
ruckusGGSNGTPCGsnIp on page 254	ruckusGGSNGTPCNumActPdp on page 254	ruckusGGSNGTPCSuccPdpCrt on page 255
ruckusGGSNGTPCFailPdpCrt on page 255	ruckusGGSNGTPCSuccPdpUpdRcvd on page 255	ruckusGGSNGTPCFailPdpUpdRcvd on page 255
ruckusGGSNGTPCSuccPdpUpdInitRM on page 255	ruckusGGSNGTPCFailPdpUpdInitRM on page 256	ruckusGGSNGTPCSuccPdpUpdInitAAA on page 256
ruckusGGSNGTPCFailPdpUpdInitAAA on page 256	ruckusGGSNGTPCSuccPdpUpdInitHLR on page 256	ruckusGGSNGTPCFailPdpUpdInitHLR on page 256
ruckusGGSNGTPCSuccDelPdpRcvd on page 257	ruckusGGSNGTPCFailDelPdpRcvd on page 257	ruckusGGSNGTPCSuccDelPdpInitErr on page 257
ruckusGGSNGTPCFailDelPdpInitErr on page 257	ruckusGGSNGTPCSuccDelPdpInitDM on page 257	ruckusGGSNGTPCFailDelPdpInitDM on page 258
ruckusGGSNGTPCSuccDelPdpInitHLR on page 258	ruckusGGSNGTPCFailDelPdpInitHLR on page 258	ruckusGGSNGTPCSuccDelPdpInitSCG on page 258
ruckusGGSNGTPCSuccDelPdpInitAP on page 259	ruckusGGSNGTPCFailDelPdpInitAP on page 259	ruckusGGSNGTPCSuccDelPdpInitD on page 259
ruckusGGSNGTPCFailDelPdpInitD on page 259	ruckusGGSNGTPCSuccDelPdpInitClnt on page 259	ruckusGGSNGTPCFailDelPdpInitClnt on page 260
ruckusGGSNGTPCIndex on page 260		

ruckusGGSNGTPCGsnIp

TABLE 549 ruckusGGSNGTPCGsnIp

Object Name	ruckusGGSNGTPCGsnIp
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.1
Description	The IP address of the GGSN for creating the PDP context.

ruckusGGSNGTPCNumActPdp

TABLE 550 ruckusGGSNGTPCNumActPdp

Object Name	ruckusGGSNGTPCNumActPdp
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.2
Description	The number of active PDP contexts that exists for a specified GGSN.

ruckusGGSNGTPCSuccPdpCrt

TABLE 551 ruckusGGSNGTPCSuccPdpCrt

Object Name	ruckusGGSNGTPCSuccPdpCrt
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.3
Description	The number of PDP contexts created successfully.

ruckusGGSNGTPCFailPdpCrt

TABLE 552 ruckusGGSNGTPCFailPdpCrt

Object Name	ruckusGGSNGTPCFailPdpCrt
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.4
Description	The number of PDP contexts that could not be created.

ruckusGGSNGTPCSuccPdpUpdRcvd

TABLE 553 ruckusGGSNGTPCSuccPdpUpdRcvd

Object Name	ruckusGGSNGTPCSuccPdpUpdRcvd
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.5
Description	The number of successful updates from GGSN.

ruckusGGSNGTPCFailPdpUpdRcvd

TABLE 554 ruckusGGSNGTPCFailPdpUpdRcvd

Object Name	ruckusGGSNGTPCFailPdpUpdRcvd
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.6
Description	The number of failed updates from GGSN.

ruckusGGSNGTPCSuccPdpUpdInitRM

TABLE 555 ruckusGGSNGTPCSuccPdpUpdInitRM

Object Name	ruckusGGSNGTPCSuccPdpUpdInitRM
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.7
Description	The number of successful roaming updates.

ruckusGGSNGTPCFailPdpUpdInitRM

TABLE 556 ruckusGGSNGTPCFailPdpUpdInitRM

Object Name	ruckusGGSNGTPCFailPdpUpdInitRM
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.8
Description	The number of failed roaming updates.

ruckusGGSNGTPCSuccPdpUpdInitAAA

TABLE 557 ruckusGGSNGTPCSuccPdpUpdInitAAA

Object Name	ruckusGGSNGTPCSuccPdpUpdInitAAA
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.9
Description	The number of successful updates based on CoA from the AAA server.

ruckusGGSNGTPCFailPdpUpdInitAAA

TABLE 558 ruckusGGSNGTPCFailPdpUpdInitAAA

Object Name	ruckusGGSNGTPCFailPdpUpdInitAAA
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.10
Description	The number of failed updates based on CoA from the AAA server.

ruckusGGSNGTPCSuccPdpUpdInitHLR

TABLE 559 ruckusGGSNGTPCSuccPdpUpdInitHLR

Object Name	ruckusGGSNGTPCSuccPdpUpdInitHLR
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.11
Description	The number of successful updates based on HLR events.

ruckusGGSNGTPCFailPdpUpdInitHLR

TABLE 560 ruckusGGSNGTPCFailPdpUpdInitHLR

Object Name	ruckusGGSNGTPCFailPdpUpdInitHLR
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.12
Description	The number of failed updates based on HLR events.

ruckusGGSNGTPCSuccDelPdpRcvd

TABLE 561 ruckusGGSNGTPCSuccDelPdpRcvd

Object Name	ruckusGGSNGTPCSuccDelPdpRcvd
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.13
Description	The number of successful deletes from GGSN.

ruckusGGSNGTPCFailDelPdpRcvd

TABLE 562 ruckusGGSNGTPCFailDelPdpRcvd

Object Name	ruckusGGSNGTPCFailDelPdpRcvd
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.14
Description	The number of failed deletes from GGSN.

ruckusGGSNGTPCSuccDelPdpInitErr

TABLE 563 ruckusGGSNGTPCSuccDelPdpInitErr

Object Name	ruckusGGSNGTPCSuccDelPdpInitErr
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.15
Description	The number of successful deletes based on critical errors.

ruckusGGSNGTPCFailDelPdpInitErr

TABLE 564 ruckusGGSNGTPCFailDelPdpInitErr

Object Name	ruckusGGSNGTPCFailDelPdpInitErr
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.16
Description	The number of failed deletes based on critical errors.

ruckusGGSNGTPCSuccDelPdpInitDM

TABLE 565 ruckusGGSNGTPCSuccDelPdpInitDM

Object Name	ruckusGGSNGTPCSuccDelPdpInitDM
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.17
Description	The number of successful deletes from the AAA server, based on the DM.

ruckusGGSNGTPCFailDelPdpInitDM

TABLE 566 ruckusGGSNGTPCFailDelPdpInitDM

Object Name	ruckusGGSNGTPCFailDelPdpInitDM
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.18
Description	The number of failed deletes from the AAA server based on DM.

ruckusGGSNGTPCSuccDelPdpInitHLR

TABLE 567 ruckusGGSNGTPCSuccDelPdpInitHLR

Object Name	ruckusGGSNGTPCSuccDelPdpInitHLR
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.19
Description	The number of successful deletes based on HLR events.

ruckusGGSNGTPCFailDelPdpInitHLR

TABLE 568 ruckusGGSNGTPCFailDelPdpInitHLR

Object Name	ruckusGGSNGTPCFailDelPdpInitHLR
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.20
Description	The number of failed deletes based on HLR events.

ruckusGGSNGTPCSuccDelPdpInitSCG

TABLE 569 ruckusGGSNGTPCSuccDelPdpInitSCG

Object Name	ruckusGGSNGTPCSuccDelPdpInitSCG
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.21
Description	The number of successful deletes based on the timeout.

ruckusGGSNGTPCFailDelPdpInitSCG

TABLE 570 ruckusGGSNGTPCFailDelPdpInitSCG

Object Name	ruckusGGSNGTPCFailDelPdpInitSCG
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.22
Description	The number of failed deletes based on the timeout.

ruckusGGSNGTPCSuccDelPdplnitAP

TABLE 571 ruckusGGSNGTPCSuccDelPdplnitAP

Object Name	ruckusGGSNGTPCSuccDelPdplnitAP
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.23
Description	The number of successful deletes from the AP based on the timeout.

ruckusGGSNGTPCFailDelPdplnitAP

TABLE 572 ruckusGGSNGTPCFailDelPdplnitAP

Object Name	ruckusGGSNGTPCFailDelPdplnitAP
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.24
Description	The number of failed deletes from the AP based on the timeout.

ruckusGGSNGTPCSuccDelPdplnitD

TABLE 573 ruckusGGSNGTPCSuccDelPdplnitD

Object Name	ruckusGGSNGTPCSuccDelPdplnitD
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.25
Description	The number of successful deletes from data plane based on the timeout.

ruckusGGSNGTPCFailDelPdplnitD

TABLE 574 ruckusGGSNGTPCFailDelPdplnitD

Object Name	ruckusGGSNGTPCFailDelPdplnitD
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.26
Description	The number of failed deletes from data plane based on the timeout.

ruckusGGSNGTPCSuccDelPdplnitClnt

TABLE 575 ruckusGGSNGTPCSuccDelPdplnitClnt

Object Name	ruckusGGSNGTPCSuccDelPdplnitClnt
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.27
Description	The number of successful client initiated deletes.

ruckusGGSNGTPCFailDelPdplnitClnt

TABLE 576 ruckusGGSNGTPCFailDelPdplnitClnt

Object Name	ruckusGGSNGTPCFailDelPdplnitClnt
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.28
Description	The number of failed client initiated deletes.

ruckusGGSNGTPCIndex

TABLE 577 ruckusGGSNGTPCIndex

Object Name	ruckusGGSNGTPCIndex
Parent Node	ruckusGGSNGTPCTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.5.1.1.99
Description	The GGSN index

Ruckus HLR

The following are the MIBs for RUCKUS-HLR group.

MIB	MIB	MIB
ruckusHLRHlrSrvcName on page 260	ruckusHLRNumSucAuthInfoReqSim on page 261	ruckusHLRNumAuthInfoRqErrHlrSim on page 261
ruckusHLRNumAuthInfoRqTmotSim on page 261	ruckusHLRNumSucAuthInfoReqAka on page 261	ruckusHLRNumAuthInfoRqErrHlrAka on page 261
ruckusHLRNumAuthInfoRqTmotAka on page 262	ruckusHLRNumUpdGprsSuccSim on page 262	ruckusHLRNumUpdGprsFailErrSim on page 262
ruckusHLRNumUpdGprsFailTmoSim on page 262	ruckusHLRNumUpdGprsSuccAka on page 262	ruckusHLRNumUpdGprsFailErrAka on page 263
ruckusHLRNumUpdGprsFailTmoAka on page 263	ruckusHLRNumRstDtaSuccSim on page 263	ruckusHLRNumRstDtaFailErrHlrSim on page 263
ruckusHLRNumRstDtaFailTmoSim on page 263	ruckusHLRNumRstDtaSuccAka on page 264	ruckusHLRNumRstDtaFailErrHlrAka on page 264
ruckusHLRNumRstDtaFailTmoAka on page 264	ruckusHLRNumInsrtDtaSuccSim on page 264	ruckusHLRNumInsrtDtaFailSim on page 264
ruckusHLRNumInsrtDtaSuccAka on page 265	ruckusHLRNumInsrtDtaFailAka on page 265	ruckusHLRNumSaInsrtDtaSucc on page 265
ruckusHLRNumSaInsrtDtaFailUnkS on page 265	ruckusHLRNumSaInsrtDtaFailErr on page 265	ruckusHLRNumCfgAssoc on page 266
ruckusHLRNumActAssoc on page 266	ruckusHLRNumRtgFail on page 266	ruckusHLRIndex on page 266

ruckusHLRHlrSrvcName

TABLE 578 ruckusHLRHlrSrvcName

Object Name	ruckusHLRHlrSrvcName
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.1
Description	The HLR service name as configured in the web interface.

ruckusHLRNumSucAuthInfoReqSim

TABLE 579 ruckusHLRNumSucAuthInfoReqSim

Object Name	ruckusHLRNumSucAuthInfoReqSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.2
Description	The number of successful procedures from MAP-SEND-AUTH-INFO-REQ for EAP-SIM.

ruckusHLRNumAuthInfoRqErrHlrSim

TABLE 580 ruckusHLRNumAuthInfoRqErrHlrSim

Object Name	ruckusHLRNumAuthInfoRqErrHlrSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.3
Description	The number of failed procedures from MAP-SEND-AUTH-INFO-REQ for EAP-SIM.

ruckusHLRNumAuthInfoRqTmotSim

TABLE 581 ruckusHLRNumAuthInfoRqTmotSim

Object Name	ruckusHLRNumAuthInfoRqTmotSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.4
Description	The number of failed procedures from MAP-SEND-AUTH-INFO-REQ for EAP-SIM due to timeout.

ruckusHLRNumSucAuthInfoReqAka

TABLE 582 ruckusHLRNumSucAuthInfoReqAka

Object Name	ruckusHLRNumSucAuthInfoReqAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.5
Description	The number of successful procedures from MAP-SEND-AUTH-INFO-REQ for EAP-AKA.

ruckusHLRNumAuthInfoRqErrHlrAka

TABLE 583 ruckusHLRNumAuthInfoRqErrHlrAka

Object Name	ruckusHLRNumAuthInfoRqErrHlrAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.6
Description	The number of failed procedures from MAP-SEND-AUTH-INFO-REQ for EAP-AKA.

ruckusHLRNumAuthInfoRqTmotAka

TABLE 584 ruckusHLRNumAuthInfoRqTmotAka

Object Name	ruckusHLRNumAuthInfoRqTmotAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.7
Description	The number of failed procedures from MAP-SEND-AUTH-INFO-REQ for EAP-AKA due to timeout.

ruckusHLRNumUpdGprsSuccSim

TABLE 585 ruckusHLRNumUpdGprsSuccSim

Object Name	ruckusHLRNumUpdGprsSuccSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.8
Description	The number of successful procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-SIM.

ruckusHLRNumUpdGprsFailErrSim

TABLE 586 ruckusHLRNumUpdGprsFailErrSim

Object Name	ruckusHLRNumUpdGprsFailErrSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.9
Description	The number of failed procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-SIM.

ruckusHLRNumUpdGprsFailTmoSim

TABLE 587 ruckusHLRNumUpdGprsFailTmoSim

Object Name	ruckusHLRNumUpdGprsFailTmoSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.10
Description	The number of failed procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-SIM due to timeout.

ruckusHLRNumUpdGprsSuccAka

TABLE 588 ruckusHLRNumUpdGprsSuccAka

Object Name	ruckusHLRNumUpdGprsSuccAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.11
Description	The number of successful procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-AKA.

ruckusHLRNumUpdGprsFailErrAka

TABLE 589 ruckusHLRNumUpdGprsFailErrAka

Object Name	ruckusHLRNumUpdGprsFailErrAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.12
Description	The number of failed procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-AKA.

ruckusHLRNumUpdGprsFailTmoAka

TABLE 590 ruckusHLRNumUpdGprsFailTmoAka

Object Name	ruckusHLRNumUpdGprsFailTmoAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.13
Description	The number of failed procedures from MAP-GPRS-UPDATE-LOCATION-REQ for EAP-AKA due to timeout.

ruckusHLRNumRstDtaSuccSim

TABLE 591 ruckusHLRNumRstDtaSuccSim

Object Name	ruckusHLRNumRstDtaSuccSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.14
Description	The number of successful procedures from MAP-RESTORE-DATA-REQ for EAP-SIM.

ruckusHLRNumRstDtaFailErrHlrSim

TABLE 592 ruckusHLRNumRstDtaFailErrHlrSim

Object Name	ruckusHLRNumRstDtaFailErrHlrSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.15
Description	The number of failed procedures from MAP-RESTORE-DATA-REQ for EAP-SIM.

ruckusHLRNumRstDtaFailTmoSim

TABLE 593 ruckusHLRNumRstDtaFailTmoSim

Object Name	ruckusHLRNumRstDtaFailTmoSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.16
Description	The number of failed procedures from MAP-RESTORE-DATA-REQ for EAP-SIM due to timeout.

ruckusHLRNumRstDtaSuccAka

TABLE 594 ruckusHLRNumRstDtaSuccAka

Object Name	ruckusHLRNumRstDtaSuccAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.17
Description	The number of successful procedures from MAP-RESTORE-DATA-REQ for EAP-AKA.

ruckusHLRNumRstDtaFailErrHlrAka

TABLE 595 ruckusHLRNumRstDtaFailErrHlrAka

Object Name	ruckusHLRNumRstDtaFailErrHlrAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.18
Description	The number of failed procedures from MAP-RESTORE-DATA-REQ for EAP-AKA.

ruckusHLRNumRstDtaFailTmoAka

TABLE 596 ruckusHLRNumRstDtaFailTmoAka

Object Name	ruckusHLRNumRstDtaFailTmoAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.19
Description	The number of failed procedures from MAP-RESTORE-DATA-REQ for EAP-AKA due to timeout.

ruckusHLRNumInsrtDtaSuccSim

TABLE 597 ruckusHLRNumInsrtDtaSuccSim

Object Name	ruckusHLRNumInsrtDtaSuccSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.20
Description	The number of successful procedures from MAP-INSERT-SUBSCRIBER-DATA for EAP-SIM.

ruckusHLRNumInsrtDtaFailSim

TABLE 598 ruckusHLRNumInsrtDtaFailSim

Object Name	ruckusHLRNumInsrtDtaFailSim
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.21
Description	The number of failed procedures from MAP-INSERT-SUBSCRIBER-DATA for EAP-SIM.

ruckusHLRNumInsrtDtaSuccAka

TABLE 599 ruckusHLRNumInsrtDtaSuccAka

Object Name	ruckusHLRNumInsrtDtaSuccAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.22
Description	The number of successful procedures from MAP-INSERT-SUBSCRIBER-DATA for EAP-AKA.

ruckusHLRNumInsrtDtaFailAka

TABLE 600 ruckusHLRNumInsrtDtaFailAka

Object Name	ruckusHLRNumInsrtDtaFailAka
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.23
Description	The number of failed procedures from MAP-INSERT-SUBSCRIBER-DATA for EAP-AKA.

ruckusHLRNumSalsnrtDtaSucc

TABLE 601 ruckusHLRNumSalsnrtDtaSucc

Object Name	ruckusHLRNumSalsnrtDtaSucc
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.24
Description	The number of MAP-INSERT-SUBSCRIBER-DATA request received.

ruckusHLRNumSalsnrtDtaFailUnkS

TABLE 602 ruckusHLRNumSalsnrtDtaFailUnkS

Object Name	ruckusHLRNumSalsnrtDtaFailUnkS
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.25
Description	The number of failed MAP INSERT-SUB-DATA operations (unknown subscriber)

ruckusHLRNumSalsnrtDtaFailErr

TABLE 603 ruckusHLRNumSalsnrtDtaFailErr

Object Name	ruckusHLRNumSalsnrtDtaFailErr
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.26
Description	The number of failed MAP INSERT-SUB-DATA operations (decode failure or any other error).

ruckusHLRNumCfgAssoc

TABLE 604 ruckusHLRNumCfgAssoc

Object Name	ruckusHLRNumCfgAssoc
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.27
Description	The number of associations configured.

ruckusHLRNumActAssoc

TABLE 605 ruckusHLRNumActAssoc

Object Name	ruckusHLRNumActAssoc
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.28
Description	The number of active associations.

ruckusHLRNumRtgFail

TABLE 606 ruckusHLRNumRtgFail

Object Name	ruckusHLRNumRtgFail
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.29
Description	The number of routing failure on outbound MAP messages.

ruckusHLRIndex

TABLE 607 ruckusHLRIndex

Object Name	ruckusHLRIndex
Parent Node	ruckusHLRTable
Object Identifier	.1.3.6.1.4.1.25053.1.3.3.1.1.7.1.1.99
Description	The HLR index.

Ruckus AP MIB

- Ruckus Controller AP Group Table..... 267
- Ruckus Controller Summary AP Table..... 269
- Ruckus Controller AP Client Table..... 273
- Ruckus Controller AP Table..... 274
- Ruckus Controller Radio Table..... 291
- Ruckus Controller AP WLAN Table..... 304
- Ruckus Controller Client Table..... 314
- AP Wired Client Table..... 321
- Ruckus Wired Client Table..... 322

Ruckus Controller AP Group Table

The following MIBs define the information for the controller AP Group table (**ruckusCtrlApGroupTable**) for users to easily retrieve the information for all AP groups. The index of the table is *ZoneId* and *ApGroupId*.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

To query:

- all AP groups in zone1, use the command:

```
snmpwalk ruckusCtrlApGroupTable.zone1
```

- a specific apgroup1 in zone1, use the command:

```
snmpwalk ruckusCtrlApGroupTable.zone1.apgroup1
```

- a specific apgroup1 in an unknown domain, use the below command:

```
snmpwalk ruckusCtrlApGroupTable.all.apgroup1
```

- [ruckusCtrlApGroupEntry](#) on page 268
- [ruckusCtrlApGroupZoneId](#) on page 268
- [ruckusCtrlApApGroupId](#) on page 278
- [ruckusCtrlApApGroupName](#) on page 278
- [ruckusCtrlApGroupNumApConnected](#) on page 268
- [ruckusCtrlApGroupNumApDisconnected](#) on page 269

ruckusCtrlApGroupEntry

TABLE 608 ruckusCtrlApGroupEntry

Object Name	ruckusCtrlApGroupEntry
Parent Node	ruckusCtrlApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1
Description	The index to table is ApGroupId and Zoneld.

ruckusCtrlApGroupZoneld

TABLE 609 ruckusCtrlApGroupZoneld

Object Name	ruckusCtrlApGroupZoneld
Parent Node	ruckusCTRLApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.5.1.1
Description	The index is Zoneld.

ruckusCtrlApGroupId

TABLE 610 ruckusCtrlApGroupId

Object Name	ruckusCtrlApGroupId
Parent Node	ruckusCTRLApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.5.1.2
Description	The index is ApGroup Id.

ruckusCtrlApGroupName

TABLE 611 ruckusCtrlApGroupName

Object Name	ruckusCtrlApGroupName
Parent Node	ruckusCTRLApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.5.1.3
Description	Displays the name of the AP Group.

ruckusCtrlApGroupNumApConnected

TABLE 612 ruckusCtrlApGroupNumApConnected

Object Name	ruckusCtrlApGroupNumApConnected
Parent Node	ruckusCTRLApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.5.1.9
Description	Number of APs in the AP Group that are currently connected to the controller.

ruckusCtrlApGroupNumApDisconnected

TABLE 613 ruckusCtrlApGroupNumApDisconnected

Object Name	ruckusCtrlApGroupNumApDisconnected
Parent Node	ruckusCTRLApGroupTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.5.1.10
Description	Number of APs in the AP Group that are currently disconnected from the controller.

Ruckus Controller Summary AP Table

The following MIBs define the information for the controller **SummaryAP** table (**ruckusCtrlSummaryApTable**) for users to easily access basic information of all the APs. The index of the table is *DomainId*, *Zoneld* and *ApGroupId* and *ApMac*. Using the *ApMac* in this table, users can go to AP table to get more details.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

To query:

- all APs in domain 1, use the command:

```
snmpwalk ruckusCtrlSummaryApTable.domain1
```

- all APs in a specific zone1 under domain1, use the command:

```
snmpwalk ruckusCtrlSummaryApTable.domain1.zone1
```

- all APs in a specific zone1 in an unknown domain, use the command:

```
snmpwalk ruckusCtrlSummaryApTable.all.zone1
```

- all information, use the command:

```
snmpwalk {option} ruckusCTRLSummaryApTable
```

- all ApMAC in domain1, use the command:

```
snmpwalk {option}ruckusCtrlSummryApMac.domain.{domain1 UUID}
```

- For a domain with UUID 87b593c6-50e7-4d57-87f0-2820bb3878ef, use the following command:

```
snmpwalk -mall -v2c -c public 172.17.50.103 RUCKUS-CTRL-  
MIB::ruckusCtrlSummaryApMac.domain.\'87b593c6-50e7- 4d57-87f0-2820bb3878ef\'
```

- The MIB browser should translate UUID 87b593c6-50e7-4d57-87f0- 2820bb3878ef into decimal form:

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.6.1.135.181.147.19  
8.80.231.77.87.135.240.40.32.187.56.120.239 where 1  
represents the input UUID as domain UUID  
  
135.181.147.198.80.231.77.87.135.240.40.32.187.56.120  
.239: UUID 87b593c6-50e7-4d57-87f0-2820bb3878ef in  
decimal form(16 numbers)
```

Ruckus AP MIB

Ruckus Controller Summary AP Table

- all ApMAC in zone1, use the command:

```
snmpwalk {option} ruckusCtrlSummaryApMac.zone.{zone1 UUID}
```

- For a zone with UUID 8f0c4245-4bc7-4f5a-8f76-a8137443833e, use the following command:

```
snmpwalk -mall -v2c -c public 172.17.50.103 RUCKUS-CTRL-  
MIB::ruckusCtrlSummaryApMac.zone.\'8f0c4245-4bc7- 4f5a-8f76-a8137443833e\'
```

- The MIB browser should translate UUID 8f0c4245-4bc7-4f5a-8f76- a8137443833e into decimal form:

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.6.2.143.12.66.69.7  
5.199.79.90.143.118.168.19.116.67.131.62 where 2  
represents the input UUID as zone UUID.  
  
143.12.66.69.75.199.79.90.143.118.168.19.116.67.131.6  
2: UUID 8f0c4245-4bc7-4f5a-8f76-a8137443833e in decimal  
form(16 numbers)
```

- all ApMAC in apgroup1, use the command:

```
snmpwalk {option}ruckusCtrlSummaryApMac.apgroup.{apgroup UUID}
```

- For ApGroup with UUID 84136003-bd53-4ca7-a19a-63254fcdfe2d, use the following command:

```
snmpwalk -mall -v2c -c public 172.17.50.103 RUCKUS-CTRL-  
MIB::ruckusCtrlSummaryApMac.apgroup.\'84136003-bd53- 4ca7-a19a-63254fcdfe2d\'
```

- The MIB browser should translate UUID 84136003-bd53-4ca7-a19a- 63254fcdfe2d into decimal form:

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.1.8.1.6.3.132.19.96.3.18  
9.83.76.167.161.154.99.37.79.205.254.45 where 3  
represents the input UUID as ApGroup UUID.  
  
132.19.96.3.189.83.76.167.161.154.99.37.79.205.254.45  
: UUID 84136003-bd53-4ca7-a19a-63254fcdfe2d in decimal  
form(16 numbers)
```

- [ruckusCtrlSummaryApEntry](#) on page 271
- [ruckusCtrlSummaryApIndexType](#) on page 271
- [ruckusCtrlSummaryApIndexUUID](#) on page 271
- [ruckusCtrlSummaryApDomainId](#) on page 271
- [ruckusCtrlSummaryApZoneId](#) on page 271
- [ruckusCtrlSummaryApApGroupId](#) on page 272
- [ruckusCtrlSummaryApMac](#) on page 272
- [ruckusCtrlSummaryApDomainName](#) on page 272
- [ruckusCtrlSummaryApZoneName](#) on page 272
- [ruckusCtrlSummaryApName](#) on page 273
- [ruckusCtrlSummaryApLocation](#) on page 273

ruckusCtrlSummaryApEntry

TABLE 614 ruckusCtrlSummaryApEntry

Object Name	ruckusCtrlSummaryApEntry
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1
Description	The index to this table is: <ul style="list-style-type: none"> • ruckusCtrlSummaryApIndexType • ruckusCtrlSummaryApIndexUUID • ruckusCtrlSummaryApMacApGroupId

ruckusCtrlSummaryApIndexType

TABLE 615 ruckusCtrlSummaryApIndexType

Object Name	ruckusCtrlSummaryApIndexType
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.1
Description	The UUID index type - domain(1), zone(2), apgroup(3) For example: snmpwalk ruckusCtrlSummaryApTable.domain.{uuid} for known DomainId snmpwalk ruckusCtrlSummaryApTable.zone.{uuid} for known ZoneId snmpwalk ruckusCtrlSummaryApTable.ApGroup.{uuid} for known ApGroupId

ruckusCtrlSummaryApIndexUUID

TABLE 616 ruckusCtrlSummaryApIndexUUID

Object Name	ruckusCtrlSummaryApIndexUUID
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.2
Description	UUID for query entry, which can be the UUID of domain, zone, or AP Group.

ruckusCtrlSummaryApDomainId

TABLE 617 ruckusCtrlSummaryApDomainId

Object Name	ruckusCtrlSummaryApDomainId
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.3
Description	The domain identifier.

ruckusCtrlSummaryApZoneId

TABLE 618 ruckusCtrlSummaryApZoneId

Object Name	ruckusCtrlSummaryApZoneId
Parent Node	ruckusCtrlSummaryApTable

Ruckus AP MIB

Ruckus Controller Summary AP Table

TABLE 618 ruckusCtrlSummaryApZoneId (continued)

Object Name	ruckusCtrlSummaryApZoneId
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.4
Description	The zone identifier.

ruckusCtrlSummaryApApGroupId

TABLE 619 ruckusCtrlSummaryApApGroupId

Object Name	ruckusCtrlSummaryApApGroupId
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.5
Description	The AP Group identifier.

ruckusCtrlSummaryApMac

TABLE 620 ruckusCtrlSummaryApMac

Object Name	ruckusCtrlSummaryApMac
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.6
Description	The AP MAC address.

ruckusCtrlSummaryApDomainName

TABLE 621 ruckusCtrlSummaryApDomainName

Object Name	ruckusCtrlSummaryApDomainName
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.11
Description	Displays the domain name.

ruckusCtrlSummaryApZoneName

TABLE 622 ruckusCtrlSummaryApZoneName

Object Name	ruckusCtrlSummaryApZoneName
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.12
Description	The AP zone name.

ruckusCtrlSummaryApName

TABLE 623 ruckusCtrlSummaryApName

Object Name	ruckusCtrlSummaryApName
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.17
Description	The name of the AP.

ruckusCtrlSummaryApLocation

TABLE 624 ruckusCtrlSummaryApLocation

Object Name	ruckusCtrlSummaryApLocation
Parent Node	ruckusCtrlSummaryApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.8.1.18
Description	The AP location.

Ruckus Controller AP Client Table

The following MIBs define the information for the controller **Client** table (**ruckusCtrlApClientTable**) for users to easily access basic information of all the clients in a specific AP. Using the *ClientMac* in this table, users can go to Client table to get more details about this client. The index of the table is the *ApMac*.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

- [ruckusCtrlApClientEntry](#) on page 274
- [ruckusCtrlApClientApMac](#) on page 274
- [ruckusCtrlApClientMac](#) on page 274

To query:

- all clients in a specific ap1, the following command can be used:

```
snmpwalk ruckusCtrlApClientTable.ap1
```

- all information, use the command format:

```
snmpwalk {option} ruckusCTRLSummaryApTable
```

- all AP MAC in domain1, use the command format:

```
snmpwalk {option}ruckusCtrlSummryApMac.domain.{domain1 UUID}
```

Ruckus AP MIB

Ruckus Controller AP Table

- A MAC address of C8:AA:7C:8E:67:C4 must be translated to the equivalent decimal value of 202.170.124.142.103.196 for the query.

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-MIB::ruck- usCtrlApClientMac.6.202.170.124.142.103.196,  
where the  
length of the string index is always 6.
```

```
202.170.124.142.103.196: MAC Address C8:AA:7C:8E:67:C4  
in decimal form
```

- The MIB browser should translate the MAC address into decimal form as:

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1.6.6.202.170.124.14  
2.103.196
```

```
200.170.124.142.103.196: MAC Address C8:AA:7C:8E:67:C4  
in decimal form
```

ruckusCtrlApClientEntry

TABLE 625 ruckusCtrlApClientEntry

Object Name	ruckusCtrlApClientEntry
Parent Node	ruckusCtrlApClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1
Description	The index to this table is ApMac.

ruckusCtrlApClientApMac

TABLE 626 ruckusCtrlApClientApMac

Object Name	ruckusCtrlApClientApMac
Parent Node	ruckusCtrlApClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1.1
Description	The AP MAC address.

ruckusCtrlApClientMac

TABLE 627 ruckusCtrlApClientMac

Object Name	ruckusCtrlApClientMac
Parent Node	ruckusCtrlApClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1.6
Description	The client MAC address.

Ruckus Controller AP Table

The following MIBs define the information for the controller **AP** table (**ruckusCtrlApTable**) for users to easily access to all information of the AP. Using the ApMac in this table, users get more details about this AP. The index of the table is the ApMac.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

To get the information of an AP with MAC C8:AA:7C:8E:67:C4, use the command format:

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-MIB::ruck- usCtrlApMac.6.200.170.124.142.103.196 where the length of string index, is always 6.
```

```
200.170.124.142.103.196: MAC Address C8:AA:7C:8E:67:C4 in decimal form
```

- [ruckusCtrlApEntry](#) on page 277
- [ruckusCtrlApMac](#) on page 277
- [ruckusCtrlApDomainId](#) on page 277
- [ruckusCtrlApDomainName](#) on page 277
- [ruckusCtrlApZoneId](#) on page 277
- [ruckusCtrlApZoneName](#) on page 278
- [ruckusCtrlApApGroupId](#) on page 278
- [ruckusCtrlApApGroupName](#) on page 278
- [ruckusCtrlApIp](#) on page 278
- [ruckusCtrlApIpv6](#) on page 278
- [ruckusCtrlApNetmask](#) on page 279
- [ruckusCtrlApGateway](#) on page 279
- [ruckusCtrlApIpDnsSvr1](#) on page 279
- [ruckusCtrlApIpDnsSvr2](#) on page 279
- [ruckusCtrlApIpv6DnsSvr1](#) on page 279
- [ruckusCtrlApIpv6DnsSvr2](#) on page 280
- [ruckusCtrlApName](#) on page 280
- [ruckusCtrlApDescription](#) on page 280
- [ruckusCtrlApStatus](#) on page 280
- [ruckusCtrlApModel](#) on page 280
- [ruckusCtrlApSerialNumber](#) on page 281
- [ruckusCtrlApSwVersion](#) on page 281
- [ruckusCtrlApLocation](#) on page 281
- [ruckusCtrlApGpsInfo](#) on page 281
- [ruckusCtrlApTemperature](#) on page 281
- [ruckusCtrlApUptime](#) on page 282
- [ruckusCtrlApLastConfSyncTime](#) on page 282
- [ruckusCtrlApCpuUtilization](#) on page 282
- [ruckusCtrlApTotalMemory](#) on page 282

Ruckus AP MIB

Ruckus Controller AP Table

- [ruckusCtrlApFreeMemory](#) on page 282
- [ruckusCtrlApFreeStorage](#) on page 283
- [ruckusCtrlApEtherPortStatus](#) on page 283
- [ruckusCtrlApCableModemMac](#) on page 283
- [ruckusCtrlApCableModemSerialNumber](#) on page 283
- [ruckusCtrlApNumRadios](#) on page 284
- [ruckusCtrlApNumWlans](#) on page 284
- [ruckusCtrlApNumAssocClients](#) on page 284
- [ruckusCtrlApStatsRxBytes](#) on page 284
- [ruckusCtrlApStatsTxBytes](#) on page 284
- [ruckusCtrlApStatsRxDataBytes](#) on page 285
- [ruckusCtrlApStatsTxDataBytes](#) on page 285
- [ruckusCtrlApStatsRxPkts](#) on page 285
- [ruckusCtrlApStatsTxPkts](#) on page 285
- [ruckusCtrlApStatsRxDataPkts](#) on page 285
- [ruckusCtrlApStatsTxDataPkts](#) on page 286
- [ruckusCtrlApStatsRxErrorPkts](#) on page 286
- [ruckusCtrlApStatsTxErrorPkts](#) on page 286
- [ruckusCtrlApStatsRxDropPkts](#) on page 286
- [ruckusCtrlApStatsTxDropPkts](#) on page 286
- [ruckusCtrlApMeshRole](#) on page 287
- [ruckusCtrlApNumMeshHops](#) on page 287
- [ruckusCtrlApConnectScgCplp](#) on page 287
- [ruckusCtrlApConnectScgCplpv6](#) on page 287
- [ruckusCtrlApConnectScgDplp](#) on page 287
- [ruckusCtrlApConnectScgDplpv6](#) on page 288
- [ruckusCtrlApLanStatsRxBytes](#) on page 288
- [ruckusCtrlApLanStatsTxBytes](#) on page 288
- [ruckusCtrlApLanStatsRxPkts](#) on page 288
- [ruckusCtrlApLanStatsTxPkts](#) on page 288
- [ruckusCtrlApLanStatsRxErrorPkts](#) on page 289
- [ruckusCtrlApLanStatsTxErrorPkts](#) on page 289
- [ruckusCtrlApLanStatsRxDroppedPkts](#) on page 289
- [ruckusCtrlApLanStatsTxDroppedPkts](#) on page 289
- [ruckusCtrlApIpsecRxBytes](#) on page 289
- [ruckusCtrlApIpsecTxBytes](#) on page 290
- [ruckusCtrlApIpsecRxPkts](#) on page 290
- [ruckusCtrlApIpsecTxPkts](#) on page 290
- [ruckusCtrlApIpsecRxDropPkts](#) on page 290

- [ruckusCtrlAPIpsecTxDropPkts](#) on page 290
- [ruckusCtrlAPIpsecSessionTime](#) on page 291
- [ruckusCtrlAPIpsecRxIdleTime](#) on page 291
- [ruckusCtrlAPIpsecTxIdleTime](#) on page 291

ruckusCtrlApEntry

TABLE 628 ruckusCtrlApEntry

Object Name	ruckusCtrlApEntry
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1
Description	The index to this table is ApMac

ruckusCtrlApMac

TABLE 629 ruckusCtrlApMac

Object Name	ruckusCtrlApMac
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.1
Description	The AP MAC address.

ruckusCtrlApDomainId

TABLE 630 ruckusCtrlApDomainId

Object Name	ruckusCtrlApDomainId
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.2
Description	The root domain identifier (the domain under admin domain)

ruckusCtrlApDomainName

TABLE 631 ruckusCtrlApDomainName

Object Name	ruckusCtrlApDomainName
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.3
Description	Displays the domain name.

ruckusCtrlApZoneId

TABLE 632 ruckusCtrlApZoneId

Object Name	ruckusCtrlApZoneId
Parent Node	ruckusCtrlApTable

TABLE 632 ruckusCtrlApZoneId (continued)

Object Name	ruckusCtrlApZoneId
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.4
Description	The zone UUID.

ruckusCtrlApZoneName

TABLE 633 ruckusCtrlApZoneName

Object Name	ruckusCtrlApZoneName
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.5
Description	Displays the zone name.

ruckusCtrlApApGroupId

TABLE 634 ruckusCtrlApApGroupId

Object Name	ruckusCtrlApApGroupId
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.6
Description	The AP Group UUID.

ruckusCtrlApApGroupName

TABLE 635 ruckusCtrlApApGroupName

Object Name	ruckusCtrlApApGroupName
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.7
Description	The AP Group name.

ruckusCtrlApIp

TABLE 636 ruckusCtrlApIp

Object Name	ruckusCtrlApIp
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.12
Description	The IP address.

ruckusCtrlApIpv6

TABLE 637 ruckusCtrlApIpv6

Object Name	ruckusCtrlApIpv6
Parent Node	ruckusCtrlApTable

TABLE 637 ruckusCtrlApIpv6 (continued)

Object Name	ruckusCtrlApIpv6
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.13
Description	The IPv6 address.

ruckusCtrlApNetmask

TABLE 638 ruckusCtrlApNetmask

Object Name	ruckusCtrlApNetmask
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.14
Description	The netmask address.

ruckusCtrlApGateway

TABLE 639 ruckusCtrlApGateway

Object Name	ruckusCtrlApGateway
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.15
Description	The gateway server address.

ruckusCtrlApIpdnsSvr1

TABLE 640 ruckusCtrlApIpdnsSvr1

Object Name	ruckusCtrlApIpdnsSvr1
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.16
Description	The primary DNS server address.

ruckusCtrlApIpdnsSvr2

TABLE 641 ruckusCtrlApIpdnsSvr2

Object Name	ruckusCtrlApIpdnsSvr2
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.17
Description	The secondary DNS server address.

ruckusCtrlApIpv6DnsSvr1

TABLE 642 ruckusCtrlApIpv6DnsSvr1

Object Name	ruckusCtrlApIpv6DnsSvr1
Parent Node	ruckusCtrlApTable

Ruckus AP MIB

Ruckus Controller AP Table

TABLE 642 ruckusCtrlApIpv6DnsSvr1 (continued)

Object Name	ruckusCtrlApIpv6DnsSvr1
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.22
Description	The primary DNS server IPv6 address.

ruckusCtrlApIpv6DnsSvr2

TABLE 643 ruckusCtrlApIpv6DnsSvr2

Object Name	ruckusCtrlApIpv6DnsSvr2
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.23
Description	The secondary DNS server IPv6 address.

ruckusCtrlApName

TABLE 644 ruckusCtrlApName

Object Name	ruckusCtrlApName
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.28
Description	Displays the AP name.

ruckusCtrlApDescription

TABLE 645 ruckusCtrlApDescription

Object Name	ruckusCtrlApDescription
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.29
Description	The AP description.

ruckusCtrlApStatus

TABLE 646 ruckusCtrlApStatus

Object Name	ruckusCtrlApStatus
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.30.6.116.62.43.58.110.192
Description	The AP status type, which is: 0: not available (busy or not running) 1: connected.

ruckusCtrlApModel

TABLE 647 ruckusCtrlApModel

Object Name	ruckusCtrlApModel
Parent Node	ruckusCtrlApTable

TABLE 647 ruckusCtrlApModel (continued)

Object Name	ruckusCtrlApModel
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.31
Description	The AP model type.

ruckusCtrlApSerialNumber

TABLE 648 ruckusCtrlApSerialNumber

Object Name	ruckusCtrlApSerialNumber
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.32
Description	The AP serial number.

ruckusCtrlApSwVersion

TABLE 649 ruckusCtrlApSwVersion

Object Name	ruckusCtrlApSwVersion
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.33
Description	The AP software version.

ruckusCtrlApLocation

TABLE 650 ruckusCtrlApLocation

Object Name	ruckusCtrlApLocation
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.34
Description	The AP location information.

ruckusCtrlApGpsInfo

TABLE 651 ruckusCtrlApGpsInfo

Object Name	ruckusCtrlApGpsInfo
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.35
Description	The AP GPS information.

ruckusCtrlApTemperature

TABLE 652 ruckusCtrlApTemperature

Object Name	ruckusCtrlApTemperature
Parent Node	ruckusCtrlApTable

TABLE 652 ruckusCtrlApTemperature (continued)

Object Name	ruckusCtrlApTemperature
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.36
Description	The AP temperature information.

ruckusCtrlApUptime

TABLE 653 ruckusCtrlApUptime

Object Name	ruckusCtrlApUptime
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.41
Description	Number of minutes elapsed since the AP was last rebooted.

ruckusCtrlApLastConfSyncTime

TABLE 654 ruckusCtrlApLastConfSyncTime

Object Name	ruckusCtrlApLastConfSyncTime
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.45
Description	The last configuration synchronization displayed as time.

ruckusCtrlApCpuUtilization

TABLE 655 ruckusCtrlApCpuUtilization

Object Name	ruckusCtrlApCpuUtilization
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.50
Description	The percentage of CPU utilization.

ruckusCtrlApTotalMemory

TABLE 656 ruckusCtrlApTotalMemory

Object Name	ruckusCtrlApTotalMemory
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.51
Description	The total memory in KB.

ruckusCtrlApFreeMemory

TABLE 657 ruckusCtrlApFreeMemory

Object Name	ruckusCtrlApFreeMemory
Parent Node	ruckusCtrlApTable

TABLE 657 ruckusCtrlApFreeMemory (continued)

Object Name	ruckusCtrlApFreeMemory
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.52
Description	Free memory in KB.

ruckusCtrlApFreeStorage

TABLE 658 ruckusCtrlApFreeStorage

Object Name	ruckusCtrlApFreeStorage
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.53
Description	Flash free memory in KB.

ruckusCtrlApEtherPortStatus

TABLE 659 ruckusCtrlApEtherPortStatus

Object Name	ruckusCtrlApEtherPortStatus
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.54.6.116.62.43.58.110.192
Description	AP Ethernet port physical link status as: 0: Down 1: Up

ruckusCtrlApCableModemMac

TABLE 660 ruckusCtrlApCableModemMac

Object Name	ruckusCtrlApCableModemMac
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.56
Description	The AP MAC address of the cable modem.

ruckusCtrlApCableModemSerialNumber

TABLE 661 ruckusCtrlApCableModemSerialNumber

Object Name	ruckusCtrlApCableModemSerialNumber
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.57
Description	Serial number of the AP MAC cable modem.

ruckusCtrlApNumRadios

TABLE 662 ruckusCtrlApNumRadios

Object Name	ruckusCtrlApNumRadios
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.62
Description	Total number of radios.

ruckusCtrlApNumWlans

TABLE 663 ruckusCtrlApNumWlans

Object Name	ruckusCtrlApNumWlans
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.63
Description	Total number of WLANs.

ruckusCtrlApNumAssocClients

TABLE 664 ruckusCtrlApNumAssocClients

Object Name	ruckusCtrlApNumAssocClients
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.65
Description	Number of clients associated with the AP.

ruckusCtrlApStatsRxBytes

TABLE 665 ruckusCtrlApStatsRxBytes

Object Name	ruckusCtrlApStatsRxBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.71
Description	The total number of received bytes.

ruckusCtrlApStatsTxBytes

TABLE 666 ruckusCtrlApStatsTxBytes

Object Name	ruckusCtrlApStatsTxBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.72
Description	The total number of transmitted bytes.

ruckusCtrlApStatsRxDataBytes

TABLE 667 ruckusCtrlApStatsRxDataBytes

Object Name	ruckusCtrlApStatsRxDataBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.73
Description	The total number of data packet bytes received.

ruckusCtrlApStatsTxDataBytes

TABLE 668 ruckusCtrlApStatsTxDataBytes

Object Name	ruckusCtrlApStatsTxDataBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.74
Description	The total number of data packet bytes transmitted.

ruckusCtrlApStatsRxPkts

TABLE 669 ruckusCtrlApStatsRxPkts

Object Name	ruckusCtrlApStatsRxPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.77
Description	The total number of packet counts received.

ruckusCtrlApStatsTxPkts

TABLE 670 ruckusCtrlApStatsTxPkts

Object Name	ruckusCtrlApStatsTxPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.78
Description	Total number of packets counts transmitted.

ruckusCtrlApStatsRxDataPkts

TABLE 671 ruckusCtrlApStatsRxDataPkts

Object Name	ruckusCtrlApStatsRxDataPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.79
Description	The total number of data packets counts received.

ruckusCtrlApStatsTxDataPkts

TABLE 672 ruckusCtrlApStatsTxDataPkts

Object Name	ruckusCtrlApStatsTxDataPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.80
Description	The total number of data packets counts transmitted.

ruckusCtrlApStatsRxErrorPkts

TABLE 673 ruckusCtrlApStatsRxErrorPkts

Object Name	ruckusCtrlApStatsRxErrorPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.81
Description	Error count of AP wireless received.

ruckusCtrlApStatsTxErrorPkts

TABLE 674 ruckusCtrlApStatsTxErrorPkts

Object Name	ruckusCtrlApStatsTxErrorPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.82
Description	Error count of AP wireless transmitted.

ruckusCtrlApStatsRxDropPkts

TABLE 675 ruckusCtrlApStatsRxDropPkts

Object Name	ruckusCtrlApStatsRxDropPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.83
Description	Dropped count of AP wireless received.

ruckusCtrlApStatsTxDropPkts

TABLE 676 ruckusCtrlApStatsTxDropPkts

Object Name	ruckusCtrlApStatsTxDropPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.84
Description	Dropped count of AP wireless transmitted.

ruckusCtrlApMeshRole

TABLE 677 ruckusCtrlApMeshRole

Object Name	ruckusCtrlApMeshRole
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.89
Description	AP Mesh role: <ul style="list-style-type: none"> • 0: disable • 1: rap • 2: map • 3: emap • 4: mesh-is-down • 5: mesh-role-is-undefined

ruckusCtrlApNumMeshHops

TABLE 678 ruckusCtrlApNumMeshHops

Object Name	ruckusCtrlApNumMeshHops
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.90
Description	The total number of mesh hops.

ruckusCtrlApConnectScgCplp

TABLE 679 ruckusCtrlApConnectScgCplp

Object Name	ruckusCtrlApConnectScgCplp
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.95
Description	The controller's control plane IP address that the AP connects.

ruckusCtrlApConnectScgCplpv6

TABLE 680 ruckusCtrlApConnectScgCplpv6

Object Name	ruckusCtrlApConnectScgCplpv6
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.96
Description	The controller's control plane IPv6 address that the AP connects.

ruckusCtrlApConnectScgDplp

TABLE 681 ruckusCtrlApConnectScgDplp

Object Name	ruckusCtrlApConnectScgDplp
Parent Node	ruckusCtrlApTable

Ruckus AP MIB

Ruckus Controller AP Table

TABLE 681 ruckusCtrlApConnectScgDplp (continued)

Object Name	ruckusCtrlApConnectScgDplp
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.97
Description	The controller's data plane IP address that the AP connects.

ruckusCtrlApConnectScgDplpv6

TABLE 682 ruckusCtrlApConnectScgDplpv6

Object Name	ruckusCtrlApConnectScgDplpv6
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.98
Description	The controller's data plane IPv6 address that the AP connects.

ruckusCtrlApLanStatsRxBytes

TABLE 683 ruckusCtrlApLanStatsRxBytes

Object Name	ruckusCtrlApLanStatsRxBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.103
Description	The total number of bytes received on the LAN port.

ruckusCtrlApLanStatsTxBytes

TABLE 684 ruckusCtrlApLanStatsTxBytes

Object Name	ruckusCtrlApLanStatsTxBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.104
Description	The total number of bytes transmitted on the LAN port.

ruckusCtrlApLanStatsRxPkts

TABLE 685 ruckusCtrlApLanStatsRxPkts

Object Name	ruckusCtrlApLanStatsRxPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.105
Description	The total number of packets received on the LAN port.

ruckusCtrlApLanStatsTxPkts

TABLE 686 ruckusCtrlApLanStatsTxPkts

Object Name	ruckusCtrlApLanStatsTxPkts
Parent Node	ruckusCtrlApTable

TABLE 686 ruckusCtrlApLanStatsTxPkts (continued)

Object Name	ruckusCtrlApLanStatsTxPkts
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.106
Description	The total number of packets transmitted on the LAN port.

ruckusCtrlApLanStatsRxErrorPkts

TABLE 687 ruckusCtrlApLanStatsRxErrorPkts

Object Name	ruckusCtrlApLanStatsRxErrorPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.107
Description	The total number of error packets received on the LAN port.

ruckusCtrlApLanStatsTxErrorPkts

TABLE 688 ruckusCtrlApLanStatsTxErrorPkts

Object Name	ruckusCtrlApLanStatsTxErrorPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.108
Description	The total number of error packets transmitted on the LAN port.

ruckusCtrlApLanStatsRxDroppedPkts

TABLE 689 ruckusCtrlApLanStatsRxDroppedPkts

Object Name	ruckusCtrlApLanStatsRxDroppedPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.115
Description	The total number of received packets dropped on LAN port.

ruckusCtrlApLanStatsTxDroppedPkts

TABLE 690 ruckusCtrlApLanStatsTxDroppedPkts

Object Name	ruckusCtrlApLanStatsTxDroppedPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.116
Description	The total number of transmitted packets dropped on LAN port.

ruckusCtrlAPIpsecRxBytes

TABLE 691 ruckusCtrlAPIpsecRxBytes

Object Name	ruckusCtrlAPIpsecRxBytes
Parent Node	ruckusCtrlApTable

TABLE 691 ruckusCtrlAPIpsecRxBytes (continued)

Object Name	ruckusCtrlAPIpsecRxBytes
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.123
Description	The total number of IPsec bytes received.

ruckusCtrlAPIpsecTxBytes

TABLE 692 ruckusCtrlAPIpsecTxBytes

Object Name	ruckusCtrlAPIpsecTxBytes
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.124
Description	The total number of IPsec bytes transmitted.

ruckusCtrlAPIpsecRxPkts

TABLE 693 ruckusCtrlAPIpsecRxPkts

Object Name	ruckusCtrlAPIpsecRxPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.125
Description	The total number of IPsec packet received.

ruckusCtrlAPIpsecTxPkts

TABLE 694 ruckusCtrlAPIpsecTxPkts

Object Name	ruckusCtrlAPIpsecTxPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.126
Description	The total number of IPsec packet transmitted.

ruckusCtrlAPIpsecRxDropPkts

TABLE 695 ruckusCtrlAPIpsecRxDropPkts

Object Name	ruckusCtrlAPIpsecRxDropPkts
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.127
Description	The total number of IPsec received packets that dropped.

ruckusCtrlAPIpsecTxDropPkts

TABLE 696 ruckusCtrlAPIpsecTxDropPkts

Object Name	ruckusCtrlAPIpsecTxDropPkts
Parent Node	ruckusCtrlApTable

TABLE 696 ruckusCtrlAPIpsecTxDropPkts (continued)

Object Name	ruckusCtrlAPIpsecTxDropPkts
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.128
Description	The total number of IPsec transmitted packets that dropped

ruckusCtrlAPIpsecSessionTime

TABLE 697 ruckusCtrlAPIpsecSessionTime

Object Name	ruckusCtrlAPIpsecSessionTime
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.129
Description	Session time of IPsec in seconds.

ruckusCtrlAPIpsecRxIdleTime

TABLE 698 ruckusCtrlAPIpsecRxIdleTime

Object Name	ruckusCtrlAPIpsecRxIdleTime
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.130
Description	Time of the last received packet in seconds.

ruckusCtrlAPIpsecTxIdleTime

TABLE 699 ruckusCtrlAPIpsecTxIdleTime

Object Name	ruckusCtrlAPIpsecTxIdleTime
Parent Node	ruckusCtrlApTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.1.1.131
Description	Time of the last transmitted packet in seconds.

Ruckus Controller Radio Table

The following MIBs define the information for the controller AP Radio table (**ruckusCtrlApRadioTable**) for users to easily access all information of the AP radio in the AP. Using the ApMac in this table, users get more details about this AP. The index of the table is the *ApMac* and *RadioIndex*.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

A MAC address of C8:AA:7C:8E:67:C4 must be translated to the equivalent decimal value of 200.170.124.142.103.196 for the query.

Ruckus AP MIB

Ruckus Controller Radio Table

For example:

- To get the radio index 1 of an AP with MAC C8:AA:7C:8E:67:C4, use the command format:

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-  
MIB::ruckusCtrlApRadioApMac.6.200.170.124.142.103.196.1
```

where:

1: Radio index

6: Length of string index, which is always 6

```
200.170.124.142.103.196: MAC Address C8:AA:7C:8E:67:C4  
in decimal form
```

- To get all Radio information of the AP with MAC C8:AA:7C:8E:67:C4, use the command format:

```
snmpwalk -v2c -c public <ip_addr> RUCKUS-CTRL-  
MIB::ruckusCtrlApRadioApMac.6.200.170.124.142.103.196 where 6 is the length of string index.
```

```
200.170.124.142.103.196: MAC Address C8:AA:7C:8E:67:C4 in decimal form
```

- The MIB browser should also translate the MAC address into decimal form as:

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1.6  
.6.200.170.124.142.103.196.1
```

- [ruckusCtrlApRadioEntry](#) on page 293
- [ruckusCtrlApRadioApMac](#) on page 294
- [ruckusCtrlApRadioIndex](#) on page 294
- [ruckusCtrlApRadioNumWlans](#) on page 294
- [ruckusCtrlApRadioType](#) on page 294
- [ruckusCtrlApRadioChannelWidth](#) on page 295
- [ruckusCtrlApRadioChannel](#) on page 295
- [ruckusCtrlApRadioTxPower](#) on page 295
- [ruckusCtrlApRadioBeaconPeriod](#) on page 295
- [ruckusCtrlApRadioPowerMgmtEnable](#) on page 295
- [ruckusCtrlApRadioMeshEnable](#) on page 296
- [ruckusCtrlApRadioStatsRxAirtime](#) on page 296
- [ruckusCtrlApRadioStatsTxAirtime](#) on page 296
- [ruckusCtrlApRadioStatsBusyAirtime](#) on page 296
- [ruckusCtrlApRadioStatsTotalAirtime](#) on page 297
- [ruckusCtrlApRadioAntennaGain](#) on page 297
- [ruckusCtrlApRadioStatsSnr](#) on page 297
- [ruckusCtrlApRadioStatsNoiseFloor](#) on page 297
- [ruckusCtrlApRadioStatsNumAssocClients](#) on page 297
- [ruckusCtrlApRadioStatsNumAuthClients](#) on page 298
- [ruckusCtrlApRadioStatsNumMaxClients](#) on page 298
- [ruckusCtrlApRadioStatsPhyError](#) on page 298
- [ruckusCtrlApRadioStatsRxWepFail](#) on page 298

- [ruckusCtrlApRadioStatsRxDecryptCrcError](#) on page 298
- [ruckusCtrlApRadioStatsRxMicError](#) on page 299
- [ruckusCtrlApRadioStatsRxBytes](#) on page 299
- [ruckusCtrlApRadioStatsTxBytes](#) on page 299
- [ruckusCtrlApRadioStatsRxPkts](#) on page 299
- [ruckusCtrlApRadioStatsTxPkts](#) on page 299
- [ruckusCtrlApRadioStatsRxMcastPkts](#) on page 300
- [ruckusCtrlApRadioStatsTxMcastPkts](#) on page 300
- [ruckusCtrlApRadioStatsRxErrorPkts](#) on page 300
- [ruckusCtrlApRadioStatsTxErrorPkts](#) on page 300
- [ruckusCtrlApRadioStatsRxPktErrorRate](#) on page 300
- [ruckusCtrlApRadioStatsTxPktErrorRate](#) on page 301
- [ruckusCtrlApRadioStatsTxPktRetryRate](#) on page 301
- [ruckusCtrlApRadioStatsTxRetryPkts](#) on page 301
- [ruckusCtrlApRadioStatsRxDropPkts](#) on page 301
- [ruckusCtrlApRadioStatsTxDropPkts](#) on page 301
- [ruckusCtrlApRadioStatsNumAuthReqs](#) on page 302
- [ruckusCtrlApRadioStatsNumAuthResps](#) on page 302
- [ruckusCtrlApRadioStatsNumAuthSuccess](#) on page 302
- [ruckusCtrlApRadioStatsNumAuthFail](#) on page 302
- [ruckusCtrlApRadioStatsAuthFailRate](#) on page 302
- [ruckusCtrlApRadioStatsNumAssocReq](#) on page 303
- [ruckusCtrlApRadioStatsNumAssocResp](#) on page 303
- [ruckusCtrlApRadioStatsNumReassocReq](#) on page 303
- [ruckusCtrlApRadioStatsNumReassocResp](#) on page 303
- [ruckusCtrlApRadioStatsNumAssocSuccess](#) on page 303
- [ruckusCtrlApRadioStatsNumAssocFail](#) on page 304
- [ruckusCtrlApRadioStatsAssocSuccessRate](#) on page 304
- [ruckusCtrlApRadioStatsAssocFailRate](#) on page 304

ruckusCtrlApRadioEntry

TABLE 700 ruckusCtrlApRadioEntry

Object Name	ruckusCtrlApRadioEntry
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1
Description	The index to this table is ApMac and RadiIndex

ruckusCtrlApRadioApMac

TABLE 701 ruckusCtrlApRadioApMac

Object Name	ruckusCtrlApRadioApMac
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.1
Description	The AP MAC address.

ruckusCtrlApRadioIndex

TABLE 702 ruckusCtrlApRadioIndex

Object Name	ruckusCtrlApRadioApMac
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.2
Description	The index of the radio in the AP, which is: <ul style="list-style-type: none"> • 0: 2.4G • 1: 5G

ruckusCtrlApRadioNumWlans

TABLE 703 ruckusCtrlApRadioNumWlans

Object Name	ruckusCtrlApRadioNumWlans
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.7
Description	The number of WLANs in the radio.

ruckusCtrlApRadioType

TABLE 704 ruckusCtrlApRadioType

Object Name	ruckusCtrlApRadioType
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.8
Description	The radio modes: <ul style="list-style-type: none"> 1: ieee802dot11b 2: ieee802dot11g 3: ieee802dot11Mixed 4: ieee802dot11a 5: ieee802dot11ng 6: ieee802dot11na 7: ieee802dot11ac

ruckusCtrlApRadioChannelWidth

TABLE 705 ruckusCtrlApRadioChannelWidth

Object Name	ruckusCtrlApRadioChannelWidth
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.9
Description	Radio channel width of 10/20/2040/40/80

ruckusCtrlApRadioChannel

TABLE 706 ruckusCtrlApRadioChannel

Object Name	ruckusCtrlApRadioChannel
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.10
Description	The channel number of this AP radio.

ruckusCtrlApRadioTxPower

TABLE 707 ruckusCtrlApRadioTxPower

Object Name	ruckusCtrlApRadioTxPower
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.11
Description	Specifies the transmit power of this AP radio.

ruckusCtrlApRadioBeaconPeriod

TABLE 708 ruckusCtrlApRadioBeaconPeriod

Object Name	ruckusCtrlApRadioBeaconPeriod
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.16
Description	The number of milli seconds that a station uses for scheduling beacon transmissions. This value is transmitted in beacon and probe response frames. <ul style="list-style-type: none"> • Range: (100 to 1000) • Units: Milli seconds

ruckusCtrlApRadioPowerMgmtEnable

TABLE 709 ruckusCtrlApRadioPowerMgmtEnable

Object Name	ruckusCtrlApRadioPowerMgmtEnable
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.23

TABLE 709 ruckusCtrlApRadioPowerMgmtEnable (continued)

Object Name	ruckusCtrlApRadioPowerMgmtEnable
Description	Enabling the power management as: 0: No 1: Yes

ruckusCtrlApRadioMeshEnable

TABLE 710 ruckusCtrlApRadioMeshEnable

Object Name	ruckusCtrlApRadioMeshEnable
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.24
Description	Enabling the radio mesh as: 0: No 1: Yes

ruckusCtrlApRadioStatsRxAirtime

TABLE 711 ruckusCtrlApRadioStatsRxAirtime

Object Name	ruckusCtrlApRadioStatsRxAirtime
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.29
Description	AP radio's total airtime received in one second as per the channel utilization.

ruckusCtrlApRadioStatsTxAirtime

TABLE 712 ruckusCtrlApRadioStatsTxAirtime

Object Name	ruckusCtrlApRadioStatsTxAirtime
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.30
Description	AP radio's total airtime transmitted in one second as per the channel utilization.

ruckusCtrlApRadioStatsBusyAirtime

TABLE 713 ruckusCtrlApRadioStatsBusyAirtime

Object Name	ruckusCtrlApRadioStatsBusyAirtime
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.31
Description	AP radio's busy airtime in one second as per the channel utilization.

ruckusCtrlApRadioStatsTotalAirtime

TABLE 714 ruckusCtrlApRadioStatsTotalAirtime

Object Name	ruckusCtrlApRadioStatsTotalAirtime
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.32
Description	AP radio's total airtime.

ruckusCtrlApRadioAntennaGain

TABLE 715 ruckusCtrlApRadioAntennaGain

Object Name	ruckusCtrlApRadioAntennaGain
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.38
Description	AP radio's antenna gain.

ruckusCtrlApRadioStatsSnr

TABLE 716 ruckusCtrlApRadioStatsSnr

Object Name	ruckusCtrlApRadioStatsSnr
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.39
Description	AP radio's SNR ratio.

ruckusCtrlApRadioStatsNoiseFloor

TABLE 717 ruckusCtrlApRadioStatsNoiseFloor

Object Name	ruckusCtrlApRadioStatsNoiseFloor
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.40
Description	AP radio's noise floor.

ruckusCtrlApRadioStatsNumAssocClients

TABLE 718 ruckusCtrlApRadioStatsNumAssocClients

Object Name	ruckusCtrlApRadioStatsNumAssocClients
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.41
Description	Number of clients associated to this AP radio.

ruckusCtrlApRadioStatsNumAuthClients

TABLE 719

Object Name	ruckusCtrlApRadioStatsNumAuthClients
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.42
Description	Number of clients authenticated to this AP radio.

ruckusCtrlApRadioStatsNumMaxClients

TABLE 720 ruckusCtrlApRadioStatsNumMaxClients

Object Name	ruckusCtrlApRadioStatsNumMaxClients
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.43
Description	Maximum number of stations allowed to this AP radio.

ruckusCtrlApRadioStatsPhyError

TABLE 721 ruckusCtrlApRadioStatsPhyError

Object Name	ruckusCtrlApRadioStatsPhyError
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.49
Description	Number of PHY errors that occurred in one second for this AP radio.

ruckusCtrlApRadioStatsRxWepFail

TABLE 722 ruckusCtrlApRadioStatsRxWepFail

Object Name	ruckusCtrlApRadioStatsRxWepFail
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.50
Description	The number of received WEP for this AP radio that failed.

ruckusCtrlApRadioStatsRxDecryptCrcError

TABLE 723 ruckusCtrlApRadioStatsRxDecryptCrcError

Object Name	ruckusCtrlApRadioStatsRxDecryptCrcError
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.51
Description	The number of received frames with decrypted CRC errors for this AP radio.

ruckusCtrlApRadioStatsRxMicError

TABLE 724 ruckusCtrlApRadioStatsRxMicError

Object Name	ruckusCtrlApRadioStatsRxMicError
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.52
Description	Number of received frames with MIC errors pertaining to this AP radio.

ruckusCtrlApRadioStatsRxBytes

TABLE 725 ruckusCtrlApRadioStatsRxBytes

Object Name	ruckusCtrlApRadioStatsRxBytes
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.57
Description	Total number of received radio bytes of this AP radio, including duplicate packets.

ruckusCtrlApRadioStatsTxBytes

TABLE 726 ruckusCtrlApRadioStatsTxBytes

Object Name	ruckusCtrlApRadioStatsTxBytes
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.58
Description	Total number of transmitted radio bytes of this AP radio, including SW retries.

ruckusCtrlApRadioStatsRxPkts

TABLE 727 ruckusCtrlApRadioStatsRxPkts

Object Name	ruckusCtrlApRadioStatsRxPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.59
Description	Total number of received radio packets of this AP radio. It contains retry/ duplicate values and 802.11 headers.

ruckusCtrlApRadioStatsTxPkts

TABLE 728 ruckusCtrlApRadioStatsTxPkts

Object Name	ruckusCtrlApRadioStatsTxPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.60
Description	Total number of transmitted radio packets of this AP radio. It contains retry/duplicate values and 802.11 headers.

ruckusCtrlApRadioStatsRxMcastPkts

TABLE 729 ruckusCtrlApRadioStatsRxMcastPkts

Object Name	ruckusCtrlApRadioStatsRxMcastPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.65
Description	Total number of received multi cast frames.

ruckusCtrlApRadioStatsTxMcastPkts

TABLE 730 ruckusCtrlApRadioStatsTxMcastPkts

Object Name	ruckusCtrlApRadioStatsTxMcastPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.66
Description	Total number of transmitted multi cast frames.

ruckusCtrlApRadioStatsRxErrorPkts

TABLE 731 ruckusCtrlApRadioStatsRxErrorPkts

Object Name	ruckusCtrlApRadioStatsRxErrorPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.67
Description	Total number of error packets received.

ruckusCtrlApRadioStatsTxErrorPkts

TABLE 732 ruckusCtrlApRadioStatsTxErrorPkts

Object Name	ruckusCtrlApRadioStatsTxErrorPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.68
Description	Total number of error packets transmitted.

ruckusCtrlApRadioStatsRxPktErrorRate

TABLE 733 ruckusCtrlApRadioStatsRxPktErrorRate

Object Name	ruckusCtrlApRadioStatsRxPktErrorRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.69
Description	Error rate on the total number of packets received.

ruckusCtrlApRadioStatsTxPktErrorRate

TABLE 734 ruckusCtrlApRadioStatsTxPktErrorRate

Object Name	ruckusCtrlApRadioStatsTxPktErrorRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.70
Description	Error rate on the total number of packets transmitted.

ruckusCtrlApRadioStatsTxPktRetryRate

TABLE 735 ruckusCtrlApRadioStatsTxPktRetryRate

Object Name	ruckusCtrlApRadioStatsTxPktRetryRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.71
Description	Percentage rate of retries on transmitted packets.

ruckusCtrlApRadioStatsTxRetryPkts

TABLE 736 ruckusCtrlApRadioStatsTxRetryPkts

Object Name	ruckusCtrlApRadioStatsTxRetryPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.73
Description	Total number of retries on transmitted packets.

ruckusCtrlApRadioStatsRxDropPkts

TABLE 737 ruckusCtrlApRadioStatsRxDropPkts

Object Name	ruckusCtrlApRadioStatsRxDropPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.76
Description	Total number of dropped packets received.

ruckusCtrlApRadioStatsTxDropPkts

TABLE 738 ruckusCtrlApRadioStatsTxDropPkts

Object Name	ruckusCtrlApRadioStatsTxDropPkts
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.77
Description	Total number of dropped packets transmitted.

ruckusCtrlApRadioStatsNumAuthReqs

TABLE 739 ruckusCtrlApRadioStatsNumAuthReqs

Object Name	ruckusCtrlApRadioStatsNumAuthReqs
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.82
Description	Total number of authenticated requests received.

ruckusCtrlApRadioStatsNumAuthResps

TABLE 740 ruckusCtrlApRadioStatsNumAuthResps

Object Name	ruckusCtrlApRadioStatsNumAuthResps
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.83
Description	Total number of authenticated responses sent.

ruckusCtrlApRadioStatsNumAuthSuccess

TABLE 741 ruckusCtrlApRadioStatsNumAuthSuccess

Object Name	ruckusCtrlApRadioStatsNumAuthSuccess
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.84
Description	Total number of successful authentications.

ruckusCtrlApRadioStatsNumAuthFail

TABLE 742 ruckusCtrlApRadioStatsNumAuthFail

Object Name	ruckusCtrlApRadioStatsNumAuthFail
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.85
Description	Total number of failed authentications.

ruckusCtrlApRadioStatsAuthFailRate

TABLE 743 ruckusCtrlApRadioStatsAuthFailRate

Object Name	ruckusCtrlApRadioStatsAuthFailRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.86
Description	Total number of failed connections - authentication and associated failure.

ruckusCtrlApRadioStatsNumAssocReq

TABLE 744 ruckusCtrlApRadioStatsNumAssocReq

Object Name	ruckusCtrlApRadioStatsNumAssocReq
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.87
Description	Total number of associated requests sent.

ruckusCtrlApRadioStatsNumAssocResp

TABLE 745 ruckusCtrlApRadioStatsNumAssocResp

Object Name	ruckusCtrlApRadioStatsNumAssocResp
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.88
Description	Total number of associated responses received.

ruckusCtrlApRadioStatsNumReassocReq

TABLE 746 ruckusCtrlApRadioStatsNumReassocReq

Object Name	ruckusCtrlApRadioStatsNumReassocReq
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.89
Description	Total number of re-associated requests sent.

ruckusCtrlApRadioStatsNumReassocResp

TABLE 747 ruckusCtrlApRadioStatsNumReassocResp

Object Name	ruckusCtrlApRadioStatsNumReassocResp
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.90
Description	Total number of re-associated responses received.

ruckusCtrlApRadioStatsNumAssocSuccess

TABLE 748 ruckusCtrlApRadioStatsNumAssocSuccess

Object Name	ruckusCtrlApRadioStatsNumAssocSuccess
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.91
Description	Total number of successful associations.

ruckusCtrlApRadioStatsNumAssocFail

TABLE 749 ruckusCtrlApRadioStatsNumAssocFail

Object Name	ruckusCtrlApRadioStatsNumAssocFail
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.92
Description	Total number of failed associations.

ruckusCtrlApRadioStatsAssocSuccessRate

TABLE 750 ruckusCtrlApRadioStatsAssocSuccessRate

Object Name	ruckusCtrlApRadioStatsAssocSuccessRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.94
Description	AP radio's station association success rate.

ruckusCtrlApRadioStatsAssocFailRate

TABLE 751 ruckusCtrlApRadioStatsAssocFailRate

Object Name	ruckusCtrlApRadioStatsAssocFailRate
Parent Node	ruckusCtrlApRadioTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.3.1.95
Description	AP radio's station association failure rate.

Ruckus Controller AP WLAN Table

The following MIBs define the information for the controller AP WLAN table (**ruckusCtrlApWlanTable**) for users to easily access all information of the WLAN to a specific radio of an AP. Using the *ApMac* in this table, users get more details about this AP. The index of the table is the *ApMac*, *RadioIndex* and *ApWlanBssid*.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

- [ruckusCtrlApWlanEntry](#) on page 305
- [ruckusCtrlApWlanApMac](#) on page 306
- [ruckusCtrlApWlanRadioIndex](#) on page 306
- [ruckusCtrlApWlanBssid](#) on page 306
- [ruckusCtrlApWlanAuthMethod](#) on page 306
- [ruckusCtrlApWlanEncryptMethod](#) on page 307
- [ruckusCtrlApWlanId](#) on page 307

- [ruckusCtrlApWlanName](#) on page 307
- [ruckusCtrlApWlanRadioChannel](#) on page 307
- [ruckusCtrlApWlanSsid](#) on page 307
- [ruckusCtrlApWlanVlanId](#) on page 308
- [ruckusCtrlApWlanRtsThreshold](#) on page 308
- [ruckusCtrlApWlanDownRateLimit](#) on page 308
- [ruckusCtrlApWlanUpRateLimit](#) on page 308
- [ruckusCtrlApWlanIsBcastDisable](#) on page 308
- [ruckusCtrlApWlanIsGuest](#) on page 309
- [ruckusCtrlApWlanIsTunnel](#) on page 309
- [ruckusCtrlApWlanStatsNumAssocClients](#) on page 309
- [ruckusCtrlApWlanStatsRxPkts](#) on page 309
- [ruckusCtrlApWlanStatsTxPkts](#) on page 309
- [ruckusCtrlApWlanStatsRxBytes](#) on page 310
- [ruckusCtrlApWlanStatsTxBytes](#) on page 310
- [ruckusCtrlApWlanStatsRxDataBytes](#) on page 310
- [ruckusCtrlApWlanStatsTxDataBytes](#) on page 310
- [ruckusCtrlApWlanStatsRxDataPkts](#) on page 310
- [ruckusCtrlApWlanStatsTxDataPkts](#) on page 311
- [ruckusCtrlApWlanStatsRxBcastDataPkts](#) on page 311
- [ruckusCtrlApWlanStatsTxBcastDataPkts](#) on page 311
- [ruckusCtrlApWlanStatsRxMcastDataPkts](#) on page 311
- [ruckusCtrlApWlanStatsTxMcastDataPkts](#) on page 311
- [ruckusCtrlApWlanStatsNumAssocReq](#) on page 312
- [ruckusCtrlApWlanStatsNumAssocResp](#) on page 312
- [ruckusCtrlApWlanStatsNumReassocReq](#) on page 312
- [ruckusCtrlApWlanStatsNumReassocResp](#) on page 312
- [ruckusCtrlApWlanStatsNumAuthReq](#) on page 312
- [ruckusCtrlApWlanStatsNumAuthResp](#) on page 313
- [ruckusCtrlApWlanStatsNumAuthSuccess](#) on page 313
- [ruckusCtrlApWlanStatsNumAuthFail](#) on page 313
- [ruckusCtrlApWlanStatsAuthFailRate](#) on page 313
- [ruckusCtrlApWlanStatsNumAssocFail](#) on page 313

ruckusCtrlApWlanEntry

TABLE 752 ruckusCtrlApWlanEntry

Object Name	ruckusCtrlApWlanEntry
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1

Ruckus AP MIB

Ruckus Controller AP WLAN Table

TABLE 752 ruckusCtrlApWlanEntry (continued)

Object Name	ruckusCtrlApWlanEntry
Description	The index to this table is ApMac, RadiolIndex and ApWlanBssid

ruckusCtrlApWlanApMac

TABLE 753 ruckusCtrlApWlanApMac

Object Name	ruckusCtrlApWlanApMac
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.1
Description	The AP MAC address.

ruckusCtrlApWlanRadiolIndex

TABLE 754 ruckusCtrlApWlanRadiolIndex

Object Name	ruckusCtrlApWlanRadiolIndex
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.2
Description	The index of the radio: <ul style="list-style-type: none">• 0: 2.4G• 1: 5G

ruckusCtrlApWlanBssid

TABLE 755 ruckusCtrlApWlanBssid

Object Name	ruckusCtrlApWlanBssid
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.3
Description	BSSID of the WLAN - AP MAC address for this WLAN.

ruckusCtrlApWlanAuthMethod

TABLE 756 ruckusCtrlApWlanAuthMethod

Object Name	ruckusCtrlApWlanAuthMethod
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.8
Description	Authentication method of the WLAN is: <ul style="list-style-type: none">• 1: open• 3: auto• 4: wpa-eap-802-1x

ruckusCtrlApWlanEncryptMethod

TABLE 757 ruckusCtrlApWlanEncryptMethod

Object Name	ruckusCtrlApWlanEncryptMethod
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.9
Description	Encryption method of the WLAN is: <ul style="list-style-type: none"> • 1: open • 2: wep • 3: wpa

ruckusCtrlApWlanId

TABLE 758 ruckusCtrlApWlanId

Object Name	ruckusCtrlApWlanId
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.10
Description	Unique identifier (within zone) of this WLAN where the range is (0 to 65536)

ruckusCtrlApWlanName

TABLE 759 ruckusCtrlApWlanName

Object Name	ruckusCtrlApWlanName
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.11
Description	Displays the name of the WLAN.

ruckusCtrlApWlanRadioChannel

TABLE 760 ruckusCtrlApWlanRadioChannel

Object Name	ruckusCtrlApWlanRadioChannel
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.12
Description	Radio of the channel of this WLAN.

ruckusCtrlApWlanSsid

TABLE 761 ruckusCtrlApWlanSsid

Object Name	ruckusCtrlApWlanSsid
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.13
Description	SSID of this WLAN.

ruckusCtrlApWlanVlanId

TABLE 762 ruckusCtrlApWlanVlanId

Object Name	ruckusCtrlApWlanVlanId
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.14
Description	The VLAN identifier of this WLAN in the range (1 to 4094). If the VLAN ID is 1, packets from this WLAN will be untagged.

ruckusCtrlApWlanRtsThreshold

TABLE 763 ruckusCtrlApWlanRtsThreshold

Object Name	ruckusCtrlApWlanRtsThreshold
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.15
Description	This attribute indicates the threshold number of octets in an MPDU. The range is (256 to 2346). The default value is 2347.

ruckusCtrlApWlanDownRateLimit

TABLE 764 ruckusCtrlApWlanDownRateLimit

Object Name	ruckusCtrlApWlanDownRateLimit
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.19
Description	Down link rate limit of the WLAN in Kbps.

ruckusCtrlApWlanUpRateLimit

TABLE 765 ruckusCtrlApWlanUpRateLimit

Object Name	ruckusCtrlApWlanUpRateLimit
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.20
Description	UP link rate limit of the WLAN in Kbps.

ruckusCtrlApWlanIsBcastDisable

TABLE 766 ruckusCtrlApWlanIsBcastDisable

Object Name	ruckusCtrlApWlanIsBcastDisable
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.25
Description	To confirm if the SSID broadcast for this WLAN is disabled. Values are: <ul style="list-style-type: none"> • 0: No • 1: Yes

ruckusCtrlApWlanIsGuest

TABLE 767 ruckusCtrlApWlanIsGuest

Object Name	ruckusCtrlApWlanIsGuest
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.26
Description	To confirm if the WLAN connected is a guest. Values are: <ul style="list-style-type: none"> • 0: No • 1: Yes

ruckusCtrlApWlanIsTunnel

TABLE 768 ruckusCtrlApWlanIsTunnel

Object Name	ruckusCtrlApWlanIsTunnel
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.27
Description	To confirm if the tunnel is a WLAN. Values are: <ul style="list-style-type: none"> • 0: No • 1: Yes

ruckusCtrlApWlanStatsNumAssocClients

TABLE 769 ruckusCtrlApWlanStatsNumAssocClients

Object Name	ruckusCtrlApWlanStatsNumAssocClients
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.32
Description	Number of associated clients for this WLAN with an entry timestamp.

ruckusCtrlApWlanStatsRxPkts

TABLE 770 ruckusCtrlApWlanStatsRxPkts

Object Name	ruckusCtrlApWlanStatsRxPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.37
Description	Total number of received packets for this WLAN.

ruckusCtrlApWlanStatsTxPkts

TABLE 771 ruckusCtrlApWlanStatsTxPkts

Object Name	ruckusCtrlApWlanStatsTxPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.38
Description	Total number of transmitted packets for this WLAN.

ruckusCtrlApWlanStatsRxBytes

TABLE 772 ruckusCtrlApWlanStatsRxBytes

Object Name	ruckusCtrlApWlanStatsRxBytes
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.39
Description	Total number of received bytes of this WLAN. This counter does not include the Ether / VLAN header.

ruckusCtrlApWlanStatsTxBytes

TABLE 773 ruckusCtrlApWlanStatsTxBytes

Object Name	ruckusCtrlApWlanStatsTxBytes
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.40
Description	Total number of received bytes of this WLAN. This counter does not include the Ether / VLAN header.

ruckusCtrlApWlanStatsRxDataBytes

TABLE 774 ruckusCtrlApWlanStatsRxDataBytes

Object Name	ruckusCtrlApWlanStatsRxDataBytes
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.47
Description	Total number of data bytes received of this WLAN.

ruckusCtrlApWlanStatsTxDataBytes

TABLE 775 ruckusCtrlApWlanStatsTxDataBytes

Object Name	ruckusCtrlApWlanStatsTxDataBytes
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.48
Description	Total number of data bytes transmitted from this WLAN.

ruckusCtrlApWlanStatsRxDataPkts

TABLE 776 ruckusCtrlApWlanStatsRxDataPkts

Object Name	ruckusCtrlApWlanStatsRxDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.49
Description	Total number of data packets received.

ruckusCtrlApWlanStatsTxDataPkts

TABLE 777 ruckusCtrlApWlanStatsTxDataPkts

Object Name	ruckusCtrlApWlanStatsTxDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.50
Description	Total number of data packets transmitted.

ruckusCtrlApWlanStatsRxBcastDataPkts

TABLE 778 ruckusCtrlApWlanStatsRxBcastDataPkts

Object Name	ruckusCtrlApWlanStatsRxBcastDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.55
Description	Total number of broadcast data packets received.

ruckusCtrlApWlanStatsTxBcastDataPkts

TABLE 779 ruckusCtrlApWlanStatsTxBcastDataPkts

Object Name	ruckusCtrlApWlanStatsTxBcastDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.56
Description	Total number of broadcast data packets transmitted.

ruckusCtrlApWlanStatsRxMcastDataPkts

TABLE 780 ruckusCtrlApWlanStatsRxMcastDataPkts

Object Name	ruckusCtrlApWlanStatsRxMcastDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.57
Description	Total number of multicast data packets received.

ruckusCtrlApWlanStatsTxMcastDataPkts

TABLE 781 ruckusCtrlApWlanStatsTxMcastDataPkts

Object Name	ruckusCtrlApWlanStatsTxMcastDataPkts
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.58
Description	Total number of multicast data packets transmitted.

ruckusCtrlApWlanStatsNumAssocReq

TABLE 782 ruckusCtrlApWlanStatsNumAssocReq

Object Name	ruckusCtrlApWlanStatsNumAssocReq
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.78
Description	Total number of associated requests.

ruckusCtrlApWlanStatsNumAssocResp

TABLE 783 ruckusCtrlApWlanStatsNumAssocResp

Object Name	ruckusCtrlApWlanStatsNumAssocResp
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.79
Description	Total number of associated responses sent.

ruckusCtrlApWlanStatsNumReassocReq

TABLE 784 ruckusCtrlApWlanStatsNumReassocReq

Object Name	ruckusCtrlApWlanStatsNumReassocReq
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.80
Description	Total number of re-associated requests received

ruckusCtrlApWlanStatsNumReassocResp

TABLE 785 ruckusCtrlApWlanStatsNumReassocResp

Object Name	ruckusCtrlApWlanStatsNumReassocResp
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.81
Description	Total number of re-associated responses sent.

ruckusCtrlApWlanStatsNumAuthReq

TABLE 786 ruckusCtrlApWlanStatsNumAuthReq

Object Name	ruckusCtrlApWlanStatsNumAuthReq
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.89
Description	Total number of authentication requests received.

ruckusCtrlApWlanStatsNumAuthResp

TABLE 787 ruckusCtrlApWlanStatsNumAuthResp

Object Name	ruckusCtrlApWlanStatsNumAuthResp
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.90
Description	Total number of authentication responses sent.

ruckusCtrlApWlanStatsNumAuthSuccess

TABLE 788 ruckusCtrlApWlanStatsNumAuthSuccess

Object Name	ruckusCtrlApWlanStatsNumAuthSuccess
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.91
Description	Total number of successful authentications.

ruckusCtrlApWlanStatsNumAuthFail

TABLE 789 ruckusCtrlApWlanStatsNumAuthFail

Object Name	ruckusCtrlApWlanStatsNumAuthFail
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.92
Description	Total number of failed authentications.

ruckusCtrlApWlanStatsAuthFailRate

TABLE 790 ruckusCtrlApWlanStatsAuthFailRate

Object Name	ruckusCtrlApWlanStatsAuthFailRate
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.93
Description	Failed rate in percentage.

ruckusCtrlApWlanStatsNumAssocFail

TABLE 791 ruckusCtrlApWlanStatsNumAssocFail

Object Name	ruckusCtrlApWlanStatsNumAssocFail
Parent Node	ruckusCtrlApWlanTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.5.1.98
Description	Total number of associated failures.

Ruckus Controller Client Table

The following MIBs define the information for the controller **Client** table (**ruckusCtrlClientTable**) for users to easily access information of a specific client.



CAUTION

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

NOTE

It is recommended to use Public API or GPB/MQTT to obtain similar information for monitoring purposes.

In addition, if a client has successfully roamed from AP1 to AP2, only the information in AP2 will be returned. Using the *ClientMac* in this table, users get more details about this AP.

The index of the table is the *ClientMac*.

A MAC address of C8:AA:7C:8E:67:C4, must be translated to the equivalent decimal value of 200.170.124.142.103.196 for the query.

For example:

To get MAC C8:AA:7C:8E:67:C4, use the command format:

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-MIB::ruck- usCtrlClientMac.6.200.170.124.142.103.196 where 6 is the length of the string index.
```

- [ruckusCtrlClientEntry](#) on page 315
- [ruckusCtrlClientMac](#) on page 315
- [ruckusCtrlClientIp](#) on page 315
- [ruckusCtrlClientIpv6](#) on page 315
- [ruckusCtrlClientApMac](#) on page 316
- [ruckusCtrlClientWlanBssid](#) on page 316
- [ruckusCtrlClientSsid](#) on page 316
- [ruckusCtrlClientRadioIndex](#) on page 316
- [ruckusCtrlClientRadioType](#) on page 316
- [ruckusCtrlClientRadioChannel](#) on page 317
- [ruckusCtrlClientUsername](#) on page 317
- [ruckusCtrlClientVlanId](#) on page 317
- [ruckusCtrlClientOsType](#) on page 317
- [ruckusCtrlClientStatus](#) on page 318
- [ruckusCtrlClientAuthMode](#) on page 318
- [ruckusCtrlClientStatsRssi](#) on page 318
- [ruckusCtrlClientStatsSnr](#) on page 318
- [ruckusCtrlClientStatsNoiseFloor](#) on page 318
- [ruckusCtrlClientStatsThroughput](#) on page 319
- [ruckusCtrlClientStatsRxDataBytes](#) on page 319
- [ruckusCtrlClientStatsTxDataBytes](#) on page 319
- [ruckusCtrlClientStatsRxDataPkts](#) on page 319

- [ruckusCtrlClientStatsTxDataPkts](#) on page 319
- [ruckusCtrlClientStatsTxAvgByteRate](#) on page 320
- [ruckusCtrlClientStatsTxRetry](#) on page 320
- [ruckusCtrlClientStatsRxError](#) on page 320
- [ruckusCtrlClientStatsTxError](#) on page 320
- [ruckusCtrlClientStatsTxRetryBytes](#) on page 320
- [ruckusCtrlClientStatsTxDropPkts](#) on page 321

ruckusCtrlClientEntry

TABLE 792 ruckusCtrlClientEntry

Object Name	ruckusCtrlClientEntry
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1
Description	The index to this table is ClientMac.

ruckusCtrlClientMac

TABLE 793 ruckusCtrlClientMac

Object Name	ruckusCtrlClientMac
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.1
Description	The MAC address of the user equipment.

ruckusCtrlClientIp

TABLE 794 ruckusCtrlClientIp

Object Name	ruckusCtrlClientIp
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.6
Description	The IP address of the user equipment.

ruckusCtrlClientIpv6

TABLE 795 ruckusCtrlClientIpv6

Object Name	ruckusCtrlClientIpv6
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.7
Description	The IPv6 address of the user equipment.

ruckusCtrlClientApMac

TABLE 796 ruckusCtrlClientApMac

Object Name	ruckusCtrlClientApMac
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.8
Description	The AP Mac address.

ruckusCtrlClientWlanBssid

TABLE 797 ruckusCtrlClientWlanBssid

Object Name	ruckusCtrlClientWlanBssid
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.9
Description	The BSSID of the WLAN.

ruckusCtrlClientSsid

TABLE 798 ruckusCtrlClientSsid

Object Name	ruckusCtrlClientSsid
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.10
Description	The SSID that the user equipment connects to.

ruckusCtrlClientRadioIndex

TABLE 799 ruckusCtrlClientRadioIndex

Object Name	ruckusCtrlClientRadioIndex
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.12
Description	The radio index of: <ul style="list-style-type: none"> • 0: 2.4G • 1: 5G.

ruckusCtrlClientRadioType

TABLE 800 ruckusCtrlClientRadioType

Object Name	ruckusCtrlClientRadioType
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.13

TABLE 800 ruckusCtrlClientRadioType (continued)

Object Name	ruckusCtrlClientRadioType
Description	The radio index: 1: ieee802dot11b 2: ieee802dot11g 3: ieee802dot11Mixed 4: ieee802dot11a 5: ieee802dot11ng 6: ieee802dot11na 7: ieee802dot11ac

ruckusCtrlClientRadioChannel

TABLE 801 ruckusCtrlClientRadioChannel

Object Name	ruckusCtrlClientRadioChannel
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.14
Description	The radio channel.

ruckusCtrlClientUsername

TABLE 802 ruckusCtrlClientUsername

Object Name	ruckusCtrlClientUsername
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.15
Description	The user name.

ruckusCtrlClientVlanId

TABLE 803 ruckusCtrlClientVlanId

Object Name	ruckusCtrlClientVlanId
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.18
Description	The VLAN identifier.

ruckusCtrlClientOsType

TABLE 804 ruckusCtrlClientOsType

Object Name	ruckusCtrlClientOsType
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.19
Description	The OS type of the user equipment.

ruckusCtrlClientStatus

TABLE 805 ruckusCtrlClientStatus

Object Name	ruckusCtrlClientStatus
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.20
Description	The authorized status of the client as: 1: unauthorized 2: authorized

ruckusCtrlClientAuthMode

TABLE 806 ruckusCtrlClientAuthMode

Object Name	ruckusCtrlClientAuthMode
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.29
Description	The authentication mode.

ruckusCtrlClientStatsRssi

TABLE 807 ruckusCtrlClientStatsRssi

Object Name	ruckusCtrlClientStatsRssi
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.41
Description	An estimate of the received signal power (strength), reported in dBm, at the AP for each received packet from a particular client.

ruckusCtrlClientStatsSnr

TABLE 808 ruckusCtrlClientStatsSnr

Object Name	ruckusCtrlClientStatsSnr
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.42
Description	An estimate of the received signal to noise ratio, reported in dB, at the AP for each received packet from a particular client. The SNR is rounded to the nearest dB.

ruckusCtrlClientStatsNoiseFloor

TABLE 809 ruckusCtrlClientStatsNoiseFloor

Object Name	ruckusCtrlClientStatsNoiseFloor
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.43

TABLE 809 ruckusCtrlClientStatsNoiseFloor (continued)

Object Name	ruckusCtrlClientStatsNoiseFloor
Description	An estimate of the radio's thermal noise floor, reported in dBm, at the AP. The noise floor estimate is rounded to the nearest dB.

ruckusCtrlClientStatsThroughput

TABLE 810 ruckusCtrlClientStatsThroughput

Object Name	ruckusCtrlClientStatsThroughput
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.44
Description	An estimate of the saturated throughput of the AP towards a particular client.

ruckusCtrlClientStatsRxDataBytes

TABLE 811 ruckusCtrlClientStatsRxDataBytes

Object Name	ruckusCtrlClientStatsRxDataBytes
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.49
Description	Total number of data bytes that are successfully received.

ruckusCtrlClientStatsTxDataBytes

TABLE 812 ruckusCtrlClientStatsTxDataBytes

Object Name	ruckusCtrlClientStatsTxDataBytes
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.50
Description	Total number of bytes that are successfully transmitted.

ruckusCtrlClientStatsRxDataPkts

TABLE 813 ruckusCtrlClientStatsRxDataPkts

Object Name	ruckusCtrlClientStatsRxDataPkts
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.51
Description	Total number of data packets that are successfully received.

ruckusCtrlClientStatsTxDataPkts

TABLE 814 ruckusCtrlClientStatsTxDataPkts

Object Name	ruckusCtrlClientStatsTxDataPkts
Parent Node	ruckusCtrlClientTable

TABLE 814 ruckusCtrlClientStatsTxDataPkts (continued)

Object Name	ruckusCtrlClientStatsTxDataPkts
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.52
Description	Total number of data packets that are successfully transmitted.

ruckusCtrlClientStatsTxAvgByteRate

TABLE 815 ruckusCtrlClientStatsTxAvgByteRate

Object Name	ruckusCtrlClientStatsTxAvgByteRate
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.56
Description	Average rate as percentage of transmitted bytes.

ruckusCtrlClientStatsTxRetry

TABLE 816 ruckusCtrlClientStatsTxRetry

Object Name	ruckusCtrlClientStatsTxRetry
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.57
Description	Total number retries while transmitting packets.

ruckusCtrlClientStatsRxError

TABLE 817 ruckusCtrlClientStatsRxError

Object Name	ruckusCtrlClientStatsRxError
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.58
Description	Total number of errors when receiving packets.

ruckusCtrlClientStatsTxError

TABLE 818 ruckusCtrlClientStatsTxError

Object Name	ruckusCtrlClientStatsTxError
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.59
Description	Total number of errors when transmitting packets.

ruckusCtrlClientStatsTxRetryBytes

TABLE 819 ruckusCtrlClientStatsTxRetryBytes

Object Name	ruckusCtrlClientStatsTxRetryBytes
Parent Node	ruckusCtrlClientTable

TABLE 819 ruckusCtrlClientStatsTxRetryBytes (continued)

Object Name	ruckusCtrlClientStatsTxRetryBytes
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.61
Description	Total number of retries when transmitting bytes.

ruckusCtrlClientStatsTxDropPkts

TABLE 820 ruckusCtrlClientStatsTxDropPkts

Object Name	ruckusCtrlClientStatsTxDropPkts
Parent Node	ruckusCtrlClientTable
Object Identifier	1.3.6.1.4.1.25053.1.8.1.1.1.2.8.1.63
Description	Total number of transmitted packets that dropped.

AP Wired Client Table

The following MIBs define the information for the controller **AP Wired Client (ruckusCtrlApWiredClientTable)** table for users to easily access information on all wired clients in a specific AP.

The index of the table is the *ApMac* and *WiredClientMac*.

To query all clients in a specific AP (ap1), use the command format:

```
snmpwalk ruckusCtrlApWiredClientMac.ap1
```

For MAC address of C8:AA:7C:8E:67:C4, it must be translated to equivalent decimal value of 202.170.124.142.103.196 for the query.

For example use the command format:

```
snmpget -v2c -c public <ip_addr>  
RUCKUS-CTRL-MIB::ruckusCtrlApWiredClientMac.6.202.170.124.142.103.196  
where 6 is the length of the string index
```

For MIB browser, it should translate the MAC address to the decimal form.

```
.1.3.6.1.4.1.25053.1.8.1.1.1.1.9.1.6.6.202.170.124.142.103.196
```

- [ruckusCTRLApWiredClientEntry](#) on page 321
- [ruckusCtrlApWiredClientApMac](#) on page 322
- [ruckusCtrlApWiredClientMac](#) on page 322

ruckusCTRLApWiredClientEntry

TABLE 821 ruckusCTRLApWiredClientEntry

Object Name	ruckusCTRLApWiredClientEntry
Parent Node	ruckusCtrlApWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.1.11.1
Description	The index to this table is: <ul style="list-style-type: none"> • ruckusCtrlApWiredClientApMac • ruckusCtrlApWiredClientMac

ruckusCtrlApWiredClientApMac

TABLE 822 ruckusCtrlApWiredClientApMac

Object Name	ruckusCtrlApWiredClientApMac
Parent Node	ruckusCtrlApWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.1.11.1
Description	The AP MAC address.

ruckusCtrlApWiredClientMac

TABLE 823 ruckusCtrlApWiredClientMac

Object Name	ruckusCtrlApWiredClientMac
Parent Node	ruckusCtrlApWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.1.11.1.6
Description	Wired client MAC address.

Ruckus Wired Client Table

The following MIBs define the information for the controller **Wired Client (ruckusCtrlWiredClientTable)** table for users to easily access information of a specific wired client.

The index of the table is *WiredClientMac*. This table supports only *snmpget* when the user knows the wired UE's MAC, where the first index should be provided.

To query MAC address of C8:AA:7C:8E:67:C4, it must be translated to an equivalent decimal value of 200.170.124.142.103.196.

For example, to get information of the wired UE with MAC address of C8:AA:7C:8E:67:C4 use the command format:

```
snmpget -v2c -c public <ip_addr> RUCKUS-CTRL-MIB::ruckusCtrlWiredClientMac.6.200.170.124.142.103.196  
where 6 is the length of the string index
```

MAC Address C8:AA:7C:8E:67:C4 in decimal form is 200.170.124.142.103.196:

NOTE

These tables are designed for debugging specific wired clients for a period of time. It is recommended that you do not use this for periodic and long time monitoring.

- [ruckusCTRLWiredClientEntry](#) on page 323
- [ruckusCtrlWiredClientMac](#) on page 323
- [ruckusCtrlWiredClientUserName](#) on page 323
- [ruckusCtrlWiredClientLanPort](#) on page 324
- [ruckusCtrlWiredClientVlanId](#) on page 324
- [ruckusCtrlWiredClientIp](#) on page 324
- [ruckusCtrlWiredClientIpv6](#) on page 324
- [ruckusCtrlWiredClientApMac](#) on page 324
- [ruckusCtrlWiredClientAuthStatus](#) on page 325
- [ruckusCtrlWiredClientRxFrames](#) on page 325

- [ruckusCtrlWiredClientTxFrames](#) on page 325
- [ruckusCtrlWiredClientRxBytes](#) on page 325
- [ruckusCtrlWiredClientTxBytes](#) on page 325
- [ruckusCtrlWiredClientRxUcastPkts](#) on page 326
- [ruckusCtrlWiredClientTxUcastPkts](#) on page 326
- [ruckusCtrlWiredClientRxMcastPkts](#) on page 326
- [ruckusCtrlWiredClientRxMcastLegacyPkts](#) on page 326
- [ruckusCtrlWiredClientRxMcastLegacyPkts](#) on page 326
- [ruckusCtrlWiredClientRxBcastPkts](#) on page 327
- [ruckusCtrlWiredClientTxBcastPkts](#) on page 327
- [ruckusCtrlWiredClientRxDroppedPkts](#) on page 327
- [ruckusCtrlWiredClientTxBcastPkts](#) on page 327
- [ruckusCtrlWiredClientRxEapolPkts](#) on page 327
- [ruckusCtrlWiredClientTxEapolPkts](#) on page 328

ruckusCTRLWiredClientEntry

TABLE 824 ruckusCTRLWiredClientEntry

Object Name	ruckusCTRLWiredClientEntry
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1
Description	The index to this table is WiredClientMac.

ruckusCtrlWiredClientMac

TABLE 825 ruckusCtrlWiredClientMac

Object Name	ruckusCtrlWiredClientMac
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.1
Description	The wired UE MAC Address

ruckusCtrlWiredClientUserName

TABLE 826 ruckusCtrlWiredClientUserName

Object Name	ruckusCtrlWiredClientUserName
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.3
Description	The wired UE user name.

ruckusCtrlWiredClientLanPort

TABLE 827 ruckusCtrlWiredClientLanPort

Object Name	ruckusCtrlWiredClientLanPort
Parent Node	ruckusCtrlApClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.4
Description	The wired UE LAN port

ruckusCtrlWiredClientVlanId

TABLE 828 ruckusCtrlWiredClientVlanId

Object Name	ruckusCtrlWiredClientVlanId
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.5
Description	VLAN identifier.

ruckusCtrlWiredClientIp

TABLE 829 ruckusCtrlWiredClientIp

Object Name	ruckusCtrlWiredClientIp
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.7
Description	The wired UE IP address.

ruckusCtrlWiredClientIpv6

TABLE 830 ruckusCtrlWiredClientIpv6

Object Name	ruckusCtrlWiredClientIpv6
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.7
Description	The wired UE IPV6 address.

ruckusCtrlWiredClientApMac

TABLE 831 ruckusCtrlWiredClientApMac

Object Name	ruckusCtrlWiredClientApMac
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.8
Description	The AP MAC address of the wired client.

ruckusCtrlWiredClientAuthStatus

TABLE 832 ruckusCtrlWiredClientAuthStatus

Object Name	ruckusCtrlWiredClientAuthStatus
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.10
Description	The authorized status of the wired client: <ul style="list-style-type: none"> unauthorized (1) authorized (2)

ruckusCtrlWiredClientRxFrames

TABLE 833 ruckusCtrlWiredClientRxFrames

Object Name	ruckusCtrlWiredClientRxFrames
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.15
Description	The total received frames of the wired client.

ruckusCtrlWiredClientTxFrames

TABLE 834 ruckusCtrlWiredClientTxFrames

Object Name	ruckusCtrlWiredClientTxFrames
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.16
Description	The total transmitted frames of the wired client.

ruckusCtrlWiredClientRxBytes

TABLE 835 ruckusCtrlWiredClientRxBytes

Object Name	ruckusCtrlWiredClientUserName
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.17
Description	The total received bytes of the wired client.

ruckusCtrlWiredClientTxBytes

TABLE 836 ruckusCtrlWiredClientTxBytes

Object Name	ruckusCtrlWiredClientTxBytes
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.18
Description	The total transmitted bytes of the wired client.

ruckusCtrlWiredClientRxUcastPkts

TABLE 837 ruckusCtrlWiredClientRxUcastPkts

Object Name	ruckusCtrlWiredClientRxUcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.23
Description	The number of received unicast packets of the wired client

ruckusCtrlWiredClientTxUcastPkts

TABLE 838 ruckusCtrlWiredClientTxUcastPkts

Object Name	ruckusCtrlWiredClientTxUcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.24
Description	The number of transmitted unicast packets of the wired client.

ruckusCtrlWiredClientRxMcastPkts

TABLE 839 ruckusCtrlWiredClientRxMcastPkts

Object Name	ruckusCtrlWiredClientRxMcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.25
Description	The number of multicast packets received of the wired client.

ruckusCtrlWiredClientTxMcastPkts

TABLE 840 ruckusCtrlWiredClientTxMcastPkts

Object Name	ruckusCtrlWiredClientTxMcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.26
Description	The number of multicast packets transmitted of the wired client.

ruckusCtrlWiredClientRxMcastLegacyPkts

TABLE 841 ruckusCtrlWiredClientRxMcastLegacyPkts

Object Name	ruckusCtrlWiredClientRxMcastLegacyPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.27
Description	The total number of multicast legacy packets of the wired client.

ruckusCtrlWiredClientRxBcastPkts

TABLE 842 ruckusCtrlWiredClientRxBcastPkts

Object Name	ruckusCtrlWiredClientRxBcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.28
Description	The number of broadcast packets received of the wired client.

ruckusCtrlWiredClientTxBcastPkts

TABLE 843 ruckusCtrlWiredClientTxBcastPkts

Object Name	ruckusCtrlWiredClientTxBcastPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.29
Description	The number of broadcast packets transmitted of the wired client.

ruckusCtrlWiredClientRxDroppedPkts

TABLE 844 ruckusCtrlWiredClientRxDroppedPkts

Object Name	ruckusCtrlWiredClientRxDroppedPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.34
Description	The number of dropped frames received.

ruckusCtrlWiredClientTxDroppedPkts

TABLE 845 ruckusCtrlWiredClientTxDroppedPkts

Object Name	ruckusCtrlWiredClientTxDroppedPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.35
Description	The number of transmitted dropped frames.

ruckusCtrlWiredClientRxEapolPkts

TABLE 846 ruckusCtrlWiredClientRxEapolPkts

Object Name	ruckusCtrlWiredClientRxEapolPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.2.15.1.36
Description	The number of EAPOL (Extensible Authentication Protocol (EAP) over LAN (EAPoL)) packets received.

ruckusCtrlWiredClientTxEapolPkts

TABLE 847 ruckusCtrlWiredClientTxEapolPkts

Object Name	ruckusCtrlWiredClientTxEapolPkts
Parent Node	ruckusCtrlWiredClientTable
Object Identifier	.1.3.6.1.4.1.25053.1.8.1.1.1.2.15.1.37
Description	The number of EAPOL packets transmitted.

Ruckus IPv6 MIB

- IP-FORWARD-MIB..... 329
- IP-MIB..... 331
- TCP-MIB..... 355
- UDP-MIB..... 356
- IPV6-MIB..... 356

The following standard MIB OIDs which supported IPv6 will now be able to use IPv6 address to query SNMP MIB:

IP-FORWARD-MIB

inetCidrRouteTable

Following are the objects related to IP-FORWARD-MIB::inetCidrRouteTable:

- [inetCidrRouteIfIndex](#) on page 329
- [inetCidrRouteType](#) on page 329
- [inetCidrRouteProto](#) on page 330
- [inetCidrRouteAge](#) on page 330
- [inetCidrRouteNextHopAS](#) on page 330
- [inetCidrRouteMetric1](#) on page 330
- [inetCidrRouteMetric2](#) on page 330
- [inetCidrRouteMetric3](#) on page 330
- [inetCidrRouteMetric4](#) on page 331
- [inetCidrRouteMetric5](#) on page 331
- [inetCidrRouteStatus](#) on page 331

inetCidrRouteIfIndex

TABLE 848 inetCidrRouteIfIndex

Object Name	inetCidrRouteIfIndex
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.7

inetCidrRouteType

TABLE 849 inetCidrRouteType

Object Name	inetCidrRouteType
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.8

inetCidrRouteProto

TABLE 850 inetCidrRouteProto

Object Name	inetCidrRouteProto
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.9

inetCidrRouteAge

TABLE 851 inetCidrRouteAge

Object Name	inetCidrRouteAge
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.10

inetCidrRouteNextHopAS

TABLE 852 inetCidrRouteNextHopAS

Object Name	inetCidrRouteNextHopAS
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.11

inetCidrRouteMetric1

TABLE 853 inetCidrRouteMetric1

Object Name	inetCidrRouteMetric1
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.12

inetCidrRouteMetric2

TABLE 854 inetCidrRouteMetric2

Object Name	inetCidrRouteMetric2
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.13

inetCidrRouteMetric3

TABLE 855 inetCidrRouteMetric3

Object Name	inetCidrRouteMetric3
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.14

inetCidrRouteMetric4

TABLE 856 inetCidrRouteMetric4

Object Name	inetCidrRouteMetric4
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.15

inetCidrRouteMetric5

TABLE 857 inetCidrRouteMetric5

Object Name	inetCidrRouteMetric5
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.16

inetCidrRouteStatus

TABLE 858 inetCidrRouteStatus

Object Name	inetCidrRouteStatus
Parent Node	inetCidrRouteTable
Object Identifier	.1.3.6.1.2.1.4.24.7.1.17

IP-MIB

Following are the objects related to IP-MIB:

- [ipv6IpForwarding](#) on page 331
- [ipv6IpDefaultHopLimit](#) on page 331
- [ipv6InterfaceTableLastChange](#) on page 332

ipv6IpForwarding

TABLE 859 ipv6IpForwarding

Object Name	ipv6IpForwarding
Object Identifier	.1.3.6.1.2.1.4.25

ipv6IpDefaultHopLimit

TABLE 860 ipv6IpDefaultHopLimit

Object Name	ipv6IpDefaultHopLimit
Object Identifier	.1.3.6.1.2.1.4.26

ipv6InterfaceTableLastChange

TABLE 861 ipv6InterfaceTableLastChange

Object Name	ipv6InterfaceTableLastChange
Object Identifier	.1.3.6.1.2.1.4.29

ipv6InterfaceTable

Following are the objects related to IP-MIB::ipv6InterfaceTable:

- [ipv6InterfaceReasmMaxSize](#) on page 332
- [ipv6InterfaceIdentifier](#) on page 332
- [ipv6InterfaceEnableStatus](#) on page 332
- [ipv6InterfaceReachableTime](#) on page 332
- [ipv6InterfaceRetransmitTime](#) on page 333
- [ipv6InterfaceForwarding](#) on page 333

ipv6InterfaceReasmMaxSize

TABLE 862 ipv6InterfaceReasmMaxSize

Object Name	ipv6InterfaceReasmMaxSize
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.2

ipv6InterfaceIdentifier

TABLE 863 ipv6InterfaceIdentifier

Object Name	ipv6InterfaceIdentifier
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.3

ipv6InterfaceEnableStatus

TABLE 864 ipv6InterfaceEnableStatus

Object Name	ipv6InterfaceEnableStatus
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.5

ipv6InterfaceReachableTime

TABLE 865 ipv6InterfaceReachableTime

Object Name	ipv6InterfaceReachableTime
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.6

ipv6InterfaceRetransmitTime

TABLE 866 ipv6InterfaceRetransmitTime

Object Name	ipv6InterfaceRetransmitTime
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.7

ipv6InterfaceForwarding

TABLE 867 ipv6InterfaceForwarding

Object Name	ipv6InterfaceForwarding
Parent Node	ipv6InterfaceTable
Object Identifier	.1.3.6.1.2.1.4.30.1.8

ipSystemStatsTable

Following are the objects related to IP-MIB::ipSystemStatsTable:

Object	Object	Object
ipSystemStatsInReceives on page 333	ipSystemStatsHCInReceives on page 334	ipSystemStatsInOctets on page 334
ipSystemStatsHCInOctets on page 334	ipSystemStatsInHdrErrors on page 334	ipSystemStatsInNoRoutes on page 334
ipSystemStatsInAddrErrors on page 334	ipSystemStatsInUnknownProtos on page 335	ipSystemStatsInTruncatedPkts on page 335
ipSystemStatsInForwDatagrams on page 335	ipSystemStatsHCInForwDatagrams on page 335	ipSystemStatsReasmReqds on page 335
ipSystemStatsReasmOKs on page 335	ipSystemStatsReasmFails on page 336	ipSystemStatsInDiscards on page 336
ipSystemStatsInDelivers on page 336	ipSystemStatsHCInDelivers on page 336	ipSystemStatsOutRequests on page 336
ipSystemStatsHCOutRequests on page 336	ipSystemStatsOutNoRoutes on page 337	ipSystemStatsOutForwDatagrams on page 337
ipSystemStatsHCOutForwDatagrams on page 337	ipSystemStatsOutDiscards on page 337	ipSystemStatsOutFragReqds on page 337
ipSystemStatsOutFragOKs on page 337	ipSystemStatsOutFragFails on page 338	ipSystemStatsOutFragCreates on page 338
ipSystemStatsOutTransmits on page 338	ipSystemStatsHCOutTransmits on page 338	ipSystemStatsOutOctets on page 338
ipSystemStatsHCOutOctets on page 338	ipSystemStatsInMcastPkts on page 339	ipSystemStatsHCInMcastPkts on page 339
ipSystemStatsInMcastOctets on page 339	ipSystemStatsHCInMcastOctets on page 339	ipSystemStatsOutMcastPkts on page 339
ipSystemStatsHCOutMcastPkts on page 339	ipSystemStatsOutMcastOctets on page 340	ipSystemStatsHCOutMcastOctets on page 340
ipSystemStatsDiscontinuityTime on page 340	ipSystemStatsRefreshRate on page 340	

ipSystemStatsInReceives

TABLE 868 ipSystemStatsInReceives

Object Name	ipSystemStatsInReceives
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.3

ipSystemStatsHCInReceives

TABLE 869 ipSystemStatsHCInReceives

Object Name	ipSystemStatsHCInReceives
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.4

ipSystemStatsInOctets

TABLE 870 ipSystemStatsInOctets

Object Name	ipSystemStatsInOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.5

ipSystemStatsHCInOctets

TABLE 871 ipSystemStatsHCInOctets

Object Name	ipSystemStatsHCInOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.6

ipSystemStatsInHdrErrors

TABLE 872 ipSystemStatsInHdrErrors

Object Name	ipSystemStatsInHdrErrors
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.7

ipSystemStatsInNoRoutes

TABLE 873 ipSystemStatsInNoRoutes

Object Name	ipSystemStatsInNoRoutes
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.8

ipSystemStatsInAddrErrors

TABLE 874 ipSystemStatsInAddrErrors

Object Name	ipSystemStatsInAddrErrors
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.9

ipSystemStatsInUnknownProtos

TABLE 875 ipSystemStatsInUnknownProtos

Object Name	ipSystemStatsInUnknownProtos
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.10

ipSystemStatsInTruncatedPkts

TABLE 876 ipSystemStatsInTruncatedPkts

Object Name	ipSystemStatsInTruncatedPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.11

ipSystemStatsInForwDatagrams

TABLE 877 ipSystemStatsInForwDatagrams

Object Name	ipSystemStatsInForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.12

ipSystemStatsHCInForwDatagrams

TABLE 878 ipSystemStatsHCInForwDatagrams

Object Name	ipSystemStatsHCInForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.13

ipSystemStatsReasmReqds

TABLE 879 ipSystemStatsReasmReqds

Object Name	ipSystemStatsReasmReqds
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.14

ipSystemStatsReasmOKs

TABLE 880 ipSystemStatsReasmOKs

Object Name	ipSystemStatsReasmOKs
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.15

ipSystemStatsReasmFails

TABLE 881 ipSystemStatsReasmFails

Object Name	ipSystemStatsReasmFails
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.16

ipSystemStatsInDiscards

TABLE 882 ipSystemStatsInDiscards

Object Name	ipSystemStatsInDiscards
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.17

ipSystemStatsInDelivers

TABLE 883 ipSystemStatsInDelivers

Object Name	ipSystemStatsInDelivers
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.18

ipSystemStatsHCInDelivers

TABLE 884 ipSystemStatsHCInDelivers

Object Name	ipSystemStatsHCInDelivers
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.19

ipSystemStatsOutRequests

TABLE 885 ipSystemStatsOutRequests

Object Name	ipSystemStatsOutRequests
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.20

ipSystemStatsHCOutRequests

TABLE 886 ipSystemStatsHCOutRequests

Object Name	ipSystemStatsHCOutRequests
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.21

ipSystemStatsOutNoRoutes

TABLE 887 ipSystemStatsOutNoRoutes

Object Name	ipSystemStatsOutNoRoutes
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.22

ipSystemStatsOutForwDatagrams

TABLE 888 ipSystemStatsOutForwDatagrams

Object Name	ipSystemStatsOutForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.23

ipSystemStatsHCOutForwDatagrams

TABLE 889 ipSystemStatsHCOutForwDatagrams

Object Name	ipSystemStatsHCOutForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.24

ipSystemStatsOutDiscards

TABLE 890 ipSystemStatsOutDiscards

Object Name	ipSystemStatsOutDiscards
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.25

ipSystemStatsOutFragReqds

TABLE 891 ipSystemStatsOutFragReqds

Object Name	ipSystemStatsOutFragReqds
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.26

ipSystemStatsOutFragOKs

TABLE 892 ipSystemStatsOutFragOKs

Object Name	ipSystemStatsOutFragOKs
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.27

ipSystemStatsOutFragFails

TABLE 893 ipSystemStatsOutFragFails

Object Name	ipSystemStatsOutFragFails
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.28

ipSystemStatsOutFragCreates

TABLE 894 ipSystemStatsOutFragCreates

Object Name	ipSystemStatsOutFragCreates
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.29

ipSystemStatsOutTransmits

TABLE 895 ipSystemStatsOutTransmits

Object Name	ipSystemStatsOutTransmits
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.30

ipSystemStatsHCOutTransmits

TABLE 896 ipSystemStatsHCOutTransmits

Object Name	ipSystemStatsHCOutTransmits
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.31

ipSystemStatsOutOctets

TABLE 897 ipSystemStatsOutOctets

Object Name	ipSystemStatsOutOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.32

ipSystemStatsHCOutOctets

TABLE 898 ipSystemStatsHCOutOctets

Object Name	ipSystemStatsHCOutOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.33

ipSystemStatsInMcastPkts

TABLE 899 ipSystemStatsInMcastPkts

Object Name	ipSystemStatsInMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.34

ipSystemStatsHCInMcastPkts

TABLE 900 ipSystemStatsHCInMcastPkts

Object Name	ipSystemStatsHCInMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.35

ipSystemStatsInMcastOctets

TABLE 901 ipSystemStatsInMcastOctets

Object Name	ipSystemStatsInMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.36

ipSystemStatsHCInMcastOctets

TABLE 902 ipSystemStatsHCInMcastOctets

Object Name	ipSystemStatsHCInMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.37

ipSystemStatsOutMcastPkts

TABLE 903 ipSystemStatsOutMcastPkts

Object Name	ipSystemStatsOutMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.38

ipSystemStatsHCOutMcastPkts

TABLE 904 ipSystemStatsHCOutMcastPkts

Object Name	ipSystemStatsHCOutMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.39

ipSystemStatsOutMcastOctets

TABLE 905 ipSystemStatsOutMcastOctets

Object Name	ipSystemStatsOutMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.40

ipSystemStatsHCOutMcastOctets

TABLE 906 ipSystemStatsHCOutMcastOctets

Object Name	ipSystemStatsHCOutMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.41

ipSystemStatsDiscontinuityTime

TABLE 907 ipSystemStatsDiscontinuityTime

Object Name	ipSystemStatsDiscontinuityTime
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.46

ipSystemStatsRefreshRate

TABLE 908 ipSystemStatsRefreshRate

Object Name	ipSystemStatsRefreshRate
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.1.1.47

ipIfStatsTable

Following are the objects related to IP-MIB::ipIfStatsTable:

Object	Object	Object
ipIfStatsInReceives on page 341	ipIfStatsHCInReceives on page 341	ipIfStatsInOctets on page 341
ipIfStatsHCInOctets on page 341	ipIfStatsInHdrErrors on page 341	ipIfStatsInNoRoutes on page 342
ipIfStatsInAddrErrors on page 342	ipIfStatsInUnknownProtos on page 342	ipIfStatsInTruncatedPkts on page 342
ipIfStatsInForwDatagrams on page 342	ipIfStatsHCInForwDatagrams on page 342	ipIfStatsReasmReqds on page 343
ipIfStatsReasmOKs on page 343	ipIfStatsReasmFails on page 343	ipIfStatsInDiscards on page 343
ipIfStatsInDelivers on page 343	ipIfStatsHCInDelivers on page 343	ipIfStatsOutRequests on page 344
ipIfStatsHCOutRequests on page 344	ipIfStatsOutForwDatagrams on page 344	ipIfStatsHCOutForwDatagrams on page 344
ipIfStatsOutDiscards on page 344	ipIfStatsOutFragReqds on page 344	ipIfStatsOutFragOKs on page 345
ipIfStatsOutFragFails on page 345	ipIfStatsOutFragCreates on page 345	ipIfStatsOutTransmits on page 345
ipIfStatsHCOutTransmits on page 345	ipIfStatsOutOctets on page 345	ipIfStatsHCOutOctets on page 346
ipIfStatsInMcastPkts on page 346	ipIfStatsHCInMcastPkts on page 346	ipIfStatsInMcastOctets on page 346

Object	Object	Object
ipIfStatsHCInMcastOctets on page 346	ipIfStatsOutMcastPkts on page 346	ipIfStatsHCOutMcastPkts on page 347
ipIfStatsOutMcastOctets on page 347	ipIfStatsHCOutMcastOctets on page 347	ipIfStatsDiscontinuityTime on page 347
ipIfStatsRefreshRate on page 347		

ipIfStatsInReceives

TABLE 909 ipIfStatsInReceives

Object Name	ipIfStatsInReceives
Parent Node	ipIfStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.3

ipIfStatsHCInReceives

TABLE 910 ipIfStatsHCInReceives

Object Name	ipIfStatsHCInReceives
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.4

ipIfStatsInOctets

TABLE 911 ipIfStatsInOctets

Object Name	ipIfStatsInOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.5

ipIfStatsHCInOctets

TABLE 912 ipIfStatsHCInOctets

Object Name	ipIfStatsHCInOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.6

ipIfStatsInHdrErrors

TABLE 913 ipIfStatsInHdrErrors

Object Name	ipIfStatsInHdrErrors
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.7

ipIfStatsInNoRoutes

TABLE 914 ipIfStatsInNoRoutes

Object Name	ipIfStatsInNoRoutes
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.8

ipIfStatsInAddrErrors

TABLE 915 ipIfStatsInAddrErrors

Object Name	ipIfStatsInAddrErrors
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.9

ipIfStatsInUnknownProtos

TABLE 916 ipIfStatsInUnknownProtos

Object Name	ipIfStatsInUnknownProtos
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.10

ipIfStatsInTruncatedPkts

TABLE 917 ipIfStatsInTruncatedPkts

Object Name	ipIfStatsInTruncatedPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.11

ipIfStatsInForwDatagrams

TABLE 918 ipIfStatsInForwDatagrams

Object Name	ipIfStatsInForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.12

ipIfStatsHCInForwDatagrams

TABLE 919 ipIfStatsHCInForwDatagrams

Object Name	ipIfStatsHCInForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.13

ipIfStatsReasmReqds

TABLE 920 ipIfStatsReasmReqds

Object Name	ipIfStatsReasmReqds
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.14

ipIfStatsReasmOKs

TABLE 921 ipIfStatsReasmOKs

Object Name	ipIfStatsReasmOKs
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.15

ipIfStatsReasmFails

TABLE 922 ipIfStatsReasmFails

Object Name	ipIfStatsReasmFails
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.16

ipIfStatsInDiscards

TABLE 923 ipIfStatsInDiscards

Object Name	ipIfStatsInDiscards
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.17

ipIfStatsInDelivers

TABLE 924 ipIfStatsInDelivers

Object Name	ipIfStatsInDelivers
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.18

ipIfStatsHCInDelivers

TABLE 925 ipIfStatsHCInDelivers

Object Name	ipIfStatsHCInDelivers
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.19

ipIfStatsOutRequests

TABLE 926 ipIfStatsOutRequests

Object Name	ipIfStatsOutRequests
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.20

ipIfStatsHCOutRequests

TABLE 927 ipIfStatsHCOutRequests

Object Name	ipIfStatsHCOutRequests
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.21

ipIfStatsOutForwDatagrams

TABLE 928 ipIfStatsOutForwDatagrams

Object Name	ipIfStatsOutForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.23

ipIfStatsHCOutForwDatagrams

TABLE 929 ipIfStatsHCOutForwDatagrams

Object Name	ipIfStatsHCOutForwDatagrams
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.24

ipIfStatsOutDiscards

TABLE 930 ipIfStatsOutDiscards

Object Name	ipIfStatsOutDiscards
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.25

ipIfStatsOutFragReqds

TABLE 931 ipIfStatsOutFragReqds

Object Name	ipIfStatsOutFragReqds
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.26

ipIfStatsOutFragOKs

TABLE 932 ipIfStatsOutFragOKs

Object Name	ipIfStatsOutFragOKs
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.27

ipIfStatsOutFragFails

TABLE 933 ipIfStatsOutFragFails

Object Name	ipIfStatsOutFragFails
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.28

ipIfStatsOutFragCreates

TABLE 934 ipIfStatsOutFragCreates

Object Name	ipIfStatsOutFragCreates
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.29

ipIfStatsOutTransmits

TABLE 935 ipIfStatsOutTransmits

Object Name	ipIfStatsOutTransmits
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.30

ipIfStatsHCOutTransmits

TABLE 936 ipIfStatsHCOutTransmits

Object Name	ipIfStatsHCOutTransmits
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.31

ipIfStatsOutOctets

TABLE 937 ipIfStatsOutOctets

Object Name	ipIfStatsOutOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.32

ipIfStatsHCOctets

TABLE 938 ipIfStatsHCOctets

Object Name	ipIfStatsHCOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.33

ipIfStatsInMcastPkts

TABLE 939 ipIfStatsInMcastPkts

Object Name	ipIfStatsInMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.34

ipIfStatsHCInMcastPkts

TABLE 940 ipIfStatsHCInMcastPkts

Object Name	ipIfStatsHCInMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.35

ipIfStatsInMcastOctets

TABLE 941 ipIfStatsInMcastOctets

Object Name	ipIfStatsInMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.36

ipIfStatsHCInMcastOctets

TABLE 942 ipIfStatsHCInMcastOctets

Object Name	ipIfStatsHCInMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.37

ipIfStatsOutMcastPkts

TABLE 943 ipIfStatsOutMcastPkts

Object Name	ipIfStatsOutMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.38

ipIfStatsHCOutMcastPkts

TABLE 944 ipIfStatsHCOutMcastPkts

Object Name	ipIfStatsHCOutMcastPkts
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.39

ipIfStatsOutMcastOctets

TABLE 945 ipIfStatsOutMcastOctets

Object Name	ipIfStatsOutMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.40

ipIfStatsHCOutMcastOctets

TABLE 946 ipIfStatsHCOutMcastOctets

Object Name	ipIfStatsHCOutMcastOctets
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.41

ipIfStatsDiscontinuityTime

TABLE 947 ipIfStatsDiscontinuityTime

Object Name	ipIfStatsDiscontinuityTime
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.46

ipIfStatsRefreshRate

TABLE 948 ipIfStatsRefreshRate

Object Name	ipIfStatsRefreshRate
Parent Node	ipSystemStatsTable
Object Identifier	.1.3.6.1.2.1.4.31.3.1.47

ipAddressPrefixTable

Following are the objects related to IP-MIB::ipAddressPrefixTable:

- [ipAddressPrefixOrigin](#) on page 348
- [ipAddressPrefixOnLinkFlag](#) on page 348
- [ipAddressPrefixAutonomousFlag](#) on page 348
- [ipAddressPrefixAdvPreferredLifetime](#) on page 348
- [ipAddressPrefixAdvValidLifetime](#) on page 348

ipAddressPrefixOrigin

TABLE 949 ipAddressPrefixOrigin

Object Name	ipAddressPrefixOrigin
Parent Node	ipAddressPrefixTable
Object Identifier	.1.3.6.1.2.1.4.32.1.5

ipAddressPrefixOnLinkFlag

TABLE 950 ipAddressPrefixOnLinkFlag

Object Name	ipAddressPrefixOnLinkFlag
Parent Node	ipAddressPrefixTable
Object Identifier	.1.3.6.1.2.1.4.32.1.6

ipAddressPrefixAutonomousFlag

TABLE 951 ipAddressPrefixAutonomousFlag

Object Name	ipAddressPrefixAutonomousFlag
Parent Node	ipAddressPrefixTable
Object Identifier	.1.3.6.1.2.1.4.32.1.7

ipAddressPrefixAdvPreferredLifetime

TABLE 952 ipAddressPrefixAdvPreferredLifetime

Object Name	ipAddressPrefixAdvPreferredLifetime
Parent Node	ipAddressPrefixTable
Object Identifier	.1.3.6.1.2.1.4.32.1.8

ipAddressPrefixAdvValidLifetime

TABLE 953 ipAddressPrefixAdvValidLifetime

Object Name	ipAddressPrefixAdvValidLifetime
Parent Node	ipAddressPrefixTable
Object Identifier	.1.3.6.1.2.1.4.32.1.9

ipAddressTable

Following are the objects related to IP-MIB::ipAddressTable:

- [ipAddressIfIndex](#) on page 349
- [ipAddressType](#) on page 349
- [ipAddressPrefix](#) on page 349
- [ipAddressOrigin](#) on page 349
- [ipAddressStatus](#) on page 349

- [ipAddressCreated](#) on page 350
- [ipAddressLastChanged](#) on page 350
- [ipAddressRowStatus](#) on page 350
- [ipAddressStorageType](#) on page 350

ipAddressIfIndex

TABLE 954 ipAddressIfIndex

Object Name	ipAddressIfIndex
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.3

ipAddressType

TABLE 955 ipAddressType

Object Name	ipAddressType
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.4

ipAddressPrefix

TABLE 956 ipAddressPrefix

Object Name	ipAddressPrefix
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.5

ipAddressOrigin

TABLE 957 ipAddressOrigin

Object Name	ipAddressOrigin
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.6

ipAddressStatus

TABLE 958 ipAddressStatus

Object Name	ipAddressStatus
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.7

ipAddressCreated

TABLE 959 ipAddressCreated

Object Name	ipAddressCreated
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.8

ipAddressLastChanged

TABLE 960 ipAddressLastChanged

Object Name	ipAddressLastChanged
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.9

ipAddressRowStatus

TABLE 961 ipAddressRowStatus

Object Name	ipAddressRowStatus
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.10

ipAddressStorageType

TABLE 962 ipAddressStorageType

Object Name	ipAddressStorageType
Parent Node	ipAddressTable
Object Identifier	.1.3.6.1.2.1.4.34.1.11

ipNetToPhysicalTable

Following are the objects related to IP-MIB::ipNetToPhysicalTable:

- [ipNetToPhysicalPhysAddress](#) on page 350
- [ipNetToPhysicalLastUpdated](#) on page 351
- [ipNetToPhysicalRowStatus](#) on page 351
- [ipNetToPhysicalState](#) on page 351
- [ipNetToPhysicalType](#) on page 351

ipNetToPhysicalPhysAddress

TABLE 963 ipNetToPhysicalPhysAddress

Object Name	ipNetToPhysicalPhysAddress
Parent Node	ipNetToPhysicalTable
Object Identifier	.1.3.6.1.2.1.4.35.1.4

ipNetToPhysicalLastUpdated

TABLE 964 ipNetToPhysicalLastUpdated

Object Name	ipNetToPhysicalLastUpdated
Parent Node	ipNetToPhysicalTable
Object Identifier	.1.3.6.1.2.1.4.35.1.5

ipNetToPhysicalRowStatus

TABLE 965 ipNetToPhysicalRowStatus

Object Name	ipNetToPhysicalRowStatus
Parent Node	ipNetToPhysicalTable
Object Identifier	.1.3.6.1.2.1.4.35.1.6

ipNetToPhysicalState

TABLE 966 ipNetToPhysicalState

Object Name	ipNetToPhysicalState
Parent Node	ipNetToPhysicalTable
Object Identifier	.1.3.6.1.2.1.4.35.1.7

ipNetToPhysicalType

TABLE 967 ipNetToPhysicalType

Object Name	ipNetToPhysicalType
Parent Node	ipNetToPhysicalTable
Object Identifier	.1.3.6.1.2.1.4.35.1.8

ipv6ScopeZoneIndexTable

Following are the objects related to IP-MIB::ipv6ScopeZoneIndexTable:

- [ipv6ScopeZoneIndexLinkLocal](#) on page 352
- [ipv6ScopeZoneIndex3](#) on page 352
- [ipv6ScopeZoneIndexAdminLocal](#) on page 352
- [ipv6ScopeZoneIndexSiteLocal](#) on page 352
- [ipv6ScopeZoneIndex6](#) on page 352
- [ipv6ScopeZoneIndex7](#) on page 352
- [ipv6ScopeZoneIndexOrganizationLocal](#) on page 353
- [ipv6ScopeZoneIndex9](#) on page 353
- [ipv6ScopeZoneIndexA](#) on page 353
- [ipv6ScopeZoneIndexB](#) on page 353
- [ipv6ScopeZoneIndexC](#) on page 353
- [ipv6ScopeZoneIndexD](#) on page 353

ipv6ScopeZoneIndexLinkLocal

TABLE 968 ipv6ScopeZoneIndexLinkLocal

Object Name	ipv6ScopeZoneIndexLinkLocal
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.2

ipv6ScopeZoneIndex3

TABLE 969 ipv6ScopeZoneIndex3

Object Name	ipv6ScopeZoneIndex3
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.3

ipv6ScopeZoneIndexAdminLocal

TABLE 970 ipv6ScopeZoneIndexAdminLocal

Object Name	ipv6ScopeZoneIndexAdminLocal
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.4

ipv6ScopeZoneIndexSiteLocal

TABLE 971 ipv6ScopeZoneIndexSiteLocal

Object Name	ipv6ScopeZoneIndexSiteLocal
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.5

ipv6ScopeZoneIndex6

TABLE 972 ipv6ScopeZoneIndex6

Object Name	ipv6ScopeZoneIndex6
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.6

ipv6ScopeZoneIndex7

TABLE 973 ipv6ScopeZoneIndex7

Object Name	ipv6ScopeZoneIndex7
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.7

ipv6ScopeZoneIndexOrganizationLocal

TABLE 974 ipv6ScopeZoneIndexOrganizationLocal

Object Name	ipv6ScopeZoneIndexOrganizationLocal
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.8

ipv6ScopeZoneIndex9

TABLE 975 ipv6ScopeZoneIndex9

Object Name	ipv6ScopeZoneIndex9
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.9

ipv6ScopeZoneIndexA

TABLE 976 ipv6ScopeZoneIndexA

Object Name	ipv6ScopeZoneIndexA
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.10

ipv6ScopeZoneIndexB

TABLE 977 ipv6ScopeZoneIndexB

Object Name	ipv6ScopeZoneIndexB
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.11

ipv6ScopeZoneIndexC

TABLE 978 ipv6ScopeZoneIndexC

Object Name	ipv6ScopeZoneIndexC
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.12

ipv6ScopeZoneIndexD

TABLE 979 ipv6ScopeZoneIndexD

Object Name	ipv6ScopeZoneIndexD
Parent Node	ipv6ScopeZoneIndexTable
Object Identifier	.1.3.6.1.2.1.4.36.1.13

icmpStatsTable

Following are the objects related to IP-MIB::icmpStatsTable:

- [icmpStatsInMsgs](#) on page 354
- [icmpStatsInErrors](#) on page 354
- [icmpStatsOutMsgs](#) on page 354
- [icmpStatsOutErrors](#) on page 354

icmpStatsInMsgs

TABLE 980 icmpStatsInMsgs

Object Name	icmpStatsInMsgs
Parent Node	icmpStatsTable
Object Identifier	.1.3.6.1.2.1.5.29.1.2

icmpStatsInErrors

TABLE 981 icmpStatsInErrors

Object Name	icmpStatsInErrors
Parent Node	icmpStatsTable
Object Identifier	.1.3.6.1.2.1.5.29.1.3

icmpStatsOutMsgs

TABLE 982 icmpStatsOutMsgs

Object Name	icmpStatsOutMsgs
Parent Node	icmpStatsTable
Object Identifier	.1.3.6.1.2.1.5.29.1.4

icmpStatsOutErrors

TABLE 983 icmpStatsOutErrors

Object Name	icmpStatsOutErrors
Parent Node	icmpStatsTable
Object Identifier	.1.3.6.1.2.1.5.29.1.5

icmpMsgStatsTable

Following are the objects related to IP-MIB::icmpMsgStatsTable:

- [icmpMsgStatsInPkts](#) on page 355
- [icmpMsgStatsOutPkts](#) on page 355

icmpMsgStatsInPkts

TABLE 984 icmpMsgStatsInPkts

Object Name	icmpMsgStatsInPkts
Parent Node	icmpMsgStatsTable
Object Identifier	.1.3.6.1.2.1.5.30.1.3

icmpMsgStatsOutPkts

TABLE 985 icmpMsgStatsOutPkts

Object Name	icmpMsgStatsOutPkts
Parent Node	icmpMsgStatsTable
Object Identifier	.1.3.6.1.2.1.5.30.1.4

TCP-MIB

tcpListenerTable

Object(s) related to TCP-MIB::tcpListenerTable:

- [tcpListenerProcess](#) on page 355

tcpListenerProcess

TABLE 986 tcpListenerProcess

Object Name	tcpListenerProcess
Parent Node	tcpListenerTable
Object Identifier	.1.3.6.1.2.1.6.20.1.4

tcpConnectionTable

Following are the objects related to TCP-MIB::tcpConnectionTable:

- [tcpConnectionState](#) on page 355
- [tcpConnectionProcess](#) on page 356

tcpConnectionState

TABLE 987 tcpConnectionState

Object Name	tcpConnectionState
Parent Node	tcpConnectionTable
Object Identifier	.1.3.6.1.2.1.6.19.1.7

tcpConnectionProcess

TABLE 988 tcpConnectionProcess

Object Name	tcpConnectionProcess
Parent Node	tcpConnectionTable
Object Identifier	.1.3.6.1.2.1.6.19.1.8

UDP-MIB

udpEndpointTable

Object(s) related to UDP-MIB::udpEndpointTable:

- [udpEndpointProcess](#) on page 356

udpEndpointProcess

TABLE 989 udpEndpointProcess

Object Name	udpEndpointProcess
Parent Node	udpEndpointTable
Object Identifier	.1.3.6.1.2.1.7.7.1.8

IPV6-MIB

Following are the objects related to IPV6-MIB:

- [ipv6Forwarding](#) on page 356
- [ipv6DefaultHopLimit](#) on page 356
- [ipv6Interfaces](#) on page 357

ipv6Forwarding

TABLE 990 ipv6Forwarding

Object Name	ipv6Forwarding
Object Identifier	.1.3.6.1.2.1.55.1.1

ipv6DefaultHopLimit

TABLE 991 ipv6DefaultHopLimit

Object Name	ipv6DefaultHopLimit
Object Identifier	.1.3.6.1.2.1.55.1.2

ipv6Interfaces

TABLE 992 ipv6Interfaces

Object Name	ipv6Interfaces
Object Identifier	.1.3.6.1.2.1.55.1.3

ipv6IfTable

Following are the objects related to IPV6-MIB::ipv6IfTable:

- [ipv6IfDescr](#) on page 357
- [ipv6IfLowerLayer](#) on page 357
- [ipv6IfPhysicalAddress](#) on page 357
- [ipv6IfPhysicalAddress](#) on page 357
- [ipv6IfAdminStatus](#) on page 358
- [ipv6IfOperStatus](#) on page 358

ipv6IfDescr

TABLE 993 ipv6IfDescr

Object Name	ipv6IfDescr
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.2

ipv6IfLowerLayer

TABLE 994 ipv6IfLowerLayer

Object Name	ipv6IfLowerLayer
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.3

ipv6IfPhysicalAddress

TABLE 995 ipv6IfPhysicalAddress

Object Name	ipv6IfPhysicalAddress
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.4

ipv6IfPhysicalAddress

TABLE 996 ipv6IfPhysicalAddress

Object Name	ipv6IfPhysicalAddress
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.8

ipv6IfAdminStatus

TABLE 997 ipv6IfAdminStatus

Object Name	ipv6IfAdminStatus
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.9

ipv6IfOperStatus

TABLE 998 ipv6IfOperStatus

Object Name	ipv6IfOperStatus
Parent Node	ipv6IfTable
Object Identifier	.1.3.6.1.2.1.55.1.5.1.10

SmartZone Event Traps

- [ruckusSCGSystemMiscEventTrap.....](#) 359
- [ruckusSCGAPMiscEventTrap.....](#) 362
- [ruckusSCGClientMiscEventTrap.....](#) 363

ruckusSCGSystemMiscEventTrap

- Object Name - [ruckusSCGSystemMiscEventTrap](#) on page 55
- Object Identifier - 1.3.6.1.4.1.25053.2.10.1.1

Event	Event	Event
0:Unknown	508:dpIPChanged	509:dpChangeControlBlade
520:dpProcessRestart	530:dpDiscoverySuccess	532:dpStatusManaged
538:dpLicenseInsufficient	616:dpSgreKeepAliveTimeout	618:dpDhcpRelayNoResp
619:dpDhcpRelayFailOver	620:dpSgreNewTunnel	621:dpSgreDelTunnel
622:dpSgreKeepAliveRecovery	623:dpDhcpRelayRespRecovery	626:dpSgreGWFailOver
628: dpSwitchover	725:scgLBSStartLocationService	727:scgLBSsentControllerInfo
728:scgLBSRcvdMgmtRequest	729:scgLBSsendAPIInfoByVenueReport	730:scgLBSsendVenuesReport
731:scgLBSsendClientInfo	732:scgLBSFwdPassiveCalReq	734:scgLBSRcvdUnrecognizedRequest
753: serviceUnavailable	801:clusterCreatedSuccess	818:clusterBackupStart
819:clusterUpgradeStart	823:nodelIPChanged	827:ntpTimeSynched
830:clusterUploadStart	834:removeNodeStarted	837:resyncNTPTime
838:diskUsageExceed	844:clusterInitiatedMovingAp	848:clusterUploadAPFirmwareStart
849:clusterUploadAPFirmwareSuccess	850:clusterUploadAPFirmwareFailed	851:clusterAddAPFirmwareStart
852:clusterAddAPFirmwareSuccess	853:clusterAddAPFirmwareFailed	854:clusterNameChanged
855: unsyncNTPTime	859: NtpServerReachFailed	869: Reindex ElasticSearchfinished
870: clusterInitContactApr	872: allServiceOutOfService	873: allServiceInService
874: clusterRedundancySyncCfgFailed	875: clusterRedundancySyncCfgStart	876: clusterRedundancySyncCfgSuccess
877: clusterRedundantRestoreCfgFailed	878: clusterRedundantRestoreCfgStart	879: clusterRedundantRestoreCfgSuccess
880: clusterRedundantBackMonitoring	881: clusterRedundancyApRehomeIncomplete	882: clusterRedundancyConnectToTargetClusterFailed
887: clusterRedundancyDpRehomeIncomplete	888: clusterBackupDownloadStart	889: restoreClusterForFailedUpgradeSuccess
890: certificateAboutToExpire	891: certificateExpire	
892: certificateGenerateResult	956: clientCountDropThresholdExceeded	962: apCapacityReached
963: connectedDeviceMaxCapacityReached	964: connectedDeviceThresholdBackToNormal	970:ftpTransfer
980:fileUpload	981:mailSendSuccess	982:mailSendFailed
983:smsSendSuccess	984:smsSendFailed	1007:cfgUpdSuccess
1012:incorrectFlatFileCfg	1014:hipStarted	1015:hipStopped
1017:standbyHipRestart	1018:hipCacheCleanup	1019: Unconfirmed Program Detection
1024: apCfgNonDhcpNatWlanVlanConfigMismatch	1025: apCfgDhcpNatWlanVlanConfigMismatch	1209:c2dCfgFailed
1212:echoRspNotRcvd	1216:pdpCtxEstablished	1217:crtPdpFailed

SmartZone Event Traps
ruckusSCGSystemMiscEventTrap

Event	Event	Event
1218:initPdpUpdSuccHlr	1219:initPdpUpdFailureHlr	1220:initPdpUpdSuccRoam
1221:initPdpUpdFailureRoam	1222:recvPdpUpdSuccGgsn	1223:recvPdpUpdFailureGgsn
1224:initPdpDelSucc	1225:initPdpDelFailure	1226:recvPdpDelSucc
1227:recvPdpDelFailure	1229:ipAssigned	1230:ipNotAssigned
1232:accSessStarted	1233:accSessStartFailed	1234:accSessDisabled
1235:sessTimeout	1237:delAllSess	1238:dhcpInfmRcvd
1239:dhcpDclnRcvd	1240:sessionWarningThreshold	1241:sessionMajorThreshold
1244:pdpUpdSuccCOA	1245:pdpUpdFailCOA	1246:accSessStopSucc
1247:accSessStopFail	1248:accSessInterimFail	1254:licenseImported
1255:licenseGoingToExpire	1256:apConnectionTerminatedDueToInsufficient License	1257: dpDcToCaleaConnected
1258: dpDcToCaleaConnectFail	1259: dpDcToCaleaDisconnected	1260: dpP2PTunnelConnected
1261: dpP2PTunnelConnectFail	1262: dpP2PTunnelDisconnected	1263: dpStartMirroringClient
1264: dpStopMirroringClient	1265: dpDhcpIpPoolUsageRate100	1266: dpDhcpIpPoolUsageRate80
1267: zoneAffinityLastDpDisconnected	1268: dpCaleaUeInterimMatched	1277: dpDhcpIpLicenseNotEnough
1278: dpNatSessionLicenseNotEnough	1281: urlFilteringLicenseInsufficient	1283: dpNatSessionCapacityUsageRate80
1284: dpNatSessionCapacityUsageRate100	1285: dpDhcpIpCapacityUsageRate80	1286: dpDhcpIpCapacityUsageRate100
1287: dpDhcpIpLicenseRemoved	1288: dpNatSessionLicenseRemoved	1289: switchConnectionTerminatedDueToInsufficientLicense
1290: dpBackupSuccess	1291: dpBackupCompressFailed	1292: dpRestoreSuccess
1293: dpRestoreDecompressFailed	1300:rateLimitThresholdSurpassed	1301:rateLimitThresholdRestored
1401:dialnitalizeErr	1402:dialinitialization	1403:diaPeerTransportFailure
1404:diaCERError	1405:diaCERSuccess	1404:diaCERError
1405:diaCERSuccess	1408:diaPeerAddSuccess	1409:diaPeerRemoveSuccess
1410:diaRealmEntryErr	1411:diaFailOverToAltPeer	1412:diaFallbackToPeer
1414:diaCEAUnknownPeer	1415:diaNoCommonApp	1550:staSuccessfulAuthentication
1551:staAuthFailedTransDown	1552:staAuthFailedFailureResp	1553:staAuthFailedDecodeFailure
1554:staSessionTermSCGInitSuccess	1555:staSessionTermAAAInitSucess	1556:staSessionTermAAAInitFail
1557:staReAuthSuccess	1558:staReAuthFailed	1559:staResponseTimerExpired
1560:retransmitExhausted	1604:authSuccess	1605:authFailed
1606:pseudonymAuthSuccess	1607:pseudonymAuthFailed	1608:fastReauthSuccess
1609:fastReauthFailed	1612:cgfKeepAliveNotResponded	1613:cdrTxfrSuccessful
1630:sendAuthInfoSuccess	1631:sendAuthInfoFailed	1632:updateGprsLocSuccess
1633:updateGprsLocFailed	1634:insertSubDataSuccess	1635:insertSubDataFailed
1639:restoreDataSuccess	1640:restoreDataFailed	1641:dmRcvdAAA
1642:dmNackSntAAA	1643:dmSntNAS	1644:dmNackRcvdNAS
1645:coaRcvdAAA	1646:coaNackSntAAA	1647:coaSentNas
1648:coaNakRcvdNas	1649:coaAuthorizeOnlyAccessReject	1650:coaRWSGMWWSGNotiffFailure
1651:authFailedOverToSecondary	1652:authFallbackToPrimary	1653:accFailedOverToSecondary
1654:accFallbackToPrimary	1655:unavailableLocInfoRequested	1656:incapableLocInfoRequested
1657:unSupportedLocDeliveryRequest	1751:racADLDAPSuccess	1752:racADLDAPFail
1753:racADLDAPBindFail	1754:racLDAPFailToFindPassword	1755:racADNPSFail

Event	Event	Event
1756:racADNPSFailToAuthenticate	1761: racADLDAPTLSSuccess	1762: racADLDAPTLSTLSFailed
1763: racTLSEstablishmentFailedBetweenSZandExternalAAAServer	1801:3rdPartyAPConnected	1908:apAcctRetransmittedMsgDropped
2001:zdAPMigrating	2002:zdAPMigrated	2003:zdAPRejected
2004:zdAPMigrationFailed	2181: http2ServerReachable	2182: http2ServerUnreachable
2183: coaRcvdHttp2	2184: unauthorizedCoaDmMessageDroppedHttp2	2185: dmRcvdHttp2
2301: socialMediaAuthenticationSuccess	2302: socialMediaNotReceivedAutzCode	2303: socialMediaNotReceivedAccessToken
	2501:nodeIPv6Added	2502:nodeIPv6Deleted
2901: dplpmiVoltage	2902: dplpmiThempBB	2904: dplpmiThempIOH
2905: dplpmiThempMemP	2913: dplpmiPsStatus	2926: dplpmiREVoltage
2929: dplpmiREThempIOH	2930: dplpmiREThempMemP	2938: dplpmiRePsStatus
2961: dpSSDHealthDegrade	3001:cassandraError	4501: cloudServicesEnabled
4502: cloudServicesDisabled	4503: cloudAnalyticsEnabled	4504: cloudAnalyticsDisabled
4505: cloudAnalyticsDisconnected	4701: connected	4702: disconnected
4703: connectingFailure	5007:ImaHbUnreachable	5011:bindingExpired
5012:bindingRevoked	5013:bindingReleased	7001:tooManyUsers
7002:tooManyDevices	8010: passwordExpiration	8011 adminAccountLockout
8012: AdminSessionExpired	8013: DisableInactiveAdmins	8014:twoFactorAuthFailed
8021: signaturePackageDownloadFailed	8022: signaturePackageCheckInstallableFailed	8023: signaturePackageInstallFailed.
99000: keyGenFail	99100: szKeyGenFail	99101: szSysIPsecFail
99102: szCertValidFail	99103: szSysIPsecIKEUp	99104: szSysIPsecIKEDown
99200: dplIntegrityTestFailed	99201: dpCliEnableFailed	99202: dpReAuth
99203: dpPasswordMinLengthUpdated	99204: dpPasswordChanged	99205: dpEnablePasswordChanged
99206: dpHttpsAuthFailed	99207: dpCertUploaded	99208: dpScgFqdnUpdated
99210: dpInitUpgrade	99211: dpDiscontinuousTimeChangeNTPServerdpNtpTimeSync	99212: dpUserLogin
99213: dpUserLoginFailed	99214: dpUserLogout	99215: dpAccountLocked
99220: dpSessionIdleUpdated	99221: dpSessionIdleTerminated	99230: dpSshTunnFailed
99231: dpHttpsConnFailed	99240: dplPsecTunnCreateFailed	99241: dplPsecTunnInitiate
99242: dplPsecTunnTerminated	99243: dplPsecSaFailed	99244: dplPsecSaUpdated
99250: dpSshdStart	99251: dpSshdStop	99301: disContTimeChange
20000: SwitchCriticalMessage	20001: SwitchAlertMessage	20002: SwitchWarningMessage
21000: SwitchOffline	21001: OverSwitchMaxCapacity	21002: SwitchDuplicated
21050: switchClusterFailover	21060: switchRehomeFailover	21061: clusterRedundancySwitchRehomeIncomplete
21070: switchSwitchover	21071: switchSwitchoverFailed	
22010: warningCpuThresholdExceeded	22011: majorCpuThresholdExceeded	22012: criticalCpuThresholdExceeded
22020: warningMemoryThresholdExceeded	22021: majorMemoryThresholdExceeded	22022: criticalMemoryThresholdExceeded
22030: hitWarningSwitchCombinedEvent	22031: hitMajorSwitchCombinedEvent	22032: hitCriticalSwitchCombinedEvent
22041: switchFirmwareUpdate	22042: switchFirmwareUpdateFail	22051: switchConfigurationUpdate
22052: switchConfigurationUpdateFail	22071: switchDeleteByController	22081: switchDisconnectFromController

Event	Event	Event
22082: switchConnectToController	22091: switchDiscoverByController	

ruckusSCGAPMiscEventTrap

- Object Name - [ruckusSCGAPMiscEventTrap](#) on page 60
- Object Identifier - 1.3.6.1.4.1.25053.2.10.1.20

Event	Event	Event
108:apFirmwareApplying	109:apConfApplying	116:apIllegalToChangeCountryCode
117:apGetConfigFailed	180:genericRogueAPDetected	187:apSigningInformation
188:AP is connected to standby cluster over the expiration date.	189:jammingDetected	194:Rogue client
304:apIPChanged	306:apChannelChanged	307:apCountryCodeChanged
308:apDfsRadarEvent	311:apChangeControlBlade	315:apTaggedAsCritical
317:apBrownout	319:smartMonitorTurnOffWLAN	320:apCLBlimitReached
321:apCLBlimitRecovered	322:apWLANStateChanged	323:apCapacityReached
324:apCapacityRecovered	328:apHealthLatencyFlag	329:apHealthCapacityFlag
330:apHealthConnectionFailureFlag	331:apHealthClientCountFlag	333:apHealthCapacityFlag
334:apHealthConnectionFailureClear	335:apHealthClientCountClear	336:apDHCPFailoverDetected
337:apDHCPFallbackDetected	338:apSecondaryDHCPAPDown	339:apSecondaryDHCPAPUp
340:apDHCPPIPPoolMaxThresholdReached	341:apDHCPServiceFailure	342:apNATFailoverDetected
343:apNATFallbackDetected	344:apNATVlanCapacityAffected	345:apNATVlanCapacityRestored
346:apNATFailureDetectedbySZ	347:apHealthAirUtilizationFlag	348:apHealthAirUtilizationClear
349:apClusterFailover	350:apRehomeFailover	352:apSwitchoverFailed
353:AP Ethernet Phy Error Count	354:AP Ethernet PHY Down Shift	355:apFailed
406:emapDlinkDisconnectWithMap	407:emapUlinkConnectWithMap	408:emapUlinkDisconnectWithMap
411:mapDisconnected	412:mapDlinkConnected	413:mapDlinkConnectWithMap
414:mapDlinkDisconnectWithMap	416:rmapDlinkConnectWithMap	417:mapUlinkConnectToMap
418:mapUlinkDisconnectToMap	419:mapUlinkConnectToMap	420:mapUlinkConnectToMap
421:meshStateUpdateToMap	422:meshStateUpdateToMapNoChannel	423:meshStateUpdateToMap
424:meshStateUpdateToMapNoChannel	425:mapDlinkConnectWithMap	426:mapDlinkDisconnectWithMap
427:rapDlinkDisconnectWithMap	705:apLBSStartLocationService	706:apLBSStopLocationService
707:apLBSRcvdPassiveCalReq	708:apLBSRcvdPassiveFFReq	709:apLBSRcvdUnrecognizedRequest
1021:zoneCfgPrepareFailed	1022: apCfgGenFailed	1023:cfgGenSkippedDueToEolAp
1280:apConnectionTerminatedDueToInsufficient License	1294:AP MAC OUI violation	9100: changeToPrimaryBackhaul
9101: changeToSecondaryBackhaul	9102: lteConnectivityFailed	9103: ethernetConnectivityFailed
9104: lteDhcpTimeout	9105: ethernetLinkDown	9106: ethernetLinkUp
9107: simSwitch	9108: remoteHostBlacklisted	9109: simRemoval
9110: lteNetworkRegistrationStatus	9111: lteConnectionStatus	9112: lteGoodRssiStatus
9113: lteWeakRssiStatus	9114: apCLBCapacityLimitReached	9115: apCLBCapacityLimitRecovered
9116:Mesh Connectivity Failed	9900:keyGenFail	99001:keyDisFail

Event	Event	Event
99002:keyDisFailGTK	99003:wpaEnDecFail	99004:ipsecSesFail
99005:authAttempts	99006:authUnsucces	99007:authReauth
99008:auth8021xClient	99009:fwManualInitiation	99011:apTSSFFailure
99012:apSeltTests	99013:fwInitiationUpdate	99014:disContiChan
99015:apLocalSessionTimeout	99016:apRemoteSessionTimeout	99017:apInteractiveSeesionTerm
99018:sshInitiation	99019:sshTermination	99020:sshFailure
99021:tlsInitiation	99022:tlsTermination	99023:tlsFailure
99024:ipsecInitiation	99025:ipsecTermination	99026:ipsecFailure

ruckusSCGClientMiscEventTrap

- Object Name - [ruckusSCGClientMiscEventTrap](#) on page 100
- Object Identifier - .1.3.6.1.4.1.25053.2.10.1.100

Event	Event	Event
201:clientAuthFailure	202:clientJoin	203:clientJoinFailure
204:clientDisconnect	205:clientInactivityTimeout	206:clientAuthorization
207:clientAuthorizationFailure	208:clientSessionExpiration	209:clientRoaming
210:clientSessionLogout	211:3rdPtyClientJoin	212:3rdPtyClientInactivityTimeout
213:3rdPtyClientAuthorization	214:3rdPtyClientAuthorizationFailure	215:3rdPtyClientSessionExpiration
216:3rdPtyClientRoaming	217:3rdPtyClientSessionLogout	218:smartRoamDisconnect
219:clientBlockByDeviceType	220:clientGracePeriod	221:onboardingRegistrationSuccess
222:onboardingRegistrationFailure	223:remediationSuccess	224:remediationFailure
225:forceDHCPDisconnect	226:wdsDeviceJoin	227:wdsDeviceLeave
228: clientBlockByBarringUERule	229: clientUnBlockByBarringUERule	232: packetSpoofingDetectedFromWireless
233: packetSpoofingDetectedFromWirelessSourceMacSpoofed	234: packetSpoofingDetectedFromWired	235: packetSpoofingDetectedFromWiredSourceMacSpoofed
237: ClientSession Renewal	355: apPoEModeChange	8002: application of user is denied
8001: application of user is identified	8003: urlFilteringServerUnreachable	8004: urlFilteringServerReachable

Frequently Asked Questions

- Timeout 365
- SNMP Reports 366
- Difference in SNMP Data..... 366
- Modifying SNMP HostName.....367
- Determining the Timeout Value 367
- Determining the Query Interval..... 367
- Determining the Query Interval for AP Related Tables.....367

Timeout

Why does a *Timeout No Response* occur during a full SNMP MIB walk?

1. **Scenario 1** : When querying full MIBs

Following are the solutions to resolve the timeout issue.

- a. Increase the timeout value of the SNMP client tools. Always try to increase the timeout value of the SNMP MIB browser or SNMP CLI commands based on the number of APs and UEs on the controller (SmartZone).
- b. Do a snmpwalk for a specified table. Otherwise, it is likely that SNMP will focus on the standard table *tcpConnTable*, which collects all the TCP connections of the controller. The table size could be large based on the large number of APs or UEs associated to a controller .

2. **Scenario 2** : When querying AP related table for controllers with large number of APs and UEs

Following are the solutions to resolve the timeout issue.

- a. Increase the interval of the query scripts or tools to make sure there is only one SNMP client tool to query the controller at a time. Adjust the query interval of the query scripts or tools by the loading of the controller. Otherwise, SNMP daemon takes longer to complete all queries. It is recommended that you do not run multiple queries at the same time.
- b. Do not use MIB browser to monitor the APs. Most MIB browsers can only provide snmpwalk which is not an efficient for querying large volume of data and are unable to store large volumes of data.
- c. Increase the timeout value of the SNMP client tools. Always try to increase the timeout value of the SNMP MIB browser or SNMP CLI commands based on the number of APs and UEs on the controller.
- d. Get the table index by using snmpwalk and use snmpget to get multiple entries of same index at a time.

1. Step 1 - Use a script to query the index of the table using snmpwalk as seen in the below example.

```
Example:  
snmpwalk <options> <IP> <table index 1 OID>snmpwalk <options> <IP> <table index 2 OID>
```

2. Step 2 - Use a script to query multiple table entries for same index at a time using snmpget as seen in the below example.

```
Example:  
snmpget <options> <IP> <table entry 1 OID>.index1 <table entry 2 OID>.index1 ...  
<table entry N OID>.index1
```

SNMP Reports

Why is the response time slow when querying for SNMP reports ?

If the controller is busy collecting data for other tables and if the time taken is longer than the timeout setting for SNMP reports, then the SNMP client tool displays the *Timeout No Response* error.

Following are the solutions for the response time being slow.

1. Increase the interval of the query scripts or tools to make sure there is only one SNMP client tool to query the controller at a time. Adjust the query interval of the query scripts or tools by the loading of the controller. Otherwise, SNMP daemon takes longer to complete all queries. It is recommended that you do not run multiple queries at the same time.
2. Do not use MIB browser to monitor the APs. Most MIB browsers can only provide snmpwalk which is not an efficient for querying large volume of data and are unable to store large volumes of data.
3. Increase the timeout value of the SNMP client tools. Always try to increase the timeout value of the SNMP MIB browser or SNMP CLI commands based on the number of APs and UEs on the controller.
4. Get the table index by using snmpwalk and use snmpget to get multiple entries of same index at a time.
 - a. Step 1 - Use a script to query the index of the table using snmpwalk as seen in the below example.

```
Example:
snmpwalk <options> <IP> <table index 1 OID>snmpwalk <options> <IP> <table index 2 OID>
```

- b. Step 2 - Use a script to query multiple table entries for same index at a time using snmpget as seen in the below example.

```
Example:
snmpget <options> <IP> <table entry 1 OID>.index1 <table entry 2 OID>.index1 ...
<table entry N OID>.index1
```

Difference in SNMP Data

Why is there a difference between the SNMP reports and the web interface display?

- **Scenario 1:** Memory, disk space, and CPU usages are different from the web interface display.

The following are the reasons for this difference to occur.

Standard MIBs provide Linux level resource status. It is different from *usable resource* of the system.

The web interface shows the logically resource of the system, which is different from the physical status. Currently, it does not show in the Ruckus private MIBs.

- **Scenario 2:** Statistical data is different from the web interface display.

The following are the reasons for this difference to occur.

Most of the SNMP tables use cache mechanism.

SNMP daemon retains the data between 30 to 300 seconds.

There is a delayed response time from APs or UEs in reporting their statistical data.

Modifying SNMP HostName

Why cannot the SNMP hostname be modified through SNMPSET ?

Ruckus does not support setting the hostname through SNMP MIB. This is a read-only for all controller platforms. Use the CLI mode to modify the hostname.

Determining the Timeout Value

How to determine the minimum timeout value for a full MIB tree?

The minimum timeout value should be long to complete the *TCP-MIB::tcpConnectionTable* and *RUCKUS-SCG-CONFIG-WLAN-MIB::ruckusSCGConfigWLANTable* which is the bottle neck. An elapsed time results in a timeout response.

To determine this value, use the SNMP daemon, which caches the data in this table. Query this table within the cached timeout to get the value.

For example, in an environment with 10,000 APs and 1,000 WLANs, the values are:

MIB Table	Minimum Timeout
RUCKUS-SCG-CONFIG-WLAN-MIB::ruckusSCGConfigWLANTable	25+ seconds
TCP-MIB::tcpConnectionTable	14+ seconds

NOTE

The exact value should be tested in your own environments.

Determining the Query Interval

How to determine the query interval for a full MIB tree?

The exact value depends on too many factors such as network topology, congestion, and traffic. The precise to determine the query interval is by recording the longest time and adding some buffer time to complete a full MIB walk.

Determining the Query Interval for AP Related Tables

How to determine the query interval for AP related tables ?

Use snmpwalk to get an OID of the AP related table to determine the time to complete the snmpwalk for a single OID.

1. Scenario 1 : Using simple snmpwalk

If you are unable to write your own script as suggested in [Timeout](#) on page 365 the approximate time for an OID may be between the range of 1 to 4 minutes per seconds. This is based on lab environments tested in Ruckus.

The efficiency is improved in 3.6.1 as:

a: For 1,000 APs the minimum time is 54 seconds (< 1 minute) for a full table

b: For 10,000 APs the minimum time is 203 seconds (< 2 minutes) for a full table.

For example, in an environment with 10,000 APs and 1000 WLANs, the values are:

Frequently Asked Questions

Determining the Query Interval for AP Related Tables

MIB Table	SNMPWalk Elapsed Time	Comment
RUCKUS-SCG-WLAN-MIB::ruckusWLANTable	41 seconds	
RUCKUS-SCG-WLAN-MIB::ruckusSCGWLANTable	42 seconds	
RUCKUS-SCG-WLAN-MIB::ruckusWLANAPTable	203 seconds	
RUCKUS-SCG-WLAN-MIB::ruckusSCGAPTable	107 seconds	
RUCKUS-SCG-CONFIG-WLAN-MIB::ruckusSCGConfigWLANTable	50 seconds	Timeout should be set as 25+ seconds.

NOTE

The exact value should be tested in your own environments.

COMMSCOPE®
RUCKUS®

© 2021 CommScope, Inc. All rights reserved.
350 West Java Dr., Sunnyvale, CA 94089 USA
<https://www.commscope.com>