



Ruckus Wireless™ SmartCell Gateway™ 200 / SmartZone™ 300 and Virtual SmartZone™ High Scale

Alarm and Event Reference Guide for SmartZone 3.5

Part Number 800-71289-001 Rev A
Published March 2017

www.ruckuswireless.com

Copyright Notice and Proprietary Information

Copyright 2017. Ruckus Wireless, Inc. All rights reserved.

No part of this documentation may be used, reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Ruckus Wireless, Inc. ("Ruckus"), or as expressly provided by under license from Ruckus.

Destination Control Statement

Technical data contained in this publication may be subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader's responsibility to determine the applicable regulations and to comply with them.

Disclaimer

THIS DOCUMENTATION AND ALL INFORMATION CONTAINED HEREIN ("MATERIAL") IS PROVIDED FOR GENERAL INFORMATION PURPOSES ONLY. RUCKUS AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THE MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE MATERIAL IS ERROR-FREE, ACCURATE OR RELIABLE. RUCKUS RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES TO THE MATERIAL AT ANY TIME.

Limitation of Liability

IN NO EVENT SHALL RUCKUS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY YOU OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT OR TORT, ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIAL.

Trademarks

Ruckus Wireless, Ruckus, the bark logo, ZoneFlex, FlexMaster, ZoneDirector, SmartMesh, Channelfly, Smartcell, Dynamic PSK, and Simply Better Wireless are trademarks of Ruckus Wireless, Inc. in the United States and other countries. All other product or company names may be trademarks of their respective owners.

Contents

About This Guide

Document Conventions	26
Terminology	27
Related Documentation	31
Online Training Resources	31
Documentation Feedback	31

1 Revision History

SmartZone Version 3.5	33
Deprecated Alarm and Event	33
New Alarm	33
New Event	34
SmartZone Version 3.4.1	36
SmartZone Version 3.4	37
New Alarm	37
Displayed on the Web Interface	37
New Event	37
SmartZone Version 3.2.1	38
New Alarm	38
New Event	38
Event on Web Interface	38
SmartZone Version 3.2	39
New Alarm	39
Attribute Change	39
Renamed Alarm	40
New Event	40
Severity Change	41
Attribute Change	42
Renamed Event	42
Auto Clearance of Event	43
SmartZone Version 3.1.1	43
New Alarm	43
New Event	43

Re-added Event	44
Renamed Event	44
RuckOS Version 3.1	45
New Alarm	45
Deprecated Alarm	46
Renamed Alarm	46
New Event	47
Modified Event Severity	49
Renamed Event	49
RuckOS Version 3.0	54
New Alarm	54
Deprecated Alarm	55
Renamed Alarm Type	56
Modification of Alarm Severity	56
Renamed Alarm	57
New Event	58
Deprecated Event	61
Re-added Event	61
Modifications to Event Severity	61
Renamed Event Type	62
Renamed Event	63
2 Alarm and Event Management	
Overview	68
Alarm and Event Management	68
Event Categories	68
Event Attributes	69
Generation of Alarm and Event	69
3 Alarm Types	
Accounting Alarms	74
Accounting server not reachable	74
Accounting failed over to secondary	75
Accounting fallback to primary	75
AP accounting message mandatory parameter missing	76
AP accounting message decode failed	77
AP account message drop while no accounting start message	78
Unauthorized CoA/DM message dropped	79
AP Authentication Alarms	80

RADIUS server unreachable	80
LDAP server unreachable.	81
AD server unreachable.	81
WeChat ESP authentication server unreachable.	82
WeChat ESP authentication server unresolvable	82
WeChat ESP DNAT server unreachable	83
WeChat ESP DNAT server unresolvable.	84
AP Communication Alarms	85
AP rejected	85
AP configuration update failed	86
AP swap model mismatched	86
AP pre-provision model mismatched	87
AP firmware update failed	87
AP WLAN oversubscribed	88
AP join zone failed	89
AP LBS Alarms	90
No LS responses	90
LS authentication failure	90
AP failed to connect to LS	91
AP State Change Alarms	92
AP rebooted by system	92
AP disconnected	93
AP deleted	93
AP cable modem interface down	94
AP DHCP service failure.	94
AP NAT failure	95
Authentication Alarms	96
Authentication server not reachable	96
Authentication failed over to secondary	97
Authentication fallback to primary.	97
AD/LDAP connectivity failure	98
Bind fails with AD/LDAP.	99
Bind success with LDAP, but unable to find clear text password for the user.	99
RADIUS fails to connect to AD NPS server.	100
RADIUS fails to authenticate with AD NPS server.	101
Fails to establish TLS tunnel with AD/LDAP	102
Control and Data Plane Interface Alarms.	103
GtpManager (DP) disconnected	103
Cluster Alarms	104

New node failed to join	105
Node removal failed	106
Node out of service	106
Cluster in maintenance state	107
Cluster backup failed	108
Cluster restore failed	109
Cluster upgrade failed	109
Cluster application stopped	110
Node bond interface down.	111
Node physical interface down	111
Cluster node rebooted	112
Cluster node shut down.	112
Disk usage exceed threshold	113
Cluster out of service	114
Cluster upload AP firmware failed.	114
Cluster add AP firmware failed	115
Unsync NTP time.	115
Cluster upload KSP file failed	116
Configuration backup failed	116
Configuration restore failed	117
Configuration Alarms.	118
Zone configuration preparation failed	118
AP configuration generation failed	119
End-of-life AP model detected	120
VLAN configuration mismatch on non DHCP/NAT WLAN	121
VLAN configuration mismatch on DHCP/NAT WLAN	122
Data Plane Alarms	123
Data plane configuration update failed	123
Data plane disconnected	124
Data plane physical interface down	125
Data plane rebooted	125
Data plane packet pool is under low water mark	126
Data plane packet pool is under critical low water mark	126
Data plane core dead.	127
Data plane process restarted	127
Data plane license is not enough	128
Data plane upgrade failed	129
Data plane of data center side fails to connect to the CALEA server.	130
Data plane fails to connects to the other data plane.	130

Data plane DHCP IP pool usage rate is 100 percent	131
GA Interface Alarms	132
Connection to CGF failed	132
CDR transfer failed	133
CDR generation failed	134
Gn/S2a Interface Alarms	135
GGSN restarted	135
GGSN not reachable	136
GGSN not resolved	137
PDNGW could not be resolved	138
PDNGW version not supported	139
Associated PDNGW down	139
Create session response failed	140
Decode failed	141
Modify bearer response failed	141
Delete session response failed	142
Delete bearer request failed	143
Update bearer request failed	143
CGF server not configured	144
GR Interface Alarms	145
Destination not reachable	145
App server down	146
App server inactive	146
Association establishment failed	147
Association down	148
Outbound routing failure	148
Did allocation failure	149
IPMI Alarms	150
ipmiVoltage	151
ipmiThempBB	152
ipmiThempFP	153
ipmiThempIOH	153
ipmiThempMemP	154
ipmiThempPS	155
ipmiThempP	156
ipmiThempHSBP	156
ipmiFan	157
ipmiPower	157
ipmiCurrent	158

ipmiFanStatus	158
ipmiPsStatus	159
ipmiDrvStatus	160
Licensing Alarms.	161
TTG session critical threshold	161
TTG session license exhausted	162
License going to expire	162
Insufficient license capacity	163
PMIPv6 Alarms	164
Config update failed	164
LMA ICMP unreachable	165
LMA failed over	165
DHCP connection lost	166
SCI Alarms	167
Connect to SCI failure	167
SCI has been disabled	168
SCI and FTP have been disabled	168
Session Alarms	169
Binding failed	169
STA Interface Alarms	170
STA authentication failed transport down	170
STA authentication failed failure response	171
STA authentication failed decode failure	172
STA re-authorization failed	172
STA response timer expired	173
Retransmission exhausted	174
System Alarms	175
No LS responses	176
LS authentication failure	176
{produce.short.name} failed to connect to LS	177
Syslog server unreachable	177
CSV export FTP maximum retry	178
CSV export disk threshold exceeded	179
CSV export disk max capacity reached	179
Process restart	180
Service unavailable	180
Keepalive failure	181
Resource unavailable	181
HIP failed over	182

The last one data plane is disconnected zone affinity profile	183
Diameter initialization error	184
Diameter peer transport failure	184
Diameter CER error	185
Diameter peer add error	186
Diameter peer remove successful	187
Diameter realm entry error	187
Diameter failover to alternate peer	188
Diameter fail back to peer	189
Diameter CEA unknown peer	190
Diameter no common application	190
Process initiated	191
PMIPv6 unavailable	192
Memory allocation failed	193
Threshold Alarms	194
CPU threshold exceeded	194
Memory threshold exceeded	195
Disk usage threshold exceeded	195
License threshold exceeded	196
Rate limit for TOR surpassed	197
The number of users exceeded its limit	197
The number of devices exceeded its limit	198
Tunnel Alarms - Access Point	199
AP softGRE gateway not reachable	199
AP is disconnected from secure gateway	200
AP secure gateway association failure	201

4 Events Types

3rd Party Access Point Events	203
3rd party AP connected	203
Accounting Events	204
Accounting session started	204
Accounting session start failed	205
Accounting session disabled	206
Accounting session stopped successfully	206
Accounting session stopped failed	207
Accounting session interim failed	207
Accounting server not reachable	208
Accounting failed over to secondary	209

Accounting fallback to primary	209
AP accounting message mandatory parameter missing	210
Unknown realm	211
AP accounting message decode failed	211
AP accounting retransmission message dropped.	212
AP accounting response while invalid config	212
AP account message drop while no accounting start message	213
Unauthorized COA/DM message dropped.	214
AP Authentication Events	215
Radius server reachable.	215
Radius server unreachable.	216
LDAP server reachable.	216
LDAP server unreachable.	217
AD server reachable.	217
AD server unreachable.	218
Wechat ESP authentication server reachable	218
WeChat ESP authentication server unreachable.	219
WeChat ESP authentication server resolvable	219
WeChat ESP authentication server unresolvable	220
WeChat ESP DNAT server reachable.	220
WeChat ESP DNAT server unreachable.	221
WeChat ESP DNAT server resolvable.	221
WeChat ESP DNAT server unresolvable.	222
AP Communication Events	223
AP discovery succeeded	224
AP managed	224
AP rejected	225
AP firmware updated	225
AP firmware update failed	226
Updating AP firmware	226
Updating AP configuration	227
AP configuration updated.	227
AP configuration update failed	228
AP pre-provision model mismatched	228
AP swap model mismatched	229
AP WLAN oversubscribed	229
AP join zone failed	230
AP illegal to change country code	230
AP configuration get failed	231

Rogue AP	231
SSID-spoofing rogue AP	231
MAC-spoofing rogue AP	232
Same-network rogue AP	232
Ad-hoc network device	233
Rogue AP disappeared	233
AP LBS Events	234
No LS responses	234
LS authentication failure	235
AP connected to LS	235
AP failed to connect to LS	236
AP started location service	236
AP stopped location service	237
AP received passive calibration request	237
AP received passive footfall request	238
AP received unrecognized request	238
AP Mesh Events	239
EMAP downlink connected to MAP	239
EMAP downlink disconnected from MAP	240
EMAP uplink connected to MAP	240
EMAP uplink disconnected from MAP	241
MAP disconnected	241
MAP downlink connected	241
MAP downlink connected to EMAP	242
MAP downlink disconnected from EMAP	242
RAP downlink connected to MAP	243
MAP uplink connected to EMAP	243
MAP uplink disconnected from EMAP	244
MAP uplink connected to RAP	244
MAP uplink connected to MAP	245
Mesh state updated to MAP	245
Mesh state updated to MAP no channel	246
Mesh state updated to RAP	246
Mesh state update to RAP no channel	247
MAP downlink connected to MAP	247
MAP downlink disconnected from MAP	248
RAP downlink disconnected from MAP	248
AP State Change Events	249
AP rebooted by user	251

AP rebooted by system	251
AP disconnected	252
AP IP address updated	252
AP reset to factory default	252
AP channel updated	253
AP country code updated	253
AP channel updated because dynamic frequency selection (DFS) detected a radar	254
AP change control plane	254
AP connected	255
AP deleted	255
AP heartbeat lost	255
AP tagged as critical	256
AP cable modem interface down	256
AP brownout	257
AP cable modem power-cycled by user	257
AP smart monitor turn off WLAN	258
AP client load balancing limit reached	258
AP client load balancing limit recovered	259
AP WLAN state changed	259
AP capacity reached	260
AP capacity recovered	260
AP cable modem interface up	261
AP cable modem soft-rebooted by user	261
AP cable modem set to factory default by user	262
AP health high latency flag	262
AP health low capacity flag	263
AP health high connection failure flag	263
AP health high client count flag	264
AP health high latency clear	264
AP health low capacity clear	265
AP health high connection failure clear	265
AP health high client count clear	266
Primary DHCP AP is down	266
Primary DHCP AP is up	267
Secondary DHCP AP is down	267
Secondary DHCP AP is up	268
Primary or secondary DHCP AP detects 90% of the configured total IPs	268
Both primary and secondary DHCP server APs are down	269
AP NAT gateway IP failover detected for particular VLAN pool	269

AP NAT gateway IP fall back detected for particular VLAN pool 270

NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool 270

NAT VLAN capacity restored detected by NAT gateway AP due to (at least) one out of the three (3) consecutive NAT gateway AP IP were down is now up 271

AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down 272

AP health high airtime utilization flag 272

AP health high airtime utilization clear 273

AP USB Events 274

 AP USB software package downloaded 274

 AP USB software package download failed 274

Authentication Events 275

 Authentication server not reachable 276

 Unknown realm 276

 Authentication succeeded 277

 Authentication failed 278

 Pseudonym authentication succeeded 278

 Pseudonym authentication failed 279

 Fast re-authentication succeeded 280

 Fast re-authentication failed 280

 Authentication failed over to secondary 281

 Authentication fallback to primary 282

 AD/LDAP connected successfully 282

 AD/LDAP connectivity failure 283

 Bind fails with AD/LDAP 283

 Bind success with LDAP, but unable to find clear text password for the user 284

 RADIUS fails to connect to AD NPS server 284

 RADIUS fails to authenticate with AD NPS server 285

 Successfully established the TLS tunnel with AD/LDAP 285

 Fails to establish TLS tunnel with AD/LDAP 286

Authorization Events 287

 DM received from AAA 287

 DM NACK sent to AAA 288

 DM sent to NAS 288

 DM NACK received from NAS 289

 CoA received from AAA 289

 CoA NACK sent to AAA 290

 CoA sent NAS 290

CoA NAK received NAS	291
CoA authorize only access reject	291
CoA RWSG MWSG notification failure	292
Control and Data Plane Interface	293
DP connected	293
GtpManager (DP) disconnected	294
Session updated at DP	294
Session update at DP failed	295
Session deleted at DP	295
Session delete at DP failed	296
C2d configuration failed	297
Client Events.	298
Client authentication failed	299
Client joined	299
Client failed to join	300
Client disconnected	300
Client connection timed out	301
Client authorization successfully	301
Client authorization failed	302
Client session expired	302
Client roaming	303
Client logged out	303
3rd party client join	304
3rd party client inactivity timeout	304
3rd party client authorization	305
3rd party client authorization failure	305
3rd party client session expiration	306
3rd party client roaming	306
3rd party client session logout	307
Client roaming disconnected	307
Client blocked	308
Client grace period	308
Onboarding registration succeeded	309
Onboarding registration failed	309
Remediation succeeded	310
Remediation failed	310
Force DHCP disconnected	311
WDS device joined	311
WDS device left	312

Client is blocked because of barring UE rule	312
Client is unblocked by barring UE rule	313
Start CALEA mirroring client	313
Stop CALEA mirroring client	314
Cluster Events	315
Cluster created successfully	316
New node joined successfully	316
New node failed to join	317
Node removal completed	317
Node removal failed	318
Node out of service	318
Cluster in maintenance state	319
Cluster back in service	319
Cluster backup completed	320
Cluster backup failed	320
Cluster restore completed	321
Cluster restore failed	321
Cluster node upgrade completed	322
Entire cluster upgraded successfully	322
Cluster upgrade failed	323
Cluster application stopped	323
Cluster application started	324
Cluster backup started	324
Cluster upgrade started	325
Cluster leader changed	325
Node bond interface down	326
Node bond interface up	326
Node IP address changed	327
Node physical interface down	327
Node physical interface up	328
Cluster node rebooted	328
NTP time synchronized	329
Cluster node shutdown	329
Cluster upload started	330
Cluster upload completed	330
Cluster upload failed	330
SSH tunnel switched	331
Cluster remove node started	331
Node back in service	332

Disk usage exceed threshold	332
Cluster out of service	333
Initiated moving APs in node to a new cluster	333
Cluster upload vSZ-D firmware started	334
Cluster upload vSZ-D firmware completed	334
Cluster upload vSZ-D firmware failed	335
Cluster upload AP firmware started	335
Cluster upload AP firmware completed	336
Cluster upload AP firmware failed	336
Cluster add AP firmware started	337
Cluster add AP firmware completed	337
Cluster add AP firmware failed	338
Cluster name is changed	338
Unsync NTP time	339
Cluster upload KSP file started	339
Cluster upload KSP file completed	340
Cluster upload KSP file failed	340
Configuration backup started	340
Configuration backup succeeded	341
Configuration backup failed	341
Configuration restore succeeded	342
Configuration restore failed	342
AP Certificate Expired	343
AP Certificate Updated	343
Configuration restore started	344
Upgrade SSTable failed	344
Reindex elastic search finished	345
Initiated APs contact APR	345
Node IPv6 address added	346
Node IPv6 address deleted	346
Configuration Events	347
Configuration updated	347
Configuration update failed	347
Configuration receive failed	348
Incorrect flat file configuration	348
Zone configuration preparation failed	349
AP configuration generation failed	349
End-of-life AP model detected	350
VLAN configuration mismatch on non-DHCP/NAT WLAN	350

VLAN configuration mismatch on DHCP/NAT WLAN	351
Data Plane Events.	352
Data plane discovered	353
Data plane discovery failed.	353
Data plane configuration updated	354
Data plane configuration update failed	354
Data plane rebooted	355
Data plane heartbeat lost	355
Data plane IP address updated	356
Data plane updated to a new control plane	356
Data plane status update failed	357
Data plane statistics update failed	357
Data plane connected	358
Data plane disconnected	358
Data plane physical interface down	359
Data plane physical interface up.	359
Data plane packet pool is under low water mark	360
Data plane packet pool is under critical low water mark	360
Data plane packet pool is above high water mark	361
Data plane core dead.	361
Data plane process restarted	362
Data plane discovery succeeded	362
Data plane managed	363
Data plane deleted.	363
Data plane license is not enough	364
Data plane upgrade started	364
Data plane upgrading.	365
Data plane upgrade succeeded	365
Data plane upgrade failed	366
Data plane of data center side successfully connects to the CALEA server	367
Data plane of data center side fails to connect to the CALEA server.	367
Data Plane of data center side disconnects to CALEA server.	368
Data plane successfully connects to the other data plane	368
Data plane fails to connects to the other data plane.	369
Data plane disconnects to the other data plane	369
Start CALEA mirroring client in data plane	370
Stop CALEA mirroring client in data plane	370
Data plane DHCP IP pool usage rate is 100 percent	371
Data plane DHCP IP pool usage rate is 80 percent	371

CALEA UE Matched	372
DHCP Events	373
DHCP inform received	373
DHCP decline received	374
GA Interface Events	375
Connection to CGF failed	375
CGF keepalive not responded	376
CDR transfer succeeded	376
CDR transfer failed	377
CDR generation failed	377
Gn/S2a Interface Events	378
GGSN restarted	378
GGSN not reachable	379
Echo response not received	379
GGSN not resolved	380
PDP context established	380
PDP create failed	381
PDP update by HLR succeeded	381
PDP update by HLR failed	382
PDP update by roaming succeeded	382
PDP update by roaming failed	383
PDP update by GGSN succeeded	384
PDP update by GGSN failed	384
PDP delete by TTG succeeded	385
PDP delete by TTG failed	385
PDP delete by GGSN succeeded	386
PDP delete by GGSN failed	386
IP assigned	387
IP not assigned	387
Unknown UE	388
PDP update success COA	388
PDP update fail COA	389
PDNGW could not be resolved	389
PDNGW version not supported	390
Associated PDNGW down	390
Create session response failed	391
Decode failed	392
Modify bearer response failed	392
Delete session response failed	393

Delete bearer request failed	393
Update bearer request failed	394
CGF server not configured	395
Gr Interface Event	396
Destination not reachable.	397
Destination available.	397
App server down	398
App server inactive.	398
App server active	399
Association establishment failed.	399
Association down.	400
Association up	400
Send auth info success	401
Auth info sending failed	401
GPRS location update succeeded	402
GPRS location update failed	402
Insert sub data success	403
Insert sub data failed	403
Outbound routing failure.	404
Did allocation failure	404
Restore data success	405
Restore data failed	405
IPMI Events.	406
ipmiVoltage	406
ipmiThempBB	407
ipmiThempFP.	407
ipmiThempIOH.	408
ipmiThempMemP.	408
ipmiThempPS	409
ipmiThempP	409
ipmiThempHSBP.	410
ipmiFan	410
ipmiPower	411
ipmiCurrent	411
ipmiFanStatus	412
ipmiPsStatus	412
ipmiDrvStatus	413
ipmiREVotage	413
ipmiREThempBB.	414

ipmiREThempFP	414
ipmiREThempIOH	414
ipmiREThempMemP	415
ipmiREThempPS	415
ipmiREThempP	416
ipmiREThempHSBP	416
ipmiREFan	416
ipmiREPower	417
ipmiRECurrent	417
ipmiREFanStatus	418
ipmiREPsStatus	418
ipmiREDrvStatus	419
Licensing Interface Events	420
TTG session warning threshold	420
TTG session major threshold	421
TTG session critical threshold	421
TTG session license exhausted	422
License sync succeeded	422
License sync failed	423
License import succeeded	423
License import failed	424
License data changed	424
License going to expire	424
Insufficient license capacity	425
Location Delivery Events	426
Unavailable location info requested	426
Incapable location info requested	427
Unsupported location delivery request	427
PMIPv6 Events	428
Config update failed	428
LMA ICMP reachable	429
LMA ICMP unreachable	429
LMA server unreachable	430
LMA failed over	430
DHCP connected	431
DHCP connection lost	431
SCI Events	432
Connect to SCI	432
Disconnect to SCI	432

Connect to SCI failure	433
SCI has been disabled	433
SCI and FTP have been disabled	434
Session Events	435
Session timeout	435
Delete all sessions	436
Binding succeeded	436
Binding failed	437
Binding time expired	437
Binding revoked	438
Binding released	438
STA Interface Events.	439
STA successful authentication	439
STA authentication failed transport down	440
STA authentication failed failure response	440
STA authentication failed decode failure	441
STA session termination {produce.short.name} initiated success	441
STA session termination AAA initiated success	442
STA session termination AAA initiated failed	443
STA re-authorization successful	443
STA re-authorization failed	444
STA response timer expired	444
Retransmission exhausted	445
System Events	446
No LS responses	447
LS authentication failure	448
{produce.short.name} connected to LS	448
{produce.short.name} failed to connect to LS	448
{produce.short.name} received passive request	449
{produce.short.name} sent controller information report	449
{produce.short.name} received management request	450
{produce.short.name} sent AP info by venue report	450
{produce.short.name} sent query venues report	451
{produce.short.name} sent associated client report	451
{produce.short.name} forwarded calibration request to AP	452
{produce.short.name} forwarded footfall request to AP	452
{produce.short.name} received unrecognized request	453
Syslog server reachable	453
Syslog server unreachable	454

Syslog server switched	454
Generate AP config for plane load rebalance succeeded	455
Generate AP config for plane load rebalance failed.	455
FTP transfer	456
FTP transfer error.	456
CSV export FTP transfer	457
CSV export FTP transfer error	457
CSV export FTP transfer maximum retry	458
CSV export disk threshold exceeded	458
CSV export disk max capacity reached	459
CSV export disk threshold back to normal	459
File upload	460
Email sent successfully	460
Email sent failed.	460
SMS sent successfully	461
SMS sent failed	461
Process restart.	462
Service unavailable.	462
Keepalive failure	463
Resource unavailable	463
HIP started.	464
HIP stopped.	464
HIP failed over	465
Standby HIP restarted	465
HIP cache cleaned.	466
Data plane of data center side successfully connects to the CALEA server	466
Data plane of data center side fails to connect to the CALEA server.	467
Data Plane of data center side disconnects to CALEA server.	467
Data plane successfully connects to the other data plane	468
Data plane fails to connects to the other data plane	468
Data plane disconnects to the other data plane	469
Start CALEA mirroring client in data plane	469
Stop CALEA mirroring client in data plane	470
Data plane DHCP IP pool usage rate is 100 percent	470
Data plane DHCP IP pool usage rate is 80 percent	471
All data planes in the zone affinity profile are disconnected.	471
CALEA UE Matched.	472
Diameter initialization error	472
Diameter initialization	473

Diameter peer transport failure	473
Diameter CER error	474
Diameter CER success	475
Diameter invalid version	476
Diameter peer add error	477
Diameter peer add successful	477
Diameter peer remove successful	478
Diameter realm entry error	479
Diameter failover to alternate peer	480
Diameter fail back to peer	481
Diameter CEA unknown peer	482
Diameter no common application.	482
ZD AP migrating.	483
ZD AP migrated	483
ZD AP rejected.	484
ZD AP migration failed	484
Database error.	485
Recover cassandra error	485
Process initiated.	486
PMIPv6 unavailable	486
Memory allocation failed.	487
Process stopped	487
Threshold Events	488
CPU threshold exceeded	488
Memory threshold exceeded	489
Disk usage threshold exceeded	489
CPU threshold back to normal	490
Memory threshold back to normal	490
Disk threshold back to normal	490
License threshold exceeded.	491
Rate limit threshold surpassed	491
Rate limit threshold restored	492
Rate limit for TOR surpassed	493
The number of users exceed its limit	493
The number of devices exceeded its limit.	494
Tunnel Events - Access Point (AP)	495
Data plane accepted a tunnel request	495
Data plane rejected a tunnel request	496
Data plane terminated a tunnel.	496

AP created a tunnel	497
AP tunnel disconnected	497
AP softGRE tunnel fails over primary to secondary	498
AP softGRE tunnel fails over secondary to primary	498
AP softGRE gateway reachable	499
AP softGRE gateway not reachable	499
Data plane set up a tunnel	500
AP secure gateway association success	500
AP is disconnected from secure gateway	501
AP secure gateway association failure	501
Tunnel Events - Data Plane	502
DP Core GW unreachable	502
DP sGRE keep alive timeout	503
DP Core GW inactive	503
DP DHCPRelay no response	504
DP DHCPRelay failover	504
DP sGRE new tunnel	505
DP sGRE del tunnel	505
DP sGRE keepalive recovery	506
DP DHCPRelay response recovery	506
DP Core GW reachable	507
DP Core GW active	507
DP sGRE GW failover	508

Index

About This Guide

This *SmartZone™ Alarm and Event Reference Guide* describes the various types of alarms and events that the controller (SCG200, SZ300 or vSZ-H) generates. For each alarm and event this guide provides the code, type, attributes, and description.

This guide is written for service operators and system administrators who are responsible for managing, configuring, and troubleshooting Ruckus Wireless devices. Consequently, it assumes a basic working knowledge of local area networks, wireless networking, and wireless devices.

NOTE If release notes are shipped with your product and the information there differs from the information in this guide, follow the instructions in the release notes.

Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) or HTML on the Ruckus Wireless Support Web site at <https://support.ruckuswireless.com/contact-us>.

Document Conventions

Table 1 and Table 2 list the text and notice conventions that are used throughout this guide.

Table 1. Text conventions

Convention	Description	Example
monospace	Represents information as it appears on screen	[Device name] >
monospace bold	Represents information that you enter	[Device name] > set ipaddr 10.0.0.12
default font bold	Keyboard keys, software buttons, and field names	On the Start menu, click All Programs .
<i>italics</i>	Screen or page names	Click Advanced Settings . The <i>Advanced Settings</i> page appears.

Table 2. Notice conventions

Notice Type	Description
NOTE	Information that describes important features or instructions
CAUTION!	Information that alerts you to potential loss of data or potential damage to an application, system, or device
WARNING!	Information that alerts you to potential personal injury

Terminology

Table 3 lists the terms used in this guide.

Table 3. Terms used

Term	Description
3GPP	3rd Generation Partnership Project
AAA	Authentication, Authorization, and Accounting
AD	Active Directory
AMBR	Aggregate Maximum Bit Rate
AP	Access Point
APN	Access Point Name
ASP	Application Service Provider
ASPDN	ASP Down
ASPDN ACK	ASP Down Acknowledgment
ASR	Abort Session Request
AVP	Ruckus Vendor specific attribute Pair
BMD	Billing Mediation Device is a network component in a telecommunications network that receives, processes, reformats and sends information to other formats between network elements.
BSSID	Basic Service Set Identifier
CDF	Charging Data Function
CDR	Call Detail Record. A formatted collection of information on chargeable events used for accounting and billing. For example, call set-up, call duration and amount of data transferred.
CEA	Capabilities Exchange Answer
CER	Capabilities Exchange Request
CGF	Charging Gateway Function
CHAP	Challenge Handshake Authentication Protocol
CIP	Channel Interface Processor
CLB	Client Load Balance

Table 3. Terms used

Term	Description
CNN	Configuration Change Notifier
CNR	Configuration Notification Receiver
CoA	Change of Authorization
Controller	Refers to either SCG-200 or vSZ-H as the case may be.
CPE	Customer-Premises Equipment
CTF	Charging Trigger Function
DEA	Diameter-EAP-Answer
DER	Diameter-EAP-Request
DHCP	Dynamic Host Configuration Protocol
DM	Dynamic Multipoint
DNS	Domain Name System
DPR	Diameter Disconnect Peer Request
DRT	Data Record Transfer
EAP	Extensible Authentication Protocol
EBI	EPS Bearer ID
EMAP	Ethernet Mesh AP
EPC	Evolved Packet Core
EPS	Evolved Packet System
F-TEID	Fully Qualified Tunnel Endpoint Identifier
FTP	File Transfer Protocol
Ga	Reference point between a CDF and the CGF for CDR transfer
GGSN	Gateway GPRS Support Node
GPDU	GTP Packet Data Unit
GPRS	General Packet Radio Service
GSN	GPRS Support Node
GSN APN	GPRS serving node, is application module in the SCG handling GTP messages
GTP	GPRS Tunneling Protocol

Table 3. Terms used

Term	Description
GTP-C	GTP control plane
GTP-U	GTP user plane
GTP'	GPRS protocol, used for CDR transport. It is derived from GTP with enhancements to improve transport reliability necessary for CDRs
GTPP	GPRS Tunneling Protocol Prime
GTPv1-U	GTP version 1, user plane
GTPv2-C	GTP version 2, control plane
HIP	Host Identity Protocol
HLR	Home Location Register
ICMP	Internet Control Message Protocol
IE	Information Element
IMSI	International Mobile Subscriber Identity
IP	Internet Protocol
IP-CAN	IP Connectivity Access Network
IPSP	IP Signalling Protocol
LBS	Location Based Service
LCS	Location Services
LDAP	Lightweight Directory Access Protocol
LMA	Local Mobility Anchor
MAP	Mobile Application Part
MCC	Mobile Country Code
MNC	Mobile Network Code
MOR	Maximum Outstanding Requests
MS-ISDN	Mobile Subscriber Integrated Services Digital Network Number
MTU	Maximum Transmission Unit
MWSG	Metro Wireless Security Gateway
NAS	Network Access Server
NTP	Network Time Protocol)

Table 3. Terms used

Term	Description
P-GW	Packet Data Network Gateway
PAA	PDN Address Allocation
PCN	Packet switched Core network Node (SGSN, GGSN, S-GW, P-GW)
PCO	Protocol Configuration Options
PDN	Packet Data Network
PDP	Packet Data Protocol
PGW	PDN Gateway
produce.short.name	Refers to either SCG or vSZ-H
R-WSG/WSG	Ruckus Wireless Security Gateway
RAC	Radio Access Controller
RAP	Root Access Point
RAR	Re-Auth Request
RSSI	Received Signal Strength Indicator
S-CDR	SGSN Call Detail Record
SCG	Ruckus Wireless Smart Cell Gateway
SCTP	Stream Control Transmission Protocol
SCTP	Stream Control Transmission Protocol
SG	Signalling Gateway
SGSN	Serving GPRS Support Node
SGW	Serving Gateway
SSID	Service Set Identifier (SSID)
STR	STR (Session Termination-Request)
TCAP	Transaction Capabilities Application Part
TCP	Transmission Control Protocol
TEID	Tunnel End Point Identifier
UDP	User Datagram Protocol
UE	User Equipment

Table 3. Terms used

Term	Description
UI	Web User Interface
USB	Universal Serial Bus
WDS	Wireless Distribution System

Related Documentation

For a complete list of documents that accompany this release, refer to the Release Notes.

Online Training Resources

To access a variety of online Ruckus Wireless training modules, including free introductory courses to wireless networking essentials, site surveys, and Ruckus Wireless products, visit the Ruckus Wireless Training Portal at: <https://training.ruckuswireless.com>

Documentation Feedback

Ruckus Wireless is interested in improving its documentation and welcomes your comments and suggestions. You can email your comments to Ruckus Wireless at:

docs@ruckuswireless.com

When contacting us, please include the following information:

- Document title
- Document part number (on the cover page)
- Page number (if appropriate)

For example:

- SCG200, SZ300 and vSZ-H Alarm and Event Reference Guide for SmartZone 3.5
- Part number: 800-71289-001
- Page 300

Revision History

1

This chapter contains revision history for:

- SmartZone Version 3.5
- SmartZone Version 3.4.1
- SmartZone Version 3.4
- SmartZone Version 3.2.1
- SmartZone Version 3.2
- SmartZone Version 3.1.1
- RuckOS Version 3.1
- RuckOS Version 3.0

SmartZone Version 3.5

The following are the changes for version 3.5.

Deprecated Alarm and Event

Code	Type	Replace With
Alarm 835 and Event 837	resyncNTPTIME	Alarm and Event 855 - unsyncNTPTIME

New Alarm

- Description for Alarm 346 is changed.

Alarm Code	Alarm
341	apDHCPServiceFailure
346	apNATFailureDetectedbySZ
855	unsyncNTPTIME
858	clusterUploadKspFileFailed
974	csvFtpTransferMaxRetryReached
975	csvDiskThresholdExceeded
976	csvDiskMaxCapacityReached
1024	apCfgNonDhcpNatWlanVlanConfigMismatch
1025	apCfgDhcpNatWlanVlanConfigMismatch
1258	dpDcToCaleaConnectFail
1261	dpP2PTunnelConnectFail
1265	dpDhcpIpPoolUsageRate100
1267	zoneAffinityLastDpDisconnected
1762	racADLDAPTLSFailed
4003	disabledSciDueToUpgrade
4004	disabledSciDueToUpgrade
4005	disabledSciAndFtpDueToMutuallyExclusive

New Event

Event Code	Event
117	
228	clientBlockByBarringUERule
229	clientUnblockByBarringUERule
328	apHealthLatencyFlag
329	apHealthCapacityFlag
330	apHealthConnectionFailureFlag
331	apHealthClientCountFlag
332	apHealthLatencyClear
333	apHealthCapacityClear
334	apHealthConnectionFailureClear
335	apHealthClientCountClear
336	apDHCPFailoverDetected
337	apDHCPFallbackDetected
338	apSecondaryDHCPAPDown
339	apSecondaryDHCPAPUp
340	apDHCIPIPPoolMaxThresholdReached
341	apDHCPServiceFailure
342	apNATFailoverDetected
343	apNATFallbackDetected
344	apNATVlanCapacityAffected
345	apNATVlanCapacityRestored
346	apNATFailureDetectedbySZ
347	apHealthAirUtilizationFlag
348	apHealthAirUtilizationClear
855	unsyncNTPTIME
869	
870	clusterInitContactApr

Event Code	Event
972	csvFtpTransfer
973	csvFtpTransferError
974	csvFtpTransferMaxRetryReached
975	csvDiskThresholdExceeded
976	csvDiskMaxCapacityReached
977	csvDiskThresholdBackToNormal
1024	apCfgNonDhcpNatWlanVlanConfigMismatch
1025	apCfgDhcpNatWlanVlanConfigMismatch
1257	dpDcToCaleaConnected
1258	dpDcToCaleaConnectFail
1259	dpDcToCaleaDisconnected
1268	dpCaleaUelInterimMatched'
1260	dpP2PTunnelConnected
1261	dpP2PTunnelConnectFail
1262	dpP2PTunnelDisconnected
1263	dpStartMirroringClient
1264	dpStopMirroringClient
1265	dpDhcpIpPoolUsageRate100
1266	dpDhcpIpPoolUsageRate80
1267	zoneAffinityLastDpDisconnected
1761	racADLDAPTLSSuccess
1762	racADLDAPTLFailed
4001	connectedToSci
4002	disconnectedFromSci
4003	disabledSciDueToUpgrade
4004	disabledSciDueToUpgrade
4005	disabledSciAndFtpDueToMutuallyExclusive

SmartZone Version 3.4.1

No changes in this release.

SmartZone Version 3.4

The following are the changes for version 3.4.

New Alarm

Alarm Code	Alarm
850	clusterUploadAPFirmwareFailed
853	clusterAddAPFirmwareFailed
1021	zoneCfgPrepareFailed
1022	apCfgGenFailed
1023	cfgGenSkippedDueToEolAp

Displayed on the Web Interface

Alarm Code	Attribute	Attribute Change
107	Added failure reason	AP [{apName}&{apMac}] failed to update its firmware from [{fromVersion}] to [{toVersion}] failure reason [{reason}]

New Event

Event Code	Event
848	clusterUploadAPFirmwareStart
849	clusterUploadAPFirmwareSuccess
850	clusterUploadAPFirmwareFailed
851	clusterAddAPFirmwareStart
852	clusterAddAPFirmwareSuccess
853	clusterAddAPFirmwareFailed
854	clusterNameChanged
1021	zoneCfgPrepareFailed
1022	apCfgGenFailed

Event Code	Event
1023	cfgGenSkippedDueToEolAp

SmartZone Version 3.2.1

The following are the changes for version 3.2.1.

New Alarm

Alarm Code	Alarm
865	apCertificateExpire

New Event

Event Code	Event
226	wdsDeviceJoin
227	wdsDeviceLeave
865	apCertificateExpire
866	apCertificateExpireClear
3011	recoverCassandraError

Event on Web Interface

Event Code	Existing Display	New Display
513	Data plane [{dpName}&&{dpKey}] disconnected from {produce.short.name} [{cpName} wsg P].	Data plane [{dpName}&&{dpKey}] disconnected from {produce.short.name} [{cpName} wsg P], Reason: [{reason}].

SmartZone Version 3.2

The following are the changes for version 3.2.

New Alarm

Alarm Code	Alarm
538	dpLicenseInsufficient
553	dpUpgradeFailed
751	syslogServerUnreachable
835	resyncNTPTime
1255	licenseGoingToExpire
1256	apConnectionTerminatedDueToInsufficientLicense
1752	racADLDAPFail
1753	racADLDAPBindFail
1754	racLDAPFailToFindPassword
1755	racADNPSFail
1756	racADNPSFailToAuthenticate
2102	radiusServerUnreachable
2122	ldapServerUnreachable
2142	adServerUnreachable
2152	espAuthServerUnreachable
2154	espAuthServerUnResolvable
2162	espDNATServerUnreachable
2164	espDNATServerUnresolvable

Attribute Change

Module	Attribute	Attribute Change
Data Plane	dpMac	dpKey

Renamed Alarm

Alarm Code	Alarm Name	Renamed To
1202	DP Disconnected	GtpManager (DP) disconnected
7003	The number of users exceeded it's limit	The number of users exceeded its limit
7004	The number of devices exceeded it's limit	The number of devices exceeded its limit

New Event

Event Code	Event
370	apUsbSoftwarePackageDownloaded
371	apUsbSoftwarePackageDownloadFailed
530	dpDiscoverySuccess
532	dpStatusManaged
537	dpDeleted
538	dpLicenseInsufficient
550	dpUpgradeStart
551	dpUpgrading
552	dpUpgradeSuccess
553	dpUpgradeFailed
750	syslogServerReachable
751	syslogServerUnreachable
752	syslogServerSwitched
770	planeLoadingRebalancingSucceeded
771	planeLoadingRebalancingFailed
845	clusterUploadVDPFirmwareStart
846	uploadClusterVDPFirmwareSuccess
847	uploadClusterVDPFirmwareFailed

Event Code	Event
1255	licenseGoingToExpire
1256	apConnectionTerminatedDueToInsufficientLicense
1751	racADLDAPSuccess
1752	racADLDAPFail
1753	racADLDAPBindFail
1754	racLDAPFailToFindPassword
1755	racADNPSFail
1756	racADNPSFailToAuthenticate
2151	espAuthServerReachable
2152	espAuthServerUnreachable
2153	espAuthServerResolvable
2154	espAuthServerUnResolvable
2161	espDNATServerReachable
2162	espDNATServerUnreachable
2163	espDNATServerResolvable
2164	espDNATServerUnresolvable

Severity Change

Event Code and Event	Severity Changed From	Severity Changed To
516 - dpPktPoolLow	Major	Informational
517 - dpPktPoolCriticalLow	Critical	Major
519 - dpCoreDead	Critical	Major
837 - resyncNTPTime	Informational	Major
2102 - radiusServerUnreachable	Informational	Major
2122 - ldapServerUnreachable	Informational	Major
2142 - adServerUnreachable	Informational	Major

Attribute Change

Module	Attribute	Attribute Change
Data Plane	dpMac	dpKey
AP Communication Events System Events	"model"="ZF7343"	"model"="R700"
System Events	"model"="ZF7962", "firmware"="3.0.0.0.0"	"model"="R700", "firmware"="3.2.0.0.x"

Renamed Event

Event Code	Event Name	Renamed To
320	AP CLB limit reached	AP client load balancing limit reached
321	AP CLB limit recovered	AP client load balancing limit recovered
615	DP softGRE GW unreachable	DP sGRE GW unreachable
616	DP softGRE keep alive timeout	DP sGRE keep alive timeout
617	DP softGRE GW inactive	DP sGRE GW inactive
620	DP softGRE new tunnel	DP sGRE new tunnel
621	DP softGRE del tunnel	DP sGRE del tunnel
622	DP softGRE keepalive recovery	DP sGRE keepalive recovery
624	DP softGRE GW reachable	DP sGRE GW reachable
625	DP softGRE GW active	DP sGRE GW active
626	DP softGRE GW failover	DP sGRE GW failover
1202	DP Disconnected	GtpManager (DP) disconnected

Auto Clearance of Event

Event Code	Event Name
2102	This event triggers the alarm 2102, which is auto cleared by the event code 2101
2122	This event triggers the alarm 2122, which is auto cleared by the event code 2121
2142	This event triggers the alarm 2142, which is auto cleared by the event code 2141.

SmartZone Version 3.1.1

The following are the changes for version 3.1.1.

New Alarm

Alarm Code	Alarm
661	ipsecTunnelDisAssociated
662	ipsecTunnelAssociateFailed

New Event

Event Code	Event
326	cmResetByUser
327	cmResetFactoryByUser
660	ipsecTunnelAssociated
661	ipsecTunnelDisassociated
662	ipsecTunnelAssociateFailed
844	clusterInitiatedMovingAp
2101	radiusServerReachable
2102	radiusServerUnreachable
2121	ldapServerReachable

Event Code	Event
2122	ldapServerUnreachable
2141	adServerReachable
2142	adServerUnreachable
2201	zoneInitiatedMovingAp
2501	nodeIPv6Added
2502	nodeIPv6Deleted

Re-added Event

Event Code	Event
101	apDiscoverySuccess

Renamed Event

Event Code	Event Name	Renamed To
318	AP cable modem rebooted by user	AP cable modem power-cycled by user

RuckOS Version 3.1

The following are the changes for version 3.1.

New Alarm

Alarm Code	Alarm
516	dpPktPoolLow
517	dpPktPoolCriticalLow
519	dpCoreDead
520	dpProcessRestar
862	clusterCfgBackupFailed
864	clusterCfgRestoreFailed
1401	diaNitalizeErr
1403	diaPeerTransportFailure
1404	diaCERError
1407	diaPeerAddError
1409	diaPeerRemoveSuccess
1410	diaRealmEntryErr
1411	diaFailOverToAltPeer
1412	diaFallbackToPeer
1414	diaCEAUnknownPeer
1415	diaNoCommonApp
1551	staAuthFailedTransDown
1552	staAuthFailedFailureResp
1553	staAuthFailedDecodeFailure
1558	staReAuthFailed
1559	staResponseTimerExpired
1560	retransmitExhausted
1651	authFailedOverToSecondary
1652	authFallbackToPrimary

Alarm Code	Alarm
1653	accFailedOverToSecondary
1654	accFallbackToPrimary
7003	tooManyUsers
7004	tooManyDevices

Deprecated Alarm

Alarm Code	Alarm
1008	cfgUpdFailed
1902	unknownRealmAccounting
1909	apAcctRespWhileInvalidConfig

Renamed Alarm

Alarm Code	Alarm Type	Renamed To
701	No LS Responses	No LS responses
721	No LS Responses	No LS responses
1623	App Server Down	App server down
1624	App Server Inactive	App server inactive
1627	Association Down	Association down
1636	Outbound Routing Failure	Outbound routing failure
1637	Did Allocation Failure	Did allocation failure
1960	CGF Server Not Configured	CGF server not configured
1242	TTG Session Critical Threshold	TTG session critical threshold
1243	TTG Session License Exhausted	TTG session license exhausted
1302	Rate Limit for TOR surpassed	Rate limit for TOR surpassed
1911	Unauthorized CoA/DM message dropped	Unauthorized COA/DM message dropped

New Event

Event Code	Event
223	remediationSuccess
224	remediationFailure
325	cableModemUp
520	dpProcessRestart
626	dpSgreGWFailOver
627	dpSetUpTunnel
860	clusterCfgBackupStart
861	clusterCfgBackupSuccess
862	clusterCfgBackupFailed
863	clusterCfgRestoreSuccess
864	clusterCfgRestoreSuccess
926	ipmiREVote
927	ipmiREThempBB
928	ipmiREThempFP
929	ipmiREThempLOH
930	ipmiREThempMemP
931	ipmiREThempPS
932	ipmiREThempP
933	ipmiREThempHSBP
934	ipmiREFan
935	ipmiREPower
936	ipmiRECurrent
937	ipmiREFanStatus
938	ipmiREPsStatus
939	ipmiREDrvStatus
953	cpuThresholdBackToNormal
954	memoryThresholdBackToNormal

Event Code	Event
955	diskUsageThresholdBackToNormal
1401	dialNitalizeErr
1402	dialInitialization
1403	diaPeerTransportFailure
1404	diaCERError
1405	diaCERSuccess
1406	dialInvalidVer
1407	diaPeerAddError
1408	diaPeerAddSuccess
1409	diaPeerRemoveSuccess
1410	diaRealmEntryErr
1411	diaFailOverToAltPeer
1412	diaFailbackToPeer
1414	diaCEAUnknownPeer
1415	diaNoCommonApp
1550	staSucessfulAuthentication
1551	staAuthFailedTransDown
1552	staAuthFailedFailureResp
1553	staAuthFailedDecodeFailure
1554	staSessionTermSCGInitSuccess
1555	staSessionTermAAAInitSucess
1556	staSessionTermAAAInitFail
1557	staReAuthSuccess
1558	staReAuthFailed
1559	staResponseTimerExpired
1560	retransmitExhausted
1651	authFailedOverToSecondary
1652	authFallbackToPrimary

Event Code	Event
1653	accFailedOverToSecondary
1654	accFallbackToPrimary
1655	unavailableLocInfoRequested
1656	incapableLocInfoRequested
1657	unSupportedLocDeliveryRequest
7001	tooManyUsers
7002	tooManyDevices

Modified Event Severity

Event Code	Event	Severity	Changed To
516	dpPktPoolLow	Informational	Major
517	dpPktPoolCriticalLow	Major	Critical
519	dpCoreDead	Major	Critical
5006	lmalcmpUnreachable	Debug	Major

Renamed Event

Event Code	Event Name	Renamed To
181	Ssid-spoofing rogue AP	SSID-spoofing rogue AP
209	Client Roaming	Client roaming
211	3rd Party Client Join	3rd party client join
212	3rd Party Client Inactivity Timeout	3rd party client inactivity timeout
213	3rd Party Client Authorization	3rd party client authorization
214	3rd Party Client Authorization Failure	3rd party client authorization failure
215	3rd Party Client Session Expiration	3rd party client session expiration
216	3rd Party Client Roaming	3rd party client roaming

Event Code	Event Name	Renamed To
217	3rd Party Client Session Logout	3rd party client session logout
220	Client Grace Period	Client grace period
308	AP channel updated because Dynamic Frequency Selection (DFS) detected a radar event	AP channel updated because dynamic frequency selection (DFS) detected a radar event
317	AP Brownout	AP brownout
323	AP capacity Reached	AP capacity reached
405	eMAP downlink connected to MAP	EMAP downlink connected to MAP
406	eMAP downlink disconnected from MAP	EMAP downlink disconnected from MAP
407	eMAP uplink connected to MAP	EMAP uplink connected to MAP
408	eMAP uplink disconnected from MAP	EMAP uplink disconnected from MAP
422	Mesh state updated to MAP No Channel	Mesh state updated to MAP no channel
424	Mesh state update to RAP No Channel	Mesh state update to RAP no channel
515	Data plane physical Interface Up	Data plane physical interface up
615	DP SoftgreGW Unreachable	DP softGRE GW unreachable
616	DP Softgre Keep Alive Timeout	DP softGRE keep alive timeout
617	DP SoftgreGW Inact	DP softGRE GW inactive
618	DP DhcpRelay No Resp	DP DHCPRelay no response
619	DP DhcpRelay FailOver	DP DHCPRelay failOver
620	DP SoftGRE New Tunnel	DP softGRE new tunnel
621	DP SoftGRE Del Tunnel	DP softGRE del tunnel
622	DP SoftGRE Keepalive Recovery	DP softGRE keepalive recovery
623	DP DhcpRelay Resp Recovery	DP DHCPRelay response recovery

Event Code	Event Name	Renamed To
624	DP SoftGRE GW Reachable	DP softGRE GW reachable
625	DP SoftGRE GW Active	DP softGRE GW active
701	No LS Responses	No LS responses
707	AP received Passive Calibration Request	AP received passive calibration request
708	AP received Passive Footfall Request	AP received passive footfall request
709	AP received Unrecognized Request	AP received unrecognized request
721	No LS Responses	No LS responses
725	SCG received Passive Request	SCG received passive request
727	SCG sent Controller Information report	SCG sent controller information report
728	SCG received Management Request	SCG received management request
729	SCG sent AP Info by Venue Report	SCG sent AP info by venue report
730	SCG sent Query Venues Report	SCG sent query venues report
731	SCG sent Associated Client Report	SCG sent associated client report
732	SCG forwarded Calibration Request to AP	SCG forwarded calibration request to AP
733	SCG forwarded Footfall Request to AP	SCG forwarded footfall request to AP
734	SCG received Unrecognized Request	SCG received unrecognized request
833	SSH Tunnel Switched	SSH tunnel switched
970	FTP Transfer	FTP transfer
971	FTP Transfer Error	FTP transfer error
980	File Upload	File upload

Event Code	Event Name	Renamed To
981	Email Sent Successfully	Email sent successfully
982	Email Sent Failed	Email sent failed
983	SMS Sent Successfully	SMS sent successfully
984	SMS Sent Failed	SMS sent failed
1012	Incorrect Flat File Configuration	Incorrect flat file configuration
1220	PDP update by Roaming succeeded	PDP update by roaming succeeded
1221	PDP update by Roaming failed	PDP update by roaming failed
1244	PDP Update Success COA	PDP update success COA
1245	PDP Update Fail COA	PDP update fail COA
1647	CoA Sent NAS	CoA sent NAS
1648	CoA NAK Received NAS	CoA NAK received NAS
1649	CoA Authorize Only Access Reject	CoA authorize only access reject
1650	CoA RWSG MWSG Notification Failure	CoA RWSG MWSG notification failure
1960	CGF Server Not Configured	CGF server not configured
2001	ZD AP Migrating	ZD AP migrating
2002	ZD AP Migrated	ZD AP migrated
2003	ZD AP Rejected	ZD AP rejected
2004	ZD AP Migration Failed	ZD AP migration failed
1302	Rate Limit for TOR surpassed	Rate limit for TOR surpassed
1911	Unauthorized CoA/DM message dropped	Unauthorized COA/DM message dropped
1238	DHCP Inform Received	DHCP inform received
1239	DHCP Dcln Received	DHCP decline received
1240	TTG Session Warning Threshold	TTG session warning threshold
1241	TTG Session Major Threshold	TTG session major threshold
1242	TTG Session Critical Threshold	TTG session critical threshold

Event Code	Event Name	Renamed To
1243	TTG Session License Exhausted	TTG session license exhausted
1620	Destination Available	Destination available
1623	App Server Down	App server down
1624	App Server Inactive	App server inactive
1625	App Server Active	App server active
1627	Association Down	Association down
1628	Association Up	Association up
1630	Send Auth Info Success	Send auth info success
1634	Insert Sub Data Success	Insert sub data success
1635	Insert Sub Data Failed	Insert sub data failed
1636	Outbound Routing Failure	Outbound routing failure
1637	Did Allocation Failure	Did allocation failure
1639	Restore Data Success	Restore data success
1640	Restore Data Failed	Restore data failed
1641	DM Received from AAA	DM received from AAA
1643	DM Sent to NAS	DM sent to NAS
1644	DM NACK Received from NAS	DM NACK received from NAS
1645	CoA Received from AAA	CoA received from AAA
1801	3rdParty AP Connected	3rd party AP connected

RuckOS Version 3.0

The following are the changes for version RuckOS 3.0.

New Alarm

Table 4.

Alarm Code	Alarm
115	apJoinZoneFailed
510	dpReboot
614	apSoftGREGatewayNotReachable
701	apLBSNoResponses
702	apLBSAuthFailed
704	apLBSConnectFailed
721	scgLBSNoResponse
722	scgLBSAuthFailed
724	scgLBSConnectFailed
834	diskUsageExceed
1008	cfgUpdFailed
1302	rateLimitMORSurpassed
5001	processInit
5002	pmipUnavailable
5003	unallocatedMemory
5004	updateCfgFailed
5006	ImalcmpUnreachable
5008	ImaFailOver
5010	bindingFailure
5102	lostCnrxnToDHCP

Deprecated Alarm

Alarm Code	Alarm
106	apDiscoveryFail
109	apFirmwareUpdated
110	apConfUpdated
301	apRebootByUser
304	apFactoryReset
305	apConnected
307	apHeartbeatLost
309	cmRebootByUser
505	dpUpdateStatusFailed
506	dpUpdateStatisticFailed
507	dpConnected
508	dpPhyInterfaceUp
509	dpConfUpdated
603	dpTearDownTunnel
608	apBuildTunnelSuccess
609	apBuildTunnelFailed
610	apTunnelDisconnected
611	apSoftGRE TunnelFailoverPtoS
612	apSoftGRE TunnelFailoverStoP
812	upgradeClusterNodeSuccess
814	clusterLeaderChanged
815	upgradeEntireClusterSuccess
816	nodeBondInterfaceUp
817	nodePhyInterfaceUp
818	clusterBackToInService
819	backupClusterSuccess
820	newNodeJoinSuccess

Alarm Code	Alarm
821	clusterAppStart
822	removeNodeSuccess
823	restoreClusterSuccess
824	nodeBackToInService
833	sshTunnelSwitched
971	ftpTransferError
1010	smffRegFailed

Renamed Alarm Type

Alarm Code	Alarm Type	Renamed To
108	apWlanMismatched	apWlanOversubscribed
1242	sessionCriticalThreshold	ttgSessionCriticalThreshold
1243	sessionLicenseExhausted	ttgSessionLicenseExhausted
1302	rateLimitTORSurpassed	rateLimitMORSurpassed
1626	assocCantStart	assocEstbFailed
1960	CGFServerNotConfigured	cgfServerNotConfigured
5004	updateCgfFailed	updateCfgFailed

Modification of Alarm Severity

Alarm Code	Alarm	Severity	Severity Modified To
108	apWlanMismatched	Informational	Major
614	apSoftGREGatewayNotReachable	Major	Critical
960	licenseThresholdExceeded	Warning	Critical and Major
1636	outboundRoutingFailure	Major	Critical
1952	pdnGwVersionNotSupportedMsgReceived	Critical	Major

Renamed Alarm

Code	Alarm Name	Renamed To
104	AP model different with swap AP configuration	AP swap model mismatched
105	AP model different with pre-provision configuration	AP pre-provision model mismatched
108	AP WLAN mismatched	AP WLAN oversubscribed
809	Control plane interface down	Node bond interface down
810	Control plane physical interface down	Node physical interface down
952	Disk Usage threshold exceeded	Disk usage threshold exceeded
1003	Keep alive failure	Keepalive failure
1016	HIP Failover	HIP failed over
1202	Lost connection to Data plane	DP disconnected
1302	Rate Limit for Total Outstanding Requests (TOR) Surpassed	Rate Limit for MOR surpassed
1618	Destination Not reachable	Destination not reachable
1626	Association cannot Start	Association establishment failed
1902	Unknown realm accounting	Unknown realm
1909	apAcctRespWhileInvalidConfig	AP accounting response while invalid config
1910	apAcctMsgDropNoAcctStartMsg	AP account message drop while no accounting start message
1911	unauthorizedCoaDmMessageDropped	Unauthorized CoA/DM message dropped
1960	CGFServerNotConfigured	CGF Server Not Configured
5001	Initial Process	Process initiated
5002	PMIPv6 is Unavailable	PMIPv6 unavailable
5004	Update config failed	Config update failed
5006	LMA ICMP is unreachable	LMA ICMP unreachable
5008	LMA failover	LMA failed over

Code	Alarm Name	Renamed To
5010	Binding failure	Binding failed
5102	Lost DHCP connection	DHCP connection lost

New Event

Event Code	Event
115	apJoinZoneFailed
116	apIllegalToChangeCountryCode
180	genericRogueAPDetected
181	ssid-spoofingRogueAPDetected
182	mac-spoofingRogueAPDetected
183	same-networkRogueAPDetected
184	ad-hoc-networkRogueAPDetected
185	maliciousRogueAPTimeout
218	smartRoamDisconnect
219	clientBlockByDeviceType
220	clientGracePeriod
221	onboardingRegistrationSuccess
222	onboardingRegistrationFailure
225	forceDHCPDisconnect
319	319##smartMonitorTurnOffWLAN
320	apCLBLimitReached
321	apCLBLimitRecovered
322	apWLANStateChanged
323	apCapacityReached
324	apCapacityRecovered
516	dpPktPoolLow
517	dpPktPoolCriticalLow

Event Code	Event
518	dpPktPoolRecover
519	dpCoreDead
611	apSoftGRE TunnelFailoverPtoS
612	apSoftGRE TunnelFailoverStoP
613	apSoftGRE GatewayReachable
614	apSoftGRE GatewayNotReachable
701	apLBSNoResponses
702	apLBSAuthFailed
703	apLBSConnectSuccess
704	apLBSConnectFailed
705	apLBSStartLocationService
706	apLBSStopLocationService
707	apLBSRcvdPassiveCalReq
708	apLBSRcvdPassiveFFReq
709	apLBSRcvdUnrecognizedRequest
721	scgLBSNoResponse
722	scgLBSAuthFailed
723	scgLBSConnectSuccess
724	scgLBSConnectFailed
725	scgLBSStartLocationService
726	scgLBSRcvdNoPayload
727	scgLBSsentControllerInfo
728	scgLBSRcvdMgmtRequest
729	scgLBSsendAPIInfoByVenueReport
730	scgLBSsendVenuesReport
731	scgLBSsendClientInfo
732	scgLBSFwdPassiveCalReq
733	scgLBSFwdPassiveFFReq

Event Code	Event
734	scgLBSRcvdUnrecognizedRequest
837	resyncNTPTime
838	diskUsageExceed
981	mailSendSuccess
982	mailSendFailed
983	smsSendSuccess
984	smsSendFailed
1250	licenseSyncSuccess
1251	licenseSyncFail
1252	licenseImportSuccess
1253	licenseImportFail
1254	licenseChanged
1300	rateLimitThresholdSurpassed
1301	rateLimitThresholdRestored
1302	rateLimitMORSurpassed
2001	zdAPMigrating
2002	zdAPMigrated
2003	zdAPRejected
2004	zdAPMigrationFailed
5001	processInit
5002	pmipUnavailable
5003	unallocatedMemory
5004	updateCfgFailed
5005	ImalcmpReachable
5006	ImalcmpUnreachable
5007	ImaHbUnreachable
5008	ImaFailOver
5009	bindingSuccess

Event Code	Event
5010	bindingFailure
5011	bindingExpired
5012	bindingRevoked
5013	bindingReleased
5100	processTerminated
5101	connectedToDHCP
5102	lostCnxdToDHCP

Deprecated Event

Event Code	Event
101	apDiscoverySuccess
102	apDiscoveryFail
609	apBuildTunnelFailed
1004	keepAliveMissed
1010	smfRegFailed
1011	eventRegFailed

Re-added Event

Event Code	Event
827	ntpTimeSynched

Modifications to Event Severity

Event Code	Event Code	Severity	Changed To
114	apWlanOversubscribed	Informational	Major
320	apCLBLimitReached	Informational	Warning

Event Code	Event Code	Severity	Changed To
835	nodeBackToInService	Major	Informational
960	licenseThresholdExceeded	Informational	Warning
1007	cfgUpdSuccess	Debug	Informational
1008	cfgUpdFailed	Major	Debug
1009	cfgRcvFailed	Major	Debug
1201	connectedToDbblade	Debug	Informational
1209	c2dCfgFailed	Informational	Warning
1301	rateLimitThresholdRestored	Major	Informational
1603	unknownRealm	Major	Debug
1908	apAcctRetransmittedMsgDropped	Major	Debug
1910	apAcctMsgDropNoAcctStartMsg	Major	Critical
1911	unauthorizedCoaDmMessageDropped	Major	Critical
1952	pdnGwVersionNotSupportedMsgReceived	Critical	Major
5006	lmalcmpUnreachable	Debug	Major

Renamed Event Type

Event Code	Event Name	Renamed To
114	apWlanMismatched	apWlanOversubscribed
416	rmapDlinkConnectWithMap	rapDlinkConnectWithMap
511	dpUpdateStatisticFaliied	dpUpdateStatisticFailed
1017	standbyHipRestart	hipStandbyRestart
1240	sessionWarningThreshold	ttgSessionWarningThreshold
1241	sessionMajorThreshold	ttgSessionMajorThreshold
1242	sessionCriticalThreshold	ttgSessionCriticalThreshold
1243	sessionLicenseExhausted	ttgSessionLicenseExhausted
1302	rateLimitTORSurpassed	rateLimitMORSurpassed

Event Code	Event Name	Renamed To
1626	assocCantStart	assocEstbFailed
1960	CGFServerNotConfigured	cgfServerNotConfigured

Renamed Event

Code	Event Name	Renamed To
103	AP status changed to Managed	AP managed
112	AP model different with pre-provision configuration	AP pre-provision model mismatched
113	AP model different with swap AP configuration	AP swap model mismatched
114	AP WLAN mismatched	AP WLAN oversubscribed
202	Client joined successfully	Client joined
205	Client connection timed out due to inactivity	Client connection timed out
210	Client session logout	Client logged out
218	Client Roaming Disconnect	Client roaming disconnected
303	AP connection lost	AP disconnected
305	AP reset to factory default settings, new:	AP reset to factory default
311	AP change control plane	AP changed control plane
501	Data plane discovered successfully	Data plane discovered
620	DP Softgre New Tunnel	DP SoftGRE New Tunnel
621	DP Softgre Del Tunnel	DP SoftGRE Del Tunnel
622	DP Softgre KeepAlive Recovery	DP SoftGRE Keepalive Recovery
624	DP SoftgreGW Reachable	DP SoftGRE GW Reachable
625	DP SoftgreGW Active	DP SoftGRE GW Active
826	Cluster Node rebooted	Cluster node rebooted
828	Cluster node shutdown	Cluster node shut down

Code	Event Name	Renamed To
1003	Keep alive failure	Keepalive failure
1014	HIP Started	HIP started
1015	HIP Stopped	HIP stopped
1016	HIP Failover	HIP failed over
1017	Hip Restart	Standby HIP restarted
1018	HIP Cache Cleanup	HIP cache cleaned
1007	Configuration update success	Configuration updated
1201	Connected to Data plane	DP connected
1202	Lost connection to Data plane	DP disconnected
1205	Session updated at Data plane	Session updated at DP
1206	Session update error at Data plane	Session update at DP failed
1207	Session deleted at Data plane	Session deleted at DP
1208	Session delete error at Data plane	Session delete at DP failed
1217	Create PDP Failed	PDP create failed
1218	Initial PDP updated successfully HLR	PDP update by HLR succeeded
1219	Initial PDP updated fail HLR	PDP update by HLR failed
1220	Initial PDP updated successfully Roam	PDP update by Roaming succeeded
1221	Initial PDP updated fail Roam	PDP update by Roaming failed
1222	Received PDP update successfully GGSN	PDP update by GGSN succeeded
1223	Received PDP update fail GGSN	PDP update by GGSN failed
1224	Initial PDP deleted successfully	PDP delete by TTG succeeded
1225	Initial PDP deleted fail	PDP delete by TTG failed
1226	Received PDP deleted successfully	PDP delete by GGSN succeeded
1227	Received PDP deleted fail	PDP delete by GGSN failed
1229	ipAssigned	IP assigned
1300	Rate Limit Threshold Surpassed	Rate limit threshold surpassed

Code	Event Name	Renamed To
1301	Rate Limit Threshold Restored	Rate limit threshold restored
1302	Rate Limit for Total Outstanding Requests (TOR) Surpassed	Rate Limit for TOR surpassed
1604	Authentication success	Authentication succeeded
1606	Pseudonym authentication success	Pseudonym authentication succeeded
1608	Fast re-authentication success	Fast re-authentication succeeded
1612	CGF keep alive not responded	CGF keepalive not responded
1613	CDR transfer successful	CDR transfer succeeded
1618	Destination Not Reachable	Destination not reachable
1623	AppServer Down	App Server Down
1624	AppServer Inactive	App Server Inactive
1625	AppServer Active	App Server Active
1626	Association can not Start	Association establishment failed
1631	send Auth Info Failed	Auth info sending failed
1632	Update GPRS Location Success	GPRS location update succeeded
1633	Update GPRS Location Failed	GPRS location update failed
1902	Unknown realm accounting	Unknown realm
5001	Initial Process	Process initiated
5002	PMIPv6 is Unavailable	PMIPv6 unavailable
5004	Update config failed	Config update failed
5005	LMA ICMP is reachable	LMA ICMP reachable
5006	LMA ICMP is unreachable	LMA ICMP unreachable
5007	LMA server is unreachable	LMA server unreachable
5008	LMA failover	LMA failed over
5009	Binding success	Binding succeeded
5010	Binding failure	Binding failed

Code	Event Name	Renamed To
5012	Revoke binding	Binding revoked
5013	Release binding	Binding released
5100	Stop process	Process stopped
5101	Connect To DHCP	DHCP connected
5102	Lost DHCP connection	DHCP connection lost

Alarm and Event Management

2

In this chapter:

- [Overview](#)
- [Alarm and Event Management](#)

Overview

This guide lists and describes the various types of alarm and event that the controller generates. For each alarm and event, this guide provides the code, type, attributes, and description.

NOTE: Refer to [About This Guide](#) for the conventions used in this guide.

Alarm and Event Management

This subsystem contains set of functions that help users to detect, isolate, and eventually correct malfunctions in the managed network. This section covers:

- [Event Categories](#)
- [Event Attributes](#)
- [Generation of Alarm and Event](#)

Event Categories

Events are used for many different purposes, mainly for notifying users of certain conditions in the system components as well as the managed network. They can be classified into the following categories:

- **Alarms:** These are unexpected events indicating a condition that typically requires management attention
- **Configuration Change Events:** Configuration change events are events that inform of a configuration change effect on the device.
- **Threshold Crossing Alerts:** These are events that inform of a performance-related state variable that has exceeded a certain value. These events point to conditions that might require management attention to prevent network and service degradation.
- **Logging Events:** These are events that occur regularly and are expected to occur during the operation of a network, that indicate what is currently going on in the network. Some examples of these events include:
 - Activity on the network and service
 - Operator activity
 - System activity
 - Informational events – Any other kind of event.

- Debug and Informational events - All the debug and informational events pertaining to TTG modules like RADIUS proxy, HIP, CIP and AUT are not displayed on the Web Interface. This is because it reduces the performance of the system since its large in numbers. Enabling display of these events on the Web Interface is possible through CLI but it is not recommended.

Event Attributes

An event always includes the following attributes:

- Event Source: The identifier of the source component that generates the event
- Timestamp: The time when the event occurred
- Event Severity: Severity is classified as critical, major, minor, warning, informational or debug
- Event Type: The type of event that has occurred
- Event Information: Contains detail attribute fields in a key-value pair, where a list of field names is provided

Generation of Alarm and Event

The following are the steps of how alarm and event are generated.

1 Alarm

- a An alarm is a persistent indication of a fault that clears only when the triggering condition had been resolved.
- b An alarm can be filtered in the controller Web Interface based on:
 - Alarm Category - Alarm classifications
 - Alarm Source: Source of the alarm
 - Alarm Status: Could either be outstanding or cleared
 - Acknowledge Time: The time when the alarm is acknowledged
 - Date and Time - Date and time when the alarm is acknowledged
 - Severity: Severity is classified as critical, major or minor
 - Status - Could either be cleared or outstanding
 - Type - Alarm type
- c To view the below alarm information in the controller web interface navigate to **Events & Alarms > Alarms**
 - Date and Time

- Code
 - Alarm Type
 - Severity
 - Status
 - Activity
 - Acknowledged on
 - Cleared By
 - Cleared On
 - Comments
- d On an alarm generation, the controller web interface provides the following information as seen in [Figure 1](#).
- Alarm console, which displays the cleared and outstanding alarms visible to the user who is currently logged on
 - Alarm summary, which lists various information such as outstanding alarm counts, unacknowledged alarm counts, etc.
 - You may clear an alarm or a set of alarms to let other administrators know that you have already resolved the issue. When you select a group of alarms, the **Clear Alarm** button is activated. Click this button. A text box appears where you can enter comments or notes about the resolved issue. Click Apply when done. To view the cleared alarms, select the cleared option.
 - You may acknowledge an alarm or a set of alarms to let other administrators know that you have acknowledged it. When you select an alarm or group of alarms, the **Acknowledge Alarm** button is activated. Click this button. A text box appears where you need to confirm the acknowledgment. Click **Yes** when done. The **Acknowledged on** column in the Alarms table gets updated.
 - Filtering features based on the alarm attributes. When you select, the **Filter** button is deactivated by default. Click this button if you want to turn on the filter. Click on the gear icon for setting the filter. A text box appears where you can enter the severity, status and start and end date and time. Click **OK** when done.
 - You may also export the data as a CSV file.

Figure 1. Alarms

Date and Time	Code	Alarm Type	Severity	Status	Activity	Acknowledged On	Cleared By	Cleared On
2017/01/24 16:...	302	AP rebooted by system	Major	Outstanding	AP [INDIA-AP-H510@1C:89:C4:23:03...	N/A	N/A	N/A
2017/01/26 15:...	302	AP rebooted by system	Major	Outstanding	AP [R710-215@D4:68:4D:1A:6B:20] r...	N/A	N/A	N/A
2017/01/25 16:...	303	AP disconnected	Major	Outstanding	AP [INDIA-AP-H510@1C:89:C4:23:03...	N/A	N/A	N/A
2017/01/25 16:...	303	AP disconnected	Major	Outstanding	AP [C110@F0:3E:90:3F:7F:40] disco...	N/A	N/A	N/A
2017/01/24 21:...	803	Node out of service	Critical	Outstanding	Node [set-2] in cluster [set-1] is out ...	N/A	N/A	N/A
2017/01/24 16:...	1261	Data plane fails to connects to the other ...	Warning	Outstanding	Data plane[N/A@74:FE:48:08:AF:BE...	N/A	N/A	N/A
2017/01/24 16:...	1261	Data plane fails to connects to the other ...	Warning	Outstanding	Data plane[N/A@74:FE:48:08:AF:BE...	N/A	N/A	N/A
2017/01/26 15:...	1601	Authentication server not reachable	Major	Outstanding	Authentication Server [172.19.13.10...	N/A	N/A	N/A
2017/01/25 13:...	1601	Authentication server not reachable	Major	Outstanding	Authentication Server [172.19.13.20...	N/A	N/A	N/A

9 total records - 1 -

2 Event - On an event generation the:

- a The controller collects, receives, and maintains the raw events from the managed entities (control plane, data plane, access points, etc.). These raw events are kept in the database, and are automatically purged.
- b The controller allows users to enable/disable certain event types from the managed entities.

Events - The web interface provides **Events** log window as seen in [Figure 2](#) for users to visualize and analyze the events. To view the below event information in the controller web interface navigate to **Events & Alarms > Events**.

- Date and Time
- Code
- Type
- Severity
- Activity


Event Management lists the disabled events that are filtered at the source whenever possible to minimize resources for processing events. The SMTP server is disabled by default. You must enable and configure the SMTP server so notification emails can be delivered successfully.

Threshold Events are triggered at the source whenever possible.

Users are able to perform various operations on the events, such as filtration, aggregation and counting. The **Filter** button is deactivated by default. Click this button if you want to turn on the filter. Click on the gear icon for setting the filter. A text box appears where you can enter the severity, status and start and end date and time. Click **OK** when done.

The controller gives you the option of exporting the data as a CSV file.

Figure 2. Event

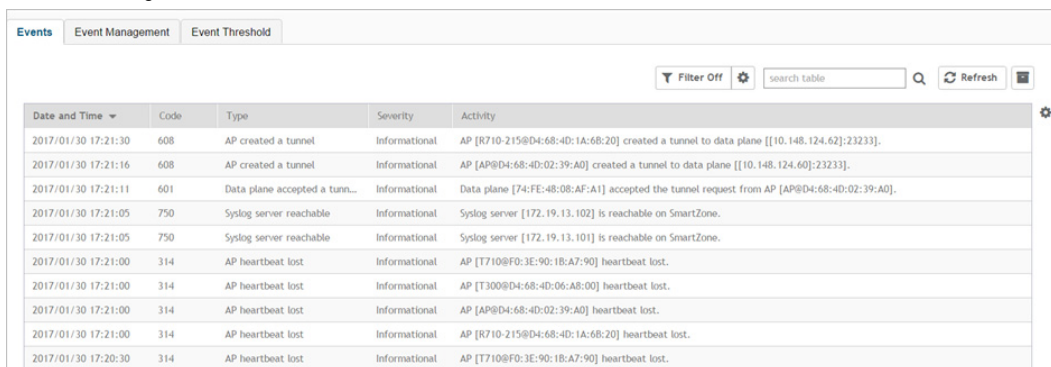

Date and Time	Code	Type	Severity	Activity
2017/01/30 17:21:30	608	AP created a tunnel	Informational	AP [R710-215@D4:68:4D:1A:68:20] created a tunnel to data plane [[10.148.124.62]:23233].
2017/01/30 17:21:16	608	AP created a tunnel	Informational	AP [AP@D4:68:4D:02:39:A0] created a tunnel to data plane [[10.148.124.60]:23233].
2017/01/30 17:21:11	601	Data plane accepted a turn...	Informational	Data plane [74:FE:48:08:AF:A1] accepted the tunnel request from AP [AP@D4:68:4D:02:39:A0].
2017/01/30 17:21:05	750	Syslog server reachable	Informational	Syslog server [172.19.13.102] is reachable on SmartZone.
2017/01/30 17:21:05	750	Syslog server reachable	Informational	Syslog server [172.19.13.101] is reachable on SmartZone.
2017/01/30 17:21:00	314	AP heartbeat lost	Informational	AP [T710@F0:3E:90:1B:A7:90] heartbeat lost.
2017/01/30 17:21:00	314	AP heartbeat lost	Informational	AP [T300@D4:68:4D:06:A8:00] heartbeat lost.
2017/01/30 17:21:00	314	AP heartbeat lost	Informational	AP [AP@D4:68:4D:02:39:A0] heartbeat lost.
2017/01/30 17:21:00	314	AP heartbeat lost	Informational	AP [R710-215@D4:68:4D:1A:68:20] heartbeat lost.
2017/01/30 17:20:30	314	AP heartbeat lost	Informational	AP [T710@F0:3E:90:1B:A7:90] heartbeat lost.

NOTE: Refer to [Alarm Types](#) and [Events Types](#) for the list of alarm and event that the SCG and vSZ-H generates.

NOTE: Refer to *SNMP MIB Reference Guide* for the list of SNMP alarm traps that the controller generates.

NOTE: Refer to Administrator Guide for Viewing of Alarms and Events.

This chapter provides information on the various types of alarms that the controller generates. Alarms are a subset of the events defined. Categories are inherited from the event.

In this chapter:

- [Accounting Alarms](#)
- [AP Authentication Alarms](#)
- [AP Communication Alarms](#)
- [AP LBS Alarms](#)
- [AP State Change Alarms](#)
- [Authentication Alarms](#)
- [Control and Data Plane Interface Alarms](#)
- [Cluster Alarms](#)
- [Configuration Alarms](#)
- [Data Plane Alarms](#)
- [GA Interface Alarms](#)
- [Gn/S2a Interface Alarms](#)
- [GR Interface Alarms](#)
- [IPMI Alarms](#)
- [Licensing Alarms](#)
- [PMIPv6 Alarms](#)
- [SCI Alarms](#)
- [Session Alarms](#)
- [STA Interface Alarms](#)
- [System Alarms](#)
- [Threshold Alarms](#)
- [Tunnel Alarms - Access Point](#)

Accounting Alarms

Following are the alarms related to accounting.

- [Accounting server not reachable](#)
- [Accounting fallback to primary](#)
- [Accounting fallback to primary](#)
- [AP accounting message mandatory parameter missing](#)
- [AP accounting message decode failed](#)
- [AP account message drop while no accounting start message](#)
- [Unauthorized CoA/DM message dropped](#)

Accounting server not reachable

Table 5. Accounting server not reachable alarm

Alarm	Accounting server not reachable
Alarm Type	accSvrNotReachable
Alarm Code	1602
Severity	Major
Aggregation Policy	An alarm is raised for every event from the event code 1602. A single event triggers a single alarm.
Attribute	"mVnold"=12, "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="wlan.3gppnetwork.org", "radProxyIp"="7.7.7.7", "accSvrIp"="30.30.30.30", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Accounting Server [{accSvrIp}] not reachable from Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered when the accounting server cannot be reached.
Recommended Actions	Manual intervention is required. Check the web interface for the connection to the AAA interface. Also, check if the RADIUS server can reach the AAA server interface.

Accounting failed over to secondary

NOTE: This alarm is not applicable for vSZ-H.

Table 6. Accounting failed over to secondary alarm

Alarm	Accounting failed over to secondary
Alarm Type	accFailedOverToSecondary
Alarm Code	1653
Severity	Major
Aggregation Policy	An alarm is raised for every event from the event code 1653. A single event triggers a single alarm.
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxylp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30"
Displayed on the web interface	Radius Server Failed Over from Primary {{primary}} to Secondary {{secondary}} on Radius Proxy [7.7.7.7] on SCG[2.2.2.2]
Description	This alarm is triggered when the secondary accounting RADIUS server is available after the primary server becomes zombie or dead.
Recommended Actions	No action is required.

Accounting fallback to primary

NOTE: This alarm is not applicable for vSZ-H.

Table 7. Accounting fallback to primary alarm

Alarm	Accounting fallback to primary
Alarm Type	accFallbackToPrimary
Alarm Code	1654
Severity	Major
Aggregation Policy	An alarm is raised for every event from the event code 1654. A single event triggers a single alarm.

Table 7. Accounting fallback to primary alarm

Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30"
Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered when the automatic fallback is enabled. The accounting failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.
Recommended Actions	No action is required.

AP accounting message mandatory parameter missing

NOTE: This alarm is not applicable for vSZ-H.

Table 8. AP accounting message mandatory parameter missing alarm

Alarm	AP accounting message mandatory parameter missing
Alarm Type	apAcctMsgMandatoryPrmMissing
Alarm Code	1901
Severity	Critical
Aggregation Policy	From the event code 1901 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvsold"="12", "wlanId"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org", "SCGMgmtIp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	[{srcProcess}] Mandatory attribute missing in Accounting Packet received from AP [{aplAddress}] on {produce.short.name} [{SCGMgmtIp}], with username [{uelmsi}@{realm}]

Table 8. AP accounting message mandatory parameter missing alarm

Description	This alarm is triggered when the controller fails to find the mandatory parameter in the RADIUS accounting message received from the AP. This mandatory parameter is required for generating the WAN-CDR.
Recommended Action	Download the RADIUS log file from the web interface to check the error cause.

AP accounting message decode failed

NOTE: This alarm is not applicable for vSZ-H.

Table 9. AP accounting message decode failed alarm

Alarm	AP accounting message decode failed
Alarm Type	apAcctMsgDecodeFailed
Alarm Code	1904
Severity	Critical
Aggregation Policy	From the event code 1904 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "wlanId"=1, "zoneId"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org", "SCGMgmtIp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueImsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	{{srcProcess}} Malformed Accounting Packet received from AP {{apIpAddress}} on {produce.short.name} {{SCGMgmtIp}}, with username {{userName}}
Description	This alarm is triggered when an AP accounting message decode fails due to a malformed packet.
Recommended Action	Download the RADIUS log file from the web interface to check the error cause.

AP account message drop while no accounting start message

NOTE: This alarm is not applicable for vSZ-H.

Table 10. AP account message drop while no accounting start message alarm

Alarm	AP account message drop while no accounting start message
Alarm Type	apAcctMsgDropNoAcctStartMsg
Alarm Code	1910
Severity	Critical
Aggregation Policy	From the event code 1910 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "wlanId"="1", "zoneId"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org",
Displayed on the web interface	[[srcProcess]] Dropped Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]. Accounting session timer expired, stop or interim message not received, as Account Start not received from NAS/AP
Description	This alarm is raised when accounting messages from the AP is dropped. The attributes <i>Acct Interim/Stop</i> message as account start is not received from the AP.
Recommended Action	Check the accounting retransmit timer and retransmit count in the Access Point (AP) configuration. Also check if the interface from the AP to the controller is congested.

Unauthorized CoA/DM message dropped

NOTE: This alarm is not applicable for vSZ-H.

Table 11. Unauthorized CoA/DM message dropped alarm

Alarm	Unauthorized CoA/DM message dropped
Alarm Type	unauthorizedCoaDmMessageDropped
Alarm Code	1911
Severity	Critical
Aggregation Policy	From the event code 1911 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvpnold"="12" "wlanId"="1" "zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "radSrvrIp"="7.7.7.7" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Dropped CoA/DM Packet received from AAA [[radSrvrIp]] on {produce.short.name} [[SCGMgmtIp]], Received message from unauthorized AAA
Description	This alarm is triggered when the controller receives a Change of Authorization (CoA) or Dynamic Multipoint (DM) message from an unauthorized AAA server.
Recommended Action	Check the RADIUS configuration server settings in the RADIUS service profile. Check if the AAA server is authorized to send the change of authorization (CoA) or dynamic multipoint (DM) messages. If it is authorized, include for RADIUS server to send CoA/DM message in RADIUS service.

NOTE: Refer to [Accounting Events](#).

AP Authentication Alarms

Following are the alarms related to AP authentication.

- [RADIUS server unreachable](#)
- [LDAP server unreachable](#)
- [AD server unreachable](#)
- [WeChat ESP authentication server unreachable](#)
- [WeChat ESP authentication server unresolvable](#)
- [WeChat ESP DNAT server unreachable](#)
- [WeChat ESP DNAT server unresolvable](#)

RADIUS server unreachable

Table 12. RADIUS server unreachable alarm

Alarm	RADIUS server unreachable
Alarm Type	radiusServerUnreachable
Alarm Code	2102
Severity	Major
Aggregation Policy	From the event code 2102 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x","model"="ZF982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"="".
Auto Clearance	The alarm is auto cleared with the event code 2101.
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach radius server [{ip]}.
Description	This alarm is triggered when AP is unable to reach RADIUS server.
Recommended Actions	Check the network connectivity between AP and RADIUS server.

LDAP server unreachable

Table 13. LDAP server unreachable alarm

Alarm	LDAP server unreachable
Alarm Type	ldapServerUnreachable
Alarm Code	2122
Severity	Major
Aggregation Policy	From the event code 2122 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2121.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach LDAP server [{ip}].
Description	This alarm is triggered when AP is unable to reach LDAP server.
Recommended Actions	Check the network connectivity between AP and LDAP server.

AD server unreachable

Table 14. AD server unreachable alarm

Alarm	AD server unreachable
Alarm Type	adServerUnreachable
Alarm Code	2142
Severity	Major
Aggregation Policy	From the event code 2142 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2141.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach AD server [{ip}].

Table 14. AD server unreachable alarm

Description	This alarm is triggered when AP is unable to reach AD server.
Recommended Actions	Check the network connectivity between AP and AD server.

WeChat ESP authentication server unreachable

Table 15. WeChat ESP authentication server unreachable alarm

Alarm	WeChat ESP authentication server unreachable
Alarm Type	espAuthServerUnreachable
Alarm Code	2152
Severity	Major
Aggregation Policy	From the event code 2152 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2151
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach WeChat ESP authentication server [{ip}]
Description	This alarm is triggered when AP is unable to reach WeChat ESP authentication server.
Recommended Actions	Check the network connectivity between controller web interface and WeChat ESP authentication server.

WeChat ESP authentication server unresolvable

Table 16. WeChat ESP authentication server unresolvable alarm

Alarm	WeChat ESP authentication server unresolvable
Alarm Type	espAuthServerUnResolvable
Alarm Code	2154
Severity	Major
Aggregation Policy	From the event code 2154 an alarm is raised for every event. A single event triggers a single alarm.

Table 16. WeChat ESP authentication server unresolvable alarm

Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2153.
Displayed on the web interface	AP [{apName&&apMac}] is unable to resolve WeChat ESP authentication server domain name [{dn}] to IP
Description	This alarm is triggered when AP is unable to resolve WeChat ESP authentication server domain name.
Recommended Actions	Check the DNS server configuration settings in the controller web interface.

WeChat ESP DNAT server unreachable

Table 17. WeChat ESP DNAT server unreachable alarm

Alarm	WeChat ESP DNAT server unreachable
Alarm Type	espDNATServerUnreachable
Alarm Code	2162
Severity	Major
Aggregation Policy	From the event code 2162 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2161.
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach WeChat ESP DNAT server [{ip}].
Description	This alarm is triggered when the AP is unable to reach WeChat ESP DNAT server.
Recommended Actions	Check the network connectivity between controller web interface and WeChat ESP DNAT server.

WeChat ESP DNAT server unresolvable

Table 18. WeChat ESP DNAT server unresolvable alarm

Alarm	WeChat ESP DNAT server unresolvable
Alarm Type	espDNATServerUnresolvable
Alarm Code	2164
Severity	Major
Aggregation Policy	From the event code 2164 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Auto Clearance	The alarm is auto cleared with the event code 2163.
Displayed on the web interface	AP [{apName}&&apMac]} is unable to resolve WeChat ESP DNAT server domain name [{dn}] to IP
Description	This alarm is triggered when the AP is unable to resolve WeChat ESP DNAT server domain name.
Recommended Actions	Check the DNS server configuration settings in the controller web interface.

NOTE: Refer to [AP Authentication Events](#).

AP Communication Alarms

Following are the alarms related to access point communications.

- [AP rejected](#)
- [AP configuration update failed](#)
- [AP swap model mismatched](#)
- [AP pre-provision model mismatched](#)
- [AP firmware update failed](#)
- [AP WLAN oversubscribed](#)
- [AP join zone failed](#)

AP rejected

Table 19. AP rejected alarm

Alarm	AP rejected
Alarm Type	apStatusRejected
Alarm Code	101
Severity	Minor
Aggregation Policy	From the event code 105 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 103.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx", "reason"="xxx"
Displayed on the web interface	{produce.short.name} [{wsgIP}] rejected AP [{apName&&apMac}] because of [{reason}]
Description	This alarm is triggered when the AP is rejected.
Recommended Actions	Check if the number of licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses.

AP configuration update failed

Table 20. AP configuration update failed alarm

Alarm	AP configuration update failed
Alarm Type	apConfUpdateFailed
Alarm Code	102
Severity	Major
fAggregation Policy	From the event code 111 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 110.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] failed to update to configuration [{configID}]
Description	This alarm is triggered when the controller is unable to update the AP configuration details.
Recommended Actions	Retrieve the AP support text. Reboot the AP and trigger another configuration change for upgrading the AP. If it fails revert to the previous zone firmware.

AP swap model mismatched

Table 21. AP swap model mismatched alarm

Alarm	AP swap model mismatched
Alarm Type	apModelDiffWithSwapOutAP
Alarm Code	104
Severity	Major
Aggregation Policy	From the event code 113 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx" "configModel"="xxx.xxx.xxx.xxx", "model"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from swap configuration model [{configModel}]
Description	This alarm is triggered when the AP model differs from the swapped configuration model.

Table 21. AP swap model mismatched alarm

Recommended Actions	If the model is incorrect delete and rejoin the AP.
---------------------	---

AP pre-provision model mismatched

Table 22. AP pre-provision model mismatched alarm

Alarm	AP pre-provision model mismatched
Alarm Type	apModelDiffWithPreProvConfig
Alarm Code	105
Severity	Major
Aggregation Policy	From the event code 112 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx", "configModel"="xxx.xxx.xxx.xxx". "model"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName}&&apMac]} model [{model}] is different from per-provision configuration model [{configModel}]
Description	This alarm is triggered when the AP model differs from the pre-provision configuration model.
Recommended Actions	If the model is incorrect delete the AP for the AP to rejoin to get the proper AP configuration.

AP firmware update failed

Table 23. AP firmware update failed alarm

Alarm	AP firmware update failed
Alarm Type	apFirmwareUpdateFailed
Alarm Code	107
Severity	Major
Aggregation Policy	From the event code 107 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 106.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName}&&apMac]} failed to update its firmware from [{fromVersion}] to [{toVersion}] [{reason}]

Table 23. AP firmware update failed alarm

Description	This alarm is triggered when the AP fails to update the firmware details.
Recommended Actions	Retrieve the AP support text. Reboot the AP and trigger another configuration change for upgrading the AP. If it fails revert to the previous zone firmware.

AP WLAN oversubscribed

Table 24. AP WLAN oversubscribed alarm

Alarm	AP WLAN oversubscribed
Alarm Type	apWlanOversubscribed
Alarm Code	1081
Severity	Major
Aggregation Policy	From the event code 114 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{{apName&&apMac}}] does not have enough capacity to deploy all wlans. Only maximum wlan number of the AP can be deployed
Description	This alarm is triggered when the AP exceeds the maximum capacity for deploying all WLANs.
Recommended Actions	Any of the following are the recommended actions. <ul style="list-style-type: none"> • Create a new WLAN group with WLANs. Ensure that it is not more than the AP's WLAN capacity. Apply the new WLAN group to either the AP or the AP's AP Group. • Find the WLAN group used by the AP and reduce the number of WLAN

AP join zone failed

NOTE: This alarm is not applicable for vSZ-H.

Table 25. AP join zone failed alarm

Alarm	AP join zone failed
Alarm Type	apJoinZoneFailed
Alarm Code	115
Severity	Major
Aggregation Policy	From the event code 115 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "zoneUUID"="xx:xx:xx:xx:xx:xx", "targetZoneUUID"="xx:xx:xx:xx:xx:xx", "reason"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName}&apMac] failed to join to zone [{targetZoneName}]. Reason: [{reason}]
Description	This alarm is triggered when the AP fails to join the specified zone
Recommended Actions	Check if the number of RXGW (AP direct tunnel license) licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses.

NOTE: Refer to [AP Communication Events](#).

AP LBS Alarms

Following are the alarms related to AP Location Based Service (LBS).

- [No LS responses](#)
- [LS authentication failure](#)
- [AP failed to connect to LS](#)

No LS responses

Table 26. No LS responses alarm

Alarm	No LS responses
Alarm Type	apLBSNoResponses
Alarm Code	701
Severity	Major
Aggregation Policy	From the event code 701 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the SmartZone web interface	AP [{apName}&&apMac] no response from LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the AP does not get a response when trying to connect to the location based service.
Recommended Actions	This alarm is triggered when the location server fails to respond to the AP request due to an error or the server is a maintenance mode. Report this to the location server owner.

LS authentication failure

Table 27. LS authentication failure alarm

Alarm	LS authentication failure
Alarm Type	apLBSAuthFailed
Alarm Code	702
Severity	Major
Aggregation Policy	From the event code 702 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""

Table 27. LS authentication failure alarm

Displayed on the SmartZone web interface	AP [{apName}&&apMac] LBS authentication failed: url=[{url}], port=[{port}]
Description	This alarm is triggered when the AP fails to connect to the location service.
Recommended Actions	The password needs to be corrected in the LBS service page.

AP failed to connect to LS

Table 28. AP failed to connect to LS alarm

Alarm	AP failed to connect to LS
Alarm Type	apLBSCConnectFailed
Alarm Code	704
Severity	Major
Aggregation Policy	From the event code 704 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 703.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="","port"=""
Displayed on the SmartZone web interface	AP [{apName}&&apMac] connection failed to LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the AP fails to connect to the location based service.
Recommended Actions	This alarm is triggered either when the location server is unreachable or the network connection is unstable or the Domain Named System (DNS) configuration is incorrect. It is recommended to check all the three possible error codes - 701, 702 and 704.

NOTE: Refer to [AP LBS Events](#).

AP State Change Alarms

Following are the alarms related to access point state changes.

- [AP rebooted by system](#)
- [AP disconnected](#)
- [AP deleted](#)
- [AP cable modem interface down](#)
- [AP DHCP service failure](#)
- [AP NAT failure](#)

AP rebooted by system

Table 29. AP rebooted by system alarm

Alarm	AP rebooted by system
Alarm Type	apRebootBySystem
Alarm Code	302
Severity	Major
Aggregation Policy	From the event code 302 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted by the system because of [{reason}]
Description	This alarm is triggered when system reboots the AP.
Recommended Actions	Check the reasons for the reboot. If the reason is unknown, retrieve the AP support text and send it to Ruckus support.

AP disconnected

Table 30. AP disconnected alarm

Alarm	AP disconnected
Alarm Type	apConnectionLost
Alarm Code	303
Severity	Major
Aggregation Policy	From the event code 303 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 312
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] disconnected
Description	This alarm is triggered when the AP disconnects from the controller.
Recommended Actions	Check the network and the communicator process on the controller. Try rebooting the AP locally.

AP deleted

Table 31. AP deleted alarm

Alarm	AP deleted
Alarm Type	apDeleted
Alarm Code	306
Severity	Major
Aggregation Policy	From the event code 313 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] deleted
Description	This alarm is triggered when the AP is deleted.
Recommended Actions	This is a user action and to confirm check the user audit.

AP cable modem interface down

Table 32. AP cable modem interface down alarm

Alarm	AP cable modem interface down
Alarm Type	cableModemDown
Alarm Code	308
Severity	Major
Aggregation Policy	From the event code 316 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 325.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem interface is down
Description	This alarm is triggered when the AP cable modem interface is down.
Recommended Actions	Check cable modem. Try rebooting the cable modem.

AP DHCP service failure

Table 33. AP DHCP service failure alarm

Alarm	Both primary and secondary DHCP server APs are down
Alarm Type	apDHCPServiceFailure
Alarm Code	341
Severity	Major
Aggregation Policy	From the event code xxx an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"primaryServerMac"="xx:xx:xx:xx:xx:xx", "secondaryServerMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP DHCP service failure. Both primary DHCP AP [{primaryServerMac}] and secondary DHCP server AP [{secondaryServerMac}] are down.
Description	This alarm is triggered when the primary and secondary DHCP server APs fail.
Recommended Actions	

AP NAT failure

Table 34. AP NAT failure alarm

Alarm	AP NAT failure detected by controller due to three (3) consecutive NAT gateway APs are down.
Alarm Type	apNATFailureDetectedbySZ
Alarm Code	346
Severity	Critical
Aggregation Policy	From the event code 346 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"apMac1"="xx:xx:xx:xx:xx:xx", "apMac2"="xx:xx:xx:xx:xx:xx", "apMac3"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT failure detected by SZ since three (3) consecutive NAT gateway IPs are down AP1=[{apMac1}] AP2=[{apMac2}] AP3=[{apMac3}] (All consecutive NAT APs are down in case of less than 3 NAT Gateway APs configured). The NAT traffic for some of the clients may get affected for the respective VLANs.
Description	This alarm is triggered when the controller detects three (3) consecutive failure of NAT server AP.
Recommended Actions	

NOTE: Refer to [AP State Change Events](#).

Authentication Alarms

The following are the alarms related to authentication.

- [Authentication server not reachable](#)
- [Authentication failed over to secondary](#)
- [Authentication fallback to primary](#)
- [AD/LDAP connectivity failure](#)
- [Bind fails with AD/LDAP](#)
- [Bind success with LDAP, but unable to find clear text password for the user](#)
- [RADIUS fails to connect to AD NPS server](#)
- [RADIUS fails to authenticate with AD NPS server](#)

Authentication server not reachable

Table 35. Authentication server not reachable alarm

Alarm	Authentication server not reachable
Alarm Type	authSvrNotReachable
Alarm Code	1601
Severity	Major
Aggregation Policy	From the event code 1601 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "authSvrIp"="20.20.20.20" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Authentication Server [{authSvrIp}] not reachable from Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}].
Description	This alarm is triggered when the authentication fails since the primary or secondary servers are not reachable.
Recommended Actions	Manual intervention is required. Check the web interface for the interface from the controller to AAA server. Also check if the AAA server can be reached from the RADIUS server. Ensure that the AAA server is UP.

Authentication failed over to secondary

Table 36. Authentication failed over to secondary alarm

Alarm	Authentication failed over to secondary
Alarm Type	authFailedOverToSecondary
Alarm Code	1651
Severity	Major
Aggregation Policy	From the event code 1651 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]a
Description	This alarm is triggered when the secondary RADIUS server is available after the primary server becomes zombie or dead.
Recommended Actions	No operator action is required.

Authentication fallback to primary

Table 37. Authentication fallback to primary alarm

Alarm	Authentication fallback to primary
Alarm Type	authFallbackToPrimary
Alarm Code	1652
Severity	Major
Aggregation Policy	From the event code 1652 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"

Table 37. Authentication fallback to primary alarm

Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered when automatic fallback is enable. Consequently, the authentication failover to the secondary server occurs and the revival timer for the primary server expires, and the requests falls back to the primary server.
Recommended Actions	No action is required.

AD/LDAP connectivity failure

Table 38. AD/LDAP connectivity failure alarm

Alarm	AD/LDAP connectivity failure
Alarm Type	racADLDAPFail
Alarm Code	1752
Severity	Major
Aggregation Policy	From the event code 1752 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"="1.1.1.1", "SCGMgmtIp"="2.2.2.2" "desc"= "Connection to AD/LDAP fails"
Displayed on the web interface	[{srcProcess}] Connect to AD/LDAP[{authSrvrIp}] fails from SCG[{SCGMgmtIp}]
Description	This alarm is triggered when RADIUS server fails to connect with AD/LDAP server.
Recommended Actions	<ul style="list-style-type: none"> • Check whether AD/LDAP server instance is running on the target machine • Check whether the AD/LDAP server can be reached from the controller • Verify if AD/LDAP server instances are listening on ports 3268 and 389 • Verify if the requests are reaching AD/LDAP servers by any packet capture tool (tcpdump, wireshark)

Bind fails with AD/LDAP

Table 39. Bind fails with AD/LDAP alarm

Alarm	Bind fails with AD/LDAP
Alarm Type	racADLDAPBindFail
Alarm Code	1753
Severity	Major
Aggregation Policy	From the event code 1753 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"= "1.1.1.1", "username"="testuser" "SCGMgmtIp"="2.2.2.2", "desc"="Bind to AD/LDAP fails"
Displayed on the web interface	[[srcProcess]] Bind to AD/LDAP[[authSrvrIp]] fails from SCG[[SCGMgmtIp]] for User[[userName]]
Description	This alarm is triggered when RADIUS server binding fails to AD/LDAP server.
Recommended Actions	<ul style="list-style-type: none"> • Verify the base and administrator domain names as configured in the controller web interface • Verify the administrator user name and password as configured in the controller web interface • Verify whether the configured administrator user name and password is authenticated by the AD/LDAP servers

Bind success with LDAP, but unable to find clear text password for the user

Table 40. Bind success with LDAP, but unable to find clear text password for the user alarm

Alarm	Bind success with LDAP, but unable to find clear text password for the user
Alarm Type	racLDAPFailToFindPassword
Alarm Code	1754
Severity	Major
Aggregation Policy	From the event code 1754 an alarm is raised for every event. A single event triggers a single alarm.

Table 40. Bind success with LDAP, but unable to find clear text password for the user alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"= "testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Fail to find password"
Displayed on the web interface	[[srcProcess]] failed to find password from LDAP[[authSrvrlp]] for SCG[[SCGMgmtlp]] for User[[userName]]
Description	This alarm is triggered when binding is successful with LDAP server using root credentials but it is unable to retrieve the clear text password for the user.
Recommended Actions	Verify whether the given username and clear text password are configured in the LDAP server.

RADIUS fails to connect to AD NPS server

Table 41. RADIUS fails to connect to AD NPS server alarm

Alarm	RADIUS fails to connect to AD NPS server
Alarm Type	racADNPSFail
Alarm Code	1755
Severity	Major
Aggregation Policy	From the event code 1755 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12 "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"= "Fails to connect to AD NPS server"
Displayed on the web interface	[[srcProcess]] Fails to connect to AD NPS[[authSrvrlp]] from SCG[[SCGMgmtlp]]
Description	This alarm is triggered when the RADIUS server fails to connect to the AD NPS server.
Recommended Actions	<ul style="list-style-type: none"> • Verify if the configured NPS server instance is up and running (Network Policy Server) • Verify if the NPS server instance is communicating on the standard RADIUS port 1812 • Ensure that Windows server where AD/NPS server is provisioned can be reached from the controller web interface

RADIUS fails to authenticate with AD NPS server

Table 42. RADIUS fails to authenticate with AD NPS server alarm

Alarm	RADIUS fails to authenticate with AD NPS server
Alarm Type	racADNPSFailToAuthenticate
Alarm Code	1756
Severity	Major
Aggregation Policy	From the event code 1756 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"="1.1.1.1", "username"="testuser" "SCGMgmtIp"="2.2.2.2", "desc"="Fails to authenticate with AD NPS"
Displayed on the web interface	[[srcProcess]] Fails to authenticate AD NPS[[authSrvrIp]] on SCG[[SCGMgmtIp]] for User[[userName}}
Description	This alarm is triggered when the RADIUS server fails to authenticate with the AD NPS server.
Recommended Actions	<ul style="list-style-type: none"> • The shared secret for NPS server should be same as that of administrator password provisioned in the controller web interface for AD server • NPS should be configured to accept request (CHAP and MSCHAPv2) from the controller • For CHAP authentication to work the AD server should store the password in reversible encryption format • Ensure that NPS is registered with AD server

Fails to establish TLS tunnel with AD/LDAP

Table 43. Fails to establish TLS tunnel with AD/LDAP alarm

Alarm	Fails to establish TLS tunnel with AD/LDAP
Alarm Type	racADLDAPTLSFailed
Alarm Code	1762
Severity	Major
Aggregation Policy	From the event code 1762 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12 "srcProcess"="RAC", "authSrvrIp" = "1.1.1.1" "authSrvrPort"="636", "SCGMgmtIp"="2.2.2.2" "desc"=" Fail to establish TLS Tunnel with LDAP/AD"
Displayed on the web interface	[[srcProcess]] Fails to authenticate AD NPS[[authSrvrIp]] on SCG[[SCGMgmtIp]] for User[[userName]]
Description	This alarm is triggered when TLS connection between the controller and AD/LDAP fails.
Recommended Actions	•

NOTE: Refer to [Authentication Events](#).

Control and Data Plane Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following alarm is related to control and data plane.

- [GtpManager \(DP\) disconnected](#)

GtpManager (DP) disconnected

Table 44. GtpManager (DP) disconnected alarm

Alarm	GtpManager (DP) disconnected
Alarm Type	lostCnxnToDblade
Alarm Code	1202
Severity	Major
Aggregation Policy	From the event code 1202 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1201.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA", "ctrlBladeIp"="1.1.1.1", "dataBladeIp"="3.3.3.3", "SCGMgmtIp"="2.2.2.2
Displayed on the web interface	The connectivity between Control plane [{ctrlBladeIp}] and Data plane [{dataBladeIp}] is lost at {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered due to transmission control protocol (TCP) connection loss or when control plane is unable to complete the configuration procedure successfully.
Recommended Actions	A manual intervention is required. Refer to Control and Data Plane Interface event 1201.

NOTE: Refer to [Control and Data Plane Interface](#).

Cluster Alarms

Following are the alarms related to cluster.

- [New node failed to join](#)
- [Node removal failed](#)
- [Node out of service](#)
- [Cluster in maintenance state](#)
- [Cluster backup failed](#)
- [Cluster restore failed](#)
- [Cluster upgrade failed](#)
- [Cluster application stopped](#)
- [Node bond interface down](#)
- [Node physical interface down](#)
- [Cluster node rebooted](#)
- [Cluster node shut down](#)
- [Disk usage exceed threshold](#)
- [Cluster out of service](#)
- [Cluster upload AP firmware failed](#)
- [Cluster add AP firmware failed](#)
- [Unsync NTP time](#)
- [Cluster upload KSP file failed](#)
- [Configuration backup failed](#)
- [Configuration restore failed](#)

New node failed to join

Table 45. New node failed to join alarm

Alarm	New node failed to join
Alarm Type	newNodeJoinFailed
Alarm Code	801
Severity	Critical
Aggregation Policy	From the event code 803 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 802.
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	New node [{nodeMac}] ({nodeName}) failed to join cluster [{clusterName}]
Description	This alarm is triggered when a node fails to join a cluster session. The web interface displays the error message.
Recommended Actions	<p>When the operation fails, the user can run the <i>join process</i>. If it continues to fail, please send the complete system log files (stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> for analysis to Ruckus support. Possible causes are:</p> <ul style="list-style-type: none"> • The joining node is unable to complete the syncing of data in time. This could be due to the existing node performing compaction/repair etc. • The communication between the nodes may be broken. This could cause the operation to timeout such as IP address change or due to other events, which affects the network. Usually, it does not last for a long period of time.

Node removal failed

Table 46. Node removal failed alarm

Alarm	Node removal failed
Alarm Type	removeNodeFailed
Alarm Code	802
Severity	Major
Aggregation Policy	From the event code 805 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 804.
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] failed to remove from cluster [{clusterName}].
Description	This alarm is triggered when it is unable to remove a node from the cluster.
Recommended Actions	In general, this alarm should rarely occur. If it occurs, restore to the previous backup file and please send the system log files (stored in the path - <i>/opt/ ruckuswireless/controller/log/system</i> for analysis to Ruckus support.

Node out of service

Table 47. Node out of service alarm

Alarm	Node out of service
Alarm Type	nodeOutOfService
Alarm Code	803
Severity	Critical
Aggregation Policy	From the event code 806 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 835.
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"

Table 47. Node out of service alarm

Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is out of service. Reason:[{reason}].
Description	This alarm is triggered when a node is out of service.
Recommended Actions	The operator/user needs to check the application/interface state.

Cluster in maintenance state

Table 48. Cluster in maintenance state alarm

Alarm	Cluster in maintenance state
Alarm Type	clusterInMaintenanceState
Alarm Code	804
Severity	Critical
Aggregation Policy	From the event code 807 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 808.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] is in maintenance state
Description	This alarm is triggered when a cluster is in a maintenance state.
Recommended Actions	<p>Possible causes:</p> <ul style="list-style-type: none"> • The entire system backup is in process. • In a two-node cluster, the remove-node process is working. <p>For any other cause, please send the complete system log files (stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.</p>

Cluster backup failed

Table 49. Cluster backup failed alarm

Alarm	Cluster backup failed
Alarm Type	backupClusterFailed
Alarm Code	805
Severity	Major
Aggregation Policy	From the event code 810 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 809.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup failed. Reason:[{reason}].
Description	This alarm is triggered when a cluster backup fails.
Recommended Actions	<p>Check the disk usage. Try restoring the communication between nodes for a few more times. If the backup continues to fail or if you encounter Python script errors, please collect the complete system log files (stored in the path - <i>/opt/ ruckuswireless/controller/log/system</i> to Ruckus support for analysis. Possible causes:</p> <ul style="list-style-type: none"> • Insufficient disk space. • Communication between nodes may be broken. • Errors due to the underlying Python script.

Cluster restore failed

Table 50. Cluster restore failed alarm

Alarm	Cluster restore failed
Alarm Type	restoreClusterFailed
Alarm Code	806
Severity	Major
Aggregation Policy	From the event code 812 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 811.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] restore failed. Reason:[{reason}].
Description	This alarm is triggered when a cluster restore fails.
Recommended Actions	Try a few more times. If the backup restore continues failing, please send the log files (stored in the path - /opt/ ruckuswireless/controller/log/ system to Ruckus support for analysis. The possible cause could be that the command for all nodes in the cluster failed. This could be due to a broken communication link between the nodes.

Cluster upgrade failed

Table 51. Cluster upgrade failed alarm

Alarm	Cluster upgrade failed
Alarm Type	upgradeClusterFailed
Alarm Code	807
Severity	Major
Aggregation Policy	From the event code 815 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 814.
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "fromVersion"="x.x", "toVersion"="x.x"

Table 51. Cluster upgrade failed alarm

Displayed on the web interface	Cluster [{clusterName}] could not be upgraded from [{fromVersion}] to [{toVersion}]. Reason:[{reason}].
Description	This alarm is triggered when a version upgrade of a cluster fails.
Recommended Actions	<p>Check the disk usage. Try restoring the communication between nodes for a few more times. If the backup continues to fail or if you encounter Python script errors, please collect and send the complete system log files (stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> to Ruckus support for analysis. Possible causes:</p> <ul style="list-style-type: none"> • Insufficient disk space • Communication between nodes might be broken. • Errors due to the underlying Python script.

Cluster application stopped

Table 52. Cluster application stopped alarm

Alarm	Cluster application stopped
Alarm Type	clusterAppStop
Alarm Code	808
Severity	Critical
Aggregation Policy	From the event code 816 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 817.
Attribute	"appName"="xxxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Application [{appName}] on node [{nodeName}] stopped
Description	This alarm is triggered when the application on a node stops.
Recommended Actions	This could happen to any application for various reasons. Please collect and send the system log files of the stopped application (stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> to the application owner for analysis.

Node bond interface down

Table 53. Node bond interface down alarm

Alarm	Node bond interface down
Alarm Type	nodeBondInterfaceDown
Alarm Code	809
Severity	Major
Aggregation Policy	From the event code 821 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 822.
Attribute	"nodeName"="xxx", "nodeMac"="xxx", "ifName"="xxxx"
Displayed on the web interface	Network interface [{networkInterface} ifName] on node [{nodeName}] is down.
Description	This alarm is triggered when the network interface of a node is down.
Recommended Actions	Check if the network cables of both the physical interfaces are broken. Alternatively, check if the physical interfaces for this bond interface are broken. Please send the log files stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> to Ruckus support for analysis.

Node physical interface down

Table 54. Node physical interface down alarm

Alarm	Node physical interface down
Alarm Type	nodePhyInterfaceDown
Alarm Code	810
Severity	Critical
Aggregation Policy	From the event code 824 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 825.
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"

Table 54. Node physical interface down alarm

Displayed on the web interface	Physical network interface [{networkInterface} {ifName}] on node [{nodeName}] is down.
Description	This alarm is triggered when the physical interface of a node is down.
Recommended Actions	Check if the network cables of both the physical interfaces are broken. Alternatively, check if the physical interfaces for this bond interface are broken. Please send the log files stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> to Ruckus support for analysis.

Cluster node rebooted

Table 55. Cluster node rebooted alarm

Alarm	Cluster node rebooted
Alarm Type	nodeRebooted
Alarm Code	811
Severity	Major
Aggregation Policy	From the event code 826 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xxx", "nodeMac"="xxx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] rebooted
Description	This alarm is triggered when the node is rebooted.
Recommended Actions	Usually, this occurs due to user actions like manual reboot of a node, upgrade or restoration of a cluster. Please send the log files stored in the path - <i>/opt/ruckuswireless/controller/log/system</i> to Ruckus support for analysis.

Cluster node shut down

Table 56. Cluster node shut down alarm

Alarm	Cluster node shut down
Alarm Type	nodeShutdown
Alarm Code	813
Severity	Major

Table 56. Cluster node shut down alarm

Aggregation Policy	From the event code 828 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 826.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] has been shut down
Description	This alarm is triggered when the node shutdowns.
Recommended Actions	This usually occurs due to a user action. Please send the log files stored in the path - /opt/ ruckuswireless/controller/log/system to Ruckus support for analysis.

Disk usage exceed threshold

Table 57. Disk usage exceed threshold alarm

Alarm	Disk usage exceed threshold
Alarm Type	diskUsageExceed
Alarm Code	834
Severity	Critical
Aggregation Policy	From the event code 838 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx", "status"="xx"
Displayed on the web interface	The disk usage of node [{nodeName}] is over {status}%.
Description	This alarm is triggered when the disk usage has reached the threshold limit. The disk usage percentage can be configured from 60% to 90%.
Recommended Actions	It is recommended that the user moves the backup files to the FTP server and deletes the moved backup files.

Cluster out of service

Table 58. Cluster out of service alarm

Alarm	Cluster out of service
Alarm Type	clusterOutOfService
Alarm Code	843
Severity	Critical
Aggregation Policy	From the event code 843 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 808.
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] is out of service.
Description	This alarm is triggered when the cluster service fails.
Recommended Actions	It is recommended that the operator or user checks the out of service node to locate the reason.

Cluster upload AP firmware failed

Table 59. Cluster upload AP firmware failed alarm

Alarm	Cluster upload AP firmware failed
Alarm Type	clusterUploadAPFirmwareFailed
Alarm Code	850
Severity	Major
Aggregation Policy	From the event code 850 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 849
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware failed.
Description	This alarm is triggered when the cluster upload to AP firmware fails.
Recommended Actions	It is recommended that the operator uploads the AP patch.

Cluster add AP firmware failed

Table 60. Cluster add AP firmware failed alarm

Alarm	Cluster add AP firmware failed
Alarm Type	clusterAddAPFirmwareFailed
Alarm Code	853
Severity	Major
Aggregation Policy	From the event code 853 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 852.
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] add AP firmware failed.
Description	This alarm is triggered when the cluster upload to AP firmware fails.
Recommended Actions	It is recommended that the operator applies the AP patch.

Unsync NTP time

Table 61. Unsync NTP time alarm

Alarm	Unsync NTP time
Alarm Type	unsyncNTPTIME
Alarm Code	855
Severity	Major
Aggregation Policy	From the event code 855 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx", "reason"="xx", "status"="xx"
Displayed on the web interface	Node [{nodeName}] time is not synchronized because of [{reason}]. The time difference is [{status}] seconds.
Description	This alarm is triggered when the cluster time is not synchronized.

Cluster upload KSP file failed

Table 62. Cluster upload KSP file failed alarm

Alarm	Cluster upload KSP file failed
Alarm Type	clusterUploadKspFileFailed
Alarm Code	858
Severity	Major
Aggregation Policy	From the event code 858 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 857
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload KSP file failed.
Description	This alarm is triggered when the cluster time is not synchronized.

Configuration backup failed

Table 63. Configuration backup failed alarm

Alarm	Configuration backup failed
Alarm Type	clusterCfgBackupFailed
Alarm Code	862
Severity	Major
Aggregation Policy	From the event code 862 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 861.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup failed.
Description	This alarm is triggered when the configuration backup fails.
Recommended Actions	Download the web log file from the controller web interface to check for errors.

Configuration restore failed

Table 64. Configuration restore failed alarm

Alarm	Configuration restore failed
Alarm Type	clusterCfgRestoreFailed
Alarm Code	864
Severity	Major
Aggregation Policy	From the event code 864 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 863.
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore failed.
Description	This alarm is triggered when the cluster restoration fails.
Recommended Actions	Download the web log file from the web interface to check for errors.

NOTE: Refer to [Cluster Events](#).

Configuration Alarms

Following are the alarms related to configuration.

- [Zone configuration preparation failed](#)
- [AP configuration generation failed](#)
- [End-of-life AP model detected](#)
- [VLAN configuration mismatch on non DHCP/NAT WLAN](#)
- [VLAN configuration mismatch on DHCP/NAT WLAN](#)

Zone configuration preparation failed

Table 65. Zone configuration preparation failed alarm

Alarm	Zone configuration preparation failed
Alarm Type	zoneCfgPrepareFailed
Alarm Code	1021
Severity	Major
Aggregation Policy	From the event code 1021 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90", "zoneName"="openZone"
Displayed on the web interface	Failed to prepare zone [{zoneName}] configuration required by ap configuration generation
Description	This alarm is triggered when the controller is unable to prepare a zone configuration required by the AP.
Recommended Actions	APs under these zone stay functional but are unable to receive new settings. Contact Ruckus support to file an error bug along with the log file.

AP configuration generation failed

Table 66. AP configuration generation failed alarm

Alarm	AP configuration generation failed
Alarm Type	apCfgGenFailed
Alarm Code	1022
Severity	Major
Aggregation Policy	From the event code 1022 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90", "zoneName"="openZone", "apCfgGenFailedCount"="25"
Displayed on the web interface	Failed to generate configuration for {{apCfgGenFailedCount}} AP(s) under zone{{zoneName}}
Description	This alarm is triggered when the controller fails to generate the AP configuration under a particular zone.
Recommended Actions	APs under these zone stay functional but are unable to receive the new settings. Contact Ruckus support to file an error bug along with the log file.

End-of-life AP model detected

Table 67. End-of-life AP model detected alarm

Alarm	End-of-life AP model detected
Alarm Type	cfgGenSkippedDueToEolAp
Alarm Code	1023
Severity	Major
Aggregation Policy	From the event code 1023 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeMac"="50:A7:33:24:E7:90","zoneName"="openZone","model"="R300,T300"
Displayed on the web interface	Detected usage of end-of-life ap model(s)[{model}] while generating configuration for AP(s) under zone[{zoneName}]
Description	This alarm is triggered when the controller detects the AP model's end-of-life under a certain zone.
Recommended Actions	<p>These obsoleted APs occupies licensed AP space. Disconnect these unsupported AP models from the given zone by:</p> <ul style="list-style-type: none"> • Reset the APs to a factory setting using the AP command line • Delete these APs through the controller Web Interface > Configuration AP List

VLAN configuration mismatch on non DHCP/NAT WLAN

Table 68. VLAN configuration mismatch on non DHCP/NAT WLAN alarm

Alarm	VLAN configuration mismatch detected between configured and resolved VLAN with DVLAN/VLAN pooling configuration on non-DHCP/NAT WLAN
Alarm Type	apCfgNonDhcpNatWlanVlanConfigMismatch
Alarm Code	1024
Severity	Critical
Aggregation Policy	From the event code 1023 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ssid"="xxxx", "wlanID"="xxxx", "configuredVlan"="5",
Displayed on the web interface	DHCP/NAT gateway AP [{apMac}] detected VLAN configuration mismatch on non-DHCP/NAT WLAN [{ssid}]. Configured VLAN is [{configuredVlan}] and resolved VLAN is [{vlanId}]. Clients may not be able to get IP or access Internet.
Description	This alarm is triggered when the AP detects a non DHCP/NAT WLAN. VLAN configuration mismatches with DVLAN/VLAN pooling configuration on gateway AP.
Recommended Actions	•

VLAN configuration mismatch on DHCP/NAT WLAN

Table 69. VLAN configuration mismatch on DHCP/NAT WLAN alarm

Alarm	VLAN configuration mismatch detected between configured and resolved VLAN with DVLAN/VLAN pooling configuration on DHCP/NAT WLAN
Alarm Type	apCfgDhcpNatWlanVlanConfigMismatch
Alarm Code	1025
Severity	Critical
Aggregation Policy	From the event code 1023 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ssid"="xxxx", "vlanID"="xxxx", "configuredVlan"="5", "vlanId"="11", "apMac"=""xx:xx:xx:xx:xx:xx"
Displayed on the web interface	DHCP/NAT gateway AP [{apMac}] detected VLAN configuration mismatch on DHCP/NAT WLAN [{ssid}]. Configured VLAN is [{configuredVlan}] and resolved VLAN is [{vlanId}]. Clients may not be able to get IP or access Internet
Description	This alarm is triggered when the AP detects a DHCP/NAT WLAN. VLAN configuration mismatches with DVLAN/VLAN pooling configuration on gateway AP.

NOTE: Refer to [Configuration Events](#).

Data Plane Alarms

NOTE: Alarms 510, 516, 517 and 519 are not applicable for vSZ-H.

Following are the alarms related to data plane.

- [Data plane configuration update failed](#)
- [Data plane disconnected](#)
- [Data plane physical interface down](#)
- [Data plane rebooted](#)
- [Data plane packet pool is under low water mark](#)
- [Data plane packet pool is under critical low water mark](#)
- [Data plane core dead](#)
- [Data plane process restarted](#)
- [Data plane license is not enough](#)
- [Data plane upgrade failed](#)
- [Data plane of data center side fails to connect to the CALEA server](#)
- [Data plane fails to connects to the other data plane](#)
- [Data plane DHCP IP pool usage rate is 100 percent](#)

Data plane configuration update failed

Table 70. Data plane configuration update failed alarm

Alarm	Data plane configuration update failed
Alarm Type	dpConfUpdateFailed
Alarm Code	501
Severity	Major
Aggregation Policy	From the event code 505 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 504
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "configID"=" 123456781234567"
Displayed on the web interface	Data plane [[dpName dpKey]] failed to update to configuration [[configID]].

Table 70. Data plane configuration update failed alarm

Description	This alarm is triggered when the data plane configuration update fails since it was unable to transfer the configuration update from the control plane to the data plane.
Recommended Actions	Check the data plane configuration and the CPU utilization of the control plane. The possible cause could be of the server being busy at that particular moment. Check to see if the event is persistent.

Data plane disconnected

Table 71. Data plane disconnected alarm

Alarm	Data plane disconnected
Alarm Type	dpDisconnected
Alarm Code	503
Severity	Critical
Aggregation Policy	From the event code 513 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 512.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName} {dpKey}] disconnected from {produce.short.name} [{cpName} {wsgIP}]
Description	This alarm is triggered when the data plane gets disconnected from the controller since it fails to update its status to the control plane.
Recommended Actions	Check if the communicator is still alive and if the cluster interface is working.

Data plane physical interface down

Table 72. Data plane physical interface down alarm

Alarm	Data plane physical interface down
Alarm Type	dpPhyInterfaceDown
Alarm Code	504
Severity	Critical
Aggregation Policy	From the event code 514 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 515.
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName dpKey}] is down
Description	This alarm is triggered when the physical interface link of the data plane is down due to the fiber cable connection.
Recommended Actions	Check if the fiber cable between the data plane and the switch is firmly connected.

Data plane rebooted

Table 73. Data plane rebooted alarm

Alarm	Data plane rebooted
Alarm Type	dpReboot
Alarm Code	510
Severity	Minor
Aggregation Policy	From the event code 506 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName dpKey}] rebooted
Description	This alarm is triggered when the data plane is rebooted.
Recommended Actions	No action is required.

Data plane packet pool is under low water mark

Table 74. Data plane packet pool is under low water mark alarm

Alarm	Data plane packet pool is under low water mark
Alarm Type	dpPktPoolLow
Alarm Code	516
Severity	Major
Aggregation Policy	From the event code 516 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 518.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName} {dpKey}] is under low-water mark.
Description	This alarm is triggered when the data core packet pool is below the water mark level.
Recommended Actions	The operator needs to check for network looping.

Data plane packet pool is under critical low water mark

Table 75. Data plane's packet pool is under critical low water mark alarm

Alarm	Data plane packet pool is under critical low water mark
Alarm Type	dpPktPoolCriticalLow
Alarm Code	517
Severity	Critical
Aggregation Policy	From the event code 517 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	dpKey="xx:xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName} {dpKey}] is under critical low-water mark.
Description	This alarm is triggered when the data core packet pool is under the critical water mark level.
Recommended Actions	The operator needs to check for network looping.

Data plane core dead

Table 76. Data plane core dead alarm

Alarm	Data plane core dead
Alarm Type	dpCoreDead
Alarm Code	519
Severity	Critical
Aggregation Policy	From the event code 519 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	dpKey="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName} {dpKey}] has dead data core.
Description	This alarm is triggered when one or multiple data core packet pool is lost /dead.
Recommended Actions	No action required.

Data plane process restarted

Table 77. Data plane process restarted alarm

Alarm	Data plane process restarted
Alarm Type	dpProcessRestart
Alarm Code	520
Severity	Major
Aggregation Policy	From the event code 520 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	dpKey="xx:xx:xx:xx:xx:xx", processName="xxxx"
Displayed on the web interface	[[processName]] process got re-started on data plane [[dpName&&dpKey]]
Description	This alarm is triggered when any process on data plane crashes and restarts.
Recommended Actions	No action required.

Data plane license is not enough

NOTE: Alarm 538 is applicable only for vSZ-H.

Table 78. Data plane license is not enough alarm

Alarm	Data plane license is not enough
Alarm Type	dpLicenseInsufficient
Alarm Code	538
Severity	Major
Aggregation Policy	From the event code 538 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"count"=<delete-vdp-count>
Displayed on the web interface	DP license is not enough, [{count}] instance of DP will be deleted.
Description	This alarm is triggered when the number of data plane licenses are insufficient.
Recommended Actions	Check if the number of data plane licenses has exceeded the limit. You would need to purchase additional licenses, in case of insufficient licenses and synchronize the licenses.

Data plane upgrade failed

NOTE: Alarm 553 is applicable only for vSZ-H

Table 79. Data plane upgrade failed alarm

Alarm	Data plane upgrade failed
Alarm Type	dpLicenseInsufficient
Alarm Code	553
Severity	Major
Aggregation Policy	From the event code 553 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] failed to upgrade.
Description	This alarm is triggered when the data plane upgrade fails.
Recommended Actions	<p>There are several possible reasons to trigger alarm 553. The operator has to ensure the accuracy of network connectivity and version availability. For advanced process, check the debug log for reason of upgrade failure. <i>Note:</i> Debug file includes the upgrade log file. The operator can get the debug log from vSZ web interface or through vSZ-D CLI.</p> <p>The operator can use the following vSZ-D CLI commands to:</p> <ul style="list-style-type: none"> • View the previous upgrade status and reason in case of a failure - <code>ruckus# show upgrade-state/ruckus# show upgrade-history</code> • Save the debug file for viewing - <code>ruckus(debug)# save-log</code> • Check the connection status between vSZ and vSZ-D - <code>ruckus# show status</code> • Check the current vSZ-D software version - <code>ruckus # show version</code> <p><i>Note:</i> Refer to the vSZ-D CLI Reference Guide for details on the CLI commands mentioned above.</p>

Data plane of data center side fails to connect to the CALEA server

Table 80. Data plane of data center side fails to connect to the CALEA server alarm

Alarm	Data plane of data center side fails to connect to the CALEA server
Alarm Type	dpDcToCaleaConnectFail
Alarm Code	1258
Severity	Major
Aggregation Policy	From the event code 1258 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dpIP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} fails to connects to the CALEA server{{caleaServerIP}}
Description	This alarm is triggered when the data plane fails to connect to the CALEA server.
Recommended Actions	

Data plane fails to connects to the other data plane

Table 81. Data plane fails to connects to the other data plane alarm

Alarm	Data plane fails to connects to the other data plane
Alarm Type	dpP2PTunnelConnectFail
Alarm Code	1261
Severity	Warning
Aggregation Policy	From the event code 1261 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDpIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane{{dpName&&dpKey}} fails connects to the other Data Plane{{targetDpKey&&targetDpIP}}
Description	This alarm is triggered when data plane fails to connect to another data plane.
Recommended Actions	

Data plane DHCP IP pool usage rate is 100 percent

Table 82. Data plane DHCP IP pool usage rate is 100 percent alarm

Alarm	Data plane DHCP IP pool usage rate is 100 percent
Alarm Type	dpDhcpIpPoolUsageRate100
Alarm Code	1265
Severity	Critical
Aggregation Policy	From the event code 1265 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] DHCP IP Pool usage rate is 100 percent
Description	This alarm is triggered when data plane DHCP pool usage rate reaches 100%
Recommended Actions	

NOTE: Refer to [Data Plane Events](#).

GA Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to GA interface.

- [Connection to CGF failed](#)
- [CDR transfer failed](#)
- [CDR generation failed](#)

Connection to CGF failed

Table 83. Connection to CGF failed alarm

Alarm	Connection to CGF failed
Alarm Type	cnxnToCgfFailed
Alarm Code	1610
Severity	Major
Aggregation Policy	From the event code 1610 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1613.
Attribute	"mvsold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cip", "realm"="NA", "radSrvrlp"="7.7.7.7", "cgfSrvrlp"="40.40.40.40", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Connection with CGF [{cgfSrvrlp}] from RADServerIP [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This alarm is triggered when the channel interface processor (CIP) or GPRS tunneling protocol prime (GTPP) stack detects a connection loss to the charging gateway function (CGF server).
Recommended Actions	Manual intervention is required. Refer to GA Interface Events code 1613. The attribute cgfSrvrlp should match.

CDR transfer failed

Table 84. CDR transfer failed alarm

Alarm	CDR transfer failed
Alarm Type	cdrTxfrFailed
Alarm Code	1614
Severity	Major
Aggregation Policy	From the event code 1614 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cip", "realm"="wlan.3gppnetwork.org", "radSvrIp"="7.7.7.7", "cgfSvrIp"="40.40.40.40", "CGF Serv Intf"="2.2.2.2", "cause"="<reason for failure>"
Displayed on the web interface	CDR transfer failed from RAD Server [{radSvrIp}] to CGF [{cgfSvrIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered when the call detail record transfer over Gn' fails.
Recommended Actions	Manual intervention is required. Check the web interface for the home location register (HLR) configuration and also if the HLR can be reached from the controller.

CDR generation failed

Table 85. CDR generation failed alarm

Alarm	CDR generation failed
Alarm Type	cdrGenerationFailed
Alarm Code	1615
Severity	Major
Aggregation Policy	From the event code 1615 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cip", "realm"="wlan.3gppnetwork.org", "radSrvrlp"="7.7.7.7", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Failed to generate CDR by RAD Server [{radSrvrlp}] in {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is triggered when the controller is unable to format or generate certain CDRs.
Recommended Actions	Manual intervention is required. Download the CIP process log file to check the cause of the error.

NOTE: Refer to [GA Interface Events](#).

Gn/S2a Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to Gn/S2a interface.

- GGSN restarted
- GGSN not reachable
- GGSN not resolved
- PDNGW could not be resolved
- PDNGW version not supported
- Associated PDNGW down
- Create session response failed
- Decode failed
- Modify bearer response failed
- Delete session response failed
- Delete bearer request failed
- Update bearer request failed
- CGF server not configured

GGSN restarted

Table 86. GGSN restarted alarms

Alarm	GGSN restarted
Alarm Type	ggsnRestarted
Alarm Code	1210
Severity	Major
Aggregation Policy	From the event code 1210 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm", "realm"="NA", "gtpclp"="5.5.5.5", "ggsnIp"="10.10.10.10", "SCGMgmtIp"="2.2.2.2",
Displayed on the web interface	GGSN {{ggsnIp}} connected to {produce.short.name} {{SCGMgmtIp}} (GTPC-IP {{gtpclp}}) is restarted.

Table 86. GGSN restarted alarms

Description	This alarm is triggered when the GTP control plane (GTP-C) receives a new recovery value.
Recommended Actions	Refer to the log file for Gateway GPRS Support Node (GGSN) restart.

GGSN not reachable

Table 87. GGSN not reachable alarms

Alarm	GGSN not reachable
Alarm Type	ggsnNotReachable
Alarm Code	1211
Severity	Major
Aggregation Policy	From the event code 1211 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm", "realm"="NA", "gtpclp"="5.5.5.5", "ggsnIp"="10.10.10.10", "SCGMgmtIp"="2.2.2.2",
Displayed on the web interface	GGSN {{ggsnIp}} connected to {produce.short.name} (GTPC-IP {{gtpclp}}) is not reachable
Description	This alarm is triggered when the echo request is timed out.
Recommended Actions	Refer to the log file.

GGSN not resolved

Table 88. GGSN not resolved alarm

Alarm	GGSN not resolved
Alarm Type	ggsnNotResolved
Alarm Code	1215
Severity	Major
Aggregation Policy	From the event code 1215 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12", "wlanId"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org", "gtpclp"="5.5.5.5", "apn"="ruckuswireless.com", "SCGMgmtIp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueImsi"="12345", "ueMsisdn"="98787",
Displayed on the web interface	Failed to resolve GGSN from APN [{apn}] for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}]
Description	This alarm is triggered when the access point name (APN) fails at GGSN.
Recommended Actions	Manual intervention is required. Correct the DNS configuration in the controller web interface.

PDNGW could not be resolved

Table 89. PDNGW could not be resolved alarm

Alarm	PDNGW could not be resolved
Alarm Type	pdnGwNotResolved
Alarm Code	1950
Severity	Critical
Aggregation Policy	From the event code 1950 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	mvnold="12 "wlanId"=1 "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", srcProcess="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com"
Displayed on the web interface	[[srcProcess]] APN [[apn]] could not be resolved on {produce.short.name} [[SCGMgmtIp]], with username [[uelmsi]]@{realm}}
Description	This alarm is triggered when the APN is unable to resolve to PDN Gateway (PDN GW).
Recommended Actions	Modify the DNS server configuration in the controller web interface.

PDNGW version not supported

Table 90. PDNGW version not supported alarm

Alarm	PDNGW version not supported
Alarm Type	pdnGwVersionNotSupportedMsgReceived
Alarm Code	1952
Severity	Major
Aggregation Policy	From the event code 1952 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtplp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Version not supported message received from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]].
Description	This alarm is triggered when the version is not supported for messages received from PDN GW.
Recommended Actions	Verify and correct the GPRS tunneling protocol (GTP) version supported in the PGW is GTPv1 and GTPv2.

Associated PDNGW down

Table 91. Associated PDNGW down alarm

Alarm	Associated PDNGW down
Alarm Type	pdnGwAssociationDown
Alarm Code	1953
Severity	Critical
Aggregation Policy	From the event code 1953 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtplp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Association with PDN GW with IP [[pgwlp]] from {produce.short.name} [[SCGMgmtlp]] down
Description	This alarm is triggered when the association with PDN GW is down due to echo request time out or it fails to send messages to PDN GW.

Table 91. Associated PDNGW down alarm

Recommended Actions	Check the interface from the controller to PDN GW in the web interface to ensure it is reachable.
---------------------	---

Create session response failed

Table 92. Create session response failed alarm

Alarm	Create session response failed
Alarm Type	createSessionResponseFailed
Alarm Code	1954
Severity	Major
Aggregation Policy	From the event code 1954 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvsold"="12" "wlanId"="1" "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "apn"="ruckus.com" "cause"="<reason for failure>"
Displayed on the web interface	[[srcProcess]] Create Session response from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This alarm is triggered when create session response from PDN GW fails as per the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

Decode failed

Table 93. Decode failed alarm

Alarm	Decode failed
Alarm Type	decodeFailed
Alarm Code	1955
Severity	Major
Aggregation Policy	From the event code 1955 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"= "NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Decode of message received from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed.
Description	This alarm is triggered when decoding of messages received from PDN GW fails.
Recommended Actions	Download the SM log to check the cause of the error.

Modify bearer response failed

Table 94. Modify bearer response failed alarm

Alarm	Modify bearer response failed
Alarm Type	modifyBearerResponseFailed
Alarm Code	1956
Severity	Major
Aggregation Policy	From the event code 1956 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "wlanld"="1" "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "apn"="ruckus.com" "cause"="<reason for failure>"

Table 94. Modify bearer response failed alarm

Displayed on the web interface	[[srcProcess]] Modify Bearer Response from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This alarm is reported when the modify bearer response from PDN GW fails as per the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

Delete session response failed

Table 95. Delete session response failed alarm

Alarm	Delete session response failed
Alarm Type	deleteSessionResponseFailed
Alarm Code	1957
Severity	Major
Aggregation Policy	From the event code 1957 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvsold"="12" "wlanId"="1" "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.mnc080.mcc405.3gppnetwork.org" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "apn"="ruckus.com" "cause"="<reason for failure>"
Displayed on the web interface	[[srcProcess]] Delete Session response from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	Delete session response from PDN GW fails due to the specified cause.
Recommended Actions	Download the SM log to check the cause of the error.

Delete bearer request failed

Table 96. Delete bearer request failed alarm

Alarm	Delete bearer request failed
Alarm Type	deleteBearerRequestFailed
Alarm Code	1958
Severity	Major
Aggregation Policy	From the event code 1958 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "cause"="<reason for failure>"
Displayed on the web interface	[[srcProcess]] Delete Bearer Request from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This alarm is triggered when the delete bearer request from PDN GW fails.
Recommended Actions	Download the SM log to check the cause of the error.

Update bearer request failed

Table 97. Update bearer request failed alarm

Alarm	Update bearer request failed
Alarm Type	updateBearerRequestFailed
Alarm Code	1959
Severity	Major
Aggregation Policy	From the event code 1959 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="NA" "gtpclp"="5.5.5.5" "pgwlp"="1.1.1.1" "SCGMgmtlp"="2.2.2.2" "cause"="<reason for failure>"
Displayed on the web interface	[[srcProcess]] Update bearer request from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtlp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	Update bearer request failed, decode failed.

Table 97. Update bearer request failed alarm

Recommended Actions	Download the SM log to check the cause of the error.
---------------------	--

CGF server not configured

Table 98. CGF server not configured alarm

Alarm	CGF server not configured
Alarm Type	cgfServerNotConfigured
Alarm Code	1960
Severity	Major
Aggregation Policy	From the event code 1960 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="CIP" "realm"="NA" "ggsnIp"="10.10.10.10" "SCGMgmtIp"="2.2.2.2" "radSvrIp"="7.7.7.7" "cgfSvrIp"="1.1.1.1"
Displayed on the web interface	CGF server IP {{cgfSvrIp}} received from PDN GW/GGSN with IP {{ggsnIp}} on {produce.short.name} {{SCGMgmtIp}} is not configured
Description	This alarm is triggered when the IP address of the CGF server received from GGSN/PDNGW is not configured in the controller web interface and therefore is not considered.
Recommended Actions	Check the controller web interface to ensure that the IP address of the CGF server received from PDNGW/GGSN is configured. If it is not configure navigate to Configurations > Services and Profiles > CGF Services to create the configuration.

NOTE: Refer to [Gn/S2a Interface Events](#).

GR Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to GR interface.

- [Destination not reachable](#)
- [App server down](#)
- [App server inactive](#)
- [Association establishment failed](#)
- [Association down](#)
- [Outbound routing failure](#)
- [Did allocation failure](#)

Destination not reachable

Table 99. Destination not reachable alarm

Alarm	Destination not reachable
Alarm Type	destNotReacheable
Alarm Code	1618
Severity	Critical
Aggregation Policy	From the event code 1618 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1620.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is unavailable
Description	This alarm is triggered when the point code is unreachable due to a pause indicator.
Recommended Actions	Manual intervention is required.

App server down

Table 100. App server down alarm

Alarm	App server down
Alarm Type	appServerDown
Alarm Code	1623
Severity	Critical
Aggregation Policy	From the event code 1623 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1625.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "routingContext" = "1", "pointCode"="1.1.1", "SSN" = "7"
Displayed on the web interface	Application Server Down, Routing Context [{routingContext}], local Point Code [{pointCode}], local SSN [{SSN}]
Description	This alarm is triggered when the local application server is down due to the receipt of ASP down (ASPDN) or ASP down acknowledgment (ASPDN ACK) received from the remote IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

App server inactive

Table 101. App server inactive alarm

Alarm	App server inactive
Alarm Type	appServerInactive
Alarm Code	1624
Severity	Critical
Aggregation Policy	From the event code 1624 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1625.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "routingContext" = "1", "pointCode"="1.1.1", "SSN" = "7"

Table 101. App server inactive alarm

Displayed on the web interface	Application Server Inactive, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This alarm is triggered when the local application server is inactive due to application service provider inactive (ASP_INACTIVE) or application service provider inactive acknowledgment (ASP_INACTIVE_ACK) from remote IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

Association establishment failed

Table 102. Association establishment failed alarm

Alarm	Association establishment failed
Alarm Type	assocEstbFailed
Alarm Code	1626
Severity	Critical
Aggregation Policy	From the event code 1626 an alarm is raised for every five events or events occurring within a span of 2 minutes.
Auto Clearance	The alarm code is auto cleared with the event code 1628.
Attribute	"mvnold"="3", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "srcIP"="10.1.4.10", "srcPort"="2960", "destIP"="10.1.4.20", "destPort"="2960"
Displayed on the web interface	Unable to establish SCTP association. srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This alarm is triggered when it is unable to establish an association to the IP security protocol (IPSP) or signalling gateway (SG).
Recommended Actions	Manual intervention is required.

Association down

Table 103. Association down alarm

Alarm	Association down
Alarm Type	assocDown
Alarm Code	1627
Severity	Critical
Aggregation Policy	From the event code 1627 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1628.
Attribute	"mvsold"="3", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "srcIP"="10.1.4.10", "srcPort"="2960", "destIP"="10.1.4.20", "destPort"="2960"
Displayed on the web interface	SCTP association DOWN. srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This alarm is triggered when the stream control transmission protocol (SCTP) association is down.
Recommended Actions	Manual intervention is required.

Outbound routing failure

Table 104. Outbound routing failure alarm

Alarm	Outbound routing failure
Alarm Type	outboundRoutingFailure
Alarm Code	1636
Severity	Critical
Aggregation Policy	From the event code 1636 an alarm is raised for every 10 events. Alarm is raised for 10 or more events or events occurring within a span of 60 seconds.
Attribute	"mvsold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip", "operation"="updateGprsLocationReq", "hlrInstance"=" Operator_HLR", "ueImsi"=" 04844624203918"
Displayed on the web interface	Unable to route [{operation}] for IMSI [{ueImsi}] to HLR [{hlrInstance}]

Table 104. Outbound routing failure alarm

Description	This alarm is triggered when a transaction capabilities application part (TCAP) message is unable to route to its destination.
Recommended Actions	Manual intervention is required.

Did allocation failure

Table 105. Did allocation failure alarm

Alarm	Did allocation failure
Alarm Type	didAllocationFailure
Alarm Code	1637
Severity	Critical
Aggregation Policy	From the event code 1637 an alarm is raised for every 50 events. Alarm is raised for 50 or more events or events occurring within a span of 60 seconds.
Attribute	"mvnold"="2", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="hip"
Displayed on the web interface	HIP unable to allocate new dialogue
Description	This alarm is triggered when it is unable to allocate a dialogue identifier for a new transaction. This indicates an overload condition.
Recommended Actions	Manual intervention is required.

NOTE: Refer to [Gr Interface Event](#).

IPMI Alarms

NOTE: This section is not applicable for vSZ-H.


Following are the alarms related to IPMIs.

- [ipmiVoltage](#)
- [ipmiThempBB](#)
- [ipmiThempFP](#)
- [ipmiThempIOH](#)
- [ipmiThempMemP](#)
- [ipmiThempPS](#)
- [ipmiThempP](#)
- [ipmiThempHSBP](#)
- [ipmiFan](#)
- [ipmiPower](#)
- [ipmiCurrent](#)
- [ipmiFanStatus](#)
- [ipmiPsStatus](#)
- [ipmiDrvStatus](#)

The controller has redundant six-fan cooling with four 80x38mm fans and two 60x38mm fans. There are four main cooling zones, as shown in [Figure 3](#):

- Zone 1 contains fans 0 and 1, which cool CPU1 and all the components in this zone.
- Zone 2 contains fans 2 and 3, which cool CPU2, low-profile PCI cards, and all the other components in this zone.
- Zone 3 contains fans 4 and 5, which cool full-height/length PCI cards and all the other components in this area.
- Zone 4 is cooled by the power supply fans. This zone contains the SAS RAID and SAS/SATA boards. Cooling redundancy in this zone is only achieved when there are two power supplies installed.

Figure 3. Server Cooling Areas

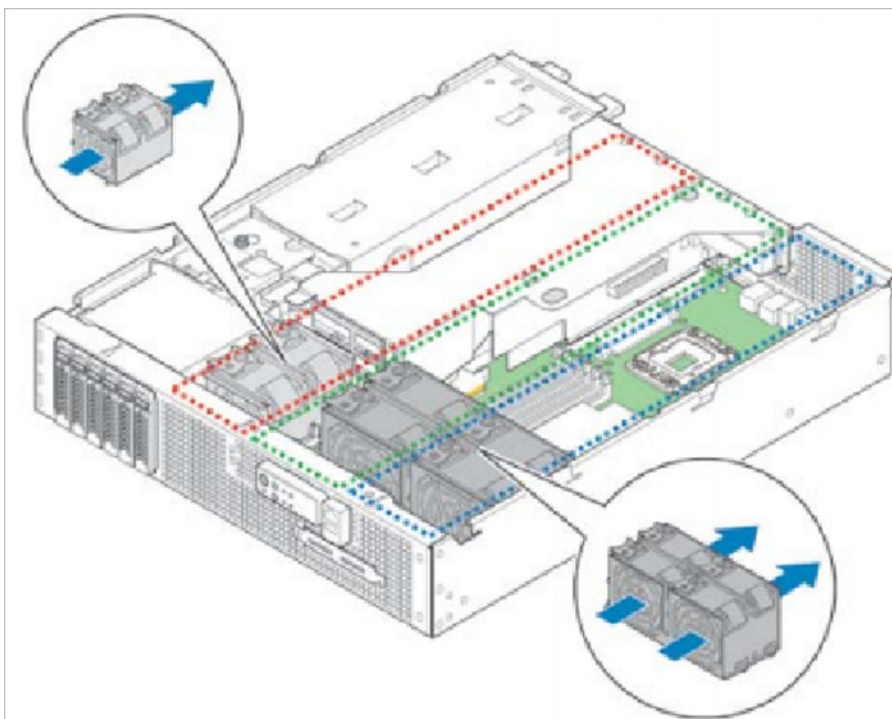

ipmiVoltage

Table 106. ipmiVoltage alarm

Alarm	ipmiVoltage
Alarm Type	ipmiVotage
Alarm Code	901
Severity	Major
Aggregation Policy	From the event code 901 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 926.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}]

Table 106. ipmiVoltage alarm

Description	This alarm is triggered due to under/over voltage on the control plane. Baseboard threshold temperatures are: <ul style="list-style-type: none"> • Critical high - 66⁰ C • Non critical high - 61⁰ C • Non critical low - 10⁰ C • Critical low - 5⁰ C
Recommended Actions	Replace the power supply cord. If it does not work, the motherboard needs replacement.

ipmiThempBB

Table 107. ipmiThempBB alarm

Alarm	ipmiThempBB
Alarm Type	ipmiThempBB
Alarm Code	902
Severity	Major
Aggregation Policy	From the event code 902 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 927.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered due to the increase/decrease of the baseboard temperature status of the control plane. Baseboard threshold temperatures are in the range of 10 ⁰ Celsius to 61 ⁰ Celsius. The default threshold is 61 ⁰ C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

ipmiThempFP

Table 108. ipmiThempFP alarm

Alarm	ipmiThempFP
Alarm Type	ipmiThempFP
Alarm Code	903
Severity	Major
Aggregation Policy	From the event code 903 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 928.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered due to increase/decrease of the front panel temperature status of the control plane. Front panel threshold temperatures are in the range of 5 ⁰ Celsius to 44 ⁰ Celsius. The default threshold is 44 ⁰ C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

ipmiThempIOH

Table 109. ipmiThempIOH alarm

Alarm	ipmiThempIOH
Alarm Type	ipmiThempIOH
Alarm Code	904
Severity	Major
Aggregation Policy	From the event code 904 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 929.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}]

Table 109. ipmiThempIOH alarm

Description	This alarm is triggered when the chip set temperature status on the control plane increases/decreases. IOH thermal margin threshold temperatures are in the range of -20 ⁰ Celsius to 5 ⁰ Celsius. The default threshold is 5 ⁰ C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

ipmiThempMemP

Table 110. ipmiThempMemP alarm

Alarm	ipmiThempMemP
Alarm Type	ipmiThempMemP
Alarm Code	905
Severity	Major
Aggregation Policy	From the event code 905 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 930.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's processor memory shows the status as either an increase/decrease in temperature. Process 1 memory thermal margin threshold temperatures are in the range of -20 ⁰ Celsius to 5 ⁰ Celsius. The default threshold is 5 ⁰ C.
Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.

ipmiThempPS

Table 111. ipmiThempPS alarm

Alarm	ipmiThempPS
Alarm Type	ipmiThempPS
Alarm Code	906
Severity	Major
Aggregation Policy	From the event code 906 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 931.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's power supply shows the status as either an increase/decrease in temperature. Power supply 1 and power supply 2 threshold temperatures are in the range of -20° Celsius to 5° Celsius. The default threshold is 5° C.
Recommended Actions	Replace the power supply cord. If the problem persists, decrease the ambient temperature.

ipmiThempP

Table 112. ipmiThempP alarm

Alarm	ipmiThempP
Alarm Type	ipmiThempP
Alarm Code	907
Severity	Major
Aggregation Policy	From the event code 907 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 932.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when processor temperature on the control plane reaches the threshold value. The default threshold is 11 ⁰ C.
Recommended Actions	Check and replace the CPU fan module if required. Decrease the ambient temperature if the fan module is working.

ipmiThempHSBP

Table 113. ipmiThempHSBP alarm

Alarm	ipmiThempHSBP
Alarm Type	ipmiThempHSBP
Alarm Code	908
Severity	Major
Aggregation Policy	From the event code 908 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 933.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's hot swap backplane shows the status as either an increase/decrease in temperature in the range of 9 ⁰ Celsius to 55 ⁰ Celsius. The default threshold is 55 ⁰ C.

Table 113. ipmiThempHSBP alarm

Recommended Actions	Check the fan module. Decrease the ambient temperature if the fan module is working.
---------------------	--

ipmiFan

Table 114. ipmiFan alarm

Alarm	ipmiFan
Alarm Type	ipmiFan
Alarm Code	909
Severity	Major
Aggregation Policy	From the event code 909 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 934.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's fan module status is shown.
Recommended Actions	Replace the fan module.

ipmiPower

Table 115. ipmiPower alarm

Alarm	ipmiPower
Alarm Type	ipmiPower
Alarm Code	910
Severity	Major
Aggregation Policy	From the event code 910 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 935.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}]

Table 115. ipmiPower alarm

Description	This alarm is triggered when the control plane's power supply status is shown as a low/high input.
Recommended Actions	Replace the power supply cord.

ipmiCurrent

Table 116. ipmiCurrent alarm

Alarm	ipmiCurrent
Alarm Type	ipmiCurrent
Alarm Code	911
Severity	Major
Aggregation Policy	From the event code 911 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 936.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] +12V% of maximum current output [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when power supply and the maximum voltage output shows the status as maximum voltage.
Recommended Actions	Replace the power supply cord. If the problem persists, replace the mother board.

ipmiFanStatus

Table 117. ipmiFanStatus alarm

Alarm	ipmiFanStatus
Alarm Type	ipmiFanStatus
Alarm Code	912
Severity	Major
Aggregation Policy	From the event code 912 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 937.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"

Table 117. ipmiFanStatus alarm

Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's fan module shows the status as not working.
Recommended Actions	Replace the fan module.

ipmiPsStatus

Table 118. ipmiPsStatus alarm

Alarm	ipmiPsStatus
Alarm Type	ipmiPsStatus
Alarm Code	913
Severity	Major
Aggregation Policy	From the event code 913 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 938.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's power supply status is shown as a low/high input.
Recommended Actions	Check the power supply cord. If the problem persists, replace the power supply cord.

ipmiDrvStatus

Table 119. ipmiDrvStatus alarm

Alarm	ipmiDrvStatus
Alarm Type	ipmiDrvStatus
Alarm Code	914
Severity	Major
Aggregation Policy	From the event code 914 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 939.
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}]
Description	This alarm is triggered when the control plane's disk drive status is shown as either not working or corrupted.
Recommended Actions	The operator / user needs to replace the hard disk drive.

NOTE: Refer to [IPMI Events](#).

Licensing Alarms

NOTE: Alarms 1242 and 1243 are not applicable for vSZ-H.

Following are the alarms related to licensing.

- [TTG session critical threshold](#)
- [TTG session license exhausted](#)
- [License going to expire](#)
- [Insufficient license capacity](#)

TTG session critical threshold

Table 120. TTG session critical threshold alarm

Alarm	TTG session critical threshold
Alarm Type	ttgSessionCriticalThreshold
Alarm Code	1242
Severity	Critical
Aggregation Policy	From the event code 1242 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtIp}] have reached critical level.
Description	This alarm is triggered when the number of user equipment attached to the system has reached the critical threshold limit.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

TTG session license exhausted

Table 121. TTG session license exhausted alarm

Alarm	TTG session license exhausted
Alarm Type	ttgSessionLicenseExhausted
Alarm Code	1243
Severity	Critical
Aggregation Policy	From the event code 1243 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed of {produce.short.name} [{SCGMgmtIp}] have been exhausted for all sessions.
Description	This alarm is triggered when the number of user equipment attached to the system has exceeded the license limit.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

License going to expire

Table 122. License going to expire alarm

Alarm	License going to expire
Alarm Type	licenseGoingToExpire
Alarm Code	1255
Severity	Major
Aggregation Policy	From the event code 1255 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xxx", "licenseType"=" xxx"
Displayed on the web interface	The [{licenseType}] on node [{nodeName}] will expire on [{associationTime}]
Description	This alarm is triggered when the validity of the license is going to expire.
Recommended Actions	Check the validity of licenses. You would need to purchase additional licenses if validity expires.

Insufficient license capacity

Table 123. Insufficient license capacity alarm

Alarm	Insufficient license capacity
Alarm Type	apConnectionTerminatedDueToInsufficientLicense
Alarm Code	1256
Severity	Major
Aggregation Policy	From the event code 1256 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"licenseType"=" xxx"
Displayed on the web interface	Insufficient [{licenseType}] license is detected and it will cause existing AP connections to terminate.
Description	This alarm is triggered when connected APs are rejected due to insufficient licenses.
Recommended Actions	Check the number of licenses. You would need to purchase additional licenses due to insufficient number of licenses.

NOTE: Refer to [Licensing Interface Events](#).

PMIPv6 Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to PMIPv6.

- [Config update failed](#)
- [LMA ICMP unreachable](#)
- [LMA failed over](#)
- [DHCP connection lost](#)

Config update failed

Table 124. Config update failed alarm

Alarm	Config update failed
Alarm Type	updateCfgFailed
Alarm Code	5004
Severity	Major
Aggregation Policy	From the event code 5004 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "cause"="reason",
Displayed on the web interface	Failed to apply configuration [{cause}] in PMIPv6 process at {produce.short.name}{{SCGMgmtIp}}
Description	This alarm is logged when the PMIPv6 gets an error or a negative acknowledgment or improper/incomplete information from the D-bus client.
Recommended Actions	Check to ensure that the IP address of the CGF server received from PDNGW/GGSN is configured in the controller web interface > Configurations > Services and Profiles > CGF. Configure the IP address is it is missing.

LMA ICMP unreachable

Table 125. LMA ICMP unreachable alarm

Alarm	LMA ICMP unreachable
Alarm Type	lmaIcmpUnreachable
Alarm Code	5006
Severity	Major
Aggregation Policy	From the event code 5006 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5005.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "lmaIp"="1.1.1.1"
Displayed on the web interface	[[lmaIp]] ICMP unreachable on {produce.short.name} [[SCGMgmtIp]].
Description	This alarm is triggered when the PMIPv6 daemon cannot connect to the LMA server through the internet control message protocol (ICMP) packet.
Recommended Actions	Check the network connectivity between local mobility anchor (LMA) and data plane. Also check the LMA server status from the LMA connectivity page on the controller web interface.

LMA failed over

Table 126. LMA failed over alarm

Alarm	LMA failed over
Alarm Type	lmaFailOver
Alarm Code	5008
Severity	Major
Aggregation Policy	From the event code 5008 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "lmaIp"="1.1.1.1"
Displayed on the web interface	[[lmaIp]] Failover on {produce.short.name} [[ctrlBladeMac]]

Table 126. LMA failed over alarm

Description	This alarm is logged when the standby LMA transits to an active mode. This includes the control plane identifier of the newly active LMA.
Recommended Actions	Check the LMA server status from the LMA connectivity page.

DHCP connection lost

NOTE: This alarm is not applicable for vSZ-H.

Table 127. DHCP connection lost alarm

Alarm	DHCP connection lost
Alarm Type	lostCnrxnToDHCP
Alarm Code	5102
Severity	Major
Aggregation Policy	From the event code 5102 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5101.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2",
Displayed on the web interface	PMIPv6 process cannot connect to DHCP server on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is logged when the transmission control protocol (TCP) connection is lost or when the control plane fails to complete the configuration procedure.
Recommended Actions	Download the PMIPv6d and dynamic host configuration protocol (DHCP) server logs from the controller to check the error cause.

NOTE: Refer to [PMIPv6 Events](#).

SCI Alarms

Following are the events related to SCI (Small Cell Insight).

- [Connect to SCI failure](#)
- [SCI has been disabled](#)
- [SCI and FTP have been disabled](#)

Connect to SCI failure

Table 128. Connect to SCI failure alarm

Alarm	Connect to SCI failure
Alarm Type	connectToSciFailure
Alarm Code	4003
Severity	Major
Aggregation Policy	From the event code xxx an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code xxx.
Displayed on the web interface	Try to connect to SCI with all SCI profiles but failure.
Description	This alarm occurs when the controller tries connecting to SCI with its profiles but fails.
Recommended Actions	

SCI has been disabled

Table 129. SCI has been disabled alarm

Alarm	SCI has been disabled
Alarm Type	disabledSciDueToUpgrade
Alarm Code	4004
Severity	Warning
Aggregation Policy	From the event code xxx an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code xxx.
Displayed on the web interface	SCI has been disabled due to SZ upgrade, please reconfigure SCI if need
Description	This alarm occurs when the SCI is disabled due to the controller upgrade. This could result in reconfiguration of SCI.
Recommended Actions	

SCI and FTP have been disabled

Table 130. SCI and FTP have been disabled alarm

Alarm	SCI and FTP have been disabled
Alarm Type	disabledSciAndFtpDueToMutuallyExclusive
Alarm Code	4005
Severity	Warning
Aggregation Policy	From the event code xxx an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code xxx.
Displayed on the web interface	SCI and FTP have been disabled. It is recommended to enable SCI instead of FTP
Description	This event occurs when the SCI and FTP are disabled.
Recommended Actions	

NOTE: Refer to [SCI Events](#).

Session Alarms

NOTE: This section is not applicable for vSZ-H.

Following is the alarm related to session.

- [Binding failed](#)

Binding failed

Table 131. Binding failed alarm

Alarm	Binding failed
Alarm Type	bindingFailure
Alarm Code	5010
Severity	Major
Aggregation Policy	From the event code 5010 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 5009.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "lmalp"="1.1.1.1", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "dataBladeIp"="3.3.3.3", "ueIpAddr"="5.5.5.5"
Displayed on the web interface	Binding for [{ueMacAddr}] UE binding update failure on {produce.short.name}-D [{dataBladeIp}]. Failure Cause [{cause}].
Description	This alarm is logged when the mobile node binding fails.
Recommended Actions	No action is required.

NOTE: Refer to [Session Events](#).

STA Interface Alarms

NOTE: This section is not applicable for vSZ-H.

Following are the alarms related to STA interface.

- [STA authentication failed transport down](#)
- [STA authentication failed failure response](#)
- [STA authentication failed decode failure](#)
- [STA re-authorization failed](#)
- [STA response timer expired](#)
- [Retransmission exhausted](#)

STA authentication failed transport down

Table 132. STA authentication failed transport down alarm

Alarm	STA authentication failed transport down
Alarm Type	staAuthFailedTransDown
Alarm Code	1551
Severity	Major
Aggregation Policy	From the event code 1551 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold="12", "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with AAA [[aaaSrvrlp]] failed as Transport is down
Description	This alarm is triggered when the authentication procedure with external AAA server failed and the STA interface transport is down.
Recommended Actions	The operator should check the interfaces from the controller to 3rd generation partnership project (3GPP) AAA server. Alternatively, check if the 3GPP AAA server is down.

STA authentication failed failure response

Table 133. STA authentication failed failure response alarm

Alarm	STA authentication failed failure response
Alarm Type	staAuthFailedFailureResp
Alarm Code	1552
Severity	Major
Aggregation Policy	From the event code 1552 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold="12", "srcProcess"="STA", "realm"=" wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345" "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode" ="Decode Failed"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with 3GPP AAA [[aaaSrvrlp]] failed, DEA with failure code [[resultCode]]
Description	This alarm is triggered when the authentication procedure with external AAA server failed. The diameter EAP answer (DEA) received from 3GPP AAA server failed with result code.
Recommended Actions	The operator should check the STA application logs. This could be a temporary failure response from the 3GPP AAA server.

STA authentication failed decode failure

Table 134. STA authentication failed decode failure alarm

Alarm	STA authentication failed decode failure
Alarm Type	staAuthFailedDecodeFailure
Alarm Code	1553
Severity	Major
Aggregation Policy	From the event code 1553 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA" "realm"="wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrIp"="1.1.1.1", "resultCode" ="Decode Failed"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with 3GPP AAA [[aaaSrvrIp]] failed, DEA decode failed
Description	This alarm is triggered when the authentication procedure with external AAA server failed. The DEA received from 3GPP AAA server failed with result code.
Recommended Actions	The operator should check the STA application logs. This could be a temporary failure response from the 3GPP AAA server.

STA re-authorization failed

Table 135. STA re-authorization failed alarm

Alarm	STA re-authorization failed
Alarm Type	staReAuthFailed
Alarm Code	1558
Severity	Major
Aggregation Policy	From the event code 1558 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"="wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrIp"="1.1.1.1"

Table 135. STA re-authorization failed alarm

Displayed on the web interface	[[srcProcess]] Re-Auth of [[ueImsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] from 3GPP AAA [{aaaSrvrlp}] failed
Description	This alarm is triggered when the 3GPP AAA server initiated reauthorization re-auth request (RAR) fails.
Recommended Actions	The operator should check the STA application logs. Also check the version of 3GPP specifications supported by 3GPP AAA server.

STA response timer expired

Table 136. STA response timer expired alarm

Alarm	STA response timer expired
Alarm Type	staResponseTimerExpired
Alarm Code	1559
Severity	Major
Aggregation Policy	From the event code 1559 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold="12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "ueImsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Tx timer expired no response received from 3GPP AAA [[aaaSrvrlp]]
Description	This alarm is triggered when transaction timer expires. There is no response from 3GPP AAA server for the request sent by {produce.short.name}.
Recommended Actions	The operator should check the interfaces from the controller to 3GPP AAA server. Alternatively, check if the 3GPP AAA server is down.

Retransmission exhausted

Table 137. Retransmission exhausted alarm

Alarm	Retransmission exhausted
Alarm Type	retransmitExhausted
Alarm Code	1560
Severity	Major
Aggregation Policy	From the event code 1560 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold="12", "srcProcess"="STA", "realm"=" wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Retransmission for [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] to 3GPP AAA [[aaaSrvrIp]] failed. Retransmission of messages to 3GPP
Description	This alarm is triggered when retransmission to 3GPP AAA server fails and there is no response from 3GPP AAA server.
Recommended Actions	The operator should check the interfaces from the controller to 3GPP AAA server. Alternatively, check if the 3GPP AAA server is down.

NOTE: Refer to [STA Interface Events](#).

System Alarms

Following are the alarms with the system log severity.

NOTE: {produce.short.name} refers to SCG or vSZ-H

- No LS responses
- LS authentication failure
- {produce.short.name} failed to connect to LS
- Syslog server unreachable
- CSV export FTP maximum retry
- CSV export disk threshold exceeded
- CSV export disk max capacity reached
- Process restart
- Service unavailable
- Keepalive failure
- Resource unavailable
- HIP failed over
- Diameter initialization error
- Diameter peer transport failure
- Diameter CER error
- Diameter peer add error
- Diameter peer remove successful
- Diameter realm entry error
- Diameter failover to alternate peer
- Diameter fail back to peer
- Diameter CEA unknown peer
- Diameter no common application
- Process initiated
- PMIPv6 unavailable
- Memory allocation failed

No LS responses

Table 138. No LS responses alarm

Alarm	No LS responses
Alarm Type	scgLBSNoResponse
Alarm Code	721
Severity	Major
Aggregation Policy	From the event code 721 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtIp}] no response from LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the controller does not get a response while connecting to the location based service.
Recommended Actions	Check if location server is working properly.

LS authentication failure

Table 139. LS authentication failure alarm

Alarm	LS authentication failure
Alarm Type	scgLBSAuthFailed
Alarm Code	722
Severity	Major
Aggregation Policy	From the event code 722 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtIp}] authentication failed: url=[{url}], port=[{port}]
Description	This alarm is triggered due to authentication failure when SmartZone tries connecting to the location based service.
Recommended Actions	Check the location server password.

{produce.short.name} failed to connect to LS

Table 140. {produce.short.name} failed to connect to LS alarm

Alarm	{produce.short.name} failed to connect to LS
Alarm Type	scgLBSConnectFailed
Alarm Code	724
Severity	Major
Aggregation Policy	From the event code 724 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 723.
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the SmartZone web interface	{produce.short.name} [{SCGMgmtIp}] connection failed to LS: url=[{url}], port=[{port}]
Description	This alarm is triggered when the controller fails to connect to the location based service.
Recommended Actions	Check the location service configuration. Also check the network connectivity between the controller and location server.

Syslog server unreachable

Table 141. Syslog server unreachable alarm

Alarm	Syslog server unreachable
Alarm Type	syslogServerUnreachable
Alarm Code	751
Severity	Major
Aggregation Policy	From the event code 751 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm is auto cleared with the event code 750.
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "syslogServerAddress"="xxx.xxx.xxx.xxx"
Displayed on the SmartZone web interface	Syslog server [{syslogServerAddress}] is unreachable on {produce.short.name}.
Description	This alarm is triggered when the syslog server is unreachable.

Table 141. Syslog server unreachable alarm

Recommended Actions	Check the network between the controller and the syslog server.
---------------------	---

CSV export FTP maximum retry

Table 142. CSV export FTP maximum retry alarm

Alarm	CSV export FTP maximum retry
Alarm Type	csvFtpTransferMaxRetryReached
Alarm Code	974
Severity	Major
Aggregation Policy	From the event code 974 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx", "portID"="xx:xx:xx:xx:xx:xx", "filename"="xxx.xxx.xxxx.xxx"
Displayed on the SmartZone web interface	
Description	This alarm is triggered when CSV file fails to transfer after a maximum of five (5) retries.

CSV export disk threshold exceeded

Table 143. CSV export disk threshold exceeded alarm

Alarm	CSV export disk threshold exceeded
Alarm Type	csvDiskThresholdExceeded
Alarm Code	975
Severity	Warning
Aggregation Policy	From the event code 975 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "threshold"="xx:xx:xx:xx:xx:xx", "availableDiskSize"="xx:xx:xx:xx:xx:xx",
Displayed on the SmartZone web interface	
Description	This alarm is triggered when the CSV report size exceeds 80% of its capacity.
Recommended Actions	

CSV export disk max capacity reached

Table 144. CSV export disk max capacity reached alarm

Alarm	CSV export disk max capacity reached
Alarm Type	csvDiskMaxCapacityReached
Alarm Code	976
Severity	Critical
Aggregation Policy	From the event code 976 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "allocatedDiskSize"="xx:xx:xx:xx:xx:xx",
Displayed on the SmartZone web interface	
Description	This alarm is triggered when the CSV report size reaches its maximum capacity.
Recommended Actions	

Process restart

Table 145. Process restart alarm

Alarm	Process restart
Alarm Type	processRestart
Alarm Code	1001
Severity	Major
Aggregation Policy	From the event code 1001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	{{processName}} process got re-started on {produce.short.name} {{SCGMgmtIp}}
Description	This alarm is triggered when any process crashes and restarts.
Recommended Actions	Download the process log file from the controller web interface to understand the cause of the error.

Service unavailable

Table 146. Service unavailable alarm

Alarm	Service unavailable
Alarm Type	serviceUnavailable
Alarm Code	1002
Severity	Critical
Aggregation Policy	From the event code 1002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	{{processName}} process is not stable on {produce.short.name} {{SCGMgmtIp}}
Description	This alarm is triggered when the process repeatedly restarts and is unstable.
Recommended Actions	A manual intervention is required. Download the process log file from the controller web interface to find the cause of the error.

Keepalive failure

Table 147. Keepalive failure alarm

Alarm	Keepalive failure
Alarm Type	keepAliveFailure
Alarm Code	1003
Severity	Major
Aggregation Policy	From the event code 1003 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] on {produce.short.name} [[SCGMgmtIp]] restarted [[processName]] process
Description	This alarm is triggered when the <i>mon/nc</i> restarts the process due to a keep alive failure.
Recommended Actions	Download the process log file from the controller web interface to locate the cause of the error.

Resource unavailable

Table 148. Resource unavailable alarm

Alarm	Resource unavailable
Alarm Type	resourceUnavailable
Alarm Code	1006
Severity	Critical
Aggregation Policy	From the event code 1006 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="NA", "SCGMgmtIp"="3.3.3.3", "cause"="xx"
Displayed on the web interface	System resource [[cause]] not available in [[srcProcess]] process at {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is generated due to unavailability of any other system resource, such as memcached.

Table 148. Resource unavailable alarm

Recommended Actions	A manual intervention is required. Check the memcached process. Also check if the <i>br1</i> interface is running.
---------------------	--

HIP failed over

NOTE: This alarm is not applicable for vSZ-H.

Table 149. HIP failed over alarm

Alarm	HIP failed over
Alarm Type	hipFailover
Alarm Code	1016
Severity	Major
Aggregation Policy	Alarm is raised for every event from event code 1016. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102"
Displayed on the web interface	[[srcProcess]] Node transitioned to Active on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is logged when the standby host identity protocol (HIP) transits to an active node and is included in control plane identifier of the newly active HIP.
Recommended Actions	A manual intervention is required.

The last one data plane is disconnected zone affinity profile

Table 150. The last one data plane is disconnected zone affinity profile alarm

Alarm	The last one data plane is disconnected zone affinity profile
Alarm Type	zoneAffinityLastDpDisconnected
Alarm Code	1267
Severity	Informational
Aggregation Policy	Alarm is raised for every event from event code 1267. A single event triggers a single alarm.
Attribute	"dpName="xxxxxxx", "dpKey"="xx:xx:xx:xx:xx", "zoneAffinityProfileId"="xxxxxxx"
Displayed on the web interface	The Last one Data Plane[{dpName&&dpKey}] is disconnected Zone Affinity profile[{zoneAffinityProfileId}] .
Description	This alarm is logged when the last data plane is disconnected from the zone affinity.
Recommended Actions	

Diameter initialization error

NOTE: This alarm is not applicable for vSZ-H.

Table 151. Diameter initialization error alarm

Alarm	Diameter initialization error
Alarm Type	dialnitilizeErr
Alarm Code	1401
Severity	Critical
Aggregation Policy	An alarm is raised for every 2events within a duration of 30 minutes.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "desc" = "Diameter Stack Initialization Failure on {produce.short.name}"
Displayed on the web interface	[[srcProcess]] Diameter Stack Initialization Failure on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered due to stack initialization failure.
Recommended Actions	Check the network interface settings and port settings. The port could be in use by another application.

Diameter peer transport failure

NOTE: This alarm is not applicable for vSZ-H.

Table 152. Diameter peer transport failure alarm

Alarm	Diameter peer transport failure
Alarm Type	diaPeerTransportFailure
Alarm Code	1403
Severity	Major
Aggregation Policy	A single event triggers a single alarm.

Table 152. Diameter peer transport failure alarm

Attribute	<pre> “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff” “mvnold”=12 “srcProcess”=“<Application Name>” “realm”=“ruckus.com” “originHost” = “Node1” “SCGMgmtIp”=“2.2.2.2” “peerIp” = “3.3.3.3” “peerName” = “OCS1” “peerRealmName” = “organization.com” “desc” = “Failed to read from peer socket” </pre>
Displayed on the web interface	[[srcProcess]] Failed to read from peer [[peerName]] Transport Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the diameter stack fails to read from the peer socket and the peer transport is down.
Recommended Actions	Check if the transport is up for the peer. Peer application may not be running.

Diameter CER error

NOTE: This alarm is not applicable for vSZ-H.

Table 153. Diameter CER error alarm

Alarm	Diameter CER error
Alarm Type	diaCERError
Alarm Code	1404
Severity	Critical
Aggregation Policy	A single event triggers a single alarm.
Attribute	<pre> “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff” “mvnold”=12 “srcProcess”=“<Application Name>” “realm”=“ruckus.com” “originHost” = “Node1” “SCGMgmtIp”=“2.2.2.2” “peerIp” = “3.3.3.3” “peerName” = “OCS1” “peerRealmName” = “organization.com” “desc” = “Failed to read from peer socket” </pre>
Displayed on the web interface	[[srcProcess]] Failed to decode CER from Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the diameter stack fails to decode the capabilities exchange request (CER) received from peer.
Recommended Actions	Check if the transport is up for the peer. Peer application may not be running.

Diameter peer add error

NOTE: This alarm is not applicable for vSZ-H.

Table 154. Diameter peer add error alarm

Alarm	Diameter peer add error
Alarm Type	diaPeerAddError
Alarm Code	1407
Severity	Critical
Aggregation Policy	A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerIp" = "3.3.3.3" "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc" = "Failed to add Peer" "cause"="Cause Value"
Displayed on the web interface	[[srcProcess]] Failed to add Peer [[peerName]], Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the diameter stack fails to add a peer to the peer table.
Recommended Actions	Check if the peer IP address is reachable and if the peer responds to the configured port.

Diameter peer remove successful

NOTE: This alarm is not applicable for vSZ-H.

Table 155. Diameter peer remove successful alarm

Alarm	Diameter peer remove successful
Alarm Type	diaPeerRemoveSuccess
Alarm Code	1409
Severity	Major
Aggregation Policy	A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerIp" = "3.3.3.3" "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc" = "Peer removal success"
Displayed on the web interface	[[srcProcess]] Peer [[peerName]] Realm [[peerRealmName]] removal is successful on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the peer is removed successfully from the table. The remote peer sends a diameter disconnect peer request (DPR) with the cause of not wanting to talk.
Recommended Actions	Ensure that the peer removal is intentional. It is also removed when the peer sends a cause message.

Diameter realm entry error

NOTE: This alarm is not applicable for vSZ-H.

Table 156. Diameter realm entry error alarm

Alarm	Diameter realm entry error
Alarm Type	diaRealmEntryErr
Alarm Code	1410
Severity	Major
Aggregation Policy	A single event triggers a single alarm.

Table 156. Diameter realm entry error alarm

Attribute	<pre> “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff” “mvnold”=12 “srcProcess”=“<Application Name>” “realm”=“ruckus.com” “originHost” = “Node1” “SCGMgmtIp”=“2.2.2.2” “peerRealmName” = “organization.com” “peerName” = “OCS1” “desc” = “Failed to add route for Realm” </pre>
Displayed on the web interface	<pre> [{{srcProcess}}] Failed to add route for Realm [{{peerRealmName}}] on {produce.short.name} [{{SCGMgmtIp}}] </pre>
Description	This alarm is triggered due to realm route entry add error. This may arise when the realm entry exists and another realm entry is added. Creating two diameter services with same realm name causes this problem.
Recommended Actions	Ensure that peer supports the application for the given realm and is up and running.

Diameter failover to alternate peer

NOTE: This alarm is not applicable for vSZ-H.

Table 157. Diameter failover to alternate peer alarm

Alarm	Diameter failover to alternate peer
Alarm Type	diaFailOverToAltPeer
Alarm Code	1411
Severity	Major
Aggregation Policy	A single event triggers a single alarm.
Attribute	<pre> “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff” “mvnold”=12 “srcProcess”=“<Application Name>” “realm”=“ruckus.com” “originHost” = “Node1” “SCGMgmtIp”=“2.2.2.2” “peerName”=“OCS1” “peerRealmName” = “organization.com” “altPeerName” = “OCS2” “altPeerRealmName” = “india.internal.net” “desc” = “Fwd to alt peer” </pre>
Displayed on the web interface	<pre> [{{srcProcess}}] Fwd from Peer [{{peerName}}] to AltPeer [{{altPeerName}}] Realm [{{peerRealmName}}] on {produce.short.name} [{{SCGMgmtIp}}] </pre>
Description	This alarm is triggered due to retransmission to an alternate peer.

Table 157. Diameter failover to alternate peer alarm

Recommended Actions	Verify that the failover has occurred to the alternate peer and the request is processed by the same peer. Also verify if the primary peer is having a problem or is not reachable.
---------------------	---

Diameter fail back to peer

NOTE: This alarm is not applicable for vSZ-H.

Table 158. Diameter fail back to peer alarm

Alarm	Diameter fail back to peer
Alarm Type	diaFailbackToPeer
Alarm Code	1412
Severity	Major
Aggregation Policy	A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerName"="ÖCS1" "peerRealmName" = "organization.com" "altPeerName" = "OCS2" "altPeerRealmName" = "india.internal.net" "desc" = "Failback to main peer"
Displayed on the web interface	[[srcProcess]] Failback to Main Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered due to retransmission to the main peer in case of a failover.
Recommended Actions	Verify that the primary peer is restored and the request is processed by the primary peer.

Diameter CEA unknown peer

NOTE: This alarm is not applicable for vSZ-H.

Table 159. Diameter CEA unknown peer alarm

Alarm	Diameter CEA unknown peer
Alarm Type	diaCEAUnknownPeer
Alarm Code	1414
Severity	Critical
Aggregation Policy	A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="SessMgr" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerName"=ÖCS8 "peerRealmName" = "organization.com" "desc" = "CEA received from Unknown peer"
Displayed on the web interface	[[srcProcess]] CEA received from Unknown Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the capabilities exchange answer (CEA) is received from an unknown peer.
Recommended Actions	Verify that the origin host received from capabilities exchange answer (CEA) is not in the remote service configuration.

Diameter no common application

NOTE: This alarm is not applicable for vSZ-H.

Table 160. Diameter no common application alarm

Alarm	Diameter no common application
Alarm Type	diaNoCommonApp
Alarm Code	1415
Severity	Critical
Aggregation Policy	A single event triggers a single alarm.

Table 160. Diameter no common application alarm

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerName"=ÖCS1 "peerRealmName" = "organization.com""desc" = "No common App with peer"
Displayed on the web interface	[[srcProcess]] No common App with Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is triggered when the common application is not with the peer.
Recommended Actions	Verify that the peer is in the remote service configuration and is sending the capability negotiation message that the authentication application identifier is not compliant to the remote service.

Process initiated

NOTE: This alarm is not applicable for vSZ-H.

Table 161. Process initiated alarm

Alarm	Process initiated
Alarm Type	processInit
Alarm Code	5001
Severity	Major
Aggregation Policy	From the event code 5001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process got re-started on {produce.short.name} [[SCGMgmtIp]]
Description	This alarm is logged when PMIPv6 process restarts.
Recommended Actions	A manual intervention is required. Download the PMIPv6d log file from the controller to check the cause of error.

PMIPv6 unavailable

NOTE: This alarm is not applicable for vSZ-H.

Table 162. PMIPv6 unavailable alarm

Alarm	PMIPv6 unavailable
Alarm Type	pmipUnavailable
Alarm Code	5002
Severity	Critical
Aggregation Policy	From the event code 5002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process is not stable on {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is logged when the PMIPv6 process repeatedly restarts and is not stable.
Recommended Actions	Check the PMIPv6d application log and status from the controller web interface.

Memory allocation failed

NOTE: This alarm is not applicable for vSZ-H.

Table 163. Memory allocation failed alarm

Alarm	Memory allocation failed
Alarm Type	unallocatedMemory
Alarm Code	5003
Severity	Critical
Aggregation Policy	From the event code 5003 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Insufficient Heap Memory in PMIPv6 process at {produce.short.name} [{SCGMgmtIp}]
Description	This alarm is logged when the memory allocation fails in the PMIPv6 process.
Recommended Actions	Check the PMIPv6d application log and status from the controller web interface.

NOTE: Refer to [System Alarms](#).

Threshold Alarms

Following are the alarms related to threshold system set.

- [CPU threshold exceeded](#)
- [Memory threshold exceeded](#)
- [Disk usage threshold exceeded](#)
- [License threshold exceeded](#)
- [Rate limit for TOR surpassed](#)
- [The number of users exceeded its limit](#)
- [The number of devices exceeded its limit](#)

CPU threshold exceeded

Table 164. CPU threshold exceeded alarm

Alarm	CPU threshold exceeded
Alarm Type	cpuThresholdExceeded
Alarm Code	950
Severity	Critical
Aggregation Policy	From the event code 950 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 953.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This event occurs when the CPU usage exceeds the threshold limit of 80%.
Recommended Actions	Check CPU/memory/disk information for any unexpected value. Keep monitoring the CPU for higher values than the threshold or set it to only one peak value. If the CPU value is high, please take a snapshot log, containing the information and send it to Ruckus Wireless support. Alternatively, if an application is abnormal, restart the service or restart the controller. This may resolve the issue.

Memory threshold exceeded

Table 165. Memory threshold exceeded alarm

Alarm	Memory threshold exceeded
Alarm Type	memoryThresholdExceeded
Alarm Code	951
Severity	Critical
Aggregation Policy	From the event code 951 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 954.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This alarm is triggered when the memory usage exceeds the threshold limit. The memory threshold value is 85% for SCG and 90% for vSZ-H.
Recommended Actions	Check CPU/memory/disk information for any unexpected value. Keep monitoring the CPU for higher values than the threshold or set it to only one peak value. If the CPU value is high, please take a snapshot log, containing the information and send it to Ruckus Wireless support. Alternatively, if an application is abnormal, restart the service or restart the controller. This may resolve the issue.

Disk usage threshold exceeded

Table 166. Disk usage threshold exceeded alarm

Alarm	Disk usage threshold exceeded
Alarm Type	diskUsageThresholdExceeded
Alarm Code	952
Severity	Critical
Aggregation Policy	From the event code 952 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 955.
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"

Table 166. Disk usage threshold exceeded alarm

Displayed on the web interface	Disk usage threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This alarm is triggered when the disk usage exceeds the threshold limit. The disk threshold value is 80%.
Recommended Actions	Check the backup files for disk usage. Each backup file may occupy a large disk space based on the database size. If there are multiple backup files/versions in the controller, it is recommended to delete the older backup files to free disk usage. If the problem persists, please take a screen shot and send it to Ruckus Wireless support.

License threshold exceeded

Table 167. License threshold exceeded alarm

Alarm	License threshold exceeded
Alarm Type	licenseThresholdExceeded
Alarm Code	960
Severity	Critical 90% Major 80%
Aggregation Policy	From the event code 960 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	"perc"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "nodeName"="box1", "licenseType"="SG00"
Displayed on the web interface	[{licenseType}] limit reached at [{perc}%].
Description	This alarm is triggered when maximum number of licenses is utilized.
Recommended Actions	Check the license purchase and usage numbers. Alternatively, you would need to buy new licenses.

Rate limit for TOR surpassed

Table 168. Rate limit for TOR surpassed alarm

Alarm	Rate limit for TOR surpassed
Alarm Type	rateLimitTORSurpassed
Alarm Code	1302
Severity	Critical
Aggregation Policy	From the event code 1302 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 1301.
Attributef	"mvsold"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "UserName"=abc@xyz.com, "realm"="wlan.3gppnetwor" "SCGMgmtIp"="2.2.2.2", "aaaSvrIp"="1.1.1.1" "AAAServerType"="Auth/Acct", "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000, "THRESHOLD"="500", "TOR"="501"
Displayed on the web interface	Maximum Outstanding Requests (MOR) surpassed for AAA Server [{aaaSvrIp}] and ServerType [{AAAServerType}]. Dropping requests to be proxied to AAA.
Description	This alarm is triggered when maximum outstanding requests (MOR) is surpassed.
Recommended Actions	Download the SM log file from the controller web interface to check the error cause.

The number of users exceeded its limit

Table 169. The number of users exceeded its limit

Alarm	The number of users exceeded its limit
Alarm Type	tooManyUsers
Alarm Code	7003
Severity	Major
Aggregation Policy	From the event code 7001 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	No attributes for this alarm.

Table 169. The number of users exceeded its limit

Displayed on the web interface	The number of users exceed the specified limit.
Description	This alarm is triggered when the number of users exceeds the specified limit.
Recommended Actions	No action is required.

The number of devices exceeded its limit

Table 170. The number of devices exceeded its limit alarm

Alarm	The number of devices exceeded its limit
Alarm Type	tooManyDevices
Alarm Code	7004
Severity	Major
Aggregation Policy	From the event code 7002 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	No attributes for this alarm.
Displayed on the web interface	The number of devices exceeded the limit.
Description	This alarm is triggered the number of devices exceeds the specified limit.
Recommended Actions	No action is required.

NOTE: Refer to [Threshold Events](#).

Tunnel Alarms - Access Point

Following are the alarms related to tunnel.

- [AP softGRE gateway not reachable](#)
- [AP is disconnected from secure gateway](#)
- [AP secure gateway association failure](#)

AP softGRE gateway not reachable

Table 171. AP softGRE gateway not reachable alarm

Alarm	AP softGRE gateway not reachable
Alarm Type	apSoftGREGatewayNotReachable
Alarm Code	614
Severity	Critical
Aggregation Policy	From the event code 614 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 613.
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "softGREGatewayList"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] is unable to reach the following gateways: [{softGREGatewayList}]
Description	The AP fails to connect to the soft-GRE gateway.
Recommended Actions	Check the primary and secondary soft-GRE gateway.

AP is disconnected from secure gateway

Table 172. AP is disconnected from secure gateway alarm

Alarm	AP is disconnected from secure gateway
Alarm Type	ipsecTunnelDisassociated
Alarm Code	661
Severity	Major
Aggregation Policy	From the event code 661 an alarm is raised for every event. A single event triggers a single alarm.
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{{apName&&apMac}}] is disconnected from secure gateway [{{ipsecGWAddress}}].
Description	This alarm is triggered when the AP is disconnected from secure gateway.
Recommended Actions	No action required.

AP secure gateway association failure

Table 173. AP secure gateway association failure alarm

Alarm	AP secure gateway association failure
Alarm Type	ipsecTunnelAssociateFailed
Alarm Code	662
Severity	Major
Aggregation Policy	From the event code 662 an alarm is raised for every event. A single event triggers a single alarm.
Auto Clearance	The alarm code is auto cleared with the event code 660
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] is unable to establish secure gateway with [{ipsecGWAddress}]
Description	This alarm is triggered when the AP is unable to connect to the secure gateway.
Recommended Actions	No action required.

NOTE: Refer to [Tunnel Events - Access Point \(AP\)](#).

This chapter provides information on the following types of events that the controller generates:

- 3rd Party Access Point Events
- Accounting Events
- AP Authentication Events
- AP Communication Events
- AP LBS Events
- AP Mesh Events
- AP State Change Events
- AP USB Events
- Authentication Events
- Authorization Events
- Control and Data Plane Interface
- Client Events
- Cluster Events
- Configuration Events
- Data Plane Events
- DHCP Events
- GA Interface Events
- Gn/S2a Interface Events
- Gr Interface Event
- IPMI Events
- Licensing Interface Events
- Location Delivery Events
- PMIPv6 Events
- SCI Events
- Session Events
- STA Interface Events
- System Events
- Threshold Events
- Tunnel Events - Access Point (AP)
- Tunnel Events - Data Plane

3rd Party Access Point Events

NOTE: This event is not applicable for vSZ-H.

Following event is related to 3rd party access points.

- [3rd party AP connected](#)

3rd party AP connected

Table 174. 3rdparty AP connected event

Event	3rd party AP connected
Event Type	3rdPartyAPConnected
Event Code	1801
Severity	Debug
Attribute	"mvsold"=12,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtIp"="2.2.2.2" "apMac"="aa:bb:cc:dd:ee:aa" "apIpAddress"="10.1.4.11" "srcProcess"="radius"
Displayed on the web interface	3rd Party AP with Ip [{apIpAddress}] and MAC [{apMac}] is connected to Control plane [{ctrlBladeMac}] in zone [{zoneName}]
Description	This event occurs when a non-Ruckus AP connects to the controller.

Accounting Events

NOTE: This event is not applicable for vSZ-H.

Following events are related to accounting.

- [Accounting session started](#)
- [Accounting session start failed](#)
- [Accounting session disabled](#)
- [Accounting session stopped successfully](#)
- [Accounting session stopped failed](#)
- [Accounting session interim failed](#)
- [Accounting server not reachable](#)
- [Accounting failed over to secondary](#)
- [Accounting fallback to primary](#)
- [AP accounting message mandatory parameter missing](#)
- [Unknown realm](#)
- [AP accounting message decode failed](#)
- [AP accounting retransmission message dropped](#)
- [AP accounting response while invalid config](#)
- [AP account message drop while no accounting start message](#)
- [Unauthorized COA/DM message dropped](#)

Accounting session started

NOTE: This event is not applicable for vSZ-H.

Table 175. Accounting session started event

Event	Accounting session started
Event Type	accSessStarted
Event Code	1232
Severity	Debug

Table 175. Accounting session started event

Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	Accounting session started for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the accounting session starts. It is applicable for tunnel termination gateway (TTG) or packet data gateway (PDG) provided accounting process is enabled for the session.

Accounting session start failed

NOTE: This event is not applicable for vSZ-H.

Table 176. Accounting session start failed event

Event	Accounting session start failed
Event Type	accSessStartFailed
Event Code	1233
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787" "cause"="<reason for failure>"
Displayed on the web interface	Accounting session could not be started for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because [{cause}]
Description	This event occurs when the accounting session fails to start. This event is applicable for TTG/PDG provided accounting process is enabled for the session.

Accounting session disabled

NOTE: This event is not applicable for vSZ-H.

Table 177. Accounting session disabled event

Event	Accounting session disabled
Event Type	accSessDisabled
Event Code	1234
Severity	Debug
Attribute	"mvmold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Accounting session disabled for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the accounting is disabled for the session.

Accounting session stopped successfully

NOTE: This event is not applicable for vSZ-H.

Table 178. Accounting session stopped successfully event

Event	Accounting session stopped successfully
Event Type	accSessStopSucc
Event Code	1246
Severity	Debug
Attribute	"mvmold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345","ueMsisdn"="98787"
Displayed on the web interface	Accounting session stopped for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}].

Table 178. Accounting session stopped successfully event

Description	This event occurs when the accounting session stops. This event is applicable for TTG/PDG provided accounting process is enabled for the session.
-------------	---

Accounting session stopped failed

NOTE: This event is not applicable for vSZ-H.

Table 179. Accounting session stopped failed event

Event	Accounting session stopped failed
Event Type	accSessStopFail
Event Code	1247
Severity	Debug
Attribute	"mVnold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueLmsi"="12345", "ueMsisdn"="98787" "cause"="<reason for failure>"
Displayed on the web interface	No Response received or Error Stopping accounting session for UE with IMSI [{ueLmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because [{cause}]. Accounting session locally cleared
Description	This event occurs when the controller does not receive a response or receives an error response for accounting stop. This event is applicable for TTG/PDG provided accounting process is enabled for the session.

Accounting session interim failed

NOTE: This event is not applicable for vSZ-H.

Table 180. Accounting session interim failed event

Event	Accounting session interim failed
Event Type	accSessInterimFail
Event Code	1248

Table 180. Accounting session interim failed event

Severity	Debug
Attribute	"mvmold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "cause"="<reason for failure>"
Displayed on the web interface	No Response received or Error response received for accounting interim request for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because [{cause}]
Description	This event occurs when the controller receives an error response for the accounting interim request. This event is applicable for TTG/PDG provided accounting process is enabled for the session.

Accounting server not reachable

NOTE: This event is not applicable for vSZ-H.

Table 181. Accounting server not reachable event

Event	Accounting server not reachable
Event Type	accSrvrNotReachable
Event Code	1602
Severity	Major
Attribute	"mvmold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="wlan.3gppnetwork.org", "radProxyIp"="7.7.7.7", "accSrvrIp"="30.30.30.30", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Accounting Server [{accSrvrIp}] not reachable from Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the controller is unable to connect to either the primary or secondary accounting server.

Accounting failed over to secondary

NOTE: This event is not applicable for vSZ-H.

Table 182. Accounting failed over to secondary event

Event	Accounting failed over to secondary
Event Type	accFailedOverToSecondary
Event Code	1653
Severity	Major
Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the secondary accounting RADIUS server is available after the primary server becomes zombie or dead.

Accounting fallback to primary

NOTE: This event is not applicable for vSZ-H.

Table 183. Accounting fallback to primary event

Event	Accounting fallback to primary
Event Type	accFallbackToPrimary
Event Code	1654
Severity	Major
Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"

Table 183. Accounting fallback to primary event

Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the automatic fallback is enabled. The accounting failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.

AP accounting message mandatory parameter missing

NOTE: This event is not applicable for vSZ-H.

Table 184. AP accounting message mandatory parameter missing event

Event	AP accounting message mandatory parameter missing
Event Type	apAcctMsgMandatoryPrmMissing
Event Code	1901
Severity	Critical
Attribute	"mvsold"="12", "wlanId"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "userName" = "hello@world.com", "SCGMgmtIp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueMsisdn"="98787", "apIpAddress"="10.1.4.11"
Displayed on the web interface	[[srcProcess]] Mandatory attribute missing in Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [{SCGMgmtIp}], with username [{userName}]
Description	This event occurs when the controller fails to the find the mandatory parameter in the RADIUS accounting message received from the AP. This is a mandatory parameter for generating the W-AN-CDR.

Unknown realm

NOTE: This event is not applicable for vSZ-H.

Table 185. Unknown realm event

Event	Unknown realm
Event Type	unknownRealmAccounting
Event Code	1902
Severity	Debug
Attribute	"mvmold"="12", "wlanId"="1", "zoneId"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "userName"="acb@xyz.com", "SCGMgmtIp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueMsisdn"="98787", "apIpAddress"="10.1.4.11"
Displayed on the web interface	[[srcProcess]] Failed to find realm for Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]
Description	This event occurs when the controller fails to find realm configuration for the accounting messages received from the AP.

AP accounting message decode failed

NOTE: This event is not applicable for vSZ-H.

Table 186. AP accounting message decode failed event

Event	AP accounting message decode failed
Event Type	apAcctMsgDecodeFailed
Event Code	1904
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "SCGMgmtIp"="2.2.2.2", "apIpAddress"="10.1.4.11"
Displayed on the web interface	[[srcProcess]] Malformed Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]

Table 186. AP accounting message decode failed event

Description	This event occurs when the AP accounting message decode fails due to receipt of a malformed packet.
-------------	---

AP accounting retransmission message dropped

NOTE: This event is not applicable for vSZ-H.

Table 187. AP accounting retransmission message dropped event

Event	AP accounting retransmission message dropped
Event Type	apAcctRetransmittedMsgDropped
Event Code	1908
Severity	Debug
Attribute	mvnold="12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii", "ueImsi"="12345", "ueMsisdn"="98787" "apIpAddress"="10.1.4.11"
Displayed on the web interface	{{srcProcess}} Accounting message from AP {{apIpAddress}} on {produce.short.name} {{SCGMgmtIp}} dropped, {produce.short.name} did not receive Accounting start message.
Description	This event occurs when the retransmitted accounting message is dropped while the call detail record is generated and the transfer to charging gateway function server is in progress.

AP accounting response while invalid config

Table 188. AP accounting response while invalid config event

Event	AP accounting response while invalid config
Event Type	apAcctRespWhileInvalidConfig
Event Code	1909
Severity	Debug

Table 188. AP accounting response while invalid config event

Attribute	mvnold="12 "wlanId"=1,"zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut" "realm"="wlan.3gppnetwork.org", "userName"="abc@xyz.com", "SCGMgmtIp"="2.2.2.2","apIpAddress"="10.1.4.11"
Displayed on the web interface	[[srcProcess]] sending dummy response for Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]. Configuration is incorrect in {produce.short.name} to forward received message nor to generate CDR
Description	This event occurs when the controller sends a dummy response to the AP accounting message since the configuration in the controller is incorrect. The event could either occur when forwarding received messages or when generating call detail records.

AP account message drop while no accounting start message

Table 189. AP account message drop while no accounting start message event

Event	AP account message drop while no accounting start message
Event Type	apAcctMsgDropNoAcctStartMsg
Event Code	1910
Severity	Critical
Attribute	mvnold="12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org", "userName"="abc@xyz.com", "SCGMgmtIp"="2.2.2.2", "apIpAddress"="10.1.4.11"
Displayed on the web interface	[[srcProcess]] Dropped Accounting Packet received from AP [[apIpAddress]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]. Accounting session timer expired, stop or interim message not received, as Account Start not received from NAS/AP
Description	This event occurs when the accounting session timer expires. Stop or interim messages are not received since the account start is not received from the network access server (NAS) or access point (AP).

Unauthorized COA/DM message dropped

Table 190. Unauthorized COA/DM message dropped event

Event	Unauthorized COA/DM message dropped
Event Type	unauthorizedCoaDmMessageDropped
Event Code	1911
Severity	Critical
Attribute	mvnold="12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "userName"="abc@xyz.com", "radSvrIp"="7.7.7.7","SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Dropped CoA/DM Packet received from AAA [[radSvrIp]] on {produce.short.name} [[SCGMgmtIp]], with username [[userName]]. Received message from unauthorized AAA
Description	This event occurs when the controller receives a change of authorization (CoA) or dynamic multipoint (DM) messages from an unauthorized AAA server.

NOTE: Refer to [Accounting Alarms](#).

AP Authentication Events

Following are the events related to authentication.

- [Radius server reachable](#)
- [Radius server unreachable](#)
- [LDAP server reachable](#)
- [LDAP server unreachable](#)
- [AD server reachable](#)
- [AD server unreachable](#)
- [Wechat ESP authentication server reachable](#)
- [WeChat ESP authentication server unreachable](#)
- [WeChat ESP authentication server resolvable](#)
- [WeChat ESP authentication server unresolvable](#)
- [WeChat ESP DNAT server reachable](#)
- [WeChat ESP DNAT server unreachable](#)
- [WeChat ESP DNAT server resolvable](#)
- [WeChat ESP DNAT server unresolvable](#)

Radius server reachable

Table 191. Radius server reachable event

Event	Radius server reachable
Event Type	radiusServerReachable
Event Code	2101
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx:xx","ip"="17.0.0.12","fwVersion"="3.2.0.0.x","model"="ZF7982","zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3","zoneName"="Default Zone","apLocation"=""
Displayed on the web interface	AP [{apName&&apMac}] is able to reach radius server [{ip}] successfully.
Description	This event occurs when the AP is able to reach the radius server successfully.

Radius server unreachable

Table 192. Radius server unreachable event

Event	Radius server unreachable
Event Type	radiusServerUnreachable
Event Code	2102
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach radius server [{ip]}.
Description	This event occurs when the AP is unable to reach the radius server.
Auto Clearance	This event triggers the alarm 2102, which is auto cleared by the event code 2101

LDAP server reachable

Table 193. LDAP server reachable event

Event	LDAP server reachable
Event Type	ldapServerReachable
Event Code	2121
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is able to reach LDAP server [{ip]} successfully.
Description	This event occurs when AP is able to reach the lightweight directory access protocol (LDAP) server successfully.

LDAP server unreachable

Table 194. LDAP server unreachable event

Event	LDAP server unreachable
Event Type	ldapServerUnreachable
Event Code	2122
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac] is unable to reach LDAP server [{ip]}.
Description	This event occurs when AP is unable to reach the LDAP server.
Auto Clearance	This event triggers the alarm 2122, which is auto cleared by the event code 2121.

AD server reachable

Table 195. AD server reachable event

Event	AD server reachable
Event Type	adServerReachable
Event Code	2141
Severity	Informational
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac] is able to reach AD server [{ip]}.
Description	This event occurs when AP is able to reach the active directory successfully.

AD server unreachable

Table 196. AD server unreachable event

Event	AD server unreachable
Event Type	adServerUnreachable
Event Code	2142
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach AD server [{ip]}.
Description	This event occurs when AP is unable able to reach the active directory.
Auto Clearance	This event triggers the alarm 2142, which is auto cleared by the event code 2141.

Wechat ESP authentication server reachable

Table 197. Wechat ESP authentication server reachable event

Event	Wechat ESP authentication server reachable
Event Type	espAuthServerReachable
Event Code	2151
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is able to reach WeChat ESP authentication server [{ip]} successfully.
Description	This event occurs when AP successfully reaches WeChat ESP authentication server.

WeChat ESP authentication server unreachable

Table 198. WeChat ESP authentication server unreachable event

Event	WeChat ESP authentication server unreachable
Event Type	espAuthServerUnreachable
Event Code	2152
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach WeChat ESP authentication server [{ip}]
Description	This event occurs when AP fails to reach WeChat ESP authentication server.
Auto Clearance	This event triggers the alarm 2152, which is auto cleared by the event code 2151

WeChat ESP authentication server resolvable

Table 199. WeChat ESP authentication server resolvable event

Event	WeChat ESP authentication server resolvable
Event Type	espAuthServerResolvable
Event Code	2153
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{apName}&&apMac]} is able to resolve WeChat ESP authentication server domain name [{dn}] to [{ip}] successfully.
Description	This event occurs when AP successfully resolves WeChat ESP authentication server domain name.

WeChat ESP authentication server unresolvable

Table 200. WeChat ESP authentication server unresolvable event

Event	WeChat ESP authentication server unresolvable
Event Type	espAuthServerUnResolvable
Event Code	2154
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP {{apName&&apMac}} is unable to resolve WeChat ESP authentication server domain name {{dn}} to IP.
Description	This event occurs when AP fails to resolves WeChat ESP authentication server domain name.
Auto Clearance	This event triggers the alarm 2154, which is auto cleared by the event code 2153.

WeChat ESP DNAT server reachable

Table 201. WeChat ESP DNAT server reachable event

Event	WeChat ESP DNAT server reachable
Event Type	espDNATServerReachable
Event Code	2161
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP {{apName&&apMac}} is able to reach WeChat ESP DNAT server {{ip}} successfully.
Description	This event occurs when AP successfully able to reach WeChat ESP DNAT server.

WeChat ESP DNAT server unreachable

Table 202. WeChat ESP DNAT server unreachable event

Event	WeChat ESP DNAT server unreachable
Event Type	espDNATServerUnreachable
Event Code	2162
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP {{apName&&apMac}} is unable to reach WeChat ESP DNAT server {{ip}}.
Description	This event occurs when AP fails to reach WeChat ESP DNAT server.
Auto Clearance	This event triggers the alarm 2162, which is auto cleared by the event code 2161

WeChat ESP DNAT server resolvable

Table 203. WeChat ESP DNAT server resolvable event

Event	WeChat ESP DNAT server resolvable
Event Type	espDNATServerResolvable
Event Code	2163
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "ip"="17.0.0.12", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP {{apName&&apMac}} is able to resolve WeChat ESP DNAT server domain name {{dn}} to {{ip}} successfully.
Description	This event occurs when AP successfully resolve WeChat ESP DNAT server domain name.

WeChat ESP DNAT server unresolvable

Table 204. WeChat ESP DNAT server unresolvable event

Event	WeChat ESP DNAT server unresolvable
Event Type	espDNATServerUnresolvable
Event Code	2164
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dn"="www.test.com", "profileId"="1", "fwVersion"="3.2.0.0.x", "model"="ZF7982", "zoneUUID"="f77a8816-3049-40cd-8484-82919275ddc3", "zoneName"="Default Zone", "apLocation"=""
Displayed on the web interface	AP [{{apName&&apMac}}] is unable to resolve WeChat ESP DNAT server domain name [{{dn}}] to IP.
Description	This event occurs when AP fails to resolve WeChat ESP DNAT server domain name.
Auto Clearance	This event triggers the alarm 2164, which is auto cleared by the event code 2163

NOTE: Refer to [AP Authentication Alarms](#).

AP Communication Events

All events from AP are appended with firmware, model name, zone ID (if there is no zone ID, the key will not be present) at the end. Following are the events related to AP communications.

- AP discovery succeeded
- AP managed
- AP rejected
- AP firmware updated
- AP firmware update failed
- Updating AP firmware
- Updating AP configuration
- AP configuration updated
- AP configuration update failed
- AP pre-provision model mismatched
- AP swap model mismatched
- AP WLAN oversubscribed
- AP join zone failed
- AP illegal to change country code
- AP configuration get failed
- Rogue AP
- SSID-spoofing rogue AP
- MAC-spoofing rogue AP
- Same-network rogue AP
- Ad-hoc network device
- Rogue AP disappeared

AP discovery succeeded

Table 205. AP discovery succeeded event

Event	AP discovery succeeded
Event Type	apDiscoverySuccess
Event Code	101
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName}&{apMac}] sent a discovery request to {produce.short.name} [{wsgIP}]
Description	This event occurs when AP sends a discovery request to the {produce.short.name} successfully.

AP managed

Table 206. AP managed event

Event	AP managed
Event Type	apStatusManaged
Event Code	103
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName}&{apMac}] approved by {produce.short.name} [{wsgIP}]
Description	This event occurs when the AP is approved by the controller.

AP rejected

Table 207. AP rejected event

Event	AP rejected
Event Type	apStatusRejected
Event Code	105
Severity	Minor
Attribute	"apMac"="xxx.xxx.xxx.xxx", "wsgIP"="xxx.xxx.xxx.xxx", "reason"="xxxxxx"
Displayed on the web interface	{produce.short.name} [{wsgIP}] rejected AP [{apName&&apMac}] because of [{reason}].
Description	This event occurs when the AP is rejected by the controller.
Auto Clearance	This event triggers the alarm 101, which is auto cleared by the event code 103.

AP firmware updated

Table 208. AP firmware updated event

Event	AP firmware updated
Event Type	apFirmwareUpdated
Event Code	106
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx" , "configID"="23456781234", "toVersion"="x.x.x", "fromVersion"="x.x.x"
Displayed on the web interface	AP [{apName&&apMac}] updated its firmware from [{fromVersion}] to [{toVersion}].
Description	This event occurs when the AP successfully updates the firmware details to the controller.

AP firmware update failed

Table 209. AP firmware update failed event

Event	AP firmware update failed
Event Type	apFirmwareUpdateFailed
Event Code	107
Severity	Major
Attribute	"apMac"="xxx.xxx.xxx.xxx" , "configID"="23456781234", "toVersion"="x.x.x.", "fromVersion"="x.x.x"
Displayed on the web interface	AP [{apName}&&apMac]} failed to update its firmware from [{fromVersion}] to [{toVersion]}.
Description	This event occurs when the AP fails to update the firmware details to the controller.
Auto Clearance	This event triggers the alarm 107, which is auto cleared by the event code 106.

Updating AP firmware

Table 210. Updating AP firmware event

Event	Updating AP firmware
Event Type	apFirmwareApplying
Event Code	108
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx" , "configID"="23456781234", "toVersion"="x.x.x.", "fromVersion"="x.x.x"
Displayed on the web interface	AP [{apName}&&apMac]} firmware is being updated from [{fromVersion}] to [{toVersion]}.
Description	This event occurs when AP updates its firmware.

Updating AP configuration

Table 211. Updating AP configuration event

Event	Updating AP configuration
Event Type	apConfApplying
Event Code	109
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx", "configID"="23456781234"
Displayed on the web interface	AP [{apName}&&apMac]} is being updated to new configuration ID [{configID}]
Description	This event occurs when AP updates its configuration.

AP configuration updated

Table 212. AP configuration updated event

Event	AP configuration updated
Event Type	apConfUpdated
Event Code	110
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName}&&apMac]} updated to configuration [{configID}]
Description	This event occurs when the AP successfully updates the existing configuration details to the controller.

AP configuration update failed

Table 213. AP configuration update failed event

Event	AP configuration update failed
Event Type	apConfUpdateFailed
Event Code	111
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] failed to update to configuration [{configID}].
Description	This event occurs when the AP fails to update the configuration details to the controller.
Auto Clearance	This event triggers the alarm 102, which is auto cleared by the event code 110.

AP pre-provision model mismatched

Table 214. AP pre-provision model mismatched event

Event	AP pre-provision model mismatched
Event Type	apModelDiffWithPreProvConfig
Event Code	112
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx", "configModel"="ZF7962" "model"="R700"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from per-provision configuration model [configModel]
Description	This event occurs when the AP model differs from the configuration model.

AP swap model mismatched

Table 215. AP swap model mismatched event

Event	AP swap model mismatched
Event Type	apModelDiffWithSwapOutAP
Event Code	113
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx", "configModel"="xxx.xxx.xxx.xxx" "model"="R700"
Displayed on the web interface	AP [{apName&&apMac}] model [{model}] is different from swap configuration model [{configModel}]
Description	This event occurs when the AP model differs from the swap configuration model.

AP WLAN oversubscribed

Table 216. AP WLAN oversubscribed event

Event	AP WLAN oversubscribed
Event Type	apWlanOversubscribed
Event Code	114
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] does not have enough capacity to deploy all wlangs. Only maximum wlan number of the AP can be deployed
Description	This event occurs when the AP exceeds the maximum capacity for deploying all WLANs.

AP join zone failed

Table 217. AP join zone failed event

Event	AP join zone failed
Event Type	apJoinZoneFailed
Event Code	115
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "zoneUUID"="xx:xx:xx:xx:xx:xx", "targetZoneUUID"="xx:xx:xx:xx:xx:xx", "reason"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] failed to join to zone [{targetZoneName}]. Reason: [{reason}]
Description	This event occurs when the AP fails to join the specified zone.

AP illegal to change country code

Table 218. AP illegal to change country code event

Event	AP illegal to change country code
Event Type	apIllegalToChangeCountryCode
Event Code	116
Severity	Informational
Attribute	"apMac"="xxx.xxx.xxx.xxx", "configID"="23456781234"
Displayed on the web interface	AP [{apName&&apMac}] does not support country code change.
Description	This event occurs when attempting to change the country code for an AP. Changing of country code is not allowed.

AP configuration get failed

Table 219. AP configuration get failed event

Event	AP configuration get failed
Event Type	
Event Code	117
Severity	Informational
Attribute	
Displayed on the web interface	
Description	This event occurs when the AP fails to get the configuration.

Rogue AP

Table 220. Rogue AP event

Event	Rogue AP
Event Type	genericRogueAPDetected
Event Code	180
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxx", "channel"="xx"
Displayed on the web interface	Rogue AP[{{rogueMac}}] with SSID[{{ssid}}] is detected by [{{apName&&apMac}}] on channel[{{channel}}].
Description	This event occurs when the AP detects a rogue AP.

SSID-spoofing rogue AP

Table 221. SSID-spoofing rogue AP event

Event	SSID-spoofing rogue AP
Event Type	ssid-spoofingRogueAPDetected
Event Code	181
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxx", "channel"="xx"

Table 221. SSID-spoofing rogue AP event

Displayed on the web interface	SSID-spoofing AP{{rogueMac}} with SSID[{{ssid}}] is detected by [{{apName&&apMac}}] on channel[{{channel}}].
Description	This event occurs when the AP detects a rogue AP with the same service set identifier (SSID).

MAC-spoofing rogue AP

Table 222. MAC-spoofing rogue AP event

Event	MAC-spoofing rogue AP
Event Type	mac-spoofingRogueAPDetected
Event Code	182
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	MAC-spoofing AP{{rogueMac}} with SSID[{{ssid}}] is detected by [{{apName&&apMac}}] on channel[{{channel}}].
Description	This event occurs when the AP detects a rogue AP having the same basic service set identifier (BSSID).

Same-network rogue AP

Table 223. Same-network rogue AP event

Event	Same-network rogue AP
Event Type	same-networkRogueAPDetected
Event Code	183
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxxxx", "channel"="xx"
Displayed on the web interface	Same-network AP{{rogueMac}} with SSID[{{ssid}}] is detected by [{{apName&&apMac}}] on channel[{{channel}}].
Description	This event occurs when the AP detects a rogue AP which has the same network.

Ad-hoc network device

Table 224. Ad-hoc network rogue device event

Event	Ad-hoc network device
Event Type	ad-hoc-networkRogueAPDetecte
Event Code	184
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx", "ssid"="xxxxxxxx", "channel"="xx"
Displayed on the web interface	Ad-hoc network device[rogueMac] with SSID[ssid] is detected by [apName&&apMac] on channel[channel]
Description	This event occurs when the AP detects an ad-hoc network device.

Rogue AP disappeared

Table 225. Rogue AP disappeared event

Event	Rogue AP disappeared
Event Type	maliciousRogueAPTimeout
Event Code	185
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "rogueMac"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Malicious rogue [rogueMac] detected by [apName&&apMac] goes away.
Description	This event occurs when the rogue AP disappears.

NOTE: Refer to [AP Communication Alarms](#).

AP LBS Events

The following are the events related to AP Location Based Service (LBS).

- [No LS responses](#)
- [LS authentication failure](#)
- [AP connected to LS](#)
- [AP failed to connect to LS](#)
- [AP started location service](#)
- [AP stopped location service](#)
- [AP received passive calibration request](#)
- [AP received passive footfall request](#)
- [AP received unrecognized request](#)

No LS responses

Table 226. No LS responses event

Event	No LS responses
Event Type	apLBSNoResponses
Event Code	701
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName}&&apMac]} no response from LS: url=[{url}], port=[{port}]
Description	This event occurs when the AP does not get a response when trying to connect to the location based service.
Auto Clearance	This event triggers the alarm 701, which is auto cleared by the event code 703.

LS authentication failure

Table 227. LS authentication failure event

Event	LS authentication failure
Event Type	apLBSAuthFailed
Event Code	702
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName}&&apMac]} LBS authentication failed: url= [{url}], port= [{port}]
Description	This event occurs on AP fails to connect to the location service.
Auto Clearance	This event triggers the alarm 701, which is auto cleared by the event code 703.

AP connected to LS

Table 228. AP connected to LS event

Event	AP connected to LS
Event Type	apLBSConnectSuccess
Event Code	703
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName}&&apMac]} connected to LS: url= [{url}], port= [{port}]
Description	This event occurs when the AP successfully connects to the location based service.

AP failed to connect to LS

Table 229. AP failed to connect to LS event

Event	AP failed to connect to LS
Event Type	apLBSConnectFailed
Event Code	704
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"=""
Displayed on the web interface	AP [{apName&&apMac}] connection failed to LS: url= [{url}], port= [{port}]
Description	This event occurs when the AP fails to connect to the location based service.
Auto Clearance	This event triggers the alarm 704, which is auto cleared by the event code 703.

AP started location service

Table 230. AP started location service event

Event	AP started location service
Event Type	apLBSStartLocationService
Event Code	705
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "venue"=""
Displayed on the web interface	AP [{apName&&apMac}] Start Ruckus Location Service: venue= [{venue}], band= [{band}]
Description	This event occurs when the AP starts to get the location data.

AP stopped location service

Table 231. AP stopped location service event

Event	AP stopped location service
Event Type	apLBSSStopLocationService
Event Code	706
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "venue"=""
Displayed on the web interface	AP [{apName}&&apMac] Stop Ruckus Location Service: venue=[{venue}], band= [{band}]
Description	This event occurs when the AP stops getting the location data.

AP received passive calibration request

Table 232. AP received passive calibration request event

Event	AP received passive calibration request
Event Type	apLBSRcvdPassiveCalReq
Event Code	707
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration, =", "band"="", "count"=""
Displayed on the web interface	AP [{apName}&&apMac] received Passive Calibration Request: interval=[{interval}s], duration=[{duration}m], band=[{band}]
Description	This event occurs when the AP receives the passive calibration request.

AP received passive footfall request

Table 233. AP received passive footfall request event

Event	AP received passive footfall request
Event Type	apLBSRcvdPassiveFFReq
Event Code	708
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration, ="", "band"=""
Displayed on the web interface	AP [{apName&&apMac}] received Passive Footfall Request: interval=[{interval}s], duration=[{duration}m], band=[{band}]
Description	This event occurs when the AP receives the passive footfall request.

AP received unrecognized request

Table 234. AP received unrecognized request event

Event	AP received unrecognized request
Event Type	apLBSRcvdUnrecognizedRequest
Event Code	709
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "type"="", "length"="", "SCGMgmtIp"=""
Displayed on the web interface	AP [{apName&&apMac}] received Unrecognized Request: type = [{type}], length = [{length}]
Description	This event occurs when the AP receives an unrecognized request.

NOTE: Refer to [AP LBS Alarms](#).

AP Mesh Events

Following are the events related to access point (AP) mesh.

- [EMAP downlink connected to MAP](#)
- [EMAP downlink disconnected from MAP](#)
- [EMAP uplink connected to MAP](#)
- [EMAP uplink disconnected from MAP](#)
- [MAP disconnected](#)
- [MAP downlink connected](#)
- [MAP downlink connected to EMAP](#)
- [MAP downlink disconnected from EMAP](#)
- [RAP downlink connected to MAP](#)
- [MAP uplink connected to EMAP](#)
- [MAP uplink disconnected from EMAP](#)
- [MAP uplink connected to RAP](#)
- [MAP uplink connected to MAP](#)
- [Mesh state updated to MAP](#)
- [Mesh state updated to MAP no channel](#)
- [Mesh state updated to RAP](#)
- [Mesh state update to RAP no channel](#)
- [MAP downlink connected to MAP](#)
- [MAP downlink disconnected from MAP](#)
- [RAP downlink disconnected from MAP](#)

EMAP downlink connected to MAP

Table 235. EMAP downlink connected to MAP event

Event	EMAP downlink connected to MAP
Event Type	emapDlinkConnectWithMap
Event Code	405
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"

Table 235. EMAP downlink connected to MAP event

Displayed on the web interface	eMAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}]
Description	This event occurs when mobile application part (MAP) to Ethernet Mesh AP (EMAP) connection is successful.

EMAP downlink disconnected from MAP

Table 236. EMAP downlink disconnected from MAP event

Event	EMAP downlink disconnected from MAP
Event Type	emapDlinkDisconnectWithMap
Event Code	406
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{mapName&&mapMac}] disconnects from eMAP [{apName&&apMac}].
Description	This event occurs when MAP disconnects from Ethernet Mesh AP

EMAP uplink connected to MAP

Table 237. EMAP uplink connected to MAP event

Event	EMAP uplink connected to MAP
Event Type	emapUlinkConnectWithMap
Event Code	407
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{apName&&apMac}] uplink connected to MAP [{mapName&&mapMac}]
Description	This event occurs when Ethernet Mesh AP uplink connection to MAP is successful.

EMAP uplink disconnected from MAP

Table 238. EMAP uplink disconnected from MAP event

Event	EMAP uplink disconnected from MAP
Event Type	emapUlinkDisconnectWithMap
Event Code	408
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{apName&&apMac}] uplink disconnected from MAP [{mapName&&mapMac}]
Description	This event occurs when Ethernet Mesh AP uplink disconnects from MAP.

MAP disconnected

Table 239. MAP disconnected event

Event	MAP disconnected
Event Type	mapDisconnected
Event Code	411
Severity	Informational
Attribute	"emapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{xapName&&xapMac}] disconnected from AP [{apName&&apMac}]
Description	This event occurs when MAP disconnects from AP.

MAP downlink connected

Table 240. MAP downlink connected event

Event	MAP downlink connected
Event Type	mapDlinkConnected
Event Code	412
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx"

Table 240. MAP downlink connected event

Displayed on the web interface	MAP [{apName&&apMac}] downlink connected
Description	This event occurs when MAP downlink connects to the AP.

MAP downlink connected to EMAP

Table 241. MAP downlink connected to EMAP event

Event	MAP downlink connected to EMAP
Event Type	mapDlinkConnectWithMap
Event Code	413
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] accepted connection from eMAP [{emapName&&emapMac}]
Description	This event occurs when MAP accepts the connection from Ethernet Mesh AP.

MAP downlink disconnected from EMAP

Table 242. MAP downlink disconnected from EMAP event

Event	MAP downlink disconnected from EMAP
Event Type	mapDlinkDisconnectWithMap
Event Code	414
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	eMAP [{emapName&&emapMac}] disconnected from MAP [{apName&&apMac}]
Description	This event occurs when Ethernet Mesh AP disconnects from MAP.

RAP downlink connected to MAP

Table 243. RAP downlink connected to MAP event

Event	RAP downlink connected to MAP
Event Type	rapDlinkConnectWithMap
Event Code	416
Severity	Informational
Attribute	"rapMac"="xx:xx:xx:xx:xx:xx", "mapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	RAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}]
Description	This event occurs when the root access point (RAP) accepts MAP connection.

MAP uplink connected to EMAP

Table 244. MAP uplink connected to EMAP event

Event	MAP uplink connected to EMAP
Event Type	mapUlinkConnectToeMap
Event Code	417
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac"="xx:xx:xx:xx:xx:xx", "rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to eMAP [{emapName&&emapMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when MAP successfully connects to Ethernet Mesh AP with received signal strength indicator (RSSI) (across links).

MAP uplink disconnected from EMAP

Table 245. MAP uplink disconnected from EMAP event

Event	MAP uplink disconnected from EMAP
Event Type	mapUlinkDisconnectToEMap
Event Code	418
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "emapMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] disconnected from eMAP [{emapName&&emapMac}]
Description	This event occurs when MAP disconnects from Ethernet Mesh AP.

MAP uplink connected to RAP

Table 246. MAP uplink connected to RAP event

Event	MAP uplink connected to RAP
Event Type	mapUlinkConnectToRap
Event Code	419
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "rootMac"="xx:xx:xx:xx:xx:xx", "rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to RAP [{rootName&&rootMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when MAP connects to RAP with RSSI (across links).

MAP uplink connected to MAP

Table 247. MAP uplink connected to MAP event

Event	MAP uplink connected to MAP
Event Type	mapUlinkConnectToMap
Event Code	420
Severity	Informational
Attribute	"mapMac"="xx:xx:xx:xx:xx:xx", "secondMapMac"="xx:xx:xx:xx:xx:xx", "rssi"="xx", "meshDepth"="x"
Displayed on the web interface	MAP [{apName&&apMac}] connected to MAP [{secondMapName&&secondMapMac}] with RSSI [{rssi}] across [{meshDepth}] links
Description	This event occurs when the MAP connects to a second MAP with RSSI (across links).

Mesh state updated to MAP

Table 248. Mesh state updated to MAP event

Event	Mesh state updated to MAP
Event Type	meshStateUpdateToMap
Event Code	421
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx",, "mapMac"="xx:xx:xx:xx:xx:xx", "numHop"="x", "channel"="xx", "downlinkState"="xx", "radio"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] uplinks to [{mapName&&mapMac}] across [{numHop}] hops on channel [{channel}] at [{radio}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to MAP uplinks across hops on channel radio (with downlink).

Mesh state updated to MAP no channel

Table 249. Mesh state updated to MAP no channel event

Event	Mesh state updated to MAP no channel
Event Type	meshStateUpdateToMapNoChannel
Event Code	422
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx", "mapMac"="xx:xx:xx:xx:xx:xx", "numHop"="x", "downlinkState"="xx"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] uplinks to [{mapName&&mapMac}] across [{numHop}] hops with downlink [{downlinkState}]
Description	This event occurs when the AP is set to MAP links across hops (with downlink).

Mesh state updated to RAP

Table 250. Mesh state updated to RAP event

Event	Mesh state updated to RAP
Event Type	meshStateUpdateToRap
Event Code	423
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx", "channel"="xx", "downlinkState"="xx", "radio"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] on channel [{channel}] at [{radio}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to channel radio (with downlink).

Mesh state update to RAP no channel

Table 251. Mesh state update to RAP no channel event

Event	Mesh state update to RAP no channel
Event Type	meshStateUpdateToRapNoChannel
Event Code	424
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "newState"="xx", "downlinkState"="xx"
Displayed on the web interface	AP [{apName&&apMac}] state set to [{newState}] with downlink [{downlinkState}]
Description	This event occurs when the AP is set to downlink.

MAP downlink connected to MAP

Table 252. MAP downlink connected to MAP event

Event	MAP downlink connected to MAP
Event Type	mapDlinkConnectWithMap
Event Code	425
Severity	Informational
Attribute	"mapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{apName&&apMac}] accepted connection from MAP [{mapName&&mapMac}]
Description	This event occurs when the MAP accepts a connection from another MAP.

MAP downlink disconnected from MAP

Table 253. MAP downlink disconnected from MAP event

Event	MAP downlink disconnected from MAP
Event Type	mapDlinkDisconnectWithMap
Event Code	426
Severity	Informational
Attribute	"secondMapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{secondMapName&&secondMapMac}] disconnected from MAP [{apName&&apMac}]
Description	This event occurs when the MAP disconnects from a second MAP.

RAP downlink disconnected from MAP

Table 254. RAP downlink disconnected from MAP event

Event	RAP downlink disconnected from MAP
Event Type	rapDlinkDisconnectWithMap
Event Code	427
Severity	Informational
Attribute	"secondMapMac"=" xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	MAP [{secondMapName&&secondMapMac}] disconnected from RAP [{apName&&apMac}]
Description	This event occurs when the MAP disconnects from RAP.

AP State Change Events

Following are the events related to access point state changes.

AP rebooted by user	AP rebooted by system	AP disconnected
AP IP address updated	AP reset to factory default	AP channel updated
AP country code updated	AP channel updated because dynamic frequency selection (DFS) detected a radar	AP change control plane
AP connected	AP deleted	AP heartbeat lost
AP tagged as critical	AP cable modem interface down	AP brownout
AP cable modem power-cycled by user	AP smart monitor turn off WLAN	AP client load balancing limit reached
AP client load balancing limit recovered	AP WLAN state changed	AP capacity reached
AP capacity recovered	AP cable modem interface up	AP cable modem soft-rebooted by user
AP cable modem set to factory default by user	AP health high latency flag	AP health low capacity flag
AP health high connection failure flag	AP health high client count flag	AP health high latency clear
AP health low capacity clear	AP health high connection failure clear	AP health high client count clear
Primary DHCP AP is down	Primary DHCP AP is up	Secondary DHCP AP is down
Secondary DHCP AP is up	Primary or secondary DHCP AP detects 90% of the configured total IPs	Both primary and secondary DHCP server APs are down
AP NAT gateway IP failover detected for particular VLAN pool	AP NAT gateway IP fall back detected for particular VLAN pool	NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool

NAT VLAN capacity restored detected by NAT gateway AP due to (at least) one out of the three (3) consecutive NAT gateway AP IP were down is now up	AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down	AP health high airtime utilization flag
AP health high airtime utilization clear		

AP rebooted by user

Table 255. AP rebooted by user event

Event	AP rebooted by user
Event Type	apRebootByUser
Event Code	301
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted because of [{reason}]
Description	This event occurs when an AP has to reboot.

AP rebooted by system

Table 256. AP rebooted by system event

Event	AP rebooted by system
Event Type	apRebootBySystem
Event Code	302
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] rebooted by the system because of [{reason}]
Description	This event occurs when the system reboots the AP.

AP disconnected

Table 257. AP disconnected event

Event	AP disconnected
Event Type	apConnectionLost (detected on the server)
Event Code	303
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] disconnected
Description	This event occurs when the AP disconnects from the controller.
Auto Clearance	This event triggers the alarm 303, which is auto cleared by the event code 312.

AP IP address updated

Table 258. AP IP address updated event

Event	AP IP address updated
Event Type	apIPChanged
Event Code	304
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] reset because of an IP address change
Description	This event occurs when the AP is reset due to a change in the IP address.

AP reset to factory default

Table 259. AP reset to factory default event

Event	AP reset to factory default
Event Type	apFactoryReset
Event Code	305
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"

Table 259. AP reset to factory default event

Displayed on the web interface	AP [{{apName&&apMac}}] reset to factory default settings
Description	This event occurs when the AP is reset to factory default settings.

AP channel updated

Table 260. AP channel updated event

Event	AP channel updated
Event Type	apChannelChanged
Event Code	306
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio"="xxx", "fromChannel"="xx", "toChannel"="xx"
Displayed on the web interface	AP [{{apName&&apMac}}] detected interference on radio [{{radio}}] and has switched from channel [{{fromChannel}}] to channel [{{toChannel}}]
Description	This event occurs when the AP detects the radio interference and switches to another channel.

AP country code updated

Table 261. AP country code updated event

Event	AP country code updated
Event Type	apCountryCodeChanged
Event Code	307
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{{apName&&apMac}}] reset because of a country code change
Description	This event occurs when a change in country code causes the AP to reset.

AP channel updated because dynamic frequency selection (DFS) detected a radar

Table 262. AP channel updated because dynamic frequency selection (DFS) detected a radar event

Event	AP channel updated because dynamic frequency selection (DFS) detected a radar
Event Type	apDfsRadarEvent
Event Code	308
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio"="xxx", "channel"="xx"
Displayed on the web interface	AP [{apName&&apMac}] detected radar burst on radio [{radio}] and channel [{channel}] went into non-occupancy period
Description	This event occurs when the AP detects a radar burst on the radio and the channel moves to a non-occupancy mode.

AP change control plane

Table 263. AP change control plane event

Event	AP change control plane
Event Type	apChangeControlBlade
Event Code	311
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "oldwsglP"="xxx.xxx.xxx.xxx", "newwsglP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] switched from {produce.short.name} [{oldCpName oldWsglP}] to {produce.short.name} [{cpName newWsglP}].
Description	This event occurs when the AP switches from an existing controller connection to a new connection.

AP connected

Table 264. AP connected event

Event	AP connected
Event Type	apConnected
Event Code	312
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] connected because of [{reason}]
Description	This event occurs when the AP is connected.

AP deleted

Table 265. AP deleted event

Event	AP deleted
Event Type	apDeleted (detected on the server)
Event Code	313
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] deleted
Description	This event occurs when the AP is deleted on the server side.

AP heartbeat lost

Table 266. AP heartbeat lost event

Event	AP heartbeat lost
Event Type	apHeartbeatLost
Event Code	314
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] heartbeat lost.

Table 266. AP heartbeat lost event

Description	This event occurs when the AP is deleted due to a lost heartbeat.
-------------	---

AP tagged as critical

Table 267. AP tagged as critical event

Event	AP tagged as critical
Event Type	apTaggedAsCritical
Event Code	315
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] tagged as critical
Description	This event occurs when the AP is tagged critical.

AP cable modem interface down

Table 268. AP cable modem interface down event

Event	AP cable modem interface down
Event Type	cableModemDown
Event Code	316
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName&&apMac}] cable modem interface is down
Description	This event occurs when the AP cable modem interface is down.
Auto Clearance	This event triggers the alarm 308, which is auto cleared by the event code 325.

AP brownout

Table 269. AP brownout event

Event	AP brownout
Event Type	apBrownout
Event Code	317
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [[apMac]] voltage deviation on [[cause]] port
Description	This event occurs due to a voltage deviation on the AP port.

AP cable modem power-cycled by user

Table 270. AP cable modem power-cycled by user event

Event	AP cable modem power-cycled by user
Event Type	cmRebootByUser
Event Code	318
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [[apName&&apMac]] cable modem power-cycled because of [[reason]].
Description	This event occurs when AP cable modem is power-cycled because the user executes the power-cycle CLI command.

AP smart monitor turn off WLAN

Table 271. AP smart monitor turn off WLAN event

Event	AP smart monitor turn off WLAN
Event Type	smartMonitorTurnOffWLAN
Event Code	319
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "turnOffTime"="", "turnOnTime"=""
Displayed on the web interface	AP [{apName&&apMac}] turned off WLANs by Smart Monitor on [{time(turnOffTime)}] and turn on WLANs on [{time(turnOnTime)}]
Description	This event occurs when the smart monitor of the AP turns off the WLAN.

AP client load balancing limit reached

Table 272. AP client load balancing limit reached event

Event	AP client load balancing limit reached
Event Type	apCLBlimitReached
Event Code	320
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "bssid"="xx:xx:xx:xx:xx:xx", "clb-load-limit"="", "cur-load"="", "min-clbpartner-bssid"="", "min-clbpartner-load"="", "num-clbpartners"="", "low-clbpartners"=""
Displayed on the web interface	AP [{apname@apMac}] reached client load limit, [{cur-load}] / [{clb-load-limit}], on WLAN [{ssid}]
Description	This event occurs when the AP reaches the client loading balance (CLB) limit. The adjacent threshold limit value is 50 for 2.4GHz radio and 43 for 5GHz radio.

AP client load balancing limit recovered

Table 273. AP client load balancing limit recovered event

Event	AP client load balancing limit recovered
Event Type	apCLBLimitRecovered
Event Code	321
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "bssid"="xx:xx:xx:xx:xx:xx", "clb-load-limit"="", "cur-load"="",
Displayed on the web interface	AP[{{apname@apMac}}] recovered from client load limit, [{{cur-load}}] / [{{clb-load-limit}}], on WLAN [{{ssid}}]
Description	This event occurs when the AP is recovered from client load balance (CLB) limit. The adjacent threshold limit value is 50 for 2.4GHz radio and 43 for 5GHz radio.

AP WLAN state changed

Table 274. AP WLAN state changed event

Event	AP WLAN state changed
Event Type	apWLANStateChanged
Event Code	322
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx" "state"="enable disable" "ssid"="xxxxx" "apTime"="Tue Apr 22 12:15:00 2014" "reason"="State changed according to service schedule State changed by administrator"
Displayed on the web interface	AP [{{apName&&apMac}}] {state} WLAN[{{ssid}}] on [{{apTime}}]. Reason: [{{reason}}].
Description	This event occurs when the WLAN state changes as per the service schedule or as per the service type setting.

AP capacity reached

Table 275. AP capacity reached event

Event	AP capacity reached
Event Type	apCapacityReached
Event Code	323
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio": "",
Displayed on the web interface	AP [{{apName&&apMac}}] radio [{{radio}}] stopped accepting clients because the client association threshold has been reached.
Description	This event occurs when an AP rejects a client due to the threshold limit reached by the client.

AP capacity recovered

Table 276. AP capacity recovered event

Event	AP capacity recovered
Event Type	apCapacityRecovered
Event Code	324
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "radio": "",
Displayed on the web interface	AP [{{apName&&apMac}}] radio [{{radio}}] started accepting clients again because current client association is now below the threshold.
Description	This event occurs when the AP starts accepting clients again because the current client association is below the threshold limit.

AP cable modem interface up

Table 277. AP cable modem interface up event

Event	AP cable modem interface up
Event Type	cableModemUp
Event Code	325
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP [{apName}&&apMac]} cable modem interface is up.
Description	This event occurs when the AP cable modem interface is up.

AP cable modem soft-rebooted by user

Table 278. AP cable modem soft-rebooted by user event

Event	AP cable modem soft-rebooted by user
Event Type	cmResetByUser
Event Code	326
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName}&&apMac]} cable modem soft-reboot because of [{reason]}.
Description	This event occurs when the AP cable modem is softly rebooted because the user executes the soft-reboot CLI command.

AP cable modem set to factory default by user

Table 279. AP cable modem set to factory default by user event

Event	AP cable modem set to factory default by user
Event Type	cmResetFactoryByUser
Event Code	327
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName}&&apMac]} cable modem set to factory default because of [{reason]}].
Description	This event occurs when AP cable modem is reset to factory default because the user executes the set factory command line interface (CLI) command.

AP health high latency flag

Table 280. AP health high latency flag event

Event	AP health high latency flag
Event Type	apHealthLatencyFlag
Event Code	328
Severity	Warning
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx", "configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{apName}&&apMac]} flagged [{radio}] latency health [{currentValue}] because it crossed the threshold [{configuredThreshold]}].
Description	This event occurs when AP is flagged because the radio crossed the latency health threshold configured by the administrator.

AP health low capacity flag

Table 281. AP health low capacity flag event

Event	AP health low capacity flag
Event Type	apHealthCapacityFlag
Event Code	329
Severity	Warning
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{apName&&apMac}] flagged {{radio}} capacity health [currentValue] because it crossed the threshold [configuredThreshold].
Description	This event occurs when AP is flagged because the radio crossed the capacity health threshold configured by the administrator.

AP health high connection failure flag

Table 282. AP health high connection failure flag event

Event	AP health high connection failure flag
Event Type	apHealthConnectionFailureFlag
Event Code	330
Severity	Warning
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{apName&&apMac}] flagged {{radio}} capacity health [currentValue] because it crossed the threshold [configuredThreshold].
Description	This event occurs when AP is flagged because the AP crossed the connection failure health threshold configured by the administrator.

AP health high client count flag

Table 283. AP health high client count flag event

Event	AP health high client count flag
Event Type	apHealthClientCountFlag
Event Code	331
Severity	Warning
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx",
Displayed on the web interface	AP [{apName&&apMac}] flagged client count health [{currentValue}] because it crossed the threshold [{configuredThreshold}]
Description	This event occurs when AP is flagged because the AP crossed the client count health threshold configured by the administrator.

AP health high latency clear

Table 284. AP health high latency clear event

Event	AP health high latency clear
Event Type	apHealthLatencyClear
Event Code	332
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG",
Displayed on the web interface	AP [{apName&&apMac}] cleared [{radio}] latency health [{currentValue}], which is no longer past the threshold [{configuredThreshold}]
Description	This event occurs when an AP's health flag is cleared because it is no longer past the capacity threshold configured by the administrator.

AP health low capacity clear

Table 285. AP health low capacity clear event

Event	AP health low capacity clear
Event Type	apHealthCapacityClear
Event Code	333
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{{apName&&apMac}}] cleared {{radio}} capacity health [{{currentValue}}], which is no longer past the threshold [{{configuredThreshold}}].
Description	This event occurs when an AP's health flag is cleared because it is no longer past the capacity threshold configured by the administrator.

AP health high connection failure clear

Table 286. AP health high connection failure clear event

Event	AP health high connection failure clear
Event Type	apHealthConnectionFailureClear
Event Code	334
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{{apName&&apMac}}] flagged {{radio}} connection failure health [{{currentValue}}], which is no longer past the threshold [{{configuredThreshold}}].
Description	This event occurs when an AP's health flag is cleared because it is no longer past the connection failure threshold configured by the administrator.

AP health high client count clear

Table 287. AP health high client count clear event

Event	AP health high client count clear
Event Type	apHealthClientCountClear
Event Code	335
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx",
Displayed on the web interface	AP [{apName}&&apMac] cleared client count health [{currentValue}], which is no longer past the threshold [{configuredThreshold}].
Description	This event occurs when an AP's health flag is cleared because it is no longer past the capacity threshold configured by the administrator.

Primary DHCP AP is down

Table 288. Primary DHCP AP is down event

Event	Primary DHCP AP is down detected by secondary DHCP AP. Starting DHCP service on secondary.
Event Type	apDHCPFailoverDetected
Event Code	336
Severity	Warning
Attribute	"primaryServerMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Primary DHCP server [{primaryServerMac}] is down detected by secondary DHCP server [{apMac}].
Description	This event occurs when the secondary DHCP AP detects that the primary DHCP service has failed and starts the DHCP service.

Primary DHCP AP is up

Table 289. Primary DHCP AP is up event

Event	Primary DHCP AP is up detected by secondary DHCP AP. Stopping DHCP service on secondary.
Event Type	apDHCPFallbackDetected
Event Code	337
Severity	Informational
Attribute	"primaryServerMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Primary DHCP server [{primaryServerMac}] is up detected by secondary DHCP server [{apMac}]
Description	This event occurs when the secondary DHCP AP detects that primary DHCP AP is UP and stops DHCP service.

Secondary DHCP AP is down

Table 290. Secondary DHCP AP is down event

Event	Secondary DHCP AP is down detected by primary DHCP AP.
Event Type	apSecondaryDHCPAPDown
Event Code	338
Severity	Major
Attribute	"secondaryServerMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Secondary DHCP server [{secondaryServerMac}] is down detected by primary DHCP server [{apMac}]
Description	This event occurs when the primary DHCP AP detects that secondary DHCP AP is down and stops DHCP service.

Secondary DHCP AP is up

Table 291. Secondary DHCP AP is up event

Event	Secondary DHCP AP is up detected by primary DHCP AP.
Event Type	apSecondaryDHCPAPUp
Event Code	339
Severity	Informational
Attribute	"secondaryServerMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Secondary DHCP server [{{secondaryServerMac}}] is up detected by primary DHCP server [{{primaryServerMac}}].
Description	This event occurs when the primary DHCP AP detects that secondary DHCP AP is UP.

Primary or secondary DHCP AP detects 90% of the configured total IPs

Table 292. Primary or secondary DHCP AP detects 90% of the configured total IPs event

Event	Primary or secondary DHCP AP detects 90% of the configured total IPs
Event Type	apDHCIPIPpoolMaxThresholdReached
Event Code	340
Severity	Warning
Attribute	"zoneName"="ZoneName", "poolId"="xxxx", "vlanId"="1", "allocatedIPNum"="5", "totalIPNum"="10", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	In zone [{{zoneName}}] DHCP IP pool [{{poolId}}] reached 90% threshold detected by AP MAC [{{apMac}}]. VLAN ID: [{{vlanId}}] Allocated IPs:[{allocatedIPNum}], Total IPs:[{totalIPNum}].
Description	This event occurs when the primary or secondary DHCP AP reports IP pool reaches 90% of the total configured IPs.

Both primary and secondary DHCP server APs are down

Table 293. Both primary and secondary DHCP server APs are down event

Event	Primary or secondary DHCP AP detects 90% of the configured total IPs
Event Type	apDHCPServiceFailure
Event Code	341
Severity	Critical
Attribute	"primaryServerMac"="xx:xx:xx:xx:xx:xx", "secondaryServerMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	AP DHCP service failure. Both primary DHCP AP [{primaryServerMac}] and secondary DHCP server AP [{secondaryServerMac}] are down.
Description	This event occurs when the controller detects that the primary and secondary DHCP APs have failed.

AP NAT gateway IP failover detected for particular VLAN pool

Table 294. AP NAT gateway IP failover detected for particular VLAN pool event

Event	AP NAT gateway IP failover detected for particular VLAN pool
Event Type	apNATFailoverDetected
Event Code	342
Severity	Major
Attribute	"natGatewayIP"="10.1.2.2", "vlanId"="2", "natGatewayMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT failover detected for [{natGatewayIP}], VLAN [{vlanId}], AP [{natGatewayMac}]. Bringing up interface and switching traffic to AP [{apMac}].
Description	This event occurs when any NAT gateway AP detects that a monitored NAT gateway IP has failed.

AP NAT gateway IP fall back detected for particular VLAN pool

Table 295. AP NAT gateway IP fall back detected for particular VLAN pool event

Event	AP NAT gateway IP fall back detected for particular VLAN pool
Event Type	apNATFallbackDetected
Event Code	343
Severity	Informational
Attribute	"vlanId"="1", "natGatewayMac"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT fallback detected for VLAN [{vlanId}] by AP [{apMac}]. Bringing down interface and switching traffic to AP [{natGatewayMac}]
Description	This event occurs when any NAT gateway AP detects that other monitored NAT gateway AP IP is up.

NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool

Table 296. NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool event

Event	NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool
Event Type	apNATVlanCapacityAffected
Event Code	344
Severity	Critical
Attribute	"natGatewayIP1"=192.168.10.2", "natGatewayIP2"=192.168.10.3", "natGatewayIP3"=192.168.10.4", "vlanId"="2", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT VLAN capacity affected is detected by NAT gateway AP [{apMac}] since three (3) consecutive NAT gateway IPs [{natGatewayIP1}&&natGatewayIP2&&natGatewayIP3}] are down. The NAT traffic for some of the clients may get affected for VLAN [{vlanId}].

Table 296. NAT VLAN capacity affected detected by NAT gateway AP at zone due to three (3) consecutive NAT gateway AP IPs are down for particular VLAN pool event

Description	This event occurs when NAT VLAN capacity affected is detected by NAT gateway AP at zone. This is due to three (3) consecutive NAT gateway AP IP failure for a particular VLAN pool.
-------------	---

NAT VLAN capacity restored detected by NAT gateway AP due to (at least) one out of the three (3) consecutive NAT gateway AP IP were down is now up

Table 297. NAT VLAN capacity restored detected by NAT gateway AP due to (at least) one out of the three (3) consecutive NAT gateway AP IP were down is now up event

Event	NAT VLAN capacity restored detected by NAT gateway AP due to (at least) one out of the three (3) consecutive NAT gateway AP IP were down is now up
Event Type	apNATVlanCapacityRestored
Event Code	345
Severity	Informational
Attribute	"natGatewayIP"="192.168.10.2", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT VLAN capacity restored detected by DHCP NAT AP [{apMac}] one of the NAT gateway IP [{natGatewayIP}] is now up, out of three (3) consecutive NAT gateway IPs which were down. The NAT traffic for affected clients is restored back.
Description	This event occurs when the AP detects at least one of the three (3) consecutive gateway APs IPs that had failed is now UP.

AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down

Table 298. AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down event

Event	AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down
Event Type	apNATFailureDetectedbySZ
Event Code	346
Severity	Critical
Attribute	"apMac1"="xx:xx:xx:xx:xx:xx", "apMac2"="xx:xx:xx:xx:xx:xx", "apMac3"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	NAT failure detected by SZ since three (3) consecutive NAT gateway IPs are down AP1=[{apMac1}] AP2=[{apMac2}] AP3=[{apMac3}] (All consecutive NAT APs are down in case of less than 3 NAT Gateway APs configured). The NAT traffic for some of the clients may get affected for the respective VLANs.
Description	This event occurs when the controller detects three (3) consecutive failure of NAT server AP.

AP health high airtime utilization flag

Table 299. AP health high airtime utilization flag event

Event	AP health high airtime utilization flag
Event Type	apHealthAirUtilizationFlag
Event Code	347
Severity	Warning
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx", "configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{apName}&&apMac}] flagged [{radio}] airtime utilization health [{currentValue}] because it crossed the threshold [{configuredThreshold}]
Description	This event occurs when AP is flagged because the radio crossed the latency health threshold configured by the administrator.

AP health high airtime utilization clear

Table 300. AP health high airtime utilization clear event

Event	AP health high airtime utilization clear
Event Type	apHealthAirUtilizationClear
Event Code	348
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "currentValue"="xxxxx","configuredThreshold"="xxxxx", "radio" = "X.XG"
Displayed on the web interface	AP [{apName&&apMac}] cleared {{radio}} airtime utilization health [{currentValue}], which is no longer past the threshold [{configuredThreshold}]
Description	This event occurs when AP's health flag is cleared because it is no longer past the latency threshold configured by the administrator.

Operations and Management (OAM) Requirements.

NOTE: Refer to [AP State Change Alarms](#).

AP USB Events

Following are the events related to AP USB (Universal Serial Bus).

- [AP USB software package downloaded](#)
- [AP USB software package download failed](#)

AP USB software package downloaded

Table 301. AP USB software package downloaded event

Event	AP USB software package downloaded
Event Type	apUsbSoftwarePackageDownloaded
Event Code	370
Severity	Informational
Attribute	"apMac="xx:xx:xx:xx:xx:xx", "usbSoftwareName="19d2-fff5(v1.0)"
Displayed on the web interface	AP {{apName&&apMac}} downloaded USB software package {{usbSoftwareName}} successfully.
Description	This event occurs when AP successfully downloads its USB software package.

AP USB software package download failed

Table 302. AP USB software package download failed event

Event	AP USB software package download failed
Event Type	apUsbSoftwarePackageDownloadFailed
Event Code	371
Severity	Major
Attribute	apMac="xx:xx:xx:xx:xx:xx", usbSoftwareName="19d2-fff5(v1.0)"
Displayed on the web interface	AP {{apName&&apMac}} failed to download USB software package {{usbSoftwareName}}
Description	This event occurs when the AP fails to download its USB software package.

Authentication Events

The following are the events related to authentication.

- Authentication server not reachable
- Unknown realm
- Authentication succeeded
- Authentication failed
- Pseudonym authentication succeeded
- Pseudonym authentication failed
- Fast re-authentication succeeded
- Fast re-authentication failed
- Authentication failed over to secondary
- Authentication fallback to primary
- AD/LDAP connected successfully
- AD/LDAP connectivity failure
- Bind fails with AD/LDAP
- Bind success with LDAP, but unable to find clear text password for the user
- RADIUS fails to connect to AD NPS server
- RADIUS fails to authenticate with AD NPS server
- Successfully established the TLS tunnel with AD/LDAP
- Fails to establish TLS tunnel with AD/LDAP

Authentication server not reachable

Table 303. Authentication server not reachable event

Event	Authentication server not reachable
Event Type	authSrvrNotReachable
Event Code	1601
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org" "radProxyIp"="7.7.7.7" "authSvrIp"="20.20.20.20" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Authentication Server [{authSvrIp}] not reachable from Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the authentication fails since the primary or secondary servers are not reachable.

Unknown realm

NOTE: This event is not applicable for vSZ-H.

Table 304. Unknown realm event

Event	Unknown realm
Event Type	unknownRealm
Event Code	1603
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org"
Displayed on the web interface	Realm [{realm}] could not be resolved to a AAA server
Description	This event occurs when the authentication realm resolution fails.

Authentication succeeded

Table 305. Authentication succeeded event

Event	Authentication succeeded
Event Type	authSuccess
Event Code	1604
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345" "ueMsisdn"="98787" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Authentication successful for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}]. {produce.short.name} used is [{SCGMgmtIp}]
Description	This event occurs when the RADIUS accept is sent back to the AP. This event applies only for TTG/PDG session. <i>Note:</i> The attribute <i>Permanent ID</i> is used for authentication.

Authentication failed

Table 306. Authentication failed event

Event	Authentication failed
Event Type	authFailed
Event Code	1605
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787", "cause"="<Cause of failure>" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Authentication failed for UE with IMSI <code>{{uelmsi}}</code> and MSISDN <code>{{ueMsisdn}}</code> . Cause = <code>{{cause}}</code> . <code>{produce.short.name}</code> used is <code>{{SCGMgmtIp}}</code>
Description	This event occurs when the RADIUS reject is sent back and the MSISDN is provided (if available). <i>Note:</i> The attribute <i>Permanent ID</i> is used for authentication.

Pseudonym authentication succeeded

NOTE: This event is not applicable for vSZ-H.

Table 307. Pseudonym authentication succeeded event

Event	Pseudonym authentication succeeded
Event Type	pseudonymAuthSuccess
Event Code	1606
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "authType"="EAP-SIM/AKA"

Table 307. Pseudonym authentication succeeded event

Displayed on the web interface	Pseudonym ID based authentication successful for UE with IMSI <code>{{ueImsi}}</code> and MSISDN <code>{{ueMsisdn}}</code> . <code>{produce.short.name}</code> used is <code>{{SCGMgmtIp}}</code>
Description	This event occurs when the RADIUS accept is sent back to the AP. This event is applicable when the controller acts as a host AAA server and is applicable only for TTG/PDG session. <i>Note:</i> The attribute <i>Pseudonym ID</i> is used for authentication.

Pseudonym authentication failed

NOTE: This event is not applicable for vSZ-H.

Table 308. Pseudonym authentication failed event

Event	Pseudonym authentication failed
Event Type	pseudonymAuthFailed
Event Code	1607
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1 "zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787" "cause"="<Cause of failure>" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Pseudonym ID based authentication failed for UE with IMSI <code>{{ueImsi}}</code> and MSISDN <code>{{ueMsisdn}}</code> . Cause = <code>{{cause}}</code> . <code>{produce.short.name}</code> used is <code>{{SCGMgmtIp}}</code>
Description	This event occurs when the RADIUS reject is sent back for pseudonym authentication. This event is applicable when the controller acts as a host AAA server. The mobile subscriber integrated services digital network number (MS-ISDN) is provided (if available). <i>Note:</i> The attribute <i>Pseudonym ID</i> is used for authentication.

Fast re-authentication succeeded

NOTE: This event is not applicable for vSZ-H.

Table 309. Fast re-authentication succeeded event

Event	Fast re-authentication succeeded
Event Type	fastReauthSuccess
Event Code	1608
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImei"="12345" "ueMsisdn"="98787" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Fast re-auth ID based authentication successful for UE with IMSI <code>{{ueImei}}</code> and MSISDN <code>{{ueMsisdn}}</code> . <code>{produce.short.name}</code> used is <code>{{SCGMgmtIp}}</code>
Description	This event occurs after resending RADIUS accept back to AP. This event is applicable when, the <code>{produce.short.name}</code> acts as a hosted AAA server and for TTG/PDG session. <i>Note: FastReauth ID is used for authentication.</i>

Fast re-authentication failed

NOTE: This event is not applicable for vSZ-H.

Table 310. Fast re-authentication failed event

Event	Fast re-authentication failed
Event Type	fastReauthFailed
Event Code	1609
Severity	Debug

Table 310. Fast re-authentication failed event

Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"=" radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345" "ueMsisdn"="98787" "cause"="<Cause of failure>" "authType"="EAP-SIM/AKA"
Displayed on the web interface	Fast re-auth ID based authentication failed for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}]. Cause = [{cause}]. {produce.short.name} used is [{SCGMgmtIp}]
Description	This event occurs when the RADIUS reject is sent back for fast reauthentication. This event applies when the controller acts as a host AAA server. The MS-ISDN is provided (if available). <i>Note:</i> Attribute <i>FastReauthID</i> is used for reauthentication.

Authentication failed over to secondary

Table 311. Authentication failed over to secondary event

Event	Authentication failed over to secondary
Event Type	authFailedOverToSecondary
Event Code	1651
Severity	Major
Attribute	"mvsold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Radius Server Failed Over from Primary [{primary}] to Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the secondary authentication RADIUS server is available after the primary server becomes zombie or dead.

Authentication fallback to primary

Table 312. Authentication fallback to primary event

Event	Authentication fallback to primary
Event Type	authFallbackToPrimary
Event Code	1652
Severity	Major
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"= "wlan.mnc080.mcc405.3gppnetwork.org" "radProxyIp"="7.7.7.7" "primary"="20.20.20.20" "secondary"="30.30.30.30" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Radius Server Fallback to Primary [{primary}] from Secondary [{secondary}] on Radius Proxy [{radProxyIp}] on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the automatic fallback is enabled. The authentication failover to secondary server has occurred, the revival timer for primary server has expired and the requests falls back to the primary server.

AD/LDAP connected successfully

Table 313. AD/LDAP connected successfully event

Event	AD/LDAP connected successfully
Event Type	racADLDAPSuccess
Event Code	1751
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvIp"="1.1.1.1" "SCGMgmtIp"="2.2.2.2", "desc"="Successful connection to AD/LDAP"
Displayed on the web interface	[{srcProcess}] Connect to AD/LDAP[{authSrvIp}] successfully from SCG[{SCGMgmtIp}]
Description	This event occurs when RADIUS connection to AD/LDAP server is successful.

AD/LDAP connectivity failure

Table 314. AD/LDAP connectivity failure event

Event	AD/LDAP connectivity failure
Event Type	racADLDAPFail
Event Code	1752
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"="1.1.1.1", "SCGMgmtlp"="2.2.2.2" "desc"= "Connection to AD/LDAP fails"
Displayed on the web interface	[[srcProcess]] Connect to AD/LDAP[[authSrvrlp]] fails from SCG[[SCGMgmtlp]]
Description	This event occurs when RADIUS fails to connect to AD/LDAP server.

Bind fails with AD/LDAP

Table 315. Bind fails with AD/LDAP event

Event	Bind fails with AD/LDAP
Event Type	racADLDAPBindFail
Event Code	1753
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrlp"= "1.1.1.1", "username"="testuser" "SCGMgmtlp"="2.2.2.2", "desc"="Bind to AD/LDAP fails"
Displayed on the web interface	[[srcProcess]] Bind to AD/LDAP[[authSrvrlp]] fails from SCG[[SCGMgmtlp]] for User[[userName]]
Description	This event occurs when RADIUS binding fails to AD/LDAP server.

Bind success with LDAP, but unable to find clear text password for the user

Table 316. Bind success with LDAP, but unable to find clear text password for the user event

Event	Bind success with LDAP but unable to find clear text password for the user
Event Type	racLDAPFailToFindPassword
Event Code	1754
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"="1.1.1.1", "username"= "testuser" "SCGMgmtIp"="2.2.2.2", "desc"="Fail to find password"
Displayed on the web interface	[[srcProcess]] failed to find password from LDAP [[authSrvrIp]] for SCG[[SCGMgmtIp]] for User[[userName]]
Description	This event occurs when binding is successful with LDAP using root credential but is unable to retrieve the clear text password for the user.

RADIUS fails to connect to AD NPS server

Table 317. RADIUS fails to connect to AD NPS server event

Event	RADIUS fails to connect to AD NPS server
Event Type	racADNPSFail
Event Code	1755
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"="1.1.1.1", "username"="testuser" "SCGMgmtIp"="2.2.2.2", "desc"= "Fails to connect to AD NPS server"
Displayed on the web interface	[[srcProcess]] Fails to connect to AD NPS [[authSrvrIp]] from SCG[[SCGMgmtIp]]
Description	This event occurs when RADIUS fails to connect to AD NPS server.

RADIUS fails to authenticate with AD NPS server

Table 318. RADIUS fails to authenticate with AD NPS server event

Event	RADIUS fails to authenticate with AD NPS server
Event Type	racADNPSFailToAuthenticate
Event Code	1756
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="RAC", "authSrvrIp"="1.1.1.1", "username"="testuser" "SCGMgmtIp"="2.2.2.2", "desc"="Fails to authenticate with AD NPS"
Displayed on the web interface	[[srcProcess]] Fails to authenticate AD NPS[[authSrvrIp]] on SCG [[SCGMgmtIp]] for User[[userName]]
Description	This event occurs when RADIUS fails to authenticate with AD NPS server.

Successfully established the TLS tunnel with AD/LDAP

Table 319. Successfully established the TLS tunnel with AD/LDAP event

Event	Successfully established the TLS tunnel with AD/LDAP
Event Type	racADNPSFailToAuthenticate
Event Code	1761
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"=12, "srcProcess"="radiusd", "authSrvrIp"="1.1.1.1", "authSrvrPort"="636" "SCGMgmtIp"="2.2.2.2", "desc"="Successfully established TLS Tunnel with LDAP/AD"
Displayed on the web interface	[[srcProcess]] Established the TLS connection with AD/ LDAP[[authSrvrIp]] successfully from SCG[[SCGMgmtIp]]
Description	This event occurs when the TLS connection between the controller and AD/LDAP is successfully established.

Fails to establish TLS tunnel with AD/LDAP

Table 320. Fails to establish TLS tunnel with AD/LDAP event

Event	Fails to establish TLS tunnel with AD/LDAP
Event Type	racADLDAPTLSFailed
Event Code	1762
Severity	Major
Attribute	“ctrlBladeMac”=“aa:bb:cc:dd:ee:ff”, “mvnold”=12 “srcProcess”=“radiusd”, “authSrvrIp”=“1.1.1.1” “authSrvrPort”=“636”, “SCGMgmtIp”=“2.2.2.2” “desc”=“Fails to establish TLS Tunnel with LDAP/AD”
Displayed on the web interface	[[srcProcess]] Establishes the TLS connection with AD/LDAP[[authSrvrIp]] fails from SCG[[SCGMgmtIp]]
Description	This event occurs when the TLS connection between the controller and AD/LDAP fails.
Auto Clearance	This event triggers the alarm 1762, which is auto cleared by the event code 1761.

NOTE: Refer to [Authentication Alarms](#).

Authorization Events

The following are the events related to authorization (DM/CoA).

- [DM received from AAA](#)
- [DM NACK sent to AAA](#)
- [DM sent to NAS](#)
- [DM NACK received from NAS](#)
- [CoA received from AAA](#)
- [CoA NACK sent to AAA](#)
- [CoA sent NAS](#)
- [CoA NAK received NAS](#)
- [CoA authorize only access reject](#)
- [CoA RWSG MWSG notification failure](#)

DM received from AAA

Table 321. DM received from AAA event

Event	DM received from AAA
Event Type	dmRcvdAAA
Event Code	1641
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrIp"="7.7.7.7" "rmtRadSrvrIp"="40.40.40.40" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	RADIUS DM received by RAC [{radSrvrIp}] from AAA [{rmtRadSrvrIp}] for [{userName}]
Description	This event occurs when the radio access controller (RAC) receives a disconnected message from the AAA server.

DM NACK sent to AAA

Table 322. DM NACK sent to AAA event

Event	DM NACK sent to AAA
Event Type	dmNackSntAAA
Event Code	1642
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	RADIUS DM NACK sent by RAC [{radSrvrlp}] to AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when RAC sends a disconnected not acknowledged message to the AAA server.

DM sent to NAS

Table 323. DM sent to NAS event

Event	DM sent to NAS
Event Type	dmSntNAS
Event Code	1643
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "nasIp"="40.40.40.40" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	RADIUS DM sent to NAS [{rmtRadSrvrlp}] by RAC [{radSrvrlp}] for [{userName}]
Description	This event occurs when RAC sends a disconnected message to the network access server [proxy of received disconnected message or the disconnected message as initiated by the controller].

DM NACK received from NAS

Table 324. DM NACK received from NAS event

Event	DM NACK received from NAS
Event Type	dmNackRcvdNAS
Event Code	1644
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "naslp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2", "cause"=""
Displayed on the web interface	RADIUS DM NACK received by RAC [{radSrvrlp}] from NAS [{naslp}] for [{userName}]
Description	This event occurs when the radio access control receives disconnect message, which is not acknowledged from the NAS server.

CoA received from AAA

Table 325. CoA received from AAA event

Event	CoA received from AAA
Event Type	coaRcvdAAA
Event Code	1645
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	RADIUS CoA received by RAC [{radSrvrlp}] from AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when radio access control receives a change of authorization message from the AAA server.

CoA NACK sent to AAA

Table 326. CoA NACK sent to AAA event

Event	CoA NACK sent to AAA
Event Type	coaNackSntAAA
Event Code	1646
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radius" "userName"="user name" "radSrvrlp"="7.7.7.7" "rmtRadSrvrlp"="40.40.40.40" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	RADIUS CoA NACK sent by RAC [{radSrvrlp}] to AAA [{rmtRadSrvrlp}] for [{userName}]
Description	This event occurs when radio access control sends a change of authorization, not acknowledged to the AAA server.

CoA sent NAS

Table 327. CoA sent NAS event

Event	CoA sent NAS
Event Type	coaSentNas
Event Code	1647
Severity	Debug
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "userName"="abc@xyz.com" "radSrvrlp"="1.1.1.1" "nasIp"="3.3.3.3" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	CoA requests proxied/forwarded to NAS(AP) [{nasIp]}.
Description	This event occurs when the controller forwards/proxy of change of authorization to the NAS server.

CoA NAK received NAS

Table 328. CoA NAK received NAS event

Event	CoA NAK received NAS
Event Type	coaNakRcvdNas
Event Code	1648
Severity	Debug
Attribute	"mvnold"="12" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "userName"="abc@xyz.com" "radSrvrlp"="1.1.1.1" "naslp"="3.3.3.3" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	CoA NAK received from NAS(AP) for forwarded/proxied CoA [radSrvrlp]
Description	This event occurs when a change of authorization, not acknowledged is received from the NAS server.

CoA authorize only access reject

Table 329. CoA authorize only access reject event

Event	CoA authorize only access reject
Event Type	coaAuthorizeOnlyAccessReject
Event Code	1649
Severity	Critical
Attribute	"mvnold"="12" "wlanId"="1", "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "aaaSrvrlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787", "rmtRadSrvrlp"="40.40.40.40"
Displayed on the web interface	CoA Authorize Only unsuccessful for AAA Server [rmtRadSrvrlp] for UE [ueMacAddr]
Description	This event occurs when the change of authorization is rejected.

CoA RWSG MWSG notification failure

Table 330. CoA RWSG MWSG notification failure event

Event	CoA RWSG MWSG notification failure
Event Type	coaRWSGMWSGNotifFailure
Event Code	1650
Severity	Major
Attribute	<pre> mvnold="12 "wlanId"=1 "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "user Name"=abc@xyz.com "realm"="wlan.mnc080.mcc405.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "apType" = " "ueMacAddr"="aa:bb:cc:gg:hh:ii" </pre>
Displayed on the web interface	Session Modify MWSG-RWSG Notification Failure/No response received
Description	This event occurs when the change of authorization in RADIUS /metro wireless service gateway notification fails.

Control and Data Plane Interface

NOTE: This event is not applicable for vSZ-H.

Following are the events related to control and data plane events.

- [DP connected](#)
- [GtpManager \(DP\) disconnected](#)
- [Session updated at DP](#)
- [Session update at DP failed](#)
- [Session deleted at DP](#)
- [Session delete at DP failed](#)
- [C2d configuration failed](#)

DP connected

Table 331. DP connected event

Event	DP connected
Event Type	connectedToDblade
Event Code	1201
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA", "ctrlBladeIp"="1.1.1.1", "dataBladeIp"="3.3.3.3", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	The connectivity between Control plane {{ctrlBladeIp}} and Data plane {{dataBladeIp}} is established at {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when control plane completes the configuration procedure successfully.

GtpManager (DP) disconnected

Table 332. GtpManager (DP) disconnected event

Event	GtpManager (DP) disconnected
Event Type	lostCnxnToDblade
Event Code	1202
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	The connectivity between Control plane [{ctrlBladelp}] and Data plane [{dataBladelp}] is lost at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when either the transmission control protocol connection is lost or when the control plane is unable to complete the configuration procedure.
Auto Clearance	This event triggers the alarm 1202, which is auto cleared by the event code 1201.

Session updated at DP

Table 333. Session updated at DP event

Event	Session updated at DP
Event Type	sessUpdatedAtDblade
Event Code	1205
Severity	Debug
Attribute	"mvnold"="12", "wlanId"="1", "zoneId"="10", "srcProcess"="aut", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has been updated at Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the session updates the request (C-D-SESS-UPD-REQ) successfully.

Session update at DP failed

Table 334. Session update at DP failed event

Event	Session update at DP failed
Event Type	sessUpdateErrAtDblade
Event Code	1206
Severity	Debug
Attribute	"mvnold"="12", "wlanId"="1", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "zoneld"="10", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{{uelmsi}}] and MSISDN [{{ueMsisdn}}] has failed to update at Data plane [{{dataBladelp}}] by Control plane [{{ctrlBladelp}}] at {produce.short.name} [{{SCGMgmtlp}}]
Description	This event occurs when the session update request fails (C-D-SESS-UPD-REQ). This is either due to a request timeout or a failed response.

Session deleted at DP

Table 335. Session deleted at DP event

Event	Session deleted at DP
Event Type	sessDeletedAtDblade
Event Code	1207
Severity	Debug
Attribute	"mvnold"="12", "wlanId"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{{uelmsi}}] and MSISDN [{{ueMsisdn}}] has been deleted from Data plane [{{dataBladelp}}] by Control plane [{{ctrlBladelp}}] at {produce.short.name} [{{SCGMgmtlp}}]

Table 335. Session deleted at DP event

Description	This event occurs when the session deletes request (C-D-SESS-DEL-REQ) is successfully acknowledged.
-------------	---

Session delete at DP failed

Table 336. Session delete at DP failed event

Event	Session delete at DP failed
Event Type	sessDeleteErrAtDblade
Event Code	1208
Severity	Debug
Attribute	"mvnld"="12", "wlanld"="1", "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="realm sent by UE", "ctrlBladelp"="1.1.1.1", "dataBladelp"="3.3.3.3", "SCGMgmtlp"="2.2.2.2", "ueMacAddr"="aa:bb:cc:gg:hh:ii", "uelmsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	TTG/PDG session for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] has failed to delete from Data plane [{dataBladelp}] by Control plane [{ctrlBladelp}] at {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the session delete request (C-D-SESS-DEL-REQ) results in a timeout or a failed response.

C2d configuration failed

Table 337. C2d configuration failed event

Event	C2d configuration failed
Event Type	c2dCfgFailed
Event Code	1209
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut", "realm"="NA" "ctrlBladeIp"="1.1.1.1", "dataBladeIp"="3.3.3.3", "SCGMgmtIp"="2.2.2.2", "cause"="<what was configured>"
Displayed on the web interface	Configuration [{cause}] from Control plane [{ctrlBladeIp}] failed to apply on Data plane [{dataBladeIp}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the configuration request (C-D-CFG-REQ) results in a timeout or a failed response.

NOTE: Refer to [Control and Data Plane Interface](#).

Client Events

All client events from the AP will be appended with tenant ID ("tenantUUID":"xxxxx").
Following are the events related to clients.

- Client authentication failed
- Client joined
- Client failed to join
- Client disconnected
- Client connection timed out
- Client authorization successfully
- Client authorization failed
- Client session expired
- Client roaming
- Client logged out
- 3rd party client join
- 3rd party client inactivity timeout
- 3rd party client authorization
- 3rd party client authorization failure
- 3rd party client session expiration
- 3rd party client roaming
- 3rd party client session logout
- Client roaming disconnected
- Client blocked
- Client grace period
- Onboarding registration succeeded
- Onboarding registration failed
- Remediation succeeded
- Remediation failed
- Force DHCP disconnected
- WDS device joined
- WDS device left
- Client is blocked because of barring UE rule

- Client is unblocked by barring UE rule
- Start CALEA mirroring client
- Stop CALEA mirroring client

Client authentication failed

Table 338. Client authentication failed event

Event	Client authentication failed
Event Type	clientAuthFailure
Event Code	201
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac]} failed to join WLAN [{ssid}] from AP [{apName&&apMac}] due to authentication failure.
Description	This event occurs when the client fails to join WLAN on the AP due to an authentication failure.

Client joined

Table 339. Client joined event

Event	Client joined
Event Type	clientJoin
Event Code	202
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac]} joined WLAN [{ssid}] from AP [{apName&&apMac}]
Description	This event occurs when the client session joins the WLAN on AP.

Client failed to join

Table 340. Client failed to join event

Event	Client failed to join
Event Type	clientJoinFailure
Event Code	203
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx" "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac]} failed to join WLAN [{ssid}] from AP [{apName&&apMac]}.
Description	This event occurs when the client fails to connect to the WLAN on the AP.

Client disconnected

Table 341. Client disconnected event

Event	Client disconnected
Event Type	clientDisconnect
Event Code	204
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanId"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="", "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac]} disconnected from WLAN [{ssid}] on AP [{apName&&apMac]}.
Description	This event occurs when the client disconnects from WLAN on AP.

Client connection timed out

Table 342. Client connection timed out event

Event	Client connection timed out
Event Type	clientInactivityTimeout
Event Code	205
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxx", "associationTime"="600", "wlanId"="xxxx", "userName"="xxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanId"=", "sessionDuration"=", "txBytes"=", "rxBytes"=", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac] disconnected from WLAN [{ssid}] on AP [{apName}&&apMac] due to inactivity
Description	This event occurs when client disconnects from WLAN on AP due to inactivity.

Client authorization successfully

Table 343. Client authorization successfully event

Event	Client authorization successfully
Event Type	clientAuthorization
Event Code	206
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxx", "wlanId"="xxxx", "userName"="xxxx", "clientIP"="x.x.x.x", "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac] of WLAN [{ssid}] from AP [{apName}&&apMac} was authorized.
Description	This event occurs when the client on WLAN AP is authorized.

Client authorization failed

Table 344. Client authorization failed event

Event	Client authorization failed
Event Type	clientAuthorizationFailure
Event Code	207
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x" "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac] of WLAN [{ssid}] from AP [{apName&&apMac}] was not authorized.
Description	This event occurs when the client on WLAN AP authorization fails.

Client session expired

Table 345. Client session expired event

Event	Client session expired
Event Type	clientSessionExpiration
Event Code	208
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanId"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="" "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac] exceeded the session time limit. Session terminated.
Description	This event occurs when the client exceeds the session time limit resulting in a session termination.

Client roaming

Table 346. Client roaming event

Event	Client roaming
Event Type	clientRoaming
Event Code	209
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x" "userId"="uuid"
Displayed on the web interface	AP [{apName}&&apMac]} radio [{toRadio]} detected client [{userName} IP clientMac]} in WLAN [{ssid]} roam from AP [{fromApName}&&fromApMac]}.
Description	This event occurs when the AP radio detects a client on AP.

Client logged out

Table 347. Client logged out event

Event	Client logged out
Event Type	clientSessionLogout
Event Code	210
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "associationTime"="600", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "vlanId"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="" "userId"="uuid"
Displayed on the web interface	Client [{userName} IP clientMac]} session logout.
Description	This event occurs when a client session is logged out.

3rd party client join

NOTE: This event is not applicable for vSZ-H.

Table 348. 3rd party client join event

Event	3rd party client join
Event Type	3rdPtyClientJoin
Event Code	211
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP clientMac}] joined Zone [{zoneName}] on DP [{dpName&&dpKey}}].
Description	This event occurs when a 3rd party client joins the AP zone session on the data plane.

3rd party client inactivity timeout

NOTE: This event is not applicable for vSZ-H.

Table 349. 3rd party client inactivity timeout event

Event	3rd party client inactivity timeout
Event Type	3rdPtyClientInactivityTimeout
Event Code	212
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP clientMac}] disconnected from Zone [{zoneName}] on DP [{dpName&&dpKey}}] due to inactivity.
Description	This event occurs when 3rd party client disconnects from an AP zone session on the data plane due to inactivity.

3rd party client authorization

NOTE: This event is not applicable for vSZ-H.

Table 350. 3rd party client authorization event

Event	3rd party client authorization
Event Type	3rdPtyClientAuthorization
Event Code	213
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd Party client [{clientIP clientMac}] of Zone [{zoneName}] on DP [{dpName&&dpKey}] was authorized.
Description	This event occurs when 3rd party client on AP zone session is authorized.

3rd party client authorization failure

NOTE: This event is not applicable for vSZ-H.

Table 351. 3rd party client authorization failure event

Event	3rd party client authorization failure
Event Type	3rdPtyClientAuthorizationFailure
Event Code	214
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP clientMac}] of Zone [{zoneName}] on DP [{dpName&&dpKey}] was not authorized.
Description	This event occurs when the 3rd party client on the AP zone session is not authorized.

3rd party client session expiration

NOTE: This event is not applicable for vSZ-H.

Table 352. 3rd party client session expiration event

Event	3rd party client session expiration
Event Type	3rdPtyClientSessionExpiration
Event Code	215
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP clientMac}] of Zone [{zoneName}] on DP [{dpName&&dpKey}] exceeded the session time limit. Session terminated.
Description	This event occurs when the 3rd party client on the AP zone exceeds the session time limit, resulting in session termination.

3rd party client roaming

NOTE: This event is not applicable for vSZ-H.

Table 353. 3rd party client roaming event

Event	3rd party client roaming
Event Type	3rdPtyClientRoaming
Event Code	216
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	data plane [{dpName&&dpKey}] detected 3rd party client [{clientIP clientMac}] in Zone [{zoneName}] on DP [{dpName fromDpMac}].
Description	This event occurs when the data plane detects a 3rd party client in the AP zone.

3rd party client session logout

NOTE: This event is not applicable for vSZ-H.

Table 354. 3rd party client session logout event

Event	3rd party client session logout
Event Type	3rdPtyClientSessionLogout
Event Code	217
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "clientIP"="x.x.x.x", "zoneUUID"="xxxxxx", "userId"="uuid"
Displayed on the web interface	3rd party client [{clientIP clientMac}] of Zone [{zoneName}] on DP [{dpName dpKey}] occurred session logout.
Description	This event occurs when 3rd party client on AP zone data plane occurs. This results in a session logs out.

Client roaming disconnected

Table 355. Client roaming disconnected event

Event	Client roaming disconnected
Event Type	smartRoamDisconnect
Event Code	218
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "assoicationTime"="600", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "apLocation"="", "username"="", "osType"="", "radio"="", "wlanId"="", "sessionDuration"="", "txBytes"="", "rxBytes"="", "rssi"="", "receivedSignalStrength"="", "apGps"="", "hostname"="", "encryption"="", "disconnectReason"="", "bssid"="", "ni_rx_rssilo_cnt"="", "ni_rx_tot_cnt"="", "ns_rx_rssilo_cnt"="", "ns_rx_tot_cnt"="", "ni_tx_xput_lo_cnt"="", "ni_tx_xput_lo_dur"="", "Instantaneous rssi"="", "Xput"="", "userId"="uuid"
Displayed on the web interface	Client [{userName IP clientMac}] disconnected from WLAN [{ssid}] on AP [{apName&&apMac}] due to SmartRoam policy.

Table 355. Client roaming disconnected event

Description	This event occurs when the client disconnects from the WLALN due to a smart roam policy.
-------------	--

Client blocked

Table 356. Client blocked event

Event	Client blocked
Event Type	clientBlockByDeviceType
Event Code	219
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "deviceType"="xxxxx", "ssid"="xxxxx", "wlanId"="xxxxx",
Displayed on the web interface	Client [{clientMac}] was recognized as [{deviceType}], and blocked by a device policy in AP [{apMac}]
Description	This event occurs when a client is blocked by a device policy.

Client grace period

Table 357. Client grace period event

Event	Client grace period
Event Type	clientGracePeriod
Event Code	220
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x"
Displayed on the web interface	Client [{userName} clientIP clientMac}] reconnects WLAN [{ssid}] on AP [{apName}&&apMac}] within grace period. No additional authentication is required.
Description	This event occurs when the when the STa interface reconnects and authorizes due to the grace period.

Onboarding registration succeeded

Table 358. Onboarding registration succeeded event

Event	Onboarding registration succeeded
Event Type	onboardingRegistrationSuccess
Event Code	221
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid", "apLocation"="xxxx", "groupName"="xxxx", "vlanId"="xxxx", "osType"="xxxx", "userAgent"="xxxx"
Displayed on the web interface	Client [{userName} clientIP clientMac]} of WLAN [{ssid}] on AP [{apName}&&apMac]} on boarding registration succeeded.
Description	This event occurs when the client on boarding registration is successful.

Onboarding registration failed

Table 359. Onboarding registration failed event

Event	Onboarding registration failed
Event Type	onboardingRegistrationFailure
Event Code	222
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "wlanId"="xxxxx", "userName"="xxxxx", "clientIP"="x.x.x.x", "userId"="uuid", "apLocation"="xxxx", "groupName"="xxxx", "vlanId"="xxxx", "osType"="xxxx", "userAgent"="xxxx", "reason"="xxxxx"
Displayed on the web interface	Client [{userName} clientIP clientMac]} of WLAN [{ssid}] on AP [{apName}&&apMac]} on boarding registration failed because of [{reason]}.
Description	This event occurs when the client onboarding registration fails.

Remediation succeeded

Table 360. Remediation succeeded event

Event	Remediation succeeded
Event Type	remediationSuccess
Event Code	223
Severity	Informational
Attribute	"remediationType"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "userName"="xxxxx", "userId"="uuid", "reason"="xxxxx"
Displayed on the web interface	Remediation of type [{remediationType}] finished successfully on client [{clientIP clientMac}] for user [{userName}]
Description	This event occurs when the client remediation is successful.

Remediation failed

Table 361. Remediation failed event

Event	Remediation failed
Event Type	remediationFailure
Event Code	224
Severity	Informational
Attribute	"remediationType"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "userName"="xxxxx", "userId"="uuid"
Displayed on the web interface	Remediation of type [{remediationType}] failed on client [{clientIP clientMac}] for user [{userName}]
Description	This event occurs when the client remediation fails.

Force DHCP disconnected

Table 362. Force DHCP disconnected event

Event	Force DHCP disconnected
Event Type	forceDHCPDisconnect
Event Code	225
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "bssid"="", "wlanId"="xxxxx", "tenantUUID"="xxxxx", "clientIP"="x.x.x.x", "apName"="", "vlanId"=, "radio"="", "encryption"=""
Displayed on the web interface	Client [{userName} IP clientMac]} disconnected from WLAN [{ssid}] on AP [{apName&&apMac}] due to force-dhcp.
Description	This event occurs when the client disconnects by force from the dynamic host configuration protocol.

WDS device joined

Table 363. WDS device joined event

Event	WDS device joined
Event Type	wdsDeviceJoin
Event Code	226
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "wdsDeviceMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Device [{wdsDeviceMac}] sends traffic via Client [{clientMac}] in AP [{apName&&apMac}]
Description	This event occurs when a subscriber device joins the network provided by a Customer-Premises Equipment (CPE) of a client associated AP through a wireless distribution system (WDS) mode.

WDS device left

Table 364. WDS device left event

Event	WDS device left
Event Type	wdsDeviceLeave
Event Code	227
Severity	Informational
Attribute	"apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx", "wdsDeviceMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Device [{wdsDeviceMac}] stops traffic via Client [{clientMac}] in AP [{apName&&apMac}].
Description	This event occurs when a subscriber device leaves the network provided by a CPE client associated to an AP through WDS.

Client is blocked because of barring UE rule

Table 365. Client is blocked because of barring UE rule event

Event	Client is blocked because of barring UE rule
Event Type	clientBlockByBarringUERule
Event Code	228
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Client [clientMac] of WLAN [ssid] from AP [{apName&&apMac}] was blocked because of barring UE rule.
Description	This event occurs when a client is temporally blocked by the UE barring rule.

Client is unblocked by barring UE rule

Table 366. Client is unblocked by barring UE rule event

Event	Client is unblocked by barring UE rule
Event Type	clientUnblockByBarringUERule
Event Code	229
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "clientMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Client [clientMac] of WLAN [ssid] from AP [apName&&apMac] was unblocked
Description	This event occurs when a client is unblocked by the UE barring rule.

Start CALEA mirroring client

Table 367. Start CALEA mirroring client event

Event	Start CALEA mirroring client
Event Type	caleaMirroringStart
Event Code	230
Severity	Informational
Attribute	"userName"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Start CALEA mirroring client [userName IP clientMac] on WLAN [ssid] from AP [apName&&apMac].
Description	This event occurs when CALEA is started for mirroring the client image.

Stop CALEA mirroring client

Table 368. Stop CALEA mirroring client event

Event	Stop CALEA mirroring client
Event Type	caleaMirroringStop
Event Code	231
Severity	Informational
Attribute	"userName"="xxxxx", "clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apName"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "authType"="xxxxx", "txBytes"="xxxxx", "rxBytes"="xxxxx"
Displayed on the web interface	Stop CALEA mirroring client [{userName IP clientMac}] on WLAN [{ssid}] with authentication type [{authType}] from AP [{apName&&apMac}]. TxBytes[{txBytes}], RxBytes[{rxBytes}]
Description	This event occurs when CALEA is stops mirroring the client image.

Cluster Events

Following are the events related to clusters.

Cluster created successfully	New node joined successfully	New node failed to join
Node removal completed	Node removal failed	Node out of service
Cluster in maintenance state	Cluster back in service	Cluster backup completed
Cluster backup failed	Cluster restore completed	Cluster restore failed
Cluster node upgrade completed	Entire cluster upgraded successfully	Cluster upgrade failed
Cluster application stopped	Cluster application started	Cluster backup started
Cluster upgrade started	Cluster leader changed	Node bond interface down
Node bond interface up	Node IP address changed	Node physical interface down
Node physical interface up	Cluster node rebooted	NTP time synchronized
Cluster node shutdown	Cluster upload started	Cluster upload completed
Cluster upload failed	SSH tunnel switched	Cluster remove node started
Node back in service	Disk usage exceed threshold	Cluster out of service
Initiated moving APs in node to a new cluster	Cluster upload vSZ-D firmware started	Cluster upload vSZ-D firmware completed
Cluster upload vSZ-D firmware failed	Cluster upload AP firmware started	Cluster upload AP firmware completed
Cluster upload AP firmware failed	Cluster add AP firmware started	Cluster add AP firmware completed
Cluster add AP firmware failed	Cluster name is changed	Unsync NTP time
Cluster upload KSP file started	Cluster upload KSP file completed	Cluster upload KSP file failed
Configuration backup started	Configuration backup succeeded	Configuration backup failed
Configuration restore succeeded	Configuration restore failed	AP Certificate Expired
AP Certificate Updated	Configuration restore started	Upgrade SSTable failed
Reindex elastic search finished	Initiated APs contact APR	Node IPv6 address added
Node IPv6 address deleted		

Cluster created successfully

Table 369. Cluster created successfully event

Event	Cluster created successfully
Event Type	clusterCreatedSuccess
Event Code	801
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Cluster [{clusterName}] created with node [{nodeName}]
Description	This event occurs when a cluster and a node are created.

New node joined successfully

Table 370. New node joined successfully event

Event	New node joined successfully
Event Type	newNodeJoinSuccess
Event Code	802
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	New node [{nodeName}] joined cluster [{clusterName}]
Description	This event occurs when a node joins a cluster session.

New node failed to join

Table 371. New node failed to join event

Event	New node failed to join
Event Type	newNodeJoinFailed
Event Code	803
Severity	Critical
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	New node [{nodeName}] failed to join cluster [{clusterName}]
Description	This event occurs when a node fails to join a cluster session. The controller web interface displays the error message.
Auto Clearance	This event triggers the alarm 801, which is auto cleared by the event code 802.

Node removal completed

Table 372. Node removal completed event

Event	Node removal completed
Event Type	removeNodeSuccess
Event Code	804
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] removed from cluster [{clusterName}]
Description	This event occurs when a node is removed from the cluster session.

Node removal failed

Table 373. Node removal failed event

Event	Node removal failed
Event Type	removeNodeFailed
Event Code	805
Severity	Major
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] failed to remove from cluster [{clusterName}].
Description	This event occurs when a node cannot be removed from the cluster.
Auto Clearance	This event triggers the alarm 802, which is auto cleared by the event code 804.

Node out of service

Table 374. Node out of service event

Event	Node out of service
Event Type	nodeOutOfService
Event Code	806
Severity	Critical
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is out of service. Reason:[{reason}].
Description	This event occurs when a node is out of service.
Auto Clearance	This event triggers the alarm 803, which is auto cleared by the event code 835.

Cluster in maintenance state

Table 375. Cluster in maintenance state event

Event	Cluster in maintenance state
Event Type	clusterInMaintenanceState
Event Code	807
Severity	Critical
Attribute	"clusterName"="xxx"
Displayed on the web interface	[[clusterName]] is in maintenance state
Description	This event occurs when a node is in a maintenance state.
Auto Clearance	This event triggers the alarm 804, which is auto cleared by the event code 808.

Cluster back in service

Table 376. Cluster back in service event

Event	Cluster back in service
Event Type	clusterBackToInService
Event Code	808
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	[[clusterName]] is now in service
Description	This event occurs when a cluster is back in service.

Cluster backup completed

Table 377. Cluster backup completed event

Event	Cluster backup completed
Event Type	backupClusterSuccess
Event Code	809
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup completed
Description	This event occurs when a cluster backup is complete.

Cluster backup failed

Table 378. Cluster backup failed event

Event	Cluster backup failed
Event Type	backupClusterFailed
Event Code	810
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] backup failed. Reason[{reason}]
Description	This event occurs when a cluster backup fails.
Auto Clearance	This event triggers the alarm 805, which is auto cleared by the event code 809.

Cluster restore completed

Table 379. Cluster restore completed event

Event	Cluster restore completed
Event Type	restoreClusterSuccess
Event Code	811
Severity	Informational
Attribute	"nodeName"="xxx", "clusterName"="xxx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] restore completed
Description	This event occurs when restoration of a node to a cluster is successful.

Cluster restore failed

Table 380. Cluster restore failed event

Event	Cluster restore failed
Event Type	restoreClusterFailed
Event Code	812
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] restore failed. Reason [{reason}].
Description	This event occurs when restoration of a node in a cluster fails.
Auto Clearance	This event triggers the alarm 806, which is auto cleared by the event code 811.

Cluster node upgrade completed

Table 381. Cluster node upgrade completed event

Event	Cluster node upgrade completed
Event Type	upgradeClusterNodeSuccess
Event Code	813
Severity	Informational
Attribute	clusterName="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] upgraded from [{fromVersion}] to [{toVersion}]
Description	This event occurs when version upgrade of a node is successful.

Entire cluster upgraded successfully

Table 382. Entire cluster upgraded successfully event

Event	Entire cluster upgraded successfully
Event Type	upgradeEntireClusterSuccess
Event Code	814
Severity	Informational
Attribute	clusterName="xxx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Cluster [{clusterName}] upgraded from [{fromVersion}] to [{toVersion}].
Description	This event occurs when version upgrade of a cluster is successful.

Cluster upgrade failed

Table 383. Cluster upgrade failed event

Event	Cluster upgrade failed
Event Type	upgradeClusterFailed
Event Code	815
Severity	Major
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "fromVersion"="x.x", "toVersion"="x.x"
Displayed on the web interface	Cluster [{clusterName}] could not be upgraded from [{fromVersion}] to [{toVersion}].
Description	This event occurs when the version upgrade of a cluster fails.
Auto Clearance	This event triggers the alarm 807, which is auto cleared by the event code 814.

Cluster application stopped

Table 384. Cluster application stopped event

Event	Cluster application stopped
Event Type	clusterAppStop
Event Code	816
Severity	Critical
Attribute	"appName"="xxxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Application [{appName}] on node [{nodeName}] stopped
Description	This event occurs when an application on node is stopped.
Auto Clearance	This event triggers the alarm 808, which is auto cleared by the event code 817.

Cluster application started

Table 385. Cluster application started event

Event	Cluster application started
Event Type	clusterAppStart
Event Code	817
Severity	Informational
Attribute	"appName"="xxxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Application [{appName}] on node [{nodeName}] started
Description	This event occurs when an application on node starts.

Cluster backup started

Table 386. Cluster backup started event

Event	Cluster backup started
Event Type	clusterBackupStart
Event Code	818
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Starting backup in cluster[{clusterName}]...
Description	This event occurs when a backup for a node commences.

Cluster upgrade started

Table 387. Cluster upgrade started event

Event	Cluster upgrade started
Event Type	clusterUpgradeStart
Event Code	819
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Starting upgrade in cluster[{clusterName}]
Description	This event occurs when an upgrade for a node commences.

Cluster leader changed

Table 388. Cluster leader changed event

Event	Cluster leader changed
Event Type	clusterLeaderChanged
Event Code	820
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] promoted to leader
Description	This event occurs when a node is changed to a lead node.

Node bond interface down

Table 389. Node bond interface down event

Event	Node bond interface down
Event Type	nodeBondInterfaceDown
Event Code	821
Severity	Major
Attribute	"nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Network interface [{networkInterface} {ifName}] on node [{nodeName}] is down.
Description	This event occurs when the network interface of a node is down.
Auto Clearance	This event triggers the alarm 809, which is auto cleared by the event code 822.

Node bond interface up

Table 390. Node bond interface up event

Event	Node bond interface up
Event Type	nodeBondInterfaceUp
Event Code	822
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Network interface [{networkInterface} {ifName}] on node [{nodeName}] is up.
Description	This event occurs when the network interface of a node is up.

Node IP address changed

Table 391. Node IP address changed event

Event	Node IP address changed
Event Type	nodeIPChanged
Event Code	823
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx", "ip"="xxx.xxx.xxx.xxx"
Displayed on the web interface	IP address of network interface [{networkInterface ifName}] on node [{nodeName}] changed to [{ip}].
Description	This event occurs when the node's network interface IP address changes.

Node physical interface down

Table 392. Node physical interface down event

Event	Node physical interface down
Event Type	nodePhyInterfaceDown
Event Code	824
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Physical network interface [{networkInterface ifName}] on node [{nodeName}] is down.
Description	This event occurs when the node's physical interface is down.
Auto Clearance	This event triggers the alarm 810, which is auto cleared by the event code 825.

Node physical interface up

Table 393. Node physical interface up event

Event	Node physical interface up
Event Type	nodePhyInterfaceUp
Event Code	825
Severity	Informational
Attribute	"nodeMac"=" xx:xx:xx:xx:xx:xx", "ifName"="xxxx"
Displayed on the web interface	Physical network interface [{networkInterface ifName}] on node [{nodeName}] is up.
Description	This event occurs when the node's physical interface is up.

Cluster node rebooted

Table 394. Cluster node rebooted event

Event	Cluster node rebooted
Event Type	nodeRebooted
Event Code	826
Severity	Major
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx", "clusterName"="xxx",
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] rebooted
Description	This event occurs when the node, belonging to a cluster reboots.
Auto Clearance	This event triggers the alarm 811, which is auto cleared by the event code 826.

NTP time synchronized

Table 395. NTP time synchronized event

Event	NTP time synchronized
Event Type	ntpTimeSynched
Event Code	827
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"=" xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Date and time settings on node [{nodeName}] synchronized with NTP server
Description	This event occurs when the date and time settings of a node synchronizes with the NTP server.

Cluster node shutdown

Table 396. Cluster node shutdown event

Event	Cluster node shutdown
Event Type	nodeShutdown
Event Code	828
Severity	Major
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] has been shut down
Description	This event occurs when the node is shut down.
Auto Clearance	This event triggers the alarm 813, which is auto cleared by the event code 826.

Cluster upload started

Table 397. Cluster upload started event

Event	Cluster upload started
Event Type	clusterUploadStart
Event Code	830
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting upload in cluster [{clusterName}]
Description	This event occurs when the cluster upload process starts.

Cluster upload completed

Table 398. Cluster upload completed event

Event	Cluster upload completed
Event Type	uploadClusterSuccess
Event Code	831
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload completed
Description	This event occurs when the cluster upload process is successful.

Cluster upload failed

Table 399. Cluster upload failed event

Event	Cluster upload failed
Event Type	uploadClusterFailed
Event Code	832
Severity	Major
Attribute	"clusterName"="xxx", "reason"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload failed. Reason:[{reason}]

Table 399. Cluster upload failed event

Description	This event occurs when the cluster upload process fails.
-------------	--

SSH tunnel switched

Table 400. SSH tunnel switched event

Event	SSH tunnel switched
Event Type	sshTunnelSwitched
Event Code	833
Severity	Major
Attribute	"clusterName"="xx", "nodeName"="xx", "nodeMac"="xx.xx.xx.xx.xx.xx", "wsgMgmtIp"="xx.xx.xx.xx", "status"="ON->OFF", "sourceBladeUUID"="054ee469"
Displayed on the web interface	Node [{nodeName}] SSH tunnel switched [{status}]
Description	This event occurs when the SSH tunnel is switched.

Cluster remove node started

Table 401. Cluster remove node started event

Event	Cluster remove node started
Event Type	removeNodeStarted
Event Code	834
Severity	Informational
Attribute	"clusterName"="xxx", "nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	Start to remove node [{nodeName}] from cluster [{clusterName}]
Description	This event occurs when the node start is removed.

Node back in service

Table 402. Node back in service event

Event	Node back in service
Event Type	nodeBackToInService
Event Code	835
Severity	Informational
Attribute	"clusterName"="xx", "nodeName" = "xxx", "nodeMac"="xx:xx:xx:xx:xx"
Displayed on the web interface	Node [{nodeName}] in cluster [{clusterName}] is in service
Description	This event occurs when a node status changes to 'in service'.

Disk usage exceed threshold

Table 403. Disk usage exceed threshold

Event	Disk usage exceed threshold
Event Type	diskUsageExceed
Event Code	838
Severity	Critical
Attribute	"nodeName"="xx", "status"="xx"
Displayed on the web interface	The disk usage of node [{nodeName}] is over {status}%.
Description	This event occurs when the disk usage exceeds the threshold limit of 96%. For event 838, the threshold is 95%.
Auto Clearance	This event triggers the alarm 834, which is auto cleared by the event code 838.

Cluster out of service

Table 404. Cluster out of service event

Event	Cluster out of service
Event Type	clusterOutOfService
Event Code	843
Severity	Critical
Attribute	"clusterName"="xx"
Displayed on the web interface	Cluster [{clusterName}] is out of service.
Description	This event occurs when the cluster is out of service.
Auto Clearance	This event triggers the alarm 843, which is auto cleared by the event code 808.

Initiated moving APs in node to a new cluster

Table 405. Initiated moving APs in node to a new cluster event

Event	Initiated moving APs in node to a new cluster
Event Type	clusterInitiatedMovingAp
Event Code	844
Severity	Informational
Attribute	"nodeName"="xxx" "clusterName"="xxx"
Displayed on the web interface	Initiated moving APs in node [{nodeName}] of cluster [{clusterName}] to a new cluster.
Description	This event occurs when the command to move the APs in the node to another cluster is received.

NOTE: Events 845, 846 and 847 are not applicable for SCG.

Cluster upload vSZ-D firmware started

Table 406. Cluster upload vSZ-D firmware started event

Event	Cluster upload vSZ-D firmware started
Event Type	clusterUploadVDPFirmwareStart
Event Code	845
Severity	Informational
Attribute	"clusterName"="xx"
Displayed on the web interface	Starting upload vSZ-D firmware in cluster [{clusterName}]
Description	This event occurs when the cluster starts and uploads vSZ-data plane firmware.

Cluster upload vSZ-D firmware completed

Table 407. Cluster upload vSZ-D firmware completed event

Event	Cluster upload vSZ-D firmware completed
Event Type	uploadClusterVDPFirmwareSuccess
Event Code	846
Severity	Informational
Attribute	"clusterName"="xxx" "status"="StartTime:yyyy-MM-dd hh:mm:ss, EndTime:yyyy-MM-dd hh:mm:ss, Duration:hh:mm:ss"
Displayed on the web interface	Cluster [{clusterName}] upload vSZ-D firmware completed. [{status}]
Description	This event occurs when the cluster upload process of vSZ-data plane firmware is successful.

Cluster upload vSZ-D firmware failed

Table 408. Cluster upload vSZ-D firmware failed event

Event	Cluster upload vSZ-D firmware failed
Event Type	uploadClusterVDPFirmwareFailed
Event Code	847
Severity	Informational
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload vSZ-D firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster upload process of vSZ-data plane firmware fails.

Cluster upload AP firmware started

Table 409. Cluster upload AP firmware started event

Event	Cluster upload AP firmware started
Event Type	clusterUploadAPFirmwareStart
Event Code	848
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting upload AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster upload process to the AP firmware starts.

Cluster upload AP firmware completed

Table 410. Cluster upload AP firmware completed event

Event	Cluster upload AP firmware completed
Event Type	clusterUploadAPFirmwareSuccess
Event Code	849
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware completed.
Description	This event occurs when the cluster upload process to the AP firmware is successful.

Cluster upload AP firmware failed

Table 411. Cluster upload AP firmware failed event

Event	Cluster upload AP firmware failed
Event Type	clusterUploadAPFirmwareFailed
Event Code	850
Severity	Major
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] upload AP firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster upload process to the AP firmware fails.
Auto Clearance	This event triggers the alarm 850, which is auto cleared by the event code 851.

Cluster add AP firmware started

Table 412. Cluster add AP firmware started event

Event	Cluster add AP firmware started
Event Type	clusterAddAPFirmwareStart
Event Code	851
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting add AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster add process to the AP firmware process starts.

Cluster add AP firmware completed

Table 413. Cluster add AP firmware completed event

Event	Cluster add AP firmware completed
Event Type	clusterAddAPFirmwareSuccess
Event Code	852
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Starting add AP firmware in cluster [{clusterName}]
Description	This event occurs when the cluster add process to the AP firmware is successful.

Cluster add AP firmware failed

Table 414. Cluster add AP firmware failed event

Event	Cluster add AP firmware failed
Event Type	clusterAddAPFirmwareFailed
Event Code	853
Severity	Major
Attribute	"reason"="xxx", "clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] add AP firmware failed. Reason:[{reason}].
Description	This event occurs when the cluster add process to the AP firmware fails.
Auto Clearance	This event triggers the alarm 853, which is auto cleared by the event code 852.

Cluster name is changed

Table 415. Cluster name is changed event

Event	Cluster name is changed
Event Type	clusterNameChanged
Event Code	854
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster name is changed to [{clusterName}]
Description	<p>This event occurs when the cluster node name is modified. By enabling email and SNMP notification in the controller user interface (Configuration > System > Event Management) of the event, SNMP trap and email will be generated on successful cluster-name modification.</p> <p>Cluster name change will fail if any node in either a two, three or four node cluster is out of service. For example, if in a three node cluster, any one node is powered off or the Ethernet cable is unplugged, cluster name change will fail.</p>

Unsync NTP time

Table 416. Unsync NTP time event

Event	Unsync NTP time
Event Type	unsyncNTPTime
Event Code	855
Severity	Major
Attribute	"reason"="xxx", "clusterName"="xxx, "status"="xxx"
Displayed on the web interface	Node [{nodeName}] time is not synchronized because of [{reason}]. The time difference is [{status}] seconds.
Description	This event occurs when the cluster time is not synchronized.

Cluster upload KSP file started

Table 417. Cluster upload KSP file started event

Event	Cluster upload KSP file started
Event Type	clusterUploadKspFileStart
Event Code	856
Severity	Informational
Attribute	"clusterName"="xxx,
Displayed on the web interface	Cluster [{clusterName}] upload KSP file completed.
Description	This event occurs when the cluster starts the upload process of the <i>ksp</i> file.

Cluster upload KSP file completed

Table 418. Cluster upload KSP file completed event

Event	Cluster upload KSP file completed
Event Type	clusterUploadKspFileSuccess
Event Code	857
Severity	Informational
Attribute	"clusterName"="xxx
Displayed on the web interface	Starting upload KSP file in cluster [{clusterName}]
Description	This event occurs when the cluster uploads the <i>ksp</i> file successfully.

Cluster upload KSP file failed

Table 419. Cluster upload KSP file failed event

Event	Cluster upload KSP file failed
Event Type	clusterUploadKspFileFailed
Event Code	858
Severity	Major
Attribute	"clusterName"="xxx
Displayed on the web interface	Cluster [{clusterName}] upload KSP file failed.
Description	This event occurs when the cluster fails to uploads the <i>ksp</i> file.
Auto Clearance	This event triggers the alarm 858, which is auto cleared by the event code 857.

Configuration backup started

Table 420. Configuration backup started event

Event	Configuration backup started
Event Type	clusterCfgBackupStart
Event Code	860
Severity	Informational
Attribute	"clusterName"="xxx"

Table 420. Configuration backup started event

Displayed on the web interface	Cluster [{clusterName}] configuration backup is started.
Description	This event occurs when cluster configuration backup starts.

Configuration backup succeeded

Table 421. Configuration backup succeeded

Event	Configuration backup succeeded
Event Type	clusterCfgBackupSuccess
Event Code	861
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup succeeded.
Description	This event occurs when cluster backup configuration is successful.

Configuration backup failed

Table 422. Configuration backup failed event

Event	Configuration backup failed
Event Type	clusterCfgBackupFailed
Event Code	862
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration backup failed.
Description	This event occurs when backup configuration fails.
Auto Clearance	This event triggers the alarm 862, which is auto cleared by the event code 861.

Configuration restore succeeded

Table 423. Configuration restore succeeded event

Event	Configuration restore succeeded
Event Type	clusterCfgRestoreSuccess
Event Code	863
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore succeeded.
Description	This event occurs when the cluster restore configuration is successful.

Configuration restore failed

Table 424. Configuration restore failed event

Event	Configuration restore failed
Event Type	clusterCfgRestoreFailed
Event Code	864
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore failed.
Description	This event occurs when the restore configuration fails.
Auto Clearance	This event triggers the alarm 864, which is auto cleared by the event code 863.

AP Certificate Expired

Table 425. AP Certificate Expired event

Event	AP Certificate Expired
Event Type	apCertificateExpire
Event Code	865
Severity	Critical
Attribute	"count"="XXX"
Displayed on the web interface	[[count]] APs need to update their certificates.
Description	This event occurs when the AP certificate expires.
Auto Clearance	This event triggers the alarm 865, which is auto cleared by the event code 866.

AP Certificate Updated

Table 426. AP Certificate Updated event

Event	AP Certificate Updated
Event Type	apCertificateExpireClear
Event Code	866
Severity	Informational
Attribute	"count"="XXX"
Displayed on the web interface	[[count]] APs need to update their certificates.
Description	This event occurs when the AP certificates are updated.

Configuration restore started

Table 427. Configuration restore started event

Event	Configuration restore started
Event Type	clusterCfgRestoreStarted
Event Code	867
Severity	Informational
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{clusterName}] configuration restore started.
Description	This event occurs when the cluster configuration is restored.

Upgrade SSTable failed

Table 428. Upgrade SSTable failed event

Event	Upgrade SSTable failed
Event Type	upgradeSSTableFailed
Event Code	868
Severity	Major
Attribute	"nodeName"="xxx"
Displayed on the web interface	Node [{nodeName}] upgrade SSTable failed.
Description	This event occurs when the upgrade to the SS table fails.

Reindex elastic search finished

Table 429. Reindex elastic search finished event

Event	Reindex elastic search finished
Event Type	
Event Code	869
Severity	Major
Attribute	
Displayed on the web interface	
Description	This event occurs when the re-index elastic search is completed.

Initiated APs contact APR

Table 430. Initiated APs contact APR event

Event	Initiated APs contact APR
Event Type	clusterInitContactApr
Event Code	870
Severity	Major
Attribute	"clusterName"="xxx"
Displayed on the web interface	Cluster [{{clusterName}}] initiated APs contact APR
Description	This event occurs on receiving APs contact APR configuration command.

Node IPv6 address added

Table 431. Node IPv6 address added event

Event	Node IPv6 address added
Event Type	nodeIPv6Added
Event Code	2501
Severity	Informational
Attribute	"nodeMac"="xxx", "ifName"=" xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network interface [{networkInterface ifName}] on node [{nodeName}] added IPv6 address [{ip}].
Description	This event occurs when the node adds the IPv6 address.

Node IPv6 address deleted

Table 432. Node IPv6 address deleted event

Event	Node IPv6 address deleted
Event Type	nodeIPv6Deleted
Event Code	2502
Severity	Informational
Attribute	"nodeMac"="xxx", "ifName"=" xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network interface [{networkInterface ifName}] on node [{nodeName}] deleted IPv6 address [{ip}].
Description	This event occurs when the node deletes the IPv6 address.

NOTE: Refer to [Cluster Alarms](#).

Configuration Events

Following are the events related to configuration.

- [Configuration updated](#)
- [Configuration update failed](#)
- [Configuration receive failed](#)
- [Incorrect flat file configuration](#)
- [Zone configuration preparation failed](#)
- [AP configuration generation failed](#)
- [End-of-life AP model detected](#)
- [VLAN configuration mismatch on non-DHCP/NAT WLAN](#)
- [VLAN configuration mismatch on DHCP/NAT WLAN](#)

Configuration updated

Table 433. Configuration updated event

Event	Configuration updated
Event Type	cfgUpdSuccess
Event Code	1007
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="cnr", "realm"="NA" "processName"="aut" "SCGMgmtIp"="x.x.x.x" "cause"="xx"
Displayed on the web interface	Configuration <code>{{cause}}</code> applied successfully in <code>{{processName}}</code> process at <code>{produce.short.name} {{SCGMgmtIp}}</code>
Description	This event occurs when the configuration notification receiver (CNR) process successfully applies the configuration to the modules.

Configuration update failed

Table 434. Configuration update failed event

Event	Configuration update failed
Event Type	cfgUpdFailed
Event Code	1008
Severity	Debug

Table 434. Configuration update failed event

Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" , "srcProcess"="cnr" "realm"="NA" "processName"="aut" "SCGMgmtIp"="x.x.x.x" "cause"="xx"
Displayed on the web interface	Failed to apply configuration [{cause}] in [{processName}] process at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the CNR receives a negative acknowledgment when applying the configuration settings to the module. Possible cause is that a particular process/module is down.

Configuration receive failed

Table 435. Configuration receive failed event

Event	Configuration receive failed
Event Type	cfgRcvFailed
Event Code	1009
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" , "srcProcess"="cnr" "realm"="NA" "SCGMgmtIp"="x.x.x.x" , "cause"="xx"
Displayed on the web interface	Failed to fetch configuration [{cause}] by CNR in {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the CNR receives an error or negative acknowledgment/improper/incomplete information from the configuration change notifier (CCN).

Incorrect flat file configuration

Table 436. Incorrect flat file configuration event

Event	Incorrect flat file configuration
Event Type	incorrectFlatFileCfg
Event Code	1012
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" , "realm"="NA" , "SCGMgmtIp"="xxx" , "cause"="xxx" , "file"="xx"

Table 436. Incorrect flat file configuration event

Displayed on the web interface	[[srcProcess]] detected an configuration parameter is incorrectly configured in file [[file]] at {produce.short.name} [[SCGMgmtIp]].
Description	This event occurs when any flat file configuration parameter is not semantically or syntactically correct.

Zone configuration preparation failed

Table 437. Zone configuration preparation failed event

Event	Zone configuration preparation failed
Event Type	zoneCfgPrepareFailed
Event Code	1021
Severity	Major
Attribute	"nodeMac"="50:A7:33:24:E7:90", "zoneName"="openZone"
Displayed on the web interface	Failed to prepare zone [[zoneName]] configuration required by ap configuration generation
Description	This event occurs when the controller is unable to prepare a zone configuration required by the AP.

AP configuration generation failed

Table 438. AP configuration generation failed event

Event	AP configuration generation failed
Event Type	apCfgGenFailed
Event Code	1022
Severity	Major
Attribute	"nodeMac"="50:A7:33:24:E7:90", "zoneName"="openZone", "apCfgGenFailedCount"="25"
Displayed on the web interface	Failed to generate configuration for [[apCfgGenFailedCount]] AP(s) under zone[[zoneName]].
Description	This event occurs when the controller fails to generate the AP configuration under a particular zone.

End-of-life AP model detected

Table 439. End-of-life AP model detected event

Event	End-of-life AP model detected
Event Type	cfgGenSkippedDueToEolAp
Event Code	1023
Severity	Major
Attribute	"nodeMac"="50:A7:33:24:E7:90", "zoneName"="openZone", "model"="R300,T300"
Displayed on the web interface	Detected usage of end-of-life ap model(s)[{model}] while generating configuration for AP(s) under zone[{zoneName}]
Description	This event occurs when the controller detects the AP model's end-of-life under a certain zone.

VLAN configuration mismatch on non-DHCP/NAT WLAN

Table 440. VLAN configuration mismatch on non-DHCP/NAT WLAN event

Event	VLAN configuration mismatch detected between configured and resolved VLAN with DVLAN/VLAN pooling configuration on non-DHCP/NAT WLAN.
Event Type	apCfgNonDhcpNatWlanVlanConfigMismatch
Event Code	1024
Severity	Critical
Attribute	"ssid"="xxxx", "configuredVlan"="5", "vlanId"="11", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	DHCP/NAT gateway AP [{apMac}] detected VLAN configuration mismatch on non-DHCP/NAT WLAN [{ssid}]. Configured VLAN is [{configuredVlan}] and resolved VLAN is [{vlanId}]. Clients may not be able to get IP or access Internet.
Description	This event occurs when the AP detects a non DHCP/NAT WLAN. VLAN configuration mismatches with DVLAN/VLAN pooling configuration on gateway AP.

VLAN configuration mismatch on DHCP/NAT WLAN

Table 441. VLAN configuration mismatch on DHCP/NAT WLAN event

Event	VLAN configuration mismatch detected between configured and resolved VLAN with DVLAN/VLAN pooling configuration on DHCP/NAT WLAN
Event Type	apCfgDhcpNatWlanVlanConfigMismatch
Event Code	1025
Severity	Critical
Attribute	"ssid"="xxxx", "vlanID"="xxxx", "configuredVlan"="5", "vlanId"="11", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	DHCP/NAT gateway AP [apMac] detected VLAN configuration mismatch on DHCP/NAT WLAN [{ssid}]. Configured VLAN is [{configuredVlan}] and resolved VLAN is [{vlanId}]. Clients may not be able to get IP or access Internet.
Description	This event occurs when the AP detects a DHCP/NAT WLAN. VLAN configuration mismatches with DVLAN/VLAN pooling configuration on gateway AP.

NOTE: Refer to [Configuration Alarms](#).

Data Plane Events

NOTE: Events 530, 532, 537, 538, 550, 551, 552, 553, 1259 and 1260 are not applicable for SCG.

Following are the events related to data plane.

Data plane discovered	Data plane discovery failed	Data plane configuration updated
Data plane configuration update failed	Data plane rebooted	Data plane heartbeat lost
Data plane IP address updated	Data plane updated to a new control plane	Data plane status update failed
Data plane statistics update failed	Data plane connected	Data plane disconnected
Data plane physical interface down	Data plane physical interface up	Data plane packet pool is under low water mark
Data plane packet pool is under critical low water mark	Data plane packet pool is above high water mark	Data plane core dead
Data plane process restarted	Data plane discovery succeeded	Data plane managed
Data plane deleted	Data plane license is not enough	Data plane upgrade started
Data plane upgrading	Data plane upgrade succeeded	Data plane upgrade failed
Data plane of data center side successfully connects to the CALEA server	Data plane of data center side fails to connect to the CALEA server	Data plane successfully connects to the other data plane
Start CALEA mirroring client in data plane	Stop CALEA mirroring client in data plane	Data plane DHCP IP pool usage rate is 100 percent
Data plane DHCP IP pool usage rate is 80 percent		

Data plane discovered

Table 442. Data plane discovered event

Event	Data plane discovered
Event Type	dpDiscoverySuccess (server side detect)
Event Code	501
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] sent a connection request to {produce.short.name} [{cpName wsgIP]}.
Description	This event occurs when the data plane successfully connects to the controller.

Data plane discovery failed

Table 443. Data plane discovery failed event

Event	Data plane discovery failed
Event Type	dpDiscoveryFail (detected on the server side)
Event Code	502
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] failed to send a discovery request to {produce.short.name} [{cpName wsgIP]}.
Description	This event occurs when the data plane fails to connect to the controller.

Data plane configuration updated

Table 444. Data plane configuration updated event

Event	Data plane configuration updated
Event Type	dpConfUpdated
Event Code	504
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "configID"= "123456781234567"
Displayed on the web interface	Data plane [{dpName dpKey}] updated to configuration [{configID}]
Description	This event occurs when the data plane configuration is updated.

Data plane configuration update failed

Table 445. Data plane configuration update failed event

Event	Data plane configuration update failed
Event Type	dpConfUpdateFailed
Event Code	505
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "configID"=" 123456781234567"
Displayed on the web interface	Data plane [{dpName dpKey}] failed to update to configuration [{configID}]
Description	This event occurs when the data plane configuration update fails.
Auto Clearance	This event triggers the alarm 501, which is auto cleared by the event code 504.

Data plane rebooted

Table 446. Data plane rebooted event

Event	Data plane rebooted
Event Type	dpReboot (server side detect)
Event Code	506
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "reason"="xxxxx"
Displayed on the web interface	Data plane [{dpName dpKey}] rebooted
Description	This event occurs when the data plane is rebooted.

Data plane heartbeat lost

Table 447. Data plane heartbeat lost event

Event	Data plane heartbeat lost
Event Type	dpLostConnection (detected on the server side)
Event Code	507
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName dpKey}] heartbeat lost.
Description	This event occurs when the data plane heartbeat lost.

Data plane IP address updated

Table 448. Data plane IP address updated event

Event	Data plane IP address updated
Event Type	dpIPChanged
Event Code	508
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx",
Displayed on the web interface	Data plane [{dpName dpKey}] IP address changed
Description	This event occurs when the IP address of the data plane is modified.

Data plane updated to a new control plane

Table 449. Data plane updated to a new control plane event

Event	Data plane updated to a new control plane
Event Type	dpChangeControlBlade
Event Code	509
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "oldwsgIP"="xxx.xxx.xxx.xxx", "newwsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] switched from {produce.short.name} [{oldCpName oldWsgIP}] to [{cpName newWsgIP}]
Description	This event occurs when the data plane connects to a new controller instance.

Data plane status update failed

Table 450. Data plane status update failed event

Event	Data plane status update failed
Event Type	dpUpdateStatusFailed
Event Code	510
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] failed to update its status to {produce.short.name} [{cpName wsgIP}]
Description	This event occurs when the data plane fails to update its status on the controller.

Data plane statistics update failed

Table 451. Data plane statistics update failed event

Event	Data plane statistics update failed
Event Type	dpUpdateStatisticFailed
Event Code	511
Severity	Minor
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] failed to update its statistics to {produce.short.name} [{cpName wsgIP}]
Description	This event occurs when the data plane fails to update statistics to the controller.

Data plane connected

Table 452. Data plane connected event

Event	Data plane connected
Event Type	dpConnected
Event Code	512
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] connected to {produce.short.name} [{cpName wsgIP}]
Description	This event occurs when the data plane connects to the controller.

Data plane disconnected

Table 453. Data plane disconnected event

Event	Data plane disconnected
Event Type	dpDisconnected
Event Code	513
Severity	Critical
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName dpKey}] disconnected from {produce.short.name} {cpName wsgIP}]
Description	This event occurs when the data plane disconnects from the controller.
Auto Clearance	This event triggers the alarm 503, which is auto cleared by the event code 512.

Data plane physical interface down

Table 454. Data plane physical interface down event

Event	Data plane physical interface down
Event Type	dpPhyInterfaceDown
Event Code	514
Severity	Critical
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName dpKey}] is down.
Description	This event occurs when the network link of the data plane is down.
Auto Clearance	This event triggers the alarm 504, which is auto cleared by the event code 515.

Data plane physical interface up

Table 455. Data plane physical interface up event

Event	Data plane physical interface up
Event Type	dpPhyInterfaceUp
Event Code	515
Severity	Informational
Attribute	"portID"="xx", "dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Network link of port [{portID}] on data plane [{dpName dpKey}] is up.
Description	This event occurs when the network link of the data plane is up.

Data plane packet pool is under low water mark

Table 456. Data plane packet pool is under low water mark event

Event	Data plane packet pool is under low water mark
Event Type	dpPktPoolLow
Event Code	516
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName} {dpKey}] is under low-water mark.
Description	This event occurs when the data core packet pool is below the water mark level.
Auto Clearance	This event triggers the alarm 516, which is auto cleared by the event code 518.

Data plane packet pool is under critical low water mark

Table 457. Data plane's packet pool is under critical low water mark event

Event	Data plane packet pool is under critical low water mark
Event Type	dpPktPoolCriticalLow
Event Code	517
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName} {dpKey}] is under critical low-water mark.
Description	This event occurs when the data core packet pool under the critical water mark level.

Data plane packet pool is above high water mark

Table 458. Data plane packet pool is above high water mark event

Event	Data plane packet pool is above high water mark
Event Type	dpPktPoolRecover
Event Code	518
Severity	Informational
Attribute	dpKey="xx:xx:xx:xx:xx:xx", "id"="x"
Displayed on the web interface	Pool [{id}] on data plane [{dpName} {dpKey}] is above high-water mark
Description	This event occurs when the data plane's packet pool is recovered when it is above high-water mark.

Data plane core dead

Table 459. Data plane core dead event

Event	Data plane core dead
Event Type	dpCoreDead
Event Code	519
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName}&&{dpKey}] has dead data core.
Description	This event occurs when one or multiple data core packet pool is lost / dead.

Data plane process restarted

Table 460. Data plane process restarted event

Event	Data plane process restarted
Event Type	dpProcessRestart
Event Code	520
Severity	Major
Attribute	dpKey="xx:xx:xx:xx:xx:xx", processName="xxxx"
Displayed on the web interface	[[processName]] on data plane [[dpName&&dpKey]] is restarted.
Description	This event occurs when any process on the data plane crashes and restarts.

NOTE: Event 530 is not applicable for SCG.

Data plane discovery succeeded

Table 461. Data plane discovery succeeded event

Event	Data plane discovery succeeded
Event Type	dpDiscoverySuccess
Event Code	530
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [[dpName&&dpKey]] sent a discovery request to {produce.short.name} [[wsgIP]].
Description	This event occurs when data plane sends a discovery request to the {produce.short.name} successfully.

NOTE: Event 532 is not applicable for SCG.

Data plane managed

Table 462. Data plane managed event

Event	Data plane managed
Event Type	dpStatusManaged
Event Code	532
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "wsgIP"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] approved by {produce.short.name} [{wsgIP}].
Description	This event occurs when data plane is approved by the {produce.short.name}.

NOTE: Events 537, 538, 550, 551, 552 and 553 are not applicable for SCG.

Data plane deleted

Table 463. Data plane deleted event

Event	Data plane deleted
Event Type	dpDeleted
Event Code	537
Severity	Informational
Attribute	"dpKey"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] deleted.
Description	This event occurs when data plane is deleted.

Data plane license is not enough

Table 464. Data plane license is not enough event

Event	Data plane license is not enough
Event Type	dpLicenseInsufficient
Event Code	538
Severity	Major
Attribute	"count"=<delete-vdp-count>
Displayed on the web interface	Data plane license is not enough, [{count}] instance of data plane will be deleted.
Description	This event occurs when data plane licenses are insufficient.

Data plane upgrade started

Table 465. Data plane upgrade started event

Event	Data plane upgrade started
Event Type	dpUpgradeStart
Event Code	550
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}]started the upgrade process.
Description	This event occurs when data plane starts the upgrade process.

Data plane upgrading

Table 466. Data plane upgrading event

Event	Data plane upgrading
Event Type	dpUpgrading
Event Code	551
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] is upgrading.
Description	This event occurs when data plane starts to upgrade programs and configuration.

Data plane upgrade succeeded

Table 467. Data plane upgrade succeeded event

Event	Data plane upgrade succeeded
Event Type	dpUpgradeSuccess
Event Code	552
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] has been upgraded successfully.
Description	This event occurs when data plane upgrade is successful.

Data plane upgrade failed

Table 468. Data plane upgrade failed event

Event	Data plane upgrade failed
Event Type	dpUpgradeFailed
Event Code	553
Severity	Major
Attribute	"dpKey" = "xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName&&dpKey}] failed to upgrade.
Description	This event occurs when data plane upgrade fails.
Auto Clearance	This event triggers the alarm 553, which is auto cleared by the event code 552.

NOTE: Events 1257 to 1267 are not applicable for SCG.

Data plane of data center side successfully connects to the CALEA server

Table 469. Data plane of data center side successfully connects to the CALEA server event

Event	Data plane of data center side successfully connects to the CALEA server
Event Type	dpDcToCaleaConnected
Event Code	1257
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dplP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} successfully connects to the CALEA server{{caleaServerIP}}.
Description	This event occurs when data plane successfully connects to the CALEA server.

Data plane of data center side fails to connect to the CALEA server

Table 470. Data plane of data center side fails to connect to the CALEA server event

Event	Data plane of data center side fails to connect to the CALEA server.
Event Type	dpDcToCaleaConnectFail
Event Code	1258
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dplP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} fails to connects to the CALEA server{{caleaServerIP}}
Description	This event occurs when data plane fails to connect to the CALEA server.

Table 470. Data plane of data center side fails to connect to the CALEA server event

Auto Clearance	This event triggers the alarm 1258, which is auto cleared by the event code 1257.
----------------	---

Data Plane of data center side disconnects to CALEA server

Table 471. Data Plane of data center side disconnects to CALEA server event

Event	Data Plane of data center side disconnects to CALEA server.
Event Type	dpDcToCaleaDisconnected
Event Code	1259
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dplP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} fails to connects to the CALEA server{{caleaServerIP}}
Description	This event occurs when data plane disconnects from the CALEA server.

Data plane successfully connects to the other data plane

Table 472. Data plane successfully connects to the other data plane event

Event	Data plane successfully connects to the other data plane
Event Type	dpP2PTunnelConnected
Event Code	1260
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dplP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDplp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane{{dpName&&dpKey}} successfully connects to the other Data Plane{{targetDpKey&&targetDplp}}
Description	This event occurs when data plane connect to another data plane.

Data plane fails to connects to the other data plane

Table 473. Data plane fails to connects to the other data plane event

Event	Data plane fails to connects to the other data plane
Event Type	dpP2PTunnelConnectFail
Event Code	1261
Severity	Warning
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dplP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDplp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] fails connects to the other Data Plane[{targetDpKey&&targetDplp}]
Description	This event occurs when data plane fails to connect to another data plane.
Auto Clearance	This event triggers the alarm 1261, which is auto cleared by the event code 1260.

Data plane disconnects to the other data plane

Table 474. Data plane disconnects to the other data plane event

Event	Data plane disconnects to the other data plane
Event Type	dpP2PTunnelDisconnected
Event Code	1262
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dplP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDplp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] disconnects to the other Data Plane[{targetDpKey&&targetDplp}]
Description	This event occurs when data plane disconnects from another data plane.

Start CALEA mirroring client in data plane

Table 475. Start CALEA mirroring client in data plane event

Event	Start CALEA mirroring client in data plane
Event Type	dpStartMirroringClient
Event Code	1263
Severity	Informational
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx"
Displayed on the web interface	Start CALEA mirroring client [{userName} IP clientMac] on WLAN [{ssid}] from AP [{apName}&&apMac]
Description	This event occurs when the Calea server starts mirroring the client image.

Stop CALEA mirroring client in data plane

Table 476. Stop CALEA mirroring client in data plane event

Event	Stop CALEA mirroring client in data plane
Event Type	dpStopMirroringClient
Event Code	1264
Severity	Warning
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx"
Displayed on the web interface	Stop CALEA mirroring client [{userName} IP clientMac] on WLAN [{ssid} authType] from AP [{apName}&&apMac]. TxBytes[{txBytes}]
Description	This event occurs when the Calea server stops mirroring the client image.

Data plane DHCP IP pool usage rate is 100 percent

Table 477. Data plane DHCP IP pool usage rate is 100 percent event

Event	Data plane DHCP IP pool usage rate is 100 percent
Event Type	dpDhcpIpPoolUsageRate100
Event Code	1265
Severity	Critical
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] DHCP IP Pool usage rate is 100 percent
Description	This event occurs when the data plane DHCP pool usage rate is 100%.

Data plane DHCP IP pool usage rate is 80 percent

Table 478. Data plane DHCP IP pool usage rate is 80 percent event

Event	Data plane DHCP IP pool usage rate is 80 percent
Event Type	dpDhcpIpPoolUsageRate80
Event Code	1266
Severity	Warning
Attribute	"dpName="xxxxxxx", "dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] DHCP IP Pool usage rate is 80 percent
Description	This event occurs when the data plane DHCP pool usage rate is 80%.

CALEA UE Matched

Table 479. CALEA UE Matched event

Event	CALEA UE Matched
Event Type	dpCaleaUeInterimMatched
Event Code	1268
Severity	Informational
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx", "txBytes"="xxxxx", "rxBytes"="xxxxx"
Displayed on the web interface	CALEA matches client [{clientMac}] on WLAN [{ssid authType}] from AP [{apName&&apMac}]. TxBytes[{txBytes}], RxBytes[{rxBytes}]
Description	This event occurs when data plane CALEA user equipment and client matches.

NOTE: Refer to [Data Plane Alarms](#).

DHCP Events

NOTE: This event is not applicable for vSZ-H.

Following are the events related to DHCP (Dynamic Host Configuration Protocol).

- [DHCP inform received](#)
- [DHCP decline received](#)

DHCP inform received

Table 480. DHCP inform received event

Event	DHCP inform received
Event Type	dhcplnfmRcvd
Event Code	1238
Severity	Informational
Attribute	"mvnold"=NA "wlanId"=NA,"zoneld"="NA" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="dhcp","realm"="NA" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	DHCP Inform was received by {produce.short.name} [{SCGMgmtIp}] from UE [{ueMacAddr}]
Description	This event occurs when the controller receives the DHCP information.

DHCP decline received

Table 481. DHCP decline received event

Event	DHCP decline received
Event Type	dhcpDclnRcvd
Event Code	1239
Severity	Major
Attribute	"mvpnold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut", "realm"="NA" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	DHCP Decline was received by {produce.short.name} [{SCGMgmtIp}] from UE [{ueMacAddr}]
Description	This event occurs when the controller receives the DHCP declined message. The GTP (GPRS Tunneling Protocol) tunnel is deleted and recreated.

GA Interface Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to the GA interface (CDRs and GTP').

- [Connection to CGF failed](#)
- [CGF keepalive not responded](#)
- [CDR transfer succeeded](#)
- [CDR transfer failed](#)
- [CDR generation failed](#)

Connection to CGF failed

Table 482. Connection to CGF failed event

Event	Connection to CGF failed
Event Type	cnxnToCgfFailed
Event Code	1610
Severity	Major
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="NA", "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Connection with CGF [{cgfSrvrlp}] from RADServerIP [{radSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when channel interface processor (CIP) or GPRS tunneling protocol prime (GTPP) stack detects a connection loss to the charging gateway function (CGF server).
Auto Clearance	This event triggers the alarm 1610, which is auto cleared by the event code 1613.

CGF keepalive not responded

Table 483. CGF keepalive not responded event

Event	CGF keepalive not responded
Event Type	cgfKeepAliveNotResponded
Event Code	1612
Severity	Informational
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="NA", "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Heartbeat missed between RAD Server [{radSrvrlp}] and CGF Server [{cgfSrvrlp}] in {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when channel interface processor does not receive an acknowledgment for a keep alive request.

CDR transfer succeeded

Table 484. CDR transfer succeeded event

Event	CDR transfer succeeded
Event Type	cdrTxfrSuccessful
Event Code	1613
Severity	Debug
Attribute	"mvnold"=12 "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="wlan.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	CDR Transfer successful from RAD Server [{radSrvrlp}] to CGF [{cgfSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the call details record is successfully transferred.

CDR transfer failed

Table 485. CDR transfer failed event

Event	CDR transfer failed
Event Type	cdrTxfrFailed
Event Code	1614
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="wlan.mnc080.mcc405.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "cgfSrvrlp"="40.40.40.40" "SCGMgmtlp"="2.2.2.2" "cause"="<reason for failure>"
Displayed on the web interface	CDR Transfer failed from RAD Server [{radSrvrlp}] to CGF [{cgfSrvrlp}] on {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the call detail record transfers fails.

CDR generation failed

Table 486. CDR generation failed event

Event	CDR generation failed
Event Type	cdrGenerationFailed
Event Code	1615
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="cip" "realm"="wlan.3gppnetwork.org" "radSrvrlp"="7.7.7.7" "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	Failed to generate CDR by RAD Server [{radSrvrlp}] in {produce.short.name} [{SCGMgmtlp}]
Description	This event occurs when the controller cannot format/generate the call detail records.

NOTE: Refer to [GA Interface Alarms](#).

Gn/S2a Interface Events

NOTE: This event is not applicable for vSZ-H.

Following are the events related to Gn/S2a interface.

GGSN restarted	GGSN not reachable	Echo response not received
GGSN not resolved	PDP context established	PDP create failed
PDP update by HLR succeeded	PDP update by HLR failed	PDP update by roaming succeeded
PDP update by roaming failed	PDP update by GGSN succeeded	PDP update by GGSN failed
PDP delete by TTG succeeded	PDP delete by TTG failed	PDP delete by GGSN succeeded
PDP delete by GGSN failed	IP assigned	IP not assigned
Unknown UE	PDP update success COA	PDP update fail COA
PDNGW could not be resolved	PDNGW version not supported	Associated PDNGW down
Create session response failed	Decode failed	Modify bearer response failed
Delete session response failed	Delete bearer request failed	Update bearer request failed
CGF server not configured		

GGSN restarted

Table 487. GGSN restarted event

Event	GGSN restarted
Event Type	ggsnRestarted
Event Code	1210
Severity	Major
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm" "realm"="NA" "gtcpIp"="5.5.5.5", "ggsnIp"="10.10.10.10", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	GGSN {{ggsnIp}} connected to {produce.short.name} {{SCGMgmtIp}} (GTPC-IP {{gtcpIp}}) is restarted

Table 487. GGSN restarted event

Description	This event occurs when GPRS protocol control plane receives a new recovery value.
-------------	---

GGSN not reachable

Table 488. GGSN not reachable event

Event	GGSN not reachable
Event Type	ggsnNotReachable
Event Code	1211
Severity	Major
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm", "realm"="NA", "gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	GGSN [{ggsnlp}] connected to {produce.short.name} (GTPC-IP [{gtpclp}]) is not reachable
Description	This event occurs when echo request is timed out.

Echo response not received

Table 489. Echo response not received event

Event	Echo response not received
Event Type	echoRspNotRcvd
Event Code	1212
Severity	Informational
Attribute	"mvnold"="12", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="sm" "realm"="NA" "gtpclp"="5.5.5.5", "ggsnlp"="10.10.10.10", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	GGSN [{ggsnlp}] did not respond to Echo Request from {produce.short.name} (GTPC-IP [{gtpclp}]) is not reachable
Description	This event occurs when GPRS protocol control plane does not receive an acknowledgment for the single echo request.

GGSN not resolved

Table 490. GGSN not resolved event

Event	GGSN not resolved
Event Type	ggsnNotResolved
Event Code	1215
Severity	Major
Attribute	"mvnold"="12", "wlanId"="1", "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345" "ueMsisdn"="98787"
Displayed on the web interface	Failed to resolve GGSN from APN [{apn}] for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}]
Description	This even occurs when access point name is unable to resolve to gateway GPRS support node.

PDP context established

Table 491. PDP context established event

Event	PDP context established
Event Type	pdpCtxtEstablished
Event Code	1216
Severity	Debug
Attribute	"mvnold"=12,"wlanId"=1 "zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	PDP context created for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when packet data protocol is established.

PDP create failed

Table 492. PDP create failed event

Event	PDP create failed
Event Type	crtPdpFailed
Event Code	1217
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtplp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	PDP context create failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]. Cause [{cause}]
Description	This event occurs when create packet data protocol fails.

PDP update by HLR succeeded

Table 493. PDP update by HLR succeeded event

Event	PDP update by HLR succeeded
Event Type	initPdpUpdSuccHlr
Event Code	1218
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtplp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "hlrEvent"="<event received from HLR>"
Displayed on the web interface	PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because of [hlrEvent] from HLR

Table 493. PDP update by HLR succeeded event

Description	This event occurs when packet data protocol context is updated successfully. Update is initiated by tunneling termination gateway (TTG) control plane as a result of the home location register (HLR) initiation.
-------------	---

PDP update by HLR failed

Table 494. PDP update by HLR failed event

Event	PDP update by HLR failed
Event Type	initPdpUpdFailureHlr
Event Code	1219
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345","ueMsisdn"="98787" "cause"="cause of error" "hlrEvent"="<event received from HLR>"
Displayed on the web interface	PDP context update initiated because of HLR Event [{hrlEvent}] failed for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]. Failure Cause [{cause}]
Description	This event occurs when update packet data protocol fails. Update is initiated by TTG control plane as a result of HLR initiation.

PDP update by roaming succeeded

Table 495. PDP update by roaming succeeded event

Event	PDP update by roaming succeeded
Event Type	initPdpUpdSuccRoam
Event Code	1220
Severity	Debug

Table 495. PDP update by roaming succeeded event

Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345" "ueMsisdn"="98787"
Displayed on the web interface	PDP context updated for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because of UE Roaming
Description	This event occurs when packet data protocol context is updated successfully. Update is initiated by TTG control plane as a result of user equipment.

PDP update by roaming failed

Table 496. PDP update by roaming failed event

Event	PDP update by roaming failed
Event Type	initPdpUpdFailureRoam
Event Code	1221
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345","ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	PDP context update initiated because of UE Roaming failed for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] Failure Cause [{cause}]
Description	This event occurs when the packet data protocol update fails. This is initiated by TTG control plane as a result of user equipment.

PDP update by GGSN succeeded

Table 497. PDP update by GGSN succeeded event

Event	PDP update by GGSN succeeded
Event Type	recvPdpUpdSuccGgsn
Event Code	1222
Severity	Debug
Attribute	"mvmold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	GGSN initiated; PDP context updated for UE with IMSI [{{ueImsi}}] and MSISDN [{{ueMsisdn}}] at {produce.short.name} [{{SCGMgmtIp}}]
Description	This event occurs when packet data protocol is updated successfully, which is initiated by the GGSN.

PDP update by GGSN failed

Table 498. PDP update by GGSN failed event

Event	PDP update by GGSN failed
Event Type	recvPdpUpdFailureGgsn
Event Code	1223
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtpclp"="5.5.5.5" "ggsnIp"="10.10.10.10" "ueMacAddr"="NA" "ueImsi"="NA" "apn"="NA" "SCGMgmtIp"="2.2.2.2" "cause"="cause of error"
Displayed on the web interface	GGSN initiated; PDP context update received from IP [{{ggsnIp}}] at {produce.short.name} [{{SCGMgmtIp}}] is failed. Cause [{{cause}}]
Description	This event occurs when the packet data protocol update fails.

PDP delete by TTG succeeded

Table 499. PDP delete by TTG succeeded event

Event	PDP delete by TTG succeeded
Event Type	initPdpDelSucc
Event Code	1224
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345" "ueMsisdn"="98787"
Displayed on the web interface	{produce.short.name} initiated; PDP context deleted for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when packet data protocol delete is successful.

PDP delete by TTG failed

Table 500. PDP delete by TTG failed event

Event	PDP delete by TTG failed
Event Type	initPdpDelFailure
Event Code	1225
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787" "cause"="cause of error"
Displayed on the web interface	{produce.short.name} initiated; PDP context delete failed for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]. Cause [{cause}]
Description	This event occurs when packet data protocol delete fails.

PDP delete by GGSN succeeded

Table 501. PDP delete by GGSN succeeded event

Event	PDP delete by GGSN succeeded
Event Type	recvPdpDelSucc
Event Code	1226
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "ueImsi"="12345", "ueMsisdn"="98787"
Displayed on the web interface	GGSN initiated; PDP context deleted for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when packet data protocol delete is successful, as initiated by the GGSN.

PDP delete by GGSN failed

Table 502. PDP delete by GGSN failed event

Event	PDP delete by GGSN failed
Event Type	recvPdpDelFailure
Event Code	1227
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_process" "realm"="NA" "gtpclp"="5.5.5.5" "ggsnlp"="10.10.10.10" "ueMacAddr"="NA" "ueImsi"="NA" "apn"="NA" "SCGMgmtIp"="2.2.2.2" "cause"="cause of error"
Displayed on the web interface	GGSN initiated; PDP context delete received from IP [{ggsnlp}] at {produce.short.name} [{SCGMgmtIp}] is failed. Cause [{cause}]
Description	This event occurs when delete packet data protocol fails. Delete is initiated by GGSN.

IP assigned

Table 503. IP assigned event

Event	IP assigned
Event Type	ipAssigned
Event Code	1229
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "uelpAddr"="5.5.5.5"
Displayed on the web interface	UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] was assigned IP [{uelpAddr}] at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when IP address is assigned to the user equipment. This event is applicable for TTG/PDG sessions only.

IP not assigned

Table 504. IP not assigned event

Event	IP not assigned
Event Type	ipNotAssigned
Event Code	1230
Severity	Debug
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "cause"="<why IP could not be assigned>"
Displayed on the web interface	IP could not be assigned to UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because [{cause}]
Description	This event occurs when the IP address is not assigned to user equipment. This event is applicable for TTG/PDG sessions only.

Unknown UE

Table 505. Unknown UE event

Event	Unknown UE
Event Type	unknownUE
Event Code	1231
Severity	Minor
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "cause"="Subscriber Info Not Found" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Received request from un-known UE [{ueMacAddr}] in {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when TTG control plane receives either a DHCP message or a trigger from data plane. It is unable to find the user equipment in the session context.

PDP update success COA

Table 506. PDP update success COA event

Event	PDP update success COA
Event Type	pdpUpdSuccCOA
Event Code	1244
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtplcp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "aaaSrvrIp"="5.5.5.5"
Displayed on the web interface	PDP context updated for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtIp}] because of COA from AAA server [{aaaSrvrIp}]
Description	This event occurs when the packet data protocol update is successful when initiating the update process based on the change of authorization received from the external AAA server.

PDP update fail COA

Table 507. PDP update fail COA event

Event	PDP update fail COA
Event Type	pdpUpdFailCOA
Event Code	1245
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "gtpclp"="5.5.5.5" "apn"="ruckuswireless.com" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "aaaSrvrlp"="5.5.5.5" "cause"="cause of error"
Displayed on the web interface	PDP context update initiated because of COA from AAA server [{gtpclp}] failed for UE with IMSI [{uelmsi}] and MSISDN [{ueMsisdn}] at {produce.short.name} [{SCGMgmtlp}]. Failure Cause [{cause}]
Description	This event occurs when the packet data protocol update fails when initiating the update process based on the change of authorization received from the external AAA server.

PDNGW could not be resolved

Table 508. PDNGW could not be resolved event

Event	PDNGW could not be resolved
Event Type	pdnGwNotResolved
Event Code	1950
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtlp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "apn"="ruckus.com"
Displayed on the web interface	[{srcProcess}] APN [{apn}] could not be resolved on {produce.short.name} [{SCGMgmtlp}], with username [{uelmsi}]@{realm}]

Table 508. PDNGW could not be resolved event

Description	This event occurs when the access point name is unable to resolve to PDN GW.
-------------	--

PDNGW version not supported

Table 509. PDNGW version not supported event

Event	PDNGW version not supported
Event Type	pdnGwVersionNotSupportedMsgReceived
Event Code	1952
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com", "pgwlp"="1.1.1.1"
Displayed on the web interface	{{srcProcess}} Version not supported message received from PDN GW with IP {{pgwlp}} on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when the version is not supported for messages received from PDN GW.

Associated PDNGW down

Table 510. Associated PDNGW down event

Event	Associated PDNGW down
Event Type	pdnGwAssociationDown
Event Code	1953
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com", "pgwlp"="1.1.1.1"
Displayed on the web interface	{{srcProcess}} Association with PDN GW with IP {{pgwlp}} from {produce.short.name} {{SCGMgmtIp}} down
Description	This event occurs when the association with PDN GW is down due to echo request time out or it fails to send messages to PDN GW.

Create session response failed

Table 511. Create session response failed event

Event	Create session response failed
Event Type	createSessionResponseFailed
Event Code	1954
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com" "cause"="xx", "pgwIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Create Session response from PDN GW with IP [[pgwIp]] on {produce.short.name} [[SCGMgmtIp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This event occurs when create session response from PDN GW fails with a cause.

Decode failed

Table 512. Decode failed event

Event	Decode failed
Event Type	decodeFailed
Event Code	1955
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="sm_proces" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345", "ueMsisdn"="98787" "APN"="ruckus.com", "pgwlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Decode of message received from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtIp]] failed
Description	This event occurs when decoding of messages received from PDN GW fails.

Modify bearer response failed

Table 513. Modify bearer response failed event

Event	Modify bearer response failed
Event Type	modifyBearerResponseFailed
Event Code	1956
Severity	Major
Attribute	mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787", "APN"="ruckus.com" "cause"="xx", "pgwlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Modify Bearer Response from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtIp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This event occurs when modify bearer response from PDN GW fails with a cause.

Delete session response failed

Table 514. Delete session response failed event

Event	Delete session response failed
Event Type	deleteSessionResponseFailed
Event Code	1957
Severity	Major
Attribute	mvnold="12 "wlanId"=1,"zonedId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com" "cause"="xx", "pgwIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Delete Session response from PDN GW with IP [[pgwIp]] on {produce.short.name} [[SCGMgmtIp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This event occurs when the delete session response from PDN GW fails.

Delete bearer request failed

Table 515. Delete bearer request failed event

Event	Delete bearer request failed
Event Type	deleteBearerRequestFailed
Event Code	1958
Severity	Major
Attribute	mvnold="12 "wlanId"=1,"zonedId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com", "cause"="<reason for failure>", "pgwIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Delete Bearer Request from PDN GW with IP [[pgwIp]] on {produce.short.name} [[SCGMgmtIp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]

Table 515. Delete bearer request failed event

Description	This event occurs when the delete bearer request from PDN GW fails with decode error.
-------------	---

Update bearer request failed

Table 516. Update bearer request failed event

Event	Update bearer request failed
Event Type	updateBearerRequestFailed
Event Code	1959
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com", "cause"="<reason for failure>","pgwlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Update bearer request from PDN GW with IP [[pgwlp]] on {produce.short.name} [[SCGMgmtIp]] failed, for UE with username [[uelmsi]@{realm}] because [[cause]]
Description	This event occurs when the update bearer request fails with a decode error.

CGF server not configured

Table 517. CGF server not configured event

Event	CGF server not configured
Event Type	cgfServerNotConfigured
Event Code	1960
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="CIP" "realm"="wlan.3gppnetwork.org" "SCGMgmtIp"="2.2.2.2" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelmsi"="12345" "ueMsisdn"="98787" "APN"="ruckus.com" "cgfSrvrIp" = "1.1.1.1", "ggsnIp"="10.10.10.10"
Displayed on the web interface	CGF server IP [{cgfSrvrIp}] received from PDN GW/GGSN with IP [{ggsnIp}] on {produce.short.name} [{SCGMgmtIp}] is not configured
Description	This event occurs when the IP address of the charging gateway function server received from GGSN/PDNGW is not configured in the controller web interface.

NOTE: Refer to [Gn/S2a Interface Alarms](#).

Gr Interface Event

NOTE: This section is not applicable for vSZ-H.

Following are the events related to GR interface.

- Destination not reachable
- Destination available
- App server down
- App server inactive
- App server active
- Association establishment failed
- Association down
- Association up
- Send auth info success
- Auth info sending failed
- GPRS location update succeeded
- GPRS location update failed
- Insert sub data success
- Insert sub data failed
- Outbound routing failure
- Did allocation failure
- Restore data success
- Restore data failed

Destination not reachable

Table 518. Destination not reachable event

Event	Destination not reachable
Event Type	destNotRecheable
Event Code	1618
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is unavailable
Description	This event occurs when the point code is unreachable due to a pause indicator
Auto Clearance	This event triggers the alarm 1618, which is auto cleared by the event code 1620.

Destination available

Table 519. Destination available event

Event	Destination available
Event Type	destAvailable
Event Code	1620
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "pointCode"="1.1.1"
Displayed on the web interface	Remote Point Code [{pointCode}] is available
Description	This event occurs when the point code is available due to the resume indicator.

App server down

Table 520. App server down event

Event	App server down
Event Type	appServerDown
Event Code	1623
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" = "1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Down, Routing Context [{routingContext}], local Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is down from the remote IP security protocol (IPSP) or controller.
Auto Clearance	This event triggers the alarm 1623, which is auto cleared by the event code 1625.

App server inactive

Table 521. App server inactive event

Event	App server inactive
Event Type	appServerInactive
Event Code	1624
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" = "1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Inactive, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is inactive from the remote IPSP/controller.
Auto Clearance	This event triggers the alarm 1624, which is auto cleared by the event code 1625.

App server active

Table 522. App server active event

Event	App server active
Event Type	appServerActive
Event Code	1625
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "routingContext" = "1" "pointCode"="1.1.1" "SSN" = "7"
Displayed on the web interface	Application Server Active, Routing Context [{routingContext}], lpcal Point Code [{pointCode}], local SSN [{SSN}]
Description	This event occurs when the local application server is active from the remote IPSP or signalling gateway (SG).

Association establishment failed

Table 523. Association establishment failed event

Event	Association establishment failed
Event Type	assocEstbFailed
Event Code	1626
Severity	Critical
Attribute	"mvnold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "srcIP"="10.1.4.10" "srcPort"="2960" "destIP"="10.1.4.20" "destPort"="2960"
Displayed on the web interface	Failed to establish SCTP association. SCTP Abort received from srcIP [{srcIP}], srcPort [{srcPort}], destIP[{destIP}], destPort [{destPort}]
Description	This event occurs when it is unable to establish an association to the controller/IPSP.
Auto Clearance	This event triggers the alarm 1626, which is auto cleared by the event code 1628.

Association down

Table 524. Association down event

Event	Association down
Event Type	assocDown
Event Code	1627
Severity	Critical
Attribute	"mvsold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "srcIP"="10.1.4.10" "srcPort"="2960" "destIP"="10.1.4.20" "destPort"="2960"
Displayed on the web interface	SCTP association DOWN srcIP [{{srcIP}}, srcPort [{{srcPort}}, destIP[{{destIP}}, destPort [{{destPort}}]
Description	This event occurs when the stream control transmission protocol (SCTP) association is down.
Auto Clearance	This event triggers the alarm 1627, which is auto cleared by the event code 1628.

Association up

Table 525. Association up event

Event	Association up
Event Type	assocUp
Event Code	1628
Severity	Critical
Attribute	"mvsold"="3" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "srcIP"="10.1.4.10" "srcPort"="2960" "destIP"="10.1.4.20" "destPort"="2960"
Displayed on the web interface	SCTP association UP. srcIP [{{srcIP}}, srcPort [{{srcPort}}, destIP[{{destIP}}, destPort [{{destPort}}]
Description	This event occurs when the SCTP association is UP.

Send auth info success

Table 526. Send auth info success event

Event	Send auth info success
Event Type	sendAuthInfoSuccess
Event Code	1630
Severity	Debug
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918"
Displayed on the web interface	MAP-SendAuthInfo Operation successful from IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when authentication parameters are successfully retrieved.

Auth info sending failed

Table 527. Auth info sending failed event

Event	Auth info sending failed
Event Type	sendAuthInfoFailed
Event Code	1631
Severity	Major
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-SendAuthInfo Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to retrieve the authentication parameters.

GPRS location update succeeded

Table 528. GPRS location update succeeded event

Event	GPRS location update succeeded
Event Type	updateGprsLocSuccess
Event Code	1632
Severity	Debug
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918"
Displayed on the web interface	MAP-UpdateGprsLocation Operation Successful for IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully updates the GPRS location operation.

GPRS location update failed

Table 529. GPRS location update failed event

Event	GPRS location update failed
Event Type	updateGprsLocFailed
Event Code	1633
Severity	Major
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-UpdateGprsLocation Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when the GPRS location update process fails.

Insert sub data success

Table 530. Insert sub data success event

Event	Insert sub data success
Event Type	insertSubDataSuccess
Event Code	1634
Severity	Debug
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918"
Displayed on the web interface	MAP-InsertSubscriberData Operation Successful for IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully inserts the subscriber data operation.

Insert sub data failed

Table 531. Insert sub data failed event

Event	Insert sub data failed
Event Type	insertSubDataFailed
Event Code	1635
Severity	Major
Attribute	"mvmold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918" "cause"="ASN decode error"
Displayed on the web interface	MAP-InsertSubscriberData Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to insert the subscriber data operation

Outbound routing failure

Table 532. Outbound routing failure event

Event	Outbound routing failure
Event Type	outboundRoutingFailure
Event Code	1636
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "operation"="updateGprsLocationReq" "hlrInstance"=" Vodafone_HLR" "ueImsi"=" 04844624203918"
Displayed on the web interface	Unable to route [{operation}] for IMSI [{ueImsi}] to HLR [{hlrInstance}]
Description	This event occurs when it is unable to route transaction capabilities application (TCAP) message to the destination.

Did allocation failure

Table 533. Did allocation failure event

Event	Did allocation failure
Event Type	didAllocationFailure
Event Code	1637
Severity	Critical
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip"
Displayed on the web interface	HIP unable to allocate new dialogue
Description	This event occurs when it is unable to allocate the dialogue identifier for a new transaction. This indicates an overload condition.

Restore data success

Table 534. Restore data success event

Event	Restore data success
Event Type	restoreDataSuccess
Event Code	1639
Severity	Debug
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918"
Displayed on the web interface	MAP-RestoreData Operation Successful for IMSI [{uelmsi}] with [{hlrInstance}]
Description	This event occurs when it successfully restores the data operation.

Restore data failed

Table 535. Restore data failed event

Event	Restore data failed
Event Type	restoreDataFailed
Event Code	1640
Severity	Major
Attribute	"mvnold"="2" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="hip" "hlrInstance"="Vodafone_HLR" "uelmsi"="04844624203918" "cause"="Timeout"
Displayed on the web interface	MAP-RestoreData Operation Failed for IMSI [{uelmsi}] with [{hlrInstance}], cause [{cause}]
Description	This event occurs when it fails to restore the data operation.

NOTE: Refer to [GR Interface Alarms](#).

IPMI Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to IPMIs.

ipmiVoltage	ipmiThempBB	ipmiThempFP
ipmiThempLOH	ipmiThempMemP	ipmiThempPS
ipmiThempP	ipmiThempHSBP	ipmiFan
ipmiPower	ipmiCurrent	ipmiFanStatus
ipmiPsStatus	ipmiDrvStatus	ipmiREVoltage
ipmiREThempBB	ipmiREThempFP	ipmiREThempLOH
ipmiREThempMemP	ipmiREThempPS	ipmiREThempP
ipmiREThempHSBP	ipmiREFan	ipmiREPower
ipmiRECurrent	ipmiREFanStatus	ipmiREPsStatus
ipmiREDrvStatus		

ipmiVoltage

Table 536. ipmiVoltage event

Event	ipmiVoltage
Event Type	ipmiVoltage
Event Code	901
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}]
Description	<p>This event occurs due to under /over voltage on the control plane. Baseboard threshold temperatures are:</p> <ul style="list-style-type: none"> • Critical high - 66⁰ C • Non critical high - 61⁰ C • Non critical low - 10⁰ C • Critical low - 5⁰ C

Table 536. ipmiVoltage event

Auto Clearance	This event triggers the alarm 901, which is auto cleared by the event code 926.
----------------	---

ipmiThempBB

Table 537. ipmiThempBB event

Event	ipmiThempBB
Event Type	ipmiThempBB
Event Code	902
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard temperature [{status}] on controlplane [{nodeMac}]
Description	This event occurs when the baseboard temperature status is sent. Baseboard threshold temperatures are in the range of 10 ⁰ Celsius to 61 ⁰ Celsius. The default threshold is 61 ⁰ C.
Auto Clearance	This event triggers the alarm 902, which is auto cleared by the event code 927.

ipmiThempFP

Table 538. ipmiThempFP event

Event	ipmiThempFP
Event Type	ipmiThempFP
Event Code	903
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the front panel temperature status is sent. Front panel threshold temperatures are in the range of 5 ⁰ Celsius to 44 ⁰ Celsius. The default threshold is 44 ⁰ C.

Table 538. ipmiThempFP event

Auto Clearance	This event triggers the alarm 903, which is auto cleared by the event code 928.
----------------	---

ipmiThempIOH

Table 539. ipmiThempIOH event

Event	ipmiThempIOH
Event Type	ipmiThempIOH
Event Code	904
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the chip set temperature status is sent. IOH thermal margin threshold temperatures are in the range of -20 ⁰ Celsius to 5 ⁰ Celsius. The default threshold is 5 ⁰ C.
Auto Clearance	This event triggers the alarm 904, which is auto cleared by the event code 929.

ipmiThempMemP

Table 540. ipmiThempMemP event

Event	ipmiThempMemP
Event Type	ipmiThempMemP
Event Code	905
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the processor memory temperature status is sent. Process 1 memory thermal margin threshold temperatures are in the range of -20 ⁰ Celsius to 5 ⁰ Celsius. The default threshold is 5 ⁰ C.

Table 540. ipmiThempMemP event

Auto Clearance	This event triggers the alarm 905, which is auto cleared by the event code 930.
----------------	---

ipmiThempPS

Table 541. ipmiThempPS event

Event	ipmiThempPS
Event Type	ipmiThempPS
Event Code	906
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply temperature status is sent. Power supply 1 and power supply 2 threshold temperatures are in the range of -20 ⁰ Celsius to 5 ⁰ Celsius. The default threshold is 5 ⁰ C.
Auto Clearance	This event triggers the alarm 906, which is auto cleared by the event code 931.

ipmiThempP

Table 542. ipmiThempP event

Event	ipmiThempP
Event Type	ipmiThempP
Event Code	907
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the processor temperature on the control plane reaches the threshold value. The threshold value is in the range of 1 ⁰ to 11 ⁰ Celsius. The default threshold is 11 ⁰ C.

Table 542. ipmiThemp event

Auto Clearance	This event triggers the alarm 907, which is auto cleared by the event code 932.
----------------	---

ipmiThempHSBP

Table 543. ipmiThempHSBP event

Event	ipmiThempHSBP
Event Type	ipmiThempHSBP
Event Code	908
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}]
Description	This event occurs when the hot swap back plane temperature status in the range of 9 ⁰ Celsius to 55 ⁰ Celsius. The default threshold is 55 ⁰ C.
Auto Clearance	This event triggers the alarm 908, which is auto cleared by the event code 933.

ipmiFan

Table 544. ipmiFan event

Event	ipmiFan
Event Type	ipmiFan
Event Code	909
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}]
Description	This event occurs when the system fan module status is sent.
Auto Clearance	This event triggers the alarm 909, which is auto cleared by the event code 934.

ipmiPower

Table 545. ipmiPower event

Event	ipmiPower
Event Type	ipmiPower
Event Code	910
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}]
Description	This event occurs when the AC power input status is sent.
Auto Clearance	This event triggers the alarm 910, which is auto cleared by the event code 935.

ipmiCurrent

Table 546. ipmiCurrent event

Event	ipmiCurrent
Event Type	ipmiCurrent
Event Code	911
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] +12V% of maximum current output [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply and the maximum voltage output status is sent.
Auto Clearance	This event triggers the alarm 911, which is auto cleared by the event code 936.

ipmiFanStatus

Table 547. ipmiFanStatus event

Event	ipmiFanStatus
Event Type	ipmiFanStatus
Event Code	912
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the fan module status is sent.
Auto Clearance	This event triggers the alarm 912, which is auto cleared by the event code 937.

ipmiPsStatus

Table 548. ipmiPsStatus event

Event	ipmiPsStatus
Event Type	ipmiPsStatus
Event Code	913
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply status is sent.
Auto Clearance	This event triggers the alarm 913, which is auto cleared by the event code 938.

ipmiDrvStatus

Table 549. ipmiDrvStatus event

Event	ipmiDrvStatus
Event Type	ipmiDrvStatus
Event Code	914
Severity	Major
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the disk drive status is sent.
Auto Clearance	This event triggers the alarm 914, which is auto cleared by the event code 939.

ipmiREVotage

Table 550. ipmiREVotage event

Event	ipmiREVotage
Event Type	ipmiREVotage
Event Code	926
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard voltage [{status}] on control plane [{nodeMac}].
Description	This event occurs when the baseboard voltage comes back to the normal status.

ipmiREThempBB

Table 551. ipmiREThempBB event

Event	ipmiREThempBB
Event Type	ipmiREThempBB
Event Code	927
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Baseboard temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the baseboard temperature comes back to the normal status.

ipmiREThempFP

Table 552. ipmiREThempFP event

Event	ipmiREThempFP
Event Type	ipmiREThempFP
Event Code	928
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Front panel temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the front panel temperature comes back to the normal status.

ipmiREThempIOH

Table 553. ipmiREThempIOH event

Event	ipmiREThempIOH
Event Type	ipmiREThempIOH
Event Code	929
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"

Table 553. ipmiREThempIOH event

Displayed on the web interface	Chipset temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the chipset temperature comes back to the normal status.

ipmiREThempMemP

Table 554. ipmiREThempMemP event

Event	ipmiREThempMemP
Event Type	ipmiREThempMemP
Event Code	930
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] memory temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the processor memory temperature comes back to the normal status.

ipmiREThempPS

Table 555. ipmiREThempPS event

Event	ipmiREThempPS
Event Type	ipmiREThempPS
Event Code	931
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the power supply temperature comes back to the normal status.

ipmiREThempP

Table 556. ipmiREThempP event

Event	ipmiREThempP
Event Type	ipmiREThempP
Event Code	932
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Processor [{id}] temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the processor temperature comes back to the normal status.

ipmiREThempHSBP

Table 557. ipmiREThempHSBP event

Event	ipmiREThempHSBP
Event Type	ipmiREThempHSBP
Event Code	933
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Hot swap backplane temperature [{status}] on control plane [{nodeMac}].
Description	This event occurs when the hot swap backplane temperature comes back to the normal status.

ipmiREFan

Table 558. ipmiREFan event

Event	ipmiREFan
Event Type	ipmiREFan
Event Code	934
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"

Table 558. ipmiREFan event

Displayed on the web interface	System fan [{id}] module [{status}] on control plane [{nodeMac}].
Description	This event occurs when the system fan module comes back to the normal status.

ipmiREPower

Table 559. ipmiREPower event

Event	ipmiREPower
Event Type	ipmiREPower
Event Code	935
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] AC power input [{status}] on control plane [{nodeMac}].
Description	This event occurs when the AC power supply comes back to the normal status.

ipmiRECurrent

Table 560. ipmiRECurrent event

Event	ipmiRECurrent
Event Type	ipmiRECurrent
Event Code	936
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] +12V % of maximum current output [{status}] on control plane [{nodeMac}].
Description	This event occurs when power supply and the maximum voltage output status recover from abnormal condition.

ipmiREFanStatus

Table 561. ipmiREFanStatus event

Event	ipmiREFanStatus
Event Type	ipmiREFanStatus
Event Code	937
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Fan module [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the fan module comes back to the normal status.

ipmiREPsStatus

Table 562. ipmiREPsStatus event

Event	ipmiREPsStatus
Event Type	ipmiREPsStatus
Event Code	938
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Power supply [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the power supply comes back to the normal status.

ipmiREDrvStatus

Table 563. ipmiREDrvStatus event

Event	ipmiREDrvStatus
Event Type	ipmiREDrvStatus
Event Code	939
Severity	Informational
Attribute	"id"="x", "status"="xxxxx", "nodeMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Disk drive [{id}] [{status}] on control plane [{nodeMac}]
Description	This event occurs when the disk drive status comes back to the normal status.

NOTE: Refer to [IPMI Alarms](#).

Licensing Interface Events

Following are the events related to licensing.

- [TTG session warning threshold](#)
- [TTG session major threshold](#)
- [TTG session critical threshold](#)
- [TTG session license exhausted](#)
- [License sync succeeded](#)
- [License sync failed](#)
- [License import succeeded](#)
- [License import failed](#)
- [License data changed](#)
- [License going to expire](#)
- [Insufficient license capacity](#)

TTG session warning threshold

NOTE: This event is not applicable for vSZ-H.

Table 564. TTG session warning threshold event

Event	TTG session warning threshold
Event Type	ttgSessionWarningThreshold
Event Code	1240
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtIp}] have reached warning level.
Description	This event occurs when the number of user equipment attached to the system has reached the critical threshold limit.

TTG session major threshold

NOTE: This event is not applicable for vSZ-H.

Table 565. TTG session major threshold event

Event	TTG session major threshold
Event Type	ttgSessionMajorThreshold
Event Code	1241
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtIp}] have reached major level.
Description	This event occurs when the number of user equipment attached to the system has reached the major threshold limit.

TTG session critical threshold

NOTE: This event is not applicable for vSZ-H.

Table 566. TTG session critical threshold event

Event	TTG session critical threshold
Event Type	ttgSessionCriticalThreshold
Event Code	1242
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed sessions of {produce.short.name} [{SCGMgmtIp}] have reached critical level.
Description	This event occurs when the number of user equipment attached to the system has reached the critical threshold limit.

TTG session license exhausted

NOTE: This event is not applicable for vSZ-H.

Table 567. TTG session license exhausted event

Event	TTG session license exhausted
Event Type	ttgSessionLicenseExhausted
Event Code	1243
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="aut/lic"
Displayed on the web interface	The licensed of {produce.short.name} [{SCGMgmtIp}] have been exhausted for all sessions.
Description	This event occurs when the number of user equipment attached to the system has exceeded the license limit.

License sync succeeded

Table 568. License sync succeeded event

Event	License sync succeeded
Event Type	licenseSyncSuccess
Event Code	1250
Severity	Informational
Attribute	"nodeName"="xxxxxxx", "licenseServerName"="ruckuswireless.flexeraoperation.com"
Displayed on the web interface	Node [{nodeName}] sync-up license with license server [{licenseServerName}] succeeded.
Description	This event occurs when the controller successfully synchronizes the license data with the license server.

License sync failed

Table 569. License sync failed event

Event	License sync failed
Event Type	licenseSyncFail
Event Code	1251
Severity	Warning
Attribute	"nodeName"="xxxxxxx", "licenseServerName"="ruckuswireless.flexeraoperation.com"
Displayed on the web interface	Node [{nodeName}] sync-up license with license server [{licenseServerName}] failed.
Description	This event occurs when the controller fails to synchronize the license data with the license server.

License import succeeded

Table 570. License import succeeded event

Event	License import succeeded
Event Type	licenseImportSuccess
Event Code	1252
Severity	Informational
Attribute	"nodeName"="xxxxxxx",
Displayed on the web interface	Node [{nodeName}] import license data succeeded.
Description	This event occurs when the controller successfully imports the license data

License import failed

Table 571. License import failed event

Event	License import failed
Event Type	licenseImportFail
Event Code	1253
Severity	Warning
Attribute	"nodeName"="xxxxxxx",
Displayed on the web interface	Node [{nodeName}] import license data failed.
Description	This event occurs when the controller fails to imports the license data

License data changed

Table 572. License data changed event

Event	License data changed
Event Type	licenseChanged
Event Code	1254
Severity	Informational
Attribute	"nodeName"="xxxxxxx",
Displayed on the web interface	Node [{nodeName}] license data has been changed.
Description	This event occurs when the controller license data is modified.

License going to expire

Table 573. License going to expire event

Event	License going to expire
Event Type	licenseGoingToExpire
Event Code	1255
Severity	Major
Attribute	"nodeName"="xxx", "licenseType"=" xxx"
Displayed on the web interface	The [{licenseType}] on node [{nodeName}] will expire on [{associationTime}].

Table 573. License going to expire event

Description	This event occurs when the validity of the license is going to expire.
-------------	--

Insufficient license capacity

Table 574. Insufficient license capacity event

Event	Insufficient license capacity
Event Type	apConnectionTerminatedDueToInsufficientLicense
Event Code	1256
Severity	Major
Attribute	"licenseType"=" xxx"
Displayed on the web interface	Insufficient [{licenseType}] license is detected and it will cause existing AP connections to terminate.
Description	This event occurs when connected APs are rejected due to insufficient licenses.

NOTE: Refer to [Licensing Alarms](#).

Location Delivery Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to location delivery.

- [Unavailable location info requested](#)
- [Incapable location info requested](#)
- [Unsupported location delivery request](#)

Unavailable location info requested

Table 575. Unavailable location info requested event

Event	Unavailable location info requested
Event Type	unavailableLocInfoRequested
Event Code	1655
Severity	Debug
Attribute	"mvmold"=12, "wlanId"=1, "zoneld"="10", "ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="operator realm", "radSrvrlp"="1.1.1.1", "requestedInfo"="target location geo location, etc", "SCGMgmtlp"="2.2.2.2"
Displayed on the web interface	AAA [{{radSrvrlp}}] requests [{{requestedInfo}}] that is not available with {produce.short.name}[{{SCGMgmtlp}}]
Description	This event occurs when the AAA server requests for the location information, which is not available at the controller. For example, the AAA server requests for the target location even after the controller communicating that it can only support NAS locations.

Incapable location info requested

Table 576. Incapable location info requested event

Event	Incapable location info requested
Event Type	incapableLocInfoRequested
Event Code	1656
Severity	Debug
Attribute	“mvnold”=12, “wlanId”=1, “zoneld”=“10”, “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff”“srcProcess”=“radius” “realm”=“operator realm”, “radSrvrlp”=“1.1.1.1”, “requestedInfo”=“target location geo location, etc”, “SCGMgmtIp”=“2.2.2.2”
Displayed on the web interface	AAA [{radSrvrlp}] requests [{requestedInfo}] that is not advertised by {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the AAA server requests for location information though the controller does not advertise that it is capable of delivering the location information.

Unsupported location delivery request

Table 577. Unsupported location delivery request event

Event	Unsupported location delivery request
Event Type	unSupportedLocDeliveryRequest
Event Code	1657
Severity	Debug
Attribute	“mvnold”=12, “wlanId”=1, “zoneld”=“10”, “ctrlBladeMac”=“aa:bb:cc:dd:ee:ff”, “srcProcess”=“radius” “realm”=“operator realm”, “radSrvrlp”=“1.1.1.1” “requestedMethod”=“out of band initial request, etc” “SCGMgmtIp”=“2.2.2.2”
Displayed on the web interface	AAA [{radSrvrlp}] requests [{requestedInfo}] that is not supported by {produce.short.name} [{SCGMgmtIp}].
Description	This event occurs when the AAA server requests for a delivery method that is not supported by the controller.

PMIPv6 Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to PMIPv6.

- [Config update failed](#)
- [LMA ICMP reachable](#)
- [LMA ICMP unreachable](#)
- [LMA server unreachable](#)
- [LMA failed over](#)
- [DHCP connected](#)
- [DHCP connection lost](#)

Config update failed

Table 578. Config update failed event

Event	Config update failed
Event Type	updateCfgFailed
Event Code	5004
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "cause"="reason"
Displayed on the web interface	Failed to apply configuration [{cause}] in PMIPv6 process at {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the PMIPv6 receives an error or negative acknowledgment or improper/incomplete information from D-bus client.

LMA ICMP reachable

Table 579. LMA ICMP reachable event

Event	LMA ICMP reachable
Event Type	lmalcmpReachable
Event Code	5005
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "lmalp"="1.1.1.1"
Displayed on the web interface	{{lmalp}} ICMP reachable on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the PMIPv6 daemon connects to the local mobility anchor (LMA) server through the internet control message protocol (ICMP) packet.

LMA ICMP unreachable

Table 580. LMA ICMP unreachable event

Event	LMA ICMP unreachable
Event Type	lmalcmpUnreachable
Event Code	5006
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "lmalp"="1.1.1.1"
Displayed on the web interface	{{lmalp}} ICMP unreachable on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the PMIPv6 daemon is unable to connect to the local mobility anchor (LMA) server through the ICMP packet.
Auto Clearance	This event triggers the alarm 5006, which is auto cleared by the event code 5005.

LMA server unreachable

Table 581. LMA server unreachable event

Event	LMA server unreachable
Event Type	ImaHbUnreachable
Event Code	5007
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "ImaIp"="1.1.1.1"
Displayed on the web interface	[[ImaIp]] fail have been detected on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the PMIPv6 daemon detects either restart or failure of the LMA server.

LMA failed over

Table 582. LMA failed over event

Event	LMA failed over
Event Type	ImaFailOver
Event Code	5008
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", "ImaIp"="1.1.1.1"
Displayed on the web interface	[[ImaIp]] Failover on {produce.short.name} [[SCGMgmtIp]]
Description	This event is logged when the standby LMA transits to an active mode. This includes the control plane identifier of the newly active LMA.

DHCP connected

Table 583. DHCP connected event

Event	DHCP connected
Event Type	connectedToDHCP
Event Code	5101
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process connect to DHCP server successfully on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the PMIPv6 completes the configuration procedure successfully.

DHCP connection lost

Table 584. DHCP connection lost event

Event	DHCP connection lost
Event Type	lostCnxnToDHCP
Event Code	5102
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process cannot connect to DHCP server on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when the connection between PMIPv6 process and DHCP server is lost.
Auto Clearance	This event triggers the alarm 5102, which is auto cleared by the event code 5101.

NOTE: Refer to [PMIPv6 Alarms](#).

SCI Events

Following are the events related to SCI (Small Cell Insight).

- [Connect to SCI](#)
- [Disconnect to SCI](#)
- [Connect to SCI failure](#)
- [SCI has been disabled](#)
- [SCI and FTP have been disabled](#)

Connect to SCI

Table 585. Connect to SCI event

Event	Connect to SCI
Event Type	connectedToSci
Event Code	4001
Severity	Informational
Attribute	"id"="SCI Server", "ip"="2.2.2.2", "port"="8883", "userName"="admin"
Displayed on the web interface	Connect to SCI with system id [{id}], address [{ip}:{port}] and login user [{userName}]
Description	This event occurs when the controller connects to SCI.

Disconnect to SCI

Table 586. Disconnect to SCI event

Event	Disconnect to SCI (Smart Cell Insight)
Event Type	disconnectedFromSci
Event Code	4002
Severity	Warning
Attribute	id="SCI Server", "ip"="2.2.2.2", "port"="8883", "userName"="admin"
Displayed on the web interface	Disconnect to SCI with system id [{id}], address [{ip}:{port}] and login user [{userName}]
Description	This event occurs when the controller disconnects from the SCI.

Connect to SCI failure

Table 587. Connect to SCI failure event

Event	Connect to SCI failure (Smart Cell Insight)
Event Type	connectToSciFailure
Event Code	4003
Severity	Major
Displayed on the web interface	Try to connect to SCI with all SCI profiles but failure.
Description	This event occurs when the controller tries connecting to SCI with its profiles but fails.
Auto Clearance	This event triggers the alarm 4003, which is auto cleared by the event code 4002.

SCI has been disabled

Table 588. SCI has been disabled event

Event	SCI has been disabled
Event Type	disabledSciDueToUpgrade
Event Code	4004
Severity	Warning
Displayed on the web interface	SCI has been disabled due to SZ upgrade, please reconfigure SCI if need
Description	This event occurs when the SCI is disabled due to the controller upgrade. This could result in reconfiguration of SCI.

SCI and FTP have been disabled

Table 589. SCI and FTP have been disabled event

Event	SCI and FTP have been disabled
Event Type	disabledSciAndFtpDueToMutuallyExclusive
Event Code	4005
Severity	Warning
Displayed on the web interface	SCI and FTP have been disabled. It is recommended to enable SCI instead of FTP
Description	This event occurs when the SCI and FTP are disabled.

NOTE: Refer to [SCI Alarms](#).

Session Events

Following are the events related to session interface (UE TTG sessions)

- [Session timeout](#)
- [Delete all sessions](#)
- [Binding succeeded](#)
- [Binding failed](#)
- [Binding time expired](#)
- [Binding revoked](#)
- [Binding released](#)

Session timeout

NOTE: This event is not applicable for vSZ-H.

Table 590. Session timeout event

Event	Session timeout
Event Type	sessTimeout
Event Code	1235
Severity	Debug
Attribute	"mvsold"=12 "wlanId"=1,"zoneId"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="wlan.3gppnetwork.org" "ueMacAddr"="bb:aa:dd:dd:ee:ff" "cause"="Session Timeout" "SCGMgmtIp"="2.2.2.2" "ueImsi"="12345", "ueMsisdN"="98787"
Displayed on the web interface	Session for UE with IMSI [{ueImsi}] and MSISDN [{ueMsisdN}] got deleted due to Session Timeout on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs when a session is deleted due to a timeout specified by the AAA server.

Delete all sessions

Table 591. Delete all sessions event

Event	Delete all sessions
Event Type	delAllSess
Event Code	1237
Severity	Minor
Attribute	"mvnold"="NA" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="aut" "realm"="NA" "cause"="Admin Delete" "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	All sessions got terminated on {produce.short.name} [{SCGMgmtIp}] due to [{cause}]
Description	This event occurs when all sessions are deleted based on the indicators received from the controller web interface or RWSC or CLI.

Binding succeeded

NOTE: This event is not applicable for vSZ-H.

Table 592. Binding succeeded event

Event	Binding succeeded
Event Type	bindingSuccess
Event Code	5009
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtIp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "uelpAddr"="5.5.5.5" "dataBladeIp"="3.3.3.3"
Displayed on the web interface	[[ueMacAddr]] UE binding update successful on {produce.short.name}-D [[dataBladeIp]], and get IP address: [[uelpAddr]] from LMA: [[lmalp]]
Description	This event occurs when the mobile node binding update is successful.

Binding failed

NOTE: This event is not applicable for vSZ-H.

Table 593. Binding failed event

Event	Binding failed
Event Type	bindingFailure
Event Code	5010
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtIp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladeIp"="3.3.3.3" "ueIpAddr"="5.5.5.5" "cause"="failure cause"
Displayed on the web interface	Binding for [{ueMacAddr}] UE binding update failure on {produce.short.name}-D [{dataBladeIp}]. Failure Cause [{cause}]
Description	This event occurs when mobile node binding update fails.
Auto Clearance	This event triggers the alarm 5010, which is auto cleared by the event code 5009.

Binding time expired

NOTE: This event is not applicable for vSZ-H.

Table 594. Binding time expired event

Event	Binding time expired
Event Type	bindingExpired
Event Code	5011
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2" "lmalp"="1.1.1.1", "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladeIp"="3.3.3.3" "ueIpAddr"="5.5.5.5"
Displayed on the web interface	[{ueMacAddr}] UE Binding expired on {produce.short.name}-D [{dataBladeIp}]
Description	This event occurs when the binding expires.

Binding revoked

NOTE: This event is not applicable for vSZ-H.

Table 595. Binding revoked event

Event	Binding revoked
Event Type	bindingRevoked
Event Code	5012
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtIp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladeIp"="3.3.3.3" "uelpAddr"="5.5.5.5"
Displayed on the web interface	{{ueMacAddr}} UE Binding have been revoked on {produce.short.name}-D {{dataBladeIp}}
Description	This event occurs when the binding is revoked on the controller.

Binding released

NOTE: This event is not applicable for vSZ-H.

Table 596. Binding released event

Event	Binding released
Event Type	bindingReleased
Event Code	5013
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "SCGMgmtIp"="2.2.2.2" "lmalp"="1.1.1.1" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "dataBladeIp"="3.3.3.3" "uelpAddr"="5.5.5.5"
Displayed on the web interface	{{ueMacAddr}} UE Binding have been released on {produce.short.name}-D {{dataBladeIp}}
Description	This event occurs when some mobile node binding are released.

NOTE: Refer to [Session Alarms](#).

STA Interface Events

NOTE: This section is not applicable for vSZ-H.

Following are the events related to STA interface.

- [STA successful authentication](#)
- [STA authentication failed transport down](#)
- [STA authentication failed failure response](#)
- [STA authentication failed decode failure](#)
- [STA session termination {produce.short.name} initiated success](#)
- [STA session termination AAA initiated success](#)
- [STA session termination AAA initiated failed](#)
- [STA re-authorization successful](#)
- [STA re-authorization failed](#)
- [STA response timer expired](#)
- [Retransmission exhausted](#)

STA successful authentication

Table 597. STA successful authentication event

Event	STA successful authentication
Event Type	staSuccessfulAuthentication
Event Code	1550
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaServIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with AAA server [[aaaSrvrIp]] Successful

Table 597. STA successful authentication event

Description	This event occurs when the authentication procedure with external 3GPP AAA server is successful. The diameter EAP request (DER is received from the 3GPP AAA server with result code as successful.
-------------	---

STA authentication failed transport down

Table 598. STA authentication failed transport down event

Event	STA authentication failed transport down
Event Type	staAuthFailedTransDown
Event Code	1551
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with AAA [[aaaSrvrlp]] failed as Transport is down
Description	This event occurs when the authentication procedure with external AAA server fails and the STA transport is down.

STA authentication failed failure response

Table 599. STA authentication failed failure response event

Event	STA authentication failed failure response
Event Type	staAuthFailedFailureResp
Event Code	1552
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"=" wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode"="Decode Failed"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with 3GPP AAA [[aaaSrvrlp]] failed, DEA with failure code [[resultCode]]

Table 599. STA authentication failed failure response event

Description	This event occurs when the authentication procedure with external AAA server fails. The diameter EAP answer received from 3GPP AAA server fails with result code.
-------------	---

STA authentication failed decode failure

Table 600. STA authentication failed decode failure event

Event	STA authentication failed decode failure
Event Type	staAuthFailedDecodeFailure
Event Code	1553
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1", "resultCode"="xyz"
Displayed on the web interface	[[srcProcess]] Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] with 3GPP AAA [[aaaSrvrlp]] failed, DEA decode failed
Description	This event occurs when the authentication procedure with external 3GPP AAA server fails. The DEA received from 3GPP AAA server fails with result code.

STA session termination {produce.short.name} initiated success

Table 601. STA session termination {produce.short.name} initiated success event

Event	STA session termination {produce.short.name} initiated success
Event Type	staSessionTermSCGInitSuccess
Event Code	1554
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"

Table 601. STA session termination {produce.short.name} initiated success event

Displayed on the web interface	[[srcProcess]] session termination of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtIp}] with 3GPP AAA [{aaaSrvrlp}] successful
Description	This event occurs when the controller initiated session termination-r (STR) is received and successfully terminated by the STA interface.

STA session termination AAA initiated success

Table 602. STA session termination AAA initiated success event

Event	STA session termination AAA initiated success
Event Type	staSessionTermAAALnitSucess
Event Code	1555
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold="12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Session Termination of [{uelmsi}]/[{ueUsername}] on {produce.short.name} [{SCGMgmtIp}] from 3GPP AAA [{aaaSrvrlp}] successful. AS-R request from AAA
Description	This event occurs when the controller receives and successfully terminates the abort session request (ASR) initiated by the 3GPP AAA server.

STA session termination AAA initiated failed

Table 603. STA session termination AAA initiated failed event

Event	STA session termination AAA initiated failed
Event Type	staSessionTermAAAInitFailed
Event Code	1556
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Session Termination of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] from 3GPP AAA [[aaaSrvrlp]] failed. AS-R request from AAA
Description	This event occurs when the controller does not receive the abort session request initiated by the 3GPP AAA server.

STA re-authorization successful

Table 604. STA re-authorization successful event

Event	STA re-authorization successful
Event Type	staReAuthSuccess
Event Code	1557
Severity	Informational
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"="wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Re-Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] from 3GPP AAA [[aaaSrvrlp]] successful
Description	This event occurs when the 3GPP AAA initiated reauthorization re-auth request (RAR) is successful.

STA re-authorization failed

Table 605. STA re-authorization failed event

Event	STA re-authorization failed
Event Type	staReAuthFailed
Event Code	1558
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Re-Auth of [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] from 3GPP AAA [[aaaSrvrlp]] failed
Description	This event occurs when the 3GPP AAA initiated reauthorization re-auth request fails.

STA response timer expired

Table 606. STA response timer expired event

Event	STA response timer expired
Event Type	staResponseTimerExpired
Event Code	1559
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12, "srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSrvrlp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Tx timer expired no response received from 3GPP AAA [[aaaSrvrlp]]
Description	This event occurs when the Tx timer expires and the controller does not receive a response from 3GPP AAA server.

Retransmission exhausted

Table 607. Retransmission exhausted event

Event	Retransmission exhausted
Event Type	retransmitExhausted
Event Code	1560
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", mvnold"=12,"srcProcess"="STA", "realm"= "wlan.mnc080.mcc405.3gppnetwork.org", "uelmsi"="12345", "ueUsername"="98787", "SCGMgmtIp"="2.2.2.2", "aaaSvrIp"="1.1.1.1"
Displayed on the web interface	[[srcProcess]] Retransmission for [[uelmsi]]/[[ueUsername]] on {produce.short.name} [[SCGMgmtIp]] to 3GPP AAA [[aaaSvrIp]] failed. Retransmission of messages to 3GPP AAA [[resultCode]] failed
Description	This event occurs when the retransmission from the 3GPP AAA server fails.

NOTE: Refer to [STA Interface Alarms](#).

System Events

Following are the events with the system log severity.

NOTE: {produce.short.name} refers to SCG or vSZ-H

No LS responses	LS authentication failure	{produce.short.name} connected to LS
{produce.short.name} failed to connect to LS	{produce.short.name} received passive request	{produce.short.name} sent controller information report
{produce.short.name} received management request	{produce.short.name} sent AP info by venue report	{produce.short.name} sent associated client report
{produce.short.name} forwarded calibration request to AP	{produce.short.name} forwarded calibration request to AP	{produce.short.name} forwarded footfall request to AP
{produce.short.name} received unrecognized request	Syslog server reachable	Syslog server unreachable
Syslog server switched	Generate AP config for plane load rebalance succeeded	Generate AP config for plane load rebalance failed
FTP transfer	FTP transfer error	CSV export FTP transfer
CSV export FTP transfer error	CSV export FTP transfer maximum retry	CSV export disk threshold exceeded
CSV export disk max capacity reached	CSV export disk threshold back to normal	File upload
Email sent successfully	Email sent failed	SMS sent successfully
SMS sent failed	Process restart	Service unavailable
Keepalive failure	Resource unavailable	HIP started
HIP stopped	HIP failed over	Standby HIP restarted
HIP cache cleaned	Data plane of data center side successfully connects to the CALEA server	Data plane of data center side fails to connect to the CALEA server
Data Plane of data center side disconnects to CALEA server	Data plane successfully connects to the other data plane	Data plane fails to connects to the other data plane

Data plane disconnects to the other data plane	Start CALEA mirroring client in data plane	Stop CALEA mirroring client in data plane
Data plane DHCP IP pool usage rate is 100 percent	Data plane DHCP IP pool usage rate is 80 percent	All data planes in the zone affinity profile are disconnected
CALEA UE Matched	Diameter initialization error	Diameter initialization
Diameter peer transport failure	Diameter CER error	Diameter CER success
Diameter invalid version	Diameter peer add error	Diameter peer add successful
Diameter peer remove successful	Diameter realm entry error	Diameter failover to alternate peer
Diameter fail back to peer	Diameter CEA unknown peer	Diameter no common application
ZD AP migrating	ZD AP migrated	ZD AP rejected
ZD AP migration failed	Database error	Recover cassandra error
Process initiated	PMIPv6 unavailable	Memory allocation failed
Process stopped		

No LS responses

Table 608. No LS responses event

Event	No LS responses
Event Type	scgLBSNoResponse
Event Code	721
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] no response from LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller does not get a response while connecting to the location based service.

LS authentication failure

Table 609. LS authentication failure event

Event	LS authentication failure
Event Type	scgLBSAuthFailed
Event Code	722
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] authentication failed: url=[{url}], port=[{port}]
Description	This event occurs due to the authentication failure when SmartZone tries connecting to the location based service.

{produce.short.name} connected to LS

Table 610. {produce.short.name} connected to LS event

Event	{produce.short.name} connected to LS
Event Type	scgLBSConnectSuccess
Event Code	723
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] connected to LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller successfully connects to the location based service.

{produce.short.name} failed to connect to LS

Table 611. {produce.short.name} failed to connect to LS event

Event	{produce.short.name} failed to connect to LS
Event Type	scgLBSConnectFailed
Event Code	724
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "url"="", "port"="", "SCGMgmtIp"=""

Table 611. {produce.short.name} failed to connect to LS event

Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] connection failed to LS: url=[{url}], port=[{port}]
Description	This event occurs when the controller failed to connect to the location based service.
Auto Clearance	This event triggers the alarm 724, which is auto cleared by the event code 723.

{produce.short.name} received passive request

Table 612. {produce.short.name} received passive request event

Event	{produce.short.name} received passive request
Event Type	scgLBSSstartLocationService
Event Code	725
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx:", "type"="", "venue"="", "SCGMgmtIp"="", "band"=""
Displayed on the web interface	SmartZone [{SCGMgmtIp}] received Passive Request, band=[{band}], type=[{type}]
Description	This event occurs when the controller receives a passive request.

{produce.short.name} sent controller information report

Table 613. {produce.short.name} sent controller information report event

Event	{produce.short.name} sent controller information report
Event Type	scgLBSSentControllerInfo
Event Code	727
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "api"="", "sw"="", "clusterName"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] sent Controller Info Report: mac =[{mac}], api=[{api}], sw=[{sw}], clusterName =[{clusterName}]
Description	This event occurs when the controller sends the controller information report.

{produce.short.name} received management request

Table 614. {produce.short.name} received management request event

Event	{produce.short.name} received management request
Event Type	scgLBSRcvdMgmtRequest
Event Code	728
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "venue"="", "type"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] received Management Request: venue=[{venue}], type=[{type}]
Description	This event occurs when the controller receives the management request.

{produce.short.name} sent AP info by venue report

Table 615. {produce.short.name} sent AP info by venue report event

Event	{produce.short.name} sent AP info by venue report
Event Type	scgLBSSEndAPInfobyVenueReport
Event Code	729
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "venue"="", "count"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] sent AP Info by Venue Report: venue=[{venue}], count =[{count}]
Description	This event occurs when the controller sends the venue report regarding AP information.

{produce.short.name} sent query venues report

Table 616. {produce.short.name} sent query venues report event

Event	{produce.short.name} sent query venues report
Event Type	scgLBSSendVenuesReport
Event Code	730
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "count"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] sent Query Venues Report: count=[{count}]
Description	This event occurs when the controller sends the query venue report.

{produce.short.name} sent associated client report

Table 617. {produce.short.name} sent associated client report event

Event	{produce.short.name} sent associated client report
Event Type	scgLBSSendClientInfo
Event Code	731
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "count"="", "SCGMgmtIp"="", "type"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] sent Associated Client Report: count= [{count}], type= [{type}]
Description	This event occurs when the controller sends the associated client report.

{produce.short.name} forwarded calibration request to AP

Table 618. {produce.short.name} forwarded calibration request to AP event

Event	{produce.short.name} forwarded calibration request to AP
Event Type	scgLBSFwdPassiveCalReq
Event Code	732
Severity	Informational
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "SCGMgmtIp"="", "apMac"="xx:xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration"="", "band"="", "count"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] forward Passive Calibration Request to [{apName&&apMac}]: venue= [{venue}], interval= [{interval}], duration= [{duration}], band= [{band}], count= [{count}]
Description	This event occurs when the controller sends a forward calibration request to the AP on its reconnection to the controller.

{produce.short.name} forwarded footfall request to AP

Table 619. {produce.short.name} forwarded footfall request to AP event

Event	{produce.short.name} forwarded footfall request to AP
Event Type	scgLBSFwdPassiveFFReq
Event Code	733
Severity	Informational
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "SCGMgmtIp"="", "apMac"="xx:xx:xx:xx:xx:xx", "venue"="", "interval"="", "duration"="", "band"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] forward Passive Footfall Request to [{apName&&apMac}]: venue= [{venue}], interval= [{interval}], duration= [{duration}], band= [{band}]
Description	This event occurs when the controller sends a forward footfall request to the AP on its reconnection to the controller.

{produce.short.name} received unrecognized request

Table 620. {produce.short.name} received unrecognized request event

Event	{produce.short.name} received unrecognized request
Event Type	scgLBSRcvdUnrecognizedRequest
Event Code	734
Severity	Warning
Attribute	"ctrlBladeMac"="xx:xx:xx:xx:xx:xx", "type"="", "length"="", "SCGMgmtIp"=""
Displayed on the web interface	{produce.short.name} [{SCGMgmtIp}] received Unrecognized: length =[{length}]
Description	This event occurs when the controller receives an unrecognized request.

Syslog server reachable

Table 621. Syslog server reachable event

Event	Syslog server reachable
Event Type	syslogServerReachable
Event Code	750
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "syslogServerAddress"="xxx.xxx.xxxx.xxx"
Displayed on the web interface	Syslog server [{syslogServerAddress}] is reachable on {produce.short.name}.
Description	This event occurs when the syslog server can be reached.

Syslog server unreachable

Table 622. Syslog server unreachable event

Event	Syslog server unreachable
Event Type	syslogServerUnreachable
Event Code	751
Severity	Major
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "syslogServerAddress"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Syslog server [{syslogServerAddress}] is unreachable on {produce.short.name}.
Description	This event occurs when the syslog server is unreachable.
Auto Clearance	This event triggers the alarm 751, which is auto cleared by the event code 750.

Syslog server switched

Table 623. Syslog server switched event

Event	Syslog server switched
Event Type	syslogServerSwitched
Event Code	752
Severity	Informational
Attribute	"nodeMac"="xx:xx:xx:xx:xx:xx", "srcAddress"="xxx.xxx.xxx.xxx", "destAddress"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Syslog server is switched from [{srcAddress}] to [{destAddress}] on {produce.short.name}.
Description	This event occurs when the syslog server is switched.

Generate AP config for plane load rebalance succeeded

Table 624. Generate AP config for plane load rebalance succeeded event

Event	Generate AP config for plane load rebalance succeeded
Event Type	planeLoadingRebalancingSucceeded
Event Code	770
Severity	Informational
Attribute	No attributes for this event.
Displayed on the web interface	Generate new AP configs for plane's loading re-balancing succeeded.
Description	This event occurs when the user executes the load of data plane for re-balancing and generates a new AP configuration successfully.

Generate AP config for plane load rebalance failed

Table 625. Generate AP config for plane load rebalance failed event

Event	Generate AP config for plane load rebalance failed
Event Type	planeLoadingRebalancingFailed
Event Code	771
Severity	Informational
Attribute	
Displayed on the web interface	Generate new AP configs for plane's loading re-balancing failed.
Description	This event occurs when the user executes the load of data plane for re-balancing and generation of a new AP configuration fails.

FTP transfer

Table 626. FTP transfer event

Event	FTP transfer
Event Type	ftpTransfer
Event Code	970
Severity	Informational
Attribute	"ip"="xxx.xxx.xxx.xxx", "portID"="xxxx", "reason"="xxxxx"
Displayed on the web interface	File [{reason}] transferred to FTP server [{ip}:{portID}] successfully
Description	This event occurs when a file transfer to the FTP server is successful.

FTP transfer error

Table 627. FTP transfer error event

Event	FTP transfer error
Event Type	ftpTransferError
Event Code	971
Severity	Warning
Attribute	"ip"="xxx.xxx.xxx.xxx", "portID"="xxxx", "reason"="xxxxx"
Displayed on the web interface	File [{reason}] transferred to FTP server [{ip}:{portID}] unsuccessfully
Description	This event occurs when the file transfer to the FTP server fails.

CSV export FTP transfer

Table 628. CSV export FTP transfer event

Event	CSV export FTP transfer
Event Type	csvFtpTransfer
Event Code	972
Severity	Informational
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx", "portID"="xx:xx:xx:xx:xx:xx", "filename"="xxx.xxx.xxxx.xxx"
Displayed on the web interface	CSV export file [{filename}] transferred on control plane [{nodeName}-C] to FTP server [{ip}:{portID}] successfully.
Description	This event occurs when the CSV file is successfully sent to remote server.

CSV export FTP transfer error

Table 629. CSV export FTP transfer error event

Event	CSV export FTP transfer error
Event Type	csvFtpTransferError
Event Code	973
Severity	Warning
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx", "portID"="xx:xx:xx:xx:xx:xx", "filename"="xxx.xxx.xxxx.xxx"
Displayed on the web interface	CSV export file [{filename}] transferred on control plane [{nodeName}-C] to FTP server [{ip}:{portID}] unsuccessfully.
Description	This event occurs when the CSV file transfer to the remote sever fails.
Auto Clearance	This event triggers the alarm 973, which is auto cleared by the event code 972.

CSV export FTP transfer maximum retry

Table 630. CSV export FTP transfer maximum retry event

Event	CSV export FTP maximum retry
Event Type	csvFtpTransferMaxRetryReached
Event Code	974
Severity	Major
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "ip"="xx:xx:xx:xx:xx:xx", "portID"="xx:xx:xx:xx:xx:xx", "filename"="xxx.xxx.xxxx.xxx"
Displayed on the web interface	CSV export file [{filename}] transferred on control plane [{nodeName}-C] to FTP server [{ip}:{portID}] max retries reached.
Description	This event occurs when the CSV file fails to transfer after a maximum of five (5) retries.

CSV export disk threshold exceeded

Table 631. CSV export disk threshold exceeded event

Event	CSV export disk threshold exceeded
Event Type	csvDiskThresholdExceeded
Event Code	975
Severity	Warning
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "threshold"="xx:xx:xx:xx:xx:xx", "availableDiskSize"="xx:xx:xx:xx:xx:xx",
Displayed on the web interface	CSV export disk threshold [{threshold}%] exceeded on control plane [{nodeName}-C]. Available disk size left [{availableDiskSize}]
Description	This event occurs when the CSV report size exceeds 80% of its capacity.

CSV export disk max capacity reached

Table 632. CSV export disk max capacity reached event

Event	CSV export disk max capacity reached
Event Type	csvDiskMaxCapacityReached
Event Code	976
Severity	Critical
Attribute	CSV export disk maximum capacity reached on control plane [{nodeName}-C]. Allocated disk size [{allocatedDiskSize]}.
Displayed on the web interface	CSV export disk threshold [{threshold}%] exceeded on control plane [{nodeName}-C]. Available disk size left [{availableDiskSize]}.
Description	This event occurs when the CSV report size reaches its maximum capacity.

CSV export disk threshold back to normal

Table 633. CSV export disk threshold back to normal event

Event	CSV export disk threshold back to normal
Event Type	csvDiskThresholdBackToNormal
Event Code	977
Severity	Informational
Attribute	"nodeName"="xx:xx:xx:xx:xx:xx", "availableDiskSize"="xx:xx:xx:xx:xx:xx", "currentUsedPercent"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	CSV export disk usage [{currentUsedPercent}%] got back to normal on control plane [{nodeName}-C]. Available disk size left [{availableDiskSize]}.
Description	This event occurs when the CSV export file is under the threshold limit.

File upload

Table 634. File upload event

Event	File upload
Event Type	fileUpload
Event Code	980
Severity	Informational
Attribute	"ip"="xxx.xxx.xxx.xxx", "cause"="xxxxx"
Displayed on the web interface	Backup file [{cause}] uploading from [{ip}] failed
Description	This event occurs when the backup file upload fails.

Email sent successfully

Table 635. Email sent successfully event

Event	Email sent successfully
Event Type	mailSendSuccess
Event Code	981
Severity	Informational
Attribute	"srcProcess"="xxxxx", "receiver"="xxxxx", "nodeMac"="xxxxx", "nodeName"="xxxxx", "tenantUUID"="xxxxx"
Displayed on the web interface	[[srcProcess]] sent email to [[receiver]] successfully.
Description	This event occurs when system sends mail successfully.

Email sent failed

Table 636. Email sent failed event

Event	Email sent failed
Event Type	mailSendFailed
Event Code	982
Severity	Warning
Attribute	"srcProcess"="xxxxx", "receiver"="xxxxx", "nodeMac"="xxxxx", "nodeName"="xxxxx", "tenantUUID"="xxxxx"

Table 636. Email sent failed event

Displayed on the web interface	{{srcProcess}} sent email to {{receiver}} failed.
Description	This event occurs when the system fails to send the mail.

SMS sent successfully

Table 637. SMS sent successfully event

Event	SMS sent successfully
Event Type	smsSendSuccess
Event Code	983
Severity	Informational
Attribute	"srcProcess"="xxxxx", "receiver"= "xxxxx", "nodeMac"="xxxxx", "nodeName"="xxxxx", "tenantUUID"="xxxxx"
Displayed on the web interface	{{srcProcess}} sent short message to {{receiver}} successfully.
Description	This event occurs when system sends the short message successfully.

SMS sent failed

Table 638. SMS sent failed event

Event	SMS sent failed
Event Type	smsSendFailed
Event Code	984
Severity	Warning
Attribute	"srcProcess"="xxxxx", "receiver"= "xxxxx", "reason"="xxxxx", "nodeMac"="xxxxx", "nodeName"="xxxxx", "tenantUID"="xxxxx"
Displayed on the web interface	{{srcProcess}} sent short message to {{receiver}} failed, reason: {{reason}}.
Description	This event occurs when system fails to send the short message.

Process restart

Table 639. Process restart event

Event	Process restart
Event Type	processRestart
Event Code	1001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	{{processName}} process got re-started on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when any process crashes and restarts.

Service unavailable

Table 640. Service unavailable event

Event	Service unavailable
Event Type	serviceUnavailable
Event Code	1002
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	{{processName}} process is not stable on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when the process repeatedly restarts and is unstable.

Keepalive failure

Table 641. Keepalive failure event

Event	Keepalive failure
Event Type	keepAliveFailure
Event Code	1003
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="nc", "realm"="NA", "processName"="aut", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	{{srcProcess}} on {produce.short.name} {{SCGMgmtIp}} restarted {{processName}} process.
Description	This event occurs when the <i>mon/nc</i> restarts the process due to a keep alive failure.

Resource unavailable

Table 642. Resource unavailable event

Event	Resource unavailable
Event Type	resourceUnavailable
Event Code	1006
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="radiusd", "realm"="NA", "SCGMgmtIp"="3.3.3.3", "cause"="xx"
Displayed on the web interface	System resource {{cause}} not available in {{srcProcess}} process at {produce.short.name} {{SCGMgmtIp}}
Description	This event is generated due to unavailability of any other system resource, such as memcached.

HIP started

NOTE: This event is not applicable for vSZ-H.

Table 643. HIP started event

Event	HIP started
Event Type	hipStarted
Event Code	1014
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102"
Displayed on the web interface	{{srcProcess}} process gets Started on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when the HIP instance starts.

HIP stopped

NOTE: This event is not applicable for vSZ-H.

Table 644. HIP stopped event

Event	HIP stopped
Event Type	hipStopped
Event Code	1015
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102"
Displayed on the web interface	{{srcProcess}} process stopped HIP on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when HIP is stopped.

HIP failed over

NOTE: This event is not applicable for vSZ-H.

Table 645. HIP failed over event

Event	HIP failed over
Event Type	hipFailover
Event Code	1016
Severity	Major
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102"
Displayed on the web interface	[[srcProcess]] Node transitioned to Active on {produce.short.name} [[SCGMgmtIp]]
Description	This event is logged when the standby HIP transits to an active mode and includes the control plane identifier of the newly active HIP.

Standby HIP restarted

NOTE: This event is not applicable for vSZ-H.

Table 646. Standby HIP restarted event

Event	Standby HIP restarted
Event Type	hipStandbyRestart
Event Code	1017
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102"
Displayed on the web interface	[[srcProcess]] Standby HIP node failed detected from Active {produce.short.name} [[SCGMgmtIp]]
Description	This event is logged when the active node detects failure of the standby node.

HIP cache cleaned

NOTE: This event is not applicable for vSZ-H.

Table 647. HIP cache cleaned event

Event	HIP cache cleaned
Event Type	hipCacheCleanup
Event Code	1018
Severity	Informational
Attribute	"ctrlBladeMac"="50:A7:33:24:E7:90", "srcProcess"="HIP", "realm"="NA", "processName"="HIP", "SCGMgmtIp"="100.13.0.102", mvnold="12", hlrProfileName="HLR1",
Displayed on the web interface	{{srcProcess}} Cache cleanup started on {produce.short.name} {{SCGMgmtIp}}
Description	This event is generated when the cache cleanup process is completed.

NOTE: Events 1257 to 1267 are not applicable for SCG.

Data plane of data center side successfully connects to the CALEA server

Table 648. Data plane of data center side successfully connects to the CALEA server event

Event	Data plane of data center side successfully connects to the CALEA server
Event Type	dpDcToCaleaConnected
Event Code	1257
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dpIP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side[{{dpName&&dpKey}}] successfully connects to the CALEA server[{{caleaServerIP}}].

Table 648. Data plane of data center side successfully connects to the CALEA server event

Description	This event occurs when data plane successfully connects to the CALEA server.
-------------	--

Data plane of data center side fails to connect to the CALEA server

Table 649. Data plane of data center side fails to connect to the CALEA server event

Event	Data plane of data center side fails to connect to the CALEA server.
Event Type	dpDcToCaleaConnectFail
Event Code	1258
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dpIP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} fails to connects to the CALEA server{{caleaServerIP}}
Description	This event occurs when data plane fails to connect to the CALEA server.
Auto Clearance	This event triggers the alarm 1258, which is auto cleared by the event code 1257.

Data Plane of data center side disconnects to CALEA server

Table 650. Data Plane of data center side disconnects to CALEA server event

Event	Data Plane of data center side disconnects to CALEA server.
Event Type	dpDcToCaleaDisconnected
Event Code	1259
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "caleaServerIP"="xxx.xxx.xxx.xxx", "dpIP"="xx.xx.xx.xx", "reason"="xxxxxx"
Displayed on the web interface	Data Plane of Data Center side{{dpName&&dpKey}} fails to connects to the CALEA server{{caleaServerIP}}
Description	This event occurs when data plane disconnects from the CALEA server.

Data plane successfully connects to the other data plane

Table 651. Data plane successfully connects to the other data plane event

Event	Data plane successfully connects to the other data plane
Event Type	dpP2PTunnelConnected
Event Code	1260
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dplP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDplp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] successfully connects to the other Data Plane[{targetDpKey&&targetDplp}]
Description	This event occurs when data plane connect to another data plane.

Data plane fails to connects to the other data plane

Table 652. Data plane fails to connects to the other data plane event

Event	Data plane fails to connects to the other data plane
Event Type	dpP2PTunnelConnectFail
Event Code	1261
Severity	Warning
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dplP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDplp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] fails connects to the other Data Plane[{targetDpKey&&targetDplp}]
Description	This event occurs when data plane fails to connect to another data plane.
Auto Clearance	This event triggers the alarm 1261, which is auto cleared by the event code 1260.

Data plane disconnects to the other data plane

Table 653. Data plane disconnects to the other data plane event

Event	Data plane disconnects to the other data plane
Event Type	dpP2PTunnelDisconnected
Event Code	1262
Severity	Major
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx", "targetDpKey"="xx:xx:xx:xx:xx:xx", "targetDpIp"="xxx.xxx.xxx.xxx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] disconnects to the other Data Plane[{targetDpKey&&targetDpIp}]
Description	This event occurs when data plane disconnects from another data plane.

Start CALEA mirroring client in data plane

Table 654. Start CALEA mirroring client in data plane event

Event	Start CALEA mirroring client in data plane
Event Type	dpStartMirroringClient
Event Code	1263
Severity	Informational
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx"
Displayed on the web interface	Start CALEA mirroring client [{userName} IP clientMac}] on WLAN [{ssid}] from AP [{apName&&apMac}]
Description	This event occurs when the Calea server starts mirroring the client image.

Stop CALEA mirroring client in data plane

Table 655. Stop CALEA mirroring client in data plane event

Event	Stop CALEA mirroring client in data plane
Event Type	dpStopMirroringClient
Event Code	1264
Severity	Warning
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx"
Displayed on the web interface	Stop CALEA mirroring client [{userName IP clientMac}] on WLAN [{ssid authType}] from AP [{apName&&apMac}]. TxBytes[{txBytes}]
Description	This event occurs when the Calea server stops mirroring the client image.

Data plane DHCP IP pool usage rate is 100 percent

Table 656. Data plane DHCP IP pool usage rate is 100 percent event

Event	Data plane DHCP IP pool usage rate is 100 percent
Event Type	dpDhcpIpPoolUsageRate100
Event Code	1265
Severity	Critical
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] DHCP IP Pool usage rate is 100 percent
Description	This event occurs when the data plane DHCP pool usage rate is 100%.

Data plane DHCP IP pool usage rate is 80 percent

Table 657. Data plane DHCP IP pool usage rate is 80 percent event

Event	Data plane DHCP IP pool usage rate is 80 percent
Event Type	dpDhcpIpPoolUsageRate80
Event Code	1266
Severity	Warning
Attribute	"dpName="xxxxxxx", "dpKey"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data Plane[{dpName&&dpKey}] DHCP IP Pool usage rate is 80 percent
Description	This event occurs when the data plane DHCP pool usage rate is 80%.

All data planes in the zone affinity profile are disconnected

Table 658. All data planes in the zone affinity profile are disconnected event

Event	All data planes in the zone affinity profile are disconnected
Event Type	zoneAffinityLastDpDisconnected
Event Code	1267
Severity	Major
Attribute	"dpName="xxxxxxx", "dpKey"="xx:xx:xx:xx:xx:xx", "zoneAffinityProfileId"="xxxxxxx"
Displayed on the web interface	The Last one Data Plane[{dpName&&dpKey}] is disconnected Zone Affinity profile[{zoneAffinityProfileId}] .
Description	This event occurs when all the data planes disconnect from the zone affinity profile.

CALEA UE Matched

Table 659. CALEA UE Matched event

Event	CALEA UE Matched
Event Type	dpCaleaUeInterimMatched
Event Code	1268
Severity	Informational
Attribute	"clientMac"="xx:xx:xx:xx:xx:xx", "ssid"="xxxxx", "apMac"="xx:xx:xx:xx:xx:xx", "apIpAddress"="xx.xx.xx.xx", "dpKey"="xx:xx:xx:xx:xx:xx", "dpIP"="xx.xx.xx.xx", "txBytes"="xxxxx", "rxBytes"="xxxxx"
Displayed on the web interface	CALEA matches client [{clientMac}] on WLAN [{ssid authType}] from AP [{apName&&apMac}]. TxBytes[{txBytes}], RxBytes[{rxBytes}]
Description	This event occurs when data plane CALEA user equipment and client matches.

Diameter initialization error

NOTE: This event is not applicable for vSZ-H.

Table 660. Diameter initialization error event

Event	Diameter initialization error
Event Type	dialnitilizeErr
Event Code	1401
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="<Application Name>" "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "desc" = "Diameter Stack Initialization Failure on {produce.short.name}"
Displayed on the web interface	[{srcProcess}] Diameter Stack Initialization Failure on {produce.short.name} [{SCGMgmtIp}]
Description	This event occurs due to stack initialization failure.

Diameter initialization

NOTE: This event is not applicable for vSZ-H.

Table 661. Diameter initialization event

Event	Diameter initialization
Event Type	dialInitialization
Event Code	1402
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "srcProcess"="<Application Name>", "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "desc" = "Diameter Stack Initialization is Successful"
Displayed on the web interface	[[srcProcess]] Diameter Stack up and running on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs due to diameter stack is up and running.

Diameter peer transport failure

NOTE: This event is not applicable for vSZ-H.

Table 662. Diameter peer transport failure event

Event	Diameter peer transport failure
Event Type	diaPeerTransportFailure
Event Code	1403
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>", "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "peerIp" = "3.3.3.3", "peerName" = "OCS1", "peerRealmName" = "operator.com", "desc" = "Failed to read from peer socket"
Displayed on the web interface	[[srcProcess]] Failed to read from peer [[peerName]] Transport Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]

Table 662. Diameter peer transport failure event

Description	This event occurs when the transport with the peer is down and the stack fails to read the data.
-------------	--

Diameter CER error

NOTE: This event is not applicable for vSZ-H.

Table 663. Diameter CER error event

Event	Diameter CER error
Event Type	diaCERError
Event Code	1404
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff ","mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>","realm"="ruckus.com", "originHost" = "Node1","SCGMgmtIp"="2.2.2.2","peerIp" = "3.3.3.3","peerName" = "OCS1","peerRealmName" = "operator.com","desc" = "Failed to decode CER from Peer"
Displayed on the web interface	[[srcProcess]] Failed to decode CER from Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the diameter stack fails to decode the capabilities exchange request (CER) received from peer.

Diameter CER success

NOTE: This event is not applicable for vSZ-H.

Table 664. Diameter CER success event

Event	Diameter CER success
Event Type	diaCERSuccess
Event Code	1405
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>","realm"="ruckus.com", "originHost" = "Node1","SCGMgmtIp"="2.2.2.2","peerIp" = "3.3.3.3","peerName" = "OCS1", "peerRealmName" = "organization.com", "desc" = "Successfully decoded CER received from Peer"
Displayed on the web interface	[[srcProcess]] CER Success From Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the CER received from peer is successfully decoded.

Diameter invalid version

NOTE: This event is not applicable for vSZ-H.

Table 665. Diameter invalid version event

Event	Diameter invalid version
Event Type	dialInvalidVer
Event Code	1406
Severity	Warning
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "src Process"="<Application Name>","realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "peerIp" = "3.3.3.3", "peerName" = "OCS1", "peerRealmName" = "organization.com", "desc" = "Invalid version in Diameter header of received CER from peer"
Displayed on the web interface	{{srcProcess}} Invalid version in Diameter header in CER from Peer {{peerName}}, Realm {{peerRealmName}} on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs when the version in the diameter header of received CER is invalid.

Diameter peer add error

NOTE: This event is not applicable for vSZ-H.

Table 666. Diameter peer add error event

Event	Diameter peer add error
Event Type	diaPeerAddError
Event Code	1407
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerIp" = "3.3.3.3" "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc" = "Failed to add Peer" "appropriate cause"
Displayed on the web interface	[[srcProcess]] Failed to add Peer [[peerName]], Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the diameter stack fails to add a peer to the peer table.

Diameter peer add successful

NOTE: This event is not applicable for vSZ-H.

Table 667. Diameter peer add successful event

Event	Diameter peer add successful
Event Type	diaPeerAddSuccess
Event Code	1408
Severity	Debug
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>", "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "peerIp" = "3.3.3.3", "peerName" = "OCS1", "peerRealmName" = "organization.com", "desc" = "Peer addition successful"

Table 667. Diameter peer add successful event

Displayed on the web interface	[[srcProcess]] Peer [[peerName]] Realm [[peerRealmName]] addition is successful on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the peer addition is successful.

Diameter peer remove successful

NOTE: This event is not applicable for vSZ-H.

Table 668. Diameter peer remove successful event

Event	Diameter peer remove successful
Event Type	diaPeerRemoveSuccess
Event Code	1409
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerIp" = "3.3.3.3" "peerName" = "OCS1" "peerRealmName" = "organization.com" "desc" = "Peer removal success"
Displayed on the web interface	[[srcProcess]] Peer [[peerName]] Realm [[peerRealmName]] removal is successful on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the peer is removed successfully from the table. The remote peer sends a diameter disconnect peer request (DPR) with the cause of not wanting to talk. In such instances, the peer is removed from the table.

Diameter realm entry error

NOTE: This event is not applicable for vSZ-H.

Table 669. Diameter realm entry error event

Event	Diameter realm entry error
Event Type	diaRealmEntryErr
Event Code	1410
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerRealmName" = "organization.com" "peerName" = "OCS1" "desc" = "Failed to add route for Realm"
Displayed on the web interface	[[srcProcess]] Failed to add route for Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs due to realm route entry add error. This may arise when the realm entry exists and another realm entry is added. Creating two diameter services with same realm name causes this problem.

Diameter failover to alternate peer

NOTE: This event is not applicable for vSZ-H.

Table 670. Diameter failover to alternate peer event

Event	Diameter failover to alternate peer
Event Type	diaFailOverToAltPeer
Event Code	1411
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>", "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "peerName"="OCS1", "peerRealmName" = "Vodafone.com", "altPeerName" = "OCS2", "altPeerRealmName" = "india.internal.net""desc" = "Fwd to alt peer"
Displayed on the web interface	[[srcProcess]] Fwd from Peer [[peerName]] to AltPeer [[altPeerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs due to retransmission to an alternate peer.

Diameter fail back to peer

NOTE: This event is not applicable for vSZ-H.

Table 671. Diameter fail back to peer event

Event	Diameter fail back to peer
Event Type	diaFailbackToPeer
Event Code	1412
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", "srcProcess"="<Application Name>", "realm"="ruckus.com", "originHost" = "Node1", "SCGMgmtIp"="2.2.2.2", "peerName"="OCS1", "peerRealmName" = "Vodafone.com", "altPeerName" = "OCS2", "altPeerRealmName" = "india.internal.net", "desc" = "Failback to main peer"
Displayed on the web interface	{{srcProcess}} Failback to Main Peer {{peerName}} Realm {{peerRealmName}} on {produce.short.name} {{SCGMgmtIp}}
Description	This event occurs due to retransmission to the main peer in case of a fail back.

Diameter CEA unknown peer

NOTE: This event is not applicable for vSZ-H.

Table 672. Diameter CEA unknown peer event

Event	Diameter CEA unknown peer
Event Type	diaCEAUnknownPeer
Event Code	1414
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "mvnold"="839f87c6-d116-497e-afce-aa8157abd30c", srcProcess"="SessMgr", "realm"="ruckus.com", "originHost" = "Node1", SCGMgmtIp"="2.2.2.2", "peerName"="OCS8", "peerRealmName" = "Vodafone.com", "desc" = "CEA received from Unknown peer
Displayed on the web interface	[[srcProcess]] CEA received from Unknown Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs due when the capabilities exchange answer (CEA) is received from an unknown peer.

Diameter no common application

NOTE: This event is not applicable for vSZ-H.

Table 673. Diameter no common application event

Event	Diameter no common application
Event Type	diaNoCommonApp
Event Code	1415
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "mvnold"=12 "srcProcess"="<Application Name>" "realm"="ruckus.com" "originHost" = "Node1" "SCGMgmtIp"="2.2.2.2" "peerName"=ÖCS1 "peerRealmName" = "organization.com" "desc" = "No common App with peer"

Table 673. Diameter no common application event

Displayed on the web interface	[[srcProcess]] No common App with Peer [[peerName]] Realm [[peerRealmName]] on {produce.short.name} [[SCGMgmtIp]]
Description	This event occurs when the common application is not with the peer.

ZD AP migrating

Table 674. ZD AP migrating event

Event	ZD AP migrating
Event Type	zdAPMigrating
Event Code	2001
Severity	Informational
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962", "firmware"="3.0.0.0"
Displayed on the web interface	ZD-AP [[apMac]] / [[serialNumber]] model [[model]] is upgrading with {produce.short.name} AP firmware version - [[firmware]]
Description	This event occurs when a ZoneDirector AP is upgrading with the controller AP firmware image.

ZD AP migrated

Table 675. ZD AP migrated event

Event	ZD AP migrated
Event Type	zdAPMigrated
Event Code	2002
Severity	Informational
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="R700", "firmware"="3.2.0.0.x"
Displayed on the web interface	ZD-AP [[apMac]] / [[serialNumber]] model [[model]] has been upgraded with {produce.short.name} AP firmware version - [[firmware]]
Description	This event occurs when a ZoneDirector AP has upgraded its firmware with the controller AP firmware image.

ZD AP rejected

Table 676. ZD AP rejected event

Event	ZD AP rejected
Event Type	zdAPRejected
Event Code	2003
Severity	Warning
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] is not being upgraded with {produce.short.name} AP firmware because of ACL setting.
Description	This event occurs when the ZoneDirector AP is not upgraded with the controller AP firmware because of ACL setting.

ZD AP migration failed

Table 677. ZD AP migration failed event

Event	ZD AP migration failed
Event Type	zdAPMigrationFailed
Event Code	2004
Severity	Major
Attribute	"apMac"=" C0:C5:20:12:2B:2C ", "serialNumber"="501003003033", "model"="ZF7962", "firmware"="3.0.0.0"
Displayed on the web interface	ZD-AP [{apMac}] / [{serialNumber}] model [{model}] is failed to upgrade with {produce.short.name} AP firmware version - [{firmware}]
Description	This event occurs when the Zone Director AP fails to upgrade with the controller AP firmware image.

Database error

Table 678. Database error event

Event	Database error
Event Type	cassandraError
Event Code	3001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2", reason="reason",
Displayed on the web interface	Database internal error on node [{nodeName}], reason: [{reason}].
Description	This event occurs due to internal errors on the database.

Recover cassandra error

Table 679. Recover cassandra error event

Event	Recover cassandra error
Event Type	recoverCassandraError
Event Code	3011
Severity	Informational
Attribute	"nodeName"="xxx", "reason"="recovery reason"
Displayed on the web interface	Recover database error on node [{nodeName}], reason: []
Description	This event occurs when the internal errors on the database are fixed.

Process initiated

NOTE: This event is not applicable for vSZ-H.

Table 680. Process initiated event

Event	Process initiated
Event Type	processInit
Event Code	5001
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process got re-started on {produce.short.name} [{SCGMgmtIp}]
Description	This event is logged when PMIPv6 process crashes and restarts.

PMIPv6 unavailable

NOTE: This event is not applicable for vSZ-H.

Table 681. PMIPv6 unavailable event

Event	PMIPv6 unavailable
Event Type	pmipUnavailable
Event Code	5002
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	PMIPv6 process is not stable on {produce.short.name} [{SCGMgmtIp}]
Description	This event is logged when the PMIPv6 process repeatedly restarts and is not stable.

Memory allocation failed

NOTE: This event is not applicable for vSZ-H.

Table 682. Memory allocation failed event

Event	Memory allocation failed
Event Type	unallocatedMemory
Event Code	5003
Severity	Critical
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2"
Displayed on the web interface	Insufficient Heap Memory in PMIPv6 process at {produce.short.name} [{SCGMgmtIp}]
Description	This event is logged when the memory allocation fails in the PMIPv6 process.

Process stopped

NOTE: This event is not applicable for vSZ-H.

Table 683. Process stopped event

Event	Process stopped
Event Type	processStop
Event Code	5100
Severity	Major
Attribute	"ctrlBladeMac"="aa:bb:cc:dd:ee:ff", "SCGMgmtIp"="2.2.2.2",
Displayed on the web interface	PMIPv6 process stop on {produce.short.name} [{SCGMgmtIp}]
Description	This event is logged when the PMIPv6 process stops

NOTE: Refer to [System Alarms](#).

Threshold Events

Following are the events related to threshold system set.

- [CPU threshold exceeded](#)
- [Memory threshold exceeded](#)
- [Disk usage threshold exceeded](#)
- [CPU threshold back to normal](#)
- [Memory threshold back to normal](#)
- [Disk threshold back to normal](#)
- [License threshold exceeded](#)
- [Rate limit threshold surpassed](#)
- [Rate limit threshold restored](#)
- [Rate limit for TOR surpassed](#)
- [The number of users exceed its limit](#)
- [The number of devices exceeded its limit](#)

CPU threshold exceeded

Table 684. CPU threshold exceeded event

Event	CPU threshold exceeded
Event Type	cpuThresholdExceeded
Event Code	950
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] exceeded on control plane [{nodeName}-C]
Description	This event occurs when the CPU usage exceeds the threshold limit of 80%.
Auto Clearance	This event triggers the alarm 950, which is auto cleared by the event code 954.

Memory threshold exceeded

Table 685. Memory threshold exceeded event

Event	Memory threshold exceeded
Event Type	memoryThresholdExceeded
Event Code	951
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This event occurs when the memory usage exceeds the threshold limit of 85% and for vSZ-H the limit is 90%.
Auto Clearance	This event triggers the alarm 951, which is auto cleared by the event code 954.

Disk usage threshold exceeded

Table 686. Disk usage threshold exceeded event

Event	Disk usage threshold exceeded
Event Type	diskUsageThresholdExceeded
Event Code	952
Severity	Critical
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Disk usage threshold [{perc}%] exceeded on control plane [{nodeName}-C].
Description	This event occurs when the disk usage exceeds the threshold limit of 80%.
Auto Clearance	This event triggers the alarm 952, which is auto cleared by the event code 955.

CPU threshold back to normal

Table 687. CPU threshold back to normal event

Event	CPU threshold back to normal
Event Type	cpuThresholdBackToNormal
Event Code	953
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	CPU threshold [{perc}%] got back to normal on control plane [{nodeName}-C].
Description	This event occurs when the CPU usage comes back to normal.

Memory threshold back to normal

Table 688. Memory threshold back to normal event

Event	Memory threshold back to normal
Event Type	memoryThresholdBackToNormal
Event Code	954
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Memory threshold [{perc}%] got back to normal on control plane [{nodeName}-C].
Description	This event occurs when the memory usage comes back to normal.

Disk threshold back to normal

Table 689. Disk threshold back to normal event

Event	Disk threshold back to normal
Event Type	diskUsageThresholdBackToNormal
Event Code	955
Severity	Informational
Attribute	"nodeName"="xxx", "nodeMac"="xx:xx:xx:xx:xx:xx", "perc"="XX"
Displayed on the web interface	Disk threshold [{perc}%] got back to normal on control plane [{nodeName}-C].

Table 689. Disk threshold back to normal event

Description	This event occurs when the disk usage comes back to normal.
-------------	---

License threshold exceeded

Table 690. License threshold exceeded event

Event	License threshold exceeded
Event Type	licenseThresholdExceeded
Event Code	960
Severity	Critical 90%; Major 80%; Informational 70%;
Attribute	"perc"="xxx", "nodeName"="", "nodeMac"="xx:xx:xx:xx:xx:xx", licenseType="SG00"
Displayed on the web interface	{{licenseType}} limit reached at {{perc}}%
Description	This event occurs when the number of user equipment is attached to the system has exceeded the license limit.

Rate limit threshold surpassed

Table 691. Rate limit threshold surpassed event

Event	Rate limit threshold surpassed
Event Type	rateLimitThresholdSurpassed
Event Code	1300
Severity	Major
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtIp"="2.2.2.2" "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Threshold surpassed for AAA Server {{aaaSrvrlp}} and ServerType {{AAAServerType}}

Table 691. Rate limit threshold surpassed event

Description	This event occurs when the rate limit threshold is surpassed. The threshold limit for this event is dependent on the maximum outstanding request (MOR) value as configured in the web interface of Authentication or Accounting Service. For example, if the MOR value is 1000, and threshold limit is set to 70%, then this event will be raised when total outstanding requests for this server exceeds the limit of 701.
-------------	---

Rate limit threshold restored

Table 692. Rate limit threshold restored event

Event	Rate limit threshold restored
Event Type	rateLimitThresholdRestored
Event Code	1301
Severity	Informational
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtIp"="2.2.2.2" "aaaSvrIp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Threshold restored for AAA Server [{aaaSvrIp}] and ServerType [{AAAServerType}]
Description	This event occurs when the rate limit threshold is restored. The threshold limit for this event is dependent on the maximum outstanding request (MOR) value as configured in the web interface of Authentication or Accounting Service. For example, if the MOR value is 1000, and threshold limit is set to 70%, then this event will be raised when total outstanding requests for this server is lesser or equal to 700.

Rate limit for TOR surpassed

Table 693. Rate limit for TOR surpassed event

Event	Rate limit for TOR surpassed
Event Type	rateLimitMORSurpassed
Event Code	1302
Severity	Critical
Attribute	"mvnold"=12 "wlanId"=1,"zoneld"="10" "ctrlBladeMac"="aa:bb:cc:dd:ee:ff" "srcProcess"="radiusd" "UserName"=abc@xyz.com "realm"="wlan.3gppnetwor" "SCGMgmtIpl"="2.2.2.2" "aaaSrvrlp"="1.1.1.1" "AAAServerType"="Auth/Acct" "ueMacAddr"="aa:bb:cc:gg:hh:ii" "MOR"=1000,"THRESHOLD"="500" "TOR"="501"
Displayed on the web interface	Maximum Outstanding Requests (MOR) surpassed for AAA Server [{aaaSrvrlp}] and ServerType [{AAAServerType}]. Dropping requests to be proxied to AAA.
Description	This event occurs when the rate limit for maximum outstanding requests (MOR) is surpassed. The threshold limit for this event is dependent on the maximum outstanding request (MOR) value as configured in the web interface of Authentication or Accounting Service. For example, if the MOR value is 1000, and threshold limit is set to 70%, then this event will be raised when total outstanding requests for this server exceeds 1000.
Auto Clearance	This event triggers the alarm1302, which is auto cleared by the event code 1301.

The number of users exceed its limit

Table 694. The number of users exceed its limit event

Event	The number of users exceed its limit
Event Type	tooManyUsers
Event Code	7001
Severity	Major
Attribute	No attributes for this event.

Table 694. The number of users exceed its limit event

Displayed on the web interface	The number of users exceeded its limit.
Description	This event occurs when the number of users exceeds the specified limit. The threshold limit for SCG-200 and vSZ-H is 950000.

The number of devices exceeded its limit

Table 695. The number of devices exceeded its limit event

Event	The number of devices exceeded its limit
Event Type	tooManyDevices
Event Code	7002
Severity	Major
Attribute	No attributes for this event.
Displayed on the web interface	The number of devices exceeded its limit
Description	This event occurs when the number of devices exceeds the specified limit. The threshold limit for SCG-200 and vSZ-H is 2850000.

NOTE: Refer to [Threshold Alarms](#).

Tunnel Events - Access Point (AP)

Following are the events related to tunnel events on access point.

- [Data plane accepted a tunnel request](#)
- [Data plane rejected a tunnel request](#)
- [Data plane terminated a tunnel](#)
- [AP created a tunnel](#)
- [AP tunnel disconnected](#)
- [AP softGRE tunnel fails over primary to secondary](#)
- [AP softGRE tunnel fails over secondary to primary](#)
- [AP softGRE gateway reachable](#)
- [AP softGRE gateway not reachable](#)
- [Data plane set up a tunnel](#)
- [AP secure gateway association success](#)
- [AP is disconnected from secure gateway](#)
- [AP secure gateway association failure](#)

NOTE: Event codes 601 to 610 are not applicable for vSZ-H.

Data plane accepted a tunnel request

Table 696. Data plane accepted a tunnel request event

Event	Data plane accepted a tunnel request
Event Type	dpAcceptTunnelRequest
Event Code	601
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [[dpName dpKey]] accepted a tunnel request from AP [[apName&&apMac]].
Description	This event occurs when the data plane accepts a tunnel request from the AP.

Data plane rejected a tunnel request

Table 697. Data plane rejected a tunnel request event

Event	Data plane rejected a tunnel request
Event Type	dpRejectTunnelRequest
Event Code	602
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx", "reason"="xxxxxxxxxxxxx"
Displayed on the web interface	Data plane [{dpName dpKey}] rejected a tunnel request from AP [{apName&&apMac}] because of reason [{reason}].
Description	This event occurs when the data plane rejects a tunnel request from the AP.

Data plane terminated a tunnel

Table 698. Data plane terminated a tunnel event

Event	Data plane terminated a tunnel
Event Type	dpTearDownTunnel
Event Code	603
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx", "reason"="xx"
Displayed on the web interface	Data plane [{dpName dpKey}] terminated a tunnel from AP [{apName&&apMac}]. Reason: [{reason}]
Description	This event occurs when the data plane terminates a tunnel from the AP.

AP created a tunnel

Table 699. AP created a tunnel event

Event	AP created a tunnel
Event Type	apBuildTunnelSuccess
Event Code	608
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dplP"="xxx.xxx.xxx.xxx",
Displayed on the web interface	AP [{apName&&apMac}] created a tunnel to data plane [{dplP}].
Description	This event occurs when AP creates a tunnel to the data plane.

AP tunnel disconnected

Table 700. AP tunnel disconnected event

Event	AP tunnel disconnected
Event Type	apTunnelDisconnected
Event Code	610
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "dplP"="xxx.xxx.xxx.xxx", "reason"="xxxxx"
Displayed on the web interface	AP [{apName&&apMac}] disconnected from data plane [{dplP}]. Reason: [{reason}]
Description	This event occurs when AP disconnects from the data plane.

NOTE: Event codes 601 to 610 are not applicable for vSZ-H.

AP softGRE tunnel fails over primary to secondary

Table 701. AP softGRE tunnel fails over primary to secondary event

Event	AP softGRE tunnel fails over primary to secondary
Event Type	apSoftGRE TunnelFailoverPtoS
Event Code	611
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "primaryGRE"="xxx.xxx.xxx.xxx", "secondaryGRE"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName&&apMac}] fails over from primaryGRE [{primaryGRE}] to secondaryGRE[{secondaryGRE}].
Description	This event occurs when AP moves from a primary to a secondary GRE.

AP softGRE tunnel fails over secondary to primary

Table 702. AP softGRE tunnel fails over secondary to primary event

Event	AP softGRE tunnel fails over secondary to primary
Event Type	apSoftGRE TunnelFailoverStoP
Event Code	612
Severity	Warning
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "primaryGRE"="xxx.xxx.xxx.xxx", "secondaryGRE"="xxxx"
Displayed on the web interface	AP [{apName&&apMac}] fails over from secondaryGRE[{secondaryGRE}] to primaryGRE[{primaryGRE}].
Description	This event occurs when AP moves from a secondary to a primary GRE.

AP softGRE gateway reachable

Table 703. AP softGRE gateway reachable event

Event	AP softGRE gateway reachable
Event Type	apSoftGREGatewayReachable
Event Code	613
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "softgreGW"="xxx.xxx.xxx.xxx", "softgreGWAddress"="xxxx"
Displayed on the web interface	AP [{apname}&&apMac]} is able to reach [{softgreGW}] [{softgreGWAddress}] successfully
Description	This event occurs when AP builds a soft GRE tunnel successfully.

AP softGRE gateway not reachable

Table 704. AP softGRE gateway not reachable event

Event	AP softGRE gateway not reachable
Event Type	apSoftGREGatewayNotReachable
Event Code	614
Severity	Critical
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "softGREGatewayList"="xxx.xxx.xxx.xxx"
Displayed on the web interface	AP [{apName}&&apMac]} is unable to reach the following gateways: [{softGREGatewayList]}.
Description	This event occurs when AP fails to build a soft GRE tunnel either on the primary or the secondary GRE.
Auto Clearance	This event triggers the alarm 614, which is auto cleared by the event code 613.

Data plane set up a tunnel

NOTE: This event is not applicable for vSZ-H.

Table 705. Data plane set up a tunnel event

Event	Data plane set up a tunnel
Event Type	dpSetUpTunnel
Event Code	627
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "apMac"="xx:xx:xx:xx:xx:xx"
Displayed on the web interface	Data plane [{dpName} {dfpMac}] set up a tunnel from AP [{apName}&&apMac]}.
Description	This event occurs when the data plane sets up a tunnel from the AP.

AP secure gateway association success

Table 706. AP secure gateway association success event

Event	AP secure gateway association success
Event Type	ipsecTunnelAssociated
Event Code	660
Severity	Informational
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName}&&apMac]} is able to reach secure gateway [{ipsecGWAddress}] successfully.
Description	This event occurs when the AP is able to reach the secure gateway successfully.

AP is disconnected from secure gateway

Table 707. AP is disconnected from secure gateway event

Event	AP is disconnected from secure gateway
Event Type	ipsecTunnelDisassociated
Event Code	661
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName}&&apMac] is disconnected from secure gateway [{ipsecGWAddress}].
Description	This event occurs when the AP is disconnected from secure gateway.

AP secure gateway association failure

Table 708. AP secure gateway association failure event

Event	AP secure gateway association failure
Event Type	ipsecTunnelAssociateFailed
Event Code	662
Severity	Major
Attribute	"apMac"="xx:xx:xx:xx:xx:xx", "ipsecGWAddress"="x.x.x.x"
Displayed on the web interface	AP [{apName}&&apMac] is unable to establish secure gateway with [{ipsecGWAddress}].
Description	This event occurs when the AP is unable to reach the secure gateway.
Auto Clearance	This event triggers the alarm 662, which is auto cleared by the event code 660.

NOTE: Refer to [Tunnel Alarms - Access Point](#).

Tunnel Events - Data Plane

NOTE: Events 621 and 626 are not applicable for vSZ-H.

Following are the events related to tunnel events on the data plane.

- DP Core GW unreachable
- DP sGRE keep alive timeout
- DP Core GW inactive
- DP DHCPRelay no response
- DP DHCPRelay failover
- DP sGRE new tunnel
- DP sGRE del tunnel
- DP sGRE keepalive recovery
- DP DHCPRelay response recovery
- DP Core GW reachable
- DP Core GW active
- DP sGRE GW failover

DP Core GW unreachable

Table 709. DP Core GW unreachable event

Event	DP Core GW unreachable
Event Type	dpSgreGWUnreachable
Event Code	615
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName} {dpKey}] detected Core Gateway [{GatewayIP}] is unreachable.
Description	This event occurs when the data plane detects that a core network gateway is unreachable.

DP sGRE keep alive timeout

Table 710. DP sGRE keep alive timeout event

Event	DP sGRE keep alive timeout
Event Type	dpSgreKeepAliveTimeout
Event Code	616
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x
Displayed on the web interface	Data plane [{dpName dpKey}] detected Keepalive packet to Core Gateway [{GatewayIP}] is lost due to timeout
Description	This event occurs when the data plane detects that a keep alive packet to the core network gateway is lost due to a timeout.

DP Core GW inactive

Table 711. DP Core GW inactive event

Event	DP Core GW inactive
Event Type	dpSgreGWInact
Event Code	617
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x
Displayed on the web interface	Data plane [{dpName dpKey}] detected [{GatewayIP}] is inactive because there is no RX traffic
Description	This event occurs when the data plane detects that a core network gateway is inactive.

DP DHCPRelay no response

Table 712. DP DHCPRelay no response event

Event	DP DHCPRelay no response
Event Type	dpDhcpRelayNoResp
Event Code	618
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected no response from DHCP server [{dhcpIP}] for a while
Description	This event occurs when the data plane does not get a response from the DHCP server.

DP DHCPRelay failover

Table 713. DP DHCPRelay failover event

Event	DP DHCPRelay failover
Event Type	dpDhcpRelayFailOver
Event Code	619
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "preDhcpIP"="x.x.x.x", "curDhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected DHCP server fail-over from [{preDhcpIP}] to [{curDhcpIP}]
Description	This event occurs when the data plane detects a DHCP server relay falls.

DP sGRE new tunnel

Table 714. DP sGRE new tunnel event

Event	DP sGRE new tunnel
Event Type	dpSgreNewTunnel
Event Code	620
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "greType"="L2oGRE, L3oGRE", "apIpAddress"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] established a [{greType}] tunnel with AP[{apIP}]
Description	This event occurs when the data plane establishes a tunnel with AP.

DP sGRE del tunnel

Table 715. DP sGRE del tunnel event

Event	DP sGRE del tunnel
Event Type	dpSgreDelTunnel
Event Code	621
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "greType"="L2oGRE, L3oGRE", "apIpAddress"="x.x.x.x"
Displayed on the web interface	Dataplane [{dpName dpKey}] lost a [{greType}] tunnel connection to AP[{apIP}]
Description	This event occurs when access tunnel is disconnected due to a timeout.

DP sGRE keepalive recovery

Table 716. DP sGRE keepalive recovery event

Event	DP sGRE keepalive recovery
Event Type	dpSgreKeepAliveRecovery
Event Code	622
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected KeepAlive packet to Core Gateway [{gatewayIP}] is now responsive.
Description	The event occurs when the core gateway resumes answering to keepalive.

DP DHCPRelay response recovery

Table 717. DP DHCPRelay response recovery event

Event	DP DHCPRelay response recovery
Event Type	dpDhcpRelayRespRecovery
Event Code	623
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "dhcpIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected DHCP server [{dhcpIP}] is now responsive
Description	This event occurs when the DHCP server resumes answering the relay request from data plane.

DP Core GW reachable

Table 718. DP Core GW reachable event

Event	DP Core GW reachable
Event Type	dpSgreGWReachable
Event Code	624
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected Core Gateway [{gatewayIP}] is now reachable
Description	This event occurs when the core gateway is reachable.

DP Core GW active

Table 719. DP Core GW active event

Event	DP Core GW active
Event Type	dpSgreGWAct
Event Code	625
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "gatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName dpKey}] detected [{gatewayIP}] is now active
Description	This event occurs when core gateway changes to an active mode.

DP sGRE GW failover

Table 720. DP sGRE GW failover event

Event	DP sGRE GW failover
Event Type	dpSgreGWFailOver
Event Code	626
Severity	Informational
Attribute	"dpKey"="xx:xx:xx:xx:xx:xx", "preGatewayIp"="x.x.x.x", "curGatewayIP"="x.x.x.x"
Displayed on the web interface	Data plane [{dpName/dpKey}] switched over from CoreGateway[{preGatewayIP}] to CoreGateway[{curGatewayIP}]
Description	This event occurs when the data plane switches to the other gateway due to failover threshold limit.

NOTE: Refer to [Tunnel Alarms - Access Point](#).

Index

Numerics

- 3rd party access point 203
- 3rd Party Access Point Events 203
- 3rd party AP connected 203
- 3rd party client authorization 305
- 3rd party client authorization failure 305
- 3rd party client inactivity timeout 304
- 3rd party client join 304
- 3rd party client roaming 306
- 3rd party client session expiration 306
- 3rd party client session logout 307
- 3rdPartyAPConnected 203
- 3rdPtyClientAuthorization 305
- 3rdPtyClientAuthorizationFailure 305
- 3rdPtyClientInactivityTimeou 304
- 3rdPtyClientJoin 304
- 3rdPtyClientRoaming 306
- 3rdPtyClientSessionExpiration 306
- 3rdPtyClientSessionLogout 307

A

- accFailedOverToSecondary 75, 209
- accFallbackToPrimary 75, 209
- accounting alarms 74
- accounting failed over to secondary 75, 209
- accounting fallback to primary 75, 209
- accounting server not reachable 74, 208
- accounting session disabled 206
- accounting session interim failed 207
- accounting session start failed 205
- accounting session started 204
- accounting session stopped failed 207
- accounting session stopped successfully 206
- accSessDisabled 206
- accSessInterimFail 207
- accSessStarted 204
- accSessStartFailed 205
- accSessStopFail 207
- accSessStopSucc 206
- accSvrNotReachable 74, 208
- ad server unreachable 81

- ad/LDAP connected successfully 282
- ad/LDAP connectivity failure 283
- ad/ldap connectivity failure 98
- ad-hoc network device 233
- ad-hoc-networkRogueAPDetecte 233
- adServerUnreachable 81
- alarm 68, 69
- alarm and event management 68
- AP 264
- ap account message drop while no accounting start message 78, 213
- ap accounting message decode failed 77, 211
- ap accounting message mandatory parameter missing 76, 210
- ap accounting response while invalid config 212
- ap accounting retransmission message dropped 212
- AP brownout 257
- ap cable modem interface down 94, 256
- ap cable modem power-cycled by user 257
- ap cable modem set to factory default by user 262
- ap cable modem soft-rebooted by user 261
- ap capacity reached 260
- ap capacity recovered 260
- AP Certificate Expired 343
- AP Certificate Updated 343
- ap change control plane 254
- ap channel updated 253
- ap channel updated dfs detected a radar 254
- ap client load balancing limit reached 258
- ap client load balancing limit recovered 259
- ap communication alarms 85
- ap communication events 223, 274
- ap configuration generation failed 119, 349
- ap configuration update failed 86, 228
- ap configuration updated 227
- ap connected 255

- ap connected to ls 235
- ap country code updated 253
- ap created a tunnel 497
- ap deleted 93, 255
- ap disconnected 93, 252
- ap discovery succeeded 224
- AP failed to connect to LS 91
- ap failed to connect to ls 236
- ap firmware update failed 87, 226
- ap firmware updated 225
- AP health high airtime utilization clear 273
- AP health high airtime utilization flag 272
- AP health high client count clear 266
- AP health high client count flag 264
- AP health high connection failure clear 265
- AP health high connection failure flag 263
- AP health high latency clear 264
- AP health high latency flag 262
- AP health low capacity clear 265
- AP health low capacity flag 263
- ap heartbeat lost 255
- ap illegal to change country code 230
- ap ip address updated 252
- ap is disconnected from secure gateway 200, 501
- ap join zone failed 89, 230
- ap managed 224
- ap mesh events 239
- AP NAT failure detected by SZ due to three (3) consecutive NAT gateway APs are down 272
- AP NAT gateway IP failover detected for particular VLAN pool 269
- AP NAT gateway IP fall back detected for particular VLAN pool 270
- ap pre-provision model mismatched 87, 228
- ap rebooted by system 92, 251
- ap rebooted by user 251
- ap received passive calibration request 237
- ap received passive footfall request 238
- AP received unrecognized request 238
- ap rejected 85, 225
- ap reset to factory default 252
- ap secure gateway association failure 501
- ap secure gateway association success 500
- ap smart monitor turn off wlan 258
- ap softgre gateway not reachable 199, 499
- ap softgre gateway reachable 499
- ap softgre tunnel fails over primary to secondary 498
- ap softgre tunnel fails over secondary to primary 498
- ap started location service 236
- ap state change alarms 92
- ap state change events 249
- ap stopped location service 237
- ap swap model mismatched 86, 229
- ap tagged as critical 256
- ap tunnel disconnected 497
- ap USB software package download failed 274
- ap USB software package downloaded 274
- ap WLAN oversubscribed 88
- ap wlan oversubscribed 229
- ap wlan state changed 259
- apAcctMsgDecodeFailed 211
- apAcctMsgDropNoAcctStartMsg 78, 213
- apAcctMsgMandatoryPrmMissing 76, 210
- apAcctRespWhileInvalidConfig 212
- apAcctRetransmittedMsgDropped 212
- apBrownout 257
- apBuildTunnelSuccess 497
- apCapacityReached 260
- apCapacityRecovered 260
- apCertificateExpire 343
- apCertificateExpireClear 343
- apCfghDhcpNatWlanVlanConfigMismatch 33, 35, 122, 351
- apCfghGenFailed 119, 349
- apCfghNonDhcpNatWlanVlanConfigMismatch 33, 35, 121, 350
- apChangeControlBlade 254
- apChannelChanged 253
- apCLBlimitReached 258
- apCLBlimitRecovered 259
- apConfApplying 227
- apConfUpdated 227
- apConfUpdateFailed 86, 228
- apConnected 255
- apConnectionTerminatedDueToInsufficientLicense 425
- apCountryCodeChanged 253

- apDeleted 255
- apDfsRadarEvent 254
- apDHCPFailoverDetected 34, 266
- apDHCPFallbackDetected 34, 267
- apDHCPPIPPoolMaxThresholdReached 34, 268
- apDHCPServiceFailure 33, 34, 94, 269
- apDiscoverySuccess 224
- apFirmwareApplying 226
- apFirmwareUpdated 225
- apFirmwareUpdateFailed 87, 226
- apHealthAirUtilizationClear 34, 273
- apHealthAirUtilizationFlag 34, 272
- apHealthCapacityClear 34, 265
- apHealthCapacityFlag 34, 263
- apHealthClientCountClear 34, 266
- apHealthClientCountFlag 34, 264
- apHealthConnectionFailureClear 34, 265
- apHealthConnectionFailureFlag 34, 263
- apHealthLatencyClear 34, 264
- apHealthLatencyFlag 34, 262
- apHeartbeatLost 255
- apIlgalToChangeCountryCode 230
- apIPChanged 252
- apJoinZoneFailed 89, 230
- apLBSAuthFailed 90, 235
- apLBSConnectFailed 91, 236
- apLBSConnectSuccess 235
- apLBSNoResponses 90, 234
- apLBSRcvdPassiveCalReq 237
- apLBSRcvdPassiveFFReq 238
- apLBSRcvdUnrecognizedRequest 238, 428
- apLBSStartLocationService 236
- apLBSStopLocationService 237
- apModelDiffWithPreProvConfig 87, 107, 228, 319
- apModelDiffWithSwapOutAP 86, 229
- apNATFailoverDetected 34, 269
- apNATFailureDetectedbySZ 33, 34, 95, 272
- apNATFallbackDetected 34, 270
- apNATVlanCapacityAffected 34, 270
- apNATVlanCapacityRestored 34
- apP cable modem interface up 261
- app server active 399
- app server down 146, 398
- app server inactive 146, 398
- appServerActive 399
- appServerDown 146, 398
- appServerInactive 146, 398
- appRebootBySystem 92, 251
- apSecondaryDHCPAPDown 34, 267
- apSecondaryDHCPAPUp 34, 268
- apSoftGREGatewayNotReachable 199, 499
- apSoftGREGatewayReachable 499
- apSoftGRETunnelFailoverPtoS 498
- apSoftGRETunnelFailoverStoP 498
- apStatusManaged 224
- apStatusRejected 85, 225
- apTaggedAsCritical 256
- apTunnelDisconnected 497
- apUsbSoftwarePackageDownloaded 274
- apUsbSoftwarePackageDownloadFailed 274
- apWlanOversubscribed 88, 229
- apWLANStateChanged 259
- assocDown 148, 400
- assocEstbFailed 147, 399
- associated PDNGW down 390
- associated pdngw down 139
- association down 148, 400
- association establishment failed 147, 399
- association up 400
- assocUp 400
- auth info sending failed 401
- authentication alarms 96
- authentication events 275
- authentication failed 278
- authentication failed over to secondary 97, 281
- authentication fallback to primary 97, 282
- authentication server not reachable 96, 276
- authentication succeeded 277
- authFailed 278
- authFailedOverToSecondary 97, 281
- authFallbackToPrimary 97, 282
- authorization events 287
- authSvrNotReachable 96, 276
- authSuccess 277
- auto cleared 80, 81, 82, 83, 84, 85, 86, 87, 91, 93, 94, 103, 105, 106, 107, 108, 109, 110, 111, 113, 114, 115, 116, 117, 123, 124, 125, 126, 132, 145, 146, 147, 148, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 165, 166, 167, 168, 169, 177, 194, 195, 197, 199, 201, 219, 220, 221,

222, 225, 226, 228, 234, 235, 236,
252, 256, 286, 294, 317, 318, 319,
320, 321, 323, 326, 327, 328, 329,
332, 333, 336, 338, 340, 341, 342,
343, 354, 358, 359, 360, 366, 368,
369, 375, 397, 398, 399, 400, 407,
408, 409, 410, 411, 412, 413, 429,
431, 433, 437, 449, 454, 457, 467,
468, 488, 489, 493, 499, 501
system alarms 175

B

backupClusterFailed 108, 320
backupClusterSuccess 320
bind fails with AD/LDAP 99, 283
bind success with LDAP 99, 284
binding failed 169, 437
binding released 438
binding revoked 438
binding succeeded 436
binding time expired 437
bindingExpired 437
bindingFailure 169, 437
bindingReleased 438
bindingRevoked 438
bindingSuccess 436
Both primary and secondary DHCP server
APs are down 94

C

c2d configuration failed 297
c2dCfgFailed 297
cableModemDown 256
cableModemUp 261
CALEA UE Matched 372, 472
caleaMirroringStart 313
caleaMirroringStop 314
cassandraError 485
cdr generation failed 134, 377
cdr transfer failed 133, 377
cdr transfer succeeded 376
cdrGenerationFailed 134
cdrTxfrFailed 133
create session response failed 140, 391
cfgGenSkippedDueToEolAp 350
cfgRcvFailed 348
cfgUpdFailed 347
cfgUpdSuccess 347

cgf server not configured 144, 395
cgfServerNotConfigured 144, 395
client authentication failed 299
client authorization failed 302
client authorization successfully 301
client blocked 308
client connection timed out 301
client disconnected 300
client events 298
client failed to join 300
client grace period 308
client is blocked because of barring UE
rule 312
client is unblocked by barring UE rule 313
client joined 299
client logged out 303
client roaming 303
client roaming disconnected 307
client session expired 302
clientAuthFailure 299
clientAuthorization 301
clientAuthorizationFailure 302
clientBlockByBarringUERule 34, 312
clientBlockByDeviceType 308
clientDisconnect 300
clientGracePeriod 308
clientInactivityTimeout 301
clientJoin 299
clientJoinFailure 300
clientRoaming 303
clientSessionExpiration 302
clientSessionLogout 303
clientUnblockByBarringUERule 34, 313
cluster add AP firmware completed 337
Cluster add AP firmware failed 115
cluster add AP firmware failed 338
cluster add AP firmware started 337
cluster application started 324
cluster application stopped 110, 323
cluster back in service 319
cluster backup completed 320
cluster backup failed 108, 320
cluster backup started 324
cluster created successfully 316
cluster events 315
cluster in maintenance state 107, 319
cluster leader changed 325
cluster name is changed 338
cluster node rebooted 112, 328
cluster node shut down 112

- cluster node shutdown 329
- cluster node upgrade completed 322
- cluster out of service 114, 333
- cluster remove node started 331
- cluster restore completed 321
- cluster restore failed 109, 321
- Cluster upgrade failed 109
- cluster upgrade failed 323
- cluster upgrade started 325
- cluster upload AP firmware completed 336
- cluster upload AP firmware failed 114, 336
- cluster upload AP firmware started 335
- cluster upload completed 330
- cluster upload failed 330
- cluster upload KSP file completed 340
- Cluster upload KSP file failed 116
- cluster upload KSP file failed 340
- Cluster upload KSP file started 339
- cluster upload started 330
- cluster upload vSZ-D firmware failed 335
- clusterAddAPFirmwareFailed 115, 338
- clusterAddAPFirmwareStart 337
- clusterAddAPFirmwareSuccess 337
- clusterAppStart 324
- clusterAppStop 110, 323
- clusterBackToInService 319
- clusterBackupStart 324
- clusterCfgBackupFailed 116, 341
- clusterCfgBackupStart 340
- clusterCfgBackupSuccess 341
- clusterCfgRestoreFailed 117, 342
- clusterCfgRestoreStarted 344
- clusterCfgRestoreSuccess 342
- clusterCreatedSuccess 316
- clusterInitContactApr 34, 345
- clusterLeaderChanged 325
- clusterNameChanged 338
- clusterOutOfService 114, 333
- clusterUpgradeStart 325
- clusterUploadAPFirmwareFailed 114, 336
- clusterUploadAPFirmwareStart 335
- clusterUploadAPFirmwareSuccess 336
- clusterUploadKspFileFailed 33, 116, 340
- clusterUploadKspFileStart 339
- clusterUploadKspFileSuccess 340
- cmRebootByUser 257
- cmResetByUser 261
- cmResetFactoryByUser 262
- coA authorize only access reject 291
- coA nack sent to AAA 290
- coA NAK received NAS 291
- coA received from AAA 289
- coA RWSG MWSG notification failure 292
- coA sent NAS 290
- coaAuthorizeOnlyAccessReject 291
- coaNackSntAAA 290
- coaNakRcvdNas 291
- coaRcvdAAA 289
- coaRWSGMWSGNotifFailure 292
- coaSentNas 290
- config update failed 164, 428
- configuration 118
- Configuration backup failed 116
- configuration backup failed 341
- configuration backup started 340
- configuration backup succeeded 341
- configuration events 347
- configuration receive failed 348
- configuration restore failed 117, 342
- Configuration restore started 344
- configuration restore succeeded 342
- configuration update failed 347
- configuration updated 347
- configuration-change events 68
- connect to SCI 432
- Connect to SCI failure 167
- connect to SCI failure 433
- connected to LS 448
- connectedToDblade 293
- connectedToDHCP 431
- connectedToSci 35, 432
- connection to cfg failed 132, 375
- connectToSciFailure 167, 433
- control and data plane 103, 293
- cpu threshold back to normal 490
- cpu threshold exceeded 194, 488
- cpuThresholdBackToNormal 490
- cpuThresholdExceeded 194, 488
- CSV export disk max capacity reached 179, 459
- CSV export disk threshold back to normal 459
- CSV export disk threshold exceeded 179, 458
- CSV export FTP maximum retry 458
- CSV export FTP transfer 457
- CSV export FTP transfer error 178

csvDiskMaxCapacityReached 33, 35, 179, 459
 csvDiskThresholdBackToNormal 459
 csvDiskThresholdExceeded 33, 35, 179, 458
 csvFtpTransfer 457
 csvFtpTransferError 457
 csvFtpTransferMaxRetryReached 33, 35, 178, 458

D

data plane 123, 352
 data plane accepted a tunnel request 495
 data plane configuration update failed 123, 354
 data plane configuration updated 354
 data plane connected 358
 data plane core dead 127, 361
 data plane disconnected 124, 358
 data plane discovered 353
 data plane discovery failed 353
 data plane discovery succeeded 362
 data plane fails to connects to the other data plane 130
 data plane heartbeat lost 355
 data plane ip address updated 356
 data plane license is not enough 128, 364
 data plane managed 363
 data plane of data center side disconnects to CALEA server. 368, 467
 data plane of data center side fails to connect to the CALEA server 130
 data plane packet pool is above high water mark 361
 data plane packet pool is under critical low water mark 126, 360
 data plane packet pool is under low water mark 126, 360
 data plane physical interface down 125, 359
 data plane physical interface up 359
 data plane process restarted 127, 362
 data plane rebooted 125, 355
 data plane rejected a tunnel request 496
 data plane set up a tunnel 500
 data plane statistics update failed 357
 data plane status update failed 357
 data plane terminated a tunnel 496

data plane updated to a new control plane 356
 data plane upgrade failed 129, 366
 data plane upgrade started 364
 data plane upgrade succeeded 365
 database error 485
 datablade alarms 123
 debug 69
 decode failed 141, 392
 delAllSess 436
 delete all sessions 436
 delete bearer request failed 143, 393
 delete session response failed 142, 393
 deleteBearerRequestFailed 143
 deleteSessionResponseFailed 142
 destAvailable 397
 destination available 397
 destination not reachable 145, 397
 destNotReacheable 145
 destNotRecheable 397
 dhcp connected 431
 dhcp connection lost 166, 431
 DHCP decline received 374
 dhcp events 373
 dhcp inform received 373
 diaCEAUnknownPeer 190, 482
 diaCERError 185, 474
 diaCERSuccess 475
 diaFailbackToPeer 189, 481
 diaFailOverToAltPeer 188, 480
 dialInitialization 473
 dialnitalizeErr 184, 472
 dialvalidVer 476
 diameter CEA unknown peer 190, 482
 diameter CER error 185, 474
 diameter CER success 475
 diameter fail back to peer 189, 481
 diameter fail over to alternate peer 188, 480
 diameter initialization 473
 diameter initialization error 184, 472
 diameter invalid version 476
 diameter no common application 190, 482
 diameter peer add error 186, 477
 diameter peer add successful 477
 diameter peer remove successful 187, 478
 diameter peer transport failure 184, 473
 diameter realm entry error 187, 479

- diaNoCommonApp 190, 482
 - diaPeerAddError 186, 477
 - diaPeerAddSuccess 477
 - diaPeerRemoveSuccess 187, 478
 - diaPeerTransportFailure 184, 473
 - diaRealmEntryErr 187, 479
 - did allocation failure 149, 404
 - didAllocationFailure 149, 404
 - disabledSciAndFtpDueToMutuallyExclusive 33, 35, 434
 - disabledSciDueToUpgrade 33, 35, 433
 - disconnect to SCI 432
 - disconnectedFromSc 432
 - disconnectedFromSci 35
 - disk threshold back to normal 490
 - disk usage exceed threshold 113, 332
 - disk usage threshold exceeded 195, 489
 - diskUsageExceed 113, 332
 - diskUsageThresholdExceeded 195, 489
 - dm nack received from NAS 289
 - dm nack sent to AAA 288
 - dm received from AAA 287
 - dm sent to NAS 288
 - dmNackRcvdNAS 289
 - dmNackSntAAA 288
 - dmRcvdAAA 287
 - dmSntNAS 288
 - DP connected 293
 - DP Core GW active 507
 - DP Core GW reachable 507
 - dp dhcprelay failover 504
 - DP DHCPRelay no response 504
 - dp dhcprelay response recovery 506
 - dp sGRE del tunnel 505
 - dp sGRE GW failover 508
 - dp sGRE keep alive timeout 503
 - dp sGRE new tunnel 505
 - dpAcceptTunnelRequest 495
 - dpCaleaUeInterimMatched 35, 372, 472
 - dpCoreDead 41, 127, 361
 - dpDcToCaleaConnected 35
 - dpDcToCaleaConnectFail 33, 35, 130
 - dpDcToCaleaDisconnected 35, 368, 467
 - dpDeleted 363
 - dpDhcpIpPoolUsageRate100 33, 35
 - dpDhcpIpPoolUsageRate80 35
 - dpDhcpRelayFailOver 504
 - dpDhcpRelayNoResp 504
 - dpDhcpRelayRespRecovery 506
 - dpDisconnected 124
 - dpDiscoverySuccess 362
 - dpLicenseInsufficient 128, 129, 364
 - dpP sGRE keepalive recovery 506
 - dpP2PTunnelConnected 35
 - dpP2PTunnelConnectFail 33, 35
 - dpP2PTunnelDisconnected 35
 - dpPhyInterfaceDown 125
 - dpPktPoolCriticalLow 41, 126, 360
 - dpPktPoolLow 41, 126, 360
 - dpPktPoolRecover 361
 - dpProcessRestart 127, 362
 - dpReboot 125
 - dpRejectTunnelRequest 496
 - dpSetUpTunnel 500
 - dpSgreDelTunnel 505
 - dpSgreGWAct 507
 - dpSgreGWFailOver 508
 - dpSgreGWInact 503
 - dpSgreGWReachable 507
 - dpSgreGWUnreachable 502
 - dpSgreKeepAliveRecovery 506
 - dpSgreKeepAliveTimeout 503
 - dpSgreNewTunnel 505
 - dpStartMirroringClient 35, 469
 - dpStatusManaged 363
 - dpStopMirroringClient 35, 470
 - dpTearDownTunnel 496
 - dpUpdateStatisticFailed 357
 - dpUpgradeFailed 366
 - dpUpgradeStart 364
 - dpUpgradeSuccess 365
 - dpUpgrading 365
- E**
- echo response not received 379
 - email sent failed 460
 - email sent successfully 460
 - emap downlink connected to map 239
 - emap downlink disconnected from map 240
 - emap uplink connected to map 240
 - emap uplink disconnected from map 241
 - emapDlinkConnectWithMap 239
 - emapDlinkDisconnectWithMap 240
 - emapUlinkConnectWithMap 240
 - emapUlinkDisconnectWithMap 241
 - end -of-life AP model detected 120, 350
 - entire cluster upgraded successfully 322

- espAuthServerReachable 218
- espAuthServerResolvable 219
- espAuthServerUnreachable 82, 219
- espAuthServerUnResolvable 82, 220
- espDNATServerReachable 220
- espDNATServerResolvable 221
- espDNATServerUnreachable 83, 221
- espDNATServerUnresolvable 84, 222
- event 69
- event attributes 69
- event categories 68
- event detail information 69
- event severity 69
- event source 69
- event type 69

F

- failed to connect to LS 177, 448
- fails to establish TLS tunnel with AD/LDAP 102, 286
- fast re-authentication failed 280
- fast re-authentication succeeded 280
- fastReauthFailed 280
- fastReauthSuccess 280
- file upload 460
- fileUpload 460
- force DHCP disconnected 311
- forceDHCPDisconnect 311
- forwarded calibration request to AP 452
- forwarded footfall request to AP 452
- ftp transfer 456
- ftp transfer error 456
- ftpTransfer 456
- ftpTransferError 456

G

- ga interface alarms 132
- ga interface events 375
- generate AP config for plane load rebalance failed 455
- generate AP config for plane load rebalance succeeded 455
- generation of event and alarm 69
- genericRogueAPDetected 231
- ggsn not reachable 136, 379
- ggsn not resolved 137, 380
- ggsn restarted 135, 378
- ggsnNotReachable 136

- ggsnNotResolved 137
- ggsnRestarted 135
- gn S2a interface alarms 135
- gn S2a interface events 378
- gprs location update failed 402
- gprs location update succeeded 402
- gr interface alarms 145
- gr interface event 396
- gtpManager (DP) disconnected 103, 294

H

- hIP cache cleaned 466
- hIP failed over 182, 465
- hip started 464
- hip stopped 464
- hipCacheCleanup 466
- hipFailover 182, 191, 465, 486
- hipStandbyRestart 465
- hipStarted 464
- hipStopped 464

I

- incapable location info requested 427
- incapableLocInfoRequested 427
- incorrect flat file configuration 348
- informational 69
- Initiated APs contact APR 345
- insert sub data failed 403
- insert sub data success 403
- insertSubDataFailed 403
- insertSubDataSuccess 403
- insufficient license capacity 425
- ip assigned 387
- ip not assigned 387
- ipmi alarms 150
- ipmi events 406
- ipmiCurrent 158, 411
- ipmiDrvStatus 160, 413
- ipmiFan 157, 410
- ipmiFanStatus 158, 412
- ipmiPower 157, 411
- ipmiPsStatus 159, 412
- ipmiRECurrent 417
- ipmiREDrvStatus 419
- ipmiREFan 416
- ipmiREFanStatus 418
- ipmiREPower 417
- ipmiREPsStatus 418

ipmiREThempBB 414
 ipmiREThempFP 414
 ipmiREThempHSBP 416
 ipmiREThempIOH 414
 ipmiREThempMemP 415
 ipmiREThempP 416
 ipmiREThempPS 415
 ipmiREVotage 413
 ipmiThempBB 152, 407
 ipmiThempFP 153, 407
 ipmiThempHSBP 156, 410
 ipmiThempIOH 153, 408
 ipmiThempMemP 154, 408
 ipmiThempP 156, 409
 ipmiThempPS 155, 409
 ipmiVoltage 151, 406
 ipmiVotage 151
 ipsecTunnelAssociated 500
 ipsecTunnelAssociateFailed 501
 ipsecTunnelDisassociated 200, 501

K

keepalive failure 181, 463
 keepAliveFailure 181, 463

L

ldap server unreachable 81
 ldapServerUnreachable 81
 license data changed 424
 license going to expire 162, 424
 license import failed 424
 license import succeeded 423
 license sync failed 423
 license sync succeeded 422
 license threshold exceeded 196, 491
 licenseChanged 424
 licenseGoingToExpire 162, 424
 licenseImportFail 424
 licenseImportSuccess 423
 licenseSyncFail 423
 licenseSyncSuccess 422
 licenseThresholdExceeded 196, 491
 licensing alarms 161
 licensing interface events 420
 lma failed over 165, 430
 lma ICMP is unreachable 429
 lma icmp is unreachable 165
 lma ICMP reachable 429

lma server unreachable 430
 lmaFailOver 165, 430
 lmaHbUnreachable 430
 lmalcmpReachable 429
 lmalcmpUnreachable 165, 429
 logging events 68
 lostCnrxnToBlade 103, 294
 lostCnrxnToDHCP 166, 431
 LS authentication failure 90, 176
 ls authentication failure 235, 448

M

MAC-spoofing rogue AP 232
 mac-spoofingRogueAPDetected 232
 mailSendFailed 460
 mailSendSuccess 460
 maliciousRogueAPTimeout 233
 map disconnected 241
 map downlink connected 241
 map downlink connected to emap 242
 map downlink connected to map 247
 map downlink disconnected from emap 242
 map downlink disconnected from map 248
 map uplink connected to emap 243
 map uplink connected to map 245
 map uplink connected to rap 244
 map uplink disconnected from emap 244
 mapDisconnected 241
 mapDlinkConnected 241
 mapDlinkConnectWithMap 242
 mapDlinkConnectWithMap 247
 mapDlinkDisconnectWithMap 242
 mapDlinkDisconnectWithMap 248
 mapUlinkConnectToMap 243
 mapUlinkConnectToMap 245
 mapUlinkConnectToRap 244
 mapUlinkDisconnectToMap 244
 Memory allocation failed 193
 memory allocation failed 487
 memory threshold back to normal 490
 memory threshold exceeded 195, 489
 memoryThresholdBackToNormal 490
 memoryThresholdExceeded 195, 489
 Mesh state update to rap no channel 247
 mesh state updated to map 245
 mesh state updated to map no channel 246

mesh state updated to RAP 246
 meshStateUpdateToMap 245
 meshStateUpdateToMapNoChannel 246
 meshStateUpdateToRap 246
 meshStateUpdateToRapNoChannel 247
 modify bearer response failed 141, 392
 modifyBearerResponseFailed 141

N

new node failed to join 105, 317
 new node joined successfully 316
 newNodeJoinFailed 105, 317
 newNodeJoinSuccess 316
 No LS responses 90, 234
 no LS responses 176
 no ls responses 447
 node back in service 332
 node bond interface down 111, 326
 node bond interface up 326
 Node ip address changed 327
 node out of service 106, 318
 node physical interface down 111, 327
 node physical interface up 328
 node removal completed 317
 node removal failed 106, 318
 nodeBondInterfaceDown 111, 326
 nodeBondInterfaceUp 326
 nodeIPChanged 327
 nodeOutOfService 106, 318
 nodePhyInterfaceUp 328
 nodeShutdown 112, 329
 ntp time synchronized 329
 ntpTimeSynched 329
 number of devices exceeded it's limit 198
 number of users exceeded it's limit 197

O

onboarding registration failed 309
 onboarding registration succeeded 309
 onboardingRegistrationFailure 309
 onboardingRegistrationSuccess 309
 outbound routing failure 148, 404
 outboundRoutingFailure 148, 404
 overview 68

P

pdf update success coa 388

pdngw could not be resolved 138, 389
 pdngw version not supported 139, 390
 pdnGwAssociationDown 139, 390
 pdnGwNotResolved 138, 389
 pdnGwVersionNotSupportedMsgRe-
 ceived 139, 390
 pdp context established 380
 pdp delete by GGSN failed 386
 pdp delete by GGSN succeeded 386
 pdp delete by TTG failed 385
 pdp delete by TTG succeeded 385
 pdp update by GGSN failed 384
 pdp update by GGSN succeeded 384
 pdp update by HLR failed 382
 pdp update by HLR succeeded 381
 pdp update by roaming failed 383
 pdp update by roaming succeeded 382
 pdp update fail COA 389
 pdpUpdFailCOA 389
 pdpUpdSuccCOA 388
 planeLoadingRebalancingFailed 455
 planeLoadingRebalancingSucceeded
 455
 pmipUnavailable 192, 486
 pMIPv6 unavailable 192, 486
 Primary DHCP AP is down detected by
 secondary DHCP AP. Starting DHCP ser-
 vice on secondary 266
 Primary DHCP AP is up detected by sec-
 ondary DHCP AP. Stopping DHCP ser-
 vice on secondary. 267
 Primary or secondary DHCP AP detects
 90% of the configured total IPs 268, 269
 process initiated 191, 486
 process restart 180, 462
 process stopped 487
 processRestart 180, 462
 processStop 487
 pseudonym authentication failed 279
 pseudonym authentication succeeded
 278
 pseudonymAuthFailed 279
 pseudonymAuthSuccess 278

R

racADLDAPBindFail 99, 283
 racADLDAPFail 98, 283
 racADLDAPSuccess 282
 racADLDAPTLSFailed 33, 35, 102, 286

- racADLDAPTLSSuccess 35
 - racADNPSFail 100, 284
 - racADNPSFailToAuthenticate 101, 285
 - racLDAPFailToFindPassword 99, 284
 - radius fails to authenticate with AD NPS server 101, 285
 - radius fails to connect to AD NPS server 100, 284
 - radius server reachable 215
 - radius server unreachable 80, 216
 - radiusServerUnreachable 80
 - rap downlink connected to map 243
 - rap downlink disconnected from map 248
 - rapDlinkConnectWithMap 243
 - rapDlinkDisconnectWithMap 248
 - rate limit for TOR surpassed 197, 493
 - rate limit threshold restored 492
 - rate limit threshold surpassed 491
 - rateLimitMORSurpassed 197, 493
 - rateLimitThresholdRestored 492
 - rateLimitThresholdSurpassed 491
 - received management request 450
 - received passive request 449
 - received unrecognized request 453
 - recover cassandra error 485
 - recoverCassandraError 485
 - remediation failed 310
 - remediation succeeded 310
 - remediationFailure 310
 - remediationSuccess 310
 - removeNodeFailed 106, 318
 - removeNodeSuccess 317
 - resource unavailable 181, 463
 - resourceUnavailable 181, 463
 - restore data failed 405
 - restore data success 405
 - restoreClusterFailed 109, 321
 - restoreClusterSuccess 321
 - restoreDataFailed 405
 - restoreDataSuccess 405
 - resyncNTPTime 41
 - retransmission exhausted 174, 445
 - retransmitExhausted 174, 445
 - Rogue AP 231
 - rogue AP disappeared 233
- S**
- same network rogue ap 232
 - same-networkRogueAPDetected 232
 - scg forwarded footfall request to AP 452
 - scgLBSAuthFailed 176, 448
 - scgLBSConnectFailed 177, 448
 - scgLBSConnectSuccess 448
 - scgLBSFwdPassiveCalReq 452
 - scgLBSFwdPassiveFFReq 452
 - scgLBSNoResponse 176, 447
 - scgLBSRcvdMgmtRequest 450
 - scgLBSRcvdUnrecognizedRequest 453
 - scgLBSSendAPInfoByVenueReport 450
 - scgLBSSendClientInfo 451
 - scgLBSSendVenuesReport 451
 - scgLBSSentControllerInfo 449
 - scgLBSStartLocationService 449
 - SCI and FTP have been disabled 168, 434
 - SCI has been disabled 168, 433
 - Secondary DHCP AP is down detected by primary DHCP AP 267
 - Secondary DHCP AP is up detected by primary DHCP AP 268
 - send auth info success 401
 - sendAuthInfoFailed 401
 - sendAuthInfoSuccess 401
 - sent AP info by venue report 450
 - sent associated client report 451
 - sent controller information report 449
 - sent query venues report 451
 - service unavailable 180, 462
 - serviceUnavailable 180, 462
 - sessDeletedAtDblade 295
 - sessDeleteErrAtDblade 296
 - session delete at DP failed 296
 - session deleted at DP 295
 - session interface events 167, 432, 435
 - session license exhausted 422
 - session timeout 435
 - session update at DP failed 295
 - session updated at DP 294
 - sessTimeout 435
 - sessUpdatedAtDblade 294
 - sessUpdateErrAtDblade 295
 - smartMonitorTurnOffWLAN 258
 - smartRoamDisconnect 307
 - sms sent failed 461
 - sms sent successfully 461
 - smsSendFailed 461
 - smsSendSuccess 461
 - ssh tunnel switched 331
 - ssid-spoofing rogue AP 231

- ssid-spoofingRogueAPDetected 231
- STA 444
- sta authentication failed decode failure 172, 441
- sta authentication failed failure response 171, 440
- sta authentication failed transport down 170, 440
- sta reauthorization failed 172, 444
- sta reauthorization successful 443
- sta response timer expired 173, 444
- sta session termination AAA initiated failed 443
- sta session termination AAA initiated success 442
- sta session termination SCG initiated success 441
- sta successful authentication 439
- staAuthFailedDecodeFailure 172, 441
- staAuthFailedFailureResp 171, 440
- staAuthFailedTransDown 170, 440
- standby HIP restarted 465
- staReAuthFailed 172, 444
- staReAuthSuccess 443
- staResponseTimerExpired 173, 444
- start CALEA mirroring client 313
- Start CALEA mirroring client in data plane 370, 469
- staSessionTermAAAINitFailed 443
- staSessionTermAAAINitSuccess 442
- staSessionTermSCGInitSuccess 441
- staSuccessfulAuthentication 439
- stop CALEA mirroring client 314
- Stop CALEA mirroring client in data plane 470
- successfully established the TLS tunnel with AD/LDAP 285
- syslog server reachable 453
- syslog server switched 454
- syslog server unreachable 177, 454
- syslogServerReachable 453
- syslogServerSwitched 454
- syslogServerUnreachable 177, 454
- system interface events 446

T

- threshold alarms 194
- threshold events 488
- threshold-crossing alerts 68

- timestamp 69
- tooManyUsers 197
- ttg session critical threshold 161, 421
- ttg session license exhausted 162
- ttg session major threshold 421
- ttg session warning threshold 420
- ttgSessionCriticalThreshold 161, 421
- ttgSessionLicenseExhausted 162, 422
- ttgSessionMajorThreshold 421
- ttgSessionWarningThreshold 420
- tunnel alarms 199
- tunnel events - datablade 502

U

- unallocatedMemory 193, 487
- unauthorized CoA/DM message dropped 214
- unauthorized CoA/DM message dropped 79
- unauthorizedCoaDmMessageDropped 79, 214
- Unavailable location info requested 426
- unavailableLocInfoRequested 426
- unknown realm 211, 276
- unknown ue 388
- unknownRealm 276
- unknownRealmAccounting 211
- unsupported location delivery request 427
- unSupportedLocDeliveryRequest 427
- Unsync NTP time 115, 339
- unsyncNTPTime 115, 339
- update bearer request failed 143, 394
- updateBearerRequestFailed 143
- updateCfgFailed 164
- updateGprsLocFailed 402
- updateGprsLocSuccess 402
- updating ap configuration 227
- updating ap firmware 226
- Upgrade SSTable failed 344
- upgradeClusterFailed 109, 323
- upgradeClusterNodeSuccess 322
- upgradeEntireClusterSuccess 322
- upgradeSSTableFailed 344
- uploadClusterVDPFirmwareFailed 335

W

- wds device joined 311

wds device left 312
wdsDeviceJoin 311
wdsDeviceLeave 312
wechat ESP authentication server reachable 218
weChat ESP authentication server resolvable 219
WeChat ESP authentication server unreachable 219
weChat ESP authentication server unreachable 82
weChat ESP authentication server unresolvable 82, 220
weChat ESP DNAT server reachable 220
weChat ESP DNAT server resolvable 221
weChat ESP DNAT server unreachable 83, 221
weChat ESP DNAT server unresolvable 84, 222

Z

zD AP Migrated 483
zd AP Migrating 483
ZD AP Migration Failed 484
zD AP Rejected 484
zdAPMigrated 483
zdAPMigrating 483
zdAPMigrationFailed 484
zdAPRejected 484
zone configuration preparation failed 118, 349
zoneAffinityLastDpDisconnected 33
zoneCfgPrepareFailed 118, 119, 349



Copyright © 2006-2016. Ruckus Wireless, Inc.
350 West Java Dr. Sunnyvale, CA 94089. USA
www.ruckuswireless.com