

# OmniVista 3600 Air Manager 8.0



## Copyright

© 2014 Alcatel-Lucent. All rights reserved.

Specifications in this manual are subject to change without notice.

Originated in the USA.

AOS-W, Alcatel 4302, Alcatel 4304, Alcatel 4306, Alcatel 4308, Alcatel 4324, Alcatel 4504, Alcatel 4604, Alcatel 4704, Alcatel 6000, OAW-AP41, OAW-AP68, OAW-AP60/61/65, OAW-AP70, OAW-AP80, OAW-AP92/93, OAW-AP105, OAW-AP120/121, OAW-AP124/125, OAW-AP175, OAW-IAP92/93/105, OAW-RAP2, OAW-RAP5, and Omnivista 3600 Air Manager are trademarks of Alcatel-Lucent in the United States and certain other countries.

Any other trademarks appearing in this manual are the property of their respective companies. Includes software from Litech Systems Design. The IF-MAP client library copyright 2011 Infoblox, Inc. All rights reserved. This product includes software developed by Lars Fenneberg et al.

## Legal Notice

The use of Alcatel-Lucent switching platforms and software, by all individuals or corporations, to terminate Cisco or Nortel VPN client devices constitutes complete acceptance of liability by that individual or corporation for this action and indemnifies, in full, Alcatel-Lucent from any and all legal actions that might be taken against it with respect to infringement of copyright on behalf of Cisco Systems or Nortel Networks.

<b>Chapter 1 Introduction</b> .....	<b>13</b>
A Unified Wireless Network Command Center .....	13
OV3600 Management Platform .....	13
Controller Configuration .....	14
Instant Configuration .....	14
VisualRF .....	14
RAPIDS .....	15
Master Console and Failover .....	15
Integrating OV3600 into the Network and Organizational Hierarchy .....	15
Administrative Roles .....	16
<b>Chapter 2 Configuring OV3600</b> .....	<b>17</b>
Before You Begin .....	17
Formatting the Top Header .....	17
Customizing Columns in Lists .....	19
Resetting Pagination Records .....	20
Using the Pagination Widget .....	21
Using Export CSV for Lists and Reports .....	21
Defining Graph Display Preferences .....	22
Customizing the Dashboard .....	22
Adding Widgets .....	23
Available Widgets .....	23
Search Preferences .....	27
Setting Severe Alert Warning Behavior .....	28
Defining General OV3600 Server Settings .....	29
OV3600 Setup > General .....	29
General Settings .....	30
Automatic Authorization Settings .....	31
Top Header Settings .....	32
Search Method .....	32
Home Overview Preferences .....	32
Display Settings .....	33
Device Configuration Settings .....	34
OV3600 Features .....	34
External Logging Settings .....	35
Historical Data Retention Settings .....	36
Firmware Upgrade Defaults .....	37
Additional OV3600 Services .....	38
Performance Settings .....	39
Defining OV3600 Network Settings .....	41
Primary Network Interface Settings .....	41
Secondary Network Interface Settings .....	41
Network Time Protocol (NTP) Settings .....	42
Static Routes .....	42
Creating OV3600 Users .....	42
OV3600 User Roles .....	44

User Roles and VisualRF .....	45
Creating OV3600 User Roles .....	45
Configuring Login Message, TACACS+, RADIUS, and LDAP Authentication .....	50
Setting Up Login Configuration Options .....	50
Setting Up Certificate Authentication .....	51
Configuring Whitelists .....	51
Setting Up Single Sign-On .....	52
Specifying the Authentication Priority .....	52
Configuring RADIUS Authentication and Authorization .....	53
Integrating a RADIUS Accounting Server .....	54
Configuring TACACS+ Authentication .....	55
Configuring LDAP Authentication and Authorization .....	56
Enabling OV3600 to Manage Your Devices .....	59
Configuring Communication Settings for Discovered Devices .....	59
Loading Device Firmware Onto OV3600 (optional) .....	62
Setting Up Device Types .....	66
Configuring Cisco WLSE and WLSE Rogue Scanning .....	66
Introduction to Cisco WLSE .....	66
Initial WLSE Configuration .....	67
Adding an ACS Server for WLSE .....	67
Enabling Rogue Alerts for Cisco WLSE .....	67
Configuring WLSE to Communicate with APs .....	67
Discovering Devices .....	68
Managing Devices .....	68
Inventory Reporting .....	68
Defining Access .....	68
Grouping .....	68
Configuring IOS APs for WDS Participation .....	69
WDS Participation .....	69
Primary or Secondary WDS .....	69
Configuring ACS for WDS Authentication .....	69
Configuring Cisco WLSE Rogue Scanning .....	70
Configuring ACS Servers .....	71
Integrating OV3600 with an Existing Network Management Solution (NMS) .....	73
Auditing PCI Compliance on the Network .....	74
Introduction to PCI Requirements .....	74
PCI Auditing .....	74
Enabling or Disabling PCI Auditing .....	76
Deploying WMS Offload .....	78
Overview of WMS Offload in OV3600 .....	78
General Configuration Tasks Supporting WMS Offload in OV3600 .....	78
Additional Information Supporting WMS Offload .....	79
<b>Chapter 3 Configuring and Using Device Groups .....</b>	<b>80</b>
OV3600 Groups Overview .....	82
Viewing All Defined Device Groups .....	83
Configuring Basic Group Settings .....	84
Adding and Configuring Group AAA Servers .....	93
Configuring Group Security Settings .....	94
Configuring Group SSIDs and VLANs .....	98
Configuring Radio Settings for Device Groups .....	103

Cisco WLC Group Configuration .....	106
Accessing Cisco WLC Configuration .....	107
Navigating Cisco WLC Configuration .....	107
Configuring WLANs for Cisco WLC Devices .....	108
Defining and Configuring LWAPP AP Groups for Cisco Devices .....	111
Viewing and Creating Cisco AP Groups .....	111
Configuring Cisco Controller Settings .....	111
Configuring Wireless Parameters for Cisco Controllers .....	112
Configuring Cisco WLC Security Parameters and Functions .....	112
Configuring Management Settings for Cisco WLC Controllers .....	113
Configuring Group PTMP Settings .....	113
Configuring Proxim Mesh Radio Settings .....	114
Configuring Group MAC Access Control Lists .....	116
Specifying Minimum Firmware Versions for APs in a Group .....	117
Comparing Device Groups .....	119
Deleting a Group .....	120
Changing Multiple Group Configurations .....	120
Modifying Multiple Devices .....	121
Using Global Groups for Group Configuration .....	124
<b>Chapter 4 Discovering, Adding, and Managing Devices .....</b>	<b>127</b>
Device Discovery Overview .....	127
Discovering and Adding Devices .....	127
SNMP/HTTP Scanning .....	127
Adding Networks for SNMP/HTTP Scanning .....	128
Adding Credentials for Scanning .....	128
Defining a Scan Set .....	129
Running a Scan Set .....	130
The Cisco Discovery Protocol (CDP) .....	132
Authorizing Devices to OV3600 from APs/Devices > New Page .....	132
Manually Adding Individual Devices .....	132
Adding Devices with the Device Setup > Add Page .....	133
Adding Multiple Devices from a CSV File .....	136
Adding Universal Devices .....	137
Assigning Devices to the Ignored Page .....	137
Unignoring a Device .....	138
Monitoring Devices .....	139
Viewing Device Monitoring Statistics .....	139
Creating Custom Filtered Views .....	140
Understanding the APs/Devices > Monitor Pages for All Device Types .....	141
Monitoring Data Specific to Wireless Devices .....	142
Evaluating Radio Statistics for an AP .....	149
Overview of the Radio Statistics Page .....	149
Viewing Real-Time ARM Statistics .....	150
Issues Summary section .....	150
802.11 Radio Counters Summary .....	151
Radio Statistics Interactive Graphs .....	151
Recent ARM Events Log .....	152
Detected Interfering Devices Table .....	153
Active BSSIDs Table .....	154
Monitoring Data for Mesh Devices .....	154

Monitoring Data for Wired Devices (Routers and Switches)	155
Understanding the APs/Devices > Interfaces Page	157
Auditing Device Configuration	158
Using Device Folders (Optional)	159
Configuring and Managing Devices	160
Moving a Device from Monitor Only to Manage Read/Write Mode	160
Configuring AP Settings	161
Setting a Maintenance Window for a Device	169
Configuring Device Interfaces for Switches	169
Individual Device Support and Firmware Upgrades	173
Troubleshooting a Newly Discovered Down Device	176
Using OV3600 to Set up Spectrum Analysis	178
Spectrum Configurations and Prerequisites	178
Setting up a Permanent Spectrum Alcatel-Lucent AP Group	179
Configuring an Individual AP to run in Spectrum Mode	180
Configuring a switch to use the Spectrum Profile	181
<b>Chapter 5 Creating and Using Templates</b>	<b>182</b>
Group Templates	182
Supported Device Templates	182
Template Variables	183
Viewing and Adding Templates	184
Configuring General Template Files and Variables	187
Configuring General Templates	188
IOS Configuration File Template	189
Device Configuration File on APs/Devices > Audit Configuration Page	189
Using Template Syntax	189
Using AP-Specific Variables	189
Using Directives to Eliminate Reporting of Configuration Mismatches	190
Ignore_and_do_not_push Command	190
Push_and_exclude Command	190
Using Conditional Variables in Templates	190
Using Substitution Variables in Templates	191
Configuring Templates for Alcatel-Lucent Instant	192
Configuring Templates for AirMesh	194
Configuring Cisco IOS Templates	194
Applying Startup-config Files	194
WDS Settings in Templates	195
SCP Required Settings in Templates	195
Supporting Multiple Radio Types via a Single IOS Template	195
Configuring Single and Dual-Radio APs via a Single IOS Template	196
Configuring Cisco Catalyst Switch Templates	196
Configuring Symbol Controller / HP WESM Templates	196
Configuring a Global Template	198
<b>Chapter 6 Using RAPIDS and Rogue Classification</b>	<b>201</b>
Introduction to RAPIDS	201
Viewing Overall Network Health on RAPIDS > Overview	201
Setting Up RAPIDS	203
RAPIDS Setup	203
Basic Configuration	203
Classification Options	204

Containment Options .....	204
Filtering Options .....	205
Additional Settings .....	206
Defining RAPIDS Rules .....	206
switch Classification with WMS Offload .....	206
Device OUI Score .....	207
Rogue Device Threat Level .....	207
Viewing and Configuring RAPIDS Rules .....	207
Deleting or Editing a Rule .....	210
Recommended RAPIDS Rules .....	210
Using RAPIDS Rules with Additional OV3600 Functions .....	211
Viewing Rogues on the RAPIDS > List Page .....	211
Overview of the RAPIDS > Detail Page .....	214
Viewing Ignored Rogue Devices .....	215
Using RAPIDS Workflow to Process Rogue Devices .....	215
Score Override .....	216
Using the Audit Log .....	217
Additional Resources .....	217
<b>Chapter 7 Performing Daily Administration in OV3600 .....</b>	<b>218</b>
Monitoring and Supporting OV3600 with the System Pages .....	218
Using the System > Status Page .....	219
Viewing Device Events in System > Syslog & Traps .....	221
Using the System > Event Log Page .....	222
Triggers and Alerts .....	223
Creating New Triggers .....	223
Viewing, Delivering, and Responding to Triggers and Alerts .....	232
Backing Up OV3600 .....	235
Viewing and Downloading Backups .....	235
Running Backup on Demand .....	236
Restoring from a Backup .....	236
Using the System > Configuration Change Jobs Page .....	236
Using the System > Firmware Upgrade Jobs Page .....	237
Using the System > Performance Page .....	238
Monitoring and Supporting WLAN Clients .....	241
Overview of the Clients Pages .....	241
Monitoring Your Network with the Clients > Overview Page .....	242
Monitoring WLAN Users in the Clients > Connected and Clients > All Pages .....	244
Monitoring Rogue Clients With the Clients > Rogue Clients Page .....	247
Supporting Guest WLAN Users With the Clients > Guest Users Page .....	249
Supporting VPN Users with the Clients > VPN Sessions Page .....	251
Supporting RFID Tags With the Clients > Tags Page .....	252
Evaluating and Diagnosing User Status and Issues .....	253
Evaluating User Status with the Clients > Client Detail Page .....	253
Mobile Device Access Control in Clients > Client Detail and Clients > Connected .....	254
Classifying Alcatel-Lucent Devices in Client Detail .....	255
Quick Links for Clients on Alcatel-Lucent Devices .....	255
Using the Deauthenticate Client Feature .....	256
Viewing a Client's Association History .....	256
Viewing the Rogue Association History for a Client .....	257
Evaluating Client Status with the Clients > Diagnostics Page .....	257

Managing Mobile Devices with SOTI MobiControl and OV3600 .....	258
Overview of SOTI MobiControl .....	258
Prerequisites for Using MobiControl with OV3600 .....	258
Adding a Mobile Device Management Server for MobiControl .....	258
Accessing MobiControl from the Clients > Client Detail Page .....	259
Monitoring and Supporting OV3600 with the Home Pages .....	259
Monitoring OV3600 with the Home > Overview Page .....	260
Using the Home > AppRF Page .....	262
Using the Home > UCC Page .....	263
Call Quality .....	264
Quality Correlation .....	264
Call Volume .....	264
Devices .....	264
UCC Chart Details .....	264
Viewing the Home > RF Performance Page .....	265
Viewing the Home > RF Capacity Page .....	266
Viewing the Home > Network Deviations Page .....	268
How Standard Deviation is Calculated .....	269
The Home > Search Page .....	269
Accessing OV3600 Documentation .....	270
Viewing and Updating License Information .....	271
Configuring Your Own User Information with the Home > User Info Page .....	272
Supporting OV3600 Servers with the Master Console .....	275
Using the Public Portal on Master Console .....	276
Adding a Managed OV3600 with the Master Console .....	277
Using Global Groups with Master Console .....	278
Controller Backups and Restoration .....	278
Using OV3600 Failover for Backup .....	279
Navigation Section of OV3600 Failover .....	279
Adding Watched OV3600 Stations .....	279
Logging out of OV3600 .....	280
<b>Chapter 8 Creating, Running, and Emailing Reports .....</b>	<b>281</b>
Overview of OV3600 Reports .....	281
Reports > Definitions Page Overview .....	281
Reports > Generated Page Overview .....	283
Defining Reports .....	284
Using Daily Reports .....	291
Viewing Generated Reports .....	291
Using Custom Reports .....	292
Using the Alcatel-Lucent License Report .....	293
Using the Capacity Planning Report .....	293
Example .....	293
Using the Client Inventory Report .....	295
Example .....	296
Using the Client Session Report .....	298
Using the Configuration Audit Report .....	300
Using the Device Summary Report .....	301
Using the Device Uptime Report .....	303
Using the IDS Events Report .....	304
Using the Inventory Report .....	306



Example .....	306
Using the Match Event Report .....	308
Using the Memory and CPU Utilization Report .....	308
Using the Network Usage Report .....	309
Using the New Clients Report .....	311
Using the New Rogue Devices Report .....	312
Using the PCI Compliance Report .....	314
Using the Port Usage Report .....	315
Using the RADIUS Authentication Issues Report .....	317
Using the RF Health Report .....	318
Using the Rogue Clients Report .....	319
Using the Rogue Containment Audit Report .....	321
Using the VPN Session Report .....	322
Emailing and Exporting Reports .....	323
Emailing Reports in General Email Applications .....	323
Emailing Reports to Smarthost .....	323
Exporting Reports to XML, CSV, or PDF .....	324
<b>Chapter 9 Using VisualRF .....</b>	<b>325</b>
Features .....	326
Useful Terms .....	326
Starting VisualRF .....	327
Basic VisualRF Navigation .....	327
Network View Navigation .....	328
Floorplan View Navigation .....	329
Display Devices .....	329
Overlays .....	329
Relation Lines .....	330
Floorplan Features .....	330
Mesh View Navigation .....	330
Configuring Flash UI Personal Preferences .....	332
General Flash UI Preferences .....	332
AP Flash UI Preferences .....	333
Clients Flash UI Preferences .....	334
Overlays Flash UI Preferences .....	334
Grid Lines Flash UI Preferences .....	335
Navigation Flash UI Preferences .....	335
Advanced Settings in VisualRF > Setup .....	336
Server Settings .....	337
Location Settings .....	338
Location Calculation Timer Settings .....	339
Attenuation Settings .....	341
Adding a New Attenuation .....	342
VisualRF Resource Utilization .....	342
Planning and Provisioning .....	343
Creating a New Campus .....	343
Creating a New Building .....	343
Creating a Floor Plan .....	345
Editing a Floor Plan Image .....	345
Cropping the Floor Plan Image .....	345
Sizing a Non-CAD Floor Plan .....	346

Defining Floor Plan Boundaries .....	347
Legacy VisualRF Floor Plan Configuration Options .....	347
Defining Floor Plan Regions .....	348
Adding Region to a New Floor using the Floor Upload Wizard .....	348
Adding a Region to an Existing Floor Plan .....	348
Legacy Region Configuration Settings .....	349
Editing a Planning Region .....	352
Floor Plan Properties .....	352
Adding Deployed Access Points onto the Floor Plan .....	353
Adding Planned APs onto the Floor Plan .....	353
Auto-Matching Planned Devices .....	354
Printing a Bill of Materials Report .....	354
Increasing Location Accuracy .....	355
Adding Exterior Walls .....	356
Defining Stationary Devices .....	357
Fine-Tuning Location Service in VisualRF > Setup .....	358
Decreasing Grid Size .....	358
Enabling Dynamic Attenuation .....	358
Configuring Infrastructure .....	358
Deploying APs for Client Location Accuracy .....	359
Adding Client Surveys .....	360
Using VisualRF to Assess RF Environments .....	362
Viewing a Wireless User's RF Environment .....	362
Tracking Location History .....	363
Checking Signal Strength to Client Location .....	364
Viewing an AP's Wireless RF Environment .....	364
Viewing a Floor Plan's RF Environment .....	365
Viewing a Network, Campus, Building's RF Environment .....	366
Viewing Campuses, Buildings, or Floors from a List View .....	366
Viewing Campuses, Buildings, or Floors from a Tree View .....	367
Importing and Exporting in VisualRF .....	368
Exporting a campus .....	368
Importing from CAD .....	368
Batch Importing CAD Files .....	368
Requirements .....	368
Pre Processing Steps .....	368
Upload Processing Steps .....	369
Post Processing Steps .....	369
Sample Upload Instruction XML File .....	369
Common Importation Problems .....	370
Importing from an Alcatel-Lucent Controller .....	370
Pre-Conversion Checklist .....	370
Process on Controller .....	370
Process on OV3600 .....	370
VisualRF Location APIs .....	370
Sample Device Location Response .....	371
Sample Site Inventory Response .....	371
About VisualRF Plan .....	372
Overview .....	372
Minimum requirements .....	372

VisualRF Plan Installation .....	372
Differences between VisualRF and VisualRF Plan .....	372
<b>Index</b> .....	<b>374</b>



Thank you for choosing OmniVista 3600 Air Manager 8.0. OV3600 makes it easy and efficient to manage your wireless network by combining industry-leading functionality with an intuitive user interface, enabling network administrators and helpdesk staff to support and control even the largest wireless networks in the world.

The User Guide provides instructions for the configuration and operation of OmniVista 3600 Air Manager. This section includes the following topics:

- "A Unified Wireless Network Command Center" on page 13
- "Integrating OV3600 into the Network and Organizational Hierarchy " on page 15



---

Refer to the *OmniVista 3600 Air Manager 8.0 Installation Guide* for information on installing and upgrading OV3600.

---

## A Unified Wireless Network Command Center

OmniVista 3600 Air Manager 8.0 is the only network management software that offers you a single intelligent console from which to monitor, analyze, and configure wireless networks in automatic fashion. Whether your wireless network is simple or a large, complex, multi-vendor installation, OV3600 manages it all.

OV3600 supports hardware from leading wireless vendors including the following:

- Aruba Networks®
- Avaya™
- Cisco® (Aironet and WLC)
- Dell PowerConnect™ W-Series
- Enterasys®
- Juniper Networks®
- LANCOM Systems
- Meru Networks®
- Nortel Networks™
- ProCurve™ by HP®
- Proxim®
- Symbol™
- Trapeze™
- Tropos™

and many others.

The components of OV3600 are described in the next section.

### OV3600 Management Platform

The OV3600 Management Platform is the centerpiece of OV3600, offering the following functions and benefits:

- Core network management functionality:
  - Network discovery
  - Configuration of APs & controllers
  - Automated compliance audits

- Firmware distribution
- Monitoring of every device and user connected to the network
- Real-time and historical trend reports
- Granular administrative access
  - Role-based (for example, Administrator contrasted with Help Desk)
  - Network segment (for example, Retail Store network contrasted with Corporate HQ network)
- Flexible device support
  - Thin, thick, mesh network architecture
  - Multi-vendor support
  - Current and legacy hardware support

## Controller Configuration

OV3600 supports global and group-level configuration of Alcatel-Lucent AOS-W (AOS-W), the operating system, software suite, and application engine that operates mobility and centralizes control over the entire mobile environment. For a complete description of Alcatel-Lucent AOS-W, refer to the *Alcatel-Lucent AOS-W User Guide* for your specific version.

OV3600 consolidates and pushes global controller configurations from within OV3600.

Two pages in OV3600 support controller configuration:

- **Device Setup > Alcatel-Lucent Configuration** for global Alcatel-Lucent Configuration. This page is available if Use Global Alcatel-Lucent Configuration is set to Yes in **OV3600 Setup > General**.
- **Groups > Controller Config** for group-level configuration.

For additional information that includes a comprehensive inventory of all pages and settings that support Alcatel-Lucent Configuration, refer to the *OmniVista 3600 Air Manager 8.0 Controller Configuration Guide*.

## Instant Configuration

Alcatel-Lucent Instant (Instant) is a system of access points in a Layer 2 subnet. The IAPs are controlled by a single IAP that serves a dual role as an OAW-IAP and primary Virtual Controller (VC), eliminating the need for dedicated controller hardware. This system can be deployed through a simplified setup process appropriate for smaller organizations, or for multiple geographically dispersed locations without an on-site administrator.

With AirWave, IT can centrally configure, monitor, and troubleshoot Aruba Instant WLANs, upload new software images, track devices, generate reports, and perform other vital management tasks, all from a remote location.

Starting with OV3600 8.0, a Virtual Controller or Instant AP can authenticate to the OV3600 server using a pre-shared key, or using two-way certificate-based authentication using an SSL certificate sent from OV3600 to the Instant device. Virtual Controllers push data to OV3600 via HTTPS. If your enterprise has a security policy that restricts the use of port 443 for inbound communication, you can change the port OV3600 uses to communicate with Instant devices.

For additional information that includes a comprehensive inventory of all pages and settings that support Instant Configuration, refer to the *Alcatel-Lucent Instant in OmniVista 3600 Air Manager 8.0 Deployment Guide*.

## VisualRF

VisualRF is a powerful tool for monitoring and managing radio frequency (RF) dynamics within your wireless network, to include the following functions and benefits:

- Accurate location information for all wireless users and devices
- Up-to-date heat maps and channel maps for RF diagnostics
  - Adjusts for building materials
  - Supports multiple antenna types

- Floor plan, building, and campus views
- Visual display of errors and alerts
- Easy import of existing floor plans and building maps
- Planning of new floor plans and AP placement recommendations

## RAPIDS

RAPIDS is a powerful and easy-to-use tool for monitoring and managing security on your wireless network, to include the following features and benefits:

- Automatic detection of unauthorized wireless devices
- Rogue device classification that supports multiple methods of rogue detection
- Wireless detection:
  - Uses authorized wireless APs to report other devices within range.
  - Calculates and displays rogue location on VisualRF map.
- Wired network detection:
  - Discovers rogue APs located beyond the range of authorized APs/sensors.
  - Queries routers and switches.
  - Ranks devices according to the likelihood they are rogues.
  - Multiple tests to eliminate false positive results.
  - Provides rogue discovery that identifies the switch and port to which a rogue device is connected.

## Master Console and Failover

The OmniVista 3600 Air Manager Master Console and Failover tools enable network-wide information in easy-to-understand presentation, to entail operational information and high-availability for failover scenarios. The benefits of these tools include the following:

- Provides network-wide visibility, even when the WLAN grows to 50,000+ devices
- Executive Portal allows executives to view high-level usage and performance data
- Aggregated alerts
- Failover
  - Many-to-one failover
  - One-to-one failover

The Master Console and Failover servers can be configured with a **Device Down** trigger that generates an alert if communication is lost. In addition to generating an alert, the Master Console or Failover server can also send email or NMS notifications about the event.

## Integrating OV3600 into the Network and Organizational Hierarchy

OV3600 generally resides in the NOC and communicates with various components of your WLAN infrastructure. In basic deployments, OV3600 communicates solely with indoor wireless access points (and WLAN controllers over the wired network). In more complex deployments, OV3600 seamlessly integrates and communicates with authentication servers, accounting servers, TACACS+ servers, LDAP servers, routers, switches, network management servers, wireless IDS solutions, helpdesk systems, indoor wireless access points, mesh devices. OV3600 has the flexibility to manage devices on local networks, remote networks, and networks using Network Address Translation (NAT). OV3600 communicates over-the-air or over-the-wire using a variety of protocols.

The power, performance, and usability of OV3600 become more apparent when considering the diverse components within a WLAN. [Table 1](#) itemizes some example network components.

**Table 1: Components of a WLAN**

Component	Description
Autonomous AP	Standalone device which performs radio and authentication functions
Thin AP	Radio-only device coupled with WLAN controller to perform authentication
WLAN switch	Used in conjunction with thin APs to coordinate authentication and roaming
NMS	Network Management Systems and Event Correlation (OpenView, Tivoli, and so forth)
RADIUS Authentication	RADIUS authentication servers (Funk, FreeRADIUS, ACS, or IAS)
RADIUS Accounting	OV3600 itself serves as a RADIUS accounting client
Wireless Gateways	Provide HTML redirect and/or wireless VPNs
TACACS+ and LDAP	Used to authenticate OV3600 administrative users
Routers/Switches	Provide OV3600 with data for user information and AP and Rogue discovery
Help Desk Systems	Remedy EPICOR
Rogue APs	Unauthorized APs not registered in the OV3600 database of managed APs

## Administrative Roles

The flexibility of OV3600 enables it to integrate seamlessly into your business hierarchy as well as your network topology. OV3600 facilitates various administrative roles to match each individual user's role and responsibility:

- A Help Desk user can be given read-only access to monitoring data without being permitted to make configuration changes.
- A U.S.-based network engineer can be given read-write access to manage device configurations in North America, but not to control devices in the rest of the world.
- A security auditor can be given read-write access to configure security policies across the entire WLAN.
- NOC personnel can be given read-only access to monitoring all devices from the Master Console.



This section contains the following procedures to deploy initial OV3600 configuration:

- "Formatting the Top Header" on page 17
- "Customizing Columns in Lists" on page 19
- "Resetting Pagination Records" on page 20
- "Using the Pagination Widget" on page 21
- "Using Export CSV for Lists and Reports" on page 21
- "Defining Graph Display Preferences" on page 22
- "Customizing the Dashboard" on page 22
- "Setting Severe Alert Warning Behavior" on page 28
- "Defining General OV3600 Server Settings" on page 29
- "Defining OV3600 Network Settings" on page 41
- "Creating OV3600 User Roles" on page 45
- "Creating OV3600 Users" on page 42
- "Configuring Login Message, TACACS+, RADIUS, and LDAP Authentication" on page 50
- "Enabling OV3600 to Manage Your Devices" on page 59
- "Setting Up Device Types" on page 66
- "Configuring Cisco WLSE and WLSE Rogue Scanning" on page 66
- "Configuring ACS Servers" on page 71
- "Integrating OV3600 with an Existing Network Management Solution (NMS) " on page 73
- "Auditing PCI Compliance on the Network" on page 74
- "Deploying WMS Offload" on page 78



---

Additional configurations are available after basic configuration is complete.

---

## Before You Begin


Remember to complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 installation.

## Formatting the Top Header

The OmniVista 3600 Air Manager interface centers around a horizontal row of tabs with nested subtabs.

A row of statistics hyperlinks called Top Header Stats above the tabs represents commonly used subtabs. These hyperlinks provide the ability to view certain key statistics by mousing over, such as number and type of **Down** devices, and serve as shortcuts to frequently viewed subtabs. [Figure 1](#) illustrates the navigation bar. More information on hyperlinks, tabs, and subtabs is available in the *OmniVista 3600 Air Manager 8.0 Installation Guide*.

**Figure 1: Navigation Bar Displaying Down Device Statistics**

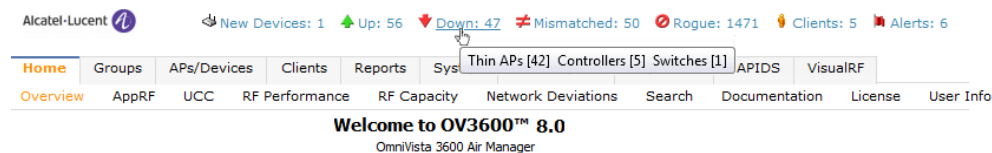

You can control the **Top Header Stats** links that appear from the **OV3600 Setup > General** page, as described in "Defining General OV3600 Server Settings" on page 29. Top Header Stats can also be customized for individual users on the **Home > User Info** page. There you can select the statistics to display for certain device types and override the OV3600 Setup page.

All possible display options for users are show in Figure 2.




---

A confirmation message does not appear when you make modifications to the Top Header Stats.

---

Refer to "Configuring Your Own User Information with the Home > User Info Page" on page 272 for more information.

**Figure 2: Home > User Info Top Header Stats Display Options**

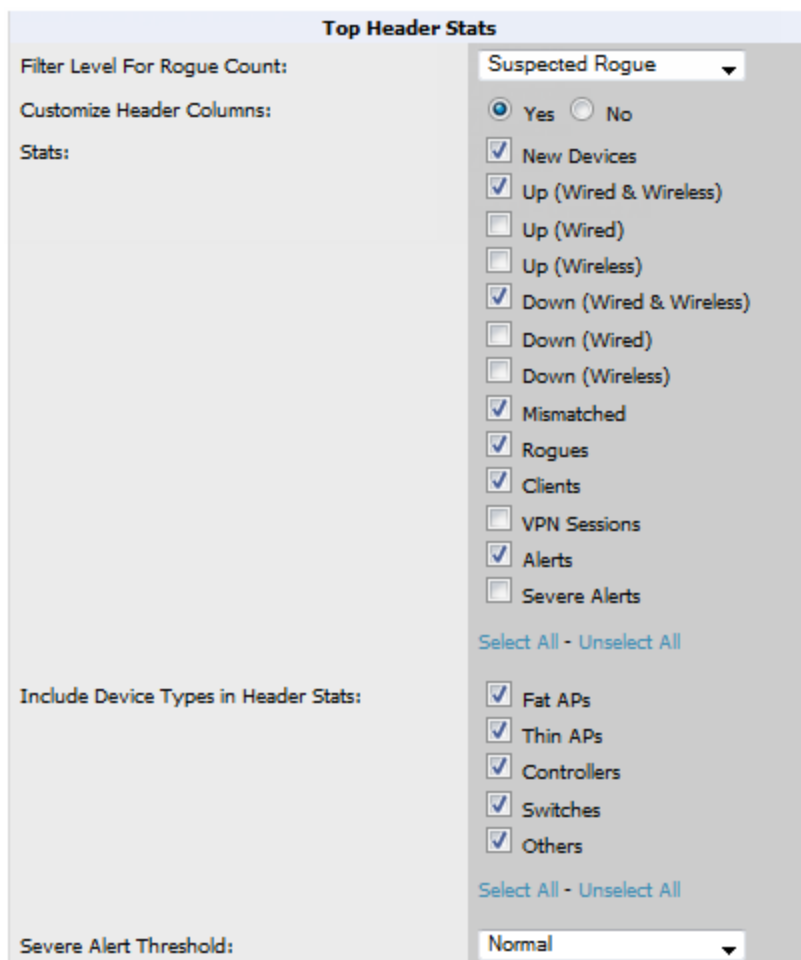

You can also set the severity level of critical alerts displayed for a user role. For details including a description of what constitutes a severe alert, see "Setting Severe Alert Warning Behavior" on page 28.

## Customizing Columns in Lists

Customize the columns for any list table selecting **Choose Columns**, as shown in the figure below. Use the up/down arrows to change the order in which the column heads appear.

**Figure 3: Choose Columns Drop down List**

**Connected Clients**

1-22 ▼ of 22 Connected Clients Page 1 ▼ of 1 Reset filters **Choose columns** Choose columns for roles

Username	Device Type ▼	Save   Cancel	ID ▼
Search		<input checked="" type="checkbox"/> Username	↕
awilson	iPhone	<input checked="" type="checkbox"/> Device Type	↕ ersphere-wpa2
lbrooks	OS X	<input checked="" type="checkbox"/> MAC Address	↕ ersphere-wpa2
pgollapudi	iPhone	<input checked="" type="checkbox"/> SSID	↕ ersphere-wpa2
rikinder.mahal@protiviti.com	Windows 7	<input checked="" type="checkbox"/> VLAN	↕ JBA-VISITOR
ssellers	Android	<input checked="" type="checkbox"/> Interface	↕ ersphere-wpa2
pgollapudi	iPad	<input checked="" type="checkbox"/> Association Time	↕ ersphere-wpa2
ARUBANETWORKS\sgiri	Windows 7	<input checked="" type="checkbox"/> Duration	↕ ersphere-wpa2
pgollapudi	OS X	<input checked="" type="checkbox"/> Auth. Type	↕ ersphere-wpa2
cpurohit@arubanetworks.com	OS X	<input checked="" type="checkbox"/> Cipher	↕ ersphere-wpa2
gwatts	iPhone	<input checked="" type="checkbox"/> Auth. Time	↕ ersphere-wpa2
ARUBANETWORKS\sarvidson	Windows 7	<input checked="" type="checkbox"/> Sig. Qual.	↕ ersphere-wpa2
ARUBANETWORKS\tle	Windows 7	<input checked="" type="checkbox"/> Usage	↕ ersphere-wpa2
gwatts	iPad	<input checked="" type="checkbox"/> Goodput	↕ ersphere-wpa2
ARUBANETWORKS\ssellers	Windows 7	<input checked="" type="checkbox"/> Speed	↕ ersphere-wpa2
ARUBANETWORKS\danderl	Windows 7	<input checked="" type="checkbox"/> LAN IP Addresses	↕ ersphere-wpa2
ARUBANETWORKS\sburke	Windows 7	<input checked="" type="checkbox"/> LAN Hostnames	↕ ersphere-wpa2
ARUBANETWORKS\osuciadi	Windows 7	<input checked="" type="checkbox"/> Notes	↕ JBA-VISITOR
ARUBANETWORKS\echao	Windows 7	<input type="checkbox"/> Connection Mode	
ARUBANETWORKS\awilson	Windows 7		
ARUBANETWORKS\dmooore	Windows 7		
ARUBANETWORKS\ymarquez	Windows 7		
-	Hewlett-Packard Company		

1-22 ▼ of 22 Connected Clients Page 1 ▼ of 1 Reset filters

More information about the universal list elements is available in "Common List Settings" in the *OmniVista 3600 Air Manager 8.0 Installation Guide*.

You can also control which column heads appear for each user role. Navigate to the **Home > User Info** page, and then select **Yes** in the **Customize Columns for Other Roles** field. This exposes the **Choose Columns for Roles** drop down menu in all tables shown in [Figure 4](#).

The first column shows the user roles that were customized, if any. The second column allows you to establish left-to-right columns and order them using the arrows.

**Figure 4: Table with Choose Columns for Roles Menu Selected**

**Connected Clients**

1-22 ▼ of 22 Connected Clients Page 1 ▼ of 1 Reset filters Choose columns **Choose columns for roles** Export CSV

Username	Device Type ▼	Save   Cancel	
awilson	iPhone	<input checked="" type="checkbox"/> Username	<input type="checkbox"/> Admin Team
lbrooks	OS X	<input checked="" type="checkbox"/> Device Type	<input type="checkbox"/> ADP Admin
pgollapudi	iPhone	<input checked="" type="checkbox"/> MAC Address	<input type="checkbox"/> aicu-class-rol
rikinder.mahal@protiviti.com	Windows 7	<input checked="" type="checkbox"/> SSID	<input type="checkbox"/> AMC
ssellers	Android	<input checked="" type="checkbox"/> VLAN	<input type="checkbox"/> AMP Administration
pgollapudi	iPad	<input checked="" type="checkbox"/> Interface	<input type="checkbox"/> AMPViewOnly
ARUBANETWORKS\sgiri	Windows 7	<input checked="" type="checkbox"/> Association Time	<input type="checkbox"/> aruba-corp-users-via-radius
pgollapudi	OS X	<input checked="" type="checkbox"/> Duration	<input type="checkbox"/> Baltimore-ops
cpurohit@arubanetworks.com	OS X	<input checked="" type="checkbox"/> Auth. Type	<input type="checkbox"/> b-bridge Admin
gwatts	iPhone	<input checked="" type="checkbox"/> Cipher	<input type="checkbox"/> CHELSEA-FC Admin
ARUBANETWORKS\sarvidson	Windows 7	<input checked="" type="checkbox"/> Auth. Time	<input type="checkbox"/> client
ARUBANETWORKS\tle	Windows 7	<input checked="" type="checkbox"/> Sig. Qual.	<input type="checkbox"/> customer Irole
gwatts	iPad	<input checked="" type="checkbox"/> Usage	<input type="checkbox"/> DQ-DEMO Admin
ARUBANETWORKS\ssellers	Windows 7	<input checked="" type="checkbox"/> Goodput	<input type="checkbox"/> DQ-EDMO Admin
ARUBANETWORKS\danderl	Windows 7	<input checked="" type="checkbox"/> Speed	<input type="checkbox"/> federal
ARUBANETWORKS\sburke	Windows 7	<input checked="" type="checkbox"/> LAN IP Addresses	<input type="checkbox"/> GENERALITAT Admin
ARUBANETWORKS\osuciadi	Windows 7	<input checked="" type="checkbox"/> LAN Hostnames	<input type="checkbox"/> Guest-Sponsor
ARUBANETWORKS\echao	Windows 7	<input checked="" type="checkbox"/> Notes	<input type="checkbox"/> Help-Desk
ARUBANETWORKS\jwilson	Windows 7	<input type="checkbox"/> Connection Mode	<input type="checkbox"/> helpdeskonly
ARUBANETWORKS\dmooore	Windows 7		<input type="checkbox"/> kbc Admin
ARUBANETWORKS\ymarquez	Windows 7		
-	Hewlett-Packard Company		

1-22 ▼ of 22 Connected Clients Page 1 ▼ of 1 Reset filters

## Resetting Pagination Records

To control the number of records in any individual list, select the link with **Records Per Page** mouseover text at the top left of the table, as shown in Figure 5. OV3600 remembers each list's pagination preferences.

**Figure 5: Records Per Page Drop Down Menu**

**Generated reports:**

Visit the [Report Definitions](#) page to run new reports.

20 records per page ▼ of 60 Reports Page 1 ▼ of 3 > | Reset filters Choose columns Export CSV

	Title	Type	Subject
All records	Search	PCI Compliance	
Custom...			
10 records per page	Daily PCI Compliance Report	PCI Compliance	
<b>20 records per page</b>	Daily PCI Compliance Report	PCI Compliance	
30 records per page	Daily PCI Compliance Report	PCI Compliance	
40 records per page	Daily PCI Compliance Report	PCI Compliance	
50 records per page	Daily PCI Compliance Report	PCI Compliance	
<input type="checkbox"/>	5/18/2013 12:20 AM Daily PCI Compliance Report	PCI Compliance	
<input type="checkbox"/>	5/17/2013 12:19 AM Daily PCI Compliance Report	PCI Compliance	
<input type="checkbox"/>	5/16/2013 12:18 AM Daily PCI Compliance Report	PCI Compliance	
<input type="checkbox"/>	5/15/2013 12:20 AM Daily PCI Compliance Report	PCI Compliance	

To reset all Records Per Page preferences, click the **Reset** reset button in the **Display Preferences** section of the **Home > User Info** page, as shown in Figure 6.

Figure 6: Home > User Info > Display Preferences section

**Display Preferences**

Default Number of Records per List: 20 records per page

Reset List Preferences:

Customize Columns for Other Roles:  Yes  No

Console Refresh Rate: 5 minutes

Idle Timeout (5 mins to 240 mins): 60

## Using the Pagination Widget

The pagination widget is located at the top and bottom of every list table, as shown in Figure 7.

Figure 7: Pagination Widget

**Generated reports:**

Visit the [Report Definitions page](#) to run new reports.

1-20 of 60 Reports Page 1 of 3 > > | [Reset filters](#) [Choose columns](#) [Export CSV](#)

	Generation Time	Title	Type
<input type="checkbox"/>	5/21/2013 12:19 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/20/2013 12:20 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/19/2013 12:20 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/18/2013 12:20 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/17/2013 12:19 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/16/2013 12:18 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/15/2013 12:20 AM	Daily PCI Compliance Report	PCI Compliance
<input type="checkbox"/>	5/14/2013 12:17 AM	Daily PCI Compliance Report	PCI Compliance

Use the down arrow next to **Page 1** to see all the page numbers for that table in a drop down menu. From here, you can jump to any portion of the table. Select the > symbol to jump to the next page, and >| to jump to the last page.

## Using Export CSV for Lists and Reports

Some tables have a **Export CSV** setting you can use export the data as a spreadsheet. See Figure 8 for an example of a list with the **Export CSV** option selected.

Figure 8: List with CSV Export Selected

1-4 of 135 APs/Devices Page 1 of 34 > > | [Choose Columns](#) [CSV Export](#)


	Device	Type	Version	Users
	3Com-WX1200	3Com WX1200	7.0.4.4.0	0
	Alcatel-Lucent-4308	Alcatel-Lucent OAW-4308	5.0.1.0	0
	RackPDU	APC AP7900	v3.7.0	0
	sr-pdu7	APC AP7900	v3.7.0	0

OV3600 also enables CSV exporting of all report types. For more information, see "Exporting Reports to XML, CSV, or PDF" on page 324.

## Defining Graph Display Preferences

Many of the graphs in OV3600 are Highcharts, which allow you to adjust the graph settings attributes as shown in Figure 9.

**Figure 9:** Interactive Graphs on the **Home > Overview** Page

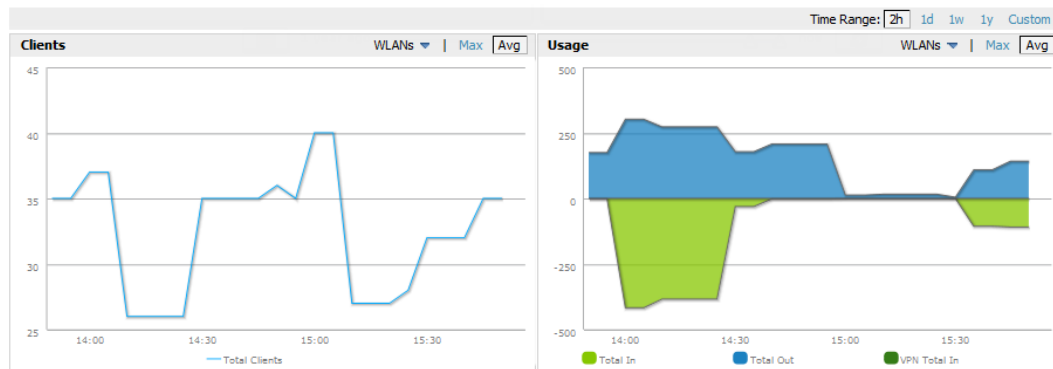

Highcharts are built with JavaScript, so the graphs can run directly through your browser without the need for additional client-side plugins. This makes it possible to view your OV3600 charts on a mobile device.

These charts can be used and customized as follows.

- A Time Range selector in the upper right portion of the charts (including pop-up charts) allows you to select a common or a custom date range for your data. The preconfigured ranges for OV3600 charts are current 2 hours, 1 day, 1 week, and 1 year.
- Drop-down menus are available for viewing client and usage for specific SSIDs and/or all SSIDs. A search field is available to help you quickly find a specific WLAN.


You can select up to six options from each drop-down menu. Once selected, each option will appear in the color-coded legend below the chart. Clicking on an option in this legend will disable or enable that information in the graph. Note that even if an option is disabled from viewing in the graph, that option will still remain in the legend until you deselect it from the drop-down menu.

- Max and Avg options allow you to change the chart view to show the maximum or average client and usage information.
- Plot points display within the chart at varying intervals, depending on the selected time range. Tooltips and a plot line appear as you hover over each plot point, showing you the detailed information for that specific time.
- Click on any chart to view a pop-up version. In this version, you can easily zoom in on a range of data by using your mouse to drag a rectangle in the chart. While you are zoomed in, a **Reset zoom** button appears, enabling you to return to the original view. The pop-up charts also include a legend that displays the Last, Min, Max, and Avg values for the selected graph.
- Some charts include a drop-down option next to the graph title. For example, on the **APs/Devices > Monitor** page for Radio Statistics, you can select the drop-down beside the graph title to view a graph for Client, Usage, Radio Channel, Radio Noise, Radio Power, Radio Errors, and 802.11 Counters information. In prior versions of OV3600, these graphs appeared as separate tabs.

## Customizing the Dashboard


You can rearrange or remove widgets appearing on the **Home > Overview** dashboard by selecting the **Customize** link to the right of this window, as shown in Figure 10.

**Figure 10: Customize Button on the Home > Overview Page**



The **Customize** workspace that appears is shown in Figure 11.

**Figure 11: Customize Overview Page**

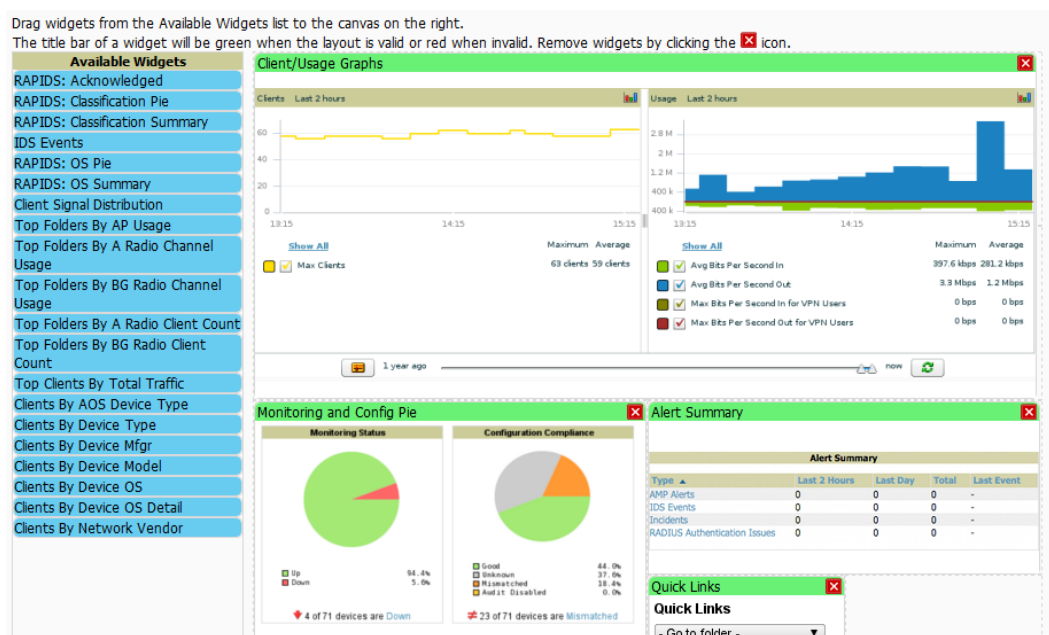

## Adding Widgets

The **Home > Overview** page displays the currently selected widgets (charts/graphs). You can change the widgets on this page by selecting the **Customize** link in the upper-right corner.

The **Available Widgets** section on the left holds all available graphical elements (widgets). Select any blue widget tile with a verbal description enclosed, and it immediately turns into a graphical element with a description.

Drag the widgets you want to appear on the **Home > Overview** dashboard across to the gridlines and arrange them in the right section, within the gridlines. A widget snaps back to the nearest available gridline if you drop it across two or more lines and turns red if you attempt to place it over gridlines already occupied by widgets. Widgets with a green top banner are properly placed and set to appear when you select **Save**. Widgets that remain in the left section will not appear; although they can be reinstated by selecting **Restore Defaults**.

## Available Widgets

Table 2 describes the list of available widgets along with a description for each. Note that when a widget is enabled, the information that displays can vary based on the user's permission level. Certain roles, for example, limit the top folder that a user can view.

**Table 2: Available Widgets**

Widget	Description
Client/Usage Graphs	<p>The <b>Client</b> graph is enabled by default and, by default, shows the maximum number of attached clients over the last two hours. Select the <b>Show All</b> link to view more specific client information on the graph, such as the total and average clients for a specific SSID, the maximum VPN sessions, etc. The available check boxes within this graph are determined by the SSIDs that OV3600 is aware of from polling the device.</p> <p>The <b>Usage</b> graph is enabled by default and, by default, shows the average bits-per-second in/out information and average VPN in/out information. Select the <b>Show All</b> link to view usage information for specific SSIDs. The available checkboxes within this graph are determined by by the SSIDs that OV3600 is aware of from polling the device.</p> <p>The information in these graphs is color coded to match the selected check boxes.</p>
Monitoring and Config Pie	<p>The <b>Monitoring Status</b> pie shows the percentage of total devices that are up and the number and percentage of devices that are currently down. Clicking within this pie chart takes you to the <b>APs/Devices &gt; Down</b> page.</p> <p>The <b>Configuration Compliance</b> pie shows the percentage of devices that are mismatched, good, unknown, and those with auditing disabled. It also provides a summary of the total number of devices that are mismatched. Clicking within this pie chart takes you to the <b>APs/Devices &gt; Mismatch</b> page.</p> <p>These pie charts are enabled by default.</p>
Alert Summary	<p>The <b>Alert Summary</b> table is enabeld by default and provides the number of OV3600 alerts, IDS events, and RADIUS authentication issues over the last 2 hours, the last 24 hours, and the total since the last OV3600reboot.</p> <ul style="list-style-type: none"> <li>● Click on <b>OV3600 Alerts</b> to drill down to more detailed alert information. This information displays in the current page. You can return to the <b>Alert Summary</b> graph by selecting the <b>Home Overview</b> link.</li> <li>● Click on <b>IDS Events</b> to drill to more detailed event information. This link takes you to the <b>RAPIDS &gt; IDS Events</b> page.</li> <li>● Click on <b>RADIUS Authentication Issues</b> to drill to more detailed RADIUS authentication information. This information displays in the current page. You can return to the <b>Alert Summary</b> graph by selecting the <b>Home Overview</b> link.</li> </ul>
Quick Links	<p>The <b>Quick Links</b> section is enabled by default. This section provides the user with easy navigation to a specific folder, group, report, or common task.</p>
RAPIDS: Acknowledged	<p>The <b>Acknowledged RAPIDS Devices</b> pie chart shows the percentage of acknowledged and unacknowledged RAPIDS that the user has visibility into. The RAPIDS information appears from the moment a rogue is discovered until it is deleted. Ignored rogues, however, are not included in this chart.</p> <p>This chart also displays on the <b>RAPIDS &gt; Overview</b> page.</p>



**Table 2: Available Widgets (Continued)**

Widget	Description
RAPIDS: Classification Pie	<p>The <b>RAPIDS: Classification Pie</b> shows the percentage of devices classified as Valid, Suspected Neighbor, Suspected Valid, Suspected Rogue, Rogue, and Neighbor that are attached to OV3600. The RAPIDS information appears from the moment a rogue is discovered until it is deleted. Ignored rogues, however, are not included in this chart.</p> <p>This pie chart can also be viewed on the <b>RAPIDS &gt; Overview</b> page.</p>
RAPIDS: Classification Summary	<p>The <b>RAPIDS: Classification Summary</b> table shows the number of devices classified as Valid, Suspected Valid, Neighbor, Suspected Neighbor, Suspected Rogue, Rogue, and Unclassified that are attached to OV3600. In addition, contained rogue information will appear if <b>Manage rogue AP containment</b> is set to <b>Yes</b> on the <b>RAPIDS &gt; Setup</b> page.</p> <p>The RAPIDS information appears from the moment a rogue is discovered until it is deleted. Note that ignored rogues are not included in this chart.</p> <p>This table can also be viewed on the <b>RAPIDS &gt; Overview</b> page.</p>
IDS Events	<p>The <b>IDS Events</b> table shows the number and type of attacks logged by the intrusion detection system over the last 2 hours, the last 24 hours, and the total since the last OV3600 reboot. This is the same table that displays on the <b>RAPIDS &gt; Overview</b> page.</p>
RAPIDS: OS Pie	<p>The <b>RAPIDS: OS Pie</b> chart shows the top 9 rogue devices by OS, Others, Unknown, and Not Scanned. The RAPIDS information appears from the moment a rogue is discovered until it is deleted. Note that ignored rogues are not included in this chart.</p> <p>This pie chart can also be viewed on the <b>RAPIDS &gt; Overview</b> page.</p>
RAPIDS: OS Summary	<p>The <b>RAPIDS: OS Summary</b> table shows the top 9 rogue devices by OS, Others, Unknown, and Not Scanned. The RAPIDS information appears from the moment a rogue is discovered until it is deleted. Note that ignored rogues are not included in this chart.</p> <p>This table can also be viewed on the <b>RAPIDS &gt; Overview</b> page.</p>
Top Folders By AP Usage	<p>This chart lists the folders and the number of APs in each folder whose usage is greater than the cutoff (or usage threshold). The cutoff represents 75% of the maximum usage, where the maximum usage is the AP with the highest usage regardless of the folder in which it resides. The cutoff value is displayed within the title, and this value can vary. The chart takes into account approved APs with radios based on the last 24 hours. In addition, this chart is updated every hour.</p>

**Table 2: Available Widgets (Continued)**

Widget	Description
Top Folders By A Radio Channel Usage	This chart shows the folders and the number of A radios (5GHz) in each folder whose channel usage is greater than the cutoff (or usage threshold) as measured by Mbps. This cutoff is on the on the <b>OV3600 Setup &gt; General</b> page using the <b>Configure Channel Busy Threshold</b> option. If this option is not configured, then the cutoff is 75% of the 'maximum,' where the 'maximum' refers to the AP that has the highest usage regardless of the folder in which it resides. The cutoff value is displayed within the title, and this value can vary. This chart takes into account approved APs with 'A' radios based on the last 24 hours. In addition, this chart is updated every hour.
Top Folders By BG Radio Channel Usage	This chart shows the folders and the number of BG radios (2.4GHz) in each folder whose channel usage is greater than the cutoff (or usage threshold) as measured by Mbps. This cutoff is on the on the <b>OV3600 Setup &gt; General</b> page using the <b>Configure Channel Busy Threshold</b> option. If this option is not configured, then the cutoff is 75% of the 'maximum,' where the 'maximum' refers to the AP that has the highest usage regardless of the folder in which it resides. The cutoff value is displayed within the title, and this value can vary. This chart takes into account approved APs with 'BG' radios based on the last 24 hours. In addition, this chart is updated every hour.
Top Folders By A Radio Client Count	This chart shows the folders and the number of A radios (5GHz) in each folder whose client count is greater than the cutoff. The cutoff represents 75% of the 'maximum,' where the 'maximum' is the radio that has the highest client count regardless of the folder. The cutoff value is displayed within the title and can vary. This chart takes into account approved APs with A radios based on the last 24 hours. In addition, this chart is updated every hour.
Top Folders By BG Radio Client Count	This chart shows the folders and the number of BG radios (2.4GHz) in each folder whose client count is greater than the cutoff. The cutoff represents 75% of the 'maximum,' where the 'maximum' is the radio that has the highest client count regardless of the folder. The cutoff value is displayed within the title and can vary. This chart takes into account approved APs with BG radios based on the last 24 hours. In addition, this chart is updated every hour.
Top Clients By Total Traffic	The widget looks at currently connected clients as well has client historical information over the past 24 hours and then displays the top 10 clients with the must usage. You can click on a MAC address to view more information about any of the clients that display on this table. This table is updated every hour.
Clients By AOS Device Type	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the AOS device type.
Clients By Device Type	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the device type (such as a specific operating system or smart phone type).
Clients By Device Mfgr	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the client manufacturer.

**Table 2: Available Widgets (Continued)**

Widget	Description
Clients By Device Model	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the device model (such as the smart phone type).
Clients By Mfgr & Model	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the client manufacturer and model.
Clients By Device OS	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the device operating system (such as Windows or Android).
Clients By Device OS Detail	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on the device operating system version (such as Windows NT 6.1).
Clients By Network Vendor	This pie chart shows the percentage of clients that have attached to OV3600 over the last 24 hours based on each device's network interface vendor.
Client Signal Distribution	The <b>Client Signal Distribution</b> chart shows the number of attached devices that have a signal quality within a set of ranges.

## Search Preferences

For each user, you can customize the search results to display only desired categories of matches on the **Home > User Info** page. Go to the **Search Preferences** section and select the desired search type from the **Search Method** drop down. This search type will be used when a user types an entry in the Search field and then clicks Enter without selecting a specific search type.

- Use System Defaults: The Search Method will be based on the system-wide configuration setting. This method is configured on the **OV3600 Setup > General** page.
- Active clients + historical clients (exact match) + all devices: Commonly referred to as Quick Search, this looks at all active and historical clients and all devices. This search is not case-sensitive. The results of this search display in a popup window rather than on the **Home > Search** page. This popup window includes top-level navigation that allows you to filter the results based on Clients, APs, Controllers, and Switches.
- Active clients + all categories: This looks at all active clients (not historical) and all categories. This search is not case-sensitive. This search returns results on partial matches for usernames if that username is included in either the beginning or the end of a user name string
- Active clients + all categories (exact match): This looks at all active clients (not historical) and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.
- Active + historical clients + all categories: This looks at all active and historical clients and all categories. This search is not case-sensitive.
- Active + historical clients + all categories (exact match): This looks at all active and historical clients and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.




---

A confirmation message does not appear after you make modifications to Search Preferences.

---

Figure 12: Home > User Info Search Preferences

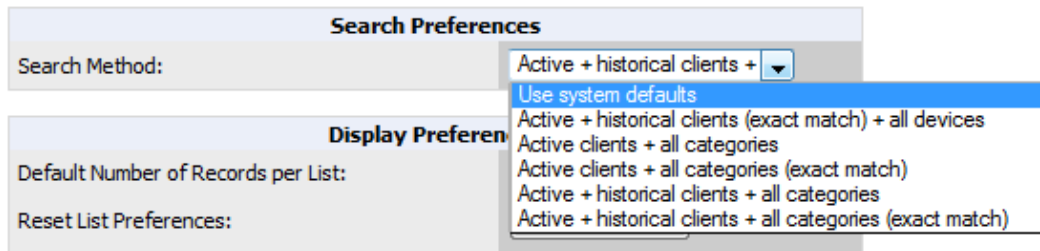

## Setting Severe Alert Warning Behavior

You can control the alert levels you can see on the **Alerts** top header stats link from the **Home > User Info** page. The **Severe Alert Threshold** determines the severity level that results in a Severe Alert. Specify either Normal, Warning, Minor, Major, or Critical as the severity alert threshold value. These threshold values are tied to triggers that are created on the **System > Triggers** page. For example, if a trigger is defined to result in a Critical alert, and if the Severe Alert Threshold here is defined as Major, then the list of Severe Alerts will include all Major and Critical alerts. Similarly, if this value is set to Normal, which is the lowest threshold, then the list of Severe Alerts will include all alerts.

When a Severe Alert exists, a new component named **Severe Alerts** will appear at the right of the **Status** field in bold red font. This field is hidden if there are no Severe Alerts. In addition, only users who are enabled for viewing Severe Alerts on the **Home > User Info** page can see severe alerts.

The **Severe Alert Threshold** drop down menu, located in the **Top Header Stats** section of the **Home > User Info** page is shown in [Figure 13](#).

**Figure 13:** Home > User Info > Severe Alert Threshold Drop Down Menu



## Defining General OV3600 Server Settings

This section describes all pages accessed from the **OV3600 Setup** tab. It also describes two pages in the **Device Setup** tab: the **Communication** and **Upload Files** pages. After required and optional configuration tasks in this chapter are complete, continue to later chapters in this document to create and deploy device groups and device configuration and discovery on the network.

Refer to the following topics for configuration information:

- "OV3600 Setup > General" on page 29
- "Defining OV3600 Network Settings" on page 41
- "OV3600 User Roles" on page 44
- "Creating OV3600 Users" on page 42
- "Configuring Login Message, TACACS+, RADIUS, and LDAP Authentication" on page 50
- "Enabling OV3600 to Manage Your Devices" on page 59
- "Setting Up Device Types" on page 66

### OV3600 Setup > General

The first step in configuring OV3600 is to specify the general settings for the OV3600 server. [Figure 14](#) illustrates the **OV3600 Setup > General** page. Select **Save** when the **General Server** settings are complete and whenever making subsequent changes. These settings are applied globally across the product (for all users).

Refer to the following sections for information about the available settings:

- "General Settings" on page 30
- "Automatic Authorization Settings" on page 31
- "Top Header Settings" on page 32
- "Search Method" on page 32
- "Home Overview Preferences" on page 32
- "Display Settings" on page 33
- "Device Configuration Settings" on page 34
- "OV3600 Features" on page 34
- "External Logging Settings" on page 35
- "Historical Data Retention Settings" on page 36
- "Firmware Upgrade Defaults" on page 37
- "Additional OV3600 Services" on page 38
- "Performance Settings" on page 39

**Figure 14:** *OV3600 Setup > General Page Illustration (Partial View)*

Setting	Default	Description
System Name	OmnVista 3600 Air Manager	Defines your name for your OV3600 server, with a maximum limit of 20 alphanumeric characters.

## General Settings

Browse to the **OV3600 Setup > General** page, locate the **General** section, and enter the information described in [Table 3](#):

**Table 3:** *OV3600 Setup > General > General Section Fields and Default Values*

Setting	Default	Description
System Name		Defines your name for your OV3600 server, with a maximum limit of 20 alphanumeric characters.

**Table 3: OV3600 Setup > General > General Section Fields and Default Values (Continued)**

Setting	Default	Description
Default Group	Access Points	Sets the device group that this OV3600 server uses as the default for device-level configuration. Select a device group from the drop-down menu. A group must first be defined on the <b>Groups &gt; List</b> page to appear in this drop-down menu. For additional information, refer to " <a href="#">Configuring and Using Device Groups</a> " on page 80.
Device Configuration Audit Interval	Daily	This setting defines the interval of queries which compares actual device settings to the Group configuration policies stored in the OV3600 database. If the settings do not match, the AP is flagged as mismatched and OV3600 sends an alert via email, log, or SNMP. <b>NOTE:</b> Enabling this feature with a frequency of Daily or more frequently is recommended to ensure that your AP configurations comply with your established policies. Specifying <b>Never</b> is not recommended.
Automatically repair misconfigured devices	Disabled	If enabled, this setting automatically reconfigures the settings on the device when the device is in <b>Manage</b> mode and OV3600 detects a variance between actual device settings and the Group configuration policy in the OV3600 database.
Send debugging messages	Enabled	If enabled, OV3600 automatically emails any system errors to Alcatel-Lucent support to assist in debugging.
Nightly Maintenance Time (00:00 - 23:59)	04:15	Specifies the local time of day OV3600 should perform daily maintenance. During maintenance, OV3600 cleans the database, performs backups, and completes a few other housekeeping tasks. Such processes should not be performed during peak hours of demand.

### Automatic Authorization Settings

On the **OV3600 Setup > General** page, locate the **Automatic Authorization** section. These settings allow you to control the conditions by which devices are automatically authorized into AP groups and folders. OV3600 validates the Folder and Group to ensure that both settings have been set to valid drop down options. [Table 4](#) describes the settings and default values in this section.

**Table 4: OV3600 Setup > General > Automatic Authorization Fields and Default Values**

Setting	Default	Description
Add New Controllers and Autonomous Devices Location	New Device List	Globally add new controllers and autonomous devices to: <ul style="list-style-type: none"> <li>The New Device List (located in <b>APs/Devices &gt; New</b>).</li> <li>The same folder and group as the discovering device.</li> <li>The same group and folder of their closest IP neighbor on the same subnet.</li> <li>Choose a group and folder. If you select this option, enter the folder/group in the <b>Auto Authorization Group</b> and <b>Auto Authorization Folder</b> fields that display.</li> </ul> <b>NOTE:</b> This setting can be overridden in <b>Groups &gt; Basic</b> .

**Table 4: OV3600 Setup > General > Automatic Authorization Fields and Default Values (Continued)**

Setting	Default	Description
Add New Thin APs Location	New Device List	<p>Globally add new thin APs to:</p> <ul style="list-style-type: none"> <li>• The <b>New Devices</b> list.</li> <li>• The same folder and group as the discovering device.</li> <li>• The same group and folder of their closest IP neighbor on the same subnet.</li> <li>• Choose a group and folder. If you select this option, enter the folder/group in the <b>Auto Authorization Group</b> and <b>Auto Authorization Folder</b> fields that display.</li> </ul> <p><b>NOTE:</b> This setting can be overridden in <b>Groups &gt; Basic</b>.</p>
Automatically Authorized Virtual Controller Mode	Manage Read/Write	Specify whether Virtual Controller mode for Instant APs will be in Manage Read/Write mode or Monitor Only mode.

### Top Header Settings

On the **OV3600 Setup > General** page, locate the **Top Header** section to select the Top Header Stats to be displayed at the top of the interface.

### Search Method

On the **OV3600 Setup > General** page, locate the **Search Method** section. Select one of the following drop down options as the system-wide default search method. This default search type will be used when a user types an entry in the Search field and then clicks Enter without selecting a specific search type.

- Active clients + historical clients (exact match) + all devices: Commonly referred to as Quick Search, this looks at all active and historical clients and all devices. This search is not case-sensitive. The results of this search display in a popup window rather than on the **Home > Search** page. This popup window includes top-level navigation that allows you to filter the results based on Clients, APs, Controllers, and Switches.
- Active clients + all categories: This looks at all active clients (not historical) and all categories. This search is not case-sensitive.
- Active clients + all categories (exact match): This looks at all active clients (not historical) and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.
- Active + historical clients + all categories: This looks at all active and historical clients and all categories. This search is not case-sensitive.
- Active + historical clients + all categories (exact match): This looks at all active and historical clients and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.

Per-user search preferences can be set in the **Home > User Info** page; refer to "[Search Preferences](#)" on page 27.

### Home Overview Preferences

On the **OV3600 Setup > General** page, locate the **Home Overview Preferences** section. [Table 5](#) describes the settings and default values in this section.



**Table 5: OV3600 Setup > General > Home Overview Preferences Fields and Default Values**

Setting	Default	Description
Configure Channel Busy Threshold	Yes	Whether you want to configure the threshold at which a channel is considered to be busy at the <b>Top Folders By Radio Channel Usage</b> Overview widget.
Channel Busy Threshold (%)	n/a	The threshold percent at which the radio channel is considered busier than normal. This field is only available if the Configure Channel Busy Threshold setting is <b>Yes</b> .

## Display Settings

On the **OV3600 Setup > General** page, locate the **Display** section and select the options to appear by default in new device groups.




---

Changes to this section apply across all of OV3600. These changes affect all users and all new device groups.

---

Table 6 describes the settings and default values in this section.

**Table 6: OV3600 Setup > General > Display Fields and Default Values**

Setting	Default	Description
AP Fully Qualified Domain Name Options	No	Sets OV3600 to use fully qualified domain names for APs instead of the AP name. For example, 'testap.yourdomain.com'; would be used instead of 'testap.' Select one of the following options: <ul style="list-style-type: none"> <li>• <b>Don't use FQDN</b> - This default value specifies that the fully qualified domain name will not be used.</li> <li>• <b>Use AP Name with FQDN</b> - The AP name will prepend the FQDN, for example "somehostname (my.hostname.com)." Note that if the AP name is not present, then the FQDN will still appear in parenthesis.</li> <li>• <b>Use only FQDN</b> - Only the fully qualified domain name will be used.</li> </ul> <b>NOTE:</b> This option is supported only for Cisco IOS, Dell Networking W-Series, Aruba Networks, and Alcatel-Lucent devices.
Show vendor-specific device settings for	All Devices	Displays a drop-down menu that determines which <b>Group</b> tabs and options are viewable by default in new groups, and selects the device types that use fully qualified domain names. This field has three options, as follows: <ul style="list-style-type: none"> <li>• <b>All devices</b>—When selected, OV3600 displays all Group tabs and setting options.</li> <li>• <b>Only devices on this OV3600</b>—When selected, OV3600 hides all options and tabs that do not apply to the APs and devices currently on OV3600.</li> <li>• <b>Selected device type</b>—When selected, a new field appears listing many device types. This option allows you to specify the device types for which OV3600 displays group settings. You can override this setting.</li> </ul>
Look up device and wireless user hostnames	Yes	Enables OV3600 to look up the DNS for new user hostnames. This setting can be turned off to troubleshoot performance issues.

**Table 6: OV3600 Setup > General > Display Fields and Default Values (Continued)**

Setting	Default	Description
DNS Hostname Lifetime	24 hours	Defines the length of time, in hours, for which a DNS server hostname remains valid on OV3600, after which OV3600 refreshes DNS lookup: <ul style="list-style-type: none"> <li>• 1 hour</li> <li>• 2 hours</li> <li>• 4 hours</li> <li>• 12 hours</li> <li>• 24 hours</li> </ul>
Device Troubleshooting Hint	N/A	The message included in this field is displayed along with the Down if a device's upstream device is up. This applies to all APs and controllers but not to routers and switches.

## Device Configuration Settings

Locate the **Device Configuration** section and adjust the settings. [Table 7](#) describes the settings and default values of this section.

**Table 7: OV3600 Setup > General > Device Configuration Section Fields and Default Values**

Setting	Default	Description
Guest User Configuration	Disabled	Enables or prevents guest users to/from pushing configurations to devices. Options are <b>Disabled</b> (default), <b>Enabled for Devices in Manage(Read/Write)</b> , <b>Enabled for all Devices</b> .
Allow WMS Offload configuration in monitor-only mode	No	When <b>Yes</b> is selected, you can enable the AOS-W WMS offload feature on the <b>Groups &gt; Basic</b> page for WLAN switches in <b>Monitor Only</b> mode. Enabling WMS offload does not cause a controller to reboot. This option is supported only for Aruba and Dell Networking W-Series devices.
Allow disconnecting users while in monitor-only mode	No	Sets whether you can deauthenticate a user for a device in monitor-only mode. If set to <b>No</b> , the <b>Deauthenticate Client</b> button for in a <b>Clients &gt; Client Detail</b> page is enabled only for Managed devices.
Use Global Alcatel-Lucent Configuration	No	Enables Alcatel-Lucent configuration profile settings to be globally configured and then assigned to device groups. If disabled, settings can be defined entirely within <b>Groups &gt; Controller Config</b> instead of globally. <b>NOTE:</b> Changing this setting may require importing configuration on your devices. When an existing Alcatel-Lucent configuration setup is to be converted from global to group, follow these steps: <ol style="list-style-type: none"> <li>1. Set all the devices to Monitor Only mode before setting the flag.</li> <li>2. Each device Group will need to have an import performed from the <b>Audit</b> page of a controller in the OV3600 group.</li> <li>3. All of the thin APs need to have their settings imported after the device group settings have finished importing.</li> <li>4. If the devices were set to Monitor Only mode, set them back to Managed mode.</li> </ol>

## OV3600 Features

Locate the **OV3600Features** section and adjust settings to enable or disable VisualRF and RAPIDS. [Table 8](#) describes these settings and default values.

**Table 8: OV3600 Setup Setup > General > OV3600 Features Fields and Default Values**

Setting	Default	Description
Display VisualIRF	No	Enable or disable the <b>VisualIRF</b> navigation tab.
Display RAPIDS	No	Enable or disable the <b>RAPIDS</b> navigation tab.
Hide setup pages from non-admin users	Yes	Restrict access to following pages to users with the OV3600 Administration role only: <ul style="list-style-type: none"> <li>● VisualIRF &gt; Setup</li> <li>● OV3600 Setup &gt; NMS</li> <li>● RAPIDS &gt; Score Override</li> <li>● RAPIDS &gt; Rules</li> <li>● RAPIDS &gt; Setup</li> <li>● System &gt; Triggers</li> </ul>
Allow role based report visibility	Yes	Enable or disable role-based reporting in OV3600. When disabled, reports can only be generated with by-subject visibility.

## External Logging Settings

Locate the **External Logging** section and adjust settings to send audit and system events to an external syslog server. [Table 9](#) describes these settings and default values. You can also send a test message using the **Send Test Message** button after enabling any of the logging options.

**Table 9: OV3600 Setup > General > External Logging Section Fields and Default Values**

Setting	Default	Description
Syslog Server	N/A	Enter the IP address of the syslog server. Note that this field is hidden if both "Include event log messages" and "Include audit log messages" are set to <b>No</b> .
Syslog Port	514	Enter the port of the syslog server. Note that this field is hidden if both "Include event log messages" and "Include audit log messages" are set to <b>No</b> .
Include event log messages	No	Select <b>Yes</b> to send event log messages to an external syslog server.
Event log facility	local1	Select the facility for the event log from the drop-down menu. This field is only available if the "Include event log messages" setting is <b>Yes</b> .
Include audit log messages	No	Select <b>Yes</b> to send audit log messages to an external syslog server.
Audit log facility	local1	Select the facility for the audit log from the drop-down menu. This field is only available if the "Include audit log messages" setting is <b>Yes</b> .
Send Test Message	N/A	If messaging is enabled and a server and port are configured, click this button to send a test message. Upon completion, a message will appear at the top of this page indicating that the message was sent successfully.

## Historical Data Retention Settings

Locate the **Historical Data Retention** section and specify the number of days you want to keep client session records and rogue discovery events. [Table 10](#) describes the settings and default values of this section. Many settings can be set to have no expiration date.

**Table 10:** *OV3600 Setup > General > Historical Data Retention Fields and Default Values*

Setting	Default	Description
Inactive Client and VPN User Data (0-1500 days, zero disables)	60	Defines the number of days OV3600 stores basic information about inactive clients and VPN users. A shorter setting of 60 days is recommended for customers with high user turnover such as hotels. The longer you store inactive user data, the more hard disk space you require.
Client Association and VPN Session History (0-550 days, zero disables)	14	Defines the number of days OV3600 stores client and VPN session records. The longer you store client session records, the more hard disk space you require.
Tag History (0-550 days, zero disables)	14	Sets the number of days OV3600 retains location history for Wi-Fi tags.
Rogue AP Discovery Events (14-550 days, zero disables)	14	Defines the number of days OV3600 stores Rogue Discovery Events. The longer you store discovery event records, the more hard disk space you require.
Reports (0-550 days, zero disables)	60	Defines the number of days OV3600 stores Reports. Large numbers of reports, over 1000, can cause the <b>Reports &gt; Generated</b> page to be slow to respond.
Automatically Acknowledge Alerts (0-550 days, zero disables)	14	Defines automatically acknowledged alerts as the number of days OV3600 retains alerts that have been automatically acknowledged. Setting this value to 0 disables this function, and alerts will never expire or be deleted from the database.
Acknowledged Alerts(0-550 days, zero disables)	60	Defines the number of days OV3600 retains information about acknowledged alerts. Large numbers of Alerts, over 2000, can cause the <b>System &gt; Alerts</b> page to be slow to respond.
Radius/ARM/IDS Events(0-550 days, zero disables)	14	Defines the number of days OV3600 retains information about RADIUS, ARM, and IDS events. Setting this value to 0 disables this function, and the information will never expire or be deleted from the database.
Archived Device Configurations (0-100, zero disables)	10	Defines the number of configurations that will be retained for archived devices.. Whether rogue information is included depends on the setting of the <b>Archive device configs even if they only have rogue classifications</b> setting.
Archive device configs even if they only have rogue classifications	No	Sets whether to archive device configurations even if the device only has rogue classifications.
Guest Users (0-550 days, zero disables)	30	Sets the number of days that OV3600 is to support any guest user. A value of 0 disables this function, and guest users will never expire or be deleted from the OV3600 database.

**Table 10: OV3600 Setup > General > Historical Data Retention Fields and Default Values (Continued)**

Setting	Default	Description
Inactive SSIDs (0-550 days, zero disables)	425	Sets the number of days OV3600 retains historical information after OV3600 last saw a client on a specific SSID. Setting this value to <b>0</b> disables this function, and inactive SSIDs will never expire or be deleted from the database.
Inactive Interfaces (0-550 days, zero disables)	425	Sets the number of days OV3600 retains inactive interface information after the interface has been removed or deleted from the device. Setting this value to <b>0</b> disables this function, and inactive interface information will never expire or be deleted from the database.
Interface Status History (0-550 days, zero disables)	425	Sets the number of days OV3600 retains historical information on interface status. Setting this value to <b>0</b> disables this function.
Interfering Devices (0-550 days, zero disables)	14	Sets the number of days OV3600 retains historical information on interfering devices. Setting this value to <b>0</b> disables this function.
Device Events (Syslog, Traps)(1-31 days)	2	Sets the number of days OV3600 retains historical information on device events such as syslog entries and SNMP traps. Setting this value to <b>0</b> disables this function. Refer to " <a href="#">Viewing Device Events in System &gt; Syslog &amp; Traps</a> " on page 221. <b>NOTE:</b> If your data table has more than 5 million rows, OV3600 will truncate the device event retention data. In this case, the "number of days" setting becomes "number of hours."
Mesh Link History (0-550 days)	30	Sets the number of days OV3600 retains historical information for mesh links.
Device Uptime (0-120 months, zero disables)	60	Sets the number of months OV3600 retains historical information on device uptime. Setting this value to <b>0</b> disables this function.
Client Data Retention Interval (1-425 days)	425	Sets the number of days OV3600 retains historical information for clients.

## Firmware Upgrade Defaults

Locate the **Firmware Upgrade Defaults** section and adjust settings as required. This section allows you to configure the default firmware upgrade behavior for OV3600. [Table 11](#) describes the settings and default values of this section.

**Table 11: OV3600 Setup > General > Firmware Upgrade Defaults Fields and Default Values**

Setting	Default	Description
Allow firmware upgrades in monitor-only mode	No	If <b>Yes</b> is selected, OV3600 upgrades the firmware for APs in <b>Monitor Only</b> mode. When OV3600 upgrades the firmware in this mode, the desired configuration are not be pushed to OV3600. Only the firmware is applied. The firmware upgrade may result in configuration changes OV3600 does not correct those changes when the AP is in <b>Monitor Only</b> mode.

**Table 11:** *OV3600 Setup > General > Firmware Upgrade Defaults Fields and Default Values (Continued)*

Setting	Default	Description
Maximum Interleaved Jobs (1-20)	20	Defines the number of jobs OV3600 runs at the same time. A job can include multiple APs. When jobs are started by multiple users, OV3600 will interleave upgrades so that one user's job does not completely block another's.
Maximum Interleaved Devices Per Job (1-1000)	20	Defines the number of devices that can be in the process of upgrading at the same time. Within a single job, OV3600 may start the upgrade process for up to this number of devices at the same time. However, only one device will be actively downloading a firmware file at any given time.
Failures before stopping (0-20, zero disables)	1	Sets the default number of upgrade failures before OV3600 pauses the upgrade process. User intervention is required to resume the upgrade process. Setting this value to <b>0</b> disables this function.

### Additional OV3600 Services

Locate the **AdditionalOV3600 Services** section, and adjust settings as required. [Table 12](#) describes the settings and default values of this section.

**Table 12:** *OV3600 Setup > General > Additional OV3600 Services Fields and Default Values*

Setting	Default	Description
Enable FTP Server	No	Enables or disables the FTP server on OV3600. The FTP server is only used to manage Aruba AirMesh and Cisco Aironet 4800 APs. Best practice is to disable the FTP server if you do not have any supported devices in the network.
Enable RTLS Collector	No	Enables or disables the RTLS Collector, which is used to allow AOS-Wswitches to send signed and encrypted RTLS (real time locating system) packets to VisualRF-- in other words, OV3600 becomes the acting RTLS server. The RTLS server IP address must be configured on each switch. This function is used for VisualRF to improve location accuracy and to locate chirping asset tags. This function is supported only for Dell Networking W-Series, Alcatel-Lucent, and Aruba Networks devices.  If <b>Yes</b> is specified, the following additional fields appear. These configuration settings should match the settings configured on the switch: <ul style="list-style-type: none"> <li>● <b>RTLS Port</b>—Specify the port for the OV3600 RTLS server.</li> <li>● <b>RTLS Username</b>—Enter the user name used by the switch to decode RTLS messages.</li> <li>● <b>RTLS Password</b>—Enter the RTLS server password that matches the switch's value.</li> <li>● <b>Confirm RTLS Password</b>—Re-enter the RTLS server password.</li> </ul>
Use embedded Mail Server	Yes	Enables or disables the embedded mail server that is included with OV3600. If <b>Yes</b> is specified, then enter information for an optional mail relay server.  This field supports a <b>Send Test Email</b> button for testing server functionality. Clicking this button prompts you with <b>To</b> and <b>From</b> fields in which you must enter valid email addresses.

**Table 12: OV3600 Setup > General > Additional OV3600 Services Fields and Default Values (Continued)**

Setting	Default	Description
Process user roaming traps from Cisco WLC	Yes	Whether OV3600 should parse client association and authentication traps from Cisco WLC controllers to give real time information on users connected to the wireless network.
Enable AMON data collection	Yes	Allows OV3600 to collect enhanced data from Alcatel-Lucent devices on certain firmware versions. See the <i>Best Practices Guide</i> on the <a href="#">Home &gt; Documentation</a> page for more details.
Enable AppRF Data Collection	Yes	If AMON is enabled for a controller, you can enable this flag to instruct OV3600 to collect AppRF data from the controller. If this is enabled, then the Home > AppRF page will display.
AppRF Storage GibaBytes Allocated (Greater than or equal to 2 GiB)	50	If AppRF Data Collection is enabled, specify the amount of storage to allocate.
Prefer AMON vs SNMP Polling	SNMP Polling	<p><b>Prefer AMON</b> is a configuration setting which causes OV3600 to use an AMON feed to obtain client monitoring information from a switch rather than polling it via SNMP. When you enable this setting, values such as AP lists and rogue AP lists are still polled via SNMP, but the bulk of client monitoring information is delivered via AMON.</p> <p>Before enabling the Prefer AMON setting, please note the following:</p> <ul style="list-style-type: none"> <li>• When <b>Prefer AMON</b> is enabled, the controller must be configured to send AMON to OV3600.</li> <li>• The network path from the switch to the OV3600 server must allow traffic on UDP port 8211.</li> <li>• The switch routinely sends AMON in large UDP packets, (up to 30K bytes). Before enabling this setting, ensure the network path from the switch to OV3600 can pass such large packets intact.</li> <li>• This setting should only be used in a network environment with low levels of UDP packet loss, as the loss of a single Ethernet frame will potentially result in the loss of up to 30K bytes worth of data.</li> </ul>
Enable Syslog and SNMP Trap Collection	Yes	This option specifies whether traps used to detect roaming events, auth failures, AP up/down status, and IDS events will still be collected if they are sent by managed devices.

## Performance Settings

Locate the **Performance** section. Performance tuning is unlikely to be necessary for many OV3600 implementations, and likely provides the most improvements for customers with extremely large Pro or Enterprise installations. Please contact Alcatel-Lucent support if you think you might need to change any of these settings. [Table 13](#) describes the settings and default values of this section.

**Table 13: OV3600 Setup > General > Performance Fields and Default Values**

Setting	Default	Description
Monitoring Processes	Based on the number of cores for your server	Optional setting configures the throughput of monitoring data. Increasing this setting allows OV3600 to process more data per second, but it can take resources away from other OV3600 processes. Contact Alcatel-Lucent support if you think you might need to increase this setting for your network. Also note that the value range varies based on the number of available process cores.
Maximum number of configuration processes	5	Increases the number of processes that are pushing configurations to your devices, as an option. The optimal setting for your network depends on the resources available, especially RAM. Contact Alcatel-Lucent support if you think you might need to increase this setting for your network.
Maximum number of audit processes	3	Increases the number of processes that audit configurations for your devices, as an option. The optimal setting for your network depends on the resources available, especially RAM. Contact Alcatel-Lucent support if you are considering increasing this setting for your network.
SNMP Fetcher Count (2-6)	2	Specify the number of SNMPv2 fetchers.
Verbose Logging of SNMP Configuration	No	Enables or disables logging detailed records of SNMP configuration information.
SNMP Rate Limiting for Monitored Devices	No	When enabled, OV3600 fetches SNMP data more slowly, potentially reducing device CPU load.  We recommend enabling this global setting when monitoring Alcatel-Lucent switches only if your network contains a majority of legacy switches . If your network mainly uses newer switches (OAW-4306 Series or the OAW-S3 module in the OAW-6000 Series), we strongly recommends disabling this setting.
RAPIDS Processing Priority	Low	Defines the processing and system resource priority for RAPIDS in relation to OV3600 as a whole.  When OV3600 is processing data at or near its maximum capacity, reducing the priority of RAPIDS can ensure that processing of other data (such as client connections and bandwidth usage) is not adversely impacted.  The default priority is <b>Low</b> . You can also tune your system performance by changing group poll periods.  If you select <b>Custom</b> for the priority, then also specify the RAPIDS custom process limit.
RAPIDS custom process limit (1-16)	1 when <b>Custom</b> is specified for the RAPIDS Processing Priority.	Sets the maximum number of monitoring process assigned to RAPIDS work. Note that this option is only available if <b>Custom</b> is specified for the RAPIDS Processing Priority.



## Defining OV3600 Network Settings

The next step in configuring OV3600 is to confirm the OV3600 network settings. Define these settings by navigating to the **OV3600 Setup > Network** page. [Figure 15](#) illustrates the contents of this page.

**Figure 15:** *OV3600 Setup > Network page illustration*

The screenshot displays the 'OV3600 Setup > Network' configuration page. It is divided into several sections:

- Primary Network Interface:** Fields include IP Address (10.2.27.202), Hostname (demo.airwave.com), Subnet Mask (255.255.252.0), Gateway (10.2.24.1), Primary DNS IP Address (10.1.1.200), and Secondary DNS IP Address (10.1.1.50).
- Secondary Network Interface:** Includes an 'Enabled' checkbox (checked), IP Address (10.100.8.60), and Subnet Mask (255.255.252.0).
- Network Time (NTP):** Fields for Primary (10.1.1.50) and Secondary (10.1.1.51) NTP servers.
- Static Routes:** A table with columns for Network, Subnet Mask, and Gateway. It lists three routes: 0.0.0.0/0.0.0.0 to 10.2.24.1, 10.2.24.0/255.255.252.0 to 0.0.0.0, and 169.254.0.0/255.255.0.0 to 0.0.0.0.

'Save' and 'Revert' buttons are located at the bottom right of the configuration area.

Specify the network configuration options described in the sections that follow to define the OV3600 network settings. Select **Save** when you have completed all changes on the **OV3600 Setup > Network** page, or select **Revert** to return to the last settings. **Save** restarts any affected services and may temporarily disrupt your network connection.

Refer to the following topics for configuration information:

- "Primary Network Interface Settings" on page 41
- "Secondary Network Interface Settings" on page 41
- "Network Time Protocol (NTP) Settings" on page 42
- "Static Routes" on page 42

### Primary Network Interface Settings

Locate the **Primary Network Interface** section. The information in this sections should match what you defined during initial network configuration and should not require changes. [Table 14](#) describes the settings and default values.

**Table 14:** *Primary Network Interface Fields and Default Values*

Setting	Default	Description
IP Address	None	Sets the IP address of the OV3600 network interface. <b>NOTE:</b> This address must be a static IP address.
Hostname	None	Sets the DNS name assigned to the OV3600 server.
Subnet Mask	None	Sets the subnet mask for the primary network interface.
Gateway	None	Sets the default gateway for the network interface.
Primary DNS IP	None	Sets the primary DNS IP address for the network interface.
Secondary DNS IP	None	Sets the secondary DNS IP address for the network interface.

### Secondary Network Interface Settings

Locate the **Secondary Network Interface** section. The information in this section should match what you defined during initial network configuration and should not require changes. [Table 15](#) describes the settings and default values.

**Table 15:** Secondary Network Interface Fields and Default Values

Setting	Default	Description
Enabled	No	Select <b>Yes</b> to enable a secondary network interface. You will be prompted to define the IP address and subnet mask.
IP Address	None	Specify the IP address of the OV3600 secondary network. <b>NOTE:</b> This address must be a static IP address.
Subnet Mask	None	Specify the subnet mask for the secondary network interface.

## Network Time Protocol (NTP) Settings

On the **OV3600 Setup > Network** page, locate the **Network Time Protocol (NTP)** section. The Network Time Protocol is used to synchronize the time between OV3600 and your network's NTP server. NTP servers synchronize with external reference time sources, such as satellites, radios, or modems.



---

Specifying NTP servers is optional. NTP servers synchronize the time on the OV3600 server, not on individual access points.

---

To disable NTP services, clear both the **Primary** and **Secondary** NTP server fields. Any problem related to communication between OV3600 and the NTP servers creates an entry in the event log. [Table 16](#) describes the settings and default values in more detail. For more information on ensuring that OV3600 servers have the correct time, please see <http://support.ntp.org/bin/view/Servers/NTPPoolServers>.

**Table 16:** OV3600 Setup > Network > Secondary Network Fields and Default Values

Setting	Default	Description
Primary	ntp1.yourdomain.com	Sets the IP address or DNS name for the primary NTP server.
Secondary	ntp2.yourdomain.com	Sets the IP address or DNS name for the secondary NTP server.

## Static Routes

On the **OV3600 Setup > Network** page, locate the **Static Routes** area. This section displays network, subnet mask, and gateway settings that you have defined elsewhere from a command-line interface.



---

This section does not enable you to configure new routes or remove existing routes.

---

What Next?

- Go to additional tabs in the OV3600 Setup section to continue additional setup configurations. The next section describes OV3600 roles.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 configuration.

## Creating OV3600 Users

OV3600 installs with only one user—the **admin**, who is authorized to perform the following functions:

- Define additional users with varying levels of privilege, be it manage read/write or monitoring.
- Limit the viewable devices as well as the level of access a user has to the devices.

Each general user that you add must have a user name, a password, and a role. Use unique and meaningful user names as they are recorded in the log files when you or other users make changes in OV3600.



Username and password are not required if you configure OV3600 to use RADIUS, TACACS, or LDAP authentication. You do not need to add individual users to the OV3600 server if you use RADIUS, TACACS, or LDAP authentication.

The user role defines the user type, access level, and the top folder for that user. User roles are defined on the **OV3600 Setup > Roles** page. Refer to the previous procedure in this chapter for additional information, "[Creating OV3600 User Roles](#)" on page 45.

The **admin** user can provide optional additional information about the user, including the user's real name, email address, phone number, and so forth.

Perform the following steps to display, add, edit, or delete OV3600 users of any privilege level. You must be an **admin** user to complete these steps.

1. Go to the **OV3600 Setup > Users** page. This page displays all users currently configured in OV3600. [Figure 16](#) illustrates the contents and layout of this page.

**Figure 16:** *OV3600 Setup > Users Page Illustration*

	Username ▲	Role	Role Enabled	Type	Access Level	Top Folder
<input type="checkbox"/>	admin	Admin	Yes	AMP Administrator	-	Top

2. Select **Add** to create a new user, select the pencil icon to edit an existing user, or select a user and select **Delete** to remove that user from OV3600. When you select **Add** or the edit icon, the **Add User** page appears, illustrated in [Figure 17](#).



A current user cannot change his/her own role. The **Role** drop-down field is disabled to prevent this.

**Figure 17:** *OV3600 Setup > Users > Add/Edit User Page Illustration*

**User**

Username: Audit

Role: Read-Only Monitoring & Au

Password:

Confirm Password:

Name:

Email Address:

Phone:

Notes: Read-only user for monitoring and auditing

Save Cancel

3. Enter or edit the settings on this page. [Table 17](#) describes these settings in additional detail.

**Table 17: OV3600 Setup > Users > Add/Edit User Fields and Default Values**

Setting	Default	Description
Username	None	Sets the username as an alphanumeric string. The Username is used when logging in to OV3600 and appears in OV3600 log files.
Role	None	Specifies the user's <b>Role</b> , which defines the Top viewable folder as well as the type and access level of the user specified in the previous field.  The <b>admin</b> user defines user roles on the <b>OV3600 Setup &gt; Roles</b> page, and each user in the system is assigned to a role.
Password	None	Sets the password for the user being created or edited. Enter an alphanumeric string without spaces, and enter the password again in the <b>Confirm Password</b> field.  <b>NOTE:</b> Because the default user's password is identical to the name, it is <b>strongly recommended that you change this password</b> . Changing your password will log you out.
Name	None	Allows you to define an optional and alphanumeric text field that takes note of the user's actual name.
Email Address	None	Allows you to specify a specific email address that will propagate throughout many additional pages in OV3600 for that user, including reports, triggers, and alerts.
Phone	None	Allows you to enter an optional phone number for the user.
Notes	None	Enables you to cite any additional notes about the user, including the reason they were granted access, the user's department, or job title.

4. Select **Add** to create the new user, **Save** to retain changes to an existing user, or **Cancel** to cancel out of this screen. The user information you have configured appears on the **OV3600 Setup > Users** page, and the user propagates to all other OV3600 pages and relevant functions.



OV3600 enables user roles to be created with access to folders within multiple branches of the overall hierarchy. This feature assists non-administrator users who support a subset of accounts or sites within a single OV3600 deployment, such as help desk or IT staff.

What Next?

- Go to additional tabs in the **OV3600 Setup** section to continue additional setup configurations.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 installation.

## OV3600 User Roles

The **OV3600 Setup > Roles** page defines the viewable devices, the operations that can be performed on devices, and general OV3600 access. User roles can be created that provide users with access to folders within multiple branches of the overall hierarchy. This feature assists non-administrative users, such as help desk or IT staff, who support a subset of accounts or sites within a single OV3600 deployment. You can restrict user roles to multiple folders within the overall hierarchy even if they do not share the same top-level folder. Non-admin users are only able to see data and users for devices within their assigned subset of folders.

Refer to the following additional topics:

- "User Roles and VisualRF" on page 45
- "Creating OV3600 User Roles" on page 45

## User Roles and VisualRF

VisualRF uses the same user roles as defined for OV3600. Users can see floor plans that contain an AP to which they have access in OV3600, although only visible APs appear on the floor plan. VisualRF users can also see any building that contains a visible floor plan and any campus that contains a visible building.



In **VisualRF > Setup > Server Settings**, a flag added in OV3600 7.2 allows you to restrict the visibility of empty floor plans to the role of the user who created them. In previous versions, a floor plan without APs could be visible to all users. By default, this setting is set to No.

When a new role is added to OV3600, VisualRF must be restarted for the new user to be enabled.

## Creating OV3600 User Roles

Perform the following steps to view, add, edit, or delete user **roles**:

1. Go to the **OV3600 Setup > Roles** page. This page displays all roles currently configured in OV3600. [Figure 18](#) illustrates the contents and layout of this page.

**Figure 18:** *OV3600 Setup > Roles Page Illustration*

The screenshot shows the 'Roles' page in the OV3600 interface. At the top left, there is an 'Add' button with a pencil icon and the text 'New Role'. Below this is a table with the following columns: Name (with a dropdown arrow), Enabled, Type, Access Level, Top Folder, and Visible Groups. The table contains three rows of roles. Below the table, there is a '3 Roles' indicator, a 'Select All - Unselect All' link, and a 'Delete' button.

Name ▲	Enabled	Type	Access Level	Top Folder	Visible Groups
Admin	Yes	AMP Administrator	-	Top	All
helpdesk	Yes	AP/Device Manager	Monitor (Read Only)	Top	All
Read-Only Monitoring & Auditing	Yes	AP/Device Manager	Audit (Read Only)	Top	All

2. Select **Add** to create a new role, select the pencil icon to edit an existing role, or select a checkbox and select **Delete** to remove that role from OV3600. When you select **Add** or the edit icon, the **Add/Edit Role** page appears, illustrated in [Figure 19](#).

**Figure 19: OV3600 Setup > Roles > Add/Edit Role Page Illustration**

The screenshot shows two configuration sections. The top section, titled 'Role', includes fields for Name (text input), Enabled (radio buttons for Yes/No), Type (dropdown menu), AP/Device Access Level (dropdown menu), Top Folder (dropdown menu), RAPIDS (dropdown menu), VisualRF (dropdown menu), Aruba Controller Role (dropdown menu), Display client diagnostics screens by default (radio buttons for Yes/No), and Allow user to disable timeout (radio buttons for Yes/No). The bottom section, titled 'Guest User Preferences', includes Allow creation of Guest Users (radio buttons for Yes/No), Allow accounts with no expiration (radio buttons for Yes/No), Allow sponsor to change sponsorship username (radio buttons for Yes/No), and Custom Message (text input). At the bottom of the form are 'Add' and 'Cancel' buttons.

3. Enter or edit the settings on this page. As explained earlier in this section, **Roles** define the type of user-level access, the user-level privileges, and the view available to the user for device groups and devices in OV3600. The available configuration options differ for each role type.



Most users will see two sections on this page: **Role** and **Guest User Preferences**. The **Guest User Preferences** section will not appear, however, if **Guest User Configuration** is disabled in **OV3600 Setup > General**.

The following tables describe the available settings and default values for each role type.

**Table 18: OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for OV3600 Administrator Role**

Setting	Default	Description
Name	None	Sets the administrator-definable string that names the role. The role name should indicate the devices and groups that are viewable, as well as the privileges granted to that role.
Enabled	Yes	Disables or enables the role. Disabling a role prevents all users of that role from logging in to OV3600.

**Table 18:** *OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for OV3600 Administrator Role (Continued)*

Setting	Default	Description
Type	AP/Device Manager	Defines the type of role.  OV3600 Administrator—The OV3600 Administrator has full access to OV3600 and all of the devices. Only the OV3600 Administrator can create new users or access the OV3600 Setup page, the VisualRF > Setup page, VisualRF > Audit Log page, System > Event Log, and System > Performance.
Alcatel-Lucent Controller Role	Disabled	Enables or disables <b>Single Sign-On</b> for the role. If enabled, allows the role to directly access Alcatel-Lucent controller UIs from the Quick Links or IP Address hypertext throughout OV3600 without having to enter credentials for the controller.
Allow user to disable timeout	No	Whether a user can disable OV3600's timeout feature.
Custom Message	none	A custom message can also be included.

**Table 19:** *OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for AP/Device Manager Role*

Setting	Default	Description
Name	None	Sets the administrator-definable string that names the role. The role name should indicate the devices and groups that are viewable, as well as the privileges granted to that role.
Enabled	Yes	Disables or enables the role. Disabling a role prevents all users of that role from logging in to OV3600.
Type	AP/Device Manager	Defines the type of role.  <b>AP/Device Manager</b> —AP/Device Managers have access to a limited number of devices and groups based on the Top folder and varying levels of control based on the Access Level.
AP/Device Access Level	Monitor (Read Only)	Defines the privileges the role has over the viewable APs. OV3600 supports three privilege levels, as follows: <ul style="list-style-type: none"> <li>• <b>Manage (Read/Write)</b>—Manage users can view and modify devices and Groups. Selecting this option causes a new field, <b>Allow authorization of APs/Devices</b>, to appear on the page, and is enabled by default.</li> <li>• <b>Audit (Read Only)</b>—Audit users have read only access to the viewable devices and Groups. Audit users have access to the <b>APs/Devices &gt; Audit</b> page, which may contain sensitive information including AP passwords.</li> <li>• <b>Monitor (Read Only)</b>—Monitor users have read-only access to devices and groups and VisualRF. Monitor users cannot view the <b>APs/Devices &gt; Audit</b> page which may contain sensitive information, including passwords.</li> </ul>

**Table 19: OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for AP/Device Manager Role (Continued)**

Setting	Default	Description
Top Folder	Top	<p>Defines the highest viewable folder for the role. The role is able to view all devices and groups contained by the specified top folder. The top folder and its subfolders must contain all of the devices in any of the groups it can view.</p> <p><b>NOTE:</b> OV3600 enables user roles to be created with access to folders within multiple branches of the overall hierarchy. This feature assists non-administrator users who support a <i>subset of accounts or sites</i> within a single OV3600 deployment, such as help desk or IT staff.</p> <p>User roles can be restricted to multiple folders within the overall hierarchy, even if they do not share the same top-level folder. Non-administrator users are only able to see data and users for devices within their assigned subset of folders.</p>
Allow authorization of APs/Devices	Yes	<p><b>NOTE:</b> This option is only available when the <b>AP/Device Access Level</b> is specified as <b>Manage (Read/Write)</b>.</p>
RAPIDS	None	<p>Sets the RAPIDS privileges, which are set separately from the APs/Devices. This field specifies the RAPIDS privileges for the role, and options are as follows:</p> <ul style="list-style-type: none"> <li>• <b>None</b>— Cannot view the RAPIDS tab or any Rogue APs.</li> <li>• <b>Read Only</b>—The user can view the RAPIDS pages but cannot make any changes to rogue APs or perform OS scans.</li> <li>• <b>Read/Write</b>—The user may edit individual rogues, classification, threat levels and notes, and perform OS scans.</li> <li>• <b>Administrator</b>—Has the same privileges as the Read/Write user, but can also set up RAPIDS rules, override scores and is the only user who can access the <b>RAPIDS &gt; Setup</b> page.</li> </ul>
VisualRF	Read Only	<p>Sets the VisualRF privileges, which are set separately from the APs/Devices. Options are as follows:</p> <ul style="list-style-type: none"> <li>• <b>Read Only</b>—The user can view the VisualRF pages but cannot make any changes to floor plans.</li> <li>• <b>Read/Write</b>—The user may edit individual floor plans, buildings, and campuses.</li> </ul>
Alcatel-Lucent Controller Role	Disabled	<p>Enables or disables <b>Single Sign-On</b> for the role. If enabled, allows the role to directly access Alcatel-Lucent controller UIs from the Quick Links or IP Address hypertext throughout OV3600 without having to enter credentials for the controller</p>
Display client diagnostics screens by default	No	<p>Sets the role to support helpdesk users with parameters that are specific to the needs of helpdesk personnel supporting users on a wireless network.</p>
Allow user to disable timeout	No	<p>Whether a user can disable OV3600's timeout feature.</p>



**Table 19:** *OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for AP/Device Manager Role (Continued)*

Setting	Default	Description
Allow creation of Guest Users	Yes	If this option is enabled, users with an assigned role of Monitoring or Audit can be given access to guest user account creation along with the option to allow a sponsor to change its username. <b>NOTE:</b> This option is not available if the <b>AP/Device Access Level</b> is specified as <b>Manage (Read/Write)</b> .
Allow accounts with no expiration	Yes	Specifies whether to allow accounts that have no expiration set. If this is set to <b>No</b> , then enter the amount of time that can elapse before the access expires.
Allow sponsor to change sponsorship username	No	Specifies whether a sponsor can change the sponsorship user name.
Custom Message	none	A custom message can also be included.

**Table 20:** *OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for Guest Access Sponsor Role*

Setting	Default	Description
Name	None	Sets the administrator-definable string that names the role. The role name should indicate the devices and groups that are viewable, as well as the privileges granted to that role.
Enabled	Yes	Disables or enables the role. Disabling a role prevents all users of that role from logging in to OV3600.
Type	AP/Device Manager	Defines the type of role. <b>Guest Access Sponsor</b> —Limited-functionality role to allow helpdesk or reception desk staff to grant wireless access to temporary personnel. This role only has access to the defined top folder of APs.
Top Folder	Top	Defines the Top viewable folder for the role. The role is able to view all devices and groups contained by the Top folder. The top folder and its subfolders must contain all of the devices in any of the groups it can view. <b>NOTE:</b> OV3600 enables user roles to be created with access to folders within multiple branches of the overall hierarchy. This feature assists non-administrator users who support a <i>subset of accounts or sites</i> within a single OV3600 deployment, such as help desk or IT staff. User roles can be restricted to multiple folders within the overall hierarchy, even if they do not share the same top-level folder. Non-administrator users are only able to see data and users for devices within their assigned subset of folders.

**Table 20: OV3600 Setup > Roles > Add/Edit Roles Fields and Default Values for Guest Access Sponsor Role (Continued)**

Setting	Default	Description
Allow user to disable timeout	No	Whether a user can disable OV3600's timeout feature.
Allow accounts with no expiration	Yes	Specifies whether to allow accounts that have no expiration set. If this is set to <b>No</b> , then enter the amount of time that can elapse before the access expires.
Allow sponsor to change sponsorship username	No	Specifies whether a sponsor can change the sponsorship user name.
Custom Message	none	A custom message can also be included.

What Next?

- Go to additional tabs in the **OV3600 Setup** section to continue additional setup configurations. The next section describes how to set up OV3600 users.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 configuration.

## Configuring Login Message, TACACS+, RADIUS, and LDAP Authentication


OV3600 uses session-based authentication with a configurable login message and idle timeout. As an option, you can set OV3600 to use an external user database to simplify password management for OV3600 administrators and users. This section contains the following procedures to be followed in **OV3600 Setup > Authentication**:

- ["Setting Up Login Configuration Options" on page 50](#)
- ["Configuring Whitelists" on page 51](#)
- ["Setting Up Certificate Authentication" on page 51](#)
- ["Setting Up Single Sign-On" on page 52](#)
- ["Specifying the Authentication Priority" on page 52](#)
- ["Configuring RADIUS Authentication and Authorization" on page 53](#)
- ["Integrating a RADIUS Accounting Server" on page 54](#)
- ["Configuring TACACS+ Authentication" on page 55](#)
- ["Configuring LDAP Authentication and Authorization" on page 56](#)

### Setting Up Login Configuration Options

On the **OV3600 Setup > Authentication** page, administrators can optionally configure the OV3600 user's idle timeout or a message-of-the-day that appears when a user first logs in, as shown in [Figure 20](#):

**Figure 20:** Login configuration field and results in the OV3600 Login page

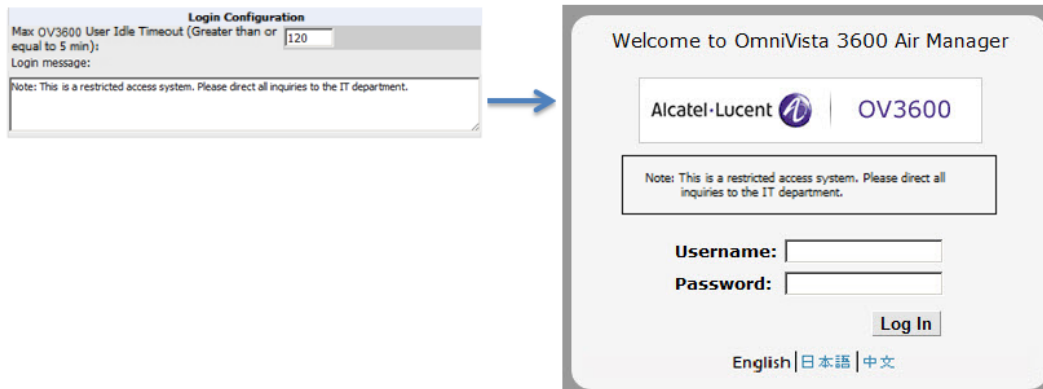

1. Go to **OV3600 Setup > Authentication**.
2. Complete the fields described on [Table 21](#):

**Table 21:** Login Configuration section of OV3600 Setup > Authentication

Field	Default	Description
Max OV3600 User Idle Timeout	240	Number of minutes of idle time until OV3600 automatically ends the user session. Affects all users of this OV3600. The range is 5-240 minutes.
Login message	none	A persistent message that will appear for all of this OV3600's users after they log in.

3. Select **Save** when you are finished or follow the next procedure to configure Whitelists, Certificate Authentication, Single Sign-On, TACACS+, LDAP, and RADIUS Authentication options.

### Setting Up Certificate Authentication

On the **OV3600 Setup > Authentication** page, administrators can specify whether to require a certificate during authentication and whether to use two-factor authentication. A PEM-encoded certificate bundle is required for this feature.

This feature must be enabled per role in **OV3600 Setup > Roles**.

Perform the following steps to enable this feature for this OV3600.

1. Locate the **Certificate Authentication** section in **OV3600 Setup > Authentication**.
2. In the **Enable Certificate Authentication** field, select **Yes**.
3. Specify whether to require a certificate in order to authenticate. If **Yes**, then you can also specify whether to use two-factor authentication.
4. Enter the PEM-encoded CA certificate bundle.
5. Select **Save** if you are finished or follow the next procedure to specify the authentication priority.

### Configuring Whitelists

On the **OV3600 Setup > Authentication** page, you can now include a list of subnets that are able to log in to OV3600. If this option is enabled, then by default, the current client network will appear as the first entry in the list of subnets. Additional entries can be added, one per line, in the text entry box.

For Instant devices that are managed by OV3600, this option must be enabled if Certificate Authentication is also enabled.



Do not delete the current client network line from the OV3600 whitelist. Doing so can result in the loss of access to the OV3600 user interface.

**Figure 21:** *Enabling OV3600 Whitelists*

**Login Configuration**

Max OV3600 User Idle Timeout (Greater than or equal to 5 min): 240

Login message:

Enable OV3600 Whitelist:  Yes  No

OV3600 Whitelist: (eg. 1.1.1.1/24. Please note that a line has been added for the current client network. Deleting the entry may result in loss of access to the OV3600 UI.)

10.1.8.244/32

## Setting Up Single Sign-On

On the **OV3600 Setup > Authentication** page, administrators can set up single sign-on (SSO) for users that have access to OV3600 controllers. This allows users to log in to OV3600 and use the IP Address or Quick Links hypertext links across OV3600 to access the controller's UI without having to enter credentials again. The links the user can select to access a controller can be found on the **APs/Devices > Monitor** page in the **Device Info** section, and on device list pages.

Perform the following steps to enable this feature for this OV3600.

1. Locate the **Single Sign-On** section in **OV3600 Setup > Authentication**.
2. In the **Enable Single Sign-On** field, select **Yes**.
3. Select **Save** if you are finished or follow the next procedure to specify the authentication priority.

## Specifying the Authentication Priority

To specify the authentication priority for this OV3600, locate the **Authentication Priority** section in **OV3600 Setup > Authentication**, and select either **Local** or **Remote** as the priority.

If **Local** is selected, then remote will be attempted if a user is not available. If **Remote** is selected, then the local database is searched if remote authentication fails. The order of remote authentication is RADIUS first, followed by TACACS, and finally LDAP.

Select **Save** if you are finished or follow the next procedure to configure RADIUS, TACACS+, and LDAP Authentication options.

## Configuring RADIUS Authentication and Authorization

For RADIUS capability, you must configure the IP/Hostname of the RADIUS server, the TCP port, and the server shared secret. Perform these steps to configure RADIUS authentication:

1. Go to the **OV3600 Setup > Authentication** page. This page displays current status of RADIUS. [Figure 22](#) illustrates this page.

**Figure 22:** *OV3600 Setup > Authentication Page Illustration for RADIUS*

2. Select **No** to disable or **Yes** to enable RADIUS authentication. If you select **Yes**, several new fields appear. Complete the fields described in [Table 22](#).

**Table 22:** *OV3600 Setup > Authentication Fields and Default Values for RADIUS Authentication*

Field	Default	Description
Primary Server Hostname/IP Address	N/A	Enter the IP address or the hostname of the primary RADIUS server.
Primary Server Port (1-65535)	1812	Enter the TCP port for the primary RADIUS server.
Primary Server Secret	N/A	Specify and confirm the primary shared secret for the primary RADIUS server.
Confirm Primary Server Secret	N/A	Re-enter the primary server secret.
Secondary Server Hostname/IP Address	N/A	Enter the IP address or the hostname of the secondary RADIUS server.
Secondary Server Port (1-65535)	1812	Enter the TCP port for the secondary RADIUS server.
Secondary Server Secret	N/A	Enter the shared secret for the secondary RADIUS server.
Confirm Secondary Server Secret	N/A	Re-enter the secondary server secret.

3. Select **Save** to retain these configurations, and continue with additional steps in the next procedure.

### Integrating a RADIUS Accounting Server




OV3600 checks the local username and password before checking with the RADIUS server. If the user is found locally, the local password and role apply. When using RADIUS, it's not necessary or recommended to define users on the OV3600 server. The only recommended user is the backup admin, in case the RADIUS server goes down.


Optionally, you can configure RADIUS server accounting on **OV3600 Setup > RADIUS Accounting**. This capability is not required for basic OV3600 operation, but can increase the user-friendliness of OV3600 administration in large networks. [Figure 23](#) illustrates the settings of this optional configuration interface.

Perform the following steps and configurations to enable OV3600 to receive accounting records from a separate RADIUS server. [Figure 23](#) illustrates the display of RADIUS accounting clients already configured, and [Figure 24](#) illustrates the **Add RADIUS Accounting Client** page.

**Figure 23:** *OV3600 Setup > RADIUS Accounting Page Illustration*

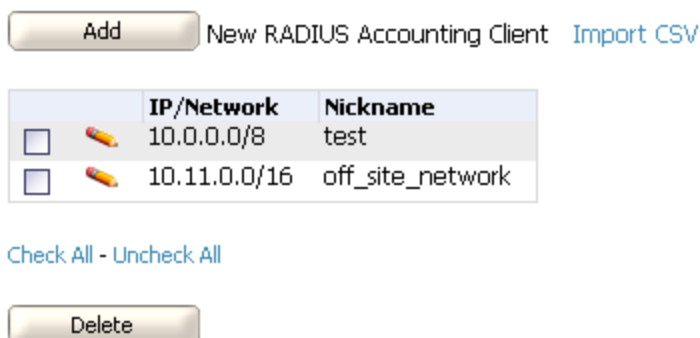

**Figure 24:** *OV3600 Setup > RADIUS > Add RADIUS Accounting Client Page Illustration*

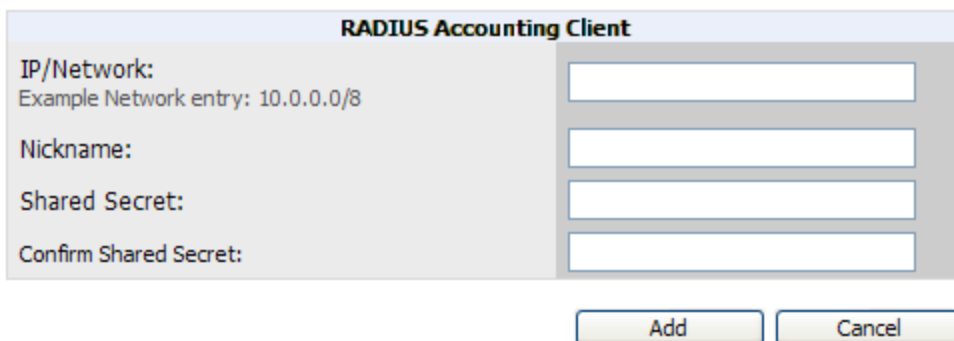

1. To specify the RADIUS authentication server or network, browse to the **OV3600 Setup > RADIUS Accounting** page, select **Add**, illustrated in [Figure 24](#), and provide the information in [Table 23](#).
2. Complete the following fields:

**Table 23:** *OV3600 Setup > Radius Accounting Fields and Default Values for LDAP Authentication*

Setting	Default	Description
IP/Network	None	Specify the IP address for the authentication server if you only want to accept packets from one device. To accept packets from an entire network enter the IP/Netmask of the network (for example, 10.51.0.0/24).
Nickname	None	Sets a user-defined name for the authentication server.
Shared Secret (Confirm)	None	Sets the Shared Secret that is used to establish communication between OV3600 and the RADIUS authentication server.

## Configuring TACACS+ Authentication

For TACACS+ capability, you must configure the IP/Hostname of the TACACS+ server, the TCP port, and the server shared secret. This TACACS+ configuration is for OV3600 users and does not affect APs or users logging into APs.

1. Go to the **OV3600 Setup > Authentication** page. This page displays current status of TACACS+. [Figure 25](#) illustrates this page when neither TACACS+, LDAP, nor RADIUS authentication is enabled in OV3600.

**Figure 25:** *OV3600 Setup > Authentication Page Illustration for TACACS+*

2. Select **No** to disable or **Yes** to enable TACACS+ authentication. If you select **Yes**, several new fields appear. Complete the fields described in [Table 24](#).

**Table 24:** *OV3600 Setup > Authentication Fields and Default Values for TACACS+ Authentication*

Field	Default	Description
Primary Server Hostname/IP Address	N/A	Enter the IP address or the hostname of the primary TACACS+ server.
Primary Server Port (1-65535)	49	Enter the port for the primary TACACS+ server.
Primary Server Secret	N/A	Specify and confirm the primary shared secret for the primary TACACS+ server.

**Table 24: OV3600 Setup > Authentication Fields and Default Values for TACACS+ Authentication**  
(Continued)

Field	Default	Description
Confirm Primary Server Secret	N/A	Re-enter the primary server secret.
Secondary Server Hostname/IP Address	N/A	Enter the IP address or hostname of the secondary TACACS+ server.
Secondary Server Port (1-65535)	49	Enter the port for the secondary TACACS+ server.
Secondary Server Secret	N/A	Enter the shared secret for the secondary TACACS+ server.
Confirm Secondary Server Secret	N/A	Re-enter the secondary server secret.

3. Select **Save** and continue with additional steps.

### Configuring Cisco ACS to Work with OV3600

To configure Cisco ACS to work with OV3600, you must define a new service named **OV3600** that uses https on the ACS server.

1. The OV3600 https service is added to the **TACACS+ (Cisco)** interface under the **Interface Configuration** tab.
2. Select a checkbox for a new service.
3. Enter **OV3600** in the service column and **https** in the protocol column.
4. Select **Save**.
5. Edit the existing groups or users in TACACS to use the OV3600 service and define a role for the group or user.
  - The role defined on the **Group Setup** page in ACS must match the exact name of the role defined on the **OV3600 Setup > Roles** page.
  - The defined role should use the following format: **role=<name\_of\_OV3600\_role>**. One example is as follows:  
role=DormMonitoring

As with routers and switches, OV3600 does not need to know usernames.
6. OV3600 also needs to be configured as an AAA client.
  - On the **Network Configuration** page, select **Add Entry**.
  - Enter the IP address of OV3600 as the **AAA Client IP Address**.
  - The secret should be the same value that was entered on the **OV3600 Setup > TACACS+** page.
7. Select **TACACS+ (Cisco IOS)** in the **Authenticate Using** drop down menu and select **submit + restart**.

---

OV3600 checks the local username and password store before checking with the TACACS+ server. If the user is found locally, the local password and local role apply. When using TACAS+, it is not necessary or recommended to define users on the OV3600 server. The only recommended user is the backup administrator, in the event that the TACAS+ server goes down.

---



### Configuring LDAP Authentication and Authorization

LDAP (Lightweight Directory Access Protocol) provides users with a way of accessing and maintaining distributed directory information services over a network. When LDAP is enabled, a client can begin a session by authenticating against an LDAP server which by default is on TCP port 389.

Perform these steps to configure LDAP authentication:



1. Go to the **OV3600 Setup > Authentication** page.
2. Select the **Yes** radio button to enable LDAP authentication and authorization. Once enabled, the available LDAP configuration options will display. [Figure 26](#) illustrates this page.

**Figure 26:** *OV3600 Setup > Authentication Page Illustration for LDAP*

3. Complete the fields described in [Table 25](#).

**Table 25:** *OV3600 Setup > Authentication Fields and Default Values for LDAP Authentication*

Field	Default	Description
Primary Server Hostname/IP Address	none	Enter the IP address or the hostname of the primary LDAP server.
Primary Server Port (1-65535)	389	Enter the port where the LDAP server is listening. The default port is 389.
Secondary Server Hostname/IP Address	none	Optionally enter the IP address or hostname of the secondary LDAP server. This server will be contacted in the event that the primary LDAP server is not reachable.
Secondary Server Port (1-65535)	389	Enter the port where the LDAP service is listening on the secondary LDAP server. The default port is 389.
Connection Type	clear-text	Specify one of the following connection types OV3600 and the LDAP server: <ul style="list-style-type: none"> <li>● <b>clear-text</b> results in unencrypted communication.</li> <li>● <b>ldap-s</b> results in communication over SSL.</li> <li>● <b>start-tls</b> uses certificates to initiate encrypted communication.</li> </ul>

**Table 25: OV3600 Setup > Authentication Fields and Default Values for LDAP Authentication (Continued)**

Field	Default	Description
View Server Certificate	none	<p>If <b>Connection Type</b> is configured as <b>start-tls</b>, then also specify whether the <b>start-tls</b> connection type uses a certificate.</p> <ul style="list-style-type: none"> <li>● <b>none</b> - The server may provide a certificate, but it will not be verified. This may mean that you are connected to the wrong server.</li> <li>● <b>optional</b> - Verifies only when the servers offers a valid certificate.</li> <li>● <b>require</b> - The server must provide a valid certificate.</li> </ul> <p>A valid <b>LDAP Server CA Certificate</b> must be provided in case of optional or require. Certificates uploaded on the <b>Device Setup &gt; Certificates</b> page with a type of Intermediate CA or Trusted CA are listed in the drop down for <b>LDAP Server CA Certificate</b>.</p>
LDAP Server CA Certificate	none	<p>Specify the LDAP server certificate to use to initiate encrypted communication. Only certificates that have been uploaded with a type of Intermediate CA or Trusted CA will appear in this drop down.</p> <p><b>NOTE:</b> This <b>LDAP Server CA Certificate</b> drop down menu only appears if <b>View Server Certificate</b> is specified as <b>optional</b> or <b>require</b>.</p>
Bind DN	none	<p>Specify the Distinguished Name (DN) of the administrator account, such as 'cn=admin01,cn=admin,dn=domain,dn=com'. Note that for the Active directory, the bind DN can also be in the administrator@domain format (for example, administrator@acme.com).</p>
Bind Password	none	Specify the bind DN account password.
Confirm Bind Password	none	Re-enter the bind password.
Base DN	none	The DN of the node in your directory tree from which to start searching for records. Generally, this would be the node that contains all the users who may access OV3600, for example cn=users,dc=domain,dc=com.
Key Attribute	sAMAccountName	The LDAP attribute that identifies the user, such as 'sAMAccountName' for Active Directory
Role Attribute	none	The LDAP attribute that contains the OV3600 role. Users who log in to OV3600 using this LDAP authentication will be granted permissions based on this role. Refer to <a href="#">OV3600 User Roles</a> for more information about OV3600 User Roles.
Filter	(objectclass=*)	This option limits the object classes in which the key,role attributes would be searched.

**Table 25: OV3600 Setup > Authentication Fields and Default Values for LDAP Authentication (Continued)**

Field	Default	Description
Add New LDAP Rule	none	The LDAP rule parameters are <b>Position</b> , <b>Role Attribute</b> , <b>Operation</b> , <b>Value</b> , and <b>OV3600</b> role. If you create multiple LDAP rules, rules are processed in order based on the rule position value, so the position you assign to the LDAP rule represents the order in which the LDAP rule is applied to determine the OV3600 role. LDAP rules can only be configured and applied after LDAP authentication is enabled. The LDAP rules are similar to the rules used by the switch to derive the OV3600 role.

4. Select **Save** to retain these configurations, and continue with additional steps in the next procedure.

What Next?

- Go to additional subtabs in **OV3600 Setup** to continue additional setup configurations.
- *Complete the required configurations in this chapter before proceeding.* Alcatel-Lucent support remains available to you for any phase of OV3600 configuration.

## Enabling OV3600 to Manage Your Devices

Once OV3600 is installed and active on the network, the next task is to define the basic settings that allow OV3600 to communicate with and manage your devices. Device-specific firmware files are often required or are highly desirable. Furthermore, the use of Web Auth bundles is advantageous for deployment of Cisco WLC wireless LAN controllers when they are present on the network.


This section contains the following procedures:

- ["Configuring Communication Settings for Discovered Devices" on page 59](#)
- ["Loading Device Firmware Onto OV3600 \(optional\)" on page 62](#)

## Configuring Communication Settings for Discovered Devices

To configure OV3600 to communicate with your devices, to define the default shared secrets, and to set SNMP polling information, navigate to the **Device Setup > Communication** page, illustrated in [Figure 27](#).

**Figure 27: Device Setup > Communication Page Illustration**

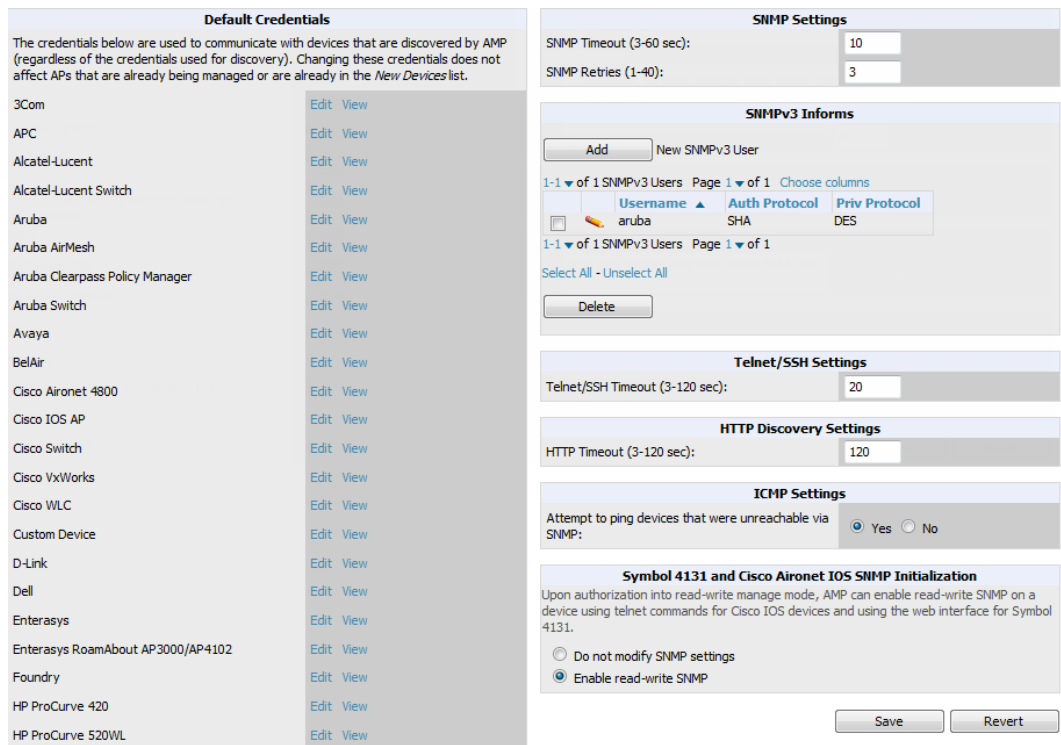

Perform the following steps to define the default credentials and SNMP settings for the wireless network.

1. On the **Device Setup > Communication** page, locate the **Default Credentials** area. Enter the credentials for each device model on your network. The default credentials are assigned to all newly discovered APs.

The **Edit** button edits the default credentials for newly discovered devices. To modify the credentials for existing devices, use the **APs/Devices > Manage** page or the **Modify Devices** link on the **APs/Devices > List** page.



Community strings and shared secrets must have read-write access for OV3600 to configure the devices. Without read-write access, OV3600 may be able to monitor the devices but cannot apply any configuration changes.

2. Browse to the **Device Setup > Communication** page, locate the **SNMP Settings** section, and enter or revise the following information. [Table 26](#) lists the settings and default values.

**Table 26: Device Setup > Communication > SNMP Settings Fields and Default Values**

Setting	Default	Description
SNMP Timeout (3-60 sec)	3	Sets the time, in seconds, that OV3600 waits for a response from a device after sending an SNMP request.
SNMP Retries (1-40)	3	Sets the number of times OV3600 tries to poll a device when it does not receive a response within the <b>SNMP Timeout Period</b> or the Group's <b>Missed SNMP Poll Threshold</b> setting (1-100). If OV3600 does not receive an SNMP response from the device after the specified number of retries, OV3600 classifies that device as <b>Down</b> .  <b>NOTE:</b> Although the upper limit for this value is 40, some SNMP libraries still have a hard limit of 20 retries. In these cases, any retry value that is set above 20 will still stop at 20.

3. Locate the **SNMPv3 Informs** section. Select the **Add** button to reveal configuration options. OV3600 users will need to configure all v3 users that are configured on the controller. The SNMP Inform receiver in the OV3600 will be restarted when users are changed or added to the controller.

- **Username** - Username of the SNMP v3 user as configured on the controller.
- **Auth Protocol** - Can be MD5 or SHA. The default setting is SHA.
- **Auth and Priv Protocol Passphrases** - Enter the authentication and privilege protocol passphrases for the user as configured on the controller.
- **Priv Protocol** - Can be DES or AES. The default setting is DES..



This form allows you to edit existing SNMPv3 users by selecting the pencil icon next to the desired user. It also allows you to remove existing users by selecting the user's checkbox and then clicking **Delete**.

4. Locate the **Telnet/SSH Settings** section, and complete or adjust the default value for the field. [Table 27](#) shows the setting and default value.

**Table 27:** *Device Setup > Communication > Telnet/SSH Settings Fields and Default Values*

Setting	Default	Description
Telnet/SSH Timeout (3-120 sec)	10	Sets the timeout period in seconds used when performing Telnet and SSH commands.

5. Locate the **HTTP Discovery Settings** section and adjust the default value. [Table 28](#) shows the setting and default value.

**Table 28:** *Device Setup > Communication > HTTP Discovery Settings Fields and Default Values*

Setting	Default	Description
HTTP Timeout (3-120 sec)	5	Sets the timeout period in seconds used when running an HTTP discovery scan.

6. Locate the **ICMP Settings** section and adjust the default value as required. [Table 29](#) shows the setting and default value.

**Table 29:** *Device Setup > Communication > ICMP Settings Fields and Default Values*

Setting	Default	Description
Attempt to ping devices that were unreachable via SNMP	Yes	<ul style="list-style-type: none"> <li>• When <b>Yes</b> is selected, OV3600 attempts to ping the AP device.</li> <li>• Select <b>No</b> if performance is affected in negative fashion by this function. If a large number of APs are unreachable by ICMP, likely to occur where there is in excess of 100 APs, the timeouts start to impede network performance.</li> </ul> <p><b>NOTE:</b> If ICMP is disabled on the network, select <b>No</b> to avoid the performance penalty caused by numerous ping requests.</p>

7. Locate the **Symbol 4131 and Cisco Aironet IOS SNMP Initialization** area. Select one of the options listed. [Table 30](#) describes the settings and default values

**Table 30:** *Device Setup > Communication > Symbol 4131 and Cisco Aironet IOS SNMP Initialization Fields and Default Values*

Setting	Default	Description
Do Not Modify SNMP Settings	Yes	When selected, specifies that OV3600 will not modify any SNMP settings. If SNMP is not already initialized on the Symbol, Nomadix, and Cisco IOS APs, OV3600 is not able to manage them.
Enable read-write SNMP	No	When selected, and when on networks where the Symbol, Nomadix, and Cisco IOS APs do not have SNMP initialized, this setting enables SNMP so the devices can be managed by OV3600.

### Loading Device Firmware Onto OV3600 (optional)

OV3600 enables automated firmware distribution to the devices on your network. Once you have downloaded the firmware files from the vendor, you can upload this firmware to OV3600 for distribution to devices via the **Device Setup > Upload Firmware & Files** page.

This page lists all firmware files on OV3600 with file information. This page also enables you to add new firmware files, to delete firmware files, and to add **New Web Auth Bundle** files.

The following additional pages support firmware file information:

- Firmware files uploaded to OV3600 appear as an option in the drop-down menu on the **Groups > Firmware** page and as a label on individual **APs/Devices > Manage** pages.
- Use the OV3600 Setup page to configure OV3600-wide default firmware options.

Table 31 below itemizes the contents, settings, and default values for the **Upload Firmware & Files** page.

**Table 31:** *Device Setup > Upload Firmware & Files Fields and Default Values*

Setting	Default	Description
Type	Alcatel-Lucent switch (any model)	Displays a drop-down list of the primary AP makes and models that OV3600 supports with automated firmware distribution.
Owner Role	None	Displays the user role that uploaded the firmware file. This is the role that has access to the file when an upgrade is attempted.
Description	None	Displays a user-configurable text description of the firmware file.
Server Protocol	None	Displays the file transfer protocol by which the firmware file was obtained from the server. This can be FTP, TFTP, HTTP, or HTTPS.
Use Group File Server	None	If enabled, displays the name of the file server supporting the group.
Firmware Filename	None	Displays the name of the file that was uploaded to OV3600 and to be transferred to an AP when the file is used in an upgrade.
Firmware MD5 Checksum	None	Displays the MD5 checksum of the file after it was uploaded to OV3600. The MD5 checksum is used to verify that the file was uploaded to OV3600 without issue. The checksum should match the checksum of the file before it was uploaded.

**Table 31:** Device Setup > Upload Firmware & Files Fields and Default Values (Continued)

Setting	Default	Description
Firmware File Size	None	Displays the size of the firmware file in bytes.
Firmware Version	None	Displays the firmware version number. This is a user-configurable field.
HTML Filename	None	Supporting HTML, displays the name of the file that was uploaded to OV3600 and to be transferred to an AP when the file is used in an upgrade.
HTML MD5 Checksum	None	Supporting HTML, displays the MD5 checksum of the file after it was uploaded to OV3600. The MD5 checksum is used to verify that the file was uploaded to OV3600 without issue. The checksum should match the checksum of the file before it was uploaded.
HTML File Size	None	Supporting HTML, displays the size of the file in bytes.
HTML Version	None	Supporting HTML, displays the version of HTML used for file transfer.
Desired Firmware File for Specified Groups	None	The firmware file is set as the desired firmware version on the <b>Groups &gt; Firmware Files</b> page of the specified groups. You cannot delete a firmware file that is set as the desired firmware version for a group.

### Loading Firmware Files onto OV3600

Perform the following steps to load a device firmware file onto OV3600:

1. Go to the **Device Setup > Upload Firmware & Files** page.
2. Select **Add**. The Add Firmware File page appears. [Figure 28](#) illustrates this page.

**Figure 28:** Device Setup > Upload Firmware and Files > Add Page Illustration

3. Select the **Supported Firmware Versions and Features** link to view supported firmware versions.



Unsupported and untested firmware may cause device mismatches and other problems. Please contact Alcatel-Lucent support before installing non-certified firmware.

4. Enter the appropriate information and select **Add**. The file uploads to OV3600 and once complete, this file appears on the **Device Setup > Upload Firmware & Files** page. This file also appears on additional pages that display firmware files (such as the **Group > Firmware** page and on individual **APs/Devices > Manage** pages).
5. You can also import a CSV list of groups and their external TFTP firmware servers. [Table 32](#) itemizes the settings of this page.

**Table 32: Supported Firmware Versions and Features Fields and Default Values**

Setting	Default	Description
Type	Alcatel-Lucent switch	Indicates the firmware file is used with the specified type. With selection of some types, particularly Cisco controllers, you can specify the boot software version.
Firmware Version	None	Provides a user-configurable field to specify the firmware version number. This open appears if <b>Use an external firmware file server</b> is enabled.
Description	None	Provides a user-configurable text description of the firmware file.
Upload firmware files (and use built-in firmware)	Enabled	Allows you to select a firmware from your local machine and upload it via TFTP or FTP.
Use an external firmware file server	N/A	You can also choose to assign the external TFTP server on a per-group basis. If you select this option, you must enter the IP address on the <b>Groups &gt; Firmware</b> page. Complete the <b>Firmware File Server IP Address</b> field.
Server Protocol	TFTP	Specify whether to use a built-in TFTP server or FTP, HTTP, or HTTPS to upload a firmware file. TFTP is recommended. If you select FTP, OV3600 uses an anonymous user for file upload.
Use Group File Server	Disabled	If you opt to use an external firmware file server, this additional option appears. This setting instructs OV3600 to use the server that is associated with the group instead of defining a server.
Firmware File Server IP Address	None	Provides the IP address of the External TFTP Server (like SolarWinds) used for the firmware upgrade. This option displays when the user selects the <b>Use an external firmware file server</b> option.
Firmware Filename	None	Enter the name of the firmware file that needs to be uploaded. Ensure that the firmware file is in the TFTP root directory. If you are using a non-external server, you select <b>Choose File</b> to find your local copy of the file.



**Table 32: Supported Firmware Versions and Features Fields and Default Values (Continued)**

Setting	Default	Description
HTML Filename	None	Browse to the HTML file that will accompany the firmware upload. Note that this field is only available for certain Firmware File Types (for example, Symbol 4121).
Patch Filename	None	If you selected Symbol WS5100 as the Firmware File Type, and you are upgrading from version 3.0 to 3.1, then browse to the path where the patch file is located.
Boot Software Version	None	If you specified a Cisco WLC device as the Firmware File Type, then also enter the boot software version.



Additional fields may appear for multiple device types. OV3600 prompts you for additional firmware information as required. For example, Intel and Symbol distribute their firmware in two separate files: an image file and an HTML file. Both files must be uploaded to OV3600 for the firmware to be distributed successfully via OV3600.

6. Select **Add** to import the firmware file.

To delete a firmware file that has already been uploaded to OV3600, return to the **Device Setup > Upload Firmware & Files** page, select the checkbox for the firmware file and select **Delete**.



A firmware file may not be deleted if it is the desired version for a group. Use the **Group > Firmware** page to investigate this potential setting and status.

### Using Web Auth Bundles in OV3600

Web authentication bundles are configuration files that support Cisco WLC wireless LAN controllers. This procedure requires that you have local or network access to a Web Auth configuration file for Cisco WLC devices.

Perform these steps to add or edit Web Auth bundles in OV3600.

1. Go to the **Device Setup > Upload Firmware & Files** page. This page displays any existing Web Auth bundles that are currently configured in OV3600, and allows you to add or delete Web Auth bundles.
2. Scroll to the bottom of the page. Select the **Add New Web Auth Bundle** button to create a new Web Auth bundle (see [Figure 29](#)), or select the pencil icon next to an existing bundle to edit. You may also delete Web Auth bundles by selecting that bundle with the checkbox, and selecting **Delete**.

**Figure 29: Add Web Auth Bundle Page Illustration**

The screenshot shows a form titled "Web Auth Bundle". It has two input fields: "Description:" and "Web Auth Bundle:". The "Web Auth Bundle:" field has a "Browse..." button next to it. At the bottom of the form are two buttons: "Add" and "Cancel".

3. Enter a descriptive label in the description field. This is the label used to identify and track Web Auth bundles on the page.
4. Enter the path and filename of the Web Auth configuration file in the **Web Auth Bundle** field or select **Choose File** to locate the file.

5. Select **Add** to complete the Web Auth bundle creation, or **Save** if replacing a previous Web Auth configuration file, or **Cancel** to abort the Web Auth integration.

For additional information and a case study that illustrates the use of Web Auth bundles with Cisco WLC controllers, refer to the following document on Cisco's Web site:

- Wireless LAN controller Web Authentication Configuration Example, Document ID: 69340  
[http://www.cisco.com/en/US/tech/tk722/tk809/technologies\\_configuration\\_example09186a008067489f.shtml](http://www.cisco.com/en/US/tech/tk722/tk809/technologies_configuration_example09186a008067489f.shtml)

## Setting Up Device Types

On **OV3600 Setup > Device Type Setup**, you can define how the Device Type displayed for users on your network is calculated from available data. The first matching property is used. These rules cannot be edited or deleted, but only reordered or enabled.

You can change the priority order of rules by dragging and dropping rows, as shown in [Figure 30](#).

Check or uncheck the checkbox under the **Enabled** column to turn device setup rules on or off.

Refer to "[Monitoring and Supporting WLAN Clients](#)" on page 241 for more information on the **Device Type** column that appears in **Clients** list tables.

**Figure 30:** *OV3600 Setup > Device Type Setup Page Illustration*

**Device Type Rules**

Name	Enabled	
Manufacturer+Model	<input checked="" type="checkbox"/>	↕
AOS Device Type	<input checked="" type="checkbox"/>	↕
OS	<input checked="" type="checkbox"/>	↕
OS Detail	<input checked="" type="checkbox"/>	↕
Manufacturer	<input checked="" type="checkbox"/>	↕
Model	<input checked="" type="checkbox"/>	↕
Network Interface Vendor (from OUI)	<input checked="" type="checkbox"/>	↕

## Configuring Cisco WLSE and WLSE Rogue Scanning

The Cisco Wireless LAN Solution Engine (WLSE) includes rogue scanning functions that OV3600 supports. This section contains the following topics and procedures, and several of these sections have additional sub-procedures:

- "[Introduction to Cisco WLSE](#)" on page 66
- "[Initial WLSE Configuration](#)" on page 67
- "[Configuring IOS APs for WDS Participation](#)" on page 69
- "[Configuring ACS for WDS Authentication](#)" on page 69
- "[Configuring Cisco WLSE Rogue Scanning](#)" on page 70

You must enter one or more CiscoWorks WLSE hosts to be polled for discovery of Cisco devices and rogue AP information.

### Introduction to Cisco WLSE

Cisco WLSE functions as an integral part of the Cisco Structured Wireless-Aware Network (SWAN) architecture, which includes IOS Access Points, a Wireless Domain Service, an Access Control Server, and a WLSE. In order for OV3600 to

obtain Rogue AP information from the WLSE, all SWAN components must be properly configured. [Table 33](#) describes these components.

**Table 33: Cisco SWAN Architecture Components**

SWAN Component	Requirements
WDS (Wireless Domain Services)	<ul style="list-style-type: none"> <li>WDS Name</li> <li>Primary and backup IP address for WDS devices (IOS AP or WLSM)</li> <li>WDS Credentials APs within WDS Group</li> </ul> <p><b>NOTE:</b> WDS can be either a WLSM or an IOS AP. WLSM (WDS) can control up to 250 access points. AP (WDS) can control up to 30 access points.</p>
WLSE (Wireless LAN Solution Engine)	<ul style="list-style-type: none"> <li>IP Address</li> <li>Login</li> </ul>
ACS (Access Control Server)	<ul style="list-style-type: none"> <li>IP Address</li> <li>Login</li> </ul>
APs	<ul style="list-style-type: none"> <li>APs within WDS Group</li> </ul>

## Initial WLSE Configuration

Use the following general procedures to configure and deploy a WLSE device in OV3600:

- "Adding an ACS Server for WLSE" on page 67
- "Enabling Rogue Alerts for Cisco WLSE" on page 67
- "Configuring WLSE to Communicate with APs" on page 67
- "Discovering Devices" on page 68
- "Managing Devices" on page 68
- "Inventory Reporting" on page 68
- "Defining Access" on page 68
- "Grouping" on page 68

## Adding an ACS Server for WLSE

- Go to the **Devices > Discover > AAA Server** page.
- Select **New** from the drop-down list.
- Enter the **Server Name**, **Server Port** (default 2002), **Username**, **Password**, and **Secret**.
- Select **Save**.

## Enabling Rogue Alerts for Cisco WLSE

- Go to the **Faults > Network Wide Settings > Rogue AP Detection** page.
- Select the **Enable**.
- Select **Apply**.

Additional information about rogue device detection is available in "[Configuring Cisco WLSE Rogue Scanning](#)" on page 70.

## Configuring WLSE to Communicate with APs

- Go to the **Device Setup > Discover** page.
- Configure SNMP Information.
- Configure HTTP Information.

4. Configure Telnet/SSH Credentials
5. Configure HTTP ports for IOS access points.
6. Configure WLCCP credentials.
7. Configure AAA information.

## Discovering Devices

The following three methods can be used to discover access points within WLSE:

- Using Cisco Discovery Protocol (CDP)
- Importing from a file
- Importing from CiscoWorks

Perform these steps to discover access points.

1. Go to the **Device > Managed Devices > Discovery Wizard** page.
2. Import devices from a file.
3. Import devices from Cisco Works.
4. Import using CDP.

## Managing Devices

Prior to enabling radio resource management on IOS access points, the access points must be under WLSE management.



---

OV3600 becomes the primary management/monitoring vehicle for IOS access points, but for OV3600 to gather Rogue information, the WLSE must be an NMS manager to the APs.

---

Use these pages to make such configurations:

1. Go to **Device > Discover > Advanced Options**.
2. Select the method to bring APs into management **Auto**, or specify via filter.

## Inventory Reporting

When new devices are managed, the WLSE generates an inventory report detailing the new APs. OV3600 accesses the inventory report via the SOAP API to auto-discover access points. This is an optional step to enable another form of AP discovery in addition to OV3600, CDP, SNMP scanning, and HTTP scanning discovery for Cisco IOS access points. Perform these steps for inventory reporting.

1. Go to **Devices > Inventory > Run Inventory**.
2. **Run Inventory** executes immediately between WLSE polling cycles.

## Defining Access

OV3600 requires System Admin access to WLSE. Use these pages to make these configurations.

1. Go to **Administration > User Admin**.
2. Configure **Role** and **User**.

## Grouping

It's much easier to generate reports or faults if APs are grouped in WLSE. Use these pages to make such configurations.

1. Go to **Devices > Group Management**.
2. Configure **Role** and **User**.

## Configuring IOS APs for WDS Participation

IOS APs (1100, 1200) can function in three roles within SWAN:

- Primary WDS
- Backup WDS
- WDS Member

OV3600 monitors AP WDS role and displays this information on **AP Monitoring** page.



---

APs functioning as WDS Master or Primary WDS will no longer show up as Down is the radios are enabled.

---

### WDS Participation

Perform these steps to configure WDS participation.

1. Log in to the AP.
2. Go to the **Wireless Services > AP** page.
3. Select **Enable participation in SWAN Infrastructure**.
4. Select **Specified Discovery**, and enter the IP address of the Primary WDS device (AP or WLSM).
5. Enter the **Username** and **Password** for the WLSE server.

### Primary or Secondary WDS

Perform these steps to configure primary or secondary functions for WDS.

1. Go to the **Wireless Services > WDS > General Setup** page.
2. If the AP is the Primary or Backup WDS, select **Use the AP as Wireless Domain Services**.
  - Select **Priority** (set **200** for Primary, **100** for Secondary).
  - Configure the **Wireless Network Manager** (configure the IP address of WLSE).
3. If the AP is Member Only, leave all options unchecked.
4. Go to the **Security > Server Manager** page.
5. Enter the **IP address** and **Shared Secret** for the ACS server and select **Apply**.
6. Go to the **Wireless Services > WDS > Server Group** page.
7. Enter the **WDS Group** of the AP.
8. Select the **ACS server** in the **Priority 1** drop-down menu and select **Apply**.

### Configuring ACS for WDS Authentication

ACS authenticates all components of the WDS and must be configured first. Perform these steps to make this configuration.

1. Login to the ACS.
2. Go to the **System Configuration > ACS Certificate Setup** page.
3. Install a New Certificate by selecting the **Install New Certificate** button, or skip to the next step if the certificate was previously installed.
4. Select **User Setup** in the left frame.
5. Enter the **Username** that will be used to authenticate into the WDS and select **Add/Edit**.
6. Enter the **Password** that will be used to authenticate into the WDS and select **Submit**.
7. Go to the **Network Configuration > Add AAA Client** page.
8. Add **AP Hostname**, **AP IP Address**, and **Community String** (for the key).

9. Enter the **Password** that will be used to authenticate into the WDS and select **Submit**.

For additional and more general information about ACS, refer to "Configuring ACS Servers" on page 71.

## Configuring Cisco WLSE Rogue Scanning

The **OV3600 Setup > WLSE** page allows OV3600 to integrate with the Cisco Wireless LAN Solution Engine (WLSE). OV3600 can discover APs and gather rogue scanning data from the Cisco WLSE.

Figure 31 illustrates and itemizes the OV3600 settings for communication that is enabled between OV3600 and WLSE.

**Figure 31: OV3600 Setup > WLSE > Add New WLSE Page Illustration**

Perform the following steps for optional configuration of OV3600 for support of Cisco WLSE rogue scanning.

1. To add a Cisco WLSE server to OV3600, navigate to the **OV3600 Setup > WLSE** page and select **Add**. Complete the fields in this page. Table 34 describes the settings and default values.

**Table 34: OV3600 Setup > WLSE Fields and Default Values**

Setting	Default	Description
Hostname/IP Address	None	Designates the IP address or DNS Hostname for the WLSE server, which must already be configured on the Cisco WLSE server.
Protocol	HTTP	Specify whether to use HTTP or HTTPS when polling the WLSE.
Port	1741	Defines the port OV3600 uses to communicate with the WLSE server.
Username	None	Defines the username OV3600 uses to communicate with the WLSE server. The username and password must be configured the same way on the WLSE server and on OV3600.  The user needs permission to display faults to discover rogues and inventory API (XML API) to discover manageable APs. As derived from a Cisco limitation, only credentials with alphanumeric characters (that have only letters and numbers, not other symbols) allow OV3600 to pull the necessary XML APIs.

**Table 34: OV3600 Setup > WLSE Fields and Default Values (Continued)**

Setting	Default	Description
Password	None	Defines the password OV3600 uses to communicate with the WLSE server. The username and password must be configured the same way on the WLSE server and on OV3600.  As derived from a Cisco limitation, only credentials with alphanumeric characters (that have only letters and numbers, not other symbols) allow OV3600 to pull the necessary XML APIs.
Poll for AP Discovery; Poll for Rogue Discovery	Yes	Sets the method by which OV3600 uses WLSE to poll for discovery of new APs and/or new rogue devices on the network.
Polling Period	10 minutes	Determines how frequently OV3600 polls WLSE to gather rogue scanning data.

- After you have completed all fields, select **Save**. OV3600 is now configured to gather rogue information from WLSE rogue scans. As a result of this configuration, any rogues found by WLSE appear on the **RAPIDS > List** page.

What Next?

- Go to additional tabs in the **OV3600 Setup** section to continue additional setup configurations.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 installation.


## Configuring ACS Servers

This is an optional configuration. The **OV3600 Setup > ACS** page allows OV3600 to poll one or more Cisco ACS servers for wireless username information. When you specify an ACS server, OV3600 gathers information about your wireless users. Refer to "[Setting Up Device Types](#)" on page 66 if you want to use your ACS server to manage your OV3600 users.

Perform these steps to configure ACS servers:

- Go to the **OV3600 Setup > ACS** page. This page displays current ACS setup, as illustrated in [Figure 32](#).

**Figure 32: OV3600 Setup > ACS Page Illustration**

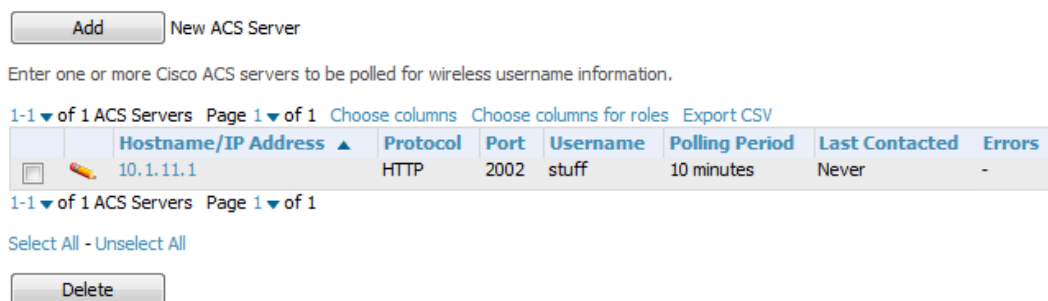

- Select **Add** to create a new ACS server, or select a pencil icon to edit an existing server. To delete an ACS server, select that server and select **Delete**. When selecting **Add** or edit, the **Details** page appears, as illustrated in [Figure 33](#).

**Figure 33:** OV3600 Setup > ACS > Add/Edit Details Page Illustration

The screenshot shows a web form titled "ACS Server". It contains the following fields and controls:

- Hostname/IP Address: Text input field.
- Protocol: Dropdown menu with "HTTP" selected.
- Port (1-65535): Text input field with "2002" entered.
- Username: Text input field.
- Password: Text input field.
- Confirm Password: Text input field.
- Polling Period: Dropdown menu with "10 minutes" selected.
- Buttons: "Add" and "Cancel" buttons at the bottom.

3. Complete the settings on **OV3600 Setup > ACS > Add/Edit Details**. [Table 35](#) describes these fields:

**Table 35:** OV3600 Setup > ACS > Add/Edit Details Fields and Default Values

Field	Default	Description
IP/Hostname	None	Sets the DNS name or the IP address of the ACS Server.
Protocol	HTTP	Launches a drop-down menu specifying the protocol OV3600 uses when it polls the ACS server.
Port	2002	Sets the port through which OV3600 communicates with the ACS. OV3600 generally communicates over port 2002.
Username	None	Sets the Username of the account OV3600 uses to poll the ACS server.
Password	None	Sets the password of the account OV3600 uses to poll the ACS server.
Polling Period	10 min	Launches a drop-down menu that specifies how frequently OV3600 polls the ACS server for username information.

4. Select **Add** to finish creating the new ACS server, or **Save** to finish editing an existing ACS server.
5. The ACS server must have logging enabled for passed authentications. Enable the **Log to CSV Passed Authentications report** option, as follows:
  - Log in to the ACS server, select **System Configuration**, then in the **Select** frame, select **Logging**.
  - Under **Enable Logging**, select **CSV Passed Authentications**. The default logging options function and support OV3600. These include the two columns OV3600 requires: **User-Name** and **Caller-ID**.

What Next?

- Go to additional tabs in the OV3600 Setup section to continue additional setup configurations.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 installation.



## Integrating OV3600 with an Existing Network Management Solution (NMS)

This is an optional configuration. The **OV3600 Setup > NMS** configuration page allows OV3600 to integrate with other Network Management Solution (NMS) consoles. This configuration enables advanced and interoperable functionality as follows:

- OV3600 can forward WLAN-related SNMP traps to the NMS, or OV3600 can send SNMPv1 or SNMPv2 traps to the NMS.
- OV3600 can be used in conjunction with Hewlett-Packard's ProCurve Manager.
- The necessary OV3600 MIB files for either type of NMS interoperability are downloaded from the **OV3600 Setup > NMS** page. For additional information, contact support.

Perform these steps to configure NMS support in OV3600:

1. Go to **OV3600 Setup > NMS**, illustrated in [Figure 34](#).

**Figure 34:** *OV3600 Setup > NMS Page Illustration*

**NMS Integration**

OV3600 can send SNMPv1, SNMPv2 traps or SNMPv3 informs to NMS servers. First, add one or more NMS servers below, then select *NMS* as a notification option for *triggers*.

The *Sync* action will send one traps/informs for each device managed by OV3600 to notify an NMS of each one's up/down and configuration status.

[Download](#) the OV3600 MIB files.

**NMS servers:**

New NMS Server

	Hostname ▲	Port	SNMP Version	Enabled	Send Configuration Traps
<input type="checkbox"/>	10.2.32.213	162	2c	Yes	Yes

Select All - Unselect All

No NMS servers for other roles found

[Netcool/OMNibus Integration](#)

[HP ProCurve Manager Integration](#)

2. Select **Add** to integrate a new NMS server, or select the pencil icon to edit an existing server. Provide the information described in [Table 36](#):

**Table 36:** *OV3600 Setup > NMS Integration Add/Edit Fields and Default Values*

Setting	Default	Description
Hostname	None	Cites the DNS name or the IP address of the NMS.
Port	162	Sets the port OV3600 uses to communicate with the NMS. <b>NOTE:</b> OV3600 generally communicates via SNMP traps on port 162.

**Table 36: OV3600 Setup > NMS Integration Add/Edit Fields and Default Values (Continued)**

Setting	Default	Description
Community String	None	Sets the community string used to communicate with the NMS.
SNMP Version	2C	Sets the SNMP version of the traps sent to the Host.
Enabled	Yes	Enables or disables trap logging to the specified NMS.
Send Configuration Traps	Yes	Enables NMS servers to transmit SNMP configuration traps.

3. The **NMS Integration Add/Edit** page includes the **Netcool/OMNIbus Integration** link to information and instructions. The IBM Tivoli Netcool/OMNIbus operations management software enables automated event correlation and additional features resulting in optimized network uptime.
4. The **NMS Integration Add/Edit** page includes the **HP ProCurve Manager Integration** link. Select this link for additional information, zip file download, and brief instructions for installation with OV3600. Select **Add** to finish creating the NMS server or **Save** to configure an existing NMS server.

What Next?

- Go to additional tabs in the OV3600 Setup section to continue additional setup configurations.
- Complete the required configurations in this chapter before proceeding. Alcatel-Lucent support remains available to you for any phase of OV3600 installation.

## Auditing PCI Compliance on the Network

This section describes PCI requirements and auditing functions in OV3600. It includes the following topics:

- "Introduction to PCI Requirements" on page 74
- "PCI Auditing" on page 74
- "Enabling or Disabling PCI Auditing" on page 76

### Introduction to PCI Requirements

OV3600 supports wide security standards and functions in the wireless network. One component of network security is the optional deployment of Payment Card Industry (PCI) Auditing.

The Payment Card Industry (PCI) Data Security Standard (DSS) establishes multiple levels in which payment cardholder data is protected in a wireless network. OV3600 supports PCI requirements according to the standards and specifications set forth by the following authority:

- Payment Card Industry (PCI) Data Security Standard (DSS)
  - PCI Security Standards Council Web site  
<https://www.pcisecuritystandards.org>
  - *PCI Quick Reference Guide*, Version 1.2 (October 2008)  
[https://www.pcisecuritystandards.org/pdfs/pci\\_ssc\\_quick\\_guide.pdf](https://www.pcisecuritystandards.org/pdfs/pci_ssc_quick_guide.pdf)

### PCI Auditing

PCI Auditing in OV3600 allows you to monitor, audit, and demonstrate PCI compliance on the network. There are five primary pages in which you establish, monitor, and access PCI auditing, as follows:

- The **OV3600 Setup > PCI Compliance** page enables or disables PCI Compliance monitoring on the network, and displays the current compliance status on the network. See "Enabling or Disabling PCI Auditing" on page 76.

- The **Reports > Definitions** page allows you to create custom-configured and custom-scheduled PCI Compliance reports. See "[Reports > Definitions Page Overview](#)" on page 281.
- The **Reports > Generated** page lists PCI Compliance reports currently available, and allows you to generate the latest daily version of the PCI Compliance Report with a single select. Refer to "[Reports > Generated Page Overview](#)" on page 283.
- The **APs/Devices > PCI Compliance** page enables you to analyze PCI Compliance for any specific device on the network. This page is accessible when you select a specific device from the **APs/Devices > Monitor** page. First, you must enable this function through OV3600 Setup. See "[Enabling or Disabling PCI Auditing](#)" on page 76.
- The **PCI Compliance Report** offers additional information. Refer to "[Using the PCI Compliance Report](#)" on page 314. This report not only contains **Pass** or **Fail** status for each PCI requirement, but cites the action required to resolve a **Fail** status when sufficient information is available.



When any PCI requirement is enabled on OV3600, OV3600 grades the network as pass or fail for the respective PCI requirement. Whenever a PCI requirement is not enabled in OV3600, OV3600 does not monitor the network's status in relation to that requirement, and cannot designate Pass or Fail network status. OV3600 users without RAPIDS visibility enabled will not see the 11.1 PCI requirements in the PCI Compliance Report.

**Table 37: PCI Requirements and Support in OV3600**

Requirement	Description
1.1	<p>Monitoring configuration standards for network firewall devices</p> <p>When Enabled: PCI Requirement 1.1 establishes firewall and router configuration standards.</p> <p>A device fails Requirement 1.1 if there are mismatches between the desired configuration and the configuration on the device.</p> <p>When Disabled: firewall router and device configurations are not checked for PCI compliance, and Pass or Fail status is not reported or monitored.</p>
1.2.3	<p>Monitoring firewall installation between any wireless networks and the cardholder data environment</p> <p>When Enabled: A device passes requirement 1.2.3 if it can function as a stateful firewall.</p> <p>When Disabled: firewall router and device installation are not checked for PCI compliance.</p>
2.1	<p>Monitoring the presence of vendor-supplied default security settings</p> <p>When Enabled: PCI Requirement 2 establishes the standard in which all vendor-supplied default passwords are changed prior to a device's presence and operation in the network.</p> <p>A device fails requirement 2.1 if the username, passwords or SNMP credentials being used by OV3600 to communicate with the device are on a list of forbidden default credentials. The list includes common vendor default passwords, for example.</p> <p>When Disabled: device passwords and other vendor default settings are not checked for PCI compliance.</p>

**Table 37: PCI Requirements and Support in OV3600 (Continued)**

Requirement	Description
2.1.1	<p>Changing vendor-supplied defaults for wireless environments</p> <p>When Enabled: A device fails requirement 2.1.1 if the passwords, SSIDs, or other security-related settings are on a list of forbidden values that OV3600 establishes and tracks. The list includes common vendor default passwords. The user can input new values to achieve compliance.</p> <p>When Disabled: network devices are not checked for forbidden information and PCI Compliance is not established.</p>
4.1.1	<p>Using strong encryption in wireless networks</p> <p>When Enabled: PCI Requirement 4 establishes the standard by which payment cardholder data is encrypted prior to transmission across open public networks. PCI disallows WEP encryption as an approved encryption method after June 20, 2010. A device fails requirement 4.1.1 if the desired or actual configuration reflect that WEP is enabled on the network, or if associated users can connect with WEP.</p> <p>When Disabled: OV3600 cannot establish a pass or fail status with regard to PCI encryption requirements on the network.</p>
11.1	<p>Identifying unauthorized wireless devices.</p> <p>When enabled, a report will indicate a failure if there are unacknowledged rogue APs present in RAPIDS or there are no wireless rogues discovered in the last three months.</p>
11.4	<p>Using intrusion-detection or intrusion-prevention systems to monitor all traffic</p> <p>When Enabled: OV3600 reports pass or fail status when monitoring devices capable of reporting IDS events. Recent IDS events are summarized in the PCI Compliance report or the IDS Report.</p> <p>When Disabled: OV3600 does not monitor the presence of PCI-compliant intrusion detection or prevention systems, nor can it report <b>Pass</b> or <b>Fail</b> status with regard to IDS events.</p>

## Enabling or Disabling PCI Auditing

Perform these steps to verify status and to enable or disable OV3600 support for PCI 1.2 requirements. enabling one or all PCI standards on OV3600 enables real-time information and generated reports that advise on Pass or Fail status. The PCI auditing supported in OV3600 is reported in Table 1 in the "PCI Auditing" on page 74 section.

1. To determine what PCI Compliance standards are enabled or disabled on OV3600, navigate to the **OV3600 Setup > PCI Compliance** page, illustrated in [Figure 35](#).

**Figure 35: OV3600 Setup > PCI Compliance page illustration**

PCI Requirement ▲	Description	Enabled
1.1	Configuration standards for routers. A device fails if there are mismatches between the desired configuration and the configuration on the device.	Yes
1.2.3	Install firewalls between any wireless networks and the cardholder data environment. A device passes if it can function as a stateful firewall.	Yes
2.1	Always change vendor-supplied defaults. A device fails if the usernames, passwords or SNMP credentials being used by AMP to communicate with the device are on a list of forbidden credentials. The list includes common manufacturer defaults.	Yes
2.1.1	Change vendor-supplied defaults for wireless environments. A device fails if the passphrases, SSIDs or other security-related settings are on a list of forbidden values. The list includes common manufacturer defaults.	Yes
4.1.1	Use strong encryption in wireless networks. A device fails if the desired or actual configuration reflect that WEP is enabled or if associated clients can connect with WEP.	Yes
11.1	Identify unauthorized wireless devices. A report will indicate a failure if there are unacknowledged rogue APs present in RAPIDS or there are no wireless rogues discovered in the last three months.	Yes
11.4	Use intrusion-detection systems and/or intrusion-prevention systems to monitor all traffic. A report will indicate a "pass" for the requirement if AMP is monitoring devices capable of reporting IDS events. Recent IDS events will be summarized in the report.	Yes

- To enable, disable, or edit any category of PCI Compliance monitoring in OV3600, select the pencil icon next to the category. The Default Credential Compliance page displays for the respective PCI standard.
- Create changes as required. The edit pages will vary based on the PCI Requirement that you select. [Figure 36](#) shows an example of how to edit the PCI 2.1 requirement.

**Figure 36: Default Credential Compliance for PCI Requirements**

**PCI Requirement 2.1**

**Default Credential Compliance**

Enabled:  Yes  No

Forbidden Credentials:  
Enter one credential per line.

```
root
admin
public
private
Cisco
Motorola
```

- Select **Save**.
- To view and monitor PCI auditing on the network, use generated or daily reports. See "[Creating, Running, and Emailing Reports](#)" on page 281. In addition, you can view the real-time PCI auditing of any given device online. Perform these steps:

- a. Go to the **APs/Devices > List** page.
- b. Select a specific device. The **Monitor** page for that device displays. The **APs/Devices** page also displays a **Compliance** subtab in the menu bar.
- c. Select **Compliance** to view complete PCI compliance auditing for that specific device.

## Deploying WMS Offload

### Overview of WMS Offload in OV3600

This section describes the Wireless LAN Management Server (WMS) offload infrastructure. WMS Offload is supported with the following two requirements:

- AOS-W Version 2.5.4 or later
- OV3600 Version 6.0 or later

The WMS feature is an enterprise-level hardware device and server architecture with managing software for security and network policy. There are three primary components of the WMS deployment:

- Air Monitor AP devices establish and monitor RF activity on the network.
- The WMS server manages devices and network activity to include rogue AP detection and enforcement of network policy.
- The OV3600 graphical user interface (GUI) allows users to access and use the WMS functionality.

*WMS Offload* is the ability to place the burden of the WMS server data and GUI functions on OV3600. WMS master switches provide this data so that OV3600 can support rigorous network monitoring capabilities.

Refer to:

- ["General Configuration Tasks Supporting WMS Offload in OV3600" on page 78](#)
- ["Additional Information Supporting WMS Offload" on page 79](#)

### General Configuration Tasks Supporting WMS Offload in OV3600

WMS Offload must be enabled with a six-fold process and related configuration tasks as follows:

1. Configure WLAN switches for optimal OV3600 monitoring.
  - a. Disable debugging.
  - b. Ensure the OV3600 server is a trap receiver host.
  - c. Ensure proper traps are enabled.
2. Configure OV3600 to optimally monitor the OV3600 infrastructure.
  - a. Enable WMS offload on the **OV3600 Setup > General** page.
  - b. Configure SNMP communication.
  - c. Create a proper policy for monitoring the OV3600 infrastructure.
  - d. Discover the infrastructure.
3. Configure device classification.
  - a. Set up rogue classification.
  - b. Set up rogue classification override.
  - c. Establish user classification override devices.
4. Deploy AOS-W-specific monitoring features.
  - a. Enable remote AP and wired network monitoring.
  - b. View switch license information.


5. Convert existing floor plans to VisualRF to include the following elements:
  - Alcatel-Lucent AOS-W
  - RF Plan
6. Use RTLS for increasing location accuracy (optional).
  - a. Enable RTLS service on the OV3600 server.
  - b. Enable RTLS on AOS-W infrastructure.

### **Additional Information Supporting WMS Offload**

Refer to the *OmniVista 3600 Air Manager 8.0 Best Practices Guide* for additional information, including detailed concepts, configuration procedures, restrictions, AOS-W infrastructure, and OV3600 version differences in support of WMS Offload.

This section describes the deployment of device groups within OV3600. The section below describes the pages or focused subtabs available on the Groups tab. Note that the available subtabs can vary significantly from one device group to another. One or more subtabs may not appear, depending on the **Default Group** display option selected on the **OV3600 SetupSetup > General** page and the types of devices you add to OV3600.

**Figure 37:** Subtabs under the **Group** tab



**Table 38:** Groups pages

Menu Item	Description	Refer to
List	This page is the default page in the <b>Groups</b> section of OV3600. It lists all groups currently configured in OV3600 and provides the foundation for all group-level configurations.	"Viewing All Defined Device Groups" on page 83
Monitor	This page displays client and bandwidth usage information, lists devices in a given group, provides an <b>Alert Summary</b> table for monitoring alerts for the group, and provides a detailed <b>Audit Log</b> for group-level activity.	"Viewing Device Monitoring Statistics" on page 139
Basic	This page appears when you create a new group on the <b>Groups &gt; List</b> page. Once you define a group name, OV3600 displays the <b>Basic</b> page from which you configure many group-level settings. This page remains available for any device group configured in OV3600.	"Configuring Basic Group Settings" on page 84
Templates	This page manages templates for any device group. Templates allow you to manage the configuration of Dell Networking W-Series, 3Com, Alcatel-Lucent, Aruba Networks, Cisco Aironet IOS, Cisco Catalyst switches, Enterasys, HP, Nortel, Symbol and Trapeze devices in a given group using a configuration file. Variables in such templates configure device-specific properties, such as name, IP address and channel. Variables also define group-level properties.	"Creating and Using Templates" on page 182
Security	This page defines general security settings for device groups, to include RADIUS, encryption, and additional security settings on devices.	"Configuring Group Security Settings" on page 94
SSID	This page sets SSIDs, VLANs, and related parameters in device groups.	"Configuring Group SSIDs and VLANs" on page 98



**Table 38: Groups pages (Continued)**

Menu Item	Description	Refer to
AAA Servers	This page configures authentication, authorization, and accounting settings in support of RADIUS servers for device groups.	"Adding and Configuring Group AAA Servers" on page 93
Radio	This page defines general 802.11 radio settings for device groups.	"Configuring Radio Settings for Device Groups" on page 103
Controller Config	This page manages AOS-W Device Groups, AP Overrides, and other profiles specific to Alcatel-Lucent devices on the network. Use this page as an alternative to the <b>Device Setup &gt; Alcatel-Lucent &gt; Configuration</b> page. The appearance of this page varies depending on whether OV3600 is configured for global configuration or group configuration.	<i>Alcatel-Lucent Controller Configuration Guide</i>
Instant Config	This page manages Alcatel-Lucent Instant devices on the network.	<i>Alcatel-Lucent Instant User Guide</i>
Cisco WLC Config	This page consolidates controller-level settings from the Group Radio, Security, SSIDs, Cisco WLC Radio and AAA Server pages into one navigation tree that is easier to navigate, and has familiar layout and terminology. Bulk configuration for per-thin AP settings, previously configured on the Group LWAPP APs tab, can now be performed from <b>Modify Devices</b> on the <b>APs/Devices &gt; List</b> page.	"Cisco WLC Group Configuration" on page 106
PTMP	This page defines settings specific to Proxim MP devices when present. As such, this page is only available when a Proxim MP device is added to this group.	"Configuring Group PTMP Settings" on page 113.
Proxim Mesh	This page defines mesh AP settings specific to Proxim devices when present.	"Configuring Proxim Mesh Radio Settings" on page 114
MAC ACL	This page defines MAC-specific settings that apply to Proxim, Symbol, and ProCurve 520 devices when present.	"Configuring Group MAC Access Control Lists" on page 116

**Table 38: Groups pages (Continued)**

Menu Item	Description	Refer to
Firmware	This page manages firmware files for many devices.	"Specifying Minimum Firmware Versions for APs in a Group" on page 117
Compare	This page allows you to compare line item-settings between two device groups. On the <b>Groups &gt; List</b> page, select the <b>Compare two groups</b> link, select the two groups from the drop-down menus, and then select <b>Compare</b> . Refer to	"Comparing Device Groups" on page 119

This section also provides the following additional procedures for group-level configurations:

- "Deleting a Group" on page 120
- "Changing Multiple Group Configurations " on page 120
- "Modifying Multiple Devices" on page 121
- "Using Global Groups for Group Configuration" on page 124

## OV3600 Groups Overview

Enterprise APs, controllers, routers, and switches have hundreds of variable settings that must be configured precisely in order to achieve optimal performance and network security. Configuring all settings on each device individually is time consuming and error prone. OV3600 addresses this challenge by automating the processes of device configuration and compliance auditing. At the core of this approach is the concept of **Device Groups**, which have the following functions and benefits:

- OV3600 allows certain settings to be managed efficiently at the Group level, while others are managed at an individual device level.
- OV3600 defines a *Group* as a subset of the devices on the wireless LAN, ranging in size from one device to hundreds of devices that share certain common configuration settings.
- *Groups* can be defined based on geography (such as 5th Floor APs), usage or security policies (such as Guest Access APs), function (such as Manufacturing APs), or any other appropriate variable.
- *Devices* within a group may originate from different vendors or hardware models, but all devices within a Group share certain basic configuration settings.

Typical group configuration variables include the following settings:

- Basic settings - SSID, SNMP polling interval, and so forth
- Security settings - VLANs, WEP, 802.1x, ACLs, and so forth
- Radio settings - data rates, fragmentation threshold, RTS threshold, DTIM, preamble, and so forth.

When configuration changes are applied at a *group level*, they are assigned automatically to every device within that group. Such changes must be applied with every device in **Managed** mode. **Monitor** mode is the more common mode.




---

Always review the Audit page before pushing configurations to a device or group.

---

Individual device settings—such as device name, RF channel selection, RF transmission power, antenna settings, and so forth—typically should not be managed at a group level and must be individually configured for optimal performance. Individual AP settings are configured on the **APs/Devices > Manage** page.

You can create as many different groups as required. Administrators usually establish groups that range in size from five to 100 wireless devices.

Group configuration can be enhanced with the OV3600 *Global Groups* feature, which lets you create Global Groups with configurations that are pushed to individual Subscriber Groups.

The columns in the default view of the **Groups > Monitor** page is defined in OmniVista 3600 Air Manager and cannot be modified. However, you can create a new view of this page that returns custom information based on the filter parameters and data columns you selected when creating that new view. For more information, see ["Creating Custom Filtered Views"](#) on page 140.

## Viewing All Defined Device Groups

To display a list of all defined groups, browse to the **Groups > List** page, illustrated in [Figure 38](#).

**Figure 38:** *Groups > List Page Illustration (partial view)*

Name	Up/Down Status	Polling Period	Total Devices	Changes	SSID	Down	Mismatched	Ignored	Clients	Usage	VPN Sessions	Duplicate
133 PoC Lab	5 minutes		68	-		45	27	0	151	2.13 Mbps	0	
134-AP	5 minutes		15		1341-Jey-aw	4	13	0	42	672.19 Kbps	0	
AB	5 minutes		4		ARAP, RTLS	0	1	0	2	0.065 Kbps	0	
AD	5 minutes		2		-	2	0	0	0	-	0	
Aria-home	5 minutes		2		-	0	1	0	1	0.256 Kbps	0	

[Table 39](#) describes the columns in the **Groups > List** page.

**Table 39:** *Groups > List Columns*

Column	Description
Add New Group	Launches a page that enables you to add a new group by name and to define group parameters for devices in that group. For additional information, refer to <a href="#">"Configuring Basic Group Settings"</a> on page 84.
Manage (wrench icon)	Goes to the <b>Groups &gt; Basic</b> configuration page for that group. Hover your mouse over the icon to see a list of shortcuts to group-specific subtabs that would appear across the navigation section if this group is selected. (See <a href="#">Figure 39</a> in <a href="#">"Configuring Basic Group Settings"</a> on page 84.)
Name	Uniquely identifies the group by location, vendor, department or any other identifier (such as 'Accounting APs,' 'Floor 1 APs,' 'Cisco devices,' '802.1x APs,' and so forth).
Up/Down Status Polling Period	The time between Up/Down SNMP polling periods for each device in the group. Detailed SNMP polling period information is available on the <b>Groups &gt; Basic</b> configuration page. Note that by default, most polling intervals do not match the up/down period.
Total Devices	Total number of devices contained in the group including APs, controllers, routers, or switches.
Changes	Displays when a group has unapplied changes.

**Table 39: Groups > List Columns (Continued)**

Column	Description
Is Global Group	If a group is designated as global, it may not contain APs but it may be used as a template for other groups. This column may also indicate <b>Yes</b> if this group has been pushed to OV3600 from a Master Console.
Global Group	Specifies which group this Subscriber Group is using as its template.
SSID	The SSID assigned to supported device types within the group.
Down	The number of access points within the group that are not reachable via SNMP or are no longer associated to a controller. Note that thin APs are not directly polled with SNMP, but are polled through the controller. That controller may report that the thin AP is down or is no longer on the controller. At this point, OV3600 classifies the device as down.
Mismatched	The number of devices within the group that are in a mismatched state.
Ignored	The number of ignored devices in that group.
Clients	The number of mobile users associated with all access points within the group. To avoid double counting of clients, clients are only listed in the group of the AP with which they are associated. Note that device groups with only controllers in them report no clients.
Usage	A running average of the sum of bytes in and bytes out for the managed radio page.
VPN Sessions	Number of active (connected) VPN sessions under this group.
Duplicate	Creates a new group with the name <b>Copy of &lt;Group Name&gt;</b> with identical configuration settings. (Alcatel-Lucent configuration settings will have to be manually added back.)



When you first configure OV3600, there is only one default group labeled **Access Points**. If you have no other groups configured, refer to "[Configuring Basic Group Settings](#)" on page 84.

## Configuring Basic Group Settings

The first default device group that OV3600 sets up is the **Access Points** group, but you can use this procedure to add and configure any device group. Perform these steps to configure basic group settings, then continue to additional procedures to define additional settings as required.

- To create a new group, select **Add** on the **Groups > List** page. Enter a group name and select **Add**. The **Groups > Basic** page appears.
- To edit an existing device group, select the **manage** (wrench) icon next to the group. The **Groups > Basic** page appears. If you mouse over an existing group's wrench, a popup menu displays, allowing you to select options such as **Basic**, **Templates**, **Security**, **SSIDs**, **AAA Servers**, **Radio**, **Controller Config**, **Instant Config**, and **Cisco WLC Config**. See [Figure 39](#).



The mouse-over list can vary based on a group's settings.

**Figure 39:** Pop-up When Hovering over Wrench Icon in Groups > List

Compare two groups  
1-20 of 42 Groups Page 1 of 2 > >| Choose columns Choose

	Name ▲	Up/Down Status Polling Period
<input type="checkbox"/>	1330 PoC Lab	5 minutes
<input type="checkbox"/>	1341-Ap	5 minutes
<input type="checkbox"/>	AB	5 minutes
<input type="checkbox"/>	ADP	5 minutes
<input type="checkbox"/>	Aria-home	5 minutes
<input type="checkbox"/>	Basic	5 minutes
<input type="checkbox"/>	Templates	5 minutes
<input type="checkbox"/>	Controller Config	10 minutes
<input type="checkbox"/>	Switch Config	5 minutes
<input type="checkbox"/>	Cisco WLC Config	5 minutes
<input type="checkbox"/>	Instant Config	5 minutes
<input type="checkbox"/>	Cisco Gear	5 minutes

Figure 40 illustrates one example of the **Groups > Basic** page.

Figure 40: Groups > Basic Page Illustration

<b>Basic</b> Name: Cisco Gear Missed SNMP Poll Threshold (1-100): 1 Regulatory Domain: Netherlands Timezone: AMP system time For scheduling group configuration changes Allow One-to-One NAT: <input type="radio"/> Yes <input checked="" type="radio"/> No Audit Configuration on Devices: Toggling this will set all devices in this group to 'Monitor Only' <input checked="" type="radio"/> Yes <input type="radio"/> No	
<b>Global Groups</b> Use Global Group: <input type="radio"/> Yes <input checked="" type="radio"/> No	
<b>SNMP Polling Periods</b> Up/Down Status Polling Period: 5 minutes Override Polling Period for Other Services: <input checked="" type="radio"/> Yes <input type="radio"/> No AP Interface Polling Period: 10 minutes Client Data Polling Period: 10 minutes Thin AP Discovery Polling Period: 5 minutes Device-to-Device Link Polling Period: 5 minutes 802.11 Counters Polling Period: 15 minutes Rogue AP and Device Location Data Polling Period: 30 minutes CDP Neighbor Data Polling Period: 30 minutes Mesh Discovery Polling Period: 15 minutes	
<b>Routers and Switches</b> Read ARP Table: 4 hours Read CDP Table for Device Discovery: 2 hours Read Bridge Forwarding Table: 4 hours Interface Up/Down Polling Period: 10 minutes Interface Bandwidth Polling Period: 15 minutes Interface Error Counter Polling Period: 30 minutes Poll 802.3 error counters: <input type="radio"/> Yes <input checked="" type="radio"/> No Poll Cisco interface error counters: <input type="radio"/> Yes <input checked="" type="radio"/> No	
<b>Notes</b> Notes:	
<b>Group Display Options</b> Show device settings for: All devices	
<b>Automatic Static IP Assignment</b> Assign Static IP Addresses to Devices: <input type="radio"/> Yes <input checked="" type="radio"/> No	
<b>Spanning Tree Protocol</b> Spanning Tree Protocol: Proxim only <input type="radio"/> Yes <input checked="" type="radio"/> No	
<b>NTP</b> NTP Server #1: 69.65.40.29 NTP Server #2: 72.18.205.157 NTP Server #3: 109.169.60.186 UTC Time Zone: 0 Daylight Saving Time: <input checked="" type="radio"/> Yes <input type="radio"/> No	
<b>Cisco IOS/Catalyst</b> SNMP Version: 2c Cisco IOS CLI Communication: <input checked="" type="radio"/> Telnet <input type="radio"/> SSH Cisco IOS Config File Communication: <input checked="" type="radio"/> TFTP <input type="radio"/> SCP	
<b>Cisco WLC</b> SNMP Version: 2c CLI Communication: <input type="radio"/> Telnet <input checked="" type="radio"/> SSH	
<b>Proxim/Avaya</b> SNMP Version: 1 Enable DNS Client: <input type="radio"/> Yes <input checked="" type="radio"/> No HTTP Server Port (1-65535): 80 DST Offset: +1 Country Code: United States	
<b>HP ProCurve</b> SNMP Version: 2c ProCurve XL/ZLWeSM CLI Communication: <input checked="" type="radio"/> Telnet <input type="radio"/> SSH Controller SNMP Version: 2c	
<b>Symbol</b> SNMP Version: 2c Client Inactivity Timeout (3-600 min): 3 Symbol Controller CLI Communication: WS5100, RFS4000, RFS6000, and RFS7000 controllers only <input checked="" type="radio"/> Telnet <input type="radio"/> SSH SSH Version: v1 <input type="radio"/> v2 WS2000 controllers only Web Config Interface: <input checked="" type="radio"/> Yes <input type="radio"/> No	
<b>Aruba</b> SNMP Version: 3 Offload WMS Database: <input type="radio"/> Yes <input checked="" type="radio"/> No Aruba GUI Config: <input checked="" type="radio"/> Yes <input type="radio"/> No Ignore Rogues Discovered by Remote APs: <input type="radio"/> Yes <input checked="" type="radio"/> No Delete Certificates On Controller: <input type="radio"/> Yes <input checked="" type="radio"/> No	
<b>3Com/Enterasys/Nortel/Trapeze</b> SNMP Version: 2c	
<b>Universal Devices, Routers and Switches</b> SNMP Version: 1	
<b>Automatic Authorization</b> Add New Controllers and Autonomous Devices Location: Use Global Setting Current Global Setting for Controllers: New Device List Add New Thin APs Location: Use Global Setting Current Global Setting for Thin APs: New Device List	
<b>Virtual Controller Certificate</b> CA Cert: -- None -- Server Cert: -- None --	
<b>Maintenance Windows</b> Add New AP Group Maintenance Window	
Save Save and Apply Revert	

1. Define the settings in the **Basic** and **Global Group** sections. [Table 40](#) describes several typical settings and default values of this **Basic** section.

**Table 40: Basic and Global Groups Fields and Default Values**

Setting	Default	Description
Name	Defined when first adding the group	Displays or changes the group name. As desired, use this field to set the name to uniquely identify the group by location, vendor, department, or any other identifier (such as Accounting APs, Cisco devices, 802.1x APs, and so forth).
Missed SNMP Poll Threshold (1-100)	1	Sets the number of Up/Down SNMP polls that must be missed before OV3600 considers a device to be down. The number of SNMP retries and the SNMP timeout of a poll can be set on the <b>Device Setup &gt; Communication</b> page.
Regulatory Domain	United States	Sets the regulatory domain in OV3600, limiting the selectable channels for APs in the group.
Timezone	OV3600 System Time	Allows group configuration changes to be scheduled relative to the time zone in which the devices are located. This setting is used for scheduling group-level configuration changes.
Allow One-to-One NAT	No	Allows OV3600 to talk to the devices on a different IP address than the one configured on the device. <b>NOTE:</b> If enabled, the LAN IP Address listed on the <b>AP/Devices &gt; Manage</b> configuration page under the <b>Settings</b> area is different than the IP Address under the <b>Device Communication</b> area.
Audit Configuration on Devices	Yes	Auditing and pushing of configuration to devices can be disabled on all the devices in the group. Once disabled, all the devices in the groups will not be counted towards mismatched devices.
Is Global Group	No	If specified as <b>Yes</b> , then this group can be selected in the Use Global Group drop down menu for future group configurations.
Use Global Group	No	When enabled, this field allows you to define the device group to be a Global Group. Refer to " <a href="#">Using Global Groups for Group Configuration</a> " on page 124.

2. Complete the **SNMP Polling Periods** section. The information in this section overrides default settings. [Table 41](#) describes the SNMP polling settings.

**Table 41: SNMP Polling Periods Fields and Default Values**

Setting	Default	Description
Up/Down Status Polling Period	5 minutes	Sets time between Up/Down SNMP polling for each device in the group. The Group SNMP Polling Interval overrides the global parameter configured on the <b>Device Setup &gt; Communication</b> page. An initial polling interval of 5 minutes is best for most networks.
Override Polling Period for Other Services	No	Enables or disables overriding the base SNMP Polling Period. If you select <b>Yes</b> , the other settings in the SNMP Polling Periods section are activated, and you can override default values.

**Table 41: SNMP Polling Periods Fields and Default Values (Continued)**

Setting	Default	Description
AP Interface Polling Period	10 minutes	Sets the interval at which OV3600 polls for radio monitoring and bandwidth being used by a device.
Client Data Polling Period	10 minutes	Sets time between SNMP polls for client data for devices in the group.
Thin AP Discovery Polling Period	15 minutes	Sets time between SNMP polls for Thin AP Device Discovery. Controllers are the only devices affected by this polling interval.
Device-to-Device link Polling Period	5 minutes	Sets time between SNMP polls for Device-to-Device link polling. Mesh APs are the only devices affected by this polling interval.
802.11 Counters Polling Period	15 minutes	Sets time between SNMP polls for 802.11 Counter information.
Rogue AP and Device Location Data Polling Period	30 minutes	Sets time between SNMP polls for Rogue AP and Device Location Data polling.
CDP Neighbor Data Polling Period	30 minutes	Sets the frequency in which this group polls the network for Cisco Discovery Protocol (CDP) neighbors.
Mesh Discovery Polling Period	15 minutes	Sets time between SNMP polls for Mesh Device Discovery.

- To configure support for routers and switches in the group, locate the **Routers and Switches** section and adjust these settings as required. This section defines the frequency in which all devices in the group polled. These settings can be disabled entirely as desired. [Table 42](#) describes the SNMP polling settings.

**Table 42: Routers and Switches Fields and Default Values**

Setting	Default	Description
Read ARP Table	4 hours	Sets the frequency in which devices poll routers and switches for Address Resolution Protocol (ARP) table information. This setting can be disabled, or set to poll for ARP information in a range from every 15 seconds to 12 hours.
Read CDP Table for Device Discovery	4 hours	For Cisco devices, sets the frequency in which devices poll routers and switches for Cisco Discovery Protocol (CDP) information. This setting can be disabled, or set to poll for CDP neighbor information in a range from every 15 seconds to 12 hours.
Read Bridge Forwarding Table	4 hours	Sets the frequency in which devices poll the network for bridge forwarding information. This setting can be disabled, or set to poll bridge forwarding tables from switches in a range from every 15 seconds to 12 hours.
Interface Up/Down Polling Period	5 minutes	Sets the frequency in which network interfaces are polled for up/down status. This setting can be disabled, or set to poll from switches in a range from every 15 seconds to 30 minutes.



**Table 42: Routers and Switches Fields and Default Values (Continued)**

Setting	Default	Description
Interface Bandwidth Polling Period	15 minutes	Sets the frequency in which network interfaces are polled for bandwidth usage. This setting can be disabled, or set to poll from switches in a range from every 5 minutes to 30 minutes.
Interface Error Counter Polling Period	30 minutes	Sets the frequency in which network interfaces are polled for up/down status. This setting can be disabled, or set to poll bridge forwarding tables from switches in a range from every 5 minutes to 30 minutes.
Poll 802.3 error counters	No	Sets whether 802.3 error counters should be polled.
Poll Cisco interface error counters	No	Sets whether the interface error counters for Cisco devices should be polled.

- Record additional information and comments about the group in the **Notes** section.
- To configure which options and tabs are visible for the group, complete the settings in the **Group Display Options** section. [Table 43](#) describes the settings and default values.

**Table 43: Group Display Options Fields and Default Values**

Setting	Default	Description
Show device settings for	Only devices on this OV3600	Drop-down menu determines which Group tabs and options are to be viewable by default in new groups. Settings include the following: <ul style="list-style-type: none"> <li><b>All Devices</b>—OV3600 displays all Group tabs and setting options.</li> <li><b>Only devices in this group</b>—OV3600 hides all options and tabs that do not apply to the devices in the group. If you use this setting, then to get the group list to display the correct SSIDs for the group, you must <b>Save and Apply</b> on the group.</li> <li><b>Only devices on this OV3600</b>—hides all options and tabs that do not apply to the APs and devices currently on OV3600.</li> <li><b>Use system defaults</b>—Use the default settings on <b>OV3600 Setup &gt; General</b></li> <li><b>Selected device types</b>—Allows you to specify the device types for which OV3600 displays Group settings.</li> </ul>
Selected Device Types	N/A	This option appears if you chose to display selected device types, allowing you to select the device types to display group settings. Use <b>Select devices in this group</b> to display only devices in the group being configured.

- To assign dynamically a range of static IP addresses to new devices as they are added into the group, locate the **Automatic Static IP Assignment** section on the **Groups > Basic** configuration page. If you select **Yes** in this section, additional fields appear. Complete these fields as required. [Table 44](#) describes the settings and default values This section is only relevant for a small number of device types, and will appear when they are present.

**Table 44: Automatic Static IP Assignment Fields and Default Values**

Setting	Default	Description
Assign Static IP Addresses to Devices	No	Specify whether to enable OV3600 to statically assign IP addresses from a specified range to all devices in the Group. If this value is set to <b>Yes</b> , then the additional configuration fields described in this table will become available.

**Table 44: Automatic Static IP Assignment Fields and Default Values (Continued)**

Setting	Default	Description
Start IP Address	none	Sets the first address OV3600 assigns to the devices in the Group.
Number of Addresses	none	Sets the number of addresses in the pool from which OV3600 can assign IP addresses.
Subnet Mask	none	Sets the subnet mask to be assigned to the devices in the Group.
Subnet Gateway	none	Sets the gateway to be assigned to the devices in the Group.
Next IP Address	none	Defines the next IP address queued for assignment. This field is disabled for the initial Access Points group.

7. To configure Spanning Tree Protocol on WLC devices and Proxim APs, locate the **Spanning Tree Protocol** section on the **Groups > Basic** configuration page. Adjust these settings as required. [Table 45](#) describes the settings and default values.

**Table 45: Spanning Tree Protocol Fields and Default Values**

Setting	Default	Description
Spanning Tree Protocol	No	Specify whether to enable or disable Spanning Tree Protocol on Proxim APs. If this value is set to <b>Yes</b> , then the additional configuration fields described in this table will become available.
Bridge Priority	32768	Sets the priority for the AP. Values range from 0 to 65535. Lower values have higher priority. The lowest value is the root of the spanning tree. If all devices are at default the device with the lowest MAC address will become the root.
Bridge Maximum Age	20	Sets the maximum time, in seconds, that the device stores protocol information. The supported range is from 6 to 40.
Bridge Hello Time	2	Sets the time, in seconds, between Hello message broadcasts.
Bridge Forward Delay	15	Sets the time, in seconds, that the port spends in listening and learning mode if the spanning tree has changed.

8. To configure Network Time Protocol (NTP) settings locate the **NTP** section and adjust these settings as required. [Table 46](#) describes the settings and default values.

**Table 46: NTP Fields and Default Values**

Setting	Default	Description
NTP Server #1,2,3	None	Sets the IP address of the NTP servers to be configured on the AP.

**Table 46: NTP Fields and Default Values (Continued)**

Setting	Default	Description
UTC Time Zone	0	Sets the hour offset from UTC time to local time for the AP. Times displayed in OV3600 graphs and logs use the time set on the OV3600 server.
Daylight Saving Time	No	Enables or disables the advanced daylight saving time settings in the Proxim section of the <b>Groups &gt; Basic</b> configuration page.

9. To configure settings specific to Cisco IOS/Catalyst, locate the **Cisco IOS/Catalyst** section and adjust these settings as required. [Table 47](#) describes the settings and default values.

**Table 47: Cisco IOS/Catalyst Fields and Default Values**

Setting	Default	Description
SNMP Version	2c	The version of SNMP used by OV3600 to communicate to the AP.
Cisco IOS CLI Communication	Telnet	The protocol OV3600 uses to communicate with Cisco IOS devices. Selecting <b>SSH</b> uses the secure shell for command line page (CLI) communication and displays an <b>SSH Version</b> option. Selecting <b>Telnet</b> sends the data in clear text via Telnet.
Cisco IOS Config File Communication	TFTP	The protocol OV3600 uses to communicate with Cisco IOS devices. Selecting <b>SCP</b> uses the secure copy protocol for file transfers and displays an <b>SCP Version</b> option. Selecting <b>TFTP</b> will use the insecure trivial file transfer protocol. The SCP login and password should be entered in the Telnet username and password fields.

10. To configure settings specific to Cisco WLC, locate the **Cisco WLC** section and adjust these settings as required. [Table 48](#) describes the settings and default values.

**Table 48: Cisco WLC Fields and Default Values**

Setting	Default	Description
SNMP Version	2c	Sets the version of SNMP used by OV3600 to communicate to WLC controllers.
CLI Communication	SSH	Sets the protocol OV3600 uses to communicate with Cisco IOS devices. Selecting <b>SSH</b> uses the secure shell for command line page (CLI) communication. Selecting <b>Telnet</b> sends the data in clear text via Telnet.



---

When configuring Cisco WLC controllers, refer to "[Configuring Wireless Parameters for Cisco Controllers](#)" on page 112.

---

11. To configure settings specific to Alcatel-Lucent locate the **Aruba/Alcatel-Lucent** section and adjust these settings as required. [Table 49](#) describes the settings and default values of this section.

**Table 49: Aruba Fields and Default Values**

Setting	Default	Description
SNMP Version	2c	The version of SNMP used by OV3600 to communicate to the AP.
Offload WMS Database	No	Configures commands previously documented in the OmniVista 3600 Air Manager 8.0 <i>Best Practices Guide</i> . When enabled, this feature allows OV3600 to display historical information for WLAN switches.  Changing the setting to <b>Yes</b> pushes commands via SSH to all WLAN switches in Monitor Only mode without rebooting the switch. The command can be pushed to switches in manage mode (also without rebooting the switch) if the <b>Allow WMS Offload</b> setting on <b>OV3600 Setup &gt; General</b> is changed to <b>Yes</b> .
Alcatel-Lucent GUI Config	Yes	This setting selects whether you'd like to configure your devices using the <b>Groups &gt; Controller</b> method (either global or group) or using Templates.
Ignore Rogues Discovered by Remote APs	No	Configures whether to turn off RAPIDS rogue classification and rogue reporting for RAPs in this group.
Delete Certificates On Controller	No	Specifies whether to delete the current certificates on an AOS-W switch.

12. To configure settings for 3Com, Enterasys, Nortel, or Trapeze devices, locate the **3Com/Enterasys/Nortel/Trapeze** section and define the version of SNMP to be supported.
13. To configure settings for universal devices on the network, including routers and switches that support both wired and wireless networks, locate the **Universal Devices, Routers and Switches** section of the **Groups > Basic** page and define the version of SNMP to be supported.
14. To control the conditions by which devices are automatically authorized into this group, locate the **Automatic Authorization** settings section and adjust these settings as required. [Table 50](#) describes the settings and default values.

**Table 50: Automatic Authorization Fields and Default Values**

Setting	Default	Description
Add New Controllers and Autonomous Devices Location	Use Global Setting	Whether to auto authorize new controllers to the New Devices List, the same Group/Folder as the discovering devices, the same Group/Folder as the closest IP neighbor, and/or a specified auto-authorization group and folder. The Current Global Setting set in <b>OV3600 Setup &gt; General</b> is shown below this field. Selecting a different option overrides the global setting.
Add New Thin APs Location	Use Global Setting	Whether to auto authorize new thin APs to the New Devices List, the same Group/Folder as the discovering devices, the same Group/Folder as the closest IP neighbor, and/or a specified auto-authorization group and folder. The Current Global Setting set in <b>OV3600 Setup &gt; General</b> is shown below. Selecting a different option overrides the global setting for this group.

15. The specify the **Virtual Controller Certificates** to be applied to this group, locate the Virtual Controller Certificates settings section and adjust these settings as desired. [Table 51](#) describes the settings and default values.

**Table 51: Virtual Controller Certificate Fields and Default Values**

Setting	Default	Description
CA Cert	None	Specify a CA certificate for the virtual controller. The fields in this drop down will populate when a certificate of type <b>Intermediate CA</b> or <b>Trusted CA</b> is added in the <b>Device Setup &gt; Certificates</b> page.
Server Cert	None	Specify a server certificate for the virtual controller. The fields in this drop down will populate when a certificate of type <b>Server Cert</b> is added in the <b>Device Setup &gt; Certificates</b> page.

16. To automate putting multiple devices in this group into Manage mode at once so that changes can be applied and have the devices revert to Monitor-Only mode after the maintenance period is over, locate the **Maintenance Windows** option and define a new AP Group Maintenance Window.

17. Select **Save** when the configurations of the **Groups > Basic** configuration page are complete to retain these settings without pushing these settings to all devices in the group. **Save** is a good option if you intend to make additional device changes in the group, and you want to wait until all configurations are complete before you push all configurations at one time. Select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.

What Next?

- Continue to additional sections in this chapter to create new groups or to edit existing groups.
- Once general group-level configurations are complete, continue to later chapters in this document to add or edit additional device-level configurations and to use several additional OV3600 functions.

## Adding and Configuring Group AAA Servers

Configure RADIUS servers on the **Groups > AAA Servers** page.

Once defined on this page, RADIUS servers are selectable in the drop-down menus on the **Groups > Security and Groups > SSIDs** configuration pages. Perform these steps to create RADIUS servers.

TACACS+ servers are configurable only for Cisco WLC devices. Refer to "[Configuring Cisco WLC Security Parameters and Functions](#)" on page 112.



1. Go to the **Groups > List** page and select the group for which to define AAA servers by selecting the group name. The **Monitor** page appears.
2. Select the **AAA Servers** page. The **AAA Servers** page appears, enabling you to add a RADIUS server. [Figure 41](#) illustrate this page for AAA RADIUS Servers:

**Figure 41: Groups > AAA Servers Page Illustration**

Configure AAA Servers for a Cisco WLC on the [Cisco WLC Config](#) page.

New RADIUS Server

	Hostname/IP Address ▲	Authentication	Authentication Port	Accounting	Accounting Port	Timeout	Max Retries
<input type="checkbox"/>	10.162.110.13	Yes	1812	Yes	1813	2	0
<input type="checkbox"/>	10.162.110.30	Yes	1812	Yes	1813	5	0
<input type="checkbox"/>	10.162.110.47	Yes	1812	No	-	2	0

Select All - Unselect All

- To add a RADIUS server or edit an existing server, select **Add New RADIUS Server** or the corresponding pencil icon to edit an existing server. [Table 52](#) describes the settings and default values of the **Add/Edit** page.

**Table 52:** Adding a RADIUS Server Fields and Default Values

Setting	Default	Description
Hostname/IP Address	None	Sets the IP Address or DNS name for RADIUS Server. <b>NOTE:</b> IP Address is required for Proxim/ORiNOCO and Cisco Aironet IOS APs.
Secret and Confirm Secret	None	Sets the shared secret that is used to establish communication between OV3600 and the RADIUS server. <b>NOTE:</b> The shared secret entered in OV3600 must match the shared secret on the server.
Authentication	No	Sets the RADIUS server to perform authentication when this setting is enabled with <b>Yes</b> .
Authentication Port (1-65535)	1812	Appears when <b>Authentication</b> is enabled. Sets the port used for communication between the AP and the RADIUS server.
Accounting	No	Sets the RADIUS server to perform accounting functions when enabled with <b>Yes</b> .
Accounting Port (1-65535)	1813	Appears when <b>Accounting</b> is enabled. Sets the port used for communication between the AP and the RADIUS server.
Timeout (0-86400)	None	Sets the time (in seconds) that the access point waits for a response from the RADIUS server.
Max Retries (0-20)	None	Sets the number of times a RADIUS request is resent to a RADIUS server before failing. <b>NOTE:</b> If a RADIUS server is not responding or appears to be responding slowly, consider increasing the number of retries.

- Select **Add** to complete the creation of the RADIUS server, or select **Save** if editing an existing RADIUS server. The **Groups > AAA Servers** page displays this new or edited server. You can now reference this server on the **Groups > Security** page.  
OV3600 supports reports for subsequent RADIUS Authentication. These are viewable by selecting **Reports > Generated**, scrolling to the bottom of the page, and selecting **Latest RADIUS Authentication Issues Report**.
- To make additional RADIUS configurations for device groups, use the **Groups > Security** page and continue to the next topic.

## Configuring Group Security Settings

The **Groups > Security** page allows you to set security policies for APs in a device group:

- Select the device group for which to define security settings from the **Groups > List** page.
- Go to **Groups > Security**. Some controls on this page interact with additional OV3600 pages. [Figure 42](#) illustrates this page and [Table 53](#) explains the fields and default values.

**Figure 42: Groups > Security Page Illustration**

The screenshot displays the configuration interface for a device group's security settings. It is organized into several sections:

- VLANs:** Includes a toggle for 'VLAN Tagging and Multiple SSIDs' (set to Enabled), a text field for 'Management VLAN ID' (set to Untagged), and a list of supported devices.
- General:** Contains 'Create Closed Network' and 'Block All Inter-Client Communication' toggles, both set to No.
- EAP Options:** Features a 'WEP Key Rotation Interval' field set to 300 seconds.
- RADIUS Authentication Servers:** Lists four servers with dropdown menus for selection, an 'Authentication Profile Name' (Proxim Only), and an 'Authentication Profile Index' (1).
- RADIUS Accounting Servers:** Lists four servers with dropdown menus, an 'Accounting Profile Name' (Proxim Only), and an 'Accounting Profile Index' (3).
- MAC Address Authentication:** Includes a 'MAC Address Authentication' toggle (No), a 'MAC Address Format' dropdown (Single Dash), an 'Authorization Lifetime' field (1800), and a 'Primary RADIUS Server Reattempt Period' field (0).

At the bottom, there are three buttons: 'Save', 'Save and Apply', and 'Revert'.

**Table 53: Groups > Security Page Fields and Default Values**

Setting	Default	Description
<b>VLANs Section</b>		
VLAN Tagging and Multiple SSIDs	Enabled	This field enables support for VLANs and multiple SSIDs on the wireless network. If this setting is enabled, define additional VLANs and SSIDs on the <b>Groups &gt; SSIDs</b> page. Refer to " <a href="#">Configuring Group SSIDs and VLANs</a> " on page 98. If this setting is disabled, then you can specify the <b>Encryption Mode</b> in the <b>Encryption</b> section that displays. Refer to " <a href="#">Groups &gt; Security Encryption Mode settings</a> " on page 97 for information on configuring Encryption.
Management VLAN ID	Untagged	This setting sets the ID for the management VLAN when VLANs are enabled in OV3600 . This setting is supported only for the following devices: <ul style="list-style-type: none"> <li>● Proxim AP-600, AP-700, AP-2000, AP-4000</li> <li>● Avaya AP-3, Avaya AP-7, AP-4/5/6, AP-8</li> <li>● ProCurve520WL</li> </ul>
<b>General Section</b>		
Create Closed Network	No	If enabled, the APs in the Group do not broadcast their SSIDs. <b>NOTE:</b> Creating a closed network will make it more difficult for intruders to detect your wireless network.
Block All Inter-client Communication	No	If enabled, this setting blocks client devices associated with an AP from communicating with other client devices on the wireless network. <b>NOTE:</b> This option may also be identified as PSPF (Publicly Secure Packet Forwarding), which can be useful for enhanced security on public wireless networks.

**Table 53: Groups > Security Page Fields and Default Values (Continued)**

Setting	Default	Description
<b>EAP Options Section</b>		
WEP Key Rotation Interval	300	Sets the frequency at which the Wired Equivalent Privacy (WEP) keys are rotated in the device group being configured. The supported range is from 0 to 10,000,000 seconds.
<b>RADIUS Authentication Servers Section</b>		
RADIUS Authentication Server #1 - #4	Not selected	Defines one or more RADIUS Authentication servers to be supported in this device group. Select up to four RADIUS authentication servers from the four drop-down menus.
Authentication Profile Name	OV3600-Defined Server #1	For Proxim devices only, this field sets the name of the authentication profile to be supported in this device group.
Authentication Profile Index	1	For Proxim devices only, this field sets the name of the authentication profile index to be supported in this device group.
<b>RADIUS Accounting Servers Section</b>		
RADIUS Accounting Server #1 - #4	Not selected	Defines one or more RADIUS Accounting servers to be supported in this device group. Select up to four RADIUS accounting servers from the four drop-down menus.
Authentication Profile Name		For Proxim devices only, this field sets the name of the accounting profile to be supported in this device group.
Authentication Profile Index	3	For Proxim devices only, this field sets the name of the accounting profile index to be supported in this device group.
<b>MAC Address Authentication Section</b>		
MAC Address Authentication	No	If enabled, only MAC addresses known to the RADIUS server are permitted to associate to APs in the Group.
MAC Address Format	Single Dash	<p>Allows selection of the format for MAC addresses used in RADIUS authentication and accounting requests:</p> <ul style="list-style-type: none"> <li>• Dash Delimited: xx-xx-xx-xx-xx-xx (default)</li> <li>• Colon Delimited: xx:xx:xx:xx:xx:xx</li> <li>• Single-Dash: xxxxxx-xxxxxx</li> <li>• No Delimiter: xxxxxxxxxxxx</li> </ul> <p>This option is supported only for Proxim AP-600, AP-700, AP-2000, AP-4000, Avaya AP3/4/5/6/7/8, HP ProCurve 520WL</p>
Authorization Lifetime	1800	Sets the amount of time a user can be connected before reauthorization is required. The supported range is from 900 to 43,200 seconds.
Primary RADIUS Server Reattempt Period	0	Specifies the time (in minutes) that the AP awaits responses from the primary RADIUS server before communicating with the secondary RADIUS server, and so forth



The **Encryption** options display on the **Groups > Security** page when the **VLAN Tagging and Multiple SSIDs** option is set to **Disabled**. This setting defaults to **No Encryption**. Refer to [Table 54](#) for information regarding configuring encryption.

**Table 54:** *Groups > Security Encryption Mode settings*

Setting	Default	Description
<b>Encryption Modes:</b> Require 802.1X, Optional WEP, Require WEP, Require 802.1X, Require LEAP, 802.1X + WEP, 802.1X + WEP, LEAP + WEP,		
Encryption Mode	Require 802.1X	
Transmit Key	1	Select the Transmit Key value. This can be a value from 1 through 4. Note that 802.1X + WEP mode sets this key value to 1.
Key #1	None	Enter 40/64-bit Keys in 5 alphanumeric or 10 hexadecimal digits, or enter 104/128-bit Keys in 13 alphanumeric or 26 hexadecimal digits.
Key #2	None	
Key #3	None	
Key #4	None	
<b>Encryption Mode Static CKIP</b>		
CKIP Static Key (hex) and Confirm	None	Enter and confirm the Cisco Key Integrity Protocol (CKIP) static key, specified in hexadecimal digits.
CKIP Key Index	1	Select the CKIP Key Index value. This can be a value from 1 through 4.
CKIP Key Permutation	No	Specify whether to use Key Permutation.
CKIP MMH Mode	No	Specify whether to use Multi-Module Has (MMH) mode.
<b>Encryption Mode WPA</b>		
Unicast Cipher (Cisco only)	AES	Specify the Unicast Cipher. Values include AES, TKIP, and AES/TKIP.
<b>Encryption Mode WPA/PSK</b>		
Unicast Cipher (Cisco only)	AES/TKIP	Specify the Unicast Cipher. Values include AES, TKIP, and AES/TKIP.
WPA Preshared Key (Alphanumeric)	None	Enter an alphanumeric value for the preshared key.
<b>Encryption Mode WPA2</b>		
WPA2 WPA Compatibility Mode	Yes	Specify whether to enable WPA2 WPA Compatibility Mode.

**Table 54:** *Groups > Security Encryption Mode settings (Continued)*

Setting	Default	Description
WPA1 Cipher (Cisco WLC Only)	TKIP	Specify the WPA1 Cipher. Values include AES, TKIP, and AES/TKIP. <b>NOTE:</b> This drop down is only available if WPA2 WPA Compatibility Mode is <b>Yes</b> .
Unicast Cipher (Cisco Only)	AES/TKIP	Specify the Unicast Cipher. Values include AES, TKIP, and AES/TKIP.
<b>Encryption Mode WPA2/PSK</b>		
WPA2 WPA Compatibility Mode	Yes	Specify whether to enable WPA2 WPA Compatibility Mode.
WPA1 Cipher (Cisco WLC Only)	TKIP	Specify the WPA1 Cipher. Values include AES, TKIP, and AES/TKIP. <b>NOTE:</b> This drop down is only available if WPA2 WPA Compatibility Mode is <b>Yes</b> .
Unicast Cipher (Cisco Only)	AES/TKIP	Specify the Unicast Cipher. Values include AES, TKIP, and AES/TKIP.
WPA Preshared Key (Alphanumeric)	None	Enter an alphanumeric value for the preshared key.
<b>Encryption Mode xSec</b>		
This indicates to use xSec encryption. No other configuration options are available.		

3. Select **Save** to retain these security configurations for the group, select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.
4. Continue with additional security-related procedures in this document for additional RADIUS and SSID settings for device groups, as required.

## Configuring Group SSIDs and VLANs

The **Groups > SSIDs** configuration page allows you to create and edit SSIDs and VLANs that apply to a device group. Perform these steps to create or edit VLANs and to set SSIDs.



---

WLANs that are supported from one or more Cisco WLC controllers can be configured on the **Groups > Cisco WLC Config** page.

---

Figure 43 illustrates an example of the **Groups > SSIDs** page.

**Figure 43: Groups > SSIDs Page Illustration**

Configure WLANs for a Cisco WLC on the [Cisco WLC Config](#) page.

New SSID/VLAN

	SSID ▲	VLAN ID	Name	Encryption Mode	1st Radio		2nd Radio		Native VLAN
					Enabled	Primary	Enabled	Primary	
<input type="checkbox"/>	Cisco5500	-	Cisco5500	WPA2	<input checked="" type="checkbox"/>	<input type="radio"/>	<input checked="" type="checkbox"/>	<input type="radio"/>	<input type="radio"/>

Select All - Unselect All



OV3600 reports users by radio and by SSID. Graphs on the AP and controller monitoring pages display bandwidth in and out based on SSID. OV3600 reports can also be run and filtered by SSID. An option on the **OV3600 Setup > General** page can age out inactive SSIDs and their associated graphical data.

1. Go to **Groups > List** and select the group name for which to define SSIDs/VLANs.
2. Select the **Groups > SSIDs** configuration page. [Table 55](#) describes the information that appears for SSIDs and VLANs that are currently configured for the device group.

**Table 55: Groups > SSIDs Fields and Descriptions**

Field	Description
SSID	Displays the SSID associated with the VLAN.
VLAN ID	Identifies the number of the primary VLAN SSID on which encrypted or unencrypted packets can pass between the AP and the switch.
Name	Displays the name of the VLAN.
Encryption Mode	Displays the encryption on the VLAN.
First or Second Radio Enabled	Enables the VLAN, SSID and Encryption Mode on the radio control.
First or Second Radio Primary	Specifies which VLAN to be used as the primary VLAN. A primary VLAN is required. <b>NOTE:</b> If you create an open network (see the <b>Create Closed Network</b> setting below) in which the APs broadcast an SSID, the primary SSID is broadcast.
Native VLAN	Sets this VLAN to be the native VLAN. Native VLANs are untagged and typically used for management traffic only. OV3600 requires a Native VLAN to be set. For AP types do not require a native VLAN, create a dummy VLAN, disable it on both radio controls, and ensure that it has the highest VLAN ID.

3. Select **Add** to create a new SSID or VLAN, or select the pencil icon next to an existing SSID/VLAN to edit that existing SSID or VLAN. The **Add SSID/VLAN** configuration page appears as illustrated in [Figure 44](#) and explained in [Table 56](#).

**Figure 44: Add SSID/VLAN Page Illustration**

4. Locate the **SSID/VLAN** section on the **Groups > SSIDs** configuration page and adjust these settings as required. This section encompasses the basic VLAN configuration. [Table 56](#) describes the settings and default values. Note that the displayed settings can vary.

**Table 56: SSID/VLAN Section Fields and Default Values**

Setting	Default	Description
Specify Interface Name	Yes	Enables or disables an interface name for the VLAN interface. Selecting <b>No</b> for this option displays the <b>Enable VLAN Tagging</b> and <b>VLAN ID</b> options.
Enable VLAN Tagging (Cisco WLC, Proxim, Symbol only)		Enables or disables VLAN tagging. Displays if <b>Specify Interface Name</b> is set to <b>No</b> .
VLAN ID (1-4094)	None	Indicates the number of the VLAN designated as the <b>Native VLAN</b> , typically for management purposes. Displays if <b>Specify Interface Name</b> is set to <b>No</b> and <b>Enable VLAN Tagging</b> is set to <b>Yes</b> .
Interface	management	Sets the interface to support the SSID/VLAN combination.
SSID	None	Sets the Service Set Identifier (SSID), which is a 32-character user-defined identifier attached to the header of packets sent over a WLAN. It acts as a password when a mobile device tries to connect to the network through the AP, and a device is not permitted to join the network unless it can provide the unique SSID.
Name	None	Sets a user-definable name associated with SSID/VLAN combination.
Maximum Allowed Associations (0-2007)	255	Indicates the maximum number of mobile users which can associate with the specified VLAN/SSID. <b>NOTE:</b> 0 means unlimited for Cisco.

**Table 56: SSID/VLAN Section Fields and Default Values (Continued)**

Setting	Default	Description
Broadcast SSID (Cisco WLC, Proxim and Symbol 4131 only)	No	For specific devices as cited, this setting enables the AP to broadcast the SSID for the specified VLAN/SSID. This setting works in conjunction with the <b>Create Closed Network</b> setting on the <b>Groups &gt; Security</b> configuration page. Proxim devices support a maximum of four SSIDs. <b>NOTE:</b> This option should be enabled to ensure support of legacy users.
Partial Closed System (Proxim only)	No	For Proxim only, this setting enables to AP to send its SSID in every beacon, but it does not respond to any probe requests.
Unique Beacon (Proxim only)	No	For Proxim only, if more than one SSID is enabled, this option enables them to be sent in separate beacons.
Block All Inter-Client Communication	Yes	This setting blocks communication between client devices based on SSID.

5. Locate the **Encryption** area on the **Groups > SSIDs** page and adjust these settings as required. [Table 57](#) describes the available encryption modes. [Table 54](#) in "Configuring Group Security Settings" on page 94 describes configuration settings for each mode.

**Table 57: Encryption Section Field and Default Values**

Setting	Default	Description
Encryption Mode	No Encryption	Drop-down menu determines the level of encryption required for devices to associate to the APs. The drop-down menu options are as follows. Each option displays additional encryption settings that must be defined. Complete the associated settings for any encryption type chosen: <ul style="list-style-type: none"> <li>• No Encryption</li> <li>• <b>Optional WEP</b>—Wired Equivalent Privacy, not PCI compliant as of 2010</li> <li>• <b>Require WEP</b>—Wired Equivalent Privacy, not PCI compliant as of 2010</li> <li>• <b>Require 802.1x</b>—Based on the WEP algorithm</li> <li>• <b>Require LEAP</b>—Lightweight Extensible Authentication Protocol</li> <li>• <b>802.1x+WEP</b>—Combines the two encryption types shown</li> <li>• <b>802.1x+LEAP</b>—Combines the two encryption types shown</li> <li>• <b>LEAP+WEP</b>—Combines the two encryption types shown</li> <li>• <b>Static CKIP</b>—Cisco Key Integrity Protocol</li> <li>• <b>WPA</b>—Wi-Fi Protected Access protocol</li> <li>• <b>WPA/PSK</b>—Combines WPA with Pre-Shared Key encryption</li> <li>• <b>WPA2</b>—Wi-Fi Protected Access 2 encryption</li> <li>• <b>WPA2/PSK</b>—Combines the two encryption methods shown</li> <li>• <b>xSec</b>—FIPS-compliant encryption including Layer 2 header info</li> </ul>

6. Locate the **EAP Options** area on the **Groups > SSIDs** page, and complete the settings. [Table 58](#) describes the settings and default values.

**Table 58:** EAP Options Section Field and Default Value

Setting	Default	Description
WEP Key Rotation Interval (0-10000000 sec)	120	Time (in seconds) between WEP key rotation on the AP.

7. Locate the **RADIUS Authentication Servers** area on the **Groups > SSIDs** configuration page and define the settings. [Table 59](#) describes the settings and default values.

**Table 59:** RADIUS Authentication Servers Fields and Default Values

Setting	Default	Description
RADIUS Authentication Server 1-3 (Cisco WLC, Proxim only)	None	Drop-down menu to select RADIUS Authentication servers previously entered on the <b>Groups &gt; RADIUS</b> configuration page. These RADIUS servers dictate how wireless clients authenticate onto the network.
Authentication Profile Name (Proxim Only)	None	Sets the Authentication Profile Name for Proxim AP-600, AP-700, AP-2000, AP-4000.
Authentication Profile Index (Proxim Only)	None	Sets the Authentication Profile Index for Proxim AP-600, AP-700, AP-2000, AP-4000.

8. Select **Save** when the security settings and configurations in this procedure are complete.



---

You may need to return to the **Groups > Security** configuration page to configure or reconfigure RADIUS servers.

---

9. Locate the **RADIUS Accounting Servers** area on the **Groups > SSIDs** configuration page and define the settings. [Table 60](#) describes the settings and default values.

**Table 60:** Radius Accounting Servers Fields and Default Values

Setting	Default	Description
RADIUS Accounting Server 1-3 (Cisco WLC, Proxim Only)	None	Pull-down menu selects RADIUS Accounting servers previously entered on the <b>Groups &gt; RADIUS</b> configuration page. These RADIUS servers dictate where the AP sends RADIUS Accounting packets for this SSID/VLAN.
Accounting Profile Name (Proxim Only)	None	Sets the Accounting Profile Name for Proxim AP-600, AP-700, AP-2000, AP-4000.
Accounting Profile Index (Proxim Only)	None	Sets the Accounting Profile Index for Proxim AP-600, AP-700, AP-2000, AP-4000.

10. Select **Add** when you have completed all sections. This returns you to the **Groups > SSIDs** page.
11. Select **Save** to retain these **SSID** configurations for the group, select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.

What Next?

- Continue with additional Group procedures in this document as required.

## Configuring Radio Settings for Device Groups

The **Groups > Radio** configuration page allows you to specify detailed RF-related settings for devices in a particular group.



If you have existing deployed devices, you may want to use the current RF settings on those devices as a guide for configuring the settings in your default Group.

Perform the following steps to define RF-related radio settings for groups.

1. Go to the **Groups > List** page and select the group for which to define radio settings by selecting the group name. Alternatively, select **Add** from the **Groups > List** page to create a new group, define a group name. In either case, the **Monitor** page appears.
2. Go to the **Groups > Radio** page. [Figure 45](#) illustrates this page.

**Figure 45:** *Groups > Radio Page Illustration*

Group: HQ

#### Radio Settings

Allow Automatic Channel Selection (2.4 GHz):  Yes  No

Allow Automatic Channel Selection (5 GHz):  Yes  No

Allow Automatic Channel Selection (4.9 GHz Public Safety):  Yes  No

802.11b Data Rates (Mbps):

- 1.0: Required
- 2.0: Required
- 5.5: Optional
- 11.0: Optional

Frag Threshold Enabled:  Yes  No

RTS/CTS Threshold Enabled:  Yes  No

RTS/CTS Maximum Retries (1-255):

Maximum Data Retries (1-255):

Beacon Period (19-5000 msec):

DTIM Period (1-255):

Ethernet Encapsulation:  802.1H  RFC1042

Radio Preamble:  Long  Short

#### Proxim AP-600, AP-700, AP-2000, AP-4000; Avaya AP-3, Avaya AP-7, AP-4/5/6, AP-8; ProCurve520WL

Load Balancing:  Yes  No

Interference Robustness:  Yes  No

Distance Between APs:

802.11g Operational Mode:

802.11abg Operational Mode:

802.11b Transmit Rate:

802.11g Transmit Rate:

802.11a Transmit Rate:

Rogue Scanning:  Yes  No

Rogue Scanning Interval (15-1440 min):

---

#### Symbol

Rogue Scanning:  Yes  No

Rogue Scanning Interval (5-480 min):

3. Locate the **Radio Settings** area and adjust these settings as required. [Table 61](#) describes the settings and default values.

**Table 61:** *Groups > Radio > Radio Settings Fields and Default Values*

Setting	Default	Description
Allow Automatic Channel Selection (2.4, 5, and 4.9GHz Public Safety)	No	If enabled, whenever the AP is rebooted it uses its radio to scan the airspace and select its optimal RF channel based on observed signal strength from other radios. <b>NOTE:</b> If you enable this feature, OV3600 automatically reboots the APs in the group when the change is implemented.

**Table 61:** Groups > Radio > Radio Settings Fields and Default Values (Continued)

Setting	Default	Description
802.11b Data Rates (Mbps)	Required: <ul style="list-style-type: none"> <li>● 1.0</li> <li>● 2.0</li> </ul> Optional: <ul style="list-style-type: none"> <li>● 5.5</li> <li>● 11.0</li> </ul>	Displays pull-down menus for various data rates for transmitting data. <b>NOTE:</b> This setting does not apply to Cisco LWAPP devices. The three values in each of the pull-down menus are as follows: <ul style="list-style-type: none"> <li>● <b>Required</b>—The AP transmits only unicast packets at the specified data rate; multicast packets are sent at a higher data rate set to optional. (Corresponds to a setting of <b>yes</b> on Cisco devices.)</li> <li>● <b>Optional</b>—The AP transmits both unicast and multicast at the specified data rate. (Corresponds to a setting of <b>basic</b> on Cisco devices.)</li> <li>● <b>Not Used</b>—The AP does not transmit data at the specified data rate. (Corresponds to a setting of <b>no</b> on Cisco devices.)</li> </ul>
Frag Threshold Enabled	No	If enabled, this setting enables packets to be sent as several pieces instead of as one block. In most cases, leave this option disabled.
Threshold Value (256-2347 bytes)	2337	If Fragmentation Threshold is enabled, this specifies the size (in bytes) at which packets are fragmented. A lower <b>Fragmentation Threshold</b> setting might be required if there is a great deal of radio interference.
RTS/CTS Threshold Enabled	No	If enabled, this setting configures the AP to issue a RTS (Request to Send) before sending a packet. In most cases, leave this option disabled.
RTS/CTS Threshold Value (0-2347 bytes)	2338	If RTS/CTS is enabled, this specifies the size of the packet (in bytes) at which the AP sends the RTS before sending the packet.
RTS/CTS Maximum Retries (1-255)	32	If RTS/CTS is enabled, this specifies the maximum number of times the AP issues an RTS before stopping the attempt to send the packet through the radio.  Acceptable values range from <b>1</b> to <b>128</b> .
Maximum Data Retries (1-255)	32	The maximum number of attempts the AP makes to send a packet before giving up and dropping the packet. Acceptable values range from <b>1</b> to <b>255</b> .
Beacon Period (19-5000 msec)	100	Time between beacons (in microseconds).
DTIM Period (1-255)	2	DTIM alerts power-save devices that a packet is waiting for them. This setting configures DTIM packet frequency as a multiple of the number of beacon packets. The DTIM Interval indicates how many beacons equal one cycle.
Ethernet Encapsulation	RFC1042	This setting selects either the RFC1042 or 802.1h Ethernet encapsulation standard for use by the group.
Radio Preamble	Long	This setting determines whether the APs uses a <b>short</b> or <b>long</b> preamble. The preamble is generated by the AP and attached to the packet prior to transmission. The short preamble is 50 percent shorter than the long preamble and thus may improve wireless network performance.  <b>NOTE:</b> Because older WLAN hardware may not support the short preamble, the long preamble is recommended as a default setting in most environments.



- Certain wireless access points offer proprietary settings or advanced functionality that differ from prevailing industry standards. If you use these APs in the device group, you may wish to take advantage of this proprietary functionality. To configure these settings, locate the proprietary settings areas on the **Groups > Radio** page and continue with the additional steps in this procedure.



Proprietary settings are only applied to devices in the group from the specific vendor and are not configured on devices from vendors that do not support the functionality.

- To configure settings specific to the Proxim AP-600, AP-700, AP-2000, AP-4000; Avaya AP-3/4/5/6//7/8, and ProCurve 520WL, locate the appropriate section of **Groups > Radio** page and define the required fields. [Table 62](#) describes the settings and default values.

**Table 62:** *Groups > Radio > Proxim AP-600, AP-700, AP-2000, AP-4000; Avaya AP-3, Avaya AP-7, AP-4/5/6, AP-8; ProCurve520WL Fields and Default Values*

Setting	Default	Description
Load Balancing	No	If enabled, this setting allows client devices associating to an AP with two radio cards to determine which card to associate with, based on the load (# of clients) on each card. <b>NOTE:</b> This feature is only available when two 802.11b wireless cards are used in an AP-2000.
Interference Robustness	No	If enabled, this option will fragment packets greater than 500 bytes in size to reduce the impact of radio frequency interference on wireless data throughput.
Distance Between APs	Large	This setting adjusts the receiver sensitivity. Reducing receiver sensitivity from its maximum may help reduce the amount of crosstalk between wireless stations to better support roaming users. Reducing the receiver sensitivity, user stations will be more likely to connect with the nearest access point.
802.11g Operational Mode	802.11b +802.11g	This setting sets the operational mode of all g radios in the group to either b only, g only or b + g.
802.11abg Operational Mode	802.11b +802.11g	This setting sets the operational mode of all a/b/g radios in the group to either a only, b only, g only or b + g.
802.11b Transmit Rate	Auto Fallback	This setting specifies the minimum transmit rate required for the AP to permit a user device to associate.
802.11g Transmit Rate	Auto Fallback	This setting specifies the minimum transmit rate required for the AP to permit a user device to associate.
802.11a Transmit Rate	Auto Fallback	This setting specifies the minimum transmit rate required for the AP to permit a user device to associate.
Rogue Scanning	Yes	If enabled, any ORINOCO or Avaya APs in the group (with the appropriate firmware) will passively scan for rogue access points at the specified interval. This rogue scan will not break users' association to the network. <b>NOTE:</b> This feature can affect the data performance of the access point.

**Table 62:** *Groups > Radio > Proxim AP-600, AP-700, AP-2000, AP-4000; Avaya AP-3, Avaya AP-7, AP-4/5/6, AP-8; ProCurve520WL Fields and Default Values (Continued)*

Setting	Default	Description
Rogue Scanning Interval (15-1440 min)	15 minutes	If <b>Rogue Scanning</b> is enabled, this setting controls the frequency with which scans are conducted (in minutes). Frequent scans provide the greatest security, but AP performance and throughput available to user devices may be impacted modestly during a rogue scan.

6. To configure settings specific to Proxim 4900M, locate the **Proxim 4900M** section and define the required fields. [Table 63](#) describes the settings and default values.

**Table 63:** *Groups > Radio > Proxim 4900M Fields and Default Values*

Setting	Default	Description
4.9GHz Public Safety Channel Bandwidth	20	This setting specifies the channel bandwidth for the 4.9 GHz radio. It is only applicable if you are running the 802.11a/4.9GHz radio in 4.9GHz mode.
802.11a/4.9GHz Public Safety Operational Mode	802.11a	This setting specifies if the AP will run the 802.11a/4.9GHz radio in 802.11a mode or in 4.9 GHz mode. Please note that 4.9 GHz is a licensed frequency used for public safety.

7. To configure Symbol-only settings, locate the **Symbol** section and define the required fields. [Table 64](#) describes the settings and default values.

**Table 64:** *Groups > Radio > Symbol Fields and Default Values*

Setting	Default	Description
Rogue Scanning	Yes	If enabled, Symbol access points with 3.9.2 or later firmware in the group will passively scan for rogue access points at the specified interval. This rogue scan will not break a user's association to the network.
Rogue Scanning Interval (5-480 min)	240	If <b>Rogue Scanning</b> is enabled, this setting controls the frequency with which scans are conducted (in minutes). Frequent scans provide the greatest security, but AP performance and throughput available to user devices may be impacted modestly during a rogue scan.

8. Select **Save** when radio configurations as described above are complete, select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.

## Cisco WLC Group Configuration

The **Groups > Cisco WLC Config** page consolidates the settings for Cisco WLC devices from all group pages. The **Groups > SSIDs** subtab applies to all device types except for Cisco WLC, which have WLANs configured on the **Cisco WLC Config** page. It is not recommended to have Symbol 4131 and Proxim APs in the same group as Cisco devices. Also, it is recommended that users set device preferences to **Only devices in this group**. This topic describes how to access and navigate the **Groups > Cisco WLC Config** page.

Refer to the following topics for additional information:

- ["Accessing Cisco WLC Configuration" on page 107](#)
- ["Navigating Cisco WLC Configuration" on page 107](#)

- "Configuring WLANs for Cisco WLC Devices" on page 108
- "Defining and Configuring LWAPP AP Groups for Cisco Devices" on page 111
- "Viewing and Creating Cisco AP Groups" on page 111
- "Configuring Cisco Controller Settings" on page 111
- "Configuring Wireless Parameters for Cisco Controllers" on page 112
- "Configuring Cisco WLC Security Parameters and Functions" on page 112
- "Configuring Management Settings for Cisco WLC Controllers" on page 113

## Accessing Cisco WLC Configuration

Go to the **Cisco WLC Config** page in one of these two ways:

1. In **Groups > List**, select a group that has been defined to support Cisco devices. The **Cisco WLC Config** option appears in the subtabs.
2. In **Groups > List**, create a new group to support Cisco devices with these steps:
  - Select **Add** from the **Groups > List** page to create a new group, enter a group name, and select **Add**.
  - Once OV3600 prompts you with the **Groups > Basic** page, ensure that you enable device-specific settings for **Cisco WLC**.
  - After you select **Save** or **Save and Apply**, the **Groups > Cisco WLC Config** subtab appears in the navigation pane at the top in association with that group.

## Navigating Cisco WLC Configuration

The navigation pane on the left side of the **Groups > Cisco WLC Config** page is expandable, and displays the Cisco configurations supported and deployed. [Figure 46](#) and [Figure 47](#) illustrate this navigation pane.

You can pre-populate the group WLC settings from a controller in the same group by performing an import on the controller's **Audit** page.

**Figure 46:** *Groups > Cisco WLC Config Page Illustration, collapsed view*


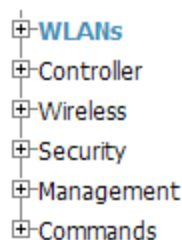


Figure 47: Groups > Cisco WLC Config Page Illustration, expanded view

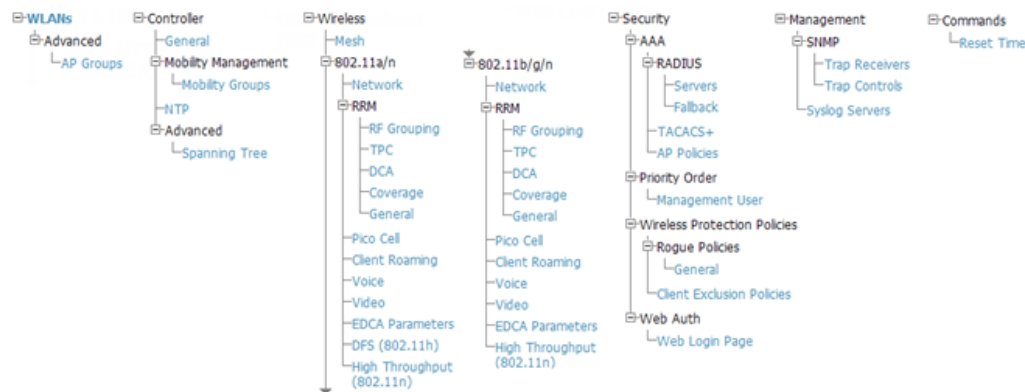

## Configuring WLANs for Cisco WLC Devices

In **Cisco WLC Config**, WLANs are based on SSIDs or VLANs that are dedicated to Cisco WLC controllers. Perform the following steps to define and configure WLANs for Cisco WLC controllers.

1. Go to the **Groups > Cisco WLC Config** page, and select **WLANs** in the navigation pane at left. This page displays the SSIDs or VLANs that are available for use with Cisco WLC devices and enables you to define new SSIDs or VLANs. Figure 48 illustrates this page.
2. To change the ID/position of a WLAN on the controller by dragging and dropping, set the toggle to **Yes**. Note that by setting this flag to **Yes**, OV3600 will display a mismatch if the WLANs in the desired config and device config differ only on the order.

Figure 48: Groups > Cisco WLC Config > WLANS page illustration

Profile	SSID	Type	WLAN ID	Admin Status	Encryption Mode	Radio Policy
Cisco5500	Cisco5500	WLAN	1	Yes	WPA2	All

3. To add or edit SSIDs or VLANs that are dedicated to Cisco WLC devices, either select the **Add** button, or select the pencil icon for an existing SSID/VLAN. A new page appears comprised of four tabs, as follows:
  - **General**—Defines general administrative parameters for the Cisco WLC WLAN.
  - **Security**—Defines encryption and RADIUS servers.
  - **QoS**—Defines quality of service (QoS) parameters for the Cisco WLC WLAN.
  - **Advanced**—Defines advanced settings that are available only with Cisco WLC devices, for example, AAA override, coverage, DHCP and DTIM period.



Refer to Cisco documentation for additional information about Cisco WLC devices and related features.

Figure 49: Add New SSID/VLAN > General Tab Illustration

The screenshot shows the 'General' tab of a configuration window. At the top, there are four tabs: 'General', 'Security', 'QoS', and 'Advanced'. The 'General' tab is selected and highlighted. Below the tabs, the 'General' section contains the following fields:

- Profile: [Text input field]
- SSID: [Text input field] with a note: "If SSID is not specified, the profile name will be used as the SSID"
- Type: [Dropdown menu] showing 'WLAN'
- WLAN ID (1-512): [Text input field]
- Admin Status: [Radio buttons] with 'Yes' selected
- Specify Interface Name: [Radio buttons] with 'Yes' selected
- Interface: [Dropdown menu] showing 'management'
- Radio Policy: [Dropdown menu] showing 'All'
- Broadcast SSID: [Radio buttons] with 'No' selected

At the bottom of the window, there are two buttons: 'Add' and 'Cancel'.

Figure 50: Add New SSID/VLAN > Security Tab Illustration

The screenshot shows the 'Security' tab of a configuration window. At the top, there are four tabs: 'General', 'Security', 'QoS', and 'Advanced'. The 'Security' tab is selected and highlighted. Below the tabs, the 'Security' section contains the following fields:

- Encryption Mode: [Dropdown menu] showing 'No Encryption'
- Web Policy: [Dropdown menu] showing 'Disabled'

Below the 'Security' section, there is an 'AAA Servers' section with the following fields:

- RADIUS Authentication Server #1: [Dropdown menu] showing 'Select'
- RADIUS Authentication Server #2: [Dropdown menu] showing 'Select'
- RADIUS Authentication Server #3: [Dropdown menu] showing 'Select'
- Enable AAA Accounting Servers: [Radio buttons] with 'Yes' selected
- RADIUS Accounting Server #1: [Dropdown menu] showing 'Select'
- RADIUS Accounting Server #2: [Dropdown menu] showing 'Select'
- RADIUS Accounting Server #3: [Dropdown menu] showing 'Select'

At the bottom of the window, there are two buttons: 'Add' and 'Cancel'.

Figure 51: Add New SSID/VLAN > QoS Tab Illustration

The screenshot shows the 'QoS' tab of the 'Add New SSID/VLAN' configuration window. The window has four tabs: 'General', 'Security', 'QoS', and 'Advanced'. The 'QoS' tab is active and contains the following settings:

QoS	
Quality of Service:	Silver (best effort) ▼
WMM Policy:	Disabled ▼

At the bottom of the window are two buttons: 'Add' and 'Cancel'.

Figure 52: Add New SSID/VLAN > Advanced Tab Illustration

The screenshot shows the 'Advanced' tab of the 'Add New SSID/VLAN' configuration window. The window has four tabs: 'General', 'Security', 'QoS', and 'Advanced'. The 'Advanced' tab is active and contains the following settings:

Advanced	
Allow AAA Override:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Coverage Hole Detection:	<input checked="" type="radio"/> Yes <input type="radio"/> No
Session Timeout (0-86400):	0
Enable IPv6:	<input type="radio"/> Yes <input checked="" type="radio"/> No
P2P Blocking Action:	Disabled ▼
Client Exclusion:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Media Session Snooping: Requires Platinum QoS	<input type="radio"/> Yes <input checked="" type="radio"/> No
DHCP Server:	
Require DHCP:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Aironet IE Support:	<input checked="" type="radio"/> Yes <input type="radio"/> No
MFP Signature Generation:	<input type="radio"/> Yes <input checked="" type="radio"/> No
H-REAP Local Switching:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Mobility Anchor #1:	Select ▼
Mobility Anchor #2:	Select ▼
Mobility Anchor #3:	Select ▼
Mobility Anchor #4:	Select ▼
DTIM Period 802.11a/n (1-255 beacon periods):	1
DTIM Period 802.11bg/n (1-255 beacon periods):	1
Client Load Balancing:	<input type="radio"/> Yes <input checked="" type="radio"/> No
Client Band Select: Requires a Radio Policy of "All"	<input checked="" type="radio"/> Yes <input type="radio"/> No

At the bottom of the window are two buttons: 'Add' and 'Cancel'.

## Defining and Configuring LWAPP AP Groups for Cisco Devices

The **Groups > Cisco WLC Config > WLANs > Advanced > AP Groups** page allows you to add/edit/delete AP Groups on the Cisco WLC. LWAPP AP Groups are used to limit the WLANs available on each AP. Cisco thin APs are assigned to LWAPP AP Groups.

### Viewing and Creating Cisco AP Groups

1. Go to the **Groups > Cisco WLC Config** page, and select **WLANs > Advanced > AP Groups** in the navigation pane on the left side. This page displays the configured LWAPP APs. [Figure 53](#) illustrates this page.


**Figure 53:** *Groups > Cisco WLC Config > WLANs > Advanced > AP Groups Page Illustration*

Group: **Access Points**

#### AP Groups

LWAPP AP Groups VLAN Enabled:  Yes  No

Note: There are no WLANs configured on this group

Name	Description
 clearpass	ClearPass

#### LWAPP AP Group

Name:

Description:

#### LWAPP AP Group Interface Mapping

SSID:

There are no SSIDs to choose from. Visit the [WLANs](#) page to create some.

Specify Interface Name:  Yes  No

Interface:

NAC State:  Enabled  Disabled

2. To add a new LWAPP AP group, select **Yes** in the **AP Groups** section. Additional controls appear.
3. Select **Add** to create a new LWAPP AP group. To edit an existing LWAPP AP group, select the pencil icon next to that group. Add one or more SSIDs and the interface/VLAN ID mapping on the **Add/Edit** page of the LWAPP AP Group.
4. Select **Save and Apply** to make these changes permanent, or select **Save** to retain these changes to be pushed to controllers at a later time.

### Configuring Cisco Controller Settings

The **Groups > Cisco WLC Config > Controller** page defines general Cisco WLC settings, Multicast settings, Cisco mobility groups to be supported on Cisco controllers, Network Time Protocol (NTP), and Spanning Tree Protocol

settings.

Go to the **Groups > Cisco WLC Config > Controller** page. This navigation is illustrated in Figure 54.


**Figure 54:** *Groups > Cisco WLC Config > Controller Navigation*



## Configuring Wireless Parameters for Cisco Controllers

This section illustrates the configuration of **Wireless** settings in support of Cisco WLC controllers. The navigation for Wireless settings is illustrated in Figure 55.

**Figure 55:** *Groups > Cisco WLC Config > Wireless Navigation Illustration*

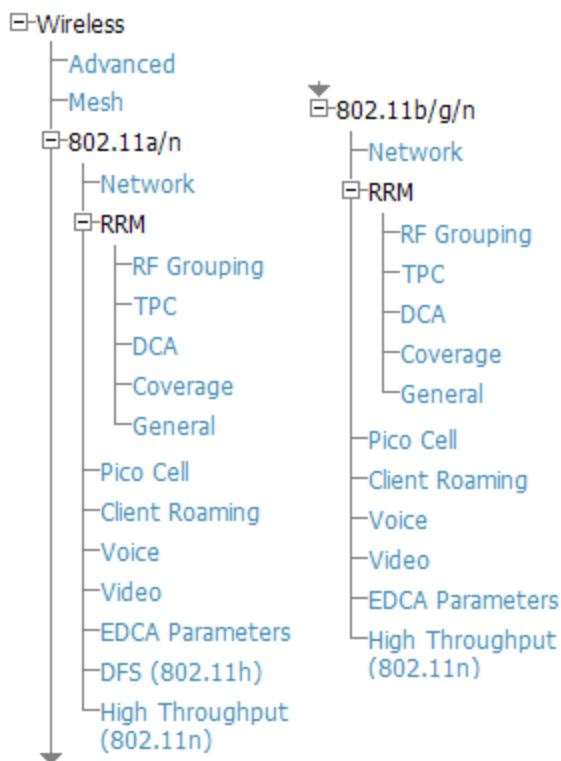

## Configuring Cisco WLC Security Parameters and Functions

OV3600 enables you to configure many security settings that are specific to Cisco WLC controllers. This section supports four overriding types of configuration, as follows:


- **AAA**, to cover both RADIUS and TACACS+ server configuration



- **Priority Order**
- **Wireless Protection Policies**
- **Web Auth**

Figure 56 illustrates these components and this navigation:

**Figure 56:** *Groups > Cisco WLC Config > Security Navigation Illustration*

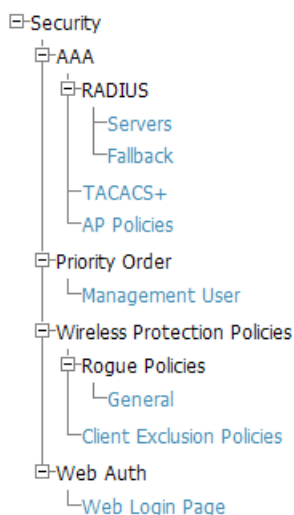

## Configuring Management Settings for Cisco WLC Controllers

OV3600 allows you to configure of SNMP and Syslog Server settings for Cisco WLC controllers. You can configure up to four trap receivers on the Cisco WLC including the OV3600 IP that can be used in Global Groups. To define SNMP and server settings, go to the **Groups > Cisco WLC Config > Management** page, illustrated in Figure 57.

**Figure 57:** *Groups > Cisco WLC Config > Management Navigation Illustration*



## Configuring Group PTMP Settings

The **Groups > PTMP** configuration page configures Point-to-Multipoint (PTMP) for all subscriber and base stations in the device group. Subscriber stations must be in the same group as all base stations with which they might connect.

Perform the following steps to configure these functions.

1. Go to the **Groups > List** page and select the group for which to define PTMP settings by selecting the group that supports Proxim MP.11. Alternatively, select **Add** from the **Groups > List** page to create a new group.
2. Select the **Groups > PTMP** tab. Figure 58 illustrates this page.

**Figure 58:** Groups > PTMP Page Illustration

The screenshot shows a configuration window titled "Proxim MP.11". It contains several input fields:
 

- 802.11a Radio Channel: Channel Range (30-215) with a text input containing "58".
- 802.11g Radio Channel: a dropdown menu with "10" selected.
- Channel Bandwidth: a dropdown menu with "20" selected.
- Network Name: a text input containing "Wireless Network".
- Network Secret: an empty text input field.
- Confirm Network Secret: an empty text input field.

 At the bottom of the window are three buttons: "Save", "Save and Apply", and "Revert".

3. Define the settings on this page. [Table 65](#) describes the settings and default values.

**Table 65:** Groups > PTMP Fields and Default Values

Setting	Default	Description
802.11a Radio Channel	58	Selects the channel used for 802.11a radios by the devices in this group.
802.11g Radio Channel	10	Selects the channel used for 802.11g radios by the devices in this group.
Channel Bandwidth	20	Defines the channel bandwidth used by the devices in this group.
Network Name	Wireless Network	Sets the Network name, with a range of length supported from two to 32 alphanumeric characters.
Network Secret	None	Sets a shared password to authenticate clients to the network.

4. Select **Save and Apply** when configurations are complete to make them permanent, or select **Save** to retain these settings prior to pushing to controllers at a later time.

## Configuring Proxim Mesh Radio Settings

1. Go to the **Groups > Proxim Mesh** configuration page to configure Mesh-specific radio settings.
2. Define the settings as required for your network. [Figure 59](#) illustrates this page. The tables that follow describe the settings and default values.

**Figure 59:** Groups > Proxim Mesh Page Illustration

The screenshot shows the configuration interface for a Proxim Mesh network. It is divided into three main sections: General, Security, and Mesh Cost Matrix. The General section includes settings for Mesh Radio (4.9/5 Ghz), Maximum Mesh Links (6), Neighbor RSSI Smoothing (16), Roaming Threshold (80), and Deauth Client When Uplink is Down (Yes). The Security section includes SSID (Wireless Mesh) and Enable AES (No). The Mesh Cost Matrix section includes settings for Hop Factor (2), Maximum Hops to Portal (4), RSSI Factor (5), RSSI Cut-Off (10), Medium Occupancy Factor (5), and Current Medium Occupancy Weight (7). At the bottom, there are three buttons: Save, Save and Apply, and Revert.

The **General** section contains settings for mesh radio, number of mesh links, RSSI smoothing, roaming threshold and de-auth client.

**Table 66:** General Fields and Default Values

Setting	Default	Description
Mesh Radio	4.9/5Ghz	Drop-down selects the radio that acts as the backhaul to the network.
Maximum Mesh Links (1-32)	6	Sets the maximum number of mesh links allowed on an AP. This number includes the uplink to the portal as well as downlinks to other mesh APs.
Neighbor RSSI Smoothing	16	Specifies the number of beacons to wait before switching to a new link.
Roaming Threshold (0-100)	80	Specifies the difference in cost between two paths that must be exceeded before the AP roams. To switch to a new path it must have a cost that is less by at least the roaming threshold. A high threshold results in fewer mesh roams.
Deauth Client when Uplink is Down	Yes	With <b>Yes</b> selected, clients have authentication removed (are deauthenticated) if the uplink is lost.

The **Security** section contains settings for SSID and enabling AES encryption.

**Table 67:** Security Fields and Default Values

Setting	Default	Description
SSID	None	Sets the SSID used by the Mesh Radio to connect to the mesh network.
Enable AES	No	Enable or disable AES encryption.
Shared Secret	None	Specify a shared secret if <b>Enable AES</b> is <b>Yes</b> .

The **Mesh Cost Matrix** configuration section contains settings for hop factor and maximum hops to portal, RSSI factor and cut-off, medium occupancy factor and current medium occupancy weight. Adjust these settings as required for your network. [Table 68](#) describes these settings and default values.

**Table 68: Mesh Cost Matrix Fields and Default Values**

Setting	Default	Description
Hop Factor (1-10)	5	Sets the factor associated with each hop when calculating the best path to the portal AP. Higher factors will have more impact when deciding the best uplink.
Maximum Hops to Portal (1-4)	4	Set the maximum number of hops for the AP to reach the Portal AP.
RSSI Factor (0-10)	5	Sets the factor associated with the RSSI values used when calculating the best path to the portal AP. Higher factors will have more impact when deciding the best uplink.
RSSI Cutoff (0-26)	10	Specifies the minimum RSSI needed to become a mesh neighbor.
Medium Occupancy Factor (0-10)	5	Sets the factor associated with Medium Occupancy when calculating the best path to the portal AP. Higher factors will have more impact when deciding the best uplink.
Current Medium Occupancy Weight (0-9)	7	Specifies the importance given to the most recently observed Medium Occupancy against all of the previously viewed medium occupancies. Lower values place more importance on previously observed Medium Occupancies.

3. Select **Save** when configurations are complete to retain these settings. Select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.

## Configuring Group MAC Access Control Lists

This configuration is optional. If you use Symbol, Proxim, or ProCurve 520WL wireless access points, OV3600 enables you to specify the MAC addresses of devices that are permitted to associate with APs in the Group. Other devices are not able to associate to APs in the Group, even if the users of those devices are authorized users on the network.

Perform the following steps to use the MAC ACL function.

1. Browse to the **Groups > MAC ACL** configuration page. [Figure 60](#) illustrates this page.

**Figure 60:** *Groups > MAC ACL Page Illustration*

Group: **HQ**

These settings apply to Proxim, Symbol and ProCurve 520 devices.

The screenshot shows a web interface for configuring MAC ACLs. The title is 'MAC ACL'. There are two main sections: 'Use MAC ACL:' and 'Authorized MAC Addresses:'. The 'Use MAC ACL:' section has a dropdown menu with options: 'Yes', 'No', 'Yes' (highlighted), and 'Use manual setting on each device'. The 'Authorized MAC Addresses:' section is a large empty text area. At the bottom of the form are three buttons: 'Save', 'Save and Apply', and 'Revert'.

2. Select **Yes** on the **Use MAC ACL** drop-down menu. Enter all authorized MAC addresses, separated by white spaces.
3. Select **Save** when configurations are complete to retain these settings. Select **Save and Apply** to make the changes permanent, or select **Revert** to discard all unapplied changes.

## Specifying Minimum Firmware Versions for APs in a Group

This configuration is optional. OV3600 allows you the option of defining the minimum firmware version for each AP type in a group on the **Groups > Firmware** configuration page. At the time that you define the minimum version, OV3600 automatically upgrades all eligible APs.

When you add APs into the group in the future, you will be able to upgrade APs manually. The firmware for an AP is not upgraded automatically when it is added to a group. Perform the following steps to make this firmware configuration.

1. Browse to the **Groups > Firmware** configuration page. [Figure 61](#) illustrates this page.

**Figure 61:** *Groups > Firmware Page Illustration*

Group: **Aruba HQ**

### Firmware Upgrade Options

Configure the File Server IP Address to use when upgrading devices in this group. The firmware file definition must be configured to use the per-group setting.

Firmware File Server IP Address:

Enforce Group Firmware Version:  Yes  No

Devices already in the group will be upgraded now or by schedule. Devices added to the group will be upgraded immediately.

Allow Downgrade Of Devices:  Yes  No

### Desired Version

Choose the desired firmware version to be applied to the devices in this group. Upload firmware files on the Device Setup [Upload Firmware & Files](#) page.

Update List of Aruba Image Versions:

Aruba 200:	NONE
Aruba 200:	NONE
Aruba 2400:	NONE
Aruba 2400:	NONE
Aruba 3xxx or 5000/6000 with M3 modules:	Aruba 3xxx or 5000/6000 v
Aruba 3xxx or 5000/6000 with M3 modules:	Aruba 3xxx or 5000/6000 v
Aruba 5000/6000 with SC-I or SC-II modules:	NONE
Aruba 5000/6000 with SC-I or SC-II modules:	NONE
Aruba 6xx:	NONE
Aruba 6xx:	NONE
Aruba 72xx:	NONE
Aruba 72xx:	NONE
Aruba 800:	NONE
Aruba 800:	NONE

Start or schedule firmware upgrade job:

Save desired version preferences without upgrading now:

2. For each device type in the group, specify the minimum acceptable firmware version. If no firmware versions are listed, go to the **Device Setup > Upload Firmware & Files** configuration page to upload the firmware files to OV3600.
3. Select **Upgrade** to apply firmware preferences to devices in the group. The device types that display will vary based on the device types that were selected on the **Groups > Basic** page.
4. Select **Save** to save the firmware file as the desired version for the group.
5. If you have opted to assign an external TFTP server on a per-group basis on the **Device Setup > Upload Firmware & Files** configuration page, you can enter the IP address in the **Firmware Upgrade Options** field on the top of this configuration page.
6. Once you have defined your first group, you can configure that group to be the default group on your network. When OV3600 discovers new devices that need to be assigned to a management group, the default group appears at the top of all drop-down menus and lists. Newly discovered devices are place automatically in the default group if OV3600 is set to automatically monitor/manage new devices.
7. Browse to the **OV3600 Setup > General** page.

8. In the General section, select the desired group from the **Default Group** drop down menu to make it the default.

## Comparing Device Groups

You can compare two existing device groups with a detailed line-item comparison. Group comparison allows several levels of analysis including the following:

- Compare performance, bandwidth consumption, or troubleshooting metrics between two groups.
- Debug one device group against the settings of a similar and better performing device group.
- Use one group as a model by which to fine-tune configurations for additional device groups.

This topic presumes that at least two device groups are at least partly configured in OV3600, each with saved configurations. Perform the following steps to compare two existing device groups:

1. From the **Groups > List** page, select the **Compare two groups** link. Two drop-down menus appear.
2. Select the two groups to compare in the drop-down menus, and select **Compare**. The **Compare** page appears, displaying some or many configuration categories. [Figure 62](#) illustrates this page.

**Figure 62:** Comparing Two Devices Groups on the **Groups > List > Compare** Page (Partial View)

Comparing group **HQ-RemoteAP** to group **Outdoor**:

[Show Similar Fields](#)

	HQ-RemoteAP (edit)	Basic	Outdoor (edit)
802.11 Counters Polling Period:	30 minutes	→	15 minutes
Allow One-to-One NAT:	No	→	Yes
Bridge Forward Delay:	15	→	16
Bridge Hello Time:	2	→	4
Bridge Maximum Age:	20	→	22
Bridge Priority:	32768	→	32760
Cisco IOS CLI Communication:	Telnet	→	SSH
Cisco IOS Config File Communication:	TFTP	→	SCP
Device Bandwidth Polling Period:	10 minutes	→	5 minutes
Device-to-Device Link Polling Period:	15 minutes	→	30 minutes
NTP Polling Interval:	86400	→	3600
NTP Server #1:	(empty string)	→	10.2.25.162
Override Polling Period for Other Services:	Yes	→	No
Read ARP Table:	4 hours	→	8 hours
Read Bridge Forwarding Table:	4 hours	→	8 hours
Read CDP Table for Device Discovery:	4 hours	→	8 hours
SNMP Trap Receiver #1 IP:	(empty string)	→	10.51.2.37
SNMP Trap Receiver #1 Name:	(empty string)	→	gauss
SNMP Trap Receiver #2 IP:	(empty string)	→	10.51.2.5
SNMP Trap Receiver #2 Name:	(empty string)	→	joule
SNMP Trap Receiver #3 IP:	(empty string)	→	10.51.2.15
SNMP Trap Receiver #3 Name:	(empty string)	→	mole
SNMP Version:	2c	→	1
SSH Version:	v1	→	v2
Show device settings for:	Only devices on this AMP	→	All devices
Spanning Tree Protocol:	No	→	Yes
Thin AP Discovery Polling Period:	15 minutes	→	30 minutes
User Data Polling Period:	5 minutes	→	10 minutes

3. Note the following factors when using the **Compare** page:

- The **Compare** page can be very long or very abbreviated, depending on how many configurations the device groups share or do not share.
- When a configuration differs between two groups, the setting is flagged in red text for the group on the right.
- The default setting of the **Compare** page is to highlight settings that differ between two groups.
  - To display settings that are similar or identical between two device groups, select **Show Similar Fields** at the top left of the page. The result may be a high volume of information.

- Select **Hide Similar Fields** to return to the default display, emphasizing configuration settings that differ between two groups.
- You can change the configuration for either or both groups by selecting **Edit** in the corresponding column heading. The appropriate configuration page appears.
- If you make and save changes to either or both groups, go back to the **Groups > List** page and select **Compare two groups**. Select the same two groups again for updated information.
- Additional topics in this document describe the many fields that can appear on the **Groups > List > Compare** page.

## Deleting a Group

Perform the following steps to delete an existing Group from the OV3600 database:

1. Browse to the **Groups > List** configuration page.
2. Ensure that the group you wish to delete is not marked as the **default** group. (See the **OV3600 Setup > General** page.) OV3600 does not permit you to delete the current default group.
3. Ensure that there are no devices in the group that you want to delete. OV3600 does not permit you to delete a group that still contains managed devices. You must move all devices to other groups before deleting a group.
4. Ensure that the group is not a global group that has subscriber groups, and is not a group that was pushed from a Master Console. OV3600 will not delete a group in which either of those cases is true.
5. Select the checkbox, and click the **Delete** button.

## Changing Multiple Group Configurations

Perform the following steps to make any changes to an existing group's configuration:

1. Browse to the **Groups > List** configuration page.
2. Select the **Modify** button (the wrench icon) for the group you wish to edit. The **Groups > Basic** configuration page appears.
3. Select the fields to be edited on the **Basic** configuration page or go to **Radio**, **Security**, **VLANs**, or **MAC ACL** configuration page and edit the fields. Use the **Save** button to store the changes prior to applying them.
4. When all changes for the group are complete select the **Save and Apply** button to make the changes permanent. [Figure 63](#) illustrates the confirmation message that appears.



**Figure 63:** Groups > Basic Configuration Change Confirmation Page Illustration

**Group "Access Points Not Managed by MC"**

Device-to-Device Link Polling Period	5 minutes	➔	2 minutes
Override Polling Period for Other Services	No	➔	Yes
SNMP Version	2c	➔	3
SNMP Version	2c	➔	3
SNMP Version	2c	➔	3

Apply Changes Now    Cancel

**Scheduling Options**

Occurs:

Specify numeric dates with optional 24-hour times (like **7/4/2003** or **2003-07-04** for July 4th, 2003, or **7/4/2003 13:00** for July 4th, 2003 at 1:00 PM.), or specify relative times (like **tomorrow at noon** or **next tuesday at 4am**). Other input formats may be accepted.

Current Local Time:

Desired Start Date/Time:

Schedule

Select other groups to change:

Group	Current Local Time
<input type="checkbox"/> 1330 Orleans	March 19, 2013 1:56 pm PDT
<input type="checkbox"/> 1330 PoC Lab	March 19, 2013 1:56 pm PDT
<input type="checkbox"/> 1341-Alpo	March 19, 2013 1:56 pm PDT
<input type="checkbox"/> 1341-ARM-Network	March 19, 2013 1:56 pm PDT
<input type="checkbox"/> AirMesh	March 19, 2013 1:56 pm PDT

- OV3600 displays a **Configuration Change** screen confirming the changes that will be applied to the group's settings.
- There are several action possibilities from within this confirmation configuration page.
  - Apply Changes Now** — Applies the changes immediately to access points within the group. If you wish to edit multiple groups, you must use the **Preview** button.



You cannot apply Alcatel-Lucent Config changes to other groups. If the only changes on the configuration page are to Alcatel-Lucent devices, the list of groups and the preview button will not appear.

- Scheduling Options** — Schedules the changes to be applied to this group in the future. Enter the desired change date in the **Start Date/Time** field. You can also specify if this is a one-time schedule or a recurring schedule. Recurring options are **Daily**, **Weekly**, **Monthly**, and **Annually**. OV3600 takes the time zone into account for the group if a time zone other than OV3600 System Time has been configured on the **Groups > Basic** configuration page.
- Cancel** — Cancels the application of changes (immediately or scheduled).



To completely nullify the change request, select **Revert** on one of the group configuration pages after you have selected **Cancel**.

- Apply changes to multiple groups by selecting the appropriate group or groups and selecting **Preview**.

## Modifying Multiple Devices

OV3600 provides a very powerful utility that modifies all APs or a subset of access points unrelated to the typical OV3600 group construct. This utility provides the ability to delete simultaneously multiple devices, migrate multiple devices to another group and/or folder, update credentials and optimize channels. Perform these steps to modify multiple devices.


- To modify multiple devices, go to one of the following pages with a device list:

- **APs/Devices > List**
- **APs/Devices > Up**
- **APs/Devices > Down**
- **APs/Devices > Mismatched**
- **Groups > Monitor**

Each of these pages displays a list of devices. Controller monitoring pages also have lists of their thin APs which can be modified using **Modify Devices**.

2. Select **Modify Devices** to make the checkboxes at the left of all devices appear. In addition, a new section appears in this page location to display various settings that can be configured for multiple devices at one time (some operations cannot be performed on the selected devices). [Figure 64](#) illustrates this page.

**Figure 64:** *Modify Multiple Devices Section Illustration*

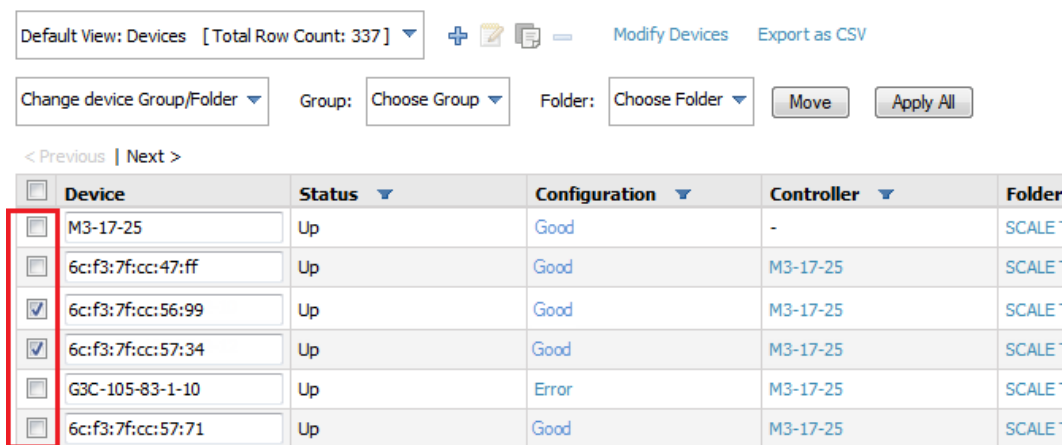

3. Select one or more devices that are to share the configurations. Select the checkbox by each device you want to modify.
4. Click the **Change Device Group/Folder** drop-down menu and select any of the supported changes. [Table 69](#) describes these actions and controls. Any action you take applies to all selected devices.

**Table 69:** *Modify Multiple Devices Section Fields and Default Values*

Action	Description
<b>System Actions</b>	
Change Device Group/Folder	Move the selected devices to a new group or folder. If the AP is in managed mode when it is moved to a new group, it will be reconfigured. When you select this option, you must also click the <b>Group</b> and/or <b>Folder</b> drop down menu and select the destination group or folder for the devices. Click <b>Move</b> and then select <b>Apply All</b> to save your changes.
Poll selected devices	Click <b>Poll Now</b> to poll selected devices for current user count and bandwidth data. This action overrides default poll settings for the group. Polling numerous devices may create a temporary performance load on your OV3600 server.

**Table 69: Modify Multiple Devices Section Fields and Default Values (Continued)**

Action	Description
Audit selected devices	Fetches the current configuration from the device and compares it to the desired OV3600 configuration. The audit action updates the Configuration Status. <b>NOTE:</b> In versions of OV3600 prior to 7.3, the <b>Audit</b> button appeared on <b>Groups &gt; List</b> for groups with audit disabled. Now, if a group has audit disabled for its devices, OV3600 does not show the <b>Audit</b> button in the <b>Modify devices</b> list.
Delete selected devices	Click <b>Delete</b> to remove the selected devices from OV3600. A new window opens and asks you to confirm your changes. Select <b>Apply Changes Now</b> . The deletions will be performed in the background and it may take a minute to remove the selected devices from the list.
Run report on selected devices	Takes you to the <b>Reports &gt; Definitions</b> page where you can define or run a custom report for selected devices. For more details and a procedure, see " <a href="#">Using Custom Reports</a> " on page 292.
Update the credentials used to communicate with these devices	<b>Update</b> changes the credentials OV3600 uses to communicate with the device. It does <i>not</i> change the credentials on the AP.
Import settings from selected devices (and discard current pre-device desired settings)	Audit updates a number of the AP-specific settings that OV3600 initially read off of the AP including channel, power, antenna settings and SSL certifications. OV3600 recommends using this setting if APs have been updated outside of OV3600. Most settings on the <b>APs/Devices Manage</b> configuration page are set to the values currently read off of the devices.
Management Level	When you select this action, you must select either <b>Monitor Only + Firmware Upgrade</b> or <b>Manage Read/Write</b> to choose new the management level for the devices.
Replace Hardware	Select the down device that will be replaced and view the list of OV3600 devices that match the name or IP address of the selected device. The down devices can be replaced with any device in the <b>New Devices</b> list or in the current folder or group.
Planned Downtime Mode	When you select this action, you must select either <b>Enable</b> or <b>Disable</b> to change the downtime mode for the selected devices. When this option is enabled, the selected devices are put into Planned Maintenance mode. When this mode is enabled, no AP Down triggers will be deployed on these devices. Users will not be able to delete folders that contain devices in Planned Maintenance. The devices in Planned Maintenance will show the Up status, but will not be tracked in historical graphs and logs as Up.
Add Maintenance Window	Automate the manual action of putting the selected devices into Manage mode at once so that changes can be applied, and after the maintenance period is over, the devices automatically revert to Monitor-Only mode.  Maintenance windows can be set as a one-time or recurring event.
Delete all Maintenance Windows	Deletes all maintenance windows set for these devices.
<b>Device Actions (Alcatel-Lucent)</b>	

**Table 69: Modify Multiple Devices Section Fields and Default Values (Continued)**

Action	Description
Alcatel-Lucent AP Group	When you select this option then click Update Alcatel-Lucent AP Group, a new window opens that allows you to assign the devices to a new AP group.
Alcatel-Lucent Instant Virtual Controller Variables	Opens the Variable Editor page for selected Alcatel-Lucent Instant APs.
Import unreferenced Alcatel-Lucent profiles from selected devices	Select the devices that include unreferenced profiles, then click this button to import those profiles from the selected devices.
Reprovision selected Alcatel-Lucent devices	Configures the switch to send provisioning parameters such as radio, antenna, and IP address settings to the selected APs. Please note that APs will be rebooted as part of reprovisioning.
<b>Device Actions</b>	
Rename devices	Rename all the selected devices in bulk. Note that you can also rename the devices one at a time using the editable Name fields in each row.
Upgrade firmware for selected devices	Upgrades firmware for the selected devices. Refer to the firmware upgrade help under <b>APs/Devices &gt; Manage</b> configuration page for detailed help on Firmware job options.
Cancel firmware upgrade for selected devices	Cancels any firmware upgrades that are scheduled or in progress for the selected APs.
Reboot selected devices	Reboots the selected devices. Use caution when rebooting devices because this can disrupt wireless users.
Factory reset	Resets the selected devices back to factory-default settings.
Desired Radio Status	Enables or disables the radios on the selected device. This parameter does <i>not</i> apply to Cisco IOS APs.
Cisco Thin AP Settings	Bulk configuration for per-thin AP settings, previously configured on the <b>Group LWAPP AP</b> tab, can be performed from <b>Modify Devices</b> on the <b>APs/Devices List</b> page. Make changes to LWAPP AP groups, including the option that was under Modify Devices.

## Using Global Groups for Group Configuration

To apply group configurations using the OV3600 Global Groups feature, first go to the **Groups > List** configuration page. Select **Add** to add a new group, or select the name of the group to edit settings for an existing group. Select the **Duplicate** icon (usually near the last column of the list) to create a new group with identical configuration to an existing group.

- To have Global Group status, a group must contain no devices; accordingly, access points can never be added to a Global Group. Global groups are visible to users of all roles, so they may not contain devices, which can be made visible only to certain roles. [Figure 65](#) illustrates the **Groups > List** page.

**Figure 65: Groups > List Page Illustration**

Add New Group

Compare two groups  
1-5 of 44 Groups Page 1 of 9 > | Choose columns Choose columns for roles Export CSV

<input type="checkbox"/>	Name	Up/Down Status	Polling Period	Total Devices	Changes	SSID	Down	Mismatched	Ignored	Clients	Usage	VPN Sessions	Duplicate
<input type="checkbox"/>	133 PoC Lab	5 minutes		68		-	45	27	0	151	2.13 Mbps	0	
<input type="checkbox"/>	134-Ap	5 minutes		15		1341-3ey-aw	4	13	0	42	672.19 Kbps	0	
<input type="checkbox"/>	AB	5 minutes		4		ARAP, RTLS	0	1	0	2	0.065 Kbps	0	
<input type="checkbox"/>	AD	5 minutes		2		-	2	0	0	0	-	0	
<input type="checkbox"/>	Aria-home	5 minutes		2		-	0	1	0	1	0.256 Kbps	0	

1-5 of 44 Groups Page 1 of 9 > |

Select All - Unselect All

Delete

- To set a group as a Global Group, go to the **Groups > Basic** configuration page for an existing or a newly created group. Select **Yes** for the **Is Global Group** field under the Global Group section.
- When the change is saved and applied, the group will have a checkbox next to fields. [Figure 66](#) illustrates this configuration page.

**Figure 66: Groups > Basic Page for a Global Group (partial view)**

Group: **Aria-home**

**Basic**

Name: Aria-home

Missed SNMP Poll Threshold (1-100): 1

Regulatory Domain: US - United States

Timezone: AMP system time

For scheduling group configuration changes

Allow One-to-One NAT:  Yes  No

Audit Configuration on Devices:  Yes  No

Toggle this will set all devices in this group to 'Monitor Only'

- When a Global Group configuration is pushed to Subscriber Groups, all settings are static except for settings with the checkbox selected; for fields with checkboxes selected, the value or setting can be changed on the corresponding tab for each managed group. In the case of the **Groups > SSIDs** configuration page, override options are available only on the **Add** configuration page (go to the **Groups > SSIDs** configuration page and select **Add**). Global templates are also configurable as part of Global Groups; for more information, see ["Creating and Using Templates" on page 182](#).
- Once Global Groups have been configured, groups may be created or configured to subscribe to a particular Global Group. Go to the **Groups > Basic** configuration page of a group and locate the **Use Global Groups** section. Select the **Yes** radio button and select the name of the Global Group from the drop-down menu. Then select **Save and Apply** to make the changes permanent. [Figure 67](#) illustrates this page.

**Figure 67:** *Groups > Basic > Managed Page Illustration*

Group: **Access Points**

**Basic**

Name: Access Points

Missed SNMP Poll Threshold (1-100): 1

Regulatory Domain: US - United States

Timezone:  
For scheduling group configuration changes AMP system time

Allow One-to-One NAT:  Yes  No

Audit Configuration on Devices:  
Toggling this will set all devices in this group to 'Monitor Only'  Yes  No

- Once the configuration is pushed, the unchecked fields from the Global Group appears on the Subscriber Group as static values and settings. Only fields that had the override checkbox selected in the Global Group appear as fields that can be set at the level of the Subscriber Group. Any changes to a static field must be made on the Global Group.
- If a Global Group has Subscriber Groups, it cannot be changed to a non-Global Group. A Global Group without Subscriber Groups can be changed to a regular Group by updating the setting on the **Groups > Basic** configuration interface. The Global Groups feature can also be used with the **Master Console**. For more information about this feature, refer to ["Supporting OV3600 Servers with the Master Console"](#) on page 275.

This section describes how to add, configure, and monitor wired and wireless devices, and contains the following sections corresponding to features of the **Device Setup** and **APs/Devices** tabs:

- ["Device Discovery Overview" on page 127](#)
- ["Discovering and Adding Devices" on page 127](#)
- ["Monitoring Devices" on page 139](#)
- ["Configuring and Managing Devices" on page 160](#)
- ["Troubleshooting a Newly Discovered Down Device" on page 176](#)
- ["Using OV3600 to Set up Spectrum Analysis" on page 178](#)

## Device Discovery Overview

After you have deployed OV3600 on the network, the next step is to discover all existing devices connected to your network.

OV3600 allows device discovery in the following ways, all of which are described in the sections that follow:

- **SNMP/HTTP discovery scanning**—This is the primary method to discover devices on your network, configured in the **Device Setup > Discover** page. See ["SNMP/HTTP Scanning" on page 127](#).
- **Cisco Discovery Protocol (CDP)**—OV3600 enhances support for CDP by discovering a Cisco device's CDP neighbors. See ["The Cisco Discovery Protocol \(CDP\)" on page 132](#).
- **Manual device entry**—This admin-supported method of discovery applies when you know of devices that are already on your network. See the following sections for information and procedures:
  - ["Manually Adding Individual Devices" on page 132](#)
  - ["Manually Adding Individual Devices" on page 132](#)
  - ["Manually Adding Individual Devices" on page 132](#)
- **Controller-driven device discovery**—Thin APs will automatically be discovered in the network and added to the **New Devices** list when you add their controller to OV3600. To add the thin APs, refer to ["Authorizing Devices to OV3600 from APs/Devices > New Page" on page 132](#).

## Discovering and Adding Devices

This section describes the following topics:

- ["SNMP/HTTP Scanning" on page 127](#)
- ["The Cisco Discovery Protocol \(CDP\)" on page 132](#)
- ["Authorizing Devices to OV3600 from APs/Devices > New Page" on page 132](#)
- ["Manually Adding Individual Devices" on page 132](#)

### SNMP/HTTP Scanning

SNMP/HTTP discovery scanning is the primary method for discovering devices on your network, including rogue devices. Enable this scanning method from the **Device Setup > Discover** page.



---

This page is only visible to users with the OV3600 Administrator role or roles that have **Allow authorization of APs/Devices** enabled in **OV3600 Setup > Roles**.

---

SNMP/HTTP scanning information is provided in these sections:


- ["Adding Networks for SNMP/HTTP Scanning" on page 128](#)—explains how to enable networks that have been defined for scanning.
- ["Adding Credentials for Scanning" on page 128](#)—explains how to define network credentials for scanning. Credentials must be defined before using them in scan sets.
- ["Defining a Scan Set" on page 129](#)—explains how to create a scan set by combining networks and credentials when scanning for devices.
- ["Running a Scan Set" on page 130](#)—provides a procedure for running a scan set.

## Adding Networks for SNMP/HTTP Scanning

The first step when enabling SNMP/HTTP scanning for devices is to define the network segments to be scanned. Perform these steps.

1. Go to the **Device Setup > Discover** page, and scroll down to the **Networks** section.
2. In the **Networks** section, select the **Add button to add a new scan network**. The **Scan Network** page appears, as shown in [Figure 68](#). (Note that you may have to scroll down the page again to view this section.) Alternatively, you can edit an existing scan network by selecting the corresponding pencil icon. The **New/Edit Networks** page also appears in this instance.

**Figure 68:** *Device Setup > Discover > New Network Section Illustration*

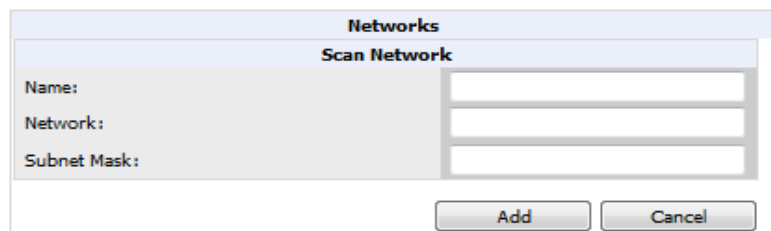

The screenshot shows a web interface titled "Networks" with a sub-section "Scan Network". It contains three text input fields labeled "Name:", "Network:", and "Subnet Mask:". At the bottom of the form are two buttons: "Add" and "Cancel".

3. In the **Name** field, provide a name for the network to be scanned (for example, **Accounting Network**).
4. In the **Network** field, define the IP network range, or the first IP address on the network, to be scanned. One example would be 10.52.0.0.
5. Enter the **Subnet Mask** for the network to be scanned (for example, 255.255.252.0). The largest subnet OV3600 supports is 255.255.255.0.
6. Select **Add**.
7. Repeat these steps to add as many networks for which to enable device scanning. All network segments configured in this way appear in the **Network** section of the **Device Setup > Discover** page.
8. Complete the configuration of scan credentials, then combine scan networks and scan credentials to create scan sets. The next two procedures in this section describe these tasks: ["Adding Credentials for Scanning" on page 128](#) and ["Defining a Scan Set" on page 129](#).

## Adding Credentials for Scanning

The next step in SNMP/HTTP device discovery is to define the scan credentials that govern scanning of a given network. New APs inherit scan credentials from the System Credentials that you configure on the **Device Setup > Communications** page.


Perform these steps to define scan credentials for SNMP/HTTP scanning:

1. Locate the **Credentials** section on the **Device Setup > Discover** page. (Scroll down if necessary.) This page displays scan sets, networks, and credentials that have been configured so far, and allows you to define new elements for device scanning.



2. To create a new scan credential, select the **Add button to add a new scan credential**. [Figure 69](#) illustrates this page. (Note that you may have to scroll down the page again to view this section.)

**Figure 69:** *Device Setup > Discover > Add/Edit New Scan Credential Section Illustration*

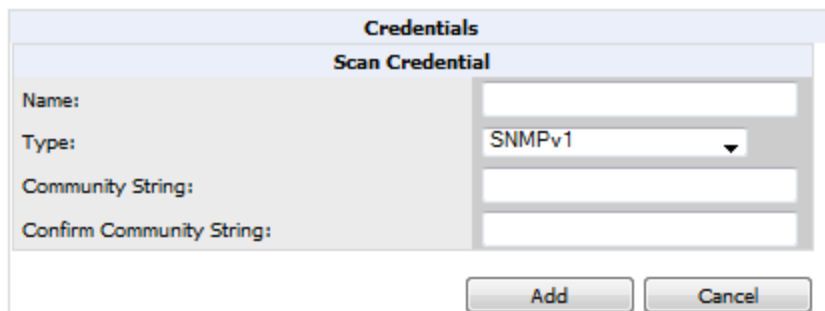

3. Enter a name for the credential in the **Name** field (for example, **Default**). This field supports alphanumeric characters (both upper and lower case), blank spaces, hyphens, and underscore characters.
4. Choose the type of scan to be completed (**SNMPv1**, **SNMPv2**, or **HTTP**). In most cases, perform scans using SNMP for device discovery, but consider the following factors in your decision:
  - SNMPv1 and SNMP v2 differ between in their supported traps, supported MIBs, and network query elements used in device scanning.
  - HTTP discovers devices using the HyperText Transfer Protocol in communications between servers and additional network components. HTTP is not as robust in processing network events as is SNMP, but HTTP may be sufficient, simpler, or preferable in certain scenarios.
  - a. If you selected SNMPv1 or SNMPv2, then define and confirm the **Community String** to be used during scanning. In this section, the community string used can be either read-only or read/write because OV3600 only uses it for discovering APs. To bring APs under management, OV3600 uses the credentials supplied in the **Device Setup > Communication SNMP** section. Once the device is authorized, it will use the non-scanning credentials.
  - b. If you selected HTTP for the type, then enter a **Username** and **Password** for the scan credentials.



---

OV3600 automatically appends the type of scan (SNMP or HTTP) to the Label.

---

5. Select **Add** after you have completed the previous steps. The **Device Setup > Discover** page displays the new scan credential or credentials just created or edited.
6. Repeat these steps to add as many credentials as you require.
7. Once scan networks and scan credentials are defined, combine them by creating scan sets using the next procedure: "[Defining a Scan Set](#)" on page 129.

## Defining a Scan Set

Once you have defined at least one network and one scan credential, you can create a scan set that combines the two for device discovery. Perform these steps to create a scan set.

1. Locate the **Scan Set** area at the top of the **Device Setup > Discover** page.
2. Select **Add New Scan Set** to see all scan components configured so far. If you wish to create a new network, or new scanning credentials, you can select **Add** in either of these fields to create new components prior to creating a scan set.
3. Select the network(s) to be scanned and the Credential(s) to be used. OV3600 defines a unique scan for each Network-Credential combination.

4. In the **Automatic Authorization** section, select whether to override the global setting in **OV3600 Setup > General** and have New Devices be automatically authorized into the New Device List, the same Group/Folder as the discovering devices, the same Group/Folder as the closest IP neighbor, and/or a specified auto-authorization group and folder.
5. Select **Add** to create the selected scans, which then appear in a list at the top of the **Device Setup > Discover** page.
6. To edit an existing scan, select the **pencil** icon next to the scan on the **Device Setup > Discover** page.
7. When ready, proceed to the next task, "[Running a Scan Set](#)" on page 130.



Scheduling an HTTP scan to run daily on your network can help you to discover rogues. Some consumer APs, like most D-Link, Linksys, and NetGear models, do not support SNMP and are found only on the wired side with an HTTP scan. These devices are discovered only if they have a valid IP address. Proper credentials are not required to discover these APs. Wireless scans discover these rogues without any special changes.

## Running a Scan Set

Once a scan has been defined on the **Device Setup > Discover** page, OV3600 can now scan for devices. Perform these steps.

1. Browse to the **Device Setup > Discover** page and locate the list of all scan sets that have been defined so far. [Figure 70](#) illustrates this page.

**Figure 70:** *Device Setup > Discover Executing a Scan Illustration*

To scan for manageable devices and rogue APs using SNMP and HTTP, choose one or more networks to scan below. SNMP and HTTP timeout

**Note:** Discovered devices will use the default credentials configured on the [Communication](#) page, *not* the credentials defined below for scan

**Note:** The IP Address for authorized devices may be overwritten as part of a scan.

1-3 ▼ of 3 Scan Sets Page 1 ▼ of 1 [Choose columns](#) [Export CSV](#)

	Network ▲	Credentials	Total Devices Found	New Devices Found	Total Rogues
<input type="checkbox"/>	Lab_networks	admin, default, private, public	38	6	0
<input type="checkbox"/>	My Scan	admin, default, public	1	0	0
<input type="checkbox"/>	Techpubs	admin, default, Techpubs, Techpubs2	-	-	-

1-3 ▼ of 3 Scan Sets Page 1 ▼ of 1

[Select All - Unselect All](#)

[Refresh](#) this page for updated results.

[Show Scheduling Options](#)

2. Check the box next to the scan(s) that you would like to execute.
3. Select **Scan** to execute the selected scans, and the scan immediately begins. The **Stop** column indicates the scan is **In Progress**. Clicking this column heading will stop the scan(s).
4. For future scans, select the **Show Scheduling Options** link and enter the desired date and time to schedule a future scan.
5. After several minutes have passed, refresh the browser page and view the results of the scan. When the **Start** and **Stop** columns display date and time information, the scan is available to display the results.
6. Select the **pencil** icon for the scan to display the results. [Table 70](#) describes the scan results and related information.

**Table 70:** *Device Setup > Discover > Discovery Execution Fields*

Column	Description
Network	Displays the network to be scanned.

**Table 70: Device Setup > Discover > Discovery Execution Fields (Continued)**

Column	Description
Credentials	Displays the credentials used in the scan.
Total Devices Found	Displays the total number of APs detected during the scan that OV3600 can configure and monitor. <b>Total</b> includes both APs that are currently being managed by OV3600 as well as newly discovered APs that are not yet being managed.
New Devices Found	Displays the number of discovered APs that are not yet managed, but are available.
Total Rogues Found	Displays the total number of APs detected during the scan that OV3600 could not configure or monitor. <b>Total</b> includes both APs that have been discovered in earlier scans as well as newly discovered APs from the most recent scan.
New Rogues Found	Displays the number of rogue APs discovered on the most recent scan.
Start	Displays the date and time the most recent scan was started.
Stop	Displays the date and time the scan most recently completed.
Scheduled	Displays the scheduled date and time for scans that are scheduled to be run.

7. Go to the **APs/Devices > New** page to see a full list of the newly discovered devices that the scan detected. [Figure 71](#) illustrates this page.



This page is only visible to users with the OV3600 Administrator role or roles that have **Allow authorization of APs/Devices** enabled in **OV3600 Setup > Roles**.

**Figure 71: APs/Devices > New Page Illustration**

1-6 ▼ of 6 APs/Devices Page 1 ▼ of 1 Reset filters Choose columns Export CSV

Device	Aruba AP Group ▼	Controller ▼	Type ▼	IP Address	LAN MAC Address	Discovered ▼
<input type="checkbox"/> RADIO4	-	RFS4000	Symbol AP 100	-	00:A0:F8:56:8B:40	5/8/2013 4:50 PM
<input type="checkbox"/> RADIO5	-	RFS4000	Symbol AP 300	-	00:23:68:4A:43:D2	5/8/2013 4:50 PM
<input type="checkbox"/> RADIO2	-	RFS4000	Symbol AP 100	-	00:A0:F8:D7:64:A5	5/7/2013 3:50 PM
<input type="checkbox"/> RADIO3	-	RFS4000	Symbol AP 650	-	00:23:68:31:3D:94	5/7/2013 3:50 PM
<input type="checkbox"/> RADIO1	-	RFS4000	Symbol AP 650	-	00:23:68:31:3D:24	5/7/2013 3:50 PM
<input type="checkbox"/> Cisco 5500 WLC	-	-	Cisco 5500 WLC	10.51.3.241	-	5/3/2013 8:16 AM

1-6 ▼ of 6 APs/Devices Page 1 ▼ of 1 Reset filters

Select All - Unselect All

View Ignored Devices

Group: Access Points ▼

Folder: Top ▼

Monitor Only

Manage Read/Write

Add

Ignore Delete

Replace Hardware

### What Next?

- To authorize one or more devices to a group, see ["Authorizing Devices to OV3600 from APs/Devices > New Page" on page 132.](#)
- To delete a device altogether from OV3600, select the corresponding check box for each device, and select **Delete**.

- Alcatel-Lucent thin APs can have Alcatel-Lucent AP Groups specified, and Cisco thin APs can have LWAPP AP Groups specified when they are authorized.

## The Cisco Discovery Protocol (CDP)

CDP uses the polling interval configured for each individual Cisco switch or router on the **Groups > List** page. OV3600 requires read-only access to a router or switch for all subnets that contain wired or wireless devices. The polling interval is specified on the **Groups > Basic** page.

## Authorizing Devices to OV3600 from APs/Devices > New Page

Once you have discovered devices on your network, add these devices to a group and specify whether the device is to be placed in **Manage Read/Write** or **Monitor Only** mode. To configure a new group, refer to "[Configuring and Using Device Groups](#)" on page 80.

In **Manage Read/Write** mode, OV3600 compares the device's current configuration settings with the Group configuration settings and automatically updates the device's configuration to match the Group policy.

In **Monitor Only** mode, OV3600 updates the firmware, compares the current configuration with the policy, and displays any discrepancies on the **APs/Devices > Audit** page, but does not change the configuration of the device.




---

Put devices in Monitor Only mode when they are added to a newly established device group. This avoids overwriting any important existing configuration settings.

---

Once you have added several devices to the Group, and verified that no unexpected or undesired configuration changes will be made to the devices, you can begin to put the devices in **Manage Read/Write** mode using the **APs/Devices > Manage** or the **Modify these devices** link on any list page.

Perform the following steps to add a newly discovered device to a group:

1. Browse to the **APs/Devices > New** page. The **APs/Devices > New** page displays all newly discovered devices, the related controller (when known/applicable) and the device vendor, model, LAN MAC Address, IP Address, and the date/time of discovery.
2. Select the group and folder to which the device will be added from the drop-down menu (the default group appears at the top of the **Group** listing). Devices cannot be added to a Global Group; groups designated as Global Groups cannot contain access points.
3. Select either the **Monitor Only** or the **Manage Read/Write** radio button and select **Add**.

At this point, you can go to the **APs/Devices > List** page and select the folder(s) to which you have assigned one or more devices to verify that your device has been properly assigned. If you want to assign a device to the **Ignored** page or delete it entirely from OV3600, go to [step 4 on page 132](#).




---

If you select **Manage Select Devices**, OV3600 automatically overwrites existing device settings with the specified group settings. Placing newly discovered devices in Monitor mode is strongly recommended until you can confirm that all group configuration settings are appropriate for that device.

---

4. If you do not want to manage or monitor a discovered device, you may select the device(s) from the list and select either **Ignore** or **Delete**. If you choose to **Ignore** the devices, they will not be displayed in the **APs/Devices > New** list, even if they are discovered in subsequent scans. You can view a list of all Ignored devices on the **APs/Devices > Ignored** page. If you choose to **Delete** the device, it will be listed on the **APs/Devices > New** list if discovered by OV3600 in a subsequent scan. Refer to "[Assigning Devices to the Ignored Page](#)" on page 137.

## Manually Adding Individual Devices

Some deployment situations may require that you manually add devices to OV3600. You can add devices manually by uploading a CSV file, or from the **Device Setup > Add** page.

This section describes the following procedures:

- "Adding Devices with the Device Setup > Add Page" on page 133
- "Adding Multiple Devices from a CSV File" on page 136
- "Adding Universal Devices" on page 137


## Adding Devices with the Device Setup > Add Page

Manually adding devices from the **Device Setup > Add** page to OV3600 is an option for adding all device types. You only need to select device vendor information from a drop down menu for Cisco and Alcatel-Lucent devices, and OV3600 automatically finds and adds specific make and model information into its database.

Perform these steps to manually add devices to OV3600:

1. The first step to add a device manually is to select the vendor and model. Browse to the **Device Setup > Add** page and select the vendor and model of the device to add. [Figure 72](#) illustrates this page.

**Figure 72:** *Device Setup > Add Page Illustration*

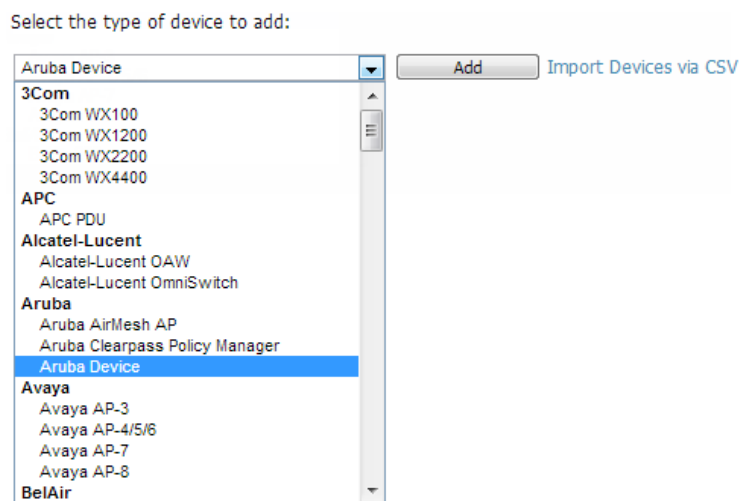

2. Select **Add**. The **Device Communications** and **Location** sections appear, illustrated in [Figure 73](#).

**Figure 73:** *Device Setup > Add > Device Communications and Location Sections*

Creating Aruba Device

Configure default credentials on the [Communication](#) page.

**Device Communications**

Name: Leave name blank to read it from device

IP Address:

SNMP Port:

SSH Port:

Community String:

Confirm Community String:

SNMPv3 Username:

Auth Password:

Confirm Auth Password:

SNMPv3 Auth Protocol:

Privacy Password:

Confirm Privacy Password:

SNMPv3 Privacy Protocol:

Telnet/SSH Username:

Telnet/SSH Password:

Confirm Telnet/SSH Password:

"enable" Password:

Confirm "enable" Password:

**Location**

Group:

Folder:

**Monitor Only** (no changes will be made to device)

**Manage read/write** (group settings will be applied to device)

- Complete these **Device Communications** and **Location** settings for the new device. [Table 71](#) further describes the contents of this page. Settings may differ from device to device based on the type of device and the features that the device supports. In several cases, the default values from any given device derive from the **Device Setup > Communication** page.

**Table 71:** *Device Communication and Location Fields and Default Values*

Setting	Default	Description
Name	None	User-configurable name for the AP (maximum of 20 characters).
IP Address	None	IP address of the device. This field is required.

**Table 71: Device Communication and Location Fields and Default Values (Continued)**

Setting	Default	Description
SNMP Port	161	The port OV3600 uses to communicate with the AP using SNMP.
SSH Port	22	For devices that support SSH, specify the SSH port number.
Community String (Confirm)	Taken from <b>Device Setup &gt; Communication</b>	Community string used to communicate with the AP. <b>NOTE:</b> The <b>Community String</b> should have RW (Read-Write) capability. New, out-of-the-box Cisco devices typically have SNMP disabled and a blank username and password combination for HTTP and Telnet. Cisco supports multiple community strings per AP.
SNMPv3 Username	Taken from <b>Device Setup &gt; Communication</b>	If you are going to manage configuration for the device, this field provides a read-write user account (SNMP, HTTP, and Telnet) within the Cisco Security System for access to existing APs. OV3600 initially uses this username and password combination to control the Cisco AP. OV3600 creates a user-specified account with which to manage the AP if the <b>User Creation Options</b> are set to <b>Create</b> and user Specified as User
Auth Password	Taken from <b>Device Setup &gt; Communication</b>	SNMPv3 authentication password. <b>NOTE:</b> SNMPv3 supports three security levels: (1) no authentication and no encryption, (2) authentication and no encryption, and (3) authentication and encryption. OV3600 currently only supports authentication and encryption.
Privacy Password (Confirm)	Taken from <b>Device Setup &gt; Communication</b>	SNMPv3 privacy password. <b>NOTE:</b> SNMPv3 supports three security levels: (1) no authentication and no encryption, (2) authentication and no encryption, and (3) authentication and encryption. OV3600 currently only supports authentication and encryption.
SNMPv3 Auth Protocol	Taken from <b>Device Setup &gt; Communication</b>	Drop-down menu that allows you to enable the SNMPv3 authentication protocol to the device being added.
SNMPv3 Privacy Protocol	Taken from <b>Device Setup &gt; Communication</b>	Drop-down menu that allows you to enable SNMPv3 privacy protocol to the device being added.
Telnet/SSH Username	Taken from <b>Device Setup &gt; Communication</b>	Telnet username for existing Cisco IOS APs. OV3600 uses the Telnet username/password combination to manage the AP and to enable SNMP if desired. <b>NOTE:</b> New, out-of-the-box Cisco IOS-based APs typically have SNMP disabled with a default telnet username of <b>Cisco</b> and default password of <b>Cisco</b> . This value is required for management of any existing Cisco IOS-based APs.
Telnet/SSH Password (Confirm)	Taken from <b>Device Setup &gt; Communication</b>	Telnet password for existing Cisco IOS APs. OV3600 uses the Telnet username/password combination to manage the AP and to enable SNMP if desired. <b>NOTE:</b> New, out-of-the-box Cisco IOS-based APs typically have SNMP disabled with a default telnet username of <b>Cisco</b> and default password of <b>Cisco</b> . This value is required for management of any existing Cisco IOS-based APs.

**Table 71:** *Device Communication and Location Fields and Default Values (Continued)*

Setting	Default	Description
enable Password (Confirm)	Taken from <b>Device Setup &gt; Communication</b>	Password that allows OV3600 to enter <b>enable</b> mode on the device.

- In the **Location** field, select the appropriate Group and Folder for the device.
- At the bottom of the page, select either the **Monitor Only** or **Management read/write** radio button. The choice depends on whether or not you wish to overwrite the **Group** settings for the device being added. For more information and a detailed procedure, see "[Authorizing Devices to OV3600 from APs/Devices > New Page](#)" on page 132.



---

If you select **Manage read/write**, OV3600 overwrites existing device settings with the **Groups** settings. Place newly discovered devices in **Monitor read/only** mode to enable auditing of actual settings instead of Group Policy settings.

---

- Select **Add** to finish adding the devices to the network.

### Adding Multiple Devices from a CSV File

You can add devices in bulk from a CSV file to OV3600. Here you also have the option of specifying vendor name only, and OV3600 will automatically determine the correct type while bringing up the device. If your CSV file includes make and model information, OV3600 will add the information provided in the CSV file as it did before. It will not override what you have specified in this file in any way.

The CSV list must contain the following columns:

- IP Address
- SNMP Community String
- Name
- Type
- Auth Password
- SNMPv3 Auth Protocol
- Privacy Password
- SNMPv3 Privacy Protocol
- SNMPv3 Username
- Telnet Username
- Telnet Password
- Enable Password
- SNMP Port

You can download a CSV file and customize it as you like.

- To import a CSV file, go to the **Device Setup > Add** page.
- Select the **Import Devices via CSV link**. The **Upload a list of devices** page displays. See [Figure 74](#).



**Figure 74:** Device Setup > Add > Import Devices via CSV Page Illustration

Upload a list of devices

**Location**

Group: Access Points ▼

Folder: Top ▼

The list must be in comma-separated values (CSV) format, containing the following columns:

1. IP Address
2. SNMP Community String
3. Name
4. Type
5. Auth Password
6. SNMPv3 Auth Protocol
7. Privacy Password
8. SNMPv3 Privacy Protocol
9. SNMPv3 Username
10. Telnet Username
11. Telnet Password
12. Enable Password
13. SNMP Port

**IP Address** is required, the others are optional.  
**Type** is a case-insensitive string; you can [view a list of device types](#).

[Download a sample file](#) or see the example below:

```
IP Address,SNMP Community String,Name,Type,Auth Password,SNMPv3 Auth P
10.34.64.163,private,switch1.example.com,Router/Switch,nonradiance,md5
10.172.97.172,private,switch2.example.com,router/switch,nonradiance,sh
10.70.36.172,public,Cisco-WLC-4012-3,Cisco 4000 WLC,
10.46.111.48,,
```

3. Select a group and folder into which to import the list of devices.
4. Click the **Browse** button, and select the CSV list file on your computer.
5. Click the **Upload** button to add the list of devices into OV3600.

## Adding Universal Devices

OV3600 gets basic monitoring information from any device including switches, routers and APs whether or not they are supported devices. Entering SNMP credentials is optional. If no SNMP credentials are entered, OV3600 will provide ICMP monitoring of universal devices. This allows you to monitor key elements of the wired network infrastructure, including upstream switches, RADIUS servers and other devices. While OV3600 can manage most leading brands and models of wireless infrastructure, universal device support also enables basic monitoring of many of the less commonly used devices.

Perform the same steps to add universal devices to OV3600 that were detailed in ["Adding Devices with the Device Setup > Add Page"](#) on page 133.

OV3600 collects basic information about universal devices including name, contact, uptime and location. Once you have added a universal device, you can view a list of its interfaces on **APs/Devices > Manage**.

By selecting the **pencil** icon next to an interface, you can assign it to be non-monitored or monitored as Interface 1 or 2. OV3600 collects this information and displays it on the **APs/Devices > Monitor** page in the **Interface** section. OV3600 supports MIB-II interfaces and polls in/out byte counts for up to two interfaces. OV3600 also monitors sysUptime.

## Assigning Devices to the Ignored Page

A device can be assigned to the **Ignored** page from the **APs/Devices > New** page. The advantage of having the device be designated in this way, as in the case of a device that is temporarily down for a known reason, is that when you take

it off the ignored list, it returns immediately to the location in OV3600 where it had resided before it was marked **Ignored**.

- Ignored devices are *not* displayed in **APs/Devices > New** if discovered in subsequent scans.
- Deleted devices *will* be listed on the **APs/Devices > New** if discovered in subsequent scans.

Perform these steps to further process or return an ignored device to a managed status.

1. Go to the **APs/Devices > New** page to view all newly discovered devices. See [Figure 75](#).

**Figure 75:** *APs/Devices > New Page Illustration*

1-6 ▼ of 6 APs/Devices Page 1 ▼ of 1 Reset filters Choose columns Export CSV

Device	Aruba AP Group ▼	Controller ▼	Type ▼	IP Address	LAN MAC Address	Discovered ▼
<input type="checkbox"/> RADIO4	-	RFS4000	Symbol AP 100	-	00:A0:F8:56:8B:40	5/8/2013 4:50 PM
<input type="checkbox"/> RADIO5	-	RFS4000	Symbol AP 300	-	00:23:68:4A:43:D2	5/8/2013 4:50 PM
<input type="checkbox"/> RADIO2	-	RFS4000	Symbol AP 100	-	00:A0:F8:D7:64:A5	5/7/2013 3:50 PM
<input type="checkbox"/> RADIO3	-	RFS4000	Symbol AP 650	-	00:23:68:31:3D:94	5/7/2013 3:50 PM
<input type="checkbox"/> RADIO1	-	RFS4000	Symbol AP 650	-	00:23:68:31:3D:24	5/7/2013 3:50 PM
<input type="checkbox"/> Cisco 5500 WLC	-	-	Cisco 5500 WLC	10.51.3.241	-	5/3/2013 8:16 AM

1-6 ▼ of 6 APs/Devices Page 1 ▼ of 1 Reset filters

Select All - Unselect All

View Ignored Devices

Group: Access Points ▼

Folder: Top ▼

Monitor Only

Manage Read/Write

Add

Ignore Delete

Replace Hardware

2. Select the checkbox beside the device or devices that you want to ignore, and then select the **Ignore** button.

## Unignoring a Device

Perform these steps to further process a device or to return an ignored device to a managed status.

1. To view all devices that are ignored, go to the **APs/Devices > Ignored** page, illustrated in [Figure 76](#).

**Figure 76:** *APs/Devices > Ignored Page Illustration*

1-2 ▼ of 2 Ignored APs/Devices Page 1 ▼ of 1 Reset filters Choose columns Export CSV

Device	Aruba AP Group ▼	Controller ▼	Type ▼	IP Address	LAN MAC Address	Discovered ▼
<input type="checkbox"/> RADIO1	-	RFS4000	Symbol AP 650	-	00:23:68:31:3D:24	5/7/2013 3:50 PM
<input type="checkbox"/> Cisco 5500 WLC	-	-	Cisco 5500 WLC	10.51.3.241	-	5/3/2013 8:16 AM

1-2 ▼ of 2 Ignored APs/Devices Page 1 ▼ of 1 Reset filters

Select All - Unselect All

View New Devices

Unignore Delete

This page provides the following information for any ignored device:

- device name or MAC address, when known
- controller associated with that device
- device type
- device IP address
- LAN MAC address for the LAN on which the device is located
- date and time of device discovery

2. To change the device parameters for a given device, select its checkbox and adjust group, folder, monitor, and manage settings as desired.
3. Select **Add** to add the device to OV3600 so that it appears on the **APs/Devices > New** list.
4. The **Unignore** button will either return the device to its regular folder or group or send it to the **APs/Devices > New** page.

## Monitoring Devices

This section discusses various device monitoring options and includes the following sections:

- "Viewing Device Monitoring Statistics" on page 139
- "Understanding the APs/Devices > Monitor Pages for All Device Types" on page 141
- "Monitoring Data Specific to Wireless Devices" on page 142
- "Evaluating Radio Statistics for an AP" on page 149
- "Monitoring Data for Mesh Devices" on page 154
- "Monitoring Data for Wired Devices (Routers and Switches)" on page 155
- "Understanding the APs/Devices > Interfaces Page" on page 157
- "Auditing Device Configuration" on page 158
- "Using Device Folders (Optional)" on page 159


## Viewing Device Monitoring Statistics

You can view many useful device monitoring statistics in the **APs/Devices > List** page. The **APs/Devices > List** page displays Clients and Usage interactive graphs (formerly Users and Bandwidth prior to 7.4) and lists all devices that are managed or monitored by OV3600.

To see only the Up devices, you can click the **Up** link in the Top Header Stats bar (next to the green arrow). This displays the **APs/Devices > Up** page with the same information, but only containing active devices. You can do the same with the **Down** and **Mismatched** top header stats links.

Use the **Go to folder** field to filter the list by folder, or click **Expand folders to show all APs/Devices** if you are looking at a filtered device list. A lock icon in the **Configuration** column indicates that the device in that row is in **Monitor only** mode. Figure 77 illustrates this page.

**Figure 77: APs/Devices > List (partial view)**

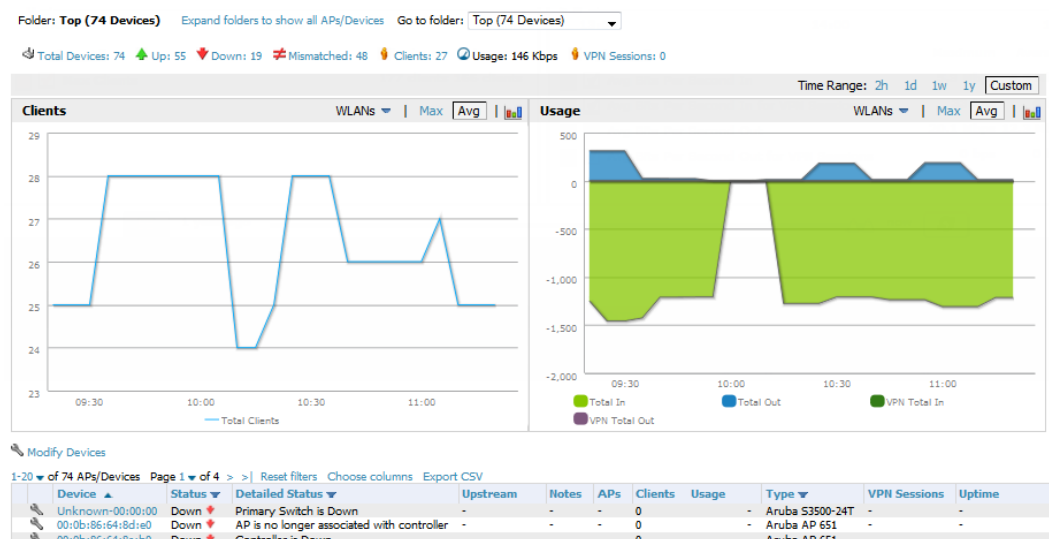

Verify that the devices you added are now appearing in the **APs/Devices > Up** page.



Newly added devices will have a status of **Down** until they have been polled the first time. Their configuration status will remain **Unknown** until they have finished verification. The **Up** status is not contingent on verification.

The same section also appears on the **Groups > Monitor** page and is hyperlinked from a controller's monitoring interface.

The **Alert Summary** section of **APs/Devices > List** cites the number of events that have occurred in the last two hours, the last 24 hours, and total. There are three categories of alerts as listed below:

- OV3600 Alerts
- IDS Events
- RADIUS Authentication Issues



The **Alert Summary** table is also a feature of the **Home > Overview** page and has the same links in that location.

For more information on the **Alert Summary** table, refer to "[Viewing Alerts](#)" on page 233.

## Creating Custom Filtered Views

The columns in the default view for each of the following pages are defined in OmniVista 3600 Air Manager and cannot be modified. However, you can create a new filtered view in each of these pages that returns custom information based on the filter parameters and data columns you selected when creating that new view.

- **APs/Devices > List**
- **APs/Devices > Up**
- **APs/Devices > Down**
- **APs/Devices > Mismatched**

**Figure 78: Default View of Devices**


<input type="checkbox"/>	Device ^	Status	Configuration	Controller	Folder	Group	Clients	Usage	IP Address	Type
<input type="checkbox"/>	CN18DWY09T	Up	Good	MSM720	HP	HP	0	0 bps	10.51.1.2	HP ProCurve M...
<input type="checkbox"/>	MSM720	Up	Good	-	HP	HP	0	0 bps	10.51.3.104	HP ProCurve M...
<input type="checkbox"/>	SG102LBW12	Up	Good	-	HP	HP	0	0 bps	10.51.3.103	HP ProCurve M...

To create a new filtered view, navigate to any page that contains a default view list, such as **APs/Devices > List**.





1. Click the **+** icon. The **Filtered View** page opens.
2. Enter the name of the new view.
3. (Optional) OV3600 administrators can select the **Is Global** check box to give all users access to the filtered view. Administrators are able to edit any global view they can see in the filtered view drop-down list
4. Click **Add Filter**. A new list of parameters is added to the **Filter** field.
5. Scroll the list of parameters and select a **Device** or **Radio** parameter. If required, enter search parameters such as "=" to refine the filter parameters.
6. (Optional) To create a filtered view with multiple filter parameters, click **Add Filter** again and define any additional filter parameters. For example, to create a view that displays APs with more than zero clients but less than five

clients, you would need to create one filter with the parameters **Clients > 0**, and a second filter with the parameters **Clients < 5**.

7. Drag and Drop data columns from the **Available Columns** list to the **Current Columns** list to select which columns display in the view. You can reorder the columns in the **Current Columns** list by dragging and dropping the data column to a different place in the list.
8. Click **OK**. The name of the new view is added to the view list.
9. Click the name of the new view. A new page displays the results of the new view, based on the configured filters.

You can edit a custom filtered view at any time, by selecting the view in the view list, then selecting the  icon and modifying filter parameters and column displays.

**Table 72: Filter icons**

Icon	Description
	Click this icon to create a custom filtered view.
	Click this icon to edit an existing custom filtered view.
	Click this icon to clone a filtered view.
	Click this icon to delete a custom filtered view.

## Understanding the APs/Devices > Monitor Pages for All Device Types

You can quickly go to any device’s monitoring page once you go to its specific folder or group on the **APs/Devices > List** page by selecting its hyperlinked name in the **Device** column.

All **Monitor** pages include a section at the top displaying information such as monitoring/configuration status, serial number, total clients, firmware version, and so on, as shown in [Figure 79](#).

**Figure 79: Monitoring Page Top Level Data Common to All Device Types**

Device Info			
Status:	Up (OK)		
Configuration:	Error (Telnet/SSH Error: (pattern match timed-out) in password failure: Permission denied, please try again. )		
Firmware:	6.3.0.0	Licenses	
Upstream Device:	Switch15	Upstream Port:	Fa0/8
Controller Role:	Master		
Type:	Aruba 3600	Last Contacted:	5/22/2013 1:46 PM Uptime: 6 days 21 hrs 49 mins
LAN MAC Address:	00:0B:86:61:12:D0	Serial:	AC0000277
Location:	-	Contact:	-
IP Address:	10.51.3.117	APs:	2 Clients: 34 Usage: -
VPN Sessions:	0	VPN Usage:	-
Quick Links:	Open controller web UI...	Run command...	
Notes:			

The alert summary and recent events sections are also the same regardless of the device type, and these sections appear toward the bottom of these pages. In addition, a link to the Audit Log is available on the bottom of this page. A portion of this page is shown in [Figure 80](#).

**Figure 80: Monitoring Page Bottom Level Data Common to All Device Types (partial view)**

Alert Summary at 5/22/2013 1:52 PM

Type ▲	Last 2 Hours	Last Day	Total	Last Event
AMP Alerts	0	0	1	5/15/2013 4:28 AM
IDS Events	0	0	0	-
RADIUS Authentication Issues	0	0	0	-

**Device Events**

No records available.

**Recent AMP Device Events** ([view system event log](#))

Time	User	Event
Wed May 22 04:21:28 2013	System	Status changed to 'OK'
Wed May 22 04:16:51 2013	System	Telnet/SSH Error: pattern match timed-out
Wed May 22 04:16:39 2013	System	Telnet/SSH Error: pattern match timed-out
Wed May 22 04:16:25 2013	System	Configuration verification: failed to read configuration from device
Wed May 22 04:16:25 2013	System	Status changed to 'Error fetching existing configuration'
Wed May 22 04:16:24 2013	System	Configuration status changed to 'Telnet/SSH Error: (pattern match timed-out) in password failure: again.'
Wed May 22 04:16:24 2013	System	Telnet/SSH Error: pattern match timed-out
Tue May 21 04:24:42 2013	System	Status changed to 'OK'
Tue May 21 04:16:35 2013	System	Telnet/SSH Error: pattern match timed-out
Tue May 21 04:16:23 2013	System	Configuration verification: failed to read configuration from device
Tue May 21 04:16:23 2013	System	Status changed to 'Error fetching existing configuration'
Tue May 21 04:16:22 2013	System	Configuration status changed to 'Telnet/SSH Error: (pattern match timed-out) in password failure: again.'

[Audit Log](#)

Monitoring pages vary according to whether they are wired routers/switches, controllers/WLAN switches, or thin or fat APs; whether the device is a Mesh device; and whether Spectrum is enabled. These differences are discussed in the sections that follow.

### Monitoring Data Specific to Wireless Devices

The **APs/Devices > Monitor** page for controllers and APs include a graph for users and bandwidth. The controller graph lists the APs connected to it, while the APs include a list of users it has connected.

When available, lists of CDP and RF neighbors are also listed.

A sample monitoring page for wireless devices is shown in [Figure 81](#).

**Figure 81:** APs/Devices > Monitor Page for Wireless Devices (partial view of an AP)

**Device Info**

Username: ARUBANETWORKS\abartz  
 First Seen: 1/19/2012 5:34 PM on 13-1-AL27 (13-1-al27.arubanetworks.com) for 52 mins  
 Last Seen: 5/23/2013 3:35 PM on 13-AP09 (131-ap09.arubanetworks.com) for 1 hr 22 mins  
 Device Type:  Windows 7  
 OS:  Windows 7  
 OS Detail:  compatible; MSIE 9.0; Windows h  
 Network Interface Vendor: Intel  
 AOS Device Type: Win 7  
 Aruba HTTP Fingerprint: Mozilla/5.0 (compatible; MSIE 9.0; Windows NT 6.1; WOW64; Trident/5.0)  
 Classification:   
 Steerable: Yes  
 Watched Client:  Yes  No  
 Notes:

[Show additional properties](#)

**Current Association**

Username: ARUBANETWORKS\abartz  
 Role: Aruba-Employee AP/Device: 131-AP09 (131-ap09.arubanetworks.com)  
 Signal Quality: 40 Controller: Chuck (chuck.arubanetw)  
 Association: 5/23/2013 2:12 PM Group: Aruba HQ  
 Duration: 1 hr 22 mins Folder: Top  
 Mode: 802.11n (2.4 GHz) AP/Device Location: -  
 Usage: 1.05 Kbps Radio: 802.11bgn  
 SSID: ethersphere-wpa2 VLAN: 1108  
 Ch. BW: HT20 Forward Mode: Tunnel Encrypted  
 LAN IP 1: 10.11.9.63 LAN Hostname 1: sjc-abartz.arubanetw  
 Auth Type: EAP Auth Time: 1 hr 22 mins  
 Cipher: - Security Mode: <unknown>  
 SNMP Source: Poll

Time Range:  1d 1w 1y Custom

**Signal Quality** Sources | Max Avg

**Usage** Sources | Max Avg

Location: Sunnyvale > 1341 Orleans > Floor 1 (Floor 1)

**Alert Summary at 5/23/2013 3:35 PM**

Type	Last 2 Hours	Last Day	Total	Last Event
AMP Alerts	0	0	0	-
RADIUS Authentication Issues	0	0	0	-

Table 73 describes the fields and information displayed in the **Device Info** section. The displayed fields vary from device to device.

**Table 73:** APs/Devices > Monitor > Device Info Fields and Default Values

Field	Description
Poll Now	Button above the <b>Device Info</b> section that, when pressed, immediately polls the individual AP or the controller for a thin AP; this overrides the group's preset polling intervals to force an immediate update of all data except for rogue information. Shows attempt status and last polling times.

**Table 73:** APs/Devices > Monitor > Device Info Fields and Default Values (Continued)

Field	Description
Status	Displays ability of OV3600 to connect to the AP. <b>Up</b> (no issue) means everything is working as it should. <b>Down</b> (SNMP get failed) means OV3600 can get to the device but not speak with it using SNMP. Check the SNMP credentials OV3600 is using the view secrets link on the <b>APs/Devices &gt; Manage</b> page and verify SNMP is enabled on the AP. Many APs ship with SNMP disabled. <b>Down</b> (ICMP ping failed after SNMP get failed) means OV3600 is unable to connect to the AP using SNMP and is unable to ping the AP. This usually means OV3600 is blocked from connecting to the AP or the AP needs to be rebooted or reset.
Configuration	<ul style="list-style-type: none"> <li>• <b>Good</b> means all the settings on the AP agree with the settings OV3600 wants them to have.</li> <li>• <b>Mismatched</b> means there is a configuration mismatch between what is on the AP and what OV3600 wants to push to the AP. The <b>Mismatched</b> link directs you to this specific <b>APs/Devices &gt; Audit</b> page where each mismatch is highlighted.</li> <li>• <b>Unknown</b> means the device configuration has not yet been fetched (possible issue with credentials).</li> <li>• <b>Verifying</b> means that the device is fetching a configuration that will be compared to the desired settings.</li> <li>• <b>Error</b> indicates a problem with the device. This configuration is accompanied with a description of the error.</li> </ul>
Firmware	Displays the firmware version running on the AP. Newer AirMesh APs include the new bootloader APBoot. OV3600 helps to identify the new AirMesh APs from the old SKUs by displaying the bootloader information here.
Licenses (Appears for Alcatel-Lucent switches)	Selecting this link opens a pop-up window that lists the built-in licenses as well as other installed licenses for this switch. This also shows whether any license has expired.
Controller (Appears for APs)	Displays the controller for the associated AP device as a link. Select the link to display the <b>APs/Devices &gt; Monitor</b> page for that controller.
Mesh Gateway *	Specifies the mesh AP acting as the wired connection to the network.
Mesh Mode*	Specifies whether the AP is a portal device or a mesh node. The portal device is connected to the network over a wired connection. A node is a device downstream of the portal that uses wireless connections to reach the portal device.
Mesh ID *	The name of the mesh device.
Google Earth*	Selecting the Google Earth icon opens the mesh network view in Google Earth.
Type	Displays the make and model of the device.
Last Contacted	Displays the most recent time OV3600 has polled the AP for information. The polling interval can be set on the <b>Groups &gt; Basic</b> page.
Uptime	Displays the amount of time since the AP has been rebooted. This is the amount of time the AP reports and is not based on any connectivity with OV3600.
LAN MAC Address	Displays the MAC address of the Ethernet interface on the device.



**Table 73:** *APs/Devices > Monitor > Device Info Fields and Default Values (Continued)*

Field	Description
Serial	Displays the serial number of the device.
Radio Serial	Displays the serial number of the radios in the device. This field is not available for all APs.
Location	Displays the SNMP location of the device.
Contact	Displays the SNMP contact of the device.
IP Address	Displays the IP address that OV3600 uses to communicate to the device. This number is also a link to the AP web interface. When the link is moused over a pop-up menu will appear allowing you to http, https, telnet or SSH to the device.  For Alcatel-Lucent switches, if Single Sign-On is enabled for your role in this OV3600 and you have access to this controller, you will not have to enter the credentials for this controller again after selecting this link.
Outer IP	Public IP address for a RAP device.
Remote LAN IP	LAN IP address for a RAP. This address is useful for troubleshooting from the local network.
Quick Links	<b>Open controller web UI:</b> A drop-down menu that allows you to jump to the controller's UI in a new window.  For Alcatel-Lucent switches, if Single Sign-On is enabled for your role in this OV3600 and you have access to this controller, you will not have to enter the credentials for this controller again after selecting this link.  <b>Run a command:</b> A drop-down menu with a list of CLI commands you can run directly from the <b>APs/Devices &gt; Monitor</b> page.
APs	For controllers, displays the number of APs managed by this device at the time of the last polling.
Clients	Displays the total number of users associated to the device or its APs regardless of which radio they are associated to, at the time of the last polling.
Usage	Combined bandwidth through the device at time of polling.

\*These fields are only available for mesh APs. To see an example of mesh monitoring, see "[Monitoring Data for Mesh Devices](#)" on page 154.

[Table 74](#) describes the information in the **Radio** table for APs:

**Table 74:** *APs/Devices > Monitor > Radio Fields and Descriptions*

Field	Description
Index	The number of the radio, used to distinguish radios that may be of the same type on a device.
Name	The Radio type (802.11a/b/g/n) as a link to the <b>Radio Statistics</b> page for that radio.
MAC address	The MAC address of the corresponding radio in the AP.
Clients	The number of users associated to the corresponding radio at the time of the last polling.

**Table 74:** APs/Devices > Monitor > Radio Fields and Descriptions (Continued)

Field	Description
Usage (Kbps)	The amount of bandwidth being pushed through the corresponding radio interface or device at the time of the last polling.
Channel	The channel of the corresponding radio.
Tx Power	Some devices report transmit power reduction rather than transmit power; no value is reported for those devices.
Antenna Type	Indicates <b>Internal</b> or <b>External</b> radio. For devices where antenna type is defined per AP, the same antenna type will be listed for each radio.
Channel Width*	The bandwidth of the channel used by 802.11 stations. Legacy devices use <b>20 MHz</b> channels, and newer devices that support the 802.11n standard can use <b>40 MHz</b> channels to increase throughput.
Mesh Links *	The total number of mesh links to the device including uplinks and downlinks.
Role	Whether the radio acts as a Mesh Node or Access
Active SSIDs	The SSID(s) of the radio.

\*These fields are only available for mesh APs. To see an example of mesh monitoring, see "[Monitoring Data for Mesh Devices](#)" on page 154.

Devices with wired interfaces (other than Alcatel-Lucent Instant APs) will display the **Wired Interfaces** table, which is described in [Table 75](#):

**Table 75:** APs/Devices > Monitor > Wired Interfaces Fields and Descriptions

Field	Description
Name	Displays the name of the interface.
MAC Address	Displays the MAC address of the corresponding interface in the device.
Clients	Displays the number of users associated to the corresponding interface at the time of the last polling.
Type	Indicates the type of interface - gigabit Ethernet or fast Ethernet for wired interfaces.
Admin Status	The administrator setting that determined whether the port is on or off.
Operational Status	Displays the current status of the interface. If an interface is <b>Up</b> , then OV3600 is able to ping it and fetch SNMP information. If the AP is listed as <b>Down</b> , then OV3600 is either unable to ping the interface or unable to read the necessary SNMP information from the device.
Duplex	Duplex mode of the link, full or half.
Alcatel-Lucent Port Mode	Either Active Standby (which provides redundancy so that when an active interface fails, the user traffic can failover to the standby interface) or one of the forwarding modes (Split, Bridge).
Input Capacity	The input capacity of the interface.

**Table 75:** APs/Devices > Monitor > Wired Interfaces Fields and Descriptions (Continued)

Field	Description
Output Capacity	The output capacity of the interface.

Figure 82 illustrates the interactive graphs. Use the drop down button next to the graph title to select a different graph.

**Figure 82:** Interactive graphs for an Alcatel-Lucent switch

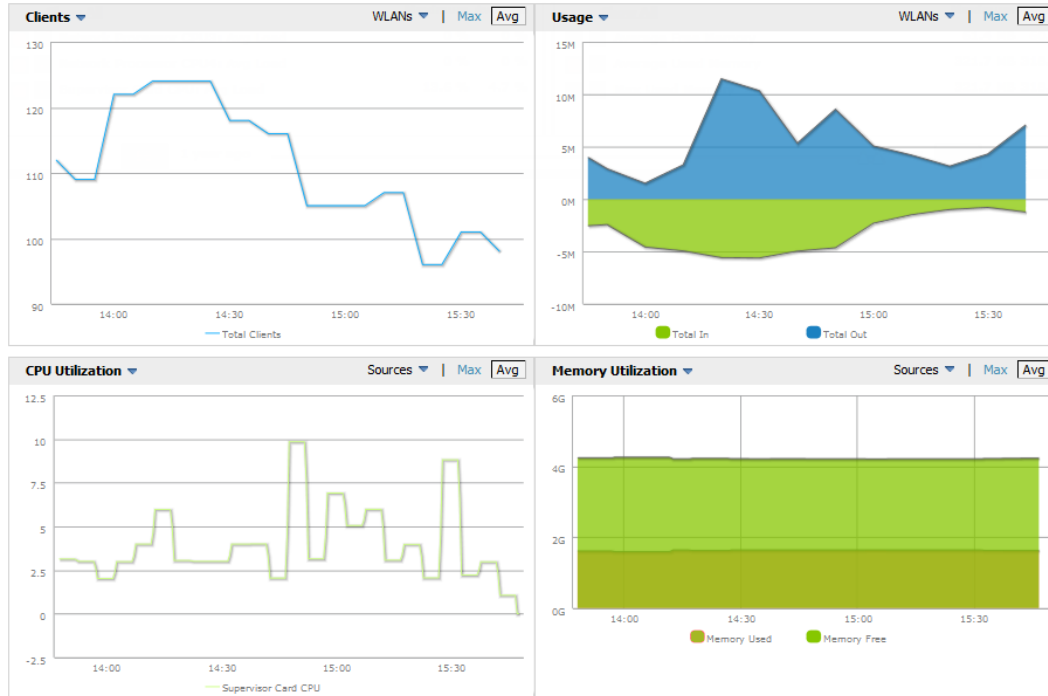


Table 76 describes the graphs on this page.

**Table 76:** APs/Devices > Monitor Graphical Data

Graph	Description
Clients	Formerly Users. Shows the max and average client count reported by the device radios for a configurable period of time. User count for controllers are the sum of the user count on the associated APs. Check boxes below the graph can be used to limit the data displayed.
Usage	Formerly Bandwidth. Shows the bandwidth in and out reported by the device for a configurable period of time. Bandwidth for controllers is the sum of the associated APs. Check boxes below the graph can be used to limit the data displayed.
CPU Utilization (controllers only)	Reports overall CPU utilization (not on a per-CPU basis) of the device.
Memory Utilization (controllers only)	Reports average used and free memory and average max memory for the device.

Table 77 describes the fields and information displayed for the **Connected Clients** display.

**Table 77: APs/Devices > Monitor > Connected Clients Fields and Default Values**

Field	Description
Username	Provides the name of the User associated to the AP. OV3600 gathers this data in a variety of ways. It can be taken from RADIUS accounting data or traps.
Device Type	The type of device the user is using as determined by the Device Type Rules set up by an administrator in <b>OV3600 Setup &gt; Device Type Setup</b> . For more information, refer to " <a href="#">Setting Up Device Types</a> " on page 66.
Role	The role of the connected client such as employee, perforce, or logon (captive portal).
MAC Address	Displays the Radio MAC address of the user associated to the AP. Also provides a link that redirects to the <b>Users &gt; Detail</b> page.
Radio	Displays the radio to which the user is associated.
Association Time	Displays the first time OV3600 recorded the MAC address as being associated.
Duration	Displays the length of time the MAC address has been associated.
Auth Type	<p>Displays the type of authentication employed by the user. Supported auth types include:</p> <ul style="list-style-type: none"><li>● <b>EAP</b>—Extensible Authentication Protocol.</li><li>● <b>RADIUS accounting</b>—RADIUS accounting servers integrated with OV3600 provide the RADIUS Accounting Auth type</li><li>● <b>WPA2</b>—Wi-Fi Protected Access 2 encryption</li><li>● No Encryption</li></ul> <p>OV3600 considers all other types as not authenticated.</p> <p>The information OV3600 displays in <b>Auth Type</b> and <b>Cipher</b> columns depends on what information the server receives from the devices it is monitoring. The client devices may all be similar, but if the APs to which they are associated are of different models, or if security is set up differently between them, then different <b>Auth Type</b> or <b>Cipher</b> values may be reported to OV3600.</p> <p>If all APs are the same model and all are set up the same way, then another reason for differing <b>Auth Types</b> might be the use of multiple VLANs or SSIDs. One client device might authenticate on one SSID using one <b>Auth Type</b> and another client device might authenticate on a second SSID using a different <b>Auth Type</b>.</p>
Cipher	Displays the encryption or decryption cipher supporting the user, when this information is available. The client devices may all be similar, but if the APs to which they are associated are of different models, or if security is set up differently between them, then different <b>Auth Type</b> or <b>Cipher</b> values may be reported to OV3600.
Auth Time	Shows how long the user has been authenticated, in minutes. A negative number (such as -17 min) indicates that the user has not authenticated for the duration displayed.
Signal Quality	Displays the average signal quality the user experienced.
Usage	Displays the average bandwidth consumed by the MAC address.

**Table 77:** APs/Devices > Monitor > Connected Clients Fields and Default Values (Continued)

Field	Description
Goodput	The ratio of the total bytes transmitted or received in the network to the total air time required for transmitting or receiving the bytes. Note that this information is not available for Instant devices.
Speed	The packet and byte counts of data frames successfully transmitted to and received from associated stations. Note that this information is not available for Instant devices.
Location	Displays the VisualRF box that allows users to view features including heatmap for a device and location history for a user.
LAN IP Addresses	Displays the IP assigned to the user MAC. This information is not always available. OV3600 can gather it from the ARP cache of switches discovered by OV3600. This column can accommodate multiple IP addresses for a client if it has both IPv4 and IPv6.
LAN Hostnames	The DNS hostname(s) broadcast by the client. This column can accommodate multiple hostnames for a client if it has both IPv4 and IPv6.

The **Recent Events** area lists the most recent events specific to the device. This information also appears on the **System > Events Log** page (refer to "Using the System > Event Log Page" on page 222). Table 78 describes the fields in this page that display in the **Recent Events** table.

**Table 78:** APs/Devices > Monitor > Recent Events Fields and Default Values

Field	Description
Time	Displays the day and time the event was recorded.
User	Displays the user that triggered the event. Configuration changes are logged as the OV3600 user that submitted them. Automated OV3600 events are logged as the <b>System</b> user.
Event	Displays a short text description of the event.

## Evaluating Radio Statistics for an AP

The **APs/Devices > Monitor > Radio Statistics** page contains useful data for pinpointing network issues at the AP radio level for Alcatel-Lucent APs and Cisco WLC thin APs (firmware 4.2 or greater).

To see radio statistics details, navigate to the **APs/Devices > Monitoring** page for a supported AP and select the linked radio under the **Name** column in the **Radios** list table, as illustrated in Figure 83.

**Figure 83:** Links to the Radio Statistics page on APs/Devices > Monitoring for an AP

**Radios**

Index ▲	Name	MAC Address	Clients	Usage (Kbps)	Channel	Tx Power	Role	SSID
1	802.11bgn	6C:F3:7F:E7:23:40	1	0.00	11	15 dBm	Access	aru-117-dot1x, ...
2	802.11ac	6C:F3:7F:E7:23:50	0	0.00	153	15 dBm	Access	aru-117-dot1x, ...

## Overview of the Radio Statistics Page

The Radio Statistics page displays transmit and receive statistics about the communication quality of individual radios. Depending on the AP, assigned group profiles, and recent activity on this radio, this data gives visibility into recent and


historical changes in the network, fetches real-time statistics from the AP's controller, indicates actively interfering devices (requires Alcatel-Lucent set to Spectrum mode), and summarizes major issues.

## Viewing Real-Time ARM Statistics

Alcatel-Lucent AP Groups that have the **Adaptive Radio Management (ARM)** feature enabled continuously optimize each AP to use the best channel and transmission power settings available. An AP configured with ARM will automatically adjust to a better channel if it reaches a configured threshold for noise, MAC errors, or PHY errors; additionally, it can attenuate transmit power and switch between radio modes as needed. For more information, refer to the ARM chapter in the *Alcatel-Lucent AOS-W User Guide*.

Complete ARM statistics from Alcatel-Lucent switches can be retrieved from the Radio Statistics page by selecting the **Run a command** drop-down menu and choosing button, as illustrated in [Figure 84](#).

**Figure 84:** Fetch additional radio stats by running a show command

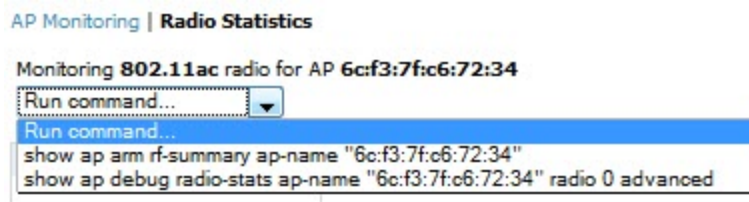

When this button is selected, a new browser window launches with the statistics in plain text. Other ARM-tracked metrics are visible in the **Radio Statistics** page for Alcatel-Lucent APs.

## Issues Summary section

The **Issues Summary** section only displays when noise, client count, non-802.11 interfering devices, channel utilization, usage, and MAC and PHY errors reach a certain threshold of concern, as described in [Table 79](#) and illustrated in [Figure 85](#):

**Table 79:** Issues Summary labels and thresholds

Issue	Triggering Threshold
High Noise	> -80
High Number of Clients	> 15
High Channel Utilization	> 75%
High Usage	> 75% of max
Interfering Devices Detected	Detected within the last 5 minutes
High MAC/Phy Errors	> 1000 frames/sec

**Figure 85:** Issues Summary Section Illustration

Issues Summary	
Issue:	Description
High Noise:	Noise > -80

These issues highlighted in this section can be examined in detail using the corresponding interactive graphs on the same page. See the "Radio Statistics Interactive Graphs" on page 151 section of this chapter for details.

## 802.11 Radio Counters Summary

This table appears for radios with 802.11 counters and summarizes the number of times an expected acknowledgment frame was not received, the number of duplicate frames, the number of frames containing Frame Check Sequence (FCS) errors, and the number of frame/packet transmission retries and failures. These aggregate error counts are broken down by Current, Last Hour, Last Day, and Last Week time frames, as illustrated in Figure 86.

**Figure 86: 802.11 Radio Counters Summary table**

**802.11 Radio Counters Summary (frames/sec)**

	Current	Last Hour	Last Day	Last Week
Unacked	6	6	10	13
Retries	0	0	1	1
Failures	0	0	0	0
Dup Frames	2	4	4	13
FCS Errors	19	19	56	143

The frame- per-second rate of these and other 802.11 errors over time are tracked and compared in the **802.11 Counters** graph on the same page.

## Radio Statistics Interactive Graphs

Time-series graphs for the radio show changes recorded at every polling interval over time when polling with either SNMP or AMON. Clients and Usage data are polled based on the AP's group's **User Data Polling Period**. Channel, Noise, and Power are based on **AP Interface Polling Period**. 802.11 Counters data are based on the APs group's **802.11 Counters Polling Period**.

The two graph panes enable simultaneous display of two different information sets, as detailed in the following table:

**Table 80: Radio Statistics Interactive Graphs Descriptions**

Graph Title	Description
Clients	A line graph that displays the maximum users associated to the corresponding radio at polling intervals over the time range set in the slider. Select <b>Show All</b> for other metrics such as average users and max users for various individual devices.
Usage	An area graph displaying the average bandwidth in each direction for the radio. Select <b>Show All</b> for other metrics such as max bandwidth in and out, average and max mesh/overhead or overhead bandwidth, and average/max Enet0.
Radio Channel	An area graph that displays the channel changes (if any) of the radio over time. Frequent, regular channel changes on an Alcatel-Lucent or Cisco WLC AP radio usually indicate that the Adaptive Radio Management feature (ARM) in AOS-W is compensating for high noise levels from interfering devices.
Radio Noise	An area graph that displays signal interference (noise floor) levels in units of dBm. Noise from interfering devices above your AP's noise threshold can result in dropped packets. For ARM-enabled Alcatel-Lucent APs, crossing the noise threshold triggers an automatic channel change.

**Table 80: Radio Statistics Interactive Graphs Descriptions (Continued)**

Graph Title	Description
Radio Power	A line graph that displays the average and maximum radio transmit power, between 0 and 30 dBm, over the time range set in the slider. You can adjust the transmit power manually in the <b>APs/Devices &gt; Manage</b> page for this radio's AP, or enable ARM on Alcatel-Lucent APs to dynamically adjust the power toward your acceptable Coverage Index as needed. For more information, see the Adaptive Radio Management chapter of the <i>Alcatel-Lucent AOS-W User Guide</i> .
Radio Errors	A line graph displaying the frame reception rate, physical layer error rate (resulting from poor signal reception or broken antennas), and the data link (MAC) layer (corrupt frames, driver decoding issues) for the radio.
802.11 Counters	A line graph that displays statistics such as frame rate, fragment rate, retry rate, duplicate frame rate, and other metrics tracked by 802.11 counters.
Utilization (Alcatel-Lucent and Cisco WLC thin APs on supported firmware versions only)	Displays max and average percentages on this radio for busy, interfering receiving and transmitting signals. Special configuration on the controller is required to enable this data. Consult the <i>OmniVista 3600 Air Manager Best Practices Guide</i> for details.
Goodput (Alcatel-Lucent and Cisco WLC thin APs on supported firmware versions only)	Displays the max and average goodput values. Goodput is the ratio of the total bytes transmitted or received in the network to the total air time required for transmitting or receiving the bytes. The air time includes the retransmission time taken for both successful and dropped frames.

**Figure 87: Radio Statistics Interactive Graphs Illustration – Radio Power and Channel Utilization displayed**



### Recent ARM Events Log

If this radio references an active and enabled ARM profile, and if your OV3600 is enabled as a trap host (see the *OmniVista 3600 Air Manager Best Practices Guide* for instructions), ARM-initiated events such as automatic channel changes, power changes, and mode changes are displayed in the ARM Events table with the original and modified values; these values can be selected for filtering the results. You can export the table in CSV format. The columns and values are illustrated in [Figure 88](#).



**Figure 88: ARM Events Table Illustration**

Time	Trap Type	Previous Tx Power	Current Tx Power	Previous Radio Mode	Current Radio Mode	Previous Channel	Current Channel	Previous Secondary Channel	Current Secondary Channel	Change Reason
5/22/2013 6:56 AM	Power Change	15 dBm	12 dBm	-	-	-	-	-	-	-
5/22/2013 6:04 AM	Power Change	12 dBm	15 dBm	-	-	-	-	-	-	-
5/22/2013 6:00 AM	Channel Change	-	-	-	-	161	153	Below	Below	Interference
5/22/2013 5:09 AM	Channel Change	-	-	-	-	36	161	Above	Below	Error Threshold
5/22/2013 4:44 AM	Power Change	15 dBm	12 dBm	-	-	-	-	-	-	-
5/22/2013 1:28 AM	Channel Change	-	-	-	-	153	36	Below	Above	Interference
5/22/2013 1:24 AM	Power Change	12 dBm	15 dBm	-	-	-	-	-	-	-
5/22/2013 1:21 AM	Channel Change	-	-	-	-	161	153	Below	Below	Interference
5/22/2013 1:05 AM	Channel Change	-	-	-	-	149	161	Above	Below	Interference
5/22/2013 11:38 PM	Channel Change	-	-	-	-	36	149	Above	Above	Interference

The columns and values are described in [Table 81](#).

**Table 81: ARM Events table Columns and Values**

Column	Description
Time	The time of the ARM event.
Trap Type	<p>The type of trap that delivered the change information. Current ARM trap types that display in OV3600 are:</p> <ul style="list-style-type: none"> <li>● Power Change</li> <li>● Mode Change</li> <li>● Channel Change</li> </ul> <p>Values that display in the following columns depend on the Trap Type.</p>
Previous Tx Power	Old value for transmit power before the Power Change event took place.
Current Tx Power	New transmit power value after the change.
Previous Radio Mode	Old value for radio mode before the Mode Change event took place.
Current Radio Mode	New radio mode value after the change.
Previous Channel	Old primary channel value before the Channel Change event took place.
Current Channel	New primary channel value after the change.
Previous Secondary Channel	Old secondary channel value (for 40Mhz channels on 802.11n devices) before the Channel Change event took place.
Current Secondary Channel	New secondary channel value after the change.
Change Reason	If the noise and interference cause for the change can be determined, they will be displayed here. Mode change reasons are not yet tracked.

### Detected Interfering Devices Table

For Alcatel-Lucent APs running in Spectrum mode, the same non-802.11 interfering devices identified in the **Issues Summary** section are classified in the **Detected Interfering Devices** table along with the timestamp of its last detection, the start and end channels of the interference, the signal to noise ratio, and the percentage of time the interference takes place (duty cycle), as illustrated in [Figure 89](#). This table can be exported to CSV format, and the displayed columns can be moved or hidden as needed.

**Figure 89: Detected Interfering Devices Table Illustration**

**Detected Interfering Devices**

1-7 ▼ of 7 Interfering Devices Page 1 ▼ of 1 Choose columns Export CSV

Device Type ▲	Last Seen	Start Channel	End Channel	Signal	Duty Cycle (%)
Bluetooth	4/2/2013 1:20 PM	1	14	-74	5
Cordless Base Freq Hopper	4/2/2013 1:17 PM	1	14	-75	5
Cordless Phone Freq Hopper	3/26/2013 11:00 AM	1	14	-78	5
Generic Freq Hopper	4/2/2013 1:36 PM	1	14	-69	5
Microwave	4/2/2013 1:12 PM	7	13	-72	50
Video Device Fixed Freq	4/2/2013 1:40 PM	10	13	-69	99
XBox Freq Hopper	3/27/2013 12:37 PM	1	14	-62	5

1-7 ▼ of 7 Interfering Devices Page 1 ▼ of 1

Possible device types for the **Detected Interfering Devices** table include:

- Audio Device Fixed Freq
- Bluetooth
- Cordless Base Freq Hopper
- Cordless Phone Fixed Freq
- Cordless Phone Freq Hopper
- Generic Fixed Freq
- Generic Freq Hopper
- Microwave
- Microwave Inverter
- Unknown
- Video Device Fixed Freq
- Wi-Fi
- Xbox Freq Hopper

### Active BSSIDs Table

The Active BSSIDs table maps the BSSIDs on a radio with the SSID it broadcasts to the network, as illustrated in [Figure 90](#). This table appears only for Alcatel-Lucent AP radios.

**Figure 90: Active BSSIDs Table Illustration**


**Active BSSIDs**

BSSID ▲	SSID	Controller Web UI
6C:F3:7F:A9:E1:B0	ethersphere-wpa2	<a href="#">Dashboard &gt; Access Point</a>
6C:F3:7F:A9:E1:B1	ARU-VISITOR	<a href="#">Dashboard &gt; Access Point</a>

### Monitoring Data for Mesh Devices

The monitoring page for mesh devices includes basic device information at the top, two tables for Radios and Wired Interfaces, and Clients, Usage, CPU Utilization, and Memory Utilization graphs. Under these graphs are a list of associated Clients, Mesh Links, RF Neighbors, and other common event logs and information.

**Figure 91: APs/Devices > Monitor page for a Mesh Device**

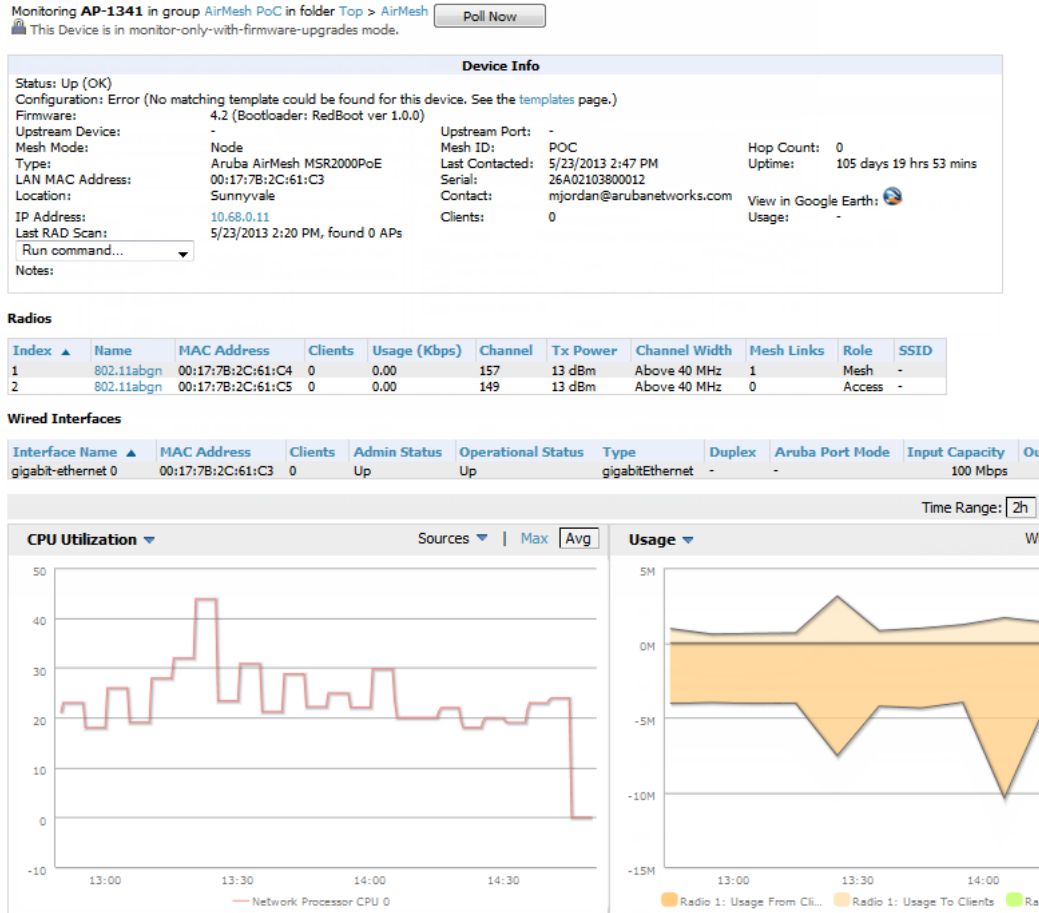


These fields are described in detail in "Viewing Device Monitoring Statistics" on page 139.

## Monitoring Data for Wired Devices (Routers and Switches)


The monitoring page for routers and switches includes basic device information at the top, a bandwidth graph depicting the sum of all the physical interfaces, and beneath that, CPU/Memory utilization graphs as shown in Figure 92.

Figure 92: APs/Devices > Monitor Page for a Mobility Access Switch

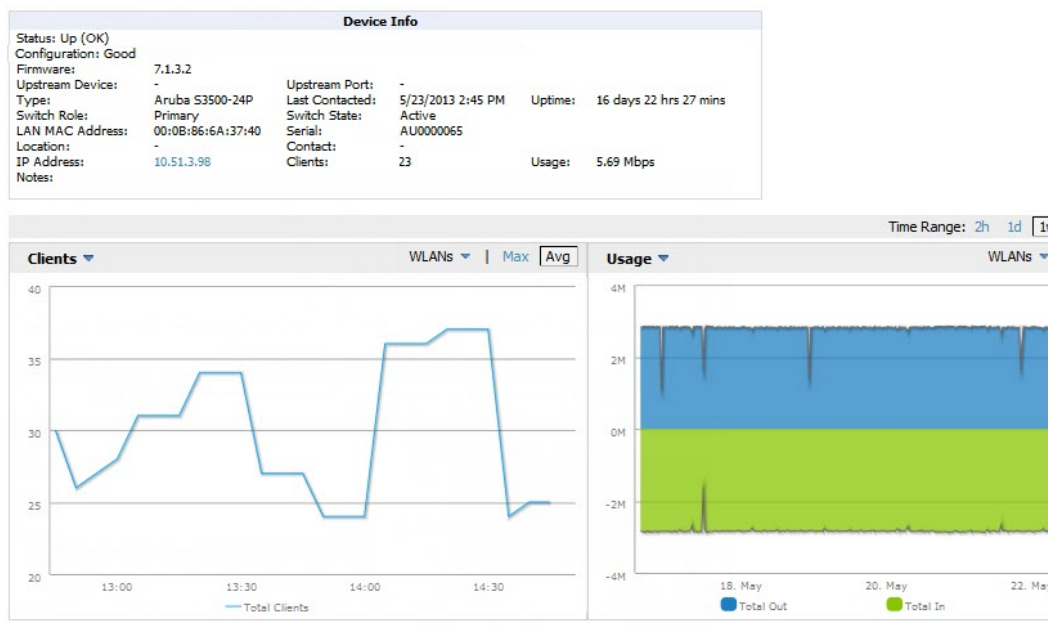

All managed wired devices also include an **Interfaces** subtab, as shown in Figure 93.

Figure 93: APs/Devices > Interfaces Page for Wired Devices (partial view)

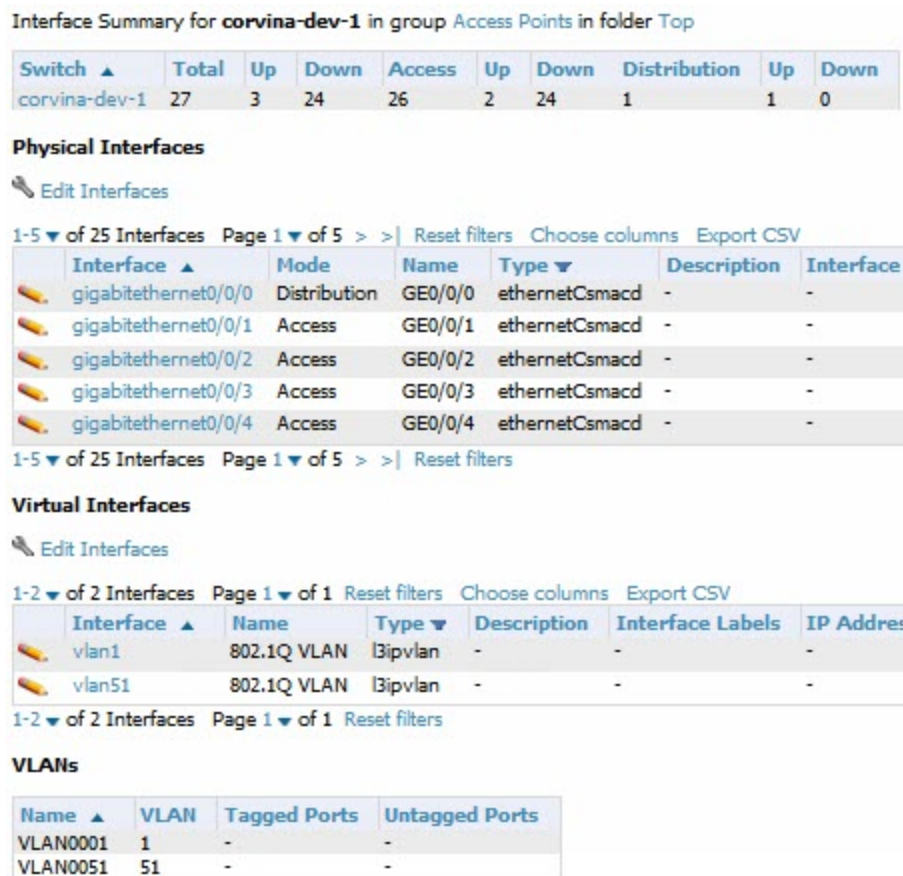

The **Interfaces** page includes a summary of all the interfaces at the top. In case of the stacked switches, the master includes the interfaces of all the members including its own. The physical and the virtual interfaces are displayed in separate tables, labeled **Physical Interfaces** and **Virtual Interfaces**. VLANs are listed below the interface.




The Interfaces page for AirMesh APs includes VLANs as part of the Virtual Interfaces. When no management interface is specified, VLAN1 will be treated as management interface. If VLAN1 does not exist, then ethernet 0 will be treated as the management interface

OV3600 monitors **Up/Down** status and bandwidth information on all interfaces. You can edit multiple interfaces concurrently by selecting one of the two **Edit Interfaces** hyperlinks. Interface labels are used to group one or more interfaces for the purpose of defining interface bandwidth triggers.

## Understanding the APs/Devices > Interfaces Page

"Monitoring Data for Wired Devices (Routers and Switches)" on page 155 showed you how to view high-level interface information for all physical and virtual interfaces on an entire router or switch. Select any interface hotlink in the **Interface** column of the Physical or Virtual Interfaces tables on the stacked switches to go to an **Interface Monitoring** page displaying data relevant to that specific interface, as shown Figure 94.


**Figure 94: Interface Monitoring Page for a Wired Device**

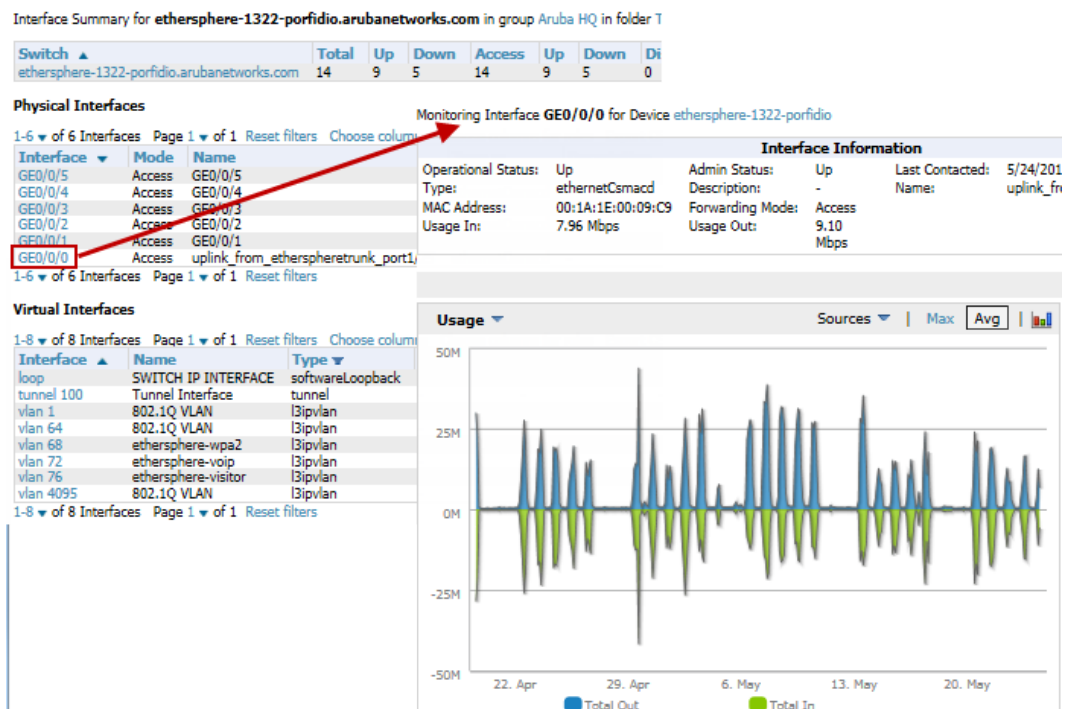

An **Interface Monitoring** page is comprised of three sections: Interface Information, Usage and Interface Frame Counters graphs, and Connected Clients.

Specifics of the interface are in the Interface Information section, as depicted in Figure 95.

**Figure 95: Individual Interface Information Section**

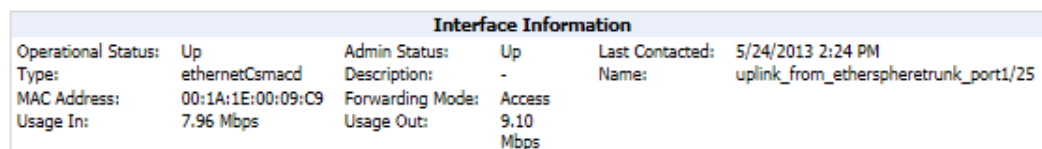

Bandwidth, and various standard and enterprise specific error counting information is displayed in the lower section in a tabbed graph, which are shown in ["Interface Monitoring Page for a Wired Device" on page 157](#) above.

**Connected Clients**, if any, are listed in a table below the interactive graphs.

What Next?

All device lists in OV3600 act as portals to management pages if you have the proper read/write privileges. Selecting the wrench or pencil icon next to a device table entry, or selecting **Modify Devices** where appropriate above a device table, will take you to the appropriate Management page (**APs/Devices > Manage**). For more information, see ["Configuring and Managing Devices" on page 160](#).

## Auditing Device Configuration

When you have added a newly discovered device successfully to a Group in **Monitor** mode, the next step is to verify device configuration status. Determine whether any changes will be applied to that device when you convert it to **Managed read/write** mode.

OV3600 uses SNMP or Telnet to read a device's configuration. SNMP is used for Cisco controllers. Alcatel-Lucent devices and wired routers and switches use Telnet/SSH to read device configuration. See ["Individual Device Support and Firmware Upgrades" on page 173](#) for more details.

Perform these steps to verify the device configuration status:

1. Browse to the **APs/Devices > List** page.
2. Locate the device in the list and check the information in the **Configuration** column.
3. If the device is in **Monitor** mode, the **lock** symbol appears in the **Configuration** column, indicating that the device is locked and will not be configured by OV3600.
4. Verify the additional information in the **Configuration** column for that device.
  - A status of **Good** indicates that all of the device's current settings match the group policy settings and that no changes will be applied when the device is shifted to **Manage** mode.
  - A status of **Mismatched** indicates that at least one of the device's current configuration settings does not match the group policy and will be changed when the device is shifted to **Manage** mode.
5. If the device configuration is **Mismatched**, select the **Mismatched** link to go to the **APs/Devices > Audit** page. This page lists detailed information for all existing configuration parameters and settings for an individual device.

The group configuration settings are displayed on the right side of the page. If the device is moved from **Monitor** to **Manage** mode, the settings on the right side of the page overwrite the settings on the left. ["APs/Devices > Audit Page Illustration" on page 159](#) illustrates this page.

**Figure 96: APs/Devices > Audit Page Illustration**

Device Configuration of **Aruba3600-117** in group **Access Points** in folder **Top**  
 This Device is in monitor-only mode.  
 Configuration read from device at 5/22/2013 4:16 AM  
 Configuration: Error (Telnet/SSH Error: (pattern match timed-out) in password failure: Permission denied, please try again. )

Audit the device's current configuration.

Update group settings based on this device's current configuration.  
  Include unreferenced profiles.

Choose settings to ignore during configuration audits.

[Show entire config](#)

[Refresh this page](#)

Group Basic Settings		
	Current Device Configuration	Desired Configuration
Offload WMS Database	(not set)	No
Aruba AP Group Settings		
	Current Device Configuration	Desired Configuration
Aruba AP Group 'NoAuthApGroup' 802.11a Radio Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' 802.11g Radio Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' AP Mesh Radio Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' AP Regulatory Domain Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' AP System Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' Ethernet Interface 0 Port Configuration	(not set)	default
Aruba AP Group 'NoAuthApGroup' Ethernet Interface 1 Port Configuration	(not set)	NoAuthWiredPort
Aruba AP Group 'NoAuthApGroup' Ethernet Interface 2 Port Configuration	(not set)	NoAuthWiredPort
Aruba AP Group 'NoAuthApGroup' Ethernet Interface 3 Port Configuration	(not set)	NoAuthWiredPort
Aruba AP Group 'NoAuthApGroup' Ethernet Interface 4 Port Configuration	(not set)	NoAuthWiredPort
Aruba AP Group 'NoAuthApGroup' Event Thresholds Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' IDS Profile	(not set)	ids-low-setting
Aruba AP Group 'NoAuthApGroup' RF Optimization Profile	(not set)	default
Aruba AP Group 'NoAuthApGroup' Status	(not set)	Create
Aruba AP Group 'default' 802.11a Radio Profile	(not set)	default
Aruba AP Group 'default' 802.11g Radio Profile	(not set)	default

- Review the list of changes to be applied to the device to determine whether the changes are appropriate. If not, you need to change the Group settings or reassign the device to another Group.

## Using Device Folders (Optional)

The devices on the **APs/Devices > List** page include **List**, **Up**, **Down**, and **Mismatched** fields. These devices are arranged in groups called folders. Folders provide a logical organization of devices unrelated to the configuration groups of the devices. Using folders, you can quickly view basic statistics about devices. You *must* use folders if you want to limit the APs and devices OV3600 users can see.

Folder views are persistent in OV3600. If you select the **Top** folder and then select the **Down** link at the top of the page, you are taken to all of the down devices in the folder.

If you want to see every **down** device, select the **Expand folders to show all devices** link. When the folders are expanded, you see all of the devices on OV3600 that satisfy the criteria of the page. You also see an additional column that lists the folder containing the AP.

Perform the following steps to add a device folder to OV3600.

- To add a folder, select the **Add New Folder** link at the bottom of **APs/Devices > List**, **> Up**, **> Down**, or **> Mismatched** pages. [Figure 97](#) illustrates the page.

**Figure 97: Folder Creation Page Illustration**

**Folder**

Folder:

Parent Folder: Top ▼

- Enter the name of the new folder.

3. Select the **Parent** folder.
4. Select **Add**.

Once a new folder has been created, devices can be moved into it using the **Modify Devices** link or when **New Devices** are added into OV3600.

## Configuring and Managing Devices

This section contains the following topics describing individual device configuration within device groups:

- "Moving a Device from Monitor Only to Manage Read/Write Mode" on page 160
- "Configuring AP Settings" on page 161
- "Setting a Maintenance Window for a Device" on page 169
- "Configuring Device Interfaces for Switches" on page 169
- "Individual Device Support and Firmware Upgrades" on page 173

While most device configuration settings can be efficiently managed by OV3600 at a Group level, certain settings must be managed at the individual device level. For example, because devices within a Group are often contiguous with one another, and have overlapping coverage areas, it makes sense to manage these devices individually to avoid RF interference.



---

Any changes made at an individual device level will automatically override Group level settings.

---

OV3600 automatically saves the last 10 device configurations for reference and compliance purposes. Archived device configurations are linked on the **APs/Devices > Audit** page and identified by name. By default, configuration is tracked by the date and time it was created; device configurations are also archived by date.

It is not possible to push archived configurations to devices, but archived configurations can be compared to the current configuration, the desired configuration, or to other archived configurations using the drop-down menus on the **APs/Devices > Audit** page. This applies to startup or to running configuration files.

Compare two configurations to highlight the specific lines that are mismatched. The Audit page provides links to OV3600 pages where any mismatched settings can be configured.



---

These procedures assume you are familiar with the function buttons available to save, apply, revert, and so on. For details on button functions, see [Buttons and Icons](#) in the *OmniVista 3600 Air Manager 8.0 Installation Guide*.

---

### Moving a Device from Monitor Only to Manage Read/Write Mode

Once the device configuration status is **Good** on the **APs/Devices > List** page, or once you have verified all changes that will be applied to the device on the **APs/Devices > Audit** page, you can safely shift the device from **Monitor Only** mode to **Manage Read/Write** mode.



---

When a device is in Manage mode, OV3600 will push a new configuration to the device in the event that the actual device configuration does not match the OV3600 configuration for that device.

---

To move a device from **Monitor Only** to **Manage Read/Write** mode, perform the following steps.

1. Go to the **APs/Devices > List** page and select the **wrench** icon next to the name of the AP to be shifted from **Monitor Only** mode to **Manage Read/Write** mode. This directs you to the **APs/Devices > Manage** page.
2. Locate the **General** area as shown in [Figure 98](#).





**Figure 99:** APs/Devices > Manage Page Illustration (partial view)

The screenshot shows the configuration page for an AP, divided into several sections:

- General:**
  - Name: 00:1a:1e:c0:1a:64
  - Status: Up (OK)
  - Configuration: Good
  - Last Contacted: 5/22/2013 2:47 PM
  - Type: Aruba AP 125
  - Controller: Aruba\_651
  - Group: Access Points
  - Folder: Top
  - Management Mode:
    - Monitor Only
    - Manage Read/Write
  - Enable Planned Downtime Mode:
    - Yes
    - No
- Settings:**
  - Name: 00:1a:1e:c0:1a:64
  - Domain Name: [Empty]
  - Location: [Empty]
  - Latitude: [Empty]
  - Longitude: [Empty]
  - Altitude (m): [Empty]
  - Group: Access Points
  - Folder: Top
  - Auto Detect Upstream Device:
    - Yes
    - No
  - Upstream device will automatically be updated when the device is polled.
    - Yes
    - No
  - Down Status Message: [Empty text area]
  - Aruba AP Group: default
  - Installation: Default
  - Mesh Mode: None
- 802.11bgn Radio:**
  - Single Chain Mode:
    - Yes
    - No
  - Spectrum Override:
    - Yes
    - No
- 802.11an Radio:**
  - Single Chain Mode:
    - Yes
    - No
  - Spectrum Override:
    - Yes
    - No
- Authentication Method:** [Empty]

If any changes are scheduled for this AP, they appear in a **Scheduled Changes** section at the top of the page above the other fields. The linked name of the job takes you to its **System > Configuration Change Job Detail** page.

2. Locate the **General** section for information about the AP’s current status. [Table 82](#) describes the fields, information, and settings.

**Table 82:** APs/Devices > Manage > General Fields and Descriptions

Field	Description
Name	Displays the name currently set on the device.
Status	Displays the current status of an AP. If an AP is <b>Up</b> , then OV3600 is able to ping it and fetch SNMP information from the AP. If the AP is listed <b>Down</b> then OV3600 is either unable to ping the AP or unable to read the necessary SNMP information from the device.
Configuration	Displays the current configuration status of the AP. To update the status, select <b>Audit</b> on the <b>APs/Devices &gt; Audit</b> page.
Last Contacted	Displays the last time OV3600 successfully contacted the AP.
Type	Displays the type of AP.
Controller	Links to the switch that is monitoring this device. <b>NOTE:</b> This field is visible for APs.

**Table 82:** *APs/Devices > Manage > General Fields and Descriptions (Continued)*

Field	Description
Firmware	Shows the device firmware version. <b>NOTE:</b> This field is visible for controllers and switches.
Group	Links to the <b>Group &gt; Monitoring</b> page for the AP.
Template	Displays the name of the group template currently configuring the AP. This also displays a link to the <b>Groups &gt; Template</b> page. <b>NOTE:</b> This field is only visible for APs that are managed by templates.
Folder	Displays the name of the folder containing the AP. Also displays a link to the <b>APs/Devices &gt; List</b> page for the folder.
Management Mode	Displays the current management mode of the AP. No changes are made to the AP when it is in <b>Monitor Only</b> mode. OV3600 pushes configurations and makes changes to an AP when it is in <b>Manage Read/Write</b> mode.
Enable Planned Maintenance Mode	Put this device into planned maintenance. During the maintenance mode, no AP Down triggers will be deployed on these devices. Users will not be able to delete folders that contain devices in Planned Maintenance. The devices in Planned Maintenance will show the Up status, but will not be tracked in historical graphs and logs as Up. You can set multiple devices into Planned Maintenance Mode in the <b>Modify Devices</b> link on an AP list page.
Notes	Provides a free-form text field to describe device information.

- Review and provide the following information in the **Settings** area. Devices with dual radios display radio-specific settings in the Slot A and Slot B area. If a device is dual-radio capable but only has one device installed, OV3600 manages that device as if it were a single slot device.



Devices from different vendors have different RF settings and capabilities. The fields in the **Settings** section of the **APs/Devices > Manage** page are context-sensitive and only present the information relevant for the particular device vendor and model.

Table 83 describes field settings, default values, and information for the **Settings** section of this page.

**Table 83:** *APs/Devices > Manage > Settings Fields and Default Values*

Setting	Default	Device Type	Description
Name	None	All	User-configurable name for the device (max. 20 characters)
Domain Name	None	IOS	Field populated upon initial device discovery or upon refreshing settings. Enable this option from <b>OV3600 Setup &gt; Network</b> page to display this field on the <b>APs/Devices &gt; Manage</b> page, with fully-qualified domain names for IOS APs. This field is used in conjunction with <b>Domain</b> variable in IOS templates.
Mesh ID	None	Mesh	Text field for entering the Mesh ID.

**Table 83: APs/Devices > Manage > Settings Fields and Default Values (Continued)**

Setting	Default	Device Type	Description
Timezone	None	Instant	Drop-down menu for specifying the controller timezone.
Syslog Server	None	Instant	Text field for specifying the a syslog server for the controller.
RADIUS Server	None	Instant	Text field for specifying the a RADIUS server for the controller.
RF Band Selection	All	Instant	Drop-down menu for specifying the RF Band on the controller.
Location	Read from the device	All	The SNMP location set on the device.
Latitude	None	All	Text field for entering the latitude of the device. The latitude is used with the Google Earth integration.
Longitude	None	All	Text field for entering the longitude of the device. The longitude is used with the Google Earth integration.
Altitude (meters)	None	All	Text field for entering the altitude of the device when known. This setting is used with the Google Earth integration. Specify altitude in meters.
Group	Default Group	All	Drop-down menu that can be used to assign the device to another Group.
Folder	Top	All	Drop-down menu that can be used to assign the device to another Group.
Auto Detect Upstream Device	Yes	All	Selecting <b>Yes</b> enables automatic detection of upstream device, which is automatically updated when the device is polled.  Selecting <b>No</b> displays a drop-down menu of upstream devices.
Automatically clear Down Status Message when device comes back up	None	All	Whether the message entered in the <b>Down Status Message</b> field should be removed after the device returns to the Up status.
Down Status Message	None	All	Enter a text message that provides information to be conveyed if the device goes down.
Organization	Read from Device	Instant	The Organization string of the OAW-IAP.
Alcatel-Lucent AP Group	default	All	Specifies the Alcatel-Lucent AP Group in which this devices resides.

**Table 83:** APs/Devices > Manage > Settings Fields and Default Values (Continued)

Setting	Default	Device Type	Description
Administrative Status	Enable	All	Enables or disables administrative mode for the device.
Mode	Local	All	Designates the mode in which the device should operate. Options include the following: <ul style="list-style-type: none"> <li>Local</li> <li>H-REAP</li> <li>Monitor</li> <li>Rogue Detector</li> <li>Sniffer</li> </ul>

4. Complete additional settings on the **APs/Devices > Manage** page, to include H-REAP, certificates, radio settings, and network settings. [Table 84](#) describes many of the possible fields.



For complete listing and discussion of settings applicable only to *Alcatel-Lucent* devices, see the *Alcatel-Lucent Device Configuration Guide*.

**Table 84:** Additional Settings

Setting	Default	Device Type	Description
Mesh Mode	Mesh AP	Mesh Devices	Drop-down menu specifies the mesh role for the AP as shown: <ul style="list-style-type: none"> <li><b>Mesh AP</b>—The AP will act like a mesh client. It will use other APs as its uplink to the network.</li> <li><b>Portal AP</b>—The AP will become a portal AP. It will use a wired connection as its uplink to the network and serve it over the radio to other APs.</li> <li><b>Remote Portal AP</b>—The AP will become a remote portal AP. It will use a wireless connection as its uplink to the network and serve it over the radio to other APs.</li> <li><b>None</b>—The AP will act like a standard AP. It will not perform meshing functions.</li> </ul>
Mesh Mobility	Static	Mesh Devices	Select <b>Static</b> if the AP is static, as in the case of a device mounted on a light pole or in the ceiling. Select <b>Roaming</b> if the AP is mobile. Two examples would be an AP mounted in a police car or utility truck.

**Table 84: Additional Settings (Continued)**

Setting	Default	Device Type	Description
Receive Antenna	Diversity	Cisco	<p>Drop-down menu for the receive antenna provides three options:</p> <p><b>Diversity</b> –Device will use the antenna that receives the best signal. If the device has two fixed (non-removable) antennas, the <b>Diversity</b> setting should be used for both receive and transmit antennas.</p> <p><b>Right</b> –If your device has removable antennas and you install a high-gain antenna on the device's right connector (the connector on the right side when viewing the back panel of the device), use this setting for receive and transmit.</p> <p><b>Left</b> –If your device has removable antennas and you install a high-gain antenna on the device's left connector, use this setting for both receive and transmit.</p>
Transmit Antenna	Diversity	Cisco	See description in <b>Receive Antenna</b> above.
Antenna Diversity	Primary Only	Symbol 4131	<p>Drop-down menu provides the following options:</p> <p><b>Full Diversity</b>–The AP receives information on the antenna with the best signal strength and quality. The AP transmits on the antenna from which it last received information.</p> <p><b>Primary Only</b>–The AP transmits and receives on the primary antenna only. <b>Secondary Only</b>: The AP transmits and receives on the secondary antenna only.</p> <p><b>Rx Diversity</b>–The AP receives information on the antenna with the best signal strength and quality. The AP transmits information on the primary antenna only.</p>
Transmit Power Reduction	0	Proxim	Transmit Power Reduction determines the APs transmit power. The max transmit power is reduced by the number of decibels specified.
Channel	6	All	<p>Represents the AP's current RF channel setting. The number relates to the center frequency output by the AP's RF synthesizer.</p> <p>Contiguous APs should be set to different channels to minimize 'crosstalk,' which occurs when the signals from APs overlap and interfere with each other. This RF interference negatively influences WLAN performance.</p> <p>802.11b's 2.4-GHz range has a total bandwidth of 80-MHz, separated into 11 center channels. Of these channels, only 3 are non-overlapping (1, 6, and 11). In the United States, most organizations use only these non-overlapping channels.</p>

**Table 84: Additional Settings (Continued)**

Setting	Default	Device Type	Description
Transmit Power Level	Highest power level supported by the radio in the regulatory domain (country)	Cisco, Symbol, Proxim AP-600, AP-700, AP-2000 (802.11g)	Determines the power level of radio transmission. Government regulations define the highest allowable power level for radio devices. This setting must conform to established standards for the country in which you use the device. You can increase the coverage radius of the access point by increasing the Transmit Power Level. However, while this increases the zone of coverage, it also makes it more likely that the AP will interfere with neighboring APs.  Supported values are: Cisco (100mW, 50mW, 30mW, 20mW, 5mW, 1mW) Symbol (Full or 50mW, 30mW, 15mW, 5mW, 1mW)
Radio Enabled	Yes	All	The Radio Enabled option allows you to disable the radio's ability to transmit or receive data while still maintaining Ethernet connectivity to the network. OV3600 will still monitor the Ethernet page and ensure the AP stays online. Customers typically use this option to temporarily disable wireless access in particular locations.  This setting can be scheduled at an AP level or Group level. <b>NOTE:</b> You cannot disable radios unless rogue scanning is disabled in Groups > Radio.
Use DHCP	Yes	All	If enabled, the AP will be assigned a new IP address using DHCP. If disabled, the AP will use a static IP address. For improved security and manageability, disable DHCP and using static IP addresses.
LAN IP	None	All	The IP Address of the AP Ethernet interface. If One-to-One NAT is enabled, OV3600 will communicate with the AP on a different address (the IP Address defined in the <b>Device Communication</b> section).  If DHCP is enabled, the current assigned address will appear grayed out and the field cannot be updated in this area.
Subnet Mask	None	All	Provides the IP subnet mask to identify the sub-network so the IP address can be recognized on the LAN. If DHCP is enabled, the current assigned address will appear grayed out and the field cannot be updated in this area.
Gateway	None	All	The IP address of the default internet gateway. If DHCP is enabled, the current assigned address will appear grayed out and the field cannot be updated in this area.

5. Locate the **Template Options** area on the **APs/Devices > Manage** page.



This section only appears for IOS APs, Symbol devices, and Alcatel-Lucent switches in groups with Alcatel-Lucent GUI Config disabled.

Table 85 describes field settings, default values, and additional information for this page.

**Table 85:** *APs/Devices > Manage > Template Options Fields and Default Values*

Setting	Default	Device Type	Description
WDS Role	Client	Cisco IOS Wireless LAN Controllers only	Set the WDS role for this AP. Select Master for the WDS master APs and Client for the WDS Client. Once this is done you can use the %if wds_role= % to push the client, master, or backup lines to appropriate WDS APs.
SSL Certificate	None	Cisco IOS	OV3600 will read the SSL Certificate off of the AP when it comes UP in OV3600. The information in this field will defines what will be used in place of %certificate%.
Extra Device Commands	None	Cisco IOS	Defines the lines that will replace the %ap_include_1% variable in the IOS template. This field allows for unique commands to be run on individual APs. If you have any settings that are unique per AP like a MOTD you can set them here.
switch_command	None	Cisco Catalyst switches	Defines lines included for each of the members in the stack. This field appears only on the master's <b>Manage</b> page. The information in this field will determine what is used in place of the %switch_command% variable.

- For Cisco WLC devices, go to the interfaces section of the **APs/Devices > Manage** page. Select **Add new Interface** to add another controller interface, or select the **pencil** icon to edit an existing controller interface. [Table 86](#) describes the settings and default values. For detailed descriptions of Cisco WLC devices supported by OV3600, refer to the Cisco WLC product documentation.

**Table 86:** *APs/Devices > Manage > Interface Fields and Descriptions for Cisco WLC Devices*

Field	Default	Description
Name	None	The name of the interface on the controller.
VLAN ID	None	The VLAN ID for the interface on the controller.
Port	None	The port on the controller to access the interface.
IP Address	None	The IP address of the controller.
Subnet Mask	None	The subnet mask for the controller.
Gateway	None	The controller's gateway.
Primary and Secondary DHCP Servers	None	The DHCP servers for the controller.
Guest LAN	Disabled	Indicates a guest LAN.
Quarantine VLAN ID	Disabled	Enabled indicates it is a quarantine VLAN; used only for H-REAP-associated clients.



**Table 86:** *APs/Devices > Manage > Interface Fields and Descriptions for Cisco WLC Devices (Continued)*

Field	Default	Description
Dynamic Device Management	Enabled	When enabled, makes the interface an AP-manager interface. Cisco calls this feature Dynamic AP Management.

## Setting a Maintenance Window for a Device

OV3600 can automate the manual action of putting multiple devices into Manage mode at once so that changes can be applied, and after the maintenance period is over, the devices automatically revert to Monitor-Only mode.

Maintenance windows can be set as a one-time or recurring event on the **APs/Devices > Manage** and **Groups > Basic** pages. You can also use the **Modify Devices** link to add or delete maintenance windows to or from multiple selected devices at once. Additionally, this feature can be used on the Master Console to set maintenance windows for multiple OV3600s.



When a maintenance window is configured, OV3600 automatically moves the devices into Manage mode so that the changes can be applied. After the maintenance period is over, the devices automatically revert to Monitor-Only mode.

To set a maintenance window for a single device, follow these steps:

1. Select a device and navigate to the **APs/Devices > Manage** page for a device.
2. At the bottom of the page, locate the Maintenance Windows section.
3. Click the **Add New AP Maintenance Window** button.

**Figure 100:** *Add New Maintenance Window in APs/Devices > Manage page*



4. Enter a name for the maintenance window.
5. In the **Occurs** field, specify whether the maintenance window should occur one time, or daily, weekly, monthly, or annually. Additional options may display based on the selected value. For example, if you select monthly, the you will be prompted to specify the day of the month for the recurrence.
6. Set the desired start time and the duration (in minutes) of the maintenance window.
7. Click the **Add** button.

## Configuring Device Interfaces for Switches

When you go to the **APs/Devices > Interfaces** page for a switch, you can add a Virtual interface by selecting **Add** and entering the appropriate information in the page that appears, as shown in [Figure 101](#).

**Figure 101:** Add Virtual Interfaces Page for Wired Devices

The screenshot displays a web interface for configuring virtual interfaces on wired devices. It is divided into two main sections: 'Interface Monitoring' and 'Interface Configuration'.  
**Interface Monitoring:**  
- 'Auto Detect Interface Capacity': Radio buttons for 'Yes' (selected) and 'No'.  
- A note: 'Interface capacities will automatically be updated when the device is polled.'  
- 'Combined Bandwidth': Radio buttons for 'Yes' and 'No' (selected).  
- 'Interface Labels': An empty text input field.  
**Interface Configuration:**  
- 'Description': An empty text input field.  
- 'Include in template': Radio buttons for 'Yes' and 'No' (selected).  
- 'Shutdown': Radio buttons for 'Yes' and 'No' (selected).  
- 'Cisco Interface Type': A dropdown menu with 'Async' selected.  
- 'Index Tag': An empty text input field.  
- 'Additional Commands': A large empty text area.  
At the bottom of the form are two buttons: 'Add' and 'Cancel'.

New physical and virtual interfaces are discovered using SNMP polling as described in "SNMP/HTTP Scanning" on [page 127](#). To refresh and reload all current interface information from a device, select **Import Interfaces** on the bottom of the page as shown in [Figure 102](#).

Figure 102: Import Interfaces for Refresh and Reload (lower portion of page)

Home Groups **APs/Devices** Clients Reports System Device Setup  
 List Monitor **Interfaces** Manage Audit Compliance New Up

Interface Summary for **Switch15 (switch15.airwave.com)** in group Cisco Gear in folder Top > Cisco

Switch	Total	Up	Down	Access	Up	Down	Distribution
Switch15 (switch15.airwave.com)	53	35	18	48	30	18	5

**Physical Interfaces**

Edit Interfaces

1-5 of 50 Interfaces Page 1 of 10 > > | Reset filters Choose columns Choose columns for roles

Interface	Mode	Name	Type	Cisco Interface Type
Gi0/2	Distribution	GigabitEthernet0/2	ethernetCsmacd	GigabitEthernet IEEE 802.3
Gi0/1	Distribution	GigabitEthernet0/1	ethernetCsmacd	GigabitEthernet IEEE 802.3
Fa0/48	Access	FastEthernet0/48	ethernetCsmacd	FastEthernet IEEE 802.3
Fa0/47	Access	FastEthernet0/47	ethernetCsmacd	FastEthernet IEEE 802.3
Fa0/46	Access	FastEthernet0/46	ethernetCsmacd	FastEthernet IEEE 802.3

1-5 of 50 Interfaces Page 1 of 10 > > | Reset filters

**Virtual Interfaces**

Add New Interface

Edit Interfaces

1-3 of 3 Interfaces Page 1 of 1 Reset filters Choose columns Choose columns for roles Export C

Interface	Name	Type	Cisco Interface Type	Description	Interfac
Nu0	Null0	other	-	-	-
Vl1	Vlan1	propVirtual	Catalyst VLAN	-	-
Vl51	Vlan51	propVirtual	Catalyst VLAN	-	-

1-3 of 3 Interfaces Page 1 of 1 Reset filters

Select All - Unselect All

Delete

**Import Interfaces**

You can view details for each interface on a wired device from its individual interface page as well. For details, see "Understanding the APs/Devices > Interfaces Page" on page 157.

You can configure interface settings individually or in groups. For individual settings, select the pencil icon next the interface name in **AP/Devices > Interfaces**.

This takes you to the **Interfaces Monitoring and Configuration** window which has a slightly different appearance depending on whether you are configuring a physical or virtual interface, as shown in [Figure 103](#) and [Figure 104](#).

**Figure 103:** *Physical Interfaces Monitoring and Configuration Sections*

The screenshot shows two main configuration panels. The top panel, titled "Interface Monitoring", includes settings for "Auto Detect Interface Capacity" (set to Yes), "Interface capacities will automatically be updated when the device is polled.", "Combined Bandwidth" (set to No), "Interface Labels" (set to Fa0/48), and "Mode" (set to Auto). The bottom panel, titled "Interface Configuration", includes settings for "Description" (FastEthernet0/48), "Shutdown" (set to No), "Cisco Interface Type" (FastEthernet IEEE 802.3), "Switchport Access VLAN" (51), "Switchport Mode" (Dynamic (Auto)), "Switchport Trunk Native VLAN" (empty), "Switchport Trunk Allowed VLANs" (all), "Switchport Trunk Pruning VLANs" (empty), "Switchport Trunk Encapsulation" (Negotiate), "Speed" (Auto), and "Additional Commands" (ip dhcp snooping trust). At the bottom of the configuration panel are "Save" and "Cancel" buttons.

**Figure 104:** *Virtual Individual Interfaces Configuration Section*

The screenshot shows a configuration panel titled "Interface Configuration" with two visible fields: "Description" set to "Vlan1" and "Cisco Interface Type" set to "Catalyst VLAN".

To configure interfaces as a group, select **Edit Interfaces** above the Physical or Virtual Interfaces table as shown in [Figure 105](#).

Figure 105: Edit Multiple Interfaces

Switch	Total	Up	Down	Access	Up	Down	Distrib
Switch15 (switch15.airwave.com)	53	35	18	48	30	18	5

**Physical Interfaces**

[Edit Interfaces](#)

1-5 of 50 Interfaces Page 1 of 10 > > | Reset filters Choose columns Choose columns for r

Interface	Mode	Name	Type	Cisco Interface Ty
Gi0/2	Distribution	GigabitEthernet0/2	ethernetCsmacd	GigabitEthernet IEEE
Gi0/1	Distribution	GigabitEthernet0/1	ethernetCsmacd	GigabitEthernet IEEE
Fa0/48	Access	FastEthernet0/48	ethernetCsmacd	FastEthernet IEEE 80
Fa0/47	Access	FastEthernet0/47	ethernetCsmacd	FastEthernet IEEE 80
Fa0/46	Access	FastEthernet0/46	ethernetCsmacd	FastEthernet IEEE 80

1-5 of 50 Interfaces Page 1 of 10 > > | Reset filters

**Virtual Interfaces**

[Add](#) New Interface

[Edit Interfaces](#)

1-3 of 3 Interfaces Page 1 of 1 Reset filters Choose columns Choose columns for roles Exp

Interface	Name	Type	Cisco Interface Type	Description	In
Nu0	Null0	other	-	-	-
Vl1	Vlan1	propVirtual	Catalyst VLAN	-	-
Vl51	Vlan51	propVirtual	Catalyst VLAN	-	-

1-3 of 3 Interfaces Page 1 of 1 Reset filters

You will remain on the same page, but will have the option to make changes to the most commonly edited settings in batch mode, as shown in Figure 106.

Figure 106: Multiple Interface Editing Page Illustration

1-3 of 3 Interfaces Page 1 of 1 Reset filters Choose columns Choose columns for roles Export CSV

Interface	Name	Type	Cisco Interface Type	Description	Interface Labels	Shutdown
Nu0	Null0	other	-			<input type="radio"/> Yes <input type="radio"/> No
Vl1	Vlan1	propVirtual	Catalyst VLAN			<input checked="" type="radio"/> Yes <input type="radio"/> No
Vl51	Vlan51	propVirtual	Catalyst VLAN			<input type="radio"/> Yes <input checked="" type="radio"/> No

1-3 of 3 Interfaces Page 1 of 1 Reset filters

OV3600 assembles the entire running configuration using templates and your modifications to these pages. For a more detailed discussion on templates, see "Creating and Using Templates" on page 182.

## Individual Device Support and Firmware Upgrades

Perform the following steps to configure AP communication settings for individual Alcatel-Lucent switches.

1. Locate the **Device Communication** area on the **APs/Devices > Manage** page.
2. Specify the credentials to be used to manage the AP. Figure 107 illustrates this page.

Figure 107: APs/Devices > Manage > Device Communication

The screenshot shows the 'Device Communication' configuration page. At the top, there is a link 'View Device Credentials'. Below it, a message states: 'If this device is down because its IP address or management ports have changed, update the fields below with the correct information.' The form contains the following fields: IP Address (10.51.3.22), SNMP Port (1-65535) (161), and SSH Port (1-65535) (22). Another message follows: 'If this device is down because the credentials on the device have changed, update the fields below with the correct information.' Below this, it says 'This device is currently using SNMP version 2c.' The form then includes: Community String (masked with dots), Confirm Community String (masked with dots), SNMPv3 Username, Auth Password, Confirm Auth Password, SNMPv3 Auth Protocol (MD5), Privacy Password, Confirm Privacy Password, SNMPv3 Privacy Protocol (DES), Telnet/SSH Username (admin), Telnet/SSH Password (masked with dots), Confirm Telnet/SSH Password (masked with dots), 'enable' Password (masked with dots), and Confirm 'enable' Password (masked with dots).



The Device Communication area may appear slightly different depending on the particular vendor and model of the APs being used.

3. Enter and confirm the appropriate **Auth Password** and **Privacy Password**.
4. You can disable the **View Device Credentials** link in OV3600 if you are the root user. Contact Alcatel-Lucent support for detailed instructions to disable the link.
5. (Optional.) Enter the appropriate SSH and Telnet credentials if you are configuring Dell, Aruba Networks, Alcatel-Lucent or any Cisco device except Cisco WLAN controllers.
6. Select **Apply**, then **Confirm Edit** to apply the changes to the AP immediately, **Schedule** to schedule the changes during a specific time, or **Cancel** to return to **APs/Devices > Manage**.



Some AP configuration changes may require the AP to be rebooted. Use the **Schedule** function to schedule these changes to occur at a time when WLAN users will not be affected.

Click the **Update Firmware** button at the bottom right of the page to upgrade the device's firmware. This button is not available if your device is in Monitor Only mode.



The **Update Firmware** button only appears if 1) the OV3600 Administrator has enabled **Allow firmware upgrades in**

**monitor-only mode** in **OV3600 Setup > General** or 2) if you are looking at an **APs/Devices > Manage** page for a controller or autonomous AP that supports firmware upgrades in OV3600. See the Supported Infrastructure Devices document on the **Home > Documentation** page for a list of the OV3600-supported devices that can perform firmware upgrades. In most cases, you cannot upgrade firmware directly on thin APs.

Figure 108 illustrates the page that opens and Table 87 describes the settings and default values.



Note that for Alcatel-Lucent firmware upgrades, OV3600 does not check whether a device is in **Master** or **Local** configuration, and it does not schedule rebooting after the upgrade. OV3600 users should consult Alcatel-Lucent's best practices for firmware upgrades and plan their upgrades using OV3600 accordingly.

**Table 87:** *APs/Devices > Manage > Update Firmware Fields and Default Values*

Setting	Default	Description
Desired Version	None	Specifies the firmware to be used in the upgrade. Firmware can be added to this drop-down menu on the <b>Device Setup &gt; Upload Firmware &amp; Files</b> page.
Job Name	None	Sets a user-defined name for the upgrade job. Use a meaningful and descriptive name.
Use /safe flag for Cisco IOS firmware upgrade command	No	Enables or disables the /safe flag when upgrading IOS APs. The /safe flag must be disabled on older APs for the firmware file to fit in flash memory.
Email Recipients	None	Displays a list of email addresses that should receive alert emails if a firmware upgrade fails.
Sender Address	None	Displays the <b>From</b> address in the alert email.

Figure 108: APs/Devices > Manage Firmware Upgrades

**Desired Version**

Choose the desired firmware version to be applied to **sjcwifi01** (10.6.2.251). Upload firmware files on the Device Setup [Upload Firmware & Files](#) page.

Update List of Aruba Image Versions:

Current Version: 6.2.0.2

Desired Version: -- Select firmware versio ▾

---

**Firmware Upgrade Job Options**

Job name: Firmware upgrade for sjcwifi01

Reboot now:  Yes  No

Serve firmware files from this interface: 10.2.27.202 ▾

---

**Failure Notification Options**

To be notified when upgrades fail and when a job is stopped, enter email addresses of the form user@domain. Separate multiple addresses by spaces, commas, or semicolons.

Email Recipients:  
it@example.com

Sender Address: upgrade@example.com

Start or Schedule Firmware Upgrade Job:

Initiating a firmware upgrade will change the **Firmware Status** column for the device to Pending in **APs/Devices > List**. You can review the status of all recent firmware upgrade jobs in **System > Firmware Upgrade Jobs**.

## Troubleshooting a Newly Discovered Down Device

If the device status on the **APs/Devices > List** page remains **Down** after it has been added to a group, the most likely source of the problem is an error in the SNMP community string being used to manage the device. Perform the following steps to troubleshoot this scenario.


1. Select the **Name** of the down device in the list of devices on the **APs/Devices > List** or **APs/Devices > Down** page. This automatically directs you to the **APs/Device > Monitor** page for that device.
2. Locate the **Status** field in the **Device Info** section. If the Status is **Down**, it includes a description of the cause of the problem. Some of the common system messages are as follows in [Table 88](#):



**Table 88: Common System Messages for Down Status**

Message	Meaning
AP is no longer associated with controller	This means the AP no longer shows up in any controller's AP list (on the OV3600 server). Either the AP was removed from the controller, or it has roamed to another controller that OV3600 does not have visibility to, or it is offline.
Controller is Down	When a controller goes down, OV3600 automatically marks all associated thin APs down. This is because communication to thin APs are via the controller, and OV3600 assumes that if the Controller has gone offline, then all associated APs are down as well until they are reassociated with another Controller).
Downloading	The AP is in the process of downloading firmware or configuration. (This only applies to Cisco WLC thin APs and some Symbol APs.)
Error fetching existing configuration	OV3600 could not fetch a config for the AP. Usually this is because OV3600 has incorrect credentials and was not able to log in.
ICMP Ping Failed (after SNMP Get Failed)	The device is not responding and is likely offline.
SNMP Get Failed	SNMP credentials and/or configuration may be incorrect. Verify that SNMP is enabled and that credentials and access ports are configured correctly on both the target device and in OV3600.
SNMP Trap	OV3600 received an SNMP trap from the controller indicating that the AP is no longer associated to the controller.
Telnet Error: command timed out	Telnet/SSH username and password specified for that device is incorrect.
Unexpected LAN MAC Address found at this device's IP address	<p>If OV3600 detects that the LAN MAC address of a device has changed this error message will appear. This usually indicates that a physical hardware change has occurred (while reusing the same IP Address) without using the <b>Replace Hardware</b> feature in OV3600. This error may also indicate an IP address conflict between two or more devices.</p> <p>When an unexpected LAN MAC address is seen in a device's IP address, its <b>APs/Devices &gt; Manage</b> page displays the message Click <b>Replace Hardware</b> (preferred) or <b>Reset MAC Address</b> to reset the LAN MAC address if this device has been replaced with new hardware at the top of the page. Use the <b>Replace Hardware</b> button at the bottom of that page in order to avoid this message.</p>




To view the detailed status of all your down devices at once, navigate to **APs/Devices > Down** (try the **Down** top header stats link) and look at the **Detailed Status** column for the list of down devices. This column can be sorted using the **Filter** icon (  ).

3. If the **SNMP Get Failed** message appears, select the **APs/Devices > Manage** tab to go to the management page for that device.
4. If visible, select the **View Device Credentials** link in the **Device Communications** section of **APs/Devices > Manage**. This displays the credentials OV3600 is using unsuccessfully to communicate with the device. This link can be removed from OV3600 for security reasons by setting a flag in OV3600. Only users with root access to the

OV3600 command line can show or hide this link. To disable this feature, please contact Alcatel-Lucent support. Figure 109 illustrates this page.

**Figure 109:** View Device Credentials Window

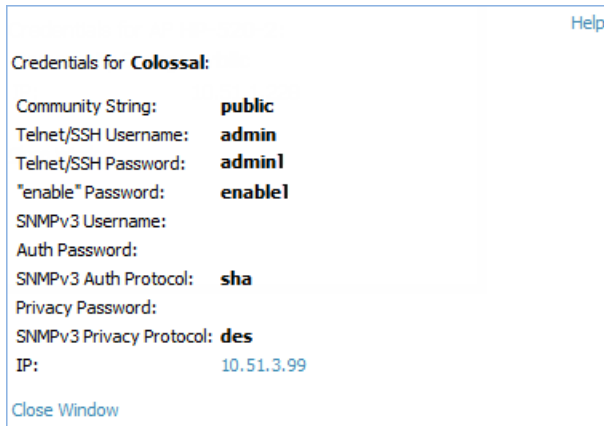

The **View Device Credentials** message may appear slightly different depending on the vendor and model.

5. If the credentials are incorrect, return to the **Device Communications** area on the **APs/Devices > Manage** page. Enter the appropriate credentials, and select **Apply**.
6. Return to the **APs/Devices > List** page to see if the device appears with a Status of **Up**.

## Using OV3600 to Set up Spectrum Analysis

The spectrum analysis software modules on Alcatel-Lucent AP models OAW-AP105, OAW-RAP5WN, the OAW-AP12x series, the OAW-AP13-x series, and the OAW-AP 9x series can examine the radio frequency (RF) environment in which the Wi-Fi network is operating, identify interference and classify its sources.

The spectrum analyzer is used in conjunction with Alcatel-Lucent's Adaptive Radio Management (ARM) technology. While the spectrum analyzer identifies and classifies Wi-Fi and non-Wi-Fi sources of interference, ARM automatically ensures that APs serving clients will stay clear of interference.

Individual APs or groups of APs can be converted to dedicated spectrum monitors through the dot11a and dot11g radio profiles of that AP or AP group, or through a special spectrum override profile.

Each 802.11a and 802.11g radio profile references a spectrum profile, which identifies the spectrum band the radio will monitor and analyze, and defines the default ageout times for each monitored device type. By default, an 802.11a radio profile references a spectrum profile named **default-a** (which configures the radio to monitor the upper channels of the 5 GHz radio band), and an 802.11g radio profile references a spectrum profile named **default-g** (which configures the radio to monitor all channels the 2.4 GHz radio band).

Most interference will occur in the 2.4 GHz radio band.

For more information about Spectrum analysis and ARM technology, refer to the *Alcatel-Lucent AOS-W User Guide*.

## Spectrum Configurations and Prerequisites

The following prerequisites must be in place to configure an AP to run in Spectrum mode in OV3600:

- The AP must be in **Manage Read/Write** mode.
- The AP's associated switch must have an RFprotect license and must be running AOS-W 6.0 or later.
- Alcatel-Lucent GUI Config must be enabled for that AP's group in the **Groups > Basic** page.

There are three main situations in which you would set one or more devices to Spectrum mode in OV3600:

- Alcatel-Lucent AP Groups running permanently with the default Spectrum profile
- Individual APs running temporarily in Spectrum mode while part of an Alcatel-Lucent AP Group set to ap-mode
- switch-level Spectrum Overrides (an alternative to creating new Alcatel-Lucent AP groups or new radio profiles for temporary changes)

## Setting up a Permanent Spectrum Alcatel-Lucent AP Group

If you have multiple supported Alcatel-Lucent APs in multiple switches that you want to run in Spectrum mode over the long run, you create a special Alcatel-Lucent AP group and set up a profile that is set to **spectrum-mode** and references the default **Spectrum** profile. Set up more than one profile if you want to utilize both radio bands in Spectrum mode.


If you use an 802.11a or 802.11g radio profile to create a group of spectrum monitors, all APs in any AP group referencing that radio profile will be set to spectrum mode. Therefore, best practices are to create a new 802.11a or 802.11g radio profile just for spectrum monitors.

If **Use Global Alcatel-Lucent Configuration** is enabled in **OV3600 Setup > General**, create the configuration below, then go to the switch group's **Controller Config** page and select the newly created Alcatel-Lucent AP Group.

Perform these steps to set the AP group to use the default Spectrum profile settings:

1. On the **Groups > Controller Config** page, click the **Add New Alcatel-Lucent Group** button.
2. Give the new Group a name (such as Spectrum APs), and select the plus sign next to the **802.11a Radio Profile** field to create a new radio profile.
3. Enter a name under the General Settings section of **Profiles > RF > 802.11a/g Radio**.
4. In the **Other Settings** section, change the **Mode** field from **ap-mode** to **spectrum-mode**, as illustrated in [Figure 110](#), and then select **Save**.

**Figure 110:** *Spectrum mode in Controller Config*

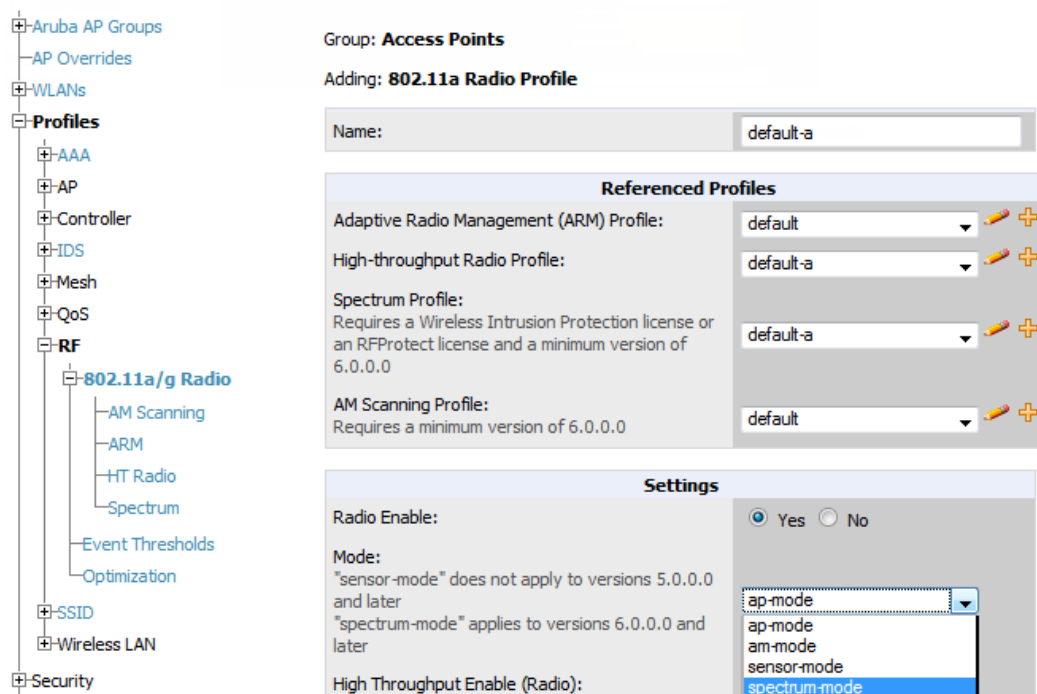

The above steps will use the defaults in the referenced **Spectrum Profile**. In most cases, you should not change the settings in the default profile. If you must change the defaults, however, navigate to **Groups > Controller Config > Profiles > RF > 802.11a/g Radio > Spectrum** page, and create a new Spectrum profile with non-default settings.

If all of the devices in this Alcatel-Lucent AP Group are managed by the same switch and you want to temporarily override one or more profile settings in your spectrum-mode APs, you can set up a switch override.

To disable spectrum mode in this group, change the referenced radio profile back to **default**.

## Configuring an Individual AP to run in Spectrum Mode

If you want to temporarily set an individual radio in an AP to run in Spectrum mode without creating or changing Alcatel-Lucent AP Groups or radio profiles, perform these steps to set up a Spectrum Override on a supported Alcatel-Lucent AP:

1. Go to the **APs/Devices > Manage** page for a Spectrum-supported AP.
2. After checking the Audit page, set the AP to **Manage Read/Write** mode.
3. Select **Yes** on the **Spectrum Override** field for one or both radios, depending on the band and channels you want it to analyze.
4. Select the band that should run in spectrum. If you selected the 5GHz band in the 802.11an Radio section, choose the lower, middle, or upper range of channels that you want to be analyzed by this radio.
5. Select **Save and Apply** and confirm your edit.

This overrides the current **Mode** setting for that AP (ap-mode or am-mode).

After making this change, you can view the **Radio Role** field that will appear in the **Radios** section of the **APs/Devices > Monitor** page.

The new role, **Spectrum Sensor**, is a link to the Spectrum Analysis page for the switch that manages this AP, as illustrated in [Figure 111](#).

**Figure 111: Spectrum Analysis on switch Dashboard**




This chart is only available for OAW-AP105, OAW-AP90, and the OAW-AP130 Series.

To disable Spectrum mode on this individual AP after it has collected data, return to the **APs/Devices > Manage** page for this AP and set the **Spectrum Override** field back to **No**.

## Configuring a switch to use the Spectrum Profile

You can use OV3600 to customize individual fields in the profile instance used by a particular switch without having to create new Alcatel-Lucent AP groups and new radio profiles. To do this, you can set a switch-level override for its referenced Spectrum profile, as illustrated in Figure 112. This will affect all Spectrum-supported APs managed by this switch.

**Figure 112:** *Override Section of a Supported switch's Manage Page*

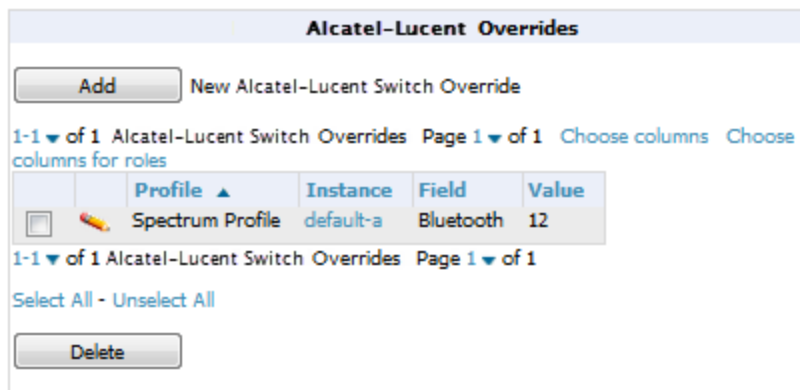

Perform these steps to override individual profile settings for an Alcatel-Lucent switch that is part of a spectrum-mode Alcatel-Lucent AP group:

1. Select a Spectrum-supported Alcatel-Lucent switch that is referencing a Spectrum profile, and go to its **APs/Devices > Manage** page. Set it to **Manage Read/Write** mode.
2. Under the Alcatel-Lucent Overrides section, click the **Add New Alcatel-Lucent switch Override** button.
3. In the **Profile** drop-down menu, select the **Spectrum Profile** type.
4. In the **Profile Instance** drop-down menu, select the instance of the Spectrum profile used by the switch.
5. In the **Field** drop-down menu, select the setting you would like to change (such as an Age-Out setting or a Spectrum Band), and enter the overriding value below it.
6. Select **Add** to save your changes.
7. Repeat this process to create additional overrides for this switch.
8. When you have finished, select **Save and Apply**.

You can also use the above procedure to turn on Spectrum mode for radio profiles on one particular switch, or use the overrides to point your radio profile to a non-default Spectrum profile for just this switch.

This section provides an overview and several tasks supporting the use of device configuration templates in OV3600, and contains the following topics:

- "Group Templates" on page 182
- "Viewing and Adding Templates" on page 184
- "Configuring General Template Files and Variables" on page 187
- "Configuring Templates for Alcatel-Lucent Instant" on page 192
- "Configuring Templates for AirMesh" on page 194
- "Configuring Cisco IOS Templates" on page 194
- "Configuring Cisco Catalyst Switch Templates" on page 196
- "Configuring Symbol Controller / HP WESM Templates" on page 196
- "Configuring a Global Template" on page 198

## Group Templates

### Supported Device Templates

Templates are helpful configuration tools that allow OV3600 to manage virtually all device settings. A template uses variables to adjust for minor configuration differences between devices.

The **Groups > Templates** configuration page allows you to create configuration templates for the following types of devices:

- Dell Networking W-Series
- Aruba
- Alcatel-Lucent



---

Use the graphical Alcatel-Lucent config feature in support of Alcatel-Lucent devices, particularly for AOS-W 3.3.2.x and later. Refer to the *OmniVista 3600 Air Manager 8.0 Controller Configuration Guide* for additional information.

---

- Cisco Aironet IOS autonomous APs
- Cisco Catalyst switches
- HP ProCurve 530 and WeSM controllers
- Nomadix
- Symbol
- Trapeze
  - 3Com
  - Nortel
  - Enterasys

It is also possible to create local templates in a subscriber group—using global groups does not mean that global templates are mandatory

## Template Variables

Variables in templates configure device-specific properties, such as name, IP address and channel. Variables can also be used to configure group-level properties, such as SSID and RADIUS server, which may differ from one group to the next. The OV3600 template understands many variables including the following:

- %allowed\_aps%
- %ams\_identity%
- %antenna\_receive%
- %antenna\_transmit%
- %ap\_include\_1% through %ap\_include\_10%
- %ca\_cert\_checksum%
- %cck\_power%
- %certificate%
- %cert\_psk%
- %channel%
- %channel\_width%
- %chassis\_id%
- %clock\_timezone%
- %contact%
- %controller\_ip%
- %custom\_variable\_1% through %custom\_variable\_10%
- %domain%
- %enabled%
- %gateway%
- %guid%
- %hostname%
- %if interface=Dot11Radio0%
- %if interface=Dot11Radio1%
- %if ip=dhcp%
- %if ip=static%
- %if radio\_type=a%
- %if radio\_type=an%
- %if radio\_type=b%
- %if radio\_type=bgn%
- %if radio\_type=g%
- %if wds\_role=backup%
- %if wds\_role=client%
- %if wds\_role=master%
- %ip\_address%
- %ip\_address\_a%
- %ip\_address\_b%
- %ip\_address\_c%
- %manager\_ip\_address%
- %master\_ip%
- %netmask%
- %ofdmpower%
- %organization%

- %password%
- %power%
- %radius\_server\_ip%
- %rf\_band%
- %server\_cert\_checkstum%
- %syslocation%
- %syslog\_server%

The variable settings correspond to device-specific values on the **APs/Devices > Manage** configuration page for the specific AP that is getting configured.



Changes made on the other **Group** pages (Radio, Security, VLANs, SSIDs, and so forth) are not applied to any APs that are configured by templates.

## Viewing and Adding Templates

Perform these steps to display, add, or edit templates.

1. Go to the **Groups > List** page, and select a group for which to add or edit templates. This can be a new group, created with the **Add** button, or you can edit an existing group by selecting the corresponding pencil icon. The **Groups > Basic** page for that group appears. Additional information about adding and editing groups is described in "Configuring and Using Device Groups" on page 80.
2. From the OV3600 navigation pane, select **Templates**. The **Templates** page appears. Figure 113 illustrates the **Groups > Templates** configuration page.

**Figure 113:** *Groups > Templates Page Illustration for a Sample Device Group*

Group: test

New Template

Templates allow you to manage the configuration of 3Com, Alcatel-Lucent, Aruba, Cisco Aironet IOS, Cisco Catalyst Switch, Dell, Enterasys, HP, Nortel, Symbol and Trapeze devices in this group using a configuration file. Variables in the templates are used to configure device-specific properties (like name, IP address and channel) as well as group level properties (SSID, RADIUS servers, etc).

	Name ▲	Device Type	Status	Fetch Date	Version Restriction
<input type="checkbox"/>	Cisco Aironet 1200 IOS - 12.3(8)JA	Cisco Aironet 1200 IOS	Template saved	9/8/2009 11:49 AM	12.3(8)JEC
<input type="checkbox"/>	Cisco Aironet 350 IOS - 12.3(7)JA3	Cisco Aironet 350 IOS	Template saved	8/27/2010 12:05 PM	None
<input type="checkbox"/>	Symbol WS2000 - 2.4.0.0-023R	Symbol WS2000	Template saved	5/29/2009 7:08 AM	None

Select All - Unselect All

Table 89 describes the columns in this image.

**Table 89:** *Groups > Templates Fields and Default Values*

Setting	Description
Notes	When applicable, this section lists devices that are active on the network with no template available for the respective firmware. Select the link from this note to launch the <b>Add Template</b> configuration page for that device.
Name	Displays the template name.



**Table 89: Groups > Templates Fields and Default Values (Continued)**

Setting	Description
Device Type	Displays the template that applies to APs or devices of the specified type. If <b>(Any Model)</b> is selected for a vendor, then the template applies to all models from that vendor that do not have a version-specific template defined. If there are two templates that might apply to a device, the template with the most restrictions takes precedence.
Status	Displays the status of the template.
Fetch Date	Sets the date that the template was originally fetched from a device.
Version Restriction	Designates that the template only applies to APs running the version of firmware specified. If the restriction is <b>None</b> , then the template applies to all the devices of the specified type in the group. If there are two templates that might apply to a device the template with the most restrictions takes precedence. If there is a template that matches a devices firmware it will be used instead of a template that does not have a version restriction.

- To create a new template and add it to the OV3600 template inventory, go to the **Groups > List** page, and select the group name. The **Details** page appears.
- Select **Templates**, and then **Add**.
- Complete the configurations illustrated in [Figure 114](#).

**Figure 114: Groups > Templates > Add Template Page Illustration**

The settings for the **Add a Template** page are described in [Table 90](#). Note that the fields can vary based on the Group.

**Table 90:** *Groups > Templates > Add Template Fields and Default Values*

Setting	Default	Description
Use Global Template	No	Uses a global template that has been previously configured on the <b>Groups &gt; Templates</b> configuration page. Available templates will appear in the drop-down menu. If <b>Yes</b> is selected you can also configure global template variables. For Symbol devices you can select the groups of thin APs to which the template should be applied. For more information about global templates, see " <a href="#">Configuring a Global Template</a> " on page 198.
Name	None	Defines the template display name.
AP Type	Cisco IOS (Any Model)	Determines that the template applies to APs or devices of the specified type. If <b>Cisco IOS (Any Model)</b> is selected, the template applies to all IOS APs that do not have a version specific template specified.
Reboot APs After Configuration Changes	No	Determines reboot when OV3600 applies the template, copied from the new configuration file to the startup configuration file on the AP. If <b>No</b> is selected, OV3600 uses the AP to merge the startup and running configurations. If <b>Yes</b> is selected, the configuration is copied to the startup configuration file and the AP is rebooted.  This field is only visible for some devices.
Restrict to this version	No	Restricts the template to APs of the specified firmware version. If <b>Yes</b> is selected, the template only applies to APs on the version of firmware specified in the <b>Template Firmware Version</b> field.
Template firmware version	None	Designates that the template only applies to APs running the version of firmware specified.
Fetch Template from Device	None	Selects an AP from which to fetch a configuration. The configuration will be turned into a template with basic AP specific settings like channel and power turned into variables. The variables are filled with the data on the <b>APs/Devices &gt; Manage</b> page for each AP.
Template Variables	None	Add variables to be used in the template for the group. Refer to " <a href="#">Configuring General Template Files and Variables</a> " on page 187 for more information.
Group Template Variables		Add variables to be used for a Group Template.
Thin AP Groups		Configure a template for selected Thin AP groups.
AP Template		Specify template variables specifically for APs.
Change credentials the OV3600 uses to contact devices after successful config push:	No	Specify whether to change the credentials that OV3600 uses to contact devices after the configuration has been pushed. If this option is enabled, then new credential information fields display.

**Table 90:** *Groups > Templates > Add Template Fields and Default Values (Continued)*

Setting	Default	Description
Community String	None	If the template is updating the community strings on the AP, enter the new community string OV3600 should use here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
Telnet/SSH Username	None	If the template is updating the Telnet/SSH Username on the AP, enter the new username OV3600 should use here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
Telnet/SSH Password	None	If the template is updating the Telnet/SSH password on the AP, enter the new Telnet/SSH password OV3600 should use here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
enable Password	None	If the template is updating the enable password on the AP, enter the new enable password OV3600 should use here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
SNMPv3 Username	None	If the template is updating the SNMPv3 Username on the AP, enter the new SNMP Username here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
Auth Password	None	If the template is updating the SNMPv3 auth password on the AP, enter the new SNMP Username password here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
SNMPv3 Auth Protocol	MD5	Specifies the SNMPv3 auth protocol, either <b>MD5</b> or <b>SHA-1</b> .
Privacy Password	None	If the template is updating the Privacy Password on the AP, enter the new password here. OV3600 updates the credentials it is using to communicate to the device after the device has been managed.
SNMPv3 Privacy Protocol	DES	Specifies the SNMPv3 Privacy protocol as either <b>DES</b> or <b>AES</b> . This option is not available for all devices.

## Configuring General Template Files and Variables

This section describes the most general aspects of configuring AP device templates and the most common variables:

- ["Configuring General Templates" on page 188](#)
- ["Using Template Syntax" on page 189](#), including the following sections:
  - ["Using AP-Specific Variables" on page 189](#)
  - ["Using Directives to Eliminate Reporting of Configuration Mismatches" on page 190](#)
  - ["Using Conditional Variables in Templates" on page 190](#)
  - ["Using Substitution Variables in Templates" on page 191](#)

## Configuring General Templates

Perform the following steps to configure Templates within a Group.

1. Select a Group to configure.



---

Start with a small group of access points and placing these APs in Monitor Only mode, which is read-only. Do this using the **Modify Devices** link until you are fully familiar with the template configuration process. This prevents configuration changes from being applied to the APs until you are sure you have the correct configuration specified.

---

2. Select an AP from the Group to serve as a *model* AP for the others in the Group. You should select a device that is configured currently with all the desired settings. If any APs in the group have two radios, make sure to select a model AP that has two radios and that both are configured in proper and operational fashion.
3. Go to the **Groups > Templates** configuration page. Select **Add** to add a new template.
4. Select the type of device that will be configured by this template.
5. Select the model AP from the drop-down list, and select **Fetch**.
6. OV3600 automatically attempts to replace some values from the configuration of that AP with *variables* to enable AP-specific options to be set on an AP-by-AP basis. Refer to ["Using Template Syntax" on page 189](#)

These variables are always encapsulated between % signs. On the right side of the configuration page is the **Additional Variables** section. This section lists all available variables for your template. Variables that are in use in a template are green, while variables that are not yet in use are black. Verify these substitutions to ensure that all of the settings that you believe should be managed on an AP-by-AP basis are labeled as variables in this fashion. If you believe that any AP-level settings are not marked correctly, please contact Alcatel-Lucent customer support before proceeding.

7. Specify the device types for the template. The templates only apply to devices of the specified type.
  - Specify whether OV3600 should reboot the devices after a configuration push. If the **Reboot Devices after Configuration Changes** option is selected, then OV3600 instructs the AP to copy the configuration from OV3600 to the startup configuration file of the AP and reboot the AP.
  - If the **Reboot Devices after Configuration Changes** option is not selected, then OV3600 instructs the AP to copy the configuration to the startup configuration file and then tell the AP to copy the startup configuration file to the running configuration file.
  - Use the **reboot** option when there are changes requiring reboot to take effect, for example, removing a new SSID from a Cisco IOS device. Copying the configuration from startup configuration file to running configuration file merges the two configurations and can cause undesired configuration lines to remain active on the AP.
8. Restrict the template to apply only to the specified version of firmware. If the template should only apply to a specific version of firmware, select **Yes** and enter the firmware version in the **Template Firmware Version** text field.
9. Select **Save and Apply** to push the configuration to all of the devices in the group. If the devices are in monitor-only mode (which is recommended while you are crafting changes to a template or creating a new one), then OV3600 will audit the devices and compare their current configuration to the one defined in the template.



---

If you set the reboot flag to **No**, then some changes could result in configuration mismatches until the AP is rebooted.

---

For example, changing the SSID on Cisco IOS APs requires the AP to be rebooted. Two other settings that require the AP to be rebooted for configuration change are Logging and NTP. A configuration mismatch results if the AP is not rebooted.

If logging and NTP service are not required according to the Group configuration, but are enabled on the AP, you would see a configuration file mismatch as follows if the AP is not rebooted:

## IOS Configuration File Template

```
...  
(no logging queue-limit)  
...
```

## Device Configuration File on APs/Devices > Audit Configuration Page

```
...  
    line con 0  
    line vty 5 15  
actual logging 10.51.2.1  
actual logging 10.51.2.5  
actual logging facility local6  
actual logging queue-limit 100  
actual logging trap debugging  
    no service pad  
actual ntp clock-period 2861929  
actual ntp server 209.172.117.194  
    radius-server attribute 32 include-in-access-req format %h  
...
```

10. Once the template is correct and all mismatches are verified on the **APs/Devices > Audit** configuration page, use the **Modify Devices** link on the **Groups > Monitor** configuration page to place the desired devices into **Management** mode. This removes the APs from Monitor mode (read-only) and instructs the AP to pull down its new startup configuration file from OV3600.



---

Devices can be placed into Management mode individually from the **APs/Devices > Manage** configuration page.

---

## Using Template Syntax

Template syntax is comprised of the following components, described in this section:

- ["Using AP-Specific Variables" on page 189](#)
- ["Using Directives to Eliminate Reporting of Configuration Mismatches" on page 190](#)
- ["Using Conditional Variables in Templates" on page 190](#)
- ["Using Substitution Variables in Templates" on page 191](#)

## Using AP-Specific Variables

When a template is applied to an AP, all variables are replaced with the corresponding settings from the **APs/Devices > Manage** configuration page. This enables AP-specific settings (such as Channel) to be managed effectively on an AP-by-AP basis. The list of used and available variables appears on the template detail configuration page. Variables are always encapsulated between % signs. The following example illustrates this usage:

```
hostname %hostname%  
...  
interface Dot11Radio0  
...  
    power local cck %CCK_POWER%  
    power local ofdm %OFDM_POWER%  
    channel %CHANNEL%  
...
```

The `hostname` line sets the AP hostname to the hostname stored in OV3600.

The `power` lines set the power local `cck` and `ofdm` values to the numerical values that are stored in OV3600.

## Using Directives to Eliminate Reporting of Configuration Mismatches

OV3600 is designed to audit AP configurations to ensure that the actual configuration of the access point exactly matches the Group template. When a configuration mismatch is detected, OV3600 generates an automatic alert and flags the AP as having a **Mismatched** configuration status on the user page.

However, when using the templates configuration function, there will be times when the running-config file and the startup-config file do not match under normal circumstances. For example, the `ntp clock-period` setting is almost never identical in the running-config file and the startup-config file. You can use directives such as `<ignore_and_do_not_push>` to customize the template to keep OV3600 from reporting mismatches for this type of variance.

OV3600 provides two types of directives that can be used within a template to control how OV3600 constructs the startup-config file to send to each AP and whether it reports variances between the running-config file and the startup-config file as "configuration mismatches." Lines enclosed in `<push_and_exclude>` are included in the AP startup-config file but OV3600 ignores them when verifying configurations. Lines enclosed in `<ignore_and_do_not_push>` cause OV3600 to ignore those lines during configuration verification.

### Ignore\_and\_do\_not\_push Command

The `ignore` and `do not push` directive should typically be used when a value cannot be configured on the device, but always appears in the running-config file. Lines enclosed in the ignore and do not push directive will not be included in the startup-config file that is copied to each AP.

When OV3600 is comparing the running-config file to the startup-config file for configuration verification, it will ignore any lines in the running-config file that start with the text within the directive. Lines belonging to an ignored and unpushed line, the lines immediately below the line and indented, are ignored as well. In the example below, if you were to bracket the NTP server, the NTP clock period would behave as if it were bracketed because it belongs with or is associated with the NTP server line.



---

The line `<ignore_and_do_not_push>ntp clock-period</ignore_and_do_not_push>` will cause lines starting with "ntp clock-period" to be ignored. However, the line `<ignore_and_do_not_push>ntp </ignore_and_do_not_push>` causes all lines starting with "ntp" to be ignored, so it is important to be as specific as possible.

---

### Push\_and\_exclude Command

Instead of using the full tags you may use the parenthesis shorthand, (substring). The push and exclude directive is used to push commands to the AP that will not appear in the running-config file. For example, some **no** commands that are used to remove SSIDs or remove configuration parameters do not appear in the running-config file of a device. A command inside the push and exclude directive are included in the startup-config file pushed to a device, but OV3600 excludes them when calculating and reporting configuration mismatches.



---

The opening tag may have leading spaces.

---

Below are some examples of using directives:

```
...
line con 0
  </push_and_exclude>no stopbits</push_and_exclude>
line vty 5 15
!
ntp server 209.172.117.194
<ignore_and_do_not_push>ntp clock-period</ignore_and_do_not_push>
end
```

## Using Conditional Variables in Templates

Conditional variables allow lines in the template to be applied only to access points where the enclosed commands will be applicable and not to any other access points within the Group. For example, if a group of APs consists of dual-radio

Cisco 1200 devices (802.11a/b) and single-radio Cisco 1100 (802.11b) devices, it is necessary to make commands related to the 802.11a device in the 1200 APs conditional. Conditional variables are listed in the table below.

The syntax for conditional variables is as follows, and syntax components are described in [Table 91](#):

```
%if variable=value%
...
%endif%
```

**Table 91:** Conditional Variable Syntax Components

Variable	Values	Meaning
interface	Dot11Radio0	2.4GHz radio module is installed
	Dot11Radio1	5GHz external radio module is installed
radio_type	a	Installed 5GHz radio module is 802.11a
	b	Installed 2.4GHz radio module is 802.11b only
	g	Installed 2.4GHz radio module is 802.11g capable
wds_role	backup	The WDS role of the AP is the value selected in the dropdown menu on the <b>APs/Devices &gt; Manage</b> configuration page for the device.
	client	
	master	
IP	Static	IP address of the device is set statically on the AP Manage configuration page.
	DHCP	IP address of the device is set dynamically using DHCP

## Using Substitution Variables in Templates

Substitution variables are used to set AP-specific values on each AP in the group. It is obviously not desirable to set the IP address, hostname, and channel to the same values on every AP within a Group. The variables in [Table 92](#) are substituted with values specified on each access point's **APs/Devices > Manage** configuration page within the OV3600 User page.

Sometimes, the running-config file on the AP does not include the command for one of these variables because the value is set to the default. For example, when the **transmission power** is set to maximum (the default), the line **power local maximum** will not appear in the AP running-config file, although it will appear in the startup-config file. OV3600 would typically detect and flag this variance between the running-config file and startup-config file as a configuration mismatch. To prevent OV3600 from reporting a configuration mismatch between the desired startup-config file and the running-config file on the AP, OV3600 suppresses the lines in the desired configuration when auditing the AP configuration (similar to the way OV3600 suppresses lines enclosed in parentheses, which is explained below). A list of the default values that causes lines to be suppressed when reporting configuration mismatches is shown in [Table 92](#).

**Table 92:** Substitution Variables in Templates

Variable	Meaning	Command	Suppressed Default
hostname	Name	hostname %hostname%	-

**Table 92: Substitution Variables in Templates (Continued)**

Variable	Meaning	Command	Suppressed Default
channel	Channel	channel %channel%	-
ip_address netmask	IP address Subnet mask	ip address %ip_address% %netmask% or ip address dhcp ...	-
gateway	Gateway	ip default-gateway %gateway%	-
antenna_receive	Receive antenna	antenna receive %antenna_ receive%	diversity
antenna_transmit	Transmit antenna	antenna transmit %antenna_ transmit%	diversity
cck_power	802.11g radio module CCK power level	power local cck %cck_ power%	maximum
ofdm_power	802.11g radio module OFDM power level	power local ofdm %ofdm_ power%	maximum
power	802.11a and 802.11b radio module power level	power local %power%	maximum
location	The location of the SNMP server.	snmp-server location %location%	-
contact	The SNMP server contact.	snmp-server contact %contact%	-
certificate	The SSL Certificate used by the AP	%certificate%	-
ap include	The AP include fields allow for configurable variables. Any lines placed in the AP Include field on the <b>APs/Devices &gt; Manage</b> configuration page replace this variable.	%ap_include_1% through %ap_include_10%	-
chassis id	serial number of the device	%chassis_id%	-
domain	dns-domain of the device	%domain%	-
interfaces	Interfaces of the device	%interfaces%	-

## Configuring Templates for Alcatel-Lucent Instant

The first Instant network that is added to OV3600 automatically includes the default configuration that is used as a template to provision other Instant networks. Refer to the documentation that accompanies Alcatel-Lucent Instant for more information.





---

Be sure that the default configuration is validated and has been pre-tested in a non-production environment prior to applying it to a production network. Any changes that are made to this configuration will follow the same process each time and will be applied to other Instant networks as described in this document.

---

OV3600 enables you to control Instant configuration settings via the **Groups > Templates** configuration page. A sample configuration is provided below.

```
virtual-controller-country US
virtual-controller-key %guid%
virtual-controller-ip %ip_address_a_b_c%.3
name %hostname%
%if organization%
organization %organization%
%endif%
syslog-server 216.31.249.235
syslog-level debug
terminal-access
clock timezone Pacific-Time -08 00
rf-band 5.0
ams-ip %manager_ip_address%
ams-key %password%
allow-new-aps
%allowed_aps%
snmp-server engine-id undefined
arm
  wide-bands 5ghz
  min-tx-power 18
  max-tx-power 127
  band-steering-mode prefer-5ghz
  air-time-fairness-mode fair-access
syslog-level warn ap-debug
syslog-level warn network
syslog-level warn security
syslog-level warn system
syslog-level warn user
syslog-level warn user-debug
syslog-level warn wireless
mgmt-user admin 446f8a8ddacdb735dd42a9873a2e80e2
wlan ssid-profile remote-node-guest
  index 0
  type employee
  essid %ssid%
  wpa-passphrase a804e1744c137371943bdeed410e720a58eca75717ff714b
  opmode wpa2-psk-aes
  rf-band all
  captive-portal disable
  dtim-period 1
  inactivity-timeout 1000
  broadcast-filter none
enet-vlan guest
wlan external-captive-portal
  server localhost
  port 80
  url "/"
  auth-text "%venue%"
ids classification
ids
wireless-containment none
```

## Configuring Templates for AirMesh

AirMesh devices can be configured using templates in OV3600. OV3600 automatically adds a template for the first AirMesh AP in a group. The configurations are pushed using CLI commands. The sample code below includes Mesh configuration options.

```
mesh
mesh-id %mesh_id%
%preferred_link%
neighbor-list-type %neighbor_list_type%
authentication open key-management wpa2
    psk ascii 5d4f50485e4f5048ed1da60b85f2784d6bbf16442fdbc06aeb4460d98263f5
neighbor-list
%neighbor_list%
service avt
%avt_ingress_interface%
%avt_ingress_ip%
buffer_time 200
mode %avt_mode%
```



---

OV3600 displays a warning if AirMesh APs attempting to either upgrade or push configurations lack the necessary write permissions.

---

## Configuring Cisco IOS Templates

Cisco IOS access points have hundreds of configurable settings. OV3600 enables you to control them via the **Groups > Templates** configuration page. This page defines the startup-config file of the devices rather than using the OV3600 normal **Group** configuration pages. OV3600 no longer supports making changes for these devices via the browser-based page, but rather uses templates to configure all settings, including settings that were controlled formerly on the OV3600 Group configuration pages. Perform these steps to configure a Cisco IOS Template for use with one or more groups, and the associated devices.

This section includes the following topics:

- ["Applying Startup-config Files" on page 194](#)
- ["WDS Settings in Templates" on page 195](#)
- ["SCP Required Settings in Templates" on page 195](#)
- ["Supporting Multiple Radio Types via a Single IOS Template" on page 195](#)
- ["Configuring Single and Dual-Radio APs via a Single IOS Template" on page 196](#)

### Applying Startup-config Files

Each of the APs in the Group copies its unique startup-config file from OV3600 via TFTP or SCP.

- If the **Reboot Devices after Configuration Changes** option is selected, then OV3600 instructs the AP to copy the configuration from OV3600 to the startup-config file of the AP and reboot the AP.
- If the **Reboot Devices after Configuration Changes** option is not selected, then OV3600 instructs the AP to copy the configuration to the startup-config file and then tell the AP to copy the startup config file to the running-config file. Use the reboot option when possible. Copying the configuration from startup to running merges the two configurations and can cause undesired configuration lines to remain active on the AP.



---

Changes made on the standard OV3600 Group configuration pages, to include Basic, Radio, Security, VLANs, and so forth, are not applied to any template-based APs.

---

## WDS Settings in Templates

A group template supports Cisco WDS settings. APs functioning in a WDS environment communicate with the Cisco WLSE via a WDS master. IOS APs can function in Master or Slave mode. Slave APs report their rogue findings to the WDS Master (AP or WLSM which reports the data back to the WLSE. On the **APs/Devices > Manage** configuration page, select the proper role for the AP in the WDS Role drop down menu.

The following example sets an AP as a WDS Slave with the following lines:

```
%if wds_role=client%
wlccp ap username wlse password 7 XXXXXXXXXXXX
%endif%
```

The following example sets an AP as a WDS Master with the following lines:

```
%if wds_role=master%
aaa authentication login method_wds group wds
aaa group server radius wds server
10.2.25.162 auth-port 1645 acct-port 1646
wlccp authentication-server infrastructure method_wds
wlccp wds priority 200 interface BVI1
wlccp ap username wlse password 7 095B421A1C
%endif%
```

The following example sets an AP as a WDS Master Backup with the following lines:

```
%if wds_role=backup%
aaa authentication login method_wds group wds
aaa group server radius wds server
10.2.25.162 auth-port 1645 acct-port 1646
wlccp authentication-server infrastructure method_wds
wlccp wds priority 250 interface BVI1
wlccp ap username wlse password 7 095B421A1C
%endif%
```

## SCP Required Settings in Templates

A few things must be set up before enabling SCP on the **Groups > Basic** configuration page. The credentials used by OV3600 to login to the AP must have level 15 privileges. Without them, OV3600 is not able to communicate with the AP via SCP. The line "aaa authorization exec default local" must be in the APs configuration file and the AP must have the SCP server enabled. These three settings correspond to the following lines in the AP's configuration file:

```
username Cisco privilege 15 password 7 0802455D0A16
aaa authorization exec default local
ip scp server enable
```

The username line is a guideline and will vary based on the username being set, in this case Cisco, and the password and encoding type, in this case 0802455D0A16 and 7 respectively.

These values can be set on a group wide level using Templates and TFTP. Once these lines are set, SCP can be enabled on the **Groups > Basic** configuration page without problems.

## Supporting Multiple Radio Types via a Single IOS Template

Some lines in an IOS configuration file should only apply to 802.11g vs. 802.11b. For instance, lines related to speed rates that mention rates above 11.0Mb/s do not work for 802.11b radios that cannot support these speeds. Use the "%IF variable=value% ... %ENDIF%" construct to allow a single IOS configuration template to configure APs with different radio types within the same Group as illustrated below:

```
interface Dot11Radio0
...
%IF radio_type=g%
speed basic-1.0 basic-2.0 basic-5.5 6.0 9.0 11.0 12.0 18.0 24.0 36.0 48.0 54.0
```

```

%ENDIF%
%IF radio_type=b%
speed basic-1.0 2.0 5.5 11.0
%ENDIF%
%IF radio_type=g%
power local cck %CCK_POWER%
power local ofdm %OFDM_POWER%
%ENDIF%
...

```

## Configuring Single and Dual-Radio APs via a Single IOS Template

To configure single and dual-radio APs using the same IOS config template, you can use the interface variable within the %IF...% construct. The below example illustrates this usage:

```

%IF interface=Dot11Radio1%
interface Dot11Radio1
 bridge-group 1
 bridge-group 1 block-unknown-source
 bridge-group 1 spanning-disabled
 bridge-group 1 subscriber-loop-control
 no bridge-group 1 source-learning
 no bridge-group 1 unicast-flooding
 no ip address
 no ip route-cache
 rts threshold 2312
 speed basic-6.0 basic-9.0 basic-12.0 basic-18.0 basic-24.0 36.0 48.0 54.0
 ssid decibel-ios-a
 authentication open
 guest-mode
 station-role root
 %ENDIF%

```

## Configuring Cisco Catalyst Switch Templates

Cisco Catalyst Switch templates are configured much like Cisco IOS templates with the addition of the `interfaces` and `switch_command` (for stacked switches) variables. Interfaces can be configured on the Device Interface pages, as shown in ["Configuring Device Interfaces for Switches" on page 169](#). You can import interface information as described in this section or by fetching a template from that device, as described in ["Configuring General Templates" on page 188](#).




---

Just one template is used for any type of Cisco IOS device, and another is used for any type of Catalyst Switch regardless of individual model.

---

## Configuring Symbol Controller / HP WESM Templates

This section describes the configuration of templates for Symbol controllers and HP WESM devices.

Symbol switches (RFS x000, 5100 and 2000) can be configured in OV3600 using templates. OV3600 supports Symbol thin AP firmware upgrades from the controller's manage page.

A sample running-configuration file template is provided in this topic for reference. A template can be fetched from a model device using the Cisco IOS device procedure described in ["Configuring Cisco IOS Templates" on page 194](#). Cisco IOS template directives such as `ignore_and_do_not_push` can also be applied to Symbol templates.

Certain parameters such as `hostname` and `location` are turned into variables with the % tags so that device-specific values can be read from the individual manage pages and inserted into the template. They are listed in Available Variable boxes on the right-hand side of the template fields.

Certain settings have integrated variables, including `ap-license` and `adoption-preference-id`. The radio preamble has been template-integrated as well. An option on the **Group > Templates** page reboots the device after pushing a configuration to it.

A sample Symbol controller partial template is included below for reference.

```
!  
! configuration of RFS4000 version 4.2.1.0-005R  
!  
version 1.4  
!  
!  
aaa authentication login default local none  
service prompt crash-info  
!  
network-element-id RFS4000  
!  
username admin password 1 5baa61e4c9b93f3f0682250b6cf8331b7ee68fd8  
username admin privilege superuser  
username operator password 1 fe96dd39756ac41b74283a9292652d366d73931f  
!  
!  
access-list 100 permit ip 192.168.0.0/24 any rule-precedence 10  
!  
spanning-tree mst cisco-interopability enable  
spanning-tree mst configuration  
    name My Name  
!  
ip dns-server-forward  
wwan auth-type chap  
no bridge multiple-spanning-tree enable bridge-forward  
country-code us  
aap-ipfilter-list no port 3333 plz  
aap-ipfilter-list no port 3333 tcp plz  
    deny tcp src-start-ip 0.0.0.0 src-end-ip 255.255.255.255 dst-start-ip 0.0.0.0 dst-end-ip  
255.255.255.255 dst-start-port 3333 dst-end-port 3334 rule 1  
%redundancy_config%  
logging buffered 4  
logging console 4  
snmp-server engineid netsnmp 6b8b45674b30f176  
snmp-server location %location%  
snmp-server contact %contact%  
snmp-server sysname %hostname%  
snmp-server manager v2  
snmp-server manager v3  
snmp-server user snmptrap v3 encrypted auth md5 0x1aa491f4ca7c55df0f57801bece9044c  
snmp-server user snmpmanager v3 encrypted auth md5 0x1aa491f4ca7c55df0f57801bece9044c  
snmp-server user snmpoperator v3 encrypted auth md5 0xb03b1ebfa0e3d02f50e2b1c092ab7c9f
```

A sample Symbol Smart RF template is provided below for reference:

```
radio %radio_index% radio-mac %radio_mac%  
%if radio_type=11a%  
    radio %radio_index% coverage-rate 18  
%endif%  
%if radio_type=11an%  
    radio %radio_index% coverage-rate 18  
%endif%  
%if radio_type=11b%  
    radio %radio_index% coverage-rate 5p5  
%endif%  
%if radio_type=11bg%
```

```

    radio %radio_index% coverage-rate 6
%endif%
%if radio_type=11bgn%
    radio %radio_index% coverage-rate 18
%endif%

```

A sample Symbol thin AP template is provided below for reference and for the formatting of **if** statements.

```

radio add %radio_index% %lan_mac% %radio_type% %ap_type%
    radio %radio_index% radio-number %radio_number%
    radio %radio_index% description %description%
%if radio_type=11a%
    radio %radio_index% speed basic6 9 basic12 18 basic24 36 48 54
    radio %radio_index% antenna-mode primary
    radio %radio_index% self-heal-offset 1
    radio %radio_index% beacon-interval 99
    radio %radio_index% rts-threshold 2345
    radio %radio_index% max-mobile-units 25
    radio %radio_index% admission-control voice max-perc 76
    radio %radio_index% admission-control voice res-roam-perc 11
    radio %radio_index% admission-control voice max-mus 101
    radio %radio_index% admission-control voice max-roamed-mus 11
%endif%
%if radio_type=11an%
    radio %radio_index% speed basic11a 9 18 36 48 54 mcs 0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15
%endif%
%if radio_type=11b%
    radio %radio_index% speed basic1 basic2 basic5p5 basic11
%endif%
%if radio_type=11bg%
    radio %radio_index% speed basic1 basic2 basic5p5 6 9 basic11 12 18 24 36 48 54
    radio %radio_index% on-channel-scan
    radio %radio_index% adoption-pref-id 7
    radio %radio_index% enhanced-beacon-table
    radio %radio_index% enhanced-probe-table
%endif%
%if radio_type=11bgn%
    radio %radio_index% speed basic11b2 6 9 12 18 24 36 48 54 mcs
0,1,2,3,4,5,6,7,8,9,10,11,12,13,14,15
%endif%
    radio %radio_index% channel-power indoor %channel% %transmit_power% %channel_attribute%
%detector%
%adoption_pref_id%
    radio %radio_index% enhanced-beacon-table
    radio %radio_index% on-channel-scan
%ap_include_4%

```

## Configuring a Global Template

Global templates allow OV3600 users to define a single template in a global group that can be used to manage APs in subscriber groups. They turn settings like group RADIUS servers and encryption keys into variables that can be configured on a per-group basis.

Perform the following steps to create a global template, or to view or edit an existing global template:

1. Go to the **Group > Templates** configuration page for the global group that owns it.
2. Select **Add** to add a new template, or select the **pencil** icon next to an existing template to edit it.
3. Examine the configurations illustrated in [Figure 115](#).

**Figure 115: Group > Templates > Add Page Illustration**

Group: Cisco Gear

**Cisco Aironet 1200 IOS**

Name: HQ-1200

Device Type: Cisco Aironet 1200 IOS

Reboot devices after configuration changes:  Yes  No

Restrict to this version:  Yes  No

Template firmware version: 12.3(8)JEC

**Template Select**

Fetch template from device: -- Select Device --

Fetch

**Template**

```
! Template created from Cisco Aironet 1200 IOS 12.3(8)JEC 'Cisco1200-Airwave'
! at 3/12/2013 3:38 PM by user 'dasa'
<ignore_and_do_not_push>ntp clock-period</ignore_and_do_not_push>

version 12.3
no service pad
service timestamps debug datetime msec
service timestamps log datetime msec
service password-encryption
hostname %hostname%
enable secret 5 $1$xKNU$9UKfluIu5TyEc0AW3ctHm1
ip subnet-zero
%if domain%
ip domain name %domain%
%endif%
ip name-server 10.90.10.100
ip ssh rsa keypair-name Cisco1200-Airwave.airwave.com
ip ssh version 2
aaa new-model
aaa group server radius rad_eap
aaa group server radius rad_mac
aaa group server radius rad_acct
aaa group server radius rad_admin
aaa group server tacacs+ tac_admin
aaa group server radius rad_pmip
```

The following variables may be used in the template. The value of each variable is configured on the APs/Devices Manage page for each device in the group. Each variable must be surrounded by percent signs: %hostname%. The %if...% statements must be terminated by %endif% and cannot be nested.

<ignore\_and\_do\_not\_push></ignore\_and\_do\_not\_push>, [], <push\_and\_exclude></push\_and\_exclude> and () tags can be used to achieve a good configuration. Please refer to the User Guide for more information.

**Available Variables:**

- antenna\_receive
- antenna\_transmit
- ap\_include\_1
- ap\_include\_10
- ap\_include\_2
- ap\_include\_3
- ap\_include\_4
- ap\_include\_5
- ap\_include\_6
- ap\_include\_7
- ap\_include\_8
- ap\_include\_9
- ock\_power
- certificate
- channel
- channel\_width
- chassis\_id
- contact
- domain
- enabled
- gateway
- hostname
- if interface=Dot11Radio0
- if interface=Dot11Radio1
- if ip=dhcp
- if ip=static
- if radio\_type=a
- if radio\_type=an
- if radio\_type=b
- if radio\_type=bgn
- if radio\_type=g
- if radio\_type=g
- if wds\_role=backup
- if wds\_role=client
- if wds\_role=master
- ip\_address
- location
- manager\_ip\_address
- netmask
- oldm\_power
- power

**Credentials**

Change credentials the AMP uses to contact devices after successful config push:  Yes  No

Save Cancel

- Use the drop-down menu to select a device from which to build the global template and click the **Fetch** button. The menus are populated with all devices that are contained in any group that subscribes to the global group. The fetched configuration populates the template field. Global template variables can be configured with the **Add** button in the **Template Variables** box, illustrated in [Figure 116](#).

**Figure 116: Template Variables Illustration**

Variable Name	Variable Value	Delete
<input type="text"/>	<input type="text"/>	

Add

The variable name cannot have any spaces or non-alphanumeric characters. The initial variable value entered is the default value, but can be changed on a per-group basis later. You can also populate global template variables by uploading a CSV file (see below).

- Once you have configured your global template, select **Add**. You are taken to a confirmation configuration page where you can review your changes.
- If you want to add the global template, select **Apply Changes Now**. If you do not want to add the template, select **Cancel and Discard Changes**. Canceling from the confirmation configuration page causes the template and all of the template variables to be lost.
- Once you have added a new global template, you can use a CSV upload option to configure global template variables. Go to the **Groups > Templates** configuration page and select the **CSV** upload icon for the template. The CSV file must contain columns for **Group Name** and **Variable Name**. All fields must be completed.

- **Group Name**—the name of the subscriber group that you wish to update.
- **Variable Name**—the name of the group template variable you wish to update.
- **Variable Value**—the value to set.

For example, for a global template with a variable called "ssid\_1", the CSV file might resemble what follows:

```
Group Name, ssid_1  
Subscriber 1, Value 0
```

8. Once you have defined and saved a global template, it is available for use by any local group that subscribes to the global group. Go to the **Groups > Template** configuration page for the local group and select the pencil icon next to the global template in the list.
9. To make template changes, go to the **Groups > Template** configuration page for the global group and select the **pencil** icon next to the template you wish to edit. Note that you cannot edit the template itself from the subscriber group's **Groups > Templates** tab.
10. If group template variables have been defined, you are able to edit the value for the group on the **Groups > Templates > Add** configuration page in the **Group Template Variables** box. For Symbol devices, you are also able to define the template per group of APs.



This chapter provides an overview to rogue device and IDS event detection, alerting, and analysis using RAPIDS, and contains the following sections:

- "Introduction to RAPIDS" on page 201
- "Viewing Rogues on the RAPIDS > List Page" on page 211
- "Setting Up RAPIDS" on page 203
- "Defining RAPIDS Rules" on page 206
- "Score Override " on page 216
- "Using the Audit Log" on page 217
- "Additional Resources " on page 217

## Introduction to RAPIDS

Rogue device detection is a core component of wireless security. With RAPIDS rules engine and containment options, you can create a detailed definition of what constitutes a rogue device, and quickly act on a rogue AP for investigation, restrictive action, or both. Once rogue devices are discovered, RAPIDS alerts your security team of the possible threat and provides essential information needed to locate and manage the threat.

RAPIDS discovers unauthorized devices in your WLAN network in the following ways:

- Over the Air, using your existing enterprise APs.
- On the Wire
  - Polling routers and switches to identify, classify, and locate unknown APs
  - Using the switch's wired discovery information
  - Using HTTP and SNMP scanning



---

To set up a scan, refer to "Discovering and Adding Devices" on page 127.

---

Furthermore, RAPIDS integrates with external intrusion detection systems (IDS), as follows:

- **Alcatel-Lucent WIP**—Wireless Intrusion Protection (WIP) module integrates wireless intrusion protection into the mobile edge infrastructure. The WIP module provides wired and wireless AP detection, classification and containment; detects DoS and impersonation attacks; and prevents client and network intrusions.
- **Cisco WLSE** (1100 and 1200 IOS)—OV3600 fetches rogue information from the HTTP interface and gets new AP information from SOAP API. This system provides wireless discovery information rather than rogue detection information.
- **AirMagnet Enterprise**—Retrieves a list of managed APs from OV3600.
- **AirDefense**—Uses the OV3600 XML API to keep its list of managed devices up to date.
- **WildPackets OmniPeek**—Retrieves a list of managed APs from OV3600.

## Viewing Overall Network Health on RAPIDS > Overview

The **RAPIDS > Overview** page displays a page of RAPIDS summary information (see [Figure 117](#)). [Table 93](#) defines the summary information that appears on the page.

Figure 117: RAPIDS > Overview Page Illustration (partial view)

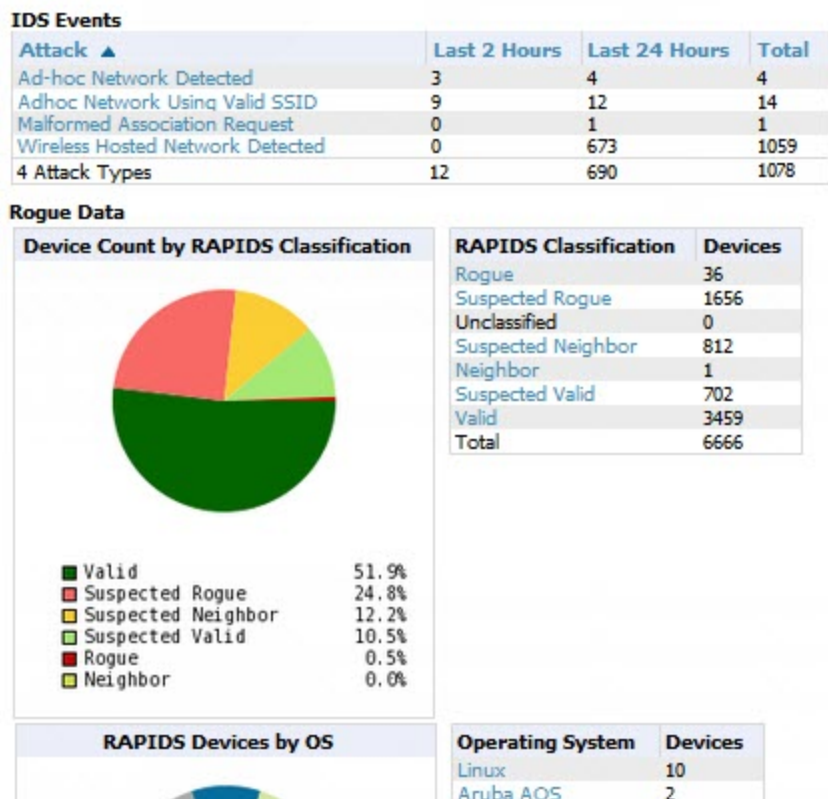


Table 93: RAPIDS > Overview Fields and Descriptions

Summary	Description
IDS Events	Displays a list of attack types for the designated folder and subfolders. Field displays events from the past two hours, the past 24 hours, and total IDS events. Names of attacks link to summary pages with more details. <b>NOTE:</b> OV3600 should be configured as the SNMP trap receiver on the controllers to receive IDS traps. See the <i>Alcatel-Lucent OV3600 Best Practices Guide</i> for details.
Device Count by RAPIDS Classification	A pie chart of rogue device percentages by RAPIDS classification.
RAPIDS Classification	A summary list with details of the statistics depicted in the Device Count by RAPIDS Classification pie chart. Click the linked classification name to be taken to a filtered rogue list.
RAPIDS Devices by OS	A pie chart of RAPIDS percentages by the detected operating system.

**Table 93: RAPIDS > Overview Fields and Descriptions (Continued)**

Summary	Description
Operating System	Detected operating systems represented in this summary listing. Click on the linked Operating System name to see the rogues list filtered by that classification.  OS scans can be run manually or enabled to run automatically on the <b>RAPIDS &gt; Setup</b> page.
Acknowledged RAPIDS Devices	A color coded pie chart comparing the number of acknowledged devices to the unacknowledged devices.
RAPIDS Changes	Tracks every change made to RAPIDS including changes to rules, manual classification, and components on the <b>RAPIDS &gt; Setup</b> page. A link at the top of the list directs you to the <b>RAPIDS &gt; Audit Log</b> page.

## Setting Up RAPIDS

The **RAPIDS > Setup** page allows you to configure your OV3600 server for RAPIDS. Complete the settings on this page as desired, and select **Save**. Most of the settings are internal to the way that OV3600 will process rogues.

Refer to the following sections:

- "RAPIDS Setup" on page 203
- "Additional Settings" on page 206

## RAPIDS Setup

### Basic Configuration

On the **RAPIDS > Setup** page, the **Basic Configuration** section allows you to define RAPIDS behavior settings. The figure below illustrates this page, and the tables that follow describe the fields.

**Figure 118: RAPIDS > Setup Page Illustration**

The screenshot displays the RAPIDS > Setup page with three main sections: Basic Configuration, Containment Options, and Filtering Options. At the bottom, there are buttons for Save, Save and Apply, and Revert.

**Basic Configuration**

- ARP IP Match Timeout (1-168 hours): 24
- RAPIDS Export Threshold: Suspected Rogue
- Wired-to-Wireless MAC Address Correlation (0-8 bits): 8
- Wireless BSSID Correlation (0-8 bits): 4
- Delete Rogues not detected for (0-180 days, zero disables): 14
- Automatically OS scan rogue devices:  Yes  No
- Wired-to-Wireless Time Correlation Window (minutes, zero disables): 360

**Classification Options**

- Acknowledge Rogues by Default:  Yes  No
- Manually Classifying Rogues Automatically Acknowledges Them:  Yes  No

**Containment Options**

- Manage rogue AP containment:  Yes  No
- Manage rogue AP containment in monitor-only mode:  Yes  No
- Maximum number of APs to contain a rogue: 3

**Filtering Options**

- Ignore Ad-hoc Rogues:  Yes  No
- Ignore Rogues by Signal Strength:  Yes  No
- Ignore Rogues Discovered by Remote APs:  Yes  No
- Ignore IDS Events from Remote APs:  Yes  No
- Ignore Events from VLAN(s): [Empty field]
- Ignore Events from Interface Label(s): [Empty field]

**Table 94:** *RAPIDS > Setup > Basic Configuration Fields and Default Values*

Field	Default	Description
ARP IP Match Timeout (1-168 hours)	24	If you have routers and switches on OV3600, and it's scanning them for ARP tables, this can assign a rogue IP address information. This timeout specifies how recent that information needs to be for the IP address to be considered valid. Note that the default ARP poll period is long (several hours).
RAPIDS Export Threshold	Suspected Rogue	Exported rogues will be sent to VisualRF for location calculation.
Wired-to-Wireless MAC Address Correlation (0-8 bits)	4	Discovered BSSIDs and LAN MAC addresses which are within this bitmask will be combined into one device. 4 requires all but the last digit match (aa:bb:cc:dd:ee:fX). 8 requires all but the last two digits match (aa:bb:cc:dd:ee:XX).
Wireless BSSID Correlation (0-8 bits)	4	Similar BSSIDs will be combined into one device when they fall within this bitmask. Setting this value too high may result in identifying two different physical devices as the same rogue. <b>NOTE:</b> When you change this value, RAPIDS will not immediately combine (or un-combine) rogue records. Changes will occur during subsequent processing of discovery events.
Delete Rogues not detected for (0-30 days, zero disables):	N/A	This value cannot be larger than the rogue discovery event expiration (30) configured on the OV3600 Setup page, unless that value is set to 0.
Automatically OS scan rogue devices	No	Whether to scan the operating system of rogues. Enabling this feature will cause RAPIDS to perform an OS scan when it gets in IP address for a rogue device. The OS scan will be run when a rogue gets an IP address for the first time or if the IP address changes.
Wired-to-Wireless Time Correlation Window (minutes, zero disables):	360	Specify a time frame for wired and wireless correlation. RAPIDS discovery events detected wirelessly and on LAN will only match if the wireless and LAN discovery events occur during this timeframe.

## Classification Options

**Table 95:** *RAPIDS > Setup > Classification Options Fields and Default Values*

Field	Default	Description
Acknowledge Rogues by Default	No	Sets RAPIDS to acknowledge rogue devices upon initial detection, prior to their classification.
Manually Classifying Rogues Automatically Acknowledges them	Yes	Defines whether acknowledgment happens automatically whenever a rogue device receives a manual classification.

## Containment Options

Using RAPIDS, OV3600 can shield rogue devices from associating to Cisco WLC controllers (versions 4.2.114 and later), and Alcatel-Lucent switches (running AOS-W versions 3.x and later). OV3600 will alert you to the appearance of the rogue device and identify any mismatch between switch configuration and the desired configuration.



WMS Offload is not required to manage containment in OV3600.

**Table 96:** *RAPIDS > Setup > Containment Options Fields and Default Values*

Field	Default	Description
Manage rogue AP containment	No	Specifies whether RAPIDS will manage the classification of rogue APs on Cisco WLC and Alcatel-Lucent controllers to match the classification of those rogues in RAPIDS. This includes the "Contained" classification. If this setting is enabled, then the <b>Maximum number of APs to contain a rogue</b> setting can be configured. Similarly, if this is enabled, then the Contained Rogue option will appear in the classification drop down menu when you add a new classification rule. (See "Viewing and Configuring RAPIDS Rules" on page 207 for more information.)
Manage rogue AP containment in monitor-only mode	No	Specify whether rogue AP containment can be performed in monitor-only mode. Note that containment updates will always be pushed to devices that are running WMS Offload, regardless of this setting.
Maximum number of APs to contain a rogue	N/A	If <b>Manage rogue AP containment</b> is enabled, then specify the maximum number of APs that can contain a rogue on Cisco WLC controllers.

### Filtering Options

Filtered rogues are dropped from the system before they are processed through the rules engine. This can speed up overall performance but will eliminate all visibility into these types of devices.

**Table 97:** *RAPIDS > Setup > Filtering Options Fields and Default Values*

Field	Default	Description
Ignore Ad-hoc rogues	No	Filters rogues according to ad-hoc status.
Ignore Rogues by Signal Strength	No	Filters rogues according to signal strength. Since anything below the established threshold will be ignored and possibly dangerous, best practices is to keep this setting disabled. Instead, incorporate signal strength into the classification rules on the <b>RAPIDS &gt; Rules</b> page.
Ignore Rogues Discovered by Remote APs	No	Filters rogues according to the remote AP that discovers them. Enabling this option causes OV3600 to drop all rogue discovery information coming from remote APs.
Ignore IDS Events from Remote APs	No	Filters IDS Events discovered by remote APs.
Ignore Events from VLAN(s)	N/A	Specify a VLAN or list of VLANs to be ignored when a wired rogue discovery event occurs. MAC addresses that appear on these VLANs will not be used for rogue detection or upstream device determination.

**Table 97:** *RAPIDS > Setup > Filtering Options Fields and Default Values (Continued)*

Field	Default	Description
Ignore Events from Interface Label(s)	N/A	Specify an interface or list of interfaces to be ignored when a wired rogue discovery event occurs. MAC addresses that appear on these interface labels will not be used for rogue detection or upstream device determination.

## Additional Settings

Additional RAPIDS settings such as role filtering and performance tuning are available in the following locations:

- Use the **OV3600 Setup > Roles > Add/Edit Role** page to define the ability to use RAPIDS by user role. Refer to "Creating OV3600 User Roles" on page 45.
- Use the **OV3600 Setup > General > Performance Tuning** page to define the processing priority of RAPIDS in relation to OV3600 as a whole. (See in "OV3600 Setup > General" on page 29.)

## Defining RAPIDS Rules

The **RAPIDS > Rules** page is one of the core components of RAPIDS. This feature allows you to define rules by which any detected device on the network is classified.

This section describes how to define, use, and monitor RAPIDS rules, provides examples of such rules, and demonstrates how they are helpful.

This section contains the following topics:

- "switch Classification with WMS Offload" on page 206
- "Device OUI Score" on page 207
- "Rogue Device Threat Level" on page 207
- "Viewing and Configuring RAPIDS Rules" on page 207
- "Recommended RAPIDS Rules " on page 210
- "Using RAPIDS Rules with Additional OV3600 Functions" on page 211

### switch Classification with WMS Offload

This classification method is supported only when WMS offload is enabled on Alcatel-Lucent WLAN switches. switch classification of this type remains distinct from RAPIDS classification. WLAN switches feed wireless device information to OV3600, which OV3600 then processes. OV3600 then pushes the WMS classification to all of the AOS-W switches that are WMS-offload enabled.

WMS Offload ensures that a particular BSSID has the same classification on all of the switches. WMS Offload removes some load from master switches and feeds 'connected-to-lan' information to the RAPIDS classification engine. RAPIDS classifications and switch classifications are separate and often are not synchronized.



---

RAPIDS classification is not pushed to the devices.

---

The following table compares how default classification may differ between OV3600 and Alcatel-Lucent AOS-W for scenarios involving WMS Offload.

**Table 98: Rogue Device Classification Matrix**

OV3600	AOS-W (ARM)
Unclassified (default state)	Unknown
Rogue	Rogue
Suspected Neighbor	Interfering
Neighbor	Known Interfering
Valid	Valid
Contained Rogue	DOS

For additional information about WMS Offload, refer to the *OmniVista 3600 Air Manager 8.0 Best Practices Guide* on the **Home > Documentation** page.

## Device OUI Score

The Organizationally Unique Identifier (OUI) score is based on the LAN MAC address of a device. RAPIDS can be configured to poll your routers and switches for the bridge forwarding tables. RAPIDS then takes the MAC addresses from those tables and runs them through a proprietary database to derive the OUI score. The OUI score of each device is viewable from each rogue's detail page. [Table 99](#) provides list the OUI scores definitions.

**Table 99: Device OUI Scores**

Score	Description
Score of 1	Indicates any device on the network; this is the lowest threat level on the network.
Score of 2	Indicates any device in which the OUI belongs to a manufacturer that produces wireless (802.11) equipment.
Score of 3	Indicates that the OUI matches a block that contains APs from vendors in the Enterprise and small office/ small home market.
Score of 4	Indicates that the OUI matches a block that belonged to a manufacturer that produces small office/ small home access points.

## Rogue Device Threat Level

The threat level classification adds granularity for each general RAPIDS classification. Devices of the same classification can have differing threat scores based on the classifying rule, ranging from 1 to 10 with a default value of 5. This classification process can help identify the greater threat. Alerts can be defined and sorted by threat level.

Threat level and classification are both assigned to a device when a device matches a rule. Once classified, a device's classification and threat level change only if it is classified by a new rule or is manually changed. Threats levels can be manually defined on the **RAPIDS > Detail** page when the RAPIDS classification is manually overridden or you can edit the rule to have a higher threat level.

## Viewing and Configuring RAPIDS Rules

To view the RAPIDS rules that are currently configured on OV3600, navigate to the **RAPIDS > Rules** page ([Figure 119](#)).

**Figure 119: RAPIDS > Rules Page Illustration**

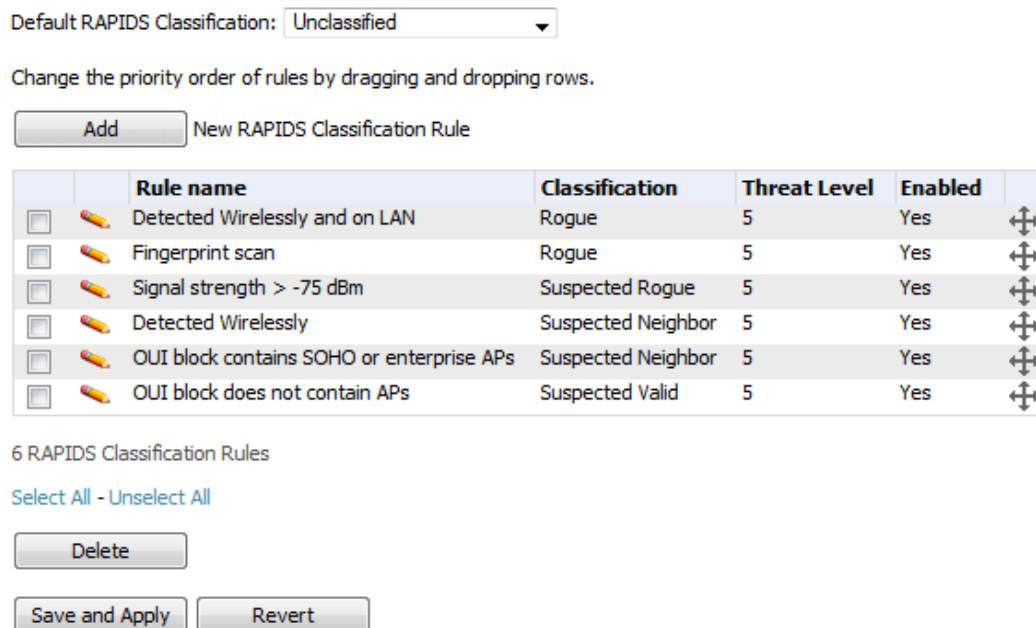


Table 100 defines the fields in the **RAPIDS > Rules** page.

**Table 100: RAPIDS > Rules Page**

Field	Description
Default Classification	This drop down specifies the classification that a rogue device receives when it does not match any rules.
Add New RAPIDS Classification Rule	Select this button to create a RAPIDS classification rule.
Rule Name	Displays the name of any rule that has been configured. Rule names should be descriptive and should convey the core purpose for which it was created.
Classification	Displays the classification that devices receive if they meeting the rule criteria.
Threat Level	Displays the numeric threat level for the rogue device that pertains to the rule. Refer to " <a href="#">Rogue Device Threat Level</a> " on page 207 for additional information.
Enabled	Displays the status of the rule, whether enabled or disabled.
Reorder Drag and Drop Icon 	Changes the sequence of rules in relation to each other. Select, then drag and drop, the icon for any rule to move it up or down in relation to other rules. A revised sequence of rules must be saved before rogues are classified in the revised sequence.  <b>NOTE:</b> The sequence of rules is very important for proper rogue classification. A device gets classified by the first rule to which it complies, even if it conforms to additional rules later in the sequence.

To create a new rule, select the **Add** button next to **New RAPIDS Classification Rule** to launch the **RAPIDS Classification Rule** page (see [Figure 120](#)).



Figure 120: Classification Rule Page

Fill in the settings described in Table 100 then select an option from the drop down menu.

Table 101 defines the drop down menu options that are at the bottom left of the RAPIDS Classification Rule dialog box (see Figure 120). After all rule settings are defined, select **Add**. The new rule automatically appears in the **RAPIDS > Rules** page.

Table 101: Properties Drop Down Menu

Option	Description
<b>Wireless Properties</b>	
Detected on WLAN	Classifies based on how the rogue is detected on the wireless LAN.
Detecting AP Count	Classifies based on the number of managed devices that can hear the rogue. Enter a numeric value and select <b>At Least</b> or <b>At Most</b> .
Encryption	Classifies based on the rogue matching a specified encryption method. Note that you can select <b>no encryption</b> with a rule that says <b>Encryption does not match WEP or better</b> .
Network type	Rogue is running on the selected network type, either <b>Ad-hoc</b> or <b>Infrastructure</b> .
Signal Strength	Rogue matches signal strength parameters. Specify a minimum and maximum value in dBm.
SSID	Classifies the rogue when it matches or does not match the specified string for the SSID or a specified regular expression. <b>NOTE:</b> For SSID matching functions, OV3600 processes only alpha-numeric characters and the asterisk wildcard character (*). OV3600 ignores all other non-alpha-numeric characters. For example, the string of <b>ethersphere-*</b> matches the SSID of <b>ethersphere-wpa2</b> but also the SSID of <b>ethersphere_this_is_an_example</b> (without any dashes).
Channel	Rogue matches a specified Channel number. Enter channel numbers in the valid format to match rogue devices.

**Table 101: Properties Drop Down Menu (Continued)**

Option	Description
Detected Client Count	Classifies based on the number of valid clients.
<b>Wireline Properties</b>	
Detected on LAN	Rogue is detected on the wired network. Select <b>Yes</b> or <b>No</b> .
Fingerprint Scan	Rogue matches fingerprint parameters.
IP Address	Rogue matches a specified IP address or subnet. Enter IP address or subnet information as explained by the fields.
OUI Score	Rogue matches manufacturer OUI criteria. You can specify minimum and maximum OUI score settings from two drop-down lists. Select <b>remove</b> to remove one or both criteria, as desired.
Operating System	Rogue matches OS criteria. Specify matching or non-matching OS criteria as prompted by the fields.
<b>Wireless/Wireline Properties</b>	
Manufacturer	Rogue matches the manufacturer information of the rogue device. Specify matching or non-matching manufacturer criteria.
MAC Address	Rogue matches the MAC address. Specify matching or non-matching address criteria, or use a wildcard (*) for partial matches.
<b>Alcatel-Lucent switch Properties</b>	
Controller Classification	Rogue matches the specified controller classification.
Confidence	Rogue falls within a specified minimum and maximum confidence level, ranging from 1 to 100.

After creating a new rule, click **Add** to return to the **RAPIDS > Rules** page. Click **Save and Apply** to have the new rule take effect.

### Deleting or Editing a Rule

To delete a rule from the RAPIDS rules list, go to the **RAPIDS > Rules** page. Select the check box next to the rule you want to delete, and click **Delete**. The rule is automatically deleted from **RAPIDS > Rules**.

To edit any existing rule, select its pencil icon to launch the **RAPIDS Classification Rule** page (see [Figure 120](#)). Edit or revise the fields as necessary, then click **Save**.

To change the sequence in which rules apply to any rogue device, drag and drop the rule to a new position in the rules sequence.

### Recommended RAPIDS Rules

- **If Any Device Has Your SSID, then Classify as Rogue**

The only devices broadcasting your corporate SSID should be devices that you are aware of and are managed by OV3600. Rogue devices often broadcast your official SSID in an attempt to get access to your users, or to trick your users into providing their authentication credentials. Devices with your SSID generally pose a severe threat. This rule helps to discover, flag, and emphasize such a device for prompt response on your part.

- **If Any Device Has Your SSID and is Not an Ad-Hoc Network Type, then Classify as Rogue**

This rule classifies a device as a rogue when the SSID for a given device is your SSID and is not an Ad-Hoc device. Windows XP automatically tries to create an Ad-hoc network if it can not find the SSID for which it is searching. This means that user's laptops on your network may appear as Ad-Hoc devices that are broadcasting your SSID. If this happens too frequently, you can restrict the rule to apply to non-ad-hoc devices.

- **If More Than Four APs Have Discovered a Device, then Classify as Rogue**

By default, OV3600 tries to use Signal Strength to determine if a device is on your premises. Hearing device count is another metric that can be used.

The important concept in this scenario is that legitimate neighboring devices are only heard by a few APs on the edge of your network. Devices that are heard by a large number of your APs are likely to be in the heart of your campus. This rule works best for scenarios in large campuses or that occupy an entire building. For additional rules that may help you in your specific network scenario, contact Alcatel-Lucent support.

## Using RAPIDS Rules with Additional OV3600 Functions

Rules that you configure on the **RAPIDS > Rules** page establish an important way of processing rogue devices on your network, and flagging them for attention as required. Such devices appear on the following pages in OV3600, with additional information:

- **RAPIDS > List**—Lists rogue devices as classified by rules.
- **RAPIDS > Rules**—Displays the rules that classify rogue devices.
- **RAPIDS > Overview**—Displays general rogue device count and statistical information.
- **System > Triggers**—Displays triggers that are currently configured, including any triggers that have been defined for rogue events.
- **Reports > Definitions**—Allows you to run New Rogue Devices Report with custom settings.
- **VisualRF**—Displays physical location information for rogue devices.

## Viewing Rogues on the RAPIDS > List Page

To view a rogue AP, select the **RAPIDS > List** tab and select a rogue device type from the **Minimum Classification** drop-down menu (see Figure 121). You can sort the table columns (up/down) by selecting the column head. Most columns can be filtered using the funnel icon ( ). The active links on this page launch additional pages for RAPIDS configuration or device processing.

The columns in the default view for the RAPIDS > List page is defined in OmniVista 3600 Air Manager and cannot be modified. However, you can create a new view for this page that returns custom information based on the filter parameters and data columns you selected when creating that new view. For more information on creating custom views, see "Creating Custom Filtered Views" on page 140.

**Figure 121: RAPIDS > List Page Illustration (partial view)**

Ack	RAPIDS Classification	Threat Level	Name	Classifying Rule	Controller Classification	WMS Classification AP
No	Suspected Rogue	5	Aruba-C0:1C:F0	Signal Strength > -80dbm	Unknown	-
No	Suspected Rogue	5	Unknown Lo-BB:96:25	Signal Strength > -80dbm	Suspected Neighbor	AP105-1
No	Suspected Rogue	5	D-Link-DB:28:CD	Signal Strength > -80dbm	Unknown	-
No	Suspected Rogue	5	Unknown Lo-37:F4:4E	Signal Strength > -80dbm	Suspected Neighbor	EBC-eth1
No	Suspected Rogue	5	Aruba-42:FC:20	Signal Strength > -80dbm	Unknown	-
No	Suspected Rogue	5	Unknown Lo-70:2C:D8	Signal Strength > -80dbm	Suspected Neighbor	1344-1-AL19 (1344-1-ai19.arubanetw
No	Suspected Rogue	5	Aruba-16:4F:04	Signal Strength > -80dbm	Unknown	-
No	Suspected Rogue	5	Cisco-Link-EC:C1:0C	Signal Strength > -80dbm	Unknown	-
No	Suspected Rogue	5	Silex Tech-45:BA:EC	Signal Strength > -80dbm	Suspected Neighbor	-
No	Suspected Rogue	5	Novatel Wv-17:5A:B5	Signal Strength > -80dbm	Suspected Neighbor	AP105-1

Table 102 details the column information displayed in Figure 121. For additional information about RAPIDS rules, refer to "Defining RAPIDS Rules" on page 206.

**Table 102:** *RAPIDS > List Column Definitions*

Column	Description
Ack	Displays whether or not the rogue device has been acknowledged. Devices can be acknowledged manually or you can configure RAPIDS so that manually classifying rogues will automatically acknowledges them. Additionally, devices can be acknowledged by using <b>Modify Devices</b> link at the top of the <b>RAPIDS &gt; List</b> page. Rogues should be acknowledged when the OV3600 user has investigated them and determined that they are not a threat (see "RAPIDS Setup" on page 203).
RAPIDS Classification	Displays the current RAPIDS classification. This classification is determined by the rules defined on the <b>RAPIDS &gt; Rules</b> page.
Threat Level	This field displays the numeric threat level of the device, in a range from 1 to 10. The definition of threat level is configurable, as described in "Rogue Device Threat Level" on page 207.  The threat level is also supported with Triggers (see "Monitoring and Supporting OV3600 with the System Pages" on page 218).
Name	Displays the alpha-numeric name of the rogue device, as known. By default, OV3600 assigns each rogue device a name derived from the OUI vendor and the final six digits of the MAC address.  Clicking the linked name will redirect you to the <b>RAPIDS &gt; Detail</b> page for that rogue device. Refer to "Overview of the RAPIDS > Detail Page" on page 214.
Classifying Rule	Displays the RAPIDS Rule that classified the rogue device (see "Viewing and Configuring RAPIDS Rules" on page 207).
Controller Classification	Displays the classification of the device based on the controller's hard-coded rules. <b>NOTE:</b> This column is hidden unless <b>Offload WMS Database</b> is enabled by at least one group on the <b>Groups &gt; Basic</b> page.
WMS Classification AP	The AP that provided the information used to classify the device. Click the linked device name to be redirected to the <b>APs/Devices &gt; Monitor</b> page for that AP.
WMS Classification Date	The date that WMS set the classification.
Confidence	The confidence level of the suspected rogue. How confidence is calculated varies based on the version of AOS-W. When an AOS-W switch sees evidence that a device might be on the wire, it will up the confidence level. If AOS-W is completely certain that it is on the wire, it gets classified as a rogue.
Wired	Displays whether the rogue device has been discovered on one of your wired networks by polling routers/switches, your SNMP/HTTP scans, or Alcatel-Lucent WIP information. This column displays <b>Yes</b> or is blank if wired information was not detected.
Detecting APs	Displays the number of AP devices that have wirelessly detected the rogue device. A designation of <b>heard</b> implies the device was heard over the air.

**Table 102: RAPIDS > List Column Definitions (Continued)**

Column	Description
Location	If the rogue has been placed in VisualRF, this column will display the name of the floor plan the rogue is on as a link to the VisualRF Floor Plan View page.
SSID	Displays the most recent SSID that was heard from the rogue device.
Signal	Displays the strongest signal strength detected for the rogue device.
RSSI	Displays Received Signal Strength Indication (RSSI) designation, a measure of the power present in a received radio signal.
Network Type	Displays the type of network in which the rogue is present, for example: <ul style="list-style-type: none"> <li>● <b>Ad-hoc</b>—This type of network usually indicates that the rogue is a laptop that attempts to create a network with neighboring laptops, and is less likely to be a threat.</li> <li>● <b>AP</b>—This type of network usually indicates an infrastructure network, for example. This may be more of a threat.</li> <li>● <b>Unknown</b>—The network type is not known.</li> </ul>
Encryption Type	Displays the encryption that is used by the device. Possible contents of this field include the following encryption types: <ul style="list-style-type: none"> <li>● <b>Open</b>—No encryption</li> <li>● <b>WEP</b>—Wired Equivalent Privacy</li> <li>● <b>WPA</b>—Wi-Fi Protected Access</li> </ul> <p>Generally, this field alone does not provide enough information to determine if a device is a rogue, but it is a useful attribute. If a rogue is not running any encryption method, you have a wider security hole than with an AP that is using encryption.</p>
Ch	Indicates the most recent RF channel on which the rogue was detected. <b>NOTE:</b> It can be detected on more than one channel if it contains more than one radio.
LAN MAC Address	The LAN MAC address of the rogue device.
LAN Vendor	Indicates the LAN vendor of the rogue device, when known.
Radio MAC Address	Displays the MAC address for the radio device, when known.
Radio Vendor	Indicates the radio vendor of the rogue device, when known.
OS	This field displays the OS of the device, as known. OS is the result of a running an OS port scan on a device. An IP addresses is required to run an OS scan. The OS reported here is based on the results of the scan.
Model	Displays the model of rogue device, if known. This is determined with a fingerprint scan, and this information may not always be available.
IP Address	Displays the IP address of the rogue device. The IP address data comes from fingerprint scans or ARP polling of routers and switches.

**Table 102: RAPIDS > List Column Definitions (Continued)**

Column	Description
Last Discovering AP	Displays the most recent AP to discover the rogue device. The device name in this column is taken from the device name in OV3600. Click the linked device name to be redirected to the <b>APs/Devices &gt; Monitor</b> page for that AP.
Switch/Router	Displays the switch or router where the device's LAN MAC address was last seen.
Port	Indicates the physical port of the switch or router where the rogue was last seen.
Notes	Indicates any notes about the rogue device that may have been added.
Last Seen	Indicates the date and time the rogue device was last seen.
Current Associations	The number of current rogue client associations to this device.
Max associations	The highest number of rogue client associations ever detected at one time.

## Overview of the RAPIDS > Detail Page

Select a device Name in the **RAPIDS > List** page to view the **Detail** page (Figure 122).

**Figure 122: RAPIDS > Detail Page Illustration**

Name: Aruba Netw-D1:C6:62      Model: -      First Discovered: 5/23/2013 2:39 PM  
 Acknowledge:  Yes  No      IP Address: -      First Discovery Method: Wireless AP scan  
 Controller Classification: Suspected Rogue      Confidence: 20  
 WMS Classification Override: Unclassified  
 SSID: instant      First Discovery Agent: 1341-AP06 (1341-ap06.arubanetworks.com)  
 RAPIDS Classification: Suspected Rogue      Channel: 6  
 Classification Rule: Signal Strength > -80dbm      WEP: No  
 RAPIDS Classification Override: - No Override -      WPA: No  
 Threat Level: 5      Network Type: AP  
 Threat Level Override: 1  
 Radio MAC Address: 6C:F3:7F:D1:C6:62      Current Associations: 0  
 Radio Vendor: Aruba Networks      Max Associations: 0  
 LAN MAC Address: -  
 LAN Vendor: -  
 OUI Score: -  
 Operating System: -  
 OS Details: -  
 Last Scan: -  
 Notes:

           [Refresh this page for updated results.](#)

Location: Sunnyvale > 1341 Orleans > Floor 1 (Floor 1)

[Enlarge](#) |

Last Placed: 5/28/2013 3:00 PM

**WMS Database Info**

BSSID	Interface Type	Desired Classification	Confidence	Classification on Device
6C:F3:7F:D1:C6:62	802.11g	Unclassified	100	Suspected Rogue


No Current Rogue Client Associations

**Discovery Events**

1-20 of 24 Discovery Events    Page 1 of 2 > > | [Reset filters](#)    [Choose columns](#)    [Choose columns for roles](#)    [Export CSV](#)

RSSI	Signal	Channel	SSID	WEP	WPA	BSSID	Network Type	IP Address	Time	Discovery Method	Discovery Agent
28	-84	6	instant	No	No	6C:F3:7F:D1:C6:62	AP	-	5/28/2013 9:50 AM	Wireless AP scan	1341-AP95
15	-97	6	instant	No	No	6C:F3:7F:D1:C6:62	AP	-	5/28/2013 9:38 AM	Wireless AP scan	spectrum monitor
7	-88	11	instant	No	No	6C:F3:7F:D1:C6:62	AP	-	5/28/2013 9:28 AM	Wireless AP scan	1341-AP01 (1341-ap01.arubana)

Important things to remember regarding the information in the device detail page are:

- Users with the role of **Admin** can see all rogue AP devices.
- Active rogue clients associated with this AP are listed in the **Current Rogue Client Associations** table. Selecting a linked MAC address will take you to the **Clients > Client Detail** page, where you can view fingerprinting and device details.
- Users with roles limited by folder can *see* a rogue AP if there is at least one discovering device that they can see.
- The discovery events displayed are from APs that you can see on the network. There may be additional discovery events that remain hidden to certain user roles.
- Each rogue device frequently has multiple discovery methods, all of which are listed.
- As you work through the rogue devices, use the **Name** and **Notes** fields to identify the AP and document its location.
- You can use the global filtering options on the **RAPIDS > Setup** page to filter rogue devices according to signal strength, ad-hoc status, and discovered by remote APs.
- VisualRF uses the heard signal information to calculate the physical location of the device.
- If the device is seen on the wire, RAPIDS reports the switch and port for easy isolation.
- If you find that the rogue belongs to a neighboring business, for example, you can override the classification to a neighbor and acknowledge the device. Otherwise, it is strongly recommended that you extract the device from your building and delete the rogue device from your system. If you delete a rogue, you will be notified the next time it is discovered.
- Most columns in the **Discovery Events** list table on this page can be filtered using the funnel icon ().

To update a rogue device:

1. Select the **Identify OS for Suspected Rogues** option if an IP address is available to obtain operating system information using an nmap scan. Note that if you are running wireline security software on your network, it may identify your OV3600 as a threat, which you can ignore.
2. Select the **Ignore** button if the rogue device is to be ignored. Ignored devices will not trigger alerts if they are rediscovered or reclassified.
3. Select the **Delete** button if the rogue device is to be removed from OV3600 processing.

## Viewing Ignored Rogue Devices

The **RAPIDS > List** page allows you to view ignored rogues—devices that have been removed from the rogue count displayed by OV3600. Such devices do not trigger alerts and do not display on lists of rogue devices. To display ignored rogue devices, select **View Ignored Rogues** at the bottom left of the page.

Once a classification that has rogue devices is chosen from the drop-down menu, a detailed table displays all known information.

## Using RAPIDS Workflow to Process Rogue Devices

One suggested workflow for using RAPIDS is as follows:

- Start from the **RAPIDS > List** page. Sort the devices on this page based on classification type. Begin with Rogue APs, working your way through the devices listed.
- Select **Modify Devices**, then select all devices that have an IP address and select **Identify OS**. OV3600 performs a port scan on the device and attempts to determine the operating system. (See "[Setting Up RAPIDS](#)" on page 203.) You should investigate devices running an embedded Linux OS installation. The OS scan can help identify false positives and isolate some devices that should receive the most attention.
- Find the port and switch at which the device is located and shut down the port or follow wiring to the device.
- To manage the rogue, remove it from the network and acknowledge the rogue record. If you want to allow it on the network, classify the device as valid and update with notes that describe it.



Not all rogue discovery methods will have all information required for resolution. For example, the switch/router information, port, or IP address are found only through switch or router polling. Furthermore, RSSI, signal, channel, SSID, WEP, or network type information only appear through wireless scanning. Such information can vary according to the device type that performs the scan.

## Score Override

On the **RAPIDS > Score Override** page you can change the OUI scores that are given to MAC addresses detected during scans of bridge forwarding tables on routers or switches. [Figure 123](#), [Figure 124](#), and [Table 103](#) illustrate and describe RAPIDS Score Override. Perform these steps to create a score override.

Once a new score is assigned, all devices with the specified MAC address prefix receive the new score.



Note that re-scoring a MAC Address Prefix poses a security risk. The block has received its score for a reason. Any devices that fall within this block receive the new score.

1. Navigate to the **RAPIDS > Score Override** page. This page lists all existing overrides if they have been created.

**Figure 123: RAPIDS > Score Override Page**

The screenshot shows the 'Score Override' page with an 'Add' button and a 'New Score Override' link. Below is a table listing 13 overrides. Each row includes a checkbox, a pencil icon, a MAC Address Prefix, a Vendor, and a Score with a description.

	MAC Address Prefix	Vendor	Score
<input type="checkbox"/>	00:02:2D	Agere Systems	2 - OUI: manufacturer block contains wireless clients, WiFi tags or scanners
<input type="checkbox"/>	00:02:6F	Senao International Co., Ltd.	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:03:03	JAMA Electronics Co., Ltd.	3 - OUI: manufacturer block contains enterprise access points
<input type="checkbox"/>	00:0D:54	3COM	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:10:40	INTERMEC CORPORATION	1 - Any device on the network not categorized with a higher score
<input type="checkbox"/>	00:13:72	Dell	1 - Any device on the network not categorized with a higher score
<input type="checkbox"/>	00:14:69	Cisco	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:15:2B	Cisco Systems	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:17:0E	Cisco	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:23:DF	Apple	1 - Any device on the network not categorized with a higher score
<input type="checkbox"/>	00:30:65	Apple Computer	3 - OUI: manufacturer block contains enterprise access points
<input type="checkbox"/>	00:30:89	Spectrapoint Wireless, LLC	4 - OUI: manufacturer block contains SOHO access points
<input type="checkbox"/>	00:C0:49	U.S. ROBOTICS, INC.	4 - OUI: manufacturer block contains SOHO access points

2. Click **Add** to create a new override or select the pencil icon next to an existing override to edit that override. The **Score Override** add or edit page appears ([Figure 124](#)).

**Figure 124: Add/Edit Score Override Page**

The screenshot shows the 'Score Override' edit form. It has two input fields: 'MAC Address Prefix' and 'Score'. The 'Score' field is open, showing a dropdown menu with five options: '4 - OUI: manufacturer block contains wireless clients, WiFi tags or scanners', '4 - OUI: manufacturer block contains SOHO access points', '3 - OUI: manufacturer block contains enterprise access points', '2 - OUI: manufacturer block contains wireless clients, WiFi tags or scanners', and '1 - Any device on the network not categorized with a higher score'.



**Table 103:** *RAPIDS > Add/Edit Score Override Page Fields*

Field	Description
MAC Address Prefix	Use this field to define the OUI prefix to be re-scored.
Score	Use this field to set the score that a device, with the specified MAC address prefix, will receive.

3. Enter in the six-digit MAC prefix for which to define a score, and select the desired score. Once the new score has been saved, all detected devices with that prefix receive the new score.
4. Click **Add** to create the new override, or click **Save** to retain changes to an existing override. The new or revised override appears on the **RAPIDS > Score Override** page.
5. To remove any override, select that override in the check box, and then click the **Delete** button.

## Using the Audit Log

The Audit Log is a record of any changes made to the RAPIDS rules, setup page, and manual changes to specific rogues. This allows you to see how something is changes, when it changed, and who made the alteration. The Audit Log can be found at **RAPIDS > Audit Log**. For more information, see [Figure 125](#).

**Figure 125:** *Audit Log Page Illustration*

RAPIDS Changes		
Time	User	Event
Fri May 24 00:00:10 2013	gamujuri	seas_config (id 1): Delete Rogues not detected for: '60' => '14'
Thu May 23 23:57:13 2013	gamujuri	seas_config (id 1): Delete Rogues not detected for: '14' => '60'
Tue Apr 30 12:43:17 2013	gpifer	rogue_ap (id 347655): Ack: '0' => '1'
Mon Apr 8 12:23:41 2013	mhattelman	rogue_ap (id 422304): Aruba-61:12:59: 'Identify Operating System'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 5): importance: '12' => '13'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 56): importance: '11' => '12'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 103): importance: '10' => '11'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 1): importance: '6' => '8'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 2): importance: '8' => '10'
Wed Mar 27 10:49:14 2013	jfermyc	rapids_classification_rule (id 7): importance: '4' => '5'

## Additional Resources

The following OV3600 tools support RAPIDS:

- **System Triggers and Alerts**—Triggers and Alerts that are associated with rogue devices follow the classification-based system described in this chapter. For additional information about triggers that support rogue device detection, see to "Viewing, Delivering, and Responding to Triggers and Alerts" on page 232.
- **Reports**—The **New Rogue Devices Report** displays summary and detail information about all rogues first discovered in a given time period. For more information, see "Using the New Rogue Devices Report" on page 312.

For additional security-related features and functions, see the following topics in this guide.

- "Configuring Group Security Settings" on page 94
- "Configuring Cisco WLC Security Parameters and Functions" on page 112
- "Configuring Group SSIDs and VLANs" on page 98
- "Monitoring and Supporting OV3600 with the System Pages" on page 218

Daily WLAN administration often entails network monitoring, supporting WLAN and OV3600 users, and monitoring OV3600 system operations.

This chapter contains the following administration procedures:

- "Monitoring and Supporting OV3600 with the System Pages" on page 218
- "Monitoring and Supporting WLAN Clients" on page 241
- "Evaluating and Diagnosing User Status and Issues" on page 253
- "Managing Mobile Devices with SOTI MobiControl and OV3600 " on page 258
- "Monitoring and Supporting OV3600 with the Home Pages" on page 259
- "Supporting OV3600 Servers with the Master Console" on page 275
- "Backing Up OV3600" on page 235
- "Using OV3600 Failover for Backup" on page 279
- "Logging out of OV3600" on page 280

## Monitoring and Supporting OV3600 with the System Pages

The **System** pages provide a centralized location for system-wide OV3600 data and settings. Apart from **Triggers**, **Alerts**, and **Backups** pages that are described elsewhere in this chapter, the remaining pages of the **System** section are as follows:

**Table 104:** *System pages*

System Page	Description	Refer to
Status	Displays status of all OV3600 services and links to their log pages.	"Using the System > Status Page" on page 219
Syslog & Traps	Displays all syslog messages and SNMP traps that OV3600 receives.	"Viewing Device Events in System > Syslog & Traps" on page 221
Event Log	This useful debugging tool keeps a list of recent OV3600 events, including APs coming up and down, services restarting, and most OV3600-related errors as well as the user that initiated the action.	"Using the System > Event Log Page" on page 222
Triggers	View and edit triggering conditions that cause OV3600 to send out alert notifications.	"Viewing, Delivering, and Responding to Triggers and Alerts" on page 232
Alerts	View or acknowledge alerts sent out by the system and use the Triggering Agent links to drill down to the device that triggered the alert.	"Viewing Alerts" on page 233
Backups	View the backup files that are run nightly.	"Backing Up OV3600" on page 235

**Table 104: System pages (Continued)**

System Page	Description	Refer to
Configuration Change Jobs	Manages configuration changes in OV3600.	"Using the System > Configuration Change Jobs Page" on page 236
Firmware Upgrade Jobs	Displays information about current and scheduled firmware upgrades.	"Using the System > Firmware Upgrade Jobs Page" on page 237
Performance	Displays basic OV3600 hardware information as well as resource usage over time.	"Using the System > Performance Page" on page 238

## Using the System > Status Page

The **System > Status** page displays the status of all of OV3600 services. Services will either be **OK**, **Disabled**, or **Down**. If any service is **Down** (displayed in red) please contact Alcatel-Lucent support. The **Reboot System** button provides a graceful way to power cycle your OV3600 remotely when it is needed. The **Restart OV3600** button will restart the OV3600 services without power cycling the server or reloading the OS. [Figure 126](#) illustrates this page.

Figure 126: System > Status Page Illustration

Refresh

Diagnostic report file for sending to customer support: [diagnostics.tar.gz](#)  
 VisualRF diagnostics report file: [VisualRFdiag.zip](#)

Service ▲	Status	Log
Airbus Message Server	OK	/var/log/airbus.log
Alert Cache Builder	OK	/var/log/alerts_stats_cacher
Alert Monitor	OK	/var/log/alertd
AMP News Fetcher	OK	/var/log/awms_news_fetcher
Aruba Instant Checker	OK	/var/log/swarm_checker
Aruba Instant Handler	OK	/var/log/swarm_handler
Asynchronous Work Scheduler	OK	/var/log/tuple_scheduler
At	OK	/var/log/at
Cisco ACS	OK	/var/log/acs
Cisco WLSE Poller	Disabled	/var/log/wlse
Client Monitor Worker	OK	/var/log/async_logger_client
Configuration Monitor	OK	/var/log/config_verifier
Configuration Server	OK	/var/log/config_pusher
Controller XML Query Agent	OK	/var/log/exec_ui_query
Cron	OK	/var/log/amp_cron
Dashboard Widget Runner	OK	/var/log/dashboard_widget_runner
Database	OK	/var/log/pgsql
Device Event Collector	OK	/var/log/device_event
Device Event Trigger Evaluator	OK	/var/log/device_event_trigger
Device List Cacher	OK	/var/log/ap_list_cacher
Device Monitor	OK	/var/log/ap_watcher
Device Monitor (Poll Now)	OK	/var/log/ap_watcher_poll_now
Discovery Event Existing-AP Cacher	OK	/var/log/discovery_event_cacher
DNS Fetcher	OK	/var/log/dns_fetcher
DNS Refresh	OK	/var/log/dns_refresh
Failover Monitor	Disabled	/var/log/amp_watcher
Firmware Server	OK	/var/log/firmware_enforcer
FTP Server	Disabled	/var/log/xferlog
HTTP/SNMP Scanner	OK	/var/log/ap_scanner
IGC	Disabled	/var/log/igc/igc.log
Image Server Info Collector	OK	/var/log/image_server_info_collector
IPv4 Link-Local Address Trigger Evaluator	OK	/var/log/self_assigned_ip_trigger
LWAPP Managed Certificate Builder	OK	/var/log/lwapp_rebuild
Master Console	Disabled	/var/log/mc_stat_collector
MC Report Runner	OK	/var/log/mc_report_runner
Mesh Discovery Enabler	OK	/var/log/mesh_discovery_enabler
Mobile Device Manager Poller	OK	/var/log/mdm_poller
NTP Client	Disabled	-
PAPI Message Processor	OK	/var/log/papi
PAPI Message Router	OK	/var/log/msgHandler.log
Parallel HTTP Fetcher	Disabled	/var/log/http_fetcher
Partial Configuration Update Server	OK	/var/log/partial_config_pusher
Performance Monitor	OK	/var/log/perf_collector
Port Grabber	OK	/var/log/port_grabber

The link [diagnostics.tar.gz](#) contains reports and logs that are helpful to Alcatel-Lucent support in troubleshooting and solving problems. Your Alcatel-Lucent support representative may ask for this file along with other logs that are linked on this page.


Similarly, the [VisualRFdiag.zip](#) link contains VisualRF diagnostic information that might be requested by Alcatel-Lucent support.

A summary table lists logs that appear on the **System > Status** page. These are used to diagnose OV3600 problems. Additional logs are available via SSH access in the /var/log and /tmp directories; Alcatel-Lucent support engineers may request these logs for help in troubleshooting problems and will provide detailed instructions on how to retrieve them. [Table 105](#) describes some of the most important logs:

**Table 105: A Sample of Important Status Logs**

Log	Description
pgsql	Logs database activity.
error_log	Reports problems with the web server. Also linked from the internal server error page that displays on the web page; please send this log to Alcatel-Lucent support whenever reporting an internal server error.
maillog	Applies in cases where emailed reports or alerts do not arrive at the intended recipient's address.
radius	Displays error messages associated with RADIUS accounting.
async_logger	Tracks many device monitoring processes, including user-AP association.
async_logger_client	Logs device configuration checks.
config_pusher	Logs errors in pushing configuration to devices.
visualrf.log	Details errors and messages associated with the VisualIRF application.

## Viewing Device Events in System > Syslog & Traps

Admins can use the **System > Syslog & Traps** page to review all syslog messages and SNMP traps that OV3600 receives from the trigger type **Device Event**. These device events are listed by time, type, source device, AP, severity, facility, category, and message. Most columns can be filtered using the funnel icon (  ), and messages can be filtered by substring using the **Search** field, as seen in [Figure 127](#).

You can change the historical data retention from the **Device Events (Syslog, Traps)** field in **OV3600 Setup > General**.

**Figure 127: System > Syslog & Traps Page Illustration**

**Device Events**

1-5 ▼ of 984,850 Device Events Page 1 ▼ of 196,970 > > | Reset filters Choose columns Choose columns for roles Export CSV

Time	Type ▼	Source Device ▼	AP ▼	Client	Severity ▼	Facility ▼	Category ▲ ▼	Message
5/29/2013 8:41 AM	Syslog	alpo.arubanetworks.com	-	-	Warning	local1 (17)	AAA	May 29 07:4 Authenticat 10.11.2.22 p HTTPS
5/29/2013 6:30 AM	Syslog	pioneer.arubanetworks.com	-	-	Warning	local1 (17)	AAA	May 29 06:3 <pioneer.ar kazi, Logge 22 connecti
5/29/2013 6:30 AM	Syslog	pioneer.arubanetworks.com	-	-	Debug	local1 (17)	AAA	May 29 06:3 <pioneer.ar
5/29/2013 4:27 AM	Syslog	alpo.arubanetworks.com	-	-	Warning	local1 (17)	AAA	May 29 03:2 Authenticat Connecting
5/29/2013 4:27 AM	Syslog	alpo.arubanetworks.com	-	-	Warning	local1 (17)	AAA	May 29 03:2 Authenticat Connecting

1-5 ▼ of 984,850 Device Events Page 1 ▼ of 196,970 > > | Reset filters

Table 106 describes the columns and the information provided in each:

**Table 106:** System > Syslog & Traps Columns and Descriptions

Column	Description
Time	The timestamp of the device event.
Type	Either Syslog or SNMP Trap.
Source Device	The name of the device that sent the message. Will be a link if you have visibility to the device. Can be empty if OV3600 could not correlate the source IP.
AP	Contains a link to the <b>APs/Devices &gt; Monitor</b> page for a device other than the source device that was correlated from some data contained in the message (by LAN MAC, BSSID, or IP Address). Can be blank, and will only be a link if you have visibility to the device.
Client	Displays a user's MAC address if one was found in the message. Can be blank, and will be a link if you have visibility to the user's AP.
Severity	The severity level of the event: Emergency, Alert, Critical, Bug, Error, Warning, Notice, or Info
Facility	Part of the syslog spec - sort of the logical source of the message. From controllers, will always be one of local0-local7 (you can configure on the controller when sending syslog messages to a particular receiver which facility you want to use in the messages).
Category	If SNMP Trap: Hardware, IDS, Client Security, AP Security, AP Status, Software, or Rogue Detection. For Syslog messages, a category is based on the process name on the controller that sent the syslog message. The categorization for traps and syslog messages only works for events from an Alcatel-Lucent switch.
Message	The raw trap message including the AP MAC Address, time sent, and other information. For syslogs, OV3600 does not display the numbers at the beginning of the message that indicate the severity and facility. For traps, OV3600 will attempt to translate them to human-readable format when possible. OV3600 will not receive processed SNMP traps into the Device Event framework if the OV3600 doesn't have MIB file to translate the trap.  Use the Search field at the top of the column to filter the messages.

Syslog messages also appear in the **APs/Devices > Monitor** page for switches and in **Clients > Client Detail** pages under the **Association History** section.

## Using the System > Event Log Page

The **System > Event Log** page is a very useful debugging tool containing a list of recent OV3600 events including APs coming up and down, services restarting, and most OV3600-related errors as well as the user that initiated the action. [Figure 128](#) illustrates this page, and [Table 107](#) describes the page components.

**Figure 128:** System > Event Log Page Illustration

Refresh

Time	User	Type	Event	Device ID	Folder	Group
Tue May 28 13:31:35 2013	michaelw	System	Internal Error: Couldn't determine class for type 'c'			
Tue May 28 13:31:33 2013	System	System	Restarting service IGC			
Tue May 28 13:31:18 2013	System	System	Restarting service IGC			
Tue May 28 13:31:04 2013	System	System	Restarting service IGC			
Tue May 28 13:30:49 2013	System	System	Restarting service IGC			
Tue May 28 13:30:34 2013	System	System	Restarting service IGC			
Tue May 28 13:30:28 2013	System	Device	Aruba AirMesh MSR2000PoE AP-1341 Setting AP to attached-state for neighbor discovery	18069	Top > AirMesh	AirMesh PoC
Tue May 28 13:30:19 2013	System	System	Restarting service IGC			
Tue May 28 13:30:03 2013	System	System	Restarting service IGC			
Tue May 28 13:29:48 2013	System	System	Restarting service IGC			
Tue May 28 13:29:33 2013	System	System	Restarting service IGC			

**Table 107: Event Log Fields**

Column	Description
Time	Date and time of the event.
User	The OV3600 user that triggered the event. When OV3600 itself is responsible, <b>System</b> is displayed.
Type	Displays the Type of event recorded, which is one of four types, as follows: <ul style="list-style-type: none"><li>● <b>Device</b>—An event localized to one specific device.</li><li>● <b>Group</b>—A group-wide event.</li><li>● <b>System</b>—A system-wide event.</li><li>● <b>NMS</b>—An event triggered by an NMS server. (See "<a href="#">Integrating OV3600 with an Existing Network Management Solution (NMS)</a>" on page 73 for more info.)</li><li>● <b>Alert</b>—If a trigger is configured to report to the log, an <b>Alert</b> type event will be logged here.</li></ul>
Event	The event that OV3600 observed. This information can be useful for debugging, user tracking, and change tracking.
Device ID	If the event is a Device event, then this column shows the device ID.
Folder	If the event is a Device event, this column shows the folder where the device resides.
Group	If the event is a Device event, this column shows the Group in which the device resides.

## Triggers and Alerts

OV3600 monitors key aspects of wireless LAN performance. When certain conditions or parameters arise that are outside of normal bounds, OV3600 generates (or triggers) alerts that enable you to address problems, often before users have a chance to report them.

All triggers include an option to configure a Severity Level. This level is tied to the Severe Alert Threshold, which is configured on the **Home > User Info** page. This threshold value specifies whether triggers categorized as Critical, Major, Minor, Warning, or Normal will result in a Severe Alert. If a trigger is defined to result in a Critical alert, and if the Severe Alert Threshold is defined as Major, then the list of Severe Alerts will include all Major and Critical alerts. Similarly, if this value is set to Normal, which is the lowest threshold, then the list of Severe Alerts will include all alerts.

Refer to "[Creating New Triggers](#)" on page 223 to configure triggers.

### Creating New Triggers

Perform the following steps to create and configure one or more new triggers. These steps define settings that are required for any type of trigger.

1. To create a new trigger, click **Add New Trigger** from the **System > Triggers** page. The page that appears is illustrated in [Figure 129](#).

Figure 129: Add New Trigger Page Illustration

**Trigger**

Type: Device Down ▼

Severity: Normal ▼

Limit by number of down events:  Yes  No

Send Alerts for Thin APs when Controller is Down:  Yes  No

Send Alerts when Upstream Device is Down:  Yes  No

Send Alerts on Reboot:  
Include reboots detected by uptime reset or reboot count increase  Yes  No

**Conditions**

Matching conditions:  All  Any

Available Conditions: Device Type, Minutes Down Threshold

New Trigger Condition

**Trigger Restrictions**

Folder: Top ▼

Include Subfolders:  Yes  No

Group: - All Groups - ▼

**Alert Notifications**

Notes:

Additional Notification Options:  Email  NMS

Logged Alert Visibility: By Role ▼

Suppress Until Acknowledged:  Yes  No


2. In the **Trigger** section, choose the desired trigger **Type** and **Severity**. [Figure 130](#) illustrates some of the supported trigger types.



The alert summary information at the top of the OV3600 screen can be configured to separately display severe alerts. Refer to "[Configuring Your Own User Information with the Home > User Info Page](#)" on page 272 for more details.



**Figure 130:** System > Triggers > Add Trigger Type Drop Down Menu

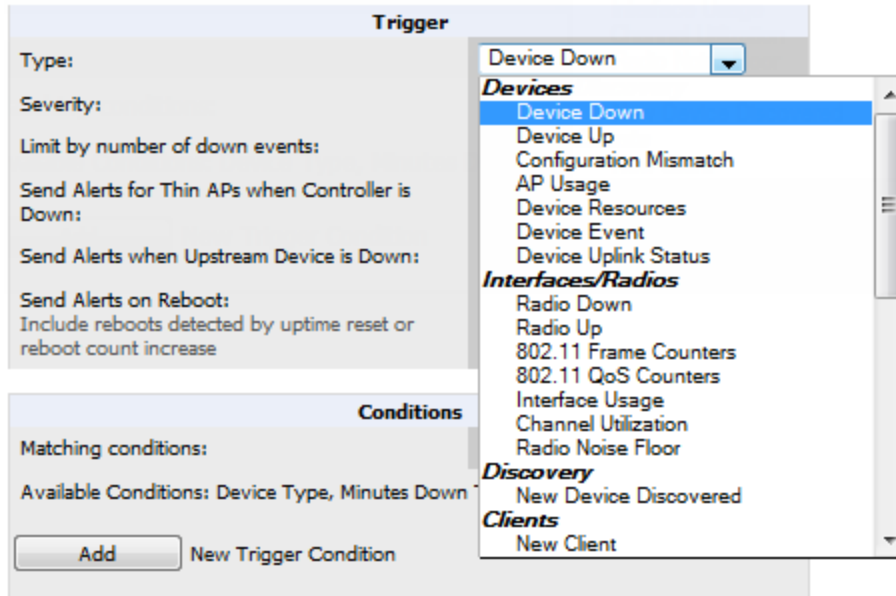

The **Add Trigger** page changes depending on the trigger type that you select. In many cases, you must configure at least one **Condition** setting. Conditions, settings and default values vary according to trigger type. Triggers with conditions can be configured to fire if any criteria match as well as if all criteria match.

- Some trigger types share common settings, such as **Duration** (which can be expressed in hours, minutes, seconds, or a combination of these) and **Severity** (from Normal to Critical).
  - After you select **Save**, the trigger appears on your next viewing of the **System > Triggers** page with all other active triggers.
  - You can edit or delete any trigger as desired from the **System > Triggers** page.
    - To edit an existing trigger, select the **pencil** icon next to the respective trigger and edit settings in the **Trigger Detail** page described in .
    - To delete a trigger, check the box next to the trigger to remove, and select **Delete**.
3. Configure the **Trigger Restrictions** and **Alert Notifications**. This configuration is consistent regardless of the trigger type to be defined.
- a. The **Trigger Restrictions** settings establishes how widely or how narrowly the trigger applies. Define the folder, subfolder, and Group covered by this trigger. [Table 108](#) describes the options for trigger restrictions.

**Table 108:** System > Trigger Restrictions fields and default values

Notification Option	Description
Folder	Sets the trigger to apply only to APs/Devices in the specified folder or subfolders depending on the <b>Include Subfolders</b> option. <b>NOTE:</b> If the trigger is restricted by folder and group, it only applies to the intersection of the two—it only applies to APs in the group and in the folder.
Include Subfolders	Sets the trigger to apply to all devices in the specified folder and all of the devices in folders under the specified folder.

**Table 108:** *System > Trigger Restrictions fields and default values (Continued)*

Notification Option	Description
Group	Sets the trigger to apply only to APs/Devices in the specified group. <b>NOTE:</b> If the trigger is restricted by folder and group, it only applies to the intersection of the two—it only applies to APs in the group and in the folder.

- b. The **Alert Notifications** settings section allows you to enter a note that will be included with the alert. This note will appear with the alert on the **System > Alerts** page. The **Alert Notification** section also allows you to specify whether the alert will be distributed via email, to a network management system (NMS), or to both.
- If you select **Email**, you are prompted to set the sender and recipient email addresses.
  - If you select **NMS**, you are prompted to choose one or more of the pre-defined trap destinations, which are configured on the **OV3600 Setup >NMS** page. Note that this option is only available if an NMS server has been added to OV3600.
  - Define the **Logged Alert Visibility**, in which you can choose how this trigger is distributed. The trigger can distribute according to how is it generated (triggering agent), or by the role with which it is associated.
  - The **Suppress Until Acknowledged** setting defines whether the trigger requires manual and administrative acknowledgment to gain visibility. If **No**, a new alert will be created every time the trigger criteria are met. If **Yes**, an alert will only be received the first time the criteria is met. A new alert for the device is not created until the initial one is acknowledged.

Repeat this procedure for as many triggers and conditions as desired.

Complete the creation of your trigger type using one of the following procedures for each trigger:

- ["Setting Triggers for Devices" on page 226](#)
- ["Setting Triggers for Interfaces and Radios" on page 228](#)
- ["Setting Triggers for Discovery" on page 229](#)
- ["Setting Triggers for Clients" on page 229](#)
- ["Setting Triggers for RADIUS Authentication Issues" on page 231](#)
- ["Setting Triggers for IDS Events" on page 231](#)
- ["Setting Triggers for OV3600 Health" on page 232](#)

### Setting Triggers for Devices

Perform the following steps to configure device-related triggers.

1. Choose a device type from the **Devices** listed in the **Type** drop-down menu. See [Figure 130](#) in ["Creating New Triggers" on page 223](#). [Table 109](#) itemizes and describes device trigger options and condition settings.

**Table 109: Device Trigger types**

Trigger Option	Description
Device Down	<p>This is the default type whenever configuring a new trigger. This type of trigger activates when an authorized, monitored AP has failed to respond to SNMP queries from OV3600.</p> <p>To set the conditions for this trigger type, select <b>Add</b> in the <b>Conditions</b> section. Complete the conditions with the <b>Option</b>, <b>Condition</b>, and <b>Value</b> drop-down menus. The conditions establish the device type. Multiple conditions can apply to this type of trigger. The Device Down trigger can be configured to send alerts for thin APs when the controller is down; this behavior is turned off by default.</p> <p>Triggers with the <b>Minutes Down</b> condition enabled will compare the amount of time an AP has been down to the value (in minutes) set for the condition.</p> <p>When the <b>Limit by number of down events</b> is enabled, you can set the number of down events that activate the trigger, as well as the duration of the time window to be measured. OV3600 will then count the number of times that the device has gone from Up to Down in the specified span of time and display this in the Device Down alert.</p>
Device Up	<p>This trigger type activates when an authorized, previously down AP is now responding to SNMP queries. To set the conditions for this trigger type, select <b>Add</b> in the <b>Conditions</b> section.</p>
Configuration Mismatch	<p>This trigger type activates when the actual configuration on the AP does not match the defined <b>Group</b> configuration policy.</p> <p>To set the conditions for this trigger type, select <b>Add</b> in the <b>Conditions</b> section.</p>
AP Usage	<p>Activates when the total bandwidth through the device has exceeded a predefined threshold for more than a specified period (such as more than 1500 Kbps for more than 120 seconds). You can also select bandwidth direction and page/radio. Selecting this type displays the following new fields in the <b>Type</b> section. Define these settings.</p> <ul style="list-style-type: none"> <li>● <b>Alert if AP Usage &gt;= (Kbps)</b>—This threshold establishes a device-specific bandwidth policy, not a bandwidth policy on the network as a whole.</li> <li>● <b>Usage Direction</b>—Choose <b>In</b>, <b>Out</b>, or <b>Combined</b>. This bandwidth is monitored on the device itself, not on the network as a whole.</li> <li>● <b>Severity</b> - Specify the severity type for the trigger.</li> <li>● <b>Duration</b> - Specify the time frame for the trigger.</li> </ul>
Device Resources	<p>This type of trigger indicates that the CPU or memory utilization for a device (including router or switch) has exceeded a defined percentage for a specified period of time.</p>

**Table 109: Device Trigger types (Continued)**

Trigger Option	Description
Device Event	<p>This trigger is used for alerting based on SNMP traps and syslog messages, which are displayed in <b>System &gt; Syslogs &amp; Traps</b>, <b>APs/Devices &gt; Monitor</b> for affected devices, and in <b>Clients &gt; Client Detail</b>. The conditions supported are:</p> <ul style="list-style-type: none"> <li>● <b>Event Contents</b> (case insensitive substring matches on message content)</li> <li>● <b>Event Type</b> (syslog or trap)</li> <li>● <b>Syslog Severity</b>: Emergency, Alert, Critical, Bug, Error, Warning, Notice, or Info</li> <li>● Syslog Category</li> <li>● <b>SNMP Trap Category</b>: Hardware, IDS, Client Security, AP Security, AP Status, Software, or Rogue Detection</li> <li>● <b>Syslog Category</b></li> </ul> <p><b>NOTE:</b> During the process of upgrading or installation for non-Master Console/Failover OV3600s, OV3600 creates two default trigger definitions for Device Events:</p> <ul style="list-style-type: none"> <li>● SNMP Trap Category of <b>Hardware</b> or <b>Software</b></li> <li>● Event Type is <b>Syslog</b> and <b>Syslog Severity</b> <math>\geq</math> <b>Critical</b></li> </ul>
Device Uplink Status	<p>This trigger deploys whenever a RAP's active uplink changes from Ethernet to USB or vice versa. The corresponding events are captured in a RAP's <b>APs/Devices &gt; Monitor</b> page.</p>

2. Repeat this procedure for as many triggers and conditions as desired. Refer to the start of "[Creating New Triggers](#)" on [page 223](#) to create a new trigger.

### Setting Triggers for Interfaces and Radios

To configure radio- and interface-related triggers, choose a trigger type from the **Interfaces/ Radios** category, listed in the **Type** drop-down menu. [Table 110](#) itemizes and describes the radio trigger types and condition settings.

**Table 110: Interfaces/Radio-Related Trigger Types**

Radio Trigger Options	Description
Radio Down	<p>Indicates that a device's radio is down on the network. Once you choose this trigger type, select <b>Add New Trigger Condition</b> to create at least one condition. <b>This type</b> requires that a radio capability be set as a condition. The <b>Value</b> drop-down menu supports several condition options.</p>
Radio Up	<p>Indicates that a device's radio is up on the network. Once you choose this trigger type, select <b>Add New Trigger Condition</b> to create at least one condition. <b>This type</b> requires that a radio capability be set as a condition. The <b>Value</b> drop-down menu supports several condition options.</p>
802.11 Frame Counters	<p>Enables monitoring of traffic levels. There are multiple rate-related parameters for which you define conditions including ACK Failures, Retry Rate, and Rx Fragment Rate. See the <b>Option</b> drop-down menu in the <b>Conditions</b> section of the trigger page for a complete list of parameters. Select <b>Add New Trigger Condition</b> to access these settings. Define at least one condition for this trigger type.</p>
802.11 QoS Counters	<p>Enables monitoring of Quality of Service (QoS) parameters on the network, according to traffic type. The rate of different parameters includes ACK Failures, Duplicated Frames and Transmitted Fragments. See the drop-down field menu in the conditions section of the trigger page for a complete list of parameters. Select <b>Add New Trigger Condition</b> to access these settings. Define at least one condition for this trigger type.</p>

**Table 110: Interfaces/Radio-Related Trigger Types (Continued)**

Radio Trigger Options	Description
Interface Usage	Interface labels defined on the trigger page will be used to set up triggers on one or more interfaces and/or radios. Available conditions are <b>Device Type</b> , <b>Interface Description</b> , <b>Interface Label</b> , <b>Interface Mode</b> , <b>Interface Speed In (Mbps)</b> , <b>Interface Speed Out (Mbps)</b> , <b>Interface Type</b> , and <b>Radio Type</b> .
Channel Utilization	Indicates that channel utilization has crossed particular thresholds. Available conditions are <b>Interference (%)</b> , <b>Radio Type</b> , <b>Time Busy (%)</b> , <b>Time Receiving (%)</b> , and <b>Time Transmitting (%)</b> .
Radio Noise Floor	Indicates that the Noise Floor dBm has exceeded a certain value for aspecified period of time.

### Setting Triggers for Discovery

Perform the following steps to configure triggers related to device discovery.

1. Choose a trigger type from the **Discovery** category, listed in the **Type** drop-down menu. See [Figure 130](#) in "Creating New Triggers" on page 223.

**Table 111: Discovery Trigger Types and Condition Settings**

Discovery Trigger Options	Description
New Device Discovered	This trigger type flags the discovery of a new AP, router, or switch connected to the network (an device that OV3600 can monitor and configure). Once you choose this trigger type, select <b>Add New Trigger Condition</b> to specify a <b>Device Type</b> (Access Point, Controller, Remote AP, or Router/Switch)

2. Repeat this procedure for as many triggers and conditions as desired. Refer to the start of "Creating New Triggers" on page 223 to create a new trigger.

### Setting Triggers for Clients

Perform the following steps to configure user-related triggers.

1. Choose a trigger type from the **Clients** category, listed in the **Type** drop-down menu. See [Figure 130](#) in "Creating New Triggers" on page 223. [Table 112](#) itemizes and describes the Client-related trigger types, and condition settings for each discovery trigger type.

**Table 112: Client Trigger Types and Condition Settings**

Client Trigger Option	Description
New Client	This trigger type indicates a new user has associated to a device within a defined set of groups or folders. A Filter on connection mode field appears to allow you to filter by <b>Wired</b> or <b>Wireless</b> clients. Note that the <b>New Client</b> trigger type does not require the configuration of any condition settings, so the <b>Condition</b> section disappears.

**Table 112: Client Trigger Types and Condition Settings (Continued)**

Client Trigger Option	Description
Connected Clients	This trigger type indicates a device (based on an input list of MAC addresses) has associated to the wireless network. It is required to define one or more MAC addresses with the field that appears.
Client Count	Activates when a device, Radio/Interface, or BSSID reaches a user-count threshold for more than a specified period (such as more than 10 users associated for more than 60 seconds).
Client Usage	This trigger type indicates that the sustained rate of bandwidth used by an individual user has exceeded a predefined threshold for more than a specified period, in seconds (such as more than 1500 Kbps for more than 120 seconds). Once you choose this trigger type, select <b>Add New Trigger Condition</b> to specify the bandwidth characteristics that triggers an alert. You can apply multiple conditions to this type of trigger. The <b>Value</b> field requires that you input a numerical figure for kilobits per second (Kbps).
New VPN User	This trigger type indicates a new VPN user has associated to a device within a defined set of groups or folders. Note that the <b>New VPN User</b> trigger type does not require the configuration of any condition settings, so the <b>Condition</b> section disappears.
Connected VPN Users	This trigger type indicates a VPN device (based on an input list of MAC addresses) has associated to the VPN network. It is required to define one or more VPN usernames with the field that appears.
VPN Session Usage	This trigger type indicates that the sustained rate of bandwidth used in an individual VPN session has exceeded a predefined threshold for more than a specified period, in seconds (such as more than 1500 Kbps for more than 120 seconds). Once you choose this trigger type, select <b>Add New Trigger Condition</b> to specify the bandwidth characteristics that triggers an alert. You can apply multiple conditions to this type of trigger. The <b>Value</b> field requires that you input a numerical figure for kilobits per second (Kbps).
Inactive Tag	This trigger type flags events in which an RFID tag has not been reported back to OV3600 by a controller for more than a certain number of hours. This trigger can be used to help identify inventory that might be lost or stolen. Set the time duration for this trigger type if not already completed.
IPv4 Link-Local Addresses	When enabled, this trigger checks whether the total count of self-assigned IP addresses has crossed a set threshold for clients within a selected folder or group. The alert deployed by this trigger includes a link to search for IP addresses containing 169.254.x.x.
Client Goodput	This trigger type indicates that the goodput for an individual client has exceeded a predefined threshold. Available conditions are Usage Kbps (combined), Usage Kbps (in), and Usage Kbps (out).
Client Speed	This trigger type indicates that the speed for an individual client has exceeded a predefined threshold. The available condition for this trigger is Speed Mbps.

- Repeat this procedure for as many triggers and conditions as desired. Refer to the start of ["Creating New Triggers"](#) on [page 223](#) to create a new trigger.

## Setting Triggers for RADIUS Authentication Issues

Perform the following steps to configure RADIUS-related triggers.

1. Choose a trigger type from the **RADIUS Authentication Issues** list in the drop-down **Type** menu. [Table 113](#) itemizes and describes the condition settings for each **RADIUS Authentication** trigger type.

**Table 113:** *RADIUS Authentication Trigger Types and Condition Settings*

Trigger Options	Description
Client RADIUS Authentication Issues	This trigger type sets the threshold for the maximum number of failures before an alert is issued for a user. Select <b>Add New Trigger Condition</b> to specify the count characteristics that trigger an alert. The <b>Option</b> , <b>Condition</b> , and <b>Value</b> fields allow you to define the numeric value of user issues.
Device RADIUS Authentication Issues	This trigger type sets the threshold for the maximum number of failures before an alert is issued for a device. The <b>Option</b> , <b>Condition</b> , and <b>Value</b> fields allow you to define the numeric value of user issues.
Total RADIUS Authentication Issues	This trigger sets the threshold for the maximum number of failures before an alert is issued for both users and devices.

2. Repeat this procedure for as many triggers and conditions as desired. Refer to the start of "[Creating New Triggers](#)" on [page 223](#) to create a new trigger.

## Setting Triggers for IDS Events

Perform the following steps to configure Intrusion Detection System (IDS)-related triggers.

1. Choose the **Device IDS Events** trigger type from the drop-down **Type** menu. See [Figure 130](#) in "[Creating New Triggers](#)" on [page 223](#). [Table 114](#) describes condition settings for this trigger type.

**Table 114:** *Device IDS Events Authentication Trigger Types and Condition Settings*

IDS Trigger Options	Description
Device IDS Events	This trigger type is based on the number of IDS events has exceeded the threshold specified as Count in the Condition within the period of time specified in seconds in Duration. Alerts can also be generated for traps based on name, category or severity. Select <b>Add New Trigger Condition</b> to specify the count characteristics that trigger an IDS alert.
Rogue Device Classified	This trigger type indicates that a device has been discovered with the specified Rogue Score. Ad-hoc devices can be excluded automatically from this trigger by selecting <b>Yes</b> . See " <a href="#">Using RAPIDS and Rogue Classification</a> " on <a href="#">page 201</a> for more information on score definitions and discovery methods.  Once you choose this trigger type, select <b>Add New Trigger Condition</b> to create one or more conditions. A condition for this trigger enables you to specify the nature of the rogue device in multiple ways.
Client on Rogue AP	This trigger type indicates that a client has associated to a rogue AP. Available conditions include rogue classification, and whether the client is valid.

2. Repeat this procedure for as many triggers and conditions as desired. Refer to the start of "[Creating New Triggers](#)" on [page 223](#) to create a new trigger.

## Setting Triggers for OV3600 Health

After completing steps 1-3 in "Creating New Triggers" on page 223, perform the following steps to configure IDS-related triggers.

1. Choose the **Disk Usage** trigger type from the drop-down **Type** menu. See Figure 130 in "Creating New Triggers" on page 223 for trigger types. Table 115 describes the condition settings for this trigger type.

**Table 115:** *Disk Usage Trigger and Condition Settings*

OV3600 Health Trigger	Description
Disk Usage	<p>This trigger type is based on the disk usage of OV3600. This type of trigger indicates that disk usage for the OV3600 server has met or surpassed a defined threshold. Select <b>Add New Trigger Condition</b> to specify the disk usage characteristics that trigger an alert.</p> <p>Set one of these triggers at <b>90%</b> so you receive a warning before OV3600 suffers performance degradation due to lack of disk space.</p>
System Resources	<p>For the System Resources trigger, you must configure at least one matching condition before you save the new trigger. The available matching conditions are <b>CPU Utilization Percentage</b>, <b>Disk I/O Utilization Percentage</b>, and <b>Memory Utilization Percentage</b>.</p>

2. Repeat this procedure for as many triggers and conditions as desired. Refer to the start of "Creating New Triggers" on page 223 to create a new trigger.

## Viewing, Delivering, and Responding to Triggers and Alerts

This section describes triggers and alerts and contain the following topics:

- "Viewing Triggers" on page 232
- "Delivering Triggered Alerts" on page 234
- "Viewing Alerts" on page 233
- "Responding to Alerts" on page 235

OV3600 monitors key aspects of wireless LAN performance. When certain parameters or conditions arise that are outside normal bounds, OV3600 generates (or triggers) alerts that enable you to address problems, frequently before users have a chance to report them.

### Viewing Triggers

To view defined system triggers, navigate to the **System > Triggers** page. Figure 131 illustrates this page.



Figure 131: System > Triggers Page Illustration (partial view)

**Triggers:**

New Trigger

<input type="checkbox"/>	Type ▲	Trigger	Additional Notificatio
<input type="checkbox"/>	Channel Utilization	Time Busy (%) >= 98% for 1 min	-
<input type="checkbox"/>	Channel Utilization	Interference (%) >= 50% and Time Busy (%) >= 70% for 5 mi...	-
<input type="checkbox"/>	Client Count	Client Count on Devices is at least 100 and for 300 seconds	-
<input type="checkbox"/>	Device Down	Minutes Down Threshold >= 15 minutes	-
<input type="checkbox"/>	Device Event	Syslog Severity >= Critical	-
<input type="checkbox"/>	Device Event	Event Contents matches wlsxBSSIDsDown and SNMP Trap Cate...	-

6 Triggers

Select All - Unselect All

---

**Triggers for other roles:**

<input type="checkbox"/>	Role Name ▲	Type	Trigger	Additional No
<input type="checkbox"/>	AMP Administration	Channel Utilization	Time Busy (%) >= 60% for 5 minutes	-
<input type="checkbox"/>	AMP Administration	Device Event	Event Type is Syslog and Syslog Severity >= Critical	-
<input type="checkbox"/>	AMP Administration	Radio Noise Floor	Noise Floor(dBM) >= -85 dBm for 5 minutes	-
<input type="checkbox"/>	AMP Administration	Device Down	All device types	-

4 Triggers

Select All - Unselect All

Refer to "Creating New Triggers" on page 223 for additional information.

## Viewing Alerts

Apart from visiting **System > Alerts**, OV3600 displays alerts and provides alert details in two additional ways:

1. The **Alert Summary** table, and is illustrated in Figure 132, is available on the following OV3600 pages:
  - APs/Devices > List
  - Groups > Monitor
  - Home > Overview
  - Clients > Connected or Client Detail

Figure 132: Alert Summary Table Illustration

Alert Summary				
Type ▲	Last 2 Hours	Last Day	Total	Last Event
OV3600 Alerts	0	4	9	5/29/2013 1:13 AM
IDS Events	3777	47794	87003	5/29/2013 3:09 PM
RADIUS Authentication Issues	1662	18284	30235	5/29/2013 3:09 PM

This table displays alerts as follows; select the alert **Type** to display alert details:

- **OV3600 Alerts**—Displays details for all device alerts.
- **IDS Events**—Displays details of all Intrusion Detection System (IDS) events and attacks under the RAPIDS tab. You must be enabled as a RAPIDS user to see this page.

- **RADIUS Authentication Issues**—Displays RADIUS-related alerts for devices in the top viewable folder available to the OV3600 user. The detailed list displays the MAC address, username, AP, radio, controller, RADIUS server, and time of each event. Alerts can be sorted by any column.
2. The **Alerts** and **Severe Alerts** top header stats in the **Status** bar at the top of all OV3600 pages, illustrated in [Figure 133](#). The Severe Alert Threshold can be configured on the **Home > User Info** page. Refer to "[Setting Severe Alert Warning Behavior](#)" on page 28.

**Figure 133: Alerts in the OV3600 Status Bar (highlighted)**



Select the **Alerts** or the **Severe Alerts** counter or navigate to the **System > Alerts** page. "[System > Alerts Page Illustration](#)" on page 234 illustrates this page.

**Figure 134: System > Alerts Page Illustration**

Alerts

1-10 of 10 Alerts Page 1 of 1 Choose columns Choose columns for roles Export CSV

Trigger Type	Trigger Summary	Triggering Agent	Time	Severity	Details	Notes
<input type="checkbox"/>	Channel Utilization Interference (%) >= 50% and Time Busy (%) >= 70% for 5 (more...)	cisco_1250_lwapp (radio 802.11bgn)	5/29/2013 3:29 PM	Warning	-	-
<input type="checkbox"/>	Channel Utilization Interference (%) >= 50% and Time Busy (%) >= 70% for 5 (more...)	RTL53 (radio 802.11an)	5/29/2013 1:13 AM	Warning	-	-
<input type="checkbox"/>	Device Down Minutes Down Threshold >= 15 minutes	1341-AP19 (1341-ap19.arubanetworks.com)	5/28/2013 11:20 PM	Normal	-	-
<input type="checkbox"/>	Device Down Minutes Down Threshold >= 15 minutes	1341-AP22 (1341-ap22.arubanetworks.com)	5/28/2013 11:20 PM	Normal	-	-
<input type="checkbox"/>	Device Down Minutes Down Threshold >= 15 minutes	xquan-rap2	5/28/2013 11:19 PM	Normal	-	-
<input type="checkbox"/>	Channel Utilization Interference (%) >= 50% and Time Busy (%) >= 70% for 5 (more...)	AP0022.bd19.3b74 (radio 802.11bgn)	5/27/2013 11:22 PM	Warning	-	-
<input type="checkbox"/>	Channel Utilization Interference (%) >= 50% and Time Busy (%) >= 70% for 5 (more...)	AP0022.bd19.2faf (radio 802.11bgn)	5/27/2013 11:22 PM	Warning	-	-
<input type="checkbox"/>	Device Down Minutes Down Threshold >= 15 minutes	lcureau-ap70	5/27/2013 11:21 PM	Normal	-	-
<input type="checkbox"/>	Channel Utilization Interference (%) >= 50% and Time Busy (%) >= 70% for 5 (more...)	AP70ca.9b2a.598a (radio 802.11bgn)	5/27/2013 11:20 PM	Warning	-	-
<input type="checkbox"/>	Device Down Minutes Down Threshold >= 15 minutes	gclark-rap5	5/27/2013 11:19 PM	Normal	-	-

1-10 of 10 Alerts Page 1 of 1

Select All - Unselect All

[View Acknowledged Alerts](#)

For each new alert, the **System > Alerts** page displays the items listed in [Table 116](#).

**Table 116: System > Alerts Fields and Default Settings**

Field	Description
Trigger Type	Displays and sorts triggers by the type of trigger.
Trigger Summary	Provides an additional summary information related to the trigger.
Triggering Agent	Lists the name of the AP that generated the trigger. Select the name to display its <b>APs/Devices &gt; Manage</b> page.
Time	Displays the date and time the trigger was generated.
Severity	Displays the severity code associated with that trigger.
Details	Displays additional details for alerts.

### Delivering Triggered Alerts

OV3600 uses Postfix to deliver alerts and reports via email because it provides a high level of security and queues email locally until delivery. If OV3600 is located behind a firewall, preventing it from sending email directly to a specified recipient, use the following procedures to forward email to a smarthost.

1. Add the following line to `/etc/postfix/main.cf`:
 

```
relayhost = [mail.example.com]
```

where mail.example.com is the IP address or hostname of your smarthost

2. Run `service postfix restart`.
3. Send a test message to an email address:

```
Mail -v user@example.com
Subject: test mail
.
CC:
```

4. Press **Enter**.
5. Check the mail log to ensure mail was sent:

```
tail -f /var/log/maillog
```

## Responding to Alerts

Once you have viewed an alert, you may take one of the following courses of action:

- Leave it in active status if it is unresolved. The alert remains on the **New Alerts** list until you acknowledge or delete it. If an alert already exists, the trigger for that AP or user does not create another alert until the existing alert has been acknowledged or deleted.
- Move the alert to the Alert Log by selecting it and selecting **Acknowledge**. You can see all logged alerts by selecting the **View logged alerts** link at the top of the **System > Alerts** page. Select the **Alerts** link to return to the list of new alerts.
- Delete the alert by selecting it from the list and clicking the **Delete** button.

## Backing Up OV3600

OV3600 creates nightly archives of all relational data, statistical data, and log files. This occurs by default at 4:15 AM, but is configurable on the **OV3600 Setup > General** page under **Nightly Maintenance Time**.

Although OV3600 only keeps the last four sets of archives, the archives can be downloaded manually or automatically off-site for more extensive backup strategies. OV3600 creates one data backup file each night. The data backup file contains all of the device and group information as well as historical data and system files, including IP address, NTP information, mail relay hosts, and other OV3600 settings.

## Viewing and Downloading Backups

To view current OV3600 backup files, go to the **System > Backups** page. [Figure 135](#) illustrates this page.

**Figure 135: System > Backups Page Illustration**

Backups are run nightly.

```
nightly_data001.tar.gz Backup of 3570870358 bytes made 16 hrs 11 mins ago.
nightly_data002.tar.gz Backup of 4072871966 bytes made 1 day 16 hrs 7 mins ago.
nightly_data003.tar.gz Backup of 4071679382 bytes made 2 days 16 hrs 10 mins ago.
nightly_data004.tar.gz Backup of 4220449844 bytes made 3 days 16 hrs 9 mins ago.
```

To download a backup file, select the filename URL and the **File Download** popup page appears.

Regularly save the data backup file to another machine or media. This process can be automated easily with a nightly script.

---

Nightly maintenance and `ov3600_backup` scripts back up the full OV3600 data and save the file as `nightly_data00[1-4].tar.gz`. In previous OV3600 versions, the scripts created both config backup and data backup files. In order to restore the OV3600 data, it is only necessary to have most recent data backup file, and OV3600 no longer uses or supports the config backup file, effective as of OV3600 6.3.2.

---



## Running Backup on Demand

To create an immediate backup:

1. Log into the OV3600 system as **root**.
2. Run the backup script by typing **ov3600\_backup**.

This creates a backup of the system located in `/alternative/databackup.tar.gz`.

## Restoring from a Backup

To restore a backup file on a new machine:

1. Use your OV3600 Installation DVD to build a new machine. The new machine must be running the same version as the OV3600 that created the backup file.
2. Copy the `nightly_data00[1-4].tar.gz` file to the `/tmp` directory in the new OV3600.

A file transfer client that supports SFTP/SCP for Windows is WinSCP: <http://winscp.sourceforge.net/eng/>

WinSCP allows you to transfer the `nightly00[1-4].tar.gz` file from your local PC to the new OV3600 using the secure copy protocol (SCP).

3. Log onto the new server as **root**.
4. Change to the **scripts** directory by typing **scripts**.
5. Run the restore script by typing **./ov3600\_restore -d /tmp/nightly\_data00[1-4].tar.gz**.



Network administrators can now use the nightly backup from a 32-bit OV3600 on a 64-bit installation, rather than having to create a special backup file or use the special restore script.

## Using the System > Configuration Change Jobs Page

Schedule configuration change jobs are summarized on the **System > Configuration Change Jobs** page. Perform the following steps to use this page, illustrated in [Figure 136](#).

**Figure 136:** *System > Configuration Change Jobs Page Illustration*

The screenshot shows the 'System > Configuration Change Jobs' page. At the top, it displays '1-1 of 1 Scheduled Events' and 'Page 1 of 1'. Below this is a table with columns: Subject, Description, Scheduled Time, User, Folder, and Group. The table contains one entry: Subject '6cf3:7f:c6:72:34', Description 'Edit Device "6cf3:7f:c6:72:34"', Scheduled Time 'May 30, 2013 at 12:00 am PDT', User 'admin', Folder 'Top', and Group 'Access Points'. Below the table, there is a detailed view for the selected job. It shows 'To run at: May 30, 2013 at 12:00 am PDT'. The device is '6cf3:7f:c6:72:34'. Management Mode is 'Monitor Only' (selected) and 'Manage Read/Write'. There are buttons for 'Apply Changes Now', 'Delete', and 'Cancel'. The 'Scheduling Options' section shows 'Occurs: One Time' (selected). Below this, there is a text area for specifying dates and times. The 'Current Local Time' is 'May 29, 2013 1:21 pm PDT' and the 'Desired Start Date/Time' is 'May 30, 2013 12:00 am'. A 'Schedule' button is at the bottom.

Subject	Description	Scheduled Time	User	Folder	Group
6cf3:7f:c6:72:34	Edit Device "6cf3:7f:c6:72:34"	May 30, 2013 at 12:00 am PDT	admin	Top	Access Points

**To run at: May 30, 2013 at 12:00 am PDT**

**Device "6cf3:7f:c6:72:34"**

Management Mode: Monitor Only (selected) | Manage Read/Write

Apply Changes Now | Delete | Cancel

**Scheduling Options**

Occurs: One Time (selected)

Specify numeric dates with optional 24-hour times (like 7/4/2003 or 2003-07-04 for July 4th, 2003, or 7/4/2003 13:00 for July 4th, 2003 at 1:00 PM.), or specify relative times (like tomorrow at noon or next tuesday at 4am). Other input formats may be accepted.

Current Local Time: May 29, 2013 1:21 pm PDT

Desired Start Date/Time: May 30, 2013 12:00 am

Schedule

1. To edit an existing configuration change job select on the linked description name. On the subsequent edit page you can choose to run the job immediately by selecting **Apply Changes Now**, to reschedule the job by selecting **Schedule**, **Delete** the job, or **Cancel** the job edit.
2. Select the linked AP or group name under the **Subject** column to go to its monitoring page.
3. Select the linked group and folder names under **Folder** or **Group** to go to the AP's folder or group page.
4. Scheduled configuration change jobs will also appear on the **Manage** page for an AP or the **Monitoring** page for a group.

## Using the System > Firmware Upgrade Jobs Page

The **System > Firmware Upgrade Jobs** page displays a list of recent firmware upgrade jobs that have been initiated in the **APs/Devices > Manage** page or **Modify Devices** page for a controller or autonomous AP that supports firmware upgrades in OV3600.

Successful upgrade jobs are not archived on this page -- generally you visit this page to review failed or pending firmware upgrade jobs.

Users with the **AP/Device Manager** role and higher can view this page. Audit-only users cannot view this page or tab.

**Figure 137: System > Firmware Upgrade Jobs Page Illustration**

**Firmware upgrade jobs:**  
Add new firmware files on the [Firmware & File Upload](#) page. Initiate a firmware upgrade job from the APs/Device Manage page of a device or from the Modify Devices actions on a list of devices.

[Firmware Server Log](#)

Name ▲	Role	Username	Created	Status	Scheduled Start Time
<input type="checkbox"/> Firmware upgrade job	aruba-corp-users-via-radius	tkurokawa	5/13/2013 1:42 AM	Failed	-

Select All - Unselect All

You can perform the following operations on this page:

- To restart failed firmware upgrade jobs, select the check boxes next to the rows you want to restart and select the **Restart Failed Jobs** button.
- To stop a pending upgrade job and remove it from the list, select the **Cancel and Delete Jobs** button.
- Use additional links on the page as shortcuts to the **Device Setup > Upload Firmware & Files** page, or the complete raw text of the Firmware Server Log
- To view additional details about an individual upgrade job including the devices being upgraded, select the name of an upgrade job from the Name column to go to the **System > Firmware Upgrade Job Detail** page, illustrated in [Figure 138](#).

From here you can click the device name to go to its **APs/Devices > Monitor** page, or the link under **Firmware File** column to go to the **Device Setup > Upload Firmware & Files** page.

**Figure 138: System > Firmware Upgrade Job detail page illustration**

[Firmware Server Log](#)

Details for firmware upgrade job **Firmware upgrade job**

Firmware upgrade job is stopped because too many upgrades have failed.

**Job Information:**

Role	Username	Created	Status	Scheduled Start Time	Total Devices	P
aruba-corp-users-via-radius	tkurokawa	5/13/2013 1:42 AM	Failed	-	0	0

You cannot view any of the APs being upgraded

Refer also to "Loading Device Firmware Onto OV3600 (optional)" on page 62.

## Using the System > Performance Page

The **System > Performance** page displays basic OV3600 hardware information as well as resource usage over time. OV3600 logs performance statistics such as load average, memory and swap data every minute.


The historical logging is useful to determine the best usable polling period and track the health of OV3600 over time.

The page is divided into the following sections:

- System Information
- Performance Graphs
- AMON Statistics
- Redis Statistics
- Database Statistics
- Disk Space

Figure 139 illustrates this page, and Table 117 describes fields and information displayed.

**Figure 139: System > Performance Page Illustration (Partial Screen)**

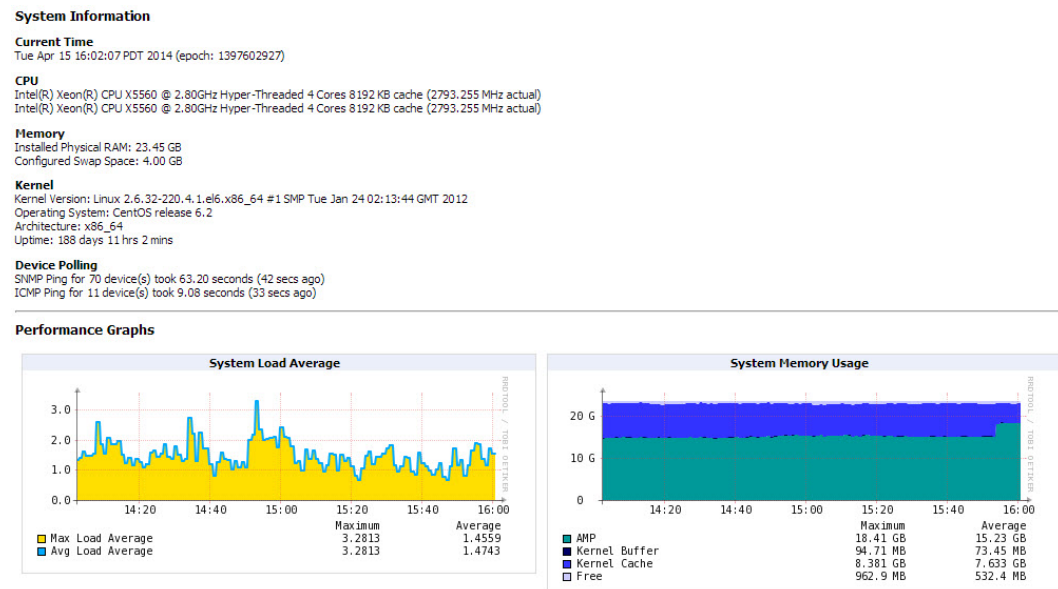

**Table 117: System > Performance Page Fields and Graphs**

Field	Description
<b>System Information</b>	
Current Time	Displays OV3600's current time.
CPU(s)	Basic CPU information as reported by the operating system.
Memory	The amount of physical RAM and Swap space seen by the operating system. Refer to the <i>OmniVista 3600 Air Manager Server Sizing Guide</i> for hardware requirements.

**Table 117: System > Performance Page Fields and Graphs (Continued)**

Field	Description
Kernel	The version of the Linux kernel running on the box.
Device Polling	Displays some AP/Device polling statistics.
<b>Performance Graphs</b>	
System Load Average	The number of jobs currently waiting to be processed. Load is a rough metric that will tell you how busy a server is. A typical OV3600 load is around 2-3 times the number of CPU cores you have in your system. A constant load of 4x to 5x is cause for concern. A load above 6x is a serious issue and will probably result in OV3600 becoming unusable. To lower the load average, try increasing a few polling periods in the <b>Groups &gt; Basic</b> page.
System Memory Usage	The amount of RAM that is currently used broken down by usage. It is normal for OV3600 to have very little free RAM. Linux automatically allocates all free RAM as cache and buffer. If the kernel needs additional RAM for process it will dynamically take it from the cache and buffer.
System Disk Throughput	The rate of reading and writing from and to the disk in bytes per second.
System Swap Usage	The amount of Swap memory used by OV3600. Swap is used when there is no more free physical RAM. A large performance penalty is paid when swap is used. If your OV3600 consistently uses swap, you should consider installing additional RAM.
System Disk IOPs	The number of disk reads and writes per second.
System Disk Outstanding I/O Requests	The average number of outstanding I/O requests (queue depth). If it's high, it means that I/O requests (disk reads/writes) aren't being serviced as fast as they're being asked for.
System Disk Utilization	The amount of data read from the disk and written to the disk.
System CPU Utilization	The percentage of CPU that has been used by the user and the system as well as the amount that was idle.
Process Counts by Service	This breaks down network usage based on Web server, database, OV3600 Service, and VisualRF processes.
Average Delay Time by Queue Type	This shows the queue time for Async logger clients and RAPIDS processing.
I/O Throughput by Worker/by Service	Displays reads and writes for workers (OV3600 services, database, VisualRF, web server, RRD tool and AWRRD tool) and for services (OV3600, VisualRF and web server).
CPU Utilization by Worker/by Service	Displays reads and writes for workers (OV3600 services, database, VisualRF, web server, RRD tool and AWRRD tool) and for services (OV3600, VisualRF and web server).

**Table 117: System > Performance Page Fields and Graphs (Continued)**

Field	Description
System Network Usage	All traffic in and out measured in bits per second of your primary network interface (Eth0 being the most common).
Usage by Protocol	Displays the amount of traffic used by Telnet, HTTPS and SNMP used by your primary network interface (Eth0 being the most common).
AMON	Displays the number of AMON packet traffic used by your network over the last two hours, day, week, month, and year.
SNMP Traps	Displays the number of SNMP Trap packets in your network over the last two hours, day, week, month, and year
Legacy SNMP Fetcher Requests	The number of SNMP get and walk requests per second performed by the legacy (v1 and v3) SNMP fetcher.
Legacy SNMP Fetcher Responses	The number of SNMP OIDs received per second performed by the legacy (v1 and v3) SNMP fetcher.
High Performance SNMP Fetcher Requests	The number of SNMP get and walk requests per second performed by the high performance SNMP (v2c) fetcher.
High Performance SNMP Fetcher Responses	The number of SNMP OIDs received per second performed by the high performance SNMP (v2c) fetcher.
<b>Redis Statistics</b>	
Redis Activity	Use this chart under the supervision of Alcatel-Lucent support to troubleshoot Redis activity. Click any point in the chart to view Redis activity over the past day, week, month or year.
Redis Used Memory	Use this chart under the supervision of Alcatel-Lucent support to troubleshoot Redis memory issues. Click any point in the chart to view the total number of bytes used by the Redis process over the past day, week, month or year.
Redis Keyspace	Use this chart under the supervision of Alcatel-Lucent support to troubleshoot Redis keys. Click any point in the chart to view Redis Key usage over the past day, week, month or year.
<b>Database Statistics</b>	
Top 5 Tables (by row count)	The five largest tables in OV3600. Degraded performance has been noticed for in some cases for tables over 200,000 rows. Decreasing the length of time client data is stored on the OV3600 page is recommended if a user/client table exceeds 250,000 rows.
Database Table Scans	The number of database table scans performed by the database.
Database Row Activity	The number of insertions, deletions and updates performed to the database.
Database Transaction Activity	The number of commits and rollbacks performed by the database.



**Table 117:** *System > Performance Page Fields and Graphs (Continued)*

Field	Description
Disk Space	
Disk Space	Pie charts that display the amount of used and free hard drive space for each partition. If a drive reaches over 80% full, you may want to lower the <b>Historical Data Retention</b> settings on the <b>OV3600 Setup &gt; General</b> page or consider additional drive space.

There are several initial steps that you can take to troubleshoot OV3600 performance problems, including slow page loads and timeout errors. Initial troubleshooting steps would include the following:

- Increasing the polling period settings on the **Groups > Basic** page.
- Increasing the polling period time for groups with routers and switches.
- Adding additional memory to the server. Please consult the sizing information in the latest edition of the *OmniVista 3600 Air Manager Server Sizing Guide* or contact Alcatel-Lucent support for the latest recommendations.

## Monitoring and Supporting WLAN Clients

This section describes the **Clients** pages as follows:

- ["Overview of the Clients Pages" on page 241](#)
- ["Monitoring Your Network with the Clients > Overview Page" on page 242](#)
- ["Monitoring WLAN Users in the Clients > Connected and Clients > All Pages" on page 244](#)
- ["Monitoring Rogue Clients With the Clients > Rogue Clients Page" on page 247](#)
- ["Supporting Guest WLAN Users With the Clients > Guest Users Page" on page 249](#)
- ["Supporting VPN Users with the Clients > VPN Sessions Page" on page 251](#)
- ["Supporting RFID Tags With the Clients > Tags Page" on page 252](#)

See also ["Evaluating and Diagnosing User Status and Issues" on page 253](#).

For information about creating OV3600 users and OV3600 user roles, refer to:

- ["Creating OV3600 Users" on page 42](#)
- ["Creating OV3600 User Roles" on page 45](#)

If you need to create an OV3600 user account for frontline personnel who are to support Guest WLAN users, refer to ["Supporting Guest WLAN Users With the Clients > Guest Users Page" on page 249](#).

### Overview of the Clients Pages

The **Clients** pages display multiple types of user data for existing WLAN clients and VPN users. The data comes from a number of locations, including data tables on the access points, information from RADIUS accounting servers, and OV3600-generated data. OV3600 supports the following **Clients** pages:

**Table 118: Clients pages**


Clients Page	Description	Refer To
Overview	Provides a graphical summary of all devices on your network, including client and network usage trends; a distribution breakdown by OS, vendor, device type, and SSID; and potential performance issues. If any clients are configured to be Watched Clients, then a Watched Clients table will also appear on this page.	"Monitoring Your Network with the Clients > Overview Page" on page 242
Connected	Displays active users that are currently connected to the WLAN.	"Monitoring WLAN Users in the Clients > Connected and Clients > All Pages" on page 244
All	Displays all users of which OV3600 is aware, with related information. Non-active users are listed in gray text.	"Monitoring WLAN Users in the Clients > Connected and Clients > All Pages" on page 244
Rogue Clients	Displays connected rogue clients.	"Monitoring Rogue Clients With the Clients > Rogue Clients Page" on page 247
Guest Clients	Displays all guest users in OV3600 and allows you to create, edit, or delete guest users.	"Supporting Guest WLAN Users With the Clients > Guest Users Page" on page 249
Client Detail	Displays client device information, alerts, signal quality, bandwidth, and association history. This page appears when you select a user's MAC address link from these list tables: <ul style="list-style-type: none"> <li>• Clients &gt; Connected</li> <li>• Clients &gt; All</li> <li>• Home &gt; Search page results that display the user MAC address</li> </ul>	"Evaluating User Status with the Clients > Client Detail Page" on page 253
Diagnostics	Displays possible client device issues, diagnostic summary data, user counts, AP information, 802.11 counters summary, and additional information. This page appears when you select a user's MAC address from one of the following pages: <ul style="list-style-type: none"> <li>• Clients &gt; Connected</li> <li>• Clients &gt; All</li> <li>• Home &gt; Search page results or Search field results that display the user MAC address</li> </ul>	"Evaluating Client Status with the Clients > Diagnostics Page" on page 257
Tags	Displays a list of wireless tags, such as Aeroscout, PanGo and Newbury, that are heard by thin APs, and reported back to a controller that is monitored by OV3600.	"Supporting RFID Tags With the Clients > Tags Page" on page 252

## Monitoring Your Network with the Clients > Overview Page

Clients are the end-user devices that access the network through other devices monitored or managed by OV3600. The **Clients > Overview** page provides a graphical summary of all clients, including client and network usage trends; a distribution breakdown by OS, vendor, device type, and SSID; and potential performance issues. If any clients are configured to be Watched Clients, then a Watched Clients table will also appear on this page.


This page is divided into three panes. The left pane is the "Trends" pane. This includes the Clients and Total Usage Highcharts. By default, these charts show data over the last two hours. You can click in either chart to open a popup. From this popup, you can change the time range to 1 day, 5 days, 1 month, or 1 year.

**Figure 140: Trends pane with a Clients Popup**

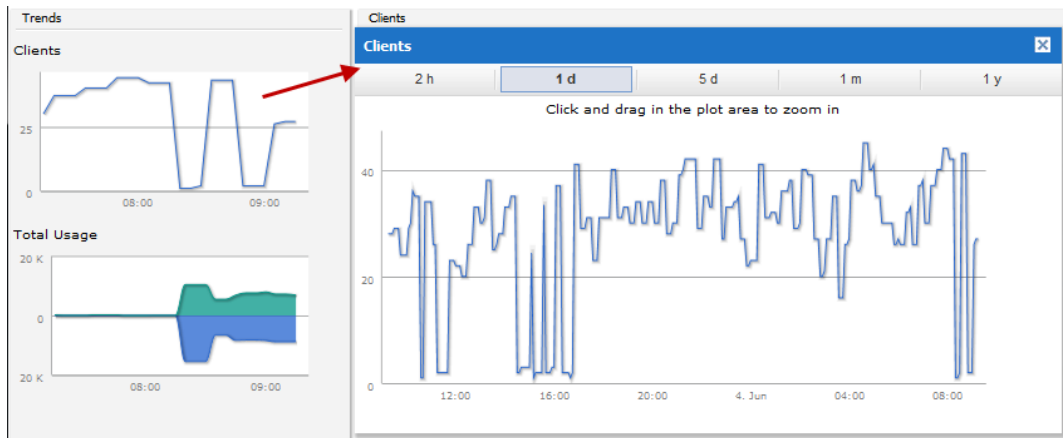

The center pane provides pie charts that provide summarized information about all clients across your network. This information is broken down by operating system, device type, SSID, and WLAN vendor. If any clients on your network are specified as Watched Clients, then a Watched Clients table will appear in this pane, showing the client's health, speed, SNR value, SNR trend, when the client was last heard, and whether the client is active. This table provides a link for each client that take you to the **Clients > Diagnostics** page.

**Figure 141: Center pane**

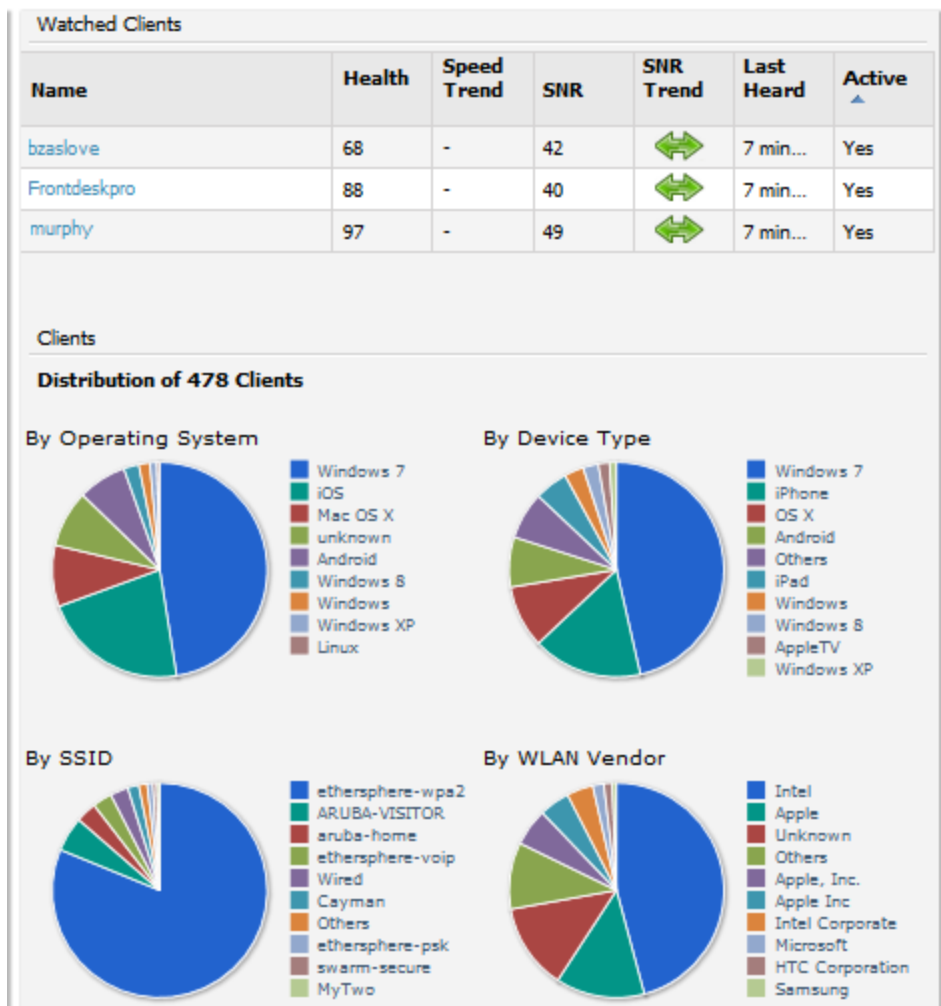

The right pane provides information about the total number of APs, Controllers, Remote Nodes, and Switches on your network and the number of those that are currently down. This information can be useful in identifying potential performance issues.

**Figure 142: Right pane**

Potential Performance Issues		
	Down	Total
APs	33	147
Controllers	7	40
Remote Nodes	38	71
Switches	4	39

## Monitoring WLAN Users in the Clients > Connected and Clients > All Pages

The **Clients > All** page shows all users that OV3600 is aware of, including down clients. The **Clients > Connected** page displays all users currently connected in OV3600. This page is illustrated in [Figure 143](#) and described in [Table 119](#). It contains the following information at a glance:

- The Folder field shows the current folder of Connected Clients you are viewing. You can view users under a particular folder from the Go to folder dropdown menu.
- Links under the Folder fields showing the **Total Devices**, **Mismatched**, **Clients**, and **Usage** (a static, unlinked statistic) summarize the device information for this folder. Select these links to open detail pages for each:
  - **Total Devices** redirects to the **APs/Devices > List** for that folder,
  - **Mismatched** redirects to the list in **APs/Devices > Mismatched** for that folder.
  - **Clients** refreshes the page but expands to include users in the subfolders.
- Interactive graphs display average and max **Clients** over time, and **Usage** in and out for the selected folder over time.
  - Select a time range option from the upper-right corner of the graphs.
  - Select the WLANs drop down to view up to six clients, or select Total Clients.
  - Click in a graph to view a pop-up of the graph.
- Below the Clients and Usage graphs is the list of connected users.

---


The number of clients in OV3600 can differ from the number of clients that you see on the switch. This is because OV3600 and the switch count clients differently. The switch counts connections to the network as clients, while OV3600 counts devices as clients. For example, in the case where a single device connects to the network multiple times, the switch will count one client for each connection that the device makes to the network. OV3600 will only recognize the device as a single client, though, regardless of the number of connections.

---




The columns in the default view of the **Clients > Connected** and **Clients > All** pages are defined in OmniVista 3600 Air Manager and cannot be modified. However, you can create a new view in each of these pages that returns custom information based on the filter parameters and data columns you selected when creating that new view. For more information, see ["Creating Custom Filtered Views" on page 140](#).

The information on this page can also be adjusted in the following ways:

- The **Alert Summary** section displays custom configured alerts that were defined in the **System > Alerts** page.
- Use the **Filter** icon (  ) next to certain columns (**AP/Device**, **Role**, **VLAN**, **Connection Mode**, and others) to filter the results by one of the values under that column. You can filter the list by substring match under the **Username** column.

The **Clients > Connected** page includes SSID information for users, and can display wired users using remote Access Point (RAP) devices in tunnel and split-tunnel mode.

**Figure 143: Clients > Connected Page Illustration (Partial View)**

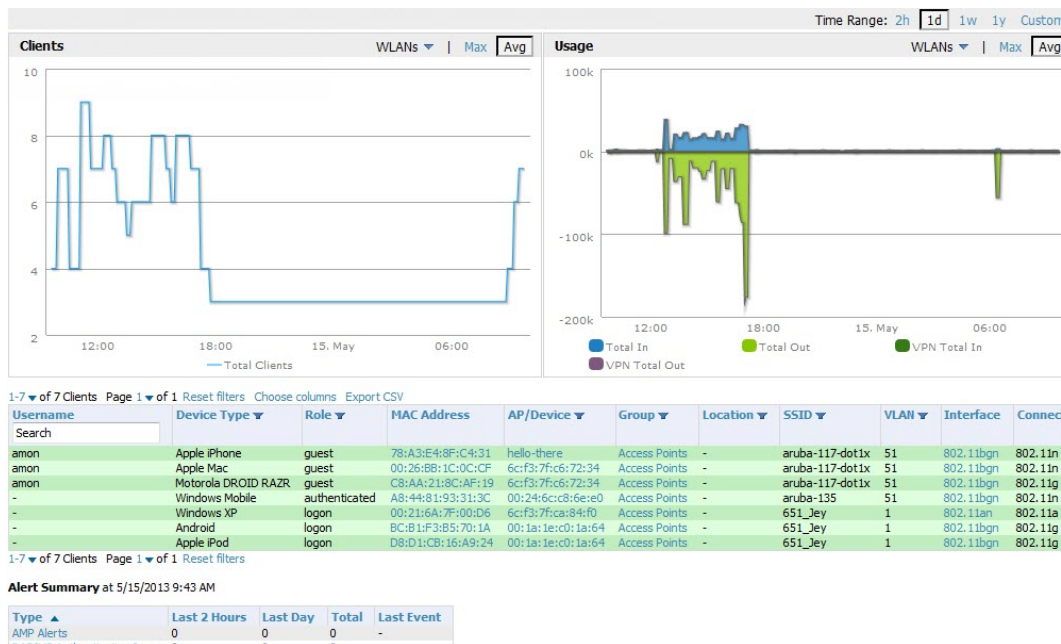

**Table 119: Clients > Connected Table Columns and Links(Alphabetical)**

Field	Description
AOS Device Type	The type of client device determined by the Alcatel-Lucent switch-- a fallback in case the rules set in <b>OV3600 Setup &gt; Device Type Setup</b> were unable to determine the device type.
AP/Device	Displays the name of the AP to which the MAC address is associated as a link to this AP's <b>APs/Devices &gt; Monitor</b> page.
Association Time	The first time OV3600 recorded the user for this association.
Auth. Time	The how long ago the user authenticated. <b>NOTE:</b> This value displays as a negative number for unauthenticated users.
Auth. Type	The type of authentication employed by the user: <ul style="list-style-type: none"> <li>WPA2 (EAP-PEAP) is the standard setting.</li> <li>EAP is reported by Alcatel-Lucent devices via SNMP traps.</li> <li>RADIUS accounting servers integrated with OV3600 will provide the RADIUS Accounting Auth type.</li> <li>Web (PAP) - Captive Portal.</li> <li>All others are considered to be not authenticated.</li> </ul>
Usage	The average bandwidth consumed by the MAC address.
Ch BW	The channel bandwidth that currently supports 802.11n users.

**Table 119: Clients > Connected Table Columns and Links(Alphabetical) (Continued)**

Field	Description
Cipher	Displays WEP with keys. This data is also displayed in the <b>Client Session</b> report in the <b>Session Data By Client</b> section.
Connection Mode	The Radio mode used by the user to associate to the AP for 802.11n clients.
Device Type	The type of device determined by <b>OV3600 Setup &gt; Device Type Setup</b> rules.
Duration	The length of time the MAC address has been associated.
EAP Supplicant	The party being authenticated in the Extensible Authentication Protocol.
Forward Mode	Forwarding mode for the port: Bridge, Tunnel, or Split Tunnel.
Goodput	The ratio of the total bytes transmitted or received in the network to the total air time required for transmitting or receiving the bytes. Note that this information is not available for Instant devices.
Group	The group containing the AP that the user is associated with.
Guest User	Specifies whether the user is a guest.
Interface	The interface on the device to which the user is connected.
LAN Hostname	The LAN hostname of the user MAC.
LAN IP Address	The IP assigned to the user MAC. OV3600 gathers it from the association table of APs.
Location	If a value appears here, the location of this user's client has been mapped on VisualRF. Select the location to open a new VisualRF Floor Plan Location window.
MAC Address	The radio MAC address of the user associated to APs as a link to the <b>Users &gt; Detail</b> page for this user.
Manufacturer	The manufacturer of the user's device.
Model	The model of the user's device.
Name	The product of the user's device.
Network Chipset	The chipset indicates the functions the device was designed to perform.
Network Driver	Driver name or other information.
Notes	Notes about the user.

**Table 119:** *Clients > Connected Table Columns and Links(Alphabetical) (Continued)*

Field	Description
OS	The device's operating system type.
OS Detail	Additional information on the operating system such as version numbers.
Phone Number	Contact number for the user.
Role	Specifies the role that the Alcatel-Lucent switch assigned to the connected user, such as employee.
Serial Number	Serial number of the device.
Service End	Ending timestamp of the device usage.
Service Start	Beginning timestamp of the device usage.
Sig. Qual.	The average signal quality the user experienced.
SSID	The SSID with which the user is associated.
Speed	The packet and byte counts of data frames successfully transmitted to and received from associated stations. Note that this information is not available for Instant devices.
Tunneled Controller	If a user is connected to an Alcatel-Lucent Mobility Access Switch, this indicates which controller the user is authenticated to.
Username	Displays the name of the user associated to the AP. OV3600 gathers this data from device traps, SNMP polling, or RADIUS accounting. Usernames appear in italics when a username for that MAC address has been stored in the database from a previous association, but OV3600 is not getting a username for the current association. This may indicate that the user has not yet been authenticated for this session or OV3600 may not be getting a username from an external source.
VLAN	Displays the VLAN assigned to the user, if available.

## Monitoring Rogue Clients With the Clients > Rogue Clients Page

You can view connected rogue clients in OV3600 by selecting the **Clients > Rogue Clients** page. In this page, you can click on the MAC address of a rogue to view the Client Details page or on a Rogue AP link to view the **RAPIDS > Details** page for the AP. [Figure 144](#) illustrates the **Clients > Rogue Clients** page.

**Figure 144: Clients > Rogue Clients Page Illustration**

1-20 ▼ of 74 Rogue Clients Page 1 ▼ of 4 > > | Reset filters Choose columns Choose columns for roles Export CSV

MAC Address	Username	Rogue AP	Device Type	SSID	BSSID	First
00:19:7E:66:89:38	-	Aruba Netw-87:D3:F0	Hon Hai	Athens-Tarun	6C:F3:7F:B7:D3:F2	5/28/2
38:AA:3C:F4:6C:29	-	Aruba-85:CB:20	SAMSUNG ELECTRO-MECHANICS	Guest-Demo	D8:C7:C8:85:CB:20	5/29/2
20:C9:D0:B9:AB:01	host/jn-w7.arubanetworks.com	Aruba-89:76:B0	Windows 7	ethersphere-59	D8:C7:C8:89:76:B0	5/29/2
00:24:D6:65:BE:D8	-	Aruba-C7:34:B0	Intel	180-G	D8:C7:C8:C7:34:B2	5/29/2
38:AA:3C:08:BC:FA	-	Aruba-7D:B8:C0	Android	arubaTraining	00:24:6C:7D:B8:C0	5/29/2
12:BB:00:00:00:20	-	Aruba-15:2F:60	-	qa-bc-mx5-air1-wpa2	00:1A:1E:15:2F:62	5/29/2
00:26:CE:81:E4:D2	0026c681e4d2	Aruba-21:45:70	Android	Guest-C	00:24:6C:21:45:71	5/29/2
EC:85:2F:7F:6A:87	aberns	Aruba-8A:55:80	iPhone	ethersphere-59	D8:C7:C8:8A:55:80	5/29/2
8C:70:5A:05:C1:88	-	Aruba-0E:62:30	Windows 7	AG-SERVER	00:24:6C:0E:62:39	5/28/2
6C:88:14:1E:64:4C	-	Aruba Netw-E7:5E:30	Windows 7	802.11 AC TAC	6C:F3:7F:E7:5E:30	5/29/2
98:FE:94:6E:93:AC	jn	Aruba-8A:55:90	iPad	ethersphere-59	D8:C7:C8:8A:55:90	5/29/2
04:0C:CE:04:24:96	040cce402496	Aruba-C7:38:A0	iPhone	attwifi	D8:C7:C8:C7:38:A2	5/29/2
24:77:03:D2:39:7C	host/SJC-myao2-T.arubanetworks.com	Aruba Netw-E7:5E:30	Windows XP	802.11 AC TAC	6C:F3:7F:E7:5E:30	5/29/2
60:67:20:85:34:60	eva.ott@thomsonreuters.com	Locally Ad-CA:40:D5	Windows 7	Eva's iPhone	EA:8D:28:CA:40:D5	5/29/2
CC:08:E0:46:E0:C8	rmodi	Aruba-C4:4D:65	iPhone	instant	D8:C7:C8:C4:4D:12	5/29/2
00:23:14:D5:08:30	ARUBANETWORKS\vpastor	Aruba-7D:B8:C0	Windows 7	arubaTraining	00:24:6C:7D:B8:C0	5/29/2
64:20:0C:ED:38:13	Sahmed	Aruba-33:96:D0	iPad	EBC-DEMO	D8:C7:C8:33:96:D2	5/29/2
00:24:D6:84:AC:BC	salluri@arubanetworks.com	Aruba Netw-A5:FA:30	Windows 8	IT-instant-psk	6C:F3:7F:A5:FA:32	5/29/2
90:18:7C:7C:7B:00	tgeorge@arubanetworks.com	Aruba Netw-E7:5E:30	Android	802.11 AC TAC	6C:F3:7F:E7:5E:30	5/29/2
5C:0A:5B:70:89:F3	snarayan@arubanetworks.com	Aruba-7D:B8:C0	Android	arubaTraining	00:24:6C:7D:B8:C0	5/29/2

1-20 ▼ of 74 Rogue Clients Page 1 ▼ of 4 > > | Reset filters

Table 120 describes the fields on this page.

**Table 120: Clients > Rogue Clients Fields**

Field	Description
MAC Address	Displays the MAC address of the rogue client. Click on this to jump to the <b>Clients &gt; Client Detail</b> page for this rogue.
Username	The username associated with this client.
Rogue AP	The name of the Rogue AP. Click on this to jump to the <b>RAPIDS &gt; Detail</b> page for this AP.
Device Type	The type of device, such as iPhone, Windows 7, etc.
SSID	The SSID of this client.
BSSID	The BSSID of this client.
First Heard	The date and time when this rogue client was first noticed.
Last Heard	The date and time when this rogue client was last noticed.
Location	If a location is available, you can click on this link to open the VisualRF floor plan and location on which this client resides.
Connection Mode	Shows the type of connection, such as 802.11n, 802.11b, etc.
Ch BW	Shows the channel bandwidth for this rogue client.
Signal	Shows the signal value for this rogue client.
SNR	Shows the signal-to-noise ratio.
Channel	Shows the channel on which this rogue client is broadcasting.




## Supporting Guest WLAN Users With the Clients > Guest Users Page

OV3600 supports guest user provisioning for Aruba Networks, Dell Networking W-Series, Alcatel-Lucent, and Cisco WLC devices. This allows frontline staff such as receptionists or help desk technicians to grant wireless access to WLAN visitors or other temporary personnel.

Perform the following steps in the pages described to configure these settings.

1. Navigate to the **OV3600 Setup > Roles** page and select the **Read-Only Monitoring & Auditing** role type. Under the Guest User Preferences section, enable **Allow creation of Guest Users**.
2. Next, navigate to the **OV3600 Setup > Users** page and create a new user with the role that was just created. [Figure 145](#) illustrates this page.

**Figure 145:** *OV3600 Setup > Users Page Illustration*

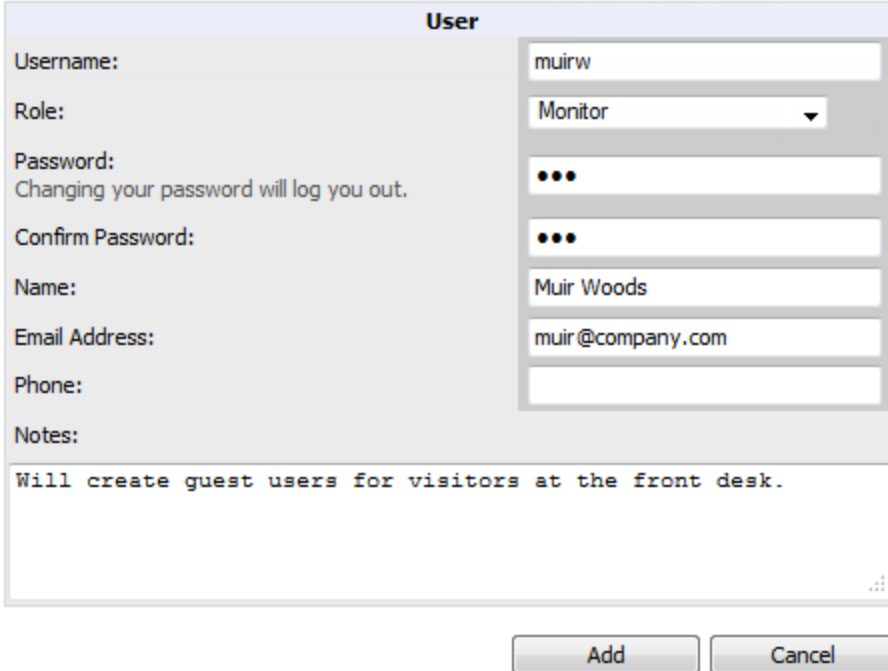

The screenshot shows a web form titled "User" for creating a new user. The form has the following fields and values:

- Username:** muirw
- Role:** Monitor (selected from a dropdown menu)
- Password:** [masked with dots]
- Confirm Password:** [masked with dots]
- Name:** Muir Woods
- Email Address:** muir@company.com
- Phone:** [empty field]
- Notes:** Will create guest users for visitors at the front desk.

At the bottom of the form are two buttons: "Add" and "Cancel".

3. The newly created login information should be provided to the person or people who will be responsible for creating guest access users.
4. The next step in creating a guest access user is to navigate to the **Users > Guest Clients** tab. From this tab, you can add new guest users, you can edit existing users, and you can repair guest user errors.

This page displays a list of guest users and data, to include the expiration date, the SSID (for Cisco WLC) and other information. [Figure 146](#) illustrates this page, and [Table 121](#) describes the information.

**Figure 146: Clients > Guest Users Page Illustration**

Guest Users:

Repair guest user errors

Add New Guest User

1-3 of 3 Guest Users Page 1 of 1 Reset filters Choose columns Export CSV

Username	Name	Enabled	Email	Company Name	Sponsor Name	Expiration	WLAN Profile	Status	
<input type="checkbox"/>	LTI-User	Ken Rich	Yes	ken.rich@ltdata.com	LTI	mbuch	Never	Any WLAN	Ready
<input type="checkbox"/>	dcsrjaq	-	Yes	-	-	Oriol	Never	4402 guest	Error - Failed to Configure
<input type="checkbox"/>	malathy	-	Yes	-	-	sujatha	Never	Any WLAN	Error - Failed to Configure

1-3 of 3 Guest Users Page 1 of 1 Reset filters

Select All - Unselect All

Print Delete

Guest Users for other roles:

1-1 of 1 Guest Users Page 1 of 1 Reset filters Choose columns Export CSV

Username	Name	Enabled	Created By	Email	Company Name	Sponsor Name	Expiration	WLAN Profile	Status	
<input type="checkbox"/>	guestuser1	guestuser1	Yes	test-guest	receptionist@arubanetworks.com	Acme Corp	test-guest	Never	4402 guest	Error - Fa

1-1 of 1 Guest Users Page 1 of 1 Reset filters

Select All - Unselect All

Print Delete

**Table 121: Clients > Guest Users Fields**

Field	Description
Repair Guest User Errors	Sets OV3600 to attempt to push the guest user again in an attempt to repair any errors in the <b>Status</b> column.
Add New Guest User	Adds a new guest user to a controller via OV3600
Username	Randomly generates a user name for privacy protection. This name appears on the <b>Guest User</b> detail page.
Name	Displays the specified guest user name.
Enabled	Enables or disables the user status. Set the status of the guest user as active (enabled) or expired (disabled).
Email	Displays the optional email address of the user.
Company Name	Displays the optional company name for the user.
Sponsor Name	Displays the name of the sponsor for the guest user. This setting is optional.
Expiration	Displays the date the guest user's access is to expire.
WLAN Profile	Select the SSID that the guest user can access. This setting applies to Cisco WLC only.
Status	Reports current status by the controller. If error messages appear in this column, select the user with the checkbox at left, and select the <b>Repair guest user errors</b> button.

Guest users associated to the wireless network appear on the same list as other wireless users, but are identified as guest users in the **Guest User** column. The **Client Detail** page for a guest user also contains a box with the same guest information that appears for each user on the **Clients > Guest Users** list.



The **Enabled**, **Sponsor Name**, **WLAN Profile**, and **Status** columns can be filtered using the funnel icon ( ).

5. To add a new guest user, select **Add**, and complete the fields illustrated in [Figure 147](#). [Table 121](#) above describes most fields. The first three fields are required, and the remaining fields are optional.

**Figure 147:** *Clients > Guest Users > Add New Guest User Page Illustration*

The image shows two screenshots of a web interface. The top screenshot is titled "Guest User" and contains the following fields and controls:

- Username:** Text input with "dcrsjraq" and a "Generate" button.
- Password:** Text input with "Vph4fQby4E" and a "Generate" button.
- Name:** Text input with "Guest".
- Enabled:** Radio buttons for "Yes" (selected) and "No".
- Email:** Text input with "name@email.com".
- Company Name:** Text input with "Company".
- Sponsor Name:** Text input with "admin".
- Expiration:** Text input with "tomorrow at noon". Below this is a note: "Specify numeric dates with optional 24-hour times (like **7/4/2003** or **2003-07-04** for July 4th, 2003, or **7/4/2003 13:00** for July 4th, 2003 at 1:00 PM.), or specify relative times (like **tomorrow at noon** or **next tuesday at 4am**). Other input formats may be accepted."
- WLAN Profile:** Dropdown menu with "4402 guest" selected.
- Description:** Empty text input field.

The bottom screenshot is titled "Email Options" and contains:

- Email Credentials:** Radio buttons for "Yes" and "No" (selected).
- Add** and **Cancel** buttons.


To make the **Username** or **Password** anonymous and to increase security, complete these fields then select **Generate**. The anonymous and secure **Username** and **Password** appear in the respective fields.

6. Select **Add** to complete the new guest user, or select **Cancel** to back out of new user creation. The **Clients > Guest Users** page appears and displays results, as applicable.

## Supporting VPN Users with the Clients > VPN Sessions Page

The **Clients > VPN Sessions** page shows active VPN Sessions along with device type and HTTP fingerprinting information.

**Figure 148: Clients > VPN Sessions Page Illustration**

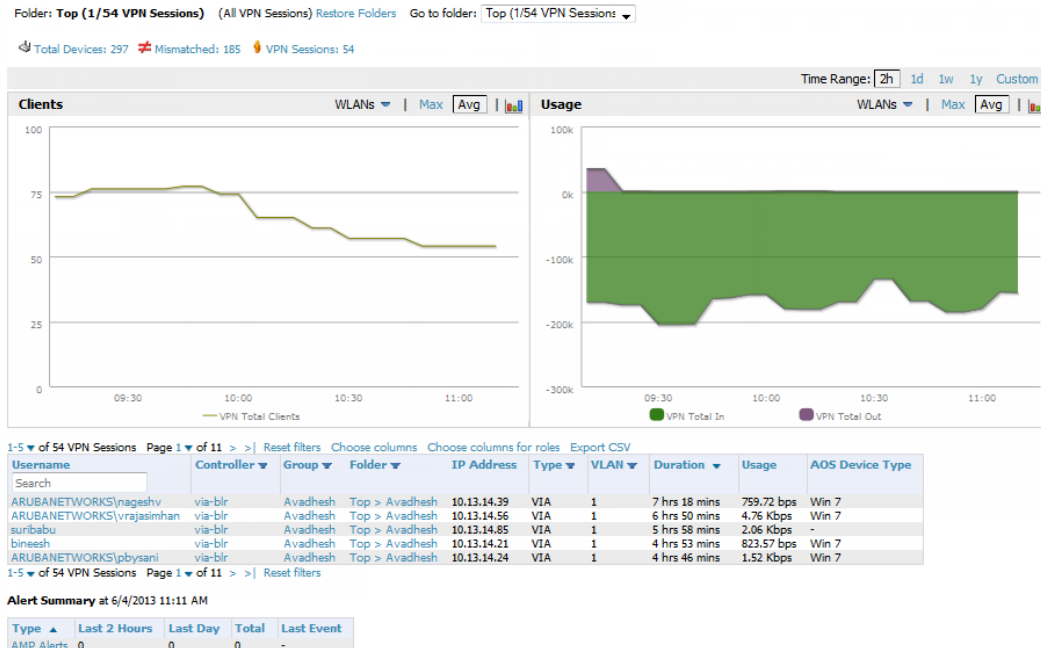

When a VPN username is selected, a **Clients > VPN User Detail** page displays with current VPN sessions, a user and bandwidth interactive graph, and a historical VPN sessions list table.

## Supporting RFID Tags With the Clients > Tags Page


Radio Frequency Identification (RFID) supports identifying and tracking wireless devices with radio waves. RFID uses radio wave tags for these and additional functions. Active tags have a battery and transmit signals autonomously, and passive tags have no battery. RFID tags often support additional and proprietary improvements to network integration, battery life, and other functions.

The **Clients > Tags** page displays a list of wireless tags, such as Aeroscout, PanGo and Newbury, that are heard by thin APs, and reported back to a controller that OV3600 monitors. OV3600 displays the information it receives from the controller in a table on this page. Figure 149 illustrates this page, and Table 122 describes fields and information displayed.



The **Vendor**, **Battery Level**, and **Chirp Interval** columns can be filtered using the funnel icon ( ).

**Figure 149: Clients > Tags Page Illustration**

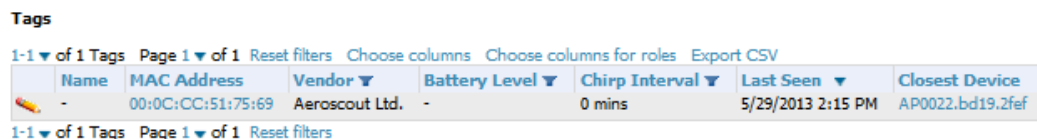

**Table 122: Clients > Tags Fields**

Field	Description
Name	Displays the user-editable name associated with the tag.

**Table 122:** *Clients > Tags Fields (Continued)*

Field	Description
MAC Address	Displays the MAC address of the AP that reported the tag.
Vendor	Displays the vendor of the tag (Aeroscout, PanGo and Newbury)—display all or filter by type.
Battery Level	Displays battery information—filterable in drop-down menu at the top of the column; is not displayed for Aeroscout tags.
Chirp Interval	Displays the tag chirp frequency or interval, filterable from the drop-down menu at the top of the column. Note that the chirp interval from the RFID tag influences the battery life of active tags as well as search times. If a tag chirps with very long chirp interval, it may take longer time for the location engine to accurately measure x and y coordinates.
Last Seen	Date and time the tag was last reported to OV3600.
Closest Device	The device that last reported the tag to the controller (linked to the AP monitoring page in OV3600).

- To edit the name of the tag, or to add notes to the tag's record, select the **pencil** icon next to the entry in the list. You can then add or change the name and add notes like Maternity Ward Inventory or Chicago Warehouse, as two examples.
- The **Inactive Tag** trigger can be used to generate an alert if a tag is not reported to OV3600 after a certain interval. This can help to identify lost or stolen inventory. For more information about enabling this trigger, refer to the section "[Monitoring and Supporting OV3600 with the System Pages](#)" on page 218.

## Evaluating and Diagnosing User Status and Issues

If a WLAN user reports difficulty with the wireless network, the administration or Helpdesk personnel can view and process related user information from the **Client Detail** and **Diagnostic** pages. This section describes these two pages.

- "[Evaluating User Status with the Clients > Client Detail Page](#)" on page 253
- "[Evaluating Client Status with the Clients > Diagnostics Page](#)" on page 257

### Evaluating User Status with the Clients > Client Detail Page


The **Clients > Client Detail** page is a focused subtab that becomes visible when you select a specific WLAN user. Access the **Clients > Client Detail** page by selecting the **MAC Address** link for a specific user from one of the following pages:

- **Clients > Connected**
- **Clients > All**
- **Home > Search** page results or search field **Client** results that display the user MAC address

This page provides information for the wireless device, signal quality, and bandwidth consumption. It also includes AP association history and current association status. If VisualRF is enabled in **OV3600 Setup > General**, this page provides a graphical map of the user location and facility information. Finally, this page allows you to specify a client as a "Watched" client to be included on a watched list. A watched list is a useful method for tracking performance metrics for selected clients. For example, you might have a regular user who cites repeated connectivity issues when moving from one room to another. Adding this client to a watched list allows you to more easily track this and other watched clients. The **Clients > Overview** page provides information on speed and SNR trends for all watched clients.

[Figure 150](#) illustrates the contents of Clients > Client Details page.

Figure 150: Clients > Client Detail page illustration (partial view)

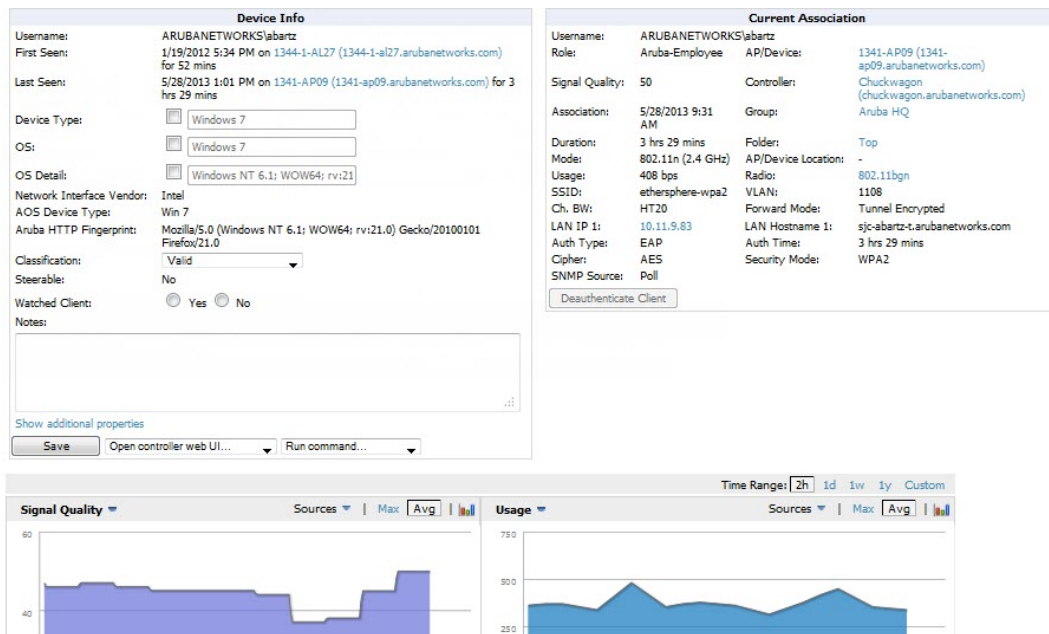

## Mobile Device Access Control in Clients > Client Detail and Clients > Connected

Mobile Device Access Control (MDAC) secures, provisions, and manages network access for Apple® iOS and other employee-owned mobile devices by enabling device fingerprinting, device registration, and increased device visibility.

Use the checkbox next to these fields to enable them in **Clients > Client Detail**:

- Device Type
- OS
- OS Detail
- Manufacturer

To see more options, select the **Show additional properties** link. The results are illustrated in [Figure 151](#):

**Figure 151:** Device Info section in Clients > Client Detail after Show additional properties is selected

**Device Info**

Device Name:

Username: ARUBANETWORKS\abartz

First Seen: 1/19/2012 5:34 PM on 13-1-AL27 (13-1-al27.arubanetworks.com) for 52 mins

Last Seen: 5/28/2013 1:01 PM on 13-AP09 (13-ap09.arubanetworks.com) for 3 hrs 30 mins

Device Type:

OS:

OS Detail:

Manufacturer:

Model:

Serial Number:

Phone Number:

Network Interface Vendor: Intel

Network Chipset:

Network Driver:

EAP Supplicant:

Asset ID:

Asset Group:

Asset Category:

Service Start:

Service End:

AOS Device Type: Win 7

Aruba HTTP Fingerprint: Mozilla/5.0 (Windows NT 6.1; WOW64; rv:21.0) Gecko/20100101 Firefox/21.0

Classification:

Steerable: No

Watched Client:  Yes  No

Notes:

Hide additional properties

Save Open controller web UI... Run command...

## Classifying Alcatel-Lucent Devices in Client Detail

If you have deployed Alcatel-Lucent switches and have WMS Offload enabled on the network, the **Clients > Client Detail** page allows you to classify the device in the **Device Information** section, and to push this configuration to the switches that govern the devices. The classifications are as follows:

- **Unclassified**—Devices are unclassified by default.
- **Valid**—If the **Protect Valid Stations** option is enabled, this setting designates the device as a legitimate network device. When this **Valid** setting is pushed, this setting prevents valid stations from connecting to a non-valid AP.
- **Contained**—When this status is pushed to the device, Alcatel-Lucent will attempt to keep it contained from the network.

You can classify the user regardless of whether WMS Offload is enabled. If WMS Offload is enabled, the classification will get pushed to the switch.

## Quick Links for Clients on Alcatel-Lucent Devices


In **Clients > Client Detail**, the following two drop-down menus appear next to the **Save** button in the **Device Info** section:

- **Open controller web UI:** A drop-down menu that allows you to jump to the controller's UI in a new window. Thin APs link to **Controller > Access Points** when not operating in mesh mode, or **Controller > Mesh Nodes** otherwise.

Controllers show several more pages in this menu (**Security Dashboard**, for instance) if the controller is running AOS-W version 6.1 or greater.

- **Run a command:** A drop-down menu with a list of CLI commands you can run directly from the **APs/Devices > Monitor** page.

**Figure 152:** Open controller web UI and Run a command Menus



## Using the Deauthenticate Client Feature

Some displays of the **Clients > Client Detail** page include the Deauthenticate Client feature in the Current Association section. Specifically, those displays are for devices which support this operation, namely Alcatel-Lucent and Cisco WLC with firmware version v4.0.0.0 or later.

Select Deauthenticate Client to use this feature, as shown in [Figure 153](#):

**Figure 153:** Deauthenticate Client button in Current Association section of Clients > Client Detail

Current Association			
Username:	ARUBANETWORKS\abartz		
Role:	Aruba-Employee	AP/Device:	1341-AP09 (1341-ap09.arubanetworks.com)
Signal Quality:	45	Controller:	Chuckwagon (chuckwagon.arubanetworks.com)
Association:	5/28/2013 9:31 AM	Group:	Aruba HQ
Duration:	3 hrs 33 mins	Folder:	Top
Mode:	802.11n (2.4 GHz)	AP/Device Location:	-
Usage:	480 bps	Radio:	802.11bgn
SSID:	ethersphere-wpa2	VLAN:	1108
Ch. BW:	HT20	Forward Mode:	Tunnel Encrypted
LAN IP 1:	10.11.9.83	LAN Hostname 1:	sjc-abartz-t.arubanetworks.com
Auth Type:	EAP	Auth Time:	3 hrs 33 mins
Cipher:	AES	Security Mode:	WPA2
SNMP Source:	Poll		
<input type="button" value="Deauthenticate Client"/>			

## Viewing a Client's Association History

Past association details of a client are tracked in the **Association History** table, which is located under the VisualRF illustration (if available) and the **Alert Summary** in **Clients > Client Detail**.

The columns in this table, shown in [Figure 154](#), are the same as the fields in the **Current Association** section for this user.

**Figure 154:** Association History in Clients > Client Detail (partial view)

Association History					
Username	AP/Device	SSID	Association Time	Duration	
host/SJC-abartz-T.arubanetworks.com	1341-AP17 (1341-ap17.arubanetworks.com)	ethersphere-wpa2	5/28/2013 9:22 AM	8 mins	
ARUBANETWORKS\abartz	1341-AP09 (1341-ap09.arubanetworks.com)	ethersphere-wpa2	5/24/2013 12:42 PM	2 hrs 45 mir	
ARUBANETWORKS\abartz	1341-AP15 (1341-ap15.arubanetworks.com)	ethersphere-wpa2	5/24/2013 10:02 AM	2 hrs 40 mir	
ARUBANETWORKS\abartz	1341-AP09 (1341-ap09.arubanetworks.com)	ethersphere-wpa2	5/24/2013 9:52 AM	10 mins	
ARUBANETWORKS\abartz	1341-AP15 (1341-ap15.arubanetworks.com)	ethersphere-wpa2	5/24/2013 9:31 AM	20 mins	



## Viewing the Rogue Association History for a Client

Past association details of a rogue client are tracked in the **Rogue Association History** table, which is located under the Association History table in **Clients > Client Detail**.

**Figure 155:** Rogue Association History table in Clients > Client Detail

**Rogue Association History**

1-1 ▼ of 1 Past Rogue Associations Page 1 ▼ of 1 Choose columns Choose columns for roles Export CSV

Rogue AP	SSID	BSSID	First Heard	Last Heard	Location	Signal	SNR	Connection Mode	Ch BW	Channel
Aruba Netw-E7:23:50	aruba-117-psk	6C:F3:7F:E7:23:50	5/13/2013 2:08 PM	5/13/2013 2:38 PM	-	-48	46	802.11a	-	44

1-1 ▼ of 1 Past Rogue Associations Page 1 ▼ of 1

## Evaluating Client Status with the Clients > Diagnostics Page


The **Clients > Diagnostics** page is accessible from the **Clients > Client Detail** page. You can access this page after performing a search for a user and then select the associated MAC address from the search results.

This page provides an overview of a WLAN user's general status and connectivity on the network, as illustrated in **Figure 156**.



This page is only available for connected clients.

**Figure 156:** Clients > Diagnostics page illustration

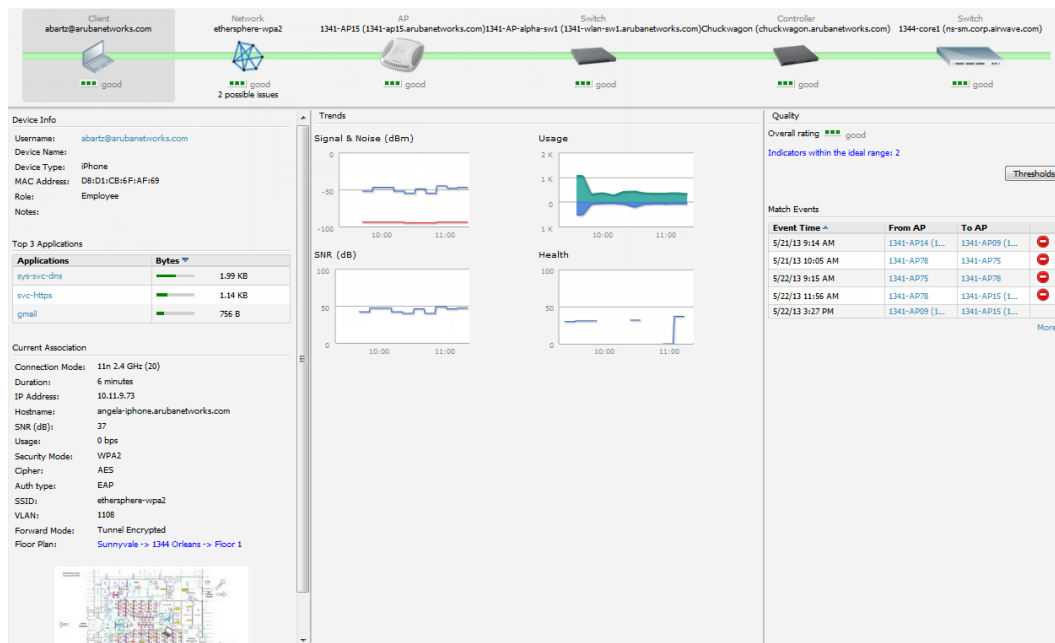

Each section of the **Clients > Diagnostics** page displays information by which to evaluate possible user issues, including the current association, usage, SNR value, health, steer events, and more. You can also click on the **Thresholds** button in the right panel to configure Good and Fair threshold values for APs, Clients, Controllers, Networks, and Switches. Note that values that fall below **Fair** are automatically considered as **Poor**.

# Managing Mobile Devices with SOTI MobiControl and OV3600

## Overview of SOTI MobiControl

SOTI MobiControl, the mobile device management platform for Windows Mobile, Apple, and Android devices, has been integrated into OV3600 to provide direct access to the MobiControl Web Console.

MobiControl runs on your Mobile Device Manager (MDM) server. This server provisions mobile devices to configure connectivity settings, enforce security policies, restore lost data, and other administrative services. Information gathered from mobile devices can include policy breaches, data consumption, and existing configuration settings.

Refer to the following for additional information:

- "Prerequisites for Using MobiControl with OV3600" on page 258
- "Adding a Mobile Device Management Server for MobiControl" on page 258
- "Accessing MobiControl from the Clients > Client Detail Page " on page 259

## Prerequisites for Using MobiControl with OV3600

In order to use the MobiControl integration in OV3600, the following is required:

- An OV3600 running version 7.2.3 or later
- An MDM server with SOTI MobiControl Console 8.0x
- A client device that is:
  - associated with WLAN infrastructure managed by the OV3600 server running 7.2.3 or later
  - being actively managed by the SOTI MobiControl server

For more information about setting up MobiControl, please see <http://www.soti.net/mc/help/>.

In order to use SOTI MobiControl from within OV3600, you must first add your MDM server and designate it as a MobiControl.

## Adding a Mobile Device Management Server for MobiControl

1. To add an MDM server to OV3600, navigate to **OV3600 Setup > MDM Server** and click **Add**. Complete the fields on this page. [Table 123](#) describes the settings and default values:

**Table 123:** *OV3600 Setup > MDM Server > Add Fields and Descriptions*

Field	Description
Hostname/IP Address	The address or DNS hostname configured for your MobiControl Web Console.
Protocol	Whether HTTP or HTTPS is to be used when polling the MDM server. The port on which to connect to the MDM server is inferred from the protocol: with HTTP, OV3600 will connect to port 80 of the SOTI server; with HTTPS, OV3600 will connect to port 443.
URL Context	The URL context appended to the server URL to build the URL when connecting with the SOTI server. For MobiControl v8.0x the default URL Context is MobiControlWeb. For MobiControl v8.5x the default URL Context is MobiControl.
Enabled	Whether this server can be polled by OV3600. Make sure it is set to <b>Yes</b> .
Username/Password	The login credentials for accessing the web console of the MobiControl system.
Polling Period	The frequency in which OV3600 polls the MDM server. The default is 5 minutes.

2. When finished, select **Add**.

The list page for the MDM server also displays:

- **Last Contacted** – The last time OV3600 was able to contact the MDM server.
- **Errors** – Issues, if any, encountered during the last contact.

During each polling period, OV3600 will obtain a list of all device IDs and their WLAN MAC addresses. The information about device OS, device OS Detail, Manufacturer, Model, Name are retrieved from MobiControl and populated to the **Clients > Client Detail** page for supported mobile devices. A **View device in SOTI MobiControl** link provides direct access to the MobiControl Web Console for additional details about the device. MobiControl information overrides data obtained from AOS-W switches running 6.0 or later.

## Accessing MobiControl from the Clients > Client Detail Page

In order to access the MobiControl web console for a SOTI-managed mobile device from within OV3600, follow these steps:

1. Navigate to a page that lists clients. This can include:
  - **Clients > Connected** or **Clients > All**
  - Search results that display user MAC addresses
2. Select the MAC address in the **Clients** list table. The **Clients > Client Detail** page displays.
3. Under the Classification field, select the **View device in SOTI MobiControl** link. A new window will display the MobiControl Web Console for this device.

## Monitoring and Supporting OV3600 with the Home Pages

The **Home** tab of OV3600 provides the most frequent starting point for monitoring network status and establishing primary OV3600 functions after OV3600 configuration is complete. From the **Home** tab, you can access the following pages.

**Table 124:** Home pages

Home Page	Description	Refer to
Overview	This page condenses a large amount of information about your OV3600. You can view the health and usage of your network and use shortcuts to view system information.	"Monitoring OV3600 with the Home > Overview Page" on page 260.
AppRF	This page allows IT to view mobile app usage and performance on the network.	Using the Home > AppRF Page
RF Performance	This page provides graphs that enable you to identify clients with low SNR rates, speed, and goodput. Users can click on a value in any of the graphs to view detailed client information. When the client information is displayed, an additional drill down to a folder level is available to view a specific client. Note that the Speed and Goodput graphs are only populated with information from Alcatel-Lucent devices that support AMON.	"Viewing the Home > RF Performance Page" on page 265.

**Table 124: Home pages (Continued)**

Home Page	Description	Refer to
RF Capacity	This page provides admin users with a summary of network usage over a one-week period. This information includes the number of clients and the channel utilization percentages. This information is run once per day after nightly maintenance is completed.	"Viewing the Home > RF Capacity Page" on page 266
Network Deviations	This page provides graphs that track your network's Client and Usage information and draw attention to unusual network usage patterns.	"Viewing the Home > Network Deviations Page" on page 268
Search	This page provides a simple way to find users, managed devices, groups, and rogues.	"The Home > Search Page " on page 269
Documentation	This page contains all relevant OV3600 documentation.	"Accessing OV3600 Documentation " on page 270
License	This page provides product licensing information.	"Viewing and Updating License Information " on page 271
User Info	This page is where logged-in users can configure their name, contact information, rogue count filter level, customized header columns, severe alert threshold, personalized search preferences, record display preferences, and the refresh rate of the console.	"Configuring Your Own User Information with the Home > User Info Page" on page 272

## Monitoring OV3600 with the Home > Overview Page

To view your overall network health, navigate to **Home > Overview** page. [Figure 157](#) illustrates this page, and [Table 125](#) describes the contents. The information that displays varies depending on your role.

Figure 157: Home > Overview Page Illustration

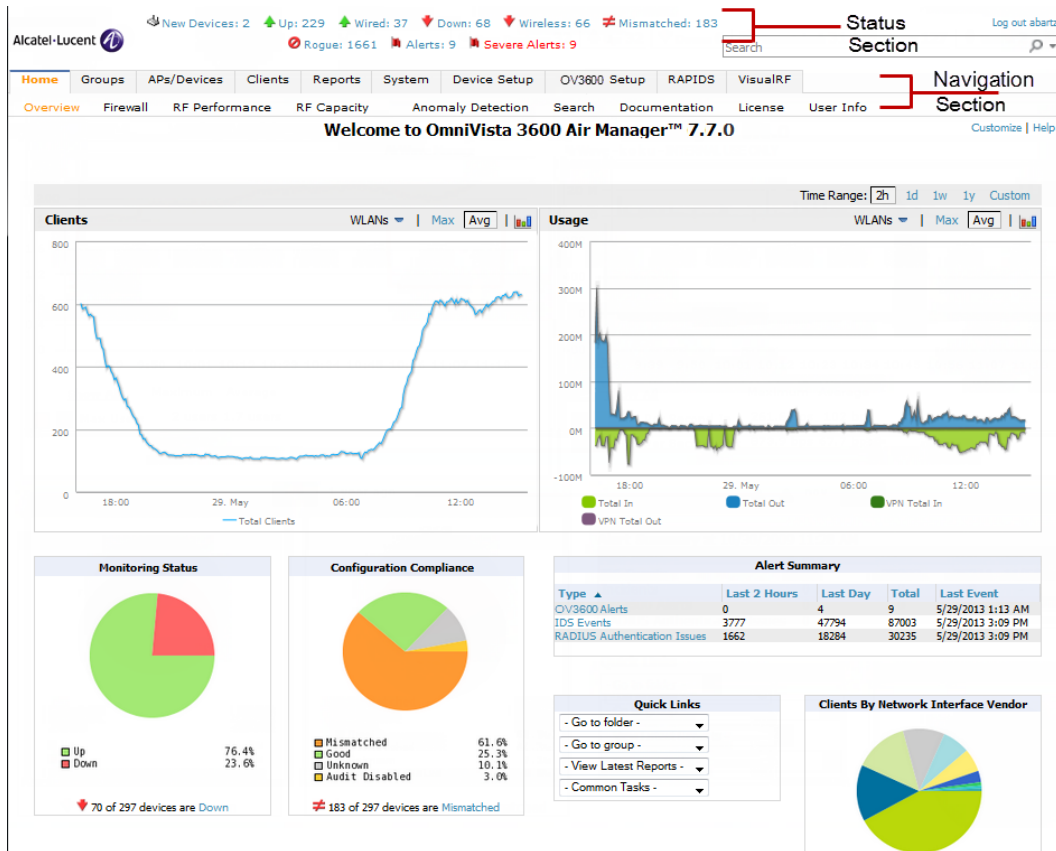


Table 125: Home > Overview Sections and Charts

Section	Description
Clients	<p>This chart is a graphical summary of the number of users on the network during a period of time. The time can be adjusted. Select <b>Show All</b> to display a list of data series that this graph can display, such as the user count by SSID.</p> <p>Clear the <b>Max Clients</b> or <b>Avg Clients</b> check box to change the display of the graph. The graph displays the maximum number of users by default. To view historical graphs in a new window, select the three-bar icon on the upper right of the chart.</p>
Usage	<p>This adjustable chart displays bandwidth data over time. To remove bandwidth in or out from the graphical display, clear the check box for <b>Avg Bits Per Second In</b> or <b>Out</b>.</p> <p>To display details for specific devices, select <b>Show All</b> and select the devices to be included in the graphical bandwidth summary chart. To view historical graphs in a new window, select the three-bar icon on the upper right of the chart.</p>
Monitoring Status	<p>This pie chart shows the percentage of all devices that are up and down on the network. To review devices that are down, select <b>Down</b> in the legend or the chart, and the <b>APs/Devices &gt; Down</b> page displays.</p>

**Table 125: Home > Overview Sections and Charts (Continued)**

Section	Description
Configuration Compliance	The pie chart displays all known device configuration status on the network. Devices are classified as <b>Good</b> , <b>Unknown</b> , <b>Mismatched</b> , or <b>Audit Disabled</b> . Select the <b>Mismatched</b> link to see the <b>APs/Devices &gt; Mismatched</b> page.
Alert Summary	This section displays all known and current alerts configured and enabled in the <b>System &gt; Alerts</b> page (refer to " <a href="#">Viewing, Delivering, and Responding to Triggers and Alerts</a> " on page 232). Alerts can be sorted using the column headers ( <b>Type</b> , <b>Last 2 Hours</b> , <b>Last Day</b> , <b>Total</b> , or <b>Last Event</b> ). The <b>Alert Summary</b> field displays three types of alerts: <ul style="list-style-type: none"> <li>• OV3600 Alerts</li> <li>• IDS Events</li> <li>• RADIUS Authentication Issues</li> </ul> Select any alert type for more information.
Quick Links	The <b>Quick Links</b> section provides drop-down menus that enable you to move to the most common and frequently used pages in OV3600 as follows: <ul style="list-style-type: none"> <li>• <b>Go to folder</b>—This menu lists all folders defined in OV3600 from the <b>APs/Devices List</b> page. See "<a href="#">Using Device Folders (Optional)</a>" on page 159.</li> <li>• <b>Go to group</b>—This menu lists all groups defined in OV3600, and enables you to display information for any or all of them. Use the <b>Groups</b> pages to edit, add, or delete groups that appear in this section. See "<a href="#">Configuring and Using Device Groups</a>" on page 80.</li> <li>• <b>View Latest Reports</b>—OV3600 supports creating custom reports or viewing the latest daily version of any report. Select any report type to display the daily version. See "<a href="#">Creating, Running, and Emailing Reports</a>" on page 281.</li> <li>• <b>Common Tasks</b>—This menu lists quick links to the most heavily used task-oriented pages in OV3600, to include the following: <ul style="list-style-type: none"> <li>■ <b>Configure Alert Thresholds</b>—This link takes you to the <b>System &gt; Triggers</b> page. See "<a href="#">Viewing Triggers</a>" on page 232.</li> <li>■ <b>Configure Default Credentials</b>—This link takes you to the <b>Device Setup &gt; Communication</b> page. See "<a href="#">Configuring Communication Settings for Discovered Devices</a>" on page 59.</li> <li>■ <b>Discover New Devices on Your Network</b>—This link takes you to the <b>Device Setup &gt; Discover</b> page. See "<a href="#">Discovering, Adding, and Managing Devices</a>" on page 127.</li> <li>■ <b>Supported Devices and Features</b>—This link displays a PDF that summarizes all supported devices and features in chart format for OV3600.</li> <li>■ <b>Upload Device Firmware</b>—This link displays the <b>Device Setup &gt; Upload Firmware &amp; Files &amp; Files Upload</b> page. See "<a href="#">Loading Device Firmware Onto OV3600 (optional)</a>" on page 62.</li> <li>■ <b>View Event Log</b>—This link displays the <b>System &gt; Event Log</b> page. See "<a href="#">Using the System &gt; Event Log Page</a>" on page 222.</li> </ul> </li> </ul>

The **Customize** link on the upper-right side of the page allows you to customize the widgets on the **Home > Overview** page. See "[Customizing the Dashboard](#)" on page 22 for more information.

## Using the Home > AppRF Page

The **Home > AppRF** pages display mobile app usage and performance on the network, and are available to network administrators only. This page is disabled by default. The option to enable this page is on the **OV3600 Setup > General** page under the Additional OV3600 Services section. These



The **Home > AppRF** pages are renamed, starting with OmniVista 3600 Air Manager 8.0. In previous versions, they were named **Home > Firewall**.


This page mimics the AppRF/Firewall dashboard page on the switch. It provides charts to easily view trending information for the top three destinations and applications for a selected folder. You can drill down to view more specific information based on the application, destination, device, WLAN, user, and role.

OV3600 can provide up to two weeks of network data for multiple switches. This data can be used to troubleshoot application performance in real time, to set WLAN policies, and to plan for future network enhancements.



The **Home > AppRF** pages may show IP addresses rather than resolved names. OV3600 receives this message from the switch via AMON and does not automatically resolve the IP addresses. In addition, the query that performs this function requires an authenticated switch user with the appropriate CLI credentials.

**Figure 158:** Home > AppRF page

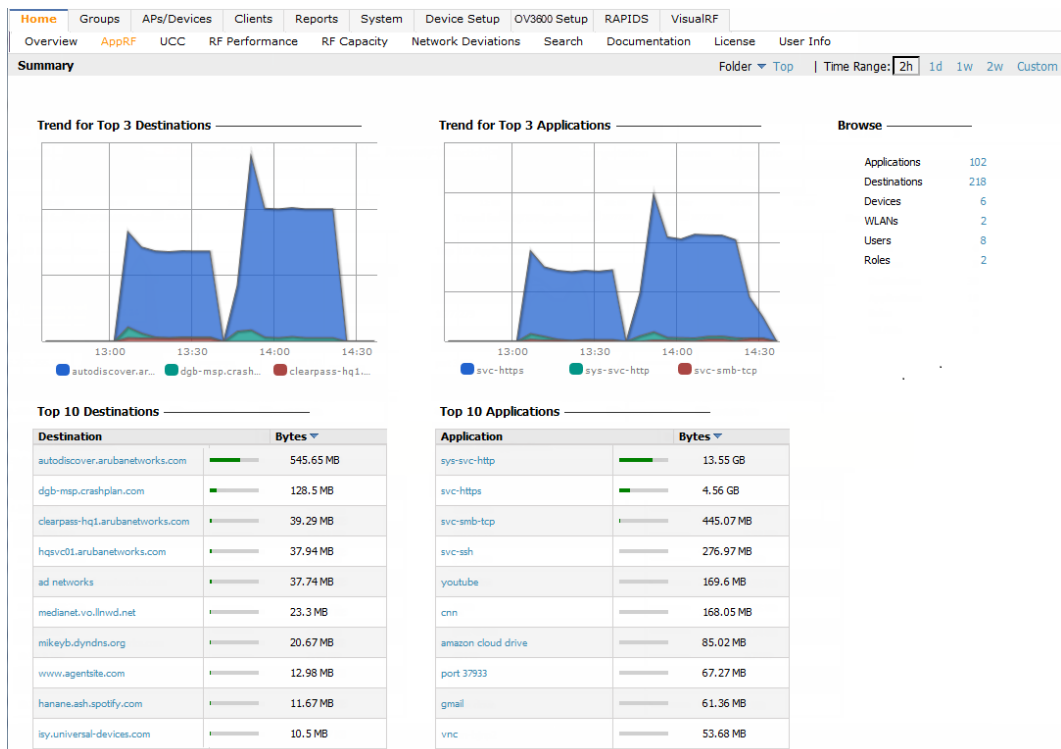

## Using the Home > UCC Page

The **Home > UCC** pages show an aggregated view of the Unified Communication and Collaboration (UCC) calls made in the network. This page mimics the UCC dashboard page on the switch. It provides charts that display trending information for UCC call volume, quality and clients. Network administrators can see a top level view of the call quality assessment, and further drill down into a specific view based on the analysis required.

Call Quality is encapsulated into an Alcatel-Lucent-proprietary metric called **UCC Score**. The UCC Score for voice and video calls is measured by taking into account the following metrics:

- Delay
- Jitter
- Packet Loss

OV3600 obtains these metrics from RTP messages sent from the client (if the client is capable of sending them), or for audio calls, by obtaining the values calculated by the Alcatel-Lucent AP inspecting the RTP flows. The following table describes the different UCC score categories.

**Table 126: UCC Quality Levels**

UCC Score	Quality Indication
71 or greater	Good quality seen by the network
31 to 70	Fair quality seen by the network
0 to 30	Poor quality seen by the network

## Call Quality

This pane provides information about the quality of calls on the network over the selected time period. Select the type of call quality information displayed on this pane by clicking the **Trend**, **Distribution** or **APs** links in the upper right corner of the call quality chart.

The **Trend** chart shows the number of calls with good, fair, or poor client health over the selected time period. The **Distribution** graph shows the relative proportions of calls with each quality type, and the **APs** chart shows information about APs that supported poor quality calls. You can also hover your mouse over the **Trend** or **Distribution** charts to view details about the highlighted section of that chart.

## Quality Correlation

These graphs display the correlation between the call quality and the client health of every UCC call. The client health metric displayed in these charts is the efficiency at which that AP transmits downstream traffic to a particular client. This value is determined by comparing the amount of time the AP spends transmitting call data to a client to the amount of time that would be required under ideal conditions, that is, at the maximum Rx rate supported by client, with no data retries. A client health metric of 100% means the actual airtime the AP spends transmitting data is equal to the ideal amount of time required to send data to the client. A client health metric of 50% means the AP is taking twice as long as is ideal, or is sending one extra transmission to that client for every packet. A metric of 25% means the AP is taking four times longer than the ideal transmission time, or is sending 3 extra transmissions to that client for every packet.

Select the type of quality correlation information displayed on this pane by clicking the **Trend** or **Scaterplot** links in the upper right corner of the quality correlation chart. The **Trend** quality correlation chart shows the number of calls with good, fair, or poor client health over the selected time period, while the **Scatterplot** chart shows the call quality and client health of each individual call. You can also hover your mouse over the **Trend** or **Scatterplot** charts to view details about the highlighted section of that chart.

## Call Volume

The Call Volume **Trend** graph and table displays the number of calls made during the selected time period using a specific UCC application type, such as SIP, Lync, SCCP, H.323, NOE, SVP, VOCERA, or FaceTime. You can hover your mouse over this chart to view details about the highlighted section. The Call Volume **APs** graph shows the names of the APs that supported these calls. Select the type of call volume information displayed on this pane by clicking the **Trend** or **APs** links in the upper right corner of the call volume chart.

## Devices

These graphs display information about the calls made by different device types, such as Windows 7, Mac OS X, iPhone, or Android devices. The Devices **Trend** graph show the numbers of calls by each platform type over the selected time period. The **Distribution** chart shows the relative proportion of calls that originated from each device type, and the Devices **Quality** graph shows the numbers of calls at each quality level made by each device type. Hover your mouse over the **Trend** or **Distribution** charts to view details about the highlighted section of that chart.

## UCC Chart Details

To display an aggregated list of all the UCC call data metrics in OmniVista 3600 Air Manager, click any of the following hyperlinks on the **Home > UCC** page:



- The **Call Details** link below the **Call Quality Trend** and **Call Quality Distribution** graphs.
- **Call Volume Details** link below the **Call Volume Trend** graph.
- The **Call Details** link below the **Quality Correlations Trend** and **Quality Correlations Scatterplot** graphs, and the **Call Quality Trend** and **Call Quality Distribution** graphs.
- The **Device Details** link below the **Devices Trend** and **Devices Distribution** graphs.


By default, the data in this table is displayed by the call start time, with the most recent call at the top of the list. Click the heading of any column to sort information in the table according to that column. Information in this table can be filtered using the **Filter** icon (  ) at the top of column headings.

Figure 159 displays an aggregated list of all the UCC call data metrics in OmniVista 3600 Air Manager.

**Figure 159: UCC Details View**

Start Time	End Time	Client	Call Type	Call Quality	Client Health	Call State	Termination Reason	Roamed	QOS Correction	AP
4/28/14, 12:03 PM	4/28/14, 12:03 PM	COSULLIVAN	Voice	Unknown	Unknown	Aborted	Inactivity	No	Yes	AP01
4/28/14, 12:02 PM	4/28/14, 12:32 PM	pcellanus	Voice/Conf	Good	Good	Success	Terminated	No	Yes	AP25
4/28/14, 12:02 PM	-	SusanW	Voice	Good	Good	Active	NA	No	Yes	AP17
4/28/14, 12:01 PM	-	RPASTOR L	Voice/Conf	Good	Good	Active	NA	No	Yes	AP17
4/28/14, 12:01 PM	4/28/14, 12:22 PM	lsecor	Voice	Good	Good	Success	Terminated	No	Yes	AP34

## Viewing the Home > RF Performance Page

The **Home > RF Performance** page provides graphs that enable you to identify clients with low SNR rates, health, speed, and goodput. In the upper-left corner of this page, you can limit the information that displays by selecting a specific folder from the upper-right corner of the page.




The Speed and Goodput graphs are only populated with information from Alcatel-Lucent devices that support AMON. The Health graph and chart are only populated with information from controllers running AOS-W 6.3 or greater.

**Figure 160: Home > RF Performance**



You can click on a value in any of the graphs to view the associated list of clients.

Figure 161: Drill down to view all clients

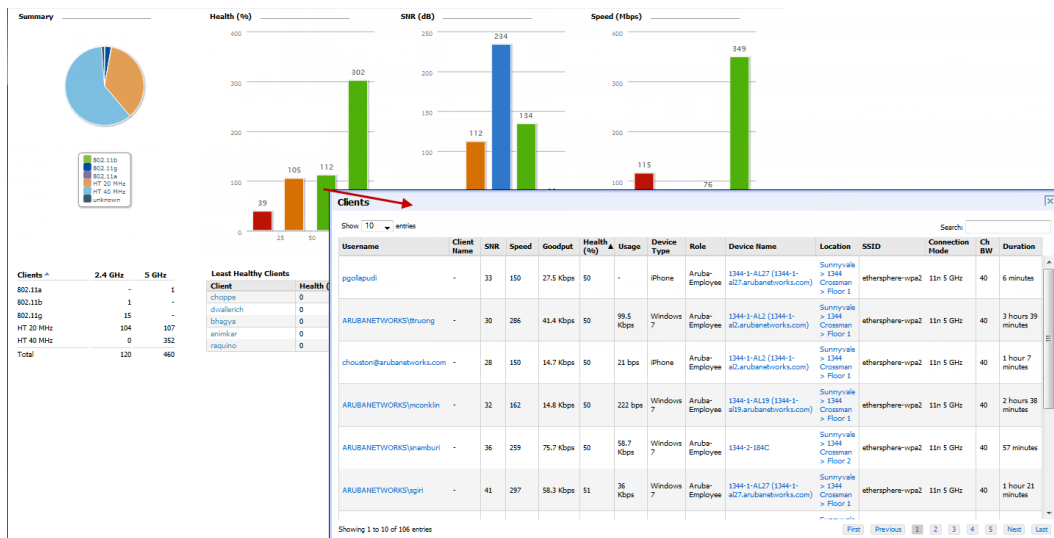

When the client information is displayed, an additional drill down is available to view information for a specific client, device, or location.



When you click on a Username in the Client page, the drill down takes you to the **Clients > Diagnostics** page. Navigate to the **Clients > Client Details** page for additional detailed information about the selected client.

## Viewing the Home > RF Capacity Page

The **Home > RF Capacity** page provides summarized client and channel information for traffic that occurred on your network over the last week. This page is updated after nightly maintenance has completed. The process goes over all the radios and determines the maximum client count and maximum channel utilization for each radio.

This page includes two sets of graphs. The top tables show the total number of clients that have connected over the last week (2.4 GHz and 5 GHz) and the percentage of these that were above the usage threshold. The bottom graphs show the number of clients that were connected during low and high channel utilization.



This page is only available to Admin users.

**Figure 162:** *The Home > RF Capacity page*




You can click on a bar in the upper graphs to view a popup showing a detailed list of the devices that connected in the week before the RF Capacity page was run. This popup includes additional drill downs to the device, the controller, and the folder. You can also search in this popup.

**Figure 163:** *Example of 2.4 GHz radio popup*

APs/Devices	Max. Utilization	% of Time above Threshold	AP Type	Controller	AP Folder
00:1a:1e:c1:44:42 (ap-4000-3.dev.airwave.com)	0	0	Aruba AP 125	Aruba651	Top
00:24:6c:c8:7f:58	0	0	Aruba AP 105	Aruba651	Top
1142-ac.arubanetworks.com	81.8898	4.33	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1142-ac.arubanetworks.com	64.1732	6.88	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1153-ac.arubanetworks.com	84.252	11.2	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1153-ac.arubanetworks.com	65.3543	4.4	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1242-ac.arubanetworks.com	82.6772	1.96	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1242-ac.arubanetworks.com	74.4094	8.47	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1248-ac.arubanetworks.com	86.2205	11.67	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top
1248-ac.arubanetworks.com	70.8661	18.85	Aruba AP 225	ethersphere-1322-porfidio.arubanetworks.com	Top

The plot points in the lower graph shows the number of clients that were connected during the peak utilization time along with the channel utilization percentage. You can select plot points in the lower graph to view detailed channel utilization information for the selected plot point.

Figure 164: Example popup showing channel utilization

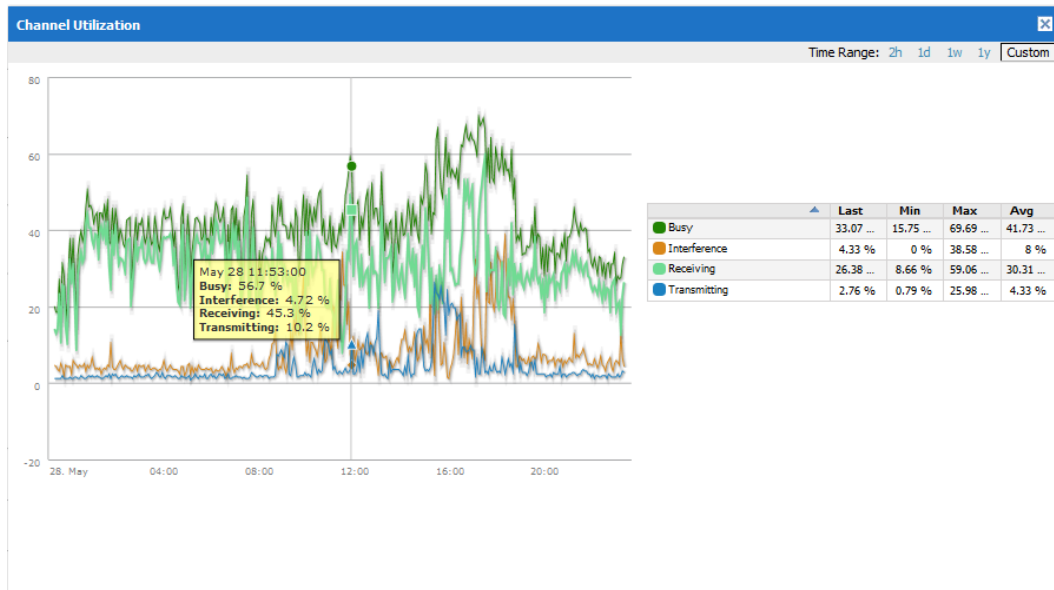

## Viewing the Home > Network Deviations Page

The **Home > Network Deviations** page provides graphs that track your network's Client and Usage information and draw attention to unusual network usage patterns. These graphs can show you, for example, if heavy network traffic is occurring during off hours, or they can be used to detect the time(s) of day when your network traffic peaks.

By default, the graph lines display, in five-minute intervals, the previous 2 hours of client and usage information for the current day of the week averaged out over the last 40 weeks. The shaded area indicates the standard deviation, which defaults to 1. So, for example, if you launch this page at 9:00 am on a Friday, then a 2-hour graph will show the current and average number of connected clients and usage between 7:00 AM and 9:00 AM on all Fridays over the last 40 weeks, with plot points showing the number of clients for every five minutes. You can also select/drag a set of plot points to zoom in and view a more precise time range. Click the **Reset zoom** button to return to the specified time range. You can change the time range of the graphs to 4 hours, 8 hours, or 1 day using the time-range options in the upper-right corner of this page, and OV3600 will remember the new setting the next time the page is launched.

The left graph shows client information - specifically the current and average number of clients over the last 40 weeks during the selected time range. The right graphs show usage information - specifically the current and average incoming and outgoing bits-per-second over the last 40 weeks during the selected time range. The shaded/gray color within the graphs indicates the standard deviation. Any blue lines (Avg Clients, Avg Out Usage) or green lines (Avg In Usage) that appear outside of the shaded/gray area can be considered deviation points because the value does not come within the range of the calculated standard deviation.

---

This operation can consume a significant amount of CPU capacity as it parses through large amounts of data. Larger deployments you may have to wait up to a minute before seeing the initial graph plot points. In addition, this page does not automatically refresh, rather it refreshes each time this page is selected and/or each time you click Refresh. As a result, if you click this page, navigate away, and then return to this page, the page will begin to load again. If your network includes a large amount of data, then a best practice is to open this page in a new tab before navigating to another page. In this case, the Network Deviations page will continue to load while you continue to work in OV3600.

---



Figure 165: Home > Network Deviations page

The first time this page is launched, the graphs will display information for all devices in the Top folder. To specify a different folder, simply select one from the folder drop down in the upper-right corner, and then refresh the page. OV3600 will remember the new setting the next time that the page is launched.

By default, the graphs display average and standard deviation information for the current time over the last 40 weeks. Click the **Thresholds** button in the lower right corner to change these defaults. OV3600 will remember the new setting the next time that the page is launched.



---

The **Thresholds** button is disabled while the page is loading. The **Folder** drop down is disabled until the first plot points display.

---

**Figure 166: Network Deviations Threshold**

## How Standard Deviation is Calculated

Plot lines may or may not display outside of the shaded, standard deviation range depending on the SD value specified from Thresholds button. Refer to the following example to review the way that standard deviation is calculated.

### Standard Deviation Example

#### Assumptions:

- Mean: 5
- Standard Deviation: 2

SD(1) :

-----

1\*SD +- Mean

1\*2 +- 5

2 +- 5

Normal Range: 3 - 7

SD(2) :

-----

2\*SD +- Mean

2\*2 +- 5

4 +- 5

Normal Range: 1 - 9

SD(3) :

-----

3\*SD +- Mean

3\*2 +- 5

6 +- 5

Normal Range: 0 - 11 (-1 is not considered, so 0 is taken)

Given the information above, if the Average Client Count over the last 40 weeks is 5, then this is not an anomaly (deviation) for any SD value. On the other hand, if at one point the client count was 8, then this would be an anomaly for SD1, whose normal client range is from 3-7. The plot point would appear outside of the shaded area when the standard deviation is set to 1, but it would be normal from a standard deviation of 2 or 3.

## The Home > Search Page

The **Search** field at the top of every OV3600 page allows you to perform a search across a number of common categories. The **Home > Search** page provides the results of the search.

The Search feature can perform partial string searches on a large number of fields including the notes, version, secondary version, radio serial number, device serial number, LAN MAC, radio MAC and apparent IP address of all the APs, as well as the client MAC, VPN user, Client, LAN IP and VPN IP fields. [Figure 167](#) illustrates this page.

To perform a search, enter the keyword or text in the search box. If you are searching for a MAC address, enter that in colon-delimited format. Then perform one of the following search functions:

- Press Enter to perform a default search. This default is based on the user search method preference specified in **Home > User Info**.
- Select a different search method from the list of drop-down options.
- Select the magnifying lens icon (🔍) to perform a quick search. The search results open in a separate popup and show results for connected clients. (Keep in mind that in some cases, this may already be the default search method.)

The results display after a short moment. Results support several hypertext links to additional pages, and the **Filter** icon over some columns allows for additional filtering of search returns.

Search results are categorized in the following sequence. Categories of search results can be customized on the **Home > User Info** page to limit the scope of information returned. Not all categories below are returned for a given search:

- Devices
- Clients
- VPN Sessions
- Rogue Devices and Rogue Clients
- Tags
- Folders and Groups

**Figure 167: Home > Search Page Illustration with Sample Hits on 00: (partial view)**

Search for managed devices and wireless clients. A single substring match is used (e.g. 00:40:96, 004096). To perform an exact match search, quote the search string with " or "" (e.g. '192.168.23.2' or "search string"). Search is case insensitive. Search includes historical client records.

Current search method: **Active + historical clients + all categories**.  
 Change search preference on the [User Info](#) page.

---

**Devices**

Modify Devices

1-5 ▼ of 253 APs/Devices Page 1 ▼ of 51 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

Device ▲	Status ▼	Detailed Status ▼	Upstream
00:0b:86:cf:93:81.foo.com	Down ▼	Virtual Controller is Down	-
00:0b:86:cf:95:94.foo.com	Down ▼	Virtual Controller is Down	-
00:1a:1e:c1:44:42 (ap-4000-3.dev.airwave.com)	Planned Down	Controller is Down — device in planned downtime mode	-
00:24:6c:c8:7f:58	Down ▼	Controller is Down	-
1142-ac.arubanetworks.com	Up	OK	-

1-5 ▼ of 253 APs/Devices Page 1 ▼ of 51 > > | [Reset filters](#)

**Clients**

1-5 ▼ of 2,285 Clients Page 1 ▼ of 457 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

Username	Device Type ▼	MAC Address	AP/Device ▼	SSID ▼	VLAN
Search					
-	Wistron	00:26:2D:AB:A5:7F	-	-	2504
xiaobo.chu@us.com	Windows XP	18:3D:A2:56:AA:F8	1344-2-41c	ARUBA-VISITOR	-
-	Windows XP	00:25:9C:DE:29:4D	AP225-SW (ap225-sw.arubanetworks.com)	ARUBA-VISITOR	76
smulleria	Windows XP	00:1A:73:15:8E:4D	-	ethersphere-wpa2	108
ARUBANETWORKS\rinman	Windows XP	00:27:10:A6:70:30	1341-AP04 (1341-ap04.arubanetworks.com)	ethersphere-wpa2	1108

1-5 ▼ of 2,285 Clients Page 1 ▼ of 457 > > | [Reset filters](#)

Select All - Unselect All

**VPN Sessions**

1-5 ▼ of 79 VPN Sessions Page 1 ▼ of 16 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

Username	Active Sessions	First Seen	Last Seen ▲
Search			
ARUBANETWORKS\dshanmugam	0	4/2/2013 7:24 AM	5/29/2013 7:00 AM
ARUBANETWORKS\spadavala	0	12/14/2012 7:35 AM	5/29/2013 11:09 AM
panisaras@arubanetworks.com	0	12/20/2012 12:50 AM	5/28/2013 9:45 PM
ARUBANETWORKS\pkallappa	0	12/14/2012 9:10 PM	5/28/2013 3:50 AM
ARUBANETWORKS\achatterjee	0	12/14/2012 8:14 AM	5/29/2013 10:46 AM

1-5 ▼ of 79 VPN Sessions Page 1 ▼ of 16 > > | [Reset filters](#)

## Accessing OV3600 Documentation

The **Home > Documentation** page provides easy access to all relevant OV3600 documentation. All of the documents on this page are hosted locally by your OV3600 server. The PDF files can be viewed by any PDF viewer, and the HTML files can be viewed in any supported browser.

If you have any questions that are not answered by the documentation, please contact Alcatel-Lucent support.

## Viewing and Updating License Information

Navigate to the **Home > License** page using the standard OV3600 menu. This page allows you to view current licenses and, in OV3600 8.0 and later, add additional licenses.

To add a new license:

1. Open the email containing your license key, and select and copy the text of that license.
2. From the **Home > License** page, click **Add**. A popup window opens.
3. Paste the text of the license into the popup window, and click **Add**. The Alcatel-Lucent End-User License Agreement appears.
4. Review the license agreement, then click **I Accept**.

Figure 168 illustrates this page, and Table 127 describes the contents.

**Figure 168:** Home > License Page Illustration

**Summary**

Name ▲	Value
Type	OV3600
Days Remaining	-
Approved Devices	271
Max. Device Count	2600

**Licenses**

	Organization ▲	Product	Package	Type	Device Count	IP Address	Days Remaining	Expiration Date	Valid
<input type="checkbox"/>	A Network	OV3600	AMP-ENT	OV3600	2500	10.2.27.22	-	-	Yes
<input type="checkbox"/>	A Network	OV3600	AW-100	OV3600	100	10.2.27.20	-	-	Yes

System Performance

**Details for license** ✕

--- Begin OV3600 License Key ---  
 Organization: A Network  
 IP\_Address: 10.2.27.20  
 Product: OV3600  
 Package: AW-100  
 APs: 100  
 RAPIDS: Yes  
 VisualRF: Yes  
 Serial: W0000029339  
 Generated: Fri Feb 21 19:12:08 2014 UTC  
 --- Signature ---  
 i8DBQFTB6UIvN8PdJTKS2ERAr7xAJJYg6bIhzmC2+vZVSF8yUDhgCfe7z3J4v7  
 nyztCZZOpCx55XbN25yiEI=  
 =or85  
 --- End OV3600 License Key ---

**Table 127:** Home > License Static Fields and Descriptions

Field	Description
Organization	Displays the organization listed on your license key.

**Table 127: Home > License Static Fields and Descriptions (Continued)**

Field	Description
Product	This product description is read directly from the license key.
Package	Displays the license type. For example, this could be a license for an enterprise OV3600, or a smaller license to support additional devices.
Type	Shows if the license is for a standalone OV3600, a master console, or a failover OV3600
Device Count	Number of devices supported by the license.
IP Address	IP address of the OV3600 using the license. This address is read directly from the license key.
Days Remaining/ Expiration Date	For temporary or evaluation licenses, these fields show the number of days remaining and the expiration date for the license.
Valid	This field displays a <b>Yes</b> to indicates that the license is currently valid and active.

## Configuring Your Own User Information with the Home > User Info Page

The **Home > User Info** page displays information about the user that is logged into OV3600. This page includes the authentication type (local user, RADIUS, or TACACS+) and access level. This page enables customization some of the information displayed in OV3600, and is the place to change your password.

The logged-in users can customize the information displayed in the OV3600 header. [Figure 169](#) illustrates the **Home > User Info** page, and [Table 128](#) lists the fields.



**Figure 169:** Home > User Info Page Illustration

**admin** is logged in as a local database user with role *Admin* and Administrator access to RAPIDS.

**User Information**

Password:   
Changing your password will log you out.

Confirm Password:

Name:

Email Address:

Phone:

Notes:

---

**Top Header Stats**

Filter Level For Rogue Count:

Customize Header Columns:  Yes  No

---

**Search Preferences**

Search Method:

---

**Display Preferences**

Default Number of Records per List:

Reset List Preferences:

Customize Columns for Other Roles:  Yes  No

Console Refresh Rate:

Idle Timeout (5 mins to 240 mins):

**Table 128:** Home > User Info Fields and Descriptions

Field	Description
<b>Top Header Stats</b>	
Filter Level For Rogue Count	Specifies the minimum classification that will cause a device to be included in the rogue count header information. More about the classifications can be found in " <a href="#">switch Classification with WMS Offload</a> " on page 206.
Customize Header Columns	Enables/disables the ability to control which statistics hyperlinks (also known as Top Header Stats) are displayed at the top of every OV3600 screen.

**Table 128:** Home > User Info Fields and Descriptions (Continued)

Field	Description
Stats	<p>Select the specific data you would like to see in the Top Header Stats. Refer to the "Status Section" topic in the <i>OmniVista 3600 Air Manager 8.0 Installation Guide</i>.</p> <p><b>Note:</b> This field only appears if you selected <b>Yes</b> in the previous field.</p>
Severe Alert Threshold	<p>Configures the minimum severity of an alert to be included in the Severe Alerts count. See "<a href="#">Setting Severe Alert Warning Behavior</a>" on page 28 for details.</p> <p><b>Note:</b> The severe alerts count header info will only be displayed if 'Severe Alerts' is selected in the <b>Stats</b> section above and if a severe alert exists.</p> <p><b>Note:</b> This field only appears if you selected <b>Yes</b> in the <b>Customize Header Columns</b> field.</p>
Include Device Types	<p>Configures the types of devices that should be included in the header stats. If a device type is not selected then it will not be included in the header stats.</p> <p><b>Note:</b> This field only appears if you selected <b>Yes</b> in <b>Customize Header Columns</b>.</p>
<b>Search Preferences</b>	
Search Method	<p>Specify one of the following search methods:</p> <ul style="list-style-type: none"> <li>● Use System Defaults: The Search Method will be based on the system-wide configuration setting. This method is configured on the <b>OV3600 Setup &gt; General</b> page. Active clients + all devices: This looks at all active clients (not historical) and all devices. This search is not case-sensitive.</li> <li>● Active clients + historical clients (exact match) + all devices: Commonly referred to as Quick Search, this looks at all active and historical clients and all devices. This search is not case-sensitive. The results of this search display in a popup window rather than on the <b>Home &gt; Search</b> page. This popup window includes top-level navigation that allows you to filter the results based on Clients, APs, Controllers, and Switches.</li> <li>● Active clients + all categories: This looks at all active clients (not historical) and all categories. This search is not case-sensitive.</li> <li>● Active clients + all categories (exact match): This looks at all active clients (not historical) and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.</li> <li>● Active + historical clients + all categories: This looks at all active and historical clients and all categories. This search is not case-sensitive.</li> <li>● Active + historical clients + all categories (exact match): This looks at all active and historical clients and all categories. This search returns only matches that are exactly as typed (IP, username, device name, etc). This search is case-sensitive for all searched fields.</li> </ul>
<b>Display Preferences</b>	
Default Number of Records per List	<p>Defines the number of rows to appear in any list by default. If a row count is manually set, it will override the default setting.</p>
Reset List Preferences	<p>Reset all list preferences including number of records per list, column order and hidden column information.</p>

**Table 128:** Home > User Info Fields and Descriptions (Continued)

Field	Description
Customize Columns for Other Roles	Allows admin users to determine the columns that should be displayed and the order they should be displayed for specific user roles. To customize lists for other users, navigate to that list and select <b>Choose Columns for roles</b> above the list. Make the desired column changes; select the roles to update and <b>Save</b> .
Console Refresh Rate	The frequency in which lists and charts automatically refresh on a page.
Idle Timeout (5 mins to 240 mins)	Number of minutes of idle time until OV3600 automatically ends the user session. This setting only the logged-in user of this OV3600. The default is 60 minutes. To set the max idle timeout for all users of this OV3600, see " <a href="#">Setting Up Login Configuration Options</a> " on page 50.

To configure your own user account with the **Home > User Info** page, enter the following information in the **User Information** section:

- **Name**—Enter the ID by which you log into and operate in OV3600.
- **Email Address**—Enter the email address to be used for alerts, triggers, and additional OV3600 functions that support an email address.
- **Phone**—Enter the area code and phone number, if desired.
- **Notes**—Enter any additional text-based information that helps other OV3600 users or administrators to understand the functions, roles, or other rights of the user being created.

## Supporting OV3600 Servers with the Master Console

The **Master Console** (MC) is used to monitor multiple OV3600 stations from one central location. The **Master Console** is designed for customers running multiple OV3600 servers. Once an OV3600 station has been added to the MC, it will be polled for basic OV3600 information.




---

The license key determines if the server will behave as a Master Console or as a standard OV3600 server.

---

Much like the normal **Home > Overview** page, the **Master Console Home > Overview** page provides summary statistics for the entire network at a glance. [Figure 170](#) illustrates the Overview page:

Figure 170: Master Console Home > Overview Page Illustration

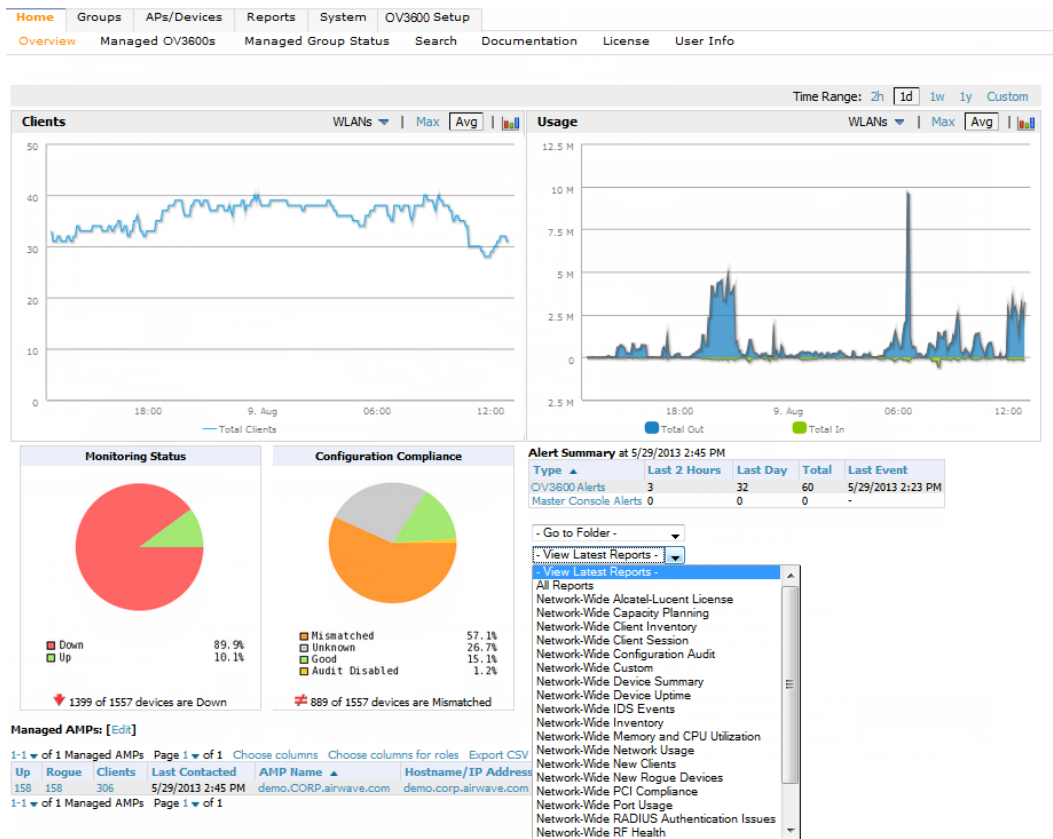

- Reports can be run from the **Master Console** to display information from multiple OV3600 stations; because such reports can be extremely large, reports can also be run as summary only so that they generate more quickly and finish as a manageable file size.
- The **Master Console** can also be used to populate group-level configuration on managed OV3600 installations using the **Global Groups** feature.
- The **Master Console** offers a display of devices that are in a **Down** or **Error** state anywhere on the network. This information is supported on **Master Console** pages that display device lists such as **Home > Overview** and **APs Devices > List**.
- The **Master Console** and **Failover** servers can be configured with a **Managed OV3600 Down** trigger that generates an alert if communication is lost to a managed or watched OV3600 station. The **Master Console** or **Failover** server can also send email or NMS notifications about the event.




XML APIs are not supported on the Master Console.

## Using the Public Portal on Master Console

The **Master Console** also contains an optional Public Portal that allows any user to view basic group-level data for each managed OV3600. This feature is disabled by default for security reasons; no OV3600 or Master Console login is required to view the public portal. The Public Portal can be enabled in **OV3600 Setup > General** in the **Master Console** section. Once enabled, a new **Portal** tab will appear to the right of the **Groups** tab (refer to the navigation section in [Figure 170](#) in "Supporting OV3600 Servers with the Master Console" on page 275). The URL of the public portal will be <https://your.OV3600.name/public>. When you upgrade to the latest version of OV3600, the public portal is disabled by default, regardless of the type of license.

**Figure 171: Public Portal Page Illustration**

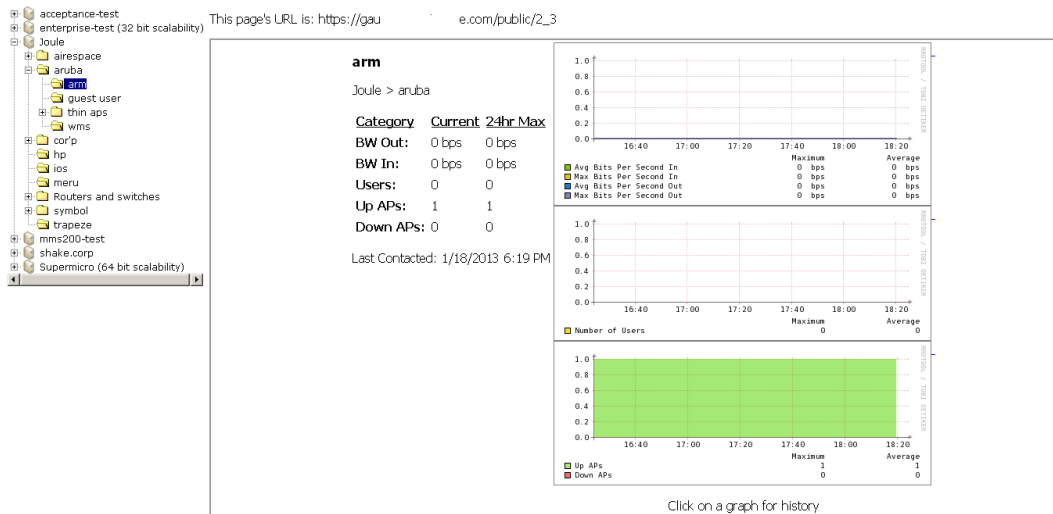

The Public Portal supports configuration of the iPhone interface. This can be configured using the Master Console OV3600 page.

## Adding a Managed OV3600 with the Master Console

Perform the following steps to add a managed OV3600 console.

1. Navigate to the **Home > Managed OV3600s** page.
2. Select the **pencil** icon to edit or reconfigure an existing OV3600 console, or select **Add New Managed OV3600** to create a new OV3600 console. The **Managed OV3600** page appears. Complete the settings on this page as described in [Table 129](#).

**Table 129: Managed OV3600 fields and default values**

Field	Default	Description
Hostname / IP Address	N/A	Enter the IP address or Hostname of the OV3600 server to be managed.
Polling Enabled	Yes	Enables or disables the Master Console polling of managed OV3600 server.
Polling Period	5 minutes	Determines how frequently the Master Console polls the managed OV3600 server.
Username	N/A	The username used by the Master Console to login to the managed OV3600 server. The user needs to be an AP/Device Manager or OV3600 Administrator.
Password (Confirm Password)	N/A	The password used by the Master Console to login to the managed OV3600 server.
HTTP Timeout (5-1000 sec)	60	Defines the timeout period used when polling the managed OV3600 server.
Manage Group Configuration	No	Defines whether the Master Console can manage device groups on the managed OV3600 server.

3. When finished, select **Add** to return to the **Managed OV3600s** list page.

## Using Global Groups with Master Console

To push configurations to managed groups using the OV3600 Global Groups feature, follow these steps:

1. Navigate to the Master Console's **Groups > List** page.
2. Select **Add** to add a new group, or select the name of the group to edit settings for an existing group.
3. Select the **Duplicate** icon to create a new group with identical configuration to an existing group. Groups created on the Master Console will act as Global Groups, or groups with master configurations that can be pushed out to subscriber groups on managed OV3600s. Global groups are visible to all users, so they cannot contain APs (which can be restricted based on user role).
4. Selecting the name of an existing group on the **Master Console** loads the subtabs for **Basic, Security, SSIDs, AAA Servers, Templates, Radio, Cisco WLC Config, Proxim Mesh,** and **MAC ACL** pages, if such pages and configurations are active for the devices in that group.

These subtabs contain the same fields as the group subtabs on a monitored OV3600, but each field also has a check box. The Master Console can also configure global templates that can be used in subscriber groups. The process is the same as described in the "[Creating and Using Templates](#)" on page 182, except that there is no process by which templates can be fetched from devices in the subscriber group on managed OV3600s. Instead, the template must be copied and pasted into the Master Console Global Group.

When a Global Group is pushed from the **Master Console** to subscriber groups on managed OV3600s, all settings will be static except for settings with the check box selected; for fields with check boxes selected, the value or setting can be changed on the corresponding tab for each managed group. For list pages, override options are available only on the **Add** page for each list. It will take several minutes for changes to Global Groups on the **Master Console** to be pushed to the managed OV3600s; make sure that the **Manage Group Configuration** option is enabled for each managed OV3600.

Once Global Groups have been configured on the **Master Console**, groups must be created or configured on the managed OV3600s to subscribe to a particular Global Group. To configure subscriber groups, enable **Use Global Groups** on the **Group > Basic** page of a group on a managed OV3600. Select the name of the Global Group from the drop-down menu, and then select **Save and Apply**. Note that the MC doesn't push anything when you create new subscriber groups; the copy of the Global Group already on the managed OV3600 provides the information.

Once the configuration is pushed, the non-overridden fields from the Global Group will appear on the subscriber group as static values and settings. Only fields that had the override check box selected in the Global Group will appear as fields that can be set at the level of the subscriber group. Any changes to a static field must be made on the Global Group.

The Global Groups feature can also be used without the Master Console. For more information about how this feature works, refer to "[Configuring and Using Device Groups](#)" on page 80.

## Controller Backups and Restoration

You can create a backup on demand by creating and collecting a flash backup from the controller. Daily backups are also created. At a minimum, there are four backup files:

- Two daily backups
- One backup from last week
- One backup from last month

The backup saved from a firmware upgrade is automatic and requires no manual intervention. All backups can be saved or restored and are displayed on the **Audit** page. You can only perform a backup on a device if the firmware version of the device and the backup image are identical. After you click **Restore**, the device on which the restoration is being performed automatically switches from monitor mode to maintenance mode. After you restore a backup image to a device, you must restart the OV3600.

## Using OV3600 Failover for Backup

The failover version of OV3600 provides a many-to-one hot backup server. The Failover OV3600 polls the watched OV3600s to verify that each is up and running. If the watched OV3600 is unreachable for the specified number of polls, the Failover OV3600 automatically restores the most recent saved backup from the watched OV3600 and begins polling its APs.

### Navigation Section of OV3600 Failover

The **Navigation** section displays tabs to all main GUI pages within OV3600 Failover. The top bar is a static navigation bar containing tabs for the main components of OV3600, while the lower bar is context-sensitive and displays the subtabs for the highlighted tab. [Table 130](#) describes the contents of this page.

**Table 130:** Contents of the Navigation Section of Failover

Main Tab	Description	Subtabs
Home	The <b>Home</b> page provides basic OV3600 Failover information including system name, hostname, IP address, current time, running time, software version, and watched OV3600 information.	<ul style="list-style-type: none"><li>● Overview</li><li>● User Info</li><li>● Watched OV3600s</li><li>● License</li></ul>
System	The <b>System</b> page provides information related to OV3600 operation and administration including overall system status, performance monitoring, and backups.	<ul style="list-style-type: none"><li>● Status</li><li>● Triggers</li><li>● Alerts</li><li>● Event Log</li><li>● Backups</li><li>● Performance</li></ul>
OV3600 Setup	The <b>Setup</b> page provides all information relating to the configuration of OV3600 itself and its connection to your network.	<ul style="list-style-type: none"><li>● General</li><li>● Network</li><li>● Users</li><li>● TACACS+</li></ul>

### Adding Watched OV3600 Stations

Navigate to the **Home > Watched OV3600s** page to begin backing up and monitoring OV3600 stations. Once an OV3600 installation has been added to the Watched OV3600s list, the Failover OV3600 will download the most recent backup and begin polling. The Failover OV3600 and the Watched OV3600 must be on the same version or else the watched OV3600 will be unable to restore properly. If any of the watched OV3600s are not on the same version, you will need to upgrade. The Failover OV3600 will need HTTPS access (port 443) to the watched OV3600 to verify that the web page is active and to fetch downloads.

Once the Failover OV3600 determines that the Watched OV3600 is not up (based on the user-defined missed poll threshold), it will restore the data backup of the Watched OV3600 and begin monitoring the watched OV3600 APs and devices. There are many variables that affect how long this will take including how long client historical data is being retained, but for an OV3600 with 1,000 APs it might take up to 10 minutes. For an OV3600 with 2,500 APs, it might take as long as 20 minutes. The Failover OV3600 will retain its original IP address.

In summary, the Failover OV3600 could take over for the Watched OV3600 in as little as five minutes; it might take up to an additional 10-20 minutes to unpack the watched OV3600 data and begin monitoring APs. The most important factors are the missed poll threshold, which is defined by the user, and the size of the watched OV3600 backup, which is affected by the total number of APs and by the amount of data being saved, especially client historical data.

To restore the Watched OV3600, run the backup script from the command line and copy the current data file and the old Watched OV3600 configuration file to the Watched OV3600. Then run the restore script. More information about backups and restores can be found in ["Backing Up OV3600" on page 235](#).

**Table 131:** Home > Watched OV3600s page fields and default values

Setting	Default	Description
IP/Hostname	None	The IP address or Hostname of the watched OV3600. The Failover OV3600 needs HTTPS access to the watched OV3600s.
Username	None	A username with management rights on the watched OV3600
Password	None	The password for the username with management rights specified above.
HTTP Timeout (5-1000 Sec)	60	The amount of time before OV3600 considers a polling attempt failed.
Polling Enabled	Yes	Enables or disables polling of the Watched OV3600. <b>NOTE:</b> You do not need to disable polling of the watched OV3600 system if it is set to be down during nightly maintenance or is being upgraded.
Polling Period	5 minutes	The amount of time between polls of the Watched OV3600.
Missed Poll Threshold	None	The number of polls that can be missed before the failover OV3600 will begin actively monitoring the Watched OV3600 APs.



When selecting a backup file, be sure to select the one that is most relevant, whether that is failover-as-ov3600 or failover-as-failover. An OV3600 acting as a failover keeps its nightly backups in `/var/ov3600-backup`, and the backups of watched OV3600s are stored in `/var/ov3600-backup/watched_ov3600s`. In the event of a failover, a new backup-as-failover is made and placed in `/var/ov3600-backup/watcher`. However, the existing backups-as-failover in `/var/ov3600-backup` remains there until they are aged out by standard rotation.

## Logging out of OV3600

To log out of OV3600, select the **Logout** link on the upper right hand corner of every OV3600 page.

You will be logged off automatically based on the number of minutes set in the **Idle Timeout** setting of **Home > User Info**. Refer to "[Setting Up Login Configuration Options](#)" on page 50.



This section describes OV3600 reports, including access, creation, scheduling, and distribution. It includes the following sections:

- ["Overview of OV3600 Reports" on page 281](#)
- ["Using Daily Reports" on page 291](#)
- ["Defining Reports" on page 284](#)
- ["Emailing and Exporting Reports" on page 323](#)

OV3600 ships with several reports enabled by default. Default reports may run nightly or weekly, depending on the OV3600 release. Review the list of defined and scheduled reports with the **Reports > Generated** and **Reports > Definition** pages to determine if default reports are desired. If not, you can delete, disable, or reschedule any of them.

OV3600 supports additional specialized reports as follows:

- **System > Status** page supports the diagnostic report file for sending to customer support: diagnostics.tar.gz.
- **System > Status** page supports the VisualRF diagnostics report file: VisualRFdiag.tar.gz.
- **VisualRF > Network View** supports the Bill of Materials (BOM) report. Refer to ["Using VisualRF" on page 325](#).

## Overview of OV3600 Reports

Reports are powerful tools in network analysis, user configuration, device optimization, and network monitoring on multiple levels. Among their benefits, reports provide an interface for multiple configurations.

OV3600 reports have the following general parameters:

- OV3600 runs daily versions of all reports during predefined windows of time. All reports can be scheduled to run in the background.
- The daily version of any report is available instantly in the **Reports > Generated** page.
- The **Inventory** and the **Configuration Audit** reports are the only reports that don't span a period of time. Instead, these two reports provide a snapshot of the current state of the network.
- Users can create all other reports over a custom time period on the **Reports > Definitions** page. All reports can be printed, emailed, or exported to CSV, PDF, or XML format.

## Reports > Definitions Page Overview

The **Reports > Definitions** page allows you to define new reports and see the reports already defined.

The **Definitions** page includes these sections:

- **Report Definitions** section—The **Add** button allows you to define a custom report using the **Custom Options** drag and drop interface, or from any of the report types in the drop down menu. The **Report Definitions** table has a complete list of all saved report definitions with an option to return to each definition's table to further customize your report. When you create a report, the following additional buttons are available:
  - **Add and Run** allows you to create a report definition and run that report immediately.
  - **Run Now** (visible from the expanded **Report Definitions** menu) allows immediate running of a custom report as soon as you set the parameters. You must save its definition separately, if you want to remember the parameters.
- **Report definitions for other roles** section—This section, supported for **admin** users, displays additional reports that have been scheduled for other roles. This section of the page adds the **Role** column, and other columns are the same.

Each pane includes a **Latest Report** column with the most recently run reports for each definition and role created. **Run** and **Delete** buttons allow you to select a report from the definitions table to run or delete. Once you define a report from the **Definition** page, it appears on the **Generated** page. The **Reports > Definition** page is shown in [Figure 172](#), and [Table 132](#) describes the fields available when you select a specific report definition.

**Table 132:** *Reports > Definition Page Fields and Descriptions*

Field	Description
Report Definition	Displays a field for entering report title and drop down menu, shown in <a href="#">Figure 173</a> , displaying all possible report types.
Report Restrictions	Displays dynamic fields that include spaces for selecting attributes and entering data relevant to your selected report type scope such as groups, folders, SSID, Device Search filter, report start and end times.
Scheduling Options	Reveals options for one time or regularly scheduled reporting by selecting <b>Yes</b> . Options include report frequency, start time, and current system time.
Report Visibility	Allows you to determine a report's visibility according to user role or by subject.
Email Options	Reveals email address preferences for sending reports by selecting <b>Yes</b> . Be sure to always enter a valid e-mail address.
Export Options	Allows you to use SCP or FTP protocols to transfer a report to an external server. To export a report, the report must be in the .csv or .pdf format. Click Yes in the Export Report field to open the Export Options pane and set the parameters to export the report to an external server.
Add and Run	Available when adding a new Report Definition. Allows you to create a report definition and run that report right then.
Run Now	Available when adding a new Report Definition. Allows you to run any report that has been defined on the spot without saving settings or creating a new report definition.
Add	Saves report definition you just created.
Save and Run	Available when viewing an existing Report Definition. Allows you to edit a report definition and run that report right then.

Figure 172: Reports > Definitions Page Illustration

Report definitions:

New Report Definition

Reports are available on the [Generated Reports](#) page after they have been run.

6-10 of 42 Report Definitions | < < Page 2 of 9 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

	Title	Type	Subject	User	Latest Report	Report Start	Report End	Last Run Time	Scheduled
<input type="checkbox"/>	B-Client-report	Custom	All Groups and Folders	mmiller	-	-	-	4/16/2013 12:30 PM	-
<input type="checkbox"/>	Bw-per-Ap	Network Usage	Folder Top > Sunnyvale HQ > HQ-RAP	rmmohammed	-	1 month ago	now	5/21/2013 12:13 AM	-
<input type="checkbox"/>	Client Inventory Report	Client Inventory	All Groups and Folders	sujatha	-	-	-	5/22/2013 2:29 PM	-
<input type="checkbox"/>	Client Inventory Report	Client Inventory	All Groups and Folders	sujatha	-	-	-	5/9/2013 12:58 PM	-
<input type="checkbox"/>	Client Session Report	Client Session	Clients Matching 24:77:03	lcureau	-	yesterday	now	5/14/2013 10:34 AM	-

6-10 of 42 Report Definitions | < < Page 2 of 9 > > | [Reset filters](#)

Select All - Unselect All

---

Report definitions for other roles:


1-5 of 11 Report Definitions | Page 1 of 2 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

	Role	Title	Type	Subject	User	Latest Report	Report Start	Report End	Last Run T
<input type="checkbox"/>	Administration	Custom Report	Custom	Device Type Controllers	peter	-	-	-	4/10/2013 8:
<input type="checkbox"/>	Administration	Steer Event Report	Match Event	All Groups, Folders and SSIDs	dasa	-	1 day ago	now	5/17/2013 11
<input type="checkbox"/>	Administration	Daily RF Health Report	RF Health		System	Daily RF Health Report	12:00 a.m. yesterday	12:00 a.m. today	5/30/2013 12
<input type="checkbox"/>	Administration	Daily Rogue Clients Report	Rogue Clients	All Groups and Folders	seth	-	12:00 a.m. yesterday	12:00 a.m. today	3/27/2013 12
<input type="checkbox"/>	Administration	Client Session Report	Client Session	All Groups, Folders, SSIDs and Roles	peter	Client Session Report	1 day ago	now	5/24/2013 5:

1-5 of 11 Report Definitions | Page 1 of 2 > > | [Reset filters](#)

Select All - Unselect All

Figure 173: Report Type Drop down Menu in Reports > Definitions Illustration

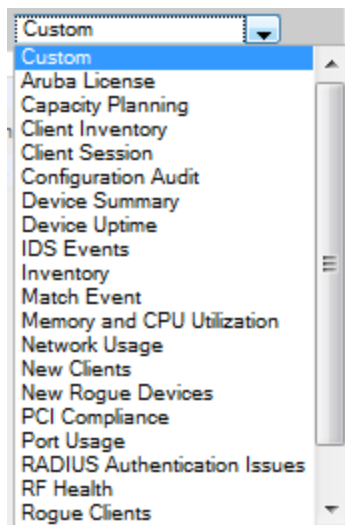

Only **admin** users have complete access to all report information. The OV3600 reports and online displays of information can vary with configuration, User Roles, and Folders.

## Reports > Generated Page Overview

The **Reports > Generated** page displays reports that have been run, as well as the most recent daily version of any report. An **Admin** user can see and edit all report definitions in OV3600. Users with **Monitor Only** roles can see reports and definitions only if they have access to all devices in the reports.

The **Reports > Generated** page contains three primary sections, as follows:

- Generated reports configured for the current role and for additional roles
- Generated reports for other roles

- The latest daily reports for immediate online viewing

You can select a check box beside any report and click **Rerun** to view an updated report. When you run or rerun a report, the Generation Time column changes to pending until the report is completed.

You can kill a report that is pending by running the following from the OV3600 CLI:

```
#echo 'delete from report where state=1'
```

Note that the report status in the database is as follows:

state=0: Failed

state=1: Pending

state=2: In progress



**Figure 174: Reports > Generated Page Example**

**Generated reports:**

Visit the [Report Definitions](#) page to run new reports.  
 1-5 ▼ of 89 Reports Page 1 ▼ of 18 > > | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

	Generation Time	Title	Type ▼ ▼	Subject	User ▼	Report Start	Report End
<input type="checkbox"/>	5/28/2013 12:18 AM	Daily RF Health Report	RF Health		System	5/27/2013 12:00 AM	5/28/2013 12:00 AM
<input type="checkbox"/>	5/30/2013 12:19 AM	Daily RF Health Report	RF Health		System	5/29/2013 12:00 AM	5/30/2013 12:00 AM
<input type="checkbox"/>	5/25/2013 12:19 AM	Daily RF Health Report	RF Health		System	5/24/2013 12:00 AM	5/25/2013 12:00 AM
<input type="checkbox"/>	5/29/2013 12:19 AM	Daily RF Health Report	RF Health		System	5/28/2013 12:00 AM	5/29/2013 12:00 AM
<input type="checkbox"/>	5/26/2013 12:18 AM	Daily RF Health Report	RF Health		System	5/25/2013 12:00 AM	5/26/2013 12:00 AM

1-5 ▼ of 89 Reports Page 1 ▼ of 18 > > | [Reset filters](#)  
[Select All](#) - [Unselect All](#)

---

**Generated reports for other roles:**

16-20 ▼ of 33 Reports << Page 4 ▼ of 7 >> | [Reset filters](#) [Choose columns](#) [Choose columns for roles](#) [Export CSV](#)

	Role ▲ ▼	Generation Time	Title	Type ▼	Subject	User ▼	Report Start	Report
<input type="checkbox"/>	Administration	5/24/2013 12:18 AM	Daily Configuration Audit Report	Configuration Audit		System	5/24/2013 12:18 AM	-
<input type="checkbox"/>	Administration	5/23/2013 12:19 AM	Daily RF Health Report	RF Health		System	5/22/2013 12:00 AM	5/23/20:
<input type="checkbox"/>	Administration	5/27/2013 12:18 AM	Daily RF Health Report	RF Health		System	5/26/2013 12:00 AM	5/27/20:
<input type="checkbox"/>	Administration	5/24/2013 5:00 PM	Client Session Report	Client Session		peter	5/23/2013 5:00 PM	5/24/20:
<input type="checkbox"/>	Administration	5/24/2013 12:19 AM	Daily RF Health Report	RF Health		System	5/23/2013 12:00 AM	5/24/20:

16-20 ▼ of 33 Reports << Page 4 ▼ of 7 >> | [Reset filters](#)  
[Select All](#) - [Unselect All](#)

**Figure 175: Reports > Generated Page with Single-click Report Viewing Options**

- [Latest License Report](#)
- [Latest Client Session Report](#)
- [Latest Configuration Audit Report](#)
- [Latest Custom Report](#)
- [Latest Device Summary Report](#)
- [Latest Inventory Report](#)
- [Latest Match Event Report](#)
- [Latest New Clients Report](#)
- [Latest PCI Compliance Report](#)
- [Latest Port Usage Report](#)
- [Latest RF Health Report](#)

## Defining Reports

You can create reports in OV3600 for any time period you want, to be run when you want, and distributed to recipients that you define. Reports that you create will display on the **Reports > Definition** page and on the **Reports > Generated** page.

1. To create or edit a report, browse to the **Reports > Definition** page and click the **Add** button, or select the **pencil** icon to edit an existing report definition. [Figure 176](#) illustrates one view of the **Reports > Definition** page.

**Figure 176: Defining a Report**

2. Complete the fields described in [Table 133](#) and any additional Report Restrictions. The **Report Restrictions** section changes according to the report type you choose. Additional information about each report type is described in "Using Daily Reports" on page 291.

**Table 133: Reports > Definitions > Add page fields and default values**

Field	Default	Description
<b>Report Definition</b>		
Title	Empty	Enter a <b>Report Title</b> . Use a title that is a meaningful and descriptive, so it may be found easily on the lists of reports that appear on either <b>Generated</b> or <b>Definitions</b> pages.
Type	Custom	Choose the type of report you wish to create in the Report Type drop-down menu.
<b>Report Restrictions - (These vary based on report type)</b>		

**Table 133: Reports > Definitions > Add page fields and default values (Continued)**

Field	Default	Description
Group	All Groups	Specify the groups and folders to be covered in the report by choosing <b>All Groups</b> (or <b>All Folders</b> ) or specifying <b>Use selected groups</b> (or <b>Use selected folders</b> ) in the drop-down menu.
Folder	All Folders	If <b>Use selected groups</b> is chosen, a menu with check boxes appears, allowing you to choose the groups to include in the report.
Device Search Filter	Blank	<p>Add a specific alpha numeric string for finding devices that match that which you entered. Note that once you enter a search string, new or deleted devices that match the search string will automatically be included or excluded in all future reports generated until you delete or change the search string.</p> <p>For certain reports, such as <b>New Clients</b> and <b>Client Session</b>, will allow you to search devices associated with a specific client/user or device.</p> <p><b>NOTE:</b> If the Report Type is Custom, this field will not display until a custom option is selected.</p>
Device Search Exclude Filter	Blank	<p>Add a specific alpha numeric string for excluding devices that match that which you entered. Note that once you enter a search string, new or deleted devices that match the search string will automatically be included or excluded in all future reports generated until you delete or change the search string.</p> <p>Certain reports, such as <b>New Clients</b> and <b>Client Session</b>, allow you to search devices associated with a specific client/user or device.</p> <p><b>NOTE:</b> If the Report Type is Custom, this field will not display until a custom option is selected.</p>
Filter by device type	All Device Types	Filter this report by device type. By selecting the second option - <b>Use selected device types</b> - you can select the check boxes next to the specific device types you want to filter on: Access Points (such as campus APs remote APs, and different types of Mesh APs), Controllers (Master, Local, Standby, and Virtual), Switches & Routers, and Universal & Custom Devices.
SSID	All SSIDs	This field displays for most report types. When this field appears, and when you select <b>Use Selected IDs</b> , a new list of SSIDs displays. Check (select) the specific SSIDs to be included in the report.
Report Start Report End	Blank	<p>These fields establish the time period to be covered by the report. These fields are supported for most report types. When these fields do not appear, the report provides a snapshot of current status rather than information covering a period of time</p> <p>Times can be entered in relative or absolute form. A start date of 6 months 3 weeks 5 days 9 hours ago and an end time of 4 months 2 weeks 1 day ago is valid, as is a start date of 5/5/2008 13:00 and an end date of 6/6/2008 9:00. Absolute times must be entered in a 24-hour format. Other reports, like the Inventory Report, give a snapshot picture of OV3600 at the present time.</p>
<b>Scheduling Options</b>		

**Table 133: Reports > Definitions > Add page fields and default values (Continued)**

Field	Default	Description
Schedule	No	<p>When you select <b>Yes</b>, new fields display that allow you to define a specific time for report creation. The report schedule setting is distinct from the <b>Report Start</b> and <b>Report End</b> fields, as these define the period of time to be covered by the report.</p> <p>These <b>Schedule</b> fields establish the time that a report runs, independent of report scope:</p> <ul style="list-style-type: none"> <li>● <b>Occurs</b>—Select whether the report is to be run one time, daily, weekly, monthly, or annually. Depending on the recurrence pattern selected, you get an additional drop-down menu. For example, if you select a recurrence of monthly, you get an additional drop-down menu that allows you to pick which day of the month (day 1, day 2, and so forth) the report should run.</li> <li>● <b>Current Local Time</b>—Displays for reference the time of the OV3600 system.</li> <li>● <b>Desired Start Date/Time</b>—Sets the time the report runs, which may often be separate from the time period covered by the report. This allows you to run a report during less busy hours.</li> </ul>
<b>Report Visibility</b>		
Generated Report Visibility	By Role	<p>This field allows you to display the report either by user role (with the report appearing in User Role lists on the <b>Reports &gt; Generated</b> page) or by Subject (displaying reports by Subject on the <b>Reports &gt; Generated</b> page).</p> <ul style="list-style-type: none"> <li>● <b>By Role</b>: When you create a report definition, the reports are visible to everybody who has the same role as you (ie OV3600 Administrator), and to nobody else.</li> <li>● <b>By Subject</b>: When the report is run, OV3600 users have access to the report if they are allowed to view all the devices in the report.</li> </ul>
<b>Email Options</b>		
Email Report	No	<p>Select <b>Yes</b> to display sender and recipient fields. Enter a valid Sender Address where marked to indicate the address that appears in the <b>From</b> field of the emailed report. Enter a valid recipient email addresses, separated by commas when using multiple email addresses.</p> <p><b>NOTE:</b> OV3600 will not attempt to email a report with an excessively large number of rows in the detail section.</p>

In the report restrictions section you can customize any detailed information contained in a chosen report. [Figure 177](#) shows a sample **Report Restrictions** page for the New Clients report.

Figure 177: Report Restrictions Illustration

Report Restrictions	
Group:	-- All Groups --
Folder:	-- All Folders --
Filter on:	<input checked="" type="radio"/> Devices <input type="radio"/> Clients/Users
Device Search Filter: This report will be run against devices that match this search.	<input type="text"/>
Device Search Exclude Filter: This report will not include devices that match this search.	<input type="text"/>
Filter by device type:	-- All Device Types --
Filter on connection mode:	Any
SSID:	-- All SSIDs --
Aruba Role:	-- All Roles --
Classification:	-- All --
Device Type:	-- All --
AOS Device Type:	-- All --
Manufacturer:	-- All --
Model:	-- All --
OS:	-- All --
OS Detail:	-- All --
Network Chipset:	-- All --
Network Driver:	-- All --
EAP Supplicant:	-- All --
Asset Group:	-- All --
Asset Category:	-- All --

By default all data will be included. Deselect the check box to hide specific information. The list can also be reordered by dragging and dropping the separate lines. The order displayed here will match the column order in the report.

3. Do one of the following:

- Select **Add and Run** to generate the report immediately, in addition to saving report settings.
- Select **Run Now** to generate the report immediately without creating a new report definition or saving the report settings.
- Select **Add** (only) to complete the report creation, to be run at the time scheduled.
- Select **Cancel** to exit from the **Add** page.

Table 134 describes the configurable settings for the custom report to be created. Select any of the report names to view additional information on that report type.



**Table 134: Report Types and Scheduling Options Supported for Custom Reports**

Report Type	Can be Run by Time Period	Can be Run by Group/Folder	Description
"Using Custom Reports" on page 292	Yes	Yes	Summarizes devices based on which have exceeded a defined percentage of their maximum bandwidth capacity. Pulls data for AP radios or interfaces of universal devices (ifSpeed value).
"Using the Alcatel-Lucent License Report" on page 293	No	Yes	Tracks licenses on Alcatel-Lucent devices in your network. This report includes information on the type, quantity, percent used, installation date, expiration date, and the license keys.
"Using the Capacity Planning Report" on page 293	Yes	Yes	Tracks bandwidth capacity and consumption according to thresholds for data throughput. This is a device-oriented report.
"Using the Client Inventory Report" on page 295	No	Yes	Provides information about clients that have connected to you network
"Using the Client Session Report" on page 298	Yes	Yes	Summarizes user data by radio mode, SSID and VLAN, as well as lists all sessions.
"Using the Configuration Audit Report" on page 300	No	Yes	Provides a snapshot of the configuration of all specified access points in OV3600, at report run time.
"Using the Device Summary Report" on page 301	Yes	Yes	Summarizes user and bandwidth statistics and lists devices in OV3600.
"Using the Device Uptime Report" on page 303	Yes	Yes	Summarizes device uptime within defined groups or folders.
"Using the IDS Events Report" on page 304	Yes	Yes	Summarizes IDS events; can be limited to a summary of a certain number of events.
"Using the Inventory Report" on page 306	No	Yes	Provides an audit of vendors, models and firmware versions of devices in OV3600.
"Using the Match Event Report" on page 308	No	Yes	Summarizes matching events per folder, AP, and client. This can be useful in determining the APs that have the highest number of matching/steering traffic.

**Table 134: Report Types and Scheduling Options Supported for Custom Reports (Continued)**

Report Type	Can be Run by Time Period	Can be Run by Group/Folder	Description
"Using the Memory and CPU Utilization Report" on page 308	Yes	Yes	Summarizes usage for controllers for defined top number of devices; can be run with or without per-CPU details and details about device memory usage.
"Using the Network Usage Report" on page 309	Yes	Yes	Summarizes bandwidth data and number of users.
"Using the New Clients Report" on page 311	Yes	No	Provides a summary list of new clients, including username, role, MAC address, vendor, discovering AP, association time, duration, folder, and group.
"Using the New Rogue Devices Report" on page 312	Yes	No	Shows new rogue devices by score, discovering AP, and MAC address vendor.
"Using the PCI Compliance Report" on page 314	Yes	Yes	Provides a summary of network compliance with PCI requirements, according to the PCI requirements enabled in OV3600 using the <b>OV3600 Setup &gt; PCI Compliance</b> page.
"Using the Port Usage Report" on page 315	Yes	Yes	Summarizes switch and port information across the network. Generates information on the unused ports. Provides a detailed list of all available switches and ports in the network.
"Using the RADIUS Authentication Issues Report" on page 317	Yes	Yes	Summarizes RADIUS authentication issues by controller and by user, as well as a list of all issues.
"Using the RF Health Report" on page 318	Yes	Yes	Tracks problematic radios, changes, errors, and interfering devices.
"Using the Rogue Clients Report" on page 319	Yes	Yes	Summarizes the number of valid users that connected to rogues. This report can be filtered by rogue classification. Ad-hoc devices can be included, and specific details that should be included about the clients can be selected.
"Using the Rogue Containment Audit Report" on page 321	No	Yes	Identifies discrepancies between access point containment status specified in OV3600 compared to containment status identified by the controller at report run time.

**Table 134: Report Types and Scheduling Options Supported for Custom Reports (Continued)**

Report Type	Can be Run by Time Period	Can be Run by Group/Folder	Description
"Using the VPN Session Report" on page 322	Yes	Yes	Summarizes connected VPN sessions over a specified period of time. This report can be based on clients/users or devices and can be filtered by folder and device type. It can also include detailed information for sessions and users.

## Using Daily Reports

This section describes the default and custom-scheduled reports supported in OV3600. These reports can be accessed from the **Reports > Generated** page.

### Viewing Generated Reports

The **Reports > Generated** page supports the following general viewing options:

- By default, the reports on the **Reports > Generated** page are sorted by Generation Time. You can sort reports by any other column header in sequential or reverse sequential order. You can also choose columns, export the Generated Reports list in CSV, and modify the pagination of this list.
- The **Reports > Detail** page launches when you select any report title from this page.

The **Generated Reports** page contains fewer columns and information than the **Definitions** page. [Table 135](#) describes each column for the **Reports > Generated** page.

**Table 135: Reports > Generated Page Fields and Descriptions**

Field	Description
Generated Time	Displays the date and time of the last time the report was run, or when the latest report is available. Selecting the link in this field displays the latest version of a given report. When the latest version of a given report is not available, this field is blank. In this case, a report can be run by selecting the report title and selecting <b>Run</b> .
Title	Displays title of the report. This is a user-configured field when creating the report.
Type	Displays the type of the report.
Subject	Displays the scope of the report, to include groups, folders, SSIDs, or any combination of these that are included in the report.
User	This displays the user who created the customized report.
Report Start	Displays the beginning of the time period covered in the report.
Report End	Displays the end of the time period covered in the report.
Role	In the <b>Reports definitions for other roles</b> section, this column indicates the roles for which additional reports are defined.

## Using Custom Reports

Custom reports allow users to specify the data that should be included in a report.


Take care when creating and viewing custom reports, as some reports require you to define a time range and others default to show all data. You may notice, for example, that in some cases, a custom report will show client information with a device count that differs from its session data. This can occur because the Client Session data is restricted to a specific time range (for example, "1 month ago until now"). The Client Inventory information, on the other hand, by default shows all data. Users have to explicitly select the **Limit to Active Devices** drop down and then select **Active during report timeframe** option to configure the time range.



Perform these steps to create a **Custom Report**.

1. Navigate to the **Reports > Definitions** page.
2. Select **Add**.
3. Enter a Title for the new report.
4. Select the **Custom** option from the Type drop-down menu. The **Custom Options** section appears as shown in [Figure 178](#). In this figure, a custom VPN Session report is being created for viewing VPN data for VLANs and Users.

**Figure 178:** Custom Options Page Illustration

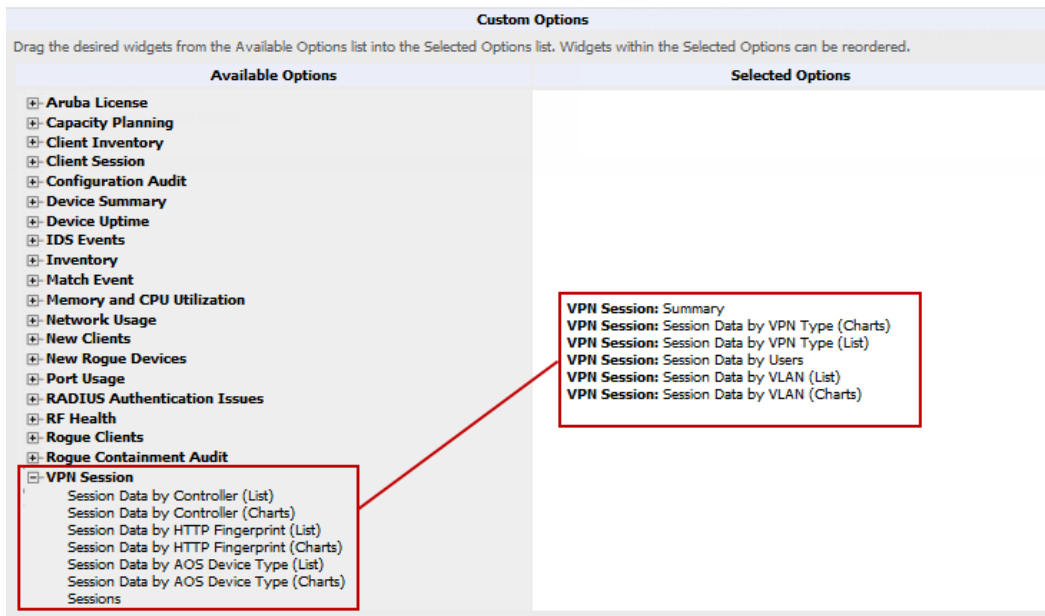

The left pane of the **Custom Options** section lists all available data that can be included in the report. Drag the desired data from the **Available Options** list on the left to the **Selected Options** pane on the right.

The order of the data in the **Selected Options** section is the order that it will appear in the report. The data can be reordered by dragging an item up or down the list.

5. Below the **Custom Options** panes is a **Report Restrictions** section. All reports allow you to restrict based a specified Group, Folder, and Device Type. When you select Custom Options to include in a report, additional restrictions will be available based on the options that you include. For example, if you select Device Summary: Most Utilized by Usage, then you can restrict the report to include and/or exclude specific devices. Some detailed reporting options, such as New Rogue Devices: Discovery Events, allow you to specify the columns to include in the report.
6. Below the **Report Restrictions** section are **Scheduling Options**, **Report Visibility**, and **Email Options** sections. Choose the parameters as needed for your report, especially a **Report Start** and **Report End**.

- When finished, select **Add and Run** to add the report to your list and run it immediately, **Run Now** to run without being added to the list, **Add** to add but not run the report, or **Cancel** to exit this page.

## Using the Alcatel-Lucent License Report

The Alcatel-Lucent License Report tracks licenses on Alcatel-Lucent devices in your network. This report includes information on the type, quantity, percent used, installation date, expiration date, and the license keys.



This report includes the built-in license count only when the installed license count is less than the license limits.

**Figure 179: Alcatel-Lucent Detail Page**

**Daily Aruba License Report - Detail for All Groups and Folders**  
Generated on 6/26/2013 10:27 AM

3600-136 in Group Access Points and Folder Top.

1-9 of 9 Summary Page 1 of 1 Export CSV

License Type	License Qty	AP Capacity	Total License Used	Campus AP Capacity	Campus License Used
Access Points	512	512	0 of 512 (0.00%)	128	0 of 128 (0.00%)
External Services Interface	-	512	-	128	-
Indoor Mesh Access Points	-	512	-	128	-
Next Generation Policy Enforcement Firewall Module	-	512	-	128	-
Policy Enforcement Firewall for VPN users	-	512	-	128	-
RF Protect	-	512	-	128	-
Voice Service Module	-	512	-	128	-
VPN Server Module	-	512	-	128	-
xSec Module	-	512	-	128	-

1-9 of 9 Summary Page 1 of 1

1-20 of 25 Details Page 1 of 2 > > | Export CSV

License Type	License Qty	Install Date	Expires	Flag	Key
120abg Upgrade	512	2013-04-10 00:49:00	Expired		CBIC5J50-D9tE/ff+0-b+tQabMm-OuSEYBXt-OwQnn3+S-3LUI
120abg Upgrade	512	2013-02-27 03:35:31	Expired		SRuR4+Ua-PYGShT6d-dL5ZP49d-IgPCSyHC-ObMF4xT-D24
121abg Upgrade	512	2013-02-27 03:35:31	Expired		VXhwEszE-H+D50xwW-iFc0/GXG-tgI2KCD4-T8ni3QRy-QfY
121abg Upgrade	512	2013-04-10 00:49:00	Expired		2iLsBdY0-mefIEAFT-97CVcnff-EkDjISK4-fc6BgQ99-mNY
124abg Upgrade	512	2013-02-27 03:35:30	Expired		jXAXPENa-P79Y/uJb-s8KLv+s8-j/9T5j2W-WHjmSKWl-99I
124abg Upgrade	512	2013-04-10 00:49:00	Expired		wCyhOBch-J00w0LdT-wPOSByB1-Pe0T/X+g-ezDPJ3k1-tPw
125abg Upgrade	512	2013-04-10 00:49:00	Expired		svsP4w5G-H90bMrGR-ZKDq03FD-eDPQR9Q-FbKn7ext-vxo

## Using the Capacity Planning Report

The Capacity Planning Report tracks device bandwidth capacity and throughput in device groups, folders, and SSIDs. This report is based on interface-level activity and can be used to assist in analyzing device capacity and performance on the network. This analysis can help to achieve network efficiency and an improved user experience.

Refer also to the "[Using the Network Usage Report](#)" on page 309 for additional bandwidth information.

### Example


The following example creates a sample Capacity Planning report. This report looks for devices that are under-utilized. This report will search for devices over a 2-hour period that were at 1% of capacity for 5-100% of the time. This report focuses only on devices in a group named "HQ." Perform similar steps to create your own Capacity Planning report. Note that any field omitted from this example is assumed to remain the default value.

- Click on the **Add New Report Definition** button on the **Reports > Definitions** page.
- Enter the title for the report. In this example, the report is called "Capacity Planning Report 1% for Group HQ."
- Select Capacity Planning from the Type drop-down menu.
- In this example, OV3600 includes a group named "HQ." Select HQ from the Groups drop down menu.
- Set the Capacity Threshold value to 1.
- Set the Min Time Above Threshold value to 5.
- Set the Max Time Above Threshold value to 100.
- Enter a date and time range for the period of time that you want to review. In the case below, the report gathers data for the time range from 12:13 PM to 2:13 PM on October 22, 2012.
- Click the **Save and Run** button.

## Output

The following figure illustrates the output of the Capacity Planning Report. The fields on this page are described in Table 136.

**Figure 180: Capacity Planning Report Detail Page (partial view)**

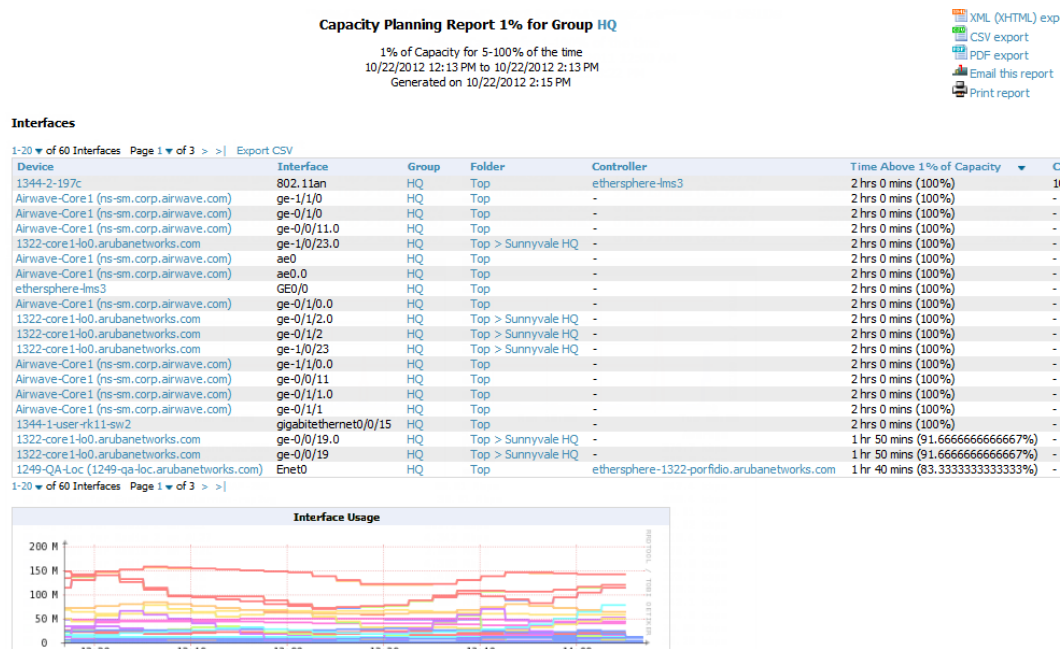

**Table 136: Capacity Planning Report output details**

Field	Description
Device	Displays the device type or name.
Interface	Displays the type of 802.11 wireless service supported by the device.
Group	Displays the device group with which the device is associated.
Folder	Displays the folder with which the device is associated.
Controller	Displays the controller with which a device operates.
Time Above 1% of Capacity	Displays the time duration in which the device has functioned above 0% of capacity. A low percentage of use in this field may indicate that a device is under-used or poorly configured in relation to its capacity, or in relation to user needs.
Capacity Combined (b/s)	Displays the combined capacity in and out of the device, in bits-per-second.
Usage While > Threshold (Combined)	Displays the time in which a device has functioned above defined threshold capacity, both in and out.
Overall Usage (Combined)	Displays the overall usage of the device, both combined in and out traffic.

**Table 136: Capacity Planning Report output details (Continued)**

Field	Description
Usage While > Threshold (in)	Displays device usage that exceeds the defined and incoming threshold capacity.
Overall Usage (In)	Displays overall device usage for incoming data.
Usage While > Threshold (Out)	Displays device usage for outgoing data that exceeds defined thresholds.
Overall Usage (Out)	Displays device usage for outgoing data.

## Using the Client Inventory Report

The Client Inventory Report can be used for viewing information about clients that have connected to your network. Similar to the Inventory Report, you can filter this report to search for specific devices (such as, "Aruba"). You can also filter this report based on the connection mode (wired or wireless).

This report also gives you the option to filter instead on specific devices and/or users. Whether viewing information for devices or clients, the report can be configured to display additional options. For many of these options, you can choose to view all information or a specific set of information (Matching option). If Matching is selected, a text entry field displays. When you put your cursor in the text entry field, an additional side menu displays providing you with a list of available options that you can select.

- AOS Device Type - All or Matching
- Device Manufacturer - All or Matching
- Device Model - All or Matching
- Device Type - All or Matching
- OS Summary - All or Matching
- Steerable Clients
- Asset Category - All or Matching
- Asset Group - All or Matching
- Device Manufacturer and Model
- Device OS Detail - All or Matching
- EAP Supplicant - All or Matching
- Last Role
- Last Authentication Type
- Last Connection Mode
- Last SSID
- Network Chipset - All or Matching
- Network Driver - All or Matching
- Network Vendor

This report allows you to include details about every client, for example, the User Name, MAC Address, Role, AP Radio information, and more. Finally, you can limit this report to include devices that are active or inactive at the time when this report is run.

## Example

The following example configures a Client Inventory Report that summarizes information for iPhone, iPod, and iPad devices on your network and how those devices are connecting. This report turns off the Device Manufacturer and OS summaries because these are only Apple (manufacturer) and iOS (OS) devices. The report omits the Device Model Summary option because, in this case, the information will be redundant with Device Type.

The report output shows a summary of the last connection mode and the last SSID for all devices. This can help determine where and how the clients are connecting.

1. Click on the **Add New Report Definition** button on the **Reports > Definitions** page.
2. Enter the title for the report. In this example, the report is called "Client Inventory - iPhone, iPod, iPad"
3. Select Client Inventory from the Type drop-down menu.
4. Select the following options in the Summarize Report By section:
  - AOS Device Type Summary
  - Device Type Summary
  - Last Connection Mode Summary
  - Last SSID Summary
5. Specify "Matching" in the Model section, and select the following options:
  - iPad
  - iPhone
  - iPod
6. Click the **Save and Run** button.

## Output

[Figure 181](#) illustrates the output of this Client Inventory Report. The fields on this page are described in [Table 137](#).



Figure 181: Reports > Generated > Client Inventory (split view)

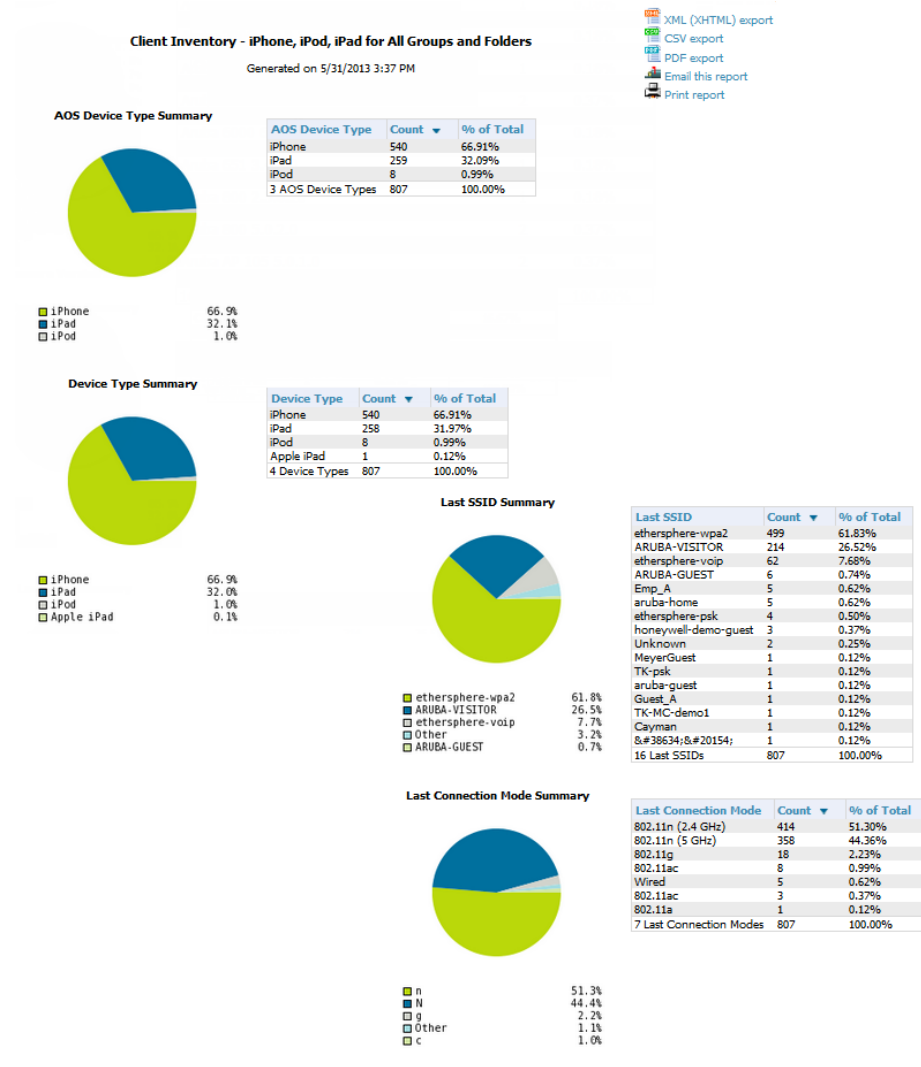


Table 137: Client Inventory Report output details

Field	Description
AOS Device Type	Displays the device type or name.
Count	Shows the total number of each device current included in the client inventory.
% of Total	Shows the percentage of each of those devices that are included in the client inventory.
Last SSID Summary	The SSID that each device most recently connected to. This includes the total number of clients and the percentage of each of those devices that connected to the SSID.
Last Connection Mode	The connection mode that each device most recently connected using. This includes the total number of clients and the percentage of each of those devices that connected for each connection mode.

## Using the Client Session Report

The Client Session Report extensively itemizes user-level activity by session, meaning any instance in which a user connects to the network. In list and chart form, this report tracks and display session information that can include any or all of the following:

- Session Data by Cipher (List or Chart)
- Session Data by Connection Mode (List or Chart)
- Session Data by Role (List or Chart)
- Session Data by SSID (List or Chart)
- Session Data by VLAN (List or Chart)
- Top Clients by Total MB Used
- Session Data by AOS Device Type (List or Chart)
- Session Data by Asset Category (List or Chart)
- Session Data by Asset Group (List or Chart)
- Session Data by Device Type (List or Chart)
- Session Data by EAP Supplicant (List or Chart)
- Session Data by Manufacturer (List or Chart)
- Session Data by Model (List or Chart)
- Session Data by Network Chipset (List or Chart)
- Session Data by Network Driver (List or Chart)
- Session Data by Network Interface Vendor (List or Chart)
- Session Data by OS (List or Chart)
- Session Data by OS Detail (List or Chart)
- Top Clients by Total MB Used by Folder



---

The period of time in which the client remains connected to the network is typically calculated as a single session. However, if a client roams between APs, the periods of time the client connected to the different APs may be calculated as separate sessions.


---

The period of time in which the client remains connected to the network is typically calculated as a single session, although if a client roams between APs, the period of time the client was connected to each AP may be calculated as a separate session.

Each report can be filtered based SSID, Device Type, Manufacturer, Model, and more.

Finally, you can specify the details that you want to include in the Sessions information, such as the MAC Address, Username, Role, SSID, and more.

**Figure 182: Client Session Detail Partial View**

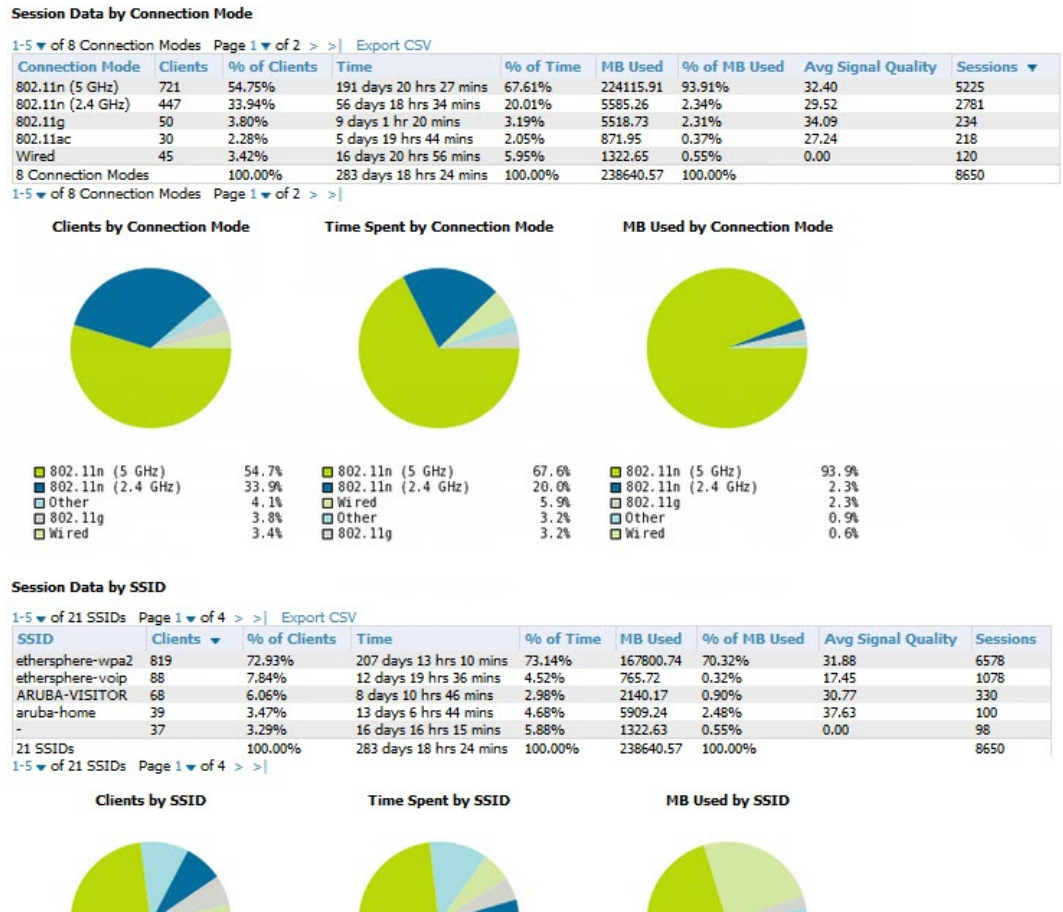

Each Client Session Report includes a Client Session Summary section. Table 138 describes the fields that display in this summary.

**Table 138: Client Session Summary Fields and Descriptions**

Field	Description
Sessions	The number of client sessions that occurred during the time range specified in this report.
Unique Clients	The number of unique clients that connected.
Guest Users	The number of guest users that connected.
Unique APs	The number of unique APs that were available.
Average session duration	The average amount of time that a client was connected during this time range. This is determined by $[(\text{disconnect time}) - (\text{connect time})]$ .
Total traffic (MB)	The total amount of traffic that passed through the network during this time range.
Total traffic In (MB)	The total amount of traffic that passed in the network.
Total traffic Out (MB)	The total amount of traffic that passed out of the network.

**Table 138:** Client Session Summary Fields and Descriptions (Continued)

Field	Description
Avg traffic per session (MB)	The average amount of traffic generated by each session.
Avg traffic in per session (MB)	The average amount of traffic in generated by each session.
Avg traffic out per session (MB)	The average amount of traffic out generated by each session.
Avg traffic per client (MB)	The average amount of traffic generated by each client.
Avg traffic in per client (MB)	The average amount of traffic in generated by each client.
Avg traffic out per client (MB)	The average amount of traffic out generated by each client.
Avg bandwidth per client (Kbps)	The average client bandwidth.
Avg signal quality	The average signal quality for each session.

## Using the Configuration Audit Report

The Configuration Audit Report provides an inventory of device configurations on the network, enabling you to display information one device at a time, one folder at a time, or one device group at a time. This report links to additional configuration pages.

Perform these steps to view the most recent version of the report, then to configure a given device using this report.

1. Navigate to the **Reports > Generated** page.
2. Scroll to the bottom, and select **Latest Configuration Audit Report** to display **Detail** device configuration information for all devices. The ensuing **Detail** report can be very large in size, and provides multiple links to additional device configuration or information display pages.
3. You can display device-specific configuration to reduce report size and to focus on a specific device. When viewing configured devices on the **Detail** page, select a device in the **Name** column. The device-specific configuration appears.
4. You can create or assign a template for a given device from the **Detail** page. Select **Add a Template** when viewing device-specific configuration information.
5. You can audit the current device configuration from the **Detail** page. Select **Audit** when viewing device-specific information.
6. You can display archived configuration about a given device from the **Detail** page. Select **Show Archived Device Configuration**.

Figure 183 and Table 139 illustrate and describe the general Configuration Audit report and related contents.

Figure 183: Daily Configuration Audit Report Page, partial view

XML (XHTML) export  
PDF export  
Email this report  
Print report

**Daily Configuration Audit Report for All Groups, Folders and SSIDs**  
Generated on 6/26/2013 12:37 AM

1-20 of 41 Items Page 1 of 2 > >|

Name	Folder	Group	Mismatches																																										
00:1a:1e:c0:13:74	Top	Access Points	<table border="1"> <thead> <tr> <th></th> <th>Current Device Configuration</th> <th>Desired Device Configuration</th> </tr> </thead> <tbody> <tr> <td>Aruba AP Group</td> <td>default</td> <td>&lt;unset&gt;</td> </tr> <tr> <td>Master Discovery Type</td> <td>(not present)</td> <td>AP Discovery Protocol</td> </tr> <tr> <td>PPPoE Authentication</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Remote AP</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Use DHCP</td> <td>(not present)</td> <td>No</td> </tr> </tbody> </table>		Current Device Configuration	Desired Device Configuration	Aruba AP Group	default	<unset>	Master Discovery Type	(not present)	AP Discovery Protocol	PPPoE Authentication	(not present)	No	Remote AP	(not present)	No	Use DHCP	(not present)	No																								
	Current Device Configuration	Desired Device Configuration																																											
Aruba AP Group	default	<unset>																																											
Master Discovery Type	(not present)	AP Discovery Protocol																																											
PPPoE Authentication	(not present)	No																																											
Remote AP	(not present)	No																																											
Use DHCP	(not present)	No																																											
00:1a:1e:c1:44:42	Top	Access Points	<table border="1"> <thead> <tr> <th></th> <th>Current Device Configuration</th> <th>Desired Device Configuration</th> </tr> </thead> <tbody> <tr> <td>Device Antenna Selection</td> <td>(not present)</td> <td>Internal</td> </tr> <tr> <td>Host Controller IP Address</td> <td>(not present)</td> <td>10.51.3.150</td> </tr> <tr> <td>Installation</td> <td>(not present)</td> <td>Default</td> </tr> <tr> <td>Link Priority Cellular</td> <td>(not present)</td> <td>0</td> </tr> <tr> <td>Link Priority Ethernet</td> <td>(not present)</td> <td>0</td> </tr> <tr> <td>Master Controller IP Address/DNS Name</td> <td>(not present)</td> <td>10.51.3.150</td> </tr> <tr> <td>Master Discovery Type</td> <td>(not present)</td> <td>Host Controller (IP)</td> </tr> <tr> <td>PPPoE Authentication</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Remote AP</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Single Chain Mode</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Single Chain Mode</td> <td>(not present)</td> <td>No</td> </tr> <tr> <td>Uplink VLAN</td> <td>(not present)</td> <td>0</td> </tr> <tr> <td>Use DHCP</td> <td>(not present)</td> <td>Yes</td> </tr> </tbody> </table>		Current Device Configuration	Desired Device Configuration	Device Antenna Selection	(not present)	Internal	Host Controller IP Address	(not present)	10.51.3.150	Installation	(not present)	Default	Link Priority Cellular	(not present)	0	Link Priority Ethernet	(not present)	0	Master Controller IP Address/DNS Name	(not present)	10.51.3.150	Master Discovery Type	(not present)	Host Controller (IP)	PPPoE Authentication	(not present)	No	Remote AP	(not present)	No	Single Chain Mode	(not present)	No	Single Chain Mode	(not present)	No	Uplink VLAN	(not present)	0	Use DHCP	(not present)	Yes
	Current Device Configuration	Desired Device Configuration																																											
Device Antenna Selection	(not present)	Internal																																											
Host Controller IP Address	(not present)	10.51.3.150																																											
Installation	(not present)	Default																																											
Link Priority Cellular	(not present)	0																																											
Link Priority Ethernet	(not present)	0																																											
Master Controller IP Address/DNS Name	(not present)	10.51.3.150																																											
Master Discovery Type	(not present)	Host Controller (IP)																																											
PPPoE Authentication	(not present)	No																																											
Remote AP	(not present)	No																																											
Single Chain Mode	(not present)	No																																											
Single Chain Mode	(not present)	No																																											
Uplink VLAN	(not present)	0																																											
Use DHCP	(not present)	Yes																																											
00:1a:1e:c5:ac:8a	Top	Access Points	<table border="1"> <thead> <tr> <th></th> <th>Current Device Configuration</th> <th>Desired Device Configuration</th> </tr> </thead> <tbody> <tr> <td>Gateway</td> <td>10.51.0.1</td> <td>&lt;unset&gt;</td> </tr> <tr> <td>Host Controller IP Address</td> <td>10.51.3.99</td> <td>&lt;unset&gt;</td> </tr> </tbody> </table>		Current Device Configuration	Desired Device Configuration	Gateway	10.51.0.1	<unset>	Host Controller IP Address	10.51.3.99	<unset>																																	
	Current Device Configuration	Desired Device Configuration																																											
Gateway	10.51.0.1	<unset>																																											
Host Controller IP Address	10.51.3.99	<unset>																																											

Table 139: Daily Configuration Audit Report

Field	Description
Name	Displays the device name for every device on the network. Selecting a given device name in this column allows you to display device-specific configuration.
Folder	Displays the folder in which the device is configured in OV3600. Selecting the folder name in this report displays the <b>APs/Devices &gt; List</b> page for additional device, folder and configuration options.
Group	Displays the group with which any given device associates. Selecting the group for a given device takes you to the <b>Groups &gt; Monitor</b> page for that specific group, to display graphical group information, modification options, alerts, and an audit log for the related group.
Mismatches	This field displays configuration mismatch information. When a device configuration does not match ideal configuration, this field displays the ideal device settings compared to current settings.

## Using the Device Summary Report

The Device Summary Report identifies devices that are the most or least used devices, and a comprehensive list of all devices. One potential use of this report is to establish more equal bandwidth distribution across multiple devices. This report contains the following five lists of devices.

- **Most Utilized by Maximum Number of Simultaneous Users**—By default, this list displays the 10 devices that support the highest numbers of users. This list provides links to additional information or configuration pages for each device to make adjustments, as desired.
- **Most Utilized by Bandwidth**—By default, this list displays the 10 devices that consistently have the highest bandwidth consumption during the time period defined for the report. This list provides links to additional information or configuration pages for each device.
- **Least Utilized by Maximum Number of Simultaneous Users**—By default, this list displays the 10 devices that are the least used, according to the number of users.

- **Least Utilized by Bandwidth**—By default, this list displays the 10 devices that are the least used, according to the bandwidth throughput.
- **Devices**—This list displays all devices in OV3600. By default it is sorted alphabetically by device name.




You can specify the number of devices that appear in each of the first four categories in the **Reports > Definitions > Add** page.

Any section of this report can be sorted by any of the columns. For example, you can specify a location and then sort the **Devices** list by the **Location** column to see details by location, or you can see all of the APs associated with a particular controller by sorting on the **Controller** column. If the AP name contains information about the location of the AP, you can sort by AP name.

If sorting the **Devices** list does not provide you with sufficient detail, you can specify a **Group** or **Folder** in the report **Definition** of a custom report. If you create a separate Group or Folder for each set of master and local controllers, you can generate a separate report for each Group or Folder. With this method, the summary sections of each report contain only devices from that Group or Folder.

Figure 184 and Table 140 illustrate and describe the Device Summary Report.

**Figure 184: Daily Device Summary Report Illustration (partial view)**

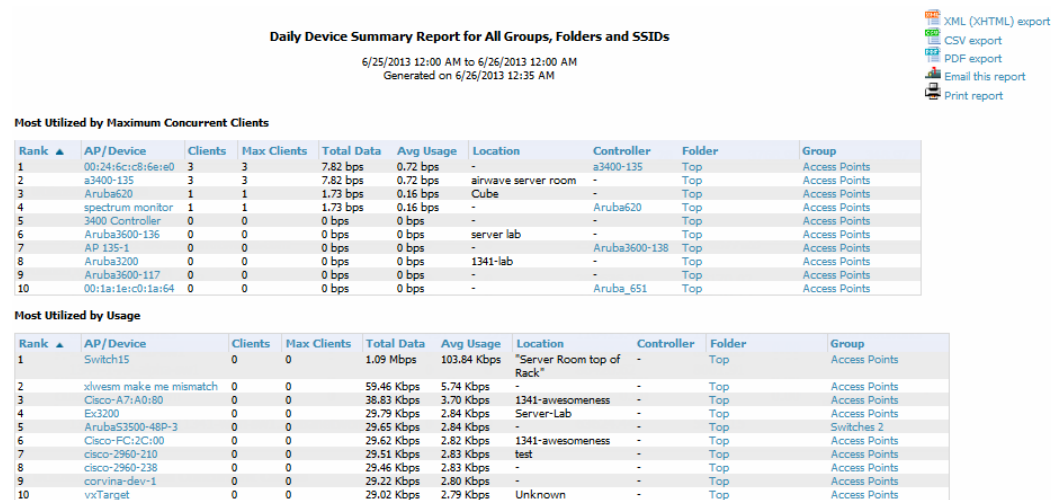

**Table 140: Daily Device Summary Report Unique Fields and Descriptions**

Field	Description
Rank	Ranks the device from 1 to 10.
AP/Device	The AP name or device MAC address.
Clients	The number of clients that were last connected to the device.
Max Clients	The highest number of clients that were connected to the device during the time/date range of the report. If a range is not specified, then this value will match the value for Clients.
Total Data	Displays the total rate of data in that traveled through device during the period of time covered by the report.

**Table 140: Daily Device Summary Report Unique Fields and Descriptions (Continued)**

Field	Description
Average Usage	Displays the average rate of data in that traveled through device during the period of time covered by the report.
Location	Displays the location information if available.
Controller	The controller that the device is associated to.
Folder/Group	Displays the folder and group information for the device.

## Using the Device Uptime Report

The Device Uptime Report monitors device performance and availability on the network, tracking uptime by multiple criteria to include the following:

- Total average uptime by SNMP and ICMP
- Average uptime by device group
- Average uptime by device folder

You can use this report as the central starting point to improve uptime by multiple criteria. This report covers protocol-oriented, device-oriented, or SSID-oriented information. This report can help to monitor and optimize the network in multiple ways. It can demonstrate service parameters, can establish locations that have superior or problematic uptime availability, and can help with additional analysis in multiple ways. Locations, device groups, or other groupings within a network can be identified as needing attention or can be proven to have superior performance when using this report.

The Device Uptime Report contains columns that track bootstrap count (number of times the device has gone down for a firmware change), reboot count, downtime duration, and downtime duration percent. As mentioned above, you can optionally ignore device downtime during planned maintenance periods in this report, and you can restrict the report to business days only.

The Device Uptime Report is described in the image and table that follow.

Figure 185: Device Uptime Report Illustration

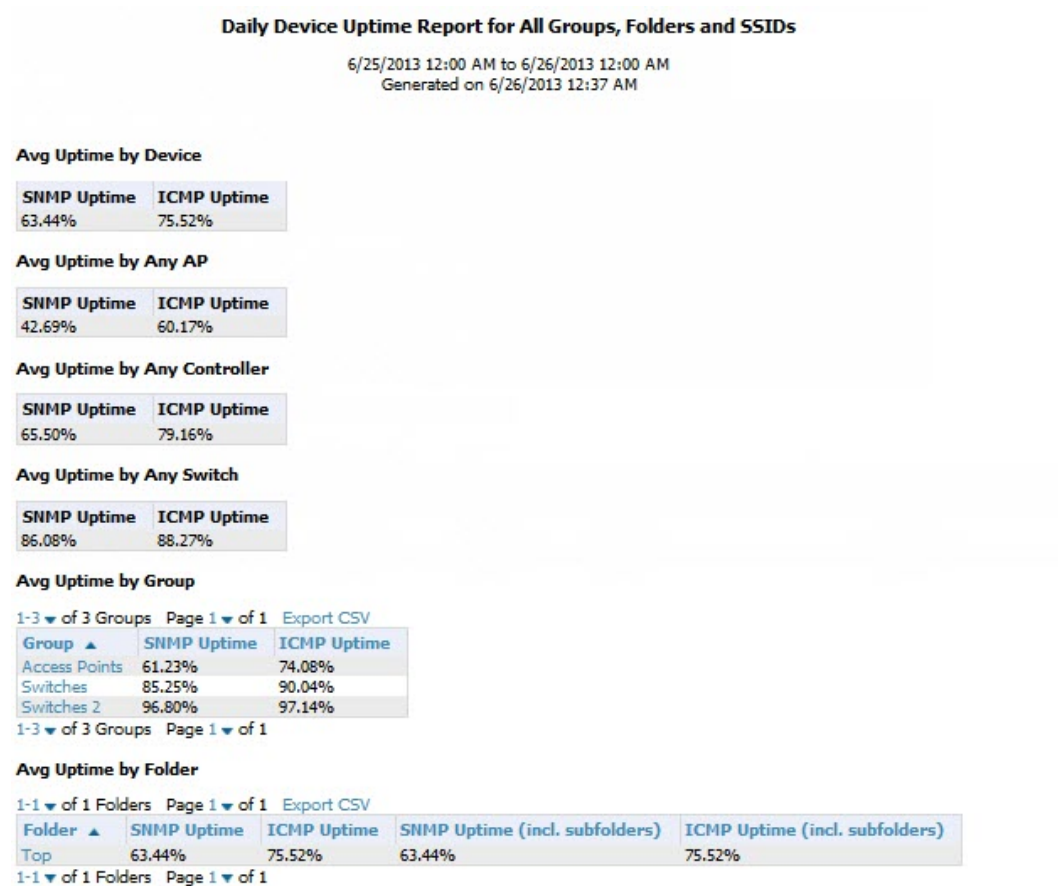


Table 141: Device Uptime Report Unique Fields and Descriptions

Field	Description
SNMP Uptime	Displays the percentage of time the device was reachable via ICMP. OV3600 polls the device via SNMP at the rate specified on the <b>Groups &gt; Basic</b> page.
ICMP Uptime	Displays the percentage of time the device was reachable via ICMP. If the device is reachable via SNMP it is assumed to be reachable via ICMP. OV3600 only pings the device if SNMP fails and then it pings at the SNMP polling interval rate.
Time Since Last Boot	The uptime as reported by the device at the end of the time period covered by the report.

## Using the IDS Events Report

The IDS Events Report lists and tracks IDS events on the network involving APs or controller devices. This report cites the number of IDS events for devices that have experienced the most instances in the prior 24 hours, and provides links to support additional analysis or configuration in response. You can filter this report to show IDS events for specific devices (Controllers, APs, etc.) By default, this report will show up to 10 IDS for each specified device type. You can change this value to anything other than 0.




Your role must be enabled to view RAPIDS in order to see this report. In addition, this report requires that you enter a start and stop time range.



The **Home > Overview** page also cites IDS events. Triggers can be configured for IDS events. Refer to "Creating New Triggers" on page 223 for additional information.

Figure 186 and Table 142 illustrate and describe the IDS Events Detail report. Selecting the AP device or controller name takes you to the **APs/Devices > List** page.

**Figure 186: IDS Events Report Illustration**

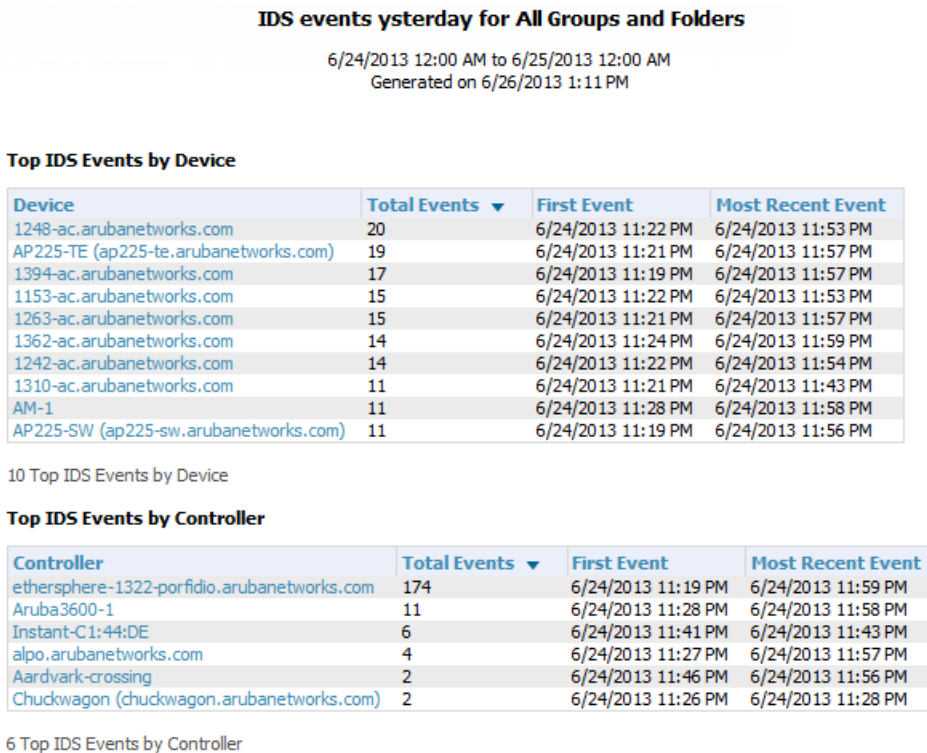

**Table 142: IDS Events Detail Unique Fields and Descriptions**

Field	Description
Device/Controller	These columns list the controllers and other devices for which IDS events have occurred in the specified time range, and provides a link to the <b>APs/Devices &gt; Monitor</b> page for each.
Total Events	Shows the number of events for each AP and/or Controller.
First Event	Shows the date and time of the first event.
Most Recent Event	Shows the date and time of the last/most recent event.
Attack	Displays the name or label for the IDS event.
Attacker	Displays the MAC address of the device that generated the IDS event.
Radio	Displays the 802.11 radio type associated with the IDS event.
Channel	Displays the 802.11 radio channel associated with the IDS event, when known.

**Table 142:** *IDS Events Detail Unique Fields and Descriptions (Continued)*

Field	Description
SNR	Displays the signal-to-noise (SNR) radio associated with the IDS event.
Precedence	Displays precedence information associated with the IDS event, when known.
Time	Displays the time of the IDS event.

## Using the Inventory Report

The **Inventory Report** itemizes all devices on the network. The output breaks down this information by vendor, model (including firmware and bootloader), and device type.

### Example

The following example creates a sample Inventory report. This report looks for all Cisco devices currently on your network. Perform similar steps to create this report. Note that any field omitted from this example is assumed to remain the default value.

1. Click on the **Add New Report Definition** button on the **Reports > Definitions** page.
2. Enter the title for the report. In this example, the report is called "Cisco Devices Inventory."
3. Select Inventory from the Type drop-down menu.
4. Type Cisco in the Device Search Filter field.
5. In the Summarize report by section, select the Type Summary check box. This is the only summary option not selected by default. For the purposes of this report, the Type Summary will break down the list of Cisco devices on your network based on the device type.
6. Click the **Save and Run** button.

### Output

Figure 187 illustrates the output of the Inventory report.

Figure 187: Inventory Report Illustration (partial view)

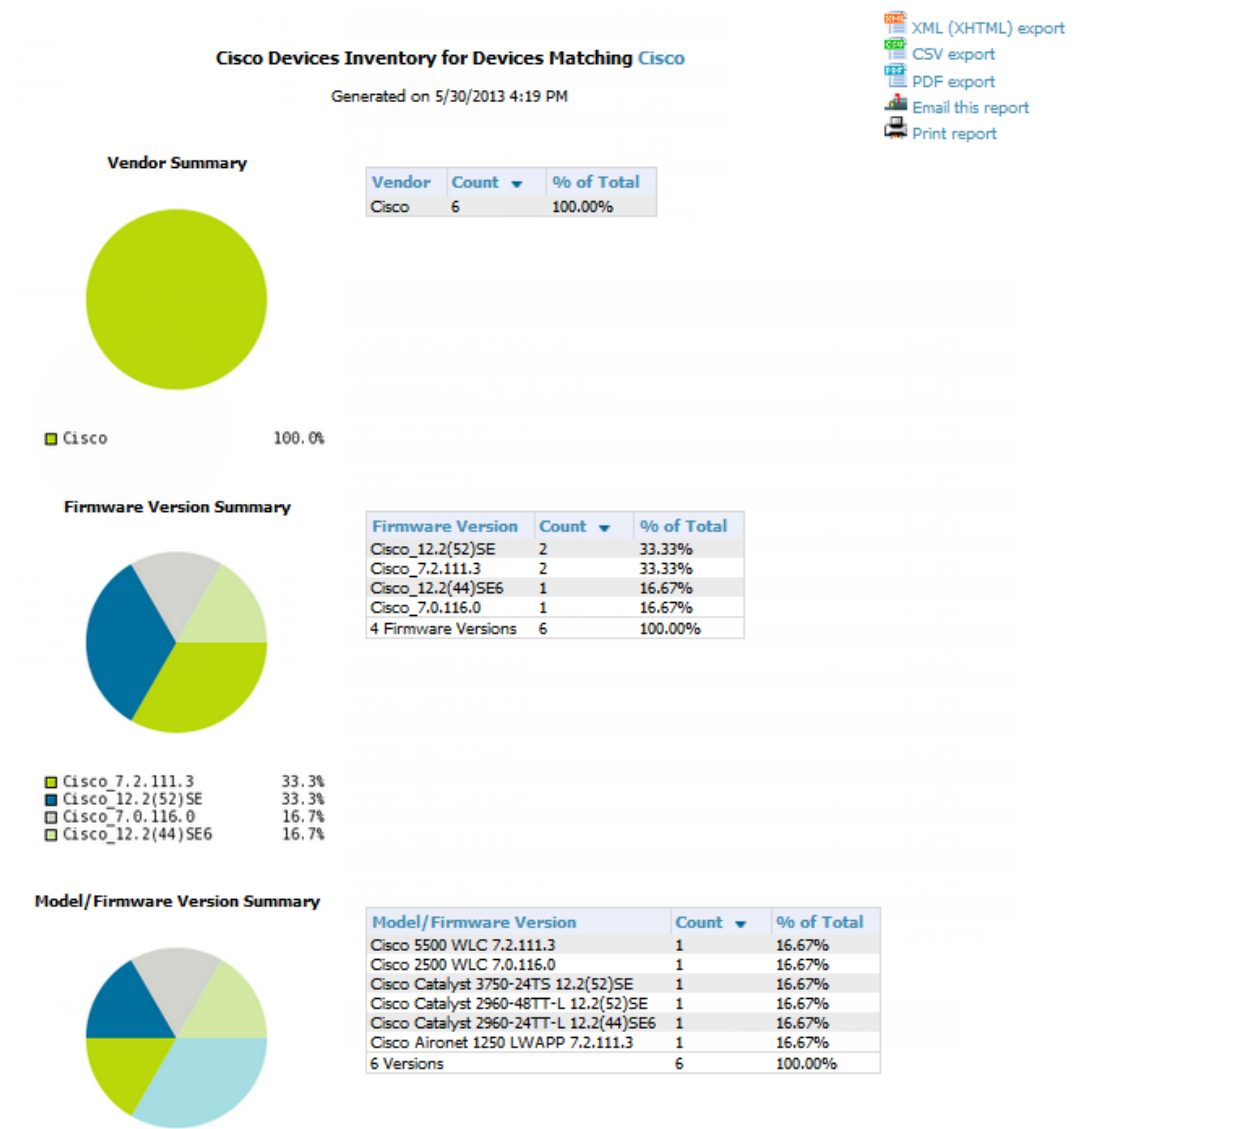


Table 143: Inventory Report output details

Field	Description
Vendor	Displays the device type or name. In the example above, the only vendor specified in the report definition was Cisco.
Count	Shows the total number of each device current included in the client inventory.
% of Total	Shows the percentage of each of those devices that are included in the client inventory.
Firmware Version	The firmware version on each device. This includes the total number of devices and the percentage of each of those devices compared to other devices. In the example above, 33% (or 2 total) of the Cisco devices are on firmware Cisco_7.2.111.3.

**Table 143:** *Inventory Report output details (Continued)*

Field	Description
Model/Firmware Version	This field further breaks down the firmware version into specific device models and specific versions. This includes the total number of devices and the percentage of each of those devices compared to other devices. As indicated previously, the example above shows that 2 of the Cisco devices are on firmware Cisco_7.2.111.3. Each is a separate model, though.

## Using the Match Event Report

Use the Match Events report to track matching events that occurred on devices. This information can be broken down based on a specific folder, AP, and/or client. You can also include graphical information that summarizes events by connection mode, device type, and reason. Similarly, you can choose to show detailed information in the report, including MAC addresses, clients, device types, event time, the from and to AP, the reason for the match, whether the match was a success, and the connection mode.

**Figure 188:** *Sample output for Match Event Report (partial view)*

**Table 144:** *Match Event Report output details*

Field	Description
Folder/AP/Client	The total number of matches that occurred in each folder, each AP, and each Client. The tables also include a reason for the match event. This information is obtained directly from the controller.  Data will only display for a Folder, AP, and Client if each has experienced at least one match event.
Device Type Summary	This shows the total number and percentage of match events that occurred on all device types (for example, iPhone, Kindle, etc.). The graph shows the top 5 devices.
Reasons for Match Summary	This graph and table break down the number and percentage of matches based on the match reason.
Connection Mode Summary	This graph and table show the number and percentage of matches based on the device's connection mode.

## Using the Memory and CPU Utilization Report

The Memory and CPU Utilization Report displays the top percentage of memory utilization and usage for devices and CPUs. You can filter this report to show memory and utilization information for specific devices (Controllers, APs, etc.) By default, this report will show up to 10 IDS for each specified device type. You can change this value to anything other than 0.

To create a scheduled and generated report of this type, refer to ["Using Daily Reports" on page 291](#).

[Figure 189](#) illustrates the this report.

Figure 189: Daily Memory and CPU Usage Report Illustration

**Daily Memory and CPU Utilization Report for All Groups and Folders**  
6/4/2013 12:00 AM to 6/5/2013 12:00 AM  
Generated on 6/5/2013 12:19 AM

**Top CPU Utilization by Device**

Device	Utilization ▼
Switch15	88.35%
cisco-2960-210	76.17%
cisco-2960-238	65.35%
SG102LBW12	48.72%
switch9 aaaa	16.29%
switch11.dev.airwave.com	16.25%
C3750.corp.airwave.com	7.32%
RFS4000	6.98%
Aruba620	6.77%
xlwesm make me mismatch	5.89%

**Top Memory Usage by Device**

Device	Usage ▼
SG102LBW12	95.17%
Standalone_24F	91.98%
4012-3.2.195.10	87.79%
Aruba_651	87.72%
Aruba650-MSTR	83.72%
Aruba650-Local	83.39%
Aruba3200	83.20%
Aruba620	82.39%
Aruba651	80.01%
VLAN_17_Dist_2	79.01%

## Using the Network Usage Report

The Network Usage Report contains network-wide information in two categories:

- **Usage**—maximum and average bandwidth
- **Clients**—average bandwidth in and out


This information can be broken down by Groups and Folders. It can also be summarized by Usage, Client Count, and by both for folders.

When you create this report, you can specify to view information for all or specific device types and all or specific SSIDs. You can summarize the report based on Client Count, Usage, and/or Usage and Client Count by Folder.

This report by default includes graphical information. You can specify to include tabular information below each graph. If you select this option, then you can also specify the columns that display in the tables.

Figure 190 illustrates the Network Usage Report. The fields that display on this output are described in Table 145.

**Figure 190: Network Usage Report Illustration**

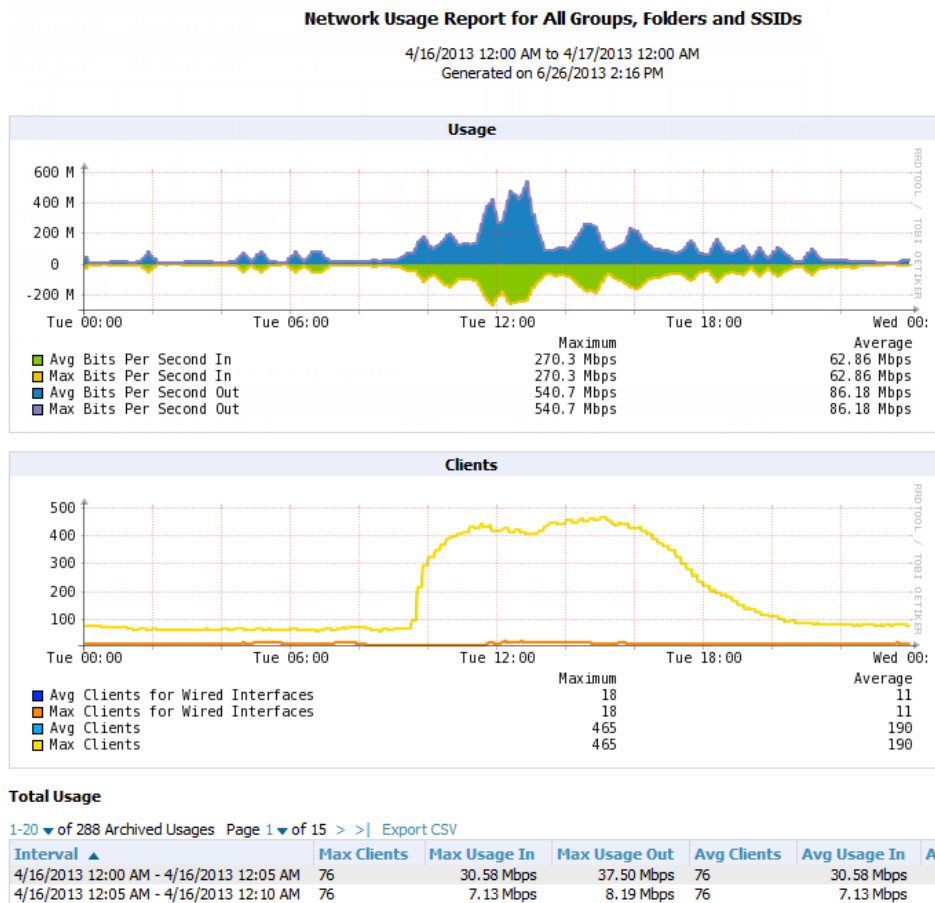

**Table 145: Total Usage table output details**

Field	Description
Interval	This table is broken down in five-minute intervals. The Interval column describes the network usage information during these specific five minutes.
Max Clients	The maximum number of clients that were connected during this interval.
Max Usage In	Shows the maximum amount of incoming traffic on the network during this interval. This value is shown in Mbps.
Max Usage Out	Shows the maximum amount of outgoing traffic on the network during this interval. This value is shown in Mbps.
Avg Clients	The average number of clients that were connected during this interval.
Avg Usage In	Shows the average amount of incoming traffic on the network during this interval. This value is shown in Mbps.
Avg Usage Out	Shows the average amount of outgoing traffic on the network during this interval. This value is shown in Mbps.

## Using the New Clients Report

The New Clients Report lists all new users that have appeared on the network during the time duration defined for the report. This report covers the user identifier, the associated role when known, device information and more. This report gives you the option to filter instead on specific devices and/or users. Whether viewing information for devices or clients, the report can be configured to display additional options. For many of these options, you can choose to view all information or a specific set of information (Matching option). If Matching is selected, a text entry field displays. When you put your cursor in the text entry field, an additional side menu displays providing you with a list of available options that you can select.

- SSID - All or Selected
- Alcatel-Lucent Role - All or Selected
- Classification (for possible Rogue devices) - All or Selected
- Device Type - All or Matching
- AOS Device Type - All or Matching
- Manufacturer - All or Matching
- Model - All or Matching
- OS - All or Matching
- OS Detail - All or Matching
- Network Chipset - All or Matching
- Network Driver - All or Matching
- EAP Supplicant - All or Matching
- Asset Group - All or Matching
- Asset Category - All or Matching

Figure 191 illustrates the fields and information in the New Clients Report. The fields that display on this output are described in Table 146.

**Figure 191: New Clients Report Illustration (split view)**

**New Clients Report for All Groups, Folders, SSIDs and Roles**  
6/24/2013 12:00 AM to 6/26/2013 2:26 PM  
Generated on 6/26/2013 2:26 PM

**New Clients**  
1-20 of 131 New Clients Page 1 of 7 > | Export CSV

Username	Role	MAC Address	Vendor
-	logon	F0:A2:25:E0:C6:69	PRIVATE
kiyo	BYOD-Provision	84:38:35:51:EB:C6	Apple
-	aruba-guest-logon	88:32:9B:9F:3D:AC	Samsung Electro Mechanics co.,LTD.
mtang@arubanetwork.com	logon	E0:B9:BA:16:F4:1E	Apple, Inc.
ajin@arubanetworks.com	employee	88:32:9B:67:AE:B3	Samsung Electro Mechanics co.,LTD.
-	aruba-guest-logon	34:6E:91:1E:0A:...	WYPERA Corporation

Association Time	Duration	Notes	Folder	Group
6/26/2013 1:15 PM	10 mins	-	Top	1330 PoC Lab
6/26/2013 1:05 PM	37 mins	-	Sunnyvale HQ	Ethersphere-lms3
6/26/2013 1:01 PM	50 mins	-	Top	1330 PoC Lab
6/26/2013 12:35 PM	5 mins	-	HQ-RAP	Aruba HQ
6/26/2013 12:01 PM	40 mins	-	Top	1330 PoC Lab
6/26/2013 11:52 AM	9 mins	-	1341/Customer 1	Aruba HQ
6/26/2013 11:39 AM	9 mins	-	Sunnyvale HQ	Ethersphere-lms3
6/26/2013 10:57 AM	9 mins	-	Top	Aruba HQ
6/26/2013 10:45 AM	40 mins	-	Top	1330 PoC Lab
6/26/2013 10:40 AM	20 mins	-	Top	1330 PoC Lab
6/26/2013 10:38 AM	6 mins	-	Top	1330 PoC Lab
6/26/2013 10:19 AM	20 mins	-	Sunnyvale HQ	Aruba HQ
6/26/2013 10:10 AM	50 mins	-	Top	1330 PoC Lab
6/26/2013 10:06 AM	10 mins	-	Sunnyvale HQ	Ethersphere-lms3
6/26/2013 10:06 AM	4 hrs 13 mins	-	1341/Customer 1	Aruba HQ
6/26/2013 10:01 AM	1 hr 6 mins	-	Top	Aruba HQ
6/26/2013 9:57 AM	4 mins	-	Top	1330 PoC Lab
6/26/2013 9:40 AM	20 mins	-	Top	1330 PoC Lab
6/26/2013 9:36 AM	20 mins	-	Top	1330 PoC Lab
6/26/2013 9:26 AM	19 mins	-	1341/Customer 1	Aruba HQ

**Table 146:** *New Clients Report output details*

Field	Description
Username	The client name, if available.
Role	The client's role, if available
MAC Address	The new client's MAC address
Vendor	The vendor for the client device.
AP/Device	The AP/Device that the client is currently connected to.
Association Time	The time when the client last associated with the device.
Duration	How long the client has been connected to the device.
Folder/Group	Shows the folder and group of the device that the client is currently connected to.

## Using the New Rogue Devices Report

The New Rogue Devices Report summarizes rogue device information including the following categories of information:


- Rogue devices by RAPIDS classification—described in ["Using RAPIDS and Rogue Classification" on page 201](#)
- Top rogue devices by number of discovering APs
- Top rogue devices by signal strength
- Graphical summary of rogue devices by LAN MAC address vendor
- Graphical summary of rogue devices by radio MAC address vendor
- Text-based table summary of rogue device counts
- Detailed and text-based table of rogue devices discovered only wirelessly with extensive device parameters and hyperlink interoperability to additional OV3600 pages
- Detailed and text-based table of all rogue devices supporting all discovery methods with extensive device parameters and hyperlink interoperability to additional OV3600 pages
- Detailed and text-based table of discovery events pertaining to the discovery of rogue devices with extensive parameters and hyperlink interoperability to additional OV3600 pages

This report is not run by default, but is available after you define it.

Refer to [Figure 192](#) for a sample illustration of this report.



Figure 192: New Rogue Devices Report Illustration (partial view)

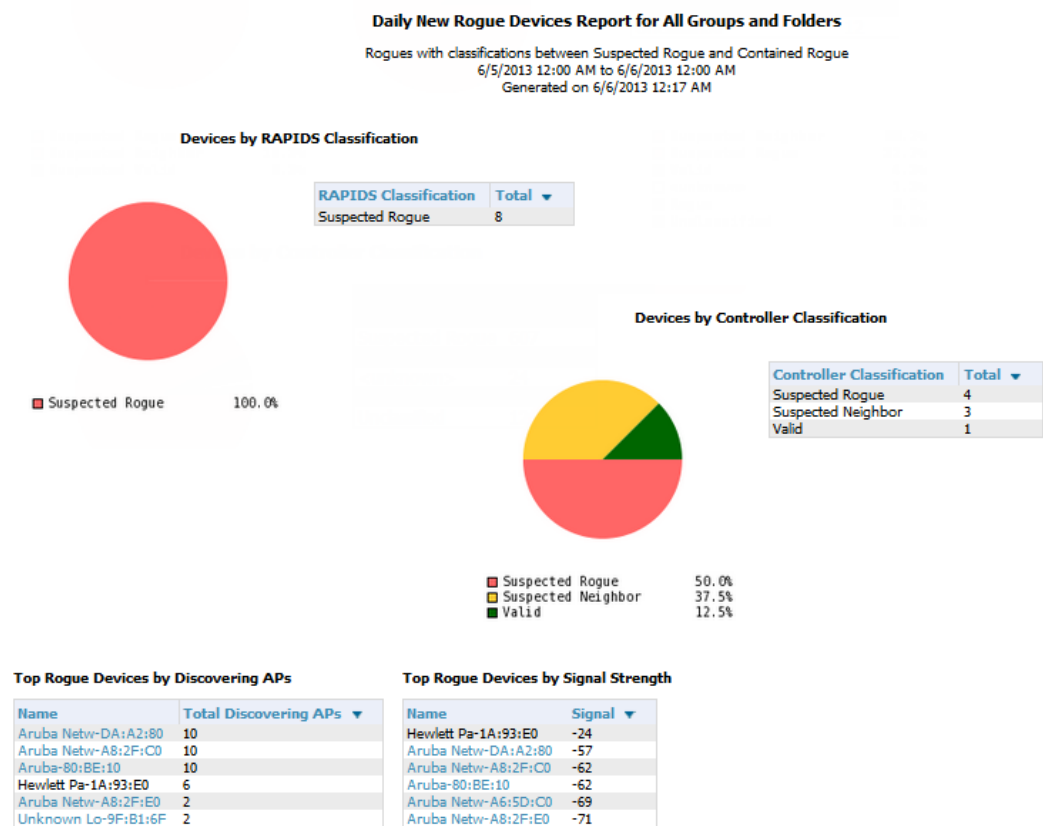

The rogue device inventories that comprise this report contain many fields, described in Table 147.

Table 147: New Rogue Devices Report Fields

Field	Description
Name	Displays the device name, as able to be determined.
RAPIDS Classification	Displays the RAPIDS classification for the rogue device, as classified by rules defined on the <b>RAPIDS &gt; Rules</b> page. Refer to "Using RAPIDS and Rogue Classification" on page 201 for additional information.
Threat Level	Displays the numeric threat level by which the device has been classified, according to rules defined on the <b>RAPIDS &gt; Rules</b> page. Refer to "Using RAPIDS and Rogue Classification" on page 201 for additional information.
Ack	Displays whether the device has been acknowledged with the network.
First Discovered	Displays the date and time that the rogue device was first discovered on the network.
First Discovery Method	Displays the method by which the rogue device was discovered.
First Discovery Agent	Displays the network device that first discovered the rogue device.
Last Discovering AP	Displays the network device that most recently discovered the rogue device.

**Table 147: New Rogue Devices Report Fields (Continued)**

Field	Description
Model	Displays the rogue device type when known.
Operating System	Displays the operating system for the device type, when known.
IP Address	Displays the IP address of the rogue device when known.
SSID	Displays the SSID for the rogue device when known.
Network Type	Displays the network type on which the rogue was detected, when known.
Channel	Displays the wireless RF channel on which the rogue device was detected.
WEP	Displays WEP encryption usage when known.
RSSI	Displays Received Signal Strength (RSSI) information for radio signal strength when known.
Signal	Displays signal strength when known.
LAN MAC Address	Displays the MAC address for the associated LAN when known.
LAN Vendor	Displays LAN vendor information associated with the rogue device, when known.
Radio MAC Address	Displays the MAC address for the radio device, when known.
Radio Vendor	Displays the vendor information for the radio device when known.
Port	Displays the router or switch port associated with the rogue device when known.
Last Seen	Displays the last time in which the rogue device was seen on the network.
Total Discovering APs	Displays the total number of APs that detected the rogue device.
Total Discovery Events	Displays the total number of instances in which the rogue device was discovered.

## Using the PCI Compliance Report

OV3600 supports PCI requirements in accordance with the Payment Card Industry (PCI) Data Security Standard (DSS). The PCI Compliance Report displays current PCI configurations and status as enabled on the network. Verify that OV3600 is enabled to monitor compliance with PCI requirements, as described in the ["Enabling or Disabling PCI Auditing"](#) on page 76.

In addition to citing simple pass or fail status with regard to each PCI requirement, OV3600 introduces very detailed diagnostic information to recommend the specific action or actions required to achieve Pass status, when sufficient information is available. Refer to the ["Auditing PCI Compliance on the Network"](#) on page 74 for information about enabling PCI on the network. The configurations in that section enable or disable the contents of the PCI Compliance Report that is viewable on the **Reports > Generated** page.

["PCI Compliance Report Illustration Example"](#) on page 315 illustrates the fields and information in a PCI Compliance Report.

**Figure 193: PCI Compliance Report Illustration Example**

### PCI Compliance Report for All Groups, Folders and PCI Requirements

6/24/2013 12:00 AM to 6/26/2013 1:20 PM  
Generated on 6/26/2013 1:23 PM

This report covers sections of the Payment Card Industry (PCI) Data Security Standard (DSS) Version 2.0 requirements that are relevant to security in your network. PCI DSS standard requirements are available at <https://www.pcisecuritystandards.org>.

Disclaimer: The PCI Compliance Report must be completed by an authorized QSA. The sole purpose of this report is to provide IT administrators with an on-demand internal audit of components that are visible to AirWave Management Platform.

**Summary**

PCI Requirement ▲	Description	Status
1.1	Configuration standards for routers. A device fails if there are mismatches between the desired configuration and the configuration on the device.	Fail
1.2.3	Install firewalls between any wireless networks and the cardholder data environment. A device passes if it can function as a stateful firewall.	Pass
2.1	Always change vendor-supplied defaults. A device fails if the usernames, passwords or SNMP credentials being used by AMP to communicate with the device are on a list of forbidden credentials. The list includes common manufacturer defaults.	Fail
2.1.1	Change vendor-supplied defaults for wireless environments. A device fails if the passphrases, SSIDs or other security-related settings are on a list of forbidden values. The list includes common manufacturer defaults.	Fail
4.1.1	Use strong encryption in wireless networks. A device fails if the desired or actual configuration reflect that WEP is enabled or if associated clients can connect with WEP.	Fail
11.1	Identify unauthorized wireless devices. A report will indicate a failure if there are unacknowledged rogue APs present in RAPIDS or there are no wireless rogues discovered in the last three months.	Fail
11.4	Use intrusion-detection systems and/or intrusion-prevention systems to monitor all traffic. A report will indicate a "pass" for the requirement if AMP is monitoring devices capable of reporting IDS events. Recent IDS events will be summarized in the report.	Pass

**Issues for requirement 1.1: Configuration standards for routers. (Fail)**

1-20 ▼ of 75 PCI Compliance Issues Page 1 ▼ of 4 > > |

AP/Device ▲	Status	Detail
00:0b:86:64:8d:e0	Unable to Determine	Device is currently down or was never contacted.
00:0b:86:64:8e:b0	Unable to Determine	Device is currently down or was never contacted.
00:1a:1e:c0:13:74	Unable to Determine	Device is currently down or was never contacted.
00:1a:1e:c0:1a:64	Unable to Determine	Device is currently down or was never contacted.
00:1a:1e:c1:44:42	Fail	Device configuration cannot be audited.
00:1a:1e:c6:ac:8a	Fail	

	Current Device Configuration	Desired Device
Gateway	10.51.0.1	<unset>
Host Controller IP Address	10.51.3.99	<unset>
Host Controller Name	aruba-master	<unset>

## Using the Port Usage Report

You can generate a wide array of port usage statistics from the Port Usage Report including each of the following:

- List of all the switches and ports in your network by folder
- List of unused ports
- List of access and distribution ports
- Histogram displaying unused ports vs. unused switches by type (access or distribution)
- List of most used switches
- List of most used ports

A sample of the types of information used to generate a Port Usage Report appears in [Figure 194](#). The fields that display for the switching summary information are described in [Table 148](#).

**Figure 194: Port Usage Report Detail Page (partial view)**



**Table 148: Switches table fields**

Field	Description
Device	The name of the device
Folder/Group	The folder and group that this devices belongs to

**Table 148:** *Switches table fields (Continued)*

Field	Description
Type	The switch type
Contact	Displays the contact info for the switch, if available
Location	Displays the location information for the switch, if available
Total Ports	The total number of ports available on the device
Access Ports	The total number of Access Ports available on the device
Unused Ports (%)	The percentage of the ports on the device that are unused
Traffic In	The amount of incoming traffic on the device
Traffic Out	The amount of outbound traffic on the device

### Using the RADIUS Authentication Issues Report

The RADIUS Authentication Issues Report contains issues that may appear with controllers, RADIUS servers, and users. For each of these, the report includes the number of total failures and the first and most recent event times. By default, this report will show up to 10 RADIUS authentication items in each table. You can change this value to anything other than 0.

You can filter this report based on BSSID. You can also specify to view detailed information about RADIUS failures. If this is selected, then an additional table display summarizing authentication issues for each authentication event.

[Figure 195](#) illustrates the fields and information in the RADIUS Authentication Issues Report.

Figure 195: RADIUS Authentication Issues detail page illustration (partial view)

RADIUS Authentication Issues Report for All Groups, Folders and SSIDs					
6/23/2013 12:00 AM to 6/26/2013 3:11 PM					
Generated on 6/26/2013 3:11 PM					
Top 10 RADIUS Authentication Issues by Controller					
Controller	Total Failures	First Event	Most Recent Event		
apollo.arubanetworks.com	25779	6/24/2013 11:19 PM	6/26/2013 3:11 PM		
ethersphere-1322-porfido.arubanetworks.com	2803	6/24/2013 11:19 PM	6/26/2013 3:06 PM		
alpo.arubanetworks.com	1594	6/24/2013 11:27 PM	6/26/2013 3:11 PM		
hq-via-01 (via.arubanetworks.com)	316	6/24/2013 11:25 PM	6/26/2013 2:58 PM		
Chuckwagon (chuckwagon.arubanetworks.com)	303	6/25/2013 12:23 AM	6/26/2013 3:11 PM		
3200-1	16	6/26/2013 4:16 AM	6/26/2013 8:55 AM		
RAP-Local (rap-local.arubanetworks.com)	1	6/25/2013 8:50 AM	6/25/2013 8:50 AM		
Top 10 RADIUS Authentication Issues by RADIUS Server					
RADIUS Server	Total Failures	First Event	Most Recent Event		
hqsv01	43	6/25/2013 12:09 AM	6/26/2013 1:17 PM		
Top 10 RADIUS Authentication Issues by Client					
Client	Total Failures	First Event	Most Recent Event		
00:00:00:00:00:00	26047	6/24/2013 11:19 PM	6/26/2013 3:11 PM		
00:1F:5B:BC:22:5D	2394	6/24/2013 11:19 PM	6/25/2013 7:07 PM		
1C:80:94:9B:C2:3B	1048	6/25/2013 10:22 AM	6/26/2013 3:11 PM		
8C:58:77:69:31:9D	119	6/25/2013 9:05 AM	6/26/2013 3:09 PM		
00:24:D7:8C:9B:88	96	6/24/2013 11:36 PM	6/26/2013 2:52 PM		
CC:3A:61:21:D4:DD	90	6/25/2013 10:50 AM	6/26/2013 2:41 PM		
D8:D1:CB:8A:9C:3D	73	6/25/2013 9:31 AM	6/26/2013 3:06 PM		
3C:43:8E:A3:A2:DD	63	6/25/2013 10:19 AM	6/26/2013 1:12 PM		
10:9A:DD:03:D8:8F	32	6/25/2013 9:38 AM	6/25/2013 12:37 PM		
C8:33:4B:04:FB:65	30	6/25/2013 1:07 PM	6/26/2013 2:35 PM		
1-20 of 30,812 RADIUS Authentication Issues Page 1 of 1,541 > >   Export CSV					
Event	Client MAC Address	Username	RADIUS Server	Event Time	Contro
Client authentication failed for 00:00:00:00:00:00	00:00:00:00:00:00	-	-	6/26/2013 3:11 PM	apollo.a
Client authentication failed for 00:00:00:00:00:00	00:00:00:00:00:00	-	-	6/26/2013 3:11 PM	apollo.a

## Using the RF Health Report

The RF Health Report tracks the top AP radio issues by noise, MAC/Phy errors, channel changes, transmit power changes, mode changes, and interfering devices (the last two apply only if there are ARM events). This report assists in pinpointing the most problematic devices on your network, and lists the top devices by problem type.

Problematic APs are displayed in two separate lists Problem Radios lists, grouped by radio frequency. A device will make it into the list if it violates two or more thresholds. (For more on the thresholds that indicate problems, refer to "Evaluating Radio Statistics for an AP" on page 149.)

Other lists grouped by radio frequency include Most Noise, Most Interfering, Most/Least Utilized by Channel Usage, Most MAC/Phy Errors, Most Channel Changes, Most Transmit Power Changes, Clients with Least Goodput, Clients with Least Speed, and Radios with Least Goodput.

If an RF Health Report has not been generated before, you can create it by following the instructions on the "Defining Reports" on page 284 section of this chapter.

Figure 196 illustrates a sample RF Health Report.

Figure 196: Daily RF Health Report Page Illustration (partial view)

**Daily RF Health Report for All Groups and Folders**

6/25/2013 12:00 AM to 6/26/2013 12:00 AM  
Generated on 6/26/2013 12:21 AM

**Problem 2.4 GHz Radios**

Device ▲	Channel Changes	Transmit Power Changes	Mode Changes	Avg Noise (dBm)	Avg Channel Busy (%)
1142-ac.arubanetworks.com	58	37	0	-95.00	53.15
1344-2-140C	22	0	0	-89.00	79.13
1344-2-72c (1344-1-al1.arubanetworks.com)	23	0	0	-90.50	77.95
AP225-SW (ap225-sw.arubanetworks.com)	39	7	0	-90.50	60.24
ITC	10	0	0	-85.00	79.13
RTLS4	0	0	0	-75.00	79.53
spectrum monitor	31	0	0	-88.50	77.95

**Most Noise (5 GHz)**

Rank ▲	Device	Avg Noise (dBm)	Channel Changes	Avg Channel Busy (%)	Clients	Usage	Location
1	1344-2-140C	-86.00	1	14.57	1	343.07 Kbps	-
2	ITC	-87.00	0	14.57	2	121.56 Kbps	-
3	RTLS	-87.50	0	62.99	0	0 bps	-
4	1344-1-AL7 (1344-1-al7.arubanetworks.com)	-88.00	2	10.63	4	2.24 Mbps	-
5	00:1a:1e:c0:1a:64	-88.50	4	-	1	1.20 Kbps	-
6	1344-1-AL25 (1344-1-al25.arubanetworks.com)	-89.00	0	4.72	2	184.27 Kbps	-
7	rmuwakdi-rap5	-89.50	0	-	0	3.52 Kbps	-
8	Downstairs_AP.foo.com	-89.50	0	0.39	2	5.42 Kbps	-
9	1344-1-AL21 (1344-1-al21.arubanetworks.com)	-89.50	0	7.09	4	1.01 Mbps	-
10	1344-2-24c	-90.00	1	11.42	3	644.44 Kbps	-

**Most Noise (2.4 GHz)**

Rank ▲	Device	Avg Noise (dBm)	Channel Changes	Avg Channel Busy (%)	Clients	Usage	Location
1	RTLS4	-75.00	0	79.53	0	0 bps	-
2	00:1a:1e:c0:1a:64	-84.50	4	-	0	0 bps	-

All tables in RF Health indicate the rank, device type, number of users, bandwidth, location, controller, folder, and group, and all are sorted according to rank. Selecting a value under the **Device** column in any table will take you to the **APs/Devices > Monitor > Radio Statistics** page for the band indicated in the table title (5 GHz or 2.4 GHz).

- Every list contains Rank, Device (name, not type), Channel Changes, Average Noise, Average Channel Utilization, Clients, Usage, Location, Controller name, Speed, Goodput, Folder, and Group.
- The third column in the list (after Device) will be the column the list is sorted by.
- If that column would otherwise be in the list (Channel Changes), it does not show up in the list where it would otherwise.
- Note that sometimes the sorted column is not one of those common ones, such as the Interfering Devices section.

OV3600 limits data storage to 183 days (approximately six months) per radio. If you create an RF Health Report with a date range longer than 183 days, it will only include Channel Changes, Transmit Power Changes, Average Utilization, Mac/Phy Errors and Average Noise based on whatever part of the report intersects the last 183 days. This differs from most reports because other data (like bandwidth and users) will max out at 425 days, and OV3600 validates reports so you can only run them over a 366-day duration.

## Using the Rogue Clients Report

The Rogue Clients report tracks the number of valid users that connected to rogues in the specified time frame, and can be filtered by rogue classification. You can specify to include ad-hoc devices can be included and detailed information about the clients.

By default, the minimum RAPIDS classification is Suspected Rogue, and the maximum is Contained Rogue.

Figure 197: Rogue Clients Report Page Illustration

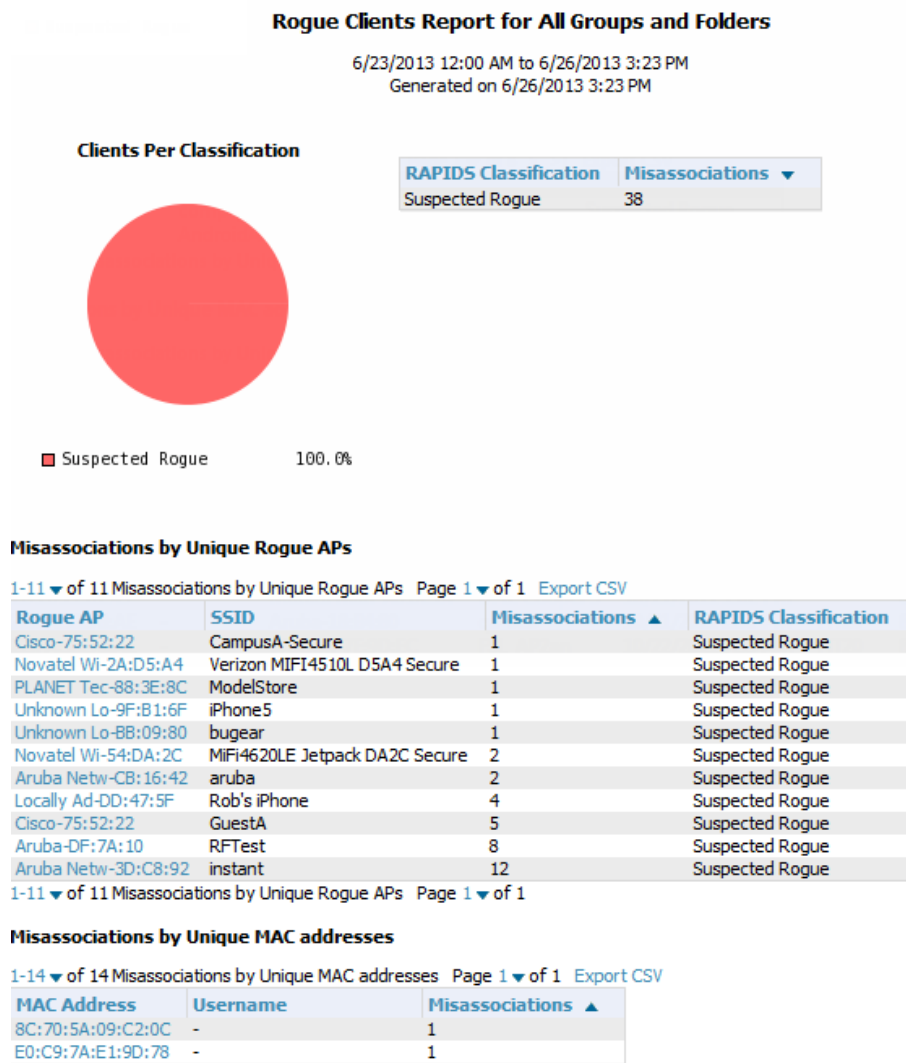


Table 149: Rogue Clients fields and descriptions

Field	Description
Misassociations by Unique Rogue APs	For each Rogue AP, this table includes the SSID of the device, the number of misassociations, and the RAPIDS Classification.
Misassociations by Unique MAC addresses	This table shows details about MAC address that are being registered as rogue clients, including the username (if available) and the number of misassociations.
<b>Rogue Clients</b>	
MAC Address	The MAC address of the rogue client.
Username	The username of the rogue client, if available



**Table 149: Rogue Clients fields and descriptions (Continued)**

Field	Description
SSID	The SSID of the rogue client
First Heard	The date/time when the rogue client was first detected on the network.
Ch BW	The channel bandwidth of the client, if available
Radio Mode	The radio mode that the rogue client is using.
SNR	The signal-to-noise ratio, if available.
Channel	The channel of the rogue device, if available.
Loation	The location of the rogue client, if available
RAPIDS Classification	The current classification of the rogue client.

## Using the Rogue Containment Audit Report

The Rogue Containment Audit report that lets you know if any containment is failing. [Figure 198](#) illustrates the output of this report, and [Table 150](#) describes the fields available in the report.

**Figure 198: Rogue Containment Audit Report Page Illustration**

**Rogue Containment Audit Report for All Groups and Folders**  
Generated on 6/26/2013 3:44 PM

1-5 ▼ of 19 Rogues Contained Page 1 ▼ of 4 > > | Reset filters Export CSV

Controller	Rogue ▼ ▼	BSSID ▼	Containment State ▼	Desired Containment State ▼	Classifying Rule	Location ▼
Cisco_e3:09:64	Summit-Dat-07:42:FE	00:17:23:07:42:FE	Contained	Not Contained	Signal Strength > -80dbm	-
Cisco_e3:09:64	Aruba Netw-D1:35:82	6C:F3:7F:D1:35:82	Contained	Not Contained	Signal Strength > -80dbm	-
Cisco_e3:09:64	Aruba Netw-B6:6E:22	6C:F3:7F:B6:6E:22	Contained	Not Contained	Signal Strength > -80dbm	-
Cisco_e3:09:64	Aruba Netw-B6:6E:22	6C:F3:7F:B6:6E:22	Contained	Not Contained	Signal Strength > -80dbm	-
Cisco_e3:09:64	Aruba Netw-B6:6C:A2	6C:F3:7F:B6:6C:A2	Contained	Not Contained	Signal Strength > -80dbm	-

1-5 ▼ of 19 Rogues Contained Page 1 ▼ of 4 > > | Reset filters

**Table 150: Rogue Containment Report fields and descriptions**

Field	Description
Controller	The controller attempted to contain the Rogue
Rogue	The name of the rogue device
BSSID	The BSSID of the rogue device
Containment State	Shows the current containment state
Desired Containment State	Shows the desired containment state
Classifying Rule	Shows the rule that the controller followed when determining the status of the rogue

**Table 150:** Rogue Containment Report fields and descriptions (Continued)

Field	Description
Location	The location of the rogue device, if available

## Using the VPN Session Report

The **VPN Session Report** extensively itemizes VPN activity by session. This report can be filtered to show devices or clients/users, including those that match a certain search criteria. You can also specify device types to include in the report. Finally, you can specify to include summary or detailed information about VPN sessions and users.

The output can display in chart and table form.

In list and chart form, this report tracks and display session information that can include any or all of the following:

**Figure 199:** VPN Session Report Summary View

**Daily VPN Session Report for All Groups and Folders**  
10/29/2012 12:00 AM to 10/30/2012 12:00 AM  
Generated on 10/30/2012 12:50 AM

VPN Session Summary	
Sessions:	10
Unique users:	1
Unique controllers:	1
Avg session duration:	3 hrs 33 mins
Total traffic (bytes):	60964655
Avg traffic per session (bytes):	6096465.50
Avg traffic per user (bytes):	60964655

**Table 151** describes the fields that display when "Summarize Report By" list information is selected for the following tables:

- VPN Session Data by VPN Type
- VPN Session Data by Controller
- VPN Session Data by AOS Device Type
- VPN Session Data by HTTP Fingerprint
- VPN Session Data by VLAN

**Table 151:** VPN Session Data tables for each session type

Field	Description
Name	The VPN Type, Controller, AOS Device Type, HTTP Fingerprint, or VLAN
Users	The number of users that logged a VPN session over the specified time range for each VPN Type, Controller, AOS Device Type, HTTP Fingerprint, and VLAN
Total Duration	The amount of time that each type was connected during the specified time range.
Total Data	The amount of data in MB each type was collected during the specified time range.

## Emailing and Exporting Reports

This section describes three ways that you can distribute reports in OV3600:

- "Emailing Reports in General Email Applications" on page 323
- "Emailing Reports to Smarthost" on page 323
- "Exporting Reports to XML, CSV, or PDF" on page 324


### Emailing Reports in General Email Applications

Perform these steps to set up email distribution of reports in OV3600

All reports contain a link to export the report to an XML, CSV, or PDF file. Reports can also be e-mailed in either HTML, PDF, or CSV format.

Select **Email This Report** to email the report, and then specify the email addresses, separated by commas, to which reports are sent along with the sender address. Finally, specify whether the report should be sent in HTML or PDF format.

**Figure 200:** *Email this report*

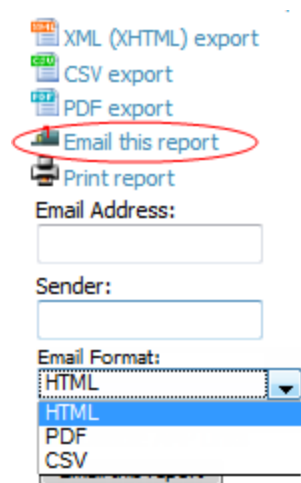

Additional information about email-based report generation is described in "Defining Reports" on page 284 and in "Emailing Reports to Smarthost" on page 323.

### Emailing Reports to Smarthost

OV3600 uses Postfix to deliver alerts and reports via email, because it provides a high level of security and locally queues email until delivery. If OV3600 sits behind a firewall, which prevents it from sending email directly to the specified recipient, use the following procedure to forward email to a smarthost.

1. Add the following line to `/etc/postfix/main.cf`:  

```
relayhost = [mail.example.com]
```

Where: `mail.example.com` is the IP address or hostname of your smarthost.
2. Run `service postfix restart`
3. Send a test message to an email address.  

```
Mail -v xxx@xxx.com  
Subject: test mail  
.  
CC:
```
4. Press **Enter**.
5. Check the mail log to ensure mail was sent by running this command:

```
tail -f /var/log/maillog
```

## Exporting Reports to XML, CSV, or PDF

OV3600 allows you to export individual reports in XML (xhtml), CSV, or PDF. You can also export all reports at once, and a zip file will be generated with all of the files in CSV format included. These files can be read by an HTML browser or opened in Excel. The CSV files can be opened in any text editor. The PDF files can be viewed using any reader.



---

Support for graphics and links is included when exporting. This method of exporting also prevents **Missing File C:\filename.css** error messages.

---


This chapter contains information about VisualRF and includes the following topics:

- "Features" on page 326
- "Useful Terms" on page 326
- "Starting VisualRF" on page 327
- "Basic VisualRF Navigation" on page 327
- "Advanced Settings in VisualRF > Setup " on page 336
- "Planning and Provisioning" on page 343
- "Increasing Location Accuracy " on page 355
- "Using VisualRF to Assess RF Environments" on page 362
- "Importing and Exporting in VisualRF" on page 368
- "VisualRF Location APIs" on page 370
- "About VisualRF Plan" on page 372

The VisualRF module provides a real-time picture of the actual radio environment of your wireless network and the ability to plan the wireless coverage of new sites. To understand what is happening on your wireless network, you need to know where your users and devices are located, and you need to monitor the RF environment in those areas. VisualRF puts this information at your fingertips through integrated mapping and location data.

VisualRF uses sophisticated RF fingerprinting to accurately display coverage patterns and calculate the location of every wireless device in range. Moreover, VisualRF does not require dedicated RF sensors or a costly additional location appliance - all the necessary information is gathered from your existing wireless access points and controllers.

**Figure 201:** Example VisualRF Page Showing all networks

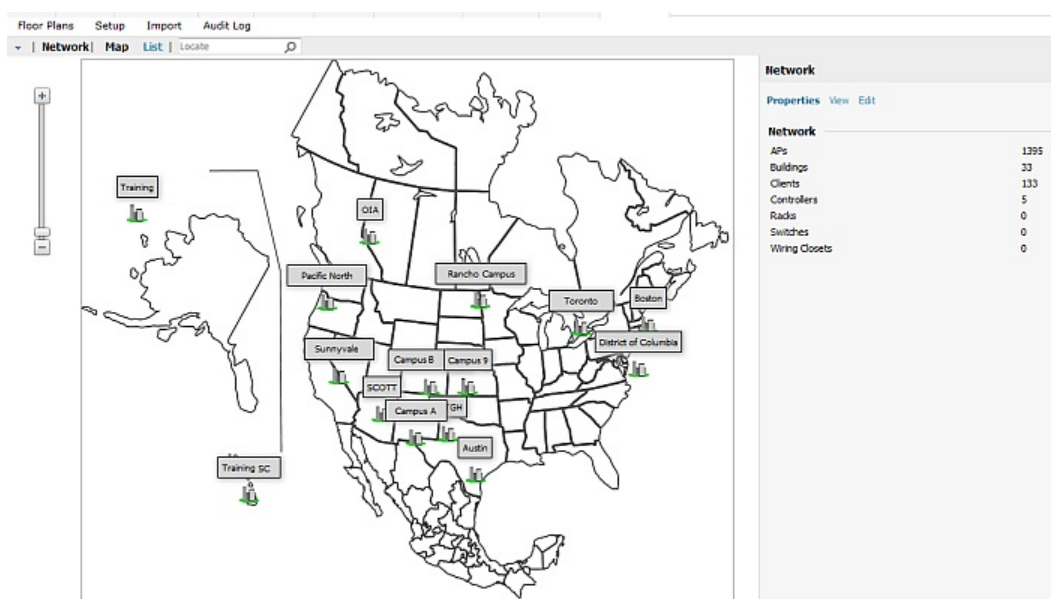

## Features

- Mesh monitoring page specially for viewing Alcatel-Lucent AirMesh devices. VisualRF automatically renders Mesh APs based on GPS coordinates.
- Floor plan upload wizard enables direct importation of JPG/JPEG, GIF, PNG, PDF (single page only) and CAD files for floor plans. **NOTE:** PDF floor plans must be generated from a source file. Other PDFs, such as those scanned from a printer, will not import properly. Similarly, CAD files must be generated by AutoCAD.
- Batch upload wizard enables batch uploads of multiple CAD files with corresponding walls, and access points.
- Accurate calculation of the location of all client devices (laptops, RFID Tags, PDAs, Phones) using RF data from your existing APs and controllers. Increased accuracy of device placement can be achieved with periodic site surveys.
- Graphical navigation allows your Help Desk to view floor plans simply by clicking on the appropriate campus, building, or floor.
- Tree view allows you to navigate to a specific campus, building, or floor via a tree navigation.
- Heatmaps depict the strength of RF coverage in each location.
- Speed (data rate) view which depicts the highest data speed at every location on a floor plan.
- Display of alerts and error conditions. For instance, an AP icon will display in red when a critical alert is active or when usage conditions exceed predefined thresholds.
- Location playback viewer which allows visual tracking of up to 24 hours of location history.
- Dynamically recalculated path loss and device locations based on real-time data from your wireless LAN, for increased location accuracy.
- Calibrated RF data from multiple vendors' APs (and across different product lines from the same vendor) for accurate display even in multi-vendor and multi-architecture environments. Refer to the *Supported Infrastructure Devices* document for a list of vendors and supported devices.
- Full planning capabilities based on speed or signal requirements.

## Useful Terms

- **AP-to-AP Signal (Neighbor)** - Some APs/Controllers have the ability to report the signal strength of APs that they hear. OV3600 uses these signal strength readings to dynamically attenuate floor plans to increase the accuracy of client locations and heat maps.
- **Clients** - Clients are end-user devices that access the network through other devices monitored or managed by OV3600.
- **Client Health** - The client health metric compares the actual airtime the AP spends transmitting data is equal to the ideal amount of time required to send data to the client. A client health metric of 50% means the AP is taking twice as long as is ideal, or is sending one extra transmission to that client for every packet. A metric of 25% means the AP is taking four times longer than the ideal transmission time, or sending 3 extra transmissions to that client for every packet.
- **dB (Decibels)** - difference/ratio between two signal levels.
- **dBm** - dB as compared to 1 mW. It is a logarithmic measurement (integer) which is typically used in place of mW to represent receive-power level. OV3600 normalizes all signals to dBm, so it is easy to evaluate performance between various vendors.
- **mW** - 1/1000 of a Watt. It is a linear measurement (always positive) generally used to represent transmission.
- **Rogue Surveys** - Rogue surveys are facilitated by VisualRF and the client's radio to understand which access points they hear and what signal strength.
- **RSSI (Received Signal Strength Indicator)** - IEEE defines RSSI is a mechanism by which RF energy is to be measured by the circuitry on a wireless NIC (0-255). RSSI is not standard across vendors. Each vendor determines their own RSSI scale/values.

- **Session** - A session is an instance when a client connects to the network. The period of time in which the client remains connected to the network is typically calculated as a single session. However, if a client roams between APs, the periods of time the client connected to the different APs may be calculated as separate sessions.
- **Unassociated Client Information** - Some APs/Controllers have the ability to report the signal strength of visible clients that are associated to a radio on a neighboring AP. OV3600 also uses these signal strength readings to more accurately place these unassociated clients.
- **VisualRF** - The OV3600 service that calculates location, calculates path loss, and provides floor plan editing capabilities.
- **VisualRF Plan** - Makes the planning portions of VisualRF available in an offline software package that does not require a server. For more information about VisualRF Plan, see "About VisualRF Plan" on page 372.

## Starting VisualRF

In order to launch VisualRF, **OV3600 Setup > General** settings must be configured to display the VisualRF tab, and the VisualRF engine must be enabled using the **VisualRF > Setup** menu. Both of these pages are only visible to users logged-in with administrators credentials. By default:

- **Display VisualRF** is enabled in **OV3600 Setup > General**.
- **Enable VisualRF Engine** is disabled in **VisualRF > Setup**.

To enable VisualRF, follow these instructions while logged in as an administrator:

1. Navigate to **VisualRF > Setup**.
2. In the **Server Settings** section, select **Yes** in the **Enable VisualRF Engine** field, and then select **Save**.


## Basic VisualRF Navigation

In the default HTML5 VisualRF UI, the top-level VisualRF menu shows only the **Network** view, as shown in [Figure 202](#). If the HTML5 UI is disabled, the Flash-based UI can also display the **Mesh** view, as shown in [Figure 203](#).

**Figure 202: Default VisualRF Top Level Menu - Network View**



**Figure 203: Default VisualRF Top Level Menu - Mesh View**

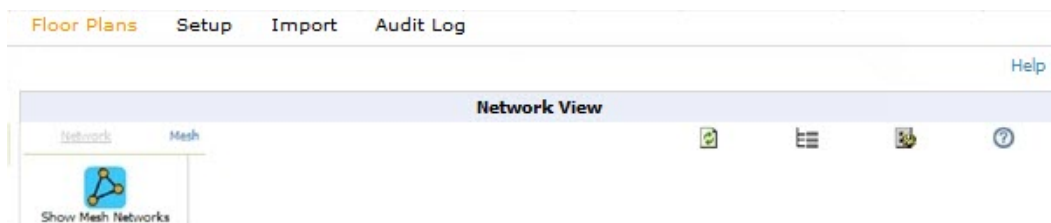


The top-level Network view can display network campuses on a map, or in a list. You can toggle between these two displays by clicking the **Map** or **List** links at the top of the Network view.

## Network View Navigation

The Network view provides page specially for viewing campuses, buildings and floors within your network.


You can select any campus or building to view the numbers of APs and clients at that location. [Figure 204](#) displays an example of a campus view with a building icon selected:

**Figure 204:** Viewing a Campus Networks in VisualRF

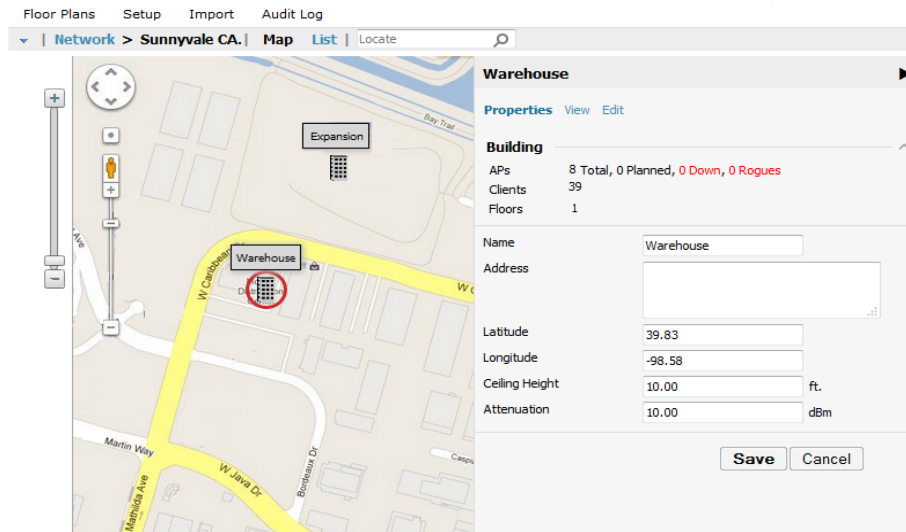

Click on an building within the selected campus, then select a floor to display the APs and clients on that floor. Select an AP or client to view detailed information about that device, as shown in [Figure 205](#)

**Figure 205:** Viewing a Floor Plan in VisualRF

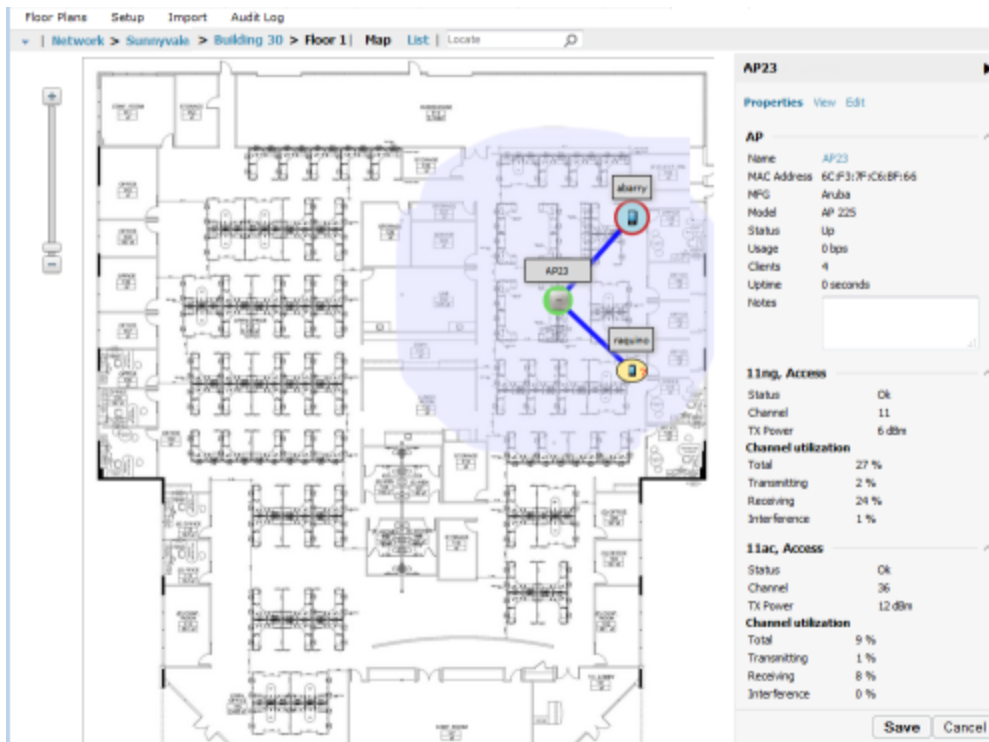








## Floorplan View Navigation

When viewing a floor plan in the Floorplan view, the **View** menu displays controls to display selected **Devices**, **Overlays**, **Display Lines**, and **Floorplan Features**.

### Display Devices

Click any of the icons below to display these devices on the floorplan. Click the arrow beside these icons to select the size of the device icon.

- **APs** - Turns the display of APs on or off. APs on the floor plan indicated by the  icon.
- **Clients** - Turns the display of wireless users on or off. Clients on the floor plan are indicated by the  icon.
- **Interferers** - Toggle interferers on or off. Interferers on the floor plan are indicated by the  icon.
- **Rogues** - Toggle rogue devices on or off. Rogues on the floor plan are indicated by the  icon.
- **Tags** - Toggle WiFi Tags on or off. Tags on the floor plan are indicated by the  icon.



---

Interferer indicators works for Alcatel-Lucent AOS-W devices running 6.1 or newer that have run the **mgmt-server type** OV3600 command, and have APs performing Spectrum analysis through hybrid scanning or dedicated spectrum monitors.

---

### Overlays

Use the **Overlays** menu to configure and display the data overlays. Click an overlay name to display that overlay data on the floor plan. Click the arrow beside an overlay to configure additional options for that overlay type.

- **AppRF** - The AppRF overlay shows data usage and the applications in use by user and device. The overlay uses colors to show usage thresholds. To see the specific usage values, mouse over the client icon. The threshold colors that show the usage categories are preset and can be edited:
  - Green: Client has used between 0 and 20 MB in the past two hours.
  - Yellow: Client has used between 20 MB and 1GB in the past two hours.
  - Red: Client has used more than 1 GB in the past two hours.
- **Ch. Utilization** - View how much airtime is used in the environment. Airtime usage is a good measure of how busy an area is. When you select this option, a new Data Set menu appears where you can select the Current or Maximum Total, Receive, Transmit, or Interference information to display on the floor plan.
- **Channel** - Identifies the channel coverage by identifying regions covered by specific channels, or regions with overlapping coverage on one selected channel or all channels in the 2.4 Ghz or 5 Ghz radio band. Mouse over highlighted coverage areas for details about the APs
- **Client Health** - Determine client health using this overlay. This option is available for controllers running Alcatel-Lucent AOS-W 6.3 or greater. For more information on how this value is calculated, see "[Useful Terms](#)" on page 326.
- **Heatmap** - Evaluate AP coverage based on AP transmission signal strength by providing the latest dBm (energy level) for all areas of a floor plan. When this option is selected, the Signal Cutoff drop-down menu displays. From this drop-down, you can select a common cutoff value or you can specify a custom value.
- **Speed** - Evaluate coverage based on transmit power of client by providing the highest data rate a user will receive for all areas of a floor plan. When this option is selected, the Client Transmit Power drop-down menu displays. Use the additional configuration options to select a transmit power value for the overlay. Additionally, a Rates section appears enabling you to select either rates from 54 Mbps to 1 Gbps.
- UCC
- **Voice** - Provides color-coded overlay based on number of radios covering each grid cell based on the selected signal cutoff. When this option is selected, the Signal Cutoff drop-down menu displays. From this drop-down, you can select a common cutoff value or you can specify a custom value.

The **Channel Utilization**, **Channel**, **Heatmap** and **Speed** overlays can display information for adjacent floors to determine how the bleed through from adjacent floors affects the viewed floor. Select all options to see all floors, or one or more of the following options:

- Above - show the data from APs located on the floor above
- Current (default)
- Below - show the data from APs located on the floor below

## Relation Lines

Show or hide the following relation lines:

- **APs** - Toggle lines between APs which heard each other.
- **Client Association** - Toggle line between the wireless client and AP of association.
- **Client Neighbors** - Toggle lines between client and radios that hear the client excluding the radio of association.
- **Interferers** - Toggle lines between interferers and the radios that have discovered them. For interferers, there is no radio of association.
- **Rogues** - Toggle lines between rogue APs and radios which hear the AP.
- **Surveys** - Toggle lines between client (x,y) to APs by client during survey.
- **Tags** - Toggle lines between WiFi Tags and radios which hear the Tags. For Tags there is no radio of association.

## Floorplan Features

Show or hide the following floor plan features:

- **Labels** - Display or hide all labels
- **Origin** - Set a single origination point per floor. The origination point is used for multi-floor buildings so that VisualRF knows how to vertically align multiple floor plans. This is especially useful in multi-floor buildings for ensuring that multi-floor heatmaps display properly. By default, the origin appears in the upper left corner of the floor plan. Click and drag the origin to the correct position.
- **Regions** - Display or hide defined regions
- **Walls** - Display or hide all walls
- **Surveys** - Display or hide Client Surveys.



---

The default HTML5 UI allows network administrators to display or hide client surveys and relationship lines between the client and AP, even though client surveys can only be configured using the legacy Flash-based VisualRF UI. For more information on client surveys, see ["Adding Client Surveys" on page 360](#).


---

## Mesh View Navigation

Mesh view provides a visual Mesh monitoring page specially for viewing Alcatel-Lucent AirMesh devices. It automatically renders Mesh APs based on GPS coordinates.


You can mouse over each mesh network icon to view the numbers of APs and clients, and network usage in Mbps. [Figure 206](#) displays an example of a Mesh Network view with a mouseover above a network icon:

**Figure 206:** Viewing Mesh Networks in VisualRF

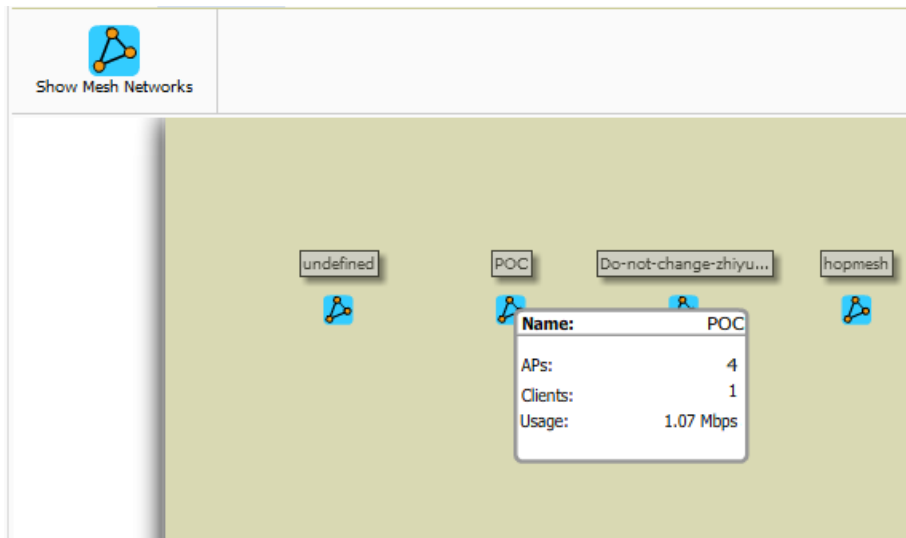

Click on an AirMesh network to display the APs with labels, as shown in [Figure 207](#)

**Figure 207:** APs in a mesh network

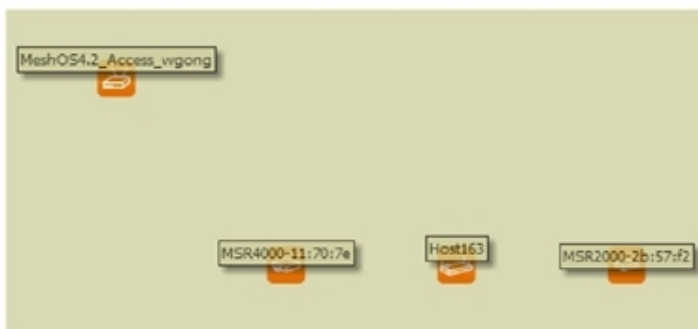



Select an AirMesh AP icon to bring up the popup menu showing the Mesh Node Properties by default. This window shows the node’s name, MeshID, MAC, Manufacturer, and other information. Clicking the blue **Monitor** link inside this window opens the **APs/Devices > Monitor** page in a new tab. Clicking the blue **Manage** link inside this window opens the **APs/Devices > Manage** page for this AP in a new tab.

The top-level Mesh view includes the Refresh, Site Tree, Preferences and Help icons. [Table 152](#) describes these icons and their functions in the VisualRF Mesh view.


**Table 152:** Top Level Icons and Descriptions

Operation	Icon	Description
Refresh		Refresh the floor plan to see changes.
Open Site Tree		Display the Network Tree View Window on top of the floor plan.

**Table 152: Top Level Icons and Descriptions (Continued)**

Operation	Icon	Description
Preferences		Configure personal viewing preferences. The Preferences menu allows you to configure user preferences (APs, Clients, overlay types, grid lines, alerts, icon sizes, etc.). See " <a href="#">Configuring Flash UI Personal Preferences</a> " on page 332 for more details.
Help		Launch the online help. <b>NOTE:</b> This User Guide currently contains the most up-to-date help information for the VisualRF interface.

**Figure 208: Properties for a Mesh Gateway Illustration**

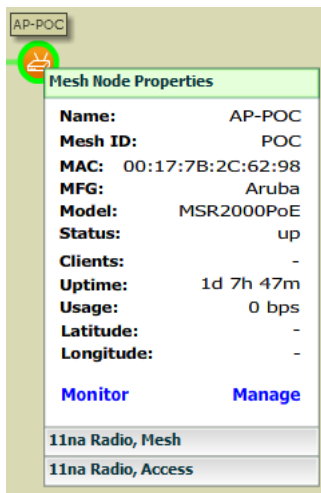

For radio-level status information on an AirMesh device in your network, select the menus in the AP's popup window for each radio (**11na Radio, Access**; **11na Radio, Mesh**; and so forth).

## Configuring Flash UI Personal Preferences

The VisualRF Mesh view and the flash-based UI network view includes menus to set personal display preferences. To view or change these settings, select the **Preferences** icon on the **VisualRF > Floor Plans** page and choose from the options that follow. These preferences are stored in the database, so they are retained across browsers and machines.




---


These options are available in the legacy Flash-based UI only, and do not appear in the default HTML5 UI.

---

### General Flash UI Preferences

From the **VisualRF > Floor Plans** page, click the Preferences icon, then select **General** from the **Configure Preferences** for drop-down menu, as shown in [Figure 209](#).

Figure 209: VisualRF General preferences

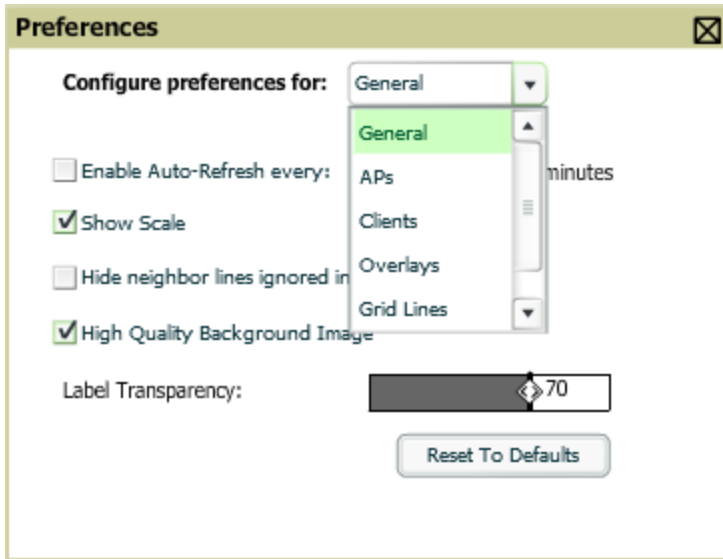


This menu allows you to configure the following settings:

- Enable auto-refresh toggle. If enabled, specify the Refresh Interval in
- Show Scale
- Hide neighbor lines ignored in location calculation
- High Quality Background Image - you can disable to increase rendering speed
- Label Transparency - specify the transparency level for labels in the floor plan
- Reset to Defaults - launches a dialog box asking you to verify whether to reset all preferences to the default values. Select **Yes** to reset all preferences or **Cancel** to leave preferences as configured.

### AP Flash UI Preferences

From the **VisualRF > Floor Plans** page, click the Preferences icon, then select **APs** from the **Configure Preferences for** drop-down menu, as shown in Figure 210 :

Figure 210: VisualRF APs preferences

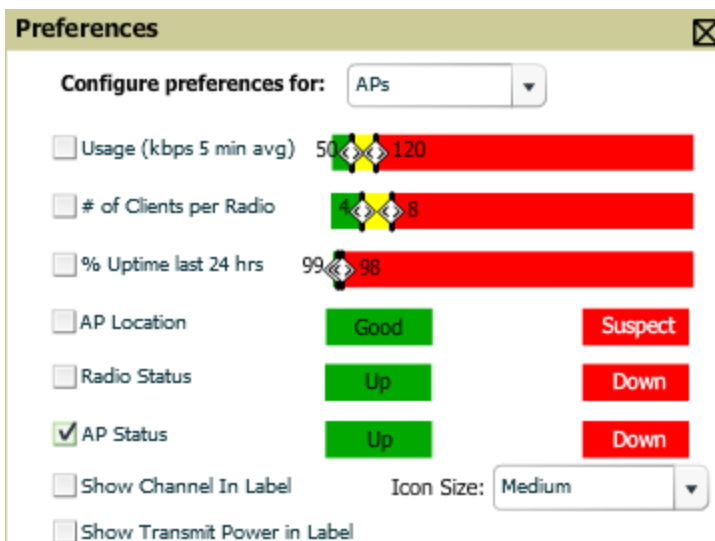


This menu allows you to configure the following settings:

- Usage - select the kbps threshold for normal (green), high (yellow), and excessive (red)
- # of Clients per Radio - select the number of number of clients per radio for normal (green), high (yellow), and excessive (red)
- % of Uptime for the last 24 hours for normal (green) and excessive (red)
- AP Location - specify whether to display green for a good location or red for a suspect location within a floor plan
- Radio Status - specify whether to display red or green depending on the status of the radios within the AP
- AP Status - specify whether to display red or green in relation to up/down status of AP
- Icon Size - select the size of the AP icon display on the floor plan
- Show Channel in Label - view the channel info within the AP label
- Show Transmit Power in Label - view transmit power within the AP label

### Clients Flash UI Preferences

From the **VisualRF > Floor Plans** page, click the Preferences icon, then select **Clients** from the **Configure Preferences for** drop-down menu, as shown in [Figure 211](#).

**Figure 211:** *VisualRF Preferences Page Illustration (Clients preferences selected)*

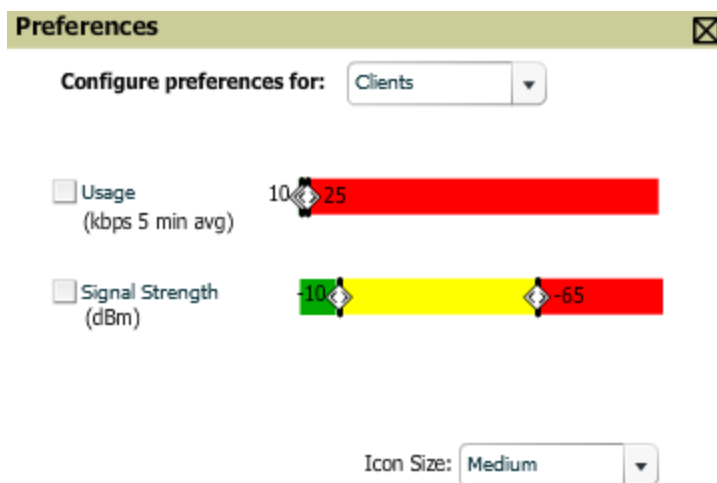


This menu allows you to configure the following settings:

- Usage - select the kbps threshold for normal (green), high (yellow), and excessive (red).
- Signal Strength - select the dBm client threshold between excellent and poor
- Icon Size - select the size of the client device icon display on the floor plan

### Overlays Flash UI Preferences

From the **VisualRF > Floor Plans** page, click the Preferences icon, then select **Overlays** from the **Configuration Preferences for** drop down to change the display type VisualRF floor plan overlays.

Figure 212: VisualRF Overlays preferences

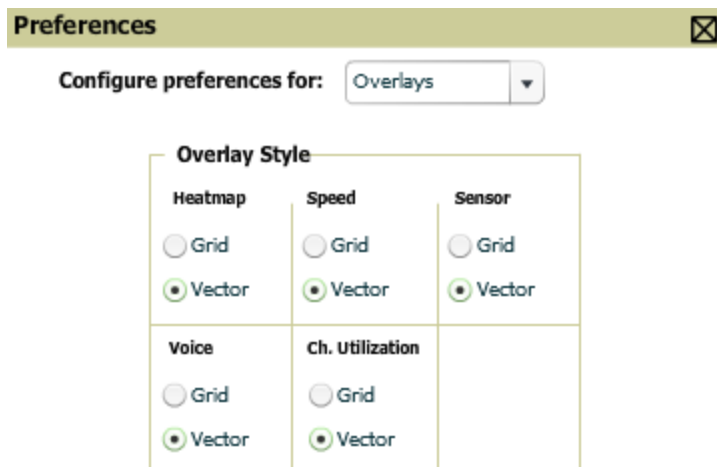


This menu allows you to configure the following settings:

- Grid - non vector overlay
- Vector - provides a smoother overlay with mouse-over capabilities

### Grid Lines Flash UI Preferences

From the **VisualRF > Floor Plans** page, click the Preferences icon, then select **Grid Lines** from the **Configuration Preferences for** drop down to toggle grid lines on or off.

Figure 213: VisualRF Grid Lines preferences

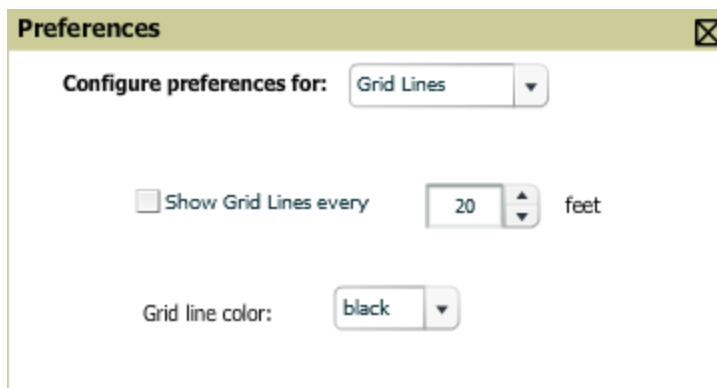

This menu allows you to configure the following settings:

- Show Grid Lines - if enabled, specify the number of feet between grid lines
- Color of grid lines - select a color for grid lines

### Navigation Flash UI Preferences

From the **VisualRF > Floor Plans** page for a campus or building, click the Preferences icon, then select **Navigation** from the **Configure Preferences for** drop-down menu.

Figure 214: VisualRF Navigation preferences

Preferences [X]

Configure preferences for: Navigation

% APs Up 99 98

Campus Icon Size: Medium

Building Icon Size: Medium

Floor Icon Size: Medium

This menu allows you to configure the following settings:

- Define the percentage of APs that must be up at a location over the last 24 hours for the campus or building to display a normal (green) icon or an excessive (red) icon.
- Icon Size for campus, building, and floor. Specify **Tiny**, **Small**, **Medium**, **Large**, or **Huge** icons.

## Advanced Settings in VisualRF > Setup

The **VisualRF > Setup** page, illustrated in [Figure 215](#), configures advanced settings for VisualRF. Please reconfigure these settings very carefully because these settings can impact your server's performance as well as your location accuracy.




---

Selecting **Save** will cause VisualRF to restart, disrupting or delaying the usability. This delay can last anywhere from a minute to upwards of 30 minutes, depending on the size of the VisualRF database.

---



**Figure 215:** The VisualRF > Setup Page (partial view)

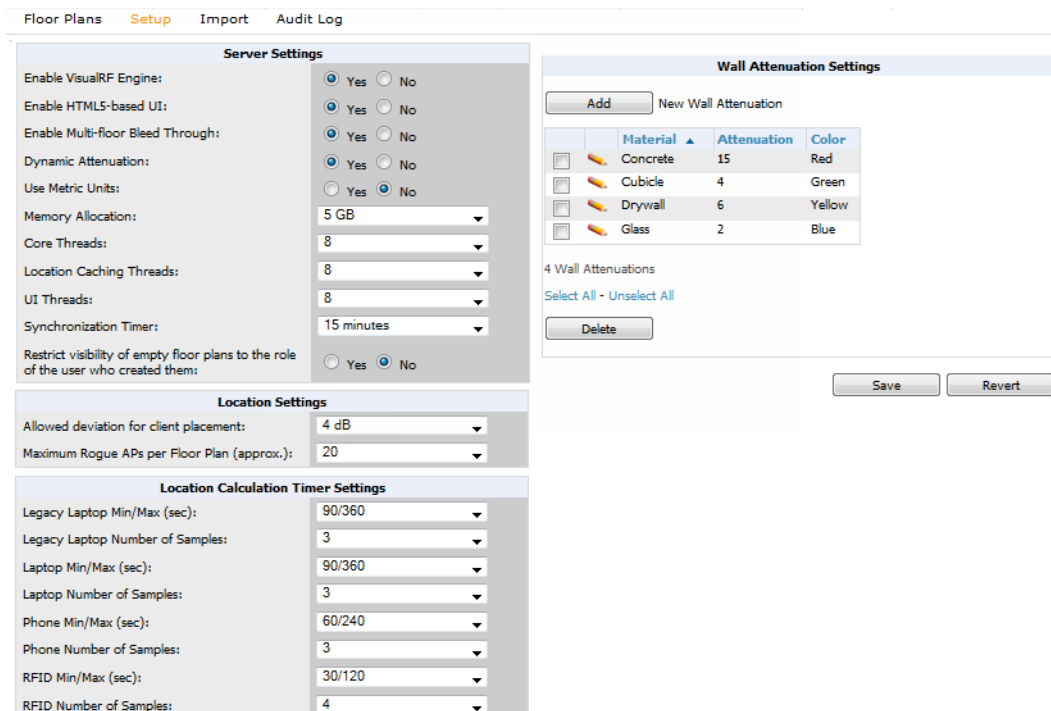

## Server Settings

To enable VisualRF and tune memory and performance, navigate to the **Server Settings** section on this page. The settings in this section are detailed in [Table 153](#).

**Table 153:** Server Settings Section of the VisualRF > Setup Page

Setting	Default	Description
Enable VisualRF Engine	No	Enables or disables the VisualRF engine. This setting must be enabled to use VisualRF. If you do not have a license for VisualRF, this page will not appear.
Enable HTML5-based UI:	Yes	Enables or disables the HTML5 VisualRF UI. The HTML5 UI is enabled by default. Disabling this UI activates the legacy Flash-based VisualRF UI.
Enable Multi-floor Bleed-Through	Yes	Enables or disables calculating the impact APs on floors above and below the currently viewed floor in the Quick View.
Dynamic Attenuation	Yes	Incorporate AP to AP readings as well as site survey information and dynamically recalculate the path loss of each radio to every grid cell on the floor plan, increasing coverage and location accuracy.
Use Metric Units	No	Instructs the VisualRF engine to display all units of measurements in metric

**Table 153: Server Settings Section of the VisualRF > Setup Page (Continued)**

Setting	Default	Description
Memory Allocation	512 MB	<p>The amount of memory dedicate to VisualRF. It is not dynamically allocated and all the memory is consumed upon starting the service. Be sure to check the memory and swap utilization in the <b>Systems &gt; Performance</b> page before making any changes. The exact amount of memory used per floor plan will vary heavily based on the size, number of devices and number of grid cells on the floor plan.</p> <ul style="list-style-type: none"> <li>• 25 floors or less 512 MB</li> <li>• 25 to 50 floors 768 MB</li> <li>• 50 to 75 floors 1 GB</li> <li>• 75 to 100 floors 1.5 GB</li> <li>• 100 to 200 floors 3 GB</li> <li>• 200 to 300 floors 5 GB (64-bit only)</li> <li>• Above 300 8 GB (64-bit only)</li> </ul> <p><b>NOTE:</b> If you see Out of Memory errors in the httpd/error_log on the <b>System &gt; Status</b> page, you should increase memory allocation.</p>
Core Threads	1x number of cores	Number of threads that calculate path loss for each floor. These threads also regenerate a floor's RF properties when new APs, walls, or regions are added to a floor plan.
Location Caching Threads	1x number of cores	Number of threads that calculate the location of all clients associated with access points on this floor plan.
UI Threads	1x number of cores	Number of threads that service the users accessing VisualRF, as well as OV3600-to-VisualRF communication. <b>NOTE:</b> If users experience timeout errors while using VisualRF, allocate additional UI Threads.
Synchronization Timer	15 minutes	This timer indicates how often VisualRF will synchronize with the APs within OV3600. This synchronization includes checking the Up/Down status and parsing the XML.
Restrict visibility of empty floor plans to the role of the user who created them	No	When enabled, only the creator can view an empty floor plan.

## Location Settings

To tune location accuracy, navigate to the **Location Settings** section on this page. The settings in this section are detailed in [Table 154](#):

**Table 154:** Location Settings Section in VisualRF > Setup

Setting	Default	Description
Allowed deviation for client placement	4 dB	<p>When VisualRF locates a client or rogue it utilizes signal metrics from all the APs that hear the client or rogue device. VisualRF builds a fingerprint location for all clients with similar transmit-power capability. All subsequent clients that fall within the deviation is placed on the same location fingerprint or x, y coordinates.</p> <p><b>Example:</b> AP1 hears Client1 at -72, and AP2 hears Client 1 at -64. VisualRF calculates the client's location to be at coordinates 100, 200. Client2 is heard by AP1 at -71 and AP2 at -65.</p> <p>VisualRF will use the average of the difference in signals (AP1 -72 and -71) to see if the client matches a pre-calculated location fingerprint. <math>1 + 1</math> (differences in signals) / 2 (# of APs) = 1 which falls within the deviation of 2, hence the client would be located at 100,200.</p>
Maximum Rogue APs per Floor Plan	20	<p>Sets the maximum number of rogues OV3600 will place on a Floor. Use this filter in combination with the <b>RAPIDS Export Threshold</b> configured on the <b>RAPIDS &gt; Setup</b> page to intelligently control the number of rogue devices displayed per floor.</p> <p><b>NOTE:</b> Increasing this value can increase the load on the server and the clutter on the screen.</p>

## Location Calculation Timer Settings

To tune the frequency for calculating device locations within the VisualRF UI, navigate to the **Location Calculation Timer Settings** section. The available settings are described in [Table 155](#):

**Table 155:** Location Calculation Timer Settings Section of VisualRF > Setup

Setting	Default	Description
Legacy Laptop Min/Max (sec)	90/360	<p>This timer determines how often to calculate the location for legacy laptop devices. Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 90 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 3 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 360 seconds) and then recalculate.</li> </ul>
Legacy Laptop Number of Samples	3	See definition above.

**Table 155: Location Calculation Timer Settings Section of VisualRF > Setup (Continued)**

Setting	Default	Description
Laptop Min/Max (sec)	90/360	<p>This timer determines how often to calculate the location for laptop (non-legacy) devices. Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 90 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 3 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 360 seconds) and then recalculate.</li> </ul>
Laptop Number of Samples	3	See definition above.
Phone Min/Max (sec)	60/240	<p>This timer determines how often to calculate the location of phones. Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 60 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 3 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 240 seconds) and then recalculate.</li> </ul>
Phone Number of Samples	3	See definition above.
RFID Min/Max (sec)	30/120	<p>This timer determines how often to calculate the location of RFIDs (such as devices with tag readers for tracking). Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 30 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 4 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 120 seconds) and then recalculate.</li> </ul>
RFID Number of Samples	4	See definition above.
Scale Min/Max (sec)	500/2000	
Scale Number of Samples	3	

**Table 155: Location Calculation Timer Settings Section of VisualRF > Setup (Continued)**

Setting	Default	Description
Printer Min/Max (sec)	120/480	<p>This timer determines how often to calculate the location of printers. Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 120 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 3 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 480 seconds) and then recalculate.</li> </ul>
Printer Number of Samples	3	See definition above.
Rogue Min/Max (sec)	500/2000	<p>This timer determines how often to calculate the location of rogues. Taken with the data samples the calculation acts as follows:</p> <ul style="list-style-type: none"> <li>After the minimum timer (default is 500 seconds), check to see if the number of data samples received from all APs that hear this client are greater than or equal to the number of samples setting for legacy laptop devices (default of 3 data samples).</li> <li>If so (<b>Yes</b> to question above), then recalculate the client device's location based on the samples received.</li> <li>If not (<b>No</b> to the question above), then wait until the number of sample setting is met before recalculating. If the number of samples is never met, wait until the maximum timer (default is 2000 seconds) and then recalculate.</li> </ul>
Rogue Number of Samples	3	See definition above.
Default Min/Max (sec)	90/360	
Default Number of Samples	3	

## Attenuation Settings

Attenuation settings describe type and dB settings for walls within a floor plan. To edit the wall settings and select a color for wall types within the VisualRF UI, navigate to the **Wall Attenuation Settings** section on the **VisualRF > Setup** page, and select the pencil icon next to the setting that you want to edit. The VisualRF default attenuation values and dB values are described in [Table 156](#).



All of these values are global variables that cannot be overridden for individual floor plans. VisualRF uses these values to calculate path loss and client locations. Walls within VisualRF are interpreted as pure dB loss without adjusting for wall thickness.

**Table 156: Wall Attenuation Settings in VisualRF > Setup**

Setting	Default dB	Description
Concrete Attenuation (dB)	15	Specifies the attenuation for any concrete walls drawn in VisualRF.

**Table 156:** Wall Attenuation Settings in VisualRF > Setup (Continued)

Setting	Default dB	Description
Cubicle Attenuation (dB)	4	Specifies the attenuation for any cubicle walls drawn in VisualRF.
Drywall Attenuation (dB)	6	Specifies the attenuation for any drywall walls drawn in VisualRF.
Glass Attenuation (dB)	6	Specifies the attenuation for any glass walls that are drawn in VisualRF.

### Adding a New Attenuation

In some cases, it may be necessary to create a special attenuation setting. Click on the **Add** button to specify a new wall attenuation.

**Figure 216:** Add a New Wall Attenuation

Update the fields as described in [Table 157](#). Click the **Add** button on the form when you are finished.

**Table 157:** New Wall Attenuation

Setting	Description
Material	Specify the type of material for the new wall.
Attenuation (0-100 dB)	Specify the attenuation decibel value.
Color	Select a color for the new wall.

### VisualRF Resource Utilization

When tuning the VisualRF server, use the default settings as recommended. If you do change any of these settings, change one at a time and see how the system performs. Each time you restart VisualRF, you will notice a delay before returning to normal processing. This delay can last anywhere from a minute to upwards of 30 minutes, depending on the size of the VisualRF database.

If you use the ‘top’ command to check on VisualRF resource utilization, ensure you use the ‘1’ and ‘H’ flags to show cores and threads. Remember ‘top’ also takes 1-2 minutes to normalize and provide accurate data.



It is normal for VisualRF to consume 20% of each core with a combination of threads. It will utilize excess CPU cycles on all cores when required.

## Planning and Provisioning

VisualRF provides the capability to plan campuses, buildings, floors, and access points prior to the actual access point deployment. The following procedure describes the workflow:

- "Creating a New Campus" on page 343
- "Creating a New Building" on page 343
- "Creating a Floor Plan" on page 345
- "Editing a Floor Plan Image" on page 345
- "Defining Floor Plan Boundaries" on page 347
- "Defining Floor Plan Regions" on page 348
- "Editing a Planning Region" on page 352
- "Adding Deployed Access Points onto the Floor Plan" on page 353
- "Adding Planned APs onto the Floor Plan" on page 353
- "Editing a Planning Region" on page 352
- "Auto-Matching Planned Devices" on page 354
- "Printing a Bill of Materials Report" on page 354

### Creating a New Campus

Floors are associated with a building, and buildings are associated with a campus. In order to create a new floor, you must first create a campus with at least one building. The steps to create a new campus vary, depending upon whether you are using the default HTML5 UI, or the older flash-based UI.

To create and place your campus:

1. Navigate to **VisualRF > Floor Plans**.
2. Navigate to the **Add Campus** menu.
  - If you are using the default HTML5 UI, select **Edit** from the toolbar on the right window pane of the Network view, then click **Add campus**.
  - If you are using the Flash-based UI, select the **Add Campus** icon in the upper left corner of the Floor Plans window.
3. Enter the name of the campus, then click **Save**. A new campus icon appears on the campus background.
4. Select an appropriate network geographical background or upload a personalized image by right-clicking on the background, and selecting one of the following options:
  - **World Map**: browse and select any of the included maps.
  - **Custom Image**: upload your own image as the map background.
5. Drag the new campus icon to the appropriate location on the map background, or right-click the background and select **Auto Arrange Campuses** to arrange the campus in alphabetical order across the background.

### Creating a New Building

1. Select the icon for the campus created in the previous procedure.
2. When the campus area opens, add the new building:
  - If you are using the default HTML5 UI, select **Edit** from the toolbar on the right window pane of the Network view, then click **Add building**.
  - If you are using the Flash-based UI, select the **Add Building** icon in the upper left corner of the Floor Plans window.
3. When the New Building window appears, enter the following information:

**Table 158: New Building Fields and Descriptions**

Field	Description
Name	Name of the building located in an existing campus.
Address	Building or Campus address
Longitude & Latitude	These fields are used to represent a building on Google Earth.
Ceiling Height	The normal distance between floors in the building. This value can be overridden as each floor is created, but this is the default value for every new floor added to the system. This data element can be imported or exported to external planning tools like Ekahau. It is not currently used by OV3600. <b>NOTE:</b> This field is titled <b>Distance between floors</b> in the Flash-based UI.
Attenuation	Enter the attenuation loss in decibels between floors. This value can be overridden as each floor is created, but this is the default value for every new floor added to the system. This data element can be imported or exported to external planning tools like Ekahau. It is not currently used by OV3600. <b>NOTE:</b> This field is titled <b>Attenuation between floors</b> in the Flash-based UI.



The legacy Flash-based UI also includes fields to configure client transmit power and desired speed values used for automatic placement of APs into floors within this campus. In the default HTML5 UI, these fields are located in the **Advanced** section of the floor **Properties** menu.

**Figure 217: Create New Building Window**

**Create Building**

Name: Building 1

Address: [Empty]

Latitude: [Empty]

Longitude: [Empty]

Ceiling Height: 10 ft.

Attenuation: 10 dBm

Buttons: Save, Cancel

4. Select **Save**. A new building icon will appear in the upper-left corner of the background canvas.
5. Drag the Building icon to the appropriate location on the map background.

You are now ready to import your floor plan.



## Creating a Floor Plan

The following steps show how to import a floor plan background image file. Floor plans can be added (imported), edited, and deleted. Currently, functionality does not exist to replace a floor plan. If you want to import a newer floor plan to replace a current one, you must first delete the original plan and then add the new plan.



---

When importing RF plans, be sure that the devices to be included are also available in the device catalog.

---

1. Navigate to **VisualRF>Floor Plans**, and drill down into the network and campus maps to select the building for which you want to import a new floor plan.
  - If you are using the default HTML5 UI, select **Edit** from the toolbar on the right window pane of the Network view, then click **New Floorplan**. If an incomplete floorplan is in floor wizard mode, it will appear as a windowless floor in the building icon. Double-click that floor to open it in the floor wizard.
  - If you are using the Flash-based UI, select the **Add Floorplan** icon in the upper left corner of the Floor Plans window.
2. Click **Browse** and locate a floor plan image file from your hard drive. The following file types are supported:
  - CAD (**NOTE**: CAD floor plans must be generated from an AutoCAD source file.)
  - DWG (**NOTE**: DWG files that include cross-referencing bindings are not supported and may not display properly. In addition, the size limit for DWG files is currently 2880x2880 px.)
  - GIF
  - SVG
  - JPG/JPEG
  - PNG
  - PDF - Single page only. (**NOTE**: PDF floor plans must be generated from a source file. Other PDFs, such as those scanned from a printer, will not import properly.)
3. The image file opens in VisualRF, with the planning tools on the side navigation bar.

## Editing a Floor Plan Image

There are several ways to edit a floor plan that you have uploaded, as explained in the following topics:

- ["Cropping the Floor Plan Image" on page 345](#)
- ["Sizing a Non-CAD Floor Plan " on page 346](#)
- ["Legacy VisualRF Floor Plan Configuration Options" on page 347](#)

### Cropping the Floor Plan Image

Cropping is available from within the VisualRF Floor Upload Wizard. The procedure to crop an image is the same in both the HTML5 UI and the Flash UI.

1. Launch the Floor Upload wizard, as described in ["Creating a Floor Plan" on page 345](#).
2. Use the cropping handles (circles at the corners of the image) to remove extra white space around the floor plan. VisualRF will calculate an attenuation grid for the entire map including white space. Reducing the white space on a floor plan will increase location accuracy and decrease the load on the server. A good rule of thumb would be not more than ½ inch white space, if possible, on all sides.

VisualRF dissects each floor plan into a grid consisting of cells specified in this setting. The Core Thread service calculates the path loss for every radio to every cell on the floor plan.

By default the importation wizard allocates 2,500 grid cells to each site based on dimensions. If you have a site that is 250 ft. by 100 ft, the Floor Plan importation wizard would calculate the grid cell size at 10 feet.  $250 \text{ ft.} \times 100 \text{ ft.} = 25,000 \text{ ft.}$   $25,000 \text{ ft.} / 2,500 \text{ ft.} = 10 \text{ ft.}$



Decreasing the grid cell size will increase accuracy, but it also increase CPU consumption by the floor caching threads and the location caching threads. Check the **System > Performance** page to ensure your server is functioning properly when you make a change to this setting.

Other items worth noting:

- If this is a CAD file, then the Floor Plan creation wizard will automatically inherit height and width from the drawing.
- If this is a non-CAD file, then the height and width is zero.
- CAD files are converted to a JPG with a resolution of 4096 horizontal pixels at 100% quality prior to cropping. If you crop, then you will lose clarity.
- CAD files must be generated from AutoCAD and may not exceed 10 MB.
- Metric CAD files are supported.
- Importing GIF files for floor plans can result in blank VisualRF thumbnails.


### Sizing a Non-CAD Floor Plan

You should not have to resize a CAD drawing unless you see nonsensical dimensions. To resize a non-CAD image if you already know the dimensions, follow the procedures below.

To resize a Non-CAD floor plan using the HTML5 UI:

1. In the **Scale** section of the floor upload wizard, click the **Measure** button. The pointer changes to a cross-hair icon.
2. Locate two points within the floor plan that you know the distance. Most door jams (door openings) are 3 feet. Use the slider bar at the upper left corner of the upload wizard to zoom in to a section of the floor plan, if necessary.
3. Select and hold to establish the first point and drag your mouse to the second point and release.
4. An **Enter Distance** dialogue box appears. Enter the proper length in feet, as shown in [Figure 218](#).
5. Click **OK**.

**Figure 218:** *Manually Measuring a Floor Plan*

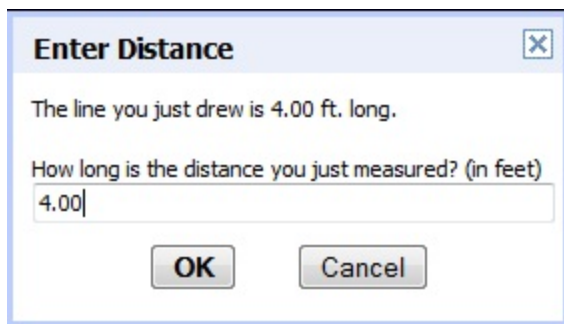

To Resize a Non-CAD Floor Plan using the Legacy Flash UI

1. In the **Dimensions** section, select the **Manually Measure Floor** button. The pointer changes to a cross-hair icon.
2. Locate two points within the floor plan that you know the distance. Most door jams (door openings) are 3 feet.
3. Click on the flooplan to establish the first point.
4. Click on the floorplan to establish the second point.
5. A distance dialogue box appears. Enter the proper length in feet.
6. Click **OK**.

## Defining Floor Plan Boundaries

Use the **Floorplan Boundary** section of the HTML5 Floor Upload Wizard to refine the floor plan to remove whitespace, or to create a floorplan based on a portion of the interior of the graphic, such as an atrium.

To define a floorplan boundary:

1. Click the **Define Floorplan Boundary** button. The pointer changes to a cross-hair icon.
2. Click on the floor plan graphic to define the boundaries of the floor plan. Use the slider bar at the upper left corner of the upload wizard to zoom in to a section of the floor plan, if necessary.
3. If your floor plan has regions with different requirements than the rest of the floorplan, continue to [Defining Floor Plan Regions](#) below. Otherwise, click **Next**.

## Legacy VisualRF Floor Plan Configuration Options

The floor upload wizard in the older Flash-based VisualRF UI includes some optional configuration settings that are not supported in the newer HTML5 UI. If your campus floor plan requires some of these legacy options, navigate to **VisualRF>Setup>Server settings**, and click **No** for the **Enable HTML5-based UI** option.



---

The following features are only available when you access the File Upload wizard using the Flash-based UI.

---

### Removing Color from a Floor Plan Image

The Legacy Flash-based VisualRF includes an option to change a color floorplan to a black and white image. To remove color from a floor plan background when you are creating a new floor, locate the **Image Manipulation** section of the Floor Upload wizard and select **B&W** in the **Image** field.

### Assigning Optional Planner, Owner, or Installer Information for the Floor Plan

Locate the **Optional Information** section and enter the following information in [Table 159](#):

**Table 159:** *Optional Information for the Floor Plan*

Setting	Default	Description
Owner	N/A	The owner of the floor (used in diagnostics and alerts).
Planner	N/A	The person in charge of planning the RF layout for the floor.
Installer	N/A	The person in charge of installing RF equipment for the floor.

### Error Checking of CAD Images

VisualRF will check for errors in your uploaded CAD image. You can view any issues as follows:

1. Locate the **CAD Info** section, as shown in [Figure 219](#).
2. Review the CAD version, units of measurement, and raw width and height numbers.

**Figure 219: Checking for CAD errors**



Name	Value
FUW Version	3.03
Source File	fwcpx-3.dwg
File Type	DWG
Version	2004
Layout	Model

### Controlling the Layers in the Uploaded Floor Plan (CAD only)

Follow these steps to controller layers in CAD images:

1. Find the CAD Layers section on the page.
2. Unselect the layers which are not required. There is slight delay because each request makes a round trip to the server.

### Defining Floor Plan Regions

Define regions within a floor plan that have different wireless networking requirements than the rest of the floor. For example, you can use the planning regions tool to define two small regions of high density clients within a larger floor plan with lower client density. You can define regions on a new floor plan using the Floor Upload wizard, or edit a an existing floor plan to add a new region.

#### Adding Region to a New Floor using the Floor Upload Wizard

You can define a floor plan region when you create a new floor plan using the Floor Upload Wizard in the HTML5 UI.

1. Launch the Floor Upload wizard as described in ["Creating a Floor Plan" on page 345](#).
1. Click the **Define Planning Regions** button. The pointer changes to a cross-hair icon.
2. (Optional) Enter a name for the region in the **Name** field.
3. Click on the floor plan graphic to define the boundaries of the region. Use the slider bar at the upper left corner of the wizard to zoom in to a section of the floor plan, if necessary.
4. Repeat steps 1-2 to create an additional regions, as required.
5. Once you have defined all necessary regions on your floor plan, click **Next** to continue to the Access Points section of the Floor Upload Wizard, as described in ["Adding Planned APs onto the Floor Plan" on page 353](#) and ["Adding Deployed Access Points onto the Floor Plan" on page 353](#).



---

If you are creating floor plan using the Flash-based Floor Upload Wizard, you must create the floor and exit the wizard before you can define regions. See ["Adding a Region to an Existing Floor Plan" on page 348](#) .

---

#### Adding a Region to an Existing Floor Plan

The procedures to add a floor plan region to an existing floor plan can vary, depending upon whether you are creating the region using the default HTML5 UI, or using the legacy Flash-based UI.

To add a region to an existing floor using the HTML5 UI:

1. Select the floor to which you want to add a region.
2. Click **Edit** in the navigation bar to open the Edit menu.
3. Click **Draw Region**. The pointer changes to a cross-hair icon.

4. Click on the floor plan graphic to define the edge of the new region. Use the slider bar at the upper left corner of the wizard to zoom in to a section of the floor plan, if necessary.
5. Once the floor plan region is defined, select the region and click the **Properties** menu. The **Name** field shows the current name for that region. You can rename a region by entering a new name into this field.
6. Click **Type** to specify a region type. The region options vary, depending on whether you are creating a region using the default HTML5 UI or the Flash-based UI.
  - **Boundary**: This option, available in the HTML5 UI only, creates a region that defines the boundaries of an area.
  - **Planning**: This option is available in both the HTML5 and Flash-based UI, and creates a region to plan for new access points, and define transmit power and PHY types for AP radios.
  - **Probability** (HTML5 UI) or **Location Probability** (Flash UI): Define the location probability for the region. Location probability regions are optional regions that can be used to increase the accuracy of device location. VisualRF can calculate device locations based on probability, and use this information to place the device into regions where they are more likely to be located, like conference rooms and cubical farms, or pull users out of regions where they are less likely to be, like parking lots and courtyards.
  - **Wiring Closet**: This option is available in the Flash UI only. For details, see ["Adding a new Wiring Closet Region" on page 350](#)
  - **Location Testing Region**: This option is available in the Flash UI only. For details, see ["Location Testing Regions" on page 350](#)
7. Click **Save** to save your region.

**Table 160:** *Fields in the Region Properties Window*

Planning Region Type	
AP Type	The type of AP used in this planning region.
Count	Number of APs of the selected type to provision onto the selected region.
Phy	Whether they PHY is set to 11n or no radio.
Tx Power	Transmit power of the AP radio, in dBm.
Gain	This read-only parameter displays the AP antenna gain in dBi.
Planned Air Monitors	Enter the number of Air Monitors to be deployed in this region
Environment	A range from 1-4 that best describes whether the environment is related to an office space, cubicles, offices, or concrete.
Probability / Location Probability Region Type	
Probability	Click and drag this slider to specify if users are likely to be in this region. A location probability of <b>Very Low</b> will decrease the probability of a device being placed in that region by 20%. <b>Very High</b> will increase the probability of a device being placed in that region by 20%.

## Legacy Region Configuration Settings

Some additional configuration options are only available when you define a region using the legacy Flash-based UI.

### Duplicating Floors

The Flash-based UI allows you to copy the region and auto plan for floors above. To replicate a floor plan, follow these steps:

1. Navigate back to the Building view.

2. Right-click the floor and select **Duplicate**.
3. Enter the following information:
  - Starting and ending floors
  - Select the toggles to copy walls, regions, data rates (speeds), and AP placement

The starting floor will add one to the highest floor in the building and the ending floor defaults to 10 more than the starting floor.
4. Select **OK** to save your changes.
5. Manually refresh page and your is redirected to the **VisualRF > Floor Plan** page. The Building view will reflect the new floors.

## Location Testing Regions


This region type is reserved for internal testing purposes, and is not available in the HTML5 UI.

## Wiring Closets

A wiring closet is a specialized region that allows you to define a new rack and provision or add rackmount devices. To add a Wiring Closet to a floor plan using the Flash-based VisualRF UI, follow these steps:

1. In the **Edit** menu, select the **Draw Region** option.
2. Outline the desired region. Double click or press **Ctrl+click** to end the outline process.
3. Name the region, select the **Wiring Closet** region type and click **OK**, as shown in [Figure 220](#).


**Figure 220:** Adding a new Wiring Closet Region

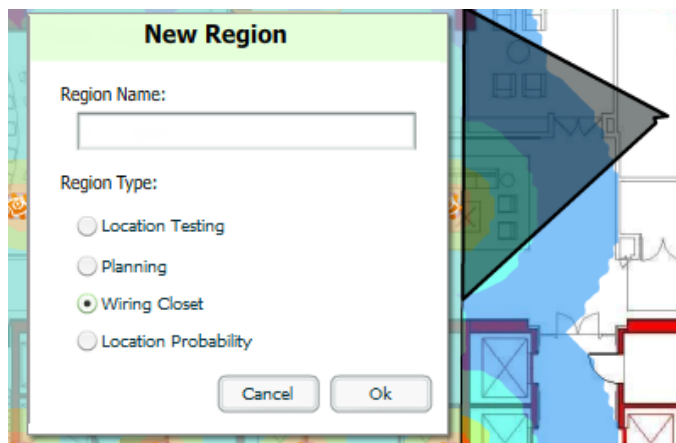

Now that the Wiring Closet is defined you will see a green Wiring Closet icon on your floor plan. Double click that icon.

1. Add a rack to the wired closet by selecting the **Add Empty Rack** icon and dragging it to the background.
2. To add a planned device, select the **Add Planned Device** icon to view the **Manually Provision Rack Gear** menu. Select the device type in the **Type** menu, and then find the device you want to add. Drag it into the rack at the appropriate location.
3. To add a wired device that is currently being monitored by OV3600, select **Add Deployed Device**.
  - a. Locate the device to be added.
  - b. Drag the device to the appropriate location in the rack.

Figure 221: Provisioning Devices

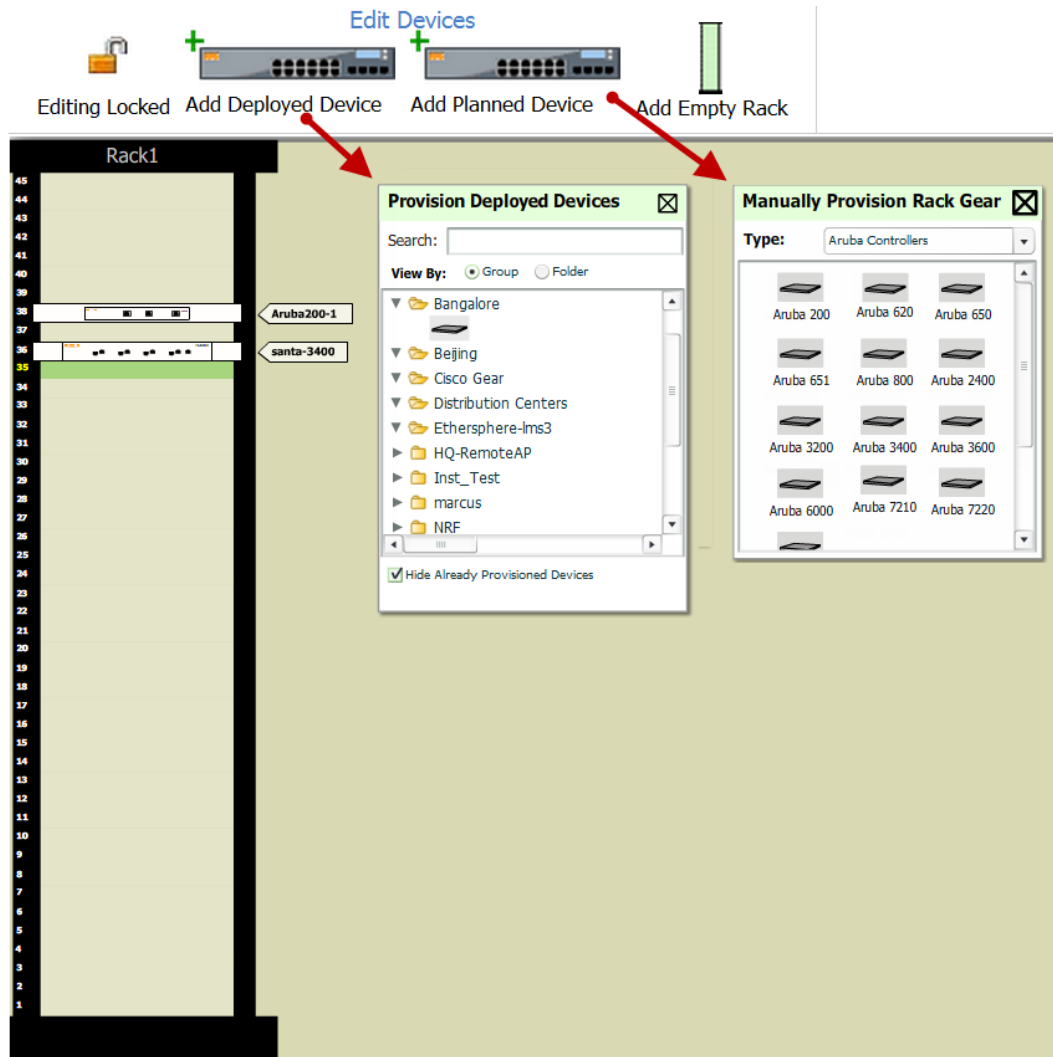

Wired devices that are added to a wired closet are included in any BOM report covering that floor.

Deployed switches on a rack will display the port status as red (down) and green (up) interface icons, which corresponds with the operationally up devices on the **APs/Devices > Interfaces** list. Planned switches do not display these status indicators in VisualIRF.

Figure 222: Deployed switch showing red and green port status icons



## Editing a Planning Region

You can edit a region by right-clicking within the region to see the following options:

- **Select All** - Selects all regions on the floorplan.
- **Draw Walls Around Region** - This action surrounds the region with walls of the last used wall type (concrete, cubicle, drywall or glass). For information on defining different wall types, see [Adding Exterior Walls](#).
- **Bring to Back, Send to Front** - If one region is within the boundaries of another region, or two regions overlap, you may not be able to select the desired region until that region is brought to the front, or the overlapping region is sent to the back.
- **Delete Planned Devices** - Deletes all planned APs within the region.
- **Remove** - Delete the region. Any planned devices within the region will stay on the floor plan.

## Floor Plan Properties

You can edit an existing floor plan in the HTML5 UI by changing the floor plan properties described in [Table 161](#). To access the **Properties** menu:

1. Navigate to **VisualRF > Floor Plans**.
2. Open the floor plan in Network view.
3. Click the **Properties** link to open the **Properties** menu.

**Table 161:** *Floor Plan Properties*

Setting	Default	Description
Floor Name	Floor [Number]	A descriptive name for the floor. It inherits the floor number as a name if nothing is entered.
Floor Number	0.0	The floor number. You can enter negative numbers for basements. <b>NOTE:</b> Each floor plan within a building must have a unique floor number.
Width Height	N/A	These fields display the current width and height of the floor plan. To change these settings, click the <b>Measure</b> icon and measure a portion of the floor. For details, see <a href="#">Sizing a Non-CAD Floor Plan</a> .
Gridsize	5 x 5 feet	Decreasing the grid size will enable the location to place clients in a small grid which will increase accuracy.
Advanced		
Client TX	30mW	Client transmit power, used in auto placement of access points onto floors within this campus. The range is 30mW to 100mW.
Speed	200 Mbps	The data transmission speed used in auto placement of access points onto floors within this campus. The range is 6 Mbps to 1.3 Gbps.
Ceiling Height	10	Specifies the height from the floor to the ceiling. This will default to the ceiling height for the building, but you can override here if needed for atria or basements.
Ceiling Attenuation	20	Specifies the attenuation characteristics in dB of the ceiling or the floor above. For details on defining attenuation values, see <a href="#">Attenuation Settings</a> .



## Adding Deployed Access Points onto the Floor Plan

You can provision existing APs in your network onto a new floor plan using the Floor Upload wizard, or edit an existing floor plan to add new APs using the **Properties** menu for that floor.



---


OV3600 recalculates path loss and client locations after adding a deployed AP. All changes may not be visible on a refresh until this process complete.

---

The Floor Upload wizard is available only in the default HTML5 UI. If you are using the legacy Flash-based UI, you must create a new floor plan before you can add devices to that floor.

1. Determine if you want to add APs to a new floor plan, or an existing floor plan.
  - To add APs to a new floor plan using the Floor Upload wizard, click **Access Points** in the wizard navigation bar, then select **Add deployed APs**.
  - To add APs an existing floor plan, select that floor plan, click the **Edit** menu in the navigation bar, then click the **Add Deployed AP** icon
2. A list of devices in your OV3600 appears, as shown in [Figure 223](#).
3. Select whether to view APs by **Group** or by **Folder**. You can also use the **Search** field to identify APs to add to the floor.
4. Expand the Group or Folder containing the access points which need to be provisioned on this floor plan. Note that by default, devices that have already been added to VisualRF are hidden. To show them, clear the **Hide Devices already added to VisualRF** check box at the bottom of the list.
5. Click and drag an AP (or a Group or Folder of APs) to its proper location on the floor.
6. If you are adding APs to a floor using the Floor Upload wizard, click the **Finish** button. Otherwise:
  - Remove a device from the floor plan by right-clicking that device then clicking **Remove**.
  - Return to an earlier section of the Floor Upload wizard by clicking **Previous**.
  - Add existing devices to the floor plan. See "[Adding Deployed Access Points onto the Floor Plan](#)" on page 353.

**Figure 223:** *List of Deployed APs*

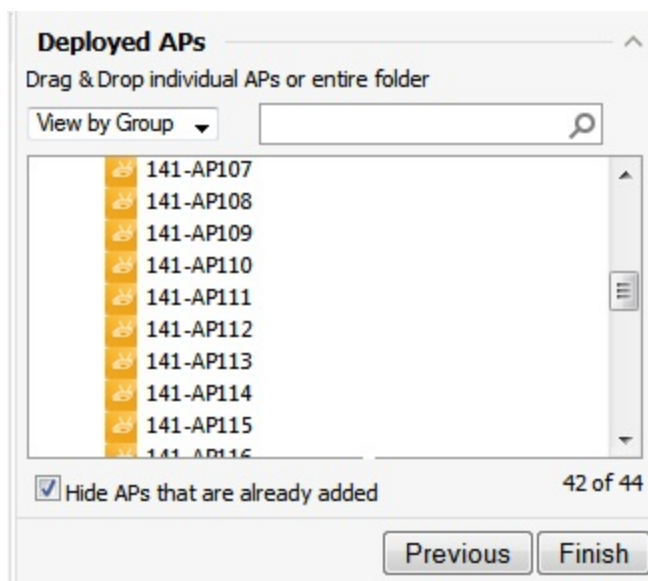

## Adding Planned APs onto the Floor Plan

You can plan for and provision new APs onto a new floor plan using the Floor Upload wizard, or add new APs to an existing floor plan using the **Properties** menu for that floor.



---

The Floor Upload wizard is available only in the default HTML5 UI. If you are using the legacy Flash-based UI, you must create a new floor plan before you can add devices to that floor.

---

1. Determine if you want to plan for APs on a new floor using the Floor Upload wizard, or plan for APs on an existing floor plan.
  - To add APs to a new floor plan using the Floor Upload Wizard, click **Access Points** in the wizard navigation bar, then select **Plan APs**.
  - To add APs to an existing floor plan, open the selected floor plan, then click **Edit** menu in the navigation bar.
2. Click the **Type** drop-down list and select a device type from the list of available devices.
3. In the **Count** field, enter the number of devices of that type to add to the new floor.
4. (Optional) Click and drag the **Deployment Type** slider bar to adjust data rates for a high-density or low-density environment.
5. (Optional) Click the **Advanced** link and configure the advanced deployment options
  - **Service level:** Select **Speed** or **Signal** to plan coverage by adjusting data rate requirements (Speed) or AP signal strength settings. Click **Calculate AP** count to recalculate the suggested number of APs based on these advanced settings.
  - **Client Density:** In the **Max Clients** field, set the anticipated number of clients that will be stationed in the floor. In the **Clients per AP** field, enter the maximum number of clients supported by each radio. Click **Calculate AP** count to recalculate the suggested number of APs based on these advanced settings.
6. Click **Add APs to Floorplan**.
7. Click and drag the device, to the desired location.
8. If you are done creating the floor plan, click the **Finish** button. Otherwise:
  - Remove a planned device from the floor plan by right-click that device then clicking **Remove**.
  - Return to an earlier section of the Floor Upload wizard by clicking **Previous**.
  - Add existing devices to the floor plan. See "[Adding Deployed Access Points onto the Floor Plan](#)" on page 353

## Auto-Matching Planned Devices

You can right-click a floor plan or campus, building, or network icon and select the **Auto-Match Planned Devices** option to efficiently match planned APs to managed APs. If you select this option for a campus, then all planned APs in that campus are checked. If used on a building, then all the APs in that building are checked. If used on a floor, then all APs on that floor are checked.

Planned devices first attempt to auto-match on MAC address, and then by name. The VisualRF MAC address checks against all of the LAN MAC addresses of a deployed AP.


## Printing a Bill of Materials Report

You can generate a Bill of Materials (BOM) Report from within VisualRF in Word format. Follow these steps:

1. Navigate back to the Network view.
2. Right-click a campus icon, a building icon, or a building floor and select **Show Bill of Materials**. A generating report popup appears.
3. Select options such as heatmap, speed, sensor coverage, wired range, and summary.
4. Select **OK**. A BOM report appears in Microsoft Word as illustrated in [Figure 224](#):

Figure 224: Bill of Materials Report Illustration

## Bill of Materials Report Jun 3, 2013



### Campus: Test

Data Rate:	36.0 Mbps
Client Xmit:	100mW
Total Controllers:	1
Total IDFs:	2
Total Racks:	1
Total Switches:	1
Total Ports:	9
Total POE Ports:	1
Total APs:	64
Total AMs:	1

## Increasing Location Accuracy

The Location Service will use all RF information available to increase location accuracy of clients, tags, and rogue devices. Understanding your infrastructure's inherent capabilities helps you learn the extra effort required to ensure location accuracy.

There are three key elements read from controllers or access points that increase location accuracy:

- Signal strength of a client as heard by the AP of association
- Signal strength of a client as heard by APs other than the AP of association
- Signal strength at which an AP hears other APs.

These factors are detailed further in [Table 162](#):

**Table 162:** Elements Read From Controllers to Increase Location Accuracy

MFG/Model	Client Signal Associated AP	AP-to-AP Signals (Dynamic Attenuation)	Unassociated Client Signal	Rogue AP Signal
Alcatel-Lucent	Yes	Yes	Yes	Yes
Cisco LWAPP	Yes	Yes	Yes	Yes
Cisco IOS	Yes	No	No	With WLSE
Cisco VxWorks	Yes	No	No	No
Trapeze	Yes	No	No	Yes
Meru	No	No	No	Yes

**Table 162: Elements Read From Controllers to Increase Location Accuracy (Continued)**

MFG/Model	Client Signal Associated AP	AP-to-AP Signals (Dynamic Attenuation)	Unassociated Client Signal	Rogue AP Signal
Proxim	Yes	Yes	Yes	Yes
Symbol Auton. AP	Yes	No	No	Yes
Symbol Thin AP	Yes	No	Yes	Yes
Proxim AP-2000	Yes	No	Yes	Yes
Proxim AP-4000	Yes	Yes	Yes	Yes
ProCurve WeSM	Yes	Yes	No	Yes
ProCurve 530	Yes	Yes	Yes	Yes
ProCurve 420	Yes	Yes	No	Yes

OV3600 provides four main methods to increase accuracy once your access points are deployed:


- Adding Exterior Walls - increases location accuracy by reducing the statistical probability of placements outside the office confines. See ["Adding Exterior Walls" on page 356](#).
- Client Training for Stationary Devices - ensures non-mobile clients like desktops or scales will always remain in a defined static location. Statically assigning non-mobile devices reduces the CPU load on your server because VisualRF does not evaluate any signal metrics for this MAC address when associated with an AP on the floor plan. See [Defining Stationary Devices](#).
- Remote Client Surveys - provides additional attenuation inputs for corners and low-coverage areas without the burden of actually carrying a laptop to the physical location. See ["Adding Client Surveys" on page 360](#).
- Location Probability Regions - Probability regions will increase or decrease the chances of a device being located within the region. See [Defining Floor Plan Regions](#).

## Adding Exterior Walls

Because VisualRF utilizes much existing RF information, generally only external walls are required for accurate client locations. VisualRF's Dynamic Attenuation feature uses AP-to-AP information to calculate attenuation for interior areas, negating the need to enter interior walls. If your devices support AP-to-AP information in the table above, you should only draw exterior walls.

1. Navigate to **VisualRF>Floor Plans** and select a floor plan.
2. Select the **Draw Wall** button in the **Edit** menu.
3. The cursor changes to a crosshair, indicating that the view is in wall editing mode. Use this cursor to draw the wall directly over the floor plan, as shown in [Figure 225](#):


Figure 225: Drawing a wall

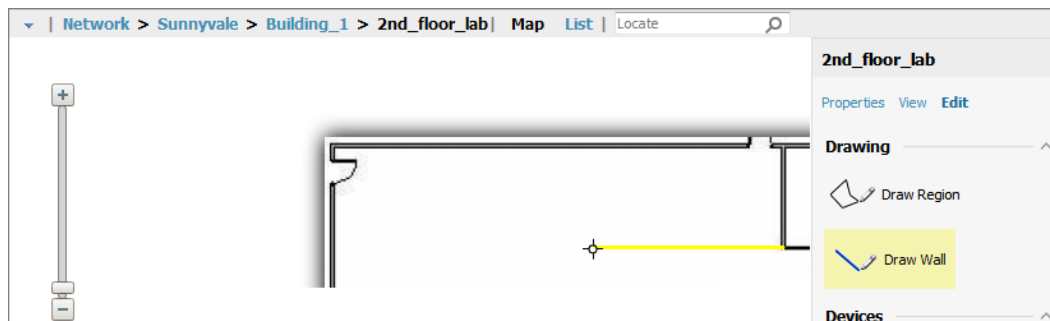

- (Optional) Change the attenuation of a wall by selecting the appropriate building material for that wall.
  - To define the wall material using the HTML5 UI, select the wall, click the **Properties** tab, then select the building material type from the **Material** drop-down list.
  - To define the wall material using the Flash-based UI, right-click the wall and select the appropriate building material.
- When you are done creating walls, click the **Draw Wall** button again to exit the wall editing mode.

You can edit or remove a wall at any time. To move or resize the wall, select the **Draw Walls** button in the Edit menu again. The cursor changes to a hand, and the ends of the wall is highlighted. Click and drag the end point handles to change the wall, as shown in Figure 226:

Figure 226: Moving and resizing an existing wall

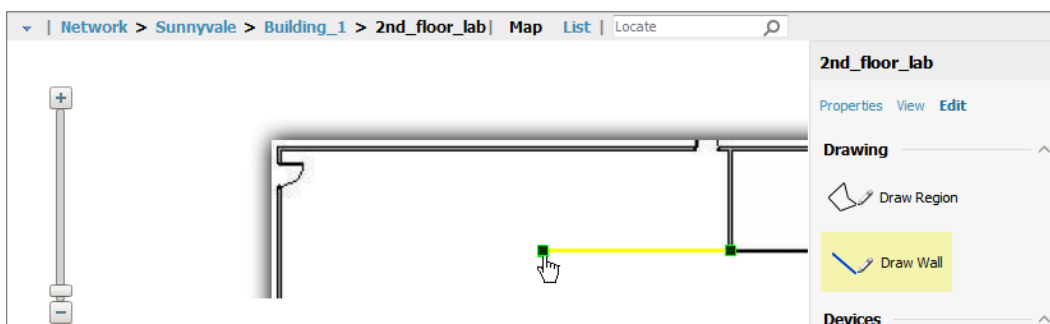

To delete a wall, select the wall and press the **Delete** key. You can also right-click on a wall and select **Delete** from the popup menu.



---

Drawing only outside walls is recommended. If you are seeing inaccurate client locations or heat maps after entering exterior walls, proceed to Client Surveys. If you still experience problems, then you can proceed to adding interior walls.

---


## Defining Stationary Devices

VisualRF provides the ability to statically assign a permanent location to stationary devices like PCs, Scales, and Point-of-Sale terminals. This will reduce the calculation requirements on the VisualRF location service and increase the accuracy of the RF characteristics of individual floor plans.

- Drag the client device to the proper location on the floor plan.
- Select the client and mark it as static device:
  - If you are using the default HTML5 UI, click the **Properties** link in the navigation bar, and select **Location for this client is static**.
  - If you are using the Flash-based UI, right-click the client and select **Surveys and Training** from the popup menu.

3. Click the **Add** button for Static Training, as shown in [Figure 227](#):

**Figure 227: Marking a Device as Static**



Info	
Name	78:E3:B5:8C:F6:50
MAC Address	78:E3:B5:8C:F6:50
Device Type	Linux
Vendor	Hewlett-Packard Company
AP	Loft-d8:c7:c8:c4:54:56
Phy	11ng
Health	unknown
Usage	0 bps
Signal	-52 dBm
Location for this client is static	<input checked="" type="checkbox"/>

Save Cancel

## Fine-Tuning Location Service in VisualRF > Setup

There are several options on the **VisualRF > Setup** page which increase client location accuracy. All of these items will increase the processing requirements for the location service and could negatively impact the overall performance of OV3600.

### Decreasing Grid Size

Decreasing the grid size will enable the location to place clients in a small grid, which will increase accuracy.

- From the HTML5 UI, select the floor plan, click the Properties menu, then click the **Gridsize** drop-down list.
- From the Flash-based UI, can right-click on a floor plan within a building view and change this setting.


### Enabling Dynamic Attenuation

The dynamic attenuation feature (which is enabled by default) instructs the location service to sample the current RF environment and to dynamically adjust Path Loss. This feature can be enabled or disabled in the **VisualRF>Setup** page.

### Configuring Infrastructure

Fine-tune location services to ensure that the hardware is configured to retrieve the RF information, and that it provides this information on a timely basis. There are three unique timing mechanisms which impact location accuracy: how often the infrastructure collects and correlates RF statistics in their MIB, how often the OV3600 queries those MIB entries, and how often VisualRF service queries OV3600 for this RF information.

**Figure 228: Timing Factors Impacting Location Accuracy**

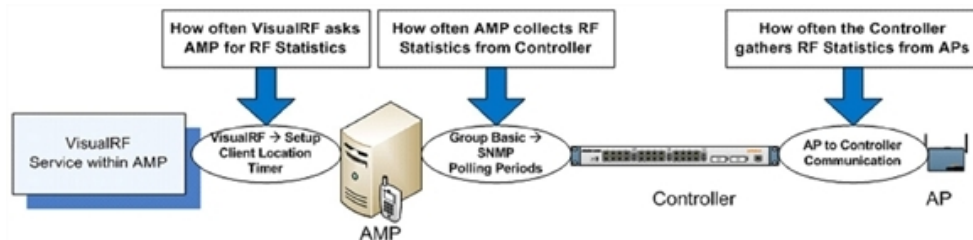

These best practices are recommended when configuring hardware infrastructure:

- For legacy autonomous APs, ensure on the **Group > Radio** page that **Rogue Scanning** is enabled and the interval is accurate, as shown in [Figure 229](#):

**Figure 229: Group Rogue Scanning Configuration**



- For thin APs, ensure that the controllers are configured to gather RF information from the thin APs frequently.
- For Cisco LWAPP, navigate to **Groups > Cisco WLC Config** page in OV3600. Navigate the tree control to the **Wireless** section, and for each PHY navigate to **RRM > General** section. Review the values in the **Monitor Intervals** section. These should be configured to a recommended setting of **180** for better accuracy.


## Deploying APs for Client Location Accuracy

Deploying access points for client location accuracy can be different than deploying access points for capacity. Follow these guidelines for best results:

- Ensure that at least 3 radios can hear each client devices at -85 dBm or below
- Ensure that you deploy an access point approximately every 3,500 square feet.
- For square or rectangular floor plans ensure access points are deployed on the exterior walls of each floor with access points in the middle as well.

Refer to [Figure 230](#) for an example.

**Figure 230: Rectangular Floor Plan AP Deployment**

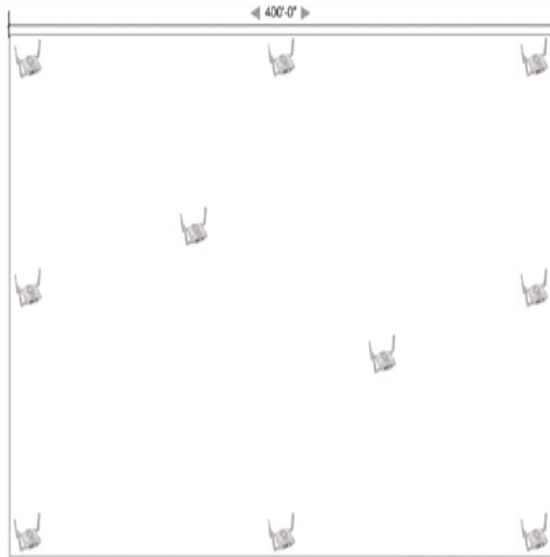

## Adding Client Surveys

Client surveys within VisualRF use data from access points to understand which clients those access points hear and at what signal strength. The legacy flash-based VisualRF UI allows you to run client surveys to increase the accuracy of the attenuation grid by taking real signal samplings from client devices associated with the WLAN.



---

This feature is not available in the default HTML5 VisualRF UI.

---

Key differentiators of OV3600s client surveys are:

1. They take readings from the access points and not the client.
2. They take numerous samples.


This produces a more accurate representation because signals obtained from the client's card (the signal level at which a client hears the AP) can vary from vendor to vendor. The signal levels at which APs can hear a client are already normalized. Using multiple samples alleviates spikes or troughs that come from using a single sample.

To start a client survey, follow these steps:

1. Drag the client to the proper location.
2. Select the client to see the **Properties** pop-up menu, as shown in [Figure 231](#):



Figure 231: Client Surveys

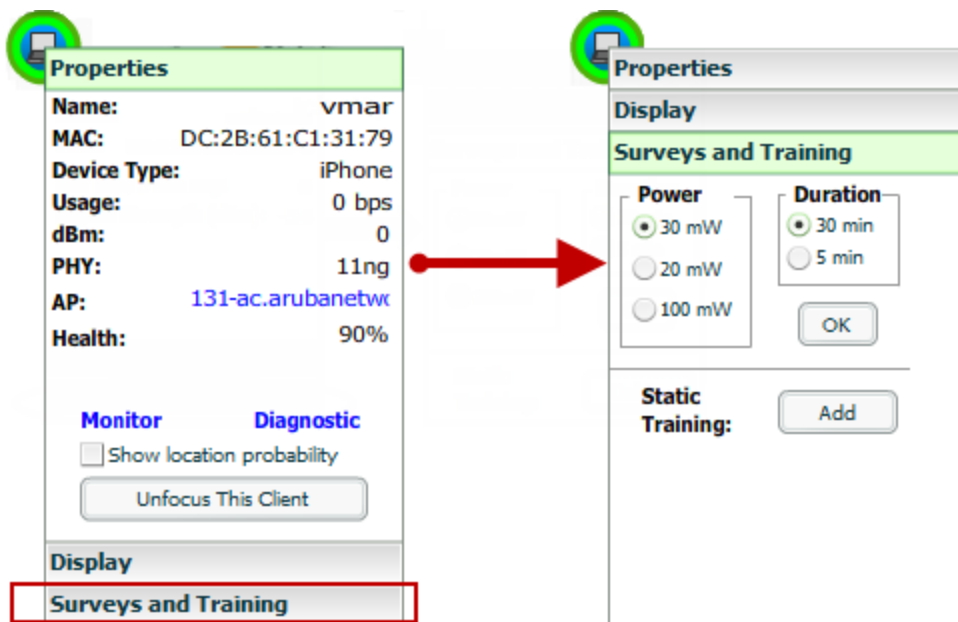

3. Select the **Surveys and Training** option.
4. Select the appropriate transmit power for the wireless client. Leave the default to **30mW** if you are unsure.
5. Select the **Duration** or the time that you want to sample the client's signal measurements. Longer durations will increase Path Loss accuracy and location accuracy.
6. Select **OK** to begin the survey.

To display survey locations, select the **Display** menu and select **Surveys**. Note the following information about this procedure:

- Ensure the client will remain in the same location for at least the duration of the survey.
- You should delete and resurvey an area or a floor plan after a remodel or significant interior movement.
- Surveys should be conducted during normal business hours to reflect normal RF activity on the floor.
- 11a clients automatically inherit the proper transmit power from the 11g configuration. Example: 30mW Pre-2006 laptops equate to 20mW for 11a clients.
- OV3600 dynamically assigns a transmit power to every client based on OUI as shown in [Table 163](#). This step increases the accuracy for surveys by allowing an override.

**Table 163:** Auto-assigned Client Type and Transmit Power

Client Type	Transmit Power 11g
Pre-2006 Laptops	30 mW
Post -2006 Laptops	100 mW
SOHO WLAN Cards (D-Link, Net Gear, LINKSYS)	30 mW
RFID Tags	10 mW

**Table 163: Auto-assigned Client Type and Transmit Power (Continued)**

Client Type	Transmit Power 11g
PDA	20 mW
iPhone	20 mW
Desktop	100 mW
Cisco Cards	100 mW

## Using VisualRF to Assess RF Environments

VisualRF has four distinct views or entry points: client view, access point view, floor plan view, and network, campus, and building view.


This section contains the following corresponding topics:

- "Viewing a Wireless User's RF Environment" on page 362
- "Viewing an AP's Wireless RF Environment" on page 364
- "Viewing a Floor Plan's RF Environment" on page 365
- "Viewing a Network, Campus, Building's RF Environment " on page 366
- "Viewing Campuses, Buildings, or Floors from a List View" on page 366
- "Viewing Campuses, Buildings, or Floors from a Tree View" on page 367

### Viewing a Wireless User's RF Environment

1. Navigate to **Clients > All** in OV3600.
2. Click the link under the **Location** column for the client of interest, as shown in [Figure 232](#). A VisualRF window of that location opens and indicates the client with a Username label, as shown in [Figure 233](#):

**Figure 232: Link to user's thumbnail (the Location column)**

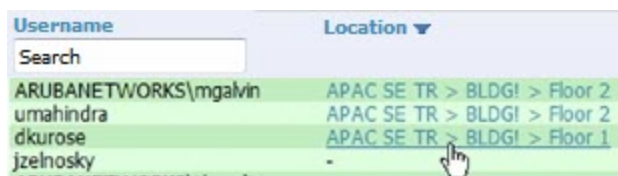


**Figure 233: VisualRF view of the selected device**



You can also access this information from the **Clients > Client Detail** page by selecting the VisualRF thumbnail, located next to the **Current Association** section of this page as shown in [Figure 234](#):

**Figure 234:** VisualRF thumbnail in Clients > Client Detail

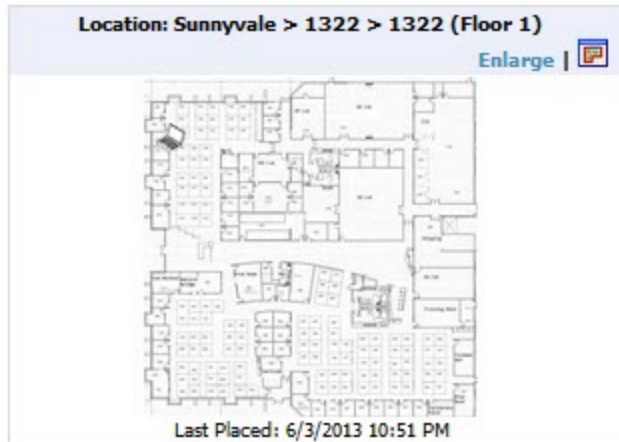

This view is focused on the wireless user enabling you quick resolution of a user's issues and therefore disables most RF objects by default.


- Users - only the user in focus is displayed
- APs - only the access point in which the focus client is associated with is displayed
- Radios - the heatmap represents only the radio to which the client in focus is associated
- Rogues - all rogues are off
- Client/Rogue Surveys - all surveys are off
- Walls - all walls are displayed
- Lines - client to AP of association
- Labels - all labels are disabled

### Tracking Location History

The VisualRF Location History tracker can display the location history for the selected user by indicating on the floor plan the locations to which that user travelled over the selected time period. The procedure to display location history varies, depending upon whether you access this feature using the default HTML5 UI, or the flash-based UI.


1. To view location tracking:
  - From the HTML5 UI, Select a client icon in the floor plan, click the **View** link in the right navigation pane, then select **Replay Location History**.
  - From the flash UI, select a client icon in the floor plan and select **Display**.
2. Select the period of time over which you want to track that client's movements, and the optionally, the frequency of sample times. Longer sample times will
3. , animation speeds, and location smoothing. When the animation smoothing feature is turned off or set to a lower value, the tracking history displays smaller client movements. When the smoothing value is set to higher values, these small movements are not displayed, and only larger location movements are animated.

Figure 235: Show Location History

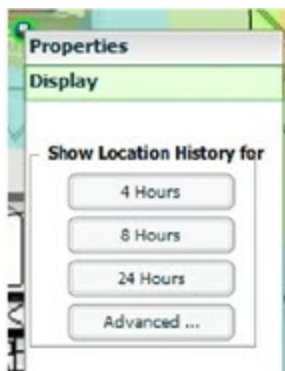

A location history player, illustrated in Figure 236, appears at the bottom of the VisualRF window.

Figure 236: Location History Player

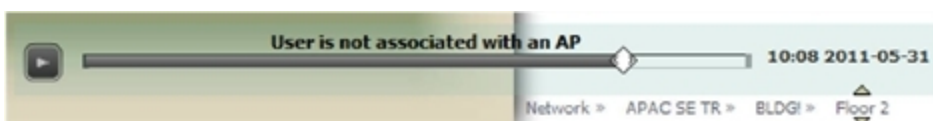

## Checking Signal Strength to Client Location

1. On a floor plan, locate the **Signal Cutoff** menu.
2. Select the desired signal level to display, as shown in Figure 237. The heatmap updates immediately.

Figure 237: Signal Cutoff dBm Dropdown Menu



## Viewing an AP's Wireless RF Environment

To view an access point's RF environment from **APs/Devices > Monitor** page:

1. Select a device of interest from **APs/Devices > List**, or any other OV3600 page that lists your APs. The **APs/Devices > Monitor** page opens.
2. Click on the VisualRF thumbnail showing the location of the AP. This is located on the right side of the Monitoring graphs, as shown in Figure 238:

**Figure 238: VisualRF Thumbnail in APs/Devices > Monitor page for an AP**



A fully interactive VisualRF display opens below the graphs on the same page (not in a new window). This view is focused on enabling quick resolution of AP issues and, therefore, disables many RF objects by default as follows:

- Clients - only clients associated with radios within access point of focus are displayed
- APs - only the access point in focus is displayed
- Radios - the heatmap represents all radios within the access point of focus
- Rogues - all rogues are **off**
- Client/Rogue Surveys - all surveys are **off**
- Walls - all walls on displayed
- Lines - client to AP of association are displayed
- Labels - all labels are disabled

## Viewing a Floor Plan's RF Environment

To view a floor plan's RF environment, navigate to the **VisualRF > Floor Plans** page.

- If you are using the default HTML5 UI, click the **List** link at the top right of the **Floor Plans** page to view a sortable, clickable list that allows you to select and instantly view any campus, building or floor in the network
- If you are using the legacy flash-based UI, scroll down to the floor plans list at the bottom of the Floor Plans page.

**Figure 239: Floor Plans List View**

Campus	Building	Floor	Name	Size	Gridsize	APs	Radios	Clients	Rogues	File Size	Original Floor Plan
Wills Campus	Building 1	1.0	Floor 1	100 x 70 ft.	3.12 ft.	0	0	0	0	121 KB	
USAF-A-SjanDemo	Sjan-Hallway/Mount	1.0	Sjan-FI2	645 x 174 ft.	6.97 ft.	4	0	0	0	319 KB	
Toronto Class	Bay Street	1.0	Floor 1	99 x 61 ft.	2.51 ft.	17	0	0	0	17 KB	
Sunnyvale CA.	Building 2341	1.0	Floor 1	230 x 214 ft.	5.00 ft.	35	70	162	1	72.6 KB	
Sunnyvale CA.	Expansion	1.0	First Floor	100 x 46 ft.	1.86 ft.	25	0	0	0	76.4 KB	
Sunnyvale CA.	Expansion	4.0	Floor 4	100 x 77 ft.	3.09 ft.	24	0	0	0	395 KB	
Sunnyvale CA.	Building 2344	1.0	Floor 1	238 x 250 ft.	5.00 ft.	34	68	187	0	86.5 KB	
Sunnyvale CA.	Building 2341	2.0	Roaming Lab	253 x 218 ft.	8.73 ft.	8	16	1	0	1.09 MB	
Sunnyvale CA.	Building 2344	2.0	Floor 2	233 x 251 ft.	5.00 ft.	39	74	214	0	97.1 KB	
Sunnyvale CA.	Aruba Expansion	3.0	Floor 3	100 x 77 ft.	3.09 ft.	24	0	0	0	395 KB	

The **VisualRF > Floor Plans** page provides a snapshot of how VisualRF is performing, as described in [Table 164](#):

**Table 164:** Floor Plans list columns

Field	Description
Campus	Campus associated to the floor.
Building	Building associated to the floor.
Floor	Floor number. The decimal place can be used for mezzanine levels.
Name	Optional name of a floor. (If the name is not changed, it displays the name as Floor [Number] by default.)
Size	The height and width in feet of the floor plan, including white space.
Grid Cell Size	The size of the grid cells, in feet.
APs	The number of access points on the floor.
Radios	The number of radios associated with access points on the floor.
Clients	The number of wireless clients associated with access points on the floor. <b>NOTE:</b> Locating clients consumes significant VisualRF resources. A floor with hundreds or thousands of clients can take a long time to process.
Rogues	The number of rogue devices heard by access points on the floor. This number reflects the filters configured on the <b>VisualRF &gt; Setup</b> . This means that while APs on the floor might hear more rogue devices, they are being filtered because of weak signal, they haven't been heard recently, or they are ad-hoc.
File Size	The floor plan background or image reported, in kilobytes. The larger the file, the longer it will take to render in the canvas.
Original Floor Plan	A link to download the original image background file.

## Viewing a Network, Campus, Building's RF Environment

To view floors from a geographical perspective:

1. Navigate to the **VisualRF > Floor Plans** page.
2. Click on each network, campus, or building successively to drill down further until you reach the floor plan. This navigation provides information in each view as follows:
  - Network View - Contains all campuses within your WLAN
  - Campus View - All buildings within a campus
  - Building View - All floors within a building
  - Floor Plan View - All regions, wiring closets, WiFi tags within the floor

## Viewing Campuses, Buildings, or Floors from a List View

The HTML5 UI supports a List View that displays a sortable, clickable list that allows you to select and instantly view any campus, building or floor in the network:

1. Navigate to the **VisualRF > Floor Plans** page.
2. Click the **List** link at the top right of any view. The **Network List View** window, shown in [Figure 240](#), appears on the screen. If a floor is in floor upload wizard mode, it appears in the list with an asterisk (\*) by the floor name.


**Figure 240: Network List View**

▼   Network > Sunnyvale CA.   Map List											
Campus ▼	Building	Floor	Name	Size	Gridsize	APs	Radios	Clients	Rogues	File Size	Original Floor Plan
Wills Campus	Building 1	1.0	Floor 1	100 x 78 ft.	3.12 ft.	0	0	0	0	121 KB	
USAF-A-SijanDemo	Sijan-HalleyMount	1.0	Sijan-Fix2	645 x 174 ft.	6.97 ft.	4	0	0	0	319 KB	
Toronto Class	Bay Street	1.0	Floor 1	99 x 61 ft.	2.51 ft.	17	0	0	0	17 KB	
Sunnyvale CA.	Building 2341	1.0	Floor 1	230 x 214 ft.	5.00 ft.	35	70	162	1	72.6 KB	
Sunnyvale CA.	Expansion	1.0	First Floor	100 x 46 ft.	1.86 ft.	25	0	0	0	76.4 KB	
Sunnyvale CA.	Expansion	4.0	Floor 4	100 x 77 ft.	3.09 ft.	24	0	0	0	395 KB	
Sunnyvale CA.	Building 2344	1.0	Floor 1	238 x 250 ft.	5.00 ft.	34	68	187	0	86.5 KB	
Sunnyvale CA.	Building 2341	2.0	Roaming Lab	253 x 218 ft.	8.73 ft.	8	16	1	0	1.09 MB	
Sunnyvale CA.	Building 2344	2.0	Floor 2	233 x 251 ft.	5.00 ft.	39	74	214	0	97.1 KB	
Sunnyvale CA.	Aruba Expansion	3.0	Floor 3	100 x 77 ft.	3.09 ft.	24	0	0	0	395 KB	


3. Click any of the links to view that location, or click a column heading to sort the list by that column criteria. The **Original Floor Plan** column contains links to download the floor plan graphic for the selected floor.
4. To return to the Map view, click the **Map** link at the top right of the page.

### Viewing Campuses, Buildings, or Floors from a Tree View

The legacy flash-based UI includes a Tree View to view floors from a hierarchical tree, as follows:

1. Navigate to the **VisualRF > Floor Plans** page.
2. Select the **Tree** icon () at the top right of any view. The **Network Tree View** window, shown in [Figure 241](#), appears on the screen.

**Figure 241: Network Tree View - Floor 1 highlighted**

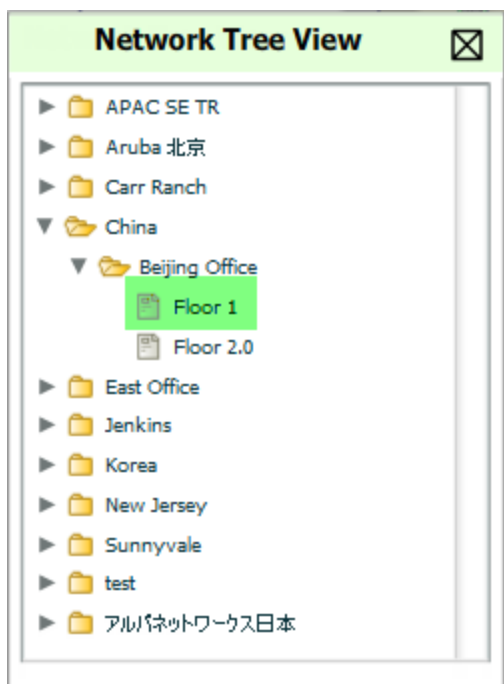

3. Use the arrows to drill down into the folders to select the Campus, Building, or Floor. Select the folder or floor plan icon to open the view you have selected. The Network Tree View window will remain on the screen until you close it.

# Importing and Exporting in VisualRF

## Exporting a campus

To export a campus from VisualRF so you can import it into another OV3600, follow these steps:

1. Navigate back to the **Network** view.
2. Right-click the **Campus** icon.
3. Select **Export**. An object selection window appears.
4. Select the objects to export and select **Export**. A **File Download** window appears.
5. Select **Save** and save the zipped file to your local hard drive for importation to another OV3600.

At this point, you are ready to deploy a production OV3600 and manage devices by importing your exported campus and matching the access points to your plan.

## Importing from CAD

The Floor Plan Upload Wizard (FUW) should inherit all pertinent information from your CAD file if you follow this procedure:

1. Determine UNITS - all modern CAD versions (2001 and newer) support UNITS
2. Determine MEASURE - Legacy CAD versions (2000 and older) used a Imperial or Metric system.
  - If UNITS are 0 or undefined, then the standard dictates defaulting to MEASURE value
  - If MEASURE is 0 or undefined, then the standard dictates defaulting to English and inches
3. Find MODEL VIEW - If the drawing contains multiple views the FUW will default to the Model view
4. Determine Bounding Box - FUW will encompass all lines and symbols on the drawing and create a bounding box which is generally smaller than entire drawing. It is based on the UNITS or MEASUREMENT above.
5. Convert to JPG - FUW will convert the bounding box area to a JPG file with a resolution of 4096 horizontal pixels at 100% quality.
6. Start Web UI of FUW Step #1 - This is the cropping step.

This and all subsequent steps use the converted JPG file. The greater the floor plan dimensions, the less clarity the background image provides.

## Batch Importing CAD Files

This process provides the ability to automatically upload many CAD files and auto provision existing walls and access points, and contains the following topics:

- ["Requirements" on page 368](#)
- ["Pre Processing Steps" on page 368](#)
- ["Upload Processing Steps" on page 369](#)
- ["Post Processing Steps" on page 369](#)
- ["Sample Upload Instruction XML File" on page 369](#)
- ["Common Importation Problems" on page 370](#)

## Requirements

- Operating System: Client machine must be Windows XP, Windows Vista, or Windows 7
- Flash: Version 9 or later

## Pre Processing Steps

1. Increase Memory Allocation in **VisualRF > Setup** as follows:



- 25 floors or less - 512 MB
  - 25 to 75 floors - 1 GB
  - More than 75 floors - 1.5 GB
2. Massage the output data.
  3. Increase the **Location Caching Timer** to 1 hour so that VisualRF does not overload the server calculating client locations while calculating path loss and process floor plan images.

## Upload Processing Steps

1. Create CAD XML files which contain drawing filename, dimensions and optional information like device manufacture and model, device coordinates, wall coordinates and building material. This step is usually performed by your facilities or CAD department. The output of AutoCAD will not be properly formed XML, so you may need to massage the output data.
2. Copy all CAD drawings and corresponding XML files into a single directory on Windows machine. All files must be in a single directory.
3. Compress all files into a single \*.zip file.
4. Open your browser and navigate to your OV3600 : [https://<OV3600\\_NAME>/visualrf/site\\_batch](https://<OV3600_NAME>/visualrf/site_batch).
5. Select **Browse** to launch the File Explorer Window.
6. Select the zip file containing the upload instructions and click the **Open** button. The **File Explorer** Window will disappear you will return to the **Batch Floor Upload Wizard**.
7. Select **Next**.
8. The application validates the following information
  - Well-formed XML
  - All drawing files are accessible
  - All APs are present
  - All Building and Campuses are present
9. If there are any errors, none of the floor plans are created.

## Post Processing Steps

1. Decrease the Location Caching Timer to previous value.
2. Review the **VisualRF > Floor Plans** page to ensure server is keeping up.

## Sample Upload Instruction XML File

```
<?xml version="1.0" encoding="ISO-8859-1"?>
<visualrf:site_batch xmlns:visualrf="http://www.ov3600.com"
xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance" version="1" origin="lower-left">
  <floor name="1st Floor" number="43" building-name="Library" campus-name="University">
    <image filename="blueprint1.dwg"/>
    <access-points>
      <access-point name="ART.1.1" x="190.26" y="222.31"/>
      <access-point name="ART.1.2" x="136.12" y="208.60"/>
      <access-point name="ART.1.3" x="75.02" y="221.47"/>
      <access-point name="ART.1.4" x="73.41" y="132.48"/>
      <access-point name="ART.1.9" x="196.67" y="98.34"/>
      <access-point name="ART.1.8" x="179.07" y="55.97"/>
      <access-point name="ART.1.7" x="119.64" y="56.12"/>
      <access-point name="ART.1.6" x="74.53" y="56.36"/>
      <access-point name="ART.1.5" x="59.18" y="38.01"/>
    </access-points>
  </floor>
  <floor name="2nd Floor" number="44" building-name="Library" campus-name="University">
```

```

<image filename="blueprint2.dwg"/>
<access-points>
  <access-point name="ART.2.12" x="196.31" y="92.19"/>
  <access-point name="ART.2.11" x="204.82" y="55.78"/>
  <access-point name="ART.2.10" x="133.08" y="55.81"/>
  <access-point name="ART.2.9" x="73.79" y="55.78"/>
  <access-point name="ART.2.8" x="73.72" y="104.26"/>
  <access-point name="ART.2.7" x="73.91" y="134.88"/>
  <access-point name="ART.2.6" x="73.83" y="162.72"/>
  <access-point name="ART.2.5" x="73.82" y="183.61"/>
  <access-point name="ART.2.4" x="63.74" y="125.48"/>
</access-points>
</floor>
</visualrf:site_batch>

```

## Common Importation Problems

- Improper or undefined UNITS or MEASURE
- Text embedded into the Model view which causes an inconsistent bounding box
- Large dimensions which cause grainy resolution upon zoom
- Legacy CAD versions prior to Release 15 or AutoCAD 2000.

## Importing from an Alcatel-Lucent Controller

The instructions below will enable you to seamlessly migrate all building, campus, and floor plan information previously entered into an Alcatel-Lucent controller.

### Pre-Conversion Checklist

Prior to importing floor plans, ensure that VisualRF's memory allocation is sufficient for the anticipated number of floor plans.

To change the memory allocation, navigate to the **VisualRF > Setup** page and configure the memory allocation accordingly. Memory allocation should equal .5 GB for 1-75 floor plans, 1 GB for 76-250 floor plans, 1.5 GB for 251-500 floor plans, and 2 GB for 501-1,000 floor plans.




---

Importing a large number of floor plans can impact performance of the OV3600 server. VisualRF must create a thumbnail, provision APs, create attenuation grid, and locate all clients on each imported floor plan. This can cause the **VisualRF > Floor Plans** page to be unresponsive.

---

### Process on Controller

1. On the controller's UI, navigate to the **Plan > Building List** page.
2. Select the buildings to be exported and select **Export**.
3. When the dialog box appears, make sure that you have included all images and select **Save to a file**.

### Process on OV3600

1. Navigate to **VisualRF > Import**.
2. Select the **Import floor plans from an Aruba/Alcatel-Lucent Controller** link.
3. Select the **Begin Importing Floor Plans** link.
4. When prompted for input file, use the file saved from the controller process.

## VisualRF Location APIs

VisualRF provides the following location APIs:

**Site Inventory:** `https://[ov3600_host]/visualrf/site.xml?site_id=...`

- You can find the `site_id` from the Floor Plan List query defined on the XML API page
- This interface provides floor details including access points, walls, regions, surveys, etc.
- The corresponding example XML and schema are attached in `visualrf_site_inventory.*`

**Device Location:** `https://[ov3600_host]/visualrf/location.xml?mac=...`

- Provide the radio MAC of the client to locate.
- The corresponding site where the user was placed is provided along with the dimensions
- If a client is heard on multiple floors, it will only be placed on the floor that contains the AP it is associated with.'



When interacting with the OV3600 API, the system requires that clients send the 'X-BISCOTTI' header along with posts. The value of the header is provided as a part of the response when a client authenticates against /LOGIN. A X-BISCOTTI token lasts as long as authentication session.

## Sample Device Location Response

```
<visualrf:device_location version="1" xmlns:visualrf="www.example.com">
  <device mac="00:13:02:C2:39:28" name="Peter"
    site_id="4f674301-4b47-4ac6-8417-4eba3f7df3a6"
    site_name="NewYork">
    <site-width>124.51</site-width>
    <site-height>161.14</site-height>
    <x>82.50</x>
    <y>37.50</y>
  </device>
</visualrf:device_location>
```

## Sample Site Inventory Response

```
<ov3600:ov3600_site_inventory version="1"
  xmlns:ov3600=http://www.example.com
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance">
  <site id="b45e7a49-23b5-4db0-891a-2e60bff90d2c" version="677">
    <name>Remax</name>
    <uom>ft</uom>
    <width>314.45</width> <height>425.88</height>
    <property name="site_owner" value="" format="" />
    <property name="name" value="Remax" format="" />
    <property name="installer" value="" format="" />
    <property name="planner" value="" format="" />
    <image type="background">
      <filename>/var/example/snapshot/b45e7a49-23-2e6d2c.677/background.jpg</filename>
      <relative-url>/snapshot/b423b5-4db0-891a2e0d2c.677/background.jpg</relative-url>
      <pixel-width>1151</pixel-width>
      <pixel-height>1557</pixel-height>
    </image>
    <image type="thumbnail">
      <filename>/var/example/snapshot/b45e7a49891af90d2c.677/thumb.jpg</filename>
      <relative-url>/snapshot/b45e7a49-23b5-4db0-891a2c.677/thumb.jpg</relative-url>
      <pixel-width>230</pixel-width>
      <pixel-height>311</pixel-height>
    </image>
    <ap id="12615" name="AP-4000M-1">
      <x>118.97</x> <y>130.38</y>
      <total-bandwidth>0</total-bandwidth>
      <total-clients>0</total-clients>
      <status>down</status>
      <uptime>0.0</uptime>
```

```

    <radio index="1" phy="g" mac="00:20:A6:5A:63:66" beamwidth="0.0"
      gain="1.5" antenna="" orientation="0.0" mount="Ceiling" valid="false">
      <discovering-radio id="11276" index="1" dBm="-85" />
      <discovering-radio id="11828" index="1" dBm="-93" />
    </radio>
  </ap>
</site>
</ov3600:ov3600_site_inventory>

```

## About VisualRF Plan

### Overview

VisualRF Plan is a standalone Windows client that can be used for planning sites that do not yet use the OV3600 service on the Web. You can use VisualRF Plan to do basic planning procedures like adding a floor plan, provisioning APs, and generating a Bill of Materials (BOM) report.

VisualRF Plan is free to use for anyone with an Alcatel-Lucent support account. No license is required.

The client can be downloaded from the Alcatel-Lucent Support Center.

### Minimum requirements

VisualRF Plan must be installed on a Windows machine with the following minimum specifications:

- 250 MB Hard drive storage space
- 2 GB RAM
- 2.0 GHz dual-core CPU




---

If installing VisualRF Plan on a VMware virtual machine hosted by a Mac computer, you must disable **Folder Sharing**.

---

### VisualRF Plan Installation

After you have downloaded VisualRF Plan from the Alcatel-Lucent support site, the installer will prompt you for the location of the data directory. You must have access to the directory you choose for the installation. Also choose a directory for auto-backup. (The default is the user directory.) Follow the rest of the instructions on your installation screen.

### Differences between VisualRF and VisualRF Plan

**Table 165:** *VisualRF vs. VisualRF Plan*

Feature	VisualRF	VisualRF Plan
Hardware sizing		X
Installation required		X
How to plan a site	X	X
Navigation	X	X
Track users	X	

**Table 165: VisualRF vs. VisualRF Plan (Continued)**

Feature	VisualRF	VisualRF Plan
Track interferers	X	
VisualRF APIs	X	
Location accuracy	X	
VisualRF preferences	X	
Resource utilization	X	
Add external walls	X	X
Client surveys	X	
Wiring Closet	X	X
View deployed switches	X	
View signal strength	X	
Planning and provisioning	X	X
Import and Export	X	X

**8**

802.11 counters 88, 151-152, 242

**A**

AAA Servers 81, 93

Access Points

Adding with CSV File 136

ACLs, see groups 116

ACS

Integrating 71

Servers 71

Active BSSIDs 154

Adaptive Radio Management 150

Adding a New Attenuation

VisualRF Settings 342

Adding Managed AMP 277

Adding Widgets 23

Administration 218

Administrative Roles 16

Air Monitor 78

AirMesh

templates 194

Alert Summary table 140, 233

Alerts 223, 232

Additional Resources 217

Delivery 234

Responding 235

Viewing 233

Warning Behavior, Setting 28

AMON data collection 39

AMP

Setup 277

Antenna Diversity 166

AP-Specific Variables 189

AP Groups

Setup > Permanent Spectrum 179

AP Interface Polling Period 151

AP/Device Manager role 44

AppRF 262

APs

Applying Startup-Config Files 194

Enabling Automatic Discovery 132

Mismatched Configuration 190

APs/Devices > SNMP/HTTP Scanning 127

ARM 150, 152, 178

ARM Events table 152

Association History table 256

Attenuation Settings

VisualRF Setup 341

audit

Configuring Intervals 31

device configuration 158

PCI Compliance 74

Audit (Read Only) 47

Authentication Priority 52

Auto Detect Upstream Device setting 164

Automatic Authorization 31, 92, 130

available widgets 23

**B**

Backups 235

Restoring from a Backup 236

Running on Demand 236

Using Failover 279

**C**

CAD Files, Importing 368

CDP, polling interval for device discovery 132

Channel Busy Threshold 33

Choose Columns link 19

Cipher 148

Cisco

ACS 56

Catalyst 80, 182, 196

Configuring IOS Templates 189, 194

Dynamic AP Management 169

IOS 56, 69, 80, 91, 163, 182

Safe Flag in Firmware Upgrade 175

Wireless Domain Services 67

WLC 66, 81, 91

WLSE 66, 355

Cisco Discovery Protocol

see CDP 132

Cisco IOS

Templates 194

Client Detail 253

Clients

Monitoring and Supporting 241

Overview 242

Comparing Device Groups 119

- Configuration
  - AMP 17, 29
    - WMS Offload 78
  - Change Jobs, Viewing 162, 236
  - Compliance chart 262
  - Controllers 14
  - Templates and Variables 187
  - Whitelists 51
- Configuration, WLC 107
- Configuration, WLSE 67, 70
- Connected Users table 158
- Contents iii
- Controllers
  - Backup and Restore 278
  - Classification
    - WMS Offload 206
  - Importing 370
- CSV File, adding multiple devices with 136
- Current Association 256
- D**
- Dashboard
  - Customizing Display 22
- Deauthenticate Client 256
- Define Planning Region 348
- Detected Interfering Devices 153
- Device Discovery 127
- Device Events 37
- Device OUI score 207
- Device Troubleshooting Hint 34
- Device Type Setup 66
- devices
  - modifying 121
- Devices 127
  - Adding Manually 132
  - Communication Settings 59
  - Discovering, Managing, and Troubleshooting 127
  - Folders 159
  - Importing via CSV 136
  - Individual Support and Firmware Upgrades 173
  - Setting Triggers 226
  - Status 162
  - Troubleshooting a Newly Discovered Device 176
  - Verifying 139, 158
- DHCP, using 167
- Discovery
  - Automatic AP 132
  - Setting Triggers 229
- Discovery Events table 215
- Disk Space charts 241
- DNS Hostname Lifetime 34
- Documentation 270
- E**
- Editing Interfaces 157
- Error fetching existing configuration 177
- Expand folders to show all APs 139
- Export CSV 21
- external logging 35
- F**
- Failover 15, 276, 279
- Firewall 262
- Firmware
  - MD5 Checksum 62
  - Specifying Minimum Versions for APs 117
  - Upgrades
    - Jobs, Viewing 237
    - Monitor-Only Mode 37
  - Uploading 62, 64
- Floor Plan 348
  - Cropping Image 345
  - Defining Boundaries 347
  - Editing 352
  - Features 326
  - Importing 345, 368, 370
  - Network List View 366
  - Network Tree View 367
  - Non-CAD 346
  - Properties 352
  - Viewing 366-367
- Folders 159
- FTP Server, enabling 38
- Fully Qualified Domain Names 33
- G**
- Global Groups
  - with Master Console 278
- Global Templates 198
- Google Earth 144, 164, 344
- Graphs 22
- Groups 80, 126
  - Changing Multiple Group Configurations 120
  - Comparing 119
  - Configuring Basic Group Settings 84
  - Configuring Group AAA Servers 93
  - Configuring Group SSIDs and VLANs 98
  - Configuring Group Templates 182
  - Configuring Radio Settings 103

- Configuring Security Settings 94
- Deleting 120
- Deleting a Group 120
- Global Groups 83, 124
- MAC ACLs 116
- Overview 82
- Radio Settings 103
- Security 94
- Viewing 83
- Guest Access Sponsor role 49
- Guest User Configuration 34
- Guest Users 36

## H

- Health
  - Setting Triggers 232
- Historical Data Retention 36
- HP ProCurve 92-93, 182
- HTTP Timeout 61

## I

- ICMP settings 61
- IDS Events 233
- ignore device 137
- Incidents 234
- Index 374
- Installation 17
- Instant APs 14
- Instant Config 14
- Interface Monitoring page 157
- Interfaces/Radios
  - Setting Triggers 228
- Interfering Devices 37
- Introduction > AW 13
- iPhone 277

## L

- LDAP
  - authentication 50
  - configuring authentication and authorization 56
- Licenses 144
- Location Calculation Timer Settings
  - VisualRF Setup 339
- Location Settings
  - VisualRF Setup 338
- Logging out 280
- Login message, configuring 51
- logs
  - ARM Events 153
  - async\_logger 221
  - audit 35

- config\_pusher 221
- error\_log 221
- syslog 35

## M

- Maintenance windows 93, 123, 169
- Manage (Read/Write) 47
- Managed AMP 277
- Master Console 15, 275
  - Public Portal 276
- Master Console and Failover 15
- Match Events Report 308
- MDM Server, Add 258
- Mesh
  - Device-to-Device Link Polling 88
  - Gateway 144
  - in VisualRF 330
  - Mode 144
  - Monitoring 154
  - Proxim 114
- message-of-the-day 50
- MIB 73
- MobiControl 258
  - Prerequisites 258
- Modify Devices 158
- Monitor (Read Only) 47
- Monitoring 139
  - All Devices 141
  - Mesh Devices 154
  - Rogue Clients 247
  - Wired Devices 155
  - Wireless Devices 142

## N

- Navigation
  - AMP Failover 279
  - understanding the UI 17
- Network Deviations 268
- Network Integration with OV3600 15
- Network Settings
  - defining 41
- Nightly Maintenance Time Setting 31
- NMS 73
- Non-CAD Floor Plan, Sizing 346
- NTP 90
- NTP Settings 42

## O

- Open controller web UI link 255
- OUI 207
- OV3600 Alerts 233



OV3600 MIB 73

## P

pagination records  
    setting, resetting 20  
pagination widget, using 21  
PCI Compliance  
    Default Credential Compliance 77  
    PCI Requirements 75  
Physical Interfaces table 157  
planned maintenance mode 161, 163  
Poll Now button 143  
Primary Network Interface Settings 41  
product overview 13  
    defining a scan 129  
    executing a scan 130  
Proxim 4900M 106

## Q

Quick Links 255, 262

## R

Radio Enabled option 167  
Radio Role field 180  
radio settings  
    Configuring for Groups 103  
radio statistics 149, 154  
Radio Table 145  
RADIUS 93  
    authentication 50  
    configuring authentication and authorization 53, 55  
    integrating 54  
RADIUS Authentication Issues 234  
    Setting Triggers 231  
Radius/ARM/IDS Events Retention 36  
RAPIDS 201  
    Additional Resources 217  
    Additional Settings 206  
    Audit Log 217  
    Enabling 35  
    Overview 15  
        Network Health, Viewing 201  
    Recommended Rules 210  
    Rogue Devices, Process 215  
    Rules 206  
        Additional Functions 211  
        Viewing and Configuring 207  
    Score Override 216

    Setup 203  
    Viewing Ignored Rogues 215  
Recent Events table 149  
Replace Hardware button 177  
Reports 281, 291  
    Aruba License 293  
    Capacity Planning 293  
    Client Inventory 295  
    Client Session 298, 322  
    Configuration Audit 300  
    Creating, Running, and Emailing 281  
    Custom 292  
    Defining Custom Reports 284  
    Definitions 281  
    Device Summary 301  
    Device Uptime 303  
    Emailing and Exporting 323-324  
    Generated, View 291  
    IDS Events 304  
    Inventory 306  
    Killing Reports 284  
    Match Events 308  
    Memory and CPU Utilization 308  
    Network Usage 309  
    New Clients 311  
    New Rogue Devices 312  
    Overview 281  
    PCI Compliance 314  
    RADIUS Authentication Issues 317  
    RF Health Report 318  
    Rogue Clients 319  
    Rogue Containment Audit 321  
Requirements  
    PCI 74  
Restoring from Backup 236  
RF Capacity 266  
RF Health Report 318  
RF Performance 265  
RFprotect License 178  
Rogue AP Discovery Events 36  
Rogue Association History Table 257  
Rogue Classification 201  
Rogue Client Associations Table 215  
Rogue Clients 215, 217, 231, 247, 319  
Rogue Scanning  
    enabling in Groups > Radio 105, 359  
Rogue Threat Level 207  
Roles 16  
Routers and Switches 155  
    Adding with a CSV File 136

- RTLS
  - RTLS Collector 38
- Run Command Menu 256
- S**
- Sample Response
  - Device Location 371
  - Site Inventory 371
- Scan Sets 129
- Scanning
  - Credentials 128
- Search Method 32
- Secondary Network Interface Settings 41
- Security
  - auditing PCI compliance 74
  - Configuring ACS servers 71
  - Configuring Group Security Settings 94
  - configuring group SSIDs and VLANs 98
  - configuring LDAP 50
  - configuring RADIUS 50
  - configuring TACACS+ 50
  - integrating NMS 73
  - RAPIDS and rogue classification 201
- Security and Authentication > ACS 69
- Security and Authentication > Certificates 51
- Server Settings
  - VisualRF Setup 337
- Servers
  - specifying general settings 29
- Severe Alert 28
- Signal Cutoff 364
- Signal Quality 148
- Single Sign-On 47-48, 52, 145
- Smarthost 323
- SNMP
  - Fetcher 240
  - Polling Period 87-88
  - Port 135
  - Rate Limiting for Monitored Devices 40
  - Read-Write 61
  - Timeout Setting 60
  - Trap 177
  - v3 Informs 61
- SOTI MobiControl 258
- Spectrum Analysis 178
- SSIDs 98
  - inactive 37
- SSL Certificates 168
- static IPs, assigning 89
- Static Routes 42
- Switches
  - virtual interfaces 169
- Symbol 106, 182
- Syslog 35, 221
- System Status, Viewing 219
- T**
- TACACS+ 55, 93
  - configuring authentication 50
  - integrating 50
- Telnet/SSH Timeout 61
- Template Syntax 189
- Template Variables 183
  - Conditional 190
  - Substitution 191
- Templates 182, 184
  - Adding 185, 199
  - AirMesh 194
  - Aruba Instant 192
  - Cisco IOS 194
  - Configuring a Global Template 198
  - Configuring Cisco IOS Templates 194
  - Configuring for Groups 182
  - Global Template Variables 199
  - Multi Radio Support 195
  - SCP Settings 195
  - Single and Dual-Radio APs 196
  - Symbol Controllers/HP WESM 196
  - Variables 199
  - WDS Settings 195
- Title 1
- Top Header Stats 17, 32
- Transmit Power Level 167
- Trap Types 153
- Trapeze 182
- Triggers 223, 232
  - Additional Resources 217
  - Configuration 229
  - Delivery 235
  - Setting 226, 228-229, 231-232
- U**
- UCC 263
- UI
  - understanding the navigation bar 17
- Unexpected LAN MAC Address 177
- Unignore a Device 138
- Universal devices,adding 137
- User Account, Configuring 275
- User Data Polling Period 151
- User Idle Timeout 51

- User Interface
    - APs/Devices > Audit 132, 144, 159-160, 189
    - APs/Devices > Ignored 138
    - APs/Devices > Interfaces 156-157, 169
    - APs/Devices > List 139
    - APs/Devices > New 131-132, 138
    - Clients > Clients Detail 259
    - Clients > Connected 244-245
    - Clients > Diagnostics 257
    - Clients > Guest Users 250
    - Clients > Tags 252
    - Clients > User Detail 255
    - Clients > VPN Sessions 251
    - Configuration Change Confirmation 121
    - Device Setup > Add 132, 136-137
    - Device Setup > Communication 59-62
    - Device Setup > Discover 128-130
    - Device Setup > Firmware Files 62
    - flash graphs 23, 29
    - Flash Graphs 23
    - Group SNMP Polling Period 87-88
    - Groups > Basic 86-87, 89, 91-93, 125
    - Groups > Cisco WLC Config 106
    - Groups > Firmware 118
    - Groups > List 83
    - Groups > MAC ACL 117
    - Groups > Proxim Mesh 114
    - Groups > PTMP 114
    - Groups > Radio 103
    - Groups > Security 94
    - Groups > SSIDs 98
    - Groups > Templates 184-185, 199
    - Home 259
    - Home > License 271
    - Home > Overview 260-261
    - Home > Search 269-270
    - Home > User Info 27, 272
    - Home Overview 23, 29
    - Master Console 275
    - Master Console > Groups > Basic 278
    - Master Console > Groups > Basic, Managed 278
    - OV3600 Setup > NMS 73
    - Radio Statistics 149
    - RAPIDS > Audit Log 217
    - RAPIDS > List 211
    - RAPIDS > Rogue APs (Detail), Score Override 216
    - RAPIDS > Score Override 216
    - RAPIDS > Setup 203
    - Reports > Definitions 284-285
    - Reports > Generated > Port Usage 316
    - System 218
    - System > Alerts 36, 234
    - System > Backups 235
    - System > Configuration Change Jobs 162, 236
    - System > Event Logs 222
    - System > Events Log 149
    - System > Firmware Upgrade Jobs 237
    - System > Performance 238
    - System > Status 219
    - System > Syslog and Traps 221
    - System > Trigger Detail 224
    - System > Triggers 233
    - View AP Credentials 178
  - User Roles 44
    - creating 45
    - VisualRF 45
  - User Status, Evaluating 253
  - Users
    - creating 42
- ## V
- Vendor-Specific Device Settings 33
  - View Device Credentials link 177
  - VisualRF 14, 372
    - Adding Exterior Walls 356
    - APIs 370
    - Assessing RF Environments 362
    - Auto-Match Planned Devices 354
    - Autoprovisioning 353
    - Checking Signal Strength 364
    - Client Surveys 360
    - Edit Menu 330
    - Editing a Ffloor Plan Image 345
    - Enabling 35, 327
    - Floor Plans
      - Editing 352
      - Importing 345
      - Network List View 366
      - Network Tree View 367
  - Icons 331
  - Importing and Exporting 368
  - Increasing Location Accuracy 355
  - Interferers 330
  - Location History 363
  - Location Service 355
  - Location Training 357
  - Mesh View 327, 330
  - Navigation 327
  - Network View 328-329

- New Building 343
- New Campus 343
- Overview 325
- Planning and Provisioning 343
- Preferences 332-335
- Printing a BOM 354
- provisioning Existing APs 353
- QuickView 149, 327
- Removing Color 347
- Roles 45
- Settings
  - Adding a New Attenuation 342
- Setup
  - Attenuation Settings 341
  - Controller 370
  - Location Calculation Timer Settings 339
  - Location Settings 338
  - Resource Utilization 342
  - Server Settings 337
  - Setup page 336
- Terminology 326
- Tree view 366
- Viewing a Wireless User 362
- Viewing AP RF Environment 364
- Viewing Floor Plan RF Environment 365
- VisualRF Plan 372
  - Installation 372
  - Requirements 372
- VisualRF vs. VisualRF Plan 372
- VLANs 98

**W**

- watched client 253
- Watched OV3600s 279
- WDS Role 168
- Web Auth bundles 59, 65
- widgets
  - adding 23
  - available 23
- Wired Devices
  - Monitoring 155
- Wired Interfaces table 146
- WLC > AP Groups 111
- WLC > Controller Settings 111
- WLC > LWAPP AP Groups 111
- WLC > Management Settings 113
- WLC > Navigation 107
- WLC > Security 112
- WLC > Wireless Parameters 112
- WLC > WLANs 108
- WMS Offload Support 79