



SmartCell Insight Release 2.0.1

Installation Guide

Part Number: 800-71321-001 Rev A
Published: 08 August 2016

www.ruckuswireless.com

Contents

Copyright Notice and Proprietary Information	
About This Guide	
Document Conventions	
Related Documentation	
Documentation Feedback	

1 Before You Begin

System Requirements.....	10
Minimum Hardware Requirements.....	10
Guidelines for Setting Up Data Nodes.....	11
Storage Requirements.....	11
Minimum Software Requirements.....	11
DHCP Server Requirements.....	11
NTP Server Requirements.....	12

2 Installing SCI 2.0.1

Installation Overview.....	13
Setting Up the Virtual Machine Using VMware ESXi.....	14
Setting Up the Virtual Machine Using AWS.....	15
Setting Up the Nodes.....	17
Firewall Rules.....	18
Web API Setup.....	19
Secure Shell Access to SCI.....	20

3 Configuring SCI

Configuring SMTP.....	21
Managing Controllers.....	22
Editing Controllers.....	24

4 Configuring the Controller

Configuring Controllers from the Web UI.....	26
--	----

5 Managing Licenses

Trial License.....	28
Upgrading to the SCI License.....	28

Copyright Notice and Proprietary Information

Copyright 2016. Ruckus Wireless, Inc. All rights reserved.

No part of this documentation may be used, reproduced, transmitted, or translated, in any form or by any means, electronic, mechanical, manual, optical, or otherwise, without prior written permission of Ruckus Wireless, Inc. (“Ruckus”), or as expressly provided by under license from Ruckus.

Destination Control Statement

Technical data contained in this publication may be subject to the export control laws of the United States of America. Disclosure to nationals of other countries contrary to United States law is prohibited. It is the reader’s responsibility to determine the applicable regulations and to comply with them.

Disclaimer

THIS DOCUMENTATION AND ALL INFORMATION CONTAINED HEREIN (“MATERIAL”) IS PROVIDED FOR GENERAL INFORMATION PURPOSES ONLY. RUCKUS AND ITS LICENSORS MAKE NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THE MATERIAL, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT AND FITNESS FOR A PARTICULAR PURPOSE, OR THAT THE MATERIAL IS ERROR-FREE, ACCURATE OR RELIABLE. RUCKUS RESERVES THE RIGHT TO MAKE CHANGES OR UPDATES TO THE MATERIAL AT ANY TIME.

Limitation of Liability

IN NO EVENT SHALL RUCKUS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR DAMAGES FOR LOSS OF PROFITS, REVENUE, DATA OR USE, INCURRED BY YOU OR ANY THIRD PARTY, WHETHER IN AN ACTION IN CONTRACT OR TORT, ARISING FROM YOUR ACCESS TO, OR USE OF, THE MATERIAL.

Trademarks

Ruckus Wireless, Ruckus, the bark logo, BeamFlex, ChannelFly, Dynamic PSK, FlexMaster, Simply Better Wireless, SmartCell, SmartMesh, SmartZone, Unleashed, ZoneDirector and ZoneFlex are trademarks of Ruckus Wireless, Inc. in the United States and other countries. All other product or company names may be trademarks of their respective owners.

About This Guide

This *SmartCell Insight 2.0.1 Installation Guide* provides instructions for installing and the initial setup of the Ruckus Wireless™ SmartCell Insight (SCI) application.

This guide is written for service operators and system administrators who are responsible for managing, configuring, and troubleshooting Wi-Fi networks. It assumes basic working knowledge of local area networks, wireless networking, and wireless devices.

NOTE: Refer to the release notes shipped with your product to be aware of certain challenges when upgrading to this release.

Most user guides and release notes are available in Adobe Acrobat Reader Portable Document Format (PDF) or HTML on the Ruckus Wireless Support Web site at <https://support.ruckuswireless.com/contact-us>.

Document Conventions

Table 1: Text conventions on page 6 and Table 2: Notice conventions on page 6 list the text and notice conventions that are used throughout this guide.

Table 1: Text conventions

Convention	Description	Example
message phrase	Represents messages displayed in response to a command or a status	[Device Name] >
user input	Represents information that you enter	[Device Name] > set ipaddr 10.0.0.12
user interface controls	Keyboard keys, software buttons, and field names	Click Create New
Start > All Programs	Represents a series of commands, or menus and submenus	Select Start > All Programs
ctrl+V	Represents keyboard keys pressed in combination	Press ctrl+V to paste the text from the clipboard.
screen or page names		Click Advanced Settings . The Advanced Settings page appears.
command name	Represents CLI commands	
parameter name	Represents a parameter in a CLI command or UI feature	
variable name	Represents variable data	{ZoneDirectorID}
filepath	Represents file names or URI strings	http://ruckuswireless.com

Table 2: Notice conventions

Notice type	Description
NOTE:	Information that describes important features or instructions
CAUTION:	Information that alerts you to potential loss of data or potential damage to an application, system, or device

Notice type	Description
WARNING:	Information that alerts you to potential personal injury

Related Documentation

For a complete list of documents that accompany this release, refer to the Release Notes.

Documentation Feedback

Ruckus Wireless is interested in improving its documentation and welcomes your comments and suggestions.

You can email your comments to Ruckus Wireless at: docs@ruckuswireless.com

When contacting us, please include the following information:

- Document title
- Document part number (on the cover page)
- Page number (if appropriate)

1

Before You Begin

In this chapter:

- [System Requirements](#)
- [DHCP Server Requirements](#)
- [NTP Server Requirements](#)

SmartCell Insight (SCI) is a massively scalable reporting and analytics engine, designed to collect data from Ruckus network equipment, analyze that data, and then present it using a wide variety of standard and custom reports.

System Requirements

You must be aware of the minimum hardware and software requirements to run SCI 2.0.1.

Minimum Hardware Requirements

To run SCI 2.0.1 effectively, you must ensure that the installation environment meets the minimum hardware requirements.

The SCI cluster consists of a Master node and one or many Data nodes. The cluster can be fully functional with just the Master node. The Data node is optional, as it only helps to scale the processing power and storage capacity of the cluster.

Following are the minimum hardware requirements for the Master node in the SCI cluster:

Table 3: Minimum Hardware Requirements - Master Node

Requirement	Quantity
Number of vCPUs	8
Memory	32 GB
Root HDD (Root Volume)	80 GB
Secondary HDD (Data Volume)	500 GB

Following are the minimum hardware requirements for the Data node in the SCI cluster:

Table 4: Minimum Hardware Requirements - Data Node

Requirement	Quantity
Number of vCPUs	4
Memory	20 GB
Root HDD (Root Volume)	80 GB
Secondary HDD (Data Volume)	500 GB

Guidelines for Setting Up Data Nodes

The controllers that communicate with the SCI cluster can have a number of APs. The amount of data traffic that the cluster must handle depends on the number of APs in the controller. Therefore, you must setup the right number of Data nodes on the cluster to handle the AP traffic. Following are guidelines to setup Data nodes within the cluster, based on the number of APs in the controller:

Table 5: Guidelines to Setup Data Nodes

Number of Data Nodes	Number of APs
0	Up to 3,000
1	Up to 10,000
2	Up to 20,000
3	Up to 30,000

NOTE: Add an additional Data node for every additional 10,000 APs

NOTE: This table is only a guideline and the actual hardware requirements would depend on various factors such as the number of clients, the number of sessions, and the type of server hardware.

Storage Requirements

The node must have a storage capacity to handle at least 1 GB of data per day, for every 1,000 APs.

Minimum Software Requirements

The minimum required virtualization software version is VMware ESXi 5.0 or above.

DHCP Server Requirements

Before the SCI cluster installation, ensure that a static IP address is assigned to the Master node and Data node. A DHCP server must be available to issue an IP address to the SCI virtual machine (VM).

NOTE: The IP address that is assigned to the nodes must be accessible.

To setup a VMware environment, the networking layer of VMware is used, which includes its own virtual routers and the DHCP server. Therefore, a dedicated DHCP server is not necessary.

NOTE: The IP addresses assigned to SCI VMs must not change throughout the lifetime of the deployment.

NTP Server Requirements

SCI must keep the correct time in order to report accurate statistics.

As an analytics system, SCI must make sure that all its statistics are reported with the correct time. Therefore, you must ensure that NTP servers are reachable by all elements of the ecosystem: APs, SZ's, ZoneDirectors, and SCI.

NOTE: In addition to ensuring access to an NTP server, you must also ensure that the time and date are correct. If you change the time after SCI is installed, it will cause serious issues within the SCI system. For example, when APs reboot, they would lose all measurements and aggregated statistics as the AP re-initializes its real-time clock through the NTP server.

If the SCI VM is unable to access the internet for NTP updates, it must be configured with a local NTP server. Modify the chrony configuration file at `/etc/chrony.conf` with the NTP server information.

Login to the SCI VM (master and data nodes) and add the following line to the chrony configuration file.

```
server <ntp-server-ip> prefer
```

For more information about using SSH to connect to SCI, see [Secure Shell Access to SCI](#) on page 20

Installing SCI 2.0.1

In this chapter:

- [Installation Overview](#)
- [Setting Up the Virtual Machine Using VMware ESXi](#)
- [Setting Up the Virtual Machine Using AWS](#)
- [Setting Up the Nodes](#)
- [Secure Shell Access to SCI](#)

SCI 2.0.1 can be installed as a virtualized cluster using VMware's vSphere Web Client or Amazon Web Services (AWS). The cluster is made up of Master and Data nodes as virtual machines (VMs).

Installation Overview

You must install SCI 2.0.1 as a VM cluster. Setup and activate the Master nodes and Data node(s) (optional) within the cluster after installation is complete.

Ensure that you have identified an IP address for the Master and Data nodes that you are about to create (VMs).

NOTE: This document assumes that the reader has working knowledge of VMware ESXi and/or AWS.

The following steps outline the installation process:

1. Create a VM for the Master node.

For more information about how to setup the VM, see [Setting Up the Virtual Machine Using VMware ESXi](#) on page 14 or [Setting Up the Virtual Machine Using AWS](#) on page 15.

2. Create a VM for the Data node.

For more information about how to setup the VM, see [Setting Up the Virtual Machine Using VMware ESXi](#) on page 14 or [Setting Up the Virtual Machine Using AWS](#) on page 15.

After the VMs are created, an IP address must be assigned to them.

NOTE: Ensure that you indicate the IP address to VMware ESXi or the VM manager software when starting up the VM. The network stack on the running VM is automatically set to get an IP address from the DHCP server, but it expects the DHCP server to always assign it the same IP address during its lifetime.

NOTE: Ensure that the IP address is accessible to the nodes within the SCI cluster.

3. Set up the Master node.

For more information, see [Setting Up the Nodes](#) on page 17.

4. Activate the Master node.

For more information, see [Setting Up the Nodes](#) on page 17.

5. Set up the Data node.

For more information, see [Setting Up the Nodes](#) on page 17.

6. Activate the Data node.

7. Enter the login credentials to access the web UI.

You will see the Master and Data nodes you created in the **Admin > Status & Update** page.

8. Configure the controllers that you want to add to the cluster.

This completes the SCI 2.0.1 installation as a VM.

Setting Up the Virtual Machine Using VMware ESXi


VMware ESXi is an enterprise-class hypervisor used for deploying and serving virtual computers.

Follow these steps to install and configure the VM:

1. Download the VMware ESXi software and ensure that it is running on a suitable host with proper network configuration.
2. From the VMware vSphere Web Client, set up and configure the VM.

NOTE: Ensure that the VM is setup based on the hardware specifications available at [Minimum Hardware Requirements](#) on page 10.

Figure 1: VMware vSphere Web Client

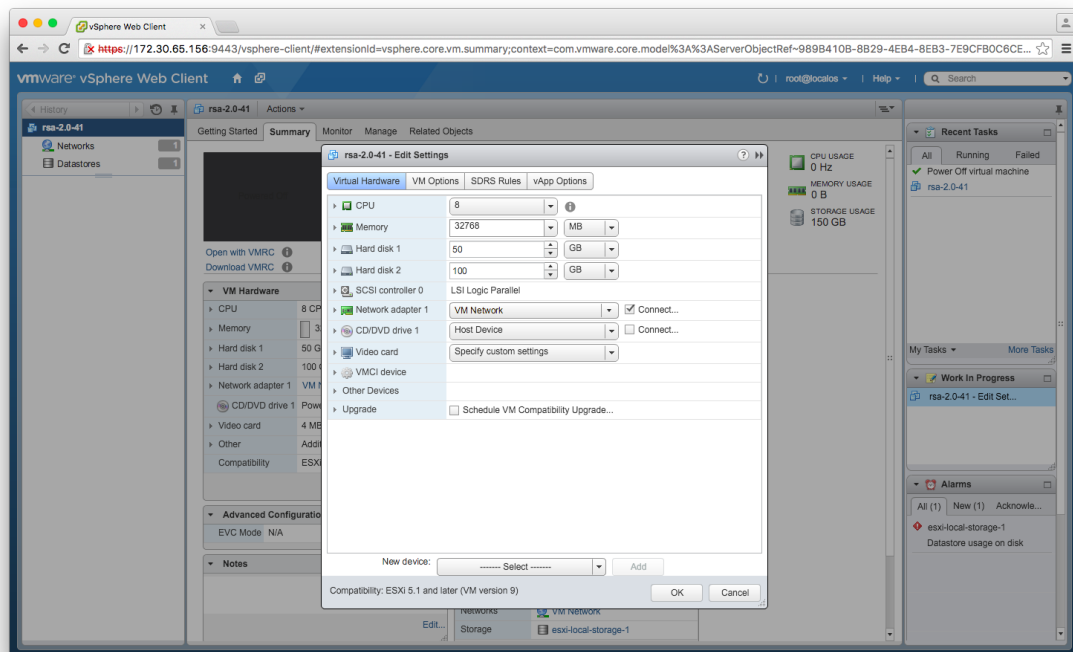

NOTE: The OVA file does not specify the minimum hardware requirements. Therefore, ensure that the hardware requirements are configured correctly.

NOTE: Ensure that the root and data volumes are set up as the **first** and **second** SCSI devices respectively, on the first SCSI controller of the VM, in order to be detected correctly.

NOTE: The network stack on the VM is automatically set to get an IP address from the DHCP server, but the VM always expects the DHCP server to assign the same IP address during its lifetime. Therefore, provision the VM with a **fixed IPv4** address. The VMware vSphere Web Client requires this information when the VM is started.

3. From the VMware vSphere Web Client, start the VM.

It could take up to 30 minutes for the VM to boot, depending on the VM resources.

You can press the **Esc** key when the VM is booting, to view the boot logs and troubleshoot failures, if any.

NOTE: You can use the same VM image to provision a Master node and Data node.

Setting Up the Virtual Machine Using AWS

Amazon Elastic Compute Cloud (Amazon EC2) is an Amazon Web Services (AWS) that allows you to create and run virtual machines in the cloud.


Contact Ruckus Wireless customer support and provide your AWS account ID, so that the company can share the SCI 2.0.1 private AMI (Amazon Machine Image) number with you. For more information regarding AWS accounts IDs, see <http://docs.aws.amazon.com/general/latest/gr/acct-identifiers.html>.

Follow these steps to install and configure the VM:

1. Based on the instructions in <http://docs.aws.amazon.com/AWSEC2/latest/UserGuide/usingsharedamis-finding.html>, find the AMI and launch a VM instance.
2. Choose the type of instance you want to create. A good example is **m4.2xlarge**.

NOTE: The AMI will be located in **US West (Oregon)**.

Figure 2: Choosing the type of instance

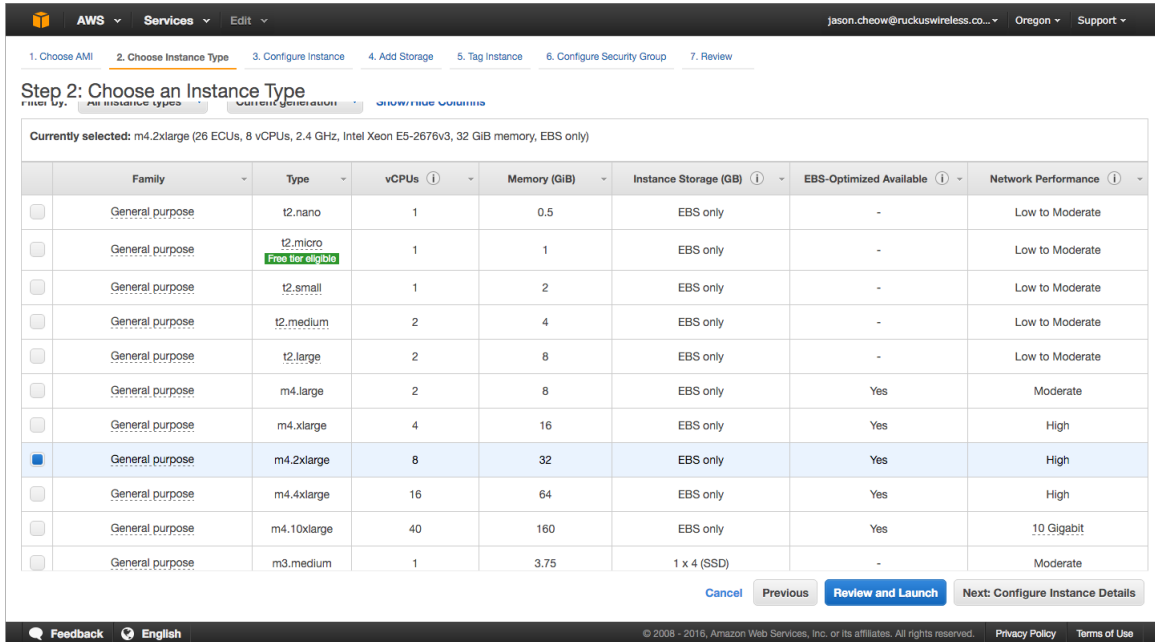


- Configure the instance you have chosen based on your requirements.
- Add storage to the instance.

Following are the minimum requirements to configure the instance:

- Hard disk 1 (Root volume): 50 GB
- Hard disk 2 (Data volume): 500 GB (choose `/dev/sdb` for **Device**).

Figure 3: Adding storage to the instance

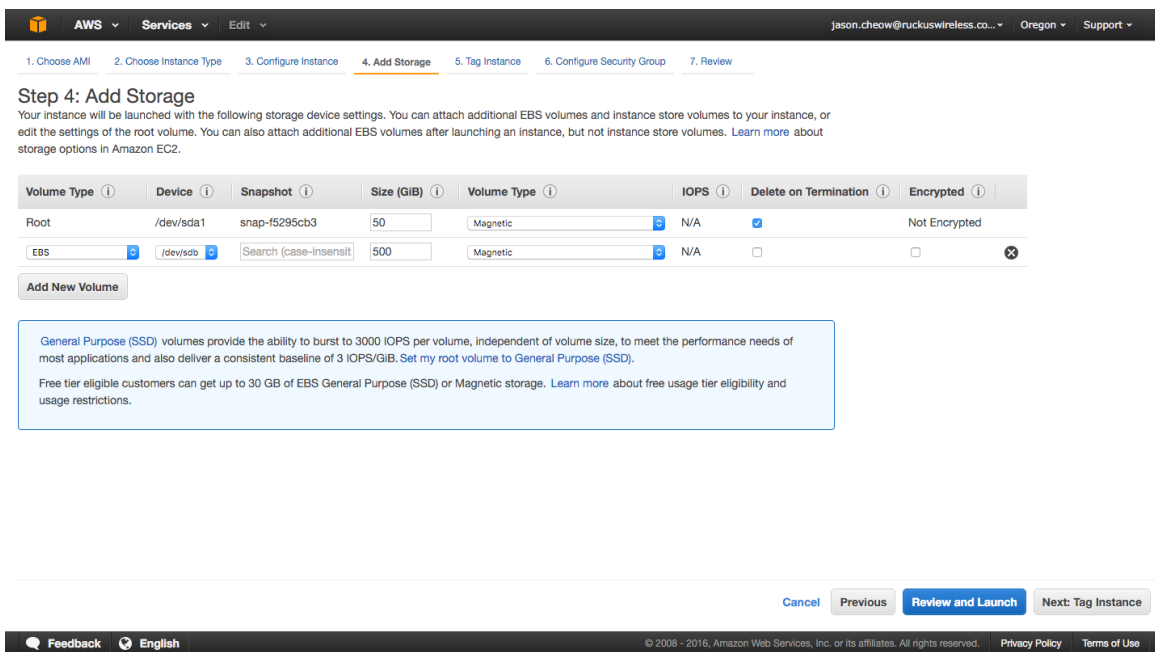

5. Tag the instance to manage it.
6. Configure the security group so that traffic to and from the instance is secure.
Review the instance and ensure all the configuration details are final.
7. Launch the instance.
It could take up to 30 minutes for the instance to boot.

You have successfully created a VM instance.

Setting Up the Nodes

You must setup the VM image created, as a Master node or a Data node so that the SCI cluster can be created.

Follow these steps to setup and activate the nodes:


1. Launch a web browser and browse to the SCI set up page (<https://<SCI IP address or domain name>>).

The **Ruckus Smart Access** page appears.

The Ruckus Smart Access portal uses a self-signed SSL certificate, so you will receive an invalid certificate warning from your browser.

2. You can either select to set up the new VM as the Master Node in a new SCI cluster, or as a new Data Node in an existing cluster.

Figure 4: Ruckus Smart Access page

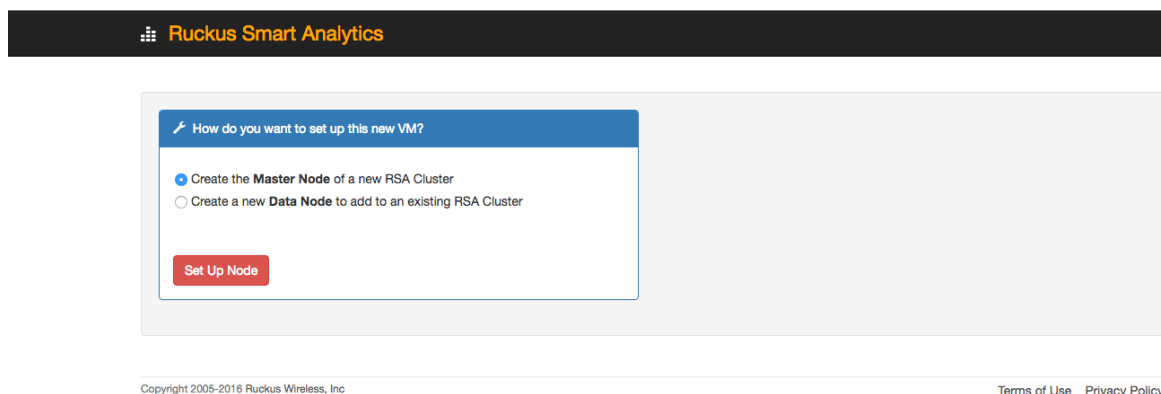

3. From Ruckus Smart Analytics, select the **Create the Master Node of a new RSA cluster** or **Create the Data Node of a new RSA cluster** as appropriate.
4. Click **Set Up Node**.

The setup process takes a few minutes. When set up is complete, an acknowledgment page appears with the Node IP and Node Token numbers.

NOTE: Remember to record the IP address and token number of the Master node as you will require this information to setup the Data node, and scale the cluster at a later time.

This information is also available in the **Admin > Status & Update** page, within the **Ruckus Smart Access** interface.

You will also need the **RSA Portal User** and **RSA Portal User Password** to log into the newly created user portal.

5. Click **Activate Master Node** or **Activate Data Node** as appropriate, to activate the nodes.

NOTE: Ensure that no ports are blocked by the firewall between all the nodes within the SCI cluster. For more information, see [Firewall Rules](#) on page 18

6. After activation is completed, the **Ruckus Smart Analytics** page appears. Login with user credentials to access the portal.

Firewall Rules

Firewall rules control incoming and outgoing data traffic between the SCI cluster and the controller interface.

The following firewall rules are observed for user access, controller access and NTP access.

Table 6: Firewall rules for User Access

	Main Portal	SSH	Cloud Updapter	Diagnostics
From	User IP	User IP	SCI Master Node IP and Data Node IPs	User IP
To	SCI Master Node IP	SCI Master Node IP and Data Node IPs	Internet (Static IP)	SCI Master Node IP
Port Number	443	22	443	53000, 55070, 58090, 58081, 58080, 59090
Protocol	HTTPS	SSH	HTTPS	HTTPS
Traffic Direction	Incoming traffic to SCI	Incoming traffic to SCI	Outgoing traffic from SCI	Incoming traffic to SCI

Table 7: Firewall rules for Controller Access

	SmartZone AP Stats (JSON)	SmartZone AVC Data	ZoneDirector Pull (XML)	ZoneDirector Push (XML) ZD 9.13 and above
From	SCI Master Node IP and Data Node IPs	SmartZone IP	ZoneDirector IP	SCI Master Node IP and Data Node IPs
To	SmartZone IP	SCI Master Node IP and Data Node IPs	SCI Master Node IP and Data Node IPs	ZoneDirector IP
Port Number	8443	1883 and 8883	443	443
Protocol	HTTPS	MQTT	HTTPS	HTTPS
Traffic Direction	Outgoing traffic from SCI	Incoming traffic to SCI	Outgoing traffic from SCI	Incoming traffic to SCI

Table 8: Firewall rules for NTP Access

	SmartZone AP Stats (JSON)
From	SCI Master Node IP and Data Node IPs
To	NTP server IP
Port Number	123
Protocol	NTP
Traffic Direction	Outgoing traffic from SCI

Web API Setup

You can setup the nodes using API calls.

You must issue the first API call to set up the VM as a Master node or Data node. The response to this call (JSON response) contains information about the node_type, node_ip and node_token.

Issue the second API call to activate the node. There is no response for this call.

NOTE: As the process of activation shuts down the Set Up web application, you may receive a HTTP read error from the curl request. Ignore this message.

Master Node

- `curl -k -H "Content-Type: application/json" -X POST -d '{"node": {"node_type": "master"}}' https://[SCI IP or domain name]/nodes`
- `curl -ks -X PUT https://[SCI IP or domain name]/nodes/master/activate`

Data Node

- curl -k -H "Content-Type: application/json" -X POST -d '{"node": {"node_type": "data", "data_node_master_ip": "[Cluster's Master Node IP]", "data_node_master_token": "[Cluster's Master Node Token]", "data_node_master_timeout": [Cluster's Master Node Verification Time Out (optional; as integer value in seconds)]}' https://[SCI IP or domain name]/nodes
- curl -k -X PUT https://[SCI IP or domain name]/nodes/data/activate

Secure Shell Access to SCI

You can use Secure Shell (SSH) to login to a node.

Follow these steps to use SSH to configure the node (VM):

1. Open the VM console.

The IP address and token number of the node are displayed.

This information is also available in the **Admin > Status & Update** page, within the **Ruckus Smart Access** interface.

2. Using SSH, login to the node with your user name and password.

The node is now accessible and you can make the necessary configuration changes.

Figure 5: Sample SSH screen

```
CentOS Linux 7 (Core)
Kernel 3.10.0-327.10.1.el7.x86_64 on an x86_64

Welcome to Ruckus Smart Analytics

Host IP Address: 172.30.65.184
Host Token      : 9902016269

If this is a newly provisioned VM, go to http://172.30.65.184/ for initial set up options.

localhost login:
```

Configuring SCI

3

In this chapter:

- [Configuring SMTP](#)
- [Managing Controllers](#)

After the nodes in the SCI cluster are setup and activated, SCI must be configured. You must add controllers for SCI to monitor and collect data. The SCI dashboard is populated with reports and trends after the controllers are added.

Configuring SMTP


You can configure the SMTP mail server to receive scheduled reports from SCI by e-mail.

Configuring the SMTP server is optional. If you do not configure the SMTP server, you will not receive any scheduled reports.

1. From the SCI dashboard, click **Admin** > **Settings**.

The **Settings** page appears with options to configure the SMTP settings.

Figure 6: SMTP configuration

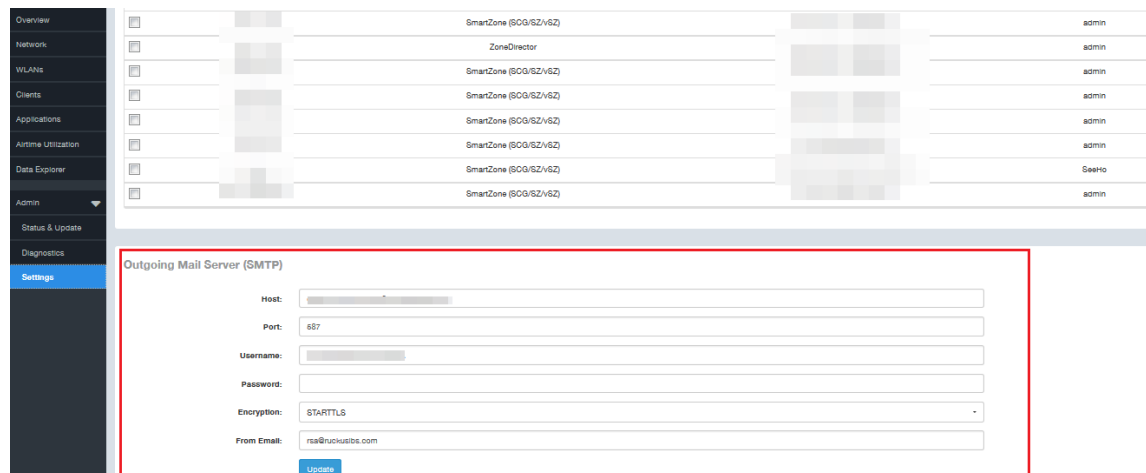

2. Configure the following information:

- Host: type the name/IP address of the host
- Port: type the port number
- Username: type the user name to access the SMTP mail server
- Password: type the password to access the SMTP mail server
- Encryption: from the drop-down menu, select **Enable** to encrypt the e-mail, and **Disable** if you do not want to encrypt the e-mail.

- From Email: type the e-mail address from which the e-mail is to be sent

3. Click Update.

The SMTP configuration is updated.

Managing Controllers


You must add controllers to SCI to monitor and manage them. SCI analyzes data from the controller and provides information about the WiFi network performance.

Follow these steps to add a controller:

1. From the SCI dashboard, click Admin > Settings.

The **Settings** page appears with options to manage controllers.

Figure 7: Adding and deleting controllers

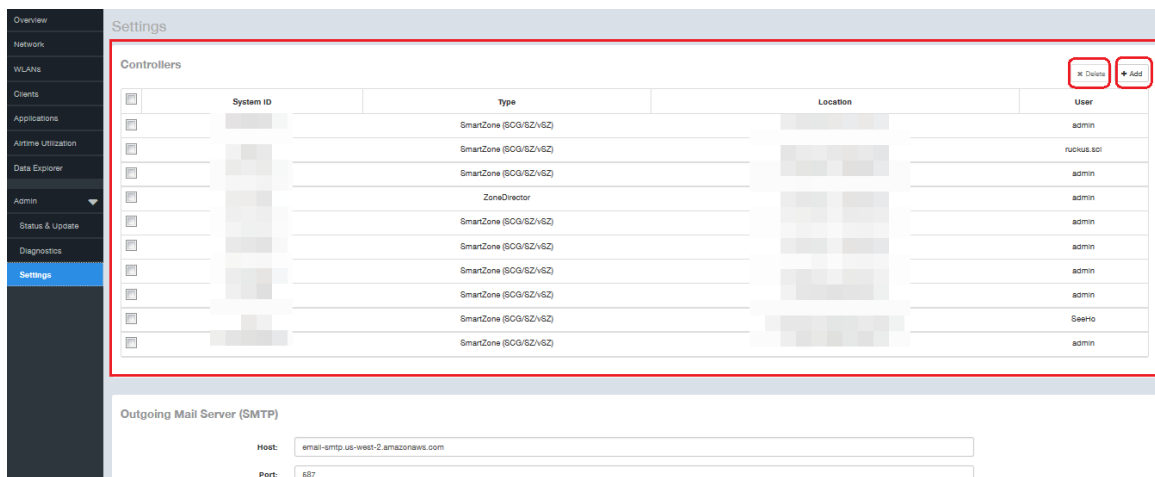

2. In Controllers, click Add.

The **New Controller** dialog box appears.

Figure 8: New controller information

The screenshot shows a 'New Controller' dialog box. It has a title bar with the text 'New Controller' and a close button 'x'. Below the title bar are five input fields: 'System ID' (empty text box), 'Type' (dropdown menu with 'ZoneDirector' selected), 'Location' (text box with 'scheme://host:port'), 'Username' (empty text box), and 'Password' (empty text box). At the bottom right of the dialog are two buttons: 'Create' (blue) and 'Cancel' (white with grey border).

3. Provide the following information:

- System ID: type the name of the controller you want to add to SCI

NOTE: The controller name should be unique and cannot be changed.

- Type: select the controller type from the drop-down menu
- Location: type the IP address of the controller
- Username: type the username to access the controller
- Password: type the password to access the controller

NOTE: The username and password must be created in the controller.

4. Click **Create**.

The new controller is listed under the **Controllers** section of the **Settings** page, and a confirmation message is displayed.

Figure 9: New controller is added

Controllers ✕ Delete + Add

Controller created

<input type="checkbox"/>	System ID	Type	Location	User
<input type="checkbox"/>	Controller 0	SmartZone (SCG/SZ/V/SZ)	https://1.1.1.0:8443	admin
<input type="checkbox"/>	Controller 1	SmartZone (SCG/SZ/V/SZ)	https://1.1.1.1:8443	admin
<input type="checkbox"/>	Controller 2	SmartZone (SCG/SZ/V/SZ)	https://1.1.1.2:8443	admin

You have successfully added a controller for SCI to monitor.

You can delete a controller by selecting it from the **Controllers** section, and clicking **Delete**.

NOTE: The delete operation is irreversible. However, the controller with the same details can be added again.

Deleting a controller does not remove its data from the reports.

Editing Controllers

You can modify information about a controller that you have already added to SCI.

NOTE: You cannot modify the name (System ID) of the controller once it is created.

Follow these steps to edit the controller's information:

1. From the SCI dashboard, click **Admin > Settings**.

The **Settings** page appears.

2. Identify the controller that you want to edit, and select the appropriate check-box as shown.

Figure 10: Selecting the controller

Ruckus
SmartCell Insight (2.0)

Settings


Controllers ✕ Delete + Add

<input type="checkbox"/>	System ID	Type	Location	User
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	ruckus.sci
<input checked="" type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	ZoneDirector	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin
<input type="checkbox"/>	[blurred]	SmartZone (SCG/SZ/V/SZ)	https://[blurred]	admin

3. Click the controller row.

A dialogue box appears with controller information you can modify, as shown. Make necessary changes.

Figure 11: Editing controller information

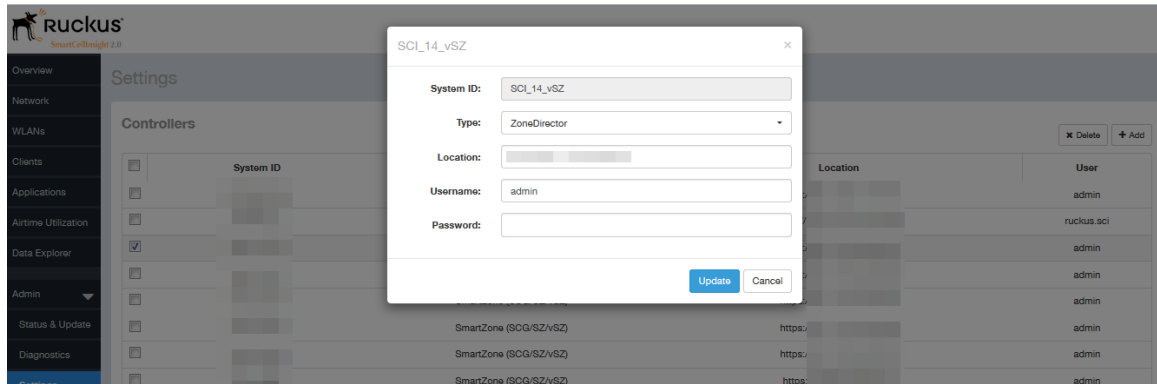

4. Click Update.

You have successfully edited the controller's information.

4

Configuring the Controller

In this chapter:

- [Configuring Controllers from the Web UI](#)

To understand the performance trends of a controller, you must add the controller to SCI and configure its SCI settings to monitor it.

Configuring Controllers from the Web UI


After a controller is added to the SCI cluster for monitoring, you must configure the SCI settings of the controller from the controller's web UI.

An example to manage the SCI settings for the Virtual SmartZone-Essentials (vSZ-E) controller, version 3.4, is shown. Follow these steps to modify the SCI settings from the vSZ-E web UI:

1. In the vSZ-E web UI, click **Configuration > System > SCI Setting**.

The **SCI Setting** page appears.

Figure 12: SCI Settings page

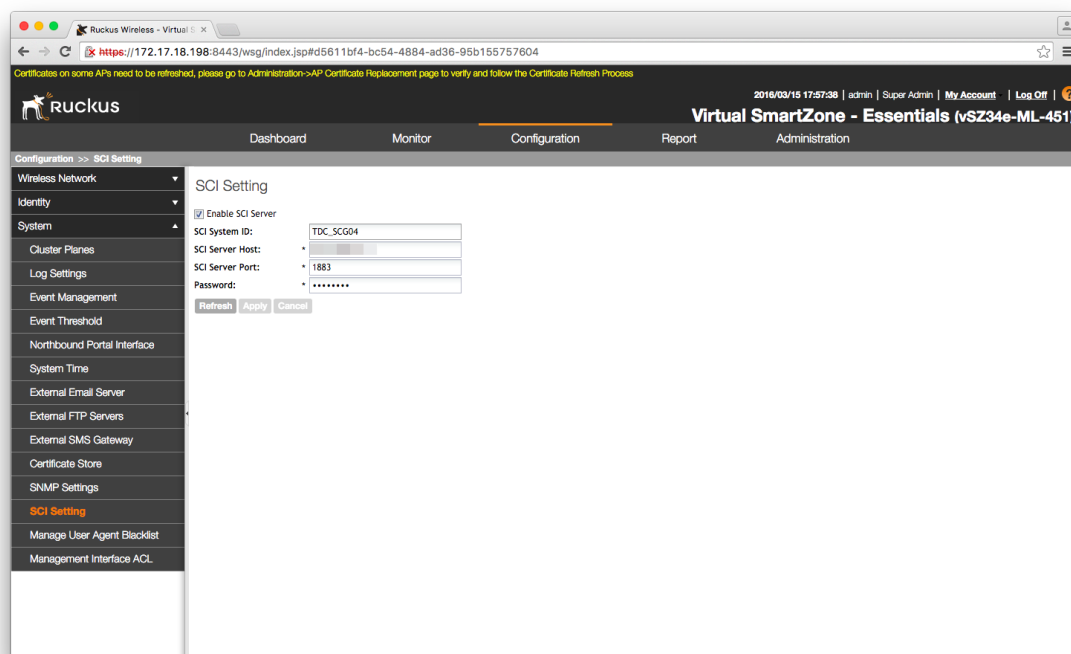

2. Select the **Enable SCI Server** check-box.
3. Configure the following SCI settings:

- SCI System ID: type the unique name that was given while adding the controller.
- SCI Server Host: type the SCI IP address or the domain name
- SCI Server Port: set to 1883
- Password: enter the password to access the SCI server

You have completed configuring the SCI server settings on the controller.

NOTE: The Master and Data node IP addresses must be *white-listed* on the controller for SCI to *pull* data from the controllers.

5

Managing Licenses

In this chapter:

- [Trial License](#)
- [Upgrading to the SCI License](#)

SCI 2.0.1 supports a trial license which you can use to familiarize with the product, and also supports a permanent SCI license.

Trial License

SCI 2.0.1 is provided with a built-in trial license. You can upgrade to the SCI license before the trial period ends.

The trial license:

- Is valid only for 90 days
- Does not limit the number of controllers or APs supported by SCI
- Must be upgraded to a SCI license within the validity period of the trial license
- Does not allow you to view reports after the validity period ends

Upgrading to the SCI License

After using SCI 2.0.1 with the trial license, make sure that you upgrade to the permanent SCI license in order to benefit from the product.

Follow these steps to upgrade to the SCI license:

1. In the SCI 2.0.1 web UI, click **Admin > License**.

The **License** page appears.

Figure 13: License page

The screenshot shows the Ruckus SmartCell Insight web interface. At the top left is the Ruckus logo. A yellow banner at the top center reads "Please contact our support team to purchase license." The user is logged in as "admin". The left sidebar contains navigation options: Overview, Network, WLANs, Clients, Applications, Airtime Utilization, Data Explorer, Admin, Status & Update, Diagnostics, Settings, and License (which is highlighted). The main content area is titled "License" and contains a table with the following data:

Feature	Start	Expiration	Notice
INSTANCE-SCI-TRIAL	Jul 19 2016 15:59	Oct 17 2016 15:59	Limited time trial license. Please contact our support team to purchase license.
-	Jul 19 2016 18:00	Perpetual License	-
-	Jul 19 2016 18:00	Perpetual License	-

Below the table is the "Upload License" section, which includes:

- Serial Number: 1234567890MAIT
- File: Click here to select a file
- Upload button

2. Use the Serial Number shown here to activate your license.
3. Click **File**, to upload the license file that you have downloaded from the Ruckus Support website.
4. Click **Upload**.

NOTE:

The number of AP licenses uploaded should at least be equal to, or more than the total number of active APs connected to the controllers which are configured in SCI.

Index

A

accurate statistics [12](#)
adding controllers [22](#)
Amazon EC2 [15](#)
AWS [15](#)

C

controller configuration [26](#)
copyright information [4](#)
correct time [12](#)

D

data node guidelines [11](#)
deleting controllers [22](#)
dhcp [11](#)

E

editing controllers [24](#)

F

firewall rules [18](#)

H

hardware requirements [10](#)

I

installation overview [13](#)
installation prerequisites [10](#)

L

legal [4](#)

N

ntp [12](#)

S

sci configuration [21](#)
sci license [28](#)
setup data node [17](#)
setup master node [17](#)
setup sci cluster [17](#)
smtp [21](#)
software requirements [11](#)
ssh [20](#)
storage requirements [11](#)

T

trademarks [4](#)
trial license [28](#)

V

VMware ESXi [14](#)

W

web api [19](#)
web ui [26](#)