

OAW-AP220 Series Wireless Access Point

Installation Guide

The Alcatel-Lucent OAW-AP224 and OAW-AP225 wireless access points support the IEEE 802.11ac standard for high-performance WLAN. This access point uses MIMO (Multiple-in, Multiple-out) technology and other high-throughput mode techniques to deliver high-performance, 802.11n 2.4 GHz and 802.11ac 5 GHz functionality while simultaneously supporting existing legacy wireless services. The OAW-AP220 Series access point works only in conjunction with an Alcatel-Lucent Switch.

The Alcatel-Lucent OAW-AP220 Series access point provides the following capabilities:

- Wireless transceiver
- Protocol-independent networking functionality
- IEEE 802.11a/b/g/n/ac operation as a wireless access point
- IEEE 802.11a/b/g/n/ac operation as a wireless air monitor
- Compatibility with IEEE 802.3at PoE+ and 802.3af PoE
- Central management configuration and upgrades with an Alcatel-Lucent Switch



The OAW-AP220 Series requires AOS-W 6.3.0.0 or later.

Package Contents


- OAW-AP224 or OAW-AP225 access point
- 9/16" and 15/16" Ceiling Rail Adapters
- Installation guide (this document)



Inform your supplier if there are any incorrect, missing, or damaged parts. If possible, retain the carton, including the original packing materials. Use these materials to repack and return the unit to the supplier if needed.

OAW-AP220 Series Hardware Overview

Figure 1 LEDs

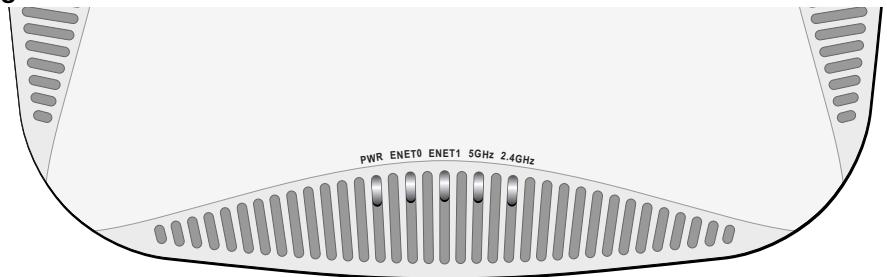

LEDs

The OAW-AP220 Series is equipped with five LEDs that indicate the status of the various components of the AP.

Table 1 OAW-AP220 Series LED Meanings

LED	Color/State	Meaning
PWR	Off	No power to AP
	Red	Initial power-up
	Green - Flashing	AP booting
	Green - Steady	AP ready
ENET0, ENET1	Off	Ethernet link unavailable
	Amber - Steady	10/100Mbps Ethernet link established
	Green - Steady	1000Mbps Ethernet link established
	Flashing	Ethernet link activity
5GHz	Off	5GHz radio disabled
	Amber - Steady	5Ghz radio enabled in non-HT WLAN mode
	Green - Steady	5Ghz radio enabled in HT WLAN mode
	Flashing - Green	5Ghz Air or Spectrum Monitor
2.4GHz	Off	2.4GHz radio disabled
	Amber - Steady	2.4Ghz radio enabled in non-HT WLAN mode
	Green - Steady	2.4Ghz radio enabled in HT WLAN mode
	Flashing - Green	2.4Ghz Air or Spectrum Monitor

External Antenna Connectors

The OAW-AP224 is equipped with three external antenna connectors. The connectors are labeled ANT0, ANT1, and ANT2, and correspond to radio chains 0, 1, and 2.

Figure 2 External Antenna Connectors (OAW-AP224 only)


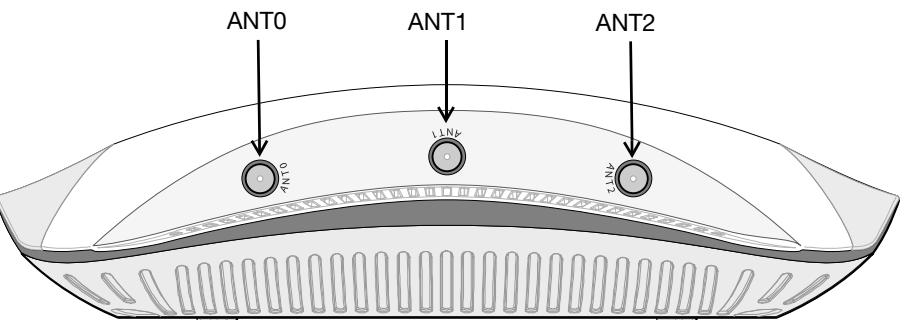


Figure 3 Bottom Panel

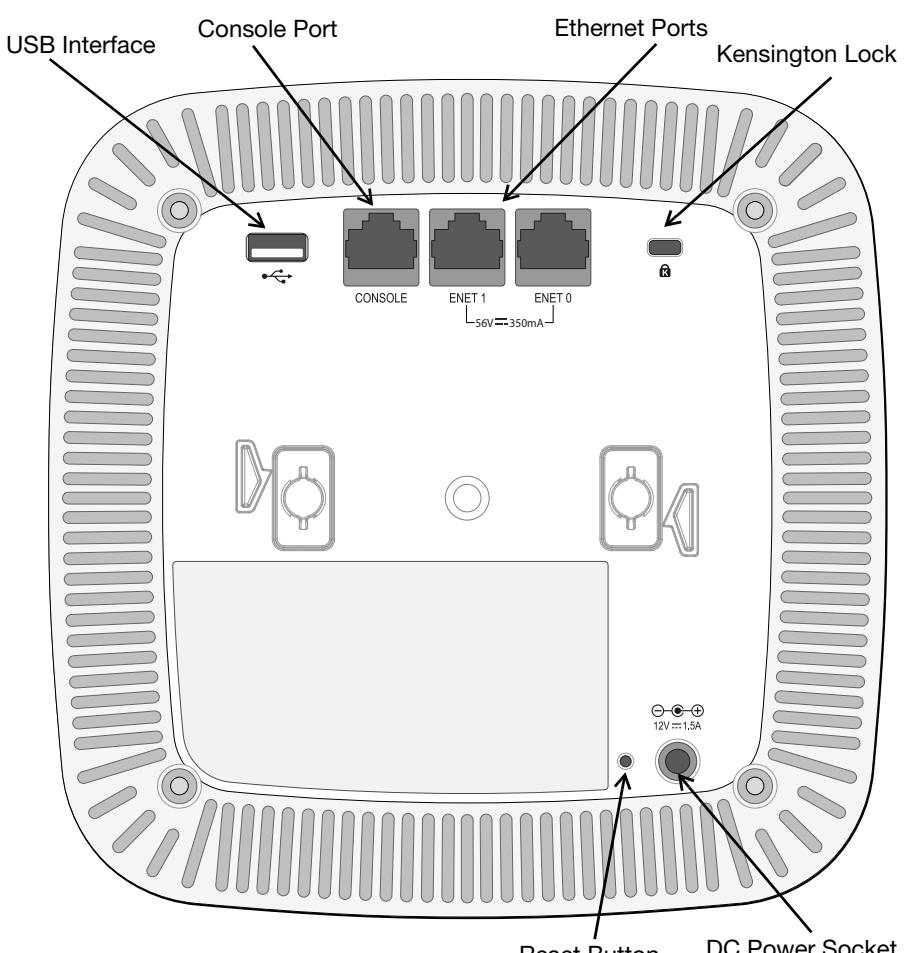

USB Interface


The OAW-AP220 Series is equipped with a USB interface for connectivity with cellular modems.

The USB interface is disabled when the OAW-AP220 Series is powered from 802.3af PoE.

Console Port

The serial console port allows you to connect the AP to a serial terminal or a laptop for direct local management. This port is an RJ-45 female connector with the pinouts described in Figure 4. Connect it directly to a terminal or terminal server using an Ethernet cable.

Figure 4 Serial Port Pin-Out

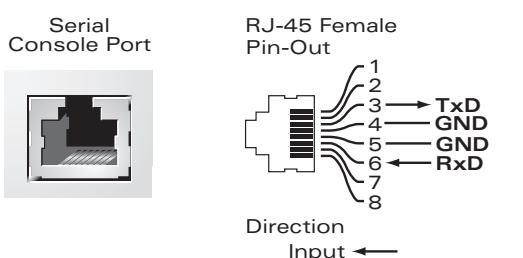

Ethernet Ports

OAW-AP220 Series is equipped with two 10/100/1000Base-T (RJ-45) auto-sensing MDI/MDX wired-network connectivity ports. These ports support IEEE 802.3af and 802.3at Power over Ethernet (PoE) compliance, accepting 56VDC as a

standard defined Powered Device (PD) from a Power Sourcing Equipment (PSE) such as a PoE midspan injector, or network infrastructure that supports PoE.



When operating on 802.3af, only the port connected to power is usable. For example, if the source of power is connected to ENET 0, ENET 1 will not work.

The 10/100/1000 Mbps Ethernet ports are on the bottom of the AP. These ports have RJ-45 female connectors with the pin-outs shown in Figure 5.

Figure 5 Gigabit Ethernet Port Pin-Out

1000Base-T Gigabit Ethernet Port	RJ-45 Female Pin-Out	Signal Name	Function
	1	BI_DA+	Bi-directional pair +A, POE Negative
	2	BI_DA-	Bi-directional pair -A, POE Negative
	3	BI_DB+	Bi-directional pair +B, POE Positive
	4	BI_DB-	Bi-directional pair -B, POE Positive
	5	BI_DC+	Bi-directional pair +C, POE Positive
	6	BI_DC-	Bi-directional pair -C, POE Positive
	7	BI_DD+	Bi-directional pair +D, POE Negative
	8	BI_DD-	Bi-directional pair -D, POE Negative

Kensington Lock Slot

The OAW-AP220 Series is equipped with a Kensington security slot for additional security.

Reset Button

The reset button can be used to return the AP to factory default settings. To reset the AP:

1. Power off the AP.
2. Press and hold the reset button using a small, narrow object, such as a paperclip.
3. Power-on the AP without releasing the reset button. The power LED will flash within 5 seconds.
4. Release the reset button.

The power LED will flash again within 15 seconds indicating that the reset is completed. The AP will now continue to boot with the factory default settings.

DC Power Socket

If PoE is not available, an optional Alcatel-Lucent AP AC-DC adapter kit (sold separately) can be used to power the OAW-AP220 Series.

Additionally, a locally-sourced AC-to-DC adapter (or any DC source) can be used to power this device, as long as it complies with all applicable local regulatory requirements and the DC interface meets the following specifications:

- 12 VDC (+/- 5%)/18W
- Center-positive 1.7/4.0 mm circular plug, 9.5 mm length

Before You Begin



FCC Statement: Improper termination of access points installed in the United States configured to non-US model controllers will be in violation of the FCC grant of equipment authorization. Any such willful or intentional violation may result in a requirement by the FCC for immediate termination of operation and may be subject to forfeiture (47 CFR 1.80).

EU Statement:

Lower power radio LAN product operating in 2.4 GHz and 5 GHz bands. Please refer to the AOS-W User Guide for details on restrictions.

Produit réseau local radio basse puissance opérant dans la bande fréquence 2,4 GHz et 5 GHz. Merci de vous référer au AOS-W User Guide pour les détails des restrictions.

Low Power FunkLAN Produkt, das im 2,4 GHz und im 5 GHz Band arbeitet. Weitere Informationen bezüglich Einschränkungen finden Sie im AOS-W User Guide.

Apparati Radio LAN a bassa Potenza, operanti a 2,4 GHz e 5 GHz. Fare riferimento alla AOS-W User Guide per avere informazioni dettagliate sulle restrizioni.

Pre-Installation Network Requirements

After WLAN planning is complete and the appropriate products and their placement have been determined, the Alcatel-Lucent switch(s) must be installed and initial setup performed before the Alcatel-Lucent APs are deployed.

For initial setup of the switch, refer to the AOS-W Quick Start Guide for the software version installed on your switch.

AP Pre-Installation Checklist

Before installing your OAW-AP220 Series AP, ensure that you have the following:

- CAT5e or CAT6 UTP cable of required length
- One of the following power sources:
 - IEEE 802.3at or 802.3af-compliant Power over Ethernet (PoE) source. The PoE source can be any power source equipment (PSE) switch or midspan PSE device
 - Alcatel-Lucent AP AC-DC adapter kit (sold separately)
- Alcatel-Lucent Switch provisioned on the network:
 - Layer 2/3 network connectivity to your access point
 - One of the following network services:
 - Alcatel-Lucent Discovery Protocol (ADP)
 - DNS server with an "A" record
 - DHCP Server with vendor-specific options

Summary of the Setup Process

Successful setup of an OAW-AP220 Series access point consists of five tasks, which must be performed in this order:

1. Verify pre-installation connectivity.
2. Identify the specific installation location for each AP.
3. Install each AP.
4. Verify post-installation connectivity.
5. Configure each AP.



Alcatel-Lucent, Inc., in compliance with governmental requirements, has designed the OAW-AP220 Series access points so that only authorized network administrators can change the settings. For more information about AP configuration, refer to the AOS-W Quick Start Guide and AOS-W User Guide.



Access points are radio transmission devices and as such are subject to governmental regulation. Network administrators responsible for the configuration and operation of access points must comply with local broadcast regulations. Specifically, access points must use channel assignments appropriate to the location in which the access point will be used.

Verifying Pre-Installation Connectivity

Before you install APs in a network environment, make sure that the APs are able to locate and connect to the switch after power on.

Specifically, you must verify the following conditions:

- When connected to the network, each AP is assigned a valid IP address
- APs are able to locate the switch

Refer to the AOS-W Quick Start Guide for instructions on locating and connecting to the switch.

Identifying Specific Installation Locations

You can mount the OAW-AP220 Series access point on a wall or on the ceiling. Use the AP placement map generated by Alcatel-Lucent's RF Plan software application to determine the proper installation location(s). Each location should be as close as possible to the center of the intended coverage area and should be free from obstructions or obvious sources of interference. These RF absorbers/reflectors/interference sources will impact RF propagation and should have been accounted for during the planning phase and adjusted for in RF plan.

Identifying Known RF Absorbers/Reflectors/Interference Sources

Identifying known RF absorbers, reflectors, and interference sources while in the field during the installation phase is critical. Make sure that these sources are taken into consideration when you attach an AP to its fixed location. Examples of sources that degrade RF performance include:

- Cement and brick
- Objects that contain water
- Metal
- Microwave ovens
- Wireless phones and headsets

Installing the AP



Service to all Alcatel-Lucent Networks products should be performed by trained service personnel only.

Using the Ceiling Rail Adapter


The OAW-AP220 Series ships with two ceiling rail adapters for 9/16" and 15/16" ceiling rails. Additional wall mount adapters and ceiling rail adapters for other rail styles are available as accessory kits.



Make sure the AP fits securely on the ceiling tile rail when hanging the device from the ceiling, because poor installation could cause it to fall onto people or equipment.


1. Pull the necessary cables through a prepared hole in the ceiling tile near where the AP will be placed.
2. Place the adapter against the back of the AP with the adapter at an angle of approximately 30 degrees to the tabs (see Figure 6).
3. Twist the adapter clockwise until it snaps into place in the tabs (see Figure 6).

Figure 6 Attaching the Ceiling Rail Adapter

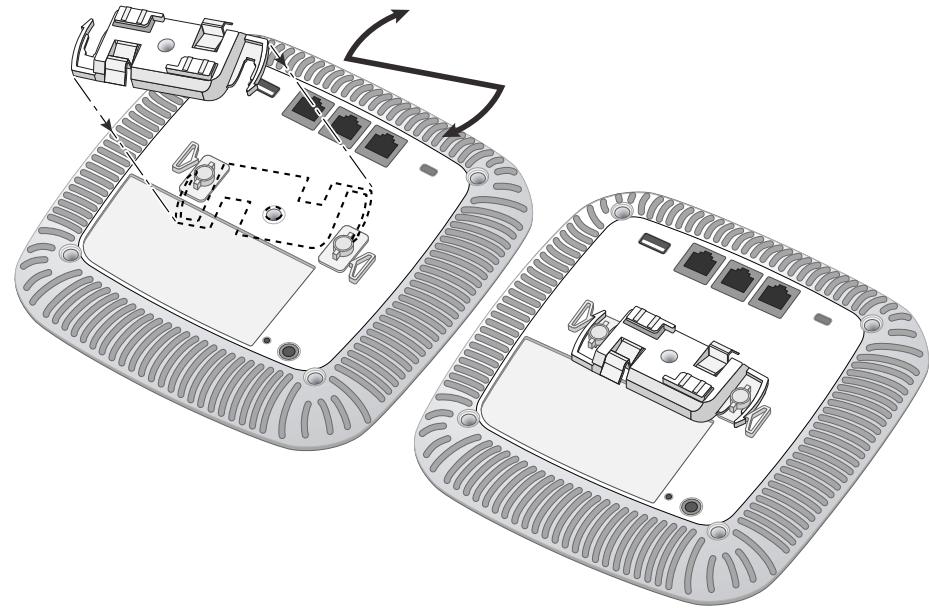

4. If necessary, connect the console cable to the console port on the back of the AP.
5. Hold the AP next to the ceiling tile rail with the ceiling tile rail mounting slots at approximately a 30-degree angle to the ceiling tile rail (see Figure 7). Make sure that any cable slack is above the ceiling tile.
6. Pushing toward the ceiling tile, rotate the AP clockwise until the device clicks into place on the ceiling tile rail.

Figure 7 Mounting the AP

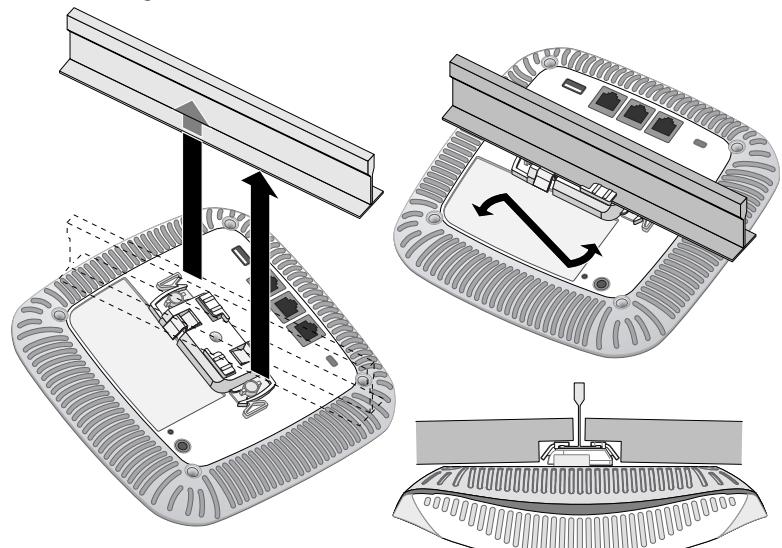

7. On the OAW-AP224, install the external antennas according to the manufacturer's instructions, and connect the antennas to the antenna interfaces on the AP.

Connecting Required Cables

Install cables in accordance with all applicable local and national regulations and practices.

Power Connection

The OAW-AP220 Series has a single 12V DC power jack socket to support powering through an AC-to-DC power adapter.



If both POE and DC power are available, the AP draws power from the PoE source.

Verifying Post-Installation Connectivity

The integrated LEDs on the AP can be used to verify that the AP is receiving power and initializing successfully (see Table 1). Refer to the *AOS-W Quick Start Guide* for further details on verifying post-installation network connectivity.

Configuring the OAW-AP220 Series

AP Provisioning/Reprovisioning

Provisioning parameters are unique to each AP. These local AP parameters are initially configured on the switch which are then pushed out to the AP and stored on the AP itself. Alcatel-Lucent recommends that provisioning settings be configured via the AOS-W Web UI only. Refer to the *AOS-W User Guide* for complete details.

AP Configuration

Configuration parameters are network or switch specific and are configured and stored on the switch. Network configuration settings are pushed out to the AP(s) but remain stored on the switch.

Configuration settings can be configured via the AOS-W Web UI, AOS-W CLI, or Alcatel MMS. Refer to their respective guides for further details: the *AOS-W User Guide* or *Alcatel-Lucent Mobility Management System User Guide*.

Figure 6 Attaching the Ceiling Rail Adapter

Product Specifications

Electrical

- Ethernet:
 - 2 x 10/100/1000Base-T auto-sensing Ethernet RJ-45 Interfaces
 - MDI/MDX
 - IEEE 802.3 (10Base-T), IEEE 802.3u (100Base-T), IEEE 802.3ab (1000Base-T)
 - Power over Ethernet (IEEE 802.3at compliant), 48V DC/350mA (see Figure 5 for pin configuration))
- Power:
 - 12 VDC power interface, supports powering through an AC-to-DC power adapter
 - POE support on Ethernet ports: 802.3at-compliant POE sourcing devices



If a power adapter other than the one provided by Alcatel-Lucent Networks is used in the US or Canada, it should be cULus (NRTL) Listed, with an output rated 12 VDC, minimum 1.25A, marked "LPS" or "Class 2," and suitable for plugging into a standard power receptacle in the US and Canada.

For additional specifications on this product, please refer to the data sheet. The data sheet can be found at <http://www.alcatel-lucent.com/enterprise>.

Proper Disposal of Alcatel-Lucent Equipment


For the most current information about Global Environmental Compliance and Alcatel-Lucent products, see our website at <http://www.alcatel-lucent.com/enterprise>.

Waste of Electrical and Electronic Equipment

Alcatel-Lucent products at end of life are subject to separate collection and treatment in the EU Member States, Norway, and Switzerland and therefore are marked with the symbol shown at the left (crossed-out wheelie bin). The treatment applied at end of life of these products in these countries shall comply with the applicable national laws of countries implementing Directive 2002/96/EC on Waste of Electrical and Electronic Equipment (WEEE).

China RoHS

Alcatel-Lucent products also comply with China environmental declaration requirements and are labeled with the "EFUP 10" label shown at the left.

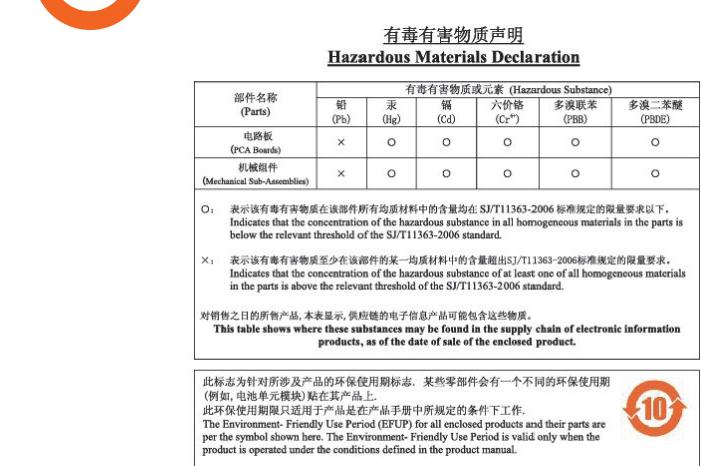

7. On the OAW-AP224, install the external antennas according to the manufacturer's instructions, and connect the antennas to the antenna interfaces on the AP.

Connecting Required Cables

Install cables in accordance with all applicable local and national regulations and practices.

Power Connection

The OAW-AP220 Series has a single 12V DC power jack socket to support powering through an AC-to-DC power adapter.



If both POE and DC power are available, the AP draws power from the PoE source.

European Union RoHS

Aruba Networks Inc., hereby, being the manufacturer of this product, declares that all CE Marked Alcatel-Lucent, Inc. wireless switch and access points products are manufactured in accordance to the provisional requirements set forth in the RoHS Directive 2011/65/EC.

A copy of the Aruba Declaration of Conformity may be obtained upon request from:

Aruba Networks International Ltd.
Building 1000,
Citygate Mahon
Cork Ireland

Please include the regulatory model number located on the product's regulatory nameplate within the request.

Safety and Regulatory Compliance

Alcatel-Lucent Networks provides a multi-language document that contains country-specific restrictions and additional safety and regulatory information for all Alcatel-Lucent access points. This document can be viewed or downloaded from the following location: <https://service.esd.alcatel-lucent.com>

Regulatory Model Names

The following regulatory model names apply to the OAW-AP220 Series:

- OAW-AP224: APIN0224
- OAW-AP225: APIN0225

FCC

The device is electronically labeled and the FCC ID will be displayed via the switch WebUI under the About menu.

RF Radiation Exposure Statement: This equipment complies with FCC RF radiation exposure limits. This equipment should be installed and operated with a minimum distance of 7.9 inches (20 cm) between the radiator and your body for 2.4 GHz and 5 GHz operations. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. When operated in the 5.15 to 5.25 GHz frequency range, this device is restricted to indoor use to reduce the potential for harmful interference with co-channel Mobile Satellite Systems.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Class B Part 15

This device complies with Part 15 of the Federal Communications Commission (FCC) Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause interference harmful to radio communications.

If this equipment does cause interference, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

Complies with the Class B limits for radio noise emissions as set out in the interference-causing equipment standard entitled "Digital Apparatus," ICES-003 of Industry Canada.

Cet appareil numerique de la classe B respecte toutes les exigences du Reglement sur le materiel brouilleur du Canada.

EU Regulatory Conformance

Alcatel-Lucent, Inc., hereby declares that this APIN0224 and APIN0225 device models are in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. CE(!)The Declaration of Conformity made under Directive 1999/5/EC is available for viewing at <https://service.esd.alcatel-lucent.com>

OAW-AP220 Series Wireless Access Point Installation Guide

Alcatel-Lucent

Contacting Alcatel-Lucent

Web Site Support

Main Site	http://www.alcatel-lucent.com/enterprise
Support Site	https://service.esd.alcatel-lucent.com
Support Email	esd.support@alcatel-lucent.com

Telephone Support

North America	1-800-995-2696
Latin America	1-877-919-9526
Europe	+33 (0) 38 855 6929
Asia Pacific	+65 6240 8484
Worldwide	1-818-878-4507

Copyright

Copyright © 2013 Alcatel-Lucent. All rights reserved. Specifications in this manual are subject to change without notice. Originated in the USA.

Trademarks

AOS-W, Alcatel 4308, Alcatel 4324, Alcatel 6000, Alcatel 41, Alcatel 60/61/65, Alcatel 70, and Alcatel 80 are trademarks of Alcatel-Lucent in the United States and certain other countries. Any other trademarks appearing in this manual are the property of their respective companies.

Legal Notice

The use of Alcatel-Lucent switching platforms and software, by all individuals or corporations, to terminate Cisco or Nortel VPN client devices constitutes complete acceptance of liability by that individual or corporation for this action and indemnifies, in full, Alcatel-Lucent from any and all legal actions that might be taken against it with respect to infringement of copyright on behalf of Cisco Systems or Nortel Networks.*

Alcatel-Lucent

www.alcatel-lucent.com
26801 West Agoura Road
Calabasas, CA 91301
OAW-AP220 Series Wireless Access Point | Installation Guide
Part Number 051144-01 | May 2013