

330 OAW-Series Access Points

Installation Guide

The Alcatel-Lucent 330 Series wireless access points (OAW-AP334, OAW-AP335, OAW-IAP334, and OAW-IAP335) support IEEE 802.11ac standards for high-performance WLAN. This device is equipped with two dual-band radios, which provide network access and monitor the network simultaneously. These access points deliver high-performance 802.11n 2.4 GHz and 802.11ac 5 GHz functionality, while also supporting 802.11a/b/g wireless services. Multi-user Multiple-in, Multiple-output (MU-MIMO) is enabled when operating in 5GHz mode for optimal performance.

The OAW-AP334 and OAW-AP335 access points work in conjunction with an Alcatel-Lucent switch, while the OAW-IAP334 and OAW-IAP335 access points can be configured using a built-in virtual switch.

The 330 Series wireless access points provides the following capabilities:

- IEEE 802.11a/b/g/n/ac wireless access point
- IEEE 802.11a/b/g/n/ac wireless air monitor
- IEEE 802.11a/b/g/n/ac spectrum analysis
- Compatible with IEEE 802.3at PoE+ power sources
- Centralized management, configuration and upgrades
- Integrated Bluetooth Low Energy (BLE) radio

Package Contents

- 330 Series access point
- 9/16" and 15/16" Ceiling Rail Adapters
- Alcatel-Lucent Regulatory Compliance and Safety Information Guide
- HPE Safety, Compliance, and Warranty Information Guide
- Alcatel-Lucent Instant Quick Start Guide (OAW-IAP334 and OAW-IAP335 only)
- Alcatel-Lucent Professional Installation Guide (OAW-IAP334 only)
- 330 OAW-Series Access Points Installation Guide (this document)



Inform your supplier if there are any incorrect, missing, or damaged parts. If possible, retain the carton, including the original packing materials. Use these materials to repack and return the unit to the supplier if needed.

Software

The OAW-AP334 and OAW-AP335 access points require Instant 6.5.0.0 or higher. For additional information, refer to the *Instant User Guide* and *Instant Quick Start Guide*.

The OAW-IAP334 and OAW-IAP335 access points require Instant 4.3.0.0 or higher. For additional information, refer to the *Instant User Guide* and *Alcatel-Lucent Instant Quick Start Guide*.


The OAW-IAP324 and OAW-IAP325 remote access points require Alcatel-Lucent Instant 4.3.0 or higher. For additional information, refer to the *Instant User Guide* and *Instant Quick Start Guide*.



Alcatel-Lucent access points are classified as radio transmission devices, and are subject to government regulations of the host country. The network administrator(s) is/are responsible for ensuring that configuration and operation of this equipment is in compliance with their country's regulations. For complete list of approved channels in your country, refer to the Downloadable Regulatory Table at <http://service.esd.alcatel-lucent.com>.

330 Series Hardware Overview

Figure 1 LEDs

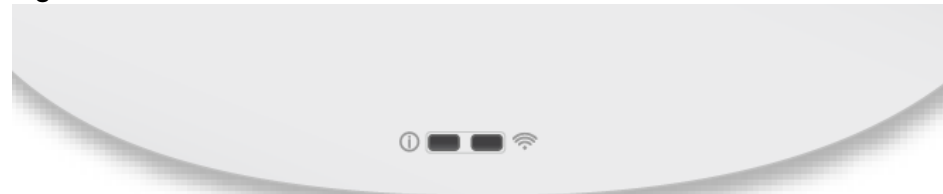

LEDs

The 330 Series access points have two LEDs that indicate the system and radio status.

The LEDs have three operating modes that can be selected in the system management software:

- Default mode: refer to Table 1
- Off mode: LEDs are off
- Blink mode: LEDs blink green

Table 1: LED Status Indicators


LED	Color/State	Meaning
System Status	Off	Device powered off
	Green- Blinking	Device booting, not ready for use
	Green- Solid	Device ready for use
	Green- Flashing**	Device operating in restricted mode. Meets one of the following conditions: <ul style="list-style-type: none"> • Uplink negotiated in sub-optimal speed (<1Gbps), or • Ethernet radio is in non High-Throughput (HT) mode
Radio Status	Red- Solid	System error condition
	Off	Device powered off; or both radios disabled
	Green- Solid	Both radios enabled in access mode
	Green- Blinking	One radio enabled in access mode; one radio disabled
	Amber- Solid	Both radios enabled in monitor mode
	Amber- Blinking	One radio enabled in access mode; one radio disabled
Alternating		<ul style="list-style-type: none"> • Green: one radio in access mode • Amber: one radio in monitor mode

* Blinking: 1s on/1s off
**Flashing: off a fraction of a second every 2s

External Antenna Connectors

The OAW-AP334 and OAW-IAP334 access points are equipped with four external antenna connectors located on the front corners of the access point (see Figure 2).

Figure 2 External Antenna Connectors

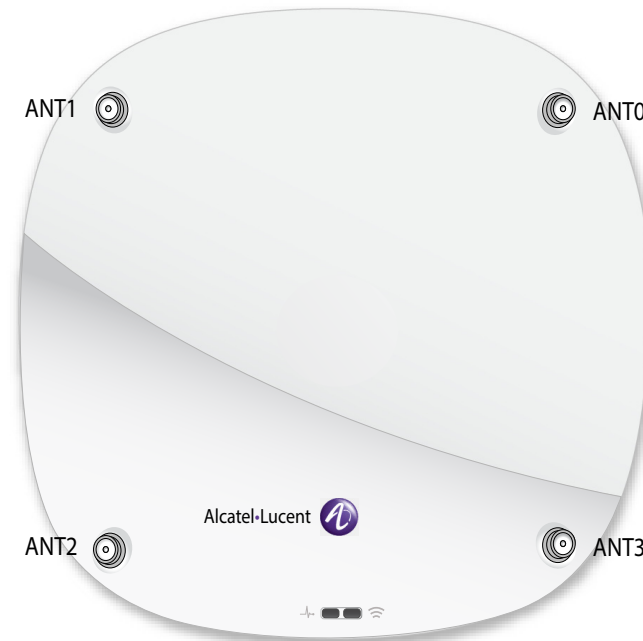

The Equivalent Isotropically Radiated Power (EIRP) levels for all external antenna devices must not exceed the regulatory limit set by the host country/domain. Installers are required to record the antenna gain for this device in the system management software.

USB Interface


The 330 Series is equipped with a USB port for connectivity with cellular modems and other USB client devices.

When powered by an 802.3at or DC power source, the USB port can supply power up to 5W/1A.

Figure 3 USB Port



Figure 4 Back Panel

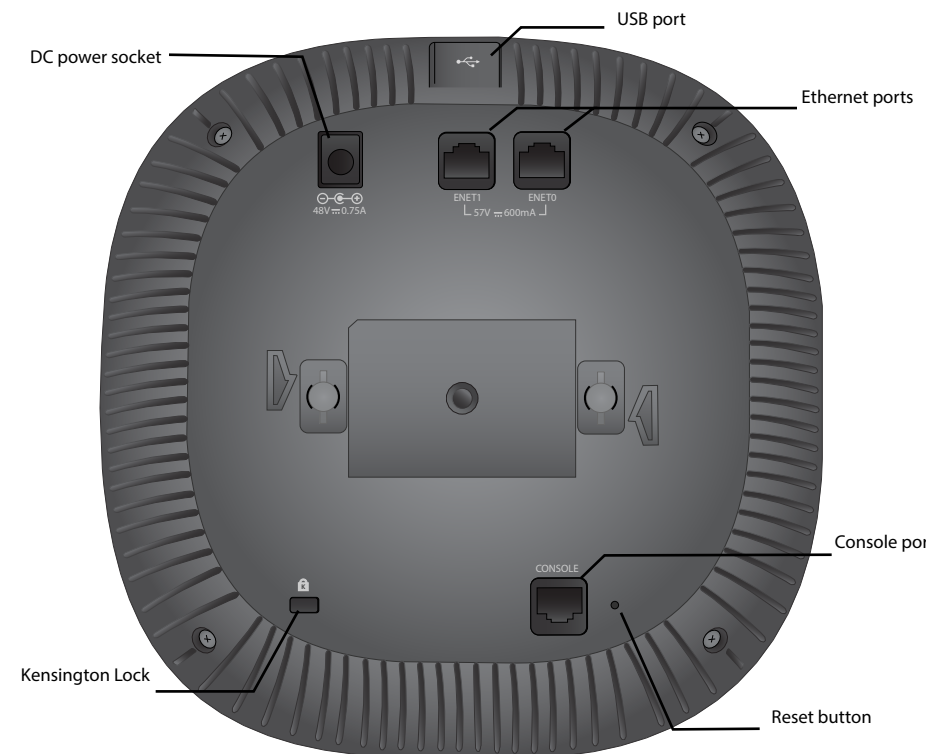

Console Port


The console port allows the user to connect the access point directly to a serial terminal or laptop for local management. Connect the device to a terminal or terminal server using an Ethernet cable.

Ethernet Ports

The back panel of the 330 Series access point is equipped with two Ethernet ports (ENET0 and ENET1) to support wired-network connectivity. These ports support IEEE 802.3at Power over Ethernet (PoE) compliant sources, accepting 56V DC (nominal) as a standard powered device (PD) from power sourcing equipment, such as a PoE midspan injector or network infrastructure that supports PoE.

- ENET0: 100/1000/2500Base-T auto-sensing MDI/MDX RJ45 port.
- ENET1: 100/1000Base-T auto-sensing MDI/MDX RJ45 port.

Figure 5 Ethernet Port Pin-Out

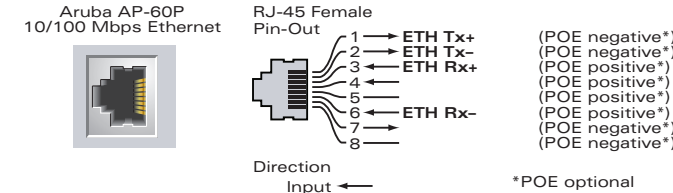

Kensington Lock Slot

The 330 Series is equipped with a Kensington lock slot for additional security, shown in Figure 4.

Reset Button

The reset button can be used to return the access point to factory default settings. To reset the access point, refer to the steps below:

1. Power off the access point.
2. Press and hold the reset button using a small, narrow object, such as a paperclip.
3. Power-on the access point without releasing the reset button. The power LED will flash within 5 seconds.
4. Release the reset button.

The power LED will flash again within 15 seconds indicating that the reset is completed. The access point will now continue to boot with the factory default settings.

Power

The ENET0 and ENET1 ports support PoE-in, allowing one port to draw power from an 802.3at source.

If PoE is not available, the access point has a single 48V/28W DC power input to support the AP-AC-48V36C AC-to-DC power adapter kit (sold separately).

When both 802.3at and DC power sources are available, the DC power source will take precedence. The access point will simultaneously draw a minimal current from the PoE source. In the event that the DC source fails, the access point will switch to the 802.3at source.

The ENET0 and ENET1 Ethernet ports support Dual-hitless Failover when both ports are connected to 802.3at separate PoE power sources. If the primary power source fails, the access point will immediately switch the secondary power source with minimal impact to operation of the device. When both ENET0 and ENET1 are wired to 802.3 PoE sources, the access point will draw power primarily from one source, while the secondary power source draws minimum current to keep the device active and is only used in the event of a failover.

Before You Begin



FCC Statement: Improper termination of access points installed in the United States configured to non-US model controllers is a violation of the FCC grant of equipment authorization. Any such willful or intentional violation may result in a requirement by the FCC for immediate termination of operation and may be subject to forfeiture (47 CFR 1.80).

EU Statement:

Lower power radio LAN product operating in 2.4 GHz and 5 GHz bands. Please refer to the Instant User Guide/Instant User Guide for details on restrictions.



Produit réseau local radio basse puissance operant dans la bande fréquence 2.4 GHz et 5 GHz. Merci de vous référer au Instant User Guide/Instant User Guide pour les détails des restrictions.

Low Power FunkLAN Produkt, das im 2.4 GHz und im 5 GHz Band arbeitet. Weitere Informationen bezüglich Einschränkungen finden Sie im Instant User Guide/Instant User Guide.

Apparati Radio LAN a bassa Potenza, operanti a 2.4 GHz e 5 GHz. Fare riferimento alla Instant User Guide/Instant User Guide per avere informazioni dettagliate sulle restrizioni.

Access Point Pre-Installation Checklist

Before installing your 330 Series access point, ensure that you have the following:

- CAT5E cable or better
- One of the following power sources:
 - IEEE 802.3at Power over Ethernet (PoE) source. The PoE source can be any power source equipment (PSE) switch or midspan PSE device
 - Alcatel-Lucent AP-AC-48V36C adapter kit (sold separately)
- Alcatel-Lucent switch provisioned on the network:
 - Layer 2/3 network connectivity to your access point
 - One of the following network services:
 - Alcatel-Lucent Discovery Protocol (ADP)
 - DNS server with an "A" record
 - DHCP Server with vendor-specific options.



Alcatel-Lucent, in compliance with governmental requirements, has designed the 330 Series access points so that only authorized network administrators can change the settings. For more information about access point configuration, refer to the Quick Start Guide and User Guide for your device.

Verifying Pre-Installation Connectivity



The instructions for this section are applicable to the OAW-AP334 and OAW-AP335 only.

Before installing access points in a network environment, make sure that they are able to locate and connect to the switch after power on.

Specifically, you must verify the following conditions:

- When connected to the network, each access point is assigned a valid IP address.
- Access points are able to locate the switch

Refer to the Quick Start Guide for instructions on locating and connecting to the switch.

Pre-Installation Network Requirements

After WLAN planning is complete and the appropriate products and their placement have been determined, the Alcatel-Lucent switch(s) must be installed and initial setup performed before the Alcatel-Lucent access points are deployed.

For initial setup of the switch, refer to the Quick Start Guide for the software version installed on your switch.

Identifying Specific Installation Locations

You can mount the 330 Series access point on a wall or on the ceiling. Use the access point placement map generated by Alcatel-Lucent's RF Plan software application to determine the proper installation location(s). Each location should be as close as possible to the center of the intended coverage area and should be free from obstructions or obvious sources of interference. These RF absorbers/reflectors/interference sources will impact RF propagation and should have been accounted for during the planning phase and adjusted for in RF plan.

Identifying Known RF Absorbers/Reflectors/Interference Sources

Identifying known RF absorbers, reflectors, and interference sources while in the field during the installation phase is critical. Make sure that these sources are taken

into consideration when you attach an access point to its fixed location. Examples of sources that degrade RF performance include:

- Cement and brick
- Objects that contain water
- Metal
- Microwave ovens
- Wireless phones and headsets

Installing the Access Point

Refer to the following steps to install your Alcatel-Lucent 330 Series access point using the AP Ceiling Rail Mount Kit (AP-220-MNT-C1).




This device must be professionally installed and serviced by a trained technician. The installer is responsible for securing the access point to the ceiling tile rail in accordance with the steps below. Failure to properly install this product may result in physical injury and/or damage to property.

Using the Ceiling Rail Adapter

The 330 Series ships with two ceiling rail adapters for 9/16" and 15/16" ceiling rails. Additional wall mount adapters and ceiling rail adapters for other rail styles are available as accessory kits.


1. Pull the necessary cables through a prepared hole in the ceiling tile near where the access point will be placed.
2. Place the adapter against the back of the access point with the adapter at an angle of approximately 30 degrees to the tabs (see Figure 6).
3. Twist the adapter clockwise until it snaps into place in the tabs (see Figure 6).

Figure 6 Attaching the Ceiling Rail Adapter

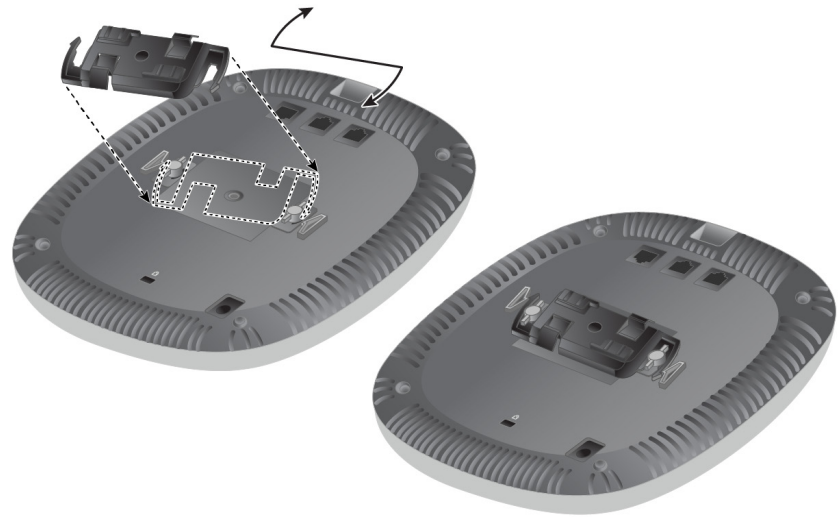

4. If necessary, connect the console cable to the console port on the back of the access point.
5. Hold the access point next to the ceiling tile rail with the ceiling tile rail mounting slots at approximately a 30-degree angle to the ceiling tile rail (see Figure 7). Make sure that any cable slack is above the ceiling tile.
6. Pushing toward the ceiling tile, rotate the access point clockwise until the device clicks into place on the ceiling tile rail.

Figure 7 Mounting the Access Point

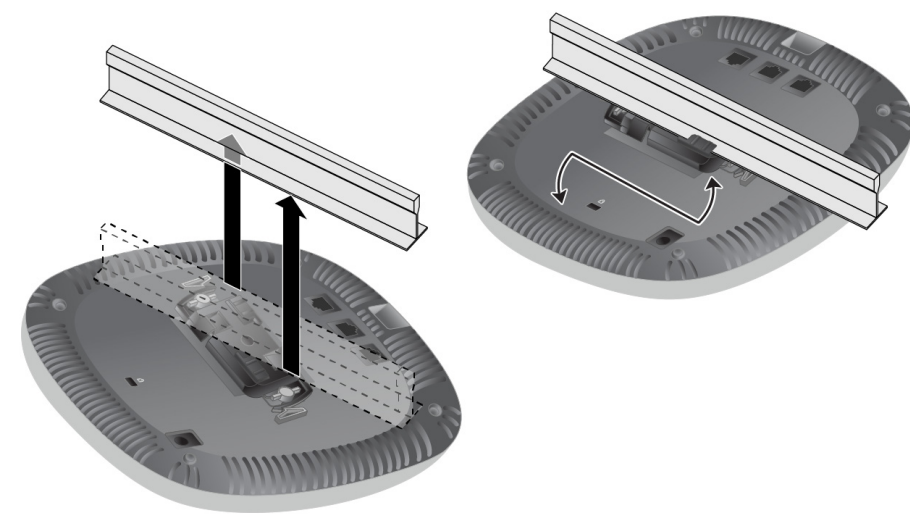

7. On the OAW-AP334 and OAW-IAP334, install the external antennas according to the manufacturer's instructions, and connect the antennas to the antenna interfaces on the access point.

Connecting Required Cables

Install cables in accordance with all applicable local and national regulations and practices.

Verifying Post-Installation Connectivity

The integrated LEDs on the access point can be used to verify that the device is receiving power and initializing successfully (see Table 1). Refer to the Quick Start Guide for further details on verifying post-installation network connectivity.

Configuring the 330 Series



The instructions for this section are applicable to the OAW-AP334 and OAW-AP335 only.

Provisioning parameters are unique to each access point. These local access point parameters are initially configured on the switch which are then pushed out to the access points and stored on the devices. Alcatel-Lucent recommends that provisioning settings be configured via the Instant Web UI only. Refer to the User Guide for complete details.

Access Point Configuration

Configuration parameters are network or switch specific and are configured and stored on the switch. Network configuration settings are pushed out to the access points, but remain stored on the switch.

Configuration settings can be configured via the Instant Web UI or Instant CLI. Refer to their respective guides for further details: the User Guide.

330 OAW-Series Access Points

Installation Guide

Alcatel-Lucent
Enterprise



Contacting Alcatel-Lucent

Web Site Support	
Main Site	http://www.alcatel-lucent.com/enterprise
Support Site	https://service.esd.alcatel-lucent.com
Support Email	esd.support@alcatel-lucent.com

Telephone Support	
North America	1-800-995-2696
Latin America	1-877-919-9526
Europe	+800 00200100 (Toll Free) or 1-650-385-2193
Asia Pacific	+65 6240 8484
Worldwide	1-818-878-4507

Copyright

Copyright © 2016 Alcatel-Lucent. All rights reserved.
Specifications in this manual are subject to change without notice.
Originated in the USA.

Trademarks

AOS-W, Alcatel 4302, Alcatel 4304, Alcatel 4306, Alcatel 4308, Alcatel 4324, Alcatel 4504, Alcatel 4604, Alcatel 4704, Alcatel 4550, Alcatel 4650, Alcatel 4750, Alcatel 6000, OAW-AP41, OAW-AP68, OAW-AP60/61/65, OAW-AP70, OAW-AP80, OAW-AP92/93, OAW-AP104/105, OAW-AP114/115, OAW-AP120/121, OAW-AP124/125, OAW-RAP155, OAW-AP175, OAW-IAP92/93, OAW-AP204/205, OAW-AP214/215, OAW-AP224/225, OAW-AP274/275, OAW-RAP2, OAW-RAP5, and Omnivista 3600 Air Manager are trademarks of Alcatel-Lucent in the United States and certain other countries.

Any other trademarks appearing in this manual are the property of their respective companies.

Legal Notice

The use of Alcatel-Lucent switching platforms and software, by all individuals or corporations, to terminate Cisco or Nortel VPN client devices constitutes complete acceptance of liability by that individual or corporation for this action and indemnifies, in full, Alcatel-Lucent from any and all legal actions that might be taken against it with respect to infringement of copyright on behalf of Cisco Systems or Nortel Networks.*

Alcatel-Lucent
Enterprise



www.alcatel-lucent.com
26801 West Agoura Road
Calabasas, CA 91301
330 OAW-Series Access Points | Installation Guide
Part Number 0511910-03 | October 2016

