

# **11N Wireless Gigabit Multi-Function Client Bridge**



## **User's Manual**

*Version: 1.0*

## Table of Contents

---

<b>1</b>	<b>INTRODUCTION</b>	<b>5</b>
1.1	FEATURES AND BENEFITS	5
1.2	PACKAGE CONTENTS	6
1.3	SAFETY GUIDELINES	7
1.4	SYSTEM REQUIREMENTS	7
1.5	APPLICATIONS	7
1.6	NETWORK CONFIGURATION	8
<b>2</b>	<b>UNDERSTANDING THE HARDWARE</b>	<b>9</b>
2.1	HARDWARE INSTALLATION	9
2.2	IP ADDRESS CONFIGURATION	9
<b>3</b>	<b>WEB CONFIGURATION</b>	<b>11</b>
3.1	LOGGING IN	11
3.2	SYSTEM	12
3.2.1	STATUS	13
3.2.2	SCHEDULE	13
3.2.3	EVENT LOG	14
3.2.4	STATISTICS	15
3.2.5	WIRELESS OPERATING MODES	16
3.2.5.1	SWITCHING BETWEEN OPERATING MODES	16
<b>3.2.5.2</b>	<b>ACCESS POINT OPERATING MODE</b>	<b>17</b>
3.2.5.2.1	STATUS	17
3.2.5.2.2	BASIC	17
3.2.5.2.3	ADVANCED	19
3.2.5.2.4	WIRELESS SECURITY MODE	20
3.2.5.2.4.1	SECURITY DISABLED	20
3.2.5.2.4.2	WEP (WIRED EQUIVALENT PRIVACY)	21
3.2.5.2.4.3	WPA (WI-FI PROTECTED ACCESS) / PRE-SHARED KEY	22
3.2.5.2.4.4	WPA RADIUS (802.1x)	23
3.2.5.2.5	WPS (WI-FI PROTECTED SETUP)	24
3.2.5.2.6	CLIENT LIST	26
3.2.5.2.7	VLAN	26
3.2.5.2.8	WMM (WIRELESS MULTIMEDIA)	26
<b>3.2.5.3</b>	<b>CLIENT BRIDGE OPERATING MODE</b>	<b>28</b>
3.2.5.3.1	STATUS	28
3.2.5.3.2	BASIC	28
3.2.5.3.3	WIRELESS SECURITY MODE	30
3.2.5.3.3.1	SECURITY DISABLED	30
3.2.5.3.3.2	WEP (WIRED EQUIVALENT PRIVACY)	30
3.2.5.3.3.3	WPA (WI-FI PROTECTED ACCESS) / PRE-SHARED KEY	32
3.2.5.3.3.4	WPA RADIUS (802.1x)	33
3.2.5.3.4	AP PROFILE	34
3.2.5.3.5	CLIENT LIST	35
3.2.5.3.6	WMM (WIRELESS MULTIMEDIA)	35
<b>3.2.5.4</b>	<b>WDS OPERATING MODE</b>	<b>37</b>
3.2.5.4.1	STATUS	37
3.2.5.4.2	BASIC	37
3.2.5.4.3	ADVANCED	39
3.2.5.4.4	WIRELESS SECURITY MODE	40
3.2.5.4.4.1	SECURITY DISABLED	40
3.2.5.4.4.2	WEP (WIRED EQUIVALENT PRIVACY)	41
3.2.5.4.4.3	WPA (WI-FI PROTECTED ACCESS) / PRE-SHARED KEY	42
3.2.5.4.4.4	WPA RADIUS (802.1x)	43
3.2.5.4.5	CLIENT LIST	44
3.2.5.4.6	WMM (WIRELESS MULTIMEDIA)	45
<b>3.2.5.5</b>	<b>REPEATER OPERATING MODE</b>	<b>45</b>

## Table of Contents

---

3.2.5.5.1	STATUS.....	46
3.2.5.5.2	BASIC.....	46
3.2.5.5.3	ADVANCED.....	47
3.2.5.5.4	WIRELESS SECURITY MODE.....	49
3.2.5.5.4.1	SECURITY DISABLED.....	49
3.2.5.5.4.2	WEP (WIRED EQUIVALENT PRIVACY).....	49
3.2.5.5.4.3	WPA (WI-FI PROTECTED ACCESS) / PRE-SHARED KEY.....	51
3.2.5.5.4.4	WPA RADIUS (802.1x).....	52
3.2.5.5.5	CLIENT LIST.....	53
3.2.5.5.6	WMM (WIRELESS MULTIMEDIA).....	53
3.3	NETWORK.....	54
3.3.1	STATUS.....	54
3.3.2	LAN / DHCP CLIENT, SERVER.....	55
3.3.3	WAN (BRIDGE/ROUTER).....	56
3.3.3.1	WAN – STATIC IP ADDRESS.....	56
3.3.3.2	WAN – DYNAMIC IP ADDRESS.....	57
3.3.3.3	WAN – PPPoE.....	58
3.3.3.4	WAN – PPTP.....	59
3.4	MANAGEMENT.....	60
3.4.1	ADMIN.....	60
3.4.2	SNMP.....	61
3.4.3	FIRMWARE UPGRADE.....	61
3.4.4	RESTORE TO FACTORY DEFAULT.....	62
3.4.5	BACKUP SETTINGS.....	63
3.4.6	RESTORE SETTINGS.....	63
3.5	TOOLS.....	64
3.5.1	TIME ZONE.....	64
3.5.2	POWER SAVING.....	65
3.5.3	DIAGNOSIS.....	65
3.5.4	RESET.....	65
<b>APPENDIX A – SPECIFICATIONS.....</b>		<b>66</b>
HARDWARE SUMMARY.....		66
RADIO SPECIFICATIONS.....		66
SOFTWARE FEATURES.....		67
MANAGEMENT.....		68
ENVIRONMENT & PHYSICAL.....		68
<b>APPENDIX B – FCC INTERFERENCE STATEMENT.....</b>		<b>69</b>
<b>INDEX.....</b>		<b>70</b>

## Revision History

---

<b>Version</b>	<b>Date</b>	<b>Notes</b>
1.0	July 12, 2008	Initial Version

# 1 Introduction

The Multi-function Gigabit Wireless-N Client Bridge is an 802.11n-draft compliant device that delivers up to 6x faster speeds than 802.11g while staying backward compatible with 802.11g and 802.11b devices.

The Wireless Client Bridge, Access Point, and Repeater/WDS built into the device uses advanced MIMO (Multi-Input, Multi-Output) technology to transmit multiple streams of data in a single wireless channel. The robust signal travels farther, maintaining wireless connections up to 3 times further than standard 802.11g, eliminates dead spots and extends network range.

To protect the data and privacy, the device can encode all wireless transmissions with 64/128-bit encryption as well as serves as your network's DHCP Server. In addition, the device also provides easy configuration through the web-browser.

The incredible speed and QoS function of 802.11n (draft2.0) makes it ideal for media-centric applications like streaming video, gaming, and VoIP telephony. It is designed to run multiple media-intense data streams through the network at the same time, with no degradation in performance.

This chapter describes the features & benefits, package contents, applications, and network configuration.

## 1.1 Features and Benefits

Features	Benefits
High Speed Data Rate Up to 300Mbps	Capable of handling heavy data payloads such as MPEG video streaming
IEEE 802.11n draft Compliant and backward compatible with 802.11b/g	Fully interoperable with IEEE 802.11b/g/n devices
IEEE 802.11b/g Compliant	Fully Interoperable with IEEE 802.11b/IEEE802.11g compliant devices
Multi-Function	Users can use different mode in various environment
Point-to-point, Point-to-multipoint Wireless Connectivity	Let users transfer data between two buildings or multiple buildings
WDS (Wireless Distributed System)	Make wireless AP and Bridge mode simultaneously as a wireless repeater
Universal Repeater	The easiest way to expand your wireless network's coverage
Support Multi-SSID function (4	Multiple SSIDs serve as multiple APs which allow

SSID) in AP mode	administrator to assign different policies for specific user groups.
WPA2/WPA/ IEEE 802.1x support	Powerful data security
802.1x Supplicant support (CB mode)	More powerful data security in Client Bridge mode
MAC address filtering in AP mode	Ensures secure network connection
User isolation support (AP mode)	Protect the private network between client users.
PPPoE function support (CR mode)	Easy to access internet via ISP service authentication
Power-over-Ethernet (IEEE802.3af)	Flexible Access Point locations and cost savings
Keep personal setting	Keep the latest setting when firmware upgrade
Support RSSI indicator bar (CB mode)	Users can select the best signal to connect with AP easily
SNMP Remote Configuration Management	Help administrators to remotely configure or manage the Access Point easily.
QoS (WMM) support	Allow administrators to control connection bandwidth and quality based on various rules.

## 1.2 Package Contents

Open the package carefully, and make sure that none of the items listed below are missing. Do not discard the packing materials, in case of return; the unit must be shipped in its original package.

- One Wireless N Multi-function Client Bridge
- One 12V/1.25A 90V~240V Power Adapter
- Three 2dBi 2.4GHz Dipole Antennas
- One CD-ROM with User's Manual
- One Quick Guide

### 1.3 Safety Guidelines

In order to reduce the risk of fire, electric shock and injury, please adhere to the following safety guidelines.

- Carefully follow the instructions in this manual; also follow all instruction labels on this device.
- Except for the power adapter supplied, this device should not be connected to any other adapters.
- Do not spill liquid of any kind on this device.
- Do not place the unit on an unstable stand or table. This unit may drop and become damaged.
- Do not expose this unit to direct sunlight.
- Do not place any hot devices close to this unit, as they may degrade or cause damage to the unit.
- Do not place any heavy objects on top of this unit.
- Do not use liquid cleaners or aerosol cleaners. Use a soft dry cloth for cleaning.

### 1.4 System Requirements

The following are the minimum system requirements in order to configure the device.

- PC/AT compatible computer with a Ethernet interface.
- Operating system that supports HTTP web-browser

### 1.5 Applications

The wireless LAN products are easy to install and highly efficient. The following list describes some of the many applications made possible through the power and flexibility of wireless LANs:

- a) **Difficult-to-wire environments**  
There are many situations where wires cannot be laid easily. Historic buildings, older buildings, open areas and across busy streets make the installation of LANs either impossible or very expensive.
- b) **Temporary workgroups**  
Consider situations in parks, athletic arenas, exhibition centers, disaster-recovery, temporary offices and construction sites where one wants a temporary WLAN established and removed.
- c) **The ability to access real-time information**  
Doctors/nurses, point-of-sale employees, and warehouse workers can access real-time information while dealing with patients, serving customers and processing information.
- d) **Frequently changed environments**  
Show rooms, meeting rooms, retail stores, and manufacturing sites where frequently rearrange the workplace.
- e) **Small Office and Home Office (SOHO) networks**  
SOHO users need a cost-effective, easy and quick installation of a small network.
- f) **Wireless extensions to Ethernet networks**

Network managers in dynamic environments can minimize the overhead caused by moves, extensions to networks, and other changes with wireless LANs.

**g) Wired LAN backup**

Network managers implement wireless LANs to provide backup for mission-critical applications running on wired networks.

**h) Training/Educational facilities**

Training sites at corporations and students at universities use wireless connectivity to ease access to information, information exchanges, and learning.


## 1.6 Network Configuration

To better understand how the wireless LAN products work together to create a wireless network, it might be helpful to depict a few of the possible wireless LAN PC card network configurations. The wireless LAN products can be configured as:

- a) Ad-hoc (or peer-to-peer) for departmental or SOHO LANs.
- b) Infrastructure for enterprise LANs.


**a) Ad-hoc (peer-to-peer) Mode**

This is the simplest network configuration with several computers equipped with the PC Cards that form a wireless network whenever they are within range of one another. In ad-hoc mode, each client is peer-to-peer, would only have access to the resources of the other client and does not require an access point. This is the easiest and least expensive way for the SOHO to set up a wireless network. The image depicts a network in ad-hoc mode.

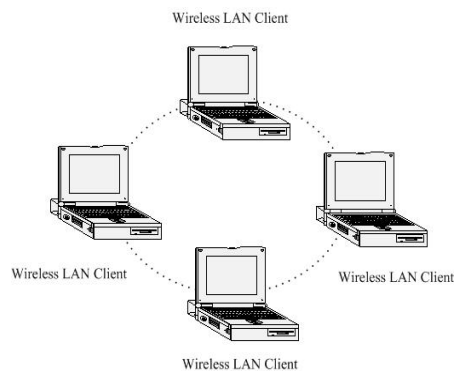

**b) Infrastructure Mode**

The infrastructure mode requires the use of an access point (AP). In this mode, all wireless communication between two computers has to be via the AP. It doesn't matter if the AP is stand-alone or wired to an Ethernet network. If used in stand-alone, the AP can extend the range of independent wireless LANs by acting as a repeater, which effectively doubles the distance between wireless stations. The image below depicts a network in infrastructure mode.

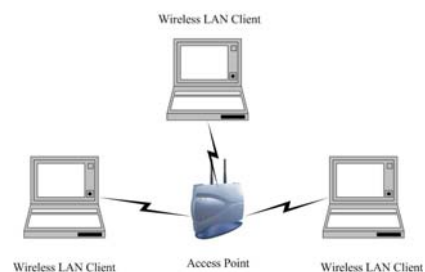




## 2 Understanding the Hardware

### 2.1 Hardware Installation

1. Place the unit in an appropriate location after conducting a site survey.
2. Plug one end of the Ethernet cable into the LAN port of the device and another end into your PC/Notebook.
3. Plug one end of another Ethernet cable to WAN port of the device and the other end into you cable/DSL modem (Internet)
4. Insert the DC-inlet of the power adapter into the port labeled “DC-IN” and the other end into the power socket on the wall.


This diagram depicts the hardware configuration

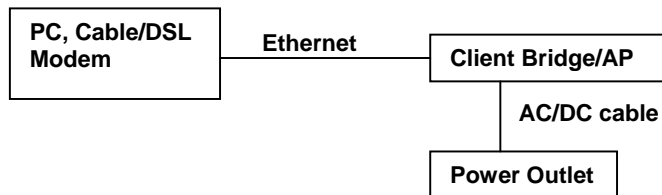


### 2.2 IP Address Configuration

This device can be configured as a Bridge/Router or Access Point. The default IP address of the device is **192.168.0.1** In order to log into this device, you must first configure the TCP/IP settings of your PC/Notebook.

1. In the control panel, double click Network Connections and then double click on the connection of your Network Interface Card (NIC). You will then see the following screen.

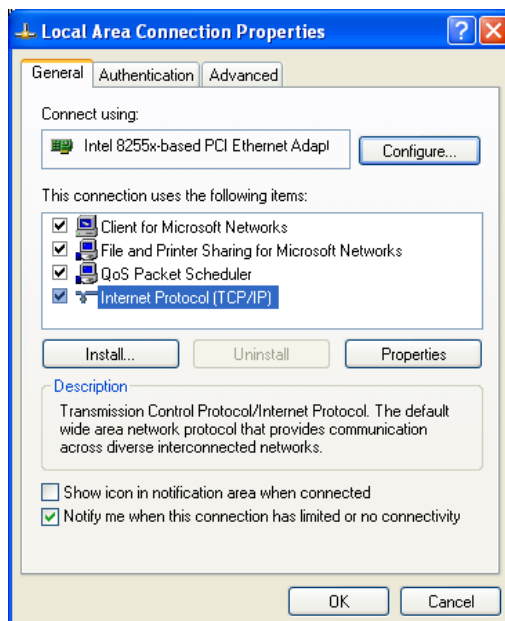

2. Select **Internet Protocol (TCP/IP)** and then click on the **Properties** button. This will allow you to configure the TCP/IP settings of your PC/Notebook.

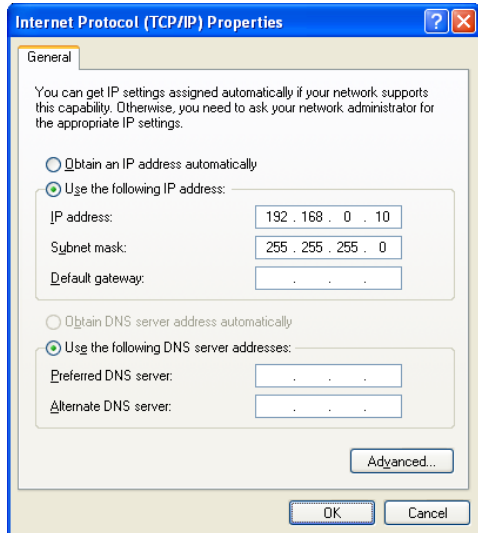


3. Select **Use the following IP Address** radio button and then enter the IP address and subnet mask. You may follow the example below. Please Ensure that the IP address and subnet mask are on the same subnet as the device.  
For Example:            Device IP address: 192.168.0.1(this is confusing; remove it)  
                              PC IP address: 192.168.0.10  
                              PC subnet mask: 255.255.255.0
4. Click on the **OK** button to close this window, and once again to close LAN properties window.

## 3 Web Configuration

### 3.1 Logging In

- To configure the device through the web-browser, enter the IP address of the Bridge (default: **192.168.0.1**) into the address bar of the web-browser and press **Enter**.
- Make sure that the device and your computers are configured on the same subnet. Refer to **Chapter 2** in order to configure the IP address of your computer.
- After connecting to the IP address, the web-browser will display the login page.
- Enter **admin** for both the user name and password.

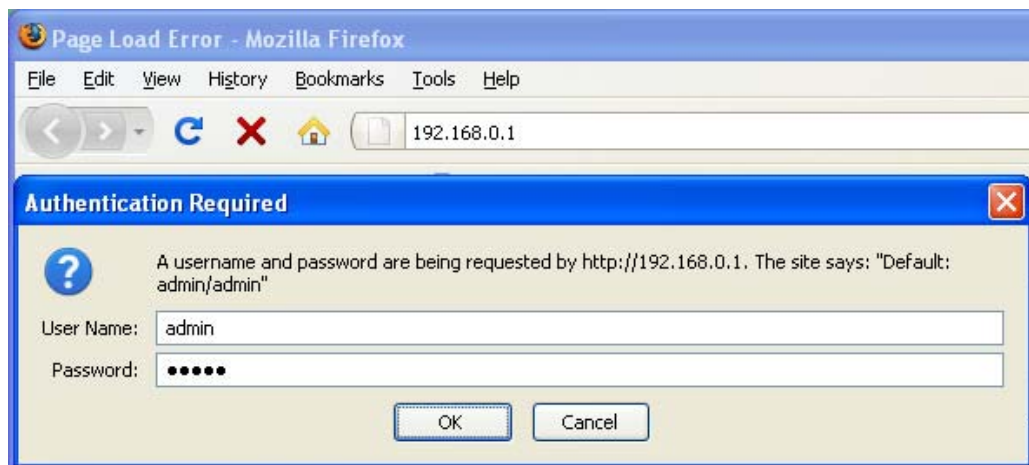

- After logging in you will see the graphical user interface (GUI) of the device. The navigation drop-down menu on left is divided into five main sections:
  1. **System:** This menu includes the status, schedule, event log, and monitor.
  2. **Wireless:** This menu includes status, basic, advanced, security, WPS, Client list, VLAN, and WMM. Through this section, you can also change the device operating mode, such as Access Point, Client Bridge, WDS, or repeater.
  3. **Network:** This menu includes status, LAN, and WAN. .
  4. **Management:** This menu includes the admin setup, SNMP, firmware upgrade, and save/restore backup.
  5. **Tools:** Displays the time zone, power saving, diagnostics, and device reset.

The screenshot shows the EnGenius web interface for a Wireless Access Point/Client Bridge in AP Bridge Mode. The left navigation menu includes System, Wireless, Network, Management, and Tools. The main content area displays system information:

You can use the Status page to monitor the connection status for WLAN/LAN interfaces, firmware and hardware version numbers.

System	
Model	Wireless Network Broadband Router
Mode	AP Bridge
System Up Time	5 min 25 sec
Hardware version	0.1.0
Serial Number	00000001
Kernel version	0.1.0
Application version	0.1.0

LAN Settings	
IP address	192.168.0.1
Subnet Mask	255.255.255.0
MAC address	00:AA:BB:CC:DD:08

WLAN Settings	
Channel	11

Below the WLAN settings, there is a section for SSID\_1.

## 3.2 System

The screenshot shows the EnGenius web interface with the System menu expanded. The left navigation menu includes AP Bridge Mode, System, Wireless, Network, Management, and Tools. The System menu is expanded to show the following options:

- System
- Status
- Schedule
- Event Log
- Monitor
- Wireless
- Network
- Management
- Tools

- Click on the **System** link on the navigation drop-down menu. You will then see four options: Status, Schedule, Event Log, and Monitor. Each option is described in detail below.

### 3.2.1 Status

- Click on the **Status** link under the **System** drop-down menu. The status page displays a summary of current system settings. Information such as operating mode, system up time, firmware version, serial number, kernel version and application version are displayed in the 'System' section. LAN IP address, subnet mask, and MAC address are displayed in the 'LAN' section. In the 'WLAN' section, the frequency, channel is displayed. Since this device supports multiple-SSIDs, the details of each SSID, such as ESSID and its security settings are displayed in the 'SSID\_#' section.

You can use the Status page to monitor the connection status for WLAN/LAN interfaces, firmware and hardware version numbers.

System	
Model	Wireless Network Broadband Router
Mode	AP Bridge
System Up Time	12 min 32 sec
Hardware version	0.1.0
Serial Number	000000001
Kernel version	0.1.0
Application version	0.1.0
LAN Settings	
IP address	192.168.0.1
Subnet Mask	255.255.255.0
MAC address	00:AA:BB:CC:DD:08
WLAN Settings	
Channel	11
SSID_1	
ESSID	EnGeniusCCDD08
Security	Disable

### 3.2.2 Schedule

- Click on the **Schedule** link in the navigation menu. Prior to setting schedule, **time zone** must be set in the **Tools** menu. Schedules can be created to specify the occasions to enforce the rules.
- For example, if you want enable power saving on Mon-Fri from 3pm to 8pm, you could create a schedule selecting Mon, Tue, Wed, Thu, and Fri and enter a Start Time of 3pm and End Time of 8pm.

You can use the Schedule page to Start/Stop the Services regularly. The Schedule will start to run, when it get GMT Time from Time Server. Please set up the Time Server correctly in Toolbox. The services will start at the time in the following Schedule Table or it will stop.

**Enabled Schedule Table (up to 8)**

NO.	Description	Service	Schedule	Select
1	schedule 01	Power Saving	All Time---Sat, Sun	<input type="checkbox"/>
2	schedule 02	Power Saving	From 09:00 to 13:00---Mon, Tue	<input type="checkbox"/>

- Click on the **Add** button to add a new schedule. .

You can use the Schedule page to Start/Stop the Services regularly. The services will start at the time in the following Schedule Table or it will stop.

<b>Schedule Description :</b>	<input type="text" value="schedule 03"/>
<b>Service :</b>	<input checked="" type="checkbox"/> Power Saving
<b>Days :</b>	<input type="checkbox"/> Every Day <input checked="" type="checkbox"/> Mon <input type="checkbox"/> Tue <input checked="" type="checkbox"/> Wed <input type="checkbox"/> Thu <input type="checkbox"/> Fri <input type="checkbox"/> Sat <input type="checkbox"/> Sun
<b>Time of day :</b>	<input type="checkbox"/> All Day (use 24-hour clock) From <input type="text" value="11"/> : <input type="text" value="00"/> To <input type="text" value="15"/> : <input type="text" value="40"/>

- **Schedule Description:** Specify a name for the schedule.
- **Service:** Select a service.
- **Days:** Select the days at which you would like the schedule to be effective.
- **Time of Day:** Place a check in the **All Day** box if you would like the schedule to be active for 24 hours. If you do not use the 24 hours option, you may specify a start time and end time.
- Click on the **Apply** button to add this schedule into the list.

### 3.2.3 Event Log

- Click on the **Event Log** link on the navigation menu. The device automatically records important events in its internal memory. Older records will be over-written by the latest ones when it is out of internal memory.

View the system operation information.

```

day 1 00:13:03 [SYSTEM]: SCHEDULE, Schedule is waiting for NTP time
day 1 00:13:03 [SYSTEM]: SCHEDULE, Schedule Stopping
day 1 00:00:11 [SYSTEM]: TELNETD, Telnet-cli Server Starting
day 1 00:00:11 [SYSTEM]: HTTP, Starting
day 1 00:00:10 [SYSTEM]: NET, Firewall Disabled
day 1 00:00:10 [SYSTEM]: NET, NAT Disabled
day 1 00:00:10 [SYSTEM]: NTP, NTP Client Starting
day 1 00:00:10 [SYSTEM]: WLAN, Channel = 11
day 1 00:00:09 [SYSTEM]: LAN, IP address=192.168.0.1
day 1 00:00:09 [SYSTEM]: LAN, Starting
day 1 00:00:08 [SYSTEM]: BR, Starting
day 1 00:00:08 [SYSTEM]: Start Log Message Service!


```

- **Save:** Click on the **Save** button to save the log into a text file on your computer.
- **Clear:** Click on the **Clear** button to clear the log on the screen.
- **Refresh:** Click on the **Refresh** button to refresh the log.

### 3.2.4 Statistics

- Click on the **Statistics** link in the navigation drop-down menu. This page displays the transmitted and received packet statistics of the wired (LAN & WAN) and wireless interface. You may change the auto-refresh time by selecting the number of seconds from the drop-down list.

You can monitor the bandwidth in different interface. This page will refresh in every five seconds.

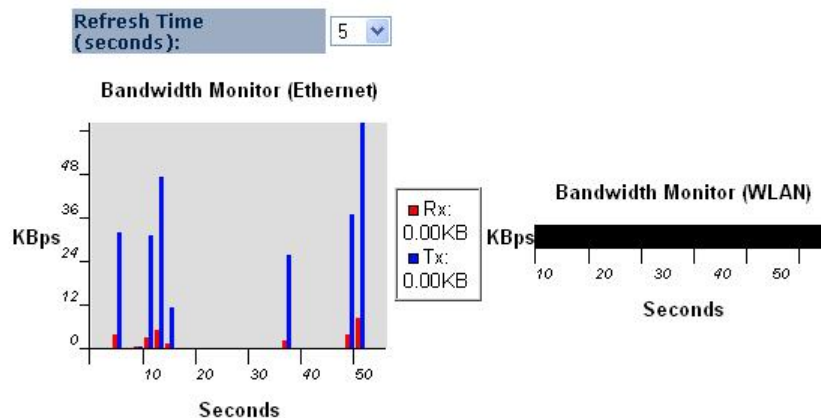

### 3.2.5 Wireless Operating Modes

- Click on the **Wireless** link on the navigation drop-down menu. In this section you may select the operating mode of the device. Options available are: Access Point, Client Bridge, WDS, or Repeater. Each operating mode is described in detail below.


#### 3.2.5.1 Switching between Operating Modes

- Each of the operating modes offers different features. In order to switch the operating mode, select it from the drop down list.

Operation Mode



- A dialog box will appear to notify you that the system will restart in order for the change to take effect. Click on the **OK** button to continue.

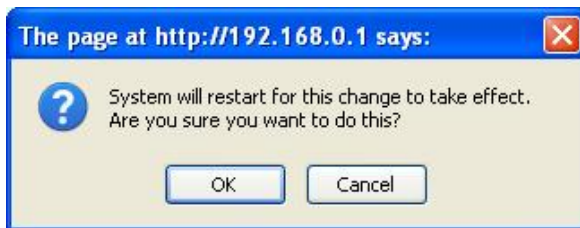


- Please wait while the device counts down and restarts into the new operating mode.

Module is reloading, please wait  seconds

- Each of the operating modes is described in detail in this chapter. Refer to the following sections for each operating mode:
  - 3.2.5.2 Access Point Operating Mode
  - 3.2.5.3 Client Bridge Operating Mode
  - 3.2.5.4 WDS Bridge Operating Mode
  - 3.2.5.5 Repeater Operating Mode



### 3.2.5.2 Access Point Operating Mode

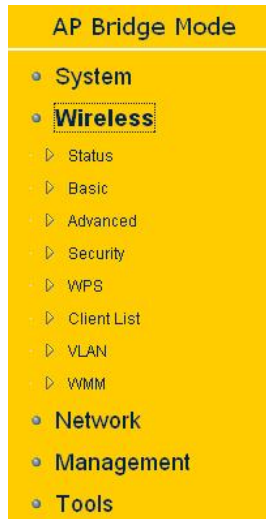

- In order to configure the device as an Access Point, select **Access Point** from the Operating Mode drop-down list.
- A dialog box will appear to notify you that the system will restart in order for the change to take effect. Click on the **OK** button to continue.
- Please wait while the device counts down and restarts into the new operating mode.
- Once the device has restarted into Access Point mode, you will see a new drop-down menu with eight options which are: Status, Basic, Advanced, Security, WPS, Client List, VLAN, and WMM. Each of the options is described in detail below.

#### 3.2.5.2.1 Status

- Click on the **Status** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address)

View the current internet connection status and related information.

WLAN Settings	
Channel	11
SSID_1	
ESSID	EnGeniusCCDD08
Security	Disable
BSSID	00:AA:BB:CC:DD:08

#### 3.2.5.2.2 Basic

- Click on the **Basic** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address).

## Operation Mode

---

Operation Mode :

Wireless Setting

Radio :  Enable  Disable

Mode :

Band :

Enabled SSID# :

ESSID1 :

Auto Channel :  Enable  Disable

Channel :

- **Radio:** Choose to **Enable** or **Disable** the wireless radio.
- **Band:** Select the IEEE 802.11 mode from the drop-down list. For example, if you are sure that the wireless network will be using only IEEE 802.11g clients, then it is recommended to select **802.11g** only instead of **2.4 GHz B+G** which will reduce the performance of the wireless network. You may also select **802.11B+G+N**. If all of the wireless devices you want to connect with this router can connect in the same transmission mode, you can improve performance slightly by choosing the appropriate "Only" mode. If you have some devices that use a different transmission mode, choose the appropriate "Mixed" mode.
- **Mode:** This drop-down list is fixed to **AP** as this is the Access Point operating mode.
- **ESSID#:** This device allows up for four SSIDs, select the **SSID#** that you would like to configure from the drop-down list.
- **ESSID:** The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters.
- **Auto Channel:** The device can automatically select the clearest channel in the environment. If auto channel is disabled, then you must select a channel from the drop-down list.
- **Channel:** Select a channel from the drop-down list. The channels available are based on the country's regulation. A wireless network uses specific channels in the wireless spectrum to handle communication between clients. Some channels in your area may have interference from other electronic devices. Choose the clearest channel to help optimize the performance and coverage of your wireless network.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.3 Advanced

- Click on **Advanced** link under the **Wireless** drop-down menu. This page allows you to configure the fragmentation threshold, RTS threshold, beacon period, transmit power, DTIM interval, etc.

These settings are only for expert user who is familiar with Wireless LAN procedure. Do not change these settings unless you know what effect the changes will have on your AP. Incorrect settings might reduce wireless performance.

<b>Fragment Threshold :</b>	<input type="text" value="2346"/>	(256-2346)
<b>RTS Threshold :</b>	<input type="text" value="2347"/>	(0-2347)
<b>Beacon Interval :</b>	<input type="text" value="100"/>	(20-1024 ms)
<b>DTIM Period :</b>	<input type="text" value="1"/>	(1-10)
<b>Data rate :</b>	Auto <input type="button" value="v"/>	
<b>N Data rate:</b>	Auto <input type="button" value="v"/>	
<b>Channel Bandwidth</b>	<input checked="" type="radio"/> Auto 20/40 MHZ <input type="radio"/> 20 MHZ	
<b>Preamble Type :</b>	<input type="radio"/> Long Preamble <input checked="" type="radio"/> Short Preamble	
<b>CTS Protection :</b>	<input type="radio"/> Auto <input type="radio"/> Always <input checked="" type="radio"/> None	
<b>Tx Power :</b>	100 % <input type="button" value="v"/>	

- Fragment Threshold:** Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 65535. The default value is 2346.
- RTS Threshold:** Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 1 and 65535. The default value is 2346.
- Beacon Period:** Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Period value between 20 and 1000. The default value is set to 100 milliseconds.
- DTIM Interval:** A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 255.
- Data Rate:** You may select a data rate from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- N Data Rate:** You may select a data rate for 802.11n from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- Channel Bandwidth:** You may select a channel bandwidth in order to improve the efficiency of the network, however, it is recommended to select **Auto 20/40MHz**. This is also known as auto-fallback.

- **Preamble Type:** Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.
- **CTS Protection:** CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select **auto**.
- **Tx Power:** You may control the transmit output power of the device by selecting a value from the drop-down list. This feature can be helpful in restricting the coverage area of the wireless network.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.4 Wireless Security Mode

- Click on the **Security** link under the **Wireless** drop-down menu. To protect your privacy this mode supports several types of wireless security: WEP WPA, WPA2, and 802.1x RADIUS. WEP is the original wireless encryption standard. WPA provides a higher level of security. The following section describes the security configuration in detail.

#### 3.2.5.2.4.1 Security Disabled

- Click on the **Security** link under the **Wireless** drop-down menu.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	Disable ▾

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcasted of your signal coverage. If encryption is set to NONE, users will be able to access the AP without authentication. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **Disable** from the drop-down list.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.4.2 WEP (Wired Equivalent Privacy)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WEP is an acronym for Wired Equivalent Privacy, and is a security protocol that provides the same level of security for wireless networks as for a wired network.
- WEP is less secure as compares to WPA encryption. To gain access to a WEP network, you must know the key. The key is a string of characters that you use for password. When using WEP, you must determine the level of encryption.
- The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is automatically generated when WEP is enabled.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

ESSID Selection :	EnGeniusCCDD08
Broadcast ESSID :	Enable
WMM :	Enable
Encryption :	WEP
Authentication type :	<input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto
Key Length :	64-bit
Key type :	ASCII (5 characters)
Default key :	Key 1
Encryption Key 1 :	XXXXXXXXXX
Encryption Key 2 :	XXXXXXXXXX
Encryption Key 3 :	XXXXXXXXXX
Encryption Key 4 :	XXXXXXXXXX

Enable 802.1x Authentication

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.

- **Encryption:** Select **WEP** from the drop-down list.
- **Authentication Type:** Select **Open**, or **Shared Key**. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.
- **Key Length:** Select a **64-bit** or **128-bit** WEP key length from the drop-down list.
- **Key Type:** Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in **HEX** (hexadecimal - using characters 0-9, A-F) or **ASCII** (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.
- **WEP Key 1-4:** You may enter four different WEP keys.
- **Enable 802.1x Authentication:** Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.4.3 WPA (Wi-Fi Protected Access) / Pre-shared Key

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA (Wi-Fi Protected Access) is designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA pre-shared key ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>Pre-shared Key type :</b>	Passphrase ▾
<b>Pre-shared Key :</b>	ecb9750_key



- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **Pre-shared Key Type::** Select **Passphrase** from the drop-down list.
- **Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.
- Click on the **Apply** button to save the changes.

#### 3.2.5.2.4.4 WPA RADIUS (802.1x)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA encryption. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.
- This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA RADIUS ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>RADIUS Server IP address :</b>	<input type="text"/>
<b>RADIUS Server port :</b>	1812
<b>RADIUS Server password :</b>	<input type="text"/>

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **RADIUS Server IP Address:** Specify the IP address of the RADIUS server.
- **RADIUS Server Port:** Specify the port number of the RADIUS server, the default port is 1812.
- **RADIUS Server Password:** Specify the pass-phrase that is matched on the RADIUS Server.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.5 WPS (Wi-Fi Protected Setup)

- Click on the **WPS** link under the **Wireless** drop-down menu
- WPS requires you to enter a PIN for the device press the configuration button on the device. If the device supports Wi-Fi Protected Setup and has a configuration button, you can add it to the network by pressing the configuration button on the device
- There are several ways to add a wireless device to your network. Access to the wireless network is controlled by a registrar. A registrar only allows devices onto the wireless network if you have entered the PIN, or pressed a special Wi-Fi Protected




Setup button on the device. The device acts as a registrar for the network, although other devices may act as a registrar as well.

- Wi-Fi Protected Setup is a feature that locks the wireless security settings and prevents the settings from being changed by any new external registrar using its PIN. Devices can still be added to the wireless network using Wi-Fi Protected Setup.

<b>WPS:</b>	<input checked="" type="checkbox"/> Enable
<b>Wi-Fi Protected Setup Information</b>	
<b>WPS Current Status:</b>	unConfigured
<b>Self Pin Code:</b>	34259283
<b>SSID:</b>	EnGeniusCCDD08
<b>Authentication Mode:</b>	Disable
<b>Passphrase Key:</b>	<input type="text"/>
<b>Interface :</b>	AP <input type="button" value="v"/>
<b>WPS Via Push Button:</b>	<input type="button" value="Start to Process"/>
<b>WPS via PIN:</b>	<input type="text" value="12345678"/> <input type="button" value="Start to Process"/>

- **WPS:** Place a check in this box to enable this feature.
- **WPS Current Status:** Displays the current status of the WPS configuration.
- **Self Pin Code:** Displays the current PIN.
- **SSID:** Displays the current SSID.
- **Authentication Mode:** Displays the current authentication mode.
- **Passphrase Key:** Displays the current passphrase.
- **Interface:** Displays the current interface.
- **WPS Via Push Button:** Click on the **Start to Process** button if you would like to enable WPS through the Push Button instead of the PIN. After pressing this button you will be required to press the WPS on the client device within two minutes. Click on the **OK** button in the dialog box.

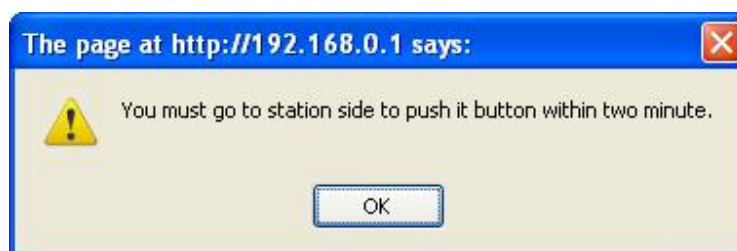

- **WPS via PIN:** Specify a PIN, which unique number that can be used to add the router to an existing network or to create a new network. Then click on the **Start to Process** button.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.6 Client List

- Click on the **Client List** link under the **Wireless** drop-down menu. This page displays the list of Clients that are associated to the Access Point.
- The MAC address and signal strength for each client is displayed. Click on the **Refresh** button to refresh the client list

#### WLAN Client Table :

This WLAN Client Table shows client MAC address associate to this Broadband Router

MAC address	Signal
No client connecting to the Router.	

Refresh

### 3.2.5.2.7 VLAN

- Click on the **VLAN** link under the **Wireless** drop-down menu. A VLAN (Virtual LAN) is a group of hosts with a common set of requirements that communicate as if they were attached to the same wire, regardless of their physical location.

A virtual LAN, commonly known as a VLAN, is a group of hosts with a common set of requirements that communicate as if they were attached to the same wire, regardless of their physical location.

**Virtual LAN :**  Enable  Disable  
**SSID 1 Tag:**  (1~4096)

Apply

Cancel

- **Virtual LAN:** Choose to Enable or Disable the VLAN features.
- **SSID1 Tag:** Specify the VLAN tag.
- Click on the **Apply** button to save the changes.

### 3.2.5.2.8 WMM (Wireless Multimedia)


- Click on the **WMM** link under the **Wireless** drop-down menu. WMM is Quality of Service (QoS) for wireless and ensures that voice and video applications get priority in order to run smoothly.
- Specify the priority and then click on the **Apply** button.

WMM technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are less likely to slow them.

**WMM Parameter Configuration**

ITEM	AC_BE	AC_BK	AC_VI	AC_VO
APAIfsn	3	7	1	1
APCwmax	6	10	4	3
APCwmin	4	4	3	2
APTxop	0	0	94	47
APACM	0	0	0	0
BSSAifs	3	7	2	2
BSSCwmax	10	10	4	3
BSDCwmin	4	4	3	2
BSSTxop	0	0	94	47
BSSACM	0	0	0	0
AckPolicy	0	0	0	0

### 3.2.5.3 Client Bridge Operating Mode

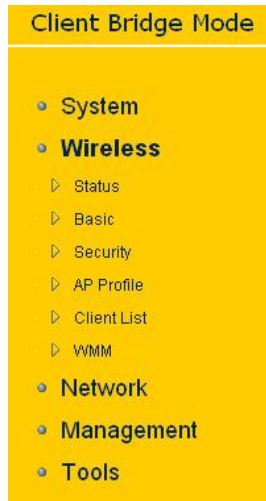

- In order to configure the device as an Access Point, select **Client Bridge** from the Operating Mode drop-down list.
- A dialog box will appear to notify you that the system will restart in order for the change to take effect. Click on the **OK** button to continue.
- Please wait while the device counts down and restarts into the new operating mode.
- Once the device has restarted into Client Bridge mode, you will see a new drop-down menu with six options which are: Status, Basic, Security, AP Profile, and WMM. Each of the options is described in detail below.

#### 3.2.5.3.1 Status

- Click on the **Status** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address)

View the current internet connection status and related information.

WLAN AP Client Settings	
Connection Status	Fail
Channel	---
ESSID	---
Security	---
BSSID	---

#### 3.2.5.3.2 Basic

- Click on the **Basic** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address).

## Wireless Setting

---

**Radio :**  Enable  Disable

**Mode :** Client

**Band :** 2.4 GHz (B+G+N)

**Site Survey :** Site Survey

**Wireless Information**

**SSID:** EnGeniusCCDD08

**Status:** Disconnected

**Channel:**

- **Radio:** Choose to **Enable** or **Disable** the wireless radio.
- **Mode:** This drop-down list is fixed to **Client** as this is the Client Bridge operating mode.
- **Band:** Select the IEEE 802.11 mode from the drop-down list. For example, if you are sure that the wireless network will be using only IEEE 802.11g clients, then it is recommended to select **802.11g** only instead of **2.4 GHz B+G** which will reduce the performance of the wireless network. You may also select **802.11B+G+N**. If all of the wireless devices you want to connect with this router can connect in the same transmission mode, you can improve performance slightly by choosing the appropriate "Only" mode. If you have some devices that use a different transmission mode, choose the appropriate "Mixed" mode.
- **Site Survey:** Click on the Site Survey button to view a list of Access Points in the area. The Site Survey page displays information about devices within the 802.11b/g/n frequency. Information such as channel, SSID, BSSID, encryption, authentication, signal strength, and operating mode are displayed. Select the desired device and then click on the **Add to AP Profile** button.

### Site Survey

NO.	Select	Channel	SSID	BSSID	Encryption	Auth	Signal(%)	Mode
<input type="button" value="Refresh"/> <input type="button" value="Add to AP Profile"/>								

- **SSID:** The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters.
- **Status:** Displays the current status of the device.
- **Channel:** The channels available are based on the country's regulation. A wireless network uses specific channels in the wireless spectrum to handle communication between clients. Some channels in your area may have interference from other electronic devices.
- Click on the **Apply** button to save the changes.

### 3.2.5.3.3 Wireless Security Mode

- Click on the **Security** link under the **Wireless** drop-down menu. To protect your privacy this mode supports several types of wireless security: WEP WPA, WPA2, and 802.1x RADIUS. WEP is the original wireless encryption standard. WPA provides a higher level of security. The following section describes the security configuration in detail.

#### 3.2.5.3.3.1 Security Disabled

- Click on the **Security** link under the **Wireless** drop-down menu.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

ESSID Selection :	EnGeniusCCDD08
Broadcast ESSID :	Enable
WMM :	Enable
Encryption :	Disable

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **Disable** from the drop-down list.
- Click on the **Apply** button to save the changes.

#### 3.2.5.3.3.2 WEP (Wired Equivalent Privacy)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WEP is an acronym for Wired Equivalent Privacy, and is a security protocol that provides the same level of security for wireless networks as for a wired network.
- WEP is less secure as compares to WPA encryption. To gain access to a WEP network, you must know the key. The key is a string of characters that you use for password. When using WEP, you must determine the level of encryption.
- The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to

HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is automatically generated when WEP is enabled.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WEP ▾
<b>Authentication type :</b>	<input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto
<b>Key Length :</b>	64-bit ▾
<b>Key type :</b>	ASCII (5 characters) ▾
<b>Default key :</b>	Key 1 ▾
<b>Encryption Key 1 :</b>	XXXXXXXXXX
<b>Encryption Key 2 :</b>	XXXXXXXXXX
<b>Encryption Key 3 :</b>	XXXXXXXXXX
<b>Encryption Key 4 :</b>	XXXXXXXXXX

**Enable 802.1x Authentication**

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WEP** from the drop-down list.
- **Authentication Type:** Select **Open**, or **Shared Key**. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.
- **Key Length:** Select a **64-bit** or **128-bit** WEP key length from the drop-down list.
- **Key Type:** Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in **HEX**



(hexadecimal - using characters 0-9, A-F) or **ASCII** (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.

- **WEP Key 1-4:** You may enter four different WEP keys.
- **Enable 802.1x Authentication:** Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.
- Click on the **Apply** button to save the changes.

### 3.2.5.3.3 WPA (Wi-Fi Protected Access) / Pre-shared Key

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA (Wi-Fi Protected Access) is designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA pre-shared key ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>Pre-shared Key type :</b>	Passphrase ▾
<b>Pre-shared Key :</b>	ecb9750_key

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.



- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **Pre-shared Key Type::** Select **Passphrase** from the drop-down list.
- **Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.
- Click on the **Apply** button to save the changes.

### 3.2.5.3.3.4 WPA RADIUS (802.1x)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA encryption. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.
- This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA RADIUS ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>RADIUS Server IP address :</b>	<input type="text"/>
<b>RADIUS Server port :</b>	1812 <input type="text"/>
<b>RADIUS Server password :</b>	<input type="text"/>

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.

- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **RADIUS Server IP Address:** Specify the IP address of the RADIUS server.
- **RADIUS Server Port:** Specify the port number of the RADIUS server, the default port is 1812.
- **RADIUS Server Password:** Specify the pass-phrase that is matched on the RADIUS Server.
- Click on the **Apply** button to save the changes.

### 3.2.5.3.4 AP Profile

- Click on the **AP Profile** link under the **Wireless** drop-down menu.
- This page allows you to configure the profile of the Client Bridge exactly the same as the Access Point.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

#### Site Survey Settings

<b>Network Name (SSID) :</b>	<input type="text" value="EnGeniusCCDD08"/>
<b>Encryption :</b>	<input type="text" value="WPA pre-shared key"/>
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>Pre-shared Key :</b>	<input type="text" value="apclikey"/>

- **SSID:** The SSID is a unique named shared amongst all the points of the wireless network. The SSID must be identical on all points of the wireless network and cannot exceed 32 characters.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.

- **Pre-shared Key Type:** Select **Passphrase** from the drop-down list.
- **Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.
- Click on the **Save** button to save the changes.

### 3.2.5.3.5 Client List

- Click on the **Client List** link under the **Wireless** drop-down menu. This page displays the list of Clients that are associated to the Client Bridge.
- The MAC address and signal strength for each client is displayed. Click on the **Refresh** button to refresh the client list

#### WLAN Client Table :

This WLAN Client Table shows client MAC address associate to this Broadband Router

MAC address	Signal
No client connecting to the Router.	

Refresh

### 3.2.5.3.6 WMM (Wireless Multimedia)

- Click on the **WMM** link under the **Wireless** drop-down menu. WMM is Quality of Service (QoS) for wireless and ensures that voice and video applications get priority in order to run smoothly.
- Specify the priority and then click on the **Apply** button.

WMM technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are less likely to slow them.

**WMM Parameter Configuration**

ITEM	AC_BE	AC_BK	AC_VI	AC_VO
APAIfsn	3	7	1	1
APCwmax	6	10	4	3
APCwmin	4	4	3	2
APTxop	0	0	94	47
APACM	0	0	0	0
BSSAifs	3	7	2	2
BSSCwmax	10	10	4	3
BSDCwmin	4	4	3	2
BSSTxop	0	0	94	47
BSSACM	0	0	0	0
AckPolicy	0	0	0	0

### 3.2.5.4 WDS Operating Mode



- In order to configure the device as an Access Point, select **WDS** from the Operating Mode drop-down list.
- A dialog box will appear to notify you that the system will restart in order for the change to take effect. Click on the **OK** button to continue.
- Please wait while the device counts down and restarts into the new operating mode.
- Once the device has restarted into WDS mode, you will see a new drop-down menu with six options which are: Status, Basic, Advanced, Security, Client List, and WMM. Each of the options is described in detail below.

#### 3.2.5.4.1 Status

- Click on the **Status** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address)

View the current internet connection status and related information.

WLAN Settings	
Channel	11
SSID_1	
ESSID	EnGeniusCCDD08
Security	Disable
BSSID	00:AA:BB:CC:DD:08

#### 3.2.5.4.2 Basic

- Click on the **Basic** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address).

Wireless Setting

---

<b>Radio :</b>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<b>Mode :</b>	WDS ▾
<b>Band :</b>	2.4 GHz (B+G+N) ▾
<b>Enabled SSID#:</b>	1 ▾
<b>ESSID1 :</b>	EnGeniusCCDD08
<b>MAC address 1 :</b>	000000000000
<b>MAC address 2 :</b>	000000000000
<b>MAC address 3 :</b>	000000000000
<b>MAC address 4 :</b>	000000000000
<b>Set Security :</b>	Set Security

- **Radio:** Choose to **Enable** or **Disable** the wireless radio.
- **Mode:** This drop-down list is fixed to **WDS** as this is the Wireless Distribution operating mode.
- **Band:** Select the IEEE 802.11 mode from the drop-down list. For example, if you are sure that the wireless network will be using only IEEE 802.11g clients, then it is recommended to select **802.11g** only instead of **2.4 GHz B+G** which will reduce the performance of the wireless network. You may also select **802.11B+G+N**. If all of the wireless devices you want to connect with this router can connect in the same transmission mode, you can improve performance slightly by choosing the appropriate "Only" mode. If you have some devices that use a different transmission mode, choose the appropriate "Mixed" mode.
- **ESSID#:** This device allows up for four SSIDs, select the **SSID#** that you would like to configure from the drop-down list.
- **MAC Address #:** Specify the MAC address (BSSID) of up to four devices within the WDS.
- Click on the **Apply** button to save the changes.

### 3.2.5.4.3 Advanced

- Click on **Advanced** link under the **Wireless** drop-down menu. This page allows you to configure the fragmentation threshold, RTS threshold, beacon period, transmit power, DTIM interval, etc.

These settings are only for expert user who is familiar with Wireless LAN procedure. Do not change these settings unless you know what effect the changes will have on your AP. Incorrect settings might reduce wireless performance.

<b>Fragment Threshold :</b>	<input type="text" value="2346"/>	(256-2346)
<b>RTS Threshold :</b>	<input type="text" value="2347"/>	(0-2347)
<b>Beacon Interval :</b>	<input type="text" value="100"/>	(20-1024 ms)
<b>DTIM Period :</b>	<input type="text" value="1"/>	(1-10)
<b>Data rate :</b>	Auto <input type="button" value="v"/>	
<b>N Data rate:</b>	Auto <input type="button" value="v"/>	
<b>Channel Bandwidth</b>	<input checked="" type="radio"/> Auto 20/40 MHz <input type="radio"/> 20 MHz	
<b>Preamble Type :</b>	<input checked="" type="radio"/> Long Preamble <input type="radio"/> Short Preamble	
<b>CTS Protection :</b>	<input checked="" type="radio"/> Auto <input type="radio"/> Always <input type="radio"/> None	
<b>Tx Power :</b>	100% <input type="button" value="v"/>	

- Fragment Threshold:** Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 65535. The default value is 2346.
- RTS Threshold:** Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 1 and 65535. The default value is 2346.
- Beacon Period:** Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Period value between 20 and 1000. The default value is set to 100 milliseconds.
- DTIM Interval:** A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 255.
- Data Rate:** You may select a data rate from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- N Data Rate:** You may select a data rate for 802.11n from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- Channel Bandwidth:** You may select a channel bandwidth in order to improve the efficiency of the network, however, it is recommended to select **Auto 20/40MHz**. This is also known as auto-fallback.
- Preamble Type:** Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.



- **CTS Protection:** CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select **auto**.
- **Tx Power:** You may control the transmit output power of the device by selecting a value from the drop-down list. This feature can be helpful in restricting the coverage area of the wireless network.
- Click on the **Apply** button to save the changes.

### 3.2.5.4.4 Wireless Security Mode

- Click on the **Security** link under the **Wireless** drop-down menu. To protect your privacy this mode supports several types of wireless security: WEP WPA, WPA2, and 802.1x RADIUS. WEP is the original wireless encryption standard. WPA provides a higher level of security. The following section describes the security configuration in detail.

#### 3.2.5.4.4.1 Security Disabled

- Click on the **Security** link under the **Wireless** drop-down menu.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

ESSID Selection :	EnGeniusCCDD08 ▾
Broadcast ESSID :	Enable ▾
WMM :	Enable ▾
Encryption :	Disable ▾

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **Disable** from the drop-down list.
- Click on the **Apply** button to save the changes.



### 3.2.5.4.4.2 WEP (Wired Equivalent Privacy)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WEP is an acronym for Wired Equivalent Privacy, and is a security protocol that provides the same level of security for wireless networks as for a wired network.
- WEP is less secure as compares to WPA encryption. To gain access to a WEP network, you must know the key. The key is a string of characters that you use for password. When using WEP, you must determine the level of encryption.
- The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is automatically generated when WEP is enabled.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WEP ▾
<b>Authentication type :</b>	<input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto
<b>Key Length :</b>	64-bit ▾
<b>Key type :</b>	ASCII (5 characters) ▾
<b>Default key :</b>	Key 1 ▾
<b>Encryption Key 1 :</b>	XXXXXXXXXX
<b>Encryption Key 2 :</b>	XXXXXXXXXX
<b>Encryption Key 3 :</b>	XXXXXXXXXX
<b>Encryption Key 4 :</b>	XXXXXXXXXX

**Enable 802.1x Authentication**

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.

- **Encryption:** Select **WEP** from the drop-down list.
- **Authentication Type:** Select **Open**, or **Shared Key**. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.
- **Key Length:** Select a **64-bit** or **128-bit** WEP key length from the drop-down list.
- **Key Type:** Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in **HEX** (hexadecimal - using characters 0-9, A-F) or **ASCII** (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.
- **WEP Key 1-4:** You may enter four different WEP keys.
- **Enable 802.1x Authentication:** Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.
- Click on the **Apply** button to save the changes.

### 3.2.5.4.4.3 WPA (Wi-Fi Protected Access) / Pre-shared Key

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA (Wi-Fi Protected Access) is designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA pre-shared key ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>Pre-shared Key type :</b>	Passphrase ▾
<b>Pre-shared Key :</b>	ecb9750_key

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **Pre-shared Key Type::** Select **Passphrase** from the drop-down list.
- **Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.
- Click on the **Apply** button to save the changes.

#### 3.2.5.4.4.4 WPA RADIUS (802.1x)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA encryption. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.
- This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA RADIUS ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>RADIUS Server IP address :</b>	<input type="text"/>
<b>RADIUS Server port :</b>	1812 <input type="text"/>
<b>RADIUS Server password :</b>	<input type="text"/>

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
- **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **RADIUS Server IP Address:** Specify the IP address of the RADIUS server.
- **RADIUS Server Port:** Specify the port number of the RADIUS server, the default port is 1812.
- **RADIUS Server Password:** Specify the pass-phrase that is matched on the RADIUS Server.
- Click on the **Apply** button to save the changes.

#### 3.2.5.4.5 Client List

- Click on the **Client List** link under the **Wireless** drop-down menu. This page displays the list of Clients that are associated to the device.
- The MAC address and signal strength for each client is displayed. Click on the **Refresh** button to refresh the client list

**WLAN Client Table :**

This WLAN Client Table shows client MAC address associate to this Broadband Router

MAC address	Signal
No client connecting to the Router.	

### 3.2.5.4.6 WMM (Wireless Multimedia)

- Click on the **WMM** link under the **Wireless** drop-down menu. WMM is Quality of Service (QoS) for wireless and ensures that voice and video applications get priority in order to run smoothly.
- Specify the priority and then click on the **Apply** button.

WMM technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are less likely to slow them.

**WMM Parameter Configuration**

ITEM	AC_BE	AC_BK	AC_VI	AC_VO
APAifsn	3	7	1	1
APCwmax	6	10	4	3
APCwmin	4	4	3	2
APTxop	0	0	94	47
APACM	0	0	0	0
BSSAifsn	3	7	2	2
BSSCwmax	10	10	4	3
BSDCwmin	4	4	3	2
BSSTxop	0	0	94	47
BSSACM	0	0	0	0
AckPolicy	0	0	0	0




### 3.2.5.5 Repeater Operating Mode

- In order to configure the device as an Access Point, select **Repeater** from the Operating Mode drop-down list.
- A dialog box will appear to notify you that the system will restart in order for the change to take effect. Click on the **OK** button to continue.
- Please wait while the device counts down and restarts into the new operating mode.

- Once the device has restarted into Repeater mode, you will see a new drop-down menu with six options which are: Status, Basic, Advanced, Security, Client List, and WMM. Each of the options is described in detail below.

### 3.2.5.5.1 Status

- Click on the **Status** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address)

View the current internet connection status and related information.

#### WLAN AP Client Settings

Connection Status	Fail
Channel	---
ESSID	---
Security	---
BSSID	---

#### WLAN Settings

Channel	11
---------	----

#### SSID\_1

ESSID	EnGeniusCCDD08
Security	Disable
BSSID	00:AA:BB:CC:DD:08

### 3.2.5.5.2 Basic

- Click on the **Basic** link under the **Wireless** drop-down menu. This page will display the current wireless settings such as SSID, Channel, Security and BSSID (MAC address).
- Radio:** Choose to **Enable** or **Disable** the wireless radio.
- Mode:** This drop-down list is fixed to **WDS** as this is the Wireless Distribution operating mode.

- **Band:** Select the IEEE 802.11 mode from the drop-down list. For example, if you are sure that the wireless network will be using only IEEE 802.11g clients, then it is recommended to select **802.11g** only instead of **2.4 GHz B+G** which will reduce the performance of the wireless network. You may also select **802.11B+G+N**. If all of the wireless devices you want to connect with this router can connect in the same transmission mode, you can improve performance slightly by choosing the appropriate "Only" mode. If you have some devices that use a different transmission mode, choose the appropriate "Mixed" mode.
- **ESSID#:** This device allows up for four SSIDs, select the **SSID#** that you would like to configure from the drop-down list.
- **MAC Address #:** Specify the MAC address (BSSID) of up to four devices within the WDS.
- Click on the **Apply** button to save the changes.

### Wireless Setting

---

<b>Radio :</b>	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
<b>Mode :</b>	AP Client ▾
<b>Band :</b>	2.4 GHz (B+G+N) ▾
<b>Enabled SSID#:</b>	1 ▾
<b>ESSID1 :</b>	EnGeniusCCDD08
<b>Site Survey :</b>	<input type="button" value="Site Survey"/>
<b>Wireless Information</b>	
<b>SSID:</b>	EnGeniusCCDD08
<b>Status:</b>	Disconnected
<b>Channel:</b>	

### 3.2.5.5.3 Advanced

- Click on **Advanced** link under the **Wireless** drop-down menu. This page allows you to configure the fragmentation threshold, RTS threshold, beacon period, transmit power, DTIM interval, etc.



These settings are only for expert user who is familiar with Wireless LAN procedure. Do not change these settings unless you know what effect the changes will have on your AP. Incorrect settings might reduce wireless performance.

<b>Fragment Threshold :</b>	<input type="text" value="2346"/>	(256-2346)
<b>RTS Threshold :</b>	<input type="text" value="2347"/>	(0-2347)
<b>Beacon Interval :</b>	<input type="text" value="100"/>	(20-1024 ms)
<b>DTIM Period :</b>	<input type="text" value="1"/>	(1-10)
<b>Data rate :</b>	Auto <input type="button" value="v"/>	
<b>N Data rate:</b>	Auto <input type="button" value="v"/>	
<b>Channel Bandwidth</b>	<input checked="" type="radio"/> Auto 20/40 MHz <input type="radio"/> 20 MHz	
<b>Preamble Type :</b>	<input type="radio"/> Long Preamble <input checked="" type="radio"/> Short Preamble	
<b>CTS Protection :</b>	<input type="radio"/> Auto <input type="radio"/> Always <input checked="" type="radio"/> None	
<b>Tx Power :</b>	100 % <input type="button" value="v"/>	

- **Fragment Threshold:** Packets over the specified size will be fragmented in order to improve performance on noisy networks. Specify a value between 256 and 65535. The default value is 2346.
- **RTS Threshold:** Packets over the specified size will use the RTS/CTS mechanism to maintain performance in noisy networks and preventing hidden nodes from degrading the performance. Specify a value between 1 and 65535. The default value is 2346.
- **Beacon Period:** Beacons are packets sent by a wireless Access Point to synchronize wireless devices. Specify a Beacon Period value between 20 and 1000. The default value is set to 100 milliseconds.
- **DTIM Interval:** A DTIM is a countdown informing clients of the next window for listening to broadcast and multicast messages. When the wireless Access Point has buffered broadcast or multicast messages for associated clients, it sends the next DTIM with a DTIM Interval value. Wireless clients detect the beacons and awaken to receive the broadcast and multicast messages. The default value is 1. Valid settings are between 1 and 255.
- **Data Rate:** You may select a data rate from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- **N Data Rate:** You may select a data rate for 802.11n from the drop-down list, however, it is recommended to select **auto**. This is also known as auto-fallback.
- **Channel Bandwidth:** You may select a channel bandwidth in order to improve the efficiency of the network, however, it is recommended to select **Auto 20/40MHz**. This is also known as auto-fallback.
- **Preamble Type:** Select a short or long preamble. For optimum performance it is recommended to also configure the client device as the same preamble type.
- **CTS Protection:** CTS (Clear to Send) can be always enabled, auto, or disabled. By enabled CTS, the Access Point and clients will wait for a 'clear' signal before transmitting. It is recommended to select **auto**.
- **Tx Power:** You may control the transmit output power of the device by selecting a value from the drop-down list. This feature can be helpful in restricting the coverage area of the wireless network.
- Click on the **Apply** button to save the changes.



### 3.2.5.5.4 Wireless Security Mode

- Click on the **Security** link under the **Wireless** drop-down menu. To protect your privacy this mode supports several types of wireless security: WEP WPA, WPA2, and 802.1x RADIUS. WEP is the original wireless encryption standard. WPA provides a higher level of security. The following section describes the security configuration in detail.

#### 3.2.5.5.4.1 Security Disabled

- Click on the **Security** link under the **Wireless** drop-down menu.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

ESSID Selection :	EnGeniusCCDD08 ▾
Broadcast ESSID :	Enable ▾
WMM :	Enable ▾
Encryption :	Disable ▾

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **Disable** from the drop-down list.
- Click on the **Apply** button to save the changes.

#### 3.2.5.5.4.2 WEP (Wired Equivalent Privacy)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WEP is an acronym for Wired Equivalent Privacy, and is a security protocol that provides the same level of security for wireless networks as for a wired network.
- WEP is less secure as compares to WPA. To gain access to a WEP network, you must know the key. The key is a string of characters that you use for password. When using WEP, you must determine the level of encryption.
- The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily. A default key is automatically generated when WEP is enabled.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WEP ▾
<b>Authentication type :</b>	<input type="radio"/> Open System <input type="radio"/> Shared Key <input checked="" type="radio"/> Auto
<b>Key Length :</b>	64-bit ▾
<b>Key type :</b>	ASCII (5 characters) ▾
<b>Default key :</b>	Key1 ▾
<b>Encryption Key 1 :</b>	*****
<b>Encryption Key 2 :</b>	*****
<b>Encryption Key 3 :</b>	*****
<b>Encryption Key 4 :</b>	*****

**Enable 802.1x Authentication**

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WEP** from the drop-down list.
- **Authentication Type:** Select **Open**, or **Shared Key**. Authentication method from the drop-down list. An open system allows any client to authenticate as long as it conforms to any MAC address filter policies that may have been set. All authentication packets are transmitted without encryption. Shared Key sends an unencrypted challenge text string to any device attempting to communicate with the AP. The device requesting authentication encrypts the challenge text and sends it back to the access point. If the challenge text is encrypted correctly, the access point allows the requesting device to authenticate. It is recommended to select Auto if you are not sure which authentication type is used.
- **Key Length:** Select a **64-bit** or **128-bit** WEP key length from the drop-down list.
- **Key Type:** Select a key type from the drop-down list. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in **HEX** (hexadecimal - using characters 0-9, A-F) or **ASCII** (American Standard Code for

Information Interchange - alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember.

- **WEP Key 1-4:** You may enter four different WEP keys.
- **Enable 802.1x Authentication:** Place a check in this box if you would like to use RADIUS authentication. This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users. You will then be required to specify the RADIUS Server's IP address, port, and password.
- Click on the **Apply** button to save the changes.

### 3.2.5.5.4.3 WPA (Wi-Fi Protected Access) / Pre-shared Key

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA (Wi-Fi Protected Access) is designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA pre-shared key ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>Pre-shared Key type :</b>	Passphrase ▾
<b>Pre-shared Key :</b>	ecb9750_key

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
- **Encryption:** Select **WPA pre-shared key** from the drop-down list.
- **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.

- **WPA Type:** Select **TKIP**, **AES**, or **WPA2 Mixed**. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
- **Pre-shared Key Type:** Select **Passphrase** from the drop-down list.
- **Pre-Shared Key:** The key is entered as a pass-phrase of up to 63 alphanumeric characters in ASCII (American Standard Code for Information Interchange) format at both ends of the wireless connection. It cannot be shorter than eight characters, although for proper security it needs to be of ample length and should not be a commonly known phrase. This phrase is used to generate session keys that are unique for each wireless client.
- Click on the **Apply** button to save the changes.

#### 3.2.5.5.4.4 WPA RADIUS (802.1x)

- Click on the **Security** link under the **Wireless** drop-down menu.
- WPA encryption. WPA (Wi-Fi Protected Access) was designed to improve upon the security features of WEP (Wired Equivalent Privacy). The technology is designed to work with existing Wi-Fi products that have been enabled with WEP. WPA provides improved data encryption through the Temporal Integrity Protocol (TKIP), which scrambles the keys using a hashing algorithm and by adding an integrity checking feature which makes sure that keys haven't been tampered with.
- This option works with a RADIUS Server to authenticate wireless clients. Wireless clients should have established the necessary credentials before attempting to authenticate to the Server through this Gateway. Furthermore, it may be necessary to configure the RADIUS Server to allow this Gateway to authenticate users.

This page allows you setup the wireless security. You can turn on WEP or WPA by using Encryption Keys, besides you can enable 802.1x Authentication or RADIUS to coordinate with RADIUS server

<b>ESSID Selection :</b>	EnGeniusCCDD08 ▾
<b>Broadcast ESSID :</b>	Enable ▾
<b>WMM :</b>	Enable ▾
<b>Encryption :</b>	WPA RADIUS ▾
<b>WPA type :</b>	<input checked="" type="radio"/> WPA(TKIP) <input type="radio"/> WPA2(AES) <input type="radio"/> WPA2 Mixed
<b>RADIUS Server IP address :</b>	<input type="text"/>
<b>RADIUS Server port :</b>	1812 <input type="text"/>
<b>RADIUS Server password :</b>	<input type="text"/>

- **ESSID Selection:** As this device supports multiple SSIDs, it is possible to configure a different security mode for each SSID (profile). Select an SSID from the drop-down list.
- **Broadcast SSID:** Select **Enable** or **Disable** from the drop-down list. This is the SSID broadcast feature. When this option is set to Enable, your wireless network name is

- broadcast to anyone within the range of your signal. If you're not using encryption then they could connect to your network. When this is disabled, you must enter the Wireless Network Name (SSID) on the client manually to connect to the network.
- **WMM:** Choose to **Enable** or **Disable** WMM. This is the Quality of Service (QoS) feature for prioritizing voice and video applications. This option can be further configured in **WMM** under the **Wireless** drop-down menu.
  - **Encryption:** Select **WPA pre-shared key** from the drop-down list.
  - **WPA Mode:** Select the **Auto WPA / WPA2** from the drop-down list.
  - **WPA Type:** Select TKIP, AES, or WPA2 Mixed. The encryption algorithm used to secure the data communication. **TKIP** (Temporal Key Integrity Protocol) provides per-packet key generation and is based on WEP. **AES** (Advanced Encryption Standard) is a very secure block based encryption. Note that, if the bridge uses the AES option, the bridge can associate with the access point only if the access point is also set to use only AES.
  - **RADIUS Server IP Address:** Specify the IP address of the RADIUS server.
  - **RADIUS Server Port:** Specify the port number of the RADIUS server, the default port is 1812.
  - **RADIUS Server Password:** Specify the pass-phrase that is matched on the RADIUS Server.
  - Click on the **Apply** button to save the changes.

### 3.2.5.5.5 Client List

- Click on the **Client List** link under the **Wireless** drop-down menu. This page displays the list of Clients that are associated to the device.
- The MAC address and signal strength for each client is displayed. Click on the **Refresh** button to refresh the client list

#### WLAN Client Table :

This WLAN Client Table shows client MAC address associate to this Broadband Router

MAC address	Signal
No client connecting to the Router.	

Refresh

### 3.2.5.5.6 WMM (Wireless Multimedia)

- Click on the **WMM** link under the **Wireless** drop-down menu. WMM is Quality of Service (QoS) for wireless and ensures that voice and video applications get priority in order to run smoothly.
- Specify the priority and then click on the **Apply** button.

WMM technology maintains the priority of audio, video and voice applications in a Wi-Fi network so that other applications and traffic are less likely to slow them.

#### WMM Parameter Configuration

ITEM	AC_BE	AC_BK	AC_VI	AC_VO
APAIfsn	3	7	1	1
APCwmax	6	10	4	3
APCwmin	4	4	3	2
APTxop	0	0	94	47
APACM	0	0	0	0
BSSAifs	3	7	2	2
BSSCwmax	10	10	4	3
BSDCwmin	4	4	3	2
BSSTxop	0	0	94	47
BSSACM	0	0	0	0
AckPolicy	0	0	0	0

Reset to Default

Apply

Cancel

## 3.3 Network



- Click on the **Network** link on the navigation drop-down menu. You will then see three options: Status, LAN, and WAN. Each option is described in detail below.

### 3.3.1 Status

- Click on the **Status** link on the **Network** navigation drop-down menu. This page will display the current LAN settings such as IP address, subnet mask, and MAC address.



View the current internet connection status and related information.

#### LAN Settings

IP address 192.168.0.1  
 Subnet Mask 255.255.255.0  
 MAC address 00:AA:BB:CC:DD:08

### 3.3.2 LAN / DHCP Client, Server

- Click on the **LAN** link on the **Network** navigation drop-down menu. This page will allow you to configure the device as a static or dynamic IP address, along with DHCP server settings.

You can enable the Broadband routers DHCP server to dynamically allocate IP Addresses to your LAN client PCs. The broadband router must have an IP Address for the Local Area Network.

<b>Bridge Type :</b>	Static IP ▾
<b>IP address :</b>	192.168.0.1
<b>IP Subnet Mask :</b>	255.255.255.0
<b>802.1d Spanning Tree :</b>	Disabled ▾ Disabled Enabled
<b>DHCP Server :</b>	Enabled ▾
<b>Lease time :</b>	Forever ▾
<b>Start IP :</b>	192.168.0.100
<b>End IP :</b>	192.168.0.200
<b>Domain name :</b>	ecb9750

Apply Cancel

- Bridge Type:** Select **Static IP** or **Dynamic IP** from the drop-down list. If you select Static IP, you will be required to specify an IP address and subnet mask. If Dynamic IP is selected, then the IP address is received automatically from the external DHCP server.
- IP Address:** Specify an IP address.
- IP Subnet Mask:** Specify a subnet mask for the IP address.
- 802.1d Spanning Tree:** Select **Enable** or **Disable** from the drop-down list. Enabling spanning tree will avoid redundant data loops.
- DHCP Server:** Select **Enable** or **Disable** from the drop-down list. If this is enabled, you will be required to specify the lease time, start and end IP address range, and domain name. If DHCP server is disabled, then all the clients connected to this device will need to acquire an IP address from the DHCP server behind this device.
- Lease Time:** Select a lease time from the drop-down list.
- Start IP:** Specify the starting IP address for the DHCP server to assign IP addresses.
- End IP:** Specify the last IP address for the DHCP server to end assigning IP addresses.
- Domain Name:** Specify a domain name.
- Click on the **Apply** button to save the changes.

### 3.3.3 WAN (Bridge/Router)

- Click on the **WAN** link on the Network navigation drop-down menu. This device can be configured at a Router or a Bridge. Select **Enable (Router)** mode if the WAN port is connected to the Internet. Select **Disable (Bridge)** if the device is connected to a local network downstream from another router.
- The device supports the following WAN connections:
  - Static IP address
  - Dynamic IP address
  - PPPoE
  - PPTP

#### 3.3.3.1 WAN – Static IP address

- The WAN interface can be configured as Static IP address. In this type of connection, your ISP provides you with a dedicated IP address (which does not change as DHCP).

Router Function

---

**Router Function :**  Enable  Disable

Router Settings

---

You can select the type of the account you have with your ISP provider.

<b>Login Method:</b>	Static IP Address ▾
<b>IP address:</b>	172.1.1.1
<b>IP Subnet Mask :</b>	255.255.0.0
<b>Default Gateway :</b>	172.1.1.254
<b>Primary DNS :</b>	
<b>Secondary DNS :</b>	
<b>Interface :</b>	WAN

- **Login Method:** Select the **Static IP Address** from the drop-down list.
- **IP Address:** Specify the IP address for this device, which is assigned by your ISP.
- **Subnet Mask:** Specify the subnet mask for this IP address, which is assigned by your ISP.
- **Default Gateway:** Specify the IP address of the default gateway, which is assigned by your ISP.
- **Primary / Secondary DNS Address:** Specify the primary and secondary IP address, which is assigned by your ISP.
- Click on the **Apply** button to save the changes.



### 3.3.3.2 WAN – Dynamic IP address

- The WAN interface can be configured as a DHCP Client in which the ISP provides the IP address to the device. This is also known as Dynamic IP.

Router Function

---

**Router Function :**  Enable  Disable

Router Settings

---

You can select the type of the account you have with your ISP provider.

<b>Login Method:</b>	Dynamic IP Address	▼
<b>Hostname :</b>	ecb9750	
<b>MAC address:</b>	0000394EB6E3	<input type="button" value="Clone MAC"/>
<b>Interface :</b>	WAN	

- **Login Method:** Select the **Dynamic IP Address** from the drop-down list.
- **Host Name:** Specify a host name to define your system or connection.
- **MAC Address:** If you need to change the MAC address of the router's WAN interface, either type in an alternate MAC address (for example, the MAC address of the router initially connected to the ISP) or click on the **Clone MAC** button.
- Click on the **Apply** button to save the changes.

### 3.3.3.3 WAN – PPPoE

- The WAN interface can be configured as PPPoE. This type of connection is usually used for a DSL service and requires a username and password to connect.

Router Function

---

**Router Function :**  Enable  Disable

Router Settings

---

You can select the type of the account you have with your ISP provider.

<b>Login Method:</b>	PPP over Ethernet	▼
<b>Login :</b>	ppoeuser	
<b>Password :</b>	●●●●●●●●	
<b>Service Name</b>	pppoe	
<b>MTU :</b>	1492	(512<=MTU Value<=1492)
<b>Type :</b>	Keep Connection	▼ <input type="button" value="Connect"/> <input type="button" value="Disconnect"/>
<b>Idle Timeout :</b>	10	(1-1000 Minutes)

- **Login Method:** Select **PPPoE** from the drop-down list.
- **Login:** Specify the user name which is provided by your ISP.
- **Password:** Specify the password which is provided by your ISP, and then verify it once again in the next field.
- **Service Name:** Specify the name of the ISP.
- **MTU:** The Maximum Transmission Unit (MTU) is a parameter that determines the largest packet size (in bytes) that the router will send to the WAN. If LAN devices send larger packets, the router will break them into smaller packets. Ideally, you should set this to match the MTU of the connection to your ISP. Typical values are 1500 bytes for an Ethernet connection and 1492 bytes for a PPPoE connection. If the router's MTU is set too high, packets will be fragmented downstream. If the router's MTU is set too low, the router will fragment packets unnecessarily and in extreme cases may be unable to establish some connections. In either case, network performance can suffer.
- **Type:** Select a reconnection time: **Keep Connection** (A connection to the Internet is always maintained), **Automatic Connection** (A connection to the Internet is made as needed), **Manual Connection:** You have to open up the Web-based management interface and click the Connect button manually any time that you wish to connect to the Internet.
- **Idle Time:** Specify the maximum idle time before the device dimes out. If **Keep Connection** is selected as the connection type, then this field is not required.
- **MAC Address:** If you need to change the MAC address of the router's WAN-side Ethernet interface, either type in an alternate MAC address (for example, the MAC address of the router initially connected to the ISP) or click on **Clone Your PCs MAC Address**.(This is not on the page)
- Click on the **Apply** button to save the changes.

### 3.3.3.4 WAN – PPTP

- The WAN interface can be configured as PPTP. PPTP (Point to Point Tunneling Protocol) uses a virtual private network to connect to your ISP. This method of connection is primarily used in Europe. This method of connection requires you to enter a username and password (provided by your ISP) to gain access to the Internet. The supported authentication protocols are PAP and CHAP.
- Select the PPTP from the My Internet Connection drop-down list.

#### Router Function

---

**Router Function :**  Enable  Disable

#### Router Settings

---

You can select the type of the account you have with your ISP provider.

**Login Method:**

**WAN Interface Settings :**

**WAN Interface Type :**

**Hostname :**

**MAC Address:**

**PPTP Settings :**

**Login :**

**Password :**

**Service IP address :**

**ConnectionID :**  (Optional)

**MTU :**  (512<=MTU Value<=1492)

**Type :**

- **WAN Interface Type: PPTP** can be used with a dynamic or static IP address. If you select the Dynamic IP radio button, then the IIP address in the next field is not required. However, if you select the Static IP radio button, then the IP address in the next field is required.
- **Host Name:** Specify a host name to define your system or connection.
- **MAC Address:** If you need to change the MAC address of the router's WAN interface, either type in an alternate MAC address (for example, the MAC address of the router initially connected to the ISP) or click on the **Clone MAC** button.
- **Login:** Specify the user name which is provided by your ISP.
- **Password:** Specify the password which is provided by your ISP, and then verify it once again in the next field.
- **Server IP Address::** Specify the IP address of the ISP.
- **Connection ID:** Specify a connection ID if your ISP has provided you with one.
- **MTU:** The Maximum Transmission Unit (MTU) is a parameter that determines the largest packet size (in bytes) that the router will send to the WAN. If LAN devices send larger packets, the router will break them into smaller packets. Ideally, you should set this to match the MTU of the connection to your ISP. If the router's MTU is

set too high, packets will be fragmented downstream. If the router's MTU is set too low, the router will fragment packets unnecessarily and in extreme cases may be unable to establish some connections. In either case, network performance can suffer.

- **Type:** Select a reconnection time: **Keep Connection** (A connection to the Internet is always maintained), **Automatic Connection** (A connection to the Internet is made as needed), **Manual Connection:** You have to open up the Web-based management interface and click the Connect button manually any time that you wish to connect to the Internet.
- Click on the **Apply** button to save the changes.

### 3.4 Management



- Click on the **Management** link on the navigation drop-down menu. You will then see four options: Admin, SNMP, Firmware, and Configure. Each option is described in detail below.

#### 3.4.1 Admin

- Click on the **Admin** link on the **Management** navigation drop-down menu. This page allows you to configure a new password to login to the device. It is recommended to change the default password for security reasons.

You can change the password that you use to access the router, this is not you ISP account password.

Old Password :	<input type="password" value="•••••"/>
New Password :	<input type="password" value="•••••••"/>
Repeat New Password :	<input type="password" value="•••••••"/>

- Old Password: Specify the old password of the device.
- New Password: Specify a new password.
- Repeat New Password: Re-type the new password.
- Click on the **Apply** button to save the changes.

### 3.4.2 SNMP

- Click on the **SNMP** link on the **Management** navigation drop-down menu. This option allows you to assign the contact details, location, community name and trap settings for SNMP. This is a networking management protocol used to monitor network-attached devices. SNMP allows messages (called protocol data units) to be sent to various parts of a network. Upon receiving these messages, SNMP-compatible devices (called agents) return data stored in their Management Information Bases. .

SNMP is used in network management systems to monitor network-attached devices for conditions that warrant administrative attention.

**Enable SNMP Setting**

<b>SNMP Active</b>	Enabled ▾
<b>SNMP Version</b>	All ▾
<b>Read Community</b>	public
<b>Set Community</b>	private
<b>System Location</b>	sysLocation
<b>System Contract</b>	sysContract
<b>Trap Active</b>	Enabled ▾
<b>Trap Manager IP</b>	192.168.0.100

- SNMP Active:** Choose to **enable** or **disable** the SNMP feature.
- SNMP Version:** You may select a specific version or select **All** from the drop-down list.
- Read Community Name:** Specify the password for access the SNMP community for read only access.
- Set Community Name:** Specify the password for access to the SNMP community with read/write access.
- System Location:** Specify the location of the device.
- System Contact:** Specify the contact details of the device.
- Send SNMP Trap:** Specify the IP address of the computer that will receive the SNMP traps.
- Trap Active:** Choose to **enable** or **disable** the SNMP trapping feature. .
- Trap Manager IP:** Specify the password for the SNMP trap community.
- Click on the **Apply** button to save the changes.

### 3.4.3 Firmware Upgrade

- Click on the **Firmware** link in the navigation menu. This page allows you to upgrade the firmware of the device in order to improve the functionality and performance.

You can upgrade the firmware of the router in this page. Ensure, the firmware you want to use is on the local hard drive of your computer. Click on Browse to browse and locate the firmware to be used for your update.

- Ensure that you have downloaded the appropriate firmware from the vendor's website. Connect the device to your PC using an Ethernet cable, as the firmware cannot be upgraded using the wireless interface.
- Click on the **Browse** button to select the firmware and then click on the **Apply** button.


### 3.4.4 Restore to Factory Default

- Click on the **Configure** link in the navigation menu
- Click on the **Reset** button to reset the device to the factory default settings.

The current system settings can be saved as a file onto the local hard drive. The saved file can be loaded back on the Broadband Router. To reload a system settings file, click on BROWSE to locate the system file to be used. You may also reset the Broad Router back to factory default settings by clicking RESET

Restore to factory default :	<input type="button" value="Reset"/>
Backup settings :	<input type="button" value="Save"/>
Restore Settings :	<input type="text"/> <input type="button" value="Browse..."/>
	<input type="button" value="Upload"/>


- Once the dialog box appears, click on the **OK** button to confirm the action.  
**Note:** The current settings will be lost.

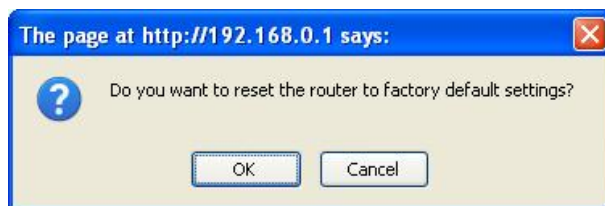

- Click on the **OK** button to continue. You will then see the **Rebooting** page.
  - Please wait while the system is rebooting.
- Note:** Do not unplug the device during this process as this may cause permanent damage.

### 3.4.5 Backup Settings

- Click on the **Configure** link in the navigation menu
- Click on the **Save** button to backup the current settings on the local disk.

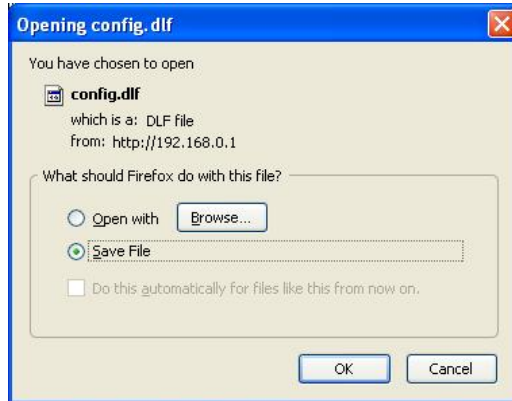

### 3.4.6 Restore Settings

- Click on the **Configure** link in the navigation menu


The current system settings can be saved as a file onto the local hard drive. The saved file can be loaded back on the Broadband Router. To reload a system settings file, click on BROWSE to locate the system file to be used. You may also reset the Broad Router back to factory default settings by clicking RESET

Restore to factory default :	Reset
Backup settings :	Save
Restore Settings :	<input type="text"/> Browse... Upload

- Click on the **Browse** button to select the file that has been backed up and then click on the **Upload** button.



## 3.5 Tools

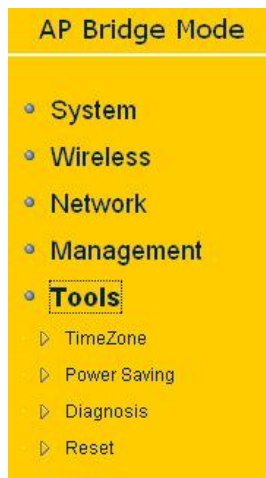

- Click on the **Tools** link on the navigation drop-down menu. You will then see four options: Time zone, power saving, diagnosis, and reset. Each option is described in detail below.

### 3.5.1 Time Zone

- Click on the **Time Zone** link in the navigation menu. This feature allows you to configure, update, and maintain the correct time on the device's internal system clock as well as configure the time zone. The date and time of the device can be configured manually or by synchronizing with a time server.

**Note:** If the device loses power for any reason, it will not be able to keep its clock running, and will not display the correct time once the device has been restarted. Therefore, you must re-enter the correct date and time.

The Router reads the correct time from NTP servers on the Internet and sets its system clock accordingly. The Daylight Savings option merely advances the system clock by one hour. The time zone setting is used by the system clock when displaying the correct time in schedule and the log files.

<b>Time Zone :</b>	(GMT)Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London ▾
<b>NTP Time Server :</b>	192.168.0.89
<b>Daylight Saving :</b>	<input checked="" type="checkbox"/> Enable From <span>January ▾</span> <span>1 ▾</span> To <span>January ▾</span> <span>1 ▾</span>

- Time Zone:** Select your time zone from the drop-down list.
- NTP Time Server:** Specify the NTP server's IP address to synchronize the device's clock to a Network Time Server over the Internet.
- Daylight Saving:** Place a check in this box to enable daylight savings time. And select the date/time from the drop-down list.
- Click on the **Apply** button to save the changes.



### 3.5.2 Power Saving

- Click on the **Power Saving** link in the navigation menu. This page allows you to enable power saving on the wired and wireless interface.

You can use the power page to save energy for WLAN interfaces.

#### Power Saving Mode :

WLAN :  Enable  Disable  
Ethernet :  Enable  Disable

- WLAN: Choose to Enable or Disable the wireless LAN power saving model.
- Ethernet: Choose to Enable or Disable the Ethernet (wired) power saving mode.
- Click on the **Apply** button to save the changes.

### 3.5.3 Diagnosis

- Click on the **Diagnosis** link in the navigation menu. This page allows to Ping a device to check if it is active.

This page can diagnosis the current network status

Address to Ping :    
Ping Result :

- **Address to Ping:** Specify the IP address to ping and then click on the Start button. The result will then display in the field below.

### 3.5.4 Reset

- Click on the **Reset** link in the navigation menu. This page allows resetting the device with its current settings. Click on the **Apply** button to reset the device.

In the event the system stops responding correctly or stops functioning, you can perform a reset. Your settings will not be changed. To perform the reset, click on the APPLY button. You will be asked to confirm your decision. The reset will be completed when the LED Power light stops blinking.

## Appendix A – Specifications

### Hardware Summary

Physical Interface	LAN: One 10/100/1000Mbps Reset Button Power Jack WPS push button (Wi-Fi Protected Setup)
LEDs Status	Power/ Status LAN (10/100/1000Mbps) WLAN (Wireless Connection)
Power Requirements	Power Supply: 90 to 240 VDC $\pm$ 10%, 50/60 Hz (depends on different countries) Active Ethernet (Power over Ethernet, IEEE802.3af)- 48 VDC/0.375A Device: 12V/1A
Regulation Certifications	FCC Part 15/UL, ETSI 300/328/CE

### Radio Specifications

Frequency Band	2.400~2.484 GHz
Media Access Protocol	Carrier sense multiple access with collision avoidance (CSMA/CA)
Modulation Technology	<ul style="list-style-type: none"> <li>● OFDM: BPSK, QPSK, 16-QAM, 64-QAM</li> <li>● DBPSK, DQPSK, CCK</li> </ul>
Operating Channels	11 for North America, 14 for Japan, 13 for Europe
Receive Sensitivity (Typical)	<ul style="list-style-type: none"> <li>● IEEE802.11n MCS8 @ -91dBm MCS15 @ -74dBm</li> <li>● IEEE802.11g (3RX) 6Mbps@ -92dBm 54Mbps@ -75dBm</li> <li>● IEEE802.11b (1RX) 1Mbps@ -93dBm 11Mbps@ -91dBm</li> </ul>
Available transmit power	<ul style="list-style-type: none"> <li>● IEEE802.11n/g 19dBm@6~9 Mbps / MCS9 18dBm@12~18 Mbps / MCS11 17dBm@24~36 Mbps / MCS13 16dBm@48~54 Mbps / MCS15</li> <li>● IEEE802.11b 18dBm@1, 11Mbps</li> </ul>
Antenna *3	Omni-directional external antenna TNC type; Peak Gain = 5 dBi

## Software Features

Topology	Infrastructure/Ad-Hoc																																																																																									
Operation Mode	Client Bridge/Access Point/Repeater/WDS/PtP																																																																																									
LAN	<ul style="list-style-type: none"> <li>• DHCP Server</li> <li>• DHCP Client</li> </ul>																																																																																									
VPN	VPN pass-through (PPTP, L2TP, IPSEC)																																																																																									
Wireless	<ul style="list-style-type: none"> <li>• Wireless Mode – 11b / 11g / 11n / Disable</li> <li>• Channel Selection (Setting varies by Country)</li> <li>• Transmission Rate <ul style="list-style-type: none"> <li>➢ 11 b/g: 54, 48, 36, 24, 18, 12, 11, 9, 6, 5.5, 2, 1 in Mbps</li> <li>➢ 11n: <table border="1" data-bbox="576 741 1533 1330"> <thead> <tr> <th rowspan="2">MCS Index</th> <th colspan="2">Guard Interval 800ns</th> <th colspan="2">Guard Interval 400ns</th> </tr> <tr> <th>20MHz(Mbps)</th> <th>40MHz(Mbps)</th> <th>20MHz(Mbps)</th> <th>40MHz(Mbps)</th> </tr> </thead> <tbody> <tr><td>0</td><td>6.5</td><td>13.5</td><td>7.2</td><td>15</td></tr> <tr><td>1</td><td>13</td><td>27</td><td>14.4</td><td>30</td></tr> <tr><td>2</td><td>19.5</td><td>40.5</td><td>21.7</td><td>45</td></tr> <tr><td>3</td><td>26</td><td>54</td><td>28.9</td><td>60</td></tr> <tr><td>4</td><td>39</td><td>81</td><td>43.3</td><td>90</td></tr> <tr><td>5</td><td>52</td><td>108</td><td>57.8</td><td>120</td></tr> <tr><td>6</td><td>58.5</td><td>121.5</td><td>65</td><td>135</td></tr> <tr><td>7</td><td>65</td><td>135</td><td>72.2</td><td>157.5</td></tr> <tr><td>8</td><td>13</td><td>27</td><td>14.4</td><td>30</td></tr> <tr><td>9</td><td>26</td><td>54</td><td>28.9</td><td>60</td></tr> <tr><td>10</td><td>39</td><td>81</td><td>43.3</td><td>90</td></tr> <tr><td>11</td><td>52</td><td>108</td><td>57.8</td><td>120</td></tr> <tr><td>12</td><td>78</td><td>162</td><td>86.7</td><td>180</td></tr> <tr><td>13</td><td>104</td><td>216</td><td>115.6</td><td>240</td></tr> <tr><td>14</td><td>117</td><td>243</td><td>130</td><td>270</td></tr> <tr><td>15</td><td>130</td><td>270</td><td>144.4</td><td>300</td></tr> </tbody> </table> </li> </ul> </li> <li>• Distance Control (Ack timeout)</li> <li>• Signal Strength</li> <li>• Bandwidth Selection- 40/20/10/5MHz</li> <li>• RSSI indicator bar (CB mode)</li> </ul>	MCS Index	Guard Interval 800ns		Guard Interval 400ns		20MHz(Mbps)	40MHz(Mbps)	20MHz(Mbps)	40MHz(Mbps)	0	6.5	13.5	7.2	15	1	13	27	14.4	30	2	19.5	40.5	21.7	45	3	26	54	28.9	60	4	39	81	43.3	90	5	52	108	57.8	120	6	58.5	121.5	65	135	7	65	135	72.2	157.5	8	13	27	14.4	30	9	26	54	28.9	60	10	39	81	43.3	90	11	52	108	57.8	120	12	78	162	86.7	180	13	104	216	115.6	240	14	117	243	130	270	15	130	270	144.4	300
MCS Index	Guard Interval 800ns		Guard Interval 400ns																																																																																							
	20MHz(Mbps)	40MHz(Mbps)	20MHz(Mbps)	40MHz(Mbps)																																																																																						
0	6.5	13.5	7.2	15																																																																																						
1	13	27	14.4	30																																																																																						
2	19.5	40.5	21.7	45																																																																																						
3	26	54	28.9	60																																																																																						
4	39	81	43.3	90																																																																																						
5	52	108	57.8	120																																																																																						
6	58.5	121.5	65	135																																																																																						
7	65	135	72.2	157.5																																																																																						
8	13	27	14.4	30																																																																																						
9	26	54	28.9	60																																																																																						
10	39	81	43.3	90																																																																																						
11	52	108	57.8	120																																																																																						
12	78	162	86.7	180																																																																																						
13	104	216	115.6	240																																																																																						
14	117	243	130	270																																																																																						
15	130	270	144.4	300																																																																																						
Security	<ul style="list-style-type: none"> <li>• WEP Encryption-64/128 bit</li> <li>• WPA Personal (WPA-PSK using TKIP or AES)</li> <li>• WPA Enterprise (WPA-EAP using TKIP)</li> <li>• 802.1x Authenticator</li> <li>• 802.1x Supplicant- TTLS (Client Bridge mode)</li> <li>• Hide SSID in beacons</li> <li>• Multiple SSID with 802.1q VLAN tagging (up to 4 SSIDs)(AP mode)</li> <li>• MAC Filter(AP mode)</li> <li>• L2 isolation(AP mode)</li> <li>• Wireless STA (Client) connected list</li> </ul>																																																																																									
QoS	<ul style="list-style-type: none"> <li>• WMM</li> </ul>																																																																																									

## Management

Configuration	Web-based configuration (HTTP)/Telnet
Firmware Upgrade	Upgrade firmware via web-browser Keep latest setting when f/w update
Administrator Setting	Administrator password change
Reset Setting	Reboot Reset to Factory Default
System monitoring	Status, Statistics and Event Log
SNMP	V1, V2c
MIB	MIB I, MIB II (RFC1213) and Private MIB
Bandwidth Measurement	Port / IP
Backup & Restore	Settings through Web

## Environment & Physical

Temperature Range	Operating: 0°C to 45°C (32°F to 113°F) Storage: -20°C to 70°C (-4°F to 158°F)
Humidity (non-condensing)	5%~95% typical
Dimensions	125mm (L) x 108mm (W) x 31mm (H)
Weight	350g

---

## Appendix B – FCC Interference Statement

---

### Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **IMPORTANT NOTE:**

#### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This device complies with FCC RF Exposure limits set forth for an uncontrolled environment, under 47 CFR 2.1093 paragraph (d)(2).

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

# Index

---

## 8

802.1x, 2, 3, 6, 20, 22, 23, 30, 32, 33, 40, 42, 43, 49, 51, 52, 68

## A

Access Point Operating Mode, 17  
 admin, 11  
 Advanced, 2, 3, 17, 19, 23, 24, 33, 34, 35, 37, 39, 43, 44, 46, 48, 52, 53  
 Applications, 7  
 ASCII, 21, 22, 23, 30, 32, 33, 35, 41, 42, 43, 50, 51, 52

## B

Backup Settings, 3, 64  
 Band, 18, 29, 38, 47, 67  
 Beacon Period, 19, 39, 48  
 Broadcast SSID, 20, 21, 23, 24, 30, 31, 32, 34, 40, 41, 43, 44, 49, 50, 51, 53

## C

Channel, 17, 18, 19, 28, 29, 37, 39, 46, 47, 48, 68  
 Client Bridge Operating Mode, 2, 16, 28  
 Client List, 2, 3, 17, 26, 35, 37, 45, 46, 54  
 Community, 62  
 CTS Protection, 20, 40, 48

## D

Data Rate, 5, 19, 39, 48  
 DHCP, 3, 5, 55, 56, 57, 58, 68  
 Diagnosis, 3, 66  
 DITM Interval, 19, 39, 48  
 DNS Address, 57  
 Dynamic IP Address, 58

## E

Encryption, 20, 22, 23, 24, 30, 31, 33, 34, 35, 40, 42, 43, 44, 49, 50, 52, 53, 68  
 ESSID, 13, 18, 20, 21, 23, 24, 30, 31, 32, 34, 38, 40, 41, 43, 44, 47, 49, 50, 51, 53  
 Event Log, 2, 12, 14, 69

## F

FCC, 3, 67, 70  
 Features and Benefits, 5  
 Firmware Upgrade, 3, 62, 69  
 Fragment Threshold, 19, 39, 48

## H

Hardware Installation, 9

HEX, 21, 22, 30, 32, 41, 42, 50, 51

## I

Introduction, 5  
 IP Address Configuration, 9

## K

Key Length, 22, 31, 42, 51  
 Key Type, 22, 23, 32, 33, 35, 42, 43, 51, 52

## L

LAN / DHCP Client, Server, 3, 55  
 Logging In, 11

## M

Management, 3, 6, 11, 61, 62, 69

## N

Network Configuration, 8

## P

Package Contents, 6  
 Power Saving, 3, 66  
 PPPoE, 3, 6, 56, 59  
 PPTP, 3, 56, 60, 68  
 Preamble Type, 20, 39, 48

## R

Repeater Operating Mode, 3, 16, 46  
 Reset, 3, 63, 66, 67, 69  
 Restore to Factory Default, 3, 63  
 Router, 56  
 RTS Threshold, 19, 39, 48

## S

Safety Guidelines, 7  
 Schedule, 2, 12, 13, 14  
 Security Disabled, 2, 3, 20, 30, 40, 49  
 SNMP, 3, 6, 11, 61, 62, 69  
 Spanning Tree, 56  
 Specifications, 67  
 Statistics, 2, 15, 69  
 Status, 2, 3, 12, 13, 17, 25, 28, 29, 37, 46, 55, 67, 69  
 Switching between Operating Modes, 2, 16  
 System, 12  
 System Requirements, 7

## T

Time Zone, 3, 65

Tools, 3, 11, 13, 65  
Trap, 62  
Tx Power, 20, 40, 49

**V**

VLAN, 2, 11, 17, 26, 68

**W**

WAN, 3, 9, 11, 15, 55, 56, 57, 58, 59, 60  
WDS Operating Mode, 2, 37

Web Configuration, 11  
WEP (Wired Equivalent Privacy), 2, 3, 21, 22,  
23, 30, 32, 33, 41, 42, 43, 49, 51, 52  
Wireless Operating Modes, 2, 16  
Wireless Security Mode, 2, 3, 20, 30, 40, 49  
WMM, 2, 3, 6, 11, 17, 20, 22, 23, 24, 26, 28,  
30, 31, 33, 34, 35, 37, 40, 42, 43, 44, 45,  
46, 49, 50, 52, 53, 54, 68  
WPA (Wi-Fi Protected Access) / Pre-shared  
Key, 2, 3, 22, 32, 42, 51  
WPS (Wi-Fi Protected Setup), 2, 25